

GSA Hardware Upgrade Prices
10/2/2017

Machine				GSA
Type	Model	Feature	Description	Price
2105		2125<2122	18.2GB TO 145.6GB 8 PK 10K	52,786
2105		2125<2142	18.2GB 15K 8PKTO 145.6GB 10K	52,786
2105		2125<2143	36.4GB 15K 8PKTO 145.6GB 10K	52,786
2105		2125<2144	72.8GB15K TO 145.6GB10K 8-PK	52,786
2105		3002<3013	64BT ESCON TO SCSI HST ADPTR	1,703
2105		3002<3024	FIBRE/FICON (LW) TO SCSI HA	1,899
2105		3002<3025	FIBRE/FICON (SW) TO SCSI HA	1,899
2105		3012<3024	FIBRE/FICON (LW) TO ESCON HA	4,977
2105		3012<3025	FIBRE/FICON (SW) TO ESCON HA	3,406
2105		3013<3012	ESCON TO64BT ESCON HST ADPTR	3,209
2105		3013<3024	FICON(LW) TO 64 BIT ESCON	3,013
2105		3013<3025	FICON(SW) TO 64 BIT ESCON	3,013
2105		3024<3012	ESCON TO FIBRE/FICON (LW) HA	8,677
2105		3024<3025	FIBRE/FICON (SW) TO FIBRE LW	8,579
2105		3025<3012	ESCON TO FIBRE/FICON (SW) HA	7,695
2421		1321<1320	I/O CABLE CONVERSION	2,974
2421		3153<3157	HOST ADAPTER CONVERSION	25,162
2421		3153<3253	HOST ADAPTER CONVERSION	25,162
2421		3153<3257	HOST ADAPTER CONVERSION	25,162
2421		3157<3153	HOST ADAPTER CONVERSION	40,138
2421		3157<3253	HOST ADAPTER CONVERSION	40,138
2421		3157<3257	HOST ADAPTER CONVERSION	40,138
2421		3253<3153	HOST ADAPTER CONVERSION	25,162
2421		3253<3157	HOST ADAPTER CONVERSION	25,162
2421		3253<3257	HOST ADAPTER CONVERSION	25,162
2421		3257<3153	HOST ADAPTER CONVERSION	40,138
2421		3257<3157	HOST ADAPTER CONVERSION	40,138
2421		3257<3253	HOST ADAPTER CONVERSION	40,138
2421		4312<4311	PROC MEMORY CONVERSION	16,145
2421		4313<4311	PROC MEMORY CONVERSION	57,866
2421		4313<4312	PROC MEMORY CONVERSION	41,721
2421		4314<4311	PROC MEMORY CONVERSION	127,880
2421		4314<4312	PROC MEMORY CONVERSION	111,735
2421		4314<4313	PROC MEMORY CONVERSION	53,856
2421		4315<4311	PROC MEMORY CONVERSION	275,226
2421		4315<4312	PROC MEMORY CONVERSION	259,080
2421		4315<4313	PROC MEMORY CONVERSION	167,199
2421		4316<4311	PROC MEMORY CONVERSION	495,566
2421		4316<4312	PROC MEMORY CONVERSION	479,420
2421		4316<4313	PROC MEMORY CONVERSION	336,691
2421		4316<4315	PROC MEMORY CONVERSION	169,491

2421	4317<4311	PROC MEMORY CONVERSION	819,115
2421	4317<4312	PROC MEMORY CONVERSION	802,969
2421	4317<4313	PROC MEMORY CONVERSION	585,576
2421	4317<4315	PROC MEMORY CONVERSION	418,376
2421	4317<4316	PROC MEMORY CONVERSION	248,884
2421	4402<4401	PROC LICENSE FEATURE CONV	74,318
2421	4403<4401	PROC LICENSE FEATURE CONV	148,637
2421	4403<4402	PROC LICENSE FEATURE CONV	57,168
2421	4404<4401	PROC LICENSE FEATURE CONV	297,275
2421	4404<4402	PROC LICENSE FEATURE CONV	171,504
2421	4404<4403	PROC LICENSE FEATURE CONV	114,337
2421	5108<5209	ENCRYPTION COD DRIVE CONV	31,493
2421	5308<5108	ENCRYPTION DRIVE SET CONV	66,288
2421	5308<5309	ENCRYPTION COD DRIVE CONV	59,659
2421	5708<5108	ENCRYPTION DRIVE SET CONV	115,844
2421	5708<5308	ENCRYPTION DRIVE SET CONV	115,844
2421	5708<5709	ENCRYPTION COD DISK CONV	104,259
2421	5758<5108	ENCRYPTION DRIVE SET CONV	165,492
2421	5758<5308	ENCRYPTION DRIVE SET CONV	165,492
2421	5758<5708	ENCRYPTION DRIVE SET CONV	165,492
2421	5758<5759	ENCRYPTION COD DRIVE CONV	148,943
2421	5858<5859	ENCRYPT COD DISK DR CONVERS	63,853
2421	6158<6156	ENCRYPTION SSD DRIVE CONVERS	155,780
2422	1321<1320	I/O CABLE CONVERSION	2,974
2422	3153<3157	HOST ADAPTER CONVERSION	26,024
2422	3153<3253	HOST ADAPTER CONVERSION	26,024
2422	3153<3257	HOST ADAPTER CONVERSION	26,024
2422	3157<3153	HOST ADAPTER CONVERSION	41,509
2422	3157<3253	HOST ADAPTER CONVERSION	41,509
2422	3157<3257	HOST ADAPTER CONVERSION	41,509
2422	3253<3153	HOST ADAPTER CONVERSION	26,024
2422	3253<3157	HOST ADAPTER CONVERSION	26,024
2422	3253<3257	HOST ADAPTER CONVERSION	26,024
2422	3257<3153	HOST ADAPTER CONVERSION	41,509
2422	3257<3157	HOST ADAPTER CONVERSION	41,509
2422	3257<3253	HOST ADAPTER CONVERSION	41,509
2422	4312<4311	PROC MEMORY CONVERSION	17,050
2422	4313<4311	PROC MEMORY CONVERSION	60,582
2422	4313<4312	PROC MEMORY CONVERSION	43,531
2422	4314<4311	PROC MEMORY CONVERSION	133,482
2422	4314<4312	PROC MEMORY CONVERSION	116,431
2422	4314<4313	PROC MEMORY CONVERSION	56,077
2422	4315<4311	PROC MEMORY CONVERSION	284,223
2422	4315<4312	PROC MEMORY CONVERSION	267,172
2422	4315<4313	PROC MEMORY CONVERSION	172,030
2422	4316<4311	PROC MEMORY CONVERSION	506,826
2422	4316<4312	PROC MEMORY CONVERSION	489,775

2422	4316<4313	PROC MEMORY CONVERSION	343,263
2422	4316<4315	PROC MEMORY CONVERSION	171,232
2422	4317<4311	PROC MEMORY CONVERSION	832,639
2422	4317<4312	PROC MEMORY CONVERSION	815,588
2422	4317<4313	PROC MEMORY CONVERSION	593,889
2422	4317<4315	PROC MEMORY CONVERSION	421,858
2422	4317<4316	PROC MEMORY CONVERSION	250,625
2422	4402<4401	PROC LICENSE FEATURE CONV	77,714
2422	4403<4401	PROC LICENSE FEATURE CONV	154,578
2422	4403<4402	PROC LICENSE FEATURE CONV	59,126
2422	4404<4401	PROC LICENSE FEATURE CONV	306,045
2422	4404<4402	PROC LICENSE FEATURE CONV	175,639
2422	4404<4403	PROC LICENSE FEATURE CONV	116,513
2422	5108<5209	ENCRYPTION COD DRIVE CONV	33,345
2422	5308<5108	ENCRYPTION DRIVE SET CONV	70,362
2422	5308<5309	ENCRYPTION COD DRIVE CONV	63,326
2422	5708<5108	ENCRYPTION DRIVE SET CONV	120,997
2422	5708<5308	ENCRYPTION DRIVE SET CONV	120,997
2422	5708<5709	ENCRYPTION COD DISK CONV	108,898
2422	5758<5108	ENCRYPTION DRIVE SET CONV	172,570
2422	5758<5308	ENCRYPTION DRIVE SET CONV	172,570
2422	5758<5708	ENCRYPTION DRIVE SET CONV	172,570
2422	5758<5759	ENCRYPTION COD DRIVE CONV	155,314
2422	5858<5859	ENCRYPT COD DISK DR CONVERS	67,705
2422	6158<6156	ENCRYPTION SSD DRIVE CONVERS	169,753
2423	1321<1320	I/O CABLE CONVERSION	2,974
2423	3153<3157	HOST ADAPTER CONVERSION	26,886
2423	3153<3253	HOST ADAPTER CONVERSION	26,886
2423	3153<3257	HOST ADAPTER CONVERSION	26,886
2423	3157<3153	HOST ADAPTER CONVERSION	42,881
2423	3157<3253	HOST ADAPTER CONVERSION	42,881
2423	3157<3257	HOST ADAPTER CONVERSION	42,881
2423	3253<3153	HOST ADAPTER CONVERSION	26,886
2423	3253<3157	HOST ADAPTER CONVERSION	26,886
2423	3253<3257	HOST ADAPTER CONVERSION	26,886
2423	3257<3153	HOST ADAPTER CONVERSION	42,881
2423	3257<3157	HOST ADAPTER CONVERSION	42,881
2423	3257<3253	HOST ADAPTER CONVERSION	42,881
2423	4312<4311	PROC MEMORY CONVERSION	17,956
2423	4313<4311	PROC MEMORY CONVERSION	63,299
2423	4313<4312	PROC MEMORY CONVERSION	45,342
2423	4314<4311	PROC MEMORY CONVERSION	139,084
2423	4314<4312	PROC MEMORY CONVERSION	121,127
2423	4314<4313	PROC MEMORY CONVERSION	58,296
2423	4315<4311	PROC MEMORY CONVERSION	293,220
2423	4315<4312	PROC MEMORY CONVERSION	275,263
2423	4315<4313	PROC MEMORY CONVERSION	176,862

2423	4316<4311	PROC MEMORY CONVERSION	518,086
2423	4316<4312	PROC MEMORY CONVERSION	500,130
2423	4316<4313	PROC MEMORY CONVERSION	349,836
2423	4316<4315	PROC MEMORY CONVERSION	172,973
2423	4317<4311	PROC MEMORY CONVERSION	846,162
2423	4317<4312	PROC MEMORY CONVERSION	828,207
2423	4317<4313	PROC MEMORY CONVERSION	602,203
2423	4317<4315	PROC MEMORY CONVERSION	425,340
2423	4317<4316	PROC MEMORY CONVERSION	252,366
2423	4402<4401	FEATURE CONVERSION	81,109
2423	4403<4401	PROC LICENSE FEATURE CONV	160,520
2423	4403<4402	PROC LICENSE FEATURE CONV	61,085
2423	4404<4401	PROC LICENSE FEATURE CONV	314,816
2423	4404<4402	PROC LICENSE FEATURE CONV	179,774
2423	4404<4403	PROC LICENSE FEATURE CONV	118,689
2423	5108<5209	ENCRYPTION COD DRIVE CONV	35,196
2423	5308<5108	ENCRYPTION DRIVE SET CONV	74,436
2423	5308<5309	ENCRYPTION COD DRIVE CONV	66,992
2423	5708<5108	ENCRYPTION DRIVE SET CONV	126,150
2423	5708<5308	ENCRYPTION DRIVE SET CONV	126,150
2423	5708<5709	ENCRYPTION COD DISK CONV	113,536
2423	5758<5108	ENCRYPTION DRIVE SET CONV	179,649
2423	5758<5308	ENCRYPTION DRIVE SET CONV	179,649
2423	5758<5708	ENCRYPTION DRIVE SET CONV	179,649
2423	5758<5759	ENCRYPTION COD DRIVE CONV	161,685
2423	5858<5859	ENCRYPT COD DISK DR CONVERS	71,557
2423	6158<6156	ENCRYPTION SSD DRIVE CONVERS	183,768
2424	1321<1320	I/O CABLE CONVERSION	2,974
2424	3153<3157	HOST ADAPTER CONVERSION	27,748
2424	3153<3253	HOST ADAPTER CONVERSION	27,748
2424	3153<3257	HOST ADAPTER CONVERSION	27,748
2424	3157<3153	HOST ADAPTER CONVERSION	44,252
2424	3157<3253	HOST ADAPTER CONVERSION	44,252
2424	3157<3257	HOST ADAPTER CONVERSION	44,252
2424	3253<3153	HOST ADAPTER CONVERSION	27,748
2424	3253<3157	HOST ADAPTER CONVERSION	27,748
2424	3253<3257	HOST ADAPTER CONVERSION	27,748
2424	3257<3153	HOST ADAPTER CONVERSION	44,252
2424	3257<3157	HOST ADAPTER CONVERSION	44,252
2424	3257<3253	HOST ADAPTER CONVERSION	44,252
2424	4312<4311	PROC MEMORY CONVERSION	18,861
2424	4313<4311	PROC MEMORY CONVERSION	66,015
2424	4313<4312	PROC MEMORY CONVERSION	47,154
2424	4314<4311	PROC MEMORY CONVERSION	144,686
2424	4314<4312	PROC MEMORY CONVERSION	125,825
2424	4314<4313	PROC MEMORY CONVERSION	60,516
2424	4315<4311	PROC MEMORY CONVERSION	302,217

2424	4315<4312	PROC MEMORY CONVERSION	283,355
2424	4315<4313	PROC MEMORY CONVERSION	181,694
2424	4316<4311	PROC MEMORY CONVERSION	529,346
2424	4316<4312	PROC MEMORY CONVERSION	510,485
2424	4316<4313	PROC MEMORY CONVERSION	356,409
2424	4316<4315	PROC MEMORY CONVERSION	174,714
2424	4317<4311	PROC MEMORY CONVERSION	859,686
2424	4317<4312	PROC MEMORY CONVERSION	840,824
2424	4317<4313	PROC MEMORY CONVERSION	610,516
2424	4317<4315	PROC MEMORY CONVERSION	428,822
2424	4317<4316	PROC MEMORY CONVERSION	254,107
2424	4402<4401	PROC LICENSE FEATURE CONV	84,504
2424	4403<4401	PROC LICENSE FEATURE CONV	166,461
2424	4403<4402	PROC LICENSE FEATURE CONV	63,044
2424	4404<4401	PROC LICENSE FEATURE CONV	323,587
2424	4404<4402	PROC LICENSE FEATURE CONV	183,909
2424	4404<4403	PROC LICENSE FEATURE CONV	120,865
2424	5108<5209	ENCRYPTION COD DRIVE CONV	37,049
2424	5308<5108	ENCRYPTION DRIVE SET CONV	78,511
2424	5308<5309	ENCRYPTION COD DRIVE CONV	70,660
2424	5708<5108	ENCRYPTION DRIVE SET CONV	131,304
2424	5708<5308	ENCRYPTION DRIVE SET CONV	131,304
2424	5708<5709	ENCRYPTION COD DISK CONV	118,173
2424	5758<5108	ENCRYPTION DRIVE SET CONV	186,728
2424	5758<5308	ENCRYPTION DRIVE SET CONV	186,728
2424	5758<5708	ENCRYPTION DRIVE SET CONV	186,728
2424	5758<5759	ENCRYPTION COD DRIVE CONV	168,055
2424	5858<5859	ENCRYPT COD DISK DR CONVERS	75,410
2424	6158<6156	ENCRYPTION SSD DRIVE CONVERS	197,783
2817<2094	0084<0085	TK HMC TO DUAL EN HMC	263
2817<2094	1125<1110	S08 TO M15 AIR	439,798
2817<2094	1125<1111	S18 TO M15 AIR	439,798
2817<2094	1125<1112	S28 TO M15 AIR	439,798
2817<2094	1125<1113	S38 TO M15 AIR	439,798
2817<2094	1125<1114	S54 TO M15 AIR	439,798
2817<2094	1126<1110	S08 TO M32 AIR	879,597
2817<2094	1126<1111	S18 TO M32 AIR	879,597
2817<2094	1126<1112	S28 TO M32 AIR	879,597
2817<2094	1126<1113	S38 TO M32 AIR	879,597
2817<2094	1126<1114	S54 TO M32 AIR	879,597
2817<2094	1127<1110	S08 TO M49 AIR	1,319,395
2817<2094	1127<1111	S18 TO M49 AIR	1,319,395
2817<2094	1127<1112	S28 TO M49 AIR	1,319,395
2817<2094	1127<1113	S38 TO M49 AIR	1,319,395
2817<2094	1127<1114	S54 TO M49 AIR	1,319,395
2817<2094	1128<1110	S08 TO M66 AIR	1,759,194
2817<2094	1128<1111	S18 TO M66 AIR	1,759,194

2817<2094	1128<1112	S28 TO M66 AIR	1,759,194
2817<2094	1128<1113	S38 TO M66 AIR	1,759,194
2817<2094	1128<1114	S54 TO M66 AIR	1,759,194
2817<2094	1129<1110	S08 TO M80 AIR	2,198,992
2817<2094	1129<1111	S18 TO M80 AIR	2,198,992
2817<2094	1129<1112	S28 TO M80 AIR	2,198,992
2817<2094	1129<1113	S38 TO M80 AIR	2,198,992
2817<2094	1129<1114	S54 TO M80 AIR	2,198,992
2817<2094	1130<1110	S08 TO M15 WATER	439,798
2817<2094	1130<1111	S18 TO M15 WATER	439,798
2817<2094	1130<1112	S28 TO M15 WATER	439,798
2817<2094	1130<1113	S38 TO M15 WATER	439,798
2817<2094	1130<1114	S54 TO M15 WATER	439,798
2817<2094	1131<1110	S08 TO M32 WATER	879,597
2817<2094	1131<1111	S18 TO M32 WATER	879,597
2817<2094	1131<1112	S28 TO M32 WATER	879,597
2817<2094	1131<1113	S38 TO M32 WATER	879,597
2817<2094	1131<1114	S54 TO M32 WATER	879,597
2817<2094	1132<1110	S08 TO M49 WATER	1,319,395
2817<2094	1132<1111	S18 TO M49 WATER	1,319,395
2817<2094	1132<1112	S28 TO M49 WATER	1,319,395
2817<2094	1132<1113	S38 TO M49 WATER	1,319,395
2817<2094	1132<1114	S54 TO M49 WATER	1,319,395
2817<2094	1133<1110	S08 TO M66 WATER	1,759,194
2817<2094	1133<1111	S18 TO M66 WATER	1,759,194
2817<2094	1133<1112	S28 TO M66 WATER	1,759,194
2817<2094	1133<1113	S38 TO M66 WATER	1,759,194
2817<2094	1133<1114	S54 TO M66 WATER	1,759,194
2817<2094	1134<1110	S08 TO M80 WATER	2,198,992
2817<2094	1134<1111	S18 TO M80 WATER	2,198,992
2817<2094	1134<1112	S28 TO M80 WATER	2,198,992
2817<2094	1134<1113	S38 TO M80 WATER	2,198,992
2817<2094	1134<1114	S54 TO M80 WATER	2,198,992
2817<2094	4015<7611	1BK 1I/O - AFR NO C/A	78,919
2817<2094	4015<7612	1BK 3I/O - AFR NO C/A	50,576
2817<2094	4015<7613	1BK 3I/O - AFR NO C/A	22,234
2817<2094	4015<7621	2BK 1I/O - AFR NO C/A	78,919
2817<2094	4015<7622	2BK 2I/O - AFR NO C/A	50,576
2817<2094	4015<7623	2BK 3I/O - AFR NO C/A	22,234
2817<2094	4015<7631	3BK 1I/O - AFR NO C/A	78,919
2817<2094	4015<7632	3BK 2I/O - AFR NO C/A	50,576
2817<2094	4015<7633	3BK 3I/O - AFR NO C/A	22,234
2817<2094	4015<7641	4BK 1I/O - AFR NO C/A	78,919
2817<2094	4015<7642	4BK 2I/O - AFR NO C/A	50,576
2817<2094	4015<7643	4BK 3I/O - AFR NO C/A	22,234
2817<2094	4016<7611	1BK 1I/O - AFR C/A	107,261
2817<2094	4016<7612	1BK 3I/O - AFR C/A	78,919

2817<2094	4016<7613	1BK 3I/O - AFR C/A	50,576
2817<2094	4016<7621	2BK 1I/O - AFR C/A	107,261
2817<2094	4016<7622	2BK 2I/O - AFR C/A	78,919
2817<2094	4016<7623	2BK 3I/O - AFR C/A	50,576
2817<2094	4016<7631	3BK 1I/O - AFR C/A	107,261
2817<2094	4016<7632	3BK 2I/O - AFR C/A	78,919
2817<2094	4016<7633	3BK 3I/O - AFR C/A	50,576
2817<2094	4016<7641	4BK 1I/O - AFR C/A	107,261
2817<2094	4016<7642	4BK 2I/O - AFR C/A	78,919
2817<2094	4016<7643	4BK 3I/O - AFR C/A	50,576
2817<2094	4017<7611	1BK 1I/O - AFR NO C/W	179,645
2817<2094	4017<7612	1BK 3I/O - AFR NO C/W	151,303
2817<2094	4017<7613	1BK 3I/O - AFR NO C/W	122,960
2817<2094	4017<7621	2BK 1I/O - AFR NO C/W	179,645
2817<2094	4017<7622	2BK 2I/O - AFR NO C/W	151,303
2817<2094	4017<7623	2BK 3I/O - AFR NO C/W	122,960
2817<2094	4017<7631	3BK 1I/O - AFR NO C/W	179,645
2817<2094	4017<7632	3BK 2I/O - AFR NO C/W	151,303
2817<2094	4017<7633	3BK 3I/O - AFR NO C/W	122,960
2817<2094	4017<7641	4BK 1I/O - AFR NO C/W	179,645
2817<2094	4017<7642	4BK 2I/O - AFR NO C/W	151,303
2817<2094	4017<7643	4BK 3I/O - AFR NO C/W	122,960
2817<2094	4018<7611	1BK 1I/O - AFR C/W	207,988
2817<2094	4018<7612	1BK 3I/O - AFR C/W	179,645
2817<2094	4018<7613	1BK 3I/O - AFR C/W	151,303
2817<2094	4018<7621	2BK 1I/O - AFR C/W	207,988
2817<2094	4018<7622	2BK 2I/O - AFR C/W	179,645
2817<2094	4018<7623	2BK 3I/O - AFR C/W	151,303
2817<2094	4018<7631	3BK 1I/O - AFR C/W	207,988
2817<2094	4018<7632	3BK 2I/O - AFR C/W	179,645
2817<2094	4018<7633	3BK 3I/O - AFR C/W	151,303
2817<2094	4018<7641	4BK 1I/O - AFR C/W	207,988
2817<2094	4018<7642	4BK 2I/O - AFR C/W	179,645
2817<2094	4018<7643	4BK 3I/O - AFR C/W	151,303
2817<2094	4019<7611	1BK 1I/O - AFR MULT NO C/A	95,708
2817<2094	4019<7612	1BK 3I/O - AFR MULT NO C/A	67,365
2817<2094	4019<7613	1BK 3I/O - AFR MULT NO C/A	39,023
2817<2094	4019<7621	2BK 1I/O - AFR MULT NO C/A	95,708
2817<2094	4019<7622	2BK 2I/O - AFR MULT NO C/A	67,365
2817<2094	4019<7623	2BK 3I/O - AFR MULT NO C/A	39,023
2817<2094	4019<7631	3BK 1I/O - AFR MULT NO C/A	95,708
2817<2094	4019<7632	3BK 2I/O - AFR MULT NO C/A	67,365
2817<2094	4019<7633	3BK 3I/O - AFR MULT NO C/A	39,023
2817<2094	4019<7641	4BK 1I/O - AFR MULT NO C/A	95,708
2817<2094	4019<7642	4BK 2I/O - AFR MULT NO C/A	67,365
2817<2094	4019<7643	4BK 3I/O - AFR MULT NO C/A	39,023
2817<2094	4020<7611	1BK 1I/O - AFR MULT C/A	124,050

2817<2094	4020<7612	1BK 3I/O - AFR MULT C/A	95,708
2817<2094	4020<7613	1BK 3I/O - AFR MULT C/A	67,365
2817<2094	4020<7621	2BK 1I/O - AFR MULT C/A	124,050
2817<2094	4020<7622	2BK 2I/O - AFR MULT C/A	95,708
2817<2094	4020<7623	2BK 3I/O - AFR MULT C/A	67,365
2817<2094	4020<7631	3BK 1I/O - AFR MULT C/A	124,050
2817<2094	4020<7632	3BK 2I/O - AFR MULT C/A	95,708
2817<2094	4020<7633	3BK 3I/O - AFR MULT C/A	67,365
2817<2094	4020<7641	4BK 1I/O - AFR MULT C/A	124,050
2817<2094	4020<7642	4BK 2I/O - AFR MULT C/A	95,708
2817<2094	4020<7643	4BK 3I/O - AFR MULT C/A	67,365
2817<2097	1125<1117	E12 TO M15 AIR	439,798
2817<2097	1125<1118	E26 TO M15 AIR	439,798
2817<2097	1125<1119	E40 TO M15 AIR	439,798
2817<2097	1125<1120	E56 TO M15 AIR	439,798
2817<2097	1125<1121	E64 TO M15 AIR	439,798
2817<2097	1126<1117	E12 TO M32 AIR	879,597
2817<2097	1126<1118	E26 TO M32 AIR	879,597
2817<2097	1126<1119	E40 TO M32 AIR	879,597
2817<2097	1126<1120	E56 TO M32 AIR	879,597
2817<2097	1126<1121	E64 TO M32 AIR	879,597
2817<2097	1127<1117	E12 TO M49 AIR	1,319,395
2817<2097	1127<1118	E26 TO M49 AIR	1,319,395
2817<2097	1127<1119	E40 TO M49 AIR	1,319,395
2817<2097	1127<1120	E56 TO M49 AIR	1,319,395
2817<2097	1127<1121	E64 TO M49 AIR	1,319,395
2817<2097	1128<1117	E12 TO M66 AIR	1,759,194
2817<2097	1128<1118	E26 TO M66 AIR	1,759,194
2817<2097	1128<1119	E40 TO M66 AIR	1,759,194
2817<2097	1128<1120	E56 TO M66 AIR	1,759,194
2817<2097	1128<1121	E64 TO M66 AIR	1,759,194
2817<2097	1129<1117	E12 TO M80 AIR	2,198,992
2817<2097	1129<1118	E26 TO M80 AIR	2,198,992
2817<2097	1129<1119	E40 TO M80 AIR	2,198,992
2817<2097	1129<1120	E56 TO M80 AIR	2,198,992
2817<2097	1129<1121	E64 TO M80 AIR	2,198,992
2817<2097	1130<1117	E12 TO M15 WATER	439,798
2817<2097	1130<1118	E26 TO M15 WATER	439,798
2817<2097	1130<1119	E40 TO M15 WATER	439,798
2817<2097	1130<1120	E56 TO M15 WATER	439,798
2817<2097	1130<1121	E64 TO M15 WATER	439,798
2817<2097	1131<1117	E12 TO M32 WATER	879,597
2817<2097	1131<1118	E26 TO M32 WATER	879,597
2817<2097	1131<1119	E40 TO M32 WATER	879,597
2817<2097	1131<1120	E56 TO M32 WATER	879,597
2817<2097	1131<1121	E64 TO M32 WATER	879,597
2817<2097	1132<1117	E12 TO M49 WATER	1,319,395

2817<2097	1132<1118	E26 TO M49 WATER	1,319,395
2817<2097	1132<1119	E40 TO M49 WATER	1,319,395
2817<2097	1132<1120	E56 TO M49 WATER	1,319,395
2817<2097	1132<1121	E64 TO M49 WATER	1,319,395
2817<2097	1133<1117	E12 TO M66 WATER	1,759,194
2817<2097	1133<1118	E26 TO M66 WATER	1,759,194
2817<2097	1133<1119	E40 TO M66 WATER	1,759,194
2817<2097	1133<1120	E56 TO M66 WATER	1,759,194
2817<2097	1133<1121	E64 TO M66 WATER	1,759,194
2817<2097	1134<1117	E12 TO M80 WATER	2,198,992
2817<2097	1134<1118	E26 TO M80 WATER	2,198,992
2817<2097	1134<1119	E40 TO M80 WATER	2,198,992
2817<2097	1134<1120	E56 TO M80 WATER	2,198,992
2817<2097	1134<1121	E64 TO M80 WATER	2,198,992
2817<2097	4015<4311	1BK 1I/O - AFR NO C/A	78,919
2817<2097	4015<4312	1BK 2I/O - AFR NO C/A	50,576
2817<2097	4015<4313	1BK 3I/O - AFR NO C/A	22,234
2817<2097	4015<4321	2BK 1I/O - AFR NO C/A	78,919
2817<2097	4015<4322	2BK 2I/O - AFR NO C/A	50,576
2817<2097	4015<4323	2BK 3I/O - AFR NO C/A	22,234
2817<2097	4015<4331	3BK 1I/O - AFR NO C/A	78,919
2817<2097	4015<4332	3BK 2I/O - AFR NO C/A	50,576
2817<2097	4015<4333	3BK 3I/O - AFR NO C/A	22,234
2817<2097	4015<4341	4BK 1I/O - AFR NO C/A	78,919
2817<2097	4015<4342	4BK 2I/O - AFR NO C/A	50,576
2817<2097	4015<4343	4BK 3I/O - AFR NO C/A	22,234
2817<2097	4016<4311	1BK 1I/O - AFR C/A	107,261
2817<2097	4016<4312	1BK 2I/O - AFR C/A	78,919
2817<2097	4016<4313	1BK 3I/O - AFR C/A	50,576
2817<2097	4016<4321	2BK 1I/O - AFR C/A	107,261
2817<2097	4016<4322	2BK 2I/O - AFR C/A	78,919
2817<2097	4016<4323	2BK 3I/O - AFR C/A	50,576
2817<2097	4016<4331	3BK 1I/O - AFR C/A	107,261
2817<2097	4016<4332	3BK 2I/O - AFR C/A	78,919
2817<2097	4016<4333	3BK 3I/O - AFR C/A	50,576
2817<2097	4016<4341	4BK 1I/O - AFR C/A	107,261
2817<2097	4016<4342	4BK 2I/O - AFR C/A	78,919
2817<2097	4016<4343	4BK 3I/O - AFR C/A	50,576
2817<2097	4017<4311	1BK 1I/O - AFR NO C/W	179,645
2817<2097	4017<4312	1BK 2I/O - AFR NO C/W	151,303
2817<2097	4017<4313	1BK 3I/O - AFR NO C/W	122,960
2817<2097	4017<4321	2BK 1I/O - AFR NO C/W	179,645
2817<2097	4017<4322	2BK 2I/O - AFR NO C/W	151,303
2817<2097	4017<4323	2BK 3I/O - AFR NO C/W	122,960
2817<2097	4017<4331	3BK 1I/O - AFR NO C/W	179,645
2817<2097	4017<4332	3BK 2I/O - AFR NO C/W	151,303
2817<2097	4017<4333	3BK 3I/O - AFR NO C/W	122,960

2817<2097	4017<4341	4BK 1I/O - AFR NO C/W	179,645
2817<2097	4017<4342	4BK 2I/O - AFR NO C/W	151,303
2817<2097	4017<4343	4BK 3I/O - AFR NO C/W	122,960
2817<2097	4018<4311	1BK 1I/O - AFR C/W	207,988
2817<2097	4018<4312	1BK 2I/O - AFR C/W	179,645
2817<2097	4018<4313	1BK 3I/O - AFR C/W	151,303
2817<2097	4018<4321	2BK 1I/O - AFR C/W	207,988
2817<2097	4018<4322	2BK 2I/O - AFR C/W	179,645
2817<2097	4018<4323	2BK 3I/O - AFR C/W	151,303
2817<2097	4018<4331	3BK 1I/O - AFR C/W	207,988
2817<2097	4018<4332	3BK 2I/O - AFR C/W	179,645
2817<2097	4018<4333	3BK 3I/O - AFR C/W	151,303
2817<2097	4018<4341	4BK 1I/O - AFR C/W	207,988
2817<2097	4018<4342	4BK 2I/O - AFR C/W	179,645
2817<2097	4018<4343	4BK 3I/O - AFR C/W	151,303
2817<2097	4019<4311	1BK 1I/O - AFR MULT NO C/A	95,708
2817<2097	4019<4312	1BK 2I/O - AFR MULT NO C/A	67,365
2817<2097	4019<4313	1BK 3I/O - AFR MULT NO C/A	39,023
2817<2097	4019<4321	2BK 1I/O - AFR MULT NO C/A	95,708
2817<2097	4019<4322	2BK 2I/O - AFR MULT NO C/A	67,365
2817<2097	4019<4323	2BK 3I/O - AFR MULT NO C/A	39,023
2817<2097	4019<4331	3BK 1I/O - AFR MULT NO C/A	95,708
2817<2097	4019<4332	3BK 2I/O - AFR MULT NO C/A	67,365
2817<2097	4019<4333	3BK 3I/O - AFR MULT NO C/A	39,023
2817<2097	4019<4341	4BK 1I/O - AFR MULT NO C/A	95,708
2817<2097	4019<4342	4BK 2I/O - AFR MULT NO C/A	67,365
2817<2097	4019<4343	4BK 3I/O - AFR MULT NO C/A	39,023
2817<2097	4020<4311	1BK 1I/O - AFR MULT C/A	124,050
2817<2097	4020<4312	1BK 2I/O - AFR MULT C/A	95,708
2817<2097	4020<4313	1BK 3I/O - AFR MULT C/A	67,365
2817<2097	4020<4321	2BK 1I/O - AFR MULT C/A	124,050
2817<2097	4020<4322	2BK 2I/O - AFR MULT C/A	95,708
2817<2097	4020<4323	2BK 3I/O - AFR MULT C/A	67,365
2817<2097	4020<4331	3BK 1I/O - AFR MULT C/A	124,050
2817<2097	4020<4332	3BK 2I/O - AFR MULT C/A	95,708
2817<2097	4020<4333	3BK 3I/O - AFR MULT C/A	67,365
2817<2097	4020<4341	4BK 1I/O - AFR MULT C/A	124,050
2817<2097	4020<4342	4BK 2I/O - AFR MULT C/A	95,708
2817<2097	4020<4343	4BK 3I/O - AFR MULT C/A	67,365
2818<2096	M05<R07	MODEL CONVERSION	-
2818<2096	M05<S07	MODEL CONVERSION	-
2818<2096	M10<R07	MODEL CONVERSION	-
2818<2096	M10<S07	MODEL CONVERSION	-
2818<2096	1135<1115	2096 R07 TO 2818 M05	-
2818<2096	1135<1116	2096 S07 TO 2818 M05	-
2818<2096	1136<1115	2096 R07 TO 2818 M10	78,186
2818<2096	1136<1116	2096 S07 TO 2818 M10	78,186

2818<2098	M05<E10	MODEL CONVERSION	-
2818<2098	M10<E10	MODEL CONVERSION	-
2818<2098	1135<1123	2098 E10 TO 2818 M05	-
2818<2098	1136<1123	2098 E10 TO 2818 M10	78,186
2827	1096<1095	H20 R TO H43 R	* Call
2827	1097<1095	H20 R TO H66 R	* Call
2827	1097<1096	H43 R TO H66 R	* Call
2827	1098<1095	H20 R TO H89 R	* Call
2827	1098<1096	H43 R TO H89 R	* Call
2827	1098<1097	H66 R TO H89 R	* Call
2827	1100<1099	H20 W TO H43 W	* Call
2827	1101<1099	H20 W TO H66 W	* Call
2827	1101<1100	H43 W TO H66 W	* Call
2827	1102<1099	H20 W TO H89 W	* Call
2827	1102<1100	H43 W TO H89 W	* Call
2827	1102<1101	H66 W TO H89 W	* Call
2827	1106<1095	H20 R TO HA1 R	* Call
2827	1106<1097	H66 R TO HA1 R	* Call
2827	1145<1100	H43 W TO HA1 W	* Call
2827	1145<1101	H66 W TO HA1 W	* Call
2827	1898<1990	PREPLND MEMTO32GBCPTYINCR	* Call
2827	1899<1996	PREPLND MEMTO16GBCPTYINCR	* Call
2827	1909<1910	ICF TO IFL	* Call
2827	1909<1911	SAP(OPT) TO IFL	* Call
2827	1909<1912	ZAAP TO IFL	* Call
2827	1909<1913	ZIIP TO IFL	* Call
2827	1910<1912	ZAAP TO ICF	* Call
2827	1911<1912	ZAAP TO SAP(OPT)	* Call
2827	1911<1914	UIFL TO SAP(OPT)	* Call
2827	1912<1909	IFL TO ZAAP	* Call
2827	1912<1910	ICF TO ZAAP	* Call
2827	1912<1911	SAP(OPT) TO ZAAP	* Call
2827	1912<1913	ZIIP TO ZAAP	* Call
2827	1912<1914	UIFL TO ZAAP	* Call
2827	1913<1909	IFL TO ZIIP	* Call
2827	1913<1910	ICF TO ZIIP	* Call
2827	1913<1911	SAP(OPT) TO ZIIP	* Call
2827	1913<1912	ZAAP TO ZIIP	* Call
2827	1913<1914	UIFL TO ZIIP	* Call
2827	1914<1910	ICF TO UIFL	* Call
2827	1914<1911	SAP(OPT) TO UIFL	* Call
2827	1914<1912	ZAAP TO UIFL	* Call
2827	1914<1913	ZIIP TO UIFL	* Call
2827	4022<4025	AFR W SINGLE-AFR W MULTI	* Call
2827	4024<4026	AFR R SINGLE-AFR R MULTI	* Call
2827<2097	1095<1117	E12 TO H20 R	* Call
2827<2097	1095<1118	E26 TO H20 R	* Call

2827<2097	1095<1119	E40 TO H20 R	* Call
2827<2097	1095<1120	E56 TO H20 R	* Call
2827<2097	1095<1121	E64 TO H20 R	* Call
2827<2097	1096<1117	E12 TO H43 R	* Call
2827<2097	1096<1118	E26 TO H43 R	* Call
2827<2097	1096<1119	E40 TO H43 R	* Call
2827<2097	1096<1120	E56 TO H43 R	* Call
2827<2097	1096<1121	E64 TO H43 R	* Call
2827<2097	1097<1117	E12 TO H66 R	* Call
2827<2097	1097<1118	E26 TO H66 R	* Call
2827<2097	1097<1119	E40 TO H66 R	* Call
2827<2097	1097<1120	E56 TO H66 R	* Call
2827<2097	1097<1121	E64 TO H66 R	* Call
2827<2097	1098<1117	E12 TO H89 R	* Call
2827<2097	1098<1118	E26 TO H89 R	* Call
2827<2097	1098<1119	E40 TO H89 R	* Call
2827<2097	1098<1120	E56 TO H89 R	* Call
2827<2097	1098<1121	E64 TO H89 R	* Call
2827<2097	1099<1117	E12 TO H20 W	* Call
2827<2097	1099<1118	E26 TO H20 W	* Call
2827<2097	1099<1119	E40 TO H20 W	* Call
2827<2097	1099<1120	E56 TO H20 W	* Call
2827<2097	1099<1121	E64 TO H20 W	* Call
2827<2097	1100<1117	E12 TO H43 W	* Call
2827<2097	1100<1118	E26 TO H43 W	* Call
2827<2097	1100<1119	E40 TO H43 W	* Call
2827<2097	1100<1120	E56 TO H43 W	* Call
2827<2097	1100<1121	E64 TO H43 W	* Call
2827<2097	1101<1117	E12 TO H66 W	* Call
2827<2097	1101<1118	E26 TO H66 W	* Call
2827<2097	1101<1119	E40 TO H66 W	* Call
2827<2097	1101<1120	E56 TO H66 W	* Call
2827<2097	1101<1121	E64 TO H66 W	* Call
2827<2097	1102<1117	E12 TO H89 W	* Call
2827<2097	1102<1118	E26 TO H89 W	* Call
2827<2097	1102<1119	E40 TO H89 W	* Call
2827<2097	1102<1120	E56 TO H89 W	* Call
2827<2097	1102<1121	E64 TO H89 W	* Call
2827<2097	1106<1117	E12 TO HA1 R	* Call
2827<2097	1106<1118	E26 TO HA1 R	* Call
2827<2097	1106<1119	E40 TO HA1 R	* Call
2827<2097	1106<1120	E56 TO HA1 R	* Call
2827<2097	1106<1121	E64 TO HA1 R	* Call
2827<2097	1145<1117	E12 TO HA1 W	* Call
2827<2097	1145<1118	E26 TO HA1 W	* Call
2827<2097	1145<1119	E40 TO HA1 W	* Call
2827<2097	1145<1120	E56 TO HA1 W	* Call

2827<2097	1145<1121	E64 TO HA1 W	* Call
2827<2097	1898<1996	16GBPRLNDTO32GBCPTYINCR	* Call
2827<2097	1899<1996	16GBPRLNDTO16GBCPTYINCR	* Call
2827<2097	1909<6811	IFL TO IFL	* Call
2827<2097	1909<6812	ICF TO IFL	* Call
2827<2097	1909<6813	SAP OPTIONAL TO IFL	* Call
2827<2097	1909<6814	ZAAP TO IFL	* Call
2827<2097	1909<6815	ZIIP TO IFL	* Call
2827<2097	1909<6816	UIFL TO IFL	* Call
2827<2097	1910<6811	IFL TO ICF	* Call
2827<2097	1910<6812	ICF TO ICF	* Call
2827<2097	1910<6813	SAP OPTIONAL TO ICF	* Call
2827<2097	1910<6814	ZAAP TO ICF	* Call
2827<2097	1910<6815	ZIIP TO ICF	* Call
2827<2097	1910<6816	UIFL TO ICF	* Call
2827<2097	1911<6811	IFL TO SAP(OPT)	* Call
2827<2097	1911<6812	ICF TO SAP(OPT)	* Call
2827<2097	1911<6814	ZAAP TO SAP(OPT)	* Call
2827<2097	1911<6815	ZIIP TO SAP(OPT)	* Call
2827<2097	1911<6816	UIFL TO SAP(OPT)	* Call
2827<2097	1912<6811	IFL TO ZAAP	* Call
2827<2097	1912<6812	ICF TO ZAAP	* Call
2827<2097	1912<6813	SAP OPTIONAL TO ZAAP	* Call
2827<2097	1912<6814	ZAAP TO ZAAP	* Call
2827<2097	1912<6815	ZIIP TO ZAAP	* Call
2827<2097	1912<6816	UIFL TO ZAAP	* Call
2827<2097	1913<6811	IFL TO ZIIP	* Call
2827<2097	1913<6812	ICF TO ZIIP	* Call
2827<2097	1913<6813	SAP OPTIONAL TO ZIIP	* Call
2827<2097	1913<6814	ZAAP TO ZIIP	* Call
2827<2097	1913<6815	ZIIP TO ZIIP	* Call
2827<2097	1913<6816	UIFL TO ZIIP	* Call
2827<2097	1914<6811	IFL TO UIFL	* Call
2827<2097	1914<6812	ICF TO UIFL	* Call
2827<2097	1914<6813	SAP OPTIONAL TO UIFL	* Call
2827<2097	1914<6814	ZAAP TO UIFL	* Call
2827<2097	1914<6815	ZIIP TO UIFL	* Call
2827<2097	1914<6816	UIFL TO UIFL	* Call
2827<2097	4022<4311	1BK 1I/O - AFR W MULTI	* Call
2827<2097	4022<4312	1BK 2I/O - AFR W MULTI	* Call
2827<2097	4022<4313	1BK 3I/O - AFR W MULTI	* Call
2827<2097	4022<4321	2BK 1I/O - AFR W MULTI	* Call
2827<2097	4022<4322	2BK 2I/O - AFR W MULTI	* Call
2827<2097	4022<4323	2BK 3I/O - AFR W MULTI	* Call
2827<2097	4022<4331	3BK 1I/O - AFR W MULTI	* Call
2827<2097	4022<4332	3BK 2I/O - AFR W MULTI	* Call
2827<2097	4022<4333	3BK 3I/O - AFR W MULTI	* Call

2827<2097	4022<4341	4BK 1I/O - AFR W MULTI	* Call
2827<2097	4022<4342	4BK 2I/O - AFR W MULTI	* Call
2827<2097	4022<4343	4BK 3I/O - AFR W MULTI	* Call
2827<2097	4024<4311	1BK 1I/O - AFR R MULTI	* Call
2827<2097	4024<4312	1BK 2I/O - AFR R MULTI	* Call
2827<2097	4024<4313	1BK 3I/O - AFR R MULTI	* Call
2827<2097	4024<4321	2BK 1I/O - AFR R MULTI	* Call
2827<2097	4024<4322	2BK 2I/O - AFR R MULTI	* Call
2827<2097	4024<4323	2BK 3I/O - AFR R MULTI	* Call
2827<2097	4024<4331	3BK 1I/O - AFR R MULTI	* Call
2827<2097	4024<4332	3BK 2I/O - AFR R MULTI	* Call
2827<2097	4024<4333	3BK 3I/O - AFR R MULTI	* Call
2827<2097	4024<4341	4BK 1I/O - AFR R MULTI	* Call
2827<2097	4024<4342	4BK 2I/O - AFR R MULTI	* Call
2827<2097	4024<4343	4BK 3I/O - AFR R MULTI	* Call
2827<2097	4025<4311	1BK 1I/O - AFR W SINGLE	* Call
2827<2097	4025<4312	1BK 2I/O - AFR W SINGLE	* Call
2827<2097	4025<4313	1BK 3I/O - AFR W SINGLE	* Call
2827<2097	4025<4321	2BK 1I/O - AFR W SINGLE	* Call
2827<2097	4025<4322	2BK 2I/O - AFR W SINGLE	* Call
2827<2097	4025<4323	2BK 3I/O - AFR W SINGLE	* Call
2827<2097	4025<4331	3BK 1I/O - AFR W SINGLE	* Call
2827<2097	4025<4332	3BK 2I/O - AFR W SINGLE	* Call
2827<2097	4025<4333	3BK 3I/O - AFR W SINGLE	* Call
2827<2097	4025<4341	4BK 1I/O - AFR W SINGLE	* Call
2827<2097	4025<4342	4BK 2I/O - AFR W SINGLE	* Call
2827<2097	4025<4343	4BK 3I/O - AFR W SINGLE	* Call
2827<2097	4026<4311	1BK 1I/O - AFR R SINGLE	* Call
2827<2097	4026<4312	1BK 2I/O - AFR R SINGLE	* Call
2827<2097	4026<4313	1BK 3I/O - AFR R SINGLE	* Call
2827<2097	4026<4321	2BK 1I/O - AFR R SINGLE	* Call
2827<2097	4026<4322	2BK 2I/O - AFR R SINGLE	* Call
2827<2097	4026<4323	2BK 3I/O - AFR R SINGLE	* Call
2827<2097	4026<4331	3BK 1I/O - AFR R SINGLE	* Call
2827<2097	4026<4332	3BK 2I/O - AFR R SINGLE	* Call
2827<2097	4026<4333	3BK 3I/O - AFR R SINGLE	* Call
2827<2097	4026<4341	4BK 1I/O - AFR R SINGLE	* Call
2827<2097	4026<4342	4BK 2I/O - AFR R SINGLE	* Call
2827<2097	4026<4343	4BK 3I/O - AFR R SINGLE	* Call
2827<2817	1095<1125	M15 A TO H20 R	* Call
2827<2817	1095<1126	M32 A TO H20 R	* Call
2827<2817	1095<1127	M49 A TO H20 R	* Call
2827<2817	1095<1128	M66 A TO H20 R	* Call
2827<2817	1095<1129	M80 A TO H20 R	* Call
2827<2817	1096<1125	M15 A TO H43 R	* Call
2827<2817	1096<1126	M32 A TO H43 R	* Call
2827<2817	1096<1127	M49 A TO H43 R	* Call

2827<2817	1096<1128	M66 A TO H43 R	* Call
2827<2817	1096<1129	M80 A TO H43 R	* Call
2827<2817	1097<1125	M15 A TO H66 R	* Call
2827<2817	1097<1126	M32 A TO H66 R	* Call
2827<2817	1097<1127	M49 A TO H66 R	* Call
2827<2817	1097<1128	M66 A TO H66 R	* Call
2827<2817	1097<1129	M80 A TO H66 R	* Call
2827<2817	1098<1125	M15 A TO H89 R	* Call
2827<2817	1098<1126	M32 A TO H89 R	* Call
2827<2817	1098<1127	M49 A TO H89 R	* Call
2827<2817	1098<1128	M66 A TO H89 R	* Call
2827<2817	1098<1129	M80 A TO H89 R	* Call
2827<2817	1099<1125	M15 A TO H20 W	* Call
2827<2817	1099<1126	M32 A TO H20 W	* Call
2827<2817	1099<1127	M49 A TO H20 W	* Call
2827<2817	1099<1128	M66 A TO H20 W	* Call
2827<2817	1099<1129	M80 A TO H20 W	* Call
2827<2817	1099<1130	M15 W TO H20 W	* Call
2827<2817	1099<1131	M32 W TO H20 W	* Call
2827<2817	1099<1132	M49 W TO H20 W	* Call
2827<2817	1099<1133	M66 W TO H20 W	* Call
2827<2817	1099<1134	M80 W TO H20 W	* Call
2827<2817	1100<1125	M15 A TO H43 W	* Call
2827<2817	1100<1126	M32 A TO H43 W	* Call
2827<2817	1100<1127	M49 A TO H43 W	* Call
2827<2817	1100<1128	M66 A TO H43 W	* Call
2827<2817	1100<1129	M80 A TO H43 W	* Call
2827<2817	1100<1130	M15 W TO H43 W	* Call
2827<2817	1100<1131	M32 W TO H43 W	* Call
2827<2817	1100<1132	M49 W TO H43 W	* Call
2827<2817	1100<1133	M66 W TO H43 W	* Call
2827<2817	1100<1134	M80 W TO H43 W	* Call
2827<2817	1101<1125	M15 A TO H66 W	* Call
2827<2817	1101<1126	M32 A TO H66 W	* Call
2827<2817	1101<1127	M49 A TO H66 W	* Call
2827<2817	1101<1128	M66 A TO H66 W	* Call
2827<2817	1101<1129	M80 A TO H66 W	* Call
2827<2817	1101<1130	M15 W TO H66 W	* Call
2827<2817	1101<1131	M32 W TO H66 W	* Call
2827<2817	1101<1132	M49 W TO H66 W	* Call
2827<2817	1101<1133	M66 W TO H66 W	* Call
2827<2817	1101<1134	M80 W TO H66 W	* Call
2827<2817	1102<1125	M15 A TO H89 W	* Call
2827<2817	1102<1126	M32 A TO H89 W	* Call
2827<2817	1102<1127	M49 A TO H89 W	* Call
2827<2817	1102<1128	M66 A TO H89 W	* Call
2827<2817	1102<1129	M80 A TO H89 W	* Call

2827<2817	1102<1130	M15 W TO H89 W	* Call
2827<2817	1102<1131	M32 W TO H89 W	* Call
2827<2817	1102<1132	M49 W TO H89 W	* Call
2827<2817	1102<1133	M66 W TO H89 W	* Call
2827<2817	1102<1134	M80 W TO H89 W	* Call
2827<2817	1106<1125	M15 A TO HA1 R	* Call
2827<2817	1106<1126	M32 A TO HA1 R	* Call
2827<2817	1106<1127	M49 A TO HA1 R	* Call
2827<2817	1106<1128	M66 A TO HA1 R	* Call
2827<2817	1106<1129	M80 A TO HA1 R	* Call
2827<2817	1145<1125	M15 A TO HA1 W	* Call
2827<2817	1145<1126	M32 A TO HA1 W	* Call
2827<2817	1145<1127	M49 A TO HA1 W	* Call
2827<2817	1145<1128	M66 A TO HA1 W	* Call
2827<2817	1145<1129	M80 A TO HA1 W	* Call
2827<2817	1145<1130	M15 W TO HA1 W	* Call
2827<2817	1145<1131	M32 W TO HA1 W	* Call
2827<2817	1145<1132	M49 W TO HA1 W	* Call
2827<2817	1145<1133	M66 W TO HA1 W	* Call
2827<2817	1145<1134	M80 W TO HA1 W	* Call
2827<2817	1898<1996	PREPLND MEMTO32GBCPTYINCR	* Call
2827<2817	1899<1996	PREPLND MEMTO16GBCPTYINCR	* Call
2827<2817	1909<1881	IFL TO IFL	* Call
2827<2817	1909<1882	ICF TO IFL	* Call
2827<2817	1909<1883	SAP(OPT) TO IFL	* Call
2827<2817	1909<1884	ZAAP TO IFL	* Call
2827<2817	1909<1885	ZIIP TO IFL	* Call
2827<2817	1909<1886	UIFL TO IFL	* Call
2827<2817	1910<1881	IFL TO ICF	* Call
2827<2817	1910<1882	ICF TO ICF	* Call
2827<2817	1910<1883	SAP(OPT) TO ICF	* Call
2827<2817	1910<1884	ZAAP TO ICF	* Call
2827<2817	1910<1885	ZIIP TO ICF	* Call
2827<2817	1910<1886	UIFL TO ICF	* Call
2827<2817	1911<1881	IFL TO SAP(OPT)	* Call
2827<2817	1911<1882	ICF TO SAP(OPT)	* Call
2827<2817	1911<1884	ZAAP TO SAP(OPT)	* Call
2827<2817	1911<1885	ZIIP TO SAP(OPT)	* Call
2827<2817	1911<1886	UIFL TO SAP(OPT)	* Call
2827<2817	1912<1881	IFL TO ZAAP	* Call
2827<2817	1912<1882	ICF TO ZAAP	* Call
2827<2817	1912<1883	SAP(OPT) TO ZAAP	* Call
2827<2817	1912<1884	ZAAP TO ZAAP	* Call
2827<2817	1912<1885	ZIIP TO ZAAP	* Call
2827<2817	1912<1886	UIFL TO ZAAP	* Call
2827<2817	1913<1881	IFL TO ZIIP	* Call
2827<2817	1913<1882	ICF TO ZIIP	* Call

2827<2817	1913<1883	SAP(OPT) TO ZIIP	* Call
2827<2817	1913<1884	ZAAP TO ZIIP	* Call
2827<2817	1913<1885	ZIIP TO ZIIP	* Call
2827<2817	1913<1886	UIFL TO ZIIP	* Call
2827<2817	1914<1881	IFL TO UIFL	* Call
2827<2817	1914<1882	ICF TO UIFL	* Call
2827<2817	1914<1883	SAP(OPT) TO UIFL	* Call
2827<2817	1914<1884	ZAAP TO UIFL	* Call
2827<2817	1914<1885	ZIIP TO UIFL	* Call
2827<2817	1914<1886	UIFL TO UIFL	* Call
2827<2817	4022<4015	AFR NO C/A-AFR W MULTI	* Call
2827<2817	4022<4016	AFR C/A-AFR W MULTI	* Call
2827<2817	4022<4017	AFR NO C/W-AFR W MULTI	* Call
2827<2817	4022<4018	AFR C/W-AFR W MULTI	* Call
2827<2817	4022<4019	AFRMULT NOC/A-AFR W MULTI	* Call
2827<2817	4022<4020	AFRMULT C/A-AFR W MULTI	* Call
2827<2817	4024<4015	AFR NO C/A-AFR R MULTI	* Call
2827<2817	4024<4016	AFR C/A-AFR R MULTI	* Call
2827<2817	4024<4019	AFRMULT NOC/A-AFR R MULTI	* Call
2827<2817	4024<4020	AFRMULT C/A-AFR R MULTI	* Call
2827<2817	4025<4015	AFR NO C/A-AFR W SINGLE	* Call
2827<2817	4025<4016	AFR C/A-AFR W SINGLE	* Call
2827<2817	4025<4017	AFR NO C/W-AFR W SINGLE	* Call
2827<2817	4025<4018	AFR C/W-AFR W SINGLE	* Call
2827<2817	4025<4019	AFRMULT NOC/A-AFR W SINGLE	* Call
2827<2817	4025<4020	AFRMULT C/A-AFR W SINGLE	* Call
2827<2817	4026<4015	AFR NO C/A-AFR R SINGLE	* Call
2827<2817	4026<4016	AFR C/A-AFR R SINGLE	* Call
2827<2817	4026<4019	AFRMULT NOC/A-AFR R SINGLE	* Call
2827<2817	4026<4020	AFRMULT C/A-AFR R SINGLE	* Call
2827<2828	0101<0138	CP 2PK TO CP 10PK	* Call
2827<2828	0101<0140	CP 4PK TO CP 10PK	* Call
2827<2828	0101<0142	CP 6PK TO CP 10PK	* Call
2827<2828	1095<1148	H13 TO H20 RAD	* Call
2827<2828	1899<1993	PREPLND MEM TO 16GB MEMCPTYI	* Call
2827<2828	1909<5796	SAP OPTIONAL TO IFL	* Call
2827<2828	1909<5797	ZAAP TO IFL	* Call
2827<2828	1909<5798	ZIIP TO IFL	* Call
2827<2828	1910<5794	IFL TO ICF	* Call
2827<2828	1910<5796	SAP OPTIONAL TO ICF	* Call
2827<2828	1910<5797	ZAAP TO ICF	* Call
2827<2828	1910<5798	ZIIP TO ICF	* Call
2827<2828	1910<5799	UIFL TO ICF	* Call
2827<2828	1911<5794	IFL TO SAP(OPT)	* Call
2827<2828	1911<5795	ICF TO SAP(OPT)	* Call
2827<2828	1911<5797	ZAAP TO SAP(OPT)	* Call
2827<2828	1911<5798	ZIIP TO SAP(OPT)	* Call

2827<2828	1911<5799	UIFL TO SAP(OPT)	* Call
2827<2828	1912<5794	IFL TO ZAAP	* Call
2827<2828	1912<5795	ICF TO ZAAP	* Call
2827<2828	1912<5796	SAP OPTIONAL TO ZAAP	* Call
2827<2828	1912<5798	ZIIP TO ZAAP	* Call
2827<2828	1912<5799	UIFL TO ZAAP	* Call
2827<2828	1913<5794	IFL TO ZIIP	* Call
2827<2828	1913<5795	ICF TO ZIIP	* Call
2827<2828	1913<5796	SAP OPTIONAL TO ZIIP	* Call
2827<2828	1913<5797	ZAAP TO ZIIP	* Call
2827<2828	1913<5799	UIFL TO ZIIP	* Call
2827<2828	1914<5794	IFL TO UIFL	* Call
2827<2828	1914<5796	SAP OPTIONAL TO UIFL	* Call
2827<2828	1914<5797	ZAAP TO UIFL	* Call
2827<2828	1914<5798	ZIIP TO UIFL	* Call
2827<2828	1996<1993	PREPLN MEM TO 16GBPREPLNMEM	* Call
2828	0140<0138	CP 2PK TO CP 4PK	* Call
2828	0142<0138	CP 2PK TO CP 6PK	* Call
2828	0142<0140	CP 4PK TO CP 6PK	* Call
2828	0150<0138	CP 2PK TO CP 10PK	* Call
2828	0150<0140	CP 4PK TO CP 10PK	* Call
2828	0150<0142	CP 6PK TO CP 10PK	* Call
2828	1148<1147	H06 TO H13	* Call
2828	1903<1993	PREPLND MEMTO8GB MEMCPTYINCR	* Call
2828	5794<5795	ICF TO IFL	* Call
2828	5794<5796	SAP OPTIONAL TO IFL	* Call
2828	5794<5797	ZAAP TO IFL	* Call
2828	5794<5798	ZIIP TO IFL	* Call
2828	5795<5794	IFL TO ICF	* Call
2828	5795<5796	SAP OPTIONAL TO ICF	* Call
2828	5795<5797	ZAAP TO ICF	* Call
2828	5795<5798	ZIIP TO ICF	* Call
2828	5795<5799	UIFL TO ICF	* Call
2828	5796<5794	IFL TO SAP OPTIONAL	* Call
2828	5796<5795	ICF TO SAP OPTIONAL	* Call
2828	5796<5797	ZAAP TO SAP OPTIONAL	* Call
2828	5796<5798	ZIIP TO SAP OPTIONAL	* Call
2828	5796<5799	UIFL TO SAP OPTIONAL	* Call
2828	5797<5794	IFL TO ZAAP	* Call
2828	5797<5795	ICF TO ZAAP	* Call
2828	5797<5796	SAP OPTIONAL TO ZAAP	* Call
2828	5797<5798	ZIIP TO ZAAP	* Call
2828	5797<5799	UIFL TO ZAAP	* Call
2828	5798<5794	IFL TO ZIIP	* Call
2828	5798<5795	ICF TO ZIIP	* Call
2828	5798<5796	SAP OPTIONAL TO ZIIP	* Call
2828	5798<5797	ZAAP TO ZIIP	* Call

2828	5798<5799	UIFL TO ZIIP	* Call
2828	5799<5795	ICF TO UIFL	* Call
2828	5799<5796	SAP OPTIONAL TO UIFL	* Call
2828	5799<5797	ZAAP TO UIFL	* Call
2828	5799<5798	ZIIP TO UIFL	* Call
2828<2098	1148<1123	E10 TO H13	* Call
2828<2098	1903<1991	PREPLND MEMTO8GB MEMCPTYINCR	* Call
2828<2098	5794<6650	IFL TO IFL	* Call
2828<2098	5794<6651	ICF TO IFL	* Call
2828<2098	5794<6652	ADDL SAP TO IFL	* Call
2828<2098	5794<6653	ZAAP TO IFL	* Call
2828<2098	5794<6654	ZIIP TO IFL	* Call
2828<2098	5794<6655	UIFL TO IFL	* Call
2828<2098	5795<6650	IFL TO ICF	* Call
2828<2098	5795<6651	ICF TO ICF	* Call
2828<2098	5795<6652	ADDL SAP TO ICF	* Call
2828<2098	5795<6653	ZAAP TO ICF	* Call
2828<2098	5795<6654	ZIIP TO ICF	* Call
2828<2098	5795<6655	UIFL TO ICF	* Call
2828<2098	5796<6650	IFL TO SAP OPTIONAL	* Call
2828<2098	5796<6651	ICF TO SAP OPTIONAL	* Call
2828<2098	5796<6653	ZAAP TO SAP OPTIONAL	* Call
2828<2098	5796<6654	ZIIP TO SAP OPTIONAL	* Call
2828<2098	5796<6655	UIFL TO SAP OPTIONAL	* Call
2828<2098	5797<6650	IFL TO ZAAP	* Call
2828<2098	5797<6651	ICF TO ZAAP	* Call
2828<2098	5797<6652	ADDL SAP TO ZAAP	* Call
2828<2098	5797<6653	ZAAP TO ZAAP	* Call
2828<2098	5797<6654	ZIIP TO ZAAP	* Call
2828<2098	5797<6655	UIFL TO ZAAP	* Call
2828<2098	5798<6650	IFL TO ZIIP	* Call
2828<2098	5798<6651	ICF TO ZIIP	* Call
2828<2098	5798<6652	ADDL SAP TO ZIIP	* Call
2828<2098	5798<6653	ZAAP TO ZIIP	* Call
2828<2098	5798<6654	ZIIP TO ZIIP	* Call
2828<2098	5798<6655	UIFL TO ZIIP	* Call
2828<2098	5799<6650	IFL TO UIFL	* Call
2828<2098	5799<6651	ICF TO UIFL	* Call
2828<2098	5799<6652	ADDL SAP TO UIFL	* Call
2828<2098	5799<6653	ZAAP TO UIFL	* Call
2828<2098	5799<6654	ZIIP TO UIFL	* Call
2828<2098	5799<6655	UIFL TO UIFL	* Call
2828<2818	1148<1135	M05 TO H13	* Call
2828<2818	1148<1136	M10 TO H13	* Call
2828<2818	1903<1993	PREPLND MEMTO8GB MEMCPTYINCR	* Call
2828<2818	5794<3394	IFL TO IFL	* Call
2828<2818	5794<3395	ICF TO IFL	* Call

2828<2818	5794<3396	ADDL SAP TO IFL	* Call
2828<2818	5794<3397	ZAAP TO IFL	* Call
2828<2818	5794<3398	ZIIP TO IFL	* Call
2828<2818	5794<3399	UIFL TO IFL	* Call
2828<2818	5795<3394	IFL TO ICF	* Call
2828<2818	5795<3395	ICF TO ICF	* Call
2828<2818	5795<3396	ADDL SAP TO ICF	* Call
2828<2818	5795<3397	ZAAP TO ICF	* Call
2828<2818	5795<3398	ZIIP TO ICF	* Call
2828<2818	5795<3399	UIFL TO ICF	* Call
2828<2818	5796<3394	IFL TO SAP OPTIONAL	* Call
2828<2818	5796<3395	ICF TO SAP OPTIONAL	* Call
2828<2818	5796<3397	ZAAP TO SAP OPTIONAL	* Call
2828<2818	5796<3398	ZIIP TO SAP OPTIONAL	* Call
2828<2818	5796<3399	UIFL TO SAP OPTIONAL	* Call
2828<2818	5797<3394	IFL TO ZAAP	* Call
2828<2818	5797<3395	ICF TO ZAAP	* Call
2828<2818	5797<3396	ADDL SAP TO ZAAP	* Call
2828<2818	5797<3397	ZAAP TO ZAAP	* Call
2828<2818	5797<3398	ZIIP TO ZAAP	* Call
2828<2818	5797<3399	UIFL TO ZAAP	* Call
2828<2818	5798<3394	IFL TO ZIIP	* Call
2828<2818	5798<3395	ICF TO ZIIP	* Call
2828<2818	5798<3396	ADDL SAP TO ZIIP	* Call
2828<2818	5798<3397	ZAAP TO ZIIP	* Call
2828<2818	5798<3398	ZIIP TO ZIIP	* Call
2828<2818	5798<3399	UIFL TO ZIIP	* Call
2828<2818	5799<3394	IFL TO UIFL	* Call
2828<2818	5799<3395	ICF TO UIFL	* Call
2828<2818	5799<3396	ADDL SAP TO UIFL	* Call
2828<2818	5799<3397	ZAAP TO UIFL	* Call
2828<2818	5799<3398	ZIIP TO UIFL	* Call
2828<2818	5799<3399	UIFL TO UIFL	* Call
2964	1034<1033	N30 AIR TO N63 AIR	* Call
2964	1035<1033	N30 AIR TO N96 AIR	* Call
2964	1035<1034	N63 AIR TO N96 AIR	* Call
2964	1036<1033	N30 AIR TO NC9 AIR	* Call
2964	1036<1034	N63 AIR TO NC9 AIR	* Call
2964	1036<1035	N96 AIR TO NC9 AIR	* Call
2964	1037<1033	N30 AIR TO NE1 AIR	* Call
2964	1037<1034	N63 AIR TO NE1 AIR	* Call
2964	1037<1035	N96 AIR TO NE1 AIR	* Call
2964	1037<1036	NC9 AIR TO NE1 AIR	* Call
2964	1039<1038	N30 WATER TO N63 WATER	* Call
2964	1040<1038	N30 WATER TO N96 WATER	* Call
2964	1040<1039	N63 WATER TO N96 WATER	* Call
2964	1041<1038	N30 WATER TO NC9 WATER	* Call

2964	1041<1039	N63 WATER TO NC9 WATER	* Call
2964	1041<1040	N96 WATER TO NC9 WATER	* Call
2964	1042<1038	N30 WATER TO NE1 WATER	* Call
2964	1042<1039	N63 WATER TO NE1 WATER	* Call
2964	1042<1040	N96 WATER TO NE1 WATER	* Call
2964	1042<1041	NC9 WATER TO NE1 WATER	* Call
2964	1898<1990	32GBPREDPLND TO 32GBCPTYINCR	* Call
2964	1899<1996	16GBPREDPLND TO 16GBCPTYINCR	* Call
2964	1919<1920	ICF TO IFL	* Call
2964	1919<1921	SAP(OPT) TO IFL	* Call
2964	1919<1922	ZIIP TO IFL	* Call
2964	1920<1919	IFL TO ICF	* Call
2964	1920<1921	SAP(OPT) TO ICF	* Call
2964	1920<1922	ZIIP TO ICF	* Call
2964	1920<1923	UIFL TO ICF	* Call
2964	1921<1919	IFL TO SAP(OPT)	* Call
2964	1921<1920	ICF TO SAP(OPT)	* Call
2964	1921<1922	ZIIP TO SAP(OPT)	* Call
2964	1921<1923	UIFL TO SAP(OPT)	* Call
2964	1922<1919	IFL TO ZIIP	* Call
2964	1922<1920	ICF TO ZIIP	* Call
2964	1922<1921	SAP(OPT) TO ZIIP	* Call
2964	1922<1923	UIFL TO ZIIP	* Call
2964	1923<1920	ICF TO UIFL	* Call
2964	1923<1921	SAP(OPT) TO UIFL	* Call
2964	1923<1922	ZIIP TO UIFL	* Call
2964<2817	1033<1125	M15 AIR TO N30 AIR	* Call
2964<2817	1033<1126	M32 AIR TO N30 AIR	* Call
2964<2817	1033<1127	M49 AIR TO N30 AIR	* Call
2964<2817	1033<1128	M66 AIR TO N30 AIR	* Call
2964<2817	1033<1129	M80 AIR TO N30 AIR	* Call
2964<2817	1034<1125	M15 AIR TO N63 AIR	* Call
2964<2817	1034<1126	M32 AIR TO N63 AIR	* Call
2964<2817	1034<1127	M49 AIR TO N63 AIR	* Call
2964<2817	1034<1128	M66 AIR TO N63 AIR	* Call
2964<2817	1034<1129	M80 AIR TO N63 AIR	* Call
2964<2817	1035<1125	M15 AIR TO N96 AIR	* Call
2964<2817	1035<1126	M32 AIR TO N96 AIR	* Call
2964<2817	1035<1127	M49 AIR TO N96 AIR	* Call
2964<2817	1035<1128	M66 AIR TO N96 AIR	* Call
2964<2817	1035<1129	M80 AIR TO N96 AIR	* Call
2964<2817	1036<1125	M15 AIR TO NC9 AIR	* Call
2964<2817	1036<1126	M32 AIR TO NC9 AIR	* Call
2964<2817	1036<1127	M49 AIR TO NC9 AIR	* Call
2964<2817	1036<1128	M66 AIR TO NC9 AIR	* Call
2964<2817	1036<1129	M80 AIR TO NC9 AIR	* Call
2964<2817	1037<1125	M15 AIR TO NE1 AIR	* Call

2964<2817	1037<1126	M32 AIR TO NE1 AIR	* Call
2964<2817	1037<1127	M49 AIR TO NE1 AIR	* Call
2964<2817	1037<1128	M66 AIR TO NE1 AIR	* Call
2964<2817	1037<1129	M80 AIR TO NE1 AIR	* Call
2964<2817	1038<1125	M15 AIR TO N30 WATER	* Call
2964<2817	1038<1126	M32 AIR TO N30 WATER	* Call
2964<2817	1038<1127	M49 AIR TO N30 WATER	* Call
2964<2817	1038<1128	M66 AIR TO N30 WATER	* Call
2964<2817	1038<1129	M80 AIR TO N30 WATER	* Call
2964<2817	1038<1130	M15 WATER TO N30 WATER	* Call
2964<2817	1038<1131	M32 WATER TO N30 WATER	* Call
2964<2817	1038<1132	M49 WATER TO N30 WATER	* Call
2964<2817	1038<1133	M66 WATER TO N30 WATER	* Call
2964<2817	1038<1134	M80 WATER TO N30 WATER	* Call
2964<2817	1039<1125	M15 AIR TO N63 WATER	* Call
2964<2817	1039<1126	M32 AIR TO N63 WATER	* Call
2964<2817	1039<1127	M49 AIR TO N63 WATER	* Call
2964<2817	1039<1128	M66 AIR TO N63 WATER	* Call
2964<2817	1039<1129	M80 AIR TO N63 WATER	* Call
2964<2817	1039<1130	M15 WATER TO N63 WATER	* Call
2964<2817	1039<1131	M32 WATER TO N63 WATER	* Call
2964<2817	1039<1132	M49 WATER TO N63 WATER	* Call
2964<2817	1039<1133	M66 WATER TO N63 WATER	* Call
2964<2817	1039<1134	M80 WATER TO N63 WATER	* Call
2964<2817	1040<1125	M15 AIR TO N96 WATER	* Call
2964<2817	1040<1126	M32 AIR TO N96 WATER	* Call
2964<2817	1040<1127	M49 AIR TO N96 WATER	* Call
2964<2817	1040<1128	M66 AIR TO N96 WATER	* Call
2964<2817	1040<1129	M80 AIR TO N96 WATER	* Call
2964<2817	1040<1130	M15 WATER TO N96 WATER	* Call
2964<2817	1040<1131	M32 WATER TO N96 WATER	* Call
2964<2817	1040<1132	M49 WATER TO N96 WATER	* Call
2964<2817	1040<1133	M66 WATER TO N96 WATER	* Call
2964<2817	1040<1134	M80 WATER TO N96 WATER	* Call
2964<2817	1041<1125	M15 AIR TO NC9 WATER	* Call
2964<2817	1041<1126	M32 AIR TO NC9 WATER	* Call
2964<2817	1041<1127	M49 AIR TO NC9 WATER	* Call
2964<2817	1041<1128	M66 AIR TO NC9 WATER	* Call
2964<2817	1041<1129	M80 AIR TO NC9 WATER	* Call
2964<2817	1041<1130	M15 WATER TO NC9 WATER	* Call
2964<2817	1041<1131	M32 WATER TO NC9 WATER	* Call
2964<2817	1041<1132	M49 WATER TO NC9 WATER	* Call
2964<2817	1041<1133	M66 WATER TO NC9 WATER	* Call
2964<2817	1041<1134	M80 WATER TO NC9 WATER	* Call
2964<2817	1042<1125	M15 AIR TO NE1 WATER	* Call
2964<2817	1042<1126	M32 AIR TO NE1 WATER	* Call
2964<2817	1042<1127	M49 AIR TO NE1 WATER	* Call

2964<2817	1042<1128	M66 AIR TO NE1 WATER	* Call
2964<2817	1042<1129	M80 AIR TO NE1 WATER	* Call
2964<2817	1042<1130	M15 WATER TO NE1 WATER	* Call
2964<2817	1042<1131	M32 WATER TO NE1 WATER	* Call
2964<2817	1042<1132	M49 WATER TO NE1 WATER	* Call
2964<2817	1042<1133	M66 WATER TO NE1 WATER	* Call
2964<2817	1042<1134	M80 WATER TO NE1 WATER	* Call
2964<2817	1919<1881	IFL TO IFL	* Call
2964<2817	1919<1882	ICF TO IFL	* Call
2964<2817	1919<1883	SAP(OPT) TO IFL	* Call
2964<2817	1919<1884	ZAAP TO IFL	* Call
2964<2817	1919<1885	ZIIP TO IFL	* Call
2964<2817	1919<1886	UIFL TO IFL	* Call
2964<2817	1920<1881	IFL TO ICF	* Call
2964<2817	1920<1882	ICF TO ICF	* Call
2964<2817	1920<1883	SAP(OPT) TO ICF	* Call
2964<2817	1920<1884	ZAAP TO ICF	* Call
2964<2817	1920<1885	ZIIP TO ICF	* Call
2964<2817	1920<1886	UIFL TO ICF	* Call
2964<2817	1921<1881	IFL TO SAP(OPT)	* Call
2964<2817	1921<1882	ICF TO SAP(OPT)	* Call
2964<2817	1921<1884	ZAAP TO SAP(OPT)	* Call
2964<2817	1921<1885	ZIIP TO SAP(OPT)	* Call
2964<2817	1921<1886	UIFL TO SAP(OPT)	* Call
2964<2817	1922<1881	IFL TO ZIIP	* Call
2964<2817	1922<1882	ICF TO ZIIP	* Call
2964<2817	1922<1883	SAP(OPT) TO ZIIP	* Call
2964<2817	1922<1884	ZAAP TO ZIIP	* Call
2964<2817	1922<1885	ZIIP TO ZIIP	* Call
2964<2817	1922<1886	UIFL TO ZIIP	* Call
2964<2817	1923<1881	IFL TO UIFL	* Call
2964<2817	1923<1882	ICF TO UIFL	* Call
2964<2817	1923<1883	SAP(OPT) TO UIFL	* Call
2964<2817	1923<1884	ZAAP TO UIFL	* Call
2964<2817	1923<1885	ZIIP TO UIFL	* Call
2964<2817	1923<1886	UIFL TO UIFL	* Call
2964<2817	4008<4000	I/O DRAWER-A - I/O DRAWER	* Call
2964<2817	4008<4004	I/O DRAWER-W - I/O DRAWER	* Call
2964<2827	1033<1095	H20 R TO N30 R	* Call
2964<2827	1033<1096	H43 R TO N30 R	* Call
2964<2827	1033<1097	H66 R TO N30 R	* Call
2964<2827	1033<1098	H89 R TO N30 R	* Call
2964<2827	1033<1106	HA1 R TO N30 R	* Call
2964<2827	1034<1095	H20 R TO N63 R	* Call
2964<2827	1034<1096	H43 R TO N63 R	* Call
2964<2827	1034<1097	H66 R TO N63 R	* Call
2964<2827	1034<1098	H89 R TO N63 R	* Call

2964<2827	1034<1106	HA1 R TO N63 R	* Call
2964<2827	1035<1095	H20 R TO N96 R	* Call
2964<2827	1035<1096	H43 R TO N96 R	* Call
2964<2827	1035<1097	H66 R TO N96 R	* Call
2964<2827	1035<1098	H89 R TO N96 R	* Call
2964<2827	1035<1106	HA1 R TO N96 R	* Call
2964<2827	1036<1095	H20 R TO NC9 R	* Call
2964<2827	1036<1096	H43 R TO NC9 R	* Call
2964<2827	1036<1097	H66 R TO NC9 R	* Call
2964<2827	1036<1098	H89 R TO NC9 R	* Call
2964<2827	1036<1106	HA1 R TO NC9 R	* Call
2964<2827	1037<1095	H20 R TO NE1 R	* Call
2964<2827	1037<1096	H43 R TO NE1 R	* Call
2964<2827	1037<1097	H66 R TO NE1 R	* Call
2964<2827	1037<1098	H89 R TO NE1 R	* Call
2964<2827	1037<1106	HA1 R TO NE1 R	* Call
2964<2827	1038<1095	H20 R TO N30 W	* Call
2964<2827	1038<1096	H43 R TO N30 W	* Call
2964<2827	1038<1097	H66 R TO N30 W	* Call
2964<2827	1038<1098	H89 R TO N30 W	* Call
2964<2827	1038<1099	H20 W TO N30 W	* Call
2964<2827	1038<1100	H43 W TO N30 W	* Call
2964<2827	1038<1101	H66 W TO N30 W	* Call
2964<2827	1038<1102	H89 W TO N30 W	* Call
2964<2827	1038<1106	HA1 R TO N30 W	* Call
2964<2827	1038<1145	HA1 W TO N30 W	* Call
2964<2827	1039<1095	H20 R TO N63 W	* Call
2964<2827	1039<1096	H43 R TO N63 W	* Call
2964<2827	1039<1097	H66 R TO N63 W	* Call
2964<2827	1039<1098	H89 R TO N63 W	* Call
2964<2827	1039<1099	H20 W TO N63 W	* Call
2964<2827	1039<1100	H43 W TO N63 W	* Call
2964<2827	1039<1101	H66 W TO N63 W	* Call
2964<2827	1039<1102	H89 W TO N63 W	* Call
2964<2827	1039<1106	HA1 R TO N63 W	* Call
2964<2827	1039<1145	HA1 W TO N63 W	* Call
2964<2827	1040<1095	H20 R TO N96 W	* Call
2964<2827	1040<1096	H43 R TO N96 W	* Call
2964<2827	1040<1097	H66 R TO N96 W	* Call
2964<2827	1040<1098	H89 R TO N96 W	* Call
2964<2827	1040<1099	H20 W TO N96 W	* Call
2964<2827	1040<1100	H43 W TO N96 W	* Call
2964<2827	1040<1101	H66 W TO N96 W	* Call
2964<2827	1040<1102	H89 W TO N96 W	* Call
2964<2827	1040<1106	HA1 R TO N96 W	* Call
2964<2827	1040<1145	HA1 W TO N96 W	* Call
2964<2827	1041<1095	H20 R TO NC9 W	* Call

2964<2827	1041<1096	H43 R TO NC9 W	* Call
2964<2827	1041<1097	H66 R TO NC9 W	* Call
2964<2827	1041<1098	H89 R TO NC9 W	* Call
2964<2827	1041<1099	H20 W TO NC9 W	* Call
2964<2827	1041<1100	H43 W TO NC9 W	* Call
2964<2827	1041<1101	H66 W TO NC9 W	* Call
2964<2827	1041<1102	H89 W TO NC9 W	* Call
2964<2827	1041<1106	HA1 R TO NC9 W	* Call
2964<2827	1041<1145	HA1 W TO NC9 W	* Call
2964<2827	1042<1095	H20 R TO NE1 W	* Call
2964<2827	1042<1096	H43 R TO NE1 W	* Call
2964<2827	1042<1097	H66 R TO NE1 W	* Call
2964<2827	1042<1098	H89 R TO NE1 W	* Call
2964<2827	1042<1099	H20 W TO NE1 W	* Call
2964<2827	1042<1100	H43 W TO NE1 W	* Call
2964<2827	1042<1101	H66 W TO NE1 W	* Call
2964<2827	1042<1102	H89 W TO NE1 W	* Call
2964<2827	1042<1106	HA1 R TO NE1 W	* Call
2964<2827	1042<1145	HA1 W TO NE1 W	* Call
2964<2827	1919<1909	IFL TO IFL	* Call
2964<2827	1919<1910	ICF TO IFL	* Call
2964<2827	1919<1911	SAP(OPT) TO IFL	* Call
2964<2827	1919<1912	ZAAP TO IFL	* Call
2964<2827	1919<1913	ZIIP TO IFL	* Call
2964<2827	1919<1914	UIFL TO IFL	* Call
2964<2827	1920<1909	IFL TO ICF	* Call
2964<2827	1920<1910	ICF TO ICF	* Call
2964<2827	1920<1911	SAP(OPT) TO ICF	* Call
2964<2827	1920<1912	ZAAP TO ICF	* Call
2964<2827	1920<1913	ZIIP TO ICF	* Call
2964<2827	1920<1914	UIFL TO ICF	* Call
2964<2827	1921<1909	IFL TO SAP(OPT)	* Call
2964<2827	1921<1910	ICF TO SAP(OPT)	* Call
2964<2827	1921<1912	ZAAP TO SAP(OPT)	* Call
2964<2827	1921<1913	ZIIP TO SAP(OPT)	* Call
2964<2827	1921<1914	UIFL TO SAP(OPT)	* Call
2964<2827	1922<1909	IFL TO ZIIP	* Call
2964<2827	1922<1910	ICF TO ZIIP	* Call
2964<2827	1922<1911	SAP(OPT) TO ZIIP	* Call
2964<2827	1922<1912	ZAAP TO ZIIP	* Call
2964<2827	1922<1913	ZIIP TO ZIIP	* Call
2964<2827	1922<1914	UIFL TO ZIIP	* Call
2964<2827	1923<1909	IFL TO UIFL	* Call
2964<2827	1923<1910	ICF TO UIFL	* Call
2964<2827	1923<1911	SAP(OPT) TO UIFL	* Call
2964<2827	1923<1912	ZAAP TO UIFL	* Call
2964<2827	1923<1913	ZIIP TO UIFL	* Call

2964<2827	1923<1914	UIFL TO UIFL	* Call
2965<2818	1044<1135	M05 TO N20	* Call
2965<2818	1044<1136	M10 TO N20	* Call
2965<2818	1888<1993	8GB PA TO 8GBCPTYINCR 3X	* Call
2965<2818	1891<1993	8GBPA TO 8GBCPTYINCR MEGA	* Call
2965<2818	1903<1993	8GB PA TO 8GBCPTYINCR	* Call
2965<2818	1924<3394	IFL TO IFL	* Call
2965<2818	1924<3395	ICF TO IFL	* Call
2965<2818	1924<3396	SAP OPTIONAL TO IFL	* Call
2965<2818	1924<3397	ZAAP TO IFL	* Call
2965<2818	1924<3398	ZIIP TO IFL	* Call
2965<2818	1924<3399	UIFL TO IFL	* Call
2965<2818	1925<3394	IFL TO ICF	* Call
2965<2818	1925<3395	ICF TO ICF	* Call
2965<2818	1925<3396	SAP OPTIONAL TO ICF	* Call
2965<2818	1925<3397	ZAAP TO ICF	* Call
2965<2818	1925<3398	ZIIP TO ICF	* Call
2965<2818	1925<3399	UIFL TO ICF	* Call
2965<2818	1926<3394	IFL TO SAP OPTIONAL	* Call
2965<2818	1926<3395	ICF TO SAP OPTIONAL	* Call
2965<2818	1926<3397	ZAAP TO SAP OPTIONAL	* Call
2965<2818	1926<3398	ZIIP TO SAP OPTIONAL	* Call
2965<2818	1926<3399	UIFL TO SAP OPTIONAL	* Call
2965<2818	1927<3394	IFL TO ZIIP	* Call
2965<2818	1927<3395	ICF TO ZIIP	* Call
2965<2818	1927<3396	SAP OPTIONAL TO ZIIP	* Call
2965<2818	1927<3397	ZAAP TO ZIIP	* Call
2965<2818	1927<3398	ZIIP TO ZIIP	* Call
2965<2818	1927<3399	UIFL TO ZIIP	* Call
2965<2818	1928<3394	IFL TO UIFL	* Call
2965<2818	1928<3395	ICF TO UIFL	* Call
2965<2818	1928<3396	SAP OPTIONAL TO UIFL	* Call
2965<2818	1928<3397	ZAAP TO UIFL	* Call
2965<2818	1928<3398	ICF TO ZIIP	* Call
2965<2818	1928<3399	UIFL TO UIFL	* Call
2965<2828	1013<0138	2PK TO 4PK	* Call
2965<2828	1014<0138	2PK TO 6PK	* Call
2965<2828	1014<0140	4PK TO 6PK	* Call
2965<2828	1015<0138	2PK TO 10PK	* Call
2965<2828	1015<0140	4PK TO 10PK	* Call
2965<2828	1015<0142	6PK TO 10PK	* Call
2965<2828	1044<1147	H06 TO N20	* Call
2965<2828	1044<1148	H13 TO N20	* Call
2965<2828	1888<1993	8GB PA TO 8GBCPTYINCR 3X	* Call
2965<2828	1891<1993	8GB PA TO 8GBCPTYINCR MEGA	* Call
2965<2828	1903<1993	8GB PA TO 8GBCPTYINCR	* Call
2965<2828	1924<5794	IFL TO IFL	* Call

2965<2828	1924<5795	ICF TO IFL	* Call
2965<2828	1924<5796	SAP OPTIONAL TO IFL	* Call
2965<2828	1924<5797	ZAAP TO IFL	* Call
2965<2828	1924<5798	ZIIP TO IFL	* Call
2965<2828	1924<5799	UIFL TO IFL	* Call
2965<2828	1925<5794	IFL TO ICF	* Call
2965<2828	1925<5795	ICF TO ICF	* Call
2965<2828	1925<5796	SAP OPTIONAL TO ICF	* Call
2965<2828	1925<5797	ZAAP TO ICF	* Call
2965<2828	1925<5798	ZIIP TO ICF	* Call
2965<2828	1925<5799	UIFL TO ICF	* Call
2965<2828	1926<5794	IFL TO SAP OPTIONAL	* Call
2965<2828	1926<5795	ICF TO SAP OPTIONAL	* Call
2965<2828	1926<5797	ZAAP TO SAP OPTIONAL	* Call
2965<2828	1926<5798	ZIIP TO SAP OPTIONAL	* Call
2965<2828	1926<5799	UIFL TO SAP OPTIONAL	* Call
2965<2828	1927<5794	IFL TO ZIIP	* Call
2965<2828	1927<5795	ICF TO ZIIP	* Call
2965<2828	1927<5796	SAP OPTIONAL TO ZIIP	* Call
2965<2828	1927<5797	ZAAP TO ZIIP	* Call
2965<2828	1927<5798	ZIIP TO ZIIP	* Call
2965<2828	1927<5799	UIFL TO ZIIP	* Call
2965<2828	1928<5794	IFL TO UIFL	* Call
2965<2828	1928<5795	ICF TO UIFL	* Call
2965<2828	1928<5796	SAP OPTIONAL TO UIFL	* Call
2965<2828	1928<5797	ZAAP TO UIFL	* Call
2965<2828	1928<5798	ZIIP TO UIFL	* Call
2965<2828	1928<5799	UIFL TO UIFL	* Call
2965<2965	1013<1012	2PK TO 4PK	* Call
2965<2965	1014<1012	2PK TO 6PK	* Call
2965<2965	1014<1013	4PK TO 6PK	* Call
2965<2965	1015<1012	2PK TO 10PK	* Call
2965<2965	1015<1013	4PK TO 10PK	* Call
2965<2965	1015<1014	6PK TO 10PK	* Call
2965<2965	1044<1043	N10 TO N20	* Call
2965<2965	1044<1056	L10 TO N20	* Call
2965<2965	1057<1056	L10 TO L20	* Call
2965<2965	1887<1996	16GB PA TO 16GBCPTYINCR 3X	* Call
2965<2965	1888<1993	16GB PA TO 32GBCPTYINCR	* Call
2965<2965	1890<1996	16GB PA TO 16GBCPTYINCR MEGA	* Call
2965<2965	1891<1993	2PK TO 10PK	* Call
2965<2965	1899<1996	16GB PA TO 16GBCPTYINCR	* Call
2965<2965	1903<1993	8GB PA TO 32GBCPTYINCR	* Call
2965<2965	1924<1925	ICF TO IFL	* Call
2965<2965	1924<1926	SAP OPTIONAL TO IFL	* Call
2965<2965	1924<1927	ZIIP TO IFL	* Call
2965<2965	1925<1924	IFL TO ICF	* Call

2965<2965		1925<1926	SAP OPTIONAL TO ICF	* Call
2965<2965		1925<1927	ZIIP TO ICF	* Call
2965<2965		1925<1928	UIFL TO ICF	* Call
2965<2965		1926<1924	IFL TO SAP OPTIONAL	* Call
2965<2965		1926<1925	ICF TO SAP OPTIONAL	* Call
2965<2965		1926<1927	ZIIP TO SAP OPTIONAL	* Call
2965<2965		1926<1928	UIFL TO SAP OPTIONAL	* Call
2965<2965		1927<1924	IFL TO ZIIP	* Call
2965<2965		1927<1925	ICF TO ZIIP	* Call
2965<2965		1927<1926	SAP OPTIONAL TO ZIIP	* Call
2965<2965		1927<1928	UIFL TO ZIIP	* Call
2965<2965		1928<1925	ICF TO UIFL	* Call
2965<2965		1928<1926	SAP OPTIONAL TO UIFL	* Call
2965<2965		1928<1927	ZIIP TO UIFL	* Call
3494		1118<1001	FEATURE CONVERSION 1001-1118	22,569
3494		3705<3704	3704 TO 3705	56,423
3494		4001<4000	CONVERT FC 4000 TO FC 4001	3,526
3588	F5C<F5A		MODEL CONVERSION	1,201
3588	F6C<F6A		MODEL CONVERSION	1,201
3590		3434<3412	DUAL ESCON TO 2-GBPS FICON	10,806
3590		3434<3432	1-GBPS FICON LW TO 2-GBPS	10,806
3590		3434<3433	1-GBPS FICON SW TO 2-GBPS	10,806
3590		3435<3412	DUAL ESCON TO 2-GBPS FICON	10,806
3590		3435<3432	1-GBPS FICON LW TO 2-GBPS	10,806
3590		3435<3433	1-GBPS FICON SW TO 2-GBPS	10,806
3590		5097<5098	CONVERT 3590 FC 5098 TO 5097	1,345
3592	E08<E07		MODEL CONV	14,980
3592	EH7<E07		MODEL CONVERSION	2,539
3906		1024<1023	M01 AIR TO M02 AIR	* Call
3906		1025<1023	M01 AIR TO M03 AIR	* Call
3906		1025<1024	M02 AIR TO M03 AIR	* Call
3906		1026<1023	M01 AIR TO M04 AIR	* Call
3906		1026<1024	M02 AIR TO M04 AIR	* Call
3906		1026<1025	M03 AIR TO M04 AIR	* Call
3906		1029<1028	M01 WATER TO M02 WATER	* Call
3906		1030<1028	M01 WATER TO M03 WATER	* Call
3906		1030<1029	M02 WATER TO M03 WATER	* Call
3906		1031<1028	M01 WATER TO M04 WATER	* Call
3906		1031<1029	M02 WATER TO M04 WATER	* Call
3906		1031<1030	M03 WATER TO M04 WATER	* Call
3906		1893<1991	Upgrade from FROM 1991 to 1893	* Call
3906		1898<1990	Upgrade from FROM 1990 to 1898	* Call
3906		1933<1934	UPGRADE FROM 1934 TO 1933	* Call
3906		1933<1935	Upgrade from FROM 1935 to 1933	* Call
3906		1933<1936	UPGRADE FROM 1936 TO 1933	* Call
3906		1934<1933	UPGRADE FROM 1933 TO 1934	* Call
3906		1934<1935	UPGRADE FROM 1935 TO 1934	* Call

3906	1934<1936	UPGRADE FROM 1936 TO 1934	* Call
3906	1934<1937	UPGRADE FROM 1937 TO 1934	* Call
3906	1935<1933	Upgrade from FROM 1933 to 1935	* Call
3906	1935<1934	UPGRADE FROM 1934 TO 1935	* Call
3906	1935<1936	UPGRADE FROM 1936 TO 1935	* Call
3906	1935<1937	Upgrade from FROM 1937 to 1935	* Call
3906	1936<1933	UPGRADE FROM 1933 TO 1936	* Call
3906	1936<1934	UPGRADE FROM 1934 TO 1936	* Call
3906	1936<1935	UPGRADE FROM 1935 TO 1936	* Call
3906	1936<1937	UPGRADE FROM 1937 TO 1936	* Call
3906	1937<1934	UPGRADE FROM 1934 TO 1937	* Call
3906	1937<1935	Upgrade from FROM 1935 to 1937	* Call
3906	1937<1936	UPGRADE FROM 1936 TO 1937	* Call
3906	1938<1990	Upgrade from FROM 1990 to 1938	* Call
3906	1939<1991	Upgrade from FROM 1991 to 1939	* Call
3906<2827	1023<1095	H20 R TO M01 AIR	* Call
3906<2827	1023<1096	H43 R TO M01 AIR	* Call
3906<2827	1023<1097	H66 R TO M01 AIR	* Call
3906<2827	1023<1098	H89 R TO M01 AIR	* Call
3906<2827	1023<1106	HA1 R TO M01 AIR	* Call
3906<2827	1024<1095	H20 R TO M02 AIR	* Call
3906<2827	1024<1096	H43 R TO M02 AIR	* Call
3906<2827	1024<1097	H66 R TO M02 AIR	* Call
3906<2827	1024<1098	H89 R TO M02 AIR	* Call
3906<2827	1024<1106	HA1 R TO M02 AIR	* Call
3906<2827	1025<1095	H20 R TO M03 AIR	* Call
3906<2827	1025<1096	H43 R TO M03 AIR	* Call
3906<2827	1025<1097	H66 R TO M03 AIR	* Call
3906<2827	1025<1098	H89 R TO M03 AIR	* Call
3906<2827	1025<1106	HA1 R TO M03 AIR	* Call
3906<2827	1026<1095	H20 R TO M04 AIR	* Call
3906<2827	1026<1096	H43 R TO M04 AIR	* Call
3906<2827	1026<1097	H66 R TO M04 AIR	* Call
3906<2827	1026<1098	H89 R TO M04 AIR	* Call
3906<2827	1026<1106	HA1 R TO M04 AIR	* Call
3906<2827	1027<1095	H20 R TO M05 AIR	* Call
3906<2827	1027<1096	H43 R TO M05 AIR	* Call
3906<2827	1027<1097	H66 R TO M05 AIR	* Call
3906<2827	1027<1098	H89 R TO M05 AIR	* Call
3906<2827	1027<1106	HA1 R TO M05 AIR	* Call
3906<2827	1028<1095	H20 R TO M01 WATER	* Call
3906<2827	1028<1096	H43 R TO M01 WATER	* Call
3906<2827	1028<1097	H66 R TO M01 WATER	* Call
3906<2827	1028<1098	H89 R TO M01 WATER	* Call
3906<2827	1028<1099	H20 W TO M01 WATER	* Call
3906<2827	1028<1100	H43 W TO M01 WATER	* Call
3906<2827	1028<1101	H66 W TO M01 WATER	* Call

3906<2827	1028<1102	H89 W TO M01 WATER	* Call
3906<2827	1028<1106	HA1 R TO M01 WATER	* Call
3906<2827	1028<1145	HA1 W TO M01 WATER	* Call
3906<2827	1029<1095	H20 R TO M02 WATER	* Call
3906<2827	1029<1096	H43 R TO M02 WATER	* Call
3906<2827	1029<1097	H66 R TO M02 WATER	* Call
3906<2827	1029<1098	H89 R TO M02 WATER	* Call
3906<2827	1029<1099	H20 W TO M02 WATER	* Call
3906<2827	1029<1100	H43 W TO M02 WATER	* Call
3906<2827	1029<1101	H66 W TO M02 WATER	* Call
3906<2827	1029<1102	H89 W TO M02 WATER	* Call
3906<2827	1029<1106	HA1 R TO M02 WATER	* Call
3906<2827	1029<1145	HA1 W TO M02 WATER	* Call
3906<2827	1030<1095	H20 R TO M03 WATER	* Call
3906<2827	1030<1096	H43 R TO M03 WATER	* Call
3906<2827	1030<1097	H66 R TO M03 WATER	* Call
3906<2827	1030<1098	H89 R TO M03 WATER	* Call
3906<2827	1030<1099	H20 W TO M03 WATER	* Call
3906<2827	1030<1100	H43 W TO M03 WATER	* Call
3906<2827	1030<1101	H66 W TO M03 WATER	* Call
3906<2827	1030<1102	H89 W TO M03 WATER	* Call
3906<2827	1030<1106	HA1 R TO M03 WATER	* Call
3906<2827	1030<1145	HA1 W TO M03 WATER	* Call
3906<2827	1031<1095	H20 R TO M04 WATER	* Call
3906<2827	1031<1096	H43 R TO M04 WATER	* Call
3906<2827	1031<1097	H66 R TO M04 WATER	* Call
3906<2827	1031<1098	H89 R TO M04 WATER	* Call
3906<2827	1031<1099	H20 W TO M04 WATER	* Call
3906<2827	1031<1100	H43 W TO M04 WATER	* Call
3906<2827	1031<1101	H66 W TO M04 WATER	* Call
3906<2827	1031<1102	H89 W TO M04 WATER	* Call
3906<2827	1031<1106	HA1 R TO M04 WATER	* Call
3906<2827	1031<1145	HA1 W TO M04 WATER	* Call
3906<2827	1032<1095	H20 R TO M05 WATER	* Call
3906<2827	1032<1096	H43 R TO M05 WATER	* Call
3906<2827	1032<1097	H66 R TO M05 WATER	* Call
3906<2827	1032<1098	H89 R TO M05 WATER	* Call
3906<2827	1032<1099	H20 W TO M05 WATER	* Call
3906<2827	1032<1100	H43 W TO M05 WATER	* Call
3906<2827	1032<1101	H66 W TO M05 WATER	* Call
3906<2827	1032<1102	H89 W TO M05 WATER	* Call
3906<2827	1032<1106	HA1 R TO M05 WATER	* Call
3906<2827	1032<1145	HA1 W TO M05 WATER	* Call
3906<2827	1898<1990	UPGRADE FROM 1990 TO 3906/18	* Call
3906<2827	1933<1909	UPGRADE FROM 1909 TO 3906/19	* Call
3906<2827	1933<1910	UPGRADE FROM 1910 TO 3906/19	* Call
3906<2827	1933<1911	UPGRADE FROM 1911 TO 3906/19	* Call

3906<2827	1933<1912	UPGRADE FROM 1912 TO 3906/19	* Call
3906<2827	1933<1913	UPGRADE FROM 1913 TO 3906/19	* Call
3906<2827	1933<1914	UPGRADE FROM 1914 TO 3906/19	* Call
3906<2827	1934<1909	UPGRADE FROM 1909 TO 3906/19	* Call
3906<2827	1934<1910	UPGRADE FROM 1910 TO 3906/19	* Call
3906<2827	1934<1911	UPGRADE FROM 1911 TO 3906/19	* Call
3906<2827	1934<1912	UPGRADE FROM 1912 TO 3906/19	* Call
3906<2827	1934<1913	UPGRADE FROM 1913 TO 3906/19	* Call
3906<2827	1934<1914	UPGRADE FROM 1914 TO 3906/19	* Call
3906<2827	1935<1909	UPGRADE FROM 1909 TO 3906/19	* Call
3906<2827	1935<1910	UPGRADE FROM 1910 TO 3906/19	* Call
3906<2827	1935<1912	UPGRADE FROM 1912 TO 3906/19	* Call
3906<2827	1935<1913	UPGRADE FROM 1913 TO 3906/19	* Call
3906<2827	1935<1914	UPGRADE FROM 1914 TO 3906/19	* Call
3906<2827	1936<1909	UPGRADE FROM 1909 TO 3906/19	* Call
3906<2827	1936<1910	UPGRADE FROM 1910 TO 3906/19	* Call
3906<2827	1936<1911	UPGRADE FROM 1911 TO 3906/19	* Call
3906<2827	1936<1912	UPGRADE FROM 1912 TO 3906/19	* Call
3906<2827	1936<1913	UPGRADE FROM 1913 TO 3906/19	* Call
3906<2827	1936<1914	UPGRADE FROM 1914 TO 3906/19	* Call
3906<2827	1937<1909	UPGRADE FROM 1909 TO 3906/19	* Call
3906<2827	1937<1910	UPGRADE FROM 1910 TO 3906/19	* Call
3906<2827	1937<1911	UPGRADE FROM 1911 TO 3906/19	* Call
3906<2827	1937<1912	UPGRADE FROM 1912 TO 3906/19	* Call
3906<2827	1937<1913	UPGRADE FROM 1913 TO 3906/19	* Call
3906<2827	1937<1914	UPGRADE FROM 1914 TO 3906/19	* Call
3906<2827	1938<1990	UPGRADE FROM 1990 TO 3906/19	* Call
3906<2827	1938<1996	UPGRADE FROM 1996 TO 3906/19	* Call
3906<2964	1023<1033	N30 AIR TO M01 AIR	* Call
3906<2964	1023<1034	N63 AIR TO M01 AIR	* Call
3906<2964	1023<1035	N96 AIR TO M01 AIR	* Call
3906<2964	1023<1036	NC9 AIR TO M01 AIR	* Call
3906<2964	1023<1037	NE1 AIR TO M01 AIR	* Call
3906<2964	1024<1033	N30 AIR TO M02 AIR	* Call
3906<2964	1024<1034	N63 AIR TO M02 AIR	* Call
3906<2964	1024<1035	N96 AIR TO M02 AIR	* Call
3906<2964	1024<1036	NC9 AIR TO M02 AIR	* Call
3906<2964	1024<1037	NE1 AIR TO M02 AIR	* Call
3906<2964	1025<1033	N30 AIR TO M03 AIR	* Call
3906<2964	1025<1034	N63 AIR TO M03 AIR	* Call
3906<2964	1025<1035	N96 AIR TO M03 AIR	* Call
3906<2964	1025<1036	NC9 AIR TO M03 AIR	* Call
3906<2964	1025<1037	NE1 AIR TO M03 AIR	* Call
3906<2964	1026<1033	N30 AIR TO M04 AIR	* Call
3906<2964	1026<1034	N63 AIR TO M04 AIR	* Call
3906<2964	1026<1035	N96 AIR TO M04 AIR	* Call
3906<2964	1026<1036	NC9 AIR TO M04 AIR	* Call

3906<2964	1026<1037	NE1 AIR TO M04 AIR	* Call
3906<2964	1027<1033	N30 AIR TO M05 AIR	* Call
3906<2964	1027<1034	N63 AIR TO M05 AIR	* Call
3906<2964	1027<1035	N96 AIR TO M05 AIR	* Call
3906<2964	1027<1036	NC9 AIR TO M05 AIR	* Call
3906<2964	1027<1037	NE1 AIR TO M05 AIR	* Call
3906<2964	1028<1033	N30 AIR TO M01 WATER	* Call
3906<2964	1028<1034	N63 AIR TO M01 WATER	* Call
3906<2964	1028<1035	N96 AIR TO M01 WATER	* Call
3906<2964	1028<1036	NC9 AIR TO M01 WATER	* Call
3906<2964	1028<1037	NE1 AIR TO M01 WATER	* Call
3906<2964	1028<1038	N30 WATER TO M01 WATER	* Call
3906<2964	1028<1039	N63 WATER TO M01 WATER	* Call
3906<2964	1028<1040	N96 WATER TO M01 WATER	* Call
3906<2964	1028<1041	NC9 WATER TO M01 WATER	* Call
3906<2964	1028<1042	NE1 WATER TO M01 WATER	* Call
3906<2964	1029<1033	N30 AIR TO M02 WATER	* Call
3906<2964	1029<1034	N63 AIR TO M02 WATER	* Call
3906<2964	1029<1035	N96 AIR TO M02 WATER	* Call
3906<2964	1029<1036	NC9 AIR TO M02 WATER	* Call
3906<2964	1029<1037	NE1 AIR TO M02 WATER	* Call
3906<2964	1029<1038	N30 WATER TO M02 WATER	* Call
3906<2964	1029<1039	N63 WATER TO M02 WATER	* Call
3906<2964	1029<1040	N96 WATER TO M02 WATER	* Call
3906<2964	1029<1041	NC9 WATER TO M02 WATER	* Call
3906<2964	1029<1042	NE1 WATER TO M02 WATER	* Call
3906<2964	1030<1033	N30 AIR TO M03 WATER	* Call
3906<2964	1030<1034	N63 AIR TO M03 WATER	* Call
3906<2964	1030<1035	N96 AIR TO M03 WATER	* Call
3906<2964	1030<1036	NC9 AIR TO M03 WATER	* Call
3906<2964	1030<1037	NE1 AIR TO M03 WATER	* Call
3906<2964	1030<1038	N30 WATER TO M03 WATER	* Call
3906<2964	1030<1039	N63 WATER TO M03 WATER	* Call
3906<2964	1030<1040	N96 WATER TO M03 WATER	* Call
3906<2964	1030<1041	NC9 WATER TO M03 WATER	* Call
3906<2964	1030<1042	NE1 WATER TO M03 WATER	* Call
3906<2964	1031<1033	N30 AIR TO M04 WATER	* Call
3906<2964	1031<1034	N63 AIR TO M04 WATER	* Call
3906<2964	1031<1035	N96 AIR TO M04 WATER	* Call
3906<2964	1031<1036	NC9 AIR TO M04 WATER	* Call
3906<2964	1031<1037	NE1 AIR TO M04 WATER	* Call
3906<2964	1031<1038	N30 WATER TO M04 WATER	* Call
3906<2964	1031<1039	N63 WATER TO M04 WATER	* Call
3906<2964	1031<1040	N96 WATER TO M04 WATER	* Call
3906<2964	1031<1041	NC9 WATER TO M04 WATER	* Call
3906<2964	1031<1042	NE1 WATER TO M04 WATER	* Call
3906<2964	1032<1033	N30 AIR TO M05 WATER	* Call

3906<2964	1032<1034	N63 AIR TO M05 WATER	* Call
3906<2964	1032<1035	N96 AIR TO M05 WATER	* Call
3906<2964	1032<1036	NC9 AIR TO M05 WATER	* Call
3906<2964	1032<1037	NE1 AIR TO M05 WATER	* Call
3906<2964	1032<1038	N30 WATER TO M05 WATER	* Call
3906<2964	1032<1039	N63 WATER TO M05 WATER	* Call
3906<2964	1032<1040	N96 WATER TO M05 WATER	* Call
3906<2964	1032<1041	NC9 WATER TO M05 WATER	* Call
3906<2964	1032<1042	NE1 WATER TO M05 WATER	* Call
3906<2964	1898<1990	UPGRADE FROM 1990 TO 3906/18	* Call
3906<2964	1933<1919	UPGRADE FROM 1919 TO 3906/19	* Call
3906<2964	1933<1920	UPGRADE FROM 1920 TO 3906/19	* Call
3906<2964	1933<1921	UPGRADE FROM 1921 TO 3906/19	* Call
3906<2964	1933<1922	UPGRADE FROM 1922 TO 3906/19	* Call
3906<2964	1933<1923	UPGRADE FROM 1923 TO 3906/19	* Call
3906<2964	1934<1919	UPGRADE FROM 1919 TO 3906/19	* Call
3906<2964	1934<1920	UPGRADE FROM 1920 TO 3906/19	* Call
3906<2964	1934<1921	UPGRADE FROM 1921 TO 3906/19	* Call
3906<2964	1934<1922	UPGRADE FROM 1922 TO 3906/19	* Call
3906<2964	1934<1923	UPGRADE FROM 1923 TO 3906/19	* Call
3906<2964	1935<1919	UPGRADE FROM 1919 TO 3906/19	* Call
3906<2964	1935<1920	UPGRADE FROM 1920 TO 3906/19	* Call
3906<2964	1935<1922	UPGRADE FROM 1922 TO 3906/19	* Call
3906<2964	1935<1923	UPGRADE FROM 1923 TO 3906/19	* Call
3906<2964	1936<1919	UPGRADE FROM 1919 TO 3906/19	* Call
3906<2964	1936<1920	UPGRADE FROM 1920 TO 3906/19	* Call
3906<2964	1936<1921	UPGRADE FROM 1921 TO 3906/19	* Call
3906<2964	1936<1922	UPGRADE FROM 1922 TO 3906/19	* Call
3906<2964	1936<1923	UPGRADE FROM 1923 TO 3906/19	* Call
3906<2964	1937<1919	UPGRADE FROM 1919 TO 3906/19	* Call
3906<2964	1937<1920	UPGRADE FROM 1920 TO 3906/19	* Call
3906<2964	1937<1921	UPGRADE FROM 1921 TO 3906/19	* Call
3906<2964	1937<1922	UPGRADE FROM 1922 TO 3906/19	* Call
3906<2964	1937<1923	UPGRADE FROM 1923 TO 3906/19	* Call
3906<2964	1938<1990	UPGRADE FROM 1990 TO 3906/19	* Call
3906<2964	1938<1996	UPGRADE FROM 1996 TO 3906/19	* Call
7040	4468<4183	16GB MEM TO 64GB MEM	114,808
7040	4468<4466	16GB 633MHZ-64GB 633MHZ	119,142
7040	4470<4188	32GB MEM TO 128GB MEM	184,597
7868	047<046	Model Upgrade	2,665
8202	EPCL<5635	FEAT CONV 5635 TO EPCL	1,108
9117<9406	7380<1641	FEAT CONV 1641 TO 7380	7,735
9117<9406	7388<1641	FEAT CONV 1641 TO 7388	9,077
9117<9406	7540<1641	FEAT CONV 1641 TO 7540	16,327
9119	4694<1634	FEAT CONV 1634 TO 4694	22,090
9119	4694<1636	FEAT CONV 1636 TO 4694	23,368
9119	5681<8493	FEAT CONV 8493 TO 5681	55,830

9119	5780<5778	FEAT CONV 5778 TO 5780	4,171
9119	5782<5778	FEAT CONV 5778 TO 5782	4,171
9119	5797<5791	FEAT CONV 5791 TO 5797	11,929
9119	5797<5794	FEAT CONV 5794 TO 5797	14,166
9119	5797<5798	FEAT CONV 5798 TO 5797	4,846
9119	5797<5809	FEAT CONV 5809 TO 5797	14,166
9119	5908<5904	FEAT CONV 5904 TO 5908	48
9119	6856<6851	SLIMLINE OEM-RR OEM W/HEATEX	6,710
9119	6862<6252	FEAT CONV FROM 6252 TO 6862	3,485
9119	7280<7799	256X1GB DDR1- 256GB DDR2	226,755
9119	7667<7925	FEAT CONV FROM 7925 TO 7667	5,015
9119	7668<7693	FEAT CONV FROM 7693 TO 7668	11,408
9119	7668<7815	FEAT CONV FROM 7815 TO 7668	4,017
9119	7668<7990	FEAT CONV FROM 7990 TO 7668	11,127
9119	7693<7990	FEAT CONV FROM 7990 TO 7693	4,660
9119	7815<7990	1WAY ACT 7988-1WAY ACT 7813	16,682
9119	7972<7996	O/O BILL 7988--O/O BILL7913	176
9119	7975<7991	30 DAY 7989-30 DAY 7813	5,312
9119	8151<8197	512GB DDR1- 0/512 GB DDR2	70,954
9119	8968<7813	FEAT CONV FROM 7813 TO 8968	24,627
9119	8968<7981	FEAT CONV FROM 7981 TO 8968	58,380
9119	8968<7988	FEAT CONV FROM 7988 TO 8968	51,222
9119	8968<8967	FEAT CONV FROM 8967 TO 8968	53,906
9119	8968<8969	FEAT CONV FROM 8969 TO 8968	22,160
9119	8968<8970	FEAT CONV FROM 8970 TO 8968	45,630
9119	8970<7981	FEAT CONV FROM 7981 TO 8970	29,153
9119	8970<7988	FEAT CONV FROM 7988 TO 8970	24,903
9119	8970<8967	FEAT CONV FROM 8967 TO 8970	38,323
9119<9406	4695<1646	FEAT CONV 1646 TO 4695	34,587
9119<9406	4695<1647	FEAT CONV 1647 TO 4695	34,587
9406	5094<5096	FEAT CONV 5096 TO 5094	2,358
9406	5294<5296	FEAT CONV 5296 TO 5294	19,254
9406	5781<0650	FEAT CONV 0650 TO 5781	39
9406	5781<5739	FEAT CONV 5739 TO 5781	39
9406	5781<5778	FEAT CONV 5778 TO 5781	39
9406	5781<5799	FEAT CONV 5799 TO 5781	39
9406	5781<5800	FEAT CONV 5800 TO 5781	39
9406	5782<0650	FEAT CONV 0650 TO 5782	39
9406	5782<5739	FEAT CONV 5739 TO 5782	39
9406	5782<5778	FEAT CONV 5778 TO 5782	39
9406	5782<5799	FEAT CONV 5799 TO 5782	39
9406	5782<5800	FEAT CONV 5800 TO 5782	39
9406	7155<7463	FEAT CONV 7463 TO 7155	32,222
9406	7463<7462	FEAT CONV 7462 TO 7463	165,981
9406	7598<7597	FEAT CONV 7597 TO 7598	78,589
9406	7711<7710	FEAT CONV 7710 TO 7711	26,720
9406	7735<7734	FEAT CONV 7734 TO 7735	36,623

9406	7736<7785	FEAT CONV 7785 TO 7736	77,804
9406	7984<7496	FEAT CONV 7496 TO 7984	536,766
9406	7984<7498	FEAT CONV 7498 TO 7984	174,469
9406	7985<7497	FEAT CONV 7497 TO 7985	613,783
9406	7985<7499	FEAT CONV 7499 TO 7985	234,982
9406	7985<7984	FEAT CONV 7984 TO 7985	746,914