

# IBM Power L1022 テクノロジー・ベースのサーバーは、IT の卓越性を追求する企業に最適化されたコスト・パフォーマンスと拡張性を提供します

## Table of contents

1	概要	25	Publications
2	主要要件	27	Technical information
2	Planned availability date	35	契約条件
2	Description	39	Prices
18	Product number	40	修正

## ハイライト

IBM<sup>®</sup> Power<sup>®</sup> サーバーは、すでに、このクラスで最も信頼性が高く、機密保護機能のあるサーバーとして位置づけられています。この度、新しい IBM Power L1022 (9786-22H) テクノロジー・ベースのサーバーは、そのリーダーシップを更に拡張し、ハイブリッドクラウド内のあらゆる場所で、コア業務アプリケーションと AI アプリケーションを安全かつ効率的に拡張できるよう独自に設計された重要なスケールアウト・ハイブリッドクラウド・プラットフォームを開始します。お客様は、管理のオーバーヘッドやパフォーマンスに影響を与えることなく、シンプルにすべてのデータを暗号化し、AIを活用することで、より速くインサイトを導き出すことができます。また、より多くの作業を行いながら、単一のハイブリッドクラウドの現行性そのまま、ワークロード展開の柔軟性と俊敏性を得ることができます。

Power L1022 の機能には以下が含まれます。

- Power10 プロセッサ (サーバーあたり最大 12、24、32、40 個の合計コアを持つプロセッサ)
- Matrix Math Accelerator (MMA) 機能を使用したインコア AI 推論と機械学習
- 最大 4.0 TB のシステム・メモリーを 32 個の DDR4 Differential Dual Inline Memory Module (DDIMM) スロットに配置 DDIMMは、極めて高性能、高信頼性のインテリジェントな DRAM (ダイナミック・ランダム・アクセス・メモリー) デバイスです。
- 追加の管理設定やパフォーマンスへの影響のない透過的なメモリー暗号化
- AMM for Hypervisor は、PowerVM<sup>®</sup> Hypervisor が使用する重要なメモリーをミラーリングして、耐障害性を強化するオプションとして利用可能です。
- 8 つの PCIe Gen5 対応のスロットを含む 10 個の PCIe スロットは並行保守対応です
- 最大 8 個の NVMe U.2 フラッシュベイ、最大 51.2 TB の高速ストレージを提供します。
- 各エンクロージャーに 1+1 冗長ホットプラグ AC Titanium 電源。
- 最小限の処理オーバーヘッドで IBM PowerVM Integrated Virtualization。

Power L1022 は、以下をサポートします。

- IBM AIX<sup>®</sup>、IBM i、Linux<sup>®</sup>、VIOS 環境。
- IBM Power Expert Care サービス層。

## 概要

市場の変化に迅速に対応するためのセキュリティー、運用効率、リアルタイムの知能は、今や IT 部門にとって譲れないものになっています。絶えず変化する常時稼働の環境では、24 時間 365 日の可用性を確保し、サイバー脅威の先を行くとともに、重要な運用機能を自動化および

高速化する必要があります。お客様は、アプリケーションとデータを、どこでもエンタープライズグレードにする必要がありますが、複雑さとコストを追加する必要はありません。

Power L1022 (9786-22H) サーバーは、摩擦レスなハイブリッドクラウド・エクスペリエンスを通じて、アプリケーションとインフラストラクチャーをモダナイズし、今日の子測不能なビジネスに必要な俊敏性を提供します。Power L1022 は、以下のことを支援します。

- ・ 効率的なスケーリング、パブリッククラウド、プライベートクラウド全体で、一貫した従量課金制ベースの価格設定により、必要な場所でワークロードを実行できます
- ・ ハイブリッドクラウドに対するゼロトラストセキュリティアプローチをサポートするために設計されたプロセッサレベルでのメモリ暗号化を使用します。
- ・ コアに直接搭載されたAI推論エンジンにより、データからの洞察を加速します
- ・ エネルギー消費を削減できる拡張性およびパフォーマンスを備えたワークロード統合

Power L1022 サーバーは、クラス最高の信頼性を実現しながら、スケール・パフォーマンスとセキュリティを向上させるように設計されています。強化された性能とスケーラブルな IBM Power10 システム・ファミリーは、高い柔軟性を備えたハイブリッドクラウドでミッション・クリティカルなワークロードを拡張することで、ビジネス・アジリティを実現します。

- ・ ビジネス上の要求への迅速な対応: Power10 プロセッサは、エネルギーやカーボン・フットプリントを増加させずに、IBM Power9 と比較して新しいレベルのパフォーマンスを同じワークロードに対して提供し、より効率的なスケーリングを可能にします。
- ・ コアからクラウドへのデータの保護: Power10 は、管理オーバーヘッドやパフォーマンスへの影響なしに、プロセッサ・レベルで透過的なメモリー暗号化を使用して、エンドツーエンドのセキュリティを提供します。Power10 は、ポスト量子暗号化と完全同型暗号化のサポートにより、将来の脅威の一步先を行くのにも役立ちます。
- ・ インサイトとオートメーションの合理化: Power10 では、すべてのサーバーに組み込まれた強化型インコア AI 推論機能を利用しており、特殊なハードウェアの追加は必要ありません。最も機密性の高いデータが存在する場所で、そのデータから洞察を引き出すことができるため、データ移動にかかる時間とリスクを排除できます。
- ・ アベイラビリティと信頼性の最大化: Power10 プロセッサは、IBM Cloud<sup>®</sup> のインフラストラクチャー冗長度と災害復旧のための独自の高度なリカバリーと自己修復機能を使用して、お客様のビジネスの継続的な稼働を保証します。

Power サーバーは、銀行向けの新しいデジタル・サービス、製造でのリアルタイムの意思決定、エンジニアリングやエレクトロニクスの運用効率など、世界中のお客様に対して結果を達成しています。Power サーバーが IBM のお客様の成功にどのように貢献しているかについては、[IBM ケーススタディ](#) をご参照ください。

---

## 主要要件

- ・ プライマリー・オペレーティング・システムとして、Linux が必要です。
- ・ AIX と IBM i は、両方にまたがる合計コアの最大 25% がアクティブにされたセカンダリー・オペレーティング・システムとして選択できます。

---

## Planned availability date

- ・ July 22, 2022, except for feature EM7Y
- ・ November 18, 2022, for feature EM7Y

Availability within a country is subject to local legal requirements.

---

## Description

The Power L1022 (9786-22H) server is a high-performance, flexible, two-socket, 2U system that provides massive scalability and flexibility. It delivers extreme density in an energy-efficient design with exceptional reliability and resiliency. The Power L1022 server brings a secure environment that balances mission-critical traditional

workloads and modernization applications to deliver a frictionless hybrid cloud experience.

#### Power L1022 feature summary

The following features are available on the Power L1022 server:

- Up to two dual-chip processor modules per system server:
  - 2.90--4.0 GHz, 12-core Power10 processor (#EPGG).
- Two dual-chip processor modules per system server:
  - 2.75--4.0 GHz, 16-core Power10 processor (#EPGF).
  - 2.45--3.90 GHz, 20-core Power10 processor (#EPGH).
- Matrix Math Accelerator (MMA) feature helps to perform in-core AI inferencing and machine learning where data resides.
- Up to 4 TB of system memory distributed across 32 DDIMM slots per system server.
- DDR4 DDIMM memory cards:
  - 32 GB (2 x 16 GB), (#EM7N).
  - 64 GB (2 x 32 GB), (#EM7W).
  - 128 GB (2 x 64 GB), (#EM7X).
  - 256 GB (2 x 128 GB), (#EM7Y).
- AMM for Hypervisor is available as an option to enhance resilience by mirroring critical memory used by the PowerVM hypervisor.
- PCIe slots with two processors:
  - Four x16 Gen4 or x8 Gen5 half-height, half-length slots.
  - Four x8 Gen5 half-height, half-length slots (with x16 connectors).
  - Two x8 Gen4 half-height, half-length slots (with x16 connectors).
  - All PCIe slots are concurrently maintainable.
- Integrated:
  - System management using an Enterprise Baseboard Management Controller (eBMC).
  - EnergyScale technology.
  - Redundant hot-swap cooling.
  - Redundant hot-swap AC Titanium power supplies.
  - Up to two HMCs with 1 GbE RJ45 ports.
  - One rear USB 3.0 port.
  - One front USB 3.0 port .
  - Nineteen-inch rack-mounting hardware (2U).
- Optional PCIe I/O expansion drawer with PCIe slots:
  - Up to two drawers (#EMX0).
  - Each I/O drawer holds one or two six-slot PCIe fanout modules (#EMXH).
  - Each fanout module attaches to the system node through a PCIe copper cable adapter (#EJ24).

#### PowerVM

PowerVM, which delivers industrial-strength virtualization for AIX and Linux environments on Power processor-based systems, provides a virtualization-oriented performance monitor, and performance statistics are available through the HMC. These performance statistics can be used to understand the workload characteristics and to prepare for capacity planning.

#### Processor modules

The Power10 processor is the compute engine for the next generation of Power systems and successor to the current Power9 processor. It offers superior performance on applications, such as MMA facility to accelerate computation-intensive kernels, matrix multiplication, convolution, and discrete Fourier transform. To efficiently accelerate MMA operations, the Power10 processor core implements a dense math engine (DME) microarchitecture that effectively provides an accelerator for cognitive computing, machine learning, and AI inferencing workloads.

A maximum of two Power10 processors of the same type are allowed. The following defines the allowed quantities of processor activation entitlements:

- One 12-core, typical 2.90 to 4.0 Ghz (max) processor (#EPGG) requires that 12 processor activation codes be ordered. A maximum of 12 processor activations (#EPFG) are allowed.
- Two 12-core, typical 2.90 to 4.0 Ghz (max) processors (#EPGG) require that 24 processor activation codes be ordered. A maximum of 24 processor activations (#EPFG) are allowed.
- Two 16-core, typical 2.75 to 4.0 GHz (max) processors (#EPGF) require that 32 processor activation codes be ordered. A maximum of 32 processor activation code features (#EPFF) are allowed.
- Two 20-core, typical 2.45 to 3.90 GHz (max) processors (#EPGH) require that 40 processor activation codes be ordered. A maximum of 40 processor activation code features (#EPFH) are allowed.

Power10 processors also offer enhanced Workload Optimized Frequency for optimum performance. This mode can dynamically optimize the processor frequency at any given time based on CPU utilization and operating environmental conditions. For a description of this feature and other power management options available for this server, see the [IBM EnergyScale for Power10 Processor-Based Systems](#) website.

#### MMA

The Power10 processor core inherits the modular architecture of the Power9 processor core, but the redesigned and enhanced microarchitecture significantly increases the processor core performance and processing efficiency. The peak computational throughput is markedly improved by new execution capabilities and optimized cache bandwidth characteristics. Extra matrix math acceleration engines can deliver significant performance gains for machine learning, particularly for AI inferencing workloads.

#### Memory

The Power L1022 server uses the next-generation DDIMMs, which are high-performance, high-reliability, high-function memory cards that contain a buffer chip, intelligence, and 2666 MHz or 3200 MHz DRAM memory. DDIMMs are placed in DDIMM slots in the server system.

- A minimum 32 GB of memory is required with one processor module. All Memory DIMMs must be ordered in pairs.
- A minimum 64 GB of memory is required with two processor modules. All Memory DIMMs must be ordered in quads.
- Each DIMM feature code delivers two physical Memory DIMMs.

Plans for future memory upgrades should be taken into account when deciding which memory feature size to use at the time of initial system order.

To assist with the plugging rules, two DDIMMs are ordered using one memory feature number. Select from:

- 32 GB (2 x 16 GB) DDIMMs, 3200 MHz, 8 Gb DDR4 Memory (#EM7N)
- 64 GB (2 x 32 GB) DDIMMs, 3200 MHz, 8 Gb DDR4 Memory (#EM7W)
- 128 GB (2 x 64 GB) DDIMMs, 3200 MHz, 16 Gb DDR4 Memory (#EM7X)
- 256 GB (2 x 128 GB) DDIMMs, 2666 MHz, 16 Gb DDR4 Memory (#EM7Y)

## AMM

AMM for Hypervisor is available as an option (#EM8G) to enhance resilience by mirroring critical memory used by the PowerVM hypervisor so that it can continue operating in the event of a memory failure. A portion of available memory can be proactively partitioned such that a duplicate set may be utilized upon non-correctable memory errors. This can be implemented at the granularity of DIMMs or logical memory blocks.

## Power L1022 and IBM i

IBM i support is provided at a price-attractive P10 software tier even though the Power L1022 has two sockets. There are limitations to the maximum size of the partition, and all I/O must be virtualized through VIOS. VIOS is required, and IBM i partitions must be set to "restricted I/O". Up to four cores (real or virtual) per IBM i partition are supported. Multiple IBM i partitions can be created and run concurrently, and each individual partition can have up to four cores. IBM i is only allowed as a secondary partition.

## Titanium power supply

Titanium power supplies are designed to meet the latest efficiency regulations. Two titanium power supplies support a rack: 1+1 2000 watt, 200--240 volt.

## Redundant fans

Redundant fans are standard.

## Power cords

Two power cords are required. The Power L1022 supports a 4.3-meter (14 feet) power cord, drawer to wall/IBM PDU (250V/10A) in the base shipment group. See the feature listing for other options.

## PCIe slots

The Power L1022 has up to eight U.2 NVMe devices and up to ten PCIe hot-plug slots with concurrent maintenance, providing excellent configuration flexibility and expandability. For more information about PCIe slots, see the rack-integrated system with I/O expansion drawer section below.

With two Power10 processor dual-chip modules (DCMs), ten PCIe slots are available:

- Four x16 Gen4 or x8 Gen5 half-height, half-length slots
- Four x8 Gen5 half-height, half-length slots (with x16 connectors)
- Two x8 Gen4 half-height, half-length slots (with x16 connectors)

With one Power10 processor DCM, five PCIe slots are available:

- One PCIe x16 Gen4 or x8 Gen5, half-height, half-length slot
- Three PCIe x8 Gen5, half-height, half-length slots (with x16 connector)
- One PCIe x8 Gen4, half-height, half-length slot (with x16 connector)

The x16 slots can provide up to twice the bandwidth of x8 slots because they offer twice as many PCIe lanes. PCIe Gen5 slots can support up to twice the bandwidth of a PCIe Gen4 slot, and PCIe Gen4 slots can support up to twice the bandwidth of a PCIe Gen3 slot, assuming an equivalent number of PCIe lanes.

At least one PCIe Ethernet adapter is required on the server by IBM to ensure proper manufacture, testing, and support of the server. One of the x8 PCIe slots is used for this required adapter.

These servers are smarter about energy efficiency when cooling the PCIe adapter environment. They sense which IBM PCIe adapters are installed in their PCIe slots

and, if an adapter requires higher levels of cooling, they automatically speed up fans to increase airflow across the PCIe adapters. Note that faster fans increase the sound level of the server. Higher wattage PCIe adapters include the PCIe3 SAS adapters and SSD/flash PCIe adapters (#EJ10, #EJ14, and #EJ0J).

#### NVMe drive slots and storage backplane options

NVMe SSDs, in the 15-millimeter carrier U.2 2.5-inch form factor, are used for internal storage in the Power L1022 system. The Power L1022 supports up to 8 NVMe U.2 devices when two storage backplanes with four NVMe U.2 drive slots (#EJ1X) are ordered. Both the 7-millimeter and 15-millimeter NVMe are supported in the 15-millimeter carrier.

#### Cable management arm

A folding arm is attached to the server's rails at the rear of the server. The server's power cords and the cables from the PCIe adapters or integrated ports run through the arm and into the rack. The arm enables the server to be pulled forward on its rails for service access to PCIe slots, memory, processors, and so on without disconnecting the cables from the server. Approximately 1 meter (3 feet) of cord or cable length is needed for the arm.

#### Integrated I/O ports

There are two HMC ports and two USB 3.0 ports. The two HMC ports are RJ45, supporting 1 Gb Ethernet connections. The eBMC USB 2.0 port can be used for communication to an Uninterrupted Power Supply (UPS) or code update.

#### Rack-integrated system with I/O expansion drawer

Regardless of the rack-integrated system to which the PCIe Gen3 I/O expansion drawer is attached, if the expansion drawer is ordered as factory integrated, the PDUs in the rack will be placed horizontally by default to enhance cable management.

Expansion drawers complicate the access to vertical PDUs if located at the same height. IBM recommends accommodating PDUs horizontally on racks containing one or more PCIe Gen3 I/O expansion drawer.

After the rack with expansion drawers is delivered, you can rearrange the PDUs from horizontal to vertical. However, the configurator will continue to consider the PDUs as being placed horizontally for the matter of calculating the free space still available in the rack.

Vertical PDUs can be used only if CSRP (#0469) is on the order. When specifying CSRP, you must provide the locations where the PCIe Gen3 I/O expansion drawers should be placed. Note that you must avoid locating the expansion drawers adjacent to vertical PDU locations EIA 6 through 16 and 21 through 31.

The I/O expansion drawer can be migrated from a Power9 to a Power10 processor-based system. Only I/O cards supported on Power10 in the I/O expansion drawer are allowed. Clients migrating the I/O expansion drawer configuration might have one or two PCIe3 6-slot fanout modules (#EMXH) installed in the rear of the I/O expansion drawer.

For a 2U server configuration with one processor module, up to one I/O expansion drawer (#EMX0) and one fanout module (#EMXH) connected to one PCIe x16 to CXP Converter Card Adapter (#EJ24) are supported. The right PCIe module bay must be populated by a filler module.

For a 2U server configuration with two processor modules, up to two I/O expansion drawers (#EMX0) and four fanout modules (#EMXH) connected to four PCIe x16 to CXP Converter Card Adapters (#EJ24) are supported.

#### Limitations:

- Mixing of prior PCIe3 fanout modules (#EMXF or #EMXG) with PCIe3 fanout modules (#EMXH) in the same I/O expansion drawer is not allowed.

- PCIe x16 to CXP Converter Card Adapter (#EJ24) requires one PCIe3 x16 slot in system unit plus a pair of copper cables (one copper pair feature, such as feature ECCS).

#### RDX docking station

The RDX docking station accommodates RDX removable disk cartridges of any capacity. The disk is in a protective rugged cartridge enclosure that plugs into the docking station. The docking station holds one removable rugged disk drive or cartridge at a time. The rugged removable disk cartridge and docking station performs saves, restores, and backups similar to a tape drive. This docking station can be an excellent entry capacity and performance option.

#### EXP24SX SAS storage enclosure

The EXP24SX is a storage expansion enclosure with 24 2.5-inch small form factor (SFF) SAS bays. It supports up to 24 hot-plug HDDs or SSDs in only 2 EIA of space in a 19-inch rack. The EXP24SX SFF bays use SFF Gen2 (SFF-2) carriers or trays.

The EXP24SX drawer feature ESLS is supported on the Power10 scale-out servers by AIX, IBM i, Linux, and VIOS.

With AIX, Linux, or VIOS, the EXP24SX can be ordered with four sets of 6 bays (mode 4), two sets of 12 bays (mode 2), or one set of 24 bays (mode 1). With IBM i, only one set of 24 bays (mode 1) is supported. It is possible to change the mode setting in the field using software commands along with a specifically documented procedure.

**Important:** When changing modes, a skilled, technically qualified person should follow the special documented procedures. Improperly changing modes can potentially destroy existing RAID sets, prevent access to existing data, or allow other partitions to access another partition's existing data. Hire an expert to assist if you are not familiar with this type of reconfiguration work.

Four mini-SAS HD ports on the EXP24SX are attached to PCIe Gen3 SAS adapters or attached to an integrated SAS controller in a Power10 scale-out server. The following PCIe3 SAS adapters support the EXP24SX:

- PCIe3 RAID SAS Adapter quad-port 6 Gb x8 (#EJOJ)
- PCIe3 12 GB Cache RAID Plus SAS Adapter quad-port 6 Gb x8 (#EJ14)
- PCIe3 LP RAID SAS Adapter quad-port 6 Gb x8 (#EJOM)

Earlier-generation PCIe1 or PCIe2 SAS adapters are not supported with the EXP24SX.

The attachment between the EXP24SX and the PCIe3 SAS adapters or integrated SAS controllers is through SAS Y012 or X12 cables. X12 and Y012 cables are designed to support up to 12 Gb SAS. The PCIe Gen3 SAS adapters support up to 6 Gb throughput. The EXP24SX has been designed to support up to 12 Gb throughput if future SAS adapters support that capability. All ends of the Y012 and X12 cables have mini-SAS HD narrow connectors. Cable options are:

- X12 cable: 3-meter copper (#ECDJ), 4.5-meter optical (#ECDK), 10-meter optical (#ECDL)
- Y012 cables: 1.5-meter copper (#ECDT), 3-meter copper (#ECDU)
- 1M 100 GbE Optical Cable QSFP28 (AOC) (#EB5K)
- 1.5M 100 GbE Optical Cable QSFP28 (AOC) (#EB5L)
- 2M 100 GbE Optical Cable QSFP28 (AOC) (#EB5M)
- 3M 100 GbE Optical Cable QSFP28 (AOC) (#EB5R)
- 5M 100 GbE Optical Cable QSFP28 (AOC) (#EB5S)
- 10M 100 GbE Optical Cable QSFP28 (AOC) (#EB5T)
- 15M 100 GbE Optical Cable QSFP28 (AOC) (#EB5U)
- 20M 100 GbE Optical Cable QSFP28 (AOC) (#EB5V)
- 30M 100 GbE Optical Cable QSFP28 (AOC) (#EB5W)

· 50M 100 GbE Optical Cable QSFP28 (AOC) (#EB5X)

An AA12 cable interconnecting a pair of PCIe3 12 GB cache adapters (two #EJ14) is not attached to the EXP24SX. These higher-bandwidth cables could support 12 Gb throughput if future adapters support that capability. Copper feature ECE0 is 0.6 meters long, feature ECE3 is 3 meters long, and optical AA12 feature ECE4 is 4.5 meters long.

One no-charge specify code is used with each EXP24SX I/O drawer (#ESLS) to communicate to IBM configurator tools and IBM Manufacturing which mode setting, adapter, and SAS cable are needed. With this specify code, no hardware is shipped. The physical adapters, controllers, and cables must be ordered with their own chargeable feature numbers. There are more technically supported configurations than are represented by these specify codes. IBM Manufacturing and IBM configurator tools such as e-config only understand and support EXP24SX configurations represented by these specify codes.

Specify code	Mode	Adapter/ Controller	Cable to drawer	Environment
EJW0	Mode 1	CEC SAS Ports	2 Y012 cables	AIX/IBM i/ Linux/VIOS
EJW1	Mode 1	One (unpaired) #EJOJ/#EJOM	1 Y012 cable	AIX/IBM i/ Linux/VIOS
EJW2	Mode 1	Two (one pair) #EJOJ/#EJOM	2 Y012 cables	AIX/IBM i/ Linux/VIOS
EJW3	Mode 2	Two (unpaired) #EJOJ/#EJOM	2 X12 cables	AIX/Linux/VIOS
EJW4	Mode 2	Four (two pair) #EJOJ/ #EJOM	2 X12 cables	AIX/Linux/VIOS
EJW5	Mode 4	Four (unpaired) #EJOJ/#EJOM	2 X12 cables	AIX/Linux/VIOS
EJW6	Mode 2	One (unpaired) #EJOJ/#EJOM	2 Y012 cables	AIX/Linux/VIOS
EJW7	Mode 2	Two (unpaired) #EJOJ/#EJOM	2 Y012 cables	AIX/Linux/VIOS
EJWF	Mode 1	Two (one pair) #EJ14	2 Y012 cables	AIX/IBM i/ Linux/VIOS
EJWG	Mode 2	Two (one pair) #EJ14	2 X12 cables	AIX/Linux/VIOS
EJWJ	Mode 2	Four (two pair) #EJ14	2 X12 cables	AIX/Linux/VIOS

All of the above EXP24SX specify codes assume a full set of adapters and cables able to run all the SAS bays configured. The following specify codes communicate to IBM Manufacturing a lower-cost partial configuration is to be configured where the ordered adapters and cables can run only a portion of the SAS bays. The future MES addition of adapters and cables can enable the remaining SAS bays for growth. The following specify codes are used:

Specify code	Mode	Adapter/ Controller	Cable to drawer	Environment
EJWA (1/2 of EJW7)	Mode 2	One (unpaired) #EJOJ/#EJOM	1 Y012 cables	AIX/Linux/VIOS
EJWB (1/2 of EJW4)	Mode 2	Two (one pair) #EJOJ/#EJOM	1 X12 cable	AIX/Linux/VIOS
EJWC (1/4 of EJW5)	Mode 4	One (unpaired) #EJOJ/#EJOM	1 X12 cable	AIX/Linux/VIOS
EJWD (1/2 of EJW5)	Mode 4	Two (unpaired) #EJOJ/#EJOM	1 X12 cable	AIX/Linux/VIOS
EJWE (3/4 of EJW5)	Mode 4	Three (unpaired) #EJOJ/#EJOM	2 X12 cables	AIX/Linux/VIOS
EJWH (1/2 of EJWJ)	Mode 2	Two (one pair) #EJ14	1 X12 cable	AIX/Linux/VIOS



An EXP24SX drawer in mode 4 can be attached to two or four SAS controllers and provide a great deal of configuration flexibility. For example, if using unpaired feature EJOJ adapters, these EJOJ adapters could be in the same server in the same partition, same server in different partitions, or even different servers.

An EXP24SX drawer in mode 2 has similar flexibility. If the I/O drawer is in mode 2, then half of its SAS bays can be controlled by one pair of PCIe3 SAS adapters, such as a 12 GB write cache adapter pair (#EJ14), and the other half can be controlled by a different PCIe3 SAS 12 GB write cache adapter pair or by zero-write-cache PCIe3 SAS adapters.

Note that for simplicity, IBM configurator tools such as e-config assume that the SAS bays of an individual I/O drawer are controlled by one type of SAS adapter. As a client, you have more flexibility than e-config understands.

A maximum of 24 2.5-inch SSDs or 2.5-inch HDDs is supported in the EXP24SX 24 SAS bays. There can be no mixing of HDDs and SSDs in the same mode 1 drawer. HDDs and SSDs can be mixed in a mode 2 or mode 4 drawer, but they cannot be mixed within a logical split of the drawer. For example, in a mode 2 drawer with two sets of 12 bays, one set could hold SSDs and one set could hold HDDs, but you cannot mix SSDs and HDDs in the same set of 12 bays.

The indicator feature EHS2 helps IBM Manufacturing understand where SSDs are placed in a mode 2 or a mode 4 EXP24SX drawer. On one mode 2 drawer, use a quantity of one feature EHS2 to have SSDs placed in just half the bays, and use two EHS2 features to have SSDs placed in any of the bays. Similarly, on one mode 4 drawer, use a quantity of one, two, three, or four EHS2 features to indicate how many bays can have SSDs. With multiple EXP24SX orders, IBM Manufacturing will have to guess which quantity of feature ESH2 is associated with each EXP24SX. Consider using CSP (#0456) to reduce guessing.

Two-and-a-half-inch SFF SAS HDDs and SSDs are supported in the EXP24SX. All drives are mounted on Gen2 carriers or trays and thus named SFF-2 drives.

The EXP24SX drawer has many high-reliability design points:

- SAS drive bays that support hot swap
- Redundant and hot-plug-capable power and fan assemblies
- Dual line cords
- Redundant and hot-plug enclosure service modules (ESMs)
- Redundant data paths to all drives
- LED indicators on drives, bays, ESMs, and power supplies that support problem identification
- Through the SAS adapters or controllers, drives that can be protected with RAID and mirroring and hot-spare capability

Order two ESLA features for AC power supplies. The enclosure is shipped with adjustable depth rails and can accommodate 19-inch rack depths from 59.5--75 centimeters (23.4--29.5 inches). Slot filler panels are provided for empty bays when initially shipped from IBM.

PCIe Gen3 I/O drawer cabling option

A copper cabling option (#ECCS) is available for the scale-out servers. The cable option offers a much lower-cost connection between the server and the PCIe Gen3 I/O drawer fanout modules. The currently available Active Optical Cable (AOC) offers much longer length cables, providing rack placement flexibility. Plus, AOC cables are much thinner and have tighter bend radius and thus are much easier to cable in the rack.

The 3M Copper CXP Cable Pair (#ECCS) has the same performance and same reliability, availability, and serviceability (RAS) characteristics as the AOC cables. One copper cable length of 3 meters is offered. Note that the cable management arm of the scale-out servers requires about 1 meter of cable.

Like the AOC cable pair, the copper pair is cabled in the same manner. One cable attaches to the top CXP port in the PCIe adapter in the x16 PCIe slot in the server system unit and then attaches to the top CXP port in the fanout module in the I/O drawer. Its cable pair attaches to the bottom CXP port of the same PCIe adapter and to the bottom CXP port of the same fanout module. Note that the PCIe adapter providing the CXP ports on the server was named a PCIe3 "Optical" Cable Adapter. In hindsight, this naming was unfortunate as the adapter's CXP ports are not unique to optical. But at the time, optical cables were the only connection option planned.

Copper and AOC cabling can be mixed on the same server. However, they cannot be mixed on the same PCIe Gen3 I/O drawer or mixed on the same fanout module.

Copper cables have the same operating system software prerequisites as AOC cables.

## Racks

The Power10 server is designed to fit a standard 19-inch rack. IBM Development has tested and certified the system in the IBM Enterprise Rack (7965-S42). The 7965-S42 is a 2-meter enterprise rack that provides 42U or 42 EIA of space. You can choose to place the server in other racks if you are confident those racks have the strength, rigidity, depth, and hole pattern characteristics required. You should work with IBM Service to determine the appropriateness of other racks.

It is highly recommended that the Power L1022 be ordered with an IBM 42U Enterprise Rack (7965-S42). An initial system order is placed in a 7965-S42 rack. This is done to ease and speed client installation, provide a more complete and higher quality environment for IBM Manufacturing system assembly and testing, and provide a more complete shipping package.

Recommendation: The 7965-S42 has optimized cable routing, so all 42U may be populated with equipment.

The 7965-S42 rack does not need 2U on either the top or bottom for cable egress.

With the 2-meter 7965-S42 rack, a rear rack extension of 12.7 centimeters (5 inches), feature ECRK, provides space to hold cables on the side of the rack and keep the center area clear for cooling and service access.

Recommendation: Include the above extensions when more than approximately 16 I/O cables per side are present or may be added in the future; when using the short-length, thinner SAS cables; or when using thinner I/O cables, such as Ethernet. If you use longer-length, thicker SAS cables, fewer cables will fit within the rack.

SAS cables are most commonly found with multiple EXP24SX SAS drawers (#ESLS) driven by multiple PCIe SAS adapters. For this reason, it is good practice to keep multiple EXP24SX drawers in the same rack as the PCIe I/O drawer or in a separate rack close to the PCIe I/O drawer, using shorter, thinner SAS cables. The feature ECRK extension can be good to use even with smaller numbers of cables because it enhances the ease of cable management with the extra space it provides.

Multiple service personnel are required to manually remove or insert a system node drawer into a rack, given its dimensions and weight and content.

Recommendation: To avoid any delay in service, obtain an optional lift tool (#EB3Z). A lighter, lower-cost lift tool is feature EB3Z<sup>1</sup> (lift tool) and EB4Z<sup>1</sup> (angled shelf kit for lift tool). The EB3Z lift tool provides a hand crank to lift and position a server up to 400 pounds. Note that a single system node can weigh up to 86.2 kilograms (190 pounds).

<sup>1</sup> Feature EB3Z and feature EB4Z are not available to order in Albania, Bahrain, Bulgaria, Croatia, Egypt, Greece, Jordan, Kuwait, Kosovo, Montenegro, Morocco, Oman, UAE, Qatar, Saudi Arabia, Serbia, Slovakia, Slovenia, Taiwan, and Ukraine.

High-function (switched and monitored) PDUs plus

Hardware:

- IEC 62368-1 and IEC 60950 safety standard
- A new product safety approval
- No China 5,000-meter altitude or tropical restrictions
- Detachable inlet for 3-phase delta-wired PDU with 30A, 50A, and 60A wall plugs
- IBM Technology and Qualification approved components, such as anti-sulfur resistors (ASRs)
- Ethernet 10/100/1000 Mb/s

Software:

- Internet Protocol (IP) version 4 and IPv6 support
- Secure Shell (SSH) protocol command line
- Ability to change passwords over a network

PDU description	208 V 3-phase delta	200 V--240V 1-phase or 3-phase wye
High-function 12xC13	#ECJQ/#ECJP	#ECJN/#ECJM
High-function 9xC19	#ECJL/#ECJK	#ECJJ/#ECJG

These PDUs can be mounted vertically in rack-side pockets or they can be mounted horizontally. If mounted horizontally, they each use one EIA (1U) of rack space. See feature EPTH for horizontal mounting hardware, which is used when IBM Manufacturing doesn't automatically factory-install the PDU. Two RJ45 ports on the front of the PDU enable you to monitor each receptacle's electrical power usage and to remotely switch any receptacle on or off.

Recommendation: The PDU is shipped with a generic PDU password. IBM strongly urges you to change it upon installation.

Existing and new high-function (switched and monitored) PDUs have the same physical dimensions. New high-function (switched and monitored) PDUs can be supported in the same racks as existing PDUs. Mixing of PDUs in a rack on new orders is not allowed.

Also, all factory-integrated orders must have the same PDU line cord.

The PDU features #ECJQ/#ECJP and #ECJL/#ECJK with the Amphenol inlet connector require new PDU line cords:

- #ECJ5 - 4.3 meter (14-foot) PDU to Wall 3PH/24A 200--240V Delta-wired Power Cord
- #ECJ7 - 4.3 meter (14-foot) PDU to Wall 3PH/48A 200--240V Delta-wired Power Cord

No pigtail (like #ELCO) is available because an Amphenol male inline connector is unavailable.

The PDU features #ECJJ/#ECJG and #ECJN/#ECJM with the UTG624-7SKIT4/5 inlet connector use the existing PDU line cord features #6653, #6667, #6489, #6654, #6655, #6656, #6657, #6658, #6491, or #6492.

Reliability, Availability, and Serviceability

Reliability, fault tolerance, and data correction

The reliability of systems starts with components, devices, and subsystems that are designed to be highly reliable. During the design and development process, subsystems go through rigorous verification and integration testing processes. During system manufacturing, systems go through a thorough testing process to help ensure the highest level of product quality.

The Power10 processor-based scale-out systems come with the following RAS characteristics:

- Power10 processor RAS
- Open Memory Interface, DDIMMs RAS
- Enterprise BMC service processor for system management and Service
- AMM for Hypervisor
- NVMe drives concurrent maintenance
- PCIe adapters concurrent maintenance
- Redundant and hot-plug cooling
- Redundant and hot-plug power
- Light path enclosure and FRU LEDs
- Service and FRU labels
- Client or IBM install
- Proactive support and service -- call home
- Client or IBM service

#### Service processor

Power10 scale-out 2S-4S systems come with a redesigned service processor based on a Baseboard Management Controller (BMC) design with firmware that is accessible through open-source industry standard APIs, such as Redfish. An upgraded ASMI web browser user interface preserves the required RAS functions while allowing the user to perform tasks in a more intuitive way.

Diagnostic monitoring of recoverable error from the processor chipset is performed on the system processor itself, while the fatal diagnostic monitoring of the processor chipset is performed by the service processor. It runs on its own power boundary and does not require resources from a system processor to be operational to perform its tasks.

The service processor supports surveillance of the connection to the HMC and to the system firmware (hypervisor). It also provides several remote power control options, environmental monitoring, reset, restart, remote maintenance, and diagnostic functions, including console mirroring. The BMC service processors menus (ASMI) can be accessed concurrently during system operation, allowing nondisruptive abilities to change system default parameters, view and download error logs, check system health.

Redfish, an industry standard for server management, enables the Power servers to be managed individually or in a large data center. Standard functions such as inventory, event logs, sensors, dumps, and certificate management are all supported with Redfish. In addition, new user management features support multiple users and privileges on the BMC via Redfish or ASMI. User management via LDAP is also supported. The Redfish events service provides a means for notification of specific critical events such that actions can be taken to correct issues. The Redfish telemetry service provides access to a wide variety of data (eg. power consumption, ambient, core, DIMM and I/O temperatures, etc) that can be streamed on periodic intervals.

#### Mutual surveillance

The service processor monitors the operation of the firmware during the boot process and also monitors the hypervisor for termination. The hypervisor monitors the service processor and reports a service reference code when it detects surveillance loss. In the PowerVM environment, it will perform a reset/reload if it detects the loss of the service processor.

#### Environmental monitoring functions

The Power family does ambient and over temperature monitoring and reporting. It also adjusts fan speeds automatically based on those temperatures.

#### Memory subsystem RAS :

The Power10 scale-out system introduces a new 2U tall DDIMM, which has new open CAPI memory interface known as OMI for resilient and fast communication to the processor. This new memory subsystem design delivers solid RAS as described below.

#### Power10 processor functions

As in Power9, the Power10 processor has the ability to do processor instruction retry for some transient errors and core-contained checkstop for certain solid faults. The fabric bus design with CRC and retry persists in Power10 where a CRC code is used for checking data on the bus and has an ability to retry a faulty operation.

#### Cache availability

The L2/L3 caches in the Power10 processor in the memory buffer chip are protected with double-bit detect, single-bit correct error detection code (ECC). In addition, a threshold of correctable errors detected on cache lines can result in the data in the cache lines being purged and the cache lines removed from further operation without requiring a reboot in the PowerVM environment.

Modified data would be handled through Special Uncorrectable Error handling. L1 data and instruction caches also have a retry capability for intermittent errors and a cache set delete mechanism for handling solid failures.

#### Special Uncorrectable Error handling

Special Uncorrectable Error (SUE) handling prevents an uncorrectable error in memory or cache from immediately causing the system to terminate. Rather, the system tags the data and determines whether it will ever be used again. If the error is irrelevant, it will not force a check stop. When and if data is used, I/O adapters controlled by an I/O hub controller would freeze if data were transferred to an I/O device, otherwise, termination may be limited to the program/kernel or if the data is not owned by the hypervisor.

#### PCI extended error handling

PCI extended error handling (EEH)-enabled adapters respond to a special data packet generated from the affected PCI slot hardware by calling system firmware, which will examine the affected bus, allow the device driver to reset it, and continue without a system reboot. For Linux, EEH support extends to the majority of frequently used devices, although some third-party PCI devices may not provide native EEH support.

#### Uncorrectable error recovery

When the auto-restart option is enabled, the system can automatically restart following an unrecoverable software error, hardware failure, or environmentally induced (AC power) failure.

#### Serviceability

The purpose of serviceability is to efficiently repair the system while attempting to minimize or eliminate impact to system operation. Serviceability includes system installation, MES (system upgrades/downgrades), and system maintenance/repair. Depending upon the system and warranty contract, service may be performed by the client, an IBM representative, or an authorized warranty service provider.

The serviceability features delivered in this system help provide a highly efficient service environment by incorporating the following attributes:

- Design for SSR setup, install, and service
- Error Detection and Fault Isolation (ED/FI)
- First Failure Data Capture (FFDC)
- Light path service indicators
- Service and FRU labels available on the system

- Service procedures documented in IBM Documentation or available through the HMC
- Automatic reporting of serviceable events to IBM through the Electronic Service Agent Call Home application

#### Service environment

In the PowerVM environment, the HMC is a dedicated server that provides functions for configuring and managing servers for either partitioned or full-system partition using a GUI or command-line interface (CLI) or REST API. An HMC attached to the system enables support personnel (with client authorization) to remotely, or locally to the physical HMC that is in proximity of the server being serviced, log in to review error logs and perform remote maintenance if required.

The Power10 processor-based systems support several service environments:

- Attachment to one or more HMCs or vHMCs is a supported option by the system with PowerVM. This is the default configuration for servers supporting logical partitions with dedicated or virtual I/O. In this case, all servers have at least one logical partition.
- No HMC. There are two service strategies for non-HMC systems.
  - Full-system partition with PowerVM: A single partition owns all the server resources and only one operating system may be installed. The primary service interface is through the operating system and the service processor.
  - Partitioned system with NovaLink: In this configuration, the system can have more than one partition and can be running more than one operating system. The primary service interface is through the service processor.

#### Service interface

Support personnel can use the service interface to communicate with the service support applications in a server using an operator console, a graphical user interface on the management console or service processor, or an operating system terminal. The service interface helps to deliver a clear, concise view of available service applications, helping the support team to manage system resources and service information in an efficient and effective way. Applications available through the service interface are carefully configured and placed to give service providers access to important service functions.

Different service interfaces are used, depending on the state of the system, hypervisor, and operating environment. The primary service interfaces are:

- LEDs
- Operator panel
- BMC Service Processor menu
- Operating system service menu
- Service Focal Point on the HMC or vHMC with PowerVM

In the light path LED implementation, the system can clearly identify components for replacement by using specific component-level LEDs and can also guide the servicer directly to the component by signaling (turning on solid) the enclosure fault LED, and component FRU fault LED. The servicer can also use the identify function to blink the FRU-level LED. When this function is activated, a roll-up to the blue enclosure identify will occur to identify an enclosure in a rack. These enclosure LEDs will turn on solid and can be used to follow the light path from the enclosure and down to the specific FRU in the PowerVM environment.

#### First Failure Data Capture and error data analysis

First Failure Data Capture (FFDC) is a technique that helps ensure that when a fault is detected in a system, the root cause of the fault will be captured without the need to re-create the problem or run any sort of extending tracing or diagnostics

program. For the vast majority of faults, a good FFDC design means that the root cause can also be detected automatically without servicer intervention.

FFDC information, error data analysis, and fault isolation are necessary to implement the advanced serviceability techniques that enable efficient service of the systems and to help determine the failing items.

In the rare absence of FFDC and Error Data Analysis, diagnostics are required to re-create the failure and determine the failing items.

#### Diagnostics

General diagnostic objectives are to detect and identify problems so they can be resolved quickly. Elements of IBM's diagnostics strategy include:

- Provide a common error code format equivalent to a system reference code with PowerVM, system reference number, checkpoint, or firmware error code.
- Provide fault detection and problem isolation procedures. Support remote connection ability to be used by the IBM Remote Support Center or IBM Designated Service.
- Provide interactive intelligence within the diagnostics with detailed online failure information while connected to IBM's back-end system.

#### Automatic diagnostics

The processor and memory FFDC technology is designed to perform without the need for re-create diagnostics nor require user intervention. Solid and intermittent errors are designed to be correctly detected and isolated at the time the failure occurs. Runtime and boot-time diagnostics fall into this category.

#### Standalone diagnostics

As the name implies, standalone or user-initiated diagnostics requires user intervention. The user must perform manual steps, including:

- Booting from the diagnostics CD, DVD, USB, or network
- Interactively selecting steps from a list of choices

#### Concurrent maintenance

The determination of whether a firmware release can be updated concurrently is identified in the readme information file that is released with the firmware. An HMC is required for the concurrent firmware update with PowerVM. In addition, concurrent maintenance of PCIe adapters and NVMe drives are supported with PowerVM. Power supplies, fans, and op panel LCD are hot pluggable.

#### Service labels

Service providers use these labels to assist them in performing maintenance actions. Service labels are found in various formats and positions and are intended to transmit readily available information to the servicer during the repair process. Following are some of these service labels and their purpose:

- Location diagrams: Location diagrams are located on the system hardware, relating information regarding the placement of hardware components. Location diagrams may include location codes, drawings of physical locations, concurrent maintenance status, or other data pertinent to a repair. Location diagrams are especially useful when multiple components such as DIMMs, processors, fans, adapter cards, and power supplies are installed.
- Remove/replace procedures: Service labels that contain remove/replace procedures are often found on a cover of the system or in other spots accessible to the servicer. These labels provide systematic procedures, including diagrams detailing how to remove or replace certain serviceable hardware components.

- Arrows: Numbered arrows are used to indicate the order of operation and the serviceability direction of components. Some serviceable parts such as latches, levers, and touch points need to be pulled or pushed in a certain direction and in a certain order for the mechanical mechanisms to engage or disengage. Arrows generally improve the ease of serviceability.

#### QR labels

QR labels are placed on the system to provide access to key service functions through a mobile device. When the QR label is scanned, it will go to a landing page for Power10 processor-based systems which contains each MTM service functions of interest while physically located at the server. These include things such as installation and repair instructions, reference code look up, and so on.

#### Packaging for service

The following service features are included in the physical packaging of the systems to facilitate service:

- Color coding (touch points): Blue-colored touch points delineate touchpoints on service components where the component can be safely handled for service actions such as removal or installation.
- Tool-less design: Selected IBM systems support tool-less or simple tool designs. These designs require no tools or simple tools such as flathead screw drivers to service the hardware components.
- Positive retention: Positive retention mechanisms help to assure proper connections between hardware components such as cables to connectors, and between two cards that attach to each other. Without positive retention, hardware components run the risk of becoming loose during shipping or installation, preventing a good electrical connection. Positive retention mechanisms like latches, levers, thumbscrews, pop Nylatches (U-clips), and cables are included to help prevent loose connections and aid in installing (seating) parts correctly. These positive retention items do not require tools.

#### Error handling and reporting

In the event of system hardware or environmentally induced failure, the system runtime error capture capability systematically analyzes the hardware error signature to determine the cause of failure. The analysis result will be stored in system NVRAM. When the system can be successfully restarted either manually or automatically, or if the system continues to operate, the error will be reported to the operating system. Hardware and software failures are recorded in the system log filesystem. When an HMC is attached in the PowerVM environment, an ELA routine analyzes the error, forwards the event to the Service Focal Point (SFP) application running on the HMC, and notifies the system administrator that it has isolated a likely cause of the system problem. The service processor event log also records unrecoverable checkstop conditions, forwards them to the SFP application, and notifies the system administrator.

The system has the ability to call home through the operating system to report platform-recoverable errors and errors associated with PCI adapters/devices.

In the HMC-managed environment, a call home service request will be initiated from the HMC and the pertinent failure data with service parts information and part locations will be sent to an IBM service organization. Client contact information and specific system-related data such as the machine type, model, and serial number, along with error log data related to the failure, are sent to IBM Service.

#### Live Partition Mobility

With PowerVM Live Partition Mobility (LPM), users can migrate an AIX, IBM I, or Linux VM partition running on one Power partition system to another Power system without disrupting services. The migration transfers the entire system environment, including processor state, memory, attached virtual devices, and connected users.



It provides continuous operating system and application availability during planned partition outages for repair of hardware and firmware faults. The Power10 systems using Power10-technology support secure LPM, whereby the VM image is encrypted and compressed prior to transfer. Secure LPM uses on-chip encryption and compression capabilities of the Power10 processor for optimal performance.

## Call home

Call home refers to an automatic or manual call from a client location to the IBM support structure with error log data, server status, or other service-related information. Call home invokes the service organization in order for the appropriate service action to begin. Call home can be done through the Electronic Service Agent (ESA) imbedded in the HMC or through a version of ESA imbedded in the operating systems for non-HMC-managed or A version of ESA that runs as a standalone call home application. While configuring call home is optional, clients are encouraged to implement this feature in order to obtain service enhancements such as reduced problem determination and faster and potentially more accurate transmittal of error information. In general, using the call home feature can result in increased system availability. See the next section for specific details on this application.

## IBM Electronic Services

Electronic Service Agent and Client Support Portal (CSP) comprise the IBM Electronic Services solution, which is dedicated to providing fast, exceptional support to IBM clients. IBM Electronic Service Agent is a no-charge tool that proactively monitors and reports hardware events such as system errors and collects hardware and software inventory. Electronic Service Agent can help focus on the client's company business initiatives, save time, and spend less effort managing day-to-day IT maintenance issues. In addition, Call Home Cloud Connect Web and Mobile capability extends the common solution and offers IBM Systems related support information applicable to Servers and Storage.

Details are available here: <https://clientvantage.ibm.com/channel/ibm-call-home-connect>.

System configuration and inventory information collected by Electronic Service Agent also can be used to improve problem determination and resolution between the client and the IBM support team. As part of an increased focus to provide even better service to IBM clients, Electronic Service Agent tool configuration and activation comes standard with the system. In support of this effort, a HMC External Connectivity security whitepaper has been published, which describes data exchanges between the HMC and the IBM Service Delivery Center (SDC) and the methods and protocols for this exchange. To read the whitepaper and prepare for Electronic Service Agent installation, see the "Security" section at the [IBM Electronic Service Agent](#).

Benefits: increased uptime

Electronic Service Agent is designed to enhance the warranty and maintenance service by potentially providing faster hardware error reporting and uploading system information to IBM Support. This can optimize the time monitoring the symptoms, diagnosing the error, and manually calling IBM Support to open a problem record. And 24x7 monitoring and reporting means no more dependency on human intervention or off-hours client personnel when errors are encountered in the middle of the night.

Security: The Electronic Service Agent tool is designed to help secure the monitoring, reporting, and storing of the data at IBM. The Electronic Service Agent tool is designed to help securely transmit through the internet (HTTPS) to provide clients a single point of exit from their site. Initiation of communication is one way. Activating Electronic Service Agent does not enable IBM to call into a client's system.

For additional information, see the [IBM Electronic Service Agent](#) website.

More accurate reporting

Because system information and error logs are automatically uploaded to the IBM Support Center in conjunction with the service request, clients are not required to find and send system information, decreasing the risk of misreported or misdiagnosed errors. Once inside IBM, problem error data is run through a data knowledge management system, and knowledge articles are appended to the problem record.

#### Client Support Portal

Client Support Portal is a single internet entry point that replaces the multiple entry points traditionally used to access IBM Internet services and support. This web portal enables you to gain easier access to IBM resources for assistance in resolving technical problems.

This web portal provides valuable reports of installed hardware and software using information collected from the systems by IBM Electronic Service Agent. Reports are available for any system associated with the client's IBM ID.

For more information on how to utilize client support portal, visit the following website or contact an [IBM Systems Services Representative](#).

---

#### Reference information

For additional information about IBM Power Expert Care extends services and support options, see announcement [JS22-0008](#), dated July 12, 2022.

For more information on Power10 scale-out servers, see Hardware Announcements: [JG22-0029](#), dated July 12, 2022; [JG22-0030](#), dated July 12, 2022; [JG22-0031](#), dated July 12, 2022; [JG22-0032](#), dated July 12, 2022; [JG22-0028](#), dated July 12, 2022.

---

#### Product number

The following are newly announced features on the specific models of the IBM Power 9786 machine type:

Description	Machine type	Model number	Feature number
IBM Power L1022	9786	22H	
One CSC Billing Unit	9786	22H	0010
Ten CSC Billing Units	9786	22H	0011
AIX Partition Specify	9786	22H	0265
Linux Partition Specify	9786	22H	0266
IBM i Operating System Partition Specify	9786	22H	0267
Customer Specified Placement	9786	22H	0456
Load Source Not in CEC	9786	22H	0719
Fiber Channel SAN Load Source Specify	9786	22H	0837
USB 500 GB Removable Disk Drive	9786	22H	1107
Custom Service Specify, Rochester Minn, USA	9786	22H	1140
300GB 15k RPM SAS SFF-2 Disk Drive (AIX/Linux)	9786	22H	1953
600GB 10k RPM SAS SFF-2 HDD for AIX/Linux	9786	22H	1964
Primary OS - AIX	9786	22H	2146
Primary OS - Linux	9786	22H	2147
IBM i with VIOS Only System Indicator	9786	22H	2148
Factory Deconfiguration of 1-core	9786	22H	2319
1.8 M (6-ft) Extender Cable for Displays (15-pin D-shell to 15-pin D-shell)	9786	22H	4242
Rack Integration Services	9786	22H	4649
Rack Indicator- Not Factory Integrated	9786	22H	4650
Rack Indicator, Rack #1	9786	22H	4651

Rack Indicator, Rack #2	9786	22H	4652		
Rack Indicator, Rack #3	9786	22H	4653		
Rack Indicator, Rack #4	9786	22H	4654		
Rack Indicator, Rack #5	9786	22H	4655		
Rack Indicator, Rack #6	9786	22H	4656		
Rack Indicator, Rack #7	9786	22H	4657		
Rack Indicator, Rack #8	9786	22H	4658		
Rack Indicator, Rack #9	9786	22H	4659		
Rack Indicator, Rack #10	9786	22H	4660		
Rack Indicator, Rack #11	9786	22H	4661		
Rack Indicator, Rack #12	9786	22H	4662		
Rack Indicator, Rack #13	9786	22H	4663		
Rack Indicator, Rack #14	9786	22H	4664		
Rack Indicator, Rack #15	9786	22H	4665		
Rack Indicator, Rack #16	9786	22H	4666		
Software Preload Required	9786	22H	5000		
PowerVM Enterprise Edition	9786	22H	5228		
PCIe2 LP 4-port 1GbE Adapter	9786	22H	5260		
PCIe2 4-port 1GbE Adapter	9786	22H	5899		
Power Cord 4.3m (14-ft), Drawer to IBM PDU (250V/10A)	9786	22H	6458		
Power Cord 4.3m (14-ft), Drawer To OEM PDU (125V, 15A)	9786	22H	6460		
Power Cord 4.3m (14-ft), Drawer to Wall/OEM PDU (250V/15A) U. S.	9786	22H	6469		
Power Cord 1.8m (6-ft), Drawer to Wall (125V/15A)	9786	22H	6470		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU (250V/10A)	9786	22H	6471		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU (250V/16A)	9786	22H	6472		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU (250V/10A)	9786	22H	6473		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU, (250V/13A)	9786	22H	6474		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU, (250V/16A)	9786	22H	6475		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU, (250V/10A)	9786	22H	6476		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU, (250V/16A)	9786	22H	6477		
Power Cord 2.7 M(9-foot), To Wall/OEM PDU, (250V, 16A)	9786	22H	6478		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU, (125V/15A or 250V/10A )	9786	22H	6488		
4.3m (14-Ft) 3PH/32A 380-415V Power Cord	9786	22H	6489		
4.3m (14-Ft) 1PH/63A 200-240V Power Cord	9786	22H	6491		
4.3m (14-Ft) 1PH/60A (48A derated) 200-240V Power Cord	9786	22H	6492		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU, (250V/10A)	9786	22H	6493		
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU, (250V/10A)	9786	22H	6494		
Power Cord 2.7M (9-foot), To Wall/OEM PDU, (250V, 10A)	9786	22H	6496		
Power Cable - Drawer to IBM PDU, 200-240V/10A	9786	22H	6577		
Power Cord 2.7M (9-foot), To Wall/OEM PDU, (125V, 15A)	9786	22H	6651		
4.3m (14-Ft) 3PH/16A 380-415V Power Cord	9786	22H	6653		
4.3m (14-Ft) 1PH/30A (24A derated) Power Cord	9786	22H	6654		
4.3m (14-Ft) 1PH/30A (24A derated) WR Power Cord	9786	22H	6655		
4.3m (14-Ft) 1PH/32A Power Cord	9786	22H	6656		
4.3m (14-Ft) 1PH/32A Power Cord-Australia	9786	22H	6657		
4.3m (14-Ft) 1PH/30A (24A derated) Power Cord-Korea	9786	22H	6658		
Power Cord 2.7M (9-foot), To Wall/OEM PDU, (250V, 15A)	9786	22H	6659		
Power Cord 4.3m (14-ft), Drawer to Wall/OEM PDU (125V/15A)	9786	22H	6660		
Power Cord 2.8m (9.2-ft), Drawer to IBM PDU, (250V/10A)	9786	22H	6665		
4.3m (14-Ft) 3PH/32A 380-415V Power Cord-Australia	9786	22H	6667		
Power Cord 4.3M (14-foot), Drawer to OEM PDU, (250V, 15A)	9786	22H	6669		
Power Cord 2.7M (9-foot), Drawer to IBM PDU, 250V/10A	9786	22H	6671		

Power Cord 2M (6.5-foot), Drawer to IBM PDU, 250V/10A	9786	22H	6672
Power Cord 2.7m (9-ft), Drawer to Wall/OEM PDU, (250V/10A)	9786	22H	6680
Intelligent PDU+, 1 EIA Unit, Universal UTG0247 Connector	9786	22H	7109
Power Distribution Unit	9786	22H	7188
Power Distribution Unit (US) - 1 EIA Unit, Universal, Fixed Power Cord	9786	22H	7196
Order Routing Indicator- System Plant	9786	22H	9169
Language Group Specify - US English	9786	22H	9300
New AIX License Core Counter	9786	22H	9440
New IBM i License Core Counter	9786	22H	9441
New Red Hat <sup>(R)</sup> License Core Counter	9786	22H	9442
New SUSE License Core Counter	9786	22H	9443
Other AIX License Core Counter	9786	22H	9444
Other Linux License Core Counter	9786	22H	9445
3rd Party Linux License Core Counter	9786	22H	9446
VIOS Core Counter	9786	22H	9447
Other License Core Counter	9786	22H	9449
Month Indicator	9786	22H	9461
Day Indicator	9786	22H	9462
Hour Indicator	9786	22H	9463
Minute Indicator	9786	22H	9464
Qty Indicator	9786	22H	9465
Countable Member Indicator	9786	22H	9466
Language Group Specify - Dutch	9786	22H	9700
Language Group Specify - French	9786	22H	9703
Language Group Specify - German	9786	22H	9704
Language Group Specify - Polish	9786	22H	9705
Language Group Specify - Norwegian	9786	22H	9706
Language Group Specify - Portuguese	9786	22H	9707
Language Group Specify - Spanish	9786	22H	9708
Language Group Specify - Italian	9786	22H	9711
Language Group Specify - Canadian French	9786	22H	9712
Language Group Specify - Japanese	9786	22H	9714
Language Group Specify - Traditional Chinese (Taiwan)	9786	22H	9715
Language Group Specify - Korean	9786	22H	9716
Language Group Specify - Turkish	9786	22H	9718
Language Group Specify - Hungarian	9786	22H	9719
Language Group Specify - Slovakian	9786	22H	9720
Language Group Specify - Russian	9786	22H	9721
Language Group Specify - Simplified Chinese (PRC)	9786	22H	9722
Language Group Specify - Czech	9786	22H	9724
Language Group Specify - Romanian	9786	22H	9725
Language Group Specify - Croatian	9786	22H	9726
Language Group Specify - Slovenian	9786	22H	9727
Language Group Specify - Brazilian Portuguese	9786	22H	9728
Language Group Specify - Thai	9786	22H	9729
10m (30.3-ft) - IBM MTP 12 strand cable for 40/100G transceivers	9786	22H	EB2J
30m (90.3-ft) - IBM MTP 12 strand cable for 40/100G transceivers	9786	22H	EB2K
AC Titanium Power Supply - 2000W for Server (200-240 VAC)	9786	22H	EB3N
Lift tool based on GenieLift GL-8 (standard)	9786	22H	EB3Z
10GbE Optical Transceiver SFP+ SR	9786	22H	EB46
25GbE Optical Transceiver SFP28	9786	22H	EB47
1GbE Base-T Transceiver RJ45	9786	22H	EB48
QSFP28 to SFP28 Connector	9786	22H	EB49
0.5m SFP28/25GbE copper Cable	9786	22H	EB4J
1.0m SFP28/25GbE copper Cable	9786	22H	EB4K
2.0m SFP28/25GbE copper Cable	9786	22H	EB4M
2.0m QSFP28/100GbE copper split Cable to SFP28 4x25GbE	9786	22H	EB4P
Service wedge shelf tool kit for EB3Z	9786	22H	EB4Z
QSFP+ 40GbE Base-SR4 Transceiver	9786	22H	EB57
100GbE Optical Transceiver QSFP28	9786	22H	EB59
1.0M 100GbE Copper Cable QSFP28	9786	22H	EB5K
1.5M 100GbE Copper Cable QSFP28	9786	22H	EB5L
2.0M 100GbE Copper Cable QSFP28	9786	22H	EB5M
3M 100GbE Optical Cable QSFP28 (AOC)	9786	22H	EB5R
5M 100GbE Optical Cable QSFP28 (AOC)	9786	22H	EB5S

10M 100GbE Optical Cable QSFP28 (AOC)	9786	22H	EB5T
15M 100GbE Optical Cable QSFP28 (AOC)	9786	22H	EB5U
20M 100GbE Optical Cable QSFP28 (AOC)	9786	22H	EB5V
30M 100GbE Optical Cable QSFP28 (AOC)	9786	22H	EB5W
50M 100GbE Optical Cable QSFP28 (AOC)	9786	22H	EB5X
IBM i 7.3 Indicator	9786	22H	EB73
IBM i 7.4 Indicator	9786	22H	EB74
IBM i 7.5 Indicator	9786	22H	EB75
PCIe3 LP 2-Port 10Gb NIC&ROCE SR/Cu Adapter	9786	22H	EC2R
PCIe3 2-Port 10Gb NIC&ROCE SR/Cu Adapter	9786	22H	EC2S
PCIe3 LP 2-Port 25/10Gb NIC&ROCE SR/Cu Adapter	9786	22H	EC2T
PCIe3 2-Port 25/10Gb NIC&ROCE SR/Cu Adapter	9786	22H	EC2U
PCIe3 x8 LP 3.2 TB NVMe Flash adapter for AIX/ Linux 9786	22H	EC5C	
PCIe3 x8 LP 6.4 TB NVMe Flash adapter for AIX/ Linux 9786	22H	EC5E	
PCIe3 x8 LP 1.6 TB NVMe Flash Adapter for AIX/ Linux 9786	22H	EC5G	
Enterprise 6.4 TB SSD PCIe4 NVMe U.2 module for AIX/Linux 9786	22H	EC5V	
Mainstream 800 GB SSD PCIe3 NVMe U.2 module for AIX/Linux 9786	22H	EC5X	
PCIe4 LP 2-port 100Gb ROCE EN LP adapter	9786	22H	EC67
PCIe2 LP 2-Port USB 3.0 Adapter	9786	22H	EC6J
PCIe2 2-Port USB 3.0 Adapter	9786	22H	EC6K
PCIe4 LP 1.6TB NVMe Flash Adapter x8 for AIX/ Linux 9786	22H	EC7A	
PCIe4 LP 3.2TB NVMe Flash Adapter x8 for AIX/ Linux 9786	22H	EC7C	
PCIe4 LP 6.4TB NVMe Flash Adapter x8 for AIX/ Linux 9786	22H	EC7E	
800GB Mainstream NVMe U.2 SSD 4k for AIX/Linux 9786	22H	EC7T	
SAS X Cable 3m - HD Narrow 6Gb 2-Adapters to Enclosure	9786	22H	ECBJ
SAS X Cable 6m - HD Narrow 6Gb 2-Adapters to Enclosure	9786	22H	ECBK
SAS Y0 Cable 1.5m - HD Narrow 6Gb Adapter to Enclosure	9786	22H	ECBT
SAS Y0 Cable 3m - HD Narrow 6Gb Adapter to Enclosure	9786	22H	ECBU
SAS Y0 Cable 6m - HD Narrow 6Gb Adapter to Enclosure	9786	22H	ECBV
SAS Y0 Cable 10m - HD Narrow 6Gb Adapter to Enclosure	9786	22H	ECBW
SAS AE1 Cable 4m - HD Narrow 6Gb Adapter to Enclosure	9786	22H	ECBY
SAS YE1 Cable 3m - HD Narrow 6Gb Adapter to Enclosure	9786	22H	ECBZ
System Port Converter Cable for UPS	9786	22H	ECCF
3M Copper CXP Cable Pair for PCIe3 Expansion Drawer	9786	22H	ECCS
3.0M SAS X12 Cable (Two Adapter to Enclosure)	9786	22H	ECDJ
4.5M SAS X12 Active Optical Cable (Two Adapter to Enclosure)	9786	22H	ECDK
10M SAS X12 Active Optical Cable (Two Adapter to Enclosure)	9786	22H	ECDL
1.5M SAS Y012 Cable (Adapter to Enclosure)	9786	22H	ECDT
3.0M SAS Y012 Cable (Adapter to Enclosure)	9786	22H	ECDU
4.5M SAS Y012 Active Optical Cable (Adapter to Enclosure)	9786	22H	ECDV
10M SAS Y012 Active Optical Cable (Adapter to Enclosure)	9786	22H	ECDW
0.6M SAS AA12 Cable (Adapter to Adapter)	9786	22H	ECE0
3.0M SAS AA12 Cable	9786	22H	ECE3
4.5M SAS AA12 Active Optical Cable (Adapter to Adapter)	9786	22H	ECE4
4.3m (14-Ft) PDU to Wall 3PH/24A 200-240V Delta-wired Power Cord	9786	22H	ECJ5
4.3m (14-Ft) PDU to Wall 3PH/40A 200-240V Power Cord	9786	22H	ECJ6
4.3m (14-Ft) PDU to Wall 3PH/48A 200-240V Delta-wired Power Cord	9786	22H	ECJ7
High Function 9xC19 Single-Phase or Three-Phase Wye PDU plus	9786	22H	ECJJ
High Function 9xC19 PDU plus 3-Phase Delta	9786	22H	ECJL

High Function 12xC13 Single-Phase or Three-Phase Wye PDU plus	9786	22H	ECJN
High Function 12xC13 PDU plus 3-Phase Delta	9786	22H	ECJQ
Custom Service Specify, Mexico	9786	22H	ECSM
Custom Service Specify, Poughkeepsie, USA	9786	22H	ECSP
Optical Wrap Plug	9786	22H	ECWO
SAP HANA TRACKING FEATURE	9786	22H	EHKV
Boot Drive / Load Source in EXP24SX Specify (in #ESLS or #ELLS)	9786	22H	EHR2
SSD Placement Indicator - #ESLS/#ELLS	9786	22H	EHS2
PCIe3 RAID SAS Adapter Quad-port 6Gb x8	9786	22H	EJ0J
PCIe3 12GB Cache RAID SAS Adapter Quad-port 6Gb x8	9786	22H	EJ0L
PCIe3 LP RAID SAS Adapter Quad-Port 6Gb x8	9786	22H	EJ0M
PCIe3 SAS Tape/DVD Adapter Quad-port 6Gb x8	9786	22H	EJ10
PCIe3 LP SAS Tape/DVD Adapter Quad-port 6Gb x8	9786	22H	EJ11
PCIe3 12GB Cache RAID PLUS SAS Adapter Quad-port 6Gb x8	9786	22H	EJ14
PCIe x16 to CXP Optical or CU converter Adapter for PCIe3 Expansion Drawer	9786	22H	EJ1R
Storage Backplane with four NVMe U.2 drive slots	9786	22H	EJ1X
PCIe x16 to CXP Converter Card, Supports optical cables	9786	22H	EJ24
PCIe3 Crypto Coprocessor BSC-Gen3 4767	9786	22H	EJ33
PCIe3 Crypto Coprocessor BSC-Gen3 4769	9786	22H	EJ37
Non-paired Indicator EJ14 PCIe SAS RAID+ Adapter	9786	22H	EJRL
Non-paired Indicator EJ0L PCIe SAS RAID Adapter	9786	22H	EJRU
Front IBM Bezel for 8 NVMe-bays Backplane Rack-Mount	9786	22H	EJUS
Front OEM Bezel for 8 NVMe-bays Backplane Rack-Mount	9786	22H	EJUT
Specify Mode-1 & (1)EJ0J/EJ0M/EL3B/EL59 & (1)Y012 for EXP24SX #ESLS/ELLS	9786	22H	EJW1
Specify Mode-1 & (2)EJ0J/EJ0M/EL3B/EL59 & (2)Y012 for EXP24SX #ESLS/ELLS	9786	22H	EJW2
Specify Mode-2 & (2)EJ0J/EJ0M/EL3B/EL59 & (2)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJW3
Specify Mode-2 & (4)EJ0J/EJ0M/EL3B/EL59 & (2)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJW4
Specify Mode-4 & (4)EJ0J/EJ0M/EL3B/EL59 & (2)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJW5
Specify Mode-2 & (1)EJ0J/EJ0M/EL3B/EL59 & (2)Y012 for EXP24SX #ESLS/ELLS	9786	22H	EJW6
Specify Mode-2 & (2)EJ0J/EJ0M/EL3B/EL59 & (2)Y012 for EXP24SX #ESLS/ELLS	9786	22H	EJW7
Specify Mode-2 & (1)EJ0J/EJ0M/EL3B/EL59 & (1)Y012 for EXP24SX #ESLS/ELLS	9786	22H	EJWA
Specify Mode-2 & (2)EJ0J/EJ0M/EL3B/EL59 & (1)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJWB
Specify Mode-4 & (1)EJ0J/EJ0M/EL3B/EL59 & (1)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJWC
Specify Mode-4 & (2)EJ0J/EJ0M/EL3B/EL59 & (1)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJWD
Specify Mode-4 & (3)EJ0J/EJ0M/EL3B/EL59 & (2)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJWE
Specify Mode-1 & (2)EJ14 & (2)Y012 for EXP24SX #ESLS/ELLS	9786	22H	EJWF
Specify Mode-2 & (2)EJ14 & (2)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJWG
Specify Mode-2 & (2)EJ14 & (1)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJWH
Specify Mode-2 & (4)EJ14 & (2)X12 for EXP24SX #ESLS/ELLS	9786	22H	EJWJ
Specify Mode-1 & CEC SAS port Controller EJ1G/EL67 & (1)Y012 for EXP24SX #ESLS/ELLS	9786	22H	EJWU
300GB 15k RPM SAS SFF-2 Disk Drive (Linux)	9786	22H	EL1P
600GB 10k RPM SAS SFF-2 Disk Drive (Linux)	9786	22H	EL1Q
PDU Access Cord 0.38m	9786	22H	ELCO
4.3m (14-Ft) PDU to Wall 24A 200-240V Power Cord North America	9786	22H	ELC1
4.3m (14-Ft) PDU to Wall 3PH/24A 415V Power Cord North America	9786	22H	ELC2
Power Cable - Drawer to IBM PDU (250V/10A)	9786	22H	ELC5
600GB 10K RPM SAS SFF-2 Disk Drive 4K Block -			

4096	9786	22H	ELEV
1.2TB 10K RPM SAS SFF-2 Disk Drive 4K Block - 4096	9786	22H	ELF3
1.8TB 10K RPM SAS SFF-2 Disk Drive 4K Block - 4096	9786	22H	ELFT
32GB (2x16GB) DDIMMs, 3200 MHz, 8GBIT DDR4 Memory	9786	22H	EM7N
64GB (2x32GB) DDIMMs, 3200 MHz, 8GBIT DDR4 Memory	9786	22H	EM7W
128GB (2x64GB) DDIMMs, 3200 MHz, 16GBIT DDR4 Memory	9786	22H	EM7X
256GB (2x128GB) DDIMMs, 2666 MHz, 16GBIT DDR4 Memory	9786	22H	EM7Y
Active Memory Mirroring (AMM)	9786	22H	EM8G
PCIe Gen3 I/O Expansion Drawer	9786	22H	EMXO
AC Power Supply Conduit for PCIe3 Expansion Drawer	9786	22H	EMXA
PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	9786	22H	EMXF
PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	9786	22H	EMXG
PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	9786	22H	EMXH
1m (3.3-ft), 10Gb E'Net Cable SFP+ Act Twinax Copper	9786	22H	EN01
3m (9.8-ft), 10Gb E'Net Cable SFP+ Act Twinax Copper	9786	22H	EN02
5m (16.4-ft), 10Gb E'Net Cable SFP+ Act Twinax Copper	9786	22H	EN03
PCIe2 4-Port (10Gb+1GbE) SR+RJ45 Adapter	9786	22H	EN0S
PCIe2 LP 4-Port (10Gb+1GbE) SR+RJ45 Adapter	9786	22H	EN0T
PCIe2 4-port (10Gb+1GbE) Copper SFP+RJ45 Adapter	9786	22H	EN0U
PCIe2 LP 4-port (10Gb+1GbE) Copper SFP+RJ45 Adapter	9786	22H	EN0V
PCIe2 2-port 10/1GbE BaseT RJ45 Adapter	9786	22H	EN0W
PCIe2 LP 2-port 10/1GbE BaseT RJ45 Adapter	9786	22H	EN0X
PCIe3 32Gb 2-port Fibre Channel Adapter	9786	22H	EN1A
PCIe3 LP 32Gb 2-port Fibre Channel Adapter	9786	22H	EN1B
PCIe3 16Gb 4-port Fibre Channel Adapter	9786	22H	EN1C
PCIe3 LP 16Gb 4-port Fibre Channel Adapter	9786	22H	EN1D
PCIe3 16Gb 4-port Fibre Channel Adapter	9786	22H	EN1E
PCIe3 LP 16Gb 4-port Fibre Channel Adapter	9786	22H	EN1F
PCIe3 2-Port 16Gb Fibre Channel Adapter	9786	22H	EN1G
PCIe3 LP 2-Port 16Gb Fibre Channel Adapter	9786	22H	EN1H
PCIe4 32Gb 2-port Optical Fibre Channel Adapter	9786	22H	EN1J
PCIe4 LP 32Gb 2-port Optical Fibre Channel Adapter	9786	22H	EN1K
PCIe3 16Gb 2-port Fibre Channel Adapter	9786	22H	EN2A
PCIe3 LP 16Gb 2-port Fibre Channel Adapter	9786	22H	EN2B
One Processor Core Activation for EPGF	9786	22H	EPFF
One Processor Core Activation for EPGG	9786	22H	EPFG
One Processor Core Activation for EPGH	9786	22H	EPFH
16-core Typical 2.75 to 4.0 Ghz (max) Power10 Processor	9786	22H	EPGF
12-core Typical 2.90 to 4.0 Ghz (max) Power10 Processor	9786	22H	EPGG
20-core Typical 2.45 to 3.9 Ghz (max) Power10 Processor	9786	22H	EPGH
Horizontal PDU Mounting Hardware	9786	22H	EPTH
High Function 9xC19 PDU: Switched, Monitoring	9786	22H	EPTJ
High Function 9xC19 PDU 3-Phase: Switched, Monitoring	9786	22H	EPTL
High Function 12xC13 PDU: Switched, Monitoring	9786	22H	EPTN
High Function 12xC13 PDU 3-Phase: Switched, Monitoring	9786	22H	EPTQ
Enterprise 1.6 TB SSD PCIe4 NVMe U.2 module for AIX/Linux 9786 22H ES1E			
Enterprise 3.2 TB SSD PCIe4 NVMe U.2 module for AIX/Linux 9786 22H ES1G			
Enterprise 1.6 TB SSD PCIe4 NVMe U.2 module for AIX/Linux 9786 22H ES3B			
Enterprise 3.2 TB SSD PCIe4 NVMe U.2 module for			

AIX/Linux 9786	22H	ES3D	
Enterprise 6.4 TB SSD PCIe4 NVMe U.2 module for			
AIX/Linux 9786	22H	ES3F	
387GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ES94	
387GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux 9786	22H	ESB2	
775GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux 9786	22H	ESB6	
387GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESBA	
775GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESBG	
1.55TB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESBL	
S&H - No Charge	9786	22H	ESCO
S&H-a	9786	22H	ESC5
Virtual Capacity Expedited Shipment	9786	22H	ESCT
iSCSI SAN Load Source Specify for AIX 9786	22H	ESCZ	
600GB 10K RPM SAS SFF-2 HDD 4K for AIX/Linux 9786	22H	ESEV	
1.2TB 10K RPM SAS SFF-2 HDD 4K for AIX/Linux 9786	22H	ESF3	
1.8TB 10K RPM SAS SFF-2 HDD 4K for AIX/Linux 9786	22H	ESFT	
387GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux 9786	22H	ESGV	
775GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux 9786	22H	ESGZ	
L1022 Identifier	9786	22H	ESH6
931GB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESJ0	
1.86TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESJ2	
3.72TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESJ4	
7.45TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESJ6	
931GB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESJJ	
1.86TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESJL	
3.72TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESJN	
7.44TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESJQ	
387GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux 9786	22H	ESK1	
775GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux 9786	22H	ESK3	
387GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESK8	
775GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESKC	
1.55TB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESKG	
931GB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESKK	
1.86TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESKP	
3.72TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESKT	
7.44TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESKX	
Specify AC Power Supply for EXP12SX/EXP24SX			
Storage Enclosure	9786	22H	ESLA
EXP24SX SAS Storage Enclosure	9786	22H	ESLS
931GB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESMB	
1.86TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESMF	
3.72TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESMK	
7.44TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESMV	
775GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESNA	
1.55TB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ESNE	
300GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (AIX/Linux)	9786	22H	ESNM
600GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (AIX/Linux)	9786	22H	ESNR
300GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (Linux)	9786	22H	ESRM
600GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (Linux)	9786	22H	ESRR
AIX Update Access Key (UAK)	9786	22H	ESWK
387GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux 9786	22H	ETK1	
775GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux 9786	22H	ETK3	
387GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ETK8	
775GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ETKC	
1.55TB Enterprise SAS 4k SFF-2 SSD for AIX/Linux 9786	22H	ETKG	
1TB Removable Disk Drive Cartridge	9786	22H	EU01
RDX 320 GB Removable Disk Drive	9786	22H	EU08
Operator Panel LCD Display	9786	22H	EU0K
1.5TB Removable Disk Drive Cartridge	9786	22H	EU15
Cable Ties & Labels	9786	22H	EU19
Order Placed Indicator	9786	22H	EU29
2TB Removable Disk Drive Cartridge (RDX)	9786	22H	EU2T
RDX USB External Docking Station	9786	22H	EUA4

Note: Feature EUA4 is not supported in Armenia, Azerbaijan, China, India, Japan, Kazakhstan, Kyrgyzstan, Mexico, Saudi Arabia, Taiwan, Turkmenistan, and Uzbekistan.



Standalone USB DVD drive w/cable	9786	22H	EUA5
BP Post-Sale Services: 1 Day	9786	22H	SVBP
IBM Systems Lab Services Post-Sale Services: 1 Day	9786	22H	SVCS
Other IBM Post-Sale Services: 1 Day	9786	22H	SVNN

---

## Feature conversions

### Feature Conversions

The existing components being replaced during a model or feature conversion become the property of IBM and must be returned.

Feature conversions are always implemented on a "quantity of one for quantity of one" basis. Multiple existing features may not be converted to a single new feature. Single existing features may not be converted to multiple new features.

The following conversions are available to clients:

Feature conversions for 9786-22H adapter features:

From FC:	To FC:	Return parts
EJ1R - PCIe x16 to CXP Optical or CU converter Adapter for PCIe3 Expansion Drawer	EJ24 - PCIe x16 to CXP Converter Card, Supports optical cables	No

Feature conversions for 9786-22H rack-related features:

From FC:	To FC:	Return parts
EMXF - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	EMXH - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	No
EMXG - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	EMXH - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	No

---

## Publications

No publications are shipped with the announced product.

IBM Documentation provides you with a single information center where you can access product documentation for IBM systems hardware, operating systems, and server software. Through a consistent framework, you can efficiently find information and personalize your access. See [IBM Documentation](#).

To access the IBM Publications Center Portal, go to the [IBM Publications Center](#) website. The IBM Publications Center is a worldwide central repository for IBM product publications and marketing material with a catalog of 70,000 items. Extensive search facilities are provided. A large number of publications are available online in various file formats, which can currently be downloaded.

To access the IBM Publications Center Portal, go to the [IBM Publications Center](#) website.

The Publications Center is a worldwide central repository for IBM product publications and marketing material with a catalog of 70,000 items. Extensive search facilities are provided. A large number of publications are available online in various file formats, which can currently be downloaded.

National language support

Not applicable

---

## Services

---

### IBM Systems Lab Services

Systems Lab Services offers infrastructure services to help build hybrid cloud and enterprise IT solutions. From servers to storage systems and software, Systems Lab Services can help deploy the building blocks of a next-generation IT infrastructure to empower a client's business. Systems Lab Services consultants can perform infrastructure services for clients online or onsite, offering deep technical expertise, valuable tools, and successful methodologies. Systems Lab Services is designed to help clients solve business challenges, gain new skills, and apply best practices.

Systems Lab Services offers a wide range of infrastructure services for IBM Power servers, IBM Storage systems, IBM Z<sup>(R)</sup>, and IBM LinuxONE. Systems Lab Services has a global presence and can deploy experienced consultants online or onsite around the world.

For assistance, contact Systems Lab Services at [ibmsls@us.ibm.com](mailto:ibmsls@us.ibm.com).

To learn more, see the [IBM Systems Lab Services](#) website.

### IBM Consulting™

As transformation continues across every industry, businesses need a single partner to map their enterprise-wide business strategy and technology infrastructure. IBM Consulting is the business partner to help accelerate change across an organization. IBM specialists can help businesses succeed through finding collaborative ways of working that forge connections across people, technologies, and partner ecosystems. IBM Consulting brings together the business expertise and an ecosystem of technologies that help solve some of the biggest problems faced by organizations. With methods that get results faster, an integrated approach that is grounded in an open and flexible hybrid cloud architecture, and incorporating technology from IBM Research<sup>(R)</sup> and IBM Watson<sup>(R)</sup> AI, IBM Consulting enables businesses to lead change with confidence and deliver continuous improvement across a business and its bottom line.

For additional information, see the [IBM Consulting](#) website.

### IBM Technology Support Services (TSS)

Get preventive maintenance, onsite and remote support, and gain actionable insights into critical business applications and IT systems. Speed developer innovation with support for over 240 open-source packages. Leverage powerful IBM analytics and AI-enabled tools to enable client teams to manage IT problems before they become emergencies.

TSS offers extensive IT maintenance and support services that cover more than one niche of a client's environment. TSS covers products from IBM and OEMs, including servers, storage, network, appliances, and software, to help clients ensure high availability across their data center and hybrid cloud environment.

For details on available services, see the [Technology support for hybrid cloud environments](#) website.

### IBM Expert Labs

Expert Labs can help clients accelerate their projects and optimize value by leveraging their deep technical skills and knowledge. With more than 20 years of industry experience, these specialists know how to overcome the biggest challenges to deliver business results that can have an immediate impact.

Expert Labs' deep alignment with IBM product development allows for a strategic advantage as they are often the first in line to get access to new products, features, and early visibility into roadmaps. This connection with the development enables them to deliver First of a Kind implementations to address unique needs or expand a client's business with a flexible approach that works best for their organization.

For additional information, see the [IBM Expert Labs](#) website.

#### IBM Security<sup>®</sup> Expert Labs

With extensive consultative expertise on IBM Security software solutions, Security Expert Labs helps clients and partners modernize the security of their applications, data, and workforce. With an extensive portfolio of consulting and learning services, Expert Labs provides project-based and premier support service subscriptions.

These services can help clients deploy and integrate IBM Security software, extend their team resources, and help guide and accelerate successful hybrid cloud solutions, including critical strategies such as zero trust. Remote and on-premises software deployment assistance is available for IBM Cloud Pak<sup>®</sup> for Security, IBM Security QRadar<sup>®</sup>/QRoC, IBM Security SOAR/Resilient<sup>®</sup>, IBM i2<sup>®</sup>, IBM Security Verify, IBM Security Guardium<sup>®</sup>, and IBM Security MaaS360<sup>®</sup>.

For more information, contact Security Expert Labs at [sel@us.ibm.com](mailto:sel@us.ibm.com).

For additional information, see the [IBM Security Expert Labs](#) website.

---

## IBM support

---

For installation and technical support information, see the [IBM Support Portal](#).

---

## Additional support

---

### IBM Client Engineering for Systems

Client Engineering for Systems is a framework for accelerating digital transformation. It helps you generate innovative ideas and equips you with the practices, technologies, and expertise to turn those ideas into business value in weeks. When you work with Client Engineering for Systems, you bring pain points into focus. You empower your team to take manageable risks, adopt leading technologies, speed up solution development, and measure the value of everything you do. Client Engineering for Systems has experts and services to address a broad array of use cases, including capabilities for business transformation, hybrid cloud, analytics and AI, infrastructure systems, security, and more. Contact Client Engineering at [sysgarage@ibm.com](mailto:sysgarage@ibm.com).

---

## Technical information

---

### Specified operating environment

---

#### Physical specifications

- Width<sup>1</sup>: 482 mm (18.97 in.)
- Depth<sup>2</sup>: 813 mm (32 in.)
- Height: 86.5 mm (3.4 in.)
- Weight: 32.20 kg (71 lb)

1. The width is measured to the outside edges of the rack-mount bezels. The width is 446 mm (17.6 in.) for the main chassis, which fits in between a 482.6 mm (19 in.) rack mounting flanges.
2. The cable management arm with the maximum cable bundle adds 241 mm (9.5 in.) to the depth. Feature ECRK is required for the 7965-S42 rack.

To assure installability and serviceability in non-IBM industry-standard racks, review the installation planning information for any product-specific installation requirements.

#### Operating environment

##### Electrical characteristics

- AC rated voltage and frequency<sup>2</sup>: 200--240 V AC at 50 or 60 Hz plus or minus 3 Hz
- Thermal output (maximum)<sup>3</sup>: 7643 BTU/hr
- Maximum power consumption<sup>3</sup>: 2240 W
- Maximum kVA<sup>4</sup>: 2.31 kVA
- Phase: Single

1. Redundancy is supported. The Power L1022 has a maximum of two power supplies. There are no specific plugging rules or plugging sequence when you connect the power supplies to the rack PDUs. All the power supplies feed a common DC bus.

2. The power supplies automatically accept any voltage with the published, rated-voltage range. If multiple power supplies are installed and operating, the power supplies draw approximately equal current from the utility (electrical supply) and provide approximately equal current to the load.

3. Power draw and heat load vary greatly by configuration. When you plan for an electrical system, it is important to use the maximum values. However, when you plan for heat load, you can use the IBM Systems Energy Estimator to obtain a heat output estimate based on a specific configuration. For more information, see [The IBM Systems Energy Estimator website](#).

4. To calculate the amperage, multiply the kVA by 1,000 and divide that number by the operating voltage.

##### Environment (operating)<sup>1</sup>

- ASHRAE class; allowable A3 (fourth edition)
- Airflow direction; recommended front-to-back
- Temperature: Recommended 18.0° C--27.0° C (64.4° F--80.6° F); allowable 5.0° C--40.0° C (41.0° F--104.0° F)
- Low-end moisture: Recommended 9.0° C (15.8° F) dew point; allowable -12.0° C (10.4° F) dew point and 8% relative humidity
- High-end moisture: Recommended 60% relative humidity and 15° C (59° F) dew point; allowable 85% relative humidity and 24.0° C (75.2° F) dew point
- Maximum altitude: 3,050 m (10,000 ft)

##### Allowable environment (nonoperating)<sup>5</sup>

- Temperature: Recommended 5° C--45° C (41° F--113° F)
- Relative humidity: Recommended 8% to 85%
- Maximum dew point: Recommended 27.0° C (80.6° F)

1. IBM provides the recommended operating environment as the long-term operating environment that can result in the greatest reliability, energy efficiency, and reliability. The allowable operating environment represents where the equipment is tested to verify functionality. Due to the stresses that operating in the allowable envelope can place on the equipment, these envelopes must be used for short-term operation, not continuous operation. There are a very limited number of

configurations that must not operate at the upper bound of the A3 allowable range. For more information, consult your IBM technical specialist.

2. Must derate the maximum allowable temperature 1° C (1.8° F) per 175 m (574 ft) above 900 m (2,953 ft) up to a maximum allowable elevation of 3,050 m (10,000 ft).
3. The minimum humidity level is the larger absolute humidity of the -12° C (10.4° F) dew point and the 8% relative humidity. These levels intersect at approximately 25° C (77° F). Below this intersection, the dew point (-12° C) represents the minimum moisture level, while above it, the relative humidity (8%) is the minimum. For the upper moisture limit, the limit is the minimum absolute humidity of the dew point and relative humidity that is stated.
4. The following minimum requirements apply to data centers that are operated at low relative humidity:
  - Data centers that do not have ESD floors and where people are allowed to wear non-ESD shoes might want to consider increasing humidity given that the risk of generating 8 kV increases slightly at 8% relative humidity, when compared to 25% relative humidity.
  - All mobile furnishings and equipment must be made of conductive or static dissipative materials and be bonded to ground.
  - During maintenance on any hardware, a properly functioning and grounded wrist strap must be used by any personnel who comes in contact with information technology (IT) equipment.
5. Equipment that is removed from the original shipping container and is installed, but is powered down. The allowable nonoperating environment is provided to define the environmental range that an unpowered system can experience short term without being damaged.

Electromagnetic compatibility compliance: CISPR 22; CISPR 32; CISPR 24; CISPR 35; FCC, CFR 47, Part 15 (US); VCCI (Japan); EMC Directive (EEA); ICES-003 (Canada); ACMA (Australia, New Zealand); CNS 13438 (Taiwan); Radio Waves Act (Korea); Commodity Inspection Law (China); QCVN 118 (Vietnam); MoCI (Saudi Arabia); SI 961 (Israel); EAC (EAEU).

Safety compliance: This product was designed, tested, manufactured, and certified for safe operation. It complies with IEC 60950-1 and/or IEC 62368-1 and where required, to relevant national differences/deviations (ND) to these IEC base standards. This includes, but is not limited to: EN (European Norms including all Amendments under the Low Voltage Directive), UL/CSA (North America bi-national harmonized and marked per accredited NRTL agency listings), and other such derivative certifications according to corporate determinations and latest regional publication compliance standardized requirements.

See the Installation Planning Guide in [IBM Documentation](#) for additional detail.

#### Homologation

This product is not certified for direct connection by any means whatsoever to interfaces of public telecommunications networks. Certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

#### Hardware requirements

##### Power L1022 system configuration

The minimum Power L1022 initial order must include a processor module, two 16 GB DIMMs (one feature EM7N 32 GB (2 x 16 GB) DDIMM), four power supplies and line cords, an operating system indicator, a cover set indicator, and a Language Group Specify. Also, it must include one of these storage options and one of these network options:

Storage options:

- For boot from NVMe: One NVMe drive slot and one NVMe drive or one PCIe NVMe add in adapter.
- For boot from SAN: Internal HDD or SSD and RAID card are not required if feature 0837 (boot from SAN) is selected. A Fibre Channel adapter must be ordered if feature 0837 is selected.

Network options:

- One PCIe2 4-port 1 Gb Ethernet adapter
- One of the supported 10 Gb Ethernet adapters

Linux is the primary operating system. The minimum defined initial order configuration is as follows:

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
Op-Panel	EUOK	Operator Panel LCD Display		1	Optional with Linux. Always default Qty. 1, but can be deselected for AIX/Linux.
Virtualization Engine	5228	PowerVM Enterprise Edition	1	1	Mandatory feature.
Processor Modules	EPGG	12-core Typical 2.90 to 4.0 Ghz (max) Power10 Processor		1	Must select one Processor Module option.
	or				
	EPGF	16-core Typical 2.75 to 4.0 Ghz (max) Power10 Processor		2	
Processor Modules	or				
	EPGH	20-core Typical 2.45 to 3.90 Ghz (max) Power10 Processor		2	
Processor Module Activations	EPFG	One Processor Core Activation for EPGG		12	All processor cores must be activated on the Processor Module selected.
	or				
Processor Module Activations	EPFF	One Processor Core Activation for EPGF		32	

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
	or				
	EPFH	One Processor Core Activation for EPGH		40	
Memory	EM7N	32GB (2x16GB) DDIMMs, 3200 MHz, 8GBIT DDR4 Memory		1	Minimum 2 DIMMs = 1 DIMM feature
	or				
	EM7W	64GB (2x32GB) DDIMMs, 3200 MHz, 8GBIT DDR4 Memory		1	
	or				
	EM7X	128GB (2x64GB) DDIMMs, 3200 MHz, 16GBIT DDR4 Memory		1	
	or				
	EM7Y	256GB (2x128GB) DDIMMs, 2666 MHz, 16GBIT DDR4 Memory		1	
Active Memory Mirroring	EM8G	Active Memory Mirroring (AMM)	0	0	Optional feature. Max. Qty. 1 per system. Memory Mirroring requires a minimum of 8 DIMMS (4 features DIMM).
Storage Backplane	EJ1X	Storage Backplane with four NVMe U.2 drive slots		1	Must order Qty. 1 NVMe backplane feature except when #0837 or #ESCZ (iSCSI boot) is on the order or when NVMe PCIe add-in adapter card is used as the Load

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
					Source. Mixing NVMe devices is allowed on each backplane.
Bezels	EJUS	Front IBM Bezel for 8 NVMe-bays Backplane Rack-Mount		1	When no NVMe backplane is ordered, default #EJUS.
	or				
	EJUT	Front OEM Bezel for 8 NVMe-bays Backplane Rack-Mount		1	
NVMe Devices	EC7T	800GB Mainstream NVMe U.2 SSD 4k for AIX/Linux	2	0	For AIX/Linux, default Qty. 2. It is allowed to be changed to any other quantity from Qty. 0 to Qty. 8.
Required LAN adapters	EC2T	PCIe3 LP 2-Port 25/10Gb NIC&ROCE SR/Cu Adapter	1	1	Qty. 1 of these LAN features required on all Initial orders. Default Adapter: #EC2U.
	or				
	ENOX	PCIe2 LP 2-port 10/1GbE BaseT RJ45 Adapter		1	
Power Supply	EB3N	AC Power Supply - 2000W for Server (200-240 VAC)	2	2	Each initial order must have all power supplies present, power supplies cannot be added later on. Only 200--240V power cords can be used.
Power Cables	6458	Power Cord 4.3m (14-ft),	2	2	Qty. 2 required.



System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
		Drawer to IBM PDU (250V/10A)			
Language Group	9300	Language Group Specify - US English	1	1	Language Specify code is required.
Primary Operating	2147	Primary OS -Linux		1	Mandatory feature.

1. The racking approach for the initial order can be a MTM 7965-S42.

Hardware Management Console (HMC) machine code

If the system is ordered with 1020 Firmware level, or higher, and is capable to be HMC managed, then the managing HMC must be installed with HMC 10.1.1020.0, or higher.

This level only supports hardware appliance types 7063, or virtual appliances (vHMC) on x86 or PowerVM. The 7042 hardware appliance is not supported.

An HMC is required to manage the Power L1022 server implementing partitioning. Multiple Power10, Power9, and Power8 processor-based servers can be supported by a single HMC with version 10.

Planned HMC hardware and software support:

- Hardware Appliance: 7063-CR1, 7063-CR2
- vHMC on x86
- vHMC on PowerVM based LPAR

If you are attaching an HMC to a new server or adding function to an existing server that requires a firmware update, the HMC machine code may need to be updated because HMC code must always be equal to or higher than the managed server's firmware. Access to firmware and machine code updates is conditioned on entitlement and license validation in accordance with IBM policy and practice. IBM may verify entitlement through customer number, serial number, electronic restrictions, or any other means or methods employed by IBM at its discretion.

To determine the HMC machine code level required for the firmware level on any server, go to the following web page to access the Fix Level Recommendation Tool (FLRT) on or after the planned availability date for this product. FLRT will identify the correct HMC machine code for the selected system firmware level; see the website [Fix Level Recommendation Tool](#).

If a single HMC is attached to multiple servers, the HMC machine code level must be updated to be at or higher than the server with the most recent firmware level. All prior levels of server firmware are supported with the latest HMC machine code level.

The HMC code latest level contains the following:

- Support for managing Power10 server systems.
- Support for the HMC model 7063-CR2.
- Support for PowerVM functions such as the new HMC GUI interface for VIOS management.
- GUI for HMC's Performance and Capacity Monitoring function.
- An HMC command to initiate a remote restart operation. This removes the requirement of VMControl for the PowerVM Remote Restart function.
- For PowerVM GUI functions, VIOS is recommended.

For clients installing systems higher than the EIA 29 position (location of the rail that supports the rack-mounted server) in any IBM or non-IBM rack, acquire approved tools outlined in the server specifications section at [IBM Documentation](#).

In situations where IBM service is required and the recommended tools are not available, there could be delays in repair actions.

#### Software requirements

Linux is required as the primary operating system.

- Red Hat<sup>®</sup> Enterprise Linux 9.0, for Power LE, or later
- Red Hat Enterprise Linux 8.4, for Power LE, or later
- SUSE Linux Enterprise Server 15 Service Pack 3, or later
- SUSE Linux Enterprise Server for SAP with SUSE Linux Enterprise Server 15 Service Pack 3, or later
- Red Hat Enterprise Linux for SAP with Red Hat Enterprise Linux 8.4 for Power LE, or later
- Red Hat OpenShift<sup>®</sup> Container Platform 4.9, or later

Please review the Linux alert page for any known Linux issues or limitations [Linux on IBM- Readme first issues](#) website.

AIX and IBM i can be chosen as secondary operating systems, with a maximum of 25% of total cores.

If installing the AIX operating system LPAR with any I/O configuration (one of these):

- AIX Version 7.3 with the 7300-00 Technology Level and Service Pack 7300-00-02-2220, or later
- AIX Version 7.2 with the 7200-05 Technology Level and Service Pack 7200-05-04-2220, or later
- AIX Version 7.2 with the 7200-04 Technology Level and Service Pack 7200-04-06-2220, or later (planned availability September 16, 2022)

If installing the AIX operating system Virtual I/O only LPAR (one of these):

- AIX Version 7.3 with the 7300-00 Technology Level and service pack 7300-00-01-2148, or later
- AIX Version 7.2 with the 7200-05 Technology Level and service pack 7200-05-01-2038, or later
- AIX Version 7.2 with the 7200-04 Technology Level and Service Pack 7200-04-02-2016, or later
- AIX Version 7.1 with the 7100-05 Technology Level and Service Pack 7100-05-06-2016, or later

If installing VIOS:

- VIOS 3.1.3.21

If installing IBM i LPAR:

- VIOS is required, the IBM i partitions must be set to "restricted I/O" mode. There are limitations to the maximum size of the partition. Up to four cores (real or virtual) per IBM i partition are supported. Multiple IBM i partitions can be created and run concurrently, and each individual partition can have up to four cores.
- The IBM i operating system levels supported are:
  - IBM i 7.5, or later
  - IBM i 7.4 TR6, or later

- IBM i 7.3 TR12, or later

#### Limitations

There is no physical system port on the scale out Power10 servers.

#### Planning information

##### Cable orders

No cables required.

##### Security, auditability, and control

This product uses the security and auditability features of host hardware and application software.

The client is responsible for evaluation, selection, and implementation of security features, administrative procedures, and appropriate controls in application systems and communications facilities.

## 契約条件

### 大量発注

IBM 担当員にお問い合わせください。

### 製品 - 契約条件

#### 保証期間

保証および追加補償範囲オプション:	補償範囲の要約 <sup>(1)</sup> :
保証期間:	3 年間
サービス・レベル:	IBM CRU およびオンサイト、9 時間 x 週 5 日、翌営業日対応
サービス・アップグレード・オプション:	
保証サービスのアップグレード	IBM オンサイト修理、9 時間 x 週 5 日、当日対応 <sup>(2)</sup> 、24 時間 365 日当日対応
保守サービス (保証期間後):	IBM オンサイト修理、翌営業日対応オプションおよび当日対応オプション
IBM ハート#ウェアの 保守サービス - 専用保守 <sup>(3)</sup> :	Y

<sup>(1)</sup> 以下の補償範囲の詳細を参照してください。

<sup>(2)</sup> 米国および EMEA でのみ提供されます。

<sup>(3)</sup> 米国では提供されません。

IBM 保証の内容と制限のコピーを入手するには、販売店または IBM にお問い合わせください。

IBM マシンの初期の取り付けで取り付けられた IBM 部品またはフィーチャーは、IBM が指定した期間の完全保証の対象となります。以前に取り付けられていた部品またはフィーチャーを新しい IBM 部品またはフィーチャーと交換する場合、新しく交換された部品またはフィーチャーは残りの保証期間を引き継ぎます。以前に取り付けられた部品またはフィーチャーを交換しないで IBM 部品または機能をマシンに追加した場合、完全保証の対象となります。特に明記されていない限り、保証期間、保証サービスのタイプ、および部品またはフィーチャーのサービス・レベルは、それが取り付けられている機械と同じです。

本書に記載されている IBM ソリッド・ステート・ドライブ (SSD) および Non-Volatile Memory Express (NVMe) デバイスには、書き込みサイクルの最大数があります。IBM SSD および NVMe デバイスで障害が発生し、SSD および NVMe デバイスが書き込みサイク

ルの最大数に達していない場合、標準の保証および保守期間中であれば、SSD および NVMe デバイスは交換の対象となります。この制限に達したデバイスは、その仕様に従って動作しなくなるがあり、お客様の負担で交換する必要があります。個々の耐用期間はそれぞれ異なり、オペレーティング・システム・コマンドを使用してモニター可能です。

IBM 保証は、フィーチャー番号 EB4Z を対象としています。フィーチャー番号 EB3Z および GenieLift GL-8 をベースとしたリフト・ツールに関連する保証条件については、Genie が提供する個別の保証条件を参照してください。これらの保証条件は、[Genie Web](#) サイトにある Genie オペレーター資料に記載されています。

IBM または IBM 以外のラックの EIA 29 (ラック・マウント型サーバーをサポートするレールの場所) より上の位置にシステムを取り付けるお客様の場合は、[IBM Documentation](#) のサーバー仕様セクションに概要が示されている承認済みのツールを入手してください。IBM によるサービスが必要で、推奨されるツールを入手できない状況では、修復処置が遅れる可能性があります。

#### 延長保証サービス

延長保証サービスは適用されません。

#### 保証サービス

IBM は、必要に応じ、機械に指定された保証サービスの種類に従って、修理または交換サービスを提供します。IBM は、電話 または IBM Web サイトを介して、コンピューター上で問題の解決を試みます。特定の機械には、直接問題報告、リモート問題判別、および IBM による解決を対象としたリモート・サポート機能が付いています。お客様は、IBM が指定する問題判別手順および解決手順に従っていただく必要があります。問題判別に続いて、IBM がオンサイト・サービスが必要であると判断する場合、サービスのご提供日時は、お客様のお問い合わせの時間、機械のテクノロジーおよび冗長度、部品の在庫状況によって異なります。お客様の製品に該当する場合、カスタマー交換可能ユニット (CRU) と見なされる部品は、機械の標準保証サービスの一部として提供されます。

サービス・レベルは目標対応時間で設定されますが、保証されるものではありません。指定された保証サービス・レベルは、世界中のすべての地域で利用可能であるとは限りません。IBM の通常のサービス範囲を超えると、追加料金がかかる場合があります。国や地域に特定の情報については、IBM 担当員または販売店にお問い合わせください。

#### CRU サービス

IBM はお客様がご自身で導入できるように交換用 CRU をお客様に出荷します。CRU についての情報および交換手順は、ご使用の機械に付属しているか、または IBM Web サイトに掲載されています。また、ご要望により IBM から入手いただけます。CRU は、Tier 1 (必須) または Tier 2 (オプション) CRU と指定されます。

#### Tier 1 (必須) CRU

Tier 1 CRU の取り付けは、この発表で明記されているとおり、お客様ご自身で行っていただきます。お客様の要請により IBM が Tier 1 CRU の導入を行った場合は、その料金を請求させていただきます。

Tier 1 CRU に指定されている部品は以下のとおりです。

- ・ ベゼル
- ・ サービス・カバー
- ・ 操作パネル
- ・ 操作パネル -- LCD
- ・ 操作パネル -- LCD ケーブル
- ・ ファン
- ・ ファンカード用信号ケーブル
- ・ フロント USB ケーブル
- ・ NVMe ドライブ
- ・ NVMe フィラー

- ・ DDIMM 保持用カバー
- ・ DDIMM フィラー
- ・ 時刻バッテリー
- ・ TPM カード
- ・ プロセッサ VRM
- ・ プロセッサ・ヒートシンク
- ・ PCIe アダプター
- ・ 電源機構
- ・ 配電信号ケーブル

#### Tier 2 (オプション) CRU

Tier 2 CRU は、お客様ご自身で取り付けていただくこともできますし、追加料金なしで IBM に取り付けを要求することもできます。

在庫がある場合、CRU が翌営業日 (NBD) 配送で出荷されます。IBM は、取り外した (故障した) CRU を IBM に返却する必要があるかどうかを交換用 CRU に同梱される資料に指定するものとします。返却が必要な場合は、返却の指示および返送用梱包材が交換用 CRU と一緒に出荷されます。お客様が、故障した CRU を交換用 CRU の受領から 15 日以内に返却しない場合、IBM は交換用 CRU の代金を請求させていただくことがあります。

#### CRU + オンサイト・サービス

IBM の判断で、お客様が指定された CRU サービスを受けるか、または IBM がお客様の機械設置場所で機械の修理を行い、機械の動作を検証します。IBM 機械の分解および再組み立てができる適切な作業場所を提供いただく必要があります。作業場所は、清潔で明るく、分解および再組み立てに適した場所であればなりません。

サービス・レベルは以下のとおりです。

- ・ 1 日 9 時間、休日を除く月曜日から金曜日、翌営業日対応。翌営業日対応の対象となるには、現地時間の午後 3:00 までにお問い合わせいただく必要があります。

#### 保証サービス

IBM は現在、IBM フィールド交換可能ユニット (FRU) の部品番号ラベルをつけた、特定の IBM 以外の部品を使用したマシンを出荷しています。これらの部品は、IBM マシンの保証期間中は、保守の対象になります。IBM は、お客様の便宜を図るためにこれらの特定の IBM 以外の部品をサービスの対象としており、これらの部品には IBM マシンの通常の保証サービス手順が適用されます。

#### 国際保証サービス

国際保証サービスにより、国際保証サービスに適しているマシンを再配置し、IBM マシンのサービスが提供される国で継続保証サービスを受けることができます。マシンを別の国に移動する場合は、マシン情報をビジネス・パートナーまたは IBM 担当員に報告する必要があります。

サービスを提供している国で提供された保証サービス・タイプおよびサービス・レベルは、マシンが購入された国で提供される保証サービス・タイプとサービス・レベルとは異なる場合があります。保証サービスには、サービス対象国の対象マシン・タイプで利用可能な一般的な保証サービス・タイプとサービス・レベルが提供され、保証期間は、マシンが購入された国の保証期間になります。

以下の情報タイプは、[国際保証サービス](#) Web サイト内で見つかります。

- ・ 機械保証の資格と適格性
- ・ テクニカル・サポートの連絡先情報を含む国別の連絡先のディレクトリー
- ・ 発表レター

#### 保証サービスのアップグレード

保証期間内において、保証サービスをアップグレードすると、オンサイト・サービスのレベルを強化することができます。これには、追加料金がかかります。サービス・レベルは目標対応時間で設定されますが、保証されるものではありません。追加情報については、『保証サービス』のセクションを参照してください。

IBM は、電話による対応または IBM Web サイトを使用した電子的な方法により、問題を解決するよう努めます。特定の機械には、直接問題報告、リモート問題判別、および IBM による解決を対象としたリモート・サポート機能が付いています。お客様は、IBM が指定する問題判別手順および解決手順に従っていただく必要があります。問題判別に続いて、IBM がオンサイト・サービスが必要であると判断する場合、サービスのご提供日時は、お客様のお問い合わせの時間、機械のテクノロジーおよび冗長度、部品の在庫状況によって異なります。

#### 保守サービスのオプション

IBM Power Expert Care のサービスおよびサポート・オプションについて詳しくは、発表レター [JS22-0008](#) を参照してください。

#### IBM 製ではない部品のサービス

特定の条件下で、IBM は、保証サービスのアップグレードまたは保守サービスの対象となるマシンについて、特定の IBM 以外の部品に追加料金なしで保守を提供します。

このサービスには IBM マシンに取り付けられた IBM 以外の部品（例えば、アダプター・カード、PCMCIA カード、ディスク・ドライブ、メモリーなど）のハードウェア問題判別（PD）が含まれ、故障した部品の交換作業が追加料金なしで提供されます。

IBM が故障した部品の製造者と技術サービス契約を交わしている場合、または故障した部品が適合部品（IBM FRU ラベルのついた部品）である場合、IBM は故障した部品を追加料金なしで調達および交換します。それ以外の IBM 製ではない部品については、お客様自身が部品を調達する責任を負います。マシンが保証サービスのアップグレードまたは保守サービス期間中であれば、追加料金なしで取り付けが行われます。

#### 使用量対応機械

なし

#### IBM の時間制サービス料率の分類

2

サービス・タイプに機械部品の交換が含まれる場合、交換用部品として新品ではない（ただし、正常に機能する）部品を使用する場合があります。

#### 一般的な取引条件

---

##### 現場で取り付け可能なフィーチャー

あり

##### モデル変更: なし

なし

##### 機械の取り付け

お客様によるセットアップ。IBM からマシンとともに提供された手順書に従って、お客様ご自身で取り付ける必要があります。

##### 段階的プログラム・ライセンス料金の適用

なし

##### ライセンス・マシン・コード

IBM マシン・コードは、IBM マシン・コード使用許諾契約書の条件に基づいて IBM から提供された IBM マシン上のクライアントによって使用するためのライセンス交付を受けており、マシンをその仕様に従って機能させるために、IBM が許可し、お客様が取得された容量に対してのみ使用されます。契約書を入手するには、IBM 担当員にお問い合わせください。 [License Agreement for Machine Code and Licensed Internal Code](#) から入手できます

LMC タイプ・モデル 9786-22H を使用するマシン

マシン・コードのアップデートへのアクセスは、IBM のポリシーと慣習に準拠した使用許諾とライセンスの検証が条件となります。IBM は、お客様番号、シリアル番号、電子的制限、または IBM が独自の裁量で採用する他の手段や方式を通じて使用許諾を検証する場合があります。

マシンが仕様どおりの稼働状態でなくなったときに、ダウンロード可能なマシン・コードの適用により問題を解決できる場合、IBM が指定するとおりにこれらの指定されたマシン・コードの変更をダウンロードし、インストールするのはお客様の責任で行っていただきます。必要に応じて、お客様はダウンロード可能なマシン・コードの変更のインストール作業を IBM に依頼することができますが、これは有料サービスとなる場合があります。

#### 教育割引

教育割引： 資格要件を満たした教育機関のお客様は、割引料金を利用することができます。教育割引は、他の割引に加算することはできません。

この発表レターの製品に対する教育割引は 5% です。

---

## Prices

---

For all local charges, contact your IBM representative.

#### Annual minimum maintenance charges

Not applicable

#### IBM Global Financing

IBM Global Financing offers competitive financing to credit-qualified clients to assist them in acquiring IT solutions. Offerings include financing for IT acquisition, including hardware, software, and services, from both IBM and other manufacturers or vendors. Offerings (for all client segments: small, medium, and large enterprise), rates, terms, and availability can vary by country. Contact your local IBM Global Financing organization or go to the [IBM Global Financing](#) website for more information.

IBM Global Financing offerings are provided through IBM Credit LLC in the United States and other IBM subsidiaries and divisions worldwide to qualified commercial and government clients. Rates are based on a client's credit rating, financing terms, offering type, equipment type and options, and may vary by country. Other restrictions may apply. Rates and offerings are subject to change, extension, or withdrawal without notice.

Financing solutions from IBM Global Financing can help you stretch your budget and affordably acquire the new product. But beyond the initial acquisition, our end-to-end approach to IT management can also help keep your technologies current, reduce costs, minimize risk, and preserve your ability to make flexible equipment decisions throughout the entire technology lifecycle.

#### Trademarks

IBM Consulting is a trademark of IBM Corporation in the United States, other countries, or both.

IBM, Power, PowerVM, AIX, IBM Cloud, IBM Z, PartnerWorld, IBM Research, IBM Watson, IBM Security, IBM Cloud Pak, QRadar, Resilient, i2, Guardium and MaaS360 are registered trademarks of IBM Corporation in the United States, other countries, or both.

The registered trademark Linux® is used pursuant to a sublicense from the Linux Foundation, the exclusive licensee of Linus Torvalds, owner of the mark on a worldwide basis.

Red Hat and OpenShift are registered trademarks of Red Hat Inc. in the U.S. and other countries.

Other company, product, and service names may be trademarks or service marks of others.

#### Terms of use

IBM products and services which are announced and available in your country can be ordered under the applicable standard agreements, terms, conditions, and prices in effect at the time. IBM reserves the right to modify or withdraw this announcement at any time without notice. This announcement is provided for your information only. Additional terms of use are located at

#### [Terms of use](#)

この製品発表レターは、IBM Corporation が発表した時点での製品発表レターの抄訳です。

For the most current information regarding IBM products, consult your IBM representative or reseller, or go to the IBM worldwide contacts page

#### [IBM Japan](#)

---

## 修正

(2022 年 8 月 8 日修正)

「機能詳細」、「制限事項」、「契約条件」セクションを修正しました。