

# IBM Power S1014 server provides optimized and cost-effective performance and scale for businesses in pursuit of IT excellence

## Table of contents

<a href="#">1 Overview</a>	<a href="#">31 Publications</a>
<a href="#">2 Key requirements</a>	<a href="#">33 Technical information</a>
<a href="#">2 Planned availability date</a>	<a href="#">47 Terms and conditions</a>
<a href="#">3 Description</a>	<a href="#">52 Prices</a>
<a href="#">21 Product number</a>	<a href="#">67 Regional availability</a>
	<a href="#">67 Corrections</a>

## At a glance

IBM<sup>(R)</sup> Power<sup>(R)</sup> servers are already the most reliable and secure in their class. Now, the new IBM Power S1014 (9105-41B) technology-based server extends that leadership and introduces the essential scale-out hybrid cloud platform, uniquely architected to help clients securely and efficiently scale core operational and AI applications anywhere in a hybrid cloud. Clients can encrypt all data simply without management overhead or performance impact and drive insights faster with AI at the point of data. Clients can also gain workload deployment flexibility and agility with a single hybrid cloud currency while doing more work.

Power S1014 features include:

- IBM Power10 processors with up to four or eight total cores per server
- In-core AI inferencing and machine learning with Matrix Math Accelerator (MMA) feature
- Up to 1.0 TB of system memory distributed across 8 DDR4 differential dual inline memory module (DDIMM) slots
- Transparent Memory Encryption with no additional management setup and no performance impact
- Five PCIe slots with four PCIe Gen5 capable, all with concurrent maintenance
- Up to 16 NVMe U.2 flash bays provides up to 102.4 TB of high-speed storage
- Optional internal RDX drive
- 1+1 redundant hot-plug 200--240 volt AC titanium power supplies in each enclosure supporting a rack configuration, or
- 2+2 redundant hot-plug 100--127/200--240 volt AC titanium power supplies in each enclosure supporting a rack or tower/desk configuration
- IBM PowerVM<sup>(R)</sup>-integrated virtualization with minimum processing overhead

The Power S1014 supports:

- IBM AIX<sup>(R)</sup>, IBM i, Linux<sup>(R)</sup>, and VIOS environments
- IBM Power Expert Care service tiers
- IBM i Solution Edition for Power S1014
- IBM i Express Edition for Power S1014

## Overview

Security, operational efficiency, and real-time intelligence to respond quickly to market changes are now nonnegotiable for IT. In an always-on environment of constant change, you need to automate and accelerate critical operations, while ensuring 24x7 availability and staying ahead of cyberthreats. You need applications and data to be enterprise-grade everywhere, but without adding complexity and cost.

The Power S1014 (9105-41B) server can modernize your applications and infrastructure with a frictionless hybrid cloud experience to provide the agility you need for the unpredictability of today's business. The Power S1014 can help you:

- Run workloads where you need them with efficient scaling and consistent pay-for-use consumption across public and private clouds
- Use memory encryption at the processor level designed to support Zero Trust security approach to hybrid cloud
- Accelerate insights from data through AI inferencing directly in the core
- Consolidate workloads with scalability and performance that can reduce energy consumption

The Power S1014 server can help deliver business agility by extending mission-critical workloads across a hybrid cloud with increased flexibility.

- **Respond faster to business demands:** The Power10 processor delivers new levels of performance as compared to IBM Power9 for the same workloads without increasing energy or carbon footprint, enabling more efficient scaling.
- **Protect data from core to cloud:** Power10 provides end-to-end security with a transparent memory encryption at the processor level--without management overhead or performance impact. Power10 can also help you to stay ahead of future threats with support for post-quantum cryptography and fully homomorphic encryption.
- **Streamline insights and automation:** Power10 leverages the enhanced in-core AI inferencing capability built into every server with no additional specialized hardware required. You can extract insights from your most sensitive data where it resides, eliminating the time and risk of data movement.
- **Maximize availability and reliability:** The Power10 processor ensures your business stays up and running with inherent advanced recovery and self-healing features for infrastructure redundancy and disaster recovery in IBM Cloud<sup>(R)</sup>.

Power servers are delivering results for clients all over the globe, from new digital services for banks and real-time decision-making in manufacturing to operational efficiency for engineering and electronics. See how Power servers are contributing to IBM client success in [IBM Case Studies](#).

---

## Feature exchange

---

Not applicable

---

## Key requirements

---

An IBM i, AIX, Linux, or VIOS operating system is required. See the [Software requirements](#) section for details.

---

## Planned availability date

---

- July 22, 2022, except for feature EM6Y
- November 18, 2022, for feature EM6Y

Availability within a country is subject to local legal requirements.

---

## Description

---

The Power S1014 (9105-41B) server is a high-performance, flexible, one-socket, 4U system that provides massive scalability and flexibility. It delivers extreme density in an energy-efficient design with superior reliability and resiliency. The Power S1014 server brings a secure environment that balances mission-critical traditional workloads and modernization applications to deliver a frictionless hybrid cloud experience.

### Power S1014 feature summary

- One entry single-chip processor module per system server:
  - 3.0--3.90 GHz, four-core Power10 processor (#EPG0).
  - 3.0--3.90 GHz, eight-core Power10 processor (#EPG2).
- MMA feature helps to perform in-core AI inferencing and machine learning where data resides.
- Up to 1 TB of system memory distributed across 8 DDIMM slots per system server. DDIMMs are extremely high-performance, high-reliability, intelligent, and dynamic random access memory (DRAM) devices.
- DDR4 DDIMM memory cards:
  - 32 GB (2 x 16 GB), (#EM6N).
  - 64 GB (2 x 32 GB), (#EM6W).
  - 128 GB (2 x 64 GB), (#EM6X).
  - 256 GB (2 x 128 GB), (#EM6Y).
- PCIe slots:
  - One x16 Gen4 or x8 Gen5 full-height, half-length slot.
  - Three x8 Gen5 full-height, half-length slots (with x16 connectors).
  - One x8 Gen4 full-height, half-length slot (with x16 connectors).
  - All PCIe slots are concurrently maintainable.
- Integrated:
  - System management using an Enterprise Baseboard Management Controller (eBMC).
  - EnergyScale technology.
  - Redundant hot-swap cooling.
  - Redundant hot-swap AC power supplies.
  - Up to two HMC 1 GbE RJ45 ports.
  - One rear USB 3.0 port.
  - One front USB 3.0 port.
  - One internal USB 3.0 Port for RDX.
  - Nineteen-inch rack-mounting hardware (4U).
- Optional PCIe I/O expansion drawer with PCIe slots -- Rack configuration only:
  - One PCIe Gen3 I/O Expansion Drawer (#EMX0).
  - I/O drawer holds one six-slot PCIe fanout modules (#EMXH).
  - Fanout module attaches to the system node through a PCIe optical or copper cable adapter (#EJ2A).

### PowerVM

PowerVM, which delivers industrial-strength virtualization for AIX and Linux environments on Power processor-based systems, provides a virtualization-oriented

performance monitor, and performance statistics are available through the HMC. These performance statistics can be used to understand the workload characteristics and to prepare for capacity planning.

## Processor modules

The Power10 processor is the compute engine for the next generation of Power systems and successor to the current IBM Power9 processor. It offers superior performance on applications such as MMA facility to accelerate computation-intensive kernels, matrix multiplication, convolution, and discrete Fourier transform. To efficiently accelerate MMA operations, the Power10 processor core implements a dense math engine (DME) microarchitecture that effectively provides an accelerator for cognitive computing, machine learning, and AI inferencing workloads.

A maximum of one Power10 processor is allowed. The following defines the allowed quantities of processor activation entitlements:

- One four-core, typical 3.0 to 3.90 Ghz (max) processor (#EPG0) requires that four processor activation codes be ordered. A maximum of four processor activations (#EPFT) are allowed.
- One eight-core, typical 3.0 to 3.90 Ghz (max) processor (#EPG2) requires that eight processor activation codes be ordered. A maximum of eight processor activation code features (#EPF6) are allowed.

Enhanced Workload Optimized Frequency for optimum performance: This mode can dynamically optimize the processor frequency at any given time based on CPU utilization and operating environmental conditions. For a description of this feature and other power management options available for this server, see the [IBM EnergyScale for Power10 Processor-Based Systems](#) website.

## MMA

The Power10 processor core inherits the modular architecture of the Power9 processor core, but the redesigned and enhanced microarchitecture significantly increases the processor core performance and processing efficiency. The peak computational throughput is markedly improved by new execution capabilities and optimized cache bandwidth characteristics. Extra matrix math acceleration engines can deliver significant performance gains for machine learning, particularly for AI inferencing workloads.

## Memory

The Power S1014 server uses the next-generation DDIMMs, which are high-performance, high-reliability, high-function memory cards that contain a buffer chip, intelligence, and 2666 MHz or 3200 MHz DRAM memory. DDIMMs are placed in DDIMM slots in the server system.

- A minimum 32 GB of memory is required with one processor module. All Memory DIMMs must be ordered in pairs.
- Each DIMM feature code delivers two physical Memory DIMMs.

Plans for future memory upgrades should be taken into account when deciding which memory feature size to use at the time of initial system order.

To assist with the plugging rules, two DDIMMs are ordered using one memory feature number. Select from:

- 32 GB (2 x 16 GB) DDIMMs, 3200 MHz, 8 Gb DDR4 Memory (#EM6N)
- 64 GB (2 x 32 GB) DDIMMs, 3200 MHz, 8 Gb DDR4 Memory (#EM6W)
- 128 GB (2 x 64 GB) DDIMMs, 3200 MHz, 16 Gb DDR4 Memory (#EM6X)
- 256 GB (2 x 128 GB) DDIMMs, 2666 MHz, 16 Gb DDR4 Memory (#EM6Y)

## Power S1014 Capacity Backup (CBU) for IBM i

The Power S1014 CBU designation enables you to temporarily transfer IBM i processor license entitlements and IBM i user license entitlements purchased for a primary machine to a secondary CBU-designated system for high availability (HA) and disaster recovery (DR) operations. Temporarily transferring these resources instead of purchasing them for your secondary system may result in significant savings. Processor activations cannot be transferred.

The CBU specify feature 0444 is available only as part of a new server purchase. Certain system prerequisites must be met, and system registration and approval are required before the CBU specify feature can be applied on a new server. Standard IBM i terms and conditions do not allow either IBM i processor license entitlements or IBM i user license entitlements to be transferred permanently or temporarily. These entitlements remain with the machine they were ordered for. When you register the association between your primary and on-order CBU system, you must agree to certain terms and conditions regarding the temporary transfer.

After a new CBU system is registered as a pair with the proposed primary system and the configuration is approved, you can temporarily move your optional IBM i processor license entitlement and IBM i user license entitlements from the primary system to the CBU system when the primary system is down or while the primary system processors are inactive. The CBU system can then support failover and role swapping for a full range of test, DR, and HA scenarios. Temporary entitlement transfer means that the entitlement is a property transferred from the primary system to the CBU system and may remain in use on the CBU system as long as the registered primary and CBU system are in deployment for the high availability or disaster recovery operation. The intent of the CBU offering is to enable regular role-swap operations.

Before you can temporarily transfer IBM i processor license entitlements from the registered primary system, you must have more than one IBM i processor license on the primary machine and at least one IBM i processor license on the CBU server. To be in compliance, the CBU will be configured in a such a manner that there will be no out-of-compliance messages prior to a failover. An activated processor must be available on the CBU server to use the transferred entitlement. You can then transfer any IBM i processor entitlements above the minimum one, assuming the total IBM i workload on the primary system does not require the IBM i entitlement you would like to transfer during the time of the transfer. During this temporary transfer, the CBU system's internal records of its total number of IBM i processor license entitlements are not updated, and you may see IBM i license noncompliance warning messages from the CBU system. These warning messages in this situation do not mean you are not in compliance. Prior to a temporary transfer, the CBU will be configured in such a manner that there will be no out of compliance warning messages.

Before you can temporarily transfer IBM i user entitlements, you must have more than the minimum number of IBM i user entitlements on a primary server. You can then transfer any IBM i user entitlements above the minimum, assuming the total IBM i users on the primary system do not require the IBM i entitlement you want to transfer during the time of the transfer.

The servers with P20 or higher software tiers do not have user entitlements that can be transferred, and only processor license entitlements can be transferred.

For a Power S1014 (with 8 cores) CBU, which is in the P10 software tier, the following are eligible primary systems:

- Power S1024 (9105-42A) with 48, 32, 24, or 12 cores
- Power S1022 (9105-22A) with 40, 32, 24, or 12 cores
- Power S1022s (9105-22B) with 16 or 8 cores
- Power S1014 (9105-41B) with 8 cores
- Power S924 (9009-42G)
- Power S924 (9009-42A)
- Power S922 (9009-22A)

- Power S922 (9009-22G) with minimum of 8 cores
- Power S914 (9009-41A) with minimum of 6 cores
- Power S914 (9009-41G) with minimum of 6 cores

The primary machine must be in the same enterprise as the CBU system. The IBM i Solution Editions are not eligible for CBU status.

For a Power S1014 (with 4 cores) CBU, which is in the P05 software tier, the following are eligible primary systems:

- Power S1014 (9105-41B) with maximum of 4 cores
- Power S914 (9009-41A) with maximum of 4 cores
- Power S914 (9009-41G) with maximum of 4 cores

### **Power S1014 software (SW) tiers for IBM i on 9105-41B**

- The four-core processor server (#EPG0, QPRCFEAT EPG0) is IBM i SW tier P05.
- The eight-core processor server (#EPG2, QPRCFEAT EPG2) is IBM i SW tier P10.

During the temporary transfer, the CBU system's internal records of its total number of IBM i processor entitlements are not updated, and you may see IBM i license noncompliance warning messages from the CBU system. Prior to a temporary transfer, the CBU will be configured in such a manner that there are no out of compliance warning messages.

If your primary or CBU machine is sold or discontinued from use, any temporary entitlement transfers must be returned to the machine on which they were originally acquired. For CBU registration, terms and conditions, and further information, see the [IBM Power Systems: Capacity Backup](#) website.

### **Four-core Power S1014 processor**

The four-core Power S1014 server offers clients running AIX, IBM i, or Linux an entry-level server based on Power10 technology. It uses a typical 3.0 to 3.90 GHz (max) Power10 Processor Card (#EPG0) with processor core activation feature (#EPFT). All four processor cores must be activated, but factory deconfiguration feature 2319 is supported. The chargeable feature EPFT is used for these activations. The four-core Power S1014 server with IBM i operating system supports a maximum system memory of 64 GB. The four-core Power S1014 server has five PCIe slots, four Gen5 capable.

There is no upgrade to increase the cores on this feature. This server supports AIX, IBM i, and Linux, but it is especially attractive to IBM i clients with its P05 software tier.

### **If IBM i is selected as an operating system**

The Capacity Backup option for IBM i (#0444) is supported. The four-core S1014 server supports a maximum of 6.4 TB of NVMe storage using two to eight mirrored NVMe PCIe devices and no SAS drives are allowed. This is true with the storage backplane option #EJ1Y. SAS drives located in feature code I/O drawers such as the EXP24SX (#ESLS) are not supported. Attachment to SANs is supported.

Maximum NVMe (U.2 and add-in card) capacities are restricted as showed in the table below:

<b>PCIe NVMe device capacity</b>	<b>System maximum</b>	<b>Notes</b>
800 GB	8	Mixing with other NVMe devices is allowed in pairs but cannot exceed the maximum capacity of 3.2 TB mirrored (total capacity 6.4 TB).

PCIe NVMe device capacity	System maximum	Notes
1.6 TB	4	Mixing with other NVMe devices is allowed in pairs but cannot exceed the maximum capacity of 3.2 TB mirrored (total capacity 6.4 TB).
3.2 TB	2	Mixing with other NVMe devices is not allowed.

**Note: Table 1 -IBM i PCIe NVMe maximum capacities**

The following NVMe devices for IBM i are supported in the NVMe bays of the four-core Power S1014 system unit:

**NVMe PCIe devices**

- 800 GB (#ES3A) - PCIe4 NVMe U.2 Enterprise module for IBM i
- 800 GB (#ES1K) - PCIe4 NVMe U.2 Enterprise module for IBM i
- 1.6 TB (#ES3C) - PCIe4 NVMe U.2 Enterprise module for IBM i
- 1.6 TB (#EC6V) - PCIe3 x8 NVMe Flash Adapter for IBM i
- 1.6 TB (#EC7K) - PCIe4 x8 NVMe Flash Adapter for IBM i
- 1.6 TB (#ES1F) - PCIe4 NVMe U.2 Enterprise module for IBM i
- 3.2 TB (#ES3E) - PCIe4 NVMe U.2 Enterprise module for IBM i
- 3.2 TB (#ES1H) - PCIe4 NVMe U.2 Enterprise module for IBM i
- 3.2 TB (#EC6X) - PCIe3 x8 NVMe Flash Adapter for IBM i
- 3.2 TB (#EC7M) - PCIe4 x8 NVMe Flash Adapter for IBM i

Other NVMe PCIe devices or SAS drives not in the list above are not supported.

The PCIe Expansion Drawer (#EMX0) and EXP24SX SAS Storage Enclosures (#ESLS) are not allowed with the four-core processor card (#EPG0) configuration Power S1014 server.

The CBU specify feature (#0444) is supported with the four-core processor card (#EPG0) in IBM i environments. With its P05 software, it can be paired with an Power9 server with P05 or P10 software tier.

**When AIX, Linux, or VIOS are selected and no IBM i is selected**

If AIX, Linux, or VIOS is the only operating system on the system, then all orderable and supported SAS drives and NVMe devices for AIX or Linux are allowed.

**IBM i Solution Edition for Power S1014**

The IBM i Solution Edition is designed to help you take advantage of the combined experience and expertise of IBM and Independent Software Vendors (ISVs) in building business value with your IT investments. A qualifying purchase of software, maintenance, services, or training for a participating ISV solution is required when purchasing an IBM i Solution Edition.

The Power S1014 Solution Edition feature 4928 supports four-core configurations. For a list of participating ISVs, registration form, and additional details, see the [IBM i Solution Editions](#) website.

**IBM i Express Edition for Power S1014**

IBM i clients acquiring a new four-core Power S1014 server can choose to use an IBM i Express Edition. New edition is similar to the edition provided with Power9 servers and offer specific licensing advantages that further improve the price and performance of the Power S1014 server when running IBM i. Feature EU2C can be included with a new four-core Power S1014 server.

## **Titanium power supply**

Titanium power supplies are designed to meet the latest efficiency regulations.

- Four titanium power supplies supporting a rack or tower/desk: 2+2 1200 watt 100--127/200--240 volt , or
- Two titanium power supplies supporting a rack: 1+1 1600 watt 200--240 volt

## **Redundant fans**

Redundant fans are standard.

## **Power cords**

Four power cords or two power cords are required. The Power S1014 server supports power cord 4.3-meter (14-foot), drawer to wall/IBM PDU (250V/10A) in the base shipment group. See the feature listing for other options.

## **PCIe slots**

The Power S1014 server has up to sixteen U.2 NVMe devices and up to five PCIe hot-plug slots with concurrent maintenance, providing excellent configuration flexibility and expandability. For more information about PCIe slots, see the rack-integrated system with I/O expansion drawer section below.

With one Power10 processor, five PCIe slots are available:

- One PCIe x16 Gen4 or x8 Gen5, full height, half length slot
- Three PCIe x8 (x16 connector) Gen5, full height, half length slots
- One PCIe x8 (x16 connector) Gen4, full height, half length slot

The x16 slots can provide up to twice the bandwidth of x8 slots because they offer twice as many PCIe lanes. PCIe Gen5 slots can support up to twice the bandwidth of a PCIe Gen4 slot, and PCIe Gen4 slots can support up to twice the bandwidth of a PCIe Gen3 slot, assuming an equivalent number of PCIe lanes.

At least one PCIe Ethernet adapter is required on the server by IBM to ensure proper manufacture, test, and support of the server. One of the x8 PCIe slots is used for this required adapter.

These servers are smarter about energy efficiency when cooling the PCIe adapter environment. They sense which IBM PCIe adapters are installed in their PCIe slots and, if an adapter requires higher levels of cooling, they automatically speed up fans to increase airflow across the PCIe adapters. Note that faster fans increase the sound level of the server. Higher wattage PCIe adapters include the PCIe3 SAS adapters and SSD/flash PCIe adapters (#EJ10, #EJ14, and #EJ0J).

## **NVMe drive slots, RDX bay, and storage backplane options**

NVMe SSDs, in the 15-millimeter carrier U.2 2.5-inch form factor, are used for internal storage in the Power S1014 system. The Power S1014 supports up to 16 NVMe U.2 devices when two storage backplanes with eight NVMe U.2 drive slots (#EJ1Y) are ordered. Both the 7-millimeter and 15-millimeter NVMe are supported in the 15-millimeter carrier. The Power S1014 also supports an internal RDX drive attached through the USB controller.

## **Cable management arm**

A folding arm is attached to the server's rails at the rear of the server. The server's power cords and the cables from the PCIe adapters or integrated ports run through the arm and into the rack. The arm enables the server to be pulled forward on its rails for service access to PCIe slots, memory, processors, and so on without disconnecting the cables from the server. Approximately 1 meter (3 feet) of cord or cable length is needed for the arm.



## **Integrated I/O ports**

There are two HMC ports, one USB 3.0 port internal only for RDX attach, and two USB 3.0 ports. The two HMC ports are RJ45, supporting 1 Gb Ethernet connections. The eBMC USB 2.0 port can be used for communication to an Uninterrupted Power Supply (UPS) or code update.

## **Rack-integrated system with I/O expansion drawer**

Regardless of the rack-integrated system to which the PCIe Gen3 I/O expansion drawer is attached, if the expansion drawer is ordered as factory integrated, the PDUs in the rack will be placed horizontally by default to enhance cable management.

Expansion drawers complicate the access to vertical PDUs if located at the same height. IBM recommends accommodating PDUs horizontally on racks containing one or more PCIe Gen3 I/O expansion drawers.

After the rack with expansion drawers is delivered, you can rearrange the PDUs from horizontal to vertical. However, the configurator will continue to consider the PDUs as being placed horizontally for the matter of calculating the free space still available in the rack.

Vertical PDUs can be used only if CSRP (#0469) is on the order. When specifying CSRP, you must provide the locations where the PCIe Gen3 I/O expansion drawers should be placed. Note that you must avoid locating the drawers adjacent to vertical PDU locations EIA 6 through 16 and 21 through 31.

The I/O expansion drawer can be migrated from a Power9 to a Power10 processor-based system. Only I/O cards supported on Power10 in the I/O expansion drawer are allowed. Clients migrating the I/O expansion drawer configuration might have one or two PCIe3 6-slot fanout modules (#EMXH) installed in the rear of the I/O expansion drawer.

For a 4U server configuration with one processor module, up to one I/O expansion drawer (#EMX0) and one fanout module (#EMXH) connected to one PCIe x16 to CXP Converter Card Adapter (#EJ2A) are supported. The other PCIe module bay must be populated by a filler module.

### *Limitations:*

- Mixing of prior PCIe3 fanout modules (#EMXF or #EMXG) with PCIe3 fanout modules (#EMXH) in the same I/O expansion drawer is not allowed.
- PCIe x16 to CXP Converter Card Adapter (#EJ2A) requires one PCIe3 x16 slot in system unit plus a pair of optical cables (such as feature ECCX or feature ECCY) or copper cables (such as feature ECCS).

## **RDX docking station**

The RDX docking station accommodates RDX removable disk cartridges of any capacity. The disk is in a protective rugged cartridge enclosure that plugs into the docking station. The docking station holds one removable rugged disk drive or cartridge at a time. The rugged removable disk cartridge and docking station performs saves, restores, and backups similar to a tape drive. This docking station can be an excellent entry capacity and performance option.

## **EXP24SX SAS storage enclosure**

The EXP24SX is a storage expansion enclosure with 24 2.5-inch SFF SAS bays. It supports up to 24 hot-plug HDDs or SSDs in only 2 EIA of space in a 19-inch rack. The EXP24SX SFF bays use SFF Gen2 (SFF-2) carriers or trays.

The EXP24SX drawer feature ESLS is supported on the Power10 scale-out servers by AIX, IBM i, Linux, and VIOS.

With AIX, Linux, or VIOS, the EXP24SX can be ordered with four sets of 6 bays (mode 4), two sets of 12 bays (mode 2), or one set of 24 bays (mode 1). With IBM

i, only one set of 24 bays (mode 1) is supported. It is possible to change the mode setting in the field using software commands along with a specifically documented procedure.

*Important:* When changing modes, a skilled, technically qualified person should follow the special documented procedures. Improperly changing modes can potentially destroy existing RAID sets, prevent access to existing data, or allow other partitions to access another partition's existing data. Hire an expert to assist if you are not familiar with this type of reconfiguration work.

Four mini-SAS HD ports on the EXP24SX are attached to PCIe Gen3 SAS adapters or attached to an integrated SAS controller in a Power10 scale-out server. The following PCIe3 SAS adapters support the EXP24SX:

- PCIe3 RAID SAS Adapter Quad-Port 6 Gb x8 (#EJ0J)
- PCIe3 12 GB Cache RAID Plus SAS Adapter Quad-Port 6 Gb x8 (#EJ14)
- PCIe3 LP RAID SAS Adapter Quad-Port 6 Gb x8 (#EJ0M)

Earlier-generation PCIe2 or PCIe1 SAS adapters are not supported with the EXP24SX.

The attachment between the EXP24SX and the PCIe3 SAS adapters or integrated SAS controllers is through SAS YO12 or X12 cables. X12 and YO12 cables are designed to support up to 12 Gb SAS. The PCIe Gen3 SAS adapters support up to 6 Gb throughput. The EXP24SX has been designed to support up to 12 Gb throughput if future SAS adapters support that capability. All ends of the YO12 and X12 cables have mini-SAS HD narrow connectors. Cable options are:

- X12 cable: 3-meter copper (#ECDJ), 4.5-meter optical (#ECDK), 10-meter optical (#ECDL)
- YO12 cables: 1.5-meter copper (#ECDT), 3-meter copper (#ECDU)
- 1M 100 GbE Optical Cable QSFP28 (AOC) (#EB5K)
- 1.5M 100 GbE Optical Cable QSFP28 (AOC) (#EB5L)
- 2M 100 GbE Optical Cable QSFP28 (AOC) (#EB5M)
- 3M 100 GbE Optical Cable QSFP28 (AOC) (#EB5R)
- 5M 100 GbE Optical Cable QSFP28 (AOC) (#EB5S)
- 10M 100 GbE Optical Cable QSFP28 (AOC) (#EB5T)
- 15M 100 GbE Optical Cable QSFP28 (AOC) (#EB5U)
- 20M 100 GbE Optical Cable QSFP28 (AOC) (#EB5V)
- 30M 100 GbE Optical Cable QSFP28 (AOC) (#EB5W)
- 50M 100 GbE Optical Cable QSFP28 (AOC) (#EB5X)

An AA12 cable interconnecting a pair of PCIe3 12 GB cache adapters (two #EJ14) is not attached to the EXP24SX. These higher-bandwidth cables could support 12 Gb throughput if future adapters support that capability. Copper feature ECE0 is 0.6 meters long, feature ECE3 is 3 meters long, and optical AA12 feature ECE4 is 4.5 meters long.

One no-charge specify code is used with each EXP24SX I/O Drawer (#ESLS) to communicate to IBM configurator tools and IBM Manufacturing which mode setting, adapter, and SAS cable are needed. With this specify code, no hardware is shipped. The physical adapters, controllers, and cables must be ordered with their own chargeable feature numbers. There are more technically supported configurations than are represented by these specify codes. IBM Manufacturing and IBM configurator tools such as e-config only understand and support EXP24SX configurations represented by these specify codes.

Specify code	Mode	Adapter/ Controller	Cable to drawer	Environment
EJW0	Mode 1	CEC SAS Ports	2 YO12 cables	AIX/IBM i/ Linux/VIOS

EJW1	Mode 1	One (unpaired) #EJ0J/#EJ0M	1 YO12 cable	AIX/IBM i/ Linux/VIOS
EJW2	Mode 1	Two (one pair) #EJ0J/#EJ0M	2 YO12 cables	AIX/IBM i/ Linux/VIOS
EJW3	Mode 2	Two (unpaired) #EJ0J/#EJ0M	2 X12 cables	AIX/Linux/ VIOS
EJW4	Mode 2	Four (two pair) #EJ0J/#EJ0M	2 X12 cables	AIX/Linux/ VIOS
EJW5	Mode 4	Four (unpaired) EJ0J/EJ0M	2 X12 cables	AIX/Linux/ VIOS
EJW6	Mode 2	One (unpaired) #EJ0J/#EJ0M	2 YO12 cables	AIX/Linux/ VIOS
EJW7	Mode 2	Two (unpaired) #EJ0J/#EJ0M	2 YO12 cables	AIX/Linux/ VIOS
EJWF	Mode 1	Two (one pair) #EJ14	2 YO12 cables	AIX/IBM i/ Linux/VIOS
EJWG	Mode 2	Two (one pair) #EJ14	2 X12 cables	AIX/Linux/ VIOS
EJWJ	Mode 2	Four (two pair) #EJ14	2 X12 cables	AIX/Linux/ VIOS

All of the above EXP24SX specify codes assume a full set of adapters and cables able to run all the SAS bays configured. The following specify codes communicate to IBM Manufacturing a lower-cost partial configuration is to be configured where the ordered adapters and cables can run only a portion of the SAS bays. The future MES addition of adapters and cables can enable the remaining SAS bays for growth. The following specify codes are used:

<b>Specify code</b>	<b>Mode</b>	<b>Adapter/ Controller</b>	<b>Cable to drawer</b>	<b>Environment</b>
EJWA (1/2 of EJW7)	Mode 2	One (unpaired) #EJ0J/#EJ0M	1 YO12 cables	AIX/Linux/ VIOS
EJWB (1/2 of EJW4)	Mode 2	Two (one pair) #EJ0J/#EJ0M	1 X12 cable	AIX/Linux/ VIOS
EJWC (1/4 of EJW5)	Mode 4	One (unpaired) #EJ0J/#EJ0M	1 X12 cable	AIX/Linux/ VIOS
EJWD (1/2 of EJW5)	Mode 4	Two (unpaired) #EJ0J/#EJ0M	1 X12 cable	AIX/Linux/ VIOS
EJWE (3/4 of EJW5)	Mode 4	Three (unpaired) #EJ0J/#EJ0M	2 X12 cables	AIX/Linux/ VIOS
EJWH (1/2 of EJWJ)	Mode 2	Two (one pair) #EJ14	1 X12 cable	AIX/Linux/ VIOS

An EXP24SX drawer in mode 4 can be attached to two or four SAS controllers and provide a great deal of configuration flexibility. For example, if using unpaired feature EJ0J adapters, these EJ0J adapters could be in the same server in the same partition, same server in different partitions, or even different servers.

An EXP24SX drawer in mode 2 has similar flexibility. If the I/O drawer is in mode 2, then half of its SAS bays can be controlled by one pair of PCIe3 SAS adapters, such as a 12 GB write-cache adapter pair (#EJ14), and the other half can be controlled by a different PCIe3 SAS 12 GB write cache adapter pair or by zero-write-cache PCIe3 SAS adapters.

Note that for simplicity, IBM configurator tools such as e-config assume that the SAS bays of an individual I/O drawer are controlled by one type of SAS adapter. As a client, you have more flexibility than e-config understands.

A maximum of 24 2.5-inch SSDs or 2.5-inch HDDs is supported in the EXP24SX 24 SAS bays. There can be no mixing of HDDs and SSDs in the same mode 1 drawer. HDDs and SSDs can be mixed in a mode 2 or mode 4 drawer, but they cannot be mixed within a logical split of the drawer. For example, in a mode 2 drawer with two sets of 12 bays, one set could hold SSDs and one set could hold HDDs, but you cannot mix SSDs and HDDs in the same set of 12 bays.

The indicator feature EHS2 helps IBM Manufacturing understand where SSDs are placed in a mode 2 or a mode 4 EXP24SX drawer. On one mode 2 drawer, use a quantity of one feature EHS2 to have SSDs placed in just half the bays, and use two EHS2 features to have SSDs placed in any of the bays. Similarly, on one mode 4 drawer, use a quantity of one, two, three, or four EHS2 features to indicate how many bays can have SSDs. With multiple EXP24SX orders, IBM Manufacturing will have to guess which quantity of feature ESH2 is associated with each EXP24SX. Consider using CSP (feature 0456) to reduce guessing.

Two-and-a-half-inch small form factor (SFF) SAS HDDs and SSDs are supported in the EXP24SX. All drives are mounted on Gen2 carriers or trays and thus named SFF-2 drives.

The EXP24SX drawer has many high-reliability design points:

- SAS drive bays that support hot swap
- Redundant and hot-plug-capable power and fan assemblies
- Dual line cords
- Redundant and hot-plug enclosure service modules (ESMs)
- Redundant data paths to all drives
- LED indicators on drives, bays, ESMs, and power supplies that support problem identification
- Through the SAS adapters or controllers, drives that can be protected with RAID and mirroring and hot-spare capability

Order two ESLA features for AC power supplies. The enclosure is shipped with adjustable depth rails and can accommodate 19-inch rack depths from 59.5--75 centimeters (23.4--29.5 inches). Slot filler panels are provided for empty bays when initially shipped from IBM.

### **PCIe Gen3 I/O drawer cabling option**

A copper cabling option (#ECCS) is available for the scale-out servers. The cable option offers a much lower-cost connection between the server and the PCIe Gen3 I/O drawer fanout modules. The currently available Active Optical Cable (AOC) offers much longer length cables, providing rack placement flexibility. Plus, AOC cables are much thinner and have tighter bend radius and thus are much easier to cable in the rack.

The 3M Copper CXP Cable Pair (#ECCS) has the same performance and same reliability, availability, and serviceability (RAS) characteristics as the AOC cables. One copper cable length of 3 meters is offered. Note that the cable management arm of the scale-out servers requires about 1 meter of cable.

Like the AOC cable pair, the copper pair is cabled in the same manner. One cable attaches to the top CXP port in the PCIe adapter in the x16 PCIe slot in the server system unit and then attaches to the top CXP port in the fanout module in the I/O drawer. Its cable pair attaches to the bottom CXP port of the same PCIe adapter and to the bottom CXP port of the same fanout module. Note that the PCIe adapter providing the CXP ports on the server was named a PCIe3 "Optical" Cable Adapter. In hindsight, this naming was unfortunate as the adapter's CXP ports are not unique to optical. But at the time, optical cables were the only connection option planned.

Copper and AOC cabling can be mixed on the same server. However, they cannot be mixed on the same PCIe Gen3 I/O drawer or mixed on the same fanout module.

Copper cables have the same operating system software prerequisites as AOC cables.

## **Racks**

The Power S1014 server is designed to fit a standard 19-inch rack. IBM Development has tested and certified the system in the IBM Enterprise Rack (7965-S42). The 7965-S42 rack is a two-meter enterprise rack that provides 42U or 42 EIA of space. You can choose to place the server in other racks if you are confident those racks have the strength, rigidity, depth, and hole pattern characteristics required. You should work with IBM Service to determine the appropriateness of other racks.

It is highly recommended that the Power S1014 server be ordered with an IBM 42U Enterprise Rack (7965-S42). An initial system order is placed in a 7965-S42 rack. This is done to ease and speed client installation, provide a more complete and higher quality environment for IBM Manufacturing system assembly and testing, and provide a more complete shipping package.

*Recommendation:* The 7965-S42 rack has optimized cable routing, so all 42U may be populated with equipment.

The 7965-S42 rack does not need 2U on either the top or bottom for cable egress.

With the two-meter 7965-S42 rack, a rear rack extension of 12.7 centimeters (5 inches) feature ECRK provides space to hold cables on the side of the rack and keep the center area clear for cooling and service access.

*Recommendation:* Include the above extensions when approximately more than 16 I/O cables per side are present or may be added in the future; when using the short-length, thinner SAS cables; or when using thinner I/O cables, such as Ethernet. If you use longer-length, thicker SAS cables, fewer cables will fit within the rack.

SAS cables are most commonly found with multiple EXP24SX SAS Drawers (#ESLS) driven by multiple PCIe SAS adapters. For this reason, it is good practice to keep multiple EXP24SX drawers in the same rack as the PCIe I/O drawer or in a separate rack close to the PCIe I/O drawer, using shorter, thinner SAS cables. The feature ECRK extension can be good to use even with smaller numbers of cables because it enhances the ease of cable management with the extra space it provides.

Multiple service personnel are required to manually remove or insert a system node drawer into a rack, given its dimensions and weight and content.

*Recommendation:* To avoid any delay in service, obtain an optional lift tool (#EB3Z). A lighter, lower-cost lift tool is FC EB3Z<sup>3</sup> (lift tool) and EB4Z<sup>3</sup> (angled shelf kit for lift tool). The EB3Z lift tool provides a hand crank to lift and position a server up to 400 pounds. Note that a single system node can weigh up to 86.2 kilograms (190 pounds).

<sup>3</sup> Features EB3Z and EB4Z are not available to order in Albania, Bahrain, Bulgaria, Croatia, Egypt, Greece, Jordan, Kuwait, Kosovo, Montenegro, Morocco, Oman, UAE, Qatar, Saudi Arabia, Serbia, Slovakia, Slovenia, Taiwan, and Ukraine.

## **High-function (switched and monitored) PDUs plus**

### **Hardware:**

- IEC 62368-1 and IEC 60950 safety standard
- A new product safety approval
- No China 5000-meter altitude or tropical restrictions
- Detachable inlet for 3-phase delta-wired PDU with 30A, 50A, and 60A wall plugs

- IBM Technology and Qualification approved components, such as anti-sulfur resistors (ASRs)
- Ethernet 10/100/1000 Mb/s

**Software:**

- Internet Protocol (IP) version 4 and IPv6 support
- Secure Shell (SSH) protocol command line
- Ability to change passwords over a network

<b>PDU description</b>	<b>208 V 3-phase delta</b>	<b>200 V--240 V 1-phase or 3-phase wye</b>
High-Function 12xC13	#ECJQ/#ECJP	#ECJN/#ECJM
High-Function 9xC19	#ECJL/#ECJK	#ECJJ/#ECJG

These PDUs can be mounted vertically in rack-side pockets or they can be mounted horizontally. If mounted horizontally, they each use one EIA (1U) of rack space. See feature EPTH for horizontal mounting hardware, which is used when IBM Manufacturing doesn't automatically factory-install the PDU. Two RJ45 ports on the front of the PDU enable you to monitor each receptacle's electrical power usage and to remotely switch any receptacle on or off.

*Recommendation:* The PDU is shipped with a generic PDU password. IBM strongly urges you to change it upon installation.

Existing and new high-function (switched and monitored) PDUs have the same physical dimensions. New high-function (switched and monitored) PDUs can be supported in the same racks as existing PDUs. Mixing of PDUs in a rack on new orders is not allowed.

Also, all factory-integrated orders must have the same PDU line cord.

The PDU features ECJQ/ECJP and ECJL/ECJK with the Amphenol inlet connector require new PDU line cords:

- #ECJ5 - 4.3-meter (14-foot) PDU to Wall 3PH/24A 200--240V Delta-wired Power Cord
- #ECJ7 - 4.3-meter (14-foot) PDU to Wall 3PH/48A 200--240V Delta-wired Power Cord

No pigtail (like #ELC0) is available because an Amphenol male inline connector is unavailable.

The PDU features ECJJ/ECJG and ECJN/ECJM with the UTG624-7SKIT4/5 inlet connector use the existing PDU line cord features 6653, 6667, 6489, 6654, 6655, 6656, 6657, 6658, 6491, or 6492.

**Reliability, Availability, and Serviceability**

**Reliability, fault tolerance, and data correction**

The reliability of systems starts with components, devices, and subsystems that are designed to be highly reliable. During the design and development process, subsystems go through rigorous verification and integration testing processes. During system manufacturing, systems go through a thorough testing process to help ensure the highest level of product quality.

The Power10 processor-based scale-out systems come with the following RAS characteristics:

- Power10 processor RAS
- Open Memory Interface, DDIMMs RAS
- Enterprise BMC service processor for system management and Service
- AMM for Hypervisor

- NVMe drives concurrent maintenance
- PCIe adapters concurrent maintenance
- Redundant and hot-plug cooling
- Redundant and hot-plug power
- Light path enclosure and FRU LEDs
- Service and FRU labels
- Client or IBM install
- Proactive support and service -- call home
- Client or IBM service

### **Service processor**

Power10 scale-out 2S-4S systems come with a redesigned service processor based on a Baseboard Management Controller (BMC) design with firmware that is accessible through open-source industry standard APIs, such as Redfish. An upgraded ASMI web browser user interface preserves the required RAS functions while allowing the user to perform tasks in a more intuitive way.

Diagnostic monitoring of recoverable error from the processor chipset is performed on the system processor itself, while the fatal diagnostic monitoring of the processor chipset is performed by the service processor. It runs on its own power boundary and does not require resources from a system processor to be operational to perform its tasks.

The service processor supports surveillance of the connection to the HMC and to the system firmware (hypervisor). It also provides several remote power control options, environmental monitoring, reset, restart, remote maintenance, and diagnostic functions, including console mirroring. The BMC service processors menus (ASMI) can be accessed concurrently during system operation, allowing nondisruptive abilities to change system default parameters, view and download error logs, check system health.

Redfish, an industry standard for server management, enables the Power servers to be managed individually or in a large data center. Standard functions such as inventory, event logs, sensors, dumps, and certificate management are all supported with Redfish. In addition, new user management features support multiple users and privileges on the BMC via Redfish or ASMI. User management via LDAP is also supported. The Redfish events service provides a means for notification of specific critical events such that actions can be taken to correct issues. The Redfish telemetry service provides access to a wide variety of data (eg. power consumption, ambient, core, DIMM and I/O temperatures, etc) that can be streamed on periodic intervals.

### **Mutual surveillance**

The service processor monitors the operation of the firmware during the boot process and also monitors the hypervisor for termination. The hypervisor monitors the service processor and reports a service reference code when it detects surveillance loss. In the PowerVM environment, it will perform a reset/reload if it detects the loss of the service processor.

### **Environmental monitoring functions**

The Power family does ambient and over temperature monitoring and reporting. It also adjusts fan speeds automatically based on those temperatures.

### **Memory subsystem RAS :**

The Power10 scale-out system introduces a new 2U tall DDIMM, which has new open CAPI memory interface known as OMI for resilient and fast communication to the processor. This new memory subsystem design delivers solid RAS as described below.

## **Power10 processor functions**

As in Power9, the Power10 processor has the ability to do processor instruction retry for some transient errors and core-contained checkstop for certain solid faults. The fabric bus design with CRC and retry persists in Power10 where a CRC code is used for checking data on the bus and has an ability to retry a faulty operation.

### **Cache availability**

The L2/L3 caches in the Power10 processor in the memory buffer chip are protected with double-bit detect, single-bit correct error detection code (ECC). In addition, a threshold of correctable errors detected on cache lines can result in the data in the cache lines being purged and the cache lines removed from further operation without requiring a reboot in the PowerVM environment.

Modified data would be handled through Special Uncorrectable Error handling. L1 data and instruction caches also have a retry capability for intermittent errors and a cache set delete mechanism for handling solid failures.

### **Special Uncorrectable Error handling**

Special Uncorrectable Error (SUE) handling prevents an uncorrectable error in memory or cache from immediately causing the system to terminate. Rather, the system tags the data and determines whether it will ever be used again. If the error is irrelevant, it will not force a check stop. When and if data is used, I/O adapters controlled by an I/O hub controller would freeze if data were transferred to an I/O device, otherwise, termination may be limited to the program/kernel or if the data is not owned by the hypervisor.

### **PCI extended error handling**

PCI extended error handling (EEH)-enabled adapters respond to a special data packet generated from the affected PCI slot hardware by calling system firmware, which will examine the affected bus, allow the device driver to reset it, and continue without a system reboot. For Linux, EEH support extends to the majority of frequently used devices, although some third-party PCI devices may not provide native EEH support.

### **Uncorrectable error recovery**

When the auto-restart option is enabled, the system can automatically restart following an unrecoverable software error, hardware failure, or environmentally induced (AC power) failure.

### **Serviceability**

The purpose of serviceability is to efficiently repair the system while attempting to minimize or eliminate impact to system operation. Serviceability includes system installation, MES (system upgrades/downgrades), and system maintenance/repair. Depending upon the system and warranty contract, service may be performed by the client, an IBM representative, or an authorized warranty service provider.

The serviceability features delivered in this system help provide a highly efficient service environment by incorporating the following attributes:

- Design for SSR setup, install, and service
- Error Detection and Fault Isolation (ED/FI)
- First Failure Data Capture (FFDC)
- Light path service indicators
- Service and FRU labels available on the system
- Service procedures documented in IBM Documentation or available through the HMC



- Automatic reporting of serviceable events to IBM through the Electronic Service Agent Call Home application

## **Service environment**

In the PowerVM environment, the HMC is a dedicated server that provides functions for configuring and managing servers for either partitioned or full-system partition using a GUI or command-line interface (CLI) or REST API. An HMC attached to the system enables support personnel (with client authorization) to remotely, or locally to the physical HMC that is in proximity of the server being serviced, log in to review error logs and perform remote maintenance if required.

The Power10 processor-based systems support several service environments:

- Attachment to one or more HMCs or vHMCs is a supported option by the system with PowerVM. This is the default configuration for servers supporting logical partitions with dedicated or virtual I/O. In this case, all servers have at least one logical partition.
- No HMC. There are two service strategies for non-HMC systems.
  - Full-system partition with PowerVM: A single partition owns all the server resources and only one operating system may be installed. The primary service interface is through the operating system and the service processor.
  - Partitioned system with NovaLink: In this configuration, the system can have more than one partition and can be running more than one operating system. The primary service interface is through the service processor.

## **Service interface**

Support personnel can use the service interface to communicate with the service support applications in a server using an operator console, a graphical user interface on the management console or service processor, or an operating system terminal. The service interface helps to deliver a clear, concise view of available service applications, helping the support team to manage system resources and service information in an efficient and effective way. Applications available through the service interface are carefully configured and placed to give service providers access to important service functions.

Different service interfaces are used, depending on the state of the system, hypervisor, and operating environment. The primary service interfaces are:

- LEDs
- Operator panel
- BMC Service Processor menu
- Operating system service menu
- Service Focal Point on the HMC or vHMC with PowerVM

In the light path LED implementation, the system can clearly identify components for replacement by using specific component-level LEDs and can also guide the servicer directly to the component by signaling (turning on solid) the enclosure fault LED, and component FRU fault LED. The servicer can also use the identify function to blink the FRU-level LED. When this function is activated, a roll-up to the blue enclosure identify will occur to identify an enclosure in a rack. These enclosure LEDs will turn on solid and can be used to follow the light path from the enclosure and down to the specific FRU in the PowerVM environment.

## **First Failure Data Capture and error data analysis**

First Failure Data Capture (FFDC) is a technique that helps ensure that when a fault is detected in a system, the root cause of the fault will be captured without the need to re-create the problem or run any sort of extending tracing or diagnostics

program. For the vast majority of faults, a good FFDC design means that the root cause can also be detected automatically without servicer intervention.

FFDC information, error data analysis, and fault isolation are necessary to implement the advanced serviceability techniques that enable efficient service of the systems and to help determine the failing items.

In the rare absence of FFDC and Error Data Analysis, diagnostics are required to re-create the failure and determine the failing items.

## **Diagnostics**

General diagnostic objectives are to detect and identify problems so they can be resolved quickly. Elements of IBM's diagnostics strategy include:

- Provide a common error code format equivalent to a system reference code with PowerVM, system reference number, checkpoint, or firmware error code.
- Provide fault detection and problem isolation procedures. Support remote connection ability to be used by the IBM Remote Support Center or IBM Designated Service.
- Provide interactive intelligence within the diagnostics with detailed online failure information while connected to IBM's back-end system.

## **Automatic diagnostics**

The processor and memory FFDC technology is designed to perform without the need for re-create diagnostics nor require user intervention. Solid and intermittent errors are designed to be correctly detected and isolated at the time the failure occurs. Runtime and boot-time diagnostics fall into this category.

## **Standalone diagnostics**

As the name implies, standalone or user-initiated diagnostics requires user intervention. The user must perform manual steps, including:

- Booting from the diagnostics CD, DVD, USB, or network
- Interactively selecting steps from a list of choices

## **Concurrent maintenance**

The determination of whether a firmware release can be updated concurrently is identified in the readme information file that is released with the firmware. An HMC is required for the concurrent firmware update with PowerVM. In addition, concurrent maintenance of PCIe adapters and NVMe drives are supported with PowerVM. Power supplies, fans, and op panel LCD are hot pluggable.

## **Service labels**

Service providers use these labels to assist them in performing maintenance actions. Service labels are found in various formats and positions and are intended to transmit readily available information to the servicer during the repair process. Following are some of these service labels and their purpose:

- Location diagrams: Location diagrams are located on the system hardware, relating information regarding the placement of hardware components. Location diagrams may include location codes, drawings of physical locations, concurrent maintenance status, or other data pertinent to a repair. Location diagrams are especially useful when multiple components such as DIMMs, processors, fans, adapter cards, and power supplies are installed.
- Remove/replace procedures: Service labels that contain remove/replace procedures are often found on a cover of the system or in other spots accessible to the servicer. These labels provide systematic procedures, including diagrams detailing how to remove or replace certain serviceable hardware components.

- Arrows: Numbered arrows are used to indicate the order of operation and the serviceability direction of components. Some serviceable parts such as latches, levers, and touch points need to be pulled or pushed in a certain direction and in a certain order for the mechanical mechanisms to engage or disengage. Arrows generally improve the ease of serviceability.

## **QR labels**

QR labels are placed on the system to provide access to key service functions through a mobile device. When the QR label is scanned, it will go to a landing page for Power10 processor-based systems which contains each MTM service functions of interest while physically located at the server. These include things such as installation and repair instructions, reference code look up, and so on.

## **Packaging for service**

The following service features are included in the physical packaging of the systems to facilitate service:

- Color coding (touch points): Blue-colored touch points delineate touchpoints on service components where the component can be safely handled for service actions such as removal or installation.
- Tool-less design: Selected IBM systems support tool-less or simple tool designs. These designs require no tools or simple tools such as flathead screw drivers to service the hardware components.
- Positive retention: Positive retention mechanisms help to assure proper connections between hardware components such as cables to connectors, and between two cards that attach to each other. Without positive retention, hardware components run the risk of becoming loose during shipping or installation, preventing a good electrical connection. Positive retention mechanisms like latches, levers, thumbscrews, pop Nylatches (U-clips), and cables are included to help prevent loose connections and aid in installing (seating) parts correctly. These positive retention items do not require tools.

## **Error handling and reporting**

In the event of system hardware or environmentally induced failure, the system runtime error capture capability systematically analyzes the hardware error signature to determine the cause of failure. The analysis result will be stored in system NVRAM. When the system can be successfully restarted either manually or automatically, or if the system continues to operate, the error will be reported to the operating system. Hardware and software failures are recorded in the system log filesystem. When an HMC is attached in the PowerVM environment, an ELA routine analyzes the error, forwards the event to the Service Focal Point (SFP) application running on the HMC, and notifies the system administrator that it has isolated a likely cause of the system problem. The service processor event log also records unrecoverable checkstop conditions, forwards them to the SFP application, and notifies the system administrator.

The system has the ability to call home through the operating system to report platform-recoverable errors and errors associated with PCI adapters/devices.

In the HMC-managed environment, a call home service request will be initiated from the HMC and the pertinent failure data with service parts information and part locations will be sent to an IBM service organization. Client contact information and specific system-related data such as the machine type, model, and serial number, along with error log data related to the failure, are sent to IBM Service.

## **Live Partition Mobility**

With PowerVM Live Partition Mobility (LPM), users can migrate an AIX, IBM I, or Linux VM partition running on one Power partition system to another Power system without disrupting services. The migration transfers the entire system environment, including processor state, memory, attached virtual devices, and

connected users. It provides continuous operating system and application availability during planned partition outages for repair of hardware and firmware faults. The Power10 systems using Power10-technology support secure LPM, whereby the VM image is encrypted and compressed prior to transfer. Secure LPM uses on-chip encryption and compression capabilities of the Power10 processor for optimal performance.

## **Call home**

*Call home* refers to an automatic or manual call from a client location to the IBM support structure with error log data, server status, or other service-related information. Call home invokes the service organization in order for the appropriate service action to begin. Call home can be done through the Electronic Service Agent (ESA) imbedded in the HMC or through a version of ESA imbedded in the operating systems for non-HMC-managed or A version of ESA that runs as a standalone call home application. While configuring call home is optional, clients are encouraged to implement this feature in order to obtain service enhancements such as reduced problem determination and faster and potentially more accurate transmittal of error information. In general, using the call home feature can result in increased system availability. See the next section for specific details on this application.

## **IBM Electronic Services**

Electronic Service Agent and Client Support Portal (CSP) comprise the IBM Electronic Services solution, which is dedicated to providing fast, exceptional support to IBM clients. IBM Electronic Service Agent is a no-charge tool that proactively monitors and reports hardware events such as system errors and collects hardware and software inventory. Electronic Service Agent can help focus on the client's company business initiatives, save time, and spend less effort managing day-to-day IT maintenance issues. In addition, Call Home Cloud Connect Web and Mobile capability extends the common solution and offers IBM Systems related support information applicable to Servers and Storage.

Details are available here: <https://clientvantage.ibm.com/channel/ibm-call-home-connect>.

System configuration and inventory information collected by Electronic Service Agent also can be used to improve problem determination and resolution between the client and the IBM support team. As part of an increased focus to provide even better service to IBM clients, Electronic Service Agent tool configuration and activation comes standard with the system. In support of this effort, a HMC External Connectivity security whitepaper has been published, which describes data exchanges between the HMC and the IBM Service Delivery Center (SDC) and the methods and protocols for this exchange. To read the whitepaper and prepare for Electronic Service Agent installation, see the "Security" section at the [IBM Electronic Service Agent](#).

## **Benefits: increased uptime**

Electronic Service Agent is designed to enhance the warranty and maintenance service by potentially providing faster hardware error reporting and uploading system information to IBM Support. This can optimize the time monitoring the symptoms, diagnosing the error, and manually calling IBM Support to open a problem record. And 24x7 monitoring and reporting means no more dependency on human intervention or off-hours client personnel when errors are encountered in the middle of the night.

**Security:** The Electronic Service Agent tool is designed to help secure the monitoring, reporting, and storing of the data at IBM. The Electronic Service Agent tool is designed to help securely transmit through the internet (HTTPS) to provide clients a single point of exit from their site. Initiation of communication is one way. Activating Electronic Service Agent does not enable IBM to call into a client's system.

For additional information, see the [IBM Electronic Service Agent](#) website.

## **More accurate reporting**

Because system information and error logs are automatically uploaded to the IBM Support Center in conjunction with the service request, clients are not required to find and send system information, decreasing the risk of misreported or misdiagnosed errors. Once inside IBM, problem error data is run through a data knowledge management system, and knowledge articles are appended to the problem record.

### Client Support Portal

Client Support Portal is a single internet entry point that replaces the multiple entry points traditionally used to access IBM Internet services and support. This web portal enables you to gain easier access to IBM resources for assistance in resolving technical problems.

This web portal provides valuable reports of installed hardware and software using information collected from the systems by IBM Electronic Service Agent. Reports are available for any system associated with the client's IBM ID.

For more information on how to utilize client support portal, visit the following website or contact an [IBM Systems Services Representative](#).

### Section 508 of the US Rehabilitation Act

---

The product or offering is capable as of the planned availability date, when used in accordance with associated IBM documentation, of satisfying the applicable standards, including the Worldwide Consortium Web Content Accessibility Guidelines, European Standard EN 301 349, and US Section 508, provided that any assistive technology used with the product properly interoperates with it. An Accessibility Conformance Statement can be requested on the [Product accessibility information](#) website.

---

### Reference information

---

For additional information about IBM Power Expert Care extends services and support options, see announcement [622-006](#), dated July 12, 2022.

For more information on Power10 scale-out servers, see Hardware Announcements:

[122-025](#), dated July 12, 2022; [122-026](#), dated July 12, 2022; [122-027](#), dated July 12, 2022; [122-029](#), dated July 12, 2022; [122-030](#), dated July 12, 2022.

---

### Product number

---

The following are newly announced features on the specific models of the IBM Power 9105 machine type:

Description	Machine type	Model number	Feature number
IBM Power S1014	9105	41B	
EMEA Bulk MES Indicator	9105	41B	0004
One CSC Billing Unit	9105	41B	0010
Ten CSC Billing Units	9105	41B	0011
Mirrored System Disk Level, Specify Code	9105	41B	0040
Device Parity Protection-All, Specify Code	9105	41B	0041

Device Parity RAID-6 All, Specify Code	9105	41B	0047
RISC-to-RISC Data Migration	9105	41B	0205
AIX Partition Specify	9105	41B	0265
Linux Partition Specify	9105	41B	0266
IBM i Operating System Partition Specify	9105	41B	0267
Specify Custom Data Protection	9105	41B	0296
Mirrored Level System Specify Code	9105	41B	0308
RAID Hot Spare Specify	9105	41B	0347
CBU Specify	9105	41B	0444
Customer Specified Placement	9105	41B	0456
Load Source Not in CEC	9105	41B	0719
Fiber Channel SAN Load Source Specify	9105	41B	0837
US TAA Compliance Indicator	9105	41B	0983
Product assembled in USA manufacturing plant	9105	41B	0984
USB 500 GB Removable Disk Drive	9105	41B	1107
Custom Service Specify, Rochester Minn, USA	9105	41B	1140
300GB 15k RPM SAS SFF-2 Disk Drive (AIX/Linux)	9105	41B	1953
600GB 10k RPM SAS SFF-2 HDD for AIX/Linux	9105	41B	1964
Primary OS - IBM i	9105	41B	2145
Primary OS - AIX	9105	41B	2146
Primary OS - Linux	9105	41B	2147
Factory Deconfiguration of 1-core	9105	41B	2319
1.8 M (6-ft) Extender Cable for Displays (15-pin D-shell to 15-pin D-shell)	9105	41B	4242
Rack Integration Services	9105	41B	4649
Rack Indicator- Not Factory Integrated	9105	41B	4650
Rack Indicator, Rack #1	9105	41B	4651
Rack Indicator, Rack #2	9105	41B	4652
Rack Indicator, Rack #3	9105	41B	4653
Rack Indicator, Rack #4	9105	41B	4654
Rack Indicator, Rack #5	9105	41B	4655
Rack Indicator, Rack #6	9105	41B	4656
Rack Indicator, Rack #7	9105	41B	4657
Rack Indicator, Rack #8	9105	41B	4658
Rack Indicator, Rack #9	9105	41B	4659
Rack Indicator, Rack #10	9105	41B	4660
Rack Indicator, Rack #11	9105	41B	4661
Rack Indicator, Rack #12	9105	41B	4662
Rack Indicator, Rack #13	9105	41B	4663
Rack Indicator, Rack #14	9105	41B	4664
Rack Indicator, Rack #15	9105	41B	4665
Rack Indicator, Rack #16	9105	41B	4666
Solution Edition for IBM i (4-core)	9105	41B	4928
Software Preload Required	9105	41B	5000
PowerVM Enterprise Edition	9105	41B	5228
Sys Console On HMC	9105	41B	5550
System Console-Ethernet LAN adapter	9105	41B	5557
PCIe2 4-port 1GbE Adapter	9105	41B	5899
Power Cord 4.3m (14-ft), Drawer to IBM PDU (250V/10A)	9105	41B	6458
Power Cord 4.3m (14-ft), Drawer To OEM PDU (125V, 15A)	9105	41B	6460
Power Cord 4.3m (14-ft), Drawer to wall/OEM PDU (250V/15A) U. S.	9105	41B	6469
Power Cord 1.8m (6-ft), Drawer to wall (125V/15A)	9105	41B	6470
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU (250V/10A)	9105	41B	6471
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU (250V/16A)	9105	41B	6472
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU (250V/10A)	9105	41B	6473
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU, (250V/13A)	9105	41B	6474
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU, (250V/16A)	9105	41B	6475
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU,	9105	41B	6475

(250V/10A)	9105	41B	6476
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU, (250V/16A)	9105	41B	6477
Power Cord 2.7 M(9-foot), To wall/OEM PDU, (250V, 16A)	9105	41B	6478
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU, (125V/15A or 250V/10A )	9105	41B	6488
4.3m (14-Ft) 3PH/32A 380-415V Power Cord	9105	41B	6489
4.3m (14-Ft) 1PH/63A 200-240V Power Cord	9105	41B	6491
4.3m (14-Ft) 1PH/60A (48A derated) 200-240V Power Cord	9105	41B	6492
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU, (250V/10A)	9105	41B	6493
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU, (250V/10A)	9105	41B	6494
Power Cord 2.7M (9-foot), To wall/OEM PDU, (250V, 10A)	9105	41B	6496
Power Cable - Drawer to IBM PDU, 200-240V/10A	9105	41B	6577
Power Cord 2.7M (9-foot), To wall/OEM PDU, (125V, 15A)	9105	41B	6651
4.3m (14-Ft) 3PH/16A 380-415V Power Cord	9105	41B	6653
4.3m (14-Ft) 1PH/30A (24A derated) Power Cord	9105	41B	6654
4.3m (14-Ft) 1PH/30A (24A derated) WR Power Cord	9105	41B	6655
4.3m (14-Ft) 1PH/32A Power Cord	9105	41B	6656
4.3m (14-Ft) 1PH/32A Power Cord-Australia	9105	41B	6657
4.3m (14-Ft) 1PH/30A (24A derated) Power Cord-Korea	9105	41B	6658
Power Cord 2.7M (9-foot), To wall/OEM PDU, (250V, 15A)	9105	41B	6659
Power Cord 4.3m (14-ft), Drawer to wall/OEM PDU (125V/15A)	9105	41B	6660
Power Cord 2.8m (9.2-ft), Drawer to IBM PDU, (250V/10A)	9105	41B	6665
4.3m (14-Ft) 3PH/32A 380-415V Power Cord-Australia	9105	41B	6667
Power Cord 4.3M (14-foot), Drawer to OEM PDU, (250V, 15A)	9105	41B	6669
Power Cord 2.7M (9-foot), Drawer to IBM PDU, 250V/10A	9105	41B	6671
Power Cord 2M (6.5-foot), Drawer to IBM PDU, 250V/10A	9105	41B	6672
Power Cord 2.7m (9-ft), Drawer to wall/OEM PDU, (250V/10A)	9105	41B	6680
Intelligent PDU+, 1 EIA Unit, Universal UTG0247 Connector	9105	41B	7109
Power Distribution Unit	9105	41B	7188
Power Distribution Unit (US) - 1 EIA Unit, Universal, Fixed Power Cord	9105	41B	7196
Order Routing Indicator- System Plant	9105	41B	9169
Language Group Specify - US English	9105	41B	9300
New AIX License Core Counter	9105	41B	9440
New IBM i License Core Counter	9105	41B	9441
New Red Hat <sup>(R)</sup> License Core Counter	9105	41B	9442
New SUSE License Core Counter	9105	41B	9443
Other AIX License Core Counter	9105	41B	9444
Other Linux License Core Counter	9105	41B	9445
3rd Party Linux License Core Counter	9105	41B	9446
VIOS Core Counter	9105	41B	9447
Other License Core Counter	9105	41B	9449
Month Indicator	9105	41B	9461
Day Indicator	9105	41B	9462
Hour Indicator	9105	41B	9463
Minute Indicator	9105	41B	9464
Qty Indicator	9105	41B	9465
Countable Member Indicator	9105	41B	9466
Language Group Specify - Dutch	9105	41B	9700
Language Group Specify - French	9105	41B	9703
Language Group Specify - German	9105	41B	9704
Language Group Specify - Polish	9105	41B	9705
Language Group Specify - Norwegian	9105	41B	9706
Language Group Specify - Portuguese	9105	41B	9707
Language Group Specify - Spanish	9105	41B	9708
Language Group Specify - Italian	9105	41B	9711

Language Group Specify - Canadian French	9105	41B	9712
Language Group Specify - Japanese	9105	41B	9714
Language Group Specify - Traditional Chinese (Taiwan)	9105	41B	9715
Language Group Specify - Korean	9105	41B	9716
Language Group Specify - Turkish	9105	41B	9718
Language Group Specify - Hungarian	9105	41B	9719
Language Group Specify - Slovakian	9105	41B	9720
Language Group Specify - Russian	9105	41B	9721
Language Group Specify - Simplified Chinese (PRC)	9105	41B	9722
Language Group Specify - Czech	9105	41B	9724
Language Group Specify - Romanian	9105	41B	9725
Language Group Specify - Croatian	9105	41B	9726
Language Group Specify - Slovenian	9105	41B	9727
Language Group Specify - Brazilian Portuguese	9105	41B	9728
Language Group Specify - Thai	9105	41B	9729
10m (30.3-ft) - IBM MTP 12 strand cable for 40/100G transceivers	9105	41B	EB2J
30m (90.3-ft) - IBM MTP 12 strand cable for 40/100G transceivers	9105	41B	EB2K
AC Titanium Power Supply - 1600W for Server (200-240 VAC)	9105	41B	EB3S
AC Titanium Power Supply - 1200W for Server (100-127V/200-240V)	9105	41B	EB3W
Lift tool based on GenieLift GL-8 (standard)	9105	41B	EB3Z
10GbE Optical Transceiver SFP+ SR	9105	41B	EB46
25GbE Optical Transceiver SFP28	9105	41B	EB47
1GbE Base-T Transceiver RJ45	9105	41B	EB48
QSFP28 to SFP28 Connector	9105	41B	EB49
0.5m SFP28/25GbE copper Cable	9105	41B	EB4J
1.0m SFP28/25GbE copper Cable	9105	41B	EB4K
2.0m SFP28/25GbE copper Cable	9105	41B	EB4M
2.0m QSFP28/100GbE copper split Cable to SFP28 4x25GbE	9105	41B	EB4P
Service wedge shelf tool kit for EB3Z	9105	41B	EB4Z
QSFP+ 40GbE Base-SR4 Transceiver	9105	41B	EB57
100GbE Optical Transceiver QSFP28	9105	41B	EB59
1.0M 100GbE Copper Cable QSFP28	9105	41B	EB5K
1.5M 100GbE Copper Cable QSFP28	9105	41B	EB5L
2.0M 100GbE Copper Cable QSFP28	9105	41B	EB5M
3M 100GbE Optical Cable QSFP28 (AOC)	9105	41B	EB5R
5M 100GbE Optical Cable QSFP28 (AOC)	9105	41B	EB5S
10M 100GbE Optical Cable QSFP28 (AOC)	9105	41B	EB5T
15M 100GbE Optical Cable QSFP28 (AOC)	9105	41B	EB5U
20M 100GbE optical Cable QSFP28 (AOC)	9105	41B	EB5V
30M 100GbE optical Cable QSFP28 (AOC)	9105	41B	EB5W
50M 100GbE Optical Cable QSFP28 (AOC)	9105	41B	EB5X
IBM i 7.3 Indicator	9105	41B	EB73
IBM i 7.4 Indicator	9105	41B	EB74
IBM i 7.5 Indicator	9105	41B	EB75
PCIe3 2-Port 10Gb NIC&ROCE SR/Cu Adapter	9105	41B	EC2S
PCIe3 2-Port 25/10Gb NIC&ROCE SR/Cu Adapter	9105	41B	EC2U
PCIe3 x8 1.6 TB NVMe Flash Adapter for AIX/Linux	9105	41B	EC5B
PCIe3 x8 3.2 TB NVMe Flash Adapter for AIX/Linux	9105	41B	EC5D
PCIe3 x8 6.4 TB NVMe Flash Adapter for AIX/Linux	9105	41B	EC5F
Enterprise 6.4 TB SSD PCIe4 NVMe U.2 module for AIX/Linux	9105	41B	EC5V
Enterprise 6.4 TB SSD PCIe4 NVMe U.2 module for IBM i	9105	41B	EC5W
Mainstream 800 GB SSD PCIe3 NVMe U.2 module for AIX/Linux	9105	41B	EC5X
PCIe4 2-port 100Gb ROCE EN adapter	9105	41B	EC66
PCIe2 2-Port USB 3.0 Adapter	9105	41B	EC6K
PCIe3 x8 1.6 TB NVMe Flash Adapter for IBM i	9105	41B	EC6V
PCIe3 x8 3.2 TB NVMe Flash Adapter for IBM i	9105	41B	EC6X
PCIe3 x8 6.4 TB NVMe Flash Adapter for IBM i	9105	41B	EC6Z
PCIe4 2-port 100Gb Crypto Connectx-6 DX QFSP56	9105	41B	EC78
PCIe4 1.6TB NVMe Flash Adapter x8 for AIX/Linux	9105	41B	EC7B
PCIe4 3.2TB NVMe Flash Adapter x8 for AIX/Linux	9105	41B	EC7D
PCIe4 6.4TB NVMe Flash Adapter x8 for AIX/Linux	9105	41B	EC7F
PCIe4 1.6TB NVMe Flash Adapter x8 for IBM i	9105	41B	EC7K
PCIe4 3.2TB NVMe Flash Adapter x8 for IBM i	9105	41B	EC7M
PCIe4 6.4TB NVMe Flash Adapter x8 for IBM i	9105	41B	EC7P
800GB Mainstream NVMe U.2 SSD 4k for AIX/Linux	9105	41B	EC7T



SAS X Cable 3m - HD Narrow 6Gb 2-Adapters to Enclosure	9105	41B	ECBJ
SAS X Cable 6m - HD Narrow 6Gb 2-Adapters to Enclosure	9105	41B	ECBK
SAS YO Cable 1.5m - HD Narrow 6Gb Adapter to Enclosure	9105	41B	ECBT
SAS YO Cable 3m - HD Narrow 6Gb Adapter to Enclosure	9105	41B	ECBU
SAS YO Cable 6m - HD Narrow 6Gb Adapter to Enclosure	9105	41B	ECBV
SAS YO Cable 10m - HD Narrow 6Gb Adapter to Enclosure	9105	41B	ECBW
SAS AE1 Cable 4m - HD Narrow 6Gb Adapter to Enclosure	9105	41B	ECBY
SAS YE1 Cable 3m - HD Narrow 6Gb Adapter to Enclosure	9105	41B	ECBZ
3M Optical Cable Pair for PCIe3 Expansion Drawer	9105	41B	ECC7
10M Optical Cable Pair for PCIe3 Expansion Drawer	9105	41B	ECC8
System Port Converter Cable for UPS	9105	41B	ECCF
3M Copper CXP Cable Pair for PCIe3 Expansion Drawer	9105	41B	ECCS
3M Active Optical Cable Pair for PCIe3 Expansion Drawer	9105	41B	ECCX
10M Active Optical Cable Pair for PCIe3 Expansion Drawer	9105	41B	ECCY
3.0M SAS X12 Cable (Two Adapter to Enclosure)	9105	41B	ECDJ
4.5M SAS X12 Active Optical Cable (Two Adapter to Enclosure)	9105	41B	ECDK
10M SAS X12 Active Optical Cable (Two Adapter to Enclosure)	9105	41B	ECDL
1.5M SAS Y012 Cable (Adapter to Enclosure)	9105	41B	ECDT
3.0M SAS Y012 Cable (Adapter to Enclosure)	9105	41B	ECDU
4.5M SAS Y012 Active Optical Cable (Adapter to Enclosure)	9105	41B	ECDV
10M SAS Y012 Active Optical Cable (Adapter to Enclosure)	9105	41B	ECDW
0.6M SAS AA12 Cable (Adapter to Adapter)	9105	41B	ECE0
3.0M SAS AA12 Cable	9105	41B	ECE3
4.5M SAS AA12 Active Optical Cable (Adapter to Adapter)	9105	41B	ECE4
4.3m (14-Ft) PDU to wall 3PH/24A 200-240V Delta-wired Power Cord	9105	41B	ECJ5
4.3m (14-Ft) PDU to wall 3PH/40A 200-240V Power Cord	9105	41B	ECJ6
4.3m (14-Ft) PDU to wall 3PH/48A 200-240V Delta-wired Power Cord	9105	41B	ECJ7
High Function 9xC19 Single-Phase or Three-Phase Wye PDU plus	9105	41B	ECJJ
High Function 9xC19 PDU plus 3-Phase Delta	9105	41B	ECJL
High Function 12xC13 Single-Phase or Three-Phase Wye PDU plus	9105	41B	ECJN
High Function 12xC13 PDU plus 3-Phase Delta	9105	41B	ECJQ
Custom Service Specify, Mexico	9105	41B	ECSM
Custom Service Specify, Poughkeepsie, USA	9105	41B	ECSP
Optical Wrap Plug	9105	41B	ECW0
SAP HANA TRACKING FEATURE	9105	41B	EHKV
Boot Drive / Load Source in EXP24SX Specify (in #ESLS or #ELLS)	9105	41B	EHR2
SSD Placement Indicator - #ESLS/#ELLS	9105	41B	EHS2
PCIe3 RAID SAS Adapter Quad-port 6Gb x8	9105	41B	EJ0J
PCIe3 12GB Cache RAID SAS Adapter Quad-port 6Gb x8	9105	41B	EJ0L
PCIe3 SAS Tape/DVD Adapter Quad-port 6Gb x8	9105	41B	EJ10
PCIe3 12GB Cache RAID PLUS SAS Adapter Quad-port 6Gb x8	9105	41B	EJ14
Storage Backplane with eight NVMe U.2 drive slots	9105	41B	EJ1Y
PCIe x16 to CXP Optical or CU converter Adapter for PCIe3 Expansion Drawer	9105	41B	EJ20
PCIe4 x16 to CXP Converter Adapter (support AOC)	9105	41B	EJ2A
PCIe3 Crypto Coprocessor no BSC 4767	9105	41B	EJ32
PCIe3 Crypto Coprocessor BSC-Gen3 4767	9105	41B	EJ33
PCIe3 Crypto Coprocessor no BSC 4769	9105	41B	EJ35
PCIe3 Crypto Coprocessor BSC-Gen3 4769	9105	41B	EJ37
Non-paired Indicator EJ14 PCIe SAS RAID+ Adapter	9105	41B	EJRL

Non-paired Indicator EJ0L PCIe SAS RAID Adapter	9105	41B	EJRU
Front OEM Bezel for 16 NVMe-bays Backplane Rack-Mount	9105	41B	EJUV
Front OEM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	9105	41B	EJUX
IBM Cover and Doors for 16 NVMe-bays Backplane Desk-side	9105	41B	EJUY
OEM Cover and Doors for 16 NVMe-bays Backplane Desk-side	9105	41B	EJUZ
IBM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	9105	41B	EJVV
OEM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	9105	41B	EJVZ
Specify Mode-1 & CEC SAS Ports & (2)Y012 for EXP24SX #ESLS/ELLS	9105	41B	EJW0
Specify Mode-1 & (1)EJ0J/EJ0M/EL3B/EL59 & (1)Y012 for EXP24SX #ESLS/ELLS	9105	41B	EJW1
Specify Mode-1 & (2)EJ0J/EJ0M/EL3B/EL59 & (2)Y012 for EXP24SX #ESLS/ELLS	9105	41B	EJW2
Specify Mode-2 & (2)EJ0J/EJ0M/EL3B/EL59 & (2)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJW3
Specify Mode-2 & (4)EJ0J/EJ0M/EL3B/EL59 & (2)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJW4
Specify Mode-4 & (4)EJ0J/EJ0M/EL3B/EL59 & (2)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJW5
Specify Mode-2 & (1)EJ0J/EJ0M/EL3B/EL59 & (2)Y012 for EXP24SX #ESLS/ELLS	9105	41B	EJW6
Specify Mode-2 & (2)EJ0J/EJ0M/EL3B/EL59 & (2)Y012 for EXP24SX #ESLS/ELLS	9105	41B	EJW7
Specify Mode-2 & (1)EJ0J/EJ0M/EL3B/EL59 & (1)Y012 for EXP24SX #ESLS/ELLS	9105	41B	EJWA
Specify Mode-2 & (2)EJ0J/EJ0M/EL3B/EL59 & (1)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJWB
Specify Mode-4 & (1)EJ0J/EJ0M/EL3B/EL59 & (1)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJWC
Specify Mode-4 & (2)EJ0J/EJ0M/EL3B/EL59 & (1)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJWD
Specify Mode-4 & (3)EJ0J/EJ0M/EL3B/EL59 & (2)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJWE
Specify Mode-1 & (2)EJ14 & (2)Y012 for EXP24SX #ESLS/ELLS	9105	41B	EJWF
Specify Mode-2 & (2)EJ14 & (2)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJWG
Specify Mode-2 & (2)EJ14 & (1)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJWH
Specify Mode-2 & (4)EJ14 & (2)X12 for EXP24SX #ESLS/ELLS	9105	41B	EJWJ
Front IBM Bezel for 16 NVMe-bays Backplane Rack-Mount	9105	41B	EJXU
Front IBM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	9105	41B	EJXW
300GB 15k RPM SAS SFF-2 Disk Drive (Linux)	9105	41B	EL1P
600GB 10k RPM SAS SFF-2 Disk Drive (Linux)	9105	41B	EL1Q
ESMD Load Source Specify (931GB SSD SFF-2)	9105	41B	EL9D
ESMH Load Source Specify (1.86TB SSD SFF-2)	9105	41B	EL9H
ESMS Load Source Specify (3.72TB SSD SFF-2)	9105	41B	EL9S
ESMX Load Source Specify (7.44TB SSD SFF-2)	9105	41B	EL9X
PDU Access Cord 0.38m	9105	41B	ELC0
4.3m (14-Ft) PDU to wall 24A 200-240V Power Cord North America	9105	41B	ELC1
4.3m (14-Ft) PDU to wall 3PH/24A 415V Power Cord North America	9105	41B	ELC2
Power Cable - Drawer to IBM PDU (250V/10A)	9105	41B	ELC5
600GB 10K RPM SAS SFF-2 Disk Drive 4K Block - 4096	9105	41B	ELEV
1.2TB 10K RPM SAS SFF-2 Disk Drive 4K Block - 4096	9105	41B	ELF3
1.8TB 10K RPM SAS SFF-2 Disk Drive 4K Block - 4096	9105	41B	ELFT
ESKM Load Source Specify (931GB SSD SFF-2)	9105	41B	ELKM
ESKR Load Source Specify (1.86TB SSD SFF-2)	9105	41B	ELKR
ESKV Load Source Specify (3.72TB SSD SFF-2)	9105	41B	ELKV
ESKZ Load Source Specify (7.44TB SSD SFF-2)	9105	41B	ELKZ
ES1F Load Source Specify (1.6 TB 4K NVMe U.2 SSD)			

PCIe4 for IBM i)	9105	41B	ELS3
ES1K Load Source Specify (800 GB 4K NVMe U.2 SSD PCIe4 for IBM i)	9105	41B	ELSG
ES1H Load Source Specify (3.2 TB 4K NVMe U.2 SSD for IBM i)	9105	41B	ELSQ
#ESF2 Load Source Specify (1.1TB HDD SFF-2)	9105	41B	ELT2
#ESFS Load Source Specify (1.7TB HDD SFF-2)	9105	41B	ELTS
#ESEU Load Source Specify (571GB HDD SFF-2)	9105	41B	ELTU
ESK9 Load Source Specify (387GB SSD SFF-2)	9105	41B	ELU9
ESKD Load Source Specify (775GB SSD SFF-2)	9105	41B	ELUD
ESKH Load Source Specify (1.55TB SSD SFF-2)	9105	41B	ELUH
ESJK Load Source Specify (931GB SSD SFF-2)	9105	41B	ELUK
#ESNL Load Source Specify (283GB HDD SFF-2)	9105	41B	ELUL
ESJM Load Source Specify (1.86TB SSD SFF-2)	9105	41B	ELUM
ESJP Load Source Specify (3.72TB SSD SFF-2)	9105	41B	ELUP
#ESNQ Load Source Specify (571GB HDD SFF-2)	9105	41B	ELUQ
ESJR Load Source Specify (7.44TB SSD SFF-2)	9105	41B	ELUR
EC5W Load Source Specify (6.4 TB 4K NVMe U.2 SSD for IBM i)	9105	41B	ELUW
ETK9 Load Source Specify (387 GB SSD SFF-2)	9105	41B	ELV9
ETKD Load Source Specify (775 GB SSD SFF-2)	9105	41B	ELVD
ETKH Load Source Specify (1.55 TB SSD SFF-2)	9105	41B	ELVH
EC7K Load Source Specify (1.6TB SSD NVMe adapter for IBM i)	9105	41B	ELVK
EC7M Load Source Specify (3.2TB SSD NVMe adapter for IBM i)	9105	41B	ELVM
EC7P Load Source Specify (6.4TB SSD NVMe adapter for IBM i)	9105	41B	ELVP
ES3A Load Source Specify (800 GB 4K NVMe U.2 SSD PCIe4 for IBM i)	9105	41B	ELYA
ES3C Load Source Specify (1.6 TB 4K NVMe U.2 SSD PCIe4 for IBM i)	9105	41B	ELYC
ES3E Load Source Specify (3.2 TB 4K NVMe U.2 SSD PCIe4 for IBM i)	9105	41B	ELYE
ES3G Load Source Specify (6.4 TB 4K NVMe U.2 SSD PCIe4 for IBM i)	9105	41B	ELYG
ES95 Load Source Specify (387GB SSD SFF-2)	9105	41B	ELZ5
ESNB Load Source Specify (775GB SSD SFF-2)	9105	41B	ELZB
ESNF Load Source Specify (1.55TB SSD SFF-2)	9105	41B	ELZF
32GB (2x16GB) DDIMMs, 3200 MHZ, 8GBIT DDR4 Memory	9105	41B	EM6N
64GB (2x32GB) DDIMMs, 3200 MHZ, 8GBIT DDR4 Memory	9105	41B	EM6W
128GB (2x64GB) DDIMMs, 3200 MHZ, 16GBIT DDR4 Memory	9105	41B	EM6X
256GB (2x128GB) DDIMMs, 2666 MHZ, 16GBIT DDR4 Memory	9105	41B	EM6Y
PCIe Gen3 I/O Expansion Drawer	9105	41B	EMX0
AC Power Supply Conduit for PCIe3 Expansion Drawer	9105	41B	EMXA
PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	9105	41B	EMXF
PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	9105	41B	EMXG
PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	9105	41B	EMXH
1m (3.3-ft), 10Gb E'Net Cable SFP+ Act Twinax Copper	9105	41B	EN01
3m (9.8-ft), 10Gb E'Net Cable SFP+ Act Twinax Copper	9105	41B	EN02
5m (16.4-ft), 10Gb E'Net Cable SFP+ Act Twinax Copper	9105	41B	EN03
PCIe2 4-Port (10Gb+1GbE) SR+RJ45 Adapter	9105	41B	EN0S
PCIe2 4-port (10Gb+1GbE) Copper SFP+RJ45 Adapter	9105	41B	EN0U
PCIe2 2-port 10/1GbE BaseT RJ45 Adapter	9105	41B	EN0W
PCIe3 32Gb 2-port Fibre Channel Adapter	9105	41B	EN1A
PCIe3 16Gb 4-port Fibre Channel Adapter	9105	41B	EN1C
PCIe3 16Gb 4-port Fibre Channel Adapter	9105	41B	EN1E
PCIe3 2-Port 16Gb Fibre Channel Adapter	9105	41B	EN1G
PCIe4 32Gb 2-port Optical Fibre Channel Adapter	9105	41B	EN1J
PCIe3 16Gb 2-port Fibre Channel Adapter	9105	41B	EN2A
188 GB IBM i NVMe Load Source Namespace size	9105	41B	ENS1
393 GB IBM i NVMe Load Source Namespace size	9105	41B	ENS2
200 GB IBM i NVMe Load Source Namespace size	9105	41B	ENSA

400 GB IBM i NVMe Load Source Namespace size	9105	41B	ENSB
Specify Code Configure all IBM i Namespaces	9105	41B	ENSM
Deactivation of LPM (Live Partition Mobility)	9105	41B	EPA0
One Processor Core Activation for EPG2	9105	41B	EPF6
One Processor Core Activation for EPG0	9105	41B	EPFT
4-core Typical 3.0 to 3.90 Ghz (max) Power10 Processor	9105	41B	EPG0
8-core Typical 3.00 to 3.90 Ghz (max) Power10 Processor	9105	41B	EPG2
Horizontal PDU Mounting Hardware	9105	41B	EPTH
High Function 9xC19 PDU: Switched, Monitoring	9105	41B	EPTJ
High Function 9xC19 PDU 3-Phase: Switched, Monitoring	9105	41B	EPTL
High Function 12xC13 PDU: Switched, Monitoring	9105	41B	EPTN
High Function 12xC13 PDU 3-Phase: Switched, Monitoring	9105	41B	EPTQ
Rack-Mount Rail Tower to Rack Conversion Kit	9105	41B	ERKZ
Enterprise 1.6 TB SSD PCIe4 NVMe U.2 module for AIX/Linux	9105	41B	ES1E
Enterprise 1.6 TB SSD PCIe4 NVMe U.2 module for IBM i	9105	41B	ES1F
Enterprise 3.2 TB SSD PCIe4 NVMe U.2 module for AIX/Linux	9105	41B	ES1G
Enterprise 3.2 TB SSD PCIe4 NVMe U.2 module for IBM i	9105	41B	ES1H
Enterprise 800GB SSD PCIe4 NVMe U.2 module for IBM i	9105	41B	ES1K
Enterprise 800GB SSD PCIe4 NVMe U.2 module for IBM i	9105	41B	ES3A
Enterprise 1.6 TB SSD PCIe4 NVMe U.2 module for AIX/Linux	9105	41B	ES3B
Enterprise 1.6 TB SSD PCIe4 NVMe U.2 module for IBM i	9105	41B	ES3C
Enterprise 3.2 TB SSD PCIe4 NVMe U.2 module for AIX/Linux	9105	41B	ES3D
Enterprise 3.2 TB SSD PCIe4 NVMe U.2 module for IBM i	9105	41B	ES3E
Enterprise 6.4 TB SSD PCIe4 NVMe U.2 module for AIX/Linux	9105	41B	ES3F
Enterprise 6.4 TB SSD PCIe4 NVMe U.2 module for IBM i	9105	41B	ES3G
387GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ES94
387GB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ES95
387GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux	9105	41B	ESB2
775GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux	9105	41B	ESB6
387GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESBA
387GB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ESBB
775GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESBG
775GB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ESBH
1.55TB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESBL
1.55TB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ESBM
S&H - No Charge	9105	41B	ESC0
S&H-b	9105	41B	ESC6
Virtual Capacity Expedited Shipment	9105	41B	ESCT
iSCSI SAN Load Source Specify for AIX	9105	41B	ESCZ
571GB 10K RPM SAS SFF- HDD 4K for IBM i	9105	41B	ESEU
600GB 10K RPM SAS SFF-2 HDD 4K for AIX/Linux	9105	41B	ESEV
1.1TB 10K RPM SAS SFF-2 HDD 4K for IBM i	9105	41B	ESF2
1.2TB 10K RPM SAS SFF-2 HDD 4K for AIX/Linux	9105	41B	ESF3
1.7TB 10K RPM SAS SFF-2 HDD 4K for IBM i	9105	41B	ESFS
1.8TB 10K RPM SAS SFF-2 HDD 4K for AIX/Linux	9105	41B	ESFT
387GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux	9105	41B	ESGV
775GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux	9105	41B	ESGZ
931GB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESJ0
931GB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESJ1
1.86TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESJ2
1.86TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESJ3
3.72TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESJ4
3.72TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESJ5
7.45TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESJ6
7.45TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESJ7
931GB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESJJ

931GB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESJK
1.86TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESJL
1.86TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESJM
3.72TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESJN
3.72TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESJP
7.44TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESJQ
7.44TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESJR
387GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux	9105	41B	ESK1
775GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux	9105	41B	ESK3
387GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESK8
387GB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ESK9
775GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESKC
775GB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ESKD
1.55TB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESKG
1.55TB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ESKH
931GB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESKK
931GB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESKM
1.86TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESKP
1.86TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESKR
3.72TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESKT
3.72TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESKV
7.44TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESKX
7.44TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESKZ
Specify AC Power Supply for EXP12SX/EXP24SX Storage Enclosure	9105	41B	ESLA
ESBB Load Source Specify (387GB SSD SFF-2)	9105	41B	ESLB
ESBH Load Source Specify (775GB SSD SFF-2)	9105	41B	ESLH
ESBM Load Source Specify (1.55TB SSD SFF-2)	9105	41B	ESLM
EXP24SX SAS Storage Enclosure	9105	41B	ESLS
Load Source Specify for EC6V (NVMe 1.6 TB SSD for IBM i)	9105	41B	ESLV
Load Source Specify for EC6X (NVMe 3.2 TB SSD for IBM i)	9105	41B	ESLX
Load Source Specify for EC6Z (NVMe 6.4 TB SSD for IBM i)	9105	41B	ESLZ
931GB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESMB
931GB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESMD
1.86TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESMF
1.86TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESMH
3.72TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESMK
3.72TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESMS
7.44TB Mainstream SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESMV
7.44TB Mainstream SAS 4k SFF-2 SSD for IBM i	9105	41B	ESMX
775GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESNA
775GB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ESNB
1.55TB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ESNE
1.55TB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ESNF
283GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (IBM i)	9105	41B	ESNL
300GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (AIX/Linux)	9105	41B	ESNM
571GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (IBM i)	9105	41B	ESNQ
600GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (AIX/Linux)	9105	41B	ESNR
300GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (Linux)	9105	41B	ESRM
600GB 15K RPM SAS SFF-2 4k Block Cached Disk Drive (Linux)	9105	41B	ESRR
AIX Update Access Key (UAK)	9105	41B	ESWK
387GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux	9105	41B	ETK1
775GB Enterprise SAS 5xx SFF-2 SSD for AIX/Linux	9105	41B	ETK3
387GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ETK8
387GB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ETK9
775GB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ETKC
775GB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ETKD
1.55TB Enterprise SAS 4k SFF-2 SSD for AIX/Linux	9105	41B	ETKG
1.55TB Enterprise SAS 4k SFF-2 SSD for IBM i	9105	41B	ETKH
1TB Removable Disk Drive Cartridge	9105	41B	EU01
RDX 320 GB Removable Disk Drive	9105	41B	EU08
Operator Panel LCD Display	9105	41B	EU0K
1.5TB Removable Disk Drive Cartridge	9105	41B	EU15
Cable Ties & Labels	9105	41B	EU19
Order Placed Indicator	9105	41B	EU29

Express Edition 4 core (IBM i)	9105	41B	EU2C
2TB Removable Disk Drive Cartridge (RDX)	9105	41B	EU2T
ESJ1 Load Source Specify (931GB SSD SFF-2)	9105	41B	EU41
ESJ3 Load Source Specify (1.86TB SSD SFF-2)	9105	41B	EU43
ESJ5 Load Source Specify (3.72TB SSD SFF-2)	9105	41B	EU45
ESJ7 Load Source Specify (7.45TB SSD SFF-2)	9105	41B	EU47
RDX USB Internal Docking Station	9105	41B	EUA0
RDX USB External Docking Station	9105	41B	EUA4

Standalone USB DVD drive w/cable	9105	41B	EUA5
Enable Virtual Serial Number	9105	41B	EVSN
BP Post-Sale Services: 1 Day	9105	41B	SVBP
IBM Systems Lab Services Post-Sale Services: 1 Day	9105	41B	SVCS
Other IBM Post-Sale Services: 1 Day	9105	41B	SVNN

The following are newly announced features on the specific models of the IBM Power 7965 machine type:

### **Planned Availability Date July 22, 2022**

#### ***New Feature***

Description	Machine type	Model number	Feature number
Rack Content Specify 9105-41B 4EIA unit	7965	S42	ER3D

#### **Feature conversions**

---

#### ***Feature Conversions***

The existing components being replaced during a model or feature conversion become the property of IBM and must be returned.

Feature conversions are always implemented on a "quantity of one for quantity of one" basis. Multiple existing features may not be converted to a single new feature. Single existing features may not be converted to multiple new features.

The following conversions are available to clients:

#### ***Feature conversions for 9105-41B adapter features:***

From FC:	To FC:	Return parts
EJ20 - PCIe x16 to CXP Optical or CU converter Adapter for PCIe3 Expansion Drawer	EJ2A - PCIe4 x16 to CXP Converter Adapter (support AOC)	No
EJ35 - PCIe3 Crypto Coprocessor no BSC 4769	EJ37 - PCIe3 Crypto Coprocessor BSC-Gen3 4769	No

#### ***Feature conversions for 9105-41B cable features:***

From FC:	To FC:	Return parts
ECC7 - 3M Optical Cable Pair for PCIe3 Expansion Drawer	ECCX - 3M Active Optical Cable Pair for PCIe3 Expansion Drawer	No
ECC8 - 10M Optical Cable Pair for PCIe3 Expansion Drawer	ECCY - 10M Active Optical Cable Pair for PCIe3 Expansion Drawer	No

### **Feature conversions for 9105-41B miscellaneous features:**

From FC:	To FC:	Return parts
EJUZ - OEM Cover and Doors for 16 NVMe-bays Backplane Desk-side	EJUV - Front OEM Bezel for 16 NVMe-bays Backplane Rack-Mount	No
EJVZ - OEM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	EJUX - Front OEM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	No
EJUY - IBM Cover and Doors for 16 NVMe-bays Backplane Desk-side	EJXU - Front IBM Bezel for 16 NVMe-bays Backplane Rack-Mount	No
EJVV - IBM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	EJXW - Front IBM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	No

### **Feature conversions for 9105-41B rack-related features:**

From FC:	To FC:	Return parts
EJXU - Front IBM Bezel for 16 NVMe-bays Backplane Rack-Mount	EJUY - IBM Cover and Doors for 16 NVMe-bays Backplane Desk-side	No
EJUV - Front OEM Bezel for 16 NVMe-bays Backplane Rack-Mount	EJUZ - OEM Cover and Doors for 16 NVMe-bays Backplane Desk-side	No
EJXW - Front IBM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	EJVV - IBM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	No
EJUX - Front OEM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	EJVZ - OEM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	No
EMXF - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	EMXH - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	No
EMXG - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	EMXH - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	No

---

## **Business Partner information**

If you are a Direct Reseller - System Reseller acquiring products from IBM, you may link directly to Business Partner information for this announcement. A PartnerWorld ID and password are required (use IBMid).

[BP Attachment for Announcement Letter 122-028](#)

---

## **Publications**

No publications are shipped with the announced product.

IBM Documentation provides you with a single information center where you can access product documentation for IBM systems hardware, operating systems, and server software. Through a consistent framework, you can efficiently find information and personalize your access. See [IBM Documentation](#).

To access the IBM Publications Center Portal, go to the [IBM Publications Center](#) website. The IBM Publications Center is a worldwide central repository for IBM product publications and marketing material with a catalog of 70,000 items. Extensive search facilities are provided. A large number of publications are available online in various file formats, which can currently be downloaded.

To access the IBM Publications Center Portal, go to the [IBM Publications Center](#) website.

The Publications Center is a worldwide central repository for IBM product publications and marketing material with a catalog of 70,000 items. Extensive search facilities are provided. A large number of publications are available online in various file formats, which can currently be downloaded.

---

## Services

---

### **IBM Systems Lab Services**

Systems Lab Services offers infrastructure services to help build hybrid cloud and enterprise IT solutions. From servers to storage systems and software, Systems Lab Services can help deploy the building blocks of a next-generation IT infrastructure to empower a client's business. Systems Lab Services consultants can perform infrastructure services for clients online or onsite, offering deep technical expertise, valuable tools, and successful methodologies. Systems Lab Services is designed to help clients solve business challenges, gain new skills, and apply best practices.

Systems Lab Services offers a wide range of infrastructure services for IBM Power servers, IBM Storage systems, IBM Z<sup>(R)</sup>, and IBM LinuxONE. Systems Lab Services has a global presence and can deploy experienced consultants online or onsite around the world.

For assistance, contact Systems Lab Services at [ibmsls@us.ibm.com](mailto:ibmsls@us.ibm.com).

To learn more, see the [IBM Systems Lab Services](#) website.

### **IBM Consulting<sup>TM</sup>**

As transformation continues across every industry, businesses need a single partner to map their enterprise-wide business strategy and technology infrastructure. IBM Consulting is the business partner to help accelerate change across an organization. IBM specialists can help businesses succeed through finding collaborative ways of working that forge connections across people, technologies, and partner ecosystems. IBM Consulting brings together the business expertise and an ecosystem of technologies that help solve some of the biggest problems faced by organizations. With methods that get results faster, an integrated approach that is grounded in an open and flexible hybrid cloud architecture, and incorporating technology from IBM Research<sup>(R)</sup> and IBM Watson<sup>(R)</sup> AI, IBM Consulting enables businesses to lead change with confidence and deliver continuous improvement across a business and its bottom line.

For additional information, see the [IBM Consulting](#) website.

### **IBM Technology Support Services (TSS)**

Get preventive maintenance, onsite and remote support, and gain actionable insights into critical business applications and IT systems. Speed developer innovation with support for over 240 open-source packages. Leverage powerful IBM analytics and AI-enabled tools to enable client teams to manage IT problems before they become emergencies.

TSS offers extensive IT maintenance and support services that cover more than one niche of a client's environment. TSS covers products from IBM and OEMs, including servers, storage, network, appliances, and software, to help clients ensure high availability across their data center and hybrid cloud environment.

For details on available services, see the [Technology support for hybrid cloud environments](#) website.

### **IBM Expert Labs**



Expert Labs can help clients accelerate their projects and optimize value by leveraging their deep technical skills and knowledge. With more than 20 years of industry experience, these specialists know how to overcome the biggest challenges to deliver business results that can have an immediate impact.

Expert Labs' deep alignment with IBM product development allows for a strategic advantage as they are often the first in line to get access to new products, features, and early visibility into roadmaps. This connection with the development enables them to deliver First of a Kind implementations to address unique needs or expand a client's business with a flexible approach that works best for their organization.

For additional information, see the [IBM Expert Labs](#) website.

### **IBM Security<sup>(R)</sup> Expert Labs**

With extensive consultative expertise on IBM Security software solutions, Security Expert Labs helps clients and partners modernize the security of their applications, data, and workforce. With an extensive portfolio of consulting and learning services, Expert Labs provides project-based and premier support service subscriptions.

These services can help clients deploy and integrate IBM Security software, extend their team resources, and help guide and accelerate successful hybrid cloud solutions, including critical strategies such as zero trust. Remote and on-premises software deployment assistance is available for IBM Cloud Pak<sup>(R)</sup> for Security, IBM Security QRadar<sup>(R)</sup>/QRoC, IBM Security SOAR/Resilient<sup>(R)</sup>, IBM i2<sup>(R)</sup>, IBM Security Verify, IBM Security Guardium<sup>(R)</sup>, and IBM Security MaaS360<sup>(R)</sup>.

For more information, contact Security Expert Labs at [sel@us.ibm.com](mailto:sel@us.ibm.com).

For additional information, see the [IBM Security Expert Labs](#) website.

---

## **IBM support**

---

For installation and technical support information, see the [IBM Support Portal](#).

---

## **Additional support**

---

### **IBM Client Engineering for Systems**

Client Engineering for Systems is a framework for accelerating digital transformation. It helps you generate innovative ideas and equips you with the practices, technologies, and expertise to turn those ideas into business value in weeks. When you work with Client Engineering for Systems, you bring pain points into focus. You empower your team to take manageable risks, adopt leading technologies, speed up solution development, and measure the value of everything you do. Client Engineering for Systems has experts and services to address a broad array of use cases, including capabilities for business transformation, hybrid cloud, analytics and AI, infrastructure systems, security, and more. Contact Client Engineering at [sysgarage@ibm.com](mailto:sysgarage@ibm.com).

---

## **Technical information**

---

### **Specified operating environment**

---

#### ***Physical specifications***

- 19-inch rack-mount hardware
  - Width<sup>1</sup>: 482 mm (18.97 in.)
  - Depth<sup>2</sup>: 712 mm (28 in.)

- Height: 173 mm (6.8 in.)
- Weight: 36.28 kg (80 lb)
- Tower hardware
  - Width with stand: 329 mm (13 in.)
  - Depth with front-rotatable door: 815 mm (32 in.)
  - Height with handle: 522 mm (20.6 in.)
  - Weight: 47.62 kg (105 lb)

1. The width is measured to the outside edges of the rack-mount bezels. The width is 446 mm (17.6 in.) for the main chassis which fits in between a 482.6 mm (19 in.) rack mounting flanges.

2. The cable management arm with the maximum cable bundle adds 248 mm (9.8 in.) to the depth.

## **Operating environment**

### **Electrical characteristics**

- AC rated voltage and frequency<sup>2</sup>: 100--127<sup>5</sup> V AC or 200--240 V AC at 50 or 60 Hz plus or minus 3 Hz
- Thermal output (maximum)<sup>3</sup>: 3668 BTU/hr
- Maximum power consumption<sup>3</sup>: 1075 W
- Maximum kVA<sup>4</sup>: 1.105 kVA
- Phase: Single

1. Redundancy is supported. The Power S1014 with 1600 W power supplies has a maximum of two power supplies. The Power S1014 with 1200 W power supplies has a maximum of four power supplies, but can operate on two power supplies. There are no specific plugging rules or plugging sequence when you connect the power supplies to the rack PDUs. All the power supplies feed a common DC bus.

2. The power supplies automatically accept any voltage with the published, rated-voltage range. If multiple power supplies are installed and operating, the power supplies draw approximately equal current from the utility (electrical supply) and provide approximately equal current to the load.

3. Power draw and heat load vary greatly by configuration. When you plan for an electrical system, it is important to use the maximum values. However, when you plan for heat load, you can use the IBM Systems Energy Estimator to obtain a heat output estimate based on a specific configuration. For more information, see [The IBM Systems Energy Estimator website](#).

4. To calculate the amperage, multiply the kVA by 1,000 and divide that number by the operating voltage.

5. The Power S1014 with 1200 W power supplies supports 100--127 V AC.

### **Environment (operating)<sup>1</sup>**

- ASHRAE class; allowable A3 (fourth edition)
- Airflow direction; recommended Front-to-back
- Temperature: Recommended 18.0°C--27.0°C (64.4°F--80.6°F); allowable 5.0°C--40.0°C (41.0°F--104.0°F)
- Low-end moisture: Recommended 9.0°C (15.8°F) dew point; allowable -12.0°C (10.4°F) dew point and 8% relative humidity
- High-end moisture: Recommended 60% relative humidity and 15°C (59°F) dew point; allowable 85% relative humidity and 24.0°C (75.2°F) dew point
- Maximum altitude: 3,050 m (10,000 ft)

## Allowable environment (nonoperating)<sup>5</sup>

- Temperature: Recommended 5°C--45°C (41°F--113°F)
- Relative humidity: Recommended 8% to 85%
- Maximum dew point: Recommended 27.0°C (80.6°F)

1. IBM provides the recommended operating environment as the long-term operating environment that can result in the greatest reliability, energy efficiency, and reliability. The allowable operating environment represents where the equipment is tested to verify functionality. Due to the stresses that operating in the allowable envelope can place on the equipment, these envelopes must be used for short-term operation, not continuous operation. There are a very limited number of configurations that must not operate at the upper bound of the A3 allowable range. For more information, consult your IBM technical specialist.

2. Must derate the maximum allowable temperature 1°C (1.8°F) per 175 m (574 ft) above 900 m (2,953 ft) up to a maximum allowable elevation of 3,050 m (10,000 ft).

3. The minimum humidity level is the larger absolute humidity of the -12°C (10.4°F) dew point and the 8% relative humidity. These levels intersect at approximately 25°C (77°F). Below this intersection, the dew point (-12°C) represents the minimum moisture level, while above it, the relative humidity (8%) is the minimum. For the upper moisture limit, the limit is the minimum absolute humidity of the dew point and relative humidity that is stated.

4. The following minimum requirements apply to data centers that are operated at low relative humidity:

- Data centers that do not have ESD floors and where people are allowed to wear non-ESD shoes might want to consider increasing humidity given that the risk of generating 8 kV increases slightly at 8% relative humidity, when compared to 25% relative humidity.
- All mobile furnishings and equipment must be made of conductive or static dissipative materials and be bonded to ground.
- During maintenance on any hardware, a properly functioning and grounded wrist strap must be used by any personnel who comes in contact with information technology (IT) equipment.

5. Equipment that is removed from the original shipping container and is installed, but is powered down. The allowable non-operating environment is provided to define the environmental range that an unpowered system can experience short term without being damaged.

**Electromagnetic compatibility compliance:** CISPR 22; CISPR 32; CISPR 24; CISPR 35; FCC, CFR 47, Part 15 (US); VCCI (Japan); EMC Directive (EEA); ICES-003 (Canada); ACMA (Australia, New Zealand); CNS 13438 (Taiwan); Radio Waves Act (Korea); Commodity Inspection Law (China); QCVN 118 (Vietnam); MoCI (Saudi Arabia); SI 961 (Israel); EAC (EAEU).

**Safety compliance:** This product was designed, tested, manufactured, and certified for safe operation. It complies with IEC 60950-1 and/or IEC 62368-1 and where required, to relevant national differences/deviations (ND) to these IEC base standards. This includes, but is not limited to: EN (European Norms including all Amendments under the Low Voltage Directive), UL/CSA (North America bi-national harmonized and marked per accredited NRTL agency listings), and other such derivative certifications according to corporate determinations and latest regional publication compliance standardized requirements.

See the *Installation Planning Guide* in [IBM Documentation](#) for additional detail.

## Hardware requirements

### Power S1014 system configuration

The minimum Power S1014 initial order must include a processor module, two 16 GB DIMMs (one feature EM6N 32 GB (2 x 16 GB) DDIMM), four or two power supplies and line cords, an operating system indicator, a cover set indicator, and a Language Group Specify. Also, it must include one of these storage options and one of these network options:

Storage options:

- For boot from NVMe for AIX/Linux: One NVMe drive slot and one NVMe drive or one PCIe NVMe add-in adapter.
- For boot from NVMe for IBM i: Two NVMe drive slots and two NVMe drives or two PCIe NVMe add-in adapters.
- For boot from SAN: Internal NVMe drive and RAID card are **not** required if feature 0837 (boot from SAN) is selected. An FC adapter must be ordered if feature 0837 is selected.

Network options:

- One PCIe2 4-port 1 Gb Ethernet adapter
- One of the supported 10 Gb Ethernet adapters

When AIX or Linux is the primary operating system, the minimum defined initial order configuration is as follows:

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
Op-Panel	EU0K	Operator Panel LCD Display		1	Mandatory for Tower configuration. Optional for Rack configuration with AIX/Linux. Always default Qty. 1, but can be deselected for AIX/Linux.
Virtualization Engine	5228	PowerVM Enterprise Edition	1	1	Must select one option.
	or EPA0	Deactivation of LPM (Live Partition Mobility)		1	
Processor Modules	EPG0	4-core Typical 3.0 to 3.90 Ghz (max) Power10 Processor		1	Must select one Processor Module option.
	or EPG2	8-core Typical 3.0 to 3.90 Ghz (max) Power10 Processor		1	

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
Processor Module Activations	EPFT	One Processor Core Activation for EPG0		4	All processor cores must be activated on the Processor Module selected.
	or EPF6	One Processor Core Activation for EPG2		8	
Memory	EM6N	32GB (2x16GB) DDIMMs, 3200 MHz, 8GBIT DDR4 Memory		1	Minimum 2 DIMMs = 1 DIMM feature. Features EM6X and EM6Y are not available with 4-core processor module configuration.
	or EM6W	64GB (2x32GB) DDIMMs, 3200 MHz, 8GBIT DDR4 Memory		1	
	or EM6X	128GB (2x64GB) DDIMMs, 3200 MHz, 16GBIT DDR4 Memory		1	
	or EM6Y	256GB (2x128GB) DDIMMs, 2666 MHz, 16GBIT DDR4 Memory		1	
Storage Backplane	EJ1Y	Storage Backplane with eight NVMe U.2 drive slots		1	Must order Qty. 1 NVMe backplane feature except when #0837 or #ESCZ (iSCSI boot) is on the order or when NVMe PCIe add-in adapter card is used as the Load Source. Mixing

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
					NVMe devices is allowed on each backplane.
Bezels / Covers and Doors	EJXU	Front IBM Bezel for 16 NVMe-bays Backplane Rack-Mount		1	When no NVMe backplane is ordered and no RDX is ordered, default #EJXU. When no NVMe backplane is ordered and there is an RDX on the order, default #EJXW. Tower models: When no NVMe backplane is ordered and no RDX is ordered, default #EJUY. When no NVMe backplane is ordered and there is an RDX on the order, default #EJVY.
	or				
	EJUV	Front OEM Bezel for 16 NVMe-bays Backplane Rack-Mount		1	
	or				
	EJXW	Front IBM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount		1	
	or				
	EJUX	Front OEM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount		1	
	or				
	EJUY	IBM Cover and Doors for 16 NVMe-bays Backplane Desk-side		1	
	or				
EJUZ	OEM Cover and Doors for 16 NVMe-bays Backplane Desk-side		1		
or					
EJVV	IBM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side		1		
or					

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
	EJVZ	OEM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side		1	
NVMe Devices	EC7T	800GB Mainstream NVMe U.2 SSD 4k for AIX/Linux	2	0	For AIX/Linux, default is Qty. 2. For 8-Core Processor configuration, it is allowed to be changed to any quantity. From Qty. 0 to Qty. 16. Note: See 4-Core Power S1014 processor section for specific limitations.
Required LAN adapters	EC2U	PCIe3 2-Port 25/10Gb NIC&ROCE SR/Cu Adapter		1	Qty. 1 of these LAN features required on all Initial orders. Default Adapter: feature 5899.
	or				
	5899	PCIe2 4-port 1GbE Adapter	1	1	
	or				
	EN0W	PCIe2 2-port 10/1GbE BaseT RJ45 Adapter		1	
Power Supply	EB3S	AC Power Supply - 1600W for Server (200-240 VAC)	2	2	Each initial order must have all power supplies present, power supplies cannot be added later on. Only 200--240V power cords can
	or				
	EB3W	AC Power Supply - 1200W for Server (100-127V/200-240V)		4	

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
					be used. For 41B Tower/ Desk configuration #EB3W - Qty. 4 (only option). For 41B Rack configuration: #EB3S - Qty. 2 (default).
Power Cables	6458	Power Cord 4.3m (14-ft), Drawer to IBM PDU (250V/10A)	4	4	Qty. 4 or Qty. 2 required.
Language Group	9300	Language Group Specify - US English	1	1	Language Specify code is required.
Primary Operating	2146	Primary OS -AIX		1	Must select one option.
	or 2147	Primary OS -Linux		1	

1. The racking approach for the initial order can be a MTM 7965-S42.

The minimum defined initial order configuration, if no choice is made, when IBM i is the primary operating system, is:

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
Op-Panel	EU0K	Operator Panel LCD Display		1	Mandatory Qty. 1 with IBM i.
Virtualization Engine	5228	PowerVM Enterprise Edition	1	1	Must select one option.
	or EPA0	Deactivation of LPM (Live Partition Mobility)		1	
Processor Modules	EPG0	4-core Typical 3.0 to 3.90 Ghz (max) Power10 Processor		1	Must select one Processor Module option.
	or				



System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
	EPG2	8-core Typical 3.0 to 3.90 Ghz (max) Power10 Processor		1	
Processor Module Activations	EPFT	One Processor Core Activation for EPG0		4	All processor cores must be activated on the Processor Module selected.
	or EPF6	One Processor Core Activation for EPG2		8	
Memory	EM6N	32GB (2x16GB) DDIMMs, 3200 MHz, 8GBIT DDR4 Memory		1	Minimum 2 DIMMs = 1 DIMM feature. Features EM6X and EM6Y are not available with 4- core processor module configuration.
	or EM6W	64GB (2x32GB) DDIMMs, 3200 MHz, 8GBIT DDR4 Memory		1	
	or EM6X	128GB (2x64GB) DDIMMs, 3200 MHz, 16GBIT DDR4 Memory		1	
	or EM6Y	256GB (2x128GB) DDIMMs, 2666 MHz, 16GBIT DDR4 Memory		1	
Storage Backplane	EJ1Y	Storage Backplane with eight NVMe U.2 drive slots		1	Must order 1 NVMe backplane feature except when #0837 is on the order or when NVMe PCIe add-in adapter card is used as

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
					the Load Source. Mixing NVMe devices is allowed on each backplane.
Bezels / Covers and Doors	EJXU	Front IBM Bezel for 16 NVMe-bays Backplane Rack-Mount		1	When no NVMe backplane is ordered and no RDX is ordered, default #EJXU. When no NVMe backplane is ordered and there is an RDX on the order, default #EJXW. Tower models: When no NVMe backplane is ordered and no RDX is ordered, default #EJUY. When no NVMe backplane is ordered and there is an RDX on the order, default #EJVY.
	or				
	EJUV	Front OEM Bezel for 16 NVMe-bays Backplane Rack-Mount		1	
	or				
	EJXW	Front IBM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount		1	
	or				
	EJUX	Front OEM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount		1	
	or				
	EJUY	IBM Cover and Doors for 16 NVMe-bays Backplane Desk-side		1	
	or				
EJUZ	OEM Cover and Doors for 16 NVMe-bays Backplane Desk-side		1		
or					
EJVV	IBM Cover and Doors for 16 NVMe-bays and RDX		1		

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
		Backplane Desk-side			
	or				
	EJVZ	OEM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side		1	
NVMe Devices	ES1K	Enterprise 800GB SSD PCIe4 NVMe U.2 module for IBM i	2	0	For IBM i, default is Qty. 2. For 8-Core Processor configuration, it is allowed to be ordered in any quantity. From Qty. 0 to Qty. 16, except Qty. 1. Note: See 4-Core Power S1014 processor section for specific limitations.
Required LAN adapters	EC2U	PCIe3 2-Port 25/10Gb NIC&ROCE SR/Cu Adapter		1	Qty. 1 of these LAN features required on all Initial orders. Default Adapter: feature 5899.
	or				
	5899	PCIe2 4-port 1GbE Adapter	1	1	
Power Supply	EB3S	AC Power Supply - 1600W for Server (200-240 VAC)	2	2	Each initial order must have all power supplies present, power supplies cannot be added later on. Only 200--240V power cords can be used. For 41B Tower/ Desk configuration
	or				
	EB3W	AC Power Supply - 1200W for Server (100-127V/200-240V)		4	

System Feature Codes	Feature Code	Description	Default	Minimum Quantity	Notes
					#EB3W - Qty. 4 (only option). For 41B Rack configuration: #EB3S - Qty. 2 (default).
Power Cables	6458	Power Cord 4.3m (14-ft), Drawer to IBM PDU (250V/10A)	4	4	Qty. 4 or QTY. 2 required.
Language Group	9300	Language Group Specify - US English	1	1	Language Specify code is required.
Primary Operating	2145	Primary OS -IBM i		1	Mandatory feature.
System Consoles	5550	Sys Console On HMC		1	Must select one System Console feature.
	or 5557	System Console-Ethernet LAN adapter		1	
Data Protection	0040	Mirrored System Disk Level, Specify Code	1	1	For IBM i OS only - Qty. 1 system data protection code required.

1. The racking approach for the initial order can be either a MTM 7965-S42.

### Power10 Tower-to-Rack conversion

The IBM System Server S1014 Tower-to-Rack conversion is available through the following MES parts that you need to convert a 4U server (MTM 9105-41B) from a tower model to a rack model. You can then install the server into a 19-inch rack enclosure.

One of following MES parts is required for the tower-to-rack conversion:

Description	Feature	Comments
Front IBM Bezel for 16 NVMe-bays BackPlane Rack-Mount	#EJXU	Optional, mutually exclusive with #EJUV, #EJXW, and #EJUX
Front IBM Bezel for 16 NVMe-bays and RDX BackPlane Rack-Mount	#EJXW	Optional, mutually exclusive with #EJUV, #EJXU, and #EJUX

Description	Feature	Comments
Front OEM Bezel for 16 NVMe-bays BackPlane Rack-Mount	#EJUV	Optional, mutually exclusive with #EJXU, #EJXW, and #EJUX
Front OEM Bezel for 16 NVMe-bays and RDX BackPlane Rack-Mount	#EJUX	Optional, mutually exclusive with #EJXU, #EJXW, and #EJUV

Notes:

- Each of these conversions includes the shipping of the Rack-mount Rail Kit feature ERKZ.
- Choose the correct set of power cords to PDU for your rack configuration, depending on the rack type, the PDU type, and the number of power supplies.
- An IBM Service Support Representative (SSR) needs to be dispatched to your site to assist with installation instructions.

### Power10 Rack-to-Tower conversion

The System Server S1014 Rack-to-Tower Conversion is also available through the following MES parts that you need to convert a 4U server (MTM 9105-41B) from a rack model to a tower model.

One of following MES parts is required for the tower-to-rack conversion:

Description	Feature	Comments
IBM Cover and Doors for 16 NVMe-bays BackPlane Desk-side	#EJUY	Optional, mutually exclusive with #EJUZ, #EJVY, and #EJVZ
IBM Cover and Doors for 16 NVMe-bays and RDX BackPlane Desk-side	#EJVY	Optional, mutually exclusive with #EJUZ, #EJUY, and #EJVZ
OEM Cover and Doors for 16 NVMe-bays BackPlane Desk-side	#EJUZ	Optional, mutually exclusive with #EJUY, #EJUY, and #EJVZ
OEM Cover and Doors for 16 NVMe-bays and RDX BackPlane Desk-side	#EJVZ	Optional, mutually exclusive with #EJUY, #EJUY, and #EJUZ

Notes:

- Four 1200 W power supplies are required. If two 1600 W power supplies exist on the rack model, they will be removed on the order.
- Choose the correct set of power cords to wall cables, depending on AC, length of cord required, and number of power cords required per power supply.
- An SSR needs to be dispatched to your site to assist with installation instructions.

### Hardware Management Console (HMC) machine code

If the system is ordered with 1020 firmware level, or higher, and is capable to be HMC managed, then the managing HMC must be installed with HMC 10.1.1020.0, or higher.

This level only supports hardware appliance types 7063, or virtual appliances (vHMC) on x86 or PowerVM. The 7042 hardware appliance is not supported.

An HMC is required to manage the Power S1014 server implementing partitioning. Multiple Power8, Power9, and Power10 processor-based servers can be supported by a single HMC with version 10.

Planned HMC hardware and software support:

- Hardware Appliance: 7063-CR1, 7063-CR2
- vHMC on x86
- vHMC on PowerVM based LPAR

If you are attaching an HMC to a new server or adding function to an existing server that requires a firmware update, the HMC machine code may need to be updated because HMC code must always be equal to or higher than the managed server's firmware. Access to firmware and machine code updates is conditioned on entitlement and license validation in accordance with IBM policy and practice. IBM may verify entitlement through customer number, serial number, electronic restrictions, or any other means or methods employed by IBM at its discretion.

To determine the HMC machine code level required for the firmware level on any server, go to the following web page to access the Fix Level Recommendation Tool (FLRT) on or after the planned availability date for this product. FLRT will identify the correct HMC machine code for the selected system firmware level; see the website [Fix Level Recommendation Tool](#).

If a single HMC is attached to multiple servers, the HMC machine code level must be updated to be at or higher than the server with the most recent firmware level. All prior levels of server firmware are supported with the latest HMC machine code level.

For clients installing systems higher than the EIA 29 position (location of the rail that supports the rack-mounted server) in any IBM or non-IBM rack, acquire approved tools outlined in the server specifications section at [IBM Documentation](#).

In situations where IBM service is required and the recommended tools are not available, there could be delays in repair actions.

### **Software requirements**

- Red Hat<sup>(R)</sup> Enterprise Linux 9.0, for Power LE, or later
- Red Hat Enterprise Linux 8.4, for Power LE, or later
- SUSE Linux Enterprise Server 15 Service Pack 3, or later
- SUSE Linux Enterprise Server for SAP with SUSE Linux Enterprise Server 15 Service Pack 3, or later
- Red Hat Enterprise Linux for SAP with Red Hat Enterprise Linux 8.4 for Power LE, or later
- Red Hat OpenShift<sup>(R)</sup> Container Platform 4.9, or later

Please review the Linux alert page for any known Linux issues or limitations [Linux on IBM- Readme first issues](#) website.

If installing IBM i:

- IBM i 7.5, or later
- IBM i 7.4 TR6, or later
- IBM i 7.3 TR12, or later

If installing the AIX operating system LPAR with any I/O configuration (one of these):

- AIX Version 7.3 with the 7300-00 Technology Level and Service Pack 7300-00-02-2220, or later
- AIX Version 7.2 with the 7200-05 Technology Level and Service Pack 7200-05-04-2220, or later
- AIX Version 7.2 with the 7200-04 Technology Level and Service Pack 7200-04-06-2220, or later (planned availability September 16, 2022)

If installing the AIX operating system Virtual I/O only LPAR (one of these):

- AIX Version 7.3 with the 7300-00 Technology Level and service pack 7300-00-01-2148, or later
- AIX Version 7.2 with the 7200-05 Technology Level and service pack 7200-05-01-2038, or later

- AIX Version 7.2 with the 7200-04 Technology Level and Service Pack 7200-04-02-2016 or later
- AIX Version 7.1 with the 7100-05 Technology Level and Service Pack 7100-05-06-2016, or later

If installing VIOS:

- VIOS 3.1.3.21

### **Limitations**

- If IBM i (#2145) is selected as the primary operating system, then feature (#0047) - Device Parity RAID-6 All, Specify Code with NVMe devices is not allowed.
- There is not physical system port on the scale-out Power10 servers.

### **Boot requirements**

- If IBM i (#2145) is selected as the primary operating system and SAN boot is not selected (#0837), one of the load source specify codes for SAS drives or NVMe devices in Special Features - Initial Orders - Specify codes section must be specified.
- If IBM i (#2145) is selected and the load source disk unit is not in the system unit (CEC), one of the following specify codes must also be selected:
  - Feature (#0719) Load Source not in CEC and are to be placed in I/O drawers or in external SAN-attached disk
  - Feature (#EHR2) Load Source Specifies DASD are placed in an EXP24SX SFF Gen2 bay Drawer (#ESLS)
  - Feature (#0837) SAN Operating System Load Source Specify
- If IBM i (#2145) is selected, one of the following system console specify codes must be selected:
  - Feature (#5550) -- System Console on HMC
  - Feature (#5557) -- System Console - Internal LAN

### **Planning information**

---

#### **Cable orders**

No cables required.

#### **Security, auditability, and control**

---

This product uses the security and auditability features of host hardware and application software.

The client is responsible for evaluation, selection, and implementation of security features, administrative procedures, and appropriate controls in application systems and communications facilities.

---

## **Terms and conditions**

---

### **Volume orders**

---

Contact your IBM representative.

### **IBM Global Financing**

---

Yes

### **Products - terms and conditions**

---

## Warranty period

Warranty and additional coverage options:	Coverage summary <sup>(1)</sup> :
Warranty Period:	3 years
Service Level:	IBM CRU & On-Site, 9x5 Next Business Day
<b>Service Upgrade Options :</b>	
Warranty Service Upgrade	IBM On-Site Repair, 9x5 Same Day <sup>(2)</sup> and 24x7 Same Day options
Maintenance Services (Post-Warranty):	IBM On-Site Repair, Next Business Day and Same Day options
IBM Hardware Maintenance Services - committed maintenance <sup>(3)</sup> :	Y

<sup>(1)</sup> See complete coverage details below.

<sup>(2)</sup> Offered in US and EMEA only.

<sup>(3)</sup> Not offered in the US.

To obtain copies of the IBM Statement of Limited Warranty, contact your reseller or IBM.

An IBM part or feature installed during the initial installation of an IBM machine is subject to the full warranty period specified by IBM. An IBM part or feature that replaces a previously installed part or feature assumes the remainder of the warranty period for the replaced part or feature. An IBM part or feature added to a machine without replacing a previously installed part or feature is subject to a full warranty. Unless specified otherwise, the warranty period, type of warranty service, and service level of a part or feature are the same as those for the machine in which it is installed.

IBM Solid State Drive (SSD) and Non-Volatile Memory Express (NVMe) devices identified in this document may have a maximum number of write cycles. IBM SSD and NVMe device failures will be replaced during standard warranty and maintenance period for devices that have not reached the maximum number of write cycles. Devices that reach this limit may fail to operate according to specifications and must be replaced at the client's expense. Individual service life may vary and can be monitored using an operating system command.

The IBM warranty covers feature number EB4Z. For warranty terms associated with feature number EB3Z and the Lift tool based on GenieLift GL-8, see the separate warranty terms provided by Genie found in the Genie Operator's Manual at the [Genie website](#).

For clients installing systems higher than the EIA 29 position (location of the rail that supports the rack-mounted server) in any IBM or non-IBM rack, acquire approved tools outlined in the server specifications section at [IBM Documentation](#). In situations where IBM service is required and the recommended tools are not available, there could be delays in repair actions.

### Extended Warranty Service

Extended Warranty Service is not applicable.

### Warranty service

If required, IBM provides repair or exchange service depending on the types of warranty service specified for the machine. IBM will attempt to resolve your problem over the telephone, or electronically through an IBM website. Certain machines contain remote support capabilities for direct problem reporting, remote problem determination, and resolution with IBM. You must follow the problem determination



and resolution procedures that IBM specifies. Following problem determination, if IBM determines on-site service is required, scheduling of service will depend upon the time of your call, machine technology and redundancy, and availability of parts. If applicable to your product, parts considered Customer Replaceable Units (CRUs) will be provided as part of the machine's standard warranty service.

Service levels are response-time objectives and are not guaranteed. The specified level of warranty service may not be available in all worldwide locations. Additional charges may apply outside IBM's normal service area. Contact your local IBM representative or your reseller for country-specific and location-specific information.

### ***CRU Service***

IBM provides replacement CRUs to you for you to install. CRU information and replacement instructions are shipped with your machine and are available from IBM upon your request. CRUs are designated as being either a Tier 1 (mandatory) or a Tier 2 (optional) CRU.

#### ***Tier 1 (mandatory) CRU***

Installation of Tier 1 CRUs, as specified in this announcement, is your responsibility. If IBM installs a Tier 1 CRU at your request, you will be charged for the installation.

The following parts have been designated as Tier 1 CRUs:

- Bezel
- Service Cover
- Op Panel
- Op Panel -- LCD
- Blower
- RDX Docking Station
- RDX Cartridge
- RDX Power Cable
- Front USB Cable
- NVMe drive
- NVMe Filler
- DDIMM Cover for Retention
- DDIMM Filler
- Air Baffle
- Time of Day Battery
- TPM Card
- Processor VRM
- Processor Heatsink
- PCIe Adapter
- Power Supply
- Power Distribution Signal Cable

#### ***Tier 2 (optional) CRU***

You may install a Tier 2 CRU yourself or request IBM to install it, at no additional charge.

Based upon availability, CRUs will be shipped for next-business-day (NBD) delivery. IBM specifies, in the materials shipped with a replacement CRU, whether a defective CRU must be returned to IBM. When return is required, return instructions and a container are shipped with the replacement CRU. You may be charged for the replacement CRU if IBM does not receive the defective CRU within 15 days of your receipt of the replacement.

The following parts have been designated as Tier 2 CRUs:

- Op Panel -- LCD Cable
- Blower Power Cable

### ***CRU and On-site Service***

At IBM's discretion, you will receive specified CRU service, or IBM will repair the failing machine at your location and verify its operation. You must provide a suitable working area to allow disassembly and reassembly of the IBM machine. The area must be clean, well-lit, and suitable for the purpose.

Service level is:

- 9 hours per day, Monday through Friday, excluding holidays, next-business-day response. Calls must be received by 3:00 PM local time in order to qualify for next-business-day response.

### ***Warranty service***

IBM is now shipping machines with selected non-IBM parts that contain an IBM field replaceable unit (FRU) part number label. These parts are to be serviced during the IBM machine warranty period. IBM is covering the service on these selected non-IBM parts as an accommodation to their customers, and normal warranty service procedures for the IBM machine apply.

### ***International Warranty Service***

International Warranty Service allows you to relocate any machine that is eligible for International Warranty Service and receive continued warranty service in any country where the IBM machine is serviced. If you move your machine to a different country, you are required to report the machine information to your Business Partner or IBM representative.

The warranty service type and the service level provided in the servicing country may be different from that provided in the country in which the machine was purchased. Warranty service will be provided with the prevailing warranty service type and service level available for the eligible machine type in the servicing country, and the warranty period observed will be that of the country in which the machine was purchased.

The following types of information can be found on the [International Warranty Service](#) website

- Machine warranty entitlement and eligibility
- Directory of contacts by country with technical support contact information
- Announcement Letters

### ***Warranty service upgrades***

During the warranty period, warranty service upgrades provide an enhanced level of On-site Service for an additional charge. Service levels are response-time objectives and are not guaranteed. See the Warranty services section for additional details.

IBM will attempt to resolve your problem over the telephone or electronically by access to an IBM website. Certain machines contain remote support capabilities for direct problem reporting, remote problem determination, and resolution with IBM. You must follow the problem determination and resolution procedures that IBM specifies. Following problem determination, if IBM determines on-site service is required, scheduling of service will depend upon the time of your call, machine technology and redundancy, and availability of parts.

### ***Maintenance service options***

For additional information about IBM Power Expert Care services and support options, see announcement [622-006](#), dated July 12, 2022.

### ***Non-IBM parts service***

Under certain conditions, IBM provides services for selected non-IBM parts at no additional charge for machines that are covered under warranty service upgrades or maintenance services.

This service includes hardware problem determination (PD) on the non-IBM parts (for example, adapter cards, PCMCIA cards, disk drives, memory) installed within IBM machines and provides the labor to replace the failing parts at no additional charge.

If IBM has a Technical Service Agreement with the manufacturer of the failing part, or if the failing part is an accommodations part (a part with an IBM FRU label), IBM may also source and replace the failing part at no additional charge. For all other non-IBM parts, customers are responsible for sourcing the parts. Installation labor is provided at no additional charge, if the machine is covered under a warranty service upgrade or a maintenance service.

### ***Usage plan machine***

No

### ***IBM hourly service rate classification***

Two

When a type of service involves the exchange of a machine part, the replacement may not be new, but will be in good working order.

## **General terms and conditions**

---

### ***Field-installable features***

Yes

### ***Model conversions***

No

### ***Machine installation***

Client setup. Clients are responsible for installation according to the instructions IBM provides with the machine.

### ***Graduated program license charges apply***

No

### ***Licensed Machine Code***

IBM Machine Code is licensed for use by a client on the IBM machine for which it was provided by IBM under the terms and conditions of the IBM License Agreement for Machine Code, to enable the machine to function in accordance with its specifications, and only for the capacity authorized by IBM and acquired by the client. You can obtain the agreement by contacting your IBM representative. It can also be found on the [License Agreement for Machine Code and Licensed Internal Code](#)

Machine using LMC Type Model 9105-41B

Access to Machine Code updates is conditioned on entitlement and license validation in accordance with IBM policy and practice. IBM may verify entitlement through

client number, serial number, electronic restrictions, or any other means or methods employed by IBM in its discretion.

If the machine does not function as warranted and your problem can be resolved through your application of downloadable Machine Code, you are responsible for downloading and installing these designated Machine Code changes as IBM specifies. If you would prefer, you may request IBM to install downloadable Machine Code changes; however, you may be charged for that service.

### **Educational allowance**

A reduced charge is available to qualified education clients. The educational allowance may not be added to any other discount or allowance.

The educational allowance is 8 percentage for the products in this announcement.

---

## **Prices**

For additional information and current prices, contact your local IBM representative or IBM Business Partner.

### **Product charges**

The following are newly announced features on the specific models of the IBM Power 9105 machine type:

Description	Model number	Feature number	Purchase price	Minimum Initial/Monthly Maint. charge	MES/Both/support	RP CSU	MES
IBM Power S1014	41B						Yes
EMEA Bulk	MES Indicator 41B	0004			MES		Yes No
One CSC Billing Unit	41B	0010			Both		Yes No
Ten CSC Billing Units	41B	0011			Both		Yes No
Mirrored System Disk Level, Sp	41B	0040			Both		Yes No
Device Parity Protection All	41B	0041			Both		Yes No
Device Parity RAID 6 All	41B	0047			Both		Yes No
RISC to RISC Data Migration	41B	0205			Initial		N/A No
AIX Partition Specify	41B	0265			Both		Yes No
Linux Partition Specify	41B	0266			Both		Yes No
IBM i Partition Specify	41B	0267			Both		Yes No
Specify Custom Data Protection	41B	0296			Both		Yes No
Mirrored Level system Specify	41B	0308			Both		Yes No

RAID Hot Spare Specify	41B	0347	Both	Yes	No
CBU Specify	41B	0444	Initial	N/A	No
Customer Specified Placement	41B	0456	Initial	N/A	No
Load Source Not in CEC	41B	0719	Both	Yes	No
SAN Load Source Specify	41B	0837	Both	Yes	No
US TAA Compliance Indicator	41B	0983	Both	Yes	No
Asm in USA manufacturing plant	41B	0984	Both	Yes	No
USB 500 GB Removable Disk Dr	41B	1107	Both	Yes	No
Custom Serv. Specify, Roch	41B	1140	Both	Yes	No
300GB 15k RPM SAS SFF-2 Disk	41B	1953	Support	Yes	No
600GB SFF-2 HDD AIX/Linux	41B	1964	Support	Yes	No
Primary OS - IBM i	41B	2145	Both	Yes	No
Primary OS AIX	41B	2146	Both	Yes	No
Primary OS Linux	41B	2147	Both	Yes	No
Factory Deconfiguration of 1 c	41B	2319	Initial	N/A	No
6Foot Extend.Cbl for Displays	41B	4242	Support	Yes	No
Rack Integration Services	41B	4649	Initial	N/A	No
No Factory Integration Ind.	41B	4650	Initial	N/A	No
Rack Indicator, Rack 1	41B	4651	Initial	N/A	No
Rack Indicator, Rack 2	41B	4652	Initial	N/A	No
Rack Indicator, Rack 3	41B	4653	Initial	N/A	No
Rack Indicator, Rack 4	41B	4654	Initial	N/A	No
Rack Indicator, Rack 5	41B	4655	Initial	N/A	No
Rack Indicator, Rack 6	41B	4656	Initial	N/A	No
Rack Indicator, Rack 7	41B	4657	Initial	N/A	No
Rack Indicator, Rack 8	41B	4658	Initial	N/A	No
Rack Indicator, Rack 9	41B	4659	Initial	N/A	No
Rack Indicator, Rack 10	41B	4660	Initial	N/A	No
Rack Indicator, Rack 11	41B	4661	Initial	N/A	No
Rack Indicator, Rack 12	41B	4662	Initial	N/A	No
Rack Indicator, Rack 13	41B	4663	Initial	N/A	No
Rack Indicator, Rack 14	41B	4664	Initial	N/A	No
Rack Indicator, Rack 15	41B	4665	Initial	N/A	No
Rack Indicator, Rack 16	41B	4666	Initial	N/A	No

Solution Edition for IBM i	41B	4928	Initial	N/A	No
Software Preload Required	41B	5000	Initial	N/A	No
PowerVM Enterprise Edition	41B	5228	Both	Yes	No
Sys Console On HMC	41B	5550	Both	Yes	No
Sys Console-Ethernet LAN	41B	5557	Initial	N/A	No
PCIe2 4-port 1GbE Adapter	41B	5899	Both	Yes	No
Pwr Crd 4.3m 14ft to IBM PDU	41B	6458	Both	Yes	No
Pwr Crd (14FT), Drwr - OEM PDU	41B	6460	Both	Yes	No
Pwr Crd 4.3m 14ft wall OEM PDU	41B	6469	Both	Yes	No
Pwr Crd 1.8m 6ft wall 125V/15A	41B	6470	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6471	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6472	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6473	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6474	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6475	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6476	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6477	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6478	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6488	Both	Yes	No
4.3m 14 Ft 3PH/32A Pwr Cord	41B	6489	Both	Yes	No
4.3m (14 Ft) 1PH/63A Pwr Cord	41B	6491	Both	Yes	No
4.3m (14 Ft) 1PH/60A PwrCord	41B	6492	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6493	Both	Yes	No
Pwr Crd 2.7m 9ft wall OEM PDU	41B	6494	Both	Yes	No
Pwr Crd 2.7m 9ft wall 250V,10A	41B	6496	Both	Yes	No
Power Cable Drawer to IBM PD	41B	6577	Both	Yes	No
Pwr Crd 2.7m 9ft wall 125V,15A	41B	6651	Both	Yes	No
4.3m 3PH/16A Power Cord	41B	6653	Both	Yes	No
4.3m 1PH/30A (24A derated)	41B	6654	Both	Yes	No
4.3m (14-Ft) 1PH/30A PwrCord	41B	6655	Both	Yes	No
4.3m 14Ft 1PH/32A Power Cord	41B	6656	Both	Yes	No
4.3m 14Ft 1PH/32A PwrCord	41B	6657	Both	Yes	No
4.3m (14-Ft) 1PH/30A Korea	41B	6658	Both	Yes	No
Pwr.Cord(9ft),To wall/OEM PDU	41B	6659	Both	Yes	No
Pwr Crd 14ft 4.3m wall OEM PDU	41B	6660	Both	Yes	No
Pwr Crd 2.8m 9.2ft PDU	41B	6665	Both	Yes	No
4.3m 14Ft 3PH/32A Pwr Cd Aus	41B	6667	Both	Yes	No

Pwr Crd 4.3M, Drwr - OEM PDU 41B	6669	Both	Yes	No
Pwr Crd 2.7m, Drwr - IBM PDU 41B	6671	Both	Yes	No
Pwr Crd 2M, Drwr - IBM PDU 41B	6672	Both	Yes	No
Pwr Crd 2.7m 9ft Wall OEM PDU 41B	6680	Both	Yes	No
Intelligent PDU+ 1 EIA Unit 41B	7109	Support	Yes	No
Power Distribution Unit 41B	7188	Both	Yes	No
PowDistribUnit(US)Fixed PowCrd 41B	7196	Support	Yes	No
Order Routing Indicator Syste 41B	9169	Initial	N/A	No
Language Group Spcf-US Eng 41B	9300	Initial	N/A	No
New AIX License Core Counter 41B	9440	Initial	N/A	No
New IBM i Lic Core Counter 41B	9441	Initial	N/A	No
New Red Hat Lic Core Counter 41B	9442	Initial	N/A	No
New SUSE Lic Core Counter 41B	9443	Initial	N/A	No
Other AIX Lic Core Counter 41B	9444	Initial	N/A	No
Other Linux Lic Core Counter 41B	9445	Initial	N/A	No
3rd Party Linux Lic Core Cnt 41B	9446	Initial	N/A	No
VIOS Core Counter 41B	9447	Initial	N/A	No
Other License Core Counter 41B	9449	Initial	N/A	No
Month Indicator 41B	9461	Initial	N/A	No
Day Indicator 41B	9462	Initial	N/A	No
Hour Indicator 41B	9463	Initial	N/A	No
Minute Indicator 41B	9464	Initial	N/A	No
Qty Indicator 41B	9465	Initial	N/A	No
Countable Member Indicator 41B	9466	Initial	N/A	No
Language Group Spcf-Dutch 41B	9700	Initial	N/A	No
Language Group Spcf-French 41B	9703	Initial	N/A	No
Language Group Spcf-German 41B	9704	Initial	N/A	No
Language Group Spcf-Polish 41B	9705	Initial	N/A	No
Lang Group Specify - Norwegian 41B	9706	Initial	N/A	No
Lang.Group Spcf-Portuguese 41B	9707	Initial	N/A	No
Language Group Spcf-Spanish 41B	9708	Initial	N/A	No
Language Group Spcf-Italian 41B	9711	Initial	N/A	No
Langua Gr Speci Canadian Frenc 41B	9712	Initial	N/A	No
Language Group Spcf-Japanese 41B	9714	Initial	N/A	No
Language Group Specify Tr Chin 41B	9715	Initial	N/A	No
Language Group Spcf-Korean 41B	9716	Initial	N/A	No
Language Group Spcf-Turkish 41B	9718	Initial	N/A	No

Language Group Spcf-Hungarian	41B	9719	Initial	N/A	No
Language Group Spcf-Slovakian	41B	9720	Initial	N/A	No
Language Group Spcf-Russian	41B	9721	Initial	N/A	No
Lang Group Spcf Simpl Chinese	41B	9722	Initial	N/A	No
Language Group Spcf-Czech	41B	9724	Initial	N/A	No
Language Group Spcf-Romanian	41B	9725	Initial	N/A	No
Lang Group Specify - Croatian	41B	9726	Initial	N/A	No
Language Group Spcf-Slovenian	41B	9727	Initial	N/A	No
Lang Group Specify - Braz Port	41B	9728	Initial	N/A	No
Lang Group Specify - Thai	41B	9729	Initial	N/A	No
10m QSFP+ MTP Optical Cable	41B	EB2J	Both	Yes	No
30m QSFP+ MTP Optical Cable	41B	EB2K	Both	Yes	No
AC Titanium PS 1600W	41B	EB3S	Both	Yes	No
AC Titanium PS 1200W	41B	EB3W	Both	Yes	No
Lift tool GenieLift GL-8	41B	EB3Z	Both	Yes	No
10GbE Optical Transc SFP+ SR	41B	EB46	Both	Yes	No
25GbE Opt Transceiver SFP28	41B	EB47	Both	Yes	No
1GbE Base-T Transceiver RJ45	41B	EB48	Both	Yes	No
QSFP28 to SFP28 Connector	41B	EB49	Both	Yes	No
0.5 SFP/25GbE CU Cable	41B	EB4J	Both	Yes	No
1.0 SFP/25GbE CU Cable	41B	EB4K	Both	Yes	No
2.0 SFP/25GbE CU Cable	41B	EB4M	Both	Yes	No
2.5 QSFP28/100GbE CU Cable	41B	EB4P	Both	Yes	No
Service wedge shelf for EB3Z	41B	EB4Z	Both	No	No
QSFP+ 40GbE Transceiver	41B	EB57	Both	Yes	No
100GbE optic Transc QSFP28	41B	EB59	Both	Yes	No
1.0M 100GbE Cu Cable QSFP28	41B	EB5K	Both	Yes	No
1.5M 100GbE Cu Cable QSFP28	41B	EB5L	Both	Yes	No
2.0M 100GbE Cu Cable QSFP28	41B	EB5M	Both	Yes	No
3M 100GbE optic Cable QSFP28	41B	EB5R	Both	Yes	No
5M 100GbE optic Cable QSFP28	41B	EB5S	Both	Yes	No
10M 100GbE optic Cable QSFP28	41B	EB5T	Both	Yes	No
15M 100GbE optic Cable QSFP28	41B	EB5U	Both	Yes	No
20M 100GbE optic Cable QSFP28	41B	EB5V	Both	Yes	No
30M 100GbE optic Cable QSFP28	41B	EB5W	Both	Yes	No
50M 100GbE optic Cable QSFP28	41B	EB5X	Both	Yes	No
IBM i 7.3 Indicator	41B	EB73	Both	Yes	No



IBM i 7.4 Indicator	41B	EB74	Both	Yes	No
IBM i 7.5 Indicator	41B	EB75	Both	Yes	No
PCIe3 2-Port 10Gb NIC&ROCE	41B	EC2S	Support	Yes	No
PCIe3 2-Port 25/10Gb NIC&Ro	41B	EC2U	Both	Yes	No
PCIe3 x8 1.6 TB NVMe AIX/Lin	41B	EC5B	Support	Yes	No
PCIe3 x8 3.2 TB NVMe AIX/Lin	41B	EC5D	Support	Yes	No
PCIe3 x8 6.4 TB NVMe AIX/Lin	41B	EC5F	Support	Yes	No
Enterprise 6.4TB NVMe U.2	41B	EC5V	Both	Yes	No
Enterprise 6.4TB NVMe U.2	41B	EC5W	Both	Yes	No
Mainstream 800GB SSD NVMe	41B	EC5X	Support	Yes	No
PCIe4 2-port 100Gb ROCE EN	41B	EC66	Both	Yes	No
PCIe2 2-Port USB 3.0 Adapter	41B	EC6K	Both	Yes	No
PCIe3 x8 1.6TB NVMe IBMi	41B	EC6V	Support	Yes	No
PCIe3 x8 3.2TB NVMe IBM i	41B	EC6X	Support	Yes	No
PCIe3 x8 6.4TB NVMe IBM i	41B	EC6Z	Support	Yes	No
PCIe4 2-port 100Gb Crypto	41B	EC78	Both	Yes	No
PCIe4 1.6TB NVMe Flash Adapt	41B	EC7B	Both	Yes	No
PCIe4 3.2TB NVMe Flash Adapt	41B	EC7D	Both	Yes	No
PCIe4 6.4TB NVMe Flash Adapt	41B	EC7F	Both	Yes	No
PCIe4 1.6TB NVMe Flash Adapt	41B	EC7K	Both	Yes	No
PCIe4 3.2TB NVMe Flash Adapt	41B	EC7M	Both	Yes	No
PCIe4 6.4TB NVMe Flash Adapt	41B	EC7P	Both	Yes	No
800GB Mainstream NVMe U.2	41B	EC7T	Both	Yes	No
SAS X Cable 3m - HD Narrow	41B	ECBJ	Both	Yes	No
SAS X Cable 6m - HD Narrow	41B	ECBK	Both	Yes	No
SAS YO Cable 1.5m - HD Narrow	41B	ECBT	Both	Yes	No
SAS YO Cable 3m - HD Narrow	41B	ECBU	Both	Yes	No
SAS YO Cable 6m - HD Narrow	41B	ECBV	Both	Yes	No
SAS YO Cable 10m - HD Narrow	41B	ECBW	Both	Yes	No
SAS AE1 Cable 4m - HD Narrow	41B	ECBY	Both	Yes	No
SAS YE1 Cable 3m - HD Narrow	41B	ECBZ	Both	Yes	No
3M Optical Cable Pair	41B	ECC7	RPO Only	N/A	No
10M Optical Cable Pair	41B	ECC8	RPO Only	N/A	No
Port Converter Cable for UPS	41B	ECCF	Both	Yes	No
3M Copper CXP Cable Pair	41B	ECCS	Both	Yes	No
3M Active Optical Cable Pair	41B	ECCX	Both	Yes	No
10M Active Optical Cbl Pair	41B	ECCY	Both	Yes	No

3.0M SAS X12 Cable	41B	ECDJ	Both	Yes	No
4.5M SAS X12 Cable	41B	ECDK	Both	Yes	No
10M SAS X12 Cable	41B	ECDL	Both	Yes	No
1.5M SAS Y012 Cable	41B	ECDT	Both	Yes	No
3.0M SAS Y012 Cable	41B	ECDU	Both	Yes	No
4.5M SAS Y012 Cable	41B	ECDV	Both	Yes	No
10M SAS Y012 Cable	41B	ECDW	Both	Yes	No
0.6M SAS AA12 Cable	41B	ECE0	Both	Yes	No
3.0M SAS AA12 Cable	41B	ECE3	Both	Yes	No
4.5M SAS AA12 Cable	41B	ECE4	Both	Yes	No
4.3m (14-Ft) PDU to wall Pwr	41B	ECJ5	Both	Yes	No
4.3m (14-Ft) PDU to wall Pwr	41B	ECJ6	Both	Yes	No
4.3m (14-Ft) PDU to wall Pwr	41B	ECJ7	Both	Yes	No
High Function 9xC19 PDU plus	41B	ECJJ	Both	Yes	No
High Function 9xC19 PDU plus	41B	ECJL	Both	Yes	No
High Function 12xC13 PDU plus	41B	ECJN	Both	Yes	No
High Function 12xC13 PDU plus	41B	ECJQ	Both	Yes	No
Custom Serv. Specify, Mexico	41B	ECSM	Both	Yes	No
Custom Serv. Spec Poughkeepsie	41B	ECSP	Both	Yes	No
Optical wrap Plug	41B	ECW0	Both	Yes	No
SAP HANA TRACKING FEAT	41B	EHKV	Both	Yes	No
Boot / Load in EXP24SX Specify	41B	EHR2	Both	Yes	No
SSD Placement Ind- #ESLS/#ELLS	41B	EHS2	Both	Yes	No
PCIe3 RAID SAS Adapter 4-port	41B	EJ0J	Both	Yes	No
PCIe3 12GB Cache RAID SAS Adap	41B	EJ0L	Support	Yes	No
PCIe3 SAS Tape/DVD Adapter	41B	EJ10	Both	Yes	No
PCIe3 12GB Cache RAID+ SAS Ada	41B	EJ14	Both	Yes	No
Backplane w/eight NVMe U.2	41B	EJ1Y	Both	No	No
PCIe X16 to CXP Adapter	41B	EJ20	RPO Only	Yes	No
PCIe4 x16 to CXP Adapter	41B	EJ2A	Both	Yes	No
PCIe3 Crypto Coproc noBSC 4767	41B	EJ32	Support	Yes	No
PCIe3 Crypto Coproc BSC-3 4767	41B	EJ33	Support	Yes	No
PCIe3 Crypto Coproc 4769	41B	EJ35	Both	Yes	No
PCIe3 Crypto Coproc BSC4769	41B	EJ37	Both	Yes	No
Non-paired Indicator EJ0L PCIe	41B	EJRL	MES	Yes	No
Non-paired Indicator EJ0L PCIe	41B	EJRU	MES	Yes	No
Front OEM Bezel 16 NVMe-bay	41B	EJUV	Both	No	No

Front OEM Bezel 16 NVMe/RDX	41B	EJUX	Both	No	No
IBM Cover/Doors 16-NVMe	41B	EJUY	Both	No	No
OEM Cover/Doors 16-NVMe	41B	EJUZ	Both	No	No
IBM Cover/Doors 16-NVMe/RDX	41B	EJVY	Both	No	No
OEM Cover/Doors 16-NVMe/RDX	41B	EJVZ	Both	No	No
Specify Mode-1 & CEC Ports 2Y0	41B	EJW0	Both	Yes	No
Specify Mode-1 for EXP24SX 1&1	41B	EJW1	Both	Yes	No
Specify Mode-1 for EXP24SX 2&2	41B	EJW2	Both	Yes	No
Specify Mode-2 for EXP24SX 2&2	41B	EJW3	Both	Yes	No
Specify Mode-2 for EXP24SX 4&2	41B	EJW4	Both	Yes	No
Specify Mode-4 for EXP24SX 4&2	41B	EJW5	Both	Yes	No
Specify Mode-2 for EXP24SX 1&2	41B	EJW6	Both	Yes	No
Specify Mode-2 for EXP24SX 2&2	41B	EJW7	Both	Yes	No
Specify Mode-2 for EXP24SX 1&1	41B	EJWA	Both	Yes	No
Specify Mode-2 for EXP24SX 2&1	41B	EJWB	Both	Yes	No
Specify Mode-4 for EXP24SX 1&1	41B	EJWC	Both	Yes	No
Specify Mode-4 for EXP24SX 2&1	41B	EJWD	Both	Yes	No
Specify Mode-4 for EXP24SX 3&2	41B	EJWE	Both	Yes	No
Specify Mode-1 for EXP24SX 2&2	41B	EJWF	Both	Yes	No
Specify Mode-2 for EXP24SX 2&2	41B	EJWG	Both	Yes	No
Specify Mode-2 for EXP24SX 2&1	41B	EJWH	Both	Yes	No
Specify Mode-2 for EXP24SX 4&2	41B	EJWJ	Both	Yes	No
Front IBM Bezel 16 NVMe-bays	41B	EJXU	Both	No	No
Front IBM Bezel 16 NVMe/RDX	41B	EJXW	Both	No	No
300GB 15k RPM SAS SFF-2 Disk	41B	EL1P	Support	Yes	No
600GB 10k RPM SAS SFF-2 Disk	41B	EL1Q	Support	Yes	No
ESMD Load Source Specify	41B	EL9D	Both	Yes	No
ESMH Load Source Specify	41B	EL9H	Both	Yes	No
ESMS Load Source Specify	41B	EL9S	Both	Yes	No
ESMX Load Source Specify	41B	EL9X	Both	Yes	No
PDU Access Cord 0.38m	41B	ELC0	MES	Yes	No
PwrCrd 4.3m 14ft PDU to Wall	41B	ELC1	Both	Yes	No
PwrCrd 4.3m 14ft PDU to Wall	41B	ELC2	Both	Yes	No
Power Cord - Drawer to PDU	41B	ELC5	Both	Yes	No
600GB 10K RPM SFF-2 Disk 4K	41B	ELEV	Support	Yes	No
1.2TB 10K RPM SFF-2 Disk 4K	41B	ELF3	Support	Yes	No
1.8TB 10K RPM SFF-2 Disk 4K	41B	ELFT	Support	Yes	No

ESKM Load Source Specify	41B	ELKM	Both	Yes	No
ESKR Load Source Specify	41B	ELKR	Both	Yes	No
ESKV Load Source Specify	41B	ELKV	Both	Yes	No
ESKZ Load Source Specify	41B	ELKZ	Both	Yes	No
ES1F Load Source Specify	41B	ELS3	Both	Yes	No
ES1K Load Source Specify	41B	ELSG	Both	Yes	No
ES1H Load Source Specify	41B	ELSQ	Both	Yes	No
#ESF2 Load Source Specify	41B	ELT2	Both	Yes	No
#ESFS Load Source Specify	41B	ELTS	Both	Yes	No
#ESEU Load Source Specify	41B	ELTU	Both	Yes	No
ESK9 Load Source Specify	41B	ELU9	Both	Yes	No
ESKD Load Source Specify	41B	ELUD	Both	Yes	No
ESKH Load Source Specify	41B	ELUH	Both	Yes	No
ESJK Load Source Specify	41B	ELUK	Support	Yes	No
#ESNL Load Source Specify	41B	ELUL	Both	Yes	No
ESJM Load Source Specify	41B	ELUM	Support	Yes	No
ESJP Load Source Specify	41B	ELUP	Support	Yes	No
#ESNQ Load Source Specify	41B	ELUQ	Both	Yes	No
ESJR Load Source Specify	41B	ELUR	Support	Yes	No
EC5W Load Source Specify	41B	ELUW	Both	Yes	No
ETK9 Load Source Specify	41B	ELV9	Both	Yes	No
ETKD Load Source Specify	41B	ELVD	Both	Yes	No
ETKH Load Source Specify	41B	ELVH	Both	Yes	No
EC7K Load Source Specify	41B	ELVK	Both	Yes	No
EC7M Load Source Specify	41B	ELVM	Both	Yes	No
EC7P Load Source Specify	41B	ELVP	Both	Yes	No
ES3A Load Source Specify	41B	ELYA	Both	Yes	No
ES3C Load Source Specify	41B	ELYC	Both	Yes	No
ES3E Load Source Specify	41B	ELYE	Both	Yes	No
ES3G Load Source Specify	41B	ELYG	Both	Yes	No
ES95 Load Source Specify	41B	ELZ5	Support	Yes	No
ESNB Load Source Specify	41B	ELZB	Support	Yes	No
ESNF Load Source Specify	41B	ELZF	Support	Yes	No
32GB DDR4 Memory (2x16GB)	41B	EM6N	Both	No	No
64GB DDR4 Memory (2x32GB)	41B	EM6W	Both	No	No
128GB DDR4 Memory (2x64GB)	41B	EM6X	Both	No	No
256GB DDR4 Memory (2x128GB)	41B	EM6Y	Both	No	No

PCIe Gen3 I/O Expansion Drawer	41B	EMX0	Both	Yes	No
AC Power Supply Conduit	41B	EMXA	Both	Yes	No
PCIe3 6-Slot Fanout Module	41B	EMXF	RPO Only	N/A	No
PCIe3 6-Slot Fanout Module	41B	EMXG	RPO Only	N/A	No
PCIe3 6-Slot Fanout Mod	41B	EMXH	Both	Yes	No
1m 10GbE Cable SFP+ Act Twinax	41B	EN01	Both	Yes	No
3m 10GbE Cable SFP+ Act Twinax	41B	EN02	Both	Yes	No
5m 10GbE Cable SFP+ Act Twinax	41B	EN03	Both	Yes	No
PCIe2 4-pt(10+1 GbE)SR+RJ45	41B	EN0S	Support	Yes	No
PCIe2 4-pt(10+1GbE)CRSR+RJ45	41B	EN0U	Support	Yes	No
PCIe2 2-pt 10/1GbE BaseT RJ45	41B	EN0W	Both	Yes	No
PCIe3 32Gb 2-port FC Adapter	41B	EN1A	Both	Yes	No
PCIe3 16Gb 4-port FC Adapter	41B	EN1C	Both	Yes	No
PCIe3 16Gb 4-port FC Adapter	41B	EN1E	Both	Yes	No
PCIe3 2-Port 16Gb FC Adapter	41B	EN1G	Both	Yes	No
PCIe4 32Gb 2-port FC Adapter	41B	EN1J	Both	Yes	No
PCIe3 16Gb 2-P Fibre Channel	41B	EN2A	Both	Yes	No
188 GB IBMi NVMe Load Source	41B	ENS1	Both	Yes	No
393 GB IBMi NVMe Load Source	41B	ENS2	Both	Yes	No
200GB IBM i NVMe Load Source	41B	ENSA	Both	Yes	No
400GB IBM i NVMe Load Source	41B	ENSB	Both	Yes	No
Spcfy Config IBMi NAMESpaces	41B	ENSM	Initial	N/A	No
Deactivation of LPM	41B	EPA0	Both	Yes	No
One Proc Activation for EPG2	41B	EPF6	Both	Yes	No
One Proc Activation for EPG0	41B	EPFT	Both	Yes	No
4-core 3.0/3.90 GHZ Power10	41B	EPG0	Both	No	No
8-core 3.00/3.90 GHZ Power10	41B	EPG2	Both	No	No
Horizontal PDU Mounting Hardwr	41B	EPTH	Both	Yes	No
High Function 9xC19 PDU	41B	EPTJ	Support	Yes	No
High Function 9xC19 PDU 3Phase	41B	EPTL	Support	Yes	No
High Function 12xC13 PDU	41B	EPTN	Support	Yes	No
High Function 12xC13 PDU 3-Phs	41B	EPTQ	Support	Yes	No
Rack-Mount Tower to Rack Con	41B	ERKZ	MES	No	No
Enterprise 1.6TB NVMe U.2	41B	ES1E	Both	Yes	No
Enterprise 1.6TB NVMe U.2	41B	ES1F	Both	Yes	No

Enterprise 3.2TB NVMe U.2	41B	ES1G	Both	Yes	No
Enterprise 3.2TB NVMe U.2	41B	ES1H	Both	Yes	No
Enterprise 800GB NVMe U.2	41B	ES1K	Both	Yes	No
Enterprise 800GB NVMe U.2	41B	ES3A	Both	Yes	No
Enterprise 1.6TB NVMe U.2	41B	ES3B	Both	Yes	No
Enterprise 1.6TB NVMe U.2	41B	ES3C	Both	Yes	No
Enterprise 3.2TB NVMe U.2	41B	ES3D	Both	Yes	No
Enterprise 3.2TB NVMe U.2	41B	ES3E	Both	Yes	No
Enterprise 6.4TB NVMe U.2	41B	ES3F	Both	Yes	No
Enterprise 6.4TB NVMe U.2	41B	ES3G	Both	Yes	No
387GB Enterprise SAS 4k SFF2	41B	ES94	Support	Yes	No
387GB Enterprise SAS 4k SFF2	41B	ES95	Support	Yes	No
387GB Enterprise SAS 5xxSFF2	41B	ESB2	Support	Yes	No
775GB Enterprise SAS 5xxSFF2	41B	ESB6	Support	Yes	No
387GB Enterprise SAS 4k SFF2	41B	ESBA	Support	Yes	No
387GB Enterprise SAS 4k SFF2	41B	ESBB	Support	Yes	No
775GB Enterprise SAS 4k SFF2	41B	ESBG	Support	Yes	No
775GB Enterprise SAS 4k SFF2	41B	ESBH	Support	Yes	No
1.55TB Enterprise SAS 4kSFF2	41B	ESBL	Support	Yes	No
1.55TB Enterprise SAS 4kSFF2	41B	ESBM	Support	Yes	No
S&H - No Charge	41B	ESC0	Both	Yes	No
S&H-b	41B	ESC6	Initial	N/A	No
Virtual Capacity Exped Shipm	41B	ESCT	MES	Yes	No
iSCSI SAN Load Source AIX	41B	ES CZ	Initial	N/A	No
571GB SFF-2 HDD IBM i	41B	ESEU	Both	Yes	No
600GB SFF-2 HDD AIX/Linux	41B	ESEV	Both	Yes	No
1.1TB SFF-2 HDD IBM i	41B	ESF2	Both	Yes	No
1.2TB SFF-2 HDD AIX/Linux	41B	ESF3	Both	Yes	No
1.7TB SFF-2 HDD IBM i	41B	ESFS	Both	Yes	No
1.8TB SFF-2 HDD AIX/Linux	41B	ESFT	Both	Yes	No
387GB Enterprise SAS 5xxSFF2	41B	ESGV	Support	Yes	No
775GB Enterprise SAS 5xxSFF2	41B	ESGZ	Support	Yes	No
931GB Mainstream SAS 4k SFF2	41B	ESJ0	Support	Yes	No
931GB Mainstream SAS 4k SFF2	41B	ESJ1	Support	Yes	No
1.86TB Mainstream SAS 4kSFF2	41B	ESJ2	Support	Yes	No
1.86TB Mainstream SAS 4kSFF2	41B	ESJ3	Support	Yes	No
3.72TB Mainstream SAS 4kSFF2	41B	ESJ4	Support	Yes	No

3.72TB Mainstream SAS 4kSFF2 41B	ESJ5	Support	Yes	No
7.45TB Mainstream SAS 4kSFF2 41B	ESJ6	Support	Yes	No
7.45TB Mainstream SAS 4kSFF2 41B	ESJ7	Support	Yes	No
931GB Mainstream SAS 4k SFF2 41B	ESJJ	Support	Yes	No
931GB Mainstream SAS 4k SFF2 41B	ESJK	Support	Yes	No
1.86TB Mainstream SAS 4kSFF2 41B	ESJL	Support	Yes	No
1.86TB Mainstream SAS 4kSFF2 41B	ESJM	Support	Yes	No
3.72TB Mainstream SAS 4kSFF2 41B	ESJN	Support	Yes	No
3.72TB Mainstream SAS 4kSFF2 41B	ESJP	Support	Yes	No
7.44TB Mainstream SAS 4kSFF2 41B	ESJQ	Support	Yes	No
7.44TB Mainstream SAS 4kSFF2 41B	ESJR	Support	Yes	No
387GB Enterprise SAS 5xxSFF2 41B	ESK1	Both	Yes	No
775GB Enterprise SAS 5xxSFF2 41B	ESK3	Both	Yes	No
387GB Enterprise SAS 4k SFF2 41B	ESK8	Both	Yes	No
387GB Enterprise SAS 4k SFF2 41B	ESK9	Both	Yes	No
775GB Enterprise SAS 4k SFF2 41B	ESKC	Both	Yes	No
775GB Enterprise SAS 4k SFF2 41B	ESKD	Both	Yes	No
1.55TB Enterprise SAS 4kSFF2 41B	ESKG	Both	Yes	No
1.55TB Enterprise SAS 4kSFF2 41B	ESKH	Both	Yes	No
931GB Mainstream SAS 4k SFF2 41B	ESKK	Both	Yes	No
931GB Mainstream SAS 4k SFF2 41B	ESKM	Both	Yes	No
1.86TB Mainstream SAS 4kSFF2 41B	ESKP	Both	Yes	No
1.86TB Mainstream SAS 4kSFF2 41B	ESKR	Both	Yes	No
3.72TB Mainstream SAS 4kSFF2 41B	ESKT	Both	Yes	No
3.72TB Mainstream SAS 4kSFF2 41B	ESKV	Both	Yes	No
7.44TB Mainstream SAS 4kSFF2 41B	ESKX	Both	Yes	No
7.44TB Mainstream SAS 4kSFF2 41B	ESKZ	Both	Yes	No
Specify AC Power Supply 41B	ESLA	Both	Yes	No
ESBB Load Source Specify 41B	ESLB	Support	Yes	No
ESBH Load Source Specify 41B	ESLH	Support	Yes	No
ESBM Load Source Specify 41B	ESLM	Support	Yes	No
EXP24SX SAS Storage Enclosure 41B	ESLS	Both	Yes	No
Load Source Specify for EC6V 41B	ESLV	Support	Yes	No
Load Source Specify for EC6X 41B	ESLX	Support	Yes	No
Load Source Specify for EC6Z 41B	ESLZ	Support	Yes	No
931GB Mainstream SAS 4k SFF2 41B	ESMB	Both	Yes	No
931GB Mainstream SAS 4k SFF2 41B	ESMD	Both	Yes	No

1.86TB Mainstream SAS 4kSFF2	41B	ESMF	Both	Yes	No
1.86TB Mainstream SAS 4kSFF2	41B	ESMH	Both	Yes	No
3.72TB Mainstream SAS 4kSFF2	41B	ESMK	Both	Yes	No
3.72TB Mainstream SAS 4kSFF2	41B	ESMS	Both	Yes	No
7.44TB Mainstream SAS 4kSFF2	41B	ESMV	Both	Yes	No
7.44TB Mainstream SAS 4kSFF2	41B	ESMX	Both	Yes	No
775GB Enterprise SAS 4k SFF2	41B	ESNA	Support	Yes	No
775GB Enterprise SAS 4k SFF2	41B	ESNB	Support	Yes	No
1.55TB Enterprise SAS 4kSFF2	41B	ESNE	Support	Yes	No
1.55TB Enterprise SAS 4kSFF2	41B	ESNF	Support	Yes	No
283GB 15K SAS SFF-2 4K HDD	41B	ESNL	Both	Yes	No
300GB 15K SAS SFF-2 4k HDD	41B	ESNM	Both	Yes	No
571GB 15K SAS SFF-2 4K HDD	41B	ESNQ	Both	Yes	No
600GB 15K SAS SFF-2 4k HDD	41B	ESNR	Both	Yes	No
300GB 15K SAS SFF-2 4k HDD	41B	ESRM	Support	Yes	No
600GB 15K SAS SFF-2 4k HDD	41B	ESRR	Support	Yes	No
AIX Update Access Key	41B	ESWK	Initial	N/A	No
387GB Enterprise SAS 5xxSFF2	41B	ETK1	Both	Yes	No
775GB Enterprise SAS 5xxSFF2	41B	ETK3	Both	Yes	No
387GB Enterprise SAS 4k SFF2	41B	ETK8	Both	Yes	No
387GB Enterprise SAS 4k SFF2	41B	ETK9	Both	Yes	No
775GB Enterprise SAS 4k SFF2	41B	ETKC	Both	Yes	No
775GB Enterprise SAS 4k SFF2	41B	ETKD	Both	Yes	No
1.55TB Enterprise SAS 4kSFF2	41B	ETKG	Both	Yes	No
1.55TB Enterprise SAS 4kSFF2	41B	ETKH	Both	Yes	No
1TB Removable Disk Cartridge	41B	EU01	Both	Yes	No
RDX 320 GB Removable Disk Driv	41B	EU08	Support	Yes	No
Operator Panel LCD Display	41B	EU0K	Both	Yes	No
1.5TB Removable Disk Cartridge	41B	EU15	Support	Yes	No
Cable Ties & Labels	41B	EU19	Both	Yes	No
Order Placed Indicator	41B	EU29	Both	Yes	No
Express Edition 4 core IBM i	41B	EU2C	Initial	N/A	No
2TB Removable Disk Cartrdg-RDX	41B	EU2T	Both	Yes	No
ESJ1 Load Source Specify	41B	EU41	Support	Yes	No
ESJ3 Load Source Specify	41B	EU43	Support	Yes	No
ESJ5 Load Source Specify	41B	EU45	Support	Yes	No
ESJ7 Load Source Specify	41B	EU47	Support	Yes	No



RDX USB Internal Docking	41B	EUA0	Both	Yes	No
RDX USB External Docking Sta	41B	EUA4	Support	Yes	No
Standalone USB DVD drive w/c	41B	EUA5	Both	Yes	No
Enable Virtual Serial Number	41B	EVSN	Both	Yes	No
BP Post-Sales Service 1 Day	41B	SVBP	Both	Yes	No
Post-Sales Service 1 Day	41B	SVCS	Both	Yes	No
Other Post-Sale Svcs: 1 Day	41B	SVNN	Both	Yes	No

The following are newly announced features on the specific models of the IBM Power 7965 machine type:

Description	Model	Feature	Purchase	Minimum Initial/	Monthly	MES/	RP
Machine type 7965	number	numbers	price	charge	Maint.	Both/	CSU MES
Rack Cont.spcf 9105-41B 4U	S42	ER3D		Initial		N/A	No

RP MES = Return parts, miscellaneous equipment specifications  
CSU = Customer setup

### **Pricing terms**

---

Prices in the following PDF prices link are suggested list prices on day of announcement for the U.S. only. They are provided for your information only. Dealer prices may vary, and prices may also vary by country. IBM list price does not include tax or shipping and is subject to change without notice.

[ENUS-122-028-LIST\\_PRICES\\_2022\\_07\\_12.PDF](#)

### **Annual minimum maintenance charges**

---

Not applicable

### **ServiceElect (ESA) charges**

---

For ServiceElect (ESA) maintenance service charges, contact IBM Global Services at 888-IBM-4343 (426-4343).

### **Feature conversion purchase price**

---

#### **Feature Conversions**

#### **Feature conversions for 9105-41B adapter features:**

From FC:	To FC:	Parts returned	Purchase price
EJ20 - PCIe x16 to CXP Optical or CU converter Adapter for PCIe3 Expansion Drawer	EJ2A - PCIe4 x16 to CXP Converter Adapter (support AOC)	No	
EJ35 - PCIe3 Crypto Coprocessor no BSC 4769	EJ37 - PCIe3 Crypto Coprocessor BSC-Gen3 4769	No	

#### **Feature conversions for 9105-41B cable features:**

From FC:	To FC:	Parts returned	Purchase price
ECC7 - 3M Optical Cable Pair for PCIe3 Expansion Drawer	ECCX - 3M Active Optical Cable Pair for PCIe3 Expansion Drawer	No	
ECC8 - 10M Optical Cable Pair for PCIe3 Expansion Drawer	ECCY - 10M Active Optical Cable Pair for PCIe3 Expansion Drawer	No	

**Feature conversions for 9105-41B miscellaneous features:**

From FC:	To FC:	Parts returned	Purchase price
EJUZ - OEM Cover and Doors for 16 NVMe-bays Backplane Desk-side	EJUV - Front OEM Bezel for 16 NVMe-bays Backplane Rack-Mount	No	
EJVZ - OEM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	EJUX - Front OEM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	No	
EJUY - IBM Cover and Doors for 16 NVMe-bays Backplane Desk-side	EJXU - Front IBM Bezel for 16 NVMe-bays Backplane Rack-Mount	No	
EJYV - IBM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	EJXW - Front IBM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	No	

**Feature conversions for 9105-41B rack-related features:**

From FC:	To FC:	Parts returned	Purchase price
EJXU - Front IBM Bezel for 16 NVMe-bays Backplane Rack-Mount	EJUY - IBM Cover and Doors for 16 NVMe-bays Backplane Desk-side	No	
EJUV - Front OEM Bezel for 16 NVMe-bays Backplane Rack-Mount	EJUZ - OEM Cover and Doors for 16 NVMe-bays Backplane Desk-side	No	
EJXW - Front IBM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	EJVY - IBM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	No	
EJUX - Front OEM Bezel for 16 NVMe-bays and RDX Backplane Rack-Mount	EJVZ - OEM Cover and Doors for 16 NVMe-bays and RDX Backplane Desk-side	No	
EMXF - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	EMXH - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	No	
EMXG - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	EMXH - PCIe3 6-Slot Fanout Module for PCIe3 Expansion Drawer	No	

**IBM Global Financing**

IBM Global Financing offers competitive financing to credit-qualified clients to assist them in acquiring IT solutions. Offerings include financing for IT acquisition, including hardware, software, and services, from both IBM and other manufacturers or vendors. Offerings (for all client segments: small, medium, and large enterprise), rates, terms, and availability can vary by country. Contact your local IBM Global Financing organization or go to the [IBM Global Financing](#) website for more information.

IBM Global Financing offerings are provided through IBM Credit LLC in the United States and other IBM subsidiaries and divisions worldwide to qualified commercial and government clients. Rates are based on a client's credit rating, financing terms, offering type, equipment type and options, and may vary by country. Other

restrictions may apply. Rates and offerings are subject to change, extension, or withdrawal without notice.

Financing solutions from IBM Global Financing can help you stretch your budget and affordably acquire the new product. But beyond the initial acquisition, our end-to-end approach to IT management can also help keep your technologies current, reduce costs, minimize risk, and preserve your ability to make flexible equipment decisions throughout the entire technology lifecycle.

---

## Regional availability

---

American Samoa, Guam, Marshall Islands, Federated States of Micronesia, Northern Mariana Islands, Palau, Puerto Rico, United States, and US Virgin Islands

### ***Trademarks***

IBM Consulting is a trademark of IBM Corporation in the United States, other countries, or both.

IBM, Power, PowerVM, AIX, IBM Cloud, IBM Z, IBM Research, IBM Watson, IBM Security, IBM Cloud Pak, QRadar, Resilient, i2, Guardium and MaaS360 are registered trademarks of IBM Corporation in the United States, other countries, or both.

The registered trademark Linux® is used pursuant to a sublicense from the Linux Foundation, the exclusive licensee of Linus Torvalds, owner of the mark on a world-wide basis.

Red Hat and OpenShift are registered trademarks of Red Hat Inc. in the U.S. and other countries.

Other company, product, and service names may be trademarks or service marks of others.

### ***Terms of use***

IBM products and services which are announced and available in your country can be ordered under the applicable standard agreements, terms, conditions, and prices in effect at the time. IBM reserves the right to modify or withdraw this announcement at any time without notice. This announcement is provided for your information only. Additional terms of use are located at

[Terms of use](#)

For the most current information regarding IBM products, consult your IBM representative or reseller, or go to the IBM worldwide contacts page

[IBM United States](#)

---

## Corrections

---

### **(Corrected on August 8, 2022)**

Modifications made to the Description, Limitations, and Terms and conditions sections.