

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2402<2401	4 GB TO 8 GB	*Call
2098		2403<2401	4 GB TO 12 GB	*Call
2098		2403<2402	8 GB TO 12 GB	*Call
2098		2404<2401	4 GB TO 16 GB	*Call
2098		2404<2402	8 GB TO 16 GB	*Call
2098		2404<2403	12 GB TO 16 GB	*Call
2098		2405<2401	4 GB TO 20 GB	*Call
2098		2405<2402	8 GB TO 20 GB	*Call
2098		2405<2403	12 GB TO 20 GB	*Call
2098		2405<2404	16 GB TO 20 GB	*Call
2098		2406<2401	4 GB TO 24 GB	*Call
2098		2406<2402	8 GB TO 24 GB	*Call
2098		2406<2403	12 GB TO 24 GB	*Call
2098		2406<2404	16 GB TO 24 GB	*Call
2098		2406<2405	20 GB TO 24 GB	*Call
2098		2407<2401	4 GB TO 28 GB	*Call
2098		2407<2402	8 GB TO 28 GB	*Call
2098		2407<2403	12 GB TO 28 GB	*Call
2098		2407<2404	16 GB TO 28 GB	*Call
2098		2407<2405	20 GB TO 28 GB	*Call
2098		2407<2406	24 GB TO 28 GB	*Call
2098		2408<2401	4 GB TO 32 GB	*Call
2098		2408<2402	8 GB TO 32 GB	*Call
2098		2408<2403	12 GB TO 32 GB	*Call
2098		2408<2404	16 GB TO 32 GB	*Call
2098		2408<2405	20 GB TO 32 GB	*Call
2098		2408<2406	24 GB TO 32 GB	*Call
2098		2408<2407	28 GB TO 32 GB	*Call
2098		2409<2401	4 GB TO 40 GB	*Call
2098		2409<2402	8 GB TO 40 GB	*Call
2098		2409<2403	12 GB TO 40 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2409<2404	16 GB TO 40 GB	*Call
2098		2409<2405	20 GB TO 40 GB	*Call
2098		2409<2406	24 GB TO 40 GB	*Call
2098		2409<2407	28 GB TO 40 GB	*Call
2098		2409<2408	32 GB TO 40 GB	*Call
2098		2410<2401	4 GB TO 48 GB	*Call
2098		2410<2402	8 GB TO 48 GB	*Call
2098		2410<2403	12 GB TO 48 GB	*Call
2098		2410<2404	16 GB TO 48 GB	*Call
2098		2410<2405	20 GB TO 48 GB	*Call
2098		2410<2406	24 GB TO 48 GB	*Call
2098		2410<2407	28 GB TO 48 GB	*Call
2098		2410<2408	32 GB TO 48 GB	*Call
2098		2410<2409	40 GB TO 48 GB	*Call
2098		2411<2401	4 GB TO 56 GB	*Call
2098		2411<2402	8 GB TO 56 GB	*Call
2098		2411<2403	12 GB TO 56 GB	*Call
2098		2411<2404	16 GB TO 56 GB	*Call
2098		2411<2405	20 GB TO 56 GB	*Call
2098		2411<2406	24 GB TO 56 GB	*Call
2098		2411<2407	28 GB TO 56 GB	*Call
2098		2411<2408	32 GB TO 56 GB	*Call
2098		2411<2409	40 GB TO 56 GB	*Call
2098		2411<2410	48 GB TO 56 GB	*Call
2098		2412<2401	4 GB TO 64 GB	*Call
2098		2412<2402	8 GB TO 64 GB	*Call
2098		2412<2403	12 GB TO 64 GB	*Call
2098		2412<2404	16 GB TO 64 GB	*Call
2098		2412<2405	20 GB TO 64 GB	*Call
2098		2412<2406	24 GB TO 64 GB	*Call
2098		2412<2407	28 GB TO 64 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2412<2408	32 GB TO 64 GB	*Call
2098		2412<2409	40 GB TO 64 GB	*Call
2098		2412<2410	48 GB TO 64 GB	*Call
2098		2412<2411	56 GB TO 64 GB	*Call
2098		2413<2401	4 GB TO 72 GB	*Call
2098		2413<2402	8 GB TO 72 GB	*Call
2098		2413<2403	12 GB TO 72 GB	*Call
2098		2413<2404	16 GB TO 72 GB	*Call
2098		2413<2405	20 GB TO 72 GB	*Call
2098		2413<2406	24 GB TO 72 GB	*Call
2098		2413<2407	28 GB TO 72 GB	*Call
2098		2413<2408	32 GB TO 72 GB	*Call
2098		2413<2409	40 GB TO 72 GB	*Call
2098		2413<2410	48 GB TO 72 GB	*Call
2098		2413<2411	56 GB TO 72 GB	*Call
2098		2413<2412	64 GB TO 72 GB	*Call
2098		2414<2401	4 GB TO 80 GB	*Call
2098		2414<2402	8 GB TO 80 GB	*Call
2098		2414<2403	12 GB TO 80 GB	*Call
2098		2414<2404	16 GB TO 80 GB	*Call
2098		2414<2405	20 GB TO 80 GB	*Call
2098		2414<2406	24 GB TO 80 GB	*Call
2098		2414<2407	28 GB TO 80 GB	*Call
2098		2414<2408	32 GB TO 80 GB	*Call
2098		2414<2409	40 GB TO 80 GB	*Call
2098		2414<2410	48 GB TO 80 GB	*Call
2098		2414<2411	56 GB TO 80 GB	*Call
2098		2414<2412	64 GB TO 80 GB	*Call
2098		2414<2413	72 GB TO 80 GB	*Call
2098		2415<2401	4 GB TO 88 GB	*Call
2098		2415<2402	8 GB TO 88 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2415<2403	12 GB TO 88 GB	*Call
2098		2415<2404	16 GB TO 88 GB	*Call
2098		2415<2405	20 GB TO 88 GB	*Call
2098		2415<2406	24 GB TO 88 GB	*Call
2098		2415<2407	28 GB TO 88 GB	*Call
2098		2415<2408	32 GB TO 88 GB	*Call
2098		2415<2409	40 GB TO 88 GB	*Call
2098		2415<2410	48 GB TO 88 GB	*Call
2098		2415<2411	56 GB TO 88 GB	*Call
2098		2415<2412	64 GB TO 88 GB	*Call
2098		2415<2413	72 GB TO 88 GB	*Call
2098		2415<2414	80 GB TO 88 GB	*Call
2098		2416<2401	4 GB TO 96 GB	*Call
2098		2416<2402	8 GB TO 96 GB	*Call
2098		2416<2403	12 GB TO 96 GB	*Call
2098		2416<2404	16 GB TO 96 GB	*Call
2098		2416<2405	20 GB TO 96 GB	*Call
2098		2416<2406	24 GB TO 96 GB	*Call
2098		2416<2407	28 GB TO 96 GB	*Call
2098		2416<2408	32 GB TO 96 GB	*Call
2098		2416<2409	40 GB TO 96 GB	*Call
2098		2416<2410	48 GB TO 96 GB	*Call
2098		2416<2411	56 GB TO 96 GB	*Call
2098		2416<2412	64 GB TO 96 GB	*Call
2098		2416<2413	72 GB TO 96 GB	*Call
2098		2416<2414	80 GB TO 96 GB	*Call
2098		2416<2415	88 GB TO 96 GB	*Call
2098		2417<2401	4 GB TO 104 GB	*Call
2098		2417<2402	8 GB TO 104 GB	*Call
2098		2417<2403	12 GB TO 104 GB	*Call
2098		2417<2404	16 GB TO 104 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2417<2405	20 GB TO 104 GB	*Call
2098		2417<2406	24 GB TO 104 GB	*Call
2098		2417<2407	28 GB TO 104 GB	*Call
2098		2417<2408	32 GB TO 104 GB	*Call
2098		2417<2409	40 GB TO 104 GB	*Call
2098		2417<2410	48 GB TO 104 GB	*Call
2098		2417<2411	56 GB TO 104 GB	*Call
2098		2417<2412	64 GB TO 104 GB	*Call
2098		2417<2413	72 GB TO 104 GB	*Call
2098		2417<2414	80 GB TO 104 GB	*Call
2098		2417<2415	88 GB TO 104 GB	*Call
2098		2417<2416	96 GB TO 104 GB	*Call
2098		2418<2401	4 GB TO 112 GB	*Call
2098		2418<2402	8 GB TO 112 GB	*Call
2098		2418<2403	12 GB TO 112 GB	*Call
2098		2418<2404	16 GB TO 112 GB	*Call
2098		2418<2405	20 GB TO 112 GB	*Call
2098		2418<2406	24 GB TO 112 GB	*Call
2098		2418<2407	28 GB TO 112 GB	*Call
2098		2418<2408	32 GB TO 112 GB	*Call
2098		2418<2409	40 GB TO 112 GB	*Call
2098		2418<2410	48 GB TO 112 GB	*Call
2098		2418<2411	56 GB TO 112 GB	*Call
2098		2418<2412	64 GB TO 112 GB	*Call
2098		2418<2413	72 GB TO 112 GB	*Call
2098		2418<2414	80 GB TO 112 GB	*Call
2098		2418<2415	88 GB TO 112 GB	*Call
2098		2418<2416	96 GB TO 112 GB	*Call
2098		2418<2417	104 GB TO 112 GB	*Call
2098		2419<2401	4 GB TO 120 GB	*Call
2098		2419<2402	8 GB TO 120 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2419<2403	12 GB TO 120 GB	*Call
2098		2419<2404	16 GB TO 120 GB	*Call
2098		2419<2405	20 GB TO 120 GB	*Call
2098		2419<2406	24 GB TO 120 GB	*Call
2098		2419<2407	28 GB TO 120 GB	*Call
2098		2419<2408	32 GB TO 120 GB	*Call
2098		2419<2409	40 GB TO 120 GB	*Call
2098		2419<2410	48 GB TO 120 GB	*Call
2098		2419<2411	56 GB TO 120 GB	*Call
2098		2419<2412	64 GB TO 120 GB	*Call
2098		2419<2413	72 GB TO 120 GB	*Call
2098		2419<2414	80 GB TO 120 GB	*Call
2098		2419<2415	88 GB TO 120 GB	*Call
2098		2419<2416	96 GB TO 120 GB	*Call
2098		2419<2417	104 GB TO 120 GB	*Call
2098		2419<2418	112 GB TO 120 GB	*Call
2098		2420<2401	4 GB TO 152 GB	*Call
2098		2420<2402	8 GB TO 152 GB	*Call
2098		2420<2403	12 GB TO 152 GB	*Call
2098		2420<2404	16 GB TO 152 GB	*Call
2098		2420<2405	20 GB TO 152 GB	*Call
2098		2420<2406	24 GB TO 152 GB	*Call
2098		2420<2407	28 GB TO 152 GB	*Call
2098		2420<2408	32 GB TO 152 GB	*Call
2098		2420<2409	40 GB TO 152 GB	*Call
2098		2420<2410	48 GB TO 152 GB	*Call
2098		2420<2411	56 GB TO 152 GB	*Call
2098		2420<2412	64 GB TO 152 GB	*Call
2098		2420<2413	72 GB TO 152 GB	*Call
2098		2420<2414	80 GB TO 152 GB	*Call
2098		2420<2415	88 GB TO 152 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2420<2416	96 GB TO 152 GB	*Call
2098		2420<2417	104 GB TO 152 GB	*Call
2098		2420<2418	112 GB TO 152 GB	*Call
2098		2420<2419	120 GB TO 152 GB	*Call
2098		2421<2401	4 GB TO 184 GB	*Call
2098		2421<2402	8 GB TO 184 GB	*Call
2098		2421<2403	12 GB TO 184 GB	*Call
2098		2421<2404	16 GB TO 184 GB	*Call
2098		2421<2405	20 GB TO 184 GB	*Call
2098		2421<2406	24 GB TO 184 GB	*Call
2098		2421<2407	28 GB TO 184 GB	*Call
2098		2421<2408	32 GB TO 184 GB	*Call
2098		2421<2409	40 GB TO 184 GB	*Call
2098		2421<2410	48 GB TO 184 GB	*Call
2098		2421<2411	56 GB TO 184 GB	*Call
2098		2421<2412	64 GB TO 184 GB	*Call
2098		2421<2413	72 GB TO 184 GB	*Call
2098		2421<2414	80 GB TO 184 GB	*Call
2098		2421<2415	88 GB TO 184 GB	*Call
2098		2421<2416	96 GB TO 184 GB	*Call
2098		2421<2417	104 GB TO 184 GB	*Call
2098		2421<2418	112 GB TO 184 GB	*Call
2098		2421<2419	120 GB TO 184 GB	*Call
2098		2421<2420	152 GB TO 184 GB	*Call
2098		2422<2401	4 GB TO 216 GB	*Call
2098		2422<2402	8 GB TO 216 GB	*Call
2098		2422<2403	12 GB TO 216 GB	*Call
2098		2422<2404	16 GB TO 216 GB	*Call
2098		2422<2405	20 GB TO 216 GB	*Call
2098		2422<2406	24 GB TO 216 GB	*Call
2098		2422<2407	28 GB TO 216 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2422<2408	32 GB TO 216 GB	*Call
2098		2422<2409	40 GB TO 216 GB	*Call
2098		2422<2410	48 GB TO 216 GB	*Call
2098		2422<2411	56 GB TO 216 GB	*Call
2098		2422<2412	64 GB TO 216 GB	*Call
2098		2422<2413	72 GB TO 216 GB	*Call
2098		2422<2414	80 GB TO 216 GB	*Call
2098		2422<2415	88 GB TO 216 GB	*Call
2098		2422<2416	96 GB TO 216 GB	*Call
2098		2422<2417	104 GB TO 216 GB	*Call
2098		2422<2418	112 GB TO 216 GB	*Call
2098		2422<2419	120 GB TO 216 GB	*Call
2098		2422<2420	152 GB TO 216 GB	*Call
2098		2422<2421	184 GB TO 216 GB	*Call
2098		2423<2401	4 GB TO 248 GB	*Call
2098		2423<2402	8 GB TO 248 GB	*Call
2098		2423<2403	12 GB TO 248 GB	*Call
2098		2423<2404	16 GB TO 248 GB	*Call
2098		2423<2405	20 GB TO 248 GB	*Call
2098		2423<2406	24 GB TO 248 GB	*Call
2098		2423<2407	28 GB TO 248 GB	*Call
2098		2423<2408	32 GB TO 248 GB	*Call
2098		2423<2409	40 GB TO 248 GB	*Call
2098		2423<2410	48 GB TO 248 GB	*Call
2098		2423<2411	56 GB TO 248 GB	*Call
2098		2423<2412	64 GB TO 248 GB	*Call
2098		2423<2413	72 GB TO 248 GB	*Call
2098		2423<2414	80 GB TO 248 GB	*Call
2098		2423<2415	88 GB TO 248 GB	*Call
2098		2423<2416	96 GB TO 248 GB	*Call
2098		2423<2417	104 GB TO 248 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		2423<2418	112 GB TO 248 GB	*Call
2098		2423<2419	120 GB TO 248 GB	*Call
2098		2423<2420	152 GB TO 248 GB	*Call
2098		2423<2421	184 GB TO 248 GB	*Call
2098		2423<2422	216 GB TO 248 GB	*Call
2098		5013<5014	A01 TO A00	*Call
2098		5013<5015	A02 TO A00	*Call
2098		5013<5016	A03 TO A00	*Call
2098		5013<5017	A04 TO A00	*Call
2098		5013<5018	A05 TO A00	*Call
2098		5013<5019	B01 TO A00	*Call
2098		5013<5020	B02 TO A00	*Call
2098		5013<5021	B03 TO A00	*Call
2098		5013<5022	B04 TO A00	*Call
2098		5013<5023	B05 TO A00	*Call
2098		5013<5024	C01 TO A00	*Call
2098		5013<5025	C02 TO A00	*Call
2098		5013<5026	C03 TO A00	*Call
2098		5013<5027	C04 TO A00	*Call
2098		5013<5028	C05 TO A00	*Call
2098		5013<5029	D01 TO A00	*Call
2098		5013<5030	D02 TO A00	*Call
2098		5013<5031	D03 TO A00	*Call
2098		5013<5032	D04 TO A00	*Call
2098		5013<5033	D05 TO A00	*Call
2098		5013<5034	E01 TO A00	*Call
2098		5013<5035	E02 TO A00	*Call
2098		5013<5036	E03 TO A00	*Call
2098		5013<5037	E04 TO A00	*Call
2098		5013<5038	E05 TO A00	*Call
2098		5013<5039	F01 TO A00	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5013<5040	F02 TO A00	*Call
2098		5013<5041	F03 TO A00	*Call
2098		5013<5042	F04 TO A00	*Call
2098		5013<5043	F05 TO A00	*Call
2098		5013<5044	G01 TO A00	*Call
2098		5013<5045	G02 TO A00	*Call
2098		5013<5046	G03 TO A00	*Call
2098		5013<5047	G04 TO A00	*Call
2098		5013<5048	G05 TO A00	*Call
2098		5013<5049	H01 TO A00	*Call
2098		5013<5050	H02 TO A00	*Call
2098		5013<5051	H03 TO A00	*Call
2098		5013<5052	H04 TO A00	*Call
2098		5013<5053	H05 TO A00	*Call
2098		5013<5054	I01 TO A00	*Call
2098		5013<5055	I02 TO A00	*Call
2098		5013<5056	I03 TO A00	*Call
2098		5013<5057	I04 TO A00	*Call
2098		5013<5058	I05 TO A00	*Call
2098		5013<5059	J01 TO A00	*Call
2098		5013<5060	J02 TO A00	*Call
2098		5013<5061	J03 TO A00	*Call
2098		5013<5062	J04 TO A00	*Call
2098		5013<5063	J05 TO A00	*Call
2098		5013<5064	K01 TO A00	*Call
2098		5013<5065	K02 TO A00	*Call
2098		5013<5066	K03 TO A00	*Call
2098		5013<5067	K04 TO A00	*Call
2098		5013<5068	K05 TO A00	*Call
2098		5013<5069	L01 TO A00	*Call
2098		5013<5070	L02 TO A00	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5013<5071	L03 TO A00	*Call
2098		5013<5072	L04 TO A00	*Call
2098		5013<5073	L05 TO A00	*Call
2098		5013<5074	M01 TO A00	*Call
2098		5013<5075	M02 TO A00	*Call
2098		5013<5076	M03 TO A00	*Call
2098		5013<5077	M04 TO A00	*Call
2098		5013<5078	M05 TO A00	*Call
2098		5013<5079	N01 TO A00	*Call
2098		5013<5080	N02 TO A00	*Call
2098		5013<5081	N03 TO A00	*Call
2098		5013<5082	N04 TO A00	*Call
2098		5013<5083	N05 TO A00	*Call
2098		5013<5084	O01 TO A00	*Call
2098		5013<5085	O02 TO A00	*Call
2098		5013<5086	O03 TO A00	*Call
2098		5013<5087	O04 TO A00	*Call
2098		5013<5088	O05 TO A00	*Call
2098		5013<5089	P01 TO A00	*Call
2098		5013<5090	P02 TO A00	*Call
2098		5013<5091	P03 TO A00	*Call
2098		5013<5092	P04 TO A00	*Call
2098		5013<5093	P05 TO A00	*Call
2098		5013<5094	Q01 TO A00	*Call
2098		5013<5095	Q02 TO A00	*Call
2098		5013<5096	Q03 TO A00	*Call
2098		5013<5097	Q04 TO A00	*Call
2098		5013<5098	Q05 TO A00	*Call
2098		5013<5099	R01 TO A00	*Call
2098		5013<5100	R02 TO A00	*Call
2098		5013<5101	R03 TO A00	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5013<5102	R04 TO A00	*Call
2098		5013<5103	R05 TO A00	*Call
2098		5013<5104	S01 TO A00	*Call
2098		5013<5105	S02 TO A00	*Call
2098		5013<5106	S03 TO A00	*Call
2098		5013<5107	S04 TO A00	*Call
2098		5013<5108	S05 TO A00	*Call
2098		5013<5109	T01 TO A00	*Call
2098		5013<5110	T02 TO A00	*Call
2098		5013<5111	T03 TO A00	*Call
2098		5013<5112	T04 TO A00	*Call
2098		5013<5113	T05 TO A00	*Call
2098		5013<5114	U01 TO A00	*Call
2098		5013<5115	U02 TO A00	*Call
2098		5013<5116	U03 TO A00	*Call
2098		5013<5117	U04 TO A00	*Call
2098		5013<5118	U05 TO A00	*Call
2098		5013<5119	V01 TO A00	*Call
2098		5013<5120	V02 TO A00	*Call
2098		5013<5121	V03 TO A00	*Call
2098		5013<5122	V04 TO A00	*Call
2098		5013<5123	V05 TO A00	*Call
2098		5013<5124	W01 TO A00	*Call
2098		5013<5125	W02 TO A00	*Call
2098		5013<5126	W03 TO A00	*Call
2098		5013<5127	W04 TO A00	*Call
2098		5013<5128	W05 TO A00	*Call
2098		5013<5129	X01 TO A00	*Call
2098		5013<5130	X02 TO A00	*Call
2098		5013<5131	X03 TO A00	*Call
2098		5013<5132	X04 TO A00	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5013<5133	X05 TO A00	*Call
2098		5013<5134	Y01 TO A00	*Call
2098		5013<5135	Y02 TO A00	*Call
2098		5013<5136	Y03 TO A00	*Call
2098		5013<5137	Y04 TO A00	*Call
2098		5013<5138	Y05 TO A00	*Call
2098		5013<5139	Z01 TO A00	*Call
2098		5013<5140	Z02 TO A00	*Call
2098		5013<5141	Z03 TO A00	*Call
2098		5013<5142	Z04 TO A00	*Call
2098		5013<5143	Z05 TO A00	*Call
2098		5014<5013	A00 TO A01	*Call
2098		5014<5015	A02 TO A01	*Call
2098		5014<5016	A03 TO A01	*Call
2098		5014<5017	A04 TO A01	*Call
2098		5014<5018	A05 TO A01	*Call
2098		5014<5019	B01 TO A01	*Call
2098		5014<5020	B02 TO A01	*Call
2098		5014<5021	B03 TO A01	*Call
2098		5014<5022	B04 TO A01	*Call
2098		5014<5023	B05 TO A01	*Call
2098		5014<5024	C01 TO A01	*Call
2098		5014<5025	C02 TO A01	*Call
2098		5014<5026	C03 TO A01	*Call
2098		5014<5027	C04 TO A01	*Call
2098		5014<5028	C05 TO A01	*Call
2098		5014<5029	D01 TO A01	*Call
2098		5014<5030	D02 TO A01	*Call
2098		5014<5031	D03 TO A01	*Call
2098		5014<5032	D04 TO A01	*Call
2098		5014<5033	D05 TO A01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5014<5034	E01 TO A01	*Call
2098		5014<5035	E02 TO A01	*Call
2098		5014<5036	E03 TO A01	*Call
2098		5014<5037	E04 TO A01	*Call
2098		5014<5038	E05 TO A01	*Call
2098		5014<5039	F01 TO A01	*Call
2098		5014<5040	F02 TO A01	*Call
2098		5014<5041	F03 TO A01	*Call
2098		5014<5042	F04 TO A01	*Call
2098		5014<5043	F05 TO A01	*Call
2098		5014<5044	G01 TO A01	*Call
2098		5014<5045	G02 TO A01	*Call
2098		5014<5046	G03 TO A01	*Call
2098		5014<5047	G04 TO A01	*Call
2098		5014<5048	G05 TO A01	*Call
2098		5014<5049	H01 TO A01	*Call
2098		5014<5050	H02 TO A01	*Call
2098		5014<5051	H03 TO A01	*Call
2098		5014<5052	H04 TO A01	*Call
2098		5014<5053	H05 TO A01	*Call
2098		5014<5054	I01 TO A01	*Call
2098		5014<5055	I02 TO A01	*Call
2098		5014<5056	I03 TO A01	*Call
2098		5014<5057	I04 TO A01	*Call
2098		5014<5058	I05 TO A01	*Call
2098		5014<5059	J01 TO A01	*Call
2098		5014<5060	J02 TO A01	*Call
2098		5014<5061	J03 TO A01	*Call
2098		5014<5062	J04 TO A01	*Call
2098		5014<5063	J05 TO A01	*Call
2098		5014<5064	K01 TO A01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5014<5065	K02 TO A01	*Call
2098		5014<5066	K03 TO A01	*Call
2098		5014<5067	K04 TO A01	*Call
2098		5014<5068	K05 TO A01	*Call
2098		5014<5069	L01 TO A01	*Call
2098		5014<5070	L02 TO A01	*Call
2098		5014<5071	L03 TO A01	*Call
2098		5014<5072	L04 TO A01	*Call
2098		5014<5073	L05 TO A01	*Call
2098		5014<5074	M01 TO A01	*Call
2098		5014<5075	M02 TO A01	*Call
2098		5014<5076	M03 TO A01	*Call
2098		5014<5077	M04 TO A01	*Call
2098		5014<5078	M05 TO A01	*Call
2098		5014<5079	N01 TO A01	*Call
2098		5014<5080	N02 TO A01	*Call
2098		5014<5081	N03 TO A01	*Call
2098		5014<5082	N04 TO A01	*Call
2098		5014<5083	N05 TO A01	*Call
2098		5014<5084	O01 TO A01	*Call
2098		5014<5085	O02 TO A01	*Call
2098		5014<5086	O03 TO A01	*Call
2098		5014<5087	O04 TO A01	*Call
2098		5014<5088	O05 TO A01	*Call
2098		5014<5089	P01 TO A01	*Call
2098		5014<5090	P02 TO A01	*Call
2098		5014<5091	P03 TO A01	*Call
2098		5014<5092	P04 TO A01	*Call
2098		5014<5093	P05 TO A01	*Call
2098		5014<5094	Q01 TO A01	*Call
2098		5014<5095	Q02 TO A01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5014<5096	Q03 TO A01	*Call
2098		5014<5097	Q04 TO A01	*Call
2098		5014<5098	Q05 TO A01	*Call
2098		5014<5099	R01 TO A01	*Call
2098		5014<5100	R02 TO A01	*Call
2098		5014<5101	R03 TO A01	*Call
2098		5014<5102	R04 TO A01	*Call
2098		5014<5103	R05 TO A01	*Call
2098		5014<5104	S01 TO A01	*Call
2098		5014<5105	S02 TO A01	*Call
2098		5014<5106	S03 TO A01	*Call
2098		5014<5107	S04 TO A01	*Call
2098		5014<5108	S05 TO A01	*Call
2098		5014<5109	T01 TO A01	*Call
2098		5014<5110	T02 TO A01	*Call
2098		5014<5111	T03 TO A01	*Call
2098		5014<5112	T04 TO A01	*Call
2098		5014<5113	T05 TO A01	*Call
2098		5014<5114	U01 TO A01	*Call
2098		5014<5115	U02 TO A01	*Call
2098		5014<5116	U03 TO A01	*Call
2098		5014<5117	U04 TO A01	*Call
2098		5014<5118	U05 TO A01	*Call
2098		5014<5119	V01 TO A01	*Call
2098		5014<5120	V02 TO A01	*Call
2098		5014<5121	V03 TO A01	*Call
2098		5014<5122	V04 TO A01	*Call
2098		5014<5123	V05 TO A01	*Call
2098		5014<5124	W01 TO A01	*Call
2098		5014<5125	W02 TO A01	*Call
2098		5014<5126	W03 TO A01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5014<5127	W04 TO A01	*Call
2098		5014<5128	W05 TO A01	*Call
2098		5014<5129	X01 TO A01	*Call
2098		5014<5130	X02 TO A01	*Call
2098		5014<5131	X03 TO A01	*Call
2098		5014<5132	X04 TO A01	*Call
2098		5014<5133	X05 TO A01	*Call
2098		5014<5134	Y01 TO A01	*Call
2098		5014<5135	Y02 TO A01	*Call
2098		5014<5136	Y03 TO A01	*Call
2098		5014<5137	Y04 TO A01	*Call
2098		5014<5138	Y05 TO A01	*Call
2098		5014<5139	Z01 TO A01	*Call
2098		5014<5140	Z02 TO A01	*Call
2098		5014<5141	Z03 TO A01	*Call
2098		5014<5142	Z04 TO A01	*Call
2098		5014<5143	Z05 TO A01	*Call
2098		5015<5013	A00 TO A02	*Call
2098		5015<5014	A01 TO A02	*Call
2098		5015<5016	A03 TO A02	*Call
2098		5015<5017	A04 TO A02	*Call
2098		5015<5018	A05 TO A02	*Call
2098		5015<5019	B01 TO A02	*Call
2098		5015<5020	B02 TO A02	*Call
2098		5015<5021	B03 TO A02	*Call
2098		5015<5022	B04 TO A02	*Call
2098		5015<5023	B05 TO A02	*Call
2098		5015<5024	C01 TO A02	*Call
2098		5015<5025	C02 TO A02	*Call
2098		5015<5026	C03 TO A02	*Call
2098		5015<5027	C04 TO A02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5015<5028	C05 TO A02	*Call
2098		5015<5029	D01 TO A02	*Call
2098		5015<5030	D02 TO A02	*Call
2098		5015<5031	D03 TO A02	*Call
2098		5015<5032	D04 TO A02	*Call
2098		5015<5033	D05 TO A02	*Call
2098		5015<5034	E01 TO A02	*Call
2098		5015<5035	E02 TO A02	*Call
2098		5015<5036	E03 TO A02	*Call
2098		5015<5037	E04 TO A02	*Call
2098		5015<5038	E05 TO A02	*Call
2098		5015<5039	F01 TO A02	*Call
2098		5015<5040	F02 TO A02	*Call
2098		5015<5041	F03 TO A02	*Call
2098		5015<5042	F04 TO A02	*Call
2098		5015<5043	F05 TO A02	*Call
2098		5015<5044	G01 TO A02	*Call
2098		5015<5045	G02 TO A02	*Call
2098		5015<5046	G03 TO A02	*Call
2098		5015<5047	G04 TO A02	*Call
2098		5015<5048	G05 TO A02	*Call
2098		5015<5049	H01 TO A02	*Call
2098		5015<5050	H02 TO A02	*Call
2098		5015<5051	H03 TO A02	*Call
2098		5015<5052	H04 TO A02	*Call
2098		5015<5053	H05 TO A02	*Call
2098		5015<5054	I01 TO A02	*Call
2098		5015<5055	I02 TO A02	*Call
2098		5015<5056	I03 TO A02	*Call
2098		5015<5057	I04 TO A02	*Call
2098		5015<5058	I05 TO A02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5015<5059	J01 TO A02	*Call
2098		5015<5060	J02 TO A02	*Call
2098		5015<5061	J03 TO A02	*Call
2098		5015<5062	J04 TO A02	*Call
2098		5015<5063	J05 TO A02	*Call
2098		5015<5064	K01 TO A02	*Call
2098		5015<5065	K02 TO A02	*Call
2098		5015<5066	K03 TO A02	*Call
2098		5015<5067	K04 TO A02	*Call
2098		5015<5068	K05 TO A02	*Call
2098		5015<5069	L01 TO A02	*Call
2098		5015<5070	L02 TO A02	*Call
2098		5015<5071	L03 TO A02	*Call
2098		5015<5072	L04 TO A02	*Call
2098		5015<5073	L05 TO A02	*Call
2098		5015<5074	M01 TO A02	*Call
2098		5015<5075	M02 TO A02	*Call
2098		5015<5076	M03 TO A02	*Call
2098		5015<5077	M04 TO A02	*Call
2098		5015<5078	M05 TO A02	*Call
2098		5015<5079	N01 TO A02	*Call
2098		5015<5080	N02 TO A02	*Call
2098		5015<5081	N03 TO A02	*Call
2098		5015<5082	N04 TO A02	*Call
2098		5015<5083	N05 TO A02	*Call
2098		5015<5084	O01 TO A02	*Call
2098		5015<5085	O02 TO A02	*Call
2098		5015<5086	O03 TO A02	*Call
2098		5015<5087	O04 TO A02	*Call
2098		5015<5088	O05 TO A02	*Call
2098		5015<5089	P01 TO A02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5015<5090	P02 TO A02	*Call
2098		5015<5091	P03 TO A02	*Call
2098		5015<5092	P04 TO A02	*Call
2098		5015<5093	P05 TO A02	*Call
2098		5015<5094	Q01 TO A02	*Call
2098		5015<5095	Q02 TO A02	*Call
2098		5015<5096	Q03 TO A02	*Call
2098		5015<5097	Q04 TO A02	*Call
2098		5015<5098	Q05 TO A02	*Call
2098		5015<5099	R01 TO A02	*Call
2098		5015<5100	R02 TO A02	*Call
2098		5015<5101	R03 TO A02	*Call
2098		5015<5102	R04 TO A02	*Call
2098		5015<5103	R05 TO A02	*Call
2098		5015<5104	S01 TO A02	*Call
2098		5015<5105	S02 TO A02	*Call
2098		5015<5106	S03 TO A02	*Call
2098		5015<5107	S04 TO A02	*Call
2098		5015<5108	S05 TO A02	*Call
2098		5015<5109	T01 TO A02	*Call
2098		5015<5110	T02 TO A02	*Call
2098		5015<5111	T03 TO A02	*Call
2098		5015<5112	T04 TO A02	*Call
2098		5015<5113	T05 TO A02	*Call
2098		5015<5114	U01 TO A02	*Call
2098		5015<5115	U02 TO A02	*Call
2098		5015<5116	U03 TO A02	*Call
2098		5015<5117	U04 TO A02	*Call
2098		5015<5118	U05 TO A02	*Call
2098		5015<5119	V01 TO A02	*Call
2098		5015<5120	V02 TO A02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5015<5121	V03 TO A02	*Call
2098		5015<5122	V04 TO A02	*Call
2098		5015<5123	V05 TO A02	*Call
2098		5015<5124	W01 TO A02	*Call
2098		5015<5125	W02 TO A02	*Call
2098		5015<5126	W03 TO A02	*Call
2098		5015<5127	W04 TO A02	*Call
2098		5015<5128	W05 TO A02	*Call
2098		5015<5129	X01 TO A02	*Call
2098		5015<5130	X02 TO A02	*Call
2098		5015<5131	X03 TO A02	*Call
2098		5015<5132	X04 TO A02	*Call
2098		5015<5133	X05 TO A02	*Call
2098		5015<5134	Y01 TO A02	*Call
2098		5015<5135	Y02 TO A02	*Call
2098		5015<5136	Y03 TO A02	*Call
2098		5015<5137	Y04 TO A02	*Call
2098		5015<5138	Y05 TO A02	*Call
2098		5015<5139	Z01 TO A02	*Call
2098		5015<5140	Z02 TO A02	*Call
2098		5015<5141	Z03 TO A02	*Call
2098		5015<5142	Z04 TO A02	*Call
2098		5015<5143	Z05 TO A02	*Call
2098		5016<5013	A00 TO A03	*Call
2098		5016<5014	A01 TO A03	*Call
2098		5016<5015	A02 TO A03	*Call
2098		5016<5017	A04 TO A03	*Call
2098		5016<5018	A05 TO A03	*Call
2098		5016<5019	B01 TO A03	*Call
2098		5016<5020	B02 TO A03	*Call
2098		5016<5021	B03 TO A03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5016<5022	B04 TO A03	*Call
2098		5016<5023	B05 TO A03	*Call
2098		5016<5024	C01 TO A03	*Call
2098		5016<5025	C02 TO A03	*Call
2098		5016<5026	C03 TO A03	*Call
2098		5016<5027	C04 TO A03	*Call
2098		5016<5028	C05 TO A03	*Call
2098		5016<5029	D01 TO A03	*Call
2098		5016<5030	D02 TO A03	*Call
2098		5016<5031	D03 TO A03	*Call
2098		5016<5032	D04 TO A03	*Call
2098		5016<5033	D05 TO A03	*Call
2098		5016<5034	E01 TO A03	*Call
2098		5016<5035	E02 TO A03	*Call
2098		5016<5036	E03 TO A03	*Call
2098		5016<5037	E04 TO A03	*Call
2098		5016<5038	E05 TO A03	*Call
2098		5016<5039	F01 TO A03	*Call
2098		5016<5040	F02 TO A03	*Call
2098		5016<5041	F03 TO A03	*Call
2098		5016<5042	F04 TO A03	*Call
2098		5016<5043	F05 TO A03	*Call
2098		5016<5044	G01 TO A03	*Call
2098		5016<5045	G02 TO A03	*Call
2098		5016<5046	G03 TO A03	*Call
2098		5016<5047	G04 TO A03	*Call
2098		5016<5048	G05 TO A03	*Call
2098		5016<5049	H01 TO A03	*Call
2098		5016<5050	H02 TO A03	*Call
2098		5016<5051	H03 TO A03	*Call
2098		5016<5052	H04 TO A03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5016<5053	H05 TO A03	*Call
2098		5016<5054	I01 TO A03	*Call
2098		5016<5055	I02 TO A03	*Call
2098		5016<5056	I03 TO A03	*Call
2098		5016<5057	I04 TO A03	*Call
2098		5016<5058	I05 TO A03	*Call
2098		5016<5059	J01 TO A03	*Call
2098		5016<5060	J02 TO A03	*Call
2098		5016<5061	J03 TO A03	*Call
2098		5016<5062	J04 TO A03	*Call
2098		5016<5063	J05 TO A03	*Call
2098		5016<5064	K01 TO A03	*Call
2098		5016<5065	K02 TO A03	*Call
2098		5016<5066	K03 TO A03	*Call
2098		5016<5067	K04 TO A03	*Call
2098		5016<5068	K05 TO A03	*Call
2098		5016<5069	L01 TO A03	*Call
2098		5016<5070	L02 TO A03	*Call
2098		5016<5071	L03 TO A03	*Call
2098		5016<5072	L04 TO A03	*Call
2098		5016<5073	L05 TO A03	*Call
2098		5016<5074	M01 TO A03	*Call
2098		5016<5075	M02 TO A03	*Call
2098		5016<5076	M03 TO A03	*Call
2098		5016<5077	M04 TO A03	*Call
2098		5016<5078	M05 TO A03	*Call
2098		5016<5079	N01 TO A03	*Call
2098		5016<5080	N02 TO A03	*Call
2098		5016<5081	N03 TO A03	*Call
2098		5016<5082	N04 TO A03	*Call
2098		5016<5083	N05 TO A03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5016<5084	O01 TO A03	*Call
2098		5016<5085	O02 TO A03	*Call
2098		5016<5086	O03 TO A03	*Call
2098		5016<5087	O04 TO A03	*Call
2098		5016<5088	O05 TO A03	*Call
2098		5016<5089	P01 TO A03	*Call
2098		5016<5090	P02 TO A03	*Call
2098		5016<5091	P03 TO A03	*Call
2098		5016<5092	P04 TO A03	*Call
2098		5016<5093	P05 TO A03	*Call
2098		5016<5094	Q01 TO A03	*Call
2098		5016<5095	Q02 TO A03	*Call
2098		5016<5096	Q03 TO A03	*Call
2098		5016<5097	Q04 TO A03	*Call
2098		5016<5098	Q05 TO A03	*Call
2098		5016<5099	R01 TO A03	*Call
2098		5016<5100	R02 TO A03	*Call
2098		5016<5101	R03 TO A03	*Call
2098		5016<5102	R04 TO A03	*Call
2098		5016<5103	R05 TO A03	*Call
2098		5016<5104	S01 TO A03	*Call
2098		5016<5105	S02 TO A03	*Call
2098		5016<5106	S03 TO A03	*Call
2098		5016<5107	S04 TO A03	*Call
2098		5016<5108	S05 TO A03	*Call
2098		5016<5109	T01 TO A03	*Call
2098		5016<5110	T02 TO A03	*Call
2098		5016<5111	T03 TO A03	*Call
2098		5016<5112	T04 TO A03	*Call
2098		5016<5113	T05 TO A03	*Call
2098		5016<5114	U01 TO A03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5016<5115	U02 TO A03	*Call
2098		5016<5116	U03 TO A03	*Call
2098		5016<5117	U04 TO A03	*Call
2098		5016<5118	U05 TO A03	*Call
2098		5016<5119	V01 TO A03	*Call
2098		5016<5120	V02 TO A03	*Call
2098		5016<5121	V03 TO A03	*Call
2098		5016<5122	V04 TO A03	*Call
2098		5016<5123	V05 TO A03	*Call
2098		5016<5124	W01 TO A03	*Call
2098		5016<5125	W02 TO A03	*Call
2098		5016<5126	W03 TO A03	*Call
2098		5016<5127	W04 TO A03	*Call
2098		5016<5128	W05 TO A03	*Call
2098		5016<5129	X01 TO A03	*Call
2098		5016<5130	X02 TO A03	*Call
2098		5016<5131	X03 TO A03	*Call
2098		5016<5132	X04 TO A03	*Call
2098		5016<5133	X05 TO A03	*Call
2098		5016<5134	Y01 TO A03	*Call
2098		5016<5135	Y02 TO A03	*Call
2098		5016<5136	Y03 TO A03	*Call
2098		5016<5137	Y04 TO A03	*Call
2098		5016<5138	Y05 TO A03	*Call
2098		5016<5139	Z01 TO A03	*Call
2098		5016<5140	Z02 TO A03	*Call
2098		5016<5141	Z03 TO A03	*Call
2098		5016<5142	Z04 TO A03	*Call
2098		5016<5143	Z05 TO A03	*Call
2098		5017<5013	A00 TO A04	*Call
2098		5017<5014	A01 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5017<5015	A02 TO A04	*Call
2098		5017<5016	A03 TO A04	*Call
2098		5017<5018	A05 TO A04	*Call
2098		5017<5019	B01 TO A04	*Call
2098		5017<5020	B02 TO A04	*Call
2098		5017<5021	B03 TO A04	*Call
2098		5017<5022	B04 TO A04	*Call
2098		5017<5023	B05 TO A04	*Call
2098		5017<5024	C01 TO A04	*Call
2098		5017<5025	C02 TO A04	*Call
2098		5017<5026	C03 TO A04	*Call
2098		5017<5027	C04 TO A04	*Call
2098		5017<5028	C05 TO A04	*Call
2098		5017<5029	D01 TO A04	*Call
2098		5017<5030	D02 TO A04	*Call
2098		5017<5031	D03 TO A04	*Call
2098		5017<5032	D04 TO A04	*Call
2098		5017<5033	D05 TO A04	*Call
2098		5017<5034	E01 TO A04	*Call
2098		5017<5035	E02 TO A04	*Call
2098		5017<5036	E03 TO A04	*Call
2098		5017<5037	E04 TO A04	*Call
2098		5017<5038	E05 TO A04	*Call
2098		5017<5039	F01 TO A04	*Call
2098		5017<5040	F02 TO A04	*Call
2098		5017<5041	F03 TO A04	*Call
2098		5017<5042	F04 TO A04	*Call
2098		5017<5043	F05 TO A04	*Call
2098		5017<5044	G01 TO A04	*Call
2098		5017<5045	G02 TO A04	*Call
2098		5017<5046	G03 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5017<5047	G04 TO A04	*Call
2098		5017<5048	G05 TO A04	*Call
2098		5017<5049	H01 TO A04	*Call
2098		5017<5050	H02 TO A04	*Call
2098		5017<5051	H03 TO A04	*Call
2098		5017<5052	H04 TO A04	*Call
2098		5017<5053	H05 TO A04	*Call
2098		5017<5054	I01 TO A04	*Call
2098		5017<5055	I02 TO A04	*Call
2098		5017<5056	I03 TO A04	*Call
2098		5017<5057	I04 TO A04	*Call
2098		5017<5058	I05 TO A04	*Call
2098		5017<5059	J01 TO A04	*Call
2098		5017<5060	J02 TO A04	*Call
2098		5017<5061	J03 TO A04	*Call
2098		5017<5062	J04 TO A04	*Call
2098		5017<5063	J05 TO A04	*Call
2098		5017<5064	K01 TO A04	*Call
2098		5017<5065	K02 TO A04	*Call
2098		5017<5066	K03 TO A04	*Call
2098		5017<5067	K04 TO A04	*Call
2098		5017<5068	K05 TO A04	*Call
2098		5017<5069	L01 TO A04	*Call
2098		5017<5070	L02 TO A04	*Call
2098		5017<5071	L03 TO A04	*Call
2098		5017<5072	L04 TO A04	*Call
2098		5017<5073	L05 TO A04	*Call
2098		5017<5074	M01 TO A04	*Call
2098		5017<5075	M02 TO A04	*Call
2098		5017<5076	M03 TO A04	*Call
2098		5017<5077	M04 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5017<5078	M05 TO A04	*Call
2098		5017<5079	N01 TO A04	*Call
2098		5017<5080	N02 TO A04	*Call
2098		5017<5081	N03 TO A04	*Call
2098		5017<5082	N04 TO A04	*Call
2098		5017<5083	N05 TO A04	*Call
2098		5017<5084	O01 TO A04	*Call
2098		5017<5085	O02 TO A04	*Call
2098		5017<5086	O03 TO A04	*Call
2098		5017<5087	O04 TO A04	*Call
2098		5017<5088	O05 TO A04	*Call
2098		5017<5089	P01 TO A04	*Call
2098		5017<5090	P02 TO A04	*Call
2098		5017<5091	P03 TO A04	*Call
2098		5017<5092	P04 TO A04	*Call
2098		5017<5093	P05 TO A04	*Call
2098		5017<5094	Q01 TO A04	*Call
2098		5017<5095	Q02 TO A04	*Call
2098		5017<5096	Q03 TO A04	*Call
2098		5017<5097	Q04 TO A04	*Call
2098		5017<5098	Q05 TO A04	*Call
2098		5017<5099	R01 TO A04	*Call
2098		5017<5100	R02 TO A04	*Call
2098		5017<5101	R03 TO A04	*Call
2098		5017<5102	R04 TO A04	*Call
2098		5017<5103	R05 TO A04	*Call
2098		5017<5104	S01 TO A04	*Call
2098		5017<5105	S02 TO A04	*Call
2098		5017<5106	S03 TO A04	*Call
2098		5017<5107	S04 TO A04	*Call
2098		5017<5108	S05 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5017<5109	T01 TO A04	*Call
2098		5017<5110	T02 TO A04	*Call
2098		5017<5111	T03 TO A04	*Call
2098		5017<5112	T04 TO A04	*Call
2098		5017<5113	T05 TO A04	*Call
2098		5017<5114	U01 TO A04	*Call
2098		5017<5115	U02 TO A04	*Call
2098		5017<5116	U03 TO A04	*Call
2098		5017<5117	U04 TO A04	*Call
2098		5017<5118	U05 TO A04	*Call
2098		5017<5119	V01 TO A04	*Call
2098		5017<5120	V02 TO A04	*Call
2098		5017<5121	V03 TO A04	*Call
2098		5017<5122	V04 TO A04	*Call
2098		5017<5123	V05 TO A04	*Call
2098		5017<5124	W01 TO A04	*Call
2098		5017<5125	W02 TO A04	*Call
2098		5017<5126	W03 TO A04	*Call
2098		5017<5127	W04 TO A04	*Call
2098		5017<5128	W05 TO A04	*Call
2098		5017<5129	X01 TO A04	*Call
2098		5017<5130	X02 TO A04	*Call
2098		5017<5131	X03 TO A04	*Call
2098		5017<5132	X04 TO A04	*Call
2098		5017<5133	X05 TO A04	*Call
2098		5017<5134	Y01 TO A04	*Call
2098		5017<5135	Y02 TO A04	*Call
2098		5017<5136	Y03 TO A04	*Call
2098		5017<5137	Y04 TO A04	*Call
2098		5017<5138	Y05 TO A04	*Call
2098		5017<5139	Z01 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5017<5140	Z02 TO A04	*Call
2098		5017<5141	Z03 TO A04	*Call
2098		5017<5142	Z04 TO A04	*Call
2098		5017<5143	Z05 TO A04	*Call
2098		5018<5013	A00 TO A05	*Call
2098		5018<5014	A01 TO A05	*Call
2098		5018<5015	A02 TO A05	*Call
2098		5018<5016	A03 TO A05	*Call
2098		5018<5017	A04 TO A05	*Call
2098		5018<5019	B01 TO A05	*Call
2098		5018<5020	B02 TO A05	*Call
2098		5018<5021	B03 TO A05	*Call
2098		5018<5022	B04 TO A05	*Call
2098		5018<5023	B05 TO A05	*Call
2098		5018<5024	C01 TO A05	*Call
2098		5018<5025	C02 TO A05	*Call
2098		5018<5026	C03 TO A05	*Call
2098		5018<5027	C04 TO A05	*Call
2098		5018<5028	C05 TO A05	*Call
2098		5018<5029	D01 TO A05	*Call
2098		5018<5030	D02 TO A05	*Call
2098		5018<5031	D03 TO A05	*Call
2098		5018<5032	D04 TO A05	*Call
2098		5018<5033	D05 TO A05	*Call
2098		5018<5034	E01 TO A05	*Call
2098		5018<5035	E02 TO A05	*Call
2098		5018<5036	E03 TO A05	*Call
2098		5018<5037	E04 TO A05	*Call
2098		5018<5038	E05 TO A05	*Call
2098		5018<5039	F01 TO A05	*Call
2098		5018<5040	F02 TO A05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5018<5041	F03 TO A05	*Call
2098		5018<5042	F04 TO A05	*Call
2098		5018<5043	F05 TO A05	*Call
2098		5018<5044	G01 TO A05	*Call
2098		5018<5045	G02 TO A05	*Call
2098		5018<5046	G03 TO A05	*Call
2098		5018<5047	G04 TO A05	*Call
2098		5018<5048	G05 TO A05	*Call
2098		5018<5049	H01 TO A05	*Call
2098		5018<5050	H02 TO A05	*Call
2098		5018<5051	H03 TO A05	*Call
2098		5018<5052	H04 TO A05	*Call
2098		5018<5053	H05 TO A05	*Call
2098		5018<5054	I01 TO A05	*Call
2098		5018<5055	I02 TO A05	*Call
2098		5018<5056	I03 TO A05	*Call
2098		5018<5057	I04 TO A05	*Call
2098		5018<5058	I05 TO A05	*Call
2098		5018<5059	J01 TO A05	*Call
2098		5018<5060	J02 TO A05	*Call
2098		5018<5061	J03 TO A05	*Call
2098		5018<5062	J04 TO A05	*Call
2098		5018<5063	J05 TO A05	*Call
2098		5018<5064	K01 TO A05	*Call
2098		5018<5065	K02 TO A05	*Call
2098		5018<5066	K03 TO A05	*Call
2098		5018<5067	K04 TO A05	*Call
2098		5018<5068	K05 TO A05	*Call
2098		5018<5069	L01 TO A05	*Call
2098		5018<5070	L02 TO A05	*Call
2098		5018<5071	L03 TO A05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5018<5072	L04 TO A05	*Call
2098		5018<5073	L05 TO A05	*Call
2098		5018<5074	M01 TO A05	*Call
2098		5018<5075	M02 TO A05	*Call
2098		5018<5076	M03 TO A05	*Call
2098		5018<5077	M04 TO A05	*Call
2098		5018<5078	M05 TO A05	*Call
2098		5018<5079	N01 TO A05	*Call
2098		5018<5080	N02 TO A05	*Call
2098		5018<5081	N03 TO A05	*Call
2098		5018<5082	N04 TO A05	*Call
2098		5018<5083	N05 TO A05	*Call
2098		5018<5084	O01 TO A05	*Call
2098		5018<5085	O02 TO A05	*Call
2098		5018<5086	O03 TO A05	*Call
2098		5018<5087	O04 TO A05	*Call
2098		5018<5088	O05 TO A05	*Call
2098		5018<5089	P01 TO A05	*Call
2098		5018<5090	P02 TO A05	*Call
2098		5018<5091	P03 TO A05	*Call
2098		5018<5092	P04 TO A05	*Call
2098		5018<5093	P05 TO A05	*Call
2098		5018<5094	Q01 TO A05	*Call
2098		5018<5095	Q02 TO A05	*Call
2098		5018<5096	Q03 TO A05	*Call
2098		5018<5097	Q04 TO A05	*Call
2098		5018<5098	Q05 TO A05	*Call
2098		5018<5099	R01 TO A05	*Call
2098		5018<5100	R02 TO A05	*Call
2098		5018<5101	R03 TO A05	*Call
2098		5018<5102	R04 TO A05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5018<5103	R05 TO A05	*Call
2098		5018<5104	S01 TO A05	*Call
2098		5018<5105	S02 TO A05	*Call
2098		5018<5106	S03 TO A05	*Call
2098		5018<5107	S04 TO A05	*Call
2098		5018<5108	S05 TO A05	*Call
2098		5018<5109	T01 TO A05	*Call
2098		5018<5110	T02 TO A05	*Call
2098		5018<5111	T03 TO A05	*Call
2098		5018<5112	T04 TO A05	*Call
2098		5018<5113	T05 TO A05	*Call
2098		5018<5114	U01 TO A05	*Call
2098		5018<5115	U02 TO A05	*Call
2098		5018<5116	U03 TO A05	*Call
2098		5018<5117	U04 TO A05	*Call
2098		5018<5118	U05 TO A05	*Call
2098		5018<5119	V01 TO A05	*Call
2098		5018<5120	V02 TO A05	*Call
2098		5018<5121	V03 TO A05	*Call
2098		5018<5122	V04 TO A05	*Call
2098		5018<5123	V05 TO A05	*Call
2098		5018<5124	W01 TO A05	*Call
2098		5018<5125	W02 TO A05	*Call
2098		5018<5126	W03 TO A05	*Call
2098		5018<5127	W04 TO A05	*Call
2098		5018<5128	W05 TO A05	*Call
2098		5018<5129	X01 TO A05	*Call
2098		5018<5130	X02 TO A05	*Call
2098		5018<5131	X03 TO A05	*Call
2098		5018<5132	X04 TO A05	*Call
2098		5018<5133	X05 TO A05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5018<5134	Y01 TO A05	*Call
2098		5018<5135	Y02 TO A05	*Call
2098		5018<5136	Y03 TO A05	*Call
2098		5018<5137	Y04 TO A05	*Call
2098		5018<5138	Y05 TO A05	*Call
2098		5018<5139	Z01 TO A05	*Call
2098		5018<5140	Z02 TO A05	*Call
2098		5018<5141	Z03 TO A05	*Call
2098		5018<5142	Z04 TO A05	*Call
2098		5018<5143	Z05 TO A05	*Call
2098		5019<5013	A00 TO B01	*Call
2098		5019<5014	A01 TO B01	*Call
2098		5019<5015	A02 TO B01	*Call
2098		5019<5016	A03 TO B01	*Call
2098		5019<5017	A04 TO B01	*Call
2098		5019<5018	A05 TO B01	*Call
2098		5019<5020	B02 TO B01	*Call
2098		5019<5021	B03 TO B01	*Call
2098		5019<5022	B04 TO B01	*Call
2098		5019<5023	B05 TO B01	*Call
2098		5019<5024	C01 TO B01	*Call
2098		5019<5025	C02 TO B01	*Call
2098		5019<5026	C03 TO B01	*Call
2098		5019<5027	C04 TO B01	*Call
2098		5019<5028	C05 TO B01	*Call
2098		5019<5029	D01 TO B01	*Call
2098		5019<5030	D02 TO B01	*Call
2098		5019<5031	D03 TO B01	*Call
2098		5019<5032	D04 TO B01	*Call
2098		5019<5033	D05 TO B01	*Call
2098		5019<5034	E01 TO B01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5019<5035	E02 TO B01	*Call
2098		5019<5036	E03 TO B01	*Call
2098		5019<5037	E04 TO B01	*Call
2098		5019<5038	E05 TO B01	*Call
2098		5019<5039	F01 TO B01	*Call
2098		5019<5040	F02 TO B01	*Call
2098		5019<5041	F03 TO B01	*Call
2098		5019<5042	F04 TO B01	*Call
2098		5019<5043	F05 TO B01	*Call
2098		5019<5044	G01 TO B01	*Call
2098		5019<5045	G02 TO B01	*Call
2098		5019<5046	G03 TO B01	*Call
2098		5019<5047	G04 TO B01	*Call
2098		5019<5048	G05 TO B01	*Call
2098		5019<5049	H01 TO B01	*Call
2098		5019<5050	H02 TO B01	*Call
2098		5019<5051	H03 TO B01	*Call
2098		5019<5052	H04 TO B01	*Call
2098		5019<5053	H05 TO B01	*Call
2098		5019<5054	I01 TO B01	*Call
2098		5019<5055	I02 TO B01	*Call
2098		5019<5056	I03 TO B01	*Call
2098		5019<5057	I04 TO B01	*Call
2098		5019<5058	I05 TO B01	*Call
2098		5019<5059	J01 TO B01	*Call
2098		5019<5060	J02 TO B01	*Call
2098		5019<5061	J03 TO B01	*Call
2098		5019<5062	J04 TO B01	*Call
2098		5019<5063	J05 TO B01	*Call
2098		5019<5064	K01 TO B01	*Call
2098		5019<5065	K02 TO B01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5019<5066	K03 TO B01	*Call
2098		5019<5067	K04 TO B01	*Call
2098		5019<5068	K05 TO B01	*Call
2098		5019<5069	L01 TO B01	*Call
2098		5019<5070	L02 TO B01	*Call
2098		5019<5071	L03 TO B01	*Call
2098		5019<5072	L04 TO B01	*Call
2098		5019<5073	L05 TO B01	*Call
2098		5019<5074	M01 TO B01	*Call
2098		5019<5075	M02 TO B01	*Call
2098		5019<5076	M03 TO B01	*Call
2098		5019<5077	M04 TO B01	*Call
2098		5019<5078	M05 TO B01	*Call
2098		5019<5079	N01 TO B01	*Call
2098		5019<5080	N02 TO B01	*Call
2098		5019<5081	N03 TO B01	*Call
2098		5019<5082	N04 TO B01	*Call
2098		5019<5083	N05 TO B01	*Call
2098		5019<5084	O01 TO B01	*Call
2098		5019<5085	O02 TO B01	*Call
2098		5019<5086	O03 TO B01	*Call
2098		5019<5087	O04 TO B01	*Call
2098		5019<5088	O05 TO B01	*Call
2098		5019<5089	P01 TO B01	*Call
2098		5019<5090	P02 TO B01	*Call
2098		5019<5091	P03 TO B01	*Call
2098		5019<5092	P04 TO B01	*Call
2098		5019<5093	P05 TO B01	*Call
2098		5019<5094	Q01 TO B01	*Call
2098		5019<5095	Q02 TO B01	*Call
2098		5019<5096	Q03 TO B01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5019<5097	Q04 TO B01	*Call
2098		5019<5098	Q05 TO B01	*Call
2098		5019<5099	R01 TO B01	*Call
2098		5019<5100	R02 TO B01	*Call
2098		5019<5101	R03 TO B01	*Call
2098		5019<5102	R04 TO B01	*Call
2098		5019<5103	R05 TO B01	*Call
2098		5019<5104	S01 TO B01	*Call
2098		5019<5105	S02 TO B01	*Call
2098		5019<5106	S03 TO B01	*Call
2098		5019<5107	S04 TO B01	*Call
2098		5019<5108	S05 TO B01	*Call
2098		5019<5109	T01 TO B01	*Call
2098		5019<5110	T02 TO B01	*Call
2098		5019<5111	T03 TO B01	*Call
2098		5019<5112	T04 TO B01	*Call
2098		5019<5113	T05 TO B01	*Call
2098		5019<5114	U01 TO B01	*Call
2098		5019<5115	U02 TO B01	*Call
2098		5019<5116	U03 TO B01	*Call
2098		5019<5117	U04 TO B01	*Call
2098		5019<5118	U05 TO B01	*Call
2098		5019<5119	V01 TO B01	*Call
2098		5019<5120	V02 TO B01	*Call
2098		5019<5121	V03 TO B01	*Call
2098		5019<5122	V04 TO B01	*Call
2098		5019<5123	V05 TO B01	*Call
2098		5019<5124	W01 TO B01	*Call
2098		5019<5125	W02 TO B01	*Call
2098		5019<5126	W03 TO B01	*Call
2098		5019<5127	W04 TO B01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5019<5128	W05 TO B01	*Call
2098		5019<5129	X01 TO B01	*Call
2098		5019<5130	X02 TO B01	*Call
2098		5019<5131	X03 TO B01	*Call
2098		5019<5132	X04 TO B01	*Call
2098		5019<5133	X05 TO B01	*Call
2098		5019<5134	Y01 TO B01	*Call
2098		5019<5135	Y02 TO B01	*Call
2098		5019<5136	Y03 TO B01	*Call
2098		5019<5137	Y04 TO B01	*Call
2098		5019<5138	Y05 TO B01	*Call
2098		5019<5139	Z01 TO B01	*Call
2098		5019<5140	Z02 TO B01	*Call
2098		5019<5141	Z03 TO B01	*Call
2098		5019<5142	Z04 TO B01	*Call
2098		5019<5143	Z05 TO B01	*Call
2098		5020<5013	A00 TO B02	*Call
2098		5020<5014	A01 TO B02	*Call
2098		5020<5015	A02 TO B02	*Call
2098		5020<5016	A03 TO B02	*Call
2098		5020<5017	A04 TO B02	*Call
2098		5020<5018	A05 TO B02	*Call
2098		5020<5019	B01 TO B02	*Call
2098		5020<5021	B03 TO B02	*Call
2098		5020<5022	B04 TO B02	*Call
2098		5020<5023	B05 TO B02	*Call
2098		5020<5024	C01 TO B02	*Call
2098		5020<5025	C02 TO B02	*Call
2098		5020<5026	C03 TO B02	*Call
2098		5020<5027	C04 TO B02	*Call
2098		5020<5028	C05 TO B02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5020<5029	D01 TO B02	*Call
2098		5020<5030	D02 TO B02	*Call
2098		5020<5031	D03 TO B02	*Call
2098		5020<5032	D04 TO B02	*Call
2098		5020<5033	D05 TO B02	*Call
2098		5020<5034	E01 TO B02	*Call
2098		5020<5035	E02 TO B02	*Call
2098		5020<5036	E03 TO B02	*Call
2098		5020<5037	E04 TO B02	*Call
2098		5020<5038	E05 TO B02	*Call
2098		5020<5039	F01 TO B02	*Call
2098		5020<5040	F02 TO B02	*Call
2098		5020<5041	F03 TO B02	*Call
2098		5020<5042	F04 TO B02	*Call
2098		5020<5043	F05 TO B02	*Call
2098		5020<5044	G01 TO B02	*Call
2098		5020<5045	G02 TO B02	*Call
2098		5020<5046	G03 TO B02	*Call
2098		5020<5047	G04 TO B02	*Call
2098		5020<5048	G05 TO B02	*Call
2098		5020<5049	H01 TO B02	*Call
2098		5020<5050	H02 TO B02	*Call
2098		5020<5051	H03 TO B02	*Call
2098		5020<5052	H04 TO B02	*Call
2098		5020<5053	H05 TO B02	*Call
2098		5020<5054	I01 TO B02	*Call
2098		5020<5055	I02 TO B02	*Call
2098		5020<5056	I03 TO B02	*Call
2098		5020<5057	I04 TO B02	*Call
2098		5020<5058	I05 TO B02	*Call
2098		5020<5059	J01 TO B02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5020<5060	J02 TO B02	*Call
2098		5020<5061	J03 TO B02	*Call
2098		5020<5062	J04 TO B02	*Call
2098		5020<5063	J05 TO B02	*Call
2098		5020<5064	K01 TO B02	*Call
2098		5020<5065	K02 TO B02	*Call
2098		5020<5066	K03 TO B02	*Call
2098		5020<5067	K04 TO B02	*Call
2098		5020<5068	K05 TO B02	*Call
2098		5020<5069	L01 TO B02	*Call
2098		5020<5070	L02 TO B02	*Call
2098		5020<5071	L03 TO B02	*Call
2098		5020<5072	L04 TO B02	*Call
2098		5020<5073	L05 TO B02	*Call
2098		5020<5074	M01 TO B02	*Call
2098		5020<5075	M02 TO B02	*Call
2098		5020<5076	M03 TO B02	*Call
2098		5020<5077	M04 TO B02	*Call
2098		5020<5078	M05 TO B02	*Call
2098		5020<5079	N01 TO B02	*Call
2098		5020<5080	N02 TO B02	*Call
2098		5020<5081	N03 TO B02	*Call
2098		5020<5082	N04 TO B02	*Call
2098		5020<5083	N05 TO B02	*Call
2098		5020<5084	O01 TO B02	*Call
2098		5020<5085	O02 TO B02	*Call
2098		5020<5086	O03 TO B02	*Call
2098		5020<5087	O04 TO B02	*Call
2098		5020<5088	O05 TO B02	*Call
2098		5020<5089	P01 TO B02	*Call
2098		5020<5090	P02 TO B02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5020<5091	P03 TO B02	*Call
2098		5020<5092	P04 TO B02	*Call
2098		5020<5093	P05 TO B02	*Call
2098		5020<5094	Q01 TO B02	*Call
2098		5020<5095	Q02 TO B02	*Call
2098		5020<5096	Q03 TO B02	*Call
2098		5020<5097	Q04 TO B02	*Call
2098		5020<5098	Q05 TO B02	*Call
2098		5020<5099	R01 TO B02	*Call
2098		5020<5100	R02 TO B02	*Call
2098		5020<5101	R03 TO B02	*Call
2098		5020<5102	R04 TO B02	*Call
2098		5020<5103	R05 TO B02	*Call
2098		5020<5104	S01 TO B02	*Call
2098		5020<5105	S02 TO B02	*Call
2098		5020<5106	S03 TO B02	*Call
2098		5020<5107	S04 TO B02	*Call
2098		5020<5108	S05 TO B02	*Call
2098		5020<5109	T01 TO B02	*Call
2098		5020<5110	T02 TO B02	*Call
2098		5020<5111	T03 TO B02	*Call
2098		5020<5112	T04 TO B02	*Call
2098		5020<5113	T05 TO B02	*Call
2098		5020<5114	U01 TO B02	*Call
2098		5020<5115	U02 TO B02	*Call
2098		5020<5116	U03 TO B02	*Call
2098		5020<5117	U04 TO B02	*Call
2098		5020<5118	U05 TO B02	*Call
2098		5020<5119	V01 TO B02	*Call
2098		5020<5120	V02 TO B02	*Call
2098		5020<5121	V03 TO B02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5020<5122	V04 TO B02	*Call
2098		5020<5123	V05 TO B02	*Call
2098		5020<5124	W01 TO B02	*Call
2098		5020<5125	W02 TO B02	*Call
2098		5020<5126	W03 TO B02	*Call
2098		5020<5127	W04 TO B02	*Call
2098		5020<5128	W05 TO B02	*Call
2098		5020<5129	X01 TO B02	*Call
2098		5020<5130	X02 TO B02	*Call
2098		5020<5131	X03 TO B02	*Call
2098		5020<5132	X04 TO B02	*Call
2098		5020<5133	X05 TO B02	*Call
2098		5020<5134	Y01 TO B02	*Call
2098		5020<5135	Y02 TO B02	*Call
2098		5020<5136	Y03 TO B02	*Call
2098		5020<5137	Y04 TO B02	*Call
2098		5020<5138	Y05 TO B02	*Call
2098		5020<5139	Z01 TO B02	*Call
2098		5020<5140	Z02 TO B02	*Call
2098		5020<5141	Z03 TO B02	*Call
2098		5020<5142	Z04 TO B02	*Call
2098		5020<5143	Z05 TO B02	*Call
2098		5021<5013	A00 TO B03	*Call
2098		5021<5014	A01 TO B03	*Call
2098		5021<5015	A02 TO B03	*Call
2098		5021<5016	A03 TO B03	*Call
2098		5021<5017	A04 TO B03	*Call
2098		5021<5018	A05 TO B03	*Call
2098		5021<5019	B01 TO B03	*Call
2098		5021<5020	B02 TO B03	*Call
2098		5021<5022	B04 TO B03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5021<5023	B05 TO B03	*Call
2098		5021<5024	C01 TO B03	*Call
2098		5021<5025	C02 TO B03	*Call
2098		5021<5026	C03 TO B03	*Call
2098		5021<5027	C04 TO B03	*Call
2098		5021<5028	C05 TO B03	*Call
2098		5021<5029	D01 TO B03	*Call
2098		5021<5030	D02 TO B03	*Call
2098		5021<5031	D03 TO B03	*Call
2098		5021<5032	D04 TO B03	*Call
2098		5021<5033	D05 TO B03	*Call
2098		5021<5034	E01 TO B03	*Call
2098		5021<5035	E02 TO B03	*Call
2098		5021<5036	E03 TO B03	*Call
2098		5021<5037	E04 TO B03	*Call
2098		5021<5038	E05 TO B03	*Call
2098		5021<5039	F01 TO B03	*Call
2098		5021<5040	F02 TO B03	*Call
2098		5021<5041	F03 TO B03	*Call
2098		5021<5042	F04 TO B03	*Call
2098		5021<5043	F05 TO B03	*Call
2098		5021<5044	G01 TO B03	*Call
2098		5021<5045	G02 TO B03	*Call
2098		5021<5046	G03 TO B03	*Call
2098		5021<5047	G04 TO B03	*Call
2098		5021<5048	G05 TO B03	*Call
2098		5021<5049	H01 TO B03	*Call
2098		5021<5050	H02 TO B03	*Call
2098		5021<5051	H03 TO B03	*Call
2098		5021<5052	H04 TO B03	*Call
2098		5021<5053	H05 TO B03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5021<5054	I01 TO B03	*Call
2098		5021<5055	I02 TO B03	*Call
2098		5021<5056	I03 TO B03	*Call
2098		5021<5057	I04 TO B03	*Call
2098		5021<5058	I05 TO B03	*Call
2098		5021<5059	J01 TO B03	*Call
2098		5021<5060	J02 TO B03	*Call
2098		5021<5061	J03 TO B03	*Call
2098		5021<5062	J04 TO B03	*Call
2098		5021<5063	J05 TO B03	*Call
2098		5021<5064	K01 TO B03	*Call
2098		5021<5065	K02 TO B03	*Call
2098		5021<5066	K03 TO B03	*Call
2098		5021<5067	K04 TO B03	*Call
2098		5021<5068	K05 TO B03	*Call
2098		5021<5069	L01 TO B03	*Call
2098		5021<5070	L02 TO B03	*Call
2098		5021<5071	L03 TO B03	*Call
2098		5021<5072	L04 TO B03	*Call
2098		5021<5073	L05 TO B03	*Call
2098		5021<5074	M01 TO B03	*Call
2098		5021<5075	M02 TO B03	*Call
2098		5021<5076	M03 TO B03	*Call
2098		5021<5077	M04 TO B03	*Call
2098		5021<5078	M05 TO B03	*Call
2098		5021<5079	N01 TO B03	*Call
2098		5021<5080	N02 TO B03	*Call
2098		5021<5081	N03 TO B03	*Call
2098		5021<5082	N04 TO B03	*Call
2098		5021<5083	N05 TO B03	*Call
2098		5021<5084	O01 TO B03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5021<5085	O02 TO B03	*Call
2098		5021<5086	O03 TO B03	*Call
2098		5021<5087	O04 TO B03	*Call
2098		5021<5088	O05 TO B03	*Call
2098		5021<5089	P01 TO B03	*Call
2098		5021<5090	P02 TO B03	*Call
2098		5021<5091	P03 TO B03	*Call
2098		5021<5092	P04 TO B03	*Call
2098		5021<5093	P05 TO B03	*Call
2098		5021<5094	Q01 TO B03	*Call
2098		5021<5095	Q02 TO B03	*Call
2098		5021<5096	Q03 TO B03	*Call
2098		5021<5097	Q04 TO B03	*Call
2098		5021<5098	Q05 TO B03	*Call
2098		5021<5099	R01 TO B03	*Call
2098		5021<5100	R02 TO B03	*Call
2098		5021<5101	R03 TO B03	*Call
2098		5021<5102	R04 TO B03	*Call
2098		5021<5103	R05 TO B03	*Call
2098		5021<5104	S01 TO B03	*Call
2098		5021<5105	S02 TO B03	*Call
2098		5021<5106	S03 TO B03	*Call
2098		5021<5107	S04 TO B03	*Call
2098		5021<5108	S05 TO B03	*Call
2098		5021<5109	T01 TO B03	*Call
2098		5021<5110	T02 TO B03	*Call
2098		5021<5111	T03 TO B03	*Call
2098		5021<5112	T04 TO B03	*Call
2098		5021<5113	T05 TO B03	*Call
2098		5021<5114	U01 TO B03	*Call
2098		5021<5115	U02 TO B03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5021<5116	U03 TO B03	*Call
2098		5021<5117	U04 TO B03	*Call
2098		5021<5118	U05 TO B03	*Call
2098		5021<5119	V01 TO B03	*Call
2098		5021<5120	V02 TO B03	*Call
2098		5021<5121	V03 TO B03	*Call
2098		5021<5122	V04 TO B03	*Call
2098		5021<5123	V05 TO B03	*Call
2098		5021<5124	W01 TO B03	*Call
2098		5021<5125	W02 TO B03	*Call
2098		5021<5126	W03 TO B03	*Call
2098		5021<5127	W04 TO B03	*Call
2098		5021<5128	W05 TO B03	*Call
2098		5021<5129	X01 TO B03	*Call
2098		5021<5130	X02 TO B03	*Call
2098		5021<5131	X03 TO B03	*Call
2098		5021<5132	X04 TO B03	*Call
2098		5021<5133	X05 TO B03	*Call
2098		5021<5134	Y01 TO B03	*Call
2098		5021<5135	Y02 TO B03	*Call
2098		5021<5136	Y03 TO B03	*Call
2098		5021<5137	Y04 TO B03	*Call
2098		5021<5138	Y05 TO B03	*Call
2098		5021<5139	Z01 TO B03	*Call
2098		5021<5140	Z02 TO B03	*Call
2098		5021<5141	Z03 TO B03	*Call
2098		5021<5142	Z04 TO B03	*Call
2098		5021<5143	Z05 TO B03	*Call
2098		5022<5013	A00 TO B04	*Call
2098		5022<5014	A01 TO B04	*Call
2098		5022<5015	A02 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5022<5016	A03 TO B04	*Call
2098		5022<5017	A04 TO B04	*Call
2098		5022<5018	A05 TO B04	*Call
2098		5022<5019	B01 TO B04	*Call
2098		5022<5020	B02 TO B04	*Call
2098		5022<5021	B03 TO B04	*Call
2098		5022<5023	B05 TO B04	*Call
2098		5022<5024	C01 TO B04	*Call
2098		5022<5025	C02 TO B04	*Call
2098		5022<5026	C03 TO B04	*Call
2098		5022<5027	C04 TO B04	*Call
2098		5022<5028	C05 TO B04	*Call
2098		5022<5029	D01 TO B04	*Call
2098		5022<5030	D02 TO B04	*Call
2098		5022<5031	D03 TO B04	*Call
2098		5022<5032	D04 TO B04	*Call
2098		5022<5033	D05 TO B04	*Call
2098		5022<5034	E01 TO B04	*Call
2098		5022<5035	E02 TO B04	*Call
2098		5022<5036	E03 TO B04	*Call
2098		5022<5037	E04 TO B04	*Call
2098		5022<5038	E05 TO B04	*Call
2098		5022<5039	F01 TO B04	*Call
2098		5022<5040	F02 TO B04	*Call
2098		5022<5041	F03 TO B04	*Call
2098		5022<5042	F04 TO B04	*Call
2098		5022<5043	F05 TO B04	*Call
2098		5022<5044	G01 TO B04	*Call
2098		5022<5045	G02 TO B04	*Call
2098		5022<5046	G03 TO B04	*Call
2098		5022<5047	G04 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5022<5048	G05 TO B04	*Call
2098		5022<5049	H01 TO B04	*Call
2098		5022<5050	H02 TO B04	*Call
2098		5022<5051	H03 TO B04	*Call
2098		5022<5052	H04 TO B04	*Call
2098		5022<5053	H05 TO B04	*Call
2098		5022<5054	I01 TO B04	*Call
2098		5022<5055	I02 TO B04	*Call
2098		5022<5056	I03 TO B04	*Call
2098		5022<5057	I04 TO B04	*Call
2098		5022<5058	I05 TO B04	*Call
2098		5022<5059	J01 TO B04	*Call
2098		5022<5060	J02 TO B04	*Call
2098		5022<5061	J03 TO B04	*Call
2098		5022<5062	J04 TO B04	*Call
2098		5022<5063	J05 TO B04	*Call
2098		5022<5064	K01 TO B04	*Call
2098		5022<5065	K02 TO B04	*Call
2098		5022<5066	K03 TO B04	*Call
2098		5022<5067	K04 TO B04	*Call
2098		5022<5068	K05 TO B04	*Call
2098		5022<5069	L01 TO B04	*Call
2098		5022<5070	L02 TO B04	*Call
2098		5022<5071	L03 TO B04	*Call
2098		5022<5072	L04 TO B04	*Call
2098		5022<5073	L05 TO B04	*Call
2098		5022<5074	M01 TO B04	*Call
2098		5022<5075	M02 TO B04	*Call
2098		5022<5076	M03 TO B04	*Call
2098		5022<5077	M04 TO B04	*Call
2098		5022<5078	M05 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5022<5079	N01 TO B04	*Call
2098		5022<5080	N02 TO B04	*Call
2098		5022<5081	N03 TO B04	*Call
2098		5022<5082	N04 TO B04	*Call
2098		5022<5083	N05 TO B04	*Call
2098		5022<5084	O01 TO B04	*Call
2098		5022<5085	O02 TO B04	*Call
2098		5022<5086	O03 TO B04	*Call
2098		5022<5087	O04 TO B04	*Call
2098		5022<5088	O05 TO B04	*Call
2098		5022<5089	P01 TO B04	*Call
2098		5022<5090	P02 TO B04	*Call
2098		5022<5091	P03 TO B04	*Call
2098		5022<5092	P04 TO B04	*Call
2098		5022<5093	P05 TO B04	*Call
2098		5022<5094	Q01 TO B04	*Call
2098		5022<5095	Q02 TO B04	*Call
2098		5022<5096	Q03 TO B04	*Call
2098		5022<5097	Q04 TO B04	*Call
2098		5022<5098	Q05 TO B04	*Call
2098		5022<5099	R01 TO B04	*Call
2098		5022<5100	R02 TO B04	*Call
2098		5022<5101	R03 TO B04	*Call
2098		5022<5102	R04 TO B04	*Call
2098		5022<5103	R05 TO B04	*Call
2098		5022<5104	S01 TO B04	*Call
2098		5022<5105	S02 TO B04	*Call
2098		5022<5106	S03 TO B04	*Call
2098		5022<5107	S04 TO B04	*Call
2098		5022<5108	S05 TO B04	*Call
2098		5022<5109	T01 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5022<5110	T02 TO B04	*Call
2098		5022<5111	T03 TO B04	*Call
2098		5022<5112	T04 TO B04	*Call
2098		5022<5113	T05 TO B04	*Call
2098		5022<5114	U01 TO B04	*Call
2098		5022<5115	U02 TO B04	*Call
2098		5022<5116	U03 TO B04	*Call
2098		5022<5117	U04 TO B04	*Call
2098		5022<5118	U05 TO B04	*Call
2098		5022<5119	V01 TO B04	*Call
2098		5022<5120	V02 TO B04	*Call
2098		5022<5121	V03 TO B04	*Call
2098		5022<5122	V04 TO B04	*Call
2098		5022<5123	V05 TO B04	*Call
2098		5022<5124	W01 TO B04	*Call
2098		5022<5125	W02 TO B04	*Call
2098		5022<5126	W03 TO B04	*Call
2098		5022<5127	W04 TO B04	*Call
2098		5022<5128	W05 TO B04	*Call
2098		5022<5129	X01 TO B04	*Call
2098		5022<5130	X02 TO B04	*Call
2098		5022<5131	X03 TO B04	*Call
2098		5022<5132	X04 TO B04	*Call
2098		5022<5133	X05 TO B04	*Call
2098		5022<5134	Y01 TO B04	*Call
2098		5022<5135	Y02 TO B04	*Call
2098		5022<5136	Y03 TO B04	*Call
2098		5022<5137	Y04 TO B04	*Call
2098		5022<5138	Y05 TO B04	*Call
2098		5022<5139	Z01 TO B04	*Call
2098		5022<5140	Z02 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5022<5141	Z03 TO B04	*Call
2098		5022<5142	Z04 TO B04	*Call
2098		5022<5143	Z05 TO B04	*Call
2098		5023<5013	A00 TO B05	*Call
2098		5023<5014	A01 TO B05	*Call
2098		5023<5015	A02 TO B05	*Call
2098		5023<5016	A03 TO B05	*Call
2098		5023<5017	A04 TO B05	*Call
2098		5023<5018	A05 TO B05	*Call
2098		5023<5019	B01 TO B05	*Call
2098		5023<5020	B02 TO B05	*Call
2098		5023<5021	B03 TO B05	*Call
2098		5023<5022	B04 TO B05	*Call
2098		5023<5024	C01 TO B05	*Call
2098		5023<5025	C02 TO B05	*Call
2098		5023<5026	C03 TO B05	*Call
2098		5023<5027	C04 TO B05	*Call
2098		5023<5028	C05 TO B05	*Call
2098		5023<5029	D01 TO B05	*Call
2098		5023<5030	D02 TO B05	*Call
2098		5023<5031	D03 TO B05	*Call
2098		5023<5032	D04 TO B05	*Call
2098		5023<5033	D05 TO B05	*Call
2098		5023<5034	E01 TO B05	*Call
2098		5023<5035	E02 TO B05	*Call
2098		5023<5036	E03 TO B05	*Call
2098		5023<5037	E04 TO B05	*Call
2098		5023<5038	E05 TO B05	*Call
2098		5023<5039	F01 TO B05	*Call
2098		5023<5040	F02 TO B05	*Call
2098		5023<5041	F03 TO B05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5023<5042	F04 TO B05	*Call
2098		5023<5043	F05 TO B05	*Call
2098		5023<5044	G01 TO B05	*Call
2098		5023<5045	G02 TO B05	*Call
2098		5023<5046	G03 TO B05	*Call
2098		5023<5047	G04 TO B05	*Call
2098		5023<5048	G05 TO B05	*Call
2098		5023<5049	H01 TO B05	*Call
2098		5023<5050	H02 TO B05	*Call
2098		5023<5051	H03 TO B05	*Call
2098		5023<5052	H04 TO B05	*Call
2098		5023<5053	H05 TO B05	*Call
2098		5023<5054	I01 TO B05	*Call
2098		5023<5055	I02 TO B05	*Call
2098		5023<5056	I03 TO B05	*Call
2098		5023<5057	I04 TO B05	*Call
2098		5023<5058	I05 TO B05	*Call
2098		5023<5059	J01 TO B05	*Call
2098		5023<5060	J02 TO B05	*Call
2098		5023<5061	J03 TO B05	*Call
2098		5023<5062	J04 TO B05	*Call
2098		5023<5063	J05 TO B05	*Call
2098		5023<5064	K01 TO B05	*Call
2098		5023<5065	K02 TO B05	*Call
2098		5023<5066	K03 TO B05	*Call
2098		5023<5067	K04 TO B05	*Call
2098		5023<5068	K05 TO B05	*Call
2098		5023<5069	L01 TO B05	*Call
2098		5023<5070	L02 TO B05	*Call
2098		5023<5071	L03 TO B05	*Call
2098		5023<5072	L04 TO B05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5023<5073	L05 TO B05	*Call
2098		5023<5074	M01 TO B05	*Call
2098		5023<5075	M02 TO B05	*Call
2098		5023<5076	M03 TO B05	*Call
2098		5023<5077	M04 TO B05	*Call
2098		5023<5078	M05 TO B05	*Call
2098		5023<5079	N01 TO B05	*Call
2098		5023<5080	N02 TO B05	*Call
2098		5023<5081	N03 TO B05	*Call
2098		5023<5082	N04 TO B05	*Call
2098		5023<5083	N05 TO B05	*Call
2098		5023<5084	O01 TO B05	*Call
2098		5023<5085	O02 TO B05	*Call
2098		5023<5086	O03 TO B05	*Call
2098		5023<5087	O04 TO B05	*Call
2098		5023<5088	O05 TO B05	*Call
2098		5023<5089	P01 TO B05	*Call
2098		5023<5090	P02 TO B05	*Call
2098		5023<5091	P03 TO B05	*Call
2098		5023<5092	P04 TO B05	*Call
2098		5023<5093	P05 TO B05	*Call
2098		5023<5094	Q01 TO B05	*Call
2098		5023<5095	Q02 TO B05	*Call
2098		5023<5096	Q03 TO B05	*Call
2098		5023<5097	Q04 TO B05	*Call
2098		5023<5098	Q05 TO B05	*Call
2098		5023<5099	R01 TO B05	*Call
2098		5023<5100	R02 TO B05	*Call
2098		5023<5101	R03 TO B05	*Call
2098		5023<5102	R04 TO B05	*Call
2098		5023<5103	R05 TO B05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5023<5104	S01 TO B05	*Call
2098		5023<5105	S02 TO B05	*Call
2098		5023<5106	S03 TO B05	*Call
2098		5023<5107	S04 TO B05	*Call
2098		5023<5108	S05 TO B05	*Call
2098		5023<5109	T01 TO B05	*Call
2098		5023<5110	T02 TO B05	*Call
2098		5023<5111	T03 TO B05	*Call
2098		5023<5112	T04 TO B05	*Call
2098		5023<5113	T05 TO B05	*Call
2098		5023<5114	U01 TO B05	*Call
2098		5023<5115	U02 TO B05	*Call
2098		5023<5116	U03 TO B05	*Call
2098		5023<5117	U04 TO B05	*Call
2098		5023<5118	U05 TO B05	*Call
2098		5023<5119	V01 TO B05	*Call
2098		5023<5120	V02 TO B05	*Call
2098		5023<5121	V03 TO B05	*Call
2098		5023<5122	V04 TO B05	*Call
2098		5023<5123	V05 TO B05	*Call
2098		5023<5124	W01 TO B05	*Call
2098		5023<5125	W02 TO B05	*Call
2098		5023<5126	W03 TO B05	*Call
2098		5023<5127	W04 TO B05	*Call
2098		5023<5128	W05 TO B05	*Call
2098		5023<5129	X01 TO B05	*Call
2098		5023<5130	X02 TO B05	*Call
2098		5023<5131	X03 TO B05	*Call
2098		5023<5132	X04 TO B05	*Call
2098		5023<5133	X05 TO B05	*Call
2098		5023<5134	Y01 TO B05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5023<5135	Y02 TO B05	*Call
2098		5023<5136	Y03 TO B05	*Call
2098		5023<5137	Y04 TO B05	*Call
2098		5023<5138	Y05 TO B05	*Call
2098		5023<5139	Z01 TO B05	*Call
2098		5023<5140	Z02 TO B05	*Call
2098		5023<5141	Z03 TO B05	*Call
2098		5023<5142	Z04 TO B05	*Call
2098		5023<5143	Z05 TO B05	*Call
2098		5024<5013	A00 TO C01	*Call
2098		5024<5014	A01 TO C01	*Call
2098		5024<5015	A02 TO C01	*Call
2098		5024<5016	A03 TO C01	*Call
2098		5024<5017	A04 TO C01	*Call
2098		5024<5018	A05 TO C01	*Call
2098		5024<5019	B01 TO C01	*Call
2098		5024<5020	B02 TO C01	*Call
2098		5024<5021	B03 TO C01	*Call
2098		5024<5022	B04 TO C01	*Call
2098		5024<5023	B05 TO C01	*Call
2098		5024<5025	C02 TO C01	*Call
2098		5024<5026	C03 TO C01	*Call
2098		5024<5027	C04 TO C01	*Call
2098		5024<5028	C05 TO C01	*Call
2098		5024<5029	D01 TO C01	*Call
2098		5024<5030	D02 TO C01	*Call
2098		5024<5031	D03 TO C01	*Call
2098		5024<5032	D04 TO C01	*Call
2098		5024<5033	D05 TO C01	*Call
2098		5024<5034	E01 TO C01	*Call
2098		5024<5035	E02 TO C01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5024<5036	E03 TO C01	*Call
2098		5024<5037	E04 TO C01	*Call
2098		5024<5038	E05 TO C01	*Call
2098		5024<5039	F01 TO C01	*Call
2098		5024<5040	F02 TO C01	*Call
2098		5024<5041	F03 TO C01	*Call
2098		5024<5042	F04 TO C01	*Call
2098		5024<5043	F05 TO C01	*Call
2098		5024<5044	G01 TO C01	*Call
2098		5024<5045	G02 TO C01	*Call
2098		5024<5046	G03 TO C01	*Call
2098		5024<5047	G04 TO C01	*Call
2098		5024<5048	G05 TO C01	*Call
2098		5024<5049	H01 TO C01	*Call
2098		5024<5050	H02 TO C01	*Call
2098		5024<5051	H03 TO C01	*Call
2098		5024<5052	H04 TO C01	*Call
2098		5024<5053	H05 TO C01	*Call
2098		5024<5054	I01 TO C01	*Call
2098		5024<5055	I02 TO C01	*Call
2098		5024<5056	I03 TO C01	*Call
2098		5024<5057	I04 TO C01	*Call
2098		5024<5058	I05 TO C01	*Call
2098		5024<5059	J01 TO C01	*Call
2098		5024<5060	J02 TO C01	*Call
2098		5024<5061	J03 TO C01	*Call
2098		5024<5062	J04 TO C01	*Call
2098		5024<5063	J05 TO C01	*Call
2098		5024<5064	K01 TO C01	*Call
2098		5024<5065	K02 TO C01	*Call
2098		5024<5066	K03 TO C01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5024<5067	K04 TO C01	*Call
2098		5024<5068	K05 TO C01	*Call
2098		5024<5069	L01 TO C01	*Call
2098		5024<5070	L02 TO C01	*Call
2098		5024<5071	L03 TO C01	*Call
2098		5024<5072	L04 TO C01	*Call
2098		5024<5073	L05 TO C01	*Call
2098		5024<5074	M01 TO C01	*Call
2098		5024<5075	M02 TO C01	*Call
2098		5024<5076	M03 TO C01	*Call
2098		5024<5077	M04 TO C01	*Call
2098		5024<5078	M05 TO C01	*Call
2098		5024<5079	N01 TO C01	*Call
2098		5024<5080	N02 TO C01	*Call
2098		5024<5081	N03 TO C01	*Call
2098		5024<5082	N04 TO C01	*Call
2098		5024<5083	N05 TO C01	*Call
2098		5024<5084	O01 TO C01	*Call
2098		5024<5085	O02 TO C01	*Call
2098		5024<5086	O03 TO C01	*Call
2098		5024<5087	O04 TO C01	*Call
2098		5024<5088	O05 TO C01	*Call
2098		5024<5089	P01 TO C01	*Call
2098		5024<5090	P02 TO C01	*Call
2098		5024<5091	P03 TO C01	*Call
2098		5024<5092	P04 TO C01	*Call
2098		5024<5093	P05 TO C01	*Call
2098		5024<5094	Q01 TO C01	*Call
2098		5024<5095	Q02 TO C01	*Call
2098		5024<5096	Q03 TO C01	*Call
2098		5024<5097	Q04 TO C01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5024<5098	Q05 TO C01	*Call
2098		5024<5099	R01 TO C01	*Call
2098		5024<5100	R02 TO C01	*Call
2098		5024<5101	R03 TO C01	*Call
2098		5024<5102	R04 TO C01	*Call
2098		5024<5103	R05 TO C01	*Call
2098		5024<5104	S01 TO C01	*Call
2098		5024<5105	S02 TO C01	*Call
2098		5024<5106	S03 TO C01	*Call
2098		5024<5107	S04 TO C01	*Call
2098		5024<5108	S05 TO C01	*Call
2098		5024<5109	T01 TO C01	*Call
2098		5024<5110	T02 TO C01	*Call
2098		5024<5111	T03 TO C01	*Call
2098		5024<5112	T04 TO C01	*Call
2098		5024<5113	T05 TO C01	*Call
2098		5024<5114	U01 TO C01	*Call
2098		5024<5115	U02 TO C01	*Call
2098		5024<5116	U03 TO C01	*Call
2098		5024<5117	U04 TO C01	*Call
2098		5024<5118	U05 TO C01	*Call
2098		5024<5119	V01 TO C01	*Call
2098		5024<5120	V02 TO C01	*Call
2098		5024<5121	V03 TO C01	*Call
2098		5024<5122	V04 TO C01	*Call
2098		5024<5123	V05 TO C01	*Call
2098		5024<5124	W01 TO C01	*Call
2098		5024<5125	W02 TO C01	*Call
2098		5024<5126	W03 TO C01	*Call
2098		5024<5127	W04 TO C01	*Call
2098		5024<5128	W05 TO C01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5024<5129	X01 TO C01	*Call
2098		5024<5130	X02 TO C01	*Call
2098		5024<5131	X03 TO C01	*Call
2098		5024<5132	X04 TO C01	*Call
2098		5024<5133	X05 TO C01	*Call
2098		5024<5134	Y01 TO C01	*Call
2098		5024<5135	Y02 TO C01	*Call
2098		5024<5136	Y03 TO C01	*Call
2098		5024<5137	Y04 TO C01	*Call
2098		5024<5138	Y05 TO C01	*Call
2098		5024<5139	Z01 TO C01	*Call
2098		5024<5140	Z02 TO C01	*Call
2098		5024<5141	Z03 TO C01	*Call
2098		5024<5142	Z04 TO C01	*Call
2098		5024<5143	Z05 TO C01	*Call
2098		5025<5013	A00 TO C02	*Call
2098		5025<5014	A01 TO C02	*Call
2098		5025<5015	A02 TO C02	*Call
2098		5025<5016	A03 TO C02	*Call
2098		5025<5017	A04 TO C02	*Call
2098		5025<5018	A05 TO C02	*Call
2098		5025<5019	B01 TO C02	*Call
2098		5025<5020	B02 TO C02	*Call
2098		5025<5021	B03 TO C02	*Call
2098		5025<5022	B04 TO C02	*Call
2098		5025<5023	B05 TO C02	*Call
2098		5025<5024	C01 TO C02	*Call
2098		5025<5026	C03 TO C02	*Call
2098		5025<5027	C04 TO C02	*Call
2098		5025<5028	C05 TO C02	*Call
2098		5025<5029	D01 TO C02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5025<5030	D02 TO C02	*Call
2098		5025<5031	D03 TO C02	*Call
2098		5025<5032	D04 TO C02	*Call
2098		5025<5033	D05 TO C02	*Call
2098		5025<5034	E01 TO C02	*Call
2098		5025<5035	E02 TO C02	*Call
2098		5025<5036	E03 TO C02	*Call
2098		5025<5037	E04 TO C02	*Call
2098		5025<5038	E05 TO C02	*Call
2098		5025<5039	F01 TO C02	*Call
2098		5025<5040	F02 TO C02	*Call
2098		5025<5041	F03 TO C02	*Call
2098		5025<5042	F04 TO C02	*Call
2098		5025<5043	F05 TO C02	*Call
2098		5025<5044	G01 TO C02	*Call
2098		5025<5045	G02 TO C02	*Call
2098		5025<5046	G03 TO C02	*Call
2098		5025<5047	G04 TO C02	*Call
2098		5025<5048	G05 TO C02	*Call
2098		5025<5049	H01 TO C02	*Call
2098		5025<5050	H02 TO C02	*Call
2098		5025<5051	H03 TO C02	*Call
2098		5025<5052	H04 TO C02	*Call
2098		5025<5053	H05 TO C02	*Call
2098		5025<5054	I01 TO C02	*Call
2098		5025<5055	I02 TO C02	*Call
2098		5025<5056	I03 TO C02	*Call
2098		5025<5057	I04 TO C02	*Call
2098		5025<5058	I05 TO C02	*Call
2098		5025<5059	J01 TO C02	*Call
2098		5025<5060	J02 TO C02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5025<5061	J03 TO C02	*Call
2098		5025<5062	J04 TO C02	*Call
2098		5025<5063	J05 TO C02	*Call
2098		5025<5064	K01 TO C02	*Call
2098		5025<5065	K02 TO C02	*Call
2098		5025<5066	K03 TO C02	*Call
2098		5025<5067	K04 TO C02	*Call
2098		5025<5068	K05 TO C02	*Call
2098		5025<5069	L01 TO C02	*Call
2098		5025<5070	L02 TO C02	*Call
2098		5025<5071	L03 TO C02	*Call
2098		5025<5072	L04 TO C02	*Call
2098		5025<5073	L05 TO C02	*Call
2098		5025<5074	M01 TO C02	*Call
2098		5025<5075	M02 TO C02	*Call
2098		5025<5076	M03 TO C02	*Call
2098		5025<5077	M04 TO C02	*Call
2098		5025<5078	M05 TO C02	*Call
2098		5025<5079	N01 TO C02	*Call
2098		5025<5080	N02 TO C02	*Call
2098		5025<5081	N03 TO C02	*Call
2098		5025<5082	N04 TO C02	*Call
2098		5025<5083	N05 TO C02	*Call
2098		5025<5084	O01 TO C02	*Call
2098		5025<5085	O02 TO C02	*Call
2098		5025<5086	O03 TO C02	*Call
2098		5025<5087	O04 TO C02	*Call
2098		5025<5088	O05 TO C02	*Call
2098		5025<5089	P01 TO C02	*Call
2098		5025<5090	P02 TO C02	*Call
2098		5025<5091	P03 TO C02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5025<5092	P04 TO C02	*Call
2098		5025<5093	P05 TO C02	*Call
2098		5025<5094	Q01 TO C02	*Call
2098		5025<5095	Q02 TO C02	*Call
2098		5025<5096	Q03 TO C02	*Call
2098		5025<5097	Q04 TO C02	*Call
2098		5025<5098	Q05 TO C02	*Call
2098		5025<5099	R01 TO C02	*Call
2098		5025<5100	R02 TO C02	*Call
2098		5025<5101	R03 TO C02	*Call
2098		5025<5102	R04 TO C02	*Call
2098		5025<5103	R05 TO C02	*Call
2098		5025<5104	S01 TO C02	*Call
2098		5025<5105	S02 TO C02	*Call
2098		5025<5106	S03 TO C02	*Call
2098		5025<5107	S04 TO C02	*Call
2098		5025<5108	S05 TO C02	*Call
2098		5025<5109	T01 TO C02	*Call
2098		5025<5110	T02 TO C02	*Call
2098		5025<5111	T03 TO C02	*Call
2098		5025<5112	T04 TO C02	*Call
2098		5025<5113	T05 TO C02	*Call
2098		5025<5114	U01 TO C02	*Call
2098		5025<5115	U02 TO C02	*Call
2098		5025<5116	U03 TO C02	*Call
2098		5025<5117	U04 TO C02	*Call
2098		5025<5118	U05 TO C02	*Call
2098		5025<5119	V01 TO C02	*Call
2098		5025<5120	V02 TO C02	*Call
2098		5025<5121	V03 TO C02	*Call
2098		5025<5122	V04 TO C02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5025<5123	V05 TO C02	*Call
2098		5025<5124	W01 TO C02	*Call
2098		5025<5125	W02 TO C02	*Call
2098		5025<5126	W03 TO C02	*Call
2098		5025<5127	W04 TO C02	*Call
2098		5025<5128	W05 TO C02	*Call
2098		5025<5129	X01 TO C02	*Call
2098		5025<5130	X02 TO C02	*Call
2098		5025<5131	X03 TO C02	*Call
2098		5025<5132	X04 TO C02	*Call
2098		5025<5133	X05 TO C02	*Call
2098		5025<5134	Y01 TO C02	*Call
2098		5025<5135	Y02 TO C02	*Call
2098		5025<5136	Y03 TO C02	*Call
2098		5025<5137	Y04 TO C02	*Call
2098		5025<5138	Y05 TO C02	*Call
2098		5025<5139	Z01 TO C02	*Call
2098		5025<5140	Z02 TO C02	*Call
2098		5025<5141	Z03 TO C02	*Call
2098		5025<5142	Z04 TO C02	*Call
2098		5025<5143	Z05 TO C02	*Call
2098		5026<5013	A00 TO C03	*Call
2098		5026<5014	A01 TO C03	*Call
2098		5026<5015	A02 TO C03	*Call
2098		5026<5016	A03 TO C03	*Call
2098		5026<5017	A04 TO C03	*Call
2098		5026<5018	A05 TO C03	*Call
2098		5026<5019	B01 TO C03	*Call
2098		5026<5020	B02 TO C03	*Call
2098		5026<5021	B03 TO C03	*Call
2098		5026<5022	B04 TO C03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5026<5023	B05 TO C03	*Call
2098		5026<5024	C01 TO C03	*Call
2098		5026<5025	C02 TO C03	*Call
2098		5026<5027	C04 TO C03	*Call
2098		5026<5028	C05 TO C03	*Call
2098		5026<5029	D01 TO C03	*Call
2098		5026<5030	D02 TO C03	*Call
2098		5026<5031	D03 TO C03	*Call
2098		5026<5032	D04 TO C03	*Call
2098		5026<5033	D05 TO C03	*Call
2098		5026<5034	E01 TO C03	*Call
2098		5026<5035	E02 TO C03	*Call
2098		5026<5036	E03 TO C03	*Call
2098		5026<5037	E04 TO C03	*Call
2098		5026<5038	E05 TO C03	*Call
2098		5026<5039	F01 TO C03	*Call
2098		5026<5040	F02 TO C03	*Call
2098		5026<5041	F03 TO C03	*Call
2098		5026<5042	F04 TO C03	*Call
2098		5026<5043	F05 TO C03	*Call
2098		5026<5044	G01 TO C03	*Call
2098		5026<5045	G02 TO C03	*Call
2098		5026<5046	G03 TO C03	*Call
2098		5026<5047	G04 TO C03	*Call
2098		5026<5048	G05 TO C03	*Call
2098		5026<5049	H01 TO C03	*Call
2098		5026<5050	H02 TO C03	*Call
2098		5026<5051	H03 TO C03	*Call
2098		5026<5052	H04 TO C03	*Call
2098		5026<5053	H05 TO C03	*Call
2098		5026<5054	I01 TO C03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5026<5055	I02 TO C03	*Call
2098		5026<5056	I03 TO C03	*Call
2098		5026<5057	I04 TO C03	*Call
2098		5026<5058	I05 TO C03	*Call
2098		5026<5059	J01 TO C03	*Call
2098		5026<5060	J02 TO C03	*Call
2098		5026<5061	J03 TO C03	*Call
2098		5026<5062	J04 TO C03	*Call
2098		5026<5063	J05 TO C03	*Call
2098		5026<5064	K01 TO C03	*Call
2098		5026<5065	K02 TO C03	*Call
2098		5026<5066	K03 TO C03	*Call
2098		5026<5067	K04 TO C03	*Call
2098		5026<5068	K05 TO C03	*Call
2098		5026<5069	L01 TO C03	*Call
2098		5026<5070	L02 TO C03	*Call
2098		5026<5071	L03 TO C03	*Call
2098		5026<5072	L04 TO C03	*Call
2098		5026<5073	L05 TO C03	*Call
2098		5026<5074	M01 TO C03	*Call
2098		5026<5075	M02 TO C03	*Call
2098		5026<5076	M03 TO C03	*Call
2098		5026<5077	M04 TO C03	*Call
2098		5026<5078	M05 TO C03	*Call
2098		5026<5079	N01 TO C03	*Call
2098		5026<5080	N02 TO C03	*Call
2098		5026<5081	N03 TO C03	*Call
2098		5026<5082	N04 TO C03	*Call
2098		5026<5083	N05 TO C03	*Call
2098		5026<5084	O01 TO C03	*Call
2098		5026<5085	O02 TO C03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5026<5086	O03 TO C03	*Call
2098		5026<5087	O04 TO C03	*Call
2098		5026<5088	O05 TO C03	*Call
2098		5026<5089	P01 TO C03	*Call
2098		5026<5090	P02 TO C03	*Call
2098		5026<5091	P03 TO C03	*Call
2098		5026<5092	P04 TO C03	*Call
2098		5026<5093	P05 TO C03	*Call
2098		5026<5094	Q01 TO C03	*Call
2098		5026<5095	Q02 TO C03	*Call
2098		5026<5096	Q03 TO C03	*Call
2098		5026<5097	Q04 TO C03	*Call
2098		5026<5098	Q05 TO C03	*Call
2098		5026<5099	R01 TO C03	*Call
2098		5026<5100	R02 TO C03	*Call
2098		5026<5101	R03 TO C03	*Call
2098		5026<5102	R04 TO C03	*Call
2098		5026<5103	R05 TO C03	*Call
2098		5026<5104	S01 TO C03	*Call
2098		5026<5105	S02 TO C03	*Call
2098		5026<5106	S03 TO C03	*Call
2098		5026<5107	S04 TO C03	*Call
2098		5026<5108	S05 TO C03	*Call
2098		5026<5109	T01 TO C03	*Call
2098		5026<5110	T02 TO C03	*Call
2098		5026<5111	T03 TO C03	*Call
2098		5026<5112	T04 TO C03	*Call
2098		5026<5113	T05 TO C03	*Call
2098		5026<5114	U01 TO C03	*Call
2098		5026<5115	U02 TO C03	*Call
2098		5026<5116	U03 TO C03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5026<5117	U04 TO C03	*Call
2098		5026<5118	U05 TO C03	*Call
2098		5026<5119	V01 TO C03	*Call
2098		5026<5120	V02 TO C03	*Call
2098		5026<5121	V03 TO C03	*Call
2098		5026<5122	V04 TO C03	*Call
2098		5026<5123	V05 TO C03	*Call
2098		5026<5124	W01 TO C03	*Call
2098		5026<5125	W02 TO C03	*Call
2098		5026<5126	W03 TO C03	*Call
2098		5026<5127	W04 TO C03	*Call
2098		5026<5128	W05 TO C03	*Call
2098		5026<5129	X01 TO C03	*Call
2098		5026<5130	X02 TO C03	*Call
2098		5026<5131	X03 TO C03	*Call
2098		5026<5132	X04 TO C03	*Call
2098		5026<5133	X05 TO C03	*Call
2098		5026<5134	Y01 TO C03	*Call
2098		5026<5135	Y02 TO C03	*Call
2098		5026<5136	Y03 TO C03	*Call
2098		5026<5137	Y04 TO C03	*Call
2098		5026<5138	Y05 TO C03	*Call
2098		5026<5139	Z01 TO C03	*Call
2098		5026<5140	Z02 TO C03	*Call
2098		5026<5141	Z03 TO C03	*Call
2098		5026<5142	Z04 TO C03	*Call
2098		5026<5143	Z05 TO C03	*Call
2098		5027<5013	A00 TO C04	*Call
2098		5027<5014	A01 TO C04	*Call
2098		5027<5015	A02 TO C04	*Call
2098		5027<5016	A03 TO C04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5027<5017	A04 TO C04	*Call
2098		5027<5018	A05 TO C04	*Call
2098		5027<5019	B01 TO C04	*Call
2098		5027<5020	B02 TO C04	*Call
2098		5027<5021	B03 TO C04	*Call
2098		5027<5022	B04 TO C04	*Call
2098		5027<5023	B05 TO C04	*Call
2098		5027<5024	C01 TO C04	*Call
2098		5027<5025	C02 TO C04	*Call
2098		5027<5026	C03 TO C04	*Call
2098		5027<5028	C05 TO C04	*Call
2098		5027<5029	D01 TO C04	*Call
2098		5027<5030	D02 TO C04	*Call
2098		5027<5031	D03 TO C04	*Call
2098		5027<5032	D04 TO C04	*Call
2098		5027<5033	D05 TO C04	*Call
2098		5027<5034	E01 TO C04	*Call
2098		5027<5035	E02 TO C04	*Call
2098		5027<5036	E03 TO C04	*Call
2098		5027<5037	E04 TO C04	*Call
2098		5027<5038	E05 TO C04	*Call
2098		5027<5039	F01 TO C04	*Call
2098		5027<5040	F02 TO C04	*Call
2098		5027<5041	F03 TO C04	*Call
2098		5027<5042	F04 TO C04	*Call
2098		5027<5043	F05 TO C04	*Call
2098		5027<5044	G01 TO C04	*Call
2098		5027<5045	G02 TO C04	*Call
2098		5027<5046	G03 TO C04	*Call
2098		5027<5047	G04 TO C04	*Call
2098		5027<5048	G05 TO C04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5027<5049	H01 TO C04	*Call
2098		5027<5050	H02 TO C04	*Call
2098		5027<5051	H03 TO C04	*Call
2098		5027<5052	H04 TO C04	*Call
2098		5027<5053	H05 TO C04	*Call
2098		5027<5054	I01 TO C04	*Call
2098		5027<5055	I02 TO C04	*Call
2098		5027<5056	I03 TO C04	*Call
2098		5027<5057	I04 TO C04	*Call
2098		5027<5058	I05 TO C04	*Call
2098		5027<5059	J01 TO C04	*Call
2098		5027<5060	J02 TO C04	*Call
2098		5027<5061	J03 TO C04	*Call
2098		5027<5062	J04 TO C04	*Call
2098		5027<5063	J05 TO C04	*Call
2098		5027<5064	K01 TO C04	*Call
2098		5027<5065	K02 TO C04	*Call
2098		5027<5066	K03 TO C04	*Call
2098		5027<5067	K04 TO C04	*Call
2098		5027<5068	K05 TO C04	*Call
2098		5027<5069	L01 TO C04	*Call
2098		5027<5070	L02 TO C04	*Call
2098		5027<5071	L03 TO C04	*Call
2098		5027<5072	L04 TO C04	*Call
2098		5027<5073	L05 TO C04	*Call
2098		5027<5074	M01 TO C04	*Call
2098		5027<5075	M02 TO C04	*Call
2098		5027<5076	M03 TO C04	*Call
2098		5027<5077	M04 TO C04	*Call
2098		5027<5078	M05 TO C04	*Call
2098		5027<5079	N01 TO C04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5027<5080	N02 TO C04	*Call
2098		5027<5081	N03 TO C04	*Call
2098		5027<5082	N04 TO C04	*Call
2098		5027<5083	N05 TO C04	*Call
2098		5027<5084	O01 TO C04	*Call
2098		5027<5085	O02 TO C04	*Call
2098		5027<5086	O03 TO C04	*Call
2098		5027<5087	O04 TO C04	*Call
2098		5027<5088	O05 TO C04	*Call
2098		5027<5089	P01 TO C04	*Call
2098		5027<5090	P02 TO C04	*Call
2098		5027<5091	P03 TO C04	*Call
2098		5027<5092	P04 TO C04	*Call
2098		5027<5093	P05 TO C04	*Call
2098		5027<5094	Q01 TO C04	*Call
2098		5027<5095	Q02 TO C04	*Call
2098		5027<5096	Q03 TO C04	*Call
2098		5027<5097	Q04 TO C04	*Call
2098		5027<5098	Q05 TO C04	*Call
2098		5027<5099	R01 TO C04	*Call
2098		5027<5100	R02 TO C04	*Call
2098		5027<5101	R03 TO C04	*Call
2098		5027<5102	R04 TO C04	*Call
2098		5027<5103	R05 TO C04	*Call
2098		5027<5104	S01 TO C04	*Call
2098		5027<5105	S02 TO C04	*Call
2098		5027<5106	S03 TO C04	*Call
2098		5027<5107	S04 TO C04	*Call
2098		5027<5108	S05 TO C04	*Call
2098		5027<5109	T01 TO C04	*Call
2098		5027<5110	T02 TO C04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5027<5111	T03 TO C04	*Call
2098		5027<5112	T04 TO C04	*Call
2098		5027<5113	T05 TO C04	*Call
2098		5027<5114	U01 TO C04	*Call
2098		5027<5115	U02 TO C04	*Call
2098		5027<5116	U03 TO C04	*Call
2098		5027<5117	U04 TO C04	*Call
2098		5027<5118	U05 TO C04	*Call
2098		5027<5119	V01 TO C04	*Call
2098		5027<5120	V02 TO C04	*Call
2098		5027<5121	V03 TO C04	*Call
2098		5027<5122	V04 TO C04	*Call
2098		5027<5123	V05 TO C04	*Call
2098		5027<5124	W01 TO C04	*Call
2098		5027<5125	W02 TO C04	*Call
2098		5027<5126	W03 TO C04	*Call
2098		5027<5127	W04 TO C04	*Call
2098		5027<5128	W05 TO C04	*Call
2098		5027<5129	X01 TO C04	*Call
2098		5027<5130	X02 TO C04	*Call
2098		5027<5131	X03 TO C04	*Call
2098		5027<5132	X04 TO C04	*Call
2098		5027<5133	X05 TO C04	*Call
2098		5027<5134	Y01 TO C04	*Call
2098		5027<5135	Y02 TO C04	*Call
2098		5027<5136	Y03 TO C04	*Call
2098		5027<5137	Y04 TO C04	*Call
2098		5027<5138	Y05 TO C04	*Call
2098		5027<5139	Z01 TO C04	*Call
2098		5027<5140	Z02 TO C04	*Call
2098		5027<5141	Z03 TO C04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5027<5142	Z04 TO C04	*Call
2098		5027<5143	Z05 TO C04	*Call
2098		5028<5013	A00 TO C05	*Call
2098		5028<5014	A01 TO C05	*Call
2098		5028<5015	A02 TO C05	*Call
2098		5028<5016	A03 TO C05	*Call
2098		5028<5017	A04 TO C05	*Call
2098		5028<5018	A05 TO C05	*Call
2098		5028<5019	B01 TO C05	*Call
2098		5028<5020	B02 TO C05	*Call
2098		5028<5021	B03 TO C05	*Call
2098		5028<5022	B04 TO C05	*Call
2098		5028<5023	B05 TO C05	*Call
2098		5028<5024	C01 TO C05	*Call
2098		5028<5025	C02 TO C05	*Call
2098		5028<5026	C03 TO C05	*Call
2098		5028<5027	C04 TO C05	*Call
2098		5028<5029	D01 TO C05	*Call
2098		5028<5030	D02 TO C05	*Call
2098		5028<5031	D03 TO C05	*Call
2098		5028<5032	D04 TO C05	*Call
2098		5028<5033	D05 TO C05	*Call
2098		5028<5034	E01 TO C05	*Call
2098		5028<5035	E02 TO C05	*Call
2098		5028<5036	E03 TO C05	*Call
2098		5028<5037	E04 TO C05	*Call
2098		5028<5038	E05 TO C05	*Call
2098		5028<5039	F01 TO C05	*Call
2098		5028<5040	F02 TO C05	*Call
2098		5028<5041	F03 TO C05	*Call
2098		5028<5042	F04 TO C05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5028<5043	F05 TO C05	*Call
2098		5028<5044	G01 TO C05	*Call
2098		5028<5045	G02 TO C05	*Call
2098		5028<5046	G03 TO C05	*Call
2098		5028<5047	G04 TO C05	*Call
2098		5028<5048	G05 TO C05	*Call
2098		5028<5049	H01 TO C05	*Call
2098		5028<5050	H02 TO C05	*Call
2098		5028<5051	H03 TO C05	*Call
2098		5028<5052	H04 TO C05	*Call
2098		5028<5053	H05 TO C05	*Call
2098		5028<5054	I01 TO C05	*Call
2098		5028<5055	I02 TO C05	*Call
2098		5028<5056	I03 TO C05	*Call
2098		5028<5057	I04 TO C05	*Call
2098		5028<5058	I05 TO C05	*Call
2098		5028<5059	J01 TO C05	*Call
2098		5028<5060	J02 TO C05	*Call
2098		5028<5061	J03 TO C05	*Call
2098		5028<5062	J04 TO C05	*Call
2098		5028<5063	J05 TO C05	*Call
2098		5028<5064	K01 TO C05	*Call
2098		5028<5065	K02 TO C05	*Call
2098		5028<5066	K03 TO C05	*Call
2098		5028<5067	K04 TO C05	*Call
2098		5028<5068	K05 TO C05	*Call
2098		5028<5069	L01 TO C05	*Call
2098		5028<5070	L02 TO C05	*Call
2098		5028<5071	L03 TO C05	*Call
2098		5028<5072	L04 TO C05	*Call
2098		5028<5073	L05 TO C05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5028<5074	M01 TO C05	*Call
2098		5028<5075	M02 TO C05	*Call
2098		5028<5076	M03 TO C05	*Call
2098		5028<5077	M04 TO C05	*Call
2098		5028<5078	M05 TO C05	*Call
2098		5028<5079	N01 TO C05	*Call
2098		5028<5080	N02 TO C05	*Call
2098		5028<5081	N03 TO C05	*Call
2098		5028<5082	N04 TO C05	*Call
2098		5028<5083	N05 TO C05	*Call
2098		5028<5084	O01 TO C05	*Call
2098		5028<5085	O02 TO C05	*Call
2098		5028<5086	O03 TO C05	*Call
2098		5028<5087	O04 TO C05	*Call
2098		5028<5088	O05 TO C05	*Call
2098		5028<5089	P01 TO C05	*Call
2098		5028<5090	P02 TO C05	*Call
2098		5028<5091	P03 TO C05	*Call
2098		5028<5092	P04 TO C05	*Call
2098		5028<5093	P05 TO C05	*Call
2098		5028<5094	Q01 TO C05	*Call
2098		5028<5095	Q02 TO C05	*Call
2098		5028<5096	Q03 TO C05	*Call
2098		5028<5097	Q04 TO C05	*Call
2098		5028<5098	Q05 TO C05	*Call
2098		5028<5099	R01 TO C05	*Call
2098		5028<5100	R02 TO C05	*Call
2098		5028<5101	R03 TO C05	*Call
2098		5028<5102	R04 TO C05	*Call
2098		5028<5103	R05 TO C05	*Call
2098		5028<5104	S01 TO C05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5028<5105	S02 TO C05	*Call
2098		5028<5106	S03 TO C05	*Call
2098		5028<5107	S04 TO C05	*Call
2098		5028<5108	S05 TO C05	*Call
2098		5028<5109	T01 TO C05	*Call
2098		5028<5110	T02 TO C05	*Call
2098		5028<5111	T03 TO C05	*Call
2098		5028<5112	T04 TO C05	*Call
2098		5028<5113	T05 TO C05	*Call
2098		5028<5114	U01 TO C05	*Call
2098		5028<5115	U02 TO C05	*Call
2098		5028<5116	U03 TO C05	*Call
2098		5028<5117	U04 TO C05	*Call
2098		5028<5118	U05 TO C05	*Call
2098		5028<5119	V01 TO C05	*Call
2098		5028<5120	V02 TO C05	*Call
2098		5028<5121	V03 TO C05	*Call
2098		5028<5122	V04 TO C05	*Call
2098		5028<5123	V05 TO C05	*Call
2098		5028<5124	W01 TO C05	*Call
2098		5028<5125	W02 TO C05	*Call
2098		5028<5126	W03 TO C05	*Call
2098		5028<5127	W04 TO C05	*Call
2098		5028<5128	W05 TO C05	*Call
2098		5028<5129	X01 TO C05	*Call
2098		5028<5130	X02 TO C05	*Call
2098		5028<5131	X03 TO C05	*Call
2098		5028<5132	X04 TO C05	*Call
2098		5028<5133	X05 TO C05	*Call
2098		5028<5134	Y01 TO C05	*Call
2098		5028<5135	Y02 TO C05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5028<5136	Y03 TO C05	*Call
2098		5028<5137	Y04 TO C05	*Call
2098		5028<5138	Y05 TO C05	*Call
2098		5028<5139	Z01 TO C05	*Call
2098		5028<5140	Z02 TO C05	*Call
2098		5028<5141	Z03 TO C05	*Call
2098		5028<5142	Z04 TO C05	*Call
2098		5028<5143	Z05 TO C05	*Call
2098		5029<5013	A00 TO D01	*Call
2098		5029<5014	A01 TO D01	*Call
2098		5029<5015	A02 TO D01	*Call
2098		5029<5016	A03 TO D01	*Call
2098		5029<5017	A04 TO D01	*Call
2098		5029<5018	A05 TO D01	*Call
2098		5029<5019	B01 TO D01	*Call
2098		5029<5020	B02 TO D01	*Call
2098		5029<5021	B03 TO D01	*Call
2098		5029<5022	B04 TO D01	*Call
2098		5029<5023	B05 TO D01	*Call
2098		5029<5024	C01 TO D01	*Call
2098		5029<5025	C02 TO D01	*Call
2098		5029<5026	C03 TO D01	*Call
2098		5029<5027	C04 TO D01	*Call
2098		5029<5028	C05 TO D01	*Call
2098		5029<5030	D02 TO D01	*Call
2098		5029<5031	D03 TO D01	*Call
2098		5029<5032	D04 TO D01	*Call
2098		5029<5033	D05 TO D01	*Call
2098		5029<5034	E01 TO D01	*Call
2098		5029<5035	E02 TO D01	*Call
2098		5029<5036	E03 TO D01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5029<5037	E04 TO D01	*Call
2098		5029<5038	E05 TO D01	*Call
2098		5029<5039	F01 TO D01	*Call
2098		5029<5040	F02 TO D01	*Call
2098		5029<5041	F03 TO D01	*Call
2098		5029<5042	F04 TO D01	*Call
2098		5029<5043	F05 TO D01	*Call
2098		5029<5044	G01 TO D01	*Call
2098		5029<5045	G02 TO D01	*Call
2098		5029<5046	G03 TO D01	*Call
2098		5029<5047	G04 TO D01	*Call
2098		5029<5048	G05 TO D01	*Call
2098		5029<5049	H01 TO D01	*Call
2098		5029<5050	H02 TO D01	*Call
2098		5029<5051	H03 TO D01	*Call
2098		5029<5052	H04 TO D01	*Call
2098		5029<5053	H05 TO D01	*Call
2098		5029<5054	I01 TO D01	*Call
2098		5029<5055	I02 TO D01	*Call
2098		5029<5056	I03 TO D01	*Call
2098		5029<5057	I04 TO D01	*Call
2098		5029<5058	I05 TO D01	*Call
2098		5029<5059	J01 TO D01	*Call
2098		5029<5060	J02 TO D01	*Call
2098		5029<5061	J03 TO D01	*Call
2098		5029<5062	J04 TO D01	*Call
2098		5029<5063	J05 TO D01	*Call
2098		5029<5064	K01 TO D01	*Call
2098		5029<5065	K02 TO D01	*Call
2098		5029<5066	K03 TO D01	*Call
2098		5029<5067	K04 TO D01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5029<5068	K05 TO D01	*Call
2098		5029<5069	L01 TO D01	*Call
2098		5029<5070	L02 TO D01	*Call
2098		5029<5071	L03 TO D01	*Call
2098		5029<5072	L04 TO D01	*Call
2098		5029<5073	L05 TO D01	*Call
2098		5029<5074	M01 TO D01	*Call
2098		5029<5075	M02 TO D01	*Call
2098		5029<5076	M03 TO D01	*Call
2098		5029<5077	M04 TO D01	*Call
2098		5029<5078	M05 TO D01	*Call
2098		5029<5079	N01 TO D01	*Call
2098		5029<5080	N02 TO D01	*Call
2098		5029<5081	N03 TO D01	*Call
2098		5029<5082	N04 TO D01	*Call
2098		5029<5083	N05 TO D01	*Call
2098		5029<5084	O01 TO D01	*Call
2098		5029<5085	O02 TO D01	*Call
2098		5029<5086	O03 TO D01	*Call
2098		5029<5087	O04 TO D01	*Call
2098		5029<5088	O05 TO D01	*Call
2098		5029<5089	P01 TO D01	*Call
2098		5029<5090	P02 TO D01	*Call
2098		5029<5091	P03 TO D01	*Call
2098		5029<5092	P04 TO D01	*Call
2098		5029<5093	P05 TO D01	*Call
2098		5029<5094	Q01 TO D01	*Call
2098		5029<5095	Q02 TO D01	*Call
2098		5029<5096	Q03 TO D01	*Call
2098		5029<5097	Q04 TO D01	*Call
2098		5029<5098	Q05 TO D01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5029<5099	R01 TO D01	*Call
2098		5029<5100	R02 TO D01	*Call
2098		5029<5101	R03 TO D01	*Call
2098		5029<5102	R04 TO D01	*Call
2098		5029<5103	R05 TO D01	*Call
2098		5029<5104	S01 TO D01	*Call
2098		5029<5105	S02 TO D01	*Call
2098		5029<5106	S03 TO D01	*Call
2098		5029<5107	S04 TO D01	*Call
2098		5029<5108	S05 TO D01	*Call
2098		5029<5109	T01 TO D01	*Call
2098		5029<5110	T02 TO D01	*Call
2098		5029<5111	T03 TO D01	*Call
2098		5029<5112	T04 TO D01	*Call
2098		5029<5113	T05 TO D01	*Call
2098		5029<5114	U01 TO D01	*Call
2098		5029<5115	U02 TO D01	*Call
2098		5029<5116	U03 TO D01	*Call
2098		5029<5117	U04 TO D01	*Call
2098		5029<5118	U05 TO D01	*Call
2098		5029<5119	V01 TO D01	*Call
2098		5029<5120	V02 TO D01	*Call
2098		5029<5121	V03 TO D01	*Call
2098		5029<5122	V04 TO D01	*Call
2098		5029<5123	V05 TO D01	*Call
2098		5029<5124	W01 TO D01	*Call
2098		5029<5125	W02 TO D01	*Call
2098		5029<5126	W03 TO D01	*Call
2098		5029<5127	W04 TO D01	*Call
2098		5029<5128	W05 TO D01	*Call
2098		5029<5129	X01 TO D01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5029<5130	X02 TO D01	*Call
2098		5029<5131	X03 TO D01	*Call
2098		5029<5132	X04 TO D01	*Call
2098		5029<5133	X05 TO D01	*Call
2098		5029<5134	Y01 TO D01	*Call
2098		5029<5135	Y02 TO D01	*Call
2098		5029<5136	Y03 TO D01	*Call
2098		5029<5137	Y04 TO D01	*Call
2098		5029<5138	Y05 TO D01	*Call
2098		5029<5139	Z01 TO D01	*Call
2098		5029<5140	Z02 TO D01	*Call
2098		5029<5141	Z03 TO D01	*Call
2098		5029<5142	Z04 TO D01	*Call
2098		5029<5143	Z05 TO D01	*Call
2098		5030<5013	A00 TO D02	*Call
2098		5030<5014	A01 TO D02	*Call
2098		5030<5015	A02 TO D02	*Call
2098		5030<5016	A03 TO D02	*Call
2098		5030<5017	A04 TO D02	*Call
2098		5030<5018	A05 TO D02	*Call
2098		5030<5019	B01 TO D02	*Call
2098		5030<5020	B02 TO D02	*Call
2098		5030<5021	B03 TO D02	*Call
2098		5030<5022	B04 TO D02	*Call
2098		5030<5023	B05 TO D02	*Call
2098		5030<5024	C01 TO D02	*Call
2098		5030<5025	C02 TO D02	*Call
2098		5030<5026	C03 TO D02	*Call
2098		5030<5027	C04 TO D02	*Call
2098		5030<5028	C05 TO D02	*Call
2098		5030<5029	D01 TO D02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5030<5031	D03 TO D02	*Call
2098		5030<5032	D04 TO D02	*Call
2098		5030<5033	D05 TO D02	*Call
2098		5030<5034	E01 TO D02	*Call
2098		5030<5035	E02 TO D02	*Call
2098		5030<5036	E03 TO D02	*Call
2098		5030<5037	E04 TO D02	*Call
2098		5030<5038	E05 TO D02	*Call
2098		5030<5039	F01 TO D02	*Call
2098		5030<5040	F02 TO D02	*Call
2098		5030<5041	F03 TO D02	*Call
2098		5030<5042	F04 TO D02	*Call
2098		5030<5043	F05 TO D02	*Call
2098		5030<5044	G01 TO D02	*Call
2098		5030<5045	G02 TO D02	*Call
2098		5030<5046	G03 TO D02	*Call
2098		5030<5047	G04 TO D02	*Call
2098		5030<5048	G05 TO D02	*Call
2098		5030<5049	H01 TO D02	*Call
2098		5030<5050	H02 TO D02	*Call
2098		5030<5051	H03 TO D02	*Call
2098		5030<5052	H04 TO D02	*Call
2098		5030<5053	H05 TO D02	*Call
2098		5030<5054	I01 TO D02	*Call
2098		5030<5055	I02 TO D02	*Call
2098		5030<5056	I03 TO D02	*Call
2098		5030<5057	I04 TO D02	*Call
2098		5030<5058	I05 TO D02	*Call
2098		5030<5059	J01 TO D02	*Call
2098		5030<5060	J02 TO D02	*Call
2098		5030<5061	J03 TO D02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5030<5062	J04 TO D02	*Call
2098		5030<5063	J05 TO D02	*Call
2098		5030<5064	K01 TO D02	*Call
2098		5030<5065	K02 TO D02	*Call
2098		5030<5066	K03 TO D02	*Call
2098		5030<5067	K04 TO D02	*Call
2098		5030<5068	K05 TO D02	*Call
2098		5030<5069	L01 TO D02	*Call
2098		5030<5070	L02 TO D02	*Call
2098		5030<5071	L03 TO D02	*Call
2098		5030<5072	L04 TO D02	*Call
2098		5030<5073	L05 TO D02	*Call
2098		5030<5074	M01 TO D02	*Call
2098		5030<5075	M02 TO D02	*Call
2098		5030<5076	M03 TO D02	*Call
2098		5030<5077	M04 TO D02	*Call
2098		5030<5078	M05 TO D02	*Call
2098		5030<5079	N01 TO D02	*Call
2098		5030<5080	N02 TO D02	*Call
2098		5030<5081	N03 TO D02	*Call
2098		5030<5082	N04 TO D02	*Call
2098		5030<5083	N05 TO D02	*Call
2098		5030<5084	O01 TO D02	*Call
2098		5030<5085	O02 TO D02	*Call
2098		5030<5086	O03 TO D02	*Call
2098		5030<5087	O04 TO D02	*Call
2098		5030<5088	O05 TO D02	*Call
2098		5030<5089	P01 TO D02	*Call
2098		5030<5090	P02 TO D02	*Call
2098		5030<5091	P03 TO D02	*Call
2098		5030<5092	P04 TO D02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5030<5093	P05 TO D02	*Call
2098		5030<5094	Q01 TO D02	*Call
2098		5030<5095	Q02 TO D02	*Call
2098		5030<5096	Q03 TO D02	*Call
2098		5030<5097	Q04 TO D02	*Call
2098		5030<5098	Q05 TO D02	*Call
2098		5030<5099	R01 TO D02	*Call
2098		5030<5100	R02 TO D02	*Call
2098		5030<5101	R03 TO D02	*Call
2098		5030<5102	R04 TO D02	*Call
2098		5030<5103	R05 TO D02	*Call
2098		5030<5104	S01 TO D02	*Call
2098		5030<5105	S02 TO D02	*Call
2098		5030<5106	S03 TO D02	*Call
2098		5030<5107	S04 TO D02	*Call
2098		5030<5108	S05 TO D02	*Call
2098		5030<5109	T01 TO D02	*Call
2098		5030<5110	T02 TO D02	*Call
2098		5030<5111	T03 TO D02	*Call
2098		5030<5112	T04 TO D02	*Call
2098		5030<5113	T05 TO D02	*Call
2098		5030<5114	U01 TO D02	*Call
2098		5030<5115	U02 TO D02	*Call
2098		5030<5116	U03 TO D02	*Call
2098		5030<5117	U04 TO D02	*Call
2098		5030<5118	U05 TO D02	*Call
2098		5030<5119	V01 TO D02	*Call
2098		5030<5120	V02 TO D02	*Call
2098		5030<5121	V03 TO D02	*Call
2098		5030<5122	V04 TO D02	*Call
2098		5030<5123	V05 TO D02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5030<5124	W01 TO D02	*Call
2098		5030<5125	W02 TO D02	*Call
2098		5030<5126	W03 TO D02	*Call
2098		5030<5127	W04 TO D02	*Call
2098		5030<5128	W05 TO D02	*Call
2098		5030<5129	X01 TO D02	*Call
2098		5030<5130	X02 TO D02	*Call
2098		5030<5131	X03 TO D02	*Call
2098		5030<5132	X04 TO D02	*Call
2098		5030<5133	X05 TO D02	*Call
2098		5030<5134	Y01 TO D02	*Call
2098		5030<5135	Y02 TO D02	*Call
2098		5030<5136	Y03 TO D02	*Call
2098		5030<5137	Y04 TO D02	*Call
2098		5030<5138	Y05 TO D02	*Call
2098		5030<5139	Z01 TO D02	*Call
2098		5030<5140	Z02 TO D02	*Call
2098		5030<5141	Z03 TO D02	*Call
2098		5030<5142	Z04 TO D02	*Call
2098		5030<5143	Z05 TO D02	*Call
2098		5031<5013	A00 TO D03	*Call
2098		5031<5014	A01 TO D03	*Call
2098		5031<5015	A02 TO D03	*Call
2098		5031<5016	A03 TO D03	*Call
2098		5031<5017	A04 TO D03	*Call
2098		5031<5018	A05 TO D03	*Call
2098		5031<5019	B01 TO D03	*Call
2098		5031<5020	B02 TO D03	*Call
2098		5031<5021	B03 TO D03	*Call
2098		5031<5022	B04 TO D03	*Call
2098		5031<5023	B05 TO D03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5031<5024	C01 TO D03	*Call
2098		5031<5025	C02 TO D03	*Call
2098		5031<5026	C03 TO D03	*Call
2098		5031<5027	C04 TO D03	*Call
2098		5031<5028	C05 TO D03	*Call
2098		5031<5029	D01 TO D03	*Call
2098		5031<5030	D02 TO D03	*Call
2098		5031<5032	D04 TO D03	*Call
2098		5031<5033	D05 TO D03	*Call
2098		5031<5034	E01 TO D03	*Call
2098		5031<5035	E02 TO D03	*Call
2098		5031<5036	E03 TO D03	*Call
2098		5031<5037	E04 TO D03	*Call
2098		5031<5038	E05 TO D03	*Call
2098		5031<5039	F01 TO D03	*Call
2098		5031<5040	F02 TO D03	*Call
2098		5031<5041	F03 TO D03	*Call
2098		5031<5042	F04 TO D03	*Call
2098		5031<5043	F05 TO D03	*Call
2098		5031<5044	G01 TO D03	*Call
2098		5031<5045	G02 TO D03	*Call
2098		5031<5046	G03 TO D03	*Call
2098		5031<5047	G04 TO D03	*Call
2098		5031<5048	G05 TO D03	*Call
2098		5031<5049	H01 TO D03	*Call
2098		5031<5050	H02 TO D03	*Call
2098		5031<5051	H03 TO D03	*Call
2098		5031<5052	H04 TO D03	*Call
2098		5031<5053	H05 TO D03	*Call
2098		5031<5054	I01 TO D03	*Call
2098		5031<5055	I02 TO D03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5031<5056	I03 TO D03	*Call
2098		5031<5057	I04 TO D03	*Call
2098		5031<5058	I05 TO D03	*Call
2098		5031<5059	J01 TO D03	*Call
2098		5031<5060	J02 TO D03	*Call
2098		5031<5061	J03 TO D03	*Call
2098		5031<5062	J04 TO D03	*Call
2098		5031<5063	J05 TO D03	*Call
2098		5031<5064	K01 TO D03	*Call
2098		5031<5065	K02 TO D03	*Call
2098		5031<5066	K03 TO D03	*Call
2098		5031<5067	K04 TO D03	*Call
2098		5031<5068	K05 TO D03	*Call
2098		5031<5069	L01 TO D03	*Call
2098		5031<5070	L02 TO D03	*Call
2098		5031<5071	L03 TO D03	*Call
2098		5031<5072	L04 TO D03	*Call
2098		5031<5073	L05 TO D03	*Call
2098		5031<5074	M01 TO D03	*Call
2098		5031<5075	M02 TO D03	*Call
2098		5031<5076	M03 TO D03	*Call
2098		5031<5077	M04 TO D03	*Call
2098		5031<5078	M05 TO D03	*Call
2098		5031<5079	N01 TO D03	*Call
2098		5031<5080	N02 TO D03	*Call
2098		5031<5081	N03 TO D03	*Call
2098		5031<5082	N04 TO D03	*Call
2098		5031<5083	N05 TO D03	*Call
2098		5031<5084	O01 TO D03	*Call
2098		5031<5085	O02 TO D03	*Call
2098		5031<5086	O03 TO D03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5031<5087	O04 TO D03	*Call
2098		5031<5088	O05 TO D03	*Call
2098		5031<5089	P01 TO D03	*Call
2098		5031<5090	P02 TO D03	*Call
2098		5031<5091	P03 TO D03	*Call
2098		5031<5092	P04 TO D03	*Call
2098		5031<5093	P05 TO D03	*Call
2098		5031<5094	Q01 TO D03	*Call
2098		5031<5095	Q02 TO D03	*Call
2098		5031<5096	Q03 TO D03	*Call
2098		5031<5097	Q04 TO D03	*Call
2098		5031<5098	Q05 TO D03	*Call
2098		5031<5099	R01 TO D03	*Call
2098		5031<5100	R02 TO D03	*Call
2098		5031<5101	R03 TO D03	*Call
2098		5031<5102	R04 TO D03	*Call
2098		5031<5103	R05 TO D03	*Call
2098		5031<5104	S01 TO D03	*Call
2098		5031<5105	S02 TO D03	*Call
2098		5031<5106	S03 TO D03	*Call
2098		5031<5107	S04 TO D03	*Call
2098		5031<5108	S05 TO D03	*Call
2098		5031<5109	T01 TO D03	*Call
2098		5031<5110	T02 TO D03	*Call
2098		5031<5111	T03 TO D03	*Call
2098		5031<5112	T04 TO D03	*Call
2098		5031<5113	T05 TO D03	*Call
2098		5031<5114	U01 TO D03	*Call
2098		5031<5115	U02 TO D03	*Call
2098		5031<5116	U03 TO D03	*Call
2098		5031<5117	U04 TO D03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5031<5118	U05 TO D03	*Call
2098		5031<5119	V01 TO D03	*Call
2098		5031<5120	V02 TO D03	*Call
2098		5031<5121	V03 TO D03	*Call
2098		5031<5122	V04 TO D03	*Call
2098		5031<5123	V05 TO D03	*Call
2098		5031<5124	W01 TO D03	*Call
2098		5031<5125	W02 TO D03	*Call
2098		5031<5126	W03 TO D03	*Call
2098		5031<5127	W04 TO D03	*Call
2098		5031<5128	W05 TO D03	*Call
2098		5031<5129	X01 TO D03	*Call
2098		5031<5130	X02 TO D03	*Call
2098		5031<5131	X03 TO D03	*Call
2098		5031<5132	X04 TO D03	*Call
2098		5031<5133	X05 TO D03	*Call
2098		5031<5134	Y01 TO D03	*Call
2098		5031<5135	Y02 TO D03	*Call
2098		5031<5136	Y03 TO D03	*Call
2098		5031<5137	Y04 TO D03	*Call
2098		5031<5138	Y05 TO D03	*Call
2098		5031<5139	Z01 TO D03	*Call
2098		5031<5140	Z02 TO D03	*Call
2098		5031<5141	Z03 TO D03	*Call
2098		5031<5142	Z04 TO D03	*Call
2098		5031<5143	Z05 TO D03	*Call
2098		5032<5013	A00 TO D04	*Call
2098		5032<5014	A01 TO D04	*Call
2098		5032<5015	A02 TO D04	*Call
2098		5032<5016	A03 TO D04	*Call
2098		5032<5017	A04 TO D04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5032<5018	A05 TO D04	*Call
2098		5032<5019	B01 TO D04	*Call
2098		5032<5020	B02 TO D04	*Call
2098		5032<5021	B03 TO D04	*Call
2098		5032<5022	B04 TO D04	*Call
2098		5032<5023	B05 TO D04	*Call
2098		5032<5024	C01 TO D04	*Call
2098		5032<5025	C02 TO D04	*Call
2098		5032<5026	C03 TO D04	*Call
2098		5032<5027	C04 TO D04	*Call
2098		5032<5028	C05 TO D04	*Call
2098		5032<5029	D01 TO D04	*Call
2098		5032<5030	D02 TO D04	*Call
2098		5032<5031	D03 TO D04	*Call
2098		5032<5033	D05 TO D04	*Call
2098		5032<5034	E01 TO D04	*Call
2098		5032<5035	E02 TO D04	*Call
2098		5032<5036	E03 TO D04	*Call
2098		5032<5037	E04 TO D04	*Call
2098		5032<5038	E05 TO D04	*Call
2098		5032<5039	F01 TO D04	*Call
2098		5032<5040	F02 TO D04	*Call
2098		5032<5041	F03 TO D04	*Call
2098		5032<5042	F04 TO D04	*Call
2098		5032<5043	F05 TO D04	*Call
2098		5032<5044	G01 TO D04	*Call
2098		5032<5045	G02 TO D04	*Call
2098		5032<5046	G03 TO D04	*Call
2098		5032<5047	G04 TO D04	*Call
2098		5032<5048	G05 TO D04	*Call
2098		5032<5049	H01 TO D04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5032<5050	H02 TO D04	*Call
2098		5032<5051	H03 TO D04	*Call
2098		5032<5052	H04 TO D04	*Call
2098		5032<5053	H05 TO D04	*Call
2098		5032<5054	I01 TO D04	*Call
2098		5032<5055	I02 TO D04	*Call
2098		5032<5056	I03 TO D04	*Call
2098		5032<5057	I04 TO D04	*Call
2098		5032<5058	I05 TO D04	*Call
2098		5032<5059	J01 TO D04	*Call
2098		5032<5060	J02 TO D04	*Call
2098		5032<5061	J03 TO D04	*Call
2098		5032<5062	J04 TO D04	*Call
2098		5032<5063	J05 TO D04	*Call
2098		5032<5064	K01 TO D04	*Call
2098		5032<5065	K02 TO D04	*Call
2098		5032<5066	K03 TO D04	*Call
2098		5032<5067	K04 TO D04	*Call
2098		5032<5068	K05 TO D04	*Call
2098		5032<5069	L01 TO D04	*Call
2098		5032<5070	L02 TO D04	*Call
2098		5032<5071	L03 TO D04	*Call
2098		5032<5072	L04 TO D04	*Call
2098		5032<5073	L05 TO D04	*Call
2098		5032<5074	M01 TO D04	*Call
2098		5032<5075	M02 TO D04	*Call
2098		5032<5076	M03 TO D04	*Call
2098		5032<5077	M04 TO D04	*Call
2098		5032<5078	M05 TO D04	*Call
2098		5032<5079	N01 TO D04	*Call
2098		5032<5080	N02 TO D04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5032<5081	N03 TO D04	*Call
2098		5032<5082	N04 TO D04	*Call
2098		5032<5083	N05 TO D04	*Call
2098		5032<5084	O01 TO D04	*Call
2098		5032<5085	O02 TO D04	*Call
2098		5032<5086	O03 TO D04	*Call
2098		5032<5087	O04 TO D04	*Call
2098		5032<5088	O05 TO D04	*Call
2098		5032<5089	P01 TO D04	*Call
2098		5032<5090	P02 TO D04	*Call
2098		5032<5091	P03 TO D04	*Call
2098		5032<5092	P04 TO D04	*Call
2098		5032<5093	P05 TO D04	*Call
2098		5032<5094	Q01 TO D04	*Call
2098		5032<5095	Q02 TO D04	*Call
2098		5032<5096	Q03 TO D04	*Call
2098		5032<5097	Q04 TO D04	*Call
2098		5032<5098	Q05 TO D04	*Call
2098		5032<5099	R01 TO D04	*Call
2098		5032<5100	R02 TO D04	*Call
2098		5032<5101	R03 TO D04	*Call
2098		5032<5102	R04 TO D04	*Call
2098		5032<5103	R05 TO D04	*Call
2098		5032<5104	S01 TO D04	*Call
2098		5032<5105	S02 TO D04	*Call
2098		5032<5106	S03 TO D04	*Call
2098		5032<5107	S04 TO D04	*Call
2098		5032<5108	S05 TO D04	*Call
2098		5032<5109	T01 TO D04	*Call
2098		5032<5110	T02 TO D04	*Call
2098		5032<5111	T03 TO D04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5032<5112	T04 TO D04	*Call
2098		5032<5113	T05 TO D04	*Call
2098		5032<5114	U01 TO D04	*Call
2098		5032<5115	U02 TO D04	*Call
2098		5032<5116	U03 TO D04	*Call
2098		5032<5117	U04 TO D04	*Call
2098		5032<5118	U05 TO D04	*Call
2098		5032<5119	V01 TO D04	*Call
2098		5032<5120	V02 TO D04	*Call
2098		5032<5121	V03 TO D04	*Call
2098		5032<5122	V04 TO D04	*Call
2098		5032<5123	V05 TO D04	*Call
2098		5032<5124	W01 TO D04	*Call
2098		5032<5125	W02 TO D04	*Call
2098		5032<5126	W03 TO D04	*Call
2098		5032<5127	W04 TO D04	*Call
2098		5032<5128	W05 TO D04	*Call
2098		5032<5129	X01 TO D04	*Call
2098		5032<5130	X02 TO D04	*Call
2098		5032<5131	X03 TO D04	*Call
2098		5032<5132	X04 TO D04	*Call
2098		5032<5133	X05 TO D04	*Call
2098		5032<5134	Y01 TO D04	*Call
2098		5032<5135	Y02 TO D04	*Call
2098		5032<5136	Y03 TO D04	*Call
2098		5032<5137	Y04 TO D04	*Call
2098		5032<5138	Y05 TO D04	*Call
2098		5032<5139	Z01 TO D04	*Call
2098		5032<5140	Z02 TO D04	*Call
2098		5032<5141	Z03 TO D04	*Call
2098		5032<5142	Z04 TO D04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5032<5143	Z05 TO D04	*Call
2098		5033<5013	A00 TO D05	*Call
2098		5033<5014	A01 TO D05	*Call
2098		5033<5015	A02 TO D05	*Call
2098		5033<5016	A03 TO D05	*Call
2098		5033<5017	A04 TO D05	*Call
2098		5033<5018	A05 TO D05	*Call
2098		5033<5019	B01 TO D05	*Call
2098		5033<5020	B02 TO D05	*Call
2098		5033<5021	B03 TO D05	*Call
2098		5033<5022	B04 TO D05	*Call
2098		5033<5023	B05 TO D05	*Call
2098		5033<5024	C01 TO D05	*Call
2098		5033<5025	C02 TO D05	*Call
2098		5033<5026	C03 TO D05	*Call
2098		5033<5027	C04 TO D05	*Call
2098		5033<5028	C05 TO D05	*Call
2098		5033<5029	D01 TO D05	*Call
2098		5033<5030	D02 TO D05	*Call
2098		5033<5031	D03 TO D05	*Call
2098		5033<5032	D04 TO D05	*Call
2098		5033<5034	E01 TO D05	*Call
2098		5033<5035	E02 TO D05	*Call
2098		5033<5036	E03 TO D05	*Call
2098		5033<5037	E04 TO D05	*Call
2098		5033<5038	E05 TO D05	*Call
2098		5033<5039	F01 TO D05	*Call
2098		5033<5040	F02 TO D05	*Call
2098		5033<5041	F03 TO D05	*Call
2098		5033<5042	F04 TO D05	*Call
2098		5033<5043	F05 TO D05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5033<5044	G01 TO D05	*Call
2098		5033<5045	G02 TO D05	*Call
2098		5033<5046	G03 TO D05	*Call
2098		5033<5047	G04 TO D05	*Call
2098		5033<5048	G05 TO D05	*Call
2098		5033<5049	H01 TO D05	*Call
2098		5033<5050	H02 TO D05	*Call
2098		5033<5051	H03 TO D05	*Call
2098		5033<5052	H04 TO D05	*Call
2098		5033<5053	H05 TO D05	*Call
2098		5033<5054	I01 TO D05	*Call
2098		5033<5055	I02 TO D05	*Call
2098		5033<5056	I03 TO D05	*Call
2098		5033<5057	I04 TO D05	*Call
2098		5033<5058	I05 TO D05	*Call
2098		5033<5059	J01 TO D05	*Call
2098		5033<5060	J02 TO D05	*Call
2098		5033<5061	J03 TO D05	*Call
2098		5033<5062	J04 TO D05	*Call
2098		5033<5063	J05 TO D05	*Call
2098		5033<5064	K01 TO D05	*Call
2098		5033<5065	K02 TO D05	*Call
2098		5033<5066	K03 TO D05	*Call
2098		5033<5067	K04 TO D05	*Call
2098		5033<5068	K05 TO D05	*Call
2098		5033<5069	L01 TO D05	*Call
2098		5033<5070	L02 TO D05	*Call
2098		5033<5071	L03 TO D05	*Call
2098		5033<5072	L04 TO D05	*Call
2098		5033<5073	L05 TO D05	*Call
2098		5033<5074	M01 TO D05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5033<5075	M02 TO D05	*Call
2098		5033<5076	M03 TO D05	*Call
2098		5033<5077	M04 TO D05	*Call
2098		5033<5078	M05 TO D05	*Call
2098		5033<5079	N01 TO D05	*Call
2098		5033<5080	N02 TO D05	*Call
2098		5033<5081	N03 TO D05	*Call
2098		5033<5082	N04 TO D05	*Call
2098		5033<5083	N05 TO D05	*Call
2098		5033<5084	O01 TO D05	*Call
2098		5033<5085	O02 TO D05	*Call
2098		5033<5086	O03 TO D05	*Call
2098		5033<5087	O04 TO D05	*Call
2098		5033<5088	O05 TO D05	*Call
2098		5033<5089	P01 TO D05	*Call
2098		5033<5090	P02 TO D05	*Call
2098		5033<5091	P03 TO D05	*Call
2098		5033<5092	P04 TO D05	*Call
2098		5033<5093	P05 TO D05	*Call
2098		5033<5094	Q01 TO D05	*Call
2098		5033<5095	Q02 TO D05	*Call
2098		5033<5096	Q03 TO D05	*Call
2098		5033<5097	Q04 TO D05	*Call
2098		5033<5098	Q05 TO D05	*Call
2098		5033<5099	R01 TO D05	*Call
2098		5033<5100	R02 TO D05	*Call
2098		5033<5101	R03 TO D05	*Call
2098		5033<5102	R04 TO D05	*Call
2098		5033<5103	R05 TO D05	*Call
2098		5033<5104	S01 TO D05	*Call
2098		5033<5105	S02 TO D05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5033<5106	S03 TO D05	*Call
2098		5033<5107	S04 TO D05	*Call
2098		5033<5108	S05 TO D05	*Call
2098		5033<5109	T01 TO D05	*Call
2098		5033<5110	T02 TO D05	*Call
2098		5033<5111	T03 TO D05	*Call
2098		5033<5112	T04 TO D05	*Call
2098		5033<5113	T05 TO D05	*Call
2098		5033<5114	U01 TO D05	*Call
2098		5033<5115	U02 TO D05	*Call
2098		5033<5116	U03 TO D05	*Call
2098		5033<5117	U04 TO D05	*Call
2098		5033<5118	U05 TO D05	*Call
2098		5033<5119	V01 TO D05	*Call
2098		5033<5120	V02 TO D05	*Call
2098		5033<5121	V03 TO D05	*Call
2098		5033<5122	V04 TO D05	*Call
2098		5033<5123	V05 TO D05	*Call
2098		5033<5124	W01 TO D05	*Call
2098		5033<5125	W02 TO D05	*Call
2098		5033<5126	W03 TO D05	*Call
2098		5033<5127	W04 TO D05	*Call
2098		5033<5128	W05 TO D05	*Call
2098		5033<5129	X01 TO D05	*Call
2098		5033<5130	X02 TO D05	*Call
2098		5033<5131	X03 TO D05	*Call
2098		5033<5132	X04 TO D05	*Call
2098		5033<5133	X05 TO D05	*Call
2098		5033<5134	Y01 TO D05	*Call
2098		5033<5135	Y02 TO D05	*Call
2098		5033<5136	Y03 TO D05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5033<5137	Y04 TO D05	*Call
2098		5033<5138	Y05 TO D05	*Call
2098		5033<5139	Z01 TO D05	*Call
2098		5033<5140	Z02 TO D05	*Call
2098		5033<5141	Z03 TO D05	*Call
2098		5033<5142	Z04 TO D05	*Call
2098		5033<5143	Z05 TO D05	*Call
2098		5034<5013	A00 TO E01	*Call
2098		5034<5014	A01 TO E01	*Call
2098		5034<5015	A02 TO E01	*Call
2098		5034<5016	A03 TO E01	*Call
2098		5034<5017	A04 TO E01	*Call
2098		5034<5018	A05 TO E01	*Call
2098		5034<5019	B01 TO E01	*Call
2098		5034<5020	B02 TO E01	*Call
2098		5034<5021	B03 TO E01	*Call
2098		5034<5022	B04 TO E01	*Call
2098		5034<5023	B05 TO E01	*Call
2098		5034<5024	C01 TO E01	*Call
2098		5034<5025	C02 TO E01	*Call
2098		5034<5026	C03 TO E01	*Call
2098		5034<5027	C04 TO E01	*Call
2098		5034<5028	C05 TO E01	*Call
2098		5034<5029	D01 TO E01	*Call
2098		5034<5030	D02 TO E01	*Call
2098		5034<5031	D03 TO E01	*Call
2098		5034<5032	D04 TO E01	*Call
2098		5034<5033	D05 TO E01	*Call
2098		5034<5035	E02 TO E01	*Call
2098		5034<5036	E03 TO E01	*Call
2098		5034<5037	E04 TO E01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5034<5038	E05 TO E01	*Call
2098		5034<5039	F01 TO E01	*Call
2098		5034<5040	F02 TO E01	*Call
2098		5034<5041	F03 TO E01	*Call
2098		5034<5042	F04 TO E01	*Call
2098		5034<5043	F05 TO E01	*Call
2098		5034<5044	G01 TO E01	*Call
2098		5034<5045	G02 TO E01	*Call
2098		5034<5046	G03 TO E01	*Call
2098		5034<5047	G04 TO E01	*Call
2098		5034<5048	G05 TO E01	*Call
2098		5034<5049	H01 TO E01	*Call
2098		5034<5050	H02 TO E01	*Call
2098		5034<5051	H03 TO E01	*Call
2098		5034<5052	H04 TO E01	*Call
2098		5034<5053	H05 TO E01	*Call
2098		5034<5054	I01 TO E01	*Call
2098		5034<5055	I02 TO E01	*Call
2098		5034<5056	I03 TO E01	*Call
2098		5034<5057	I04 TO E01	*Call
2098		5034<5058	I05 TO E01	*Call
2098		5034<5059	J01 TO E01	*Call
2098		5034<5060	J02 TO E01	*Call
2098		5034<5061	J03 TO E01	*Call
2098		5034<5062	J04 TO E01	*Call
2098		5034<5063	J05 TO E01	*Call
2098		5034<5064	K01 TO E01	*Call
2098		5034<5065	K02 TO E01	*Call
2098		5034<5066	K03 TO E01	*Call
2098		5034<5067	K04 TO E01	*Call
2098		5034<5068	K05 TO E01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5034<5069	L01 TO E01	*Call
2098		5034<5070	L02 TO E01	*Call
2098		5034<5071	L03 TO E01	*Call
2098		5034<5072	L04 TO E01	*Call
2098		5034<5073	L05 TO E01	*Call
2098		5034<5074	M01 TO E01	*Call
2098		5034<5075	M02 TO E01	*Call
2098		5034<5076	M03 TO E01	*Call
2098		5034<5077	M04 TO E01	*Call
2098		5034<5078	M05 TO E01	*Call
2098		5034<5079	N01 TO E01	*Call
2098		5034<5080	N02 TO E01	*Call
2098		5034<5081	N03 TO E01	*Call
2098		5034<5082	N04 TO E01	*Call
2098		5034<5083	N05 TO E01	*Call
2098		5034<5084	O01 TO E01	*Call
2098		5034<5085	O02 TO E01	*Call
2098		5034<5086	O03 TO E01	*Call
2098		5034<5087	O04 TO E01	*Call
2098		5034<5088	O05 TO E01	*Call
2098		5034<5089	P01 TO E01	*Call
2098		5034<5090	P02 TO E01	*Call
2098		5034<5091	P03 TO E01	*Call
2098		5034<5092	P04 TO E01	*Call
2098		5034<5093	P05 TO E01	*Call
2098		5034<5094	Q01 TO E01	*Call
2098		5034<5095	Q02 TO E01	*Call
2098		5034<5096	Q03 TO E01	*Call
2098		5034<5097	Q04 TO E01	*Call
2098		5034<5098	Q05 TO E01	*Call
2098		5034<5099	R01 TO E01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5034<5100	R02 TO E01	*Call
2098		5034<5101	R03 TO E01	*Call
2098		5034<5102	R04 TO E01	*Call
2098		5034<5103	R05 TO E01	*Call
2098		5034<5104	S01 TO E01	*Call
2098		5034<5105	S02 TO E01	*Call
2098		5034<5106	S03 TO E01	*Call
2098		5034<5107	S04 TO E01	*Call
2098		5034<5108	S05 TO E01	*Call
2098		5034<5109	T01 TO E01	*Call
2098		5034<5110	T02 TO E01	*Call
2098		5034<5111	T03 TO E01	*Call
2098		5034<5112	T04 TO E01	*Call
2098		5034<5113	T05 TO E01	*Call
2098		5034<5114	U01 TO E01	*Call
2098		5034<5115	U02 TO E01	*Call
2098		5034<5116	U03 TO E01	*Call
2098		5034<5117	U04 TO E01	*Call
2098		5034<5118	U05 TO E01	*Call
2098		5034<5119	V01 TO E01	*Call
2098		5034<5120	V02 TO E01	*Call
2098		5034<5121	V03 TO E01	*Call
2098		5034<5122	V04 TO E01	*Call
2098		5034<5123	V05 TO E01	*Call
2098		5034<5124	W01 TO E01	*Call
2098		5034<5125	W02 TO E01	*Call
2098		5034<5126	W03 TO E01	*Call
2098		5034<5127	W04 TO E01	*Call
2098		5034<5128	W05 TO E01	*Call
2098		5034<5129	X01 TO E01	*Call
2098		5034<5130	X02 TO E01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5034<5131	X03 TO E01	*Call
2098		5034<5132	X04 TO E01	*Call
2098		5034<5133	X05 TO E01	*Call
2098		5034<5134	Y01 TO E01	*Call
2098		5034<5135	Y02 TO E01	*Call
2098		5034<5136	Y03 TO E01	*Call
2098		5034<5137	Y04 TO E01	*Call
2098		5034<5138	Y05 TO E01	*Call
2098		5034<5139	Z01 TO E01	*Call
2098		5034<5140	Z02 TO E01	*Call
2098		5034<5141	Z03 TO E01	*Call
2098		5034<5142	Z04 TO E01	*Call
2098		5034<5143	Z05 TO E01	*Call
2098		5035<5013	A00 TO E02	*Call
2098		5035<5014	A01 TO E02	*Call
2098		5035<5015	A02 TO E02	*Call
2098		5035<5016	A03 TO E02	*Call
2098		5035<5017	A04 TO E02	*Call
2098		5035<5018	A05 TO E02	*Call
2098		5035<5019	B01 TO E02	*Call
2098		5035<5020	B02 TO E02	*Call
2098		5035<5021	B03 TO E02	*Call
2098		5035<5022	B04 TO E02	*Call
2098		5035<5023	B05 TO E02	*Call
2098		5035<5024	C01 TO E02	*Call
2098		5035<5025	C02 TO E02	*Call
2098		5035<5026	C03 TO E02	*Call
2098		5035<5027	C04 TO E02	*Call
2098		5035<5028	C05 TO E02	*Call
2098		5035<5029	D01 TO E02	*Call
2098		5035<5030	D02 TO E02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5035<5031	D03 TO E02	*Call
2098		5035<5032	D04 TO E02	*Call
2098		5035<5033	D05 TO E02	*Call
2098		5035<5034	E01 TO E02	*Call
2098		5035<5036	E03 TO E02	*Call
2098		5035<5037	E04 TO E02	*Call
2098		5035<5038	E05 TO E02	*Call
2098		5035<5039	F01 TO E02	*Call
2098		5035<5040	F02 TO E02	*Call
2098		5035<5041	F03 TO E02	*Call
2098		5035<5042	F04 TO E02	*Call
2098		5035<5043	F05 TO E02	*Call
2098		5035<5044	G01 TO E02	*Call
2098		5035<5045	G02 TO E02	*Call
2098		5035<5046	G03 TO E02	*Call
2098		5035<5047	G04 TO E02	*Call
2098		5035<5048	G05 TO E02	*Call
2098		5035<5049	H01 TO E02	*Call
2098		5035<5050	H02 TO E02	*Call
2098		5035<5051	H03 TO E02	*Call
2098		5035<5052	H04 TO E02	*Call
2098		5035<5053	H05 TO E02	*Call
2098		5035<5054	I01 TO E02	*Call
2098		5035<5055	I02 TO E02	*Call
2098		5035<5056	I03 TO E02	*Call
2098		5035<5057	I04 TO E02	*Call
2098		5035<5058	I05 TO E02	*Call
2098		5035<5059	J01 TO E02	*Call
2098		5035<5060	J02 TO E02	*Call
2098		5035<5061	J03 TO E02	*Call
2098		5035<5062	J04 TO E02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5035<5063	J05 TO E02	*Call
2098		5035<5064	K01 TO E02	*Call
2098		5035<5065	K02 TO E02	*Call
2098		5035<5066	K03 TO E02	*Call
2098		5035<5067	K04 TO E02	*Call
2098		5035<5068	K05 TO E02	*Call
2098		5035<5069	L01 TO E02	*Call
2098		5035<5070	L02 TO E02	*Call
2098		5035<5071	L03 TO E02	*Call
2098		5035<5072	L04 TO E02	*Call
2098		5035<5073	L05 TO E02	*Call
2098		5035<5074	M01 TO E02	*Call
2098		5035<5075	M02 TO E02	*Call
2098		5035<5076	M03 TO E02	*Call
2098		5035<5077	M04 TO E02	*Call
2098		5035<5078	M05 TO E02	*Call
2098		5035<5079	N01 TO E02	*Call
2098		5035<5080	N02 TO E02	*Call
2098		5035<5081	N03 TO E02	*Call
2098		5035<5082	N04 TO E02	*Call
2098		5035<5083	N05 TO E02	*Call
2098		5035<5084	O01 TO E02	*Call
2098		5035<5085	O02 TO E02	*Call
2098		5035<5086	O03 TO E02	*Call
2098		5035<5087	O04 TO E02	*Call
2098		5035<5088	O05 TO E02	*Call
2098		5035<5089	P01 TO E02	*Call
2098		5035<5090	P02 TO E02	*Call
2098		5035<5091	P03 TO E02	*Call
2098		5035<5092	P04 TO E02	*Call
2098		5035<5093	P05 TO E02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5035<5094	Q01 TO E02	*Call
2098		5035<5095	Q02 TO E02	*Call
2098		5035<5096	Q03 TO E02	*Call
2098		5035<5097	Q04 TO E02	*Call
2098		5035<5098	Q05 TO E02	*Call
2098		5035<5099	R01 TO E02	*Call
2098		5035<5100	R02 TO E02	*Call
2098		5035<5101	R03 TO E02	*Call
2098		5035<5102	R04 TO E02	*Call
2098		5035<5103	R05 TO E02	*Call
2098		5035<5104	S01 TO E02	*Call
2098		5035<5105	S02 TO E02	*Call
2098		5035<5106	S03 TO E02	*Call
2098		5035<5107	S04 TO E02	*Call
2098		5035<5108	S05 TO E02	*Call
2098		5035<5109	T01 TO E02	*Call
2098		5035<5110	T02 TO E02	*Call
2098		5035<5111	T03 TO E02	*Call
2098		5035<5112	T04 TO E02	*Call
2098		5035<5113	T05 TO E02	*Call
2098		5035<5114	U01 TO E02	*Call
2098		5035<5115	U02 TO E02	*Call
2098		5035<5116	U03 TO E02	*Call
2098		5035<5117	U04 TO E02	*Call
2098		5035<5118	U05 TO E02	*Call
2098		5035<5119	V01 TO E02	*Call
2098		5035<5120	V02 TO E02	*Call
2098		5035<5121	V03 TO E02	*Call
2098		5035<5122	V04 TO E02	*Call
2098		5035<5123	V05 TO E02	*Call
2098		5035<5124	W01 TO E02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5035<5125	W02 TO E02	*Call
2098		5035<5126	W03 TO E02	*Call
2098		5035<5127	W04 TO E02	*Call
2098		5035<5128	W05 TO E02	*Call
2098		5035<5129	X01 TO E02	*Call
2098		5035<5130	X02 TO E02	*Call
2098		5035<5131	X03 TO E02	*Call
2098		5035<5132	X04 TO E02	*Call
2098		5035<5133	X05 TO E02	*Call
2098		5035<5134	Y01 TO E02	*Call
2098		5035<5135	Y02 TO E02	*Call
2098		5035<5136	Y03 TO E02	*Call
2098		5035<5137	Y04 TO E02	*Call
2098		5035<5138	Y05 TO E02	*Call
2098		5035<5139	Z01 TO E02	*Call
2098		5035<5140	Z02 TO E02	*Call
2098		5035<5141	Z03 TO E02	*Call
2098		5035<5142	Z04 TO E02	*Call
2098		5035<5143	Z05 TO E02	*Call
2098		5036<5013	A00 TO E03	*Call
2098		5036<5014	A01 TO E03	*Call
2098		5036<5015	A02 TO E03	*Call
2098		5036<5016	A03 TO E03	*Call
2098		5036<5017	A04 TO E03	*Call
2098		5036<5018	A05 TO E03	*Call
2098		5036<5019	B01 TO E03	*Call
2098		5036<5020	B02 TO E03	*Call
2098		5036<5021	B03 TO E03	*Call
2098		5036<5022	B04 TO E03	*Call
2098		5036<5023	B05 TO E03	*Call
2098		5036<5024	C01 TO E03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5036<5025	C02 TO E03	*Call
2098		5036<5026	C03 TO E03	*Call
2098		5036<5027	C04 TO E03	*Call
2098		5036<5028	C05 TO E03	*Call
2098		5036<5029	D01 TO E03	*Call
2098		5036<5030	D02 TO E03	*Call
2098		5036<5031	D03 TO E03	*Call
2098		5036<5032	D04 TO E03	*Call
2098		5036<5033	D05 TO E03	*Call
2098		5036<5034	E01 TO E03	*Call
2098		5036<5035	E02 TO E03	*Call
2098		5036<5037	E04 TO E03	*Call
2098		5036<5038	E05 TO E03	*Call
2098		5036<5039	F01 TO E03	*Call
2098		5036<5040	F02 TO E03	*Call
2098		5036<5041	F03 TO E03	*Call
2098		5036<5042	F04 TO E03	*Call
2098		5036<5043	F05 TO E03	*Call
2098		5036<5044	G01 TO E03	*Call
2098		5036<5045	G02 TO E03	*Call
2098		5036<5046	G03 TO E03	*Call
2098		5036<5047	G04 TO E03	*Call
2098		5036<5048	G05 TO E03	*Call
2098		5036<5049	H01 TO E03	*Call
2098		5036<5050	H02 TO E03	*Call
2098		5036<5051	H03 TO E03	*Call
2098		5036<5052	H04 TO E03	*Call
2098		5036<5053	H05 TO E03	*Call
2098		5036<5054	I01 TO E03	*Call
2098		5036<5055	I02 TO E03	*Call
2098		5036<5056	I03 TO E03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5036<5057	I04 TO E03	*Call
2098		5036<5058	I05 TO E03	*Call
2098		5036<5059	J01 TO E03	*Call
2098		5036<5060	J02 TO E03	*Call
2098		5036<5061	J03 TO E03	*Call
2098		5036<5062	J04 TO E03	*Call
2098		5036<5063	J05 TO E03	*Call
2098		5036<5064	K01 TO E03	*Call
2098		5036<5065	K02 TO E03	*Call
2098		5036<5066	K03 TO E03	*Call
2098		5036<5067	K04 TO E03	*Call
2098		5036<5068	K05 TO E03	*Call
2098		5036<5069	L01 TO E03	*Call
2098		5036<5070	L02 TO E03	*Call
2098		5036<5071	L03 TO E03	*Call
2098		5036<5072	L04 TO E03	*Call
2098		5036<5073	L05 TO E03	*Call
2098		5036<5074	M01 TO E03	*Call
2098		5036<5075	M02 TO E03	*Call
2098		5036<5076	M03 TO E03	*Call
2098		5036<5077	M04 TO E03	*Call
2098		5036<5078	M05 TO E03	*Call
2098		5036<5079	N01 TO E03	*Call
2098		5036<5080	N02 TO E03	*Call
2098		5036<5081	N03 TO E03	*Call
2098		5036<5082	N04 TO E03	*Call
2098		5036<5083	N05 TO E03	*Call
2098		5036<5084	O01 TO E03	*Call
2098		5036<5085	O02 TO E03	*Call
2098		5036<5086	O03 TO E03	*Call
2098		5036<5087	O04 TO E03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5036<5088	O05 TO E03	*Call
2098		5036<5089	P01 TO E03	*Call
2098		5036<5090	P02 TO E03	*Call
2098		5036<5091	P03 TO E03	*Call
2098		5036<5092	P04 TO E03	*Call
2098		5036<5093	P05 TO E03	*Call
2098		5036<5094	Q01 TO E03	*Call
2098		5036<5095	Q02 TO E03	*Call
2098		5036<5096	Q03 TO E03	*Call
2098		5036<5097	Q04 TO E03	*Call
2098		5036<5098	Q05 TO E03	*Call
2098		5036<5099	R01 TO E03	*Call
2098		5036<5100	R02 TO E03	*Call
2098		5036<5101	R03 TO E03	*Call
2098		5036<5102	R04 TO E03	*Call
2098		5036<5103	R05 TO E03	*Call
2098		5036<5104	S01 TO E03	*Call
2098		5036<5105	S02 TO E03	*Call
2098		5036<5106	S03 TO E03	*Call
2098		5036<5107	S04 TO E03	*Call
2098		5036<5108	S05 TO E03	*Call
2098		5036<5109	T01 TO E03	*Call
2098		5036<5110	T02 TO E03	*Call
2098		5036<5111	T03 TO E03	*Call
2098		5036<5112	T04 TO E03	*Call
2098		5036<5113	T05 TO E03	*Call
2098		5036<5114	U01 TO E03	*Call
2098		5036<5115	U02 TO E03	*Call
2098		5036<5116	U03 TO E03	*Call
2098		5036<5117	U04 TO E03	*Call
2098		5036<5118	U05 TO E03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5036<5119	V01 TO E03	*Call
2098		5036<5120	V02 TO E03	*Call
2098		5036<5121	V03 TO E03	*Call
2098		5036<5122	V04 TO E03	*Call
2098		5036<5123	V05 TO E03	*Call
2098		5036<5124	W01 TO E03	*Call
2098		5036<5125	W02 TO E03	*Call
2098		5036<5126	W03 TO E03	*Call
2098		5036<5127	W04 TO E03	*Call
2098		5036<5128	W05 TO E03	*Call
2098		5036<5129	X01 TO E03	*Call
2098		5036<5130	X02 TO E03	*Call
2098		5036<5131	X03 TO E03	*Call
2098		5036<5132	X04 TO E03	*Call
2098		5036<5133	X05 TO E03	*Call
2098		5036<5134	Y01 TO E03	*Call
2098		5036<5135	Y02 TO E03	*Call
2098		5036<5136	Y03 TO E03	*Call
2098		5036<5137	Y04 TO E03	*Call
2098		5036<5138	Y05 TO E03	*Call
2098		5036<5139	Z01 TO E03	*Call
2098		5036<5140	Z02 TO E03	*Call
2098		5036<5141	Z03 TO E03	*Call
2098		5036<5142	Z04 TO E03	*Call
2098		5036<5143	Z05 TO E03	*Call
2098		5037<5013	A00 TO E04	*Call
2098		5037<5014	A01 TO E04	*Call
2098		5037<5015	A02 TO E04	*Call
2098		5037<5016	A03 TO E04	*Call
2098		5037<5017	A04 TO E04	*Call
2098		5037<5018	A05 TO E04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5037<5019	B01 TO E04	*Call
2098		5037<5020	B02 TO E04	*Call
2098		5037<5021	B03 TO E04	*Call
2098		5037<5022	B04 TO E04	*Call
2098		5037<5023	B05 TO E04	*Call
2098		5037<5024	C01 TO E04	*Call
2098		5037<5025	C02 TO E04	*Call
2098		5037<5026	C03 TO E04	*Call
2098		5037<5027	C04 TO E04	*Call
2098		5037<5028	C05 TO E04	*Call
2098		5037<5029	D01 TO E04	*Call
2098		5037<5030	D02 TO E04	*Call
2098		5037<5031	D03 TO E04	*Call
2098		5037<5032	D04 TO E04	*Call
2098		5037<5033	D05 TO E04	*Call
2098		5037<5034	E01 TO E04	*Call
2098		5037<5035	E02 TO E04	*Call
2098		5037<5036	E03 TO E04	*Call
2098		5037<5038	E05 TO E04	*Call
2098		5037<5039	F01 TO E04	*Call
2098		5037<5040	F02 TO E04	*Call
2098		5037<5041	F03 TO E04	*Call
2098		5037<5042	F04 TO E04	*Call
2098		5037<5043	F05 TO E04	*Call
2098		5037<5044	G01 TO E04	*Call
2098		5037<5045	G02 TO E04	*Call
2098		5037<5046	G03 TO E04	*Call
2098		5037<5047	G04 TO E04	*Call
2098		5037<5048	G05 TO E04	*Call
2098		5037<5049	H01 TO E04	*Call
2098		5037<5050	H02 TO E04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5037<5051	H03 TO E04	*Call
2098		5037<5052	H04 TO E04	*Call
2098		5037<5053	H05 TO E04	*Call
2098		5037<5054	I01 TO E04	*Call
2098		5037<5055	I02 TO E04	*Call
2098		5037<5056	I03 TO E04	*Call
2098		5037<5057	I04 TO E04	*Call
2098		5037<5058	I05 TO E04	*Call
2098		5037<5059	J01 TO E04	*Call
2098		5037<5060	J02 TO E04	*Call
2098		5037<5061	J03 TO E04	*Call
2098		5037<5062	J04 TO E04	*Call
2098		5037<5063	J05 TO E04	*Call
2098		5037<5064	K01 TO E04	*Call
2098		5037<5065	K02 TO E04	*Call
2098		5037<5066	K03 TO E04	*Call
2098		5037<5067	K04 TO E04	*Call
2098		5037<5068	K05 TO E04	*Call
2098		5037<5069	L01 TO E04	*Call
2098		5037<5070	L02 TO E04	*Call
2098		5037<5071	L03 TO E04	*Call
2098		5037<5072	L04 TO E04	*Call
2098		5037<5073	L05 TO E04	*Call
2098		5037<5074	M01 TO E04	*Call
2098		5037<5075	M02 TO E04	*Call
2098		5037<5076	M03 TO E04	*Call
2098		5037<5077	M04 TO E04	*Call
2098		5037<5078	M05 TO E04	*Call
2098		5037<5079	N01 TO E04	*Call
2098		5037<5080	N02 TO E04	*Call
2098		5037<5081	N03 TO E04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5037<5082	N04 TO E04	*Call
2098		5037<5083	N05 TO E04	*Call
2098		5037<5084	O01 TO E04	*Call
2098		5037<5085	O02 TO E04	*Call
2098		5037<5086	O03 TO E04	*Call
2098		5037<5087	O04 TO E04	*Call
2098		5037<5088	O05 TO E04	*Call
2098		5037<5089	P01 TO E04	*Call
2098		5037<5090	P02 TO E04	*Call
2098		5037<5091	P03 TO E04	*Call
2098		5037<5092	P04 TO E04	*Call
2098		5037<5093	P05 TO E04	*Call
2098		5037<5094	Q01 TO E04	*Call
2098		5037<5095	Q02 TO E04	*Call
2098		5037<5096	Q03 TO E04	*Call
2098		5037<5097	Q04 TO E04	*Call
2098		5037<5098	Q05 TO E04	*Call
2098		5037<5099	R01 TO E04	*Call
2098		5037<5100	R02 TO E04	*Call
2098		5037<5101	R03 TO E04	*Call
2098		5037<5102	R04 TO E04	*Call
2098		5037<5103	R05 TO E04	*Call
2098		5037<5104	S01 TO E04	*Call
2098		5037<5105	S02 TO E04	*Call
2098		5037<5106	S03 TO E04	*Call
2098		5037<5107	S04 TO E04	*Call
2098		5037<5108	S05 TO E04	*Call
2098		5037<5109	T01 TO E04	*Call
2098		5037<5110	T02 TO E04	*Call
2098		5037<5111	T03 TO E04	*Call
2098		5037<5112	T04 TO E04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5037<5113	T05 TO E04	*Call
2098		5037<5114	U01 TO E04	*Call
2098		5037<5115	U02 TO E04	*Call
2098		5037<5116	U03 TO E04	*Call
2098		5037<5117	U04 TO E04	*Call
2098		5037<5118	U05 TO E04	*Call
2098		5037<5119	V01 TO E04	*Call
2098		5037<5120	V02 TO E04	*Call
2098		5037<5121	V03 TO E04	*Call
2098		5037<5122	V04 TO E04	*Call
2098		5037<5123	V05 TO E04	*Call
2098		5037<5124	W01 TO E04	*Call
2098		5037<5125	W02 TO E04	*Call
2098		5037<5126	W03 TO E04	*Call
2098		5037<5127	W04 TO E04	*Call
2098		5037<5128	W05 TO E04	*Call
2098		5037<5129	X01 TO E04	*Call
2098		5037<5130	X02 TO E04	*Call
2098		5037<5131	X03 TO E04	*Call
2098		5037<5132	X04 TO E04	*Call
2098		5037<5133	X05 TO E04	*Call
2098		5037<5134	Y01 TO E04	*Call
2098		5037<5135	Y02 TO E04	*Call
2098		5037<5136	Y03 TO E04	*Call
2098		5037<5137	Y04 TO E04	*Call
2098		5037<5138	Y05 TO E04	*Call
2098		5037<5139	Z01 TO E04	*Call
2098		5037<5140	Z02 TO E04	*Call
2098		5037<5141	Z03 TO E04	*Call
2098		5037<5142	Z04 TO E04	*Call
2098		5037<5143	Z05 TO E04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5038<5013	A00 TO E05	*Call
2098		5038<5014	A01 TO E05	*Call
2098		5038<5015	A02 TO E05	*Call
2098		5038<5016	A03 TO E05	*Call
2098		5038<5017	A04 TO E05	*Call
2098		5038<5018	A05 TO E05	*Call
2098		5038<5019	B01 TO E05	*Call
2098		5038<5020	B02 TO E05	*Call
2098		5038<5021	B03 TO E05	*Call
2098		5038<5022	B04 TO E05	*Call
2098		5038<5023	B05 TO E05	*Call
2098		5038<5024	C01 TO E05	*Call
2098		5038<5025	C02 TO E05	*Call
2098		5038<5026	C03 TO E05	*Call
2098		5038<5027	C04 TO E05	*Call
2098		5038<5028	C05 TO E05	*Call
2098		5038<5029	D01 TO E05	*Call
2098		5038<5030	D02 TO E05	*Call
2098		5038<5031	D03 TO E05	*Call
2098		5038<5032	D04 TO E05	*Call
2098		5038<5033	D05 TO E05	*Call
2098		5038<5034	E01 TO E05	*Call
2098		5038<5035	E02 TO E05	*Call
2098		5038<5036	E03 TO E05	*Call
2098		5038<5037	E04 TO E05	*Call
2098		5038<5039	F01 TO E05	*Call
2098		5038<5040	F02 TO E05	*Call
2098		5038<5041	F03 TO E05	*Call
2098		5038<5042	F04 TO E05	*Call
2098		5038<5043	F05 TO E05	*Call
2098		5038<5044	G01 TO E05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5038<5045	G02 TO E05	*Call
2098		5038<5046	G03 TO E05	*Call
2098		5038<5047	G04 TO E05	*Call
2098		5038<5048	G05 TO E05	*Call
2098		5038<5049	H01 TO E05	*Call
2098		5038<5050	H02 TO E05	*Call
2098		5038<5051	H03 TO E05	*Call
2098		5038<5052	H04 TO E05	*Call
2098		5038<5053	H05 TO E05	*Call
2098		5038<5054	I01 TO E05	*Call
2098		5038<5055	I02 TO E05	*Call
2098		5038<5056	I03 TO E05	*Call
2098		5038<5057	I04 TO E05	*Call
2098		5038<5058	I05 TO E05	*Call
2098		5038<5059	J01 TO E05	*Call
2098		5038<5060	J02 TO E05	*Call
2098		5038<5061	J03 TO E05	*Call
2098		5038<5062	J04 TO E05	*Call
2098		5038<5063	J05 TO E05	*Call
2098		5038<5064	K01 TO E05	*Call
2098		5038<5065	K02 TO E05	*Call
2098		5038<5066	K03 TO E05	*Call
2098		5038<5067	K04 TO E05	*Call
2098		5038<5068	K05 TO E05	*Call
2098		5038<5069	L01 TO E05	*Call
2098		5038<5070	L02 TO E05	*Call
2098		5038<5071	L03 TO E05	*Call
2098		5038<5072	L04 TO E05	*Call
2098		5038<5073	L05 TO E05	*Call
2098		5038<5074	M01 TO E05	*Call
2098		5038<5075	M02 TO E05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5038<5076	M03 TO E05	*Call
2098		5038<5077	M04 TO E05	*Call
2098		5038<5078	M05 TO E05	*Call
2098		5038<5079	N01 TO E05	*Call
2098		5038<5080	N02 TO E05	*Call
2098		5038<5081	N03 TO E05	*Call
2098		5038<5082	N04 TO E05	*Call
2098		5038<5083	N05 TO E05	*Call
2098		5038<5084	O01 TO E05	*Call
2098		5038<5085	O02 TO E05	*Call
2098		5038<5086	O03 TO E05	*Call
2098		5038<5087	O04 TO E05	*Call
2098		5038<5088	O05 TO E05	*Call
2098		5038<5089	P01 TO E05	*Call
2098		5038<5090	P02 TO E05	*Call
2098		5038<5091	P03 TO E05	*Call
2098		5038<5092	P04 TO E05	*Call
2098		5038<5093	P05 TO E05	*Call
2098		5038<5094	Q01 TO E05	*Call
2098		5038<5095	Q02 TO E05	*Call
2098		5038<5096	Q03 TO E05	*Call
2098		5038<5097	Q04 TO E05	*Call
2098		5038<5098	Q05 TO E05	*Call
2098		5038<5099	R01 TO E05	*Call
2098		5038<5100	R02 TO E05	*Call
2098		5038<5101	R03 TO E05	*Call
2098		5038<5102	R04 TO E05	*Call
2098		5038<5103	R05 TO E05	*Call
2098		5038<5104	S01 TO E05	*Call
2098		5038<5105	S02 TO E05	*Call
2098		5038<5106	S03 TO E05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5038<5107	S04 TO E05	*Call
2098		5038<5108	S05 TO E05	*Call
2098		5038<5109	T01 TO E05	*Call
2098		5038<5110	T02 TO E05	*Call
2098		5038<5111	T03 TO E05	*Call
2098		5038<5112	T04 TO E05	*Call
2098		5038<5113	T05 TO E05	*Call
2098		5038<5114	U01 TO E05	*Call
2098		5038<5115	U02 TO E05	*Call
2098		5038<5116	U03 TO E05	*Call
2098		5038<5117	U04 TO E05	*Call
2098		5038<5118	U05 TO E05	*Call
2098		5038<5119	V01 TO E05	*Call
2098		5038<5120	V02 TO E05	*Call
2098		5038<5121	V03 TO E05	*Call
2098		5038<5122	V04 TO E05	*Call
2098		5038<5123	V05 TO E05	*Call
2098		5038<5124	W01 TO E05	*Call
2098		5038<5125	W02 TO E05	*Call
2098		5038<5126	W03 TO E05	*Call
2098		5038<5127	W04 TO E05	*Call
2098		5038<5128	W05 TO E05	*Call
2098		5038<5129	X01 TO E05	*Call
2098		5038<5130	X02 TO E05	*Call
2098		5038<5131	X03 TO E05	*Call
2098		5038<5132	X04 TO E05	*Call
2098		5038<5133	X05 TO E05	*Call
2098		5038<5134	Y01 TO E05	*Call
2098		5038<5135	Y02 TO E05	*Call
2098		5038<5136	Y03 TO E05	*Call
2098		5038<5137	Y04 TO E05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5038<5138	Y05 TO E05	*Call
2098		5038<5139	Z01 TO E05	*Call
2098		5038<5140	Z02 TO E05	*Call
2098		5038<5141	Z03 TO E05	*Call
2098		5038<5142	Z04 TO E05	*Call
2098		5038<5143	Z05 TO E05	*Call
2098		5039<5013	A00 TO F01	*Call
2098		5039<5014	A01 TO F01	*Call
2098		5039<5015	A02 TO F01	*Call
2098		5039<5016	A03 TO F01	*Call
2098		5039<5017	A04 TO F01	*Call
2098		5039<5018	A05 TO F01	*Call
2098		5039<5019	B01 TO F01	*Call
2098		5039<5020	B02 TO F01	*Call
2098		5039<5021	B03 TO F01	*Call
2098		5039<5022	B04 TO F01	*Call
2098		5039<5023	B05 TO F01	*Call
2098		5039<5024	C01 TO F01	*Call
2098		5039<5025	C02 TO F01	*Call
2098		5039<5026	C03 TO F01	*Call
2098		5039<5027	C04 TO F01	*Call
2098		5039<5028	C05 TO F01	*Call
2098		5039<5029	D01 TO F01	*Call
2098		5039<5030	D02 TO F01	*Call
2098		5039<5031	D03 TO F01	*Call
2098		5039<5032	D04 TO F01	*Call
2098		5039<5033	D05 TO F01	*Call
2098		5039<5034	E01 TO F01	*Call
2098		5039<5035	E02 TO F01	*Call
2098		5039<5036	E03 TO F01	*Call
2098		5039<5037	E04 TO F01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5039<5038	E05 TO F01	*Call
2098		5039<5040	F02 TO F01	*Call
2098		5039<5041	F03 TO F01	*Call
2098		5039<5042	F04 TO F01	*Call
2098		5039<5043	F05 TO F01	*Call
2098		5039<5044	G01 TO F01	*Call
2098		5039<5045	G02 TO F01	*Call
2098		5039<5046	G03 TO F01	*Call
2098		5039<5047	G04 TO F01	*Call
2098		5039<5048	G05 TO F01	*Call
2098		5039<5049	H01 TO F01	*Call
2098		5039<5050	H02 TO F01	*Call
2098		5039<5051	H03 TO F01	*Call
2098		5039<5052	H04 TO F01	*Call
2098		5039<5053	H05 TO F01	*Call
2098		5039<5054	I01 TO F01	*Call
2098		5039<5055	I02 TO F01	*Call
2098		5039<5056	I03 TO F01	*Call
2098		5039<5057	I04 TO F01	*Call
2098		5039<5058	I05 TO F01	*Call
2098		5039<5059	J01 TO F01	*Call
2098		5039<5060	J02 TO F01	*Call
2098		5039<5061	J03 TO F01	*Call
2098		5039<5062	J04 TO F01	*Call
2098		5039<5063	J05 TO F01	*Call
2098		5039<5064	K01 TO F01	*Call
2098		5039<5065	K02 TO F01	*Call
2098		5039<5066	K03 TO F01	*Call
2098		5039<5067	K04 TO F01	*Call
2098		5039<5068	K05 TO F01	*Call
2098		5039<5069	L01 TO F01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5039<5070	L02 TO F01	*Call
2098		5039<5071	L03 TO F01	*Call
2098		5039<5072	L04 TO F01	*Call
2098		5039<5073	L05 TO F01	*Call
2098		5039<5074	M01 TO F01	*Call
2098		5039<5075	M02 TO F01	*Call
2098		5039<5076	M03 TO F01	*Call
2098		5039<5077	M04 TO F01	*Call
2098		5039<5078	M05 TO F01	*Call
2098		5039<5079	N01 TO F01	*Call
2098		5039<5080	N02 TO F01	*Call
2098		5039<5081	N03 TO F01	*Call
2098		5039<5082	N04 TO F01	*Call
2098		5039<5083	N05 TO F01	*Call
2098		5039<5084	O01 TO F01	*Call
2098		5039<5085	O02 TO F01	*Call
2098		5039<5086	O03 TO F01	*Call
2098		5039<5087	O04 TO F01	*Call
2098		5039<5088	O05 TO F01	*Call
2098		5039<5089	P01 TO F01	*Call
2098		5039<5090	P02 TO F01	*Call
2098		5039<5091	P03 TO F01	*Call
2098		5039<5092	P04 TO F01	*Call
2098		5039<5093	P05 TO F01	*Call
2098		5039<5094	Q01 TO F01	*Call
2098		5039<5095	Q02 TO F01	*Call
2098		5039<5096	Q03 TO F01	*Call
2098		5039<5097	Q04 TO F01	*Call
2098		5039<5098	Q05 TO F01	*Call
2098		5039<5099	R01 TO F01	*Call
2098		5039<5100	R02 TO F01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5039<5101	R03 TO F01	*Call
2098		5039<5102	R04 TO F01	*Call
2098		5039<5103	R05 TO F01	*Call
2098		5039<5104	S01 TO F01	*Call
2098		5039<5105	S02 TO F01	*Call
2098		5039<5106	S03 TO F01	*Call
2098		5039<5107	S04 TO F01	*Call
2098		5039<5108	S05 TO F01	*Call
2098		5039<5109	T01 TO F01	*Call
2098		5039<5110	T02 TO F01	*Call
2098		5039<5111	T03 TO F01	*Call
2098		5039<5112	T04 TO F01	*Call
2098		5039<5113	T05 TO F01	*Call
2098		5039<5114	U01 TO F01	*Call
2098		5039<5115	U02 TO F01	*Call
2098		5039<5116	U03 TO F01	*Call
2098		5039<5117	U04 TO F01	*Call
2098		5039<5118	U05 TO F01	*Call
2098		5039<5119	V01 TO F01	*Call
2098		5039<5120	V02 TO F01	*Call
2098		5039<5121	V03 TO F01	*Call
2098		5039<5122	V04 TO F01	*Call
2098		5039<5123	V05 TO F01	*Call
2098		5039<5124	W01 TO F01	*Call
2098		5039<5125	W02 TO F01	*Call
2098		5039<5126	W03 TO F01	*Call
2098		5039<5127	W04 TO F01	*Call
2098		5039<5128	W05 TO F01	*Call
2098		5039<5129	X01 TO F01	*Call
2098		5039<5130	X02 TO F01	*Call
2098		5039<5131	X03 TO F01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5039<5132	X04 TO F01	*Call
2098		5039<5133	X05 TO F01	*Call
2098		5039<5134	Y01 TO F01	*Call
2098		5039<5135	Y02 TO F01	*Call
2098		5039<5136	Y03 TO F01	*Call
2098		5039<5137	Y04 TO F01	*Call
2098		5039<5138	Y05 TO F01	*Call
2098		5039<5139	Z01 TO F01	*Call
2098		5039<5140	Z02 TO F01	*Call
2098		5039<5141	Z03 TO F01	*Call
2098		5039<5142	Z04 TO F01	*Call
2098		5039<5143	Z05 TO F01	*Call
2098		5040<5013	A00 TO F02	*Call
2098		5040<5014	A01 TO F02	*Call
2098		5040<5015	A02 TO F02	*Call
2098		5040<5016	A03 TO F02	*Call
2098		5040<5017	A04 TO F02	*Call
2098		5040<5018	A05 TO F02	*Call
2098		5040<5019	B01 TO F02	*Call
2098		5040<5020	B02 TO F02	*Call
2098		5040<5021	B03 TO F02	*Call
2098		5040<5022	B04 TO F02	*Call
2098		5040<5023	B05 TO F02	*Call
2098		5040<5024	C01 TO F02	*Call
2098		5040<5025	C02 TO F02	*Call
2098		5040<5026	C03 TO F02	*Call
2098		5040<5027	C04 TO F02	*Call
2098		5040<5028	C05 TO F02	*Call
2098		5040<5029	D01 TO F02	*Call
2098		5040<5030	D02 TO F02	*Call
2098		5040<5031	D03 TO F02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5040<5032	D04 TO F02	*Call
2098		5040<5033	D05 TO F02	*Call
2098		5040<5034	E01 TO F02	*Call
2098		5040<5035	E02 TO F02	*Call
2098		5040<5036	E03 TO F02	*Call
2098		5040<5037	E04 TO F02	*Call
2098		5040<5038	E05 TO F02	*Call
2098		5040<5039	F01 TO F02	*Call
2098		5040<5041	F03 TO F02	*Call
2098		5040<5042	F04 TO F02	*Call
2098		5040<5043	F05 TO F02	*Call
2098		5040<5044	G01 TO F02	*Call
2098		5040<5045	G02 TO F02	*Call
2098		5040<5046	G03 TO F02	*Call
2098		5040<5047	G04 TO F02	*Call
2098		5040<5048	G05 TO F02	*Call
2098		5040<5049	H01 TO F02	*Call
2098		5040<5050	H02 TO F02	*Call
2098		5040<5051	H03 TO F02	*Call
2098		5040<5052	H04 TO F02	*Call
2098		5040<5053	H05 TO F02	*Call
2098		5040<5054	I01 TO F02	*Call
2098		5040<5055	I02 TO F02	*Call
2098		5040<5056	I03 TO F02	*Call
2098		5040<5057	I04 TO F02	*Call
2098		5040<5058	I05 TO F02	*Call
2098		5040<5059	J01 TO F02	*Call
2098		5040<5060	J02 TO F02	*Call
2098		5040<5061	J03 TO F02	*Call
2098		5040<5062	J04 TO F02	*Call
2098		5040<5063	J05 TO F02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5040<5064	K01 TO F02	*Call
2098		5040<5065	K02 TO F02	*Call
2098		5040<5066	K03 TO F02	*Call
2098		5040<5067	K04 TO F02	*Call
2098		5040<5068	K05 TO F02	*Call
2098		5040<5069	L01 TO F02	*Call
2098		5040<5070	L02 TO F02	*Call
2098		5040<5071	L03 TO F02	*Call
2098		5040<5072	L04 TO F02	*Call
2098		5040<5073	L05 TO F02	*Call
2098		5040<5074	M01 TO F02	*Call
2098		5040<5075	M02 TO F02	*Call
2098		5040<5076	M03 TO F02	*Call
2098		5040<5077	M04 TO F02	*Call
2098		5040<5078	M05 TO F02	*Call
2098		5040<5079	N01 TO F02	*Call
2098		5040<5080	N02 TO F02	*Call
2098		5040<5081	N03 TO F02	*Call
2098		5040<5082	N04 TO F02	*Call
2098		5040<5083	N05 TO F02	*Call
2098		5040<5084	O01 TO F02	*Call
2098		5040<5085	O02 TO F02	*Call
2098		5040<5086	O03 TO F02	*Call
2098		5040<5087	O04 TO F02	*Call
2098		5040<5088	O05 TO F02	*Call
2098		5040<5089	P01 TO F02	*Call
2098		5040<5090	P02 TO F02	*Call
2098		5040<5091	P03 TO F02	*Call
2098		5040<5092	P04 TO F02	*Call
2098		5040<5093	P05 TO F02	*Call
2098		5040<5094	Q01 TO F02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5040<5095	Q02 TO F02	*Call
2098		5040<5096	Q03 TO F02	*Call
2098		5040<5097	Q04 TO F02	*Call
2098		5040<5098	Q05 TO F02	*Call
2098		5040<5099	R01 TO F02	*Call
2098		5040<5100	R02 TO F02	*Call
2098		5040<5101	R03 TO F02	*Call
2098		5040<5102	R04 TO F02	*Call
2098		5040<5103	R05 TO F02	*Call
2098		5040<5104	S01 TO F02	*Call
2098		5040<5105	S02 TO F02	*Call
2098		5040<5106	S03 TO F02	*Call
2098		5040<5107	S04 TO F02	*Call
2098		5040<5108	S05 TO F02	*Call
2098		5040<5109	T01 TO F02	*Call
2098		5040<5110	T02 TO F02	*Call
2098		5040<5111	T03 TO F02	*Call
2098		5040<5112	T04 TO F02	*Call
2098		5040<5113	T05 TO F02	*Call
2098		5040<5114	U01 TO F02	*Call
2098		5040<5115	U02 TO F02	*Call
2098		5040<5116	U03 TO F02	*Call
2098		5040<5117	U04 TO F02	*Call
2098		5040<5118	U05 TO F02	*Call
2098		5040<5119	V01 TO F02	*Call
2098		5040<5120	V02 TO F02	*Call
2098		5040<5121	V03 TO F02	*Call
2098		5040<5122	V04 TO F02	*Call
2098		5040<5123	V05 TO F02	*Call
2098		5040<5124	W01 TO F02	*Call
2098		5040<5125	W02 TO F02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5040<5126	W03 TO F02	*Call
2098		5040<5127	W04 TO F02	*Call
2098		5040<5128	W05 TO F02	*Call
2098		5040<5129	X01 TO F02	*Call
2098		5040<5130	X02 TO F02	*Call
2098		5040<5131	X03 TO F02	*Call
2098		5040<5132	X04 TO F02	*Call
2098		5040<5133	X05 TO F02	*Call
2098		5040<5134	Y01 TO F02	*Call
2098		5040<5135	Y02 TO F02	*Call
2098		5040<5136	Y03 TO F02	*Call
2098		5040<5137	Y04 TO F02	*Call
2098		5040<5138	Y05 TO F02	*Call
2098		5040<5139	Z01 TO F02	*Call
2098		5040<5140	Z02 TO F02	*Call
2098		5040<5141	Z03 TO F02	*Call
2098		5040<5142	Z04 TO F02	*Call
2098		5040<5143	Z05 TO F02	*Call
2098		5041<5013	A00 TO F03	*Call
2098		5041<5014	A01 TO F03	*Call
2098		5041<5015	A02 TO F03	*Call
2098		5041<5016	A03 TO F03	*Call
2098		5041<5017	A04 TO F03	*Call
2098		5041<5018	A05 TO F03	*Call
2098		5041<5019	B01 TO F03	*Call
2098		5041<5020	B02 TO F03	*Call
2098		5041<5021	B03 TO F03	*Call
2098		5041<5022	B04 TO F03	*Call
2098		5041<5023	B05 TO F03	*Call
2098		5041<5024	C01 TO F03	*Call
2098		5041<5025	C02 TO F03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5041<5026	C03 TO F03	*Call
2098		5041<5027	C04 TO F03	*Call
2098		5041<5028	C05 TO F03	*Call
2098		5041<5029	D01 TO F03	*Call
2098		5041<5030	D02 TO F03	*Call
2098		5041<5031	D03 TO F03	*Call
2098		5041<5032	D04 TO F03	*Call
2098		5041<5033	D05 TO F03	*Call
2098		5041<5034	E01 TO F03	*Call
2098		5041<5035	E02 TO F03	*Call
2098		5041<5036	E03 TO F03	*Call
2098		5041<5037	E04 TO F03	*Call
2098		5041<5038	E05 TO F03	*Call
2098		5041<5039	F01 TO F03	*Call
2098		5041<5040	F02 TO F03	*Call
2098		5041<5042	F04 TO F03	*Call
2098		5041<5043	F05 TO F03	*Call
2098		5041<5044	G01 TO F03	*Call
2098		5041<5045	G02 TO F03	*Call
2098		5041<5046	G03 TO F03	*Call
2098		5041<5047	G04 TO F03	*Call
2098		5041<5048	G05 TO F03	*Call
2098		5041<5049	H01 TO F03	*Call
2098		5041<5050	H02 TO F03	*Call
2098		5041<5051	H03 TO F03	*Call
2098		5041<5052	H04 TO F03	*Call
2098		5041<5053	H05 TO F03	*Call
2098		5041<5054	I01 TO F03	*Call
2098		5041<5055	I02 TO F03	*Call
2098		5041<5056	I03 TO F03	*Call
2098		5041<5057	I04 TO F03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5041<5058	I05 TO F03	*Call
2098		5041<5059	J01 TO F03	*Call
2098		5041<5060	J02 TO F03	*Call
2098		5041<5061	J03 TO F03	*Call
2098		5041<5062	J04 TO F03	*Call
2098		5041<5063	J05 TO F03	*Call
2098		5041<5064	K01 TO F03	*Call
2098		5041<5065	K02 TO F03	*Call
2098		5041<5066	K03 TO F03	*Call
2098		5041<5067	K04 TO F03	*Call
2098		5041<5068	K05 TO F03	*Call
2098		5041<5069	L01 TO F03	*Call
2098		5041<5070	L02 TO F03	*Call
2098		5041<5071	L03 TO F03	*Call
2098		5041<5072	L04 TO F03	*Call
2098		5041<5073	L05 TO F03	*Call
2098		5041<5074	M01 TO F03	*Call
2098		5041<5075	M02 TO F03	*Call
2098		5041<5076	M03 TO F03	*Call
2098		5041<5077	M04 TO F03	*Call
2098		5041<5078	M05 TO F03	*Call
2098		5041<5079	N01 TO F03	*Call
2098		5041<5080	N02 TO F03	*Call
2098		5041<5081	N03 TO F03	*Call
2098		5041<5082	N04 TO F03	*Call
2098		5041<5083	N05 TO F03	*Call
2098		5041<5084	O01 TO F03	*Call
2098		5041<5085	O02 TO F03	*Call
2098		5041<5086	O03 TO F03	*Call
2098		5041<5087	O04 TO F03	*Call
2098		5041<5088	O05 TO F03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5041<5089	P01 TO F03	*Call
2098		5041<5090	P02 TO F03	*Call
2098		5041<5091	P03 TO F03	*Call
2098		5041<5092	P04 TO F03	*Call
2098		5041<5093	P05 TO F03	*Call
2098		5041<5094	Q01 TO F03	*Call
2098		5041<5095	Q02 TO F03	*Call
2098		5041<5096	Q03 TO F03	*Call
2098		5041<5097	Q04 TO F03	*Call
2098		5041<5098	Q05 TO F03	*Call
2098		5041<5099	R01 TO F03	*Call
2098		5041<5100	R02 TO F03	*Call
2098		5041<5101	R03 TO F03	*Call
2098		5041<5102	R04 TO F03	*Call
2098		5041<5103	R05 TO F03	*Call
2098		5041<5104	S01 TO F03	*Call
2098		5041<5105	S02 TO F03	*Call
2098		5041<5106	S03 TO F03	*Call
2098		5041<5107	S04 TO F03	*Call
2098		5041<5108	S05 TO F03	*Call
2098		5041<5109	T01 TO F03	*Call
2098		5041<5110	T02 TO F03	*Call
2098		5041<5111	T03 TO F03	*Call
2098		5041<5112	T04 TO F03	*Call
2098		5041<5113	T05 TO F03	*Call
2098		5041<5114	U01 TO F03	*Call
2098		5041<5115	U02 TO F03	*Call
2098		5041<5116	U03 TO F03	*Call
2098		5041<5117	U04 TO F03	*Call
2098		5041<5118	U05 TO F03	*Call
2098		5041<5119	V01 TO F03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5041<5120	V02 TO F03	*Call
2098		5041<5121	V03 TO F03	*Call
2098		5041<5122	V04 TO F03	*Call
2098		5041<5123	V05 TO F03	*Call
2098		5041<5124	W01 TO F03	*Call
2098		5041<5125	W02 TO F03	*Call
2098		5041<5126	W03 TO F03	*Call
2098		5041<5127	W04 TO F03	*Call
2098		5041<5128	W05 TO F03	*Call
2098		5041<5129	X01 TO F03	*Call
2098		5041<5130	X02 TO F03	*Call
2098		5041<5131	X03 TO F03	*Call
2098		5041<5132	X04 TO F03	*Call
2098		5041<5133	X05 TO F03	*Call
2098		5041<5134	Y01 TO F03	*Call
2098		5041<5135	Y02 TO F03	*Call
2098		5041<5136	Y03 TO F03	*Call
2098		5041<5137	Y04 TO F03	*Call
2098		5041<5138	Y05 TO F03	*Call
2098		5041<5139	Z01 TO F03	*Call
2098		5041<5140	Z02 TO F03	*Call
2098		5041<5141	Z03 TO F03	*Call
2098		5041<5142	Z04 TO F03	*Call
2098		5041<5143	Z05 TO F03	*Call
2098		5042<5013	A00 TO F04	*Call
2098		5042<5014	A01 TO F04	*Call
2098		5042<5015	A02 TO F04	*Call
2098		5042<5016	A03 TO F04	*Call
2098		5042<5017	A04 TO F04	*Call
2098		5042<5018	A05 TO F04	*Call
2098		5042<5019	B01 TO F04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5042<5020	B02 TO F04	*Call
2098		5042<5021	B03 TO F04	*Call
2098		5042<5022	B04 TO F04	*Call
2098		5042<5023	B05 TO F04	*Call
2098		5042<5024	C01 TO F04	*Call
2098		5042<5025	C02 TO F04	*Call
2098		5042<5026	C03 TO F04	*Call
2098		5042<5027	C04 TO F04	*Call
2098		5042<5028	C05 TO F04	*Call
2098		5042<5029	D01 TO F04	*Call
2098		5042<5030	D02 TO F04	*Call
2098		5042<5031	D03 TO F04	*Call
2098		5042<5032	D04 TO F04	*Call
2098		5042<5033	D05 TO F04	*Call
2098		5042<5034	E01 TO F04	*Call
2098		5042<5035	E02 TO F04	*Call
2098		5042<5036	E03 TO F04	*Call
2098		5042<5037	E04 TO F04	*Call
2098		5042<5038	E05 TO F04	*Call
2098		5042<5039	F01 TO F04	*Call
2098		5042<5040	F02 TO F04	*Call
2098		5042<5041	F03 TO F04	*Call
2098		5042<5043	F05 TO F04	*Call
2098		5042<5044	G01 TO F04	*Call
2098		5042<5045	G02 TO F04	*Call
2098		5042<5046	G03 TO F04	*Call
2098		5042<5047	G04 TO F04	*Call
2098		5042<5048	G05 TO F04	*Call
2098		5042<5049	H01 TO F04	*Call
2098		5042<5050	H02 TO F04	*Call
2098		5042<5051	H03 TO F04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5042<5052	H04 TO F04	*Call
2098		5042<5053	H05 TO F04	*Call
2098		5042<5054	I01 TO F04	*Call
2098		5042<5055	I02 TO F04	*Call
2098		5042<5056	I03 TO F04	*Call
2098		5042<5057	I04 TO F04	*Call
2098		5042<5058	I05 TO F04	*Call
2098		5042<5059	J01 TO F04	*Call
2098		5042<5060	J02 TO F04	*Call
2098		5042<5061	J03 TO F04	*Call
2098		5042<5062	J04 TO F04	*Call
2098		5042<5063	J05 TO F04	*Call
2098		5042<5064	K01 TO F04	*Call
2098		5042<5065	K02 TO F04	*Call
2098		5042<5066	K03 TO F04	*Call
2098		5042<5067	K04 TO F04	*Call
2098		5042<5068	K05 TO F04	*Call
2098		5042<5069	L01 TO F04	*Call
2098		5042<5070	L02 TO F04	*Call
2098		5042<5071	L03 TO F04	*Call
2098		5042<5072	L04 TO F04	*Call
2098		5042<5073	L05 TO F04	*Call
2098		5042<5074	M01 TO F04	*Call
2098		5042<5075	M02 TO F04	*Call
2098		5042<5076	M03 TO F04	*Call
2098		5042<5077	M04 TO F04	*Call
2098		5042<5078	M05 TO F04	*Call
2098		5042<5079	N01 TO F04	*Call
2098		5042<5080	N02 TO F04	*Call
2098		5042<5081	N03 TO F04	*Call
2098		5042<5082	N04 TO F04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5042<5083	N05 TO F04	*Call
2098		5042<5084	O01 TO F04	*Call
2098		5042<5085	O02 TO F04	*Call
2098		5042<5086	O03 TO F04	*Call
2098		5042<5087	O04 TO F04	*Call
2098		5042<5088	O05 TO F04	*Call
2098		5042<5089	P01 TO F04	*Call
2098		5042<5090	P02 TO F04	*Call
2098		5042<5091	P03 TO F04	*Call
2098		5042<5092	P04 TO F04	*Call
2098		5042<5093	P05 TO F04	*Call
2098		5042<5094	Q01 TO F04	*Call
2098		5042<5095	Q02 TO F04	*Call
2098		5042<5096	Q03 TO F04	*Call
2098		5042<5097	Q04 TO F04	*Call
2098		5042<5098	Q05 TO F04	*Call
2098		5042<5099	R01 TO F04	*Call
2098		5042<5100	R02 TO F04	*Call
2098		5042<5101	R03 TO F04	*Call
2098		5042<5102	R04 TO F04	*Call
2098		5042<5103	R05 TO F04	*Call
2098		5042<5104	S01 TO F04	*Call
2098		5042<5105	S02 TO F04	*Call
2098		5042<5106	S03 TO F04	*Call
2098		5042<5107	S04 TO F04	*Call
2098		5042<5108	S05 TO F04	*Call
2098		5042<5109	T01 TO F04	*Call
2098		5042<5110	T02 TO F04	*Call
2098		5042<5111	T03 TO F04	*Call
2098		5042<5112	T04 TO F04	*Call
2098		5042<5113	T05 TO F04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5042<5114	U01 TO F04	*Call
2098		5042<5115	U02 TO F04	*Call
2098		5042<5116	U03 TO F04	*Call
2098		5042<5117	U04 TO F04	*Call
2098		5042<5118	U05 TO F04	*Call
2098		5042<5119	V01 TO F04	*Call
2098		5042<5120	V02 TO F04	*Call
2098		5042<5121	V03 TO F04	*Call
2098		5042<5122	V04 TO F04	*Call
2098		5042<5123	V05 TO F04	*Call
2098		5042<5124	W01 TO F04	*Call
2098		5042<5125	W02 TO F04	*Call
2098		5042<5126	W03 TO F04	*Call
2098		5042<5127	W04 TO F04	*Call
2098		5042<5128	W05 TO F04	*Call
2098		5042<5129	X01 TO F04	*Call
2098		5042<5130	X02 TO F04	*Call
2098		5042<5131	X03 TO F04	*Call
2098		5042<5132	X04 TO F04	*Call
2098		5042<5133	X05 TO F04	*Call
2098		5042<5134	Y01 TO F04	*Call
2098		5042<5135	Y02 TO F04	*Call
2098		5042<5136	Y03 TO F04	*Call
2098		5042<5137	Y04 TO F04	*Call
2098		5042<5138	Y05 TO F04	*Call
2098		5042<5139	Z01 TO F04	*Call
2098		5042<5140	Z02 TO F04	*Call
2098		5042<5141	Z03 TO F04	*Call
2098		5042<5142	Z04 TO F04	*Call
2098		5042<5143	Z05 TO F04	*Call
2098		5043<5013	A00 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5043<5014	A01 TO F05	*Call
2098		5043<5015	A02 TO F05	*Call
2098		5043<5016	A03 TO F05	*Call
2098		5043<5017	A04 TO F05	*Call
2098		5043<5018	A05 TO F05	*Call
2098		5043<5019	B01 TO F05	*Call
2098		5043<5020	B02 TO F05	*Call
2098		5043<5021	B03 TO F05	*Call
2098		5043<5022	B04 TO F05	*Call
2098		5043<5023	B05 TO F05	*Call
2098		5043<5024	C01 TO F05	*Call
2098		5043<5025	C02 TO F05	*Call
2098		5043<5026	C03 TO F05	*Call
2098		5043<5027	C04 TO F05	*Call
2098		5043<5028	C05 TO F05	*Call
2098		5043<5029	D01 TO F05	*Call
2098		5043<5030	D02 TO F05	*Call
2098		5043<5031	D03 TO F05	*Call
2098		5043<5032	D04 TO F05	*Call
2098		5043<5033	D05 TO F05	*Call
2098		5043<5034	E01 TO F05	*Call
2098		5043<5035	E02 TO F05	*Call
2098		5043<5036	E03 TO F05	*Call
2098		5043<5037	E04 TO F05	*Call
2098		5043<5038	E05 TO F05	*Call
2098		5043<5039	F01 TO F05	*Call
2098		5043<5040	F02 TO F05	*Call
2098		5043<5041	F03 TO F05	*Call
2098		5043<5042	F04 TO F05	*Call
2098		5043<5044	G01 TO F05	*Call
2098		5043<5045	G02 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5043<5046	G03 TO F05	*Call
2098		5043<5047	G04 TO F05	*Call
2098		5043<5048	G05 TO F05	*Call
2098		5043<5049	H01 TO F05	*Call
2098		5043<5050	H02 TO F05	*Call
2098		5043<5051	H03 TO F05	*Call
2098		5043<5052	H04 TO F05	*Call
2098		5043<5053	H05 TO F05	*Call
2098		5043<5054	I01 TO F05	*Call
2098		5043<5055	I02 TO F05	*Call
2098		5043<5056	I03 TO F05	*Call
2098		5043<5057	I04 TO F05	*Call
2098		5043<5058	I05 TO F05	*Call
2098		5043<5059	J01 TO F05	*Call
2098		5043<5060	J02 TO F05	*Call
2098		5043<5061	J03 TO F05	*Call
2098		5043<5062	J04 TO F05	*Call
2098		5043<5063	J05 TO F05	*Call
2098		5043<5064	K01 TO F05	*Call
2098		5043<5065	K02 TO F05	*Call
2098		5043<5066	K03 TO F05	*Call
2098		5043<5067	K04 TO F05	*Call
2098		5043<5068	K05 TO F05	*Call
2098		5043<5069	L01 TO F05	*Call
2098		5043<5070	L02 TO F05	*Call
2098		5043<5071	L03 TO F05	*Call
2098		5043<5072	L04 TO F05	*Call
2098		5043<5073	L05 TO F05	*Call
2098		5043<5074	M01 TO F05	*Call
2098		5043<5075	M02 TO F05	*Call
2098		5043<5076	M03 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5043<5077	M04 TO F05	*Call
2098		5043<5078	M05 TO F05	*Call
2098		5043<5079	N01 TO F05	*Call
2098		5043<5080	N02 TO F05	*Call
2098		5043<5081	N03 TO F05	*Call
2098		5043<5082	N04 TO F05	*Call
2098		5043<5083	N05 TO F05	*Call
2098		5043<5084	O01 TO F05	*Call
2098		5043<5085	O02 TO F05	*Call
2098		5043<5086	O03 TO F05	*Call
2098		5043<5087	O04 TO F05	*Call
2098		5043<5088	O05 TO F05	*Call
2098		5043<5089	P01 TO F05	*Call
2098		5043<5090	P02 TO F05	*Call
2098		5043<5091	P03 TO F05	*Call
2098		5043<5092	P04 TO F05	*Call
2098		5043<5093	P05 TO F05	*Call
2098		5043<5094	Q01 TO F05	*Call
2098		5043<5095	Q02 TO F05	*Call
2098		5043<5096	Q03 TO F05	*Call
2098		5043<5097	Q04 TO F05	*Call
2098		5043<5098	Q05 TO F05	*Call
2098		5043<5099	R01 TO F05	*Call
2098		5043<5100	R02 TO F05	*Call
2098		5043<5101	R03 TO F05	*Call
2098		5043<5102	R04 TO F05	*Call
2098		5043<5103	R05 TO F05	*Call
2098		5043<5104	S01 TO F05	*Call
2098		5043<5105	S02 TO F05	*Call
2098		5043<5106	S03 TO F05	*Call
2098		5043<5107	S04 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5043<5108	S05 TO F05	*Call
2098		5043<5109	T01 TO F05	*Call
2098		5043<5110	T02 TO F05	*Call
2098		5043<5111	T03 TO F05	*Call
2098		5043<5112	T04 TO F05	*Call
2098		5043<5113	T05 TO F05	*Call
2098		5043<5114	U01 TO F05	*Call
2098		5043<5115	U02 TO F05	*Call
2098		5043<5116	U03 TO F05	*Call
2098		5043<5117	U04 TO F05	*Call
2098		5043<5118	U05 TO F05	*Call
2098		5043<5119	V01 TO F05	*Call
2098		5043<5120	V02 TO F05	*Call
2098		5043<5121	V03 TO F05	*Call
2098		5043<5122	V04 TO F05	*Call
2098		5043<5123	V05 TO F05	*Call
2098		5043<5124	W01 TO F05	*Call
2098		5043<5125	W02 TO F05	*Call
2098		5043<5126	W03 TO F05	*Call
2098		5043<5127	W04 TO F05	*Call
2098		5043<5128	W05 TO F05	*Call
2098		5043<5129	X01 TO F05	*Call
2098		5043<5130	X02 TO F05	*Call
2098		5043<5131	X03 TO F05	*Call
2098		5043<5132	X04 TO F05	*Call
2098		5043<5133	X05 TO F05	*Call
2098		5043<5134	Y01 TO F05	*Call
2098		5043<5135	Y02 TO F05	*Call
2098		5043<5136	Y03 TO F05	*Call
2098		5043<5137	Y04 TO F05	*Call
2098		5043<5138	Y05 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5043<5139	Z01 TO F05	*Call
2098		5043<5140	Z02 TO F05	*Call
2098		5043<5141	Z03 TO F05	*Call
2098		5043<5142	Z04 TO F05	*Call
2098		5043<5143	Z05 TO F05	*Call
2098		5044<5013	A00 TO G01	*Call
2098		5044<5014	A01 TO G01	*Call
2098		5044<5015	A02 TO G01	*Call
2098		5044<5016	A03 TO G01	*Call
2098		5044<5017	A04 TO G01	*Call
2098		5044<5018	A05 TO G01	*Call
2098		5044<5019	B01 TO G01	*Call
2098		5044<5020	B02 TO G01	*Call
2098		5044<5021	B03 TO G01	*Call
2098		5044<5022	B04 TO G01	*Call
2098		5044<5023	B05 TO G01	*Call
2098		5044<5024	C01 TO G01	*Call
2098		5044<5025	C02 TO G01	*Call
2098		5044<5026	C03 TO G01	*Call
2098		5044<5027	C04 TO G01	*Call
2098		5044<5028	C05 TO G01	*Call
2098		5044<5029	D01 TO G01	*Call
2098		5044<5030	D02 TO G01	*Call
2098		5044<5031	D03 TO G01	*Call
2098		5044<5032	D04 TO G01	*Call
2098		5044<5033	D05 TO G01	*Call
2098		5044<5034	E01 TO G01	*Call
2098		5044<5035	E02 TO G01	*Call
2098		5044<5036	E03 TO G01	*Call
2098		5044<5037	E04 TO G01	*Call
2098		5044<5038	E05 TO G01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5044<5039	F01 TO G01	*Call
2098		5044<5040	F02 TO G01	*Call
2098		5044<5041	F03 TO G01	*Call
2098		5044<5042	F04 TO G01	*Call
2098		5044<5043	F05 TO G01	*Call
2098		5044<5045	G02 TO G01	*Call
2098		5044<5046	G03 TO G01	*Call
2098		5044<5047	G04 TO G01	*Call
2098		5044<5048	G05 TO G01	*Call
2098		5044<5049	H01 TO G01	*Call
2098		5044<5050	H02 TO G01	*Call
2098		5044<5051	H03 TO G01	*Call
2098		5044<5052	H04 TO G01	*Call
2098		5044<5053	H05 TO G01	*Call
2098		5044<5054	I01 TO G01	*Call
2098		5044<5055	I02 TO G01	*Call
2098		5044<5056	I03 TO G01	*Call
2098		5044<5057	I04 TO G01	*Call
2098		5044<5058	I05 TO G01	*Call
2098		5044<5059	J01 TO G01	*Call
2098		5044<5060	J02 TO G01	*Call
2098		5044<5061	J03 TO G01	*Call
2098		5044<5062	J04 TO G01	*Call
2098		5044<5063	J05 TO G01	*Call
2098		5044<5064	K01 TO G01	*Call
2098		5044<5065	K02 TO G01	*Call
2098		5044<5066	K03 TO G01	*Call
2098		5044<5067	K04 TO G01	*Call
2098		5044<5068	K05 TO G01	*Call
2098		5044<5069	L01 TO G01	*Call
2098		5044<5070	L02 TO G01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5044<5071	L03 TO G01	*Call
2098		5044<5072	L04 TO G01	*Call
2098		5044<5073	L05 TO G01	*Call
2098		5044<5074	M01 TO G01	*Call
2098		5044<5075	M02 TO G01	*Call
2098		5044<5076	M03 TO G01	*Call
2098		5044<5077	M04 TO G01	*Call
2098		5044<5078	M05 TO G01	*Call
2098		5044<5079	N01 TO G01	*Call
2098		5044<5080	N02 TO G01	*Call
2098		5044<5081	N03 TO G01	*Call
2098		5044<5082	N04 TO G01	*Call
2098		5044<5083	N05 TO G01	*Call
2098		5044<5084	O01 TO G01	*Call
2098		5044<5085	O02 TO G01	*Call
2098		5044<5086	O03 TO G01	*Call
2098		5044<5087	O04 TO G01	*Call
2098		5044<5088	O05 TO G01	*Call
2098		5044<5089	P01 TO G01	*Call
2098		5044<5090	P02 TO G01	*Call
2098		5044<5091	P03 TO G01	*Call
2098		5044<5092	P04 TO G01	*Call
2098		5044<5093	P05 TO G01	*Call
2098		5044<5094	Q01 TO G01	*Call
2098		5044<5095	Q02 TO G01	*Call
2098		5044<5096	Q03 TO G01	*Call
2098		5044<5097	Q04 TO G01	*Call
2098		5044<5098	Q05 TO G01	*Call
2098		5044<5099	R01 TO G01	*Call
2098		5044<5100	R02 TO G01	*Call
2098		5044<5101	R03 TO G01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5044<5102	R04 TO G01	*Call
2098		5044<5103	R05 TO G01	*Call
2098		5044<5104	S01 TO G01	*Call
2098		5044<5105	S02 TO G01	*Call
2098		5044<5106	S03 TO G01	*Call
2098		5044<5107	S04 TO G01	*Call
2098		5044<5108	S05 TO G01	*Call
2098		5044<5109	T01 TO G01	*Call
2098		5044<5110	T02 TO G01	*Call
2098		5044<5111	T03 TO G01	*Call
2098		5044<5112	T04 TO G01	*Call
2098		5044<5113	T05 TO G01	*Call
2098		5044<5114	U01 TO G01	*Call
2098		5044<5115	U02 TO G01	*Call
2098		5044<5116	U03 TO G01	*Call
2098		5044<5117	U04 TO G01	*Call
2098		5044<5118	U05 TO G01	*Call
2098		5044<5119	V01 TO G01	*Call
2098		5044<5120	V02 TO G01	*Call
2098		5044<5121	V03 TO G01	*Call
2098		5044<5122	V04 TO G01	*Call
2098		5044<5123	V05 TO G01	*Call
2098		5044<5124	W01 TO G01	*Call
2098		5044<5125	W02 TO G01	*Call
2098		5044<5126	W03 TO G01	*Call
2098		5044<5127	W04 TO G01	*Call
2098		5044<5128	W05 TO G01	*Call
2098		5044<5129	X01 TO G01	*Call
2098		5044<5130	X02 TO G01	*Call
2098		5044<5131	X03 TO G01	*Call
2098		5044<5132	X04 TO G01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5044<5133	X05 TO G01	*Call
2098		5044<5134	Y01 TO G01	*Call
2098		5044<5135	Y02 TO G01	*Call
2098		5044<5136	Y03 TO G01	*Call
2098		5044<5137	Y04 TO G01	*Call
2098		5044<5138	Y05 TO G01	*Call
2098		5044<5139	Z01 TO G01	*Call
2098		5044<5140	Z02 TO G01	*Call
2098		5044<5141	Z03 TO G01	*Call
2098		5044<5142	Z04 TO G01	*Call
2098		5044<5143	Z05 TO G01	*Call
2098		5045<5013	A00 TO G02	*Call
2098		5045<5014	A01 TO G02	*Call
2098		5045<5015	A02 TO G02	*Call
2098		5045<5016	A03 TO G02	*Call
2098		5045<5017	A04 TO G02	*Call
2098		5045<5018	A05 TO G02	*Call
2098		5045<5019	B01 TO G02	*Call
2098		5045<5020	B02 TO G02	*Call
2098		5045<5021	B03 TO G02	*Call
2098		5045<5022	B04 TO G02	*Call
2098		5045<5023	B05 TO G02	*Call
2098		5045<5024	C01 TO G02	*Call
2098		5045<5025	C02 TO G02	*Call
2098		5045<5026	C03 TO G02	*Call
2098		5045<5027	C04 TO G02	*Call
2098		5045<5028	C05 TO G02	*Call
2098		5045<5029	D01 TO G02	*Call
2098		5045<5030	D02 TO G02	*Call
2098		5045<5031	D03 TO G02	*Call
2098		5045<5032	D04 TO G02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5045<5033	D05 TO G02	*Call
2098		5045<5034	E01 TO G02	*Call
2098		5045<5035	E02 TO G02	*Call
2098		5045<5036	E03 TO G02	*Call
2098		5045<5037	E04 TO G02	*Call
2098		5045<5038	E05 TO G02	*Call
2098		5045<5039	F01 TO G02	*Call
2098		5045<5040	F02 TO G02	*Call
2098		5045<5041	F03 TO G02	*Call
2098		5045<5042	F04 TO G02	*Call
2098		5045<5043	F05 TO G02	*Call
2098		5045<5044	G01 TO G02	*Call
2098		5045<5046	G03 TO G02	*Call
2098		5045<5047	G04 TO G02	*Call
2098		5045<5048	G05 TO G02	*Call
2098		5045<5049	H01 TO G02	*Call
2098		5045<5050	H02 TO G02	*Call
2098		5045<5051	H03 TO G02	*Call
2098		5045<5052	H04 TO G02	*Call
2098		5045<5053	H05 TO G02	*Call
2098		5045<5054	I01 TO G02	*Call
2098		5045<5055	I02 TO G02	*Call
2098		5045<5056	I03 TO G02	*Call
2098		5045<5057	I04 TO G02	*Call
2098		5045<5058	I05 TO G02	*Call
2098		5045<5059	J01 TO G02	*Call
2098		5045<5060	J02 TO G02	*Call
2098		5045<5061	J03 TO G02	*Call
2098		5045<5062	J04 TO G02	*Call
2098		5045<5063	J05 TO G02	*Call
2098		5045<5064	K01 TO G02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5045<5065	K02 TO G02	*Call
2098		5045<5066	K03 TO G02	*Call
2098		5045<5067	K04 TO G02	*Call
2098		5045<5068	K05 TO G02	*Call
2098		5045<5069	L01 TO G02	*Call
2098		5045<5070	L02 TO G02	*Call
2098		5045<5071	L03 TO G02	*Call
2098		5045<5072	L04 TO G02	*Call
2098		5045<5073	L05 TO G02	*Call
2098		5045<5074	M01 TO G02	*Call
2098		5045<5075	M02 TO G02	*Call
2098		5045<5076	M03 TO G02	*Call
2098		5045<5077	M04 TO G02	*Call
2098		5045<5078	M05 TO G02	*Call
2098		5045<5079	N01 TO G02	*Call
2098		5045<5080	N02 TO G02	*Call
2098		5045<5081	N03 TO G02	*Call
2098		5045<5082	N04 TO G02	*Call
2098		5045<5083	N05 TO G02	*Call
2098		5045<5084	O01 TO G02	*Call
2098		5045<5085	O02 TO G02	*Call
2098		5045<5086	O03 TO G02	*Call
2098		5045<5087	O04 TO G02	*Call
2098		5045<5088	O05 TO G02	*Call
2098		5045<5089	P01 TO G02	*Call
2098		5045<5090	P02 TO G02	*Call
2098		5045<5091	P03 TO G02	*Call
2098		5045<5092	P04 TO G02	*Call
2098		5045<5093	P05 TO G02	*Call
2098		5045<5094	Q01 TO G02	*Call
2098		5045<5095	Q02 TO G02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5045<5096	Q03 TO G02	*Call
2098		5045<5097	Q04 TO G02	*Call
2098		5045<5098	Q05 TO G02	*Call
2098		5045<5099	R01 TO G02	*Call
2098		5045<5100	R02 TO G02	*Call
2098		5045<5101	R03 TO G02	*Call
2098		5045<5102	R04 TO G02	*Call
2098		5045<5103	R05 TO G02	*Call
2098		5045<5104	S01 TO G02	*Call
2098		5045<5105	S02 TO G02	*Call
2098		5045<5106	S03 TO G02	*Call
2098		5045<5107	S04 TO G02	*Call
2098		5045<5108	S05 TO G02	*Call
2098		5045<5109	T01 TO G02	*Call
2098		5045<5110	T02 TO G02	*Call
2098		5045<5111	T03 TO G02	*Call
2098		5045<5112	T04 TO G02	*Call
2098		5045<5113	T05 TO G02	*Call
2098		5045<5114	U01 TO G02	*Call
2098		5045<5115	U02 TO G02	*Call
2098		5045<5116	U03 TO G02	*Call
2098		5045<5117	U04 TO G02	*Call
2098		5045<5118	U05 TO G02	*Call
2098		5045<5119	V01 TO G02	*Call
2098		5045<5120	V02 TO G02	*Call
2098		5045<5121	V03 TO G02	*Call
2098		5045<5122	V04 TO G02	*Call
2098		5045<5123	V05 TO G02	*Call
2098		5045<5124	W01 TO G02	*Call
2098		5045<5125	W02 TO G02	*Call
2098		5045<5126	W03 TO G02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5045<5127	W04 TO G02	*Call
2098		5045<5128	W05 TO G02	*Call
2098		5045<5129	X01 TO G02	*Call
2098		5045<5130	X02 TO G02	*Call
2098		5045<5131	X03 TO G02	*Call
2098		5045<5132	X04 TO G02	*Call
2098		5045<5133	X05 TO G02	*Call
2098		5045<5134	Y01 TO G02	*Call
2098		5045<5135	Y02 TO G02	*Call
2098		5045<5136	Y03 TO G02	*Call
2098		5045<5137	Y04 TO G02	*Call
2098		5045<5138	Y05 TO G02	*Call
2098		5045<5139	Z01 TO G02	*Call
2098		5045<5140	Z02 TO G02	*Call
2098		5045<5141	Z03 TO G02	*Call
2098		5045<5142	Z04 TO G02	*Call
2098		5045<5143	Z05 TO G02	*Call
2098		5046<5013	A00 TO G03	*Call
2098		5046<5014	A01 TO G03	*Call
2098		5046<5015	A02 TO G03	*Call
2098		5046<5016	A03 TO G03	*Call
2098		5046<5017	A04 TO G03	*Call
2098		5046<5018	A05 TO G03	*Call
2098		5046<5019	B01 TO G03	*Call
2098		5046<5020	B02 TO G03	*Call
2098		5046<5021	B03 TO G03	*Call
2098		5046<5022	B04 TO G03	*Call
2098		5046<5023	B05 TO G03	*Call
2098		5046<5024	C01 TO G03	*Call
2098		5046<5025	C02 TO G03	*Call
2098		5046<5026	C03 TO G03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5046<5027	C04 TO G03	*Call
2098		5046<5028	C05 TO G03	*Call
2098		5046<5029	D01 TO G03	*Call
2098		5046<5030	D02 TO G03	*Call
2098		5046<5031	D03 TO G03	*Call
2098		5046<5032	D04 TO G03	*Call
2098		5046<5033	D05 TO G03	*Call
2098		5046<5034	E01 TO G03	*Call
2098		5046<5035	E02 TO G03	*Call
2098		5046<5036	E03 TO G03	*Call
2098		5046<5037	E04 TO G03	*Call
2098		5046<5038	E05 TO G03	*Call
2098		5046<5039	F01 TO G03	*Call
2098		5046<5040	F02 TO G03	*Call
2098		5046<5041	F03 TO G03	*Call
2098		5046<5042	F04 TO G03	*Call
2098		5046<5043	F05 TO G03	*Call
2098		5046<5044	G01 TO G03	*Call
2098		5046<5045	G02 TO G03	*Call
2098		5046<5047	G04 TO G03	*Call
2098		5046<5048	G05 TO G03	*Call
2098		5046<5049	H01 TO G03	*Call
2098		5046<5050	H02 TO G03	*Call
2098		5046<5051	H03 TO G03	*Call
2098		5046<5052	H04 TO G03	*Call
2098		5046<5053	H05 TO G03	*Call
2098		5046<5054	I01 TO G03	*Call
2098		5046<5055	I02 TO G03	*Call
2098		5046<5056	I03 TO G03	*Call
2098		5046<5057	I04 TO G03	*Call
2098		5046<5058	I05 TO G03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5046<5059	J01 TO G03	*Call
2098		5046<5060	J02 TO G03	*Call
2098		5046<5061	J03 TO G03	*Call
2098		5046<5062	J04 TO G03	*Call
2098		5046<5063	J05 TO G03	*Call
2098		5046<5064	K01 TO G03	*Call
2098		5046<5065	K02 TO G03	*Call
2098		5046<5066	K03 TO G03	*Call
2098		5046<5067	K04 TO G03	*Call
2098		5046<5068	K05 TO G03	*Call
2098		5046<5069	L01 TO G03	*Call
2098		5046<5070	L02 TO G03	*Call
2098		5046<5071	L03 TO G03	*Call
2098		5046<5072	L04 TO G03	*Call
2098		5046<5073	L05 TO G03	*Call
2098		5046<5074	M01 TO G03	*Call
2098		5046<5075	M02 TO G03	*Call
2098		5046<5076	M03 TO G03	*Call
2098		5046<5077	M04 TO G03	*Call
2098		5046<5078	M05 TO G03	*Call
2098		5046<5079	N01 TO G03	*Call
2098		5046<5080	N02 TO G03	*Call
2098		5046<5081	N03 TO G03	*Call
2098		5046<5082	N04 TO G03	*Call
2098		5046<5083	N05 TO G03	*Call
2098		5046<5084	O01 TO G03	*Call
2098		5046<5085	O02 TO G03	*Call
2098		5046<5086	O03 TO G03	*Call
2098		5046<5087	O04 TO G03	*Call
2098		5046<5088	O05 TO G03	*Call
2098		5046<5089	P01 TO G03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5046<5090	P02 TO G03	*Call
2098		5046<5091	P03 TO G03	*Call
2098		5046<5092	P04 TO G03	*Call
2098		5046<5093	P05 TO G03	*Call
2098		5046<5094	Q01 TO G03	*Call
2098		5046<5095	Q02 TO G03	*Call
2098		5046<5096	Q03 TO G03	*Call
2098		5046<5097	Q04 TO G03	*Call
2098		5046<5098	Q05 TO G03	*Call
2098		5046<5099	R01 TO G03	*Call
2098		5046<5100	R02 TO G03	*Call
2098		5046<5101	R03 TO G03	*Call
2098		5046<5102	R04 TO G03	*Call
2098		5046<5103	R05 TO G03	*Call
2098		5046<5104	S01 TO G03	*Call
2098		5046<5105	S02 TO G03	*Call
2098		5046<5106	S03 TO G03	*Call
2098		5046<5107	S04 TO G03	*Call
2098		5046<5108	S05 TO G03	*Call
2098		5046<5109	T01 TO G03	*Call
2098		5046<5110	T02 TO G03	*Call
2098		5046<5111	T03 TO G03	*Call
2098		5046<5112	T04 TO G03	*Call
2098		5046<5113	T05 TO G03	*Call
2098		5046<5114	U01 TO G03	*Call
2098		5046<5115	U02 TO G03	*Call
2098		5046<5116	U03 TO G03	*Call
2098		5046<5117	U04 TO G03	*Call
2098		5046<5118	U05 TO G03	*Call
2098		5046<5119	V01 TO G03	*Call
2098		5046<5120	V02 TO G03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5046<5121	V03 TO G03	*Call
2098		5046<5122	V04 TO G03	*Call
2098		5046<5123	V05 TO G03	*Call
2098		5046<5124	W01 TO G03	*Call
2098		5046<5125	W02 TO G03	*Call
2098		5046<5126	W03 TO G03	*Call
2098		5046<5127	W04 TO G03	*Call
2098		5046<5128	W05 TO G03	*Call
2098		5046<5129	X01 TO G03	*Call
2098		5046<5130	X02 TO G03	*Call
2098		5046<5131	X03 TO G03	*Call
2098		5046<5132	X04 TO G03	*Call
2098		5046<5133	X05 TO G03	*Call
2098		5046<5134	Y01 TO G03	*Call
2098		5046<5135	Y02 TO G03	*Call
2098		5046<5136	Y03 TO G03	*Call
2098		5046<5137	Y04 TO G03	*Call
2098		5046<5138	Y05 TO G03	*Call
2098		5046<5139	Z01 TO G03	*Call
2098		5046<5140	Z02 TO G03	*Call
2098		5046<5141	Z03 TO G03	*Call
2098		5046<5142	Z04 TO G03	*Call
2098		5046<5143	Z05 TO G03	*Call
2098		5047<5013	A00 TO G04	*Call
2098		5047<5014	A01 TO G04	*Call
2098		5047<5015	A02 TO G04	*Call
2098		5047<5016	A03 TO G04	*Call
2098		5047<5017	A04 TO G04	*Call
2098		5047<5018	A05 TO G04	*Call
2098		5047<5019	B01 TO G04	*Call
2098		5047<5020	B02 TO G04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5047<5021	B03 TO G04	*Call
2098		5047<5022	B04 TO G04	*Call
2098		5047<5023	B05 TO G04	*Call
2098		5047<5024	C01 TO G04	*Call
2098		5047<5025	C02 TO G04	*Call
2098		5047<5026	C03 TO G04	*Call
2098		5047<5027	C04 TO G04	*Call
2098		5047<5028	C05 TO G04	*Call
2098		5047<5029	D01 TO G04	*Call
2098		5047<5030	D02 TO G04	*Call
2098		5047<5031	D03 TO G04	*Call
2098		5047<5032	D04 TO G04	*Call
2098		5047<5033	D05 TO G04	*Call
2098		5047<5034	E01 TO G04	*Call
2098		5047<5035	E02 TO G04	*Call
2098		5047<5036	E03 TO G04	*Call
2098		5047<5037	E04 TO G04	*Call
2098		5047<5038	E05 TO G04	*Call
2098		5047<5039	F01 TO G04	*Call
2098		5047<5040	F02 TO G04	*Call
2098		5047<5041	F03 TO G04	*Call
2098		5047<5042	F04 TO G04	*Call
2098		5047<5043	F05 TO G04	*Call
2098		5047<5044	G01 TO G04	*Call
2098		5047<5045	G02 TO G04	*Call
2098		5047<5046	G03 TO G04	*Call
2098		5047<5048	G05 TO G04	*Call
2098		5047<5049	H01 TO G04	*Call
2098		5047<5050	H02 TO G04	*Call
2098		5047<5051	H03 TO G04	*Call
2098		5047<5052	H04 TO G04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5047<5053	H05 TO G04	*Call
2098		5047<5054	I01 TO G04	*Call
2098		5047<5055	I02 TO G04	*Call
2098		5047<5056	I03 TO G04	*Call
2098		5047<5057	I04 TO G04	*Call
2098		5047<5058	I05 TO G04	*Call
2098		5047<5059	J01 TO G04	*Call
2098		5047<5060	J02 TO G04	*Call
2098		5047<5061	J03 TO G04	*Call
2098		5047<5062	J04 TO G04	*Call
2098		5047<5063	J05 TO G04	*Call
2098		5047<5064	K01 TO G04	*Call
2098		5047<5065	K02 TO G04	*Call
2098		5047<5066	K03 TO G04	*Call
2098		5047<5067	K04 TO G04	*Call
2098		5047<5068	K05 TO G04	*Call
2098		5047<5069	L01 TO G04	*Call
2098		5047<5070	L02 TO G04	*Call
2098		5047<5071	L03 TO G04	*Call
2098		5047<5072	L04 TO G04	*Call
2098		5047<5073	L05 TO G04	*Call
2098		5047<5074	M01 TO G04	*Call
2098		5047<5075	M02 TO G04	*Call
2098		5047<5076	M03 TO G04	*Call
2098		5047<5077	M04 TO G04	*Call
2098		5047<5078	M05 TO G04	*Call
2098		5047<5079	N01 TO G04	*Call
2098		5047<5080	N02 TO G04	*Call
2098		5047<5081	N03 TO G04	*Call
2098		5047<5082	N04 TO G04	*Call
2098		5047<5083	N05 TO G04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5047<5084	O01 TO G04	*Call
2098		5047<5085	O02 TO G04	*Call
2098		5047<5086	O03 TO G04	*Call
2098		5047<5087	O04 TO G04	*Call
2098		5047<5088	O05 TO G04	*Call
2098		5047<5089	P01 TO G04	*Call
2098		5047<5090	P02 TO G04	*Call
2098		5047<5091	P03 TO G04	*Call
2098		5047<5092	P04 TO G04	*Call
2098		5047<5093	P05 TO G04	*Call
2098		5047<5094	Q01 TO G04	*Call
2098		5047<5095	Q02 TO G04	*Call
2098		5047<5096	Q03 TO G04	*Call
2098		5047<5097	Q04 TO G04	*Call
2098		5047<5098	Q05 TO G04	*Call
2098		5047<5099	R01 TO G04	*Call
2098		5047<5100	R02 TO G04	*Call
2098		5047<5101	R03 TO G04	*Call
2098		5047<5102	R04 TO G04	*Call
2098		5047<5103	R05 TO G04	*Call
2098		5047<5104	S01 TO G04	*Call
2098		5047<5105	S02 TO G04	*Call
2098		5047<5106	S03 TO G04	*Call
2098		5047<5107	S04 TO G04	*Call
2098		5047<5108	S05 TO G04	*Call
2098		5047<5109	T01 TO G04	*Call
2098		5047<5110	T02 TO G04	*Call
2098		5047<5111	T03 TO G04	*Call
2098		5047<5112	T04 TO G04	*Call
2098		5047<5113	T05 TO G04	*Call
2098		5047<5114	U01 TO G04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5047<5115	U02 TO G04	*Call
2098		5047<5116	U03 TO G04	*Call
2098		5047<5117	U04 TO G04	*Call
2098		5047<5118	U05 TO G04	*Call
2098		5047<5119	V01 TO G04	*Call
2098		5047<5120	V02 TO G04	*Call
2098		5047<5121	V03 TO G04	*Call
2098		5047<5122	V04 TO G04	*Call
2098		5047<5123	V05 TO G04	*Call
2098		5047<5124	W01 TO G04	*Call
2098		5047<5125	W02 TO G04	*Call
2098		5047<5126	W03 TO G04	*Call
2098		5047<5127	W04 TO G04	*Call
2098		5047<5128	W05 TO G04	*Call
2098		5047<5129	X01 TO G04	*Call
2098		5047<5130	X02 TO G04	*Call
2098		5047<5131	X03 TO G04	*Call
2098		5047<5132	X04 TO G04	*Call
2098		5047<5133	X05 TO G04	*Call
2098		5047<5134	Y01 TO G04	*Call
2098		5047<5135	Y02 TO G04	*Call
2098		5047<5136	Y03 TO G04	*Call
2098		5047<5137	Y04 TO G04	*Call
2098		5047<5138	Y05 TO G04	*Call
2098		5047<5139	Z01 TO G04	*Call
2098		5047<5140	Z02 TO G04	*Call
2098		5047<5141	Z03 TO G04	*Call
2098		5047<5142	Z04 TO G04	*Call
2098		5047<5143	Z05 TO G04	*Call
2098		5048<5013	A00 TO G05	*Call
2098		5048<5014	A01 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5048<5015	A02 TO G05	*Call
2098		5048<5016	A03 TO G05	*Call
2098		5048<5017	A04 TO G05	*Call
2098		5048<5018	A05 TO G05	*Call
2098		5048<5019	B01 TO G05	*Call
2098		5048<5020	B02 TO G05	*Call
2098		5048<5021	B03 TO G05	*Call
2098		5048<5022	B04 TO G05	*Call
2098		5048<5023	B05 TO G05	*Call
2098		5048<5024	C01 TO G05	*Call
2098		5048<5025	C02 TO G05	*Call
2098		5048<5026	C03 TO G05	*Call
2098		5048<5027	C04 TO G05	*Call
2098		5048<5028	C05 TO G05	*Call
2098		5048<5029	D01 TO G05	*Call
2098		5048<5030	D02 TO G05	*Call
2098		5048<5031	D03 TO G05	*Call
2098		5048<5032	D04 TO G05	*Call
2098		5048<5033	D05 TO G05	*Call
2098		5048<5034	E01 TO G05	*Call
2098		5048<5035	E02 TO G05	*Call
2098		5048<5036	E03 TO G05	*Call
2098		5048<5037	E04 TO G05	*Call
2098		5048<5038	E05 TO G05	*Call
2098		5048<5039	F01 TO G05	*Call
2098		5048<5040	F02 TO G05	*Call
2098		5048<5041	F03 TO G05	*Call
2098		5048<5042	F04 TO G05	*Call
2098		5048<5043	F05 TO G05	*Call
2098		5048<5044	G01 TO G05	*Call
2098		5048<5045	G02 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5048<5046	G03 TO G05	*Call
2098		5048<5047	G04 TO G05	*Call
2098		5048<5049	H01 TO G05	*Call
2098		5048<5050	H02 TO G05	*Call
2098		5048<5051	H03 TO G05	*Call
2098		5048<5052	H04 TO G05	*Call
2098		5048<5053	H05 TO G05	*Call
2098		5048<5054	I01 TO G05	*Call
2098		5048<5055	I02 TO G05	*Call
2098		5048<5056	I03 TO G05	*Call
2098		5048<5057	I04 TO G05	*Call
2098		5048<5058	I05 TO G05	*Call
2098		5048<5059	J01 TO G05	*Call
2098		5048<5060	J02 TO G05	*Call
2098		5048<5061	J03 TO G05	*Call
2098		5048<5062	J04 TO G05	*Call
2098		5048<5063	J05 TO G05	*Call
2098		5048<5064	K01 TO G05	*Call
2098		5048<5065	K02 TO G05	*Call
2098		5048<5066	K03 TO G05	*Call
2098		5048<5067	K04 TO G05	*Call
2098		5048<5068	K05 TO G05	*Call
2098		5048<5069	L01 TO G05	*Call
2098		5048<5070	L02 TO G05	*Call
2098		5048<5071	L03 TO G05	*Call
2098		5048<5072	L04 TO G05	*Call
2098		5048<5073	L05 TO G05	*Call
2098		5048<5074	M01 TO G05	*Call
2098		5048<5075	M02 TO G05	*Call
2098		5048<5076	M03 TO G05	*Call
2098		5048<5077	M04 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5048<5078	M05 TO G05	*Call
2098		5048<5079	N01 TO G05	*Call
2098		5048<5080	N02 TO G05	*Call
2098		5048<5081	N03 TO G05	*Call
2098		5048<5082	N04 TO G05	*Call
2098		5048<5083	N05 TO G05	*Call
2098		5048<5084	O01 TO G05	*Call
2098		5048<5085	O02 TO G05	*Call
2098		5048<5086	O03 TO G05	*Call
2098		5048<5087	O04 TO G05	*Call
2098		5048<5088	O05 TO G05	*Call
2098		5048<5089	P01 TO G05	*Call
2098		5048<5090	P02 TO G05	*Call
2098		5048<5091	P03 TO G05	*Call
2098		5048<5092	P04 TO G05	*Call
2098		5048<5093	P05 TO G05	*Call
2098		5048<5094	Q01 TO G05	*Call
2098		5048<5095	Q02 TO G05	*Call
2098		5048<5096	Q03 TO G05	*Call
2098		5048<5097	Q04 TO G05	*Call
2098		5048<5098	Q05 TO G05	*Call
2098		5048<5099	R01 TO G05	*Call
2098		5048<5100	R02 TO G05	*Call
2098		5048<5101	R03 TO G05	*Call
2098		5048<5102	R04 TO G05	*Call
2098		5048<5103	R05 TO G05	*Call
2098		5048<5104	S01 TO G05	*Call
2098		5048<5105	S02 TO G05	*Call
2098		5048<5106	S03 TO G05	*Call
2098		5048<5107	S04 TO G05	*Call
2098		5048<5108	S05 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5048<5109	T01 TO G05	*Call
2098		5048<5110	T02 TO G05	*Call
2098		5048<5111	T03 TO G05	*Call
2098		5048<5112	T04 TO G05	*Call
2098		5048<5113	T05 TO G05	*Call
2098		5048<5114	U01 TO G05	*Call
2098		5048<5115	U02 TO G05	*Call
2098		5048<5116	U03 TO G05	*Call
2098		5048<5117	U04 TO G05	*Call
2098		5048<5118	U05 TO G05	*Call
2098		5048<5119	V01 TO G05	*Call
2098		5048<5120	V02 TO G05	*Call
2098		5048<5121	V03 TO G05	*Call
2098		5048<5122	V04 TO G05	*Call
2098		5048<5123	V05 TO G05	*Call
2098		5048<5124	W01 TO G05	*Call
2098		5048<5125	W02 TO G05	*Call
2098		5048<5126	W03 TO G05	*Call
2098		5048<5127	W04 TO G05	*Call
2098		5048<5128	W05 TO G05	*Call
2098		5048<5129	X01 TO G05	*Call
2098		5048<5130	X02 TO G05	*Call
2098		5048<5131	X03 TO G05	*Call
2098		5048<5132	X04 TO G05	*Call
2098		5048<5133	X05 TO G05	*Call
2098		5048<5134	Y01 TO G05	*Call
2098		5048<5135	Y02 TO G05	*Call
2098		5048<5136	Y03 TO G05	*Call
2098		5048<5137	Y04 TO G05	*Call
2098		5048<5138	Y05 TO G05	*Call
2098		5048<5139	Z01 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5048<5140	Z02 TO G05	*Call
2098		5048<5141	Z03 TO G05	*Call
2098		5048<5142	Z04 TO G05	*Call
2098		5048<5143	Z05 TO G05	*Call
2098		5049<5013	A00 TO H01	*Call
2098		5049<5014	A01 TO H01	*Call
2098		5049<5015	A02 TO H01	*Call
2098		5049<5016	A03 TO H01	*Call
2098		5049<5017	A04 TO H01	*Call
2098		5049<5018	A05 TO H01	*Call
2098		5049<5019	B01 TO H01	*Call
2098		5049<5020	B02 TO H01	*Call
2098		5049<5021	B03 TO H01	*Call
2098		5049<5022	B04 TO H01	*Call
2098		5049<5023	B05 TO H01	*Call
2098		5049<5024	C01 TO H01	*Call
2098		5049<5025	C02 TO H01	*Call
2098		5049<5026	C03 TO H01	*Call
2098		5049<5027	C04 TO H01	*Call
2098		5049<5028	C05 TO H01	*Call
2098		5049<5029	D01 TO H01	*Call
2098		5049<5030	D02 TO H01	*Call
2098		5049<5031	D03 TO H01	*Call
2098		5049<5032	D04 TO H01	*Call
2098		5049<5033	D05 TO H01	*Call
2098		5049<5034	E01 TO H01	*Call
2098		5049<5035	E02 TO H01	*Call
2098		5049<5036	E03 TO H01	*Call
2098		5049<5037	E04 TO H01	*Call
2098		5049<5038	E05 TO H01	*Call
2098		5049<5039	F01 TO H01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5049<5040	F02 TO H01	*Call
2098		5049<5041	F03 TO H01	*Call
2098		5049<5042	F04 TO H01	*Call
2098		5049<5043	F05 TO H01	*Call
2098		5049<5044	G01 TO H01	*Call
2098		5049<5045	G02 TO H01	*Call
2098		5049<5046	G03 TO H01	*Call
2098		5049<5047	G04 TO H01	*Call
2098		5049<5048	G05 TO H01	*Call
2098		5049<5050	H02 TO H01	*Call
2098		5049<5051	H03 TO H01	*Call
2098		5049<5052	H04 TO H01	*Call
2098		5049<5053	H05 TO H01	*Call
2098		5049<5054	I01 TO H01	*Call
2098		5049<5055	I02 TO H01	*Call
2098		5049<5056	I03 TO H01	*Call
2098		5049<5057	I04 TO H01	*Call
2098		5049<5058	I05 TO H01	*Call
2098		5049<5059	J01 TO H01	*Call
2098		5049<5060	J02 TO H01	*Call
2098		5049<5061	J03 TO H01	*Call
2098		5049<5062	J04 TO H01	*Call
2098		5049<5063	J05 TO H01	*Call
2098		5049<5064	K01 TO H01	*Call
2098		5049<5065	K02 TO H01	*Call
2098		5049<5066	K03 TO H01	*Call
2098		5049<5067	K04 TO H01	*Call
2098		5049<5068	K05 TO H01	*Call
2098		5049<5069	L01 TO H01	*Call
2098		5049<5070	L02 TO H01	*Call
2098		5049<5071	L03 TO H01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5049<5072	L04 TO H01	*Call
2098		5049<5073	L05 TO H01	*Call
2098		5049<5074	M01 TO H01	*Call
2098		5049<5075	M02 TO H01	*Call
2098		5049<5076	M03 TO H01	*Call
2098		5049<5077	M04 TO H01	*Call
2098		5049<5078	M05 TO H01	*Call
2098		5049<5079	N01 TO H01	*Call
2098		5049<5080	N02 TO H01	*Call
2098		5049<5081	N03 TO H01	*Call
2098		5049<5082	N04 TO H01	*Call
2098		5049<5083	N05 TO H01	*Call
2098		5049<5084	O01 TO H01	*Call
2098		5049<5085	O02 TO H01	*Call
2098		5049<5086	O03 TO H01	*Call
2098		5049<5087	O04 TO H01	*Call
2098		5049<5088	O05 TO H01	*Call
2098		5049<5089	P01 TO H01	*Call
2098		5049<5090	P02 TO H01	*Call
2098		5049<5091	P03 TO H01	*Call
2098		5049<5092	P04 TO H01	*Call
2098		5049<5093	P05 TO H01	*Call
2098		5049<5094	Q01 TO H01	*Call
2098		5049<5095	Q02 TO H01	*Call
2098		5049<5096	Q03 TO H01	*Call
2098		5049<5097	Q04 TO H01	*Call
2098		5049<5098	Q05 TO H01	*Call
2098		5049<5099	R01 TO H01	*Call
2098		5049<5100	R02 TO H01	*Call
2098		5049<5101	R03 TO H01	*Call
2098		5049<5102	R04 TO H01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5049<5103	R05 TO H01	*Call
2098		5049<5104	S01 TO H01	*Call
2098		5049<5105	S02 TO H01	*Call
2098		5049<5106	S03 TO H01	*Call
2098		5049<5107	S04 TO H01	*Call
2098		5049<5108	S05 TO H01	*Call
2098		5049<5109	T01 TO H01	*Call
2098		5049<5110	T02 TO H01	*Call
2098		5049<5111	T03 TO H01	*Call
2098		5049<5112	T04 TO H01	*Call
2098		5049<5113	T05 TO H01	*Call
2098		5049<5114	U01 TO H01	*Call
2098		5049<5115	U02 TO H01	*Call
2098		5049<5116	U03 TO H01	*Call
2098		5049<5117	U04 TO H01	*Call
2098		5049<5118	U05 TO H01	*Call
2098		5049<5119	V01 TO H01	*Call
2098		5049<5120	V02 TO H01	*Call
2098		5049<5121	V03 TO H01	*Call
2098		5049<5122	V04 TO H01	*Call
2098		5049<5123	V05 TO H01	*Call
2098		5049<5124	W01 TO H01	*Call
2098		5049<5125	W02 TO H01	*Call
2098		5049<5126	W03 TO H01	*Call
2098		5049<5127	W04 TO H01	*Call
2098		5049<5128	W05 TO H01	*Call
2098		5049<5129	X01 TO H01	*Call
2098		5049<5130	X02 TO H01	*Call
2098		5049<5131	X03 TO H01	*Call
2098		5049<5132	X04 TO H01	*Call
2098		5049<5133	X05 TO H01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5049<5134	Y01 TO H01	*Call
2098		5049<5135	Y02 TO H01	*Call
2098		5049<5136	Y03 TO H01	*Call
2098		5049<5137	Y04 TO H01	*Call
2098		5049<5138	Y05 TO H01	*Call
2098		5049<5139	Z01 TO H01	*Call
2098		5049<5140	Z02 TO H01	*Call
2098		5049<5141	Z03 TO H01	*Call
2098		5049<5142	Z04 TO H01	*Call
2098		5049<5143	Z05 TO H01	*Call
2098		5050<5013	A00 TO H02	*Call
2098		5050<5014	A01 TO H02	*Call
2098		5050<5015	A02 TO H02	*Call
2098		5050<5016	A03 TO H02	*Call
2098		5050<5017	A04 TO H02	*Call
2098		5050<5018	A05 TO H02	*Call
2098		5050<5019	B01 TO H02	*Call
2098		5050<5020	B02 TO H02	*Call
2098		5050<5021	B03 TO H02	*Call
2098		5050<5022	B04 TO H02	*Call
2098		5050<5023	B05 TO H02	*Call
2098		5050<5024	C01 TO H02	*Call
2098		5050<5025	C02 TO H02	*Call
2098		5050<5026	C03 TO H02	*Call
2098		5050<5027	C04 TO H02	*Call
2098		5050<5028	C05 TO H02	*Call
2098		5050<5029	D01 TO H02	*Call
2098		5050<5030	D02 TO H02	*Call
2098		5050<5031	D03 TO H02	*Call
2098		5050<5032	D04 TO H02	*Call
2098		5050<5033	D05 TO H02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5050<5034	E01 TO H02	*Call
2098		5050<5035	E02 TO H02	*Call
2098		5050<5036	E03 TO H02	*Call
2098		5050<5037	E04 TO H02	*Call
2098		5050<5038	E05 TO H02	*Call
2098		5050<5039	F01 TO H02	*Call
2098		5050<5040	F02 TO H02	*Call
2098		5050<5041	F03 TO H02	*Call
2098		5050<5042	F04 TO H02	*Call
2098		5050<5043	F05 TO H02	*Call
2098		5050<5044	G01 TO H02	*Call
2098		5050<5045	G02 TO H02	*Call
2098		5050<5046	G03 TO H02	*Call
2098		5050<5047	G04 TO H02	*Call
2098		5050<5048	G05 TO H02	*Call
2098		5050<5049	H01 TO H02	*Call
2098		5050<5051	H03 TO H02	*Call
2098		5050<5052	H04 TO H02	*Call
2098		5050<5053	H05 TO H02	*Call
2098		5050<5054	I01 TO H02	*Call
2098		5050<5055	I02 TO H02	*Call
2098		5050<5056	I03 TO H02	*Call
2098		5050<5057	I04 TO H02	*Call
2098		5050<5058	I05 TO H02	*Call
2098		5050<5059	J01 TO H02	*Call
2098		5050<5060	J02 TO H02	*Call
2098		5050<5061	J03 TO H02	*Call
2098		5050<5062	J04 TO H02	*Call
2098		5050<5063	J05 TO H02	*Call
2098		5050<5064	K01 TO H02	*Call
2098		5050<5065	K02 TO H02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5050<5066	K03 TO H02	*Call
2098		5050<5067	K04 TO H02	*Call
2098		5050<5068	K05 TO H02	*Call
2098		5050<5069	L01 TO H02	*Call
2098		5050<5070	L02 TO H02	*Call
2098		5050<5071	L03 TO H02	*Call
2098		5050<5072	L04 TO H02	*Call
2098		5050<5073	L05 TO H02	*Call
2098		5050<5074	M01 TO H02	*Call
2098		5050<5075	M02 TO H02	*Call
2098		5050<5076	M03 TO H02	*Call
2098		5050<5077	M04 TO H02	*Call
2098		5050<5078	M05 TO H02	*Call
2098		5050<5079	N01 TO H02	*Call
2098		5050<5080	N02 TO H02	*Call
2098		5050<5081	N03 TO H02	*Call
2098		5050<5082	N04 TO H02	*Call
2098		5050<5083	N05 TO H02	*Call
2098		5050<5084	O01 TO H02	*Call
2098		5050<5085	O02 TO H02	*Call
2098		5050<5086	O03 TO H02	*Call
2098		5050<5087	O04 TO H02	*Call
2098		5050<5088	O05 TO H02	*Call
2098		5050<5089	P01 TO H02	*Call
2098		5050<5090	P02 TO H02	*Call
2098		5050<5091	P03 TO H02	*Call
2098		5050<5092	P04 TO H02	*Call
2098		5050<5093	P05 TO H02	*Call
2098		5050<5094	Q01 TO H02	*Call
2098		5050<5095	Q02 TO H02	*Call
2098		5050<5096	Q03 TO H02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5050<5097	Q04 TO H02	*Call
2098		5050<5098	Q05 TO H02	*Call
2098		5050<5099	R01 TO H02	*Call
2098		5050<5100	R02 TO H02	*Call
2098		5050<5101	R03 TO H02	*Call
2098		5050<5102	R04 TO H02	*Call
2098		5050<5103	R05 TO H02	*Call
2098		5050<5104	S01 TO H02	*Call
2098		5050<5105	S02 TO H02	*Call
2098		5050<5106	S03 TO H02	*Call
2098		5050<5107	S04 TO H02	*Call
2098		5050<5108	S05 TO H02	*Call
2098		5050<5109	T01 TO H02	*Call
2098		5050<5110	T02 TO H02	*Call
2098		5050<5111	T03 TO H02	*Call
2098		5050<5112	T04 TO H02	*Call
2098		5050<5113	T05 TO H02	*Call
2098		5050<5114	U01 TO H02	*Call
2098		5050<5115	U02 TO H02	*Call
2098		5050<5116	U03 TO H02	*Call
2098		5050<5117	U04 TO H02	*Call
2098		5050<5118	U05 TO H02	*Call
2098		5050<5119	V01 TO H02	*Call
2098		5050<5120	V02 TO H02	*Call
2098		5050<5121	V03 TO H02	*Call
2098		5050<5122	V04 TO H02	*Call
2098		5050<5123	V05 TO H02	*Call
2098		5050<5124	W01 TO H02	*Call
2098		5050<5125	W02 TO H02	*Call
2098		5050<5126	W03 TO H02	*Call
2098		5050<5127	W04 TO H02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5050<5128	W05 TO H02	*Call
2098		5050<5129	X01 TO H02	*Call
2098		5050<5130	X02 TO H02	*Call
2098		5050<5131	X03 TO H02	*Call
2098		5050<5132	X04 TO H02	*Call
2098		5050<5133	X05 TO H02	*Call
2098		5050<5134	Y01 TO H02	*Call
2098		5050<5135	Y02 TO H02	*Call
2098		5050<5136	Y03 TO H02	*Call
2098		5050<5137	Y04 TO H02	*Call
2098		5050<5138	Y05 TO H02	*Call
2098		5050<5139	Z01 TO H02	*Call
2098		5050<5140	Z02 TO H02	*Call
2098		5050<5141	Z03 TO H02	*Call
2098		5050<5142	Z04 TO H02	*Call
2098		5050<5143	Z05 TO H02	*Call
2098		5051<5013	A00 TO H03	*Call
2098		5051<5014	A01 TO H03	*Call
2098		5051<5015	A02 TO H03	*Call
2098		5051<5016	A03 TO H03	*Call
2098		5051<5017	A04 TO H03	*Call
2098		5051<5018	A05 TO H03	*Call
2098		5051<5019	B01 TO H03	*Call
2098		5051<5020	B02 TO H03	*Call
2098		5051<5021	B03 TO H03	*Call
2098		5051<5022	B04 TO H03	*Call
2098		5051<5023	B05 TO H03	*Call
2098		5051<5024	C01 TO H03	*Call
2098		5051<5025	C02 TO H03	*Call
2098		5051<5026	C03 TO H03	*Call
2098		5051<5027	C04 TO H03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5051<5028	C05 TO H03	*Call
2098		5051<5029	D01 TO H03	*Call
2098		5051<5030	D02 TO H03	*Call
2098		5051<5031	D03 TO H03	*Call
2098		5051<5032	D04 TO H03	*Call
2098		5051<5033	D05 TO H03	*Call
2098		5051<5034	E01 TO H03	*Call
2098		5051<5035	E02 TO H03	*Call
2098		5051<5036	E03 TO H03	*Call
2098		5051<5037	E04 TO H03	*Call
2098		5051<5038	E05 TO H03	*Call
2098		5051<5039	F01 TO H03	*Call
2098		5051<5040	F02 TO H03	*Call
2098		5051<5041	F03 TO H03	*Call
2098		5051<5042	F04 TO H03	*Call
2098		5051<5043	F05 TO H03	*Call
2098		5051<5044	G01 TO H03	*Call
2098		5051<5045	G02 TO H03	*Call
2098		5051<5046	G03 TO H03	*Call
2098		5051<5047	G04 TO H03	*Call
2098		5051<5048	G05 TO H03	*Call
2098		5051<5049	H01 TO H03	*Call
2098		5051<5050	H02 TO H03	*Call
2098		5051<5052	H04 TO H03	*Call
2098		5051<5053	H05 TO H03	*Call
2098		5051<5054	I01 TO H03	*Call
2098		5051<5055	I02 TO H03	*Call
2098		5051<5056	I03 TO H03	*Call
2098		5051<5057	I04 TO H03	*Call
2098		5051<5058	I05 TO H03	*Call
2098		5051<5059	J01 TO H03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5051<5060	J02 TO H03	*Call
2098		5051<5061	J03 TO H03	*Call
2098		5051<5062	J04 TO H03	*Call
2098		5051<5063	J05 TO H03	*Call
2098		5051<5064	K01 TO H03	*Call
2098		5051<5065	K02 TO H03	*Call
2098		5051<5066	K03 TO H03	*Call
2098		5051<5067	K04 TO H03	*Call
2098		5051<5068	K05 TO H03	*Call
2098		5051<5069	L01 TO H03	*Call
2098		5051<5070	L02 TO H03	*Call
2098		5051<5071	L03 TO H03	*Call
2098		5051<5072	L04 TO H03	*Call
2098		5051<5073	L05 TO H03	*Call
2098		5051<5074	M01 TO H03	*Call
2098		5051<5075	M02 TO H03	*Call
2098		5051<5076	M03 TO H03	*Call
2098		5051<5077	M04 TO H03	*Call
2098		5051<5078	M05 TO H03	*Call
2098		5051<5079	N01 TO H03	*Call
2098		5051<5080	N02 TO H03	*Call
2098		5051<5081	N03 TO H03	*Call
2098		5051<5082	N04 TO H03	*Call
2098		5051<5083	N05 TO H03	*Call
2098		5051<5084	O01 TO H03	*Call
2098		5051<5085	O02 TO H03	*Call
2098		5051<5086	O03 TO H03	*Call
2098		5051<5087	O04 TO H03	*Call
2098		5051<5088	O05 TO H03	*Call
2098		5051<5089	P01 TO H03	*Call
2098		5051<5090	P02 TO H03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5051<5091	P03 TO H03	*Call
2098		5051<5092	P04 TO H03	*Call
2098		5051<5093	P05 TO H03	*Call
2098		5051<5094	Q01 TO H03	*Call
2098		5051<5095	Q02 TO H03	*Call
2098		5051<5096	Q03 TO H03	*Call
2098		5051<5097	Q04 TO H03	*Call
2098		5051<5098	Q05 TO H03	*Call
2098		5051<5099	R01 TO H03	*Call
2098		5051<5100	R02 TO H03	*Call
2098		5051<5101	R03 TO H03	*Call
2098		5051<5102	R04 TO H03	*Call
2098		5051<5103	R05 TO H03	*Call
2098		5051<5104	S01 TO H03	*Call
2098		5051<5105	S02 TO H03	*Call
2098		5051<5106	S03 TO H03	*Call
2098		5051<5107	S04 TO H03	*Call
2098		5051<5108	S05 TO H03	*Call
2098		5051<5109	T01 TO H03	*Call
2098		5051<5110	T02 TO H03	*Call
2098		5051<5111	T03 TO H03	*Call
2098		5051<5112	T04 TO H03	*Call
2098		5051<5113	T05 TO H03	*Call
2098		5051<5114	U01 TO H03	*Call
2098		5051<5115	U02 TO H03	*Call
2098		5051<5116	U03 TO H03	*Call
2098		5051<5117	U04 TO H03	*Call
2098		5051<5118	U05 TO H03	*Call
2098		5051<5119	V01 TO H03	*Call
2098		5051<5120	V02 TO H03	*Call
2098		5051<5121	V03 TO H03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5051<5122	V04 TO H03	*Call
2098		5051<5123	V05 TO H03	*Call
2098		5051<5124	W01 TO H03	*Call
2098		5051<5125	W02 TO H03	*Call
2098		5051<5126	W03 TO H03	*Call
2098		5051<5127	W04 TO H03	*Call
2098		5051<5128	W05 TO H03	*Call
2098		5051<5129	X01 TO H03	*Call
2098		5051<5130	X02 TO H03	*Call
2098		5051<5131	X03 TO H03	*Call
2098		5051<5132	X04 TO H03	*Call
2098		5051<5133	X05 TO H03	*Call
2098		5051<5134	Y01 TO H03	*Call
2098		5051<5135	Y02 TO H03	*Call
2098		5051<5136	Y03 TO H03	*Call
2098		5051<5137	Y04 TO H03	*Call
2098		5051<5138	Y05 TO H03	*Call
2098		5051<5139	Z01 TO H03	*Call
2098		5051<5140	Z02 TO H03	*Call
2098		5051<5141	Z03 TO H03	*Call
2098		5051<5142	Z04 TO H03	*Call
2098		5051<5143	Z05 TO H03	*Call
2098		5052<5013	A00 TO H04	*Call
2098		5052<5014	A01 TO H04	*Call
2098		5052<5015	A02 TO H04	*Call
2098		5052<5016	A03 TO H04	*Call
2098		5052<5017	A04 TO H04	*Call
2098		5052<5018	A05 TO H04	*Call
2098		5052<5019	B01 TO H04	*Call
2098		5052<5020	B02 TO H04	*Call
2098		5052<5021	B03 TO H04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5052<5022	B04 TO H04	*Call
2098		5052<5023	B05 TO H04	*Call
2098		5052<5024	C01 TO H04	*Call
2098		5052<5025	C02 TO H04	*Call
2098		5052<5026	C03 TO H04	*Call
2098		5052<5027	C04 TO H04	*Call
2098		5052<5028	C05 TO H04	*Call
2098		5052<5029	D01 TO H04	*Call
2098		5052<5030	D02 TO H04	*Call
2098		5052<5031	D03 TO H04	*Call
2098		5052<5032	D04 TO H04	*Call
2098		5052<5033	D05 TO H04	*Call
2098		5052<5034	E01 TO H04	*Call
2098		5052<5035	E02 TO H04	*Call
2098		5052<5036	E03 TO H04	*Call
2098		5052<5037	E04 TO H04	*Call
2098		5052<5038	E05 TO H04	*Call
2098		5052<5039	F01 TO H04	*Call
2098		5052<5040	F02 TO H04	*Call
2098		5052<5041	F03 TO H04	*Call
2098		5052<5042	F04 TO H04	*Call
2098		5052<5043	F05 TO H04	*Call
2098		5052<5044	G01 TO H04	*Call
2098		5052<5045	G02 TO H04	*Call
2098		5052<5046	G03 TO H04	*Call
2098		5052<5047	G04 TO H04	*Call
2098		5052<5048	G05 TO H04	*Call
2098		5052<5049	H01 TO H04	*Call
2098		5052<5050	H02 TO H04	*Call
2098		5052<5051	H03 TO H04	*Call
2098		5052<5053	H05 TO H04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5052<5054	I01 TO H04	*Call
2098		5052<5055	I02 TO H04	*Call
2098		5052<5056	I03 TO H04	*Call
2098		5052<5057	I04 TO H04	*Call
2098		5052<5058	I05 TO H04	*Call
2098		5052<5059	J01 TO H04	*Call
2098		5052<5060	J02 TO H04	*Call
2098		5052<5061	J03 TO H04	*Call
2098		5052<5062	J04 TO H04	*Call
2098		5052<5063	J05 TO H04	*Call
2098		5052<5064	K01 TO H04	*Call
2098		5052<5065	K02 TO H04	*Call
2098		5052<5066	K03 TO H04	*Call
2098		5052<5067	K04 TO H04	*Call
2098		5052<5068	K05 TO H04	*Call
2098		5052<5069	L01 TO H04	*Call
2098		5052<5070	L02 TO H04	*Call
2098		5052<5071	L03 TO H04	*Call
2098		5052<5072	L04 TO H04	*Call
2098		5052<5073	L05 TO H04	*Call
2098		5052<5074	M01 TO H04	*Call
2098		5052<5075	M02 TO H04	*Call
2098		5052<5076	M03 TO H04	*Call
2098		5052<5077	M04 TO H04	*Call
2098		5052<5078	M05 TO H04	*Call
2098		5052<5079	N01 TO H04	*Call
2098		5052<5080	N02 TO H04	*Call
2098		5052<5081	N03 TO H04	*Call
2098		5052<5082	N04 TO H04	*Call
2098		5052<5083	N05 TO H04	*Call
2098		5052<5084	O01 TO H04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5052<5085	O02 TO H04	*Call
2098		5052<5086	O03 TO H04	*Call
2098		5052<5087	O04 TO H04	*Call
2098		5052<5088	O05 TO H04	*Call
2098		5052<5089	P01 TO H04	*Call
2098		5052<5090	P02 TO H04	*Call
2098		5052<5091	P03 TO H04	*Call
2098		5052<5092	P04 TO H04	*Call
2098		5052<5093	P05 TO H04	*Call
2098		5052<5094	Q01 TO H04	*Call
2098		5052<5095	Q02 TO H04	*Call
2098		5052<5096	Q03 TO H04	*Call
2098		5052<5097	Q04 TO H04	*Call
2098		5052<5098	Q05 TO H04	*Call
2098		5052<5099	R01 TO H04	*Call
2098		5052<5100	R02 TO H04	*Call
2098		5052<5101	R03 TO H04	*Call
2098		5052<5102	R04 TO H04	*Call
2098		5052<5103	R05 TO H04	*Call
2098		5052<5104	S01 TO H04	*Call
2098		5052<5105	S02 TO H04	*Call
2098		5052<5106	S03 TO H04	*Call
2098		5052<5107	S04 TO H04	*Call
2098		5052<5108	S05 TO H04	*Call
2098		5052<5109	T01 TO H04	*Call
2098		5052<5110	T02 TO H04	*Call
2098		5052<5111	T03 TO H04	*Call
2098		5052<5112	T04 TO H04	*Call
2098		5052<5113	T05 TO H04	*Call
2098		5052<5114	U01 TO H04	*Call
2098		5052<5115	U02 TO H04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5052<5116	U03 TO H04	*Call
2098		5052<5117	U04 TO H04	*Call
2098		5052<5118	U05 TO H04	*Call
2098		5052<5119	V01 TO H04	*Call
2098		5052<5120	V02 TO H04	*Call
2098		5052<5121	V03 TO H04	*Call
2098		5052<5122	V04 TO H04	*Call
2098		5052<5123	V05 TO H04	*Call
2098		5052<5124	W01 TO H04	*Call
2098		5052<5125	W02 TO H04	*Call
2098		5052<5126	W03 TO H04	*Call
2098		5052<5127	W04 TO H04	*Call
2098		5052<5128	W05 TO H04	*Call
2098		5052<5129	X01 TO H04	*Call
2098		5052<5130	X02 TO H04	*Call
2098		5052<5131	X03 TO H04	*Call
2098		5052<5132	X04 TO H04	*Call
2098		5052<5133	X05 TO H04	*Call
2098		5052<5134	Y01 TO H04	*Call
2098		5052<5135	Y02 TO H04	*Call
2098		5052<5136	Y03 TO H04	*Call
2098		5052<5137	Y04 TO H04	*Call
2098		5052<5138	Y05 TO H04	*Call
2098		5052<5139	Z01 TO H04	*Call
2098		5052<5140	Z02 TO H04	*Call
2098		5052<5141	Z03 TO H04	*Call
2098		5052<5142	Z04 TO H04	*Call
2098		5052<5143	Z05 TO H04	*Call
2098		5053<5013	A00 TO H05	*Call
2098		5053<5014	A01 TO H05	*Call
2098		5053<5015	A02 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5053<5016	A03 TO H05	*Call
2098		5053<5017	A04 TO H05	*Call
2098		5053<5018	A05 TO H05	*Call
2098		5053<5019	B01 TO H05	*Call
2098		5053<5020	B02 TO H05	*Call
2098		5053<5021	B03 TO H05	*Call
2098		5053<5022	B04 TO H05	*Call
2098		5053<5023	B05 TO H05	*Call
2098		5053<5024	C01 TO H05	*Call
2098		5053<5025	C02 TO H05	*Call
2098		5053<5026	C03 TO H05	*Call
2098		5053<5027	C04 TO H05	*Call
2098		5053<5028	C05 TO H05	*Call
2098		5053<5029	D01 TO H05	*Call
2098		5053<5030	D02 TO H05	*Call
2098		5053<5031	D03 TO H05	*Call
2098		5053<5032	D04 TO H05	*Call
2098		5053<5033	D05 TO H05	*Call
2098		5053<5034	E01 TO H05	*Call
2098		5053<5035	E02 TO H05	*Call
2098		5053<5036	E03 TO H05	*Call
2098		5053<5037	E04 TO H05	*Call
2098		5053<5038	E05 TO H05	*Call
2098		5053<5039	F01 TO H05	*Call
2098		5053<5040	F02 TO H05	*Call
2098		5053<5041	F03 TO H05	*Call
2098		5053<5042	F04 TO H05	*Call
2098		5053<5043	F05 TO H05	*Call
2098		5053<5044	G01 TO H05	*Call
2098		5053<5045	G02 TO H05	*Call
2098		5053<5046	G03 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5053<5047	G04 TO H05	*Call
2098		5053<5048	G05 TO H05	*Call
2098		5053<5049	H01 TO H05	*Call
2098		5053<5050	H02 TO H05	*Call
2098		5053<5051	H03 TO H05	*Call
2098		5053<5052	H04 TO H05	*Call
2098		5053<5054	I01 TO H05	*Call
2098		5053<5055	I02 TO H05	*Call
2098		5053<5056	I03 TO H05	*Call
2098		5053<5057	I04 TO H05	*Call
2098		5053<5058	I05 TO H05	*Call
2098		5053<5059	J01 TO H05	*Call
2098		5053<5060	J02 TO H05	*Call
2098		5053<5061	J03 TO H05	*Call
2098		5053<5062	J04 TO H05	*Call
2098		5053<5063	J05 TO H05	*Call
2098		5053<5064	K01 TO H05	*Call
2098		5053<5065	K02 TO H05	*Call
2098		5053<5066	K03 TO H05	*Call
2098		5053<5067	K04 TO H05	*Call
2098		5053<5068	K05 TO H05	*Call
2098		5053<5069	L01 TO H05	*Call
2098		5053<5070	L02 TO H05	*Call
2098		5053<5071	L03 TO H05	*Call
2098		5053<5072	L04 TO H05	*Call
2098		5053<5073	L05 TO H05	*Call
2098		5053<5074	M01 TO H05	*Call
2098		5053<5075	M02 TO H05	*Call
2098		5053<5076	M03 TO H05	*Call
2098		5053<5077	M04 TO H05	*Call
2098		5053<5078	M05 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5053<5079	N01 TO H05	*Call
2098		5053<5080	N02 TO H05	*Call
2098		5053<5081	N03 TO H05	*Call
2098		5053<5082	N04 TO H05	*Call
2098		5053<5083	N05 TO H05	*Call
2098		5053<5084	O01 TO H05	*Call
2098		5053<5085	O02 TO H05	*Call
2098		5053<5086	O03 TO H05	*Call
2098		5053<5087	O04 TO H05	*Call
2098		5053<5088	O05 TO H05	*Call
2098		5053<5089	P01 TO H05	*Call
2098		5053<5090	P02 TO H05	*Call
2098		5053<5091	P03 TO H05	*Call
2098		5053<5092	P04 TO H05	*Call
2098		5053<5093	P05 TO H05	*Call
2098		5053<5094	Q01 TO H05	*Call
2098		5053<5095	Q02 TO H05	*Call
2098		5053<5096	Q03 TO H05	*Call
2098		5053<5097	Q04 TO H05	*Call
2098		5053<5098	Q05 TO H05	*Call
2098		5053<5099	R01 TO H05	*Call
2098		5053<5100	R02 TO H05	*Call
2098		5053<5101	R03 TO H05	*Call
2098		5053<5102	R04 TO H05	*Call
2098		5053<5103	R05 TO H05	*Call
2098		5053<5104	S01 TO H05	*Call
2098		5053<5105	S02 TO H05	*Call
2098		5053<5106	S03 TO H05	*Call
2098		5053<5107	S04 TO H05	*Call
2098		5053<5108	S05 TO H05	*Call
2098		5053<5109	T01 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5053<5110	T02 TO H05	*Call
2098		5053<5111	T03 TO H05	*Call
2098		5053<5112	T04 TO H05	*Call
2098		5053<5113	T05 TO H05	*Call
2098		5053<5114	U01 TO H05	*Call
2098		5053<5115	U02 TO H05	*Call
2098		5053<5116	U03 TO H05	*Call
2098		5053<5117	U04 TO H05	*Call
2098		5053<5118	U05 TO H05	*Call
2098		5053<5119	V01 TO H05	*Call
2098		5053<5120	V02 TO H05	*Call
2098		5053<5121	V03 TO H05	*Call
2098		5053<5122	V04 TO H05	*Call
2098		5053<5123	V05 TO H05	*Call
2098		5053<5124	W01 TO H05	*Call
2098		5053<5125	W02 TO H05	*Call
2098		5053<5126	W03 TO H05	*Call
2098		5053<5127	W04 TO H05	*Call
2098		5053<5128	W05 TO H05	*Call
2098		5053<5129	X01 TO H05	*Call
2098		5053<5130	X02 TO H05	*Call
2098		5053<5131	X03 TO H05	*Call
2098		5053<5132	X04 TO H05	*Call
2098		5053<5133	X05 TO H05	*Call
2098		5053<5134	Y01 TO H05	*Call
2098		5053<5135	Y02 TO H05	*Call
2098		5053<5136	Y03 TO H05	*Call
2098		5053<5137	Y04 TO H05	*Call
2098		5053<5138	Y05 TO H05	*Call
2098		5053<5139	Z01 TO H05	*Call
2098		5053<5140	Z02 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5053<5141	Z03 TO H05	*Call
2098		5053<5142	Z04 TO H05	*Call
2098		5053<5143	Z05 TO H05	*Call
2098		5054<5013	A00 TO I01	*Call
2098		5054<5014	A01 TO I01	*Call
2098		5054<5015	A02 TO I01	*Call
2098		5054<5016	A03 TO I01	*Call
2098		5054<5017	A04 TO I01	*Call
2098		5054<5018	A05 TO I01	*Call
2098		5054<5019	B01 TO I01	*Call
2098		5054<5020	B02 TO I01	*Call
2098		5054<5021	B03 TO I01	*Call
2098		5054<5022	B04 TO I01	*Call
2098		5054<5023	B05 TO I01	*Call
2098		5054<5024	C01 TO I01	*Call
2098		5054<5025	C02 TO I01	*Call
2098		5054<5026	C03 TO I01	*Call
2098		5054<5027	C04 TO I01	*Call
2098		5054<5028	C05 TO I01	*Call
2098		5054<5029	D01 TO I01	*Call
2098		5054<5030	D02 TO I01	*Call
2098		5054<5031	D03 TO I01	*Call
2098		5054<5032	D04 TO I01	*Call
2098		5054<5033	D05 TO I01	*Call
2098		5054<5034	E01 TO I01	*Call
2098		5054<5035	E02 TO I01	*Call
2098		5054<5036	E03 TO I01	*Call
2098		5054<5037	E04 TO I01	*Call
2098		5054<5038	E05 TO I01	*Call
2098		5054<5039	F01 TO I01	*Call
2098		5054<5040	F02 TO I01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5054<5041	F03 TO I01	*Call
2098		5054<5042	F04 TO I01	*Call
2098		5054<5043	F05 TO I01	*Call
2098		5054<5044	G01 TO I01	*Call
2098		5054<5045	G02 TO I01	*Call
2098		5054<5046	G03 TO I01	*Call
2098		5054<5047	G04 TO I01	*Call
2098		5054<5048	G05 TO I01	*Call
2098		5054<5049	H01 TO I01	*Call
2098		5054<5050	H02 TO I01	*Call
2098		5054<5051	H03 TO I01	*Call
2098		5054<5052	H04 TO I01	*Call
2098		5054<5053	H05 TO I01	*Call
2098		5054<5055	I02 TO I01	*Call
2098		5054<5056	I03 TO I01	*Call
2098		5054<5057	I04 TO I01	*Call
2098		5054<5058	I05 TO I01	*Call
2098		5054<5059	J01 TO I01	*Call
2098		5054<5060	J02 TO I01	*Call
2098		5054<5061	J03 TO I01	*Call
2098		5054<5062	J04 TO I01	*Call
2098		5054<5063	J05 TO I01	*Call
2098		5054<5064	K01 TO I01	*Call
2098		5054<5065	K02 TO I01	*Call
2098		5054<5066	K03 TO I01	*Call
2098		5054<5067	K04 TO I01	*Call
2098		5054<5068	K05 TO I01	*Call
2098		5054<5069	L01 TO I01	*Call
2098		5054<5070	L02 TO I01	*Call
2098		5054<5071	L03 TO I01	*Call
2098		5054<5072	L04 TO I01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5054<5073	L05 TO I01	*Call
2098		5054<5074	M01 TO I01	*Call
2098		5054<5075	M02 TO I01	*Call
2098		5054<5076	M03 TO I01	*Call
2098		5054<5077	M04 TO I01	*Call
2098		5054<5078	M05 TO I01	*Call
2098		5054<5079	N01 TO I01	*Call
2098		5054<5080	N02 TO I01	*Call
2098		5054<5081	N03 TO I01	*Call
2098		5054<5082	N04 TO I01	*Call
2098		5054<5083	N05 TO I01	*Call
2098		5054<5084	O01 TO I01	*Call
2098		5054<5085	O02 TO I01	*Call
2098		5054<5086	O03 TO I01	*Call
2098		5054<5087	O04 TO I01	*Call
2098		5054<5088	O05 TO I01	*Call
2098		5054<5089	P01 TO I01	*Call
2098		5054<5090	P02 TO I01	*Call
2098		5054<5091	P03 TO I01	*Call
2098		5054<5092	P04 TO I01	*Call
2098		5054<5093	P05 TO I01	*Call
2098		5054<5094	Q01 TO I01	*Call
2098		5054<5095	Q02 TO I01	*Call
2098		5054<5096	Q03 TO I01	*Call
2098		5054<5097	Q04 TO I01	*Call
2098		5054<5098	Q05 TO I01	*Call
2098		5054<5099	R01 TO I01	*Call
2098		5054<5100	R02 TO I01	*Call
2098		5054<5101	R03 TO I01	*Call
2098		5054<5102	R04 TO I01	*Call
2098		5054<5103	R05 TO I01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5054<5104	S01 TO I01	*Call
2098		5054<5105	S02 TO I01	*Call
2098		5054<5106	S03 TO I01	*Call
2098		5054<5107	S04 TO I01	*Call
2098		5054<5108	S05 TO I01	*Call
2098		5054<5109	T01 TO I01	*Call
2098		5054<5110	T02 TO I01	*Call
2098		5054<5111	T03 TO I01	*Call
2098		5054<5112	T04 TO I01	*Call
2098		5054<5113	T05 TO I01	*Call
2098		5054<5114	U01 TO I01	*Call
2098		5054<5115	U02 TO I01	*Call
2098		5054<5116	U03 TO I01	*Call
2098		5054<5117	U04 TO I01	*Call
2098		5054<5118	U05 TO I01	*Call
2098		5054<5119	V01 TO I01	*Call
2098		5054<5120	V02 TO I01	*Call
2098		5054<5121	V03 TO I01	*Call
2098		5054<5122	V04 TO I01	*Call
2098		5054<5123	V05 TO I01	*Call
2098		5054<5124	W01 TO I01	*Call
2098		5054<5125	W02 TO I01	*Call
2098		5054<5126	W03 TO I01	*Call
2098		5054<5127	W04 TO I01	*Call
2098		5054<5128	W05 TO I01	*Call
2098		5054<5129	X01 TO I01	*Call
2098		5054<5130	X02 TO I01	*Call
2098		5054<5131	X03 TO I01	*Call
2098		5054<5132	X04 TO I01	*Call
2098		5054<5133	X05 TO I01	*Call
2098		5054<5134	Y01 TO I01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5054<5135	Y02 TO I01	*Call
2098		5054<5136	Y03 TO I01	*Call
2098		5054<5137	Y04 TO I01	*Call
2098		5054<5138	Y05 TO I01	*Call
2098		5054<5139	Z01 TO I01	*Call
2098		5054<5140	Z02 TO I01	*Call
2098		5054<5141	Z03 TO I01	*Call
2098		5054<5142	Z04 TO I01	*Call
2098		5054<5143	Z05 TO I01	*Call
2098		5055<5013	A00 TO I02	*Call
2098		5055<5014	A01 TO I02	*Call
2098		5055<5015	A02 TO I02	*Call
2098		5055<5016	A03 TO I02	*Call
2098		5055<5017	A04 TO I02	*Call
2098		5055<5018	A05 TO I02	*Call
2098		5055<5019	B01 TO I02	*Call
2098		5055<5020	B02 TO I02	*Call
2098		5055<5021	B03 TO I02	*Call
2098		5055<5022	B04 TO I02	*Call
2098		5055<5023	B05 TO I02	*Call
2098		5055<5024	C01 TO I02	*Call
2098		5055<5025	C02 TO I02	*Call
2098		5055<5026	C03 TO I02	*Call
2098		5055<5027	C04 TO I02	*Call
2098		5055<5028	C05 TO I02	*Call
2098		5055<5029	D01 TO I02	*Call
2098		5055<5030	D02 TO I02	*Call
2098		5055<5031	D03 TO I02	*Call
2098		5055<5032	D04 TO I02	*Call
2098		5055<5033	D05 TO I02	*Call
2098		5055<5034	E01 TO I02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5055<5035	E02 TO I02	*Call
2098		5055<5036	E03 TO I02	*Call
2098		5055<5037	E04 TO I02	*Call
2098		5055<5038	E05 TO I02	*Call
2098		5055<5039	F01 TO I02	*Call
2098		5055<5040	F02 TO I02	*Call
2098		5055<5041	F03 TO I02	*Call
2098		5055<5042	F04 TO I02	*Call
2098		5055<5043	F05 TO I02	*Call
2098		5055<5044	G01 TO I02	*Call
2098		5055<5045	G02 TO I02	*Call
2098		5055<5046	G03 TO I02	*Call
2098		5055<5047	G04 TO I02	*Call
2098		5055<5048	G05 TO I02	*Call
2098		5055<5049	H01 TO I02	*Call
2098		5055<5050	H02 TO I02	*Call
2098		5055<5051	H03 TO I02	*Call
2098		5055<5052	H04 TO I02	*Call
2098		5055<5053	H05 TO I02	*Call
2098		5055<5054	I01 TO I02	*Call
2098		5055<5056	I03 TO I02	*Call
2098		5055<5057	I04 TO I02	*Call
2098		5055<5058	I05 TO I02	*Call
2098		5055<5059	J01 TO I02	*Call
2098		5055<5060	J02 TO I02	*Call
2098		5055<5061	J03 TO I02	*Call
2098		5055<5062	J04 TO I02	*Call
2098		5055<5063	J05 TO I02	*Call
2098		5055<5064	K01 TO I02	*Call
2098		5055<5065	K02 TO I02	*Call
2098		5055<5066	K03 TO I02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5055<5067	K04 TO I02	*Call
2098		5055<5068	K05 TO I02	*Call
2098		5055<5069	L01 TO I02	*Call
2098		5055<5070	L02 TO I02	*Call
2098		5055<5071	L03 TO I02	*Call
2098		5055<5072	L04 TO I02	*Call
2098		5055<5073	L05 TO I02	*Call
2098		5055<5074	M01 TO I02	*Call
2098		5055<5075	M02 TO I02	*Call
2098		5055<5076	M03 TO I02	*Call
2098		5055<5077	M04 TO I02	*Call
2098		5055<5078	M05 TO I02	*Call
2098		5055<5079	N01 TO I02	*Call
2098		5055<5080	N02 TO I02	*Call
2098		5055<5081	N03 TO I02	*Call
2098		5055<5082	N04 TO I02	*Call
2098		5055<5083	N05 TO I02	*Call
2098		5055<5084	O01 TO I02	*Call
2098		5055<5085	O02 TO I02	*Call
2098		5055<5086	O03 TO I02	*Call
2098		5055<5087	O04 TO I02	*Call
2098		5055<5088	O05 TO I02	*Call
2098		5055<5089	P01 TO I02	*Call
2098		5055<5090	P02 TO I02	*Call
2098		5055<5091	P03 TO I02	*Call
2098		5055<5092	P04 TO I02	*Call
2098		5055<5093	P05 TO I02	*Call
2098		5055<5094	Q01 TO I02	*Call
2098		5055<5095	Q02 TO I02	*Call
2098		5055<5096	Q03 TO I02	*Call
2098		5055<5097	Q04 TO I02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5055<5098	Q05 TO I02	*Call
2098		5055<5099	R01 TO I02	*Call
2098		5055<5100	R02 TO I02	*Call
2098		5055<5101	R03 TO I02	*Call
2098		5055<5102	R04 TO I02	*Call
2098		5055<5103	R05 TO I02	*Call
2098		5055<5104	S01 TO I02	*Call
2098		5055<5105	S02 TO I02	*Call
2098		5055<5106	S03 TO I02	*Call
2098		5055<5107	S04 TO I02	*Call
2098		5055<5108	S05 TO I02	*Call
2098		5055<5109	T01 TO I02	*Call
2098		5055<5110	T02 TO I02	*Call
2098		5055<5111	T03 TO I02	*Call
2098		5055<5112	T04 TO I02	*Call
2098		5055<5113	T05 TO I02	*Call
2098		5055<5114	U01 TO I02	*Call
2098		5055<5115	U02 TO I02	*Call
2098		5055<5116	U03 TO I02	*Call
2098		5055<5117	U04 TO I02	*Call
2098		5055<5118	U05 TO I02	*Call
2098		5055<5119	V01 TO I02	*Call
2098		5055<5120	V02 TO I02	*Call
2098		5055<5121	V03 TO I02	*Call
2098		5055<5122	V04 TO I02	*Call
2098		5055<5123	V05 TO I02	*Call
2098		5055<5124	W01 TO I02	*Call
2098		5055<5125	W02 TO I02	*Call
2098		5055<5126	W03 TO I02	*Call
2098		5055<5127	W04 TO I02	*Call
2098		5055<5128	W05 TO I02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5055<5129	X01 TO I02	*Call
2098		5055<5130	X02 TO I02	*Call
2098		5055<5131	X03 TO I02	*Call
2098		5055<5132	X04 TO I02	*Call
2098		5055<5133	X05 TO I02	*Call
2098		5055<5134	Y01 TO I02	*Call
2098		5055<5135	Y02 TO I02	*Call
2098		5055<5136	Y03 TO I02	*Call
2098		5055<5137	Y04 TO I02	*Call
2098		5055<5138	Y05 TO I02	*Call
2098		5055<5139	Z01 TO I02	*Call
2098		5055<5140	Z02 TO I02	*Call
2098		5055<5141	Z03 TO I02	*Call
2098		5055<5142	Z04 TO I02	*Call
2098		5055<5143	Z05 TO I02	*Call
2098		5056<5013	A00 TO I03	*Call
2098		5056<5014	A01 TO I03	*Call
2098		5056<5015	A02 TO I03	*Call
2098		5056<5016	A03 TO I03	*Call
2098		5056<5017	A04 TO I03	*Call
2098		5056<5018	A05 TO I03	*Call
2098		5056<5019	B01 TO I03	*Call
2098		5056<5020	B02 TO I03	*Call
2098		5056<5021	B03 TO I03	*Call
2098		5056<5022	B04 TO I03	*Call
2098		5056<5023	B05 TO I03	*Call
2098		5056<5024	C01 TO I03	*Call
2098		5056<5025	C02 TO I03	*Call
2098		5056<5026	C03 TO I03	*Call
2098		5056<5027	C04 TO I03	*Call
2098		5056<5028	C05 TO I03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5056<5029	D01 TO I03	*Call
2098		5056<5030	D02 TO I03	*Call
2098		5056<5031	D03 TO I03	*Call
2098		5056<5032	D04 TO I03	*Call
2098		5056<5033	D05 TO I03	*Call
2098		5056<5034	E01 TO I03	*Call
2098		5056<5035	E02 TO I03	*Call
2098		5056<5036	E03 TO I03	*Call
2098		5056<5037	E04 TO I03	*Call
2098		5056<5038	E05 TO I03	*Call
2098		5056<5039	F01 TO I03	*Call
2098		5056<5040	F02 TO I03	*Call
2098		5056<5041	F03 TO I03	*Call
2098		5056<5042	F04 TO I03	*Call
2098		5056<5043	F05 TO I03	*Call
2098		5056<5044	G01 TO I03	*Call
2098		5056<5045	G02 TO I03	*Call
2098		5056<5046	G03 TO I03	*Call
2098		5056<5047	G04 TO I03	*Call
2098		5056<5048	G05 TO I03	*Call
2098		5056<5049	H01 TO I03	*Call
2098		5056<5050	H02 TO I03	*Call
2098		5056<5051	H03 TO I03	*Call
2098		5056<5052	H04 TO I03	*Call
2098		5056<5053	H05 TO I03	*Call
2098		5056<5054	I01 TO I03	*Call
2098		5056<5055	I02 TO I03	*Call
2098		5056<5057	I04 TO I03	*Call
2098		5056<5058	I05 TO I03	*Call
2098		5056<5059	J01 TO I03	*Call
2098		5056<5060	J02 TO I03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5056<5061	J03 TO I03	*Call
2098		5056<5062	J04 TO I03	*Call
2098		5056<5063	J05 TO I03	*Call
2098		5056<5064	K01 TO I03	*Call
2098		5056<5065	K02 TO I03	*Call
2098		5056<5066	K03 TO I03	*Call
2098		5056<5067	K04 TO I03	*Call
2098		5056<5068	K05 TO I03	*Call
2098		5056<5069	L01 TO I03	*Call
2098		5056<5070	L02 TO I03	*Call
2098		5056<5071	L03 TO I03	*Call
2098		5056<5072	L04 TO I03	*Call
2098		5056<5073	L05 TO I03	*Call
2098		5056<5074	M01 TO I03	*Call
2098		5056<5075	M02 TO I03	*Call
2098		5056<5076	M03 TO I03	*Call
2098		5056<5077	M04 TO I03	*Call
2098		5056<5078	M05 TO I03	*Call
2098		5056<5079	N01 TO I03	*Call
2098		5056<5080	N02 TO I03	*Call
2098		5056<5081	N03 TO I03	*Call
2098		5056<5082	N04 TO I03	*Call
2098		5056<5083	N05 TO I03	*Call
2098		5056<5084	O01 TO I03	*Call
2098		5056<5085	O02 TO I03	*Call
2098		5056<5086	O03 TO I03	*Call
2098		5056<5087	O04 TO I03	*Call
2098		5056<5088	O05 TO I03	*Call
2098		5056<5089	P01 TO I03	*Call
2098		5056<5090	P02 TO I03	*Call
2098		5056<5091	P03 TO I03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5056<5092	P04 TO I03	*Call
2098		5056<5093	P05 TO I03	*Call
2098		5056<5094	Q01 TO I03	*Call
2098		5056<5095	Q02 TO I03	*Call
2098		5056<5096	Q03 TO I03	*Call
2098		5056<5097	Q04 TO I03	*Call
2098		5056<5098	Q05 TO I03	*Call
2098		5056<5099	R01 TO I03	*Call
2098		5056<5100	R02 TO I03	*Call
2098		5056<5101	R03 TO I03	*Call
2098		5056<5102	R04 TO I03	*Call
2098		5056<5103	R05 TO I03	*Call
2098		5056<5104	S01 TO I03	*Call
2098		5056<5105	S02 TO I03	*Call
2098		5056<5106	S03 TO I03	*Call
2098		5056<5107	S04 TO I03	*Call
2098		5056<5108	S05 TO I03	*Call
2098		5056<5109	T01 TO I03	*Call
2098		5056<5110	T02 TO I03	*Call
2098		5056<5111	T03 TO I03	*Call
2098		5056<5112	T04 TO I03	*Call
2098		5056<5113	T05 TO I03	*Call
2098		5056<5114	U01 TO I03	*Call
2098		5056<5115	U02 TO I03	*Call
2098		5056<5116	U03 TO I03	*Call
2098		5056<5117	U04 TO I03	*Call
2098		5056<5118	U05 TO I03	*Call
2098		5056<5119	V01 TO I03	*Call
2098		5056<5120	V02 TO I03	*Call
2098		5056<5121	V03 TO I03	*Call
2098		5056<5122	V04 TO I03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5056<5123	V05 TO I03	*Call
2098		5056<5124	W01 TO I03	*Call
2098		5056<5125	W02 TO I03	*Call
2098		5056<5126	W03 TO I03	*Call
2098		5056<5127	W04 TO I03	*Call
2098		5056<5128	W05 TO I03	*Call
2098		5056<5129	X01 TO I03	*Call
2098		5056<5130	X02 TO I03	*Call
2098		5056<5131	X03 TO I03	*Call
2098		5056<5132	X04 TO I03	*Call
2098		5056<5133	X05 TO I03	*Call
2098		5056<5134	Y01 TO I03	*Call
2098		5056<5135	Y02 TO I03	*Call
2098		5056<5136	Y03 TO I03	*Call
2098		5056<5137	Y04 TO I03	*Call
2098		5056<5138	Y05 TO I03	*Call
2098		5056<5139	Z01 TO I03	*Call
2098		5056<5140	Z02 TO I03	*Call
2098		5056<5141	Z03 TO I03	*Call
2098		5056<5142	Z04 TO I03	*Call
2098		5056<5143	Z05 TO I03	*Call
2098		5057<5013	A00 TO I04	*Call
2098		5057<5014	A01 TO I04	*Call
2098		5057<5015	A02 TO I04	*Call
2098		5057<5016	A03 TO I04	*Call
2098		5057<5017	A04 TO I04	*Call
2098		5057<5018	A05 TO I04	*Call
2098		5057<5019	B01 TO I04	*Call
2098		5057<5020	B02 TO I04	*Call
2098		5057<5021	B03 TO I04	*Call
2098		5057<5022	B04 TO I04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5057<5023	B05 TO I04	*Call
2098		5057<5024	C01 TO I04	*Call
2098		5057<5025	C02 TO I04	*Call
2098		5057<5026	C03 TO I04	*Call
2098		5057<5027	C04 TO I04	*Call
2098		5057<5028	C05 TO I04	*Call
2098		5057<5029	D01 TO I04	*Call
2098		5057<5030	D02 TO I04	*Call
2098		5057<5031	D03 TO I04	*Call
2098		5057<5032	D04 TO I04	*Call
2098		5057<5033	D05 TO I04	*Call
2098		5057<5034	E01 TO I04	*Call
2098		5057<5035	E02 TO I04	*Call
2098		5057<5036	E03 TO I04	*Call
2098		5057<5037	E04 TO I04	*Call
2098		5057<5038	E05 TO I04	*Call
2098		5057<5039	F01 TO I04	*Call
2098		5057<5040	F02 TO I04	*Call
2098		5057<5041	F03 TO I04	*Call
2098		5057<5042	F04 TO I04	*Call
2098		5057<5043	F05 TO I04	*Call
2098		5057<5044	G01 TO I04	*Call
2098		5057<5045	G02 TO I04	*Call
2098		5057<5046	G03 TO I04	*Call
2098		5057<5047	G04 TO I04	*Call
2098		5057<5048	G05 TO I04	*Call
2098		5057<5049	H01 TO I04	*Call
2098		5057<5050	H02 TO I04	*Call
2098		5057<5051	H03 TO I04	*Call
2098		5057<5052	H04 TO I04	*Call
2098		5057<5053	H05 TO I04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5057<5054	I01 TO I04	*Call
2098		5057<5055	I02 TO I04	*Call
2098		5057<5056	I03 TO I04	*Call
2098		5057<5058	I05 TO I04	*Call
2098		5057<5059	J01 TO I04	*Call
2098		5057<5060	J02 TO I04	*Call
2098		5057<5061	J03 TO I04	*Call
2098		5057<5062	J04 TO I04	*Call
2098		5057<5063	J05 TO I04	*Call
2098		5057<5064	K01 TO I04	*Call
2098		5057<5065	K02 TO I04	*Call
2098		5057<5066	K03 TO I04	*Call
2098		5057<5067	K04 TO I04	*Call
2098		5057<5068	K05 TO I04	*Call
2098		5057<5069	L01 TO I04	*Call
2098		5057<5070	L02 TO I04	*Call
2098		5057<5071	L03 TO I04	*Call
2098		5057<5072	L04 TO I04	*Call
2098		5057<5073	L05 TO I04	*Call
2098		5057<5074	M01 TO I04	*Call
2098		5057<5075	M02 TO I04	*Call
2098		5057<5076	M03 TO I04	*Call
2098		5057<5077	M04 TO I04	*Call
2098		5057<5078	M05 TO I04	*Call
2098		5057<5079	N01 TO I04	*Call
2098		5057<5080	N02 TO I04	*Call
2098		5057<5081	N03 TO I04	*Call
2098		5057<5082	N04 TO I04	*Call
2098		5057<5083	N05 TO I04	*Call
2098		5057<5084	O01 TO I04	*Call
2098		5057<5085	O02 TO I04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5057<5086	O03 TO I04	*Call
2098		5057<5087	O04 TO I04	*Call
2098		5057<5088	O05 TO I04	*Call
2098		5057<5089	P01 TO I04	*Call
2098		5057<5090	P02 TO I04	*Call
2098		5057<5091	P03 TO I04	*Call
2098		5057<5092	P04 TO I04	*Call
2098		5057<5093	P05 TO I04	*Call
2098		5057<5094	Q01 TO I04	*Call
2098		5057<5095	Q02 TO I04	*Call
2098		5057<5096	Q03 TO I04	*Call
2098		5057<5097	Q04 TO I04	*Call
2098		5057<5098	Q05 TO I04	*Call
2098		5057<5099	R01 TO I04	*Call
2098		5057<5100	R02 TO I04	*Call
2098		5057<5101	R03 TO I04	*Call
2098		5057<5102	R04 TO I04	*Call
2098		5057<5103	R05 TO I04	*Call
2098		5057<5104	S01 TO I04	*Call
2098		5057<5105	S02 TO I04	*Call
2098		5057<5106	S03 TO I04	*Call
2098		5057<5107	S04 TO I04	*Call
2098		5057<5108	S05 TO I04	*Call
2098		5057<5109	T01 TO I04	*Call
2098		5057<5110	T02 TO I04	*Call
2098		5057<5111	T03 TO I04	*Call
2098		5057<5112	T04 TO I04	*Call
2098		5057<5113	T05 TO I04	*Call
2098		5057<5114	U01 TO I04	*Call
2098		5057<5115	U02 TO I04	*Call
2098		5057<5116	U03 TO I04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5057<5117	U04 TO I04	*Call
2098		5057<5118	U05 TO I04	*Call
2098		5057<5119	V01 TO I04	*Call
2098		5057<5120	V02 TO I04	*Call
2098		5057<5121	V03 TO I04	*Call
2098		5057<5122	V04 TO I04	*Call
2098		5057<5123	V05 TO I04	*Call
2098		5057<5124	W01 TO I04	*Call
2098		5057<5125	W02 TO I04	*Call
2098		5057<5126	W03 TO I04	*Call
2098		5057<5127	W04 TO I04	*Call
2098		5057<5128	W05 TO I04	*Call
2098		5057<5129	X01 TO I04	*Call
2098		5057<5130	X02 TO I04	*Call
2098		5057<5131	X03 TO I04	*Call
2098		5057<5132	X04 TO I04	*Call
2098		5057<5133	X05 TO I04	*Call
2098		5057<5134	Y01 TO I04	*Call
2098		5057<5135	Y02 TO I04	*Call
2098		5057<5136	Y03 TO I04	*Call
2098		5057<5137	Y04 TO I04	*Call
2098		5057<5138	Y05 TO I04	*Call
2098		5057<5139	Z01 TO I04	*Call
2098		5057<5140	Z02 TO I04	*Call
2098		5057<5141	Z03 TO I04	*Call
2098		5057<5142	Z04 TO I04	*Call
2098		5057<5143	Z05 TO I04	*Call
2098		5058<5013	A00 TO I05	*Call
2098		5058<5014	A01 TO I05	*Call
2098		5058<5015	A02 TO I05	*Call
2098		5058<5016	A03 TO I05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5058<5017	A04 TO I05	*Call
2098		5058<5018	A05 TO I05	*Call
2098		5058<5019	B01 TO I05	*Call
2098		5058<5020	B02 TO I05	*Call
2098		5058<5021	B03 TO I05	*Call
2098		5058<5022	B04 TO I05	*Call
2098		5058<5023	B05 TO I05	*Call
2098		5058<5024	C01 TO I05	*Call
2098		5058<5025	C02 TO I05	*Call
2098		5058<5026	C03 TO I05	*Call
2098		5058<5027	C04 TO I05	*Call
2098		5058<5028	C05 TO I05	*Call
2098		5058<5029	D01 TO I05	*Call
2098		5058<5030	D02 TO I05	*Call
2098		5058<5031	D03 TO I05	*Call
2098		5058<5032	D04 TO I05	*Call
2098		5058<5033	D05 TO I05	*Call
2098		5058<5034	E01 TO I05	*Call
2098		5058<5035	E02 TO I05	*Call
2098		5058<5036	E03 TO I05	*Call
2098		5058<5037	E04 TO I05	*Call
2098		5058<5038	E05 TO I05	*Call
2098		5058<5039	F01 TO I05	*Call
2098		5058<5040	F02 TO I05	*Call
2098		5058<5041	F03 TO I05	*Call
2098		5058<5042	F04 TO I05	*Call
2098		5058<5043	F05 TO I05	*Call
2098		5058<5044	G01 TO I05	*Call
2098		5058<5045	G02 TO I05	*Call
2098		5058<5046	G03 TO I05	*Call
2098		5058<5047	G04 TO I05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5058<5048	G05 TO I05	*Call
2098		5058<5049	H01 TO I05	*Call
2098		5058<5050	H02 TO I05	*Call
2098		5058<5051	H03 TO I05	*Call
2098		5058<5052	H04 TO I05	*Call
2098		5058<5053	H05 TO I05	*Call
2098		5058<5054	I01 TO I05	*Call
2098		5058<5055	I02 TO I05	*Call
2098		5058<5056	I03 TO I05	*Call
2098		5058<5057	I04 TO I05	*Call
2098		5058<5059	J01 TO I05	*Call
2098		5058<5060	J02 TO I05	*Call
2098		5058<5061	J03 TO I05	*Call
2098		5058<5062	J04 TO I05	*Call
2098		5058<5063	J05 TO I05	*Call
2098		5058<5064	K01 TO I05	*Call
2098		5058<5065	K02 TO I05	*Call
2098		5058<5066	K03 TO I05	*Call
2098		5058<5067	K04 TO I05	*Call
2098		5058<5068	K05 TO I05	*Call
2098		5058<5069	L01 TO I05	*Call
2098		5058<5070	L02 TO I05	*Call
2098		5058<5071	L03 TO I05	*Call
2098		5058<5072	L04 TO I05	*Call
2098		5058<5073	L05 TO I05	*Call
2098		5058<5074	M01 TO I05	*Call
2098		5058<5075	M02 TO I05	*Call
2098		5058<5076	M03 TO I05	*Call
2098		5058<5077	M04 TO I05	*Call
2098		5058<5078	M05 TO I05	*Call
2098		5058<5079	N01 TO I05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5058<5080	N02 TO I05	*Call
2098		5058<5081	N03 TO I05	*Call
2098		5058<5082	N04 TO I05	*Call
2098		5058<5083	N05 TO I05	*Call
2098		5058<5084	O01 TO I05	*Call
2098		5058<5085	O02 TO I05	*Call
2098		5058<5086	O03 TO I05	*Call
2098		5058<5087	O04 TO I05	*Call
2098		5058<5088	O05 TO I05	*Call
2098		5058<5089	P01 TO I05	*Call
2098		5058<5090	P02 TO I05	*Call
2098		5058<5091	P03 TO I05	*Call
2098		5058<5092	P04 TO I05	*Call
2098		5058<5093	P05 TO I05	*Call
2098		5058<5094	Q01 TO I05	*Call
2098		5058<5095	Q02 TO I05	*Call
2098		5058<5096	Q03 TO I05	*Call
2098		5058<5097	Q04 TO I05	*Call
2098		5058<5098	Q05 TO I05	*Call
2098		5058<5099	R01 TO I05	*Call
2098		5058<5100	R02 TO I05	*Call
2098		5058<5101	R03 TO I05	*Call
2098		5058<5102	R04 TO I05	*Call
2098		5058<5103	R05 TO I05	*Call
2098		5058<5104	S01 TO I05	*Call
2098		5058<5105	S02 TO I05	*Call
2098		5058<5106	S03 TO I05	*Call
2098		5058<5107	S04 TO I05	*Call
2098		5058<5108	S05 TO I05	*Call
2098		5058<5109	T01 TO I05	*Call
2098		5058<5110	T02 TO I05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5058<5111	T03 TO I05	*Call
2098		5058<5112	T04 TO I05	*Call
2098		5058<5113	T05 TO I05	*Call
2098		5058<5114	U01 TO I05	*Call
2098		5058<5115	U02 TO I05	*Call
2098		5058<5116	U03 TO I05	*Call
2098		5058<5117	U04 TO I05	*Call
2098		5058<5118	U05 TO I05	*Call
2098		5058<5119	V01 TO I05	*Call
2098		5058<5120	V02 TO I05	*Call
2098		5058<5121	V03 TO I05	*Call
2098		5058<5122	V04 TO I05	*Call
2098		5058<5123	V05 TO I05	*Call
2098		5058<5124	W01 TO I05	*Call
2098		5058<5125	W02 TO I05	*Call
2098		5058<5126	W03 TO I05	*Call
2098		5058<5127	W04 TO I05	*Call
2098		5058<5128	W05 TO I05	*Call
2098		5058<5129	X01 TO I05	*Call
2098		5058<5130	X02 TO I05	*Call
2098		5058<5131	X03 TO I05	*Call
2098		5058<5132	X04 TO I05	*Call
2098		5058<5133	X05 TO I05	*Call
2098		5058<5134	Y01 TO I05	*Call
2098		5058<5135	Y02 TO I05	*Call
2098		5058<5136	Y03 TO I05	*Call
2098		5058<5137	Y04 TO I05	*Call
2098		5058<5138	Y05 TO I05	*Call
2098		5058<5139	Z01 TO I05	*Call
2098		5058<5140	Z02 TO I05	*Call
2098		5058<5141	Z03 TO I05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5058<5142	Z04 TO I05	*Call
2098		5058<5143	Z05 TO I05	*Call
2098		5059<5013	A00 TO J01	*Call
2098		5059<5014	A01 TO J01	*Call
2098		5059<5015	A02 TO J01	*Call
2098		5059<5016	A03 TO J01	*Call
2098		5059<5017	A04 TO J01	*Call
2098		5059<5018	A05 TO J01	*Call
2098		5059<5019	B01 TO J01	*Call
2098		5059<5020	B02 TO J01	*Call
2098		5059<5021	B03 TO J01	*Call
2098		5059<5022	B04 TO J01	*Call
2098		5059<5023	B05 TO J01	*Call
2098		5059<5024	C01 TO J01	*Call
2098		5059<5025	C02 TO J01	*Call
2098		5059<5026	C03 TO J01	*Call
2098		5059<5027	C04 TO J01	*Call
2098		5059<5028	C05 TO J01	*Call
2098		5059<5029	D01 TO J01	*Call
2098		5059<5030	D02 TO J01	*Call
2098		5059<5031	D03 TO J01	*Call
2098		5059<5032	D04 TO J01	*Call
2098		5059<5033	D05 TO J01	*Call
2098		5059<5034	E01 TO J01	*Call
2098		5059<5035	E02 TO J01	*Call
2098		5059<5036	E03 TO J01	*Call
2098		5059<5037	E04 TO J01	*Call
2098		5059<5038	E05 TO J01	*Call
2098		5059<5039	F01 TO J01	*Call
2098		5059<5040	F02 TO J01	*Call
2098		5059<5041	F03 TO J01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5059<5042	F04 TO J01	*Call
2098		5059<5043	F05 TO J01	*Call
2098		5059<5044	G01 TO J01	*Call
2098		5059<5045	G02 TO J01	*Call
2098		5059<5046	G03 TO J01	*Call
2098		5059<5047	G04 TO J01	*Call
2098		5059<5048	G05 TO J01	*Call
2098		5059<5049	H01 TO J01	*Call
2098		5059<5050	H02 TO J01	*Call
2098		5059<5051	H03 TO J01	*Call
2098		5059<5052	H04 TO J01	*Call
2098		5059<5053	H05 TO J01	*Call
2098		5059<5054	I01 TO J01	*Call
2098		5059<5055	I02 TO J01	*Call
2098		5059<5056	I03 TO J01	*Call
2098		5059<5057	I04 TO J01	*Call
2098		5059<5058	I05 TO J01	*Call
2098		5059<5060	J02 TO J01	*Call
2098		5059<5061	J03 TO J01	*Call
2098		5059<5062	J04 TO J01	*Call
2098		5059<5063	J05 TO J01	*Call
2098		5059<5064	K01 TO J01	*Call
2098		5059<5065	K02 TO J01	*Call
2098		5059<5066	K03 TO J01	*Call
2098		5059<5067	K04 TO J01	*Call
2098		5059<5068	K05 TO J01	*Call
2098		5059<5069	L01 TO J01	*Call
2098		5059<5070	L02 TO J01	*Call
2098		5059<5071	L03 TO J01	*Call
2098		5059<5072	L04 TO J01	*Call
2098		5059<5073	L05 TO J01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5059<5074	M01 TO J01	*Call
2098		5059<5075	M02 TO J01	*Call
2098		5059<5076	M03 TO J01	*Call
2098		5059<5077	M04 TO J01	*Call
2098		5059<5078	M05 TO J01	*Call
2098		5059<5079	N01 TO J01	*Call
2098		5059<5080	N02 TO J01	*Call
2098		5059<5081	N03 TO J01	*Call
2098		5059<5082	N04 TO J01	*Call
2098		5059<5083	N05 TO J01	*Call
2098		5059<5084	O01 TO J01	*Call
2098		5059<5085	O02 TO J01	*Call
2098		5059<5086	O03 TO J01	*Call
2098		5059<5087	O04 TO J01	*Call
2098		5059<5088	O05 TO J01	*Call
2098		5059<5089	P01 TO J01	*Call
2098		5059<5090	P02 TO J01	*Call
2098		5059<5091	P03 TO J01	*Call
2098		5059<5092	P04 TO J01	*Call
2098		5059<5093	P05 TO J01	*Call
2098		5059<5094	Q01 TO J01	*Call
2098		5059<5095	Q02 TO J01	*Call
2098		5059<5096	Q03 TO J01	*Call
2098		5059<5097	Q04 TO J01	*Call
2098		5059<5098	Q05 TO J01	*Call
2098		5059<5099	R01 TO J01	*Call
2098		5059<5100	R02 TO J01	*Call
2098		5059<5101	R03 TO J01	*Call
2098		5059<5102	R04 TO J01	*Call
2098		5059<5103	R05 TO J01	*Call
2098		5059<5104	S01 TO J01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5059<5105	S02 TO J01	*Call
2098		5059<5106	S03 TO J01	*Call
2098		5059<5107	S04 TO J01	*Call
2098		5059<5108	S05 TO J01	*Call
2098		5059<5109	T01 TO J01	*Call
2098		5059<5110	T02 TO J01	*Call
2098		5059<5111	T03 TO J01	*Call
2098		5059<5112	T04 TO J01	*Call
2098		5059<5113	T05 TO J01	*Call
2098		5059<5114	U01 TO J01	*Call
2098		5059<5115	U02 TO J01	*Call
2098		5059<5116	U03 TO J01	*Call
2098		5059<5117	U04 TO J01	*Call
2098		5059<5118	U05 TO J01	*Call
2098		5059<5119	V01 TO J01	*Call
2098		5059<5120	V02 TO J01	*Call
2098		5059<5121	V03 TO J01	*Call
2098		5059<5122	V04 TO J01	*Call
2098		5059<5123	V05 TO J01	*Call
2098		5059<5124	W01 TO J01	*Call
2098		5059<5125	W02 TO J01	*Call
2098		5059<5126	W03 TO J01	*Call
2098		5059<5127	W04 TO J01	*Call
2098		5059<5128	W05 TO J01	*Call
2098		5059<5129	X01 TO J01	*Call
2098		5059<5130	X02 TO J01	*Call
2098		5059<5131	X03 TO J01	*Call
2098		5059<5132	X04 TO J01	*Call
2098		5059<5133	X05 TO J01	*Call
2098		5059<5134	Y01 TO J01	*Call
2098		5059<5135	Y02 TO J01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5059<5136	Y03 TO J01	*Call
2098		5059<5137	Y04 TO J01	*Call
2098		5059<5138	Y05 TO J01	*Call
2098		5059<5139	Z01 TO J01	*Call
2098		5059<5140	Z02 TO J01	*Call
2098		5059<5141	Z03 TO J01	*Call
2098		5059<5142	Z04 TO J01	*Call
2098		5059<5143	Z05 TO J01	*Call
2098		5060<5013	A00 TO J02	*Call
2098		5060<5014	A01 TO J02	*Call
2098		5060<5015	A02 TO J02	*Call
2098		5060<5016	A03 TO J02	*Call
2098		5060<5017	A04 TO J02	*Call
2098		5060<5018	A05 TO J02	*Call
2098		5060<5019	B01 TO J02	*Call
2098		5060<5020	B02 TO J02	*Call
2098		5060<5021	B03 TO J02	*Call
2098		5060<5022	B04 TO J02	*Call
2098		5060<5023	B05 TO J02	*Call
2098		5060<5024	C01 TO J02	*Call
2098		5060<5025	C02 TO J02	*Call
2098		5060<5026	C03 TO J02	*Call
2098		5060<5027	C04 TO J02	*Call
2098		5060<5028	C05 TO J02	*Call
2098		5060<5029	D01 TO J02	*Call
2098		5060<5030	D02 TO J02	*Call
2098		5060<5031	D03 TO J02	*Call
2098		5060<5032	D04 TO J02	*Call
2098		5060<5033	D05 TO J02	*Call
2098		5060<5034	E01 TO J02	*Call
2098		5060<5035	E02 TO J02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5060<5036	E03 TO J02	*Call
2098		5060<5037	E04 TO J02	*Call
2098		5060<5038	E05 TO J02	*Call
2098		5060<5039	F01 TO J02	*Call
2098		5060<5040	F02 TO J02	*Call
2098		5060<5041	F03 TO J02	*Call
2098		5060<5042	F04 TO J02	*Call
2098		5060<5043	F05 TO J02	*Call
2098		5060<5044	G01 TO J02	*Call
2098		5060<5045	G02 TO J02	*Call
2098		5060<5046	G03 TO J02	*Call
2098		5060<5047	G04 TO J02	*Call
2098		5060<5048	G05 TO J02	*Call
2098		5060<5049	H01 TO J02	*Call
2098		5060<5050	H02 TO J02	*Call
2098		5060<5051	H03 TO J02	*Call
2098		5060<5052	H04 TO J02	*Call
2098		5060<5053	H05 TO J02	*Call
2098		5060<5054	I01 TO J02	*Call
2098		5060<5055	I02 TO J02	*Call
2098		5060<5056	I03 TO J02	*Call
2098		5060<5057	I04 TO J02	*Call
2098		5060<5058	I05 TO J02	*Call
2098		5060<5059	J01 TO J02	*Call
2098		5060<5061	J03 TO J02	*Call
2098		5060<5062	J04 TO J02	*Call
2098		5060<5063	J05 TO J02	*Call
2098		5060<5064	K01 TO J02	*Call
2098		5060<5065	K02 TO J02	*Call
2098		5060<5066	K03 TO J02	*Call
2098		5060<5067	K04 TO J02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5060<5068	K05 TO J02	*Call
2098		5060<5069	L01 TO J02	*Call
2098		5060<5070	L02 TO J02	*Call
2098		5060<5071	L03 TO J02	*Call
2098		5060<5072	L04 TO J02	*Call
2098		5060<5073	L05 TO J02	*Call
2098		5060<5074	M01 TO J02	*Call
2098		5060<5075	M02 TO J02	*Call
2098		5060<5076	M03 TO J02	*Call
2098		5060<5077	M04 TO J02	*Call
2098		5060<5078	M05 TO J02	*Call
2098		5060<5079	N01 TO J02	*Call
2098		5060<5080	N02 TO J02	*Call
2098		5060<5081	N03 TO J02	*Call
2098		5060<5082	N04 TO J02	*Call
2098		5060<5083	N05 TO J02	*Call
2098		5060<5084	O01 TO J02	*Call
2098		5060<5085	O02 TO J02	*Call
2098		5060<5086	O03 TO J02	*Call
2098		5060<5087	O04 TO J02	*Call
2098		5060<5088	O05 TO J02	*Call
2098		5060<5089	P01 TO J02	*Call
2098		5060<5090	P02 TO J02	*Call
2098		5060<5091	P03 TO J02	*Call
2098		5060<5092	P04 TO J02	*Call
2098		5060<5093	P05 TO J02	*Call
2098		5060<5094	Q01 TO J02	*Call
2098		5060<5095	Q02 TO J02	*Call
2098		5060<5096	Q03 TO J02	*Call
2098		5060<5097	Q04 TO J02	*Call
2098		5060<5098	Q05 TO J02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5060<5099	R01 TO J02	*Call
2098		5060<5100	R02 TO J02	*Call
2098		5060<5101	R03 TO J02	*Call
2098		5060<5102	R04 TO J02	*Call
2098		5060<5103	R05 TO J02	*Call
2098		5060<5104	S01 TO J02	*Call
2098		5060<5105	S02 TO J02	*Call
2098		5060<5106	S03 TO J02	*Call
2098		5060<5107	S04 TO J02	*Call
2098		5060<5108	S05 TO J02	*Call
2098		5060<5109	T01 TO J02	*Call
2098		5060<5110	T02 TO J02	*Call
2098		5060<5111	T03 TO J02	*Call
2098		5060<5112	T04 TO J02	*Call
2098		5060<5113	T05 TO J02	*Call
2098		5060<5114	U01 TO J02	*Call
2098		5060<5115	U02 TO J02	*Call
2098		5060<5116	U03 TO J02	*Call
2098		5060<5117	U04 TO J02	*Call
2098		5060<5118	U05 TO J02	*Call
2098		5060<5119	V01 TO J02	*Call
2098		5060<5120	V02 TO J02	*Call
2098		5060<5121	V03 TO J02	*Call
2098		5060<5122	V04 TO J02	*Call
2098		5060<5123	V05 TO J02	*Call
2098		5060<5124	W01 TO J02	*Call
2098		5060<5125	W02 TO J02	*Call
2098		5060<5126	W03 TO J02	*Call
2098		5060<5127	W04 TO J02	*Call
2098		5060<5128	W05 TO J02	*Call
2098		5060<5129	X01 TO J02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5060<5130	X02 TO J02	*Call
2098		5060<5131	X03 TO J02	*Call
2098		5060<5132	X04 TO J02	*Call
2098		5060<5133	X05 TO J02	*Call
2098		5060<5134	Y01 TO J02	*Call
2098		5060<5135	Y02 TO J02	*Call
2098		5060<5136	Y03 TO J02	*Call
2098		5060<5137	Y04 TO J02	*Call
2098		5060<5138	Y05 TO J02	*Call
2098		5060<5139	Z01 TO J02	*Call
2098		5060<5140	Z02 TO J02	*Call
2098		5060<5141	Z03 TO J02	*Call
2098		5060<5142	Z04 TO J02	*Call
2098		5060<5143	Z05 TO J02	*Call
2098		5061<5013	A00 TO J03	*Call
2098		5061<5014	A01 TO J03	*Call
2098		5061<5015	A02 TO J03	*Call
2098		5061<5016	A03 TO J03	*Call
2098		5061<5017	A04 TO J03	*Call
2098		5061<5018	A05 TO J03	*Call
2098		5061<5019	B01 TO J03	*Call
2098		5061<5020	B02 TO J03	*Call
2098		5061<5021	B03 TO J03	*Call
2098		5061<5022	B04 TO J03	*Call
2098		5061<5023	B05 TO J03	*Call
2098		5061<5024	C01 TO J03	*Call
2098		5061<5025	C02 TO J03	*Call
2098		5061<5026	C03 TO J03	*Call
2098		5061<5027	C04 TO J03	*Call
2098		5061<5028	C05 TO J03	*Call
2098		5061<5029	D01 TO J03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5061<5030	D02 TO J03	*Call
2098		5061<5031	D03 TO J03	*Call
2098		5061<5032	D04 TO J03	*Call
2098		5061<5033	D05 TO J03	*Call
2098		5061<5034	E01 TO J03	*Call
2098		5061<5035	E02 TO J03	*Call
2098		5061<5036	E03 TO J03	*Call
2098		5061<5037	E04 TO J03	*Call
2098		5061<5038	E05 TO J03	*Call
2098		5061<5039	F01 TO J03	*Call
2098		5061<5040	F02 TO J03	*Call
2098		5061<5041	F03 TO J03	*Call
2098		5061<5042	F04 TO J03	*Call
2098		5061<5043	F05 TO J03	*Call
2098		5061<5044	G01 TO J03	*Call
2098		5061<5045	G02 TO J03	*Call
2098		5061<5046	G03 TO J03	*Call
2098		5061<5047	G04 TO J03	*Call
2098		5061<5048	G05 TO J03	*Call
2098		5061<5049	H01 TO J03	*Call
2098		5061<5050	H02 TO J03	*Call
2098		5061<5051	H03 TO J03	*Call
2098		5061<5052	H04 TO J03	*Call
2098		5061<5053	H05 TO J03	*Call
2098		5061<5054	I01 TO J03	*Call
2098		5061<5055	I02 TO J03	*Call
2098		5061<5056	I03 TO J03	*Call
2098		5061<5057	I04 TO J03	*Call
2098		5061<5058	I05 TO J03	*Call
2098		5061<5059	J01 TO J03	*Call
2098		5061<5060	J02 TO J03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5061<5062	J04 TO J03	*Call
2098		5061<5063	J05 TO J03	*Call
2098		5061<5064	K01 TO J03	*Call
2098		5061<5065	K02 TO J03	*Call
2098		5061<5066	K03 TO J03	*Call
2098		5061<5067	K04 TO J03	*Call
2098		5061<5068	K05 TO J03	*Call
2098		5061<5069	L01 TO J03	*Call
2098		5061<5070	L02 TO J03	*Call
2098		5061<5071	L03 TO J03	*Call
2098		5061<5072	L04 TO J03	*Call
2098		5061<5073	L05 TO J03	*Call
2098		5061<5074	M01 TO J03	*Call
2098		5061<5075	M02 TO J03	*Call
2098		5061<5076	M03 TO J03	*Call
2098		5061<5077	M04 TO J03	*Call
2098		5061<5078	M05 TO J03	*Call
2098		5061<5079	N01 TO J03	*Call
2098		5061<5080	N02 TO J03	*Call
2098		5061<5081	N03 TO J03	*Call
2098		5061<5082	N04 TO J03	*Call
2098		5061<5083	N05 TO J03	*Call
2098		5061<5084	O01 TO J03	*Call
2098		5061<5085	O02 TO J03	*Call
2098		5061<5086	O03 TO J03	*Call
2098		5061<5087	O04 TO J03	*Call
2098		5061<5088	O05 TO J03	*Call
2098		5061<5089	P01 TO J03	*Call
2098		5061<5090	P02 TO J03	*Call
2098		5061<5091	P03 TO J03	*Call
2098		5061<5092	P04 TO J03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5061<5093	P05 TO J03	*Call
2098		5061<5094	Q01 TO J03	*Call
2098		5061<5095	Q02 TO J03	*Call
2098		5061<5096	Q03 TO J03	*Call
2098		5061<5097	Q04 TO J03	*Call
2098		5061<5098	Q05 TO J03	*Call
2098		5061<5099	R01 TO J03	*Call
2098		5061<5100	R02 TO J03	*Call
2098		5061<5101	R03 TO J03	*Call
2098		5061<5102	R04 TO J03	*Call
2098		5061<5103	R05 TO J03	*Call
2098		5061<5104	S01 TO J03	*Call
2098		5061<5105	S02 TO J03	*Call
2098		5061<5106	S03 TO J03	*Call
2098		5061<5107	S04 TO J03	*Call
2098		5061<5108	S05 TO J03	*Call
2098		5061<5109	T01 TO J03	*Call
2098		5061<5110	T02 TO J03	*Call
2098		5061<5111	T03 TO J03	*Call
2098		5061<5112	T04 TO J03	*Call
2098		5061<5113	T05 TO J03	*Call
2098		5061<5114	U01 TO J03	*Call
2098		5061<5115	U02 TO J03	*Call
2098		5061<5116	U03 TO J03	*Call
2098		5061<5117	U04 TO J03	*Call
2098		5061<5118	U05 TO J03	*Call
2098		5061<5119	V01 TO J03	*Call
2098		5061<5120	V02 TO J03	*Call
2098		5061<5121	V03 TO J03	*Call
2098		5061<5122	V04 TO J03	*Call
2098		5061<5123	V05 TO J03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5061<5124	W01 TO J03	*Call
2098		5061<5125	W02 TO J03	*Call
2098		5061<5126	W03 TO J03	*Call
2098		5061<5127	W04 TO J03	*Call
2098		5061<5128	W05 TO J03	*Call
2098		5061<5129	X01 TO J03	*Call
2098		5061<5130	X02 TO J03	*Call
2098		5061<5131	X03 TO J03	*Call
2098		5061<5132	X04 TO J03	*Call
2098		5061<5133	X05 TO J03	*Call
2098		5061<5134	Y01 TO J03	*Call
2098		5061<5135	Y02 TO J03	*Call
2098		5061<5136	Y03 TO J03	*Call
2098		5061<5137	Y04 TO J03	*Call
2098		5061<5138	Y05 TO J03	*Call
2098		5061<5139	Z01 TO J03	*Call
2098		5061<5140	Z02 TO J03	*Call
2098		5061<5141	Z03 TO J03	*Call
2098		5061<5142	Z04 TO J03	*Call
2098		5061<5143	Z05 TO J03	*Call
2098		5062<5013	A00 TO J04	*Call
2098		5062<5014	A01 TO J04	*Call
2098		5062<5015	A02 TO J04	*Call
2098		5062<5016	A03 TO J04	*Call
2098		5062<5017	A04 TO J04	*Call
2098		5062<5018	A05 TO J04	*Call
2098		5062<5019	B01 TO J04	*Call
2098		5062<5020	B02 TO J04	*Call
2098		5062<5021	B03 TO J04	*Call
2098		5062<5022	B04 TO J04	*Call
2098		5062<5023	B05 TO J04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5062<5024	C01 TO J04	*Call
2098		5062<5025	C02 TO J04	*Call
2098		5062<5026	C03 TO J04	*Call
2098		5062<5027	C04 TO J04	*Call
2098		5062<5028	C05 TO J04	*Call
2098		5062<5029	D01 TO J04	*Call
2098		5062<5030	D02 TO J04	*Call
2098		5062<5031	D03 TO J04	*Call
2098		5062<5032	D04 TO J04	*Call
2098		5062<5033	D05 TO J04	*Call
2098		5062<5034	E01 TO J04	*Call
2098		5062<5035	E02 TO J04	*Call
2098		5062<5036	E03 TO J04	*Call
2098		5062<5037	E04 TO J04	*Call
2098		5062<5038	E05 TO J04	*Call
2098		5062<5039	F01 TO J04	*Call
2098		5062<5040	F02 TO J04	*Call
2098		5062<5041	F03 TO J04	*Call
2098		5062<5042	F04 TO J04	*Call
2098		5062<5043	F05 TO J04	*Call
2098		5062<5044	G01 TO J04	*Call
2098		5062<5045	G02 TO J04	*Call
2098		5062<5046	G03 TO J04	*Call
2098		5062<5047	G04 TO J04	*Call
2098		5062<5048	G05 TO J04	*Call
2098		5062<5049	H01 TO J04	*Call
2098		5062<5050	H02 TO J04	*Call
2098		5062<5051	H03 TO J04	*Call
2098		5062<5052	H04 TO J04	*Call
2098		5062<5053	H05 TO J04	*Call
2098		5062<5054	I01 TO J04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5062<5055	I02 TO J04	*Call
2098		5062<5056	I03 TO J04	*Call
2098		5062<5057	I04 TO J04	*Call
2098		5062<5058	I05 TO J04	*Call
2098		5062<5059	J01 TO J04	*Call
2098		5062<5060	J02 TO J04	*Call
2098		5062<5061	J03 TO J04	*Call
2098		5062<5063	J05 TO J04	*Call
2098		5062<5064	K01 TO J04	*Call
2098		5062<5065	K02 TO J04	*Call
2098		5062<5066	K03 TO J04	*Call
2098		5062<5067	K04 TO J04	*Call
2098		5062<5068	K05 TO J04	*Call
2098		5062<5069	L01 TO J04	*Call
2098		5062<5070	L02 TO J04	*Call
2098		5062<5071	L03 TO J04	*Call
2098		5062<5072	L04 TO J04	*Call
2098		5062<5073	L05 TO J04	*Call
2098		5062<5074	M01 TO J04	*Call
2098		5062<5075	M02 TO J04	*Call
2098		5062<5076	M03 TO J04	*Call
2098		5062<5077	M04 TO J04	*Call
2098		5062<5078	M05 TO J04	*Call
2098		5062<5079	N01 TO J04	*Call
2098		5062<5080	N02 TO J04	*Call
2098		5062<5081	N03 TO J04	*Call
2098		5062<5082	N04 TO J04	*Call
2098		5062<5083	N05 TO J04	*Call
2098		5062<5084	O01 TO J04	*Call
2098		5062<5085	O02 TO J04	*Call
2098		5062<5086	O03 TO J04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5062<5087	O04 TO J04	*Call
2098		5062<5088	O05 TO J04	*Call
2098		5062<5089	P01 TO J04	*Call
2098		5062<5090	P02 TO J04	*Call
2098		5062<5091	P03 TO J04	*Call
2098		5062<5092	P04 TO J04	*Call
2098		5062<5093	P05 TO J04	*Call
2098		5062<5094	Q01 TO J04	*Call
2098		5062<5095	Q02 TO J04	*Call
2098		5062<5096	Q03 TO J04	*Call
2098		5062<5097	Q04 TO J04	*Call
2098		5062<5098	Q05 TO J04	*Call
2098		5062<5099	R01 TO J04	*Call
2098		5062<5100	R02 TO J04	*Call
2098		5062<5101	R03 TO J04	*Call
2098		5062<5102	R04 TO J04	*Call
2098		5062<5103	R05 TO J04	*Call
2098		5062<5104	S01 TO J04	*Call
2098		5062<5105	S02 TO J04	*Call
2098		5062<5106	S03 TO J04	*Call
2098		5062<5107	S04 TO J04	*Call
2098		5062<5108	S05 TO J04	*Call
2098		5062<5109	T01 TO J04	*Call
2098		5062<5110	T02 TO J04	*Call
2098		5062<5111	T03 TO J04	*Call
2098		5062<5112	T04 TO J04	*Call
2098		5062<5113	T05 TO J04	*Call
2098		5062<5114	U01 TO J04	*Call
2098		5062<5115	U02 TO J04	*Call
2098		5062<5116	U03 TO J04	*Call
2098		5062<5117	U04 TO J04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5062<5118	U05 TO J04	*Call
2098		5062<5119	V01 TO J04	*Call
2098		5062<5120	V02 TO J04	*Call
2098		5062<5121	V03 TO J04	*Call
2098		5062<5122	V04 TO J04	*Call
2098		5062<5123	V05 TO J04	*Call
2098		5062<5124	W01 TO J04	*Call
2098		5062<5125	W02 TO J04	*Call
2098		5062<5126	W03 TO J04	*Call
2098		5062<5127	W04 TO J04	*Call
2098		5062<5128	W05 TO J04	*Call
2098		5062<5129	X01 TO J04	*Call
2098		5062<5130	X02 TO J04	*Call
2098		5062<5131	X03 TO J04	*Call
2098		5062<5132	X04 TO J04	*Call
2098		5062<5133	X05 TO J04	*Call
2098		5062<5134	Y01 TO J04	*Call
2098		5062<5135	Y02 TO J04	*Call
2098		5062<5136	Y03 TO J04	*Call
2098		5062<5137	Y04 TO J04	*Call
2098		5062<5138	Y05 TO J04	*Call
2098		5062<5139	Z01 TO J04	*Call
2098		5062<5140	Z02 TO J04	*Call
2098		5062<5141	Z03 TO J04	*Call
2098		5062<5142	Z04 TO J04	*Call
2098		5062<5143	Z05 TO J04	*Call
2098		5063<5013	A00 TO J05	*Call
2098		5063<5014	A01 TO J05	*Call
2098		5063<5015	A02 TO J05	*Call
2098		5063<5016	A03 TO J05	*Call
2098		5063<5017	A04 TO J05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5063<5018	A05 TO J05	*Call
2098		5063<5019	B01 TO J05	*Call
2098		5063<5020	B02 TO J05	*Call
2098		5063<5021	B03 TO J05	*Call
2098		5063<5022	B04 TO J05	*Call
2098		5063<5023	B05 TO J05	*Call
2098		5063<5024	C01 TO J05	*Call
2098		5063<5025	C02 TO J05	*Call
2098		5063<5026	C03 TO J05	*Call
2098		5063<5027	C04 TO J05	*Call
2098		5063<5028	C05 TO J05	*Call
2098		5063<5029	D01 TO J05	*Call
2098		5063<5030	D02 TO J05	*Call
2098		5063<5031	D03 TO J05	*Call
2098		5063<5032	D04 TO J05	*Call
2098		5063<5033	D05 TO J05	*Call
2098		5063<5034	E01 TO J05	*Call
2098		5063<5035	E02 TO J05	*Call
2098		5063<5036	E03 TO J05	*Call
2098		5063<5037	E04 TO J05	*Call
2098		5063<5038	E05 TO J05	*Call
2098		5063<5039	F01 TO J05	*Call
2098		5063<5040	F02 TO J05	*Call
2098		5063<5041	F03 TO J05	*Call
2098		5063<5042	F04 TO J05	*Call
2098		5063<5043	F05 TO J05	*Call
2098		5063<5044	G01 TO J05	*Call
2098		5063<5045	G02 TO J05	*Call
2098		5063<5046	G03 TO J05	*Call
2098		5063<5047	G04 TO J05	*Call
2098		5063<5048	G05 TO J05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5063<5049	H01 TO J05	*Call
2098		5063<5050	H02 TO J05	*Call
2098		5063<5051	H03 TO J05	*Call
2098		5063<5052	H04 TO J05	*Call
2098		5063<5053	H05 TO J05	*Call
2098		5063<5054	I01 TO J05	*Call
2098		5063<5055	I02 TO J05	*Call
2098		5063<5056	I03 TO J05	*Call
2098		5063<5057	I04 TO J05	*Call
2098		5063<5058	I05 TO J05	*Call
2098		5063<5059	J01 TO J05	*Call
2098		5063<5060	J02 TO J05	*Call
2098		5063<5061	J03 TO J05	*Call
2098		5063<5062	J04 TO J05	*Call
2098		5063<5064	K01 TO J05	*Call
2098		5063<5065	K02 TO J05	*Call
2098		5063<5066	K03 TO J05	*Call
2098		5063<5067	K04 TO J05	*Call
2098		5063<5068	K05 TO J05	*Call
2098		5063<5069	L01 TO J05	*Call
2098		5063<5070	L02 TO J05	*Call
2098		5063<5071	L03 TO J05	*Call
2098		5063<5072	L04 TO J05	*Call
2098		5063<5073	L05 TO J05	*Call
2098		5063<5074	M01 TO J05	*Call
2098		5063<5075	M02 TO J05	*Call
2098		5063<5076	M03 TO J05	*Call
2098		5063<5077	M04 TO J05	*Call
2098		5063<5078	M05 TO J05	*Call
2098		5063<5079	N01 TO J05	*Call
2098		5063<5080	N02 TO J05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5063<5081	N03 TO J05	*Call
2098		5063<5082	N04 TO J05	*Call
2098		5063<5083	N05 TO J05	*Call
2098		5063<5084	O01 TO J05	*Call
2098		5063<5085	O02 TO J05	*Call
2098		5063<5086	O03 TO J05	*Call
2098		5063<5087	O04 TO J05	*Call
2098		5063<5088	O05 TO J05	*Call
2098		5063<5089	P01 TO J05	*Call
2098		5063<5090	P02 TO J05	*Call
2098		5063<5091	P03 TO J05	*Call
2098		5063<5092	P04 TO J05	*Call
2098		5063<5093	P05 TO J05	*Call
2098		5063<5094	Q01 TO J05	*Call
2098		5063<5095	Q02 TO J05	*Call
2098		5063<5096	Q03 TO J05	*Call
2098		5063<5097	Q04 TO J05	*Call
2098		5063<5098	Q05 TO J05	*Call
2098		5063<5099	R01 TO J05	*Call
2098		5063<5100	R02 TO J05	*Call
2098		5063<5101	R03 TO J05	*Call
2098		5063<5102	R04 TO J05	*Call
2098		5063<5103	R05 TO J05	*Call
2098		5063<5104	S01 TO J05	*Call
2098		5063<5105	S02 TO J05	*Call
2098		5063<5106	S03 TO J05	*Call
2098		5063<5107	S04 TO J05	*Call
2098		5063<5108	S05 TO J05	*Call
2098		5063<5109	T01 TO J05	*Call
2098		5063<5110	T02 TO J05	*Call
2098		5063<5111	T03 TO J05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5063<5112	T04 TO J05	*Call
2098		5063<5113	T05 TO J05	*Call
2098		5063<5114	U01 TO J05	*Call
2098		5063<5115	U02 TO J05	*Call
2098		5063<5116	U03 TO J05	*Call
2098		5063<5117	U04 TO J05	*Call
2098		5063<5118	U05 TO J05	*Call
2098		5063<5119	V01 TO J05	*Call
2098		5063<5120	V02 TO J05	*Call
2098		5063<5121	V03 TO J05	*Call
2098		5063<5122	V04 TO J05	*Call
2098		5063<5123	V05 TO J05	*Call
2098		5063<5124	W01 TO J05	*Call
2098		5063<5125	W02 TO J05	*Call
2098		5063<5126	W03 TO J05	*Call
2098		5063<5127	W04 TO J05	*Call
2098		5063<5128	W05 TO J05	*Call
2098		5063<5129	X01 TO J05	*Call
2098		5063<5130	X02 TO J05	*Call
2098		5063<5131	X03 TO J05	*Call
2098		5063<5132	X04 TO J05	*Call
2098		5063<5133	X05 TO J05	*Call
2098		5063<5134	Y01 TO J05	*Call
2098		5063<5135	Y02 TO J05	*Call
2098		5063<5136	Y03 TO J05	*Call
2098		5063<5137	Y04 TO J05	*Call
2098		5063<5138	Y05 TO J05	*Call
2098		5063<5139	Z01 TO J05	*Call
2098		5063<5140	Z02 TO J05	*Call
2098		5063<5141	Z03 TO J05	*Call
2098		5063<5142	Z04 TO J05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5063<5143	Z05 TO J05	*Call
2098		5064<5013	A00 TO K01	*Call
2098		5064<5014	A01 TO K01	*Call
2098		5064<5015	A02 TO K01	*Call
2098		5064<5016	A03 TO K01	*Call
2098		5064<5017	A04 TO K01	*Call
2098		5064<5018	A05 TO K01	*Call
2098		5064<5019	B01 TO K01	*Call
2098		5064<5020	B02 TO K01	*Call
2098		5064<5021	B03 TO K01	*Call
2098		5064<5022	B04 TO K01	*Call
2098		5064<5023	B05 TO K01	*Call
2098		5064<5024	C01 TO K01	*Call
2098		5064<5025	C02 TO K01	*Call
2098		5064<5026	C03 TO K01	*Call
2098		5064<5027	C04 TO K01	*Call
2098		5064<5028	C05 TO K01	*Call
2098		5064<5029	D01 TO K01	*Call
2098		5064<5030	D02 TO K01	*Call
2098		5064<5031	D03 TO K01	*Call
2098		5064<5032	D04 TO K01	*Call
2098		5064<5033	D05 TO K01	*Call
2098		5064<5034	E01 TO K01	*Call
2098		5064<5035	E02 TO K01	*Call
2098		5064<5036	E03 TO K01	*Call
2098		5064<5037	E04 TO K01	*Call
2098		5064<5038	E05 TO K01	*Call
2098		5064<5039	F01 TO K01	*Call
2098		5064<5040	F02 TO K01	*Call
2098		5064<5041	F03 TO K01	*Call
2098		5064<5042	F04 TO K01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5064<5043	F05 TO K01	*Call
2098		5064<5044	G01 TO K01	*Call
2098		5064<5045	G02 TO K01	*Call
2098		5064<5046	G03 TO K01	*Call
2098		5064<5047	G04 TO K01	*Call
2098		5064<5048	G05 TO K01	*Call
2098		5064<5049	H01 TO K01	*Call
2098		5064<5050	H02 TO K01	*Call
2098		5064<5051	H03 TO K01	*Call
2098		5064<5052	H04 TO K01	*Call
2098		5064<5053	H05 TO K01	*Call
2098		5064<5054	I01 TO K01	*Call
2098		5064<5055	I02 TO K01	*Call
2098		5064<5056	I03 TO K01	*Call
2098		5064<5057	I04 TO K01	*Call
2098		5064<5058	I05 TO K01	*Call
2098		5064<5059	J01 TO K01	*Call
2098		5064<5060	J02 TO K01	*Call
2098		5064<5061	J03 TO K01	*Call
2098		5064<5062	J04 TO K01	*Call
2098		5064<5063	J05 TO K01	*Call
2098		5064<5065	K02 TO K01	*Call
2098		5064<5066	K03 TO K01	*Call
2098		5064<5067	K04 TO K01	*Call
2098		5064<5068	K05 TO K01	*Call
2098		5064<5069	L01 TO K01	*Call
2098		5064<5070	L02 TO K01	*Call
2098		5064<5071	L03 TO K01	*Call
2098		5064<5072	L04 TO K01	*Call
2098		5064<5073	L05 TO K01	*Call
2098		5064<5074	M01 TO K01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5064<5075	M02 TO K01	*Call
2098		5064<5076	M03 TO K01	*Call
2098		5064<5077	M04 TO K01	*Call
2098		5064<5078	M05 TO K01	*Call
2098		5064<5079	N01 TO K01	*Call
2098		5064<5080	N02 TO K01	*Call
2098		5064<5081	N03 TO K01	*Call
2098		5064<5082	N04 TO K01	*Call
2098		5064<5083	N05 TO K01	*Call
2098		5064<5084	O01 TO K01	*Call
2098		5064<5085	O02 TO K01	*Call
2098		5064<5086	O03 TO K01	*Call
2098		5064<5087	O04 TO K01	*Call
2098		5064<5088	O05 TO K01	*Call
2098		5064<5089	P01 TO K01	*Call
2098		5064<5090	P02 TO K01	*Call
2098		5064<5091	P03 TO K01	*Call
2098		5064<5092	P04 TO K01	*Call
2098		5064<5093	P05 TO K01	*Call
2098		5064<5094	Q01 TO K01	*Call
2098		5064<5095	Q02 TO K01	*Call
2098		5064<5096	Q03 TO K01	*Call
2098		5064<5097	Q04 TO K01	*Call
2098		5064<5098	Q05 TO K01	*Call
2098		5064<5099	R01 TO K01	*Call
2098		5064<5100	R02 TO K01	*Call
2098		5064<5101	R03 TO K01	*Call
2098		5064<5102	R04 TO K01	*Call
2098		5064<5103	R05 TO K01	*Call
2098		5064<5104	S01 TO K01	*Call
2098		5064<5105	S02 TO K01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5064<5106	S03 TO K01	*Call
2098		5064<5107	S04 TO K01	*Call
2098		5064<5108	S05 TO K01	*Call
2098		5064<5109	T01 TO K01	*Call
2098		5064<5110	T02 TO K01	*Call
2098		5064<5111	T03 TO K01	*Call
2098		5064<5112	T04 TO K01	*Call
2098		5064<5113	T05 TO K01	*Call
2098		5064<5114	U01 TO K01	*Call
2098		5064<5115	U02 TO K01	*Call
2098		5064<5116	U03 TO K01	*Call
2098		5064<5117	U04 TO K01	*Call
2098		5064<5118	U05 TO K01	*Call
2098		5064<5119	V01 TO K01	*Call
2098		5064<5120	V02 TO K01	*Call
2098		5064<5121	V03 TO K01	*Call
2098		5064<5122	V04 TO K01	*Call
2098		5064<5123	V05 TO K01	*Call
2098		5064<5124	W01 TO K01	*Call
2098		5064<5125	W02 TO K01	*Call
2098		5064<5126	W03 TO K01	*Call
2098		5064<5127	W04 TO K01	*Call
2098		5064<5128	W05 TO K01	*Call
2098		5064<5129	X01 TO K01	*Call
2098		5064<5130	X02 TO K01	*Call
2098		5064<5131	X03 TO K01	*Call
2098		5064<5132	X04 TO K01	*Call
2098		5064<5133	X05 TO K01	*Call
2098		5064<5134	Y01 TO K01	*Call
2098		5064<5135	Y02 TO K01	*Call
2098		5064<5136	Y03 TO K01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5064<5137	Y04 TO K01	*Call
2098		5064<5138	Y05 TO K01	*Call
2098		5064<5139	Z01 TO K01	*Call
2098		5064<5140	Z02 TO K01	*Call
2098		5064<5141	Z03 TO K01	*Call
2098		5064<5142	Z04 TO K01	*Call
2098		5064<5143	Z05 TO K01	*Call
2098		5065<5013	A00 TO K02	*Call
2098		5065<5014	A01 TO K02	*Call
2098		5065<5015	A02 TO K02	*Call
2098		5065<5016	A03 TO K02	*Call
2098		5065<5017	A04 TO K02	*Call
2098		5065<5018	A05 TO K02	*Call
2098		5065<5019	B01 TO K02	*Call
2098		5065<5020	B02 TO K02	*Call
2098		5065<5021	B03 TO K02	*Call
2098		5065<5022	B04 TO K02	*Call
2098		5065<5023	B05 TO K02	*Call
2098		5065<5024	C01 TO K02	*Call
2098		5065<5025	C02 TO K02	*Call
2098		5065<5026	C03 TO K02	*Call
2098		5065<5027	C04 TO K02	*Call
2098		5065<5028	C05 TO K02	*Call
2098		5065<5029	D01 TO K02	*Call
2098		5065<5030	D02 TO K02	*Call
2098		5065<5031	D03 TO K02	*Call
2098		5065<5032	D04 TO K02	*Call
2098		5065<5033	D05 TO K02	*Call
2098		5065<5034	E01 TO K02	*Call
2098		5065<5035	E02 TO K02	*Call
2098		5065<5036	E03 TO K02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5065<5037	E04 TO K02	*Call
2098		5065<5038	E05 TO K02	*Call
2098		5065<5039	F01 TO K02	*Call
2098		5065<5040	F02 TO K02	*Call
2098		5065<5041	F03 TO K02	*Call
2098		5065<5042	F04 TO K02	*Call
2098		5065<5043	F05 TO K02	*Call
2098		5065<5044	G01 TO K02	*Call
2098		5065<5045	G02 TO K02	*Call
2098		5065<5046	G03 TO K02	*Call
2098		5065<5047	G04 TO K02	*Call
2098		5065<5048	G05 TO K02	*Call
2098		5065<5049	H01 TO K02	*Call
2098		5065<5050	H02 TO K02	*Call
2098		5065<5051	H03 TO K02	*Call
2098		5065<5052	H04 TO K02	*Call
2098		5065<5053	H05 TO K02	*Call
2098		5065<5054	I01 TO K02	*Call
2098		5065<5055	I02 TO K02	*Call
2098		5065<5056	I03 TO K02	*Call
2098		5065<5057	I04 TO K02	*Call
2098		5065<5058	I05 TO K02	*Call
2098		5065<5059	J01 TO K02	*Call
2098		5065<5060	J02 TO K02	*Call
2098		5065<5061	J03 TO K02	*Call
2098		5065<5062	J04 TO K02	*Call
2098		5065<5063	J05 TO K02	*Call
2098		5065<5064	K01 TO K02	*Call
2098		5065<5066	K03 TO K02	*Call
2098		5065<5067	K04 TO K02	*Call
2098		5065<5068	K05 TO K02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5065<5069	L01 TO K02	*Call
2098		5065<5070	L02 TO K02	*Call
2098		5065<5071	L03 TO K02	*Call
2098		5065<5072	L04 TO K02	*Call
2098		5065<5073	L05 TO K02	*Call
2098		5065<5074	M01 TO K02	*Call
2098		5065<5075	M02 TO K02	*Call
2098		5065<5076	M03 TO K02	*Call
2098		5065<5077	M04 TO K02	*Call
2098		5065<5078	M05 TO K02	*Call
2098		5065<5079	N01 TO K02	*Call
2098		5065<5080	N02 TO K02	*Call
2098		5065<5081	N03 TO K02	*Call
2098		5065<5082	N04 TO K02	*Call
2098		5065<5083	N05 TO K02	*Call
2098		5065<5084	O01 TO K02	*Call
2098		5065<5085	O02 TO K02	*Call
2098		5065<5086	O03 TO K02	*Call
2098		5065<5087	O04 TO K02	*Call
2098		5065<5088	O05 TO K02	*Call
2098		5065<5089	P01 TO K02	*Call
2098		5065<5090	P02 TO K02	*Call
2098		5065<5091	P03 TO K02	*Call
2098		5065<5092	P04 TO K02	*Call
2098		5065<5093	P05 TO K02	*Call
2098		5065<5094	Q01 TO K02	*Call
2098		5065<5095	Q02 TO K02	*Call
2098		5065<5096	Q03 TO K02	*Call
2098		5065<5097	Q04 TO K02	*Call
2098		5065<5098	Q05 TO K02	*Call
2098		5065<5099	R01 TO K02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5065<5100	R02 TO K02	*Call
2098		5065<5101	R03 TO K02	*Call
2098		5065<5102	R04 TO K02	*Call
2098		5065<5103	R05 TO K02	*Call
2098		5065<5104	S01 TO K02	*Call
2098		5065<5105	S02 TO K02	*Call
2098		5065<5106	S03 TO K02	*Call
2098		5065<5107	S04 TO K02	*Call
2098		5065<5108	S05 TO K02	*Call
2098		5065<5109	T01 TO K02	*Call
2098		5065<5110	T02 TO K02	*Call
2098		5065<5111	T03 TO K02	*Call
2098		5065<5112	T04 TO K02	*Call
2098		5065<5113	T05 TO K02	*Call
2098		5065<5114	U01 TO K02	*Call
2098		5065<5115	U02 TO K02	*Call
2098		5065<5116	U03 TO K02	*Call
2098		5065<5117	U04 TO K02	*Call
2098		5065<5118	U05 TO K02	*Call
2098		5065<5119	V01 TO K02	*Call
2098		5065<5120	V02 TO K02	*Call
2098		5065<5121	V03 TO K02	*Call
2098		5065<5122	V04 TO K02	*Call
2098		5065<5123	V05 TO K02	*Call
2098		5065<5124	W01 TO K02	*Call
2098		5065<5125	W02 TO K02	*Call
2098		5065<5126	W03 TO K02	*Call
2098		5065<5127	W04 TO K02	*Call
2098		5065<5128	W05 TO K02	*Call
2098		5065<5129	X01 TO K02	*Call
2098		5065<5130	X02 TO K02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5065<5131	X03 TO K02	*Call
2098		5065<5132	X04 TO K02	*Call
2098		5065<5133	X05 TO K02	*Call
2098		5065<5134	Y01 TO K02	*Call
2098		5065<5135	Y02 TO K02	*Call
2098		5065<5136	Y03 TO K02	*Call
2098		5065<5137	Y04 TO K02	*Call
2098		5065<5138	Y05 TO K02	*Call
2098		5065<5139	Z01 TO K02	*Call
2098		5065<5140	Z02 TO K02	*Call
2098		5065<5141	Z03 TO K02	*Call
2098		5065<5142	Z04 TO K02	*Call
2098		5065<5143	Z05 TO K02	*Call
2098		5066<5013	A00 TO K03	*Call
2098		5066<5014	A01 TO K03	*Call
2098		5066<5015	A02 TO K03	*Call
2098		5066<5016	A03 TO K03	*Call
2098		5066<5017	A04 TO K03	*Call
2098		5066<5018	A05 TO K03	*Call
2098		5066<5019	B01 TO K03	*Call
2098		5066<5020	B02 TO K03	*Call
2098		5066<5021	B03 TO K03	*Call
2098		5066<5022	B04 TO K03	*Call
2098		5066<5023	B05 TO K03	*Call
2098		5066<5024	C01 TO K03	*Call
2098		5066<5025	C02 TO K03	*Call
2098		5066<5026	C03 TO K03	*Call
2098		5066<5027	C04 TO K03	*Call
2098		5066<5028	C05 TO K03	*Call
2098		5066<5029	D01 TO K03	*Call
2098		5066<5030	D02 TO K03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5066<5031	D03 TO K03	*Call
2098		5066<5032	D04 TO K03	*Call
2098		5066<5033	D05 TO K03	*Call
2098		5066<5034	E01 TO K03	*Call
2098		5066<5035	E02 TO K03	*Call
2098		5066<5036	E03 TO K03	*Call
2098		5066<5037	E04 TO K03	*Call
2098		5066<5038	E05 TO K03	*Call
2098		5066<5039	F01 TO K03	*Call
2098		5066<5040	F02 TO K03	*Call
2098		5066<5041	F03 TO K03	*Call
2098		5066<5042	F04 TO K03	*Call
2098		5066<5043	F05 TO K03	*Call
2098		5066<5044	G01 TO K03	*Call
2098		5066<5045	G02 TO K03	*Call
2098		5066<5046	G03 TO K03	*Call
2098		5066<5047	G04 TO K03	*Call
2098		5066<5048	G05 TO K03	*Call
2098		5066<5049	H01 TO K03	*Call
2098		5066<5050	H02 TO K03	*Call
2098		5066<5051	H03 TO K03	*Call
2098		5066<5052	H04 TO K03	*Call
2098		5066<5053	H05 TO K03	*Call
2098		5066<5054	I01 TO K03	*Call
2098		5066<5055	I02 TO K03	*Call
2098		5066<5056	I03 TO K03	*Call
2098		5066<5057	I04 TO K03	*Call
2098		5066<5058	I05 TO K03	*Call
2098		5066<5059	J01 TO K03	*Call
2098		5066<5060	J02 TO K03	*Call
2098		5066<5061	J03 TO K03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5066<5062	J04 TO K03	*Call
2098		5066<5063	J05 TO K03	*Call
2098		5066<5064	K01 TO K03	*Call
2098		5066<5065	K02 TO K03	*Call
2098		5066<5067	K04 TO K03	*Call
2098		5066<5068	K05 TO K03	*Call
2098		5066<5069	L01 TO K03	*Call
2098		5066<5070	L02 TO K03	*Call
2098		5066<5071	L03 TO K03	*Call
2098		5066<5072	L04 TO K03	*Call
2098		5066<5073	L05 TO K03	*Call
2098		5066<5074	M01 TO K03	*Call
2098		5066<5075	M02 TO K03	*Call
2098		5066<5076	M03 TO K03	*Call
2098		5066<5077	M04 TO K03	*Call
2098		5066<5078	M05 TO K03	*Call
2098		5066<5079	N01 TO K03	*Call
2098		5066<5080	N02 TO K03	*Call
2098		5066<5081	N03 TO K03	*Call
2098		5066<5082	N04 TO K03	*Call
2098		5066<5083	N05 TO K03	*Call
2098		5066<5084	O01 TO K03	*Call
2098		5066<5085	O02 TO K03	*Call
2098		5066<5086	O03 TO K03	*Call
2098		5066<5087	O04 TO K03	*Call
2098		5066<5088	O05 TO K03	*Call
2098		5066<5089	P01 TO K03	*Call
2098		5066<5090	P02 TO K03	*Call
2098		5066<5091	P03 TO K03	*Call
2098		5066<5092	P04 TO K03	*Call
2098		5066<5093	P05 TO K03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5066<5094	Q01 TO K03	*Call
2098		5066<5095	Q02 TO K03	*Call
2098		5066<5096	Q03 TO K03	*Call
2098		5066<5097	Q04 TO K03	*Call
2098		5066<5098	Q05 TO K03	*Call
2098		5066<5099	R01 TO K03	*Call
2098		5066<5100	R02 TO K03	*Call
2098		5066<5101	R03 TO K03	*Call
2098		5066<5102	R04 TO K03	*Call
2098		5066<5103	R05 TO K03	*Call
2098		5066<5104	S01 TO K03	*Call
2098		5066<5105	S02 TO K03	*Call
2098		5066<5106	S03 TO K03	*Call
2098		5066<5107	S04 TO K03	*Call
2098		5066<5108	S05 TO K03	*Call
2098		5066<5109	T01 TO K03	*Call
2098		5066<5110	T02 TO K03	*Call
2098		5066<5111	T03 TO K03	*Call
2098		5066<5112	T04 TO K03	*Call
2098		5066<5113	T05 TO K03	*Call
2098		5066<5114	U01 TO K03	*Call
2098		5066<5115	U02 TO K03	*Call
2098		5066<5116	U03 TO K03	*Call
2098		5066<5117	U04 TO K03	*Call
2098		5066<5118	U05 TO K03	*Call
2098		5066<5119	V01 TO K03	*Call
2098		5066<5120	V02 TO K03	*Call
2098		5066<5121	V03 TO K03	*Call
2098		5066<5122	V04 TO K03	*Call
2098		5066<5123	V05 TO K03	*Call
2098		5066<5124	W01 TO K03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5066<5125	W02 TO K03	*Call
2098		5066<5126	W03 TO K03	*Call
2098		5066<5127	W04 TO K03	*Call
2098		5066<5128	W05 TO K03	*Call
2098		5066<5129	X01 TO K03	*Call
2098		5066<5130	X02 TO K03	*Call
2098		5066<5131	X03 TO K03	*Call
2098		5066<5132	X04 TO K03	*Call
2098		5066<5133	X05 TO K03	*Call
2098		5066<5134	Y01 TO K03	*Call
2098		5066<5135	Y02 TO K03	*Call
2098		5066<5136	Y03 TO K03	*Call
2098		5066<5137	Y04 TO K03	*Call
2098		5066<5138	Y05 TO K03	*Call
2098		5066<5139	Z01 TO K03	*Call
2098		5066<5140	Z02 TO K03	*Call
2098		5066<5141	Z03 TO K03	*Call
2098		5066<5142	Z04 TO K03	*Call
2098		5066<5143	Z05 TO K03	*Call
2098		5067<5013	A00 TO K04	*Call
2098		5067<5014	A01 TO K04	*Call
2098		5067<5015	A02 TO K04	*Call
2098		5067<5016	A03 TO K04	*Call
2098		5067<5017	A04 TO K04	*Call
2098		5067<5018	A05 TO K04	*Call
2098		5067<5019	B01 TO K04	*Call
2098		5067<5020	B02 TO K04	*Call
2098		5067<5021	B03 TO K04	*Call
2098		5067<5022	B04 TO K04	*Call
2098		5067<5023	B05 TO K04	*Call
2098		5067<5024	C01 TO K04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5067<5025	C02 TO K04	*Call
2098		5067<5026	C03 TO K04	*Call
2098		5067<5027	C04 TO K04	*Call
2098		5067<5028	C05 TO K04	*Call
2098		5067<5029	D01 TO K04	*Call
2098		5067<5030	D02 TO K04	*Call
2098		5067<5031	D03 TO K04	*Call
2098		5067<5032	D04 TO K04	*Call
2098		5067<5033	D05 TO K04	*Call
2098		5067<5034	E01 TO K04	*Call
2098		5067<5035	E02 TO K04	*Call
2098		5067<5036	E03 TO K04	*Call
2098		5067<5037	E04 TO K04	*Call
2098		5067<5038	E05 TO K04	*Call
2098		5067<5039	F01 TO K04	*Call
2098		5067<5040	F02 TO K04	*Call
2098		5067<5041	F03 TO K04	*Call
2098		5067<5042	F04 TO K04	*Call
2098		5067<5043	F05 TO K04	*Call
2098		5067<5044	G01 TO K04	*Call
2098		5067<5045	G02 TO K04	*Call
2098		5067<5046	G03 TO K04	*Call
2098		5067<5047	G04 TO K04	*Call
2098		5067<5048	G05 TO K04	*Call
2098		5067<5049	H01 TO K04	*Call
2098		5067<5050	H02 TO K04	*Call
2098		5067<5051	H03 TO K04	*Call
2098		5067<5052	H04 TO K04	*Call
2098		5067<5053	H05 TO K04	*Call
2098		5067<5054	I01 TO K04	*Call
2098		5067<5055	I02 TO K04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5067<5056	I03 TO K04	*Call
2098		5067<5057	I04 TO K04	*Call
2098		5067<5058	I05 TO K04	*Call
2098		5067<5059	J01 TO K04	*Call
2098		5067<5060	J02 TO K04	*Call
2098		5067<5061	J03 TO K04	*Call
2098		5067<5062	J04 TO K04	*Call
2098		5067<5063	J05 TO K04	*Call
2098		5067<5064	K01 TO K04	*Call
2098		5067<5065	K02 TO K04	*Call
2098		5067<5066	K03 TO K04	*Call
2098		5067<5068	K05 TO K04	*Call
2098		5067<5069	L01 TO K04	*Call
2098		5067<5070	L02 TO K04	*Call
2098		5067<5071	L03 TO K04	*Call
2098		5067<5072	L04 TO K04	*Call
2098		5067<5073	L05 TO K04	*Call
2098		5067<5074	M01 TO K04	*Call
2098		5067<5075	M02 TO K04	*Call
2098		5067<5076	M03 TO K04	*Call
2098		5067<5077	M04 TO K04	*Call
2098		5067<5078	M05 TO K04	*Call
2098		5067<5079	N01 TO K04	*Call
2098		5067<5080	N02 TO K04	*Call
2098		5067<5081	N03 TO K04	*Call
2098		5067<5082	N04 TO K04	*Call
2098		5067<5083	N05 TO K04	*Call
2098		5067<5084	O01 TO K04	*Call
2098		5067<5085	O02 TO K04	*Call
2098		5067<5086	O03 TO K04	*Call
2098		5067<5087	O04 TO K04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5067<5088	O05 TO K04	*Call
2098		5067<5089	P01 TO K04	*Call
2098		5067<5090	P02 TO K04	*Call
2098		5067<5091	P03 TO K04	*Call
2098		5067<5092	P04 TO K04	*Call
2098		5067<5093	P05 TO K04	*Call
2098		5067<5094	Q01 TO K04	*Call
2098		5067<5095	Q02 TO K04	*Call
2098		5067<5096	Q03 TO K04	*Call
2098		5067<5097	Q04 TO K04	*Call
2098		5067<5098	Q05 TO K04	*Call
2098		5067<5099	R01 TO K04	*Call
2098		5067<5100	R02 TO K04	*Call
2098		5067<5101	R03 TO K04	*Call
2098		5067<5102	R04 TO K04	*Call
2098		5067<5103	R05 TO K04	*Call
2098		5067<5104	S01 TO K04	*Call
2098		5067<5105	S02 TO K04	*Call
2098		5067<5106	S03 TO K04	*Call
2098		5067<5107	S04 TO K04	*Call
2098		5067<5108	S05 TO K04	*Call
2098		5067<5109	T01 TO K04	*Call
2098		5067<5110	T02 TO K04	*Call
2098		5067<5111	T03 TO K04	*Call
2098		5067<5112	T04 TO K04	*Call
2098		5067<5113	T05 TO K04	*Call
2098		5067<5114	U01 TO K04	*Call
2098		5067<5115	U02 TO K04	*Call
2098		5067<5116	U03 TO K04	*Call
2098		5067<5117	U04 TO K04	*Call
2098		5067<5118	U05 TO K04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5067<5119	V01 TO K04	*Call
2098		5067<5120	V02 TO K04	*Call
2098		5067<5121	V03 TO K04	*Call
2098		5067<5122	V04 TO K04	*Call
2098		5067<5123	V05 TO K04	*Call
2098		5067<5124	W01 TO K04	*Call
2098		5067<5125	W02 TO K04	*Call
2098		5067<5126	W03 TO K04	*Call
2098		5067<5127	W04 TO K04	*Call
2098		5067<5128	W05 TO K04	*Call
2098		5067<5129	X01 TO K04	*Call
2098		5067<5130	X02 TO K04	*Call
2098		5067<5131	X03 TO K04	*Call
2098		5067<5132	X04 TO K04	*Call
2098		5067<5133	X05 TO K04	*Call
2098		5067<5134	Y01 TO K04	*Call
2098		5067<5135	Y02 TO K04	*Call
2098		5067<5136	Y03 TO K04	*Call
2098		5067<5137	Y04 TO K04	*Call
2098		5067<5138	Y05 TO K04	*Call
2098		5067<5139	Z01 TO K04	*Call
2098		5067<5140	Z02 TO K04	*Call
2098		5067<5141	Z03 TO K04	*Call
2098		5067<5142	Z04 TO K04	*Call
2098		5067<5143	Z05 TO K04	*Call
2098		5068<5013	A00 TO K05	*Call
2098		5068<5014	A01 TO K05	*Call
2098		5068<5015	A02 TO K05	*Call
2098		5068<5016	A03 TO K05	*Call
2098		5068<5017	A04 TO K05	*Call
2098		5068<5018	A05 TO K05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5068<5019	B01 TO K05	*Call
2098		5068<5020	B02 TO K05	*Call
2098		5068<5021	B03 TO K05	*Call
2098		5068<5022	B04 TO K05	*Call
2098		5068<5023	B05 TO K05	*Call
2098		5068<5024	C01 TO K05	*Call
2098		5068<5025	C02 TO K05	*Call
2098		5068<5026	C03 TO K05	*Call
2098		5068<5027	C04 TO K05	*Call
2098		5068<5028	C05 TO K05	*Call
2098		5068<5029	D01 TO K05	*Call
2098		5068<5030	D02 TO K05	*Call
2098		5068<5031	D03 TO K05	*Call
2098		5068<5032	D04 TO K05	*Call
2098		5068<5033	D05 TO K05	*Call
2098		5068<5034	E01 TO K05	*Call
2098		5068<5035	E02 TO K05	*Call
2098		5068<5036	E03 TO K05	*Call
2098		5068<5037	E04 TO K05	*Call
2098		5068<5038	E05 TO K05	*Call
2098		5068<5039	F01 TO K05	*Call
2098		5068<5040	F02 TO K05	*Call
2098		5068<5041	F03 TO K05	*Call
2098		5068<5042	F04 TO K05	*Call
2098		5068<5043	F05 TO K05	*Call
2098		5068<5044	G01 TO K05	*Call
2098		5068<5045	G02 TO K05	*Call
2098		5068<5046	G03 TO K05	*Call
2098		5068<5047	G04 TO K05	*Call
2098		5068<5048	G05 TO K05	*Call
2098		5068<5049	H01 TO K05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5068<5050	H02 TO K05	*Call
2098		5068<5051	H03 TO K05	*Call
2098		5068<5052	H04 TO K05	*Call
2098		5068<5053	H05 TO K05	*Call
2098		5068<5054	I01 TO K05	*Call
2098		5068<5055	I02 TO K05	*Call
2098		5068<5056	I03 TO K05	*Call
2098		5068<5057	I04 TO K05	*Call
2098		5068<5058	I05 TO K05	*Call
2098		5068<5059	J01 TO K05	*Call
2098		5068<5060	J02 TO K05	*Call
2098		5068<5061	J03 TO K05	*Call
2098		5068<5062	J04 TO K05	*Call
2098		5068<5063	J05 TO K05	*Call
2098		5068<5064	K01 TO K05	*Call
2098		5068<5065	K02 TO K05	*Call
2098		5068<5066	K03 TO K05	*Call
2098		5068<5067	K04 TO K05	*Call
2098		5068<5069	L01 TO K05	*Call
2098		5068<5070	L02 TO K05	*Call
2098		5068<5071	L03 TO K05	*Call
2098		5068<5072	L04 TO K05	*Call
2098		5068<5073	L05 TO K05	*Call
2098		5068<5074	M01 TO K05	*Call
2098		5068<5075	M02 TO K05	*Call
2098		5068<5076	M03 TO K05	*Call
2098		5068<5077	M04 TO K05	*Call
2098		5068<5078	M05 TO K05	*Call
2098		5068<5079	N01 TO K05	*Call
2098		5068<5080	N02 TO K05	*Call
2098		5068<5081	N03 TO K05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5068<5082	N04 TO K05	*Call
2098		5068<5083	N05 TO K05	*Call
2098		5068<5084	O01 TO K05	*Call
2098		5068<5085	O02 TO K05	*Call
2098		5068<5086	O03 TO K05	*Call
2098		5068<5087	O04 TO K05	*Call
2098		5068<5088	O05 TO K05	*Call
2098		5068<5089	P01 TO K05	*Call
2098		5068<5090	P02 TO K05	*Call
2098		5068<5091	P03 TO K05	*Call
2098		5068<5092	P04 TO K05	*Call
2098		5068<5093	P05 TO K05	*Call
2098		5068<5094	Q01 TO K05	*Call
2098		5068<5095	Q02 TO K05	*Call
2098		5068<5096	Q03 TO K05	*Call
2098		5068<5097	Q04 TO K05	*Call
2098		5068<5098	Q05 TO K05	*Call
2098		5068<5099	R01 TO K05	*Call
2098		5068<5100	R02 TO K05	*Call
2098		5068<5101	R03 TO K05	*Call
2098		5068<5102	R04 TO K05	*Call
2098		5068<5103	R05 TO K05	*Call
2098		5068<5104	S01 TO K05	*Call
2098		5068<5105	S02 TO K05	*Call
2098		5068<5106	S03 TO K05	*Call
2098		5068<5107	S04 TO K05	*Call
2098		5068<5108	S05 TO K05	*Call
2098		5068<5109	T01 TO K05	*Call
2098		5068<5110	T02 TO K05	*Call
2098		5068<5111	T03 TO K05	*Call
2098		5068<5112	T04 TO K05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5068<5113	T05 TO K05	*Call
2098		5068<5114	U01 TO K05	*Call
2098		5068<5115	U02 TO K05	*Call
2098		5068<5116	U03 TO K05	*Call
2098		5068<5117	U04 TO K05	*Call
2098		5068<5118	U05 TO K05	*Call
2098		5068<5119	V01 TO K05	*Call
2098		5068<5120	V02 TO K05	*Call
2098		5068<5121	V03 TO K05	*Call
2098		5068<5122	V04 TO K05	*Call
2098		5068<5123	V05 TO K05	*Call
2098		5068<5124	W01 TO K05	*Call
2098		5068<5125	W02 TO K05	*Call
2098		5068<5126	W03 TO K05	*Call
2098		5068<5127	W04 TO K05	*Call
2098		5068<5128	W05 TO K05	*Call
2098		5068<5129	X01 TO K05	*Call
2098		5068<5130	X02 TO K05	*Call
2098		5068<5131	X03 TO K05	*Call
2098		5068<5132	X04 TO K05	*Call
2098		5068<5133	X05 TO K05	*Call
2098		5068<5134	Y01 TO K05	*Call
2098		5068<5135	Y02 TO K05	*Call
2098		5068<5136	Y03 TO K05	*Call
2098		5068<5137	Y04 TO K05	*Call
2098		5068<5138	Y05 TO K05	*Call
2098		5068<5139	Z01 TO K05	*Call
2098		5068<5140	Z02 TO K05	*Call
2098		5068<5141	Z03 TO K05	*Call
2098		5068<5142	Z04 TO K05	*Call
2098		5068<5143	Z05 TO K05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5069<5013	A00 TO L01	*Call
2098		5069<5014	A01 TO L01	*Call
2098		5069<5015	A02 TO L01	*Call
2098		5069<5016	A03 TO L01	*Call
2098		5069<5017	A04 TO L01	*Call
2098		5069<5018	A05 TO L01	*Call
2098		5069<5019	B01 TO L01	*Call
2098		5069<5020	B02 TO L01	*Call
2098		5069<5021	B03 TO L01	*Call
2098		5069<5022	B04 TO L01	*Call
2098		5069<5023	B05 TO L01	*Call
2098		5069<5024	C01 TO L01	*Call
2098		5069<5025	C02 TO L01	*Call
2098		5069<5026	C03 TO L01	*Call
2098		5069<5027	C04 TO L01	*Call
2098		5069<5028	C05 TO L01	*Call
2098		5069<5029	D01 TO L01	*Call
2098		5069<5030	D02 TO L01	*Call
2098		5069<5031	D03 TO L01	*Call
2098		5069<5032	D04 TO L01	*Call
2098		5069<5033	D05 TO L01	*Call
2098		5069<5034	E01 TO L01	*Call
2098		5069<5035	E02 TO L01	*Call
2098		5069<5036	E03 TO L01	*Call
2098		5069<5037	E04 TO L01	*Call
2098		5069<5038	E05 TO L01	*Call
2098		5069<5039	F01 TO L01	*Call
2098		5069<5040	F02 TO L01	*Call
2098		5069<5041	F03 TO L01	*Call
2098		5069<5042	F04 TO L01	*Call
2098		5069<5043	F05 TO L01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5069<5044	G01 TO L01	*Call
2098		5069<5045	G02 TO L01	*Call
2098		5069<5046	G03 TO L01	*Call
2098		5069<5047	G04 TO L01	*Call
2098		5069<5048	G05 TO L01	*Call
2098		5069<5049	H01 TO L01	*Call
2098		5069<5050	H02 TO L01	*Call
2098		5069<5051	H03 TO L01	*Call
2098		5069<5052	H04 TO L01	*Call
2098		5069<5053	H05 TO L01	*Call
2098		5069<5054	I01 TO L01	*Call
2098		5069<5055	I02 TO L01	*Call
2098		5069<5056	I03 TO L01	*Call
2098		5069<5057	I04 TO L01	*Call
2098		5069<5058	I05 TO L01	*Call
2098		5069<5059	J01 TO L01	*Call
2098		5069<5060	J02 TO L01	*Call
2098		5069<5061	J03 TO L01	*Call
2098		5069<5062	J04 TO L01	*Call
2098		5069<5063	J05 TO L01	*Call
2098		5069<5064	K01 TO L01	*Call
2098		5069<5065	K02 TO L01	*Call
2098		5069<5066	K03 TO L01	*Call
2098		5069<5067	K04 TO L01	*Call
2098		5069<5068	K05 TO L01	*Call
2098		5069<5070	L02 TO L01	*Call
2098		5069<5071	L03 TO L01	*Call
2098		5069<5072	L04 TO L01	*Call
2098		5069<5073	L05 TO L01	*Call
2098		5069<5074	M01 TO L01	*Call
2098		5069<5075	M02 TO L01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5069<5076	M03 TO L01	*Call
2098		5069<5077	M04 TO L01	*Call
2098		5069<5078	M05 TO L01	*Call
2098		5069<5079	N01 TO L01	*Call
2098		5069<5080	N02 TO L01	*Call
2098		5069<5081	N03 TO L01	*Call
2098		5069<5082	N04 TO L01	*Call
2098		5069<5083	N05 TO L01	*Call
2098		5069<5084	O01 TO L01	*Call
2098		5069<5085	O02 TO L01	*Call
2098		5069<5086	O03 TO L01	*Call
2098		5069<5087	O04 TO L01	*Call
2098		5069<5088	O05 TO L01	*Call
2098		5069<5089	P01 TO L01	*Call
2098		5069<5090	P02 TO L01	*Call
2098		5069<5091	P03 TO L01	*Call
2098		5069<5092	P04 TO L01	*Call
2098		5069<5093	P05 TO L01	*Call
2098		5069<5094	Q01 TO L01	*Call
2098		5069<5095	Q02 TO L01	*Call
2098		5069<5096	Q03 TO L01	*Call
2098		5069<5097	Q04 TO L01	*Call
2098		5069<5098	Q05 TO L01	*Call
2098		5069<5099	R01 TO L01	*Call
2098		5069<5100	R02 TO L01	*Call
2098		5069<5101	R03 TO L01	*Call
2098		5069<5102	R04 TO L01	*Call
2098		5069<5103	R05 TO L01	*Call
2098		5069<5104	S01 TO L01	*Call
2098		5069<5105	S02 TO L01	*Call
2098		5069<5106	S03 TO L01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5069<5107	S04 TO L01	*Call
2098		5069<5108	S05 TO L01	*Call
2098		5069<5109	T01 TO L01	*Call
2098		5069<5110	T02 TO L01	*Call
2098		5069<5111	T03 TO L01	*Call
2098		5069<5112	T04 TO L01	*Call
2098		5069<5113	T05 TO L01	*Call
2098		5069<5114	U01 TO L01	*Call
2098		5069<5115	U02 TO L01	*Call
2098		5069<5116	U03 TO L01	*Call
2098		5069<5117	U04 TO L01	*Call
2098		5069<5118	U05 TO L01	*Call
2098		5069<5119	V01 TO L01	*Call
2098		5069<5120	V02 TO L01	*Call
2098		5069<5121	V03 TO L01	*Call
2098		5069<5122	V04 TO L01	*Call
2098		5069<5123	V05 TO L01	*Call
2098		5069<5124	W01 TO L01	*Call
2098		5069<5125	W02 TO L01	*Call
2098		5069<5126	W03 TO L01	*Call
2098		5069<5127	W04 TO L01	*Call
2098		5069<5128	W05 TO L01	*Call
2098		5069<5129	X01 TO L01	*Call
2098		5069<5130	X02 TO L01	*Call
2098		5069<5131	X03 TO L01	*Call
2098		5069<5132	X04 TO L01	*Call
2098		5069<5133	X05 TO L01	*Call
2098		5069<5134	Y01 TO L01	*Call
2098		5069<5135	Y02 TO L01	*Call
2098		5069<5136	Y03 TO L01	*Call
2098		5069<5137	Y04 TO L01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5069<5138	Y05 TO L01	*Call
2098		5069<5139	Z01 TO L01	*Call
2098		5069<5140	Z02 TO L01	*Call
2098		5069<5141	Z03 TO L01	*Call
2098		5069<5142	Z04 TO L01	*Call
2098		5069<5143	Z05 TO L01	*Call
2098		5070<5013	A00 TO L02	*Call
2098		5070<5014	A01 TO L02	*Call
2098		5070<5015	A02 TO L02	*Call
2098		5070<5016	A03 TO L02	*Call
2098		5070<5017	A04 TO L02	*Call
2098		5070<5018	A05 TO L02	*Call
2098		5070<5019	B01 TO L02	*Call
2098		5070<5020	B02 TO L02	*Call
2098		5070<5021	B03 TO L02	*Call
2098		5070<5022	B04 TO L02	*Call
2098		5070<5023	B05 TO L02	*Call
2098		5070<5024	C01 TO L02	*Call
2098		5070<5025	C02 TO L02	*Call
2098		5070<5026	C03 TO L02	*Call
2098		5070<5027	C04 TO L02	*Call
2098		5070<5028	C05 TO L02	*Call
2098		5070<5029	D01 TO L02	*Call
2098		5070<5030	D02 TO L02	*Call
2098		5070<5031	D03 TO L02	*Call
2098		5070<5032	D04 TO L02	*Call
2098		5070<5033	D05 TO L02	*Call
2098		5070<5034	E01 TO L02	*Call
2098		5070<5035	E02 TO L02	*Call
2098		5070<5036	E03 TO L02	*Call
2098		5070<5037	E04 TO L02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5070<5038	E05 TO L02	*Call
2098		5070<5039	F01 TO L02	*Call
2098		5070<5040	F02 TO L02	*Call
2098		5070<5041	F03 TO L02	*Call
2098		5070<5042	F04 TO L02	*Call
2098		5070<5043	F05 TO L02	*Call
2098		5070<5044	G01 TO L02	*Call
2098		5070<5045	G02 TO L02	*Call
2098		5070<5046	G03 TO L02	*Call
2098		5070<5047	G04 TO L02	*Call
2098		5070<5048	G05 TO L02	*Call
2098		5070<5049	H01 TO L02	*Call
2098		5070<5050	H02 TO L02	*Call
2098		5070<5051	H03 TO L02	*Call
2098		5070<5052	H04 TO L02	*Call
2098		5070<5053	H05 TO L02	*Call
2098		5070<5054	I01 TO L02	*Call
2098		5070<5055	I02 TO L02	*Call
2098		5070<5056	I03 TO L02	*Call
2098		5070<5057	I04 TO L02	*Call
2098		5070<5058	I05 TO L02	*Call
2098		5070<5059	J01 TO L02	*Call
2098		5070<5060	J02 TO L02	*Call
2098		5070<5061	J03 TO L02	*Call
2098		5070<5062	J04 TO L02	*Call
2098		5070<5063	J05 TO L02	*Call
2098		5070<5064	K01 TO L02	*Call
2098		5070<5065	K02 TO L02	*Call
2098		5070<5066	K03 TO L02	*Call
2098		5070<5067	K04 TO L02	*Call
2098		5070<5068	K05 TO L02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5070<5069	L01 TO L02	*Call
2098		5070<5071	L03 TO L02	*Call
2098		5070<5072	L04 TO L02	*Call
2098		5070<5073	L05 TO L02	*Call
2098		5070<5074	M01 TO L02	*Call
2098		5070<5075	M02 TO L02	*Call
2098		5070<5076	M03 TO L02	*Call
2098		5070<5077	M04 TO L02	*Call
2098		5070<5078	M05 TO L02	*Call
2098		5070<5079	N01 TO L02	*Call
2098		5070<5080	N02 TO L02	*Call
2098		5070<5081	N03 TO L02	*Call
2098		5070<5082	N04 TO L02	*Call
2098		5070<5083	N05 TO L02	*Call
2098		5070<5084	O01 TO L02	*Call
2098		5070<5085	O02 TO L02	*Call
2098		5070<5086	O03 TO L02	*Call
2098		5070<5087	O04 TO L02	*Call
2098		5070<5088	O05 TO L02	*Call
2098		5070<5089	P01 TO L02	*Call
2098		5070<5090	P02 TO L02	*Call
2098		5070<5091	P03 TO L02	*Call
2098		5070<5092	P04 TO L02	*Call
2098		5070<5093	P05 TO L02	*Call
2098		5070<5094	Q01 TO L02	*Call
2098		5070<5095	Q02 TO L02	*Call
2098		5070<5096	Q03 TO L02	*Call
2098		5070<5097	Q04 TO L02	*Call
2098		5070<5098	Q05 TO L02	*Call
2098		5070<5099	R01 TO L02	*Call
2098		5070<5100	R02 TO L02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5070<5101	R03 TO L02	*Call
2098		5070<5102	R04 TO L02	*Call
2098		5070<5103	R05 TO L02	*Call
2098		5070<5104	S01 TO L02	*Call
2098		5070<5105	S02 TO L02	*Call
2098		5070<5106	S03 TO L02	*Call
2098		5070<5107	S04 TO L02	*Call
2098		5070<5108	S05 TO L02	*Call
2098		5070<5109	T01 TO L02	*Call
2098		5070<5110	T02 TO L02	*Call
2098		5070<5111	T03 TO L02	*Call
2098		5070<5112	T04 TO L02	*Call
2098		5070<5113	T05 TO L02	*Call
2098		5070<5114	U01 TO L02	*Call
2098		5070<5115	U02 TO L02	*Call
2098		5070<5116	U03 TO L02	*Call
2098		5070<5117	U04 TO L02	*Call
2098		5070<5118	U05 TO L02	*Call
2098		5070<5119	V01 TO L02	*Call
2098		5070<5120	V02 TO L02	*Call
2098		5070<5121	V03 TO L02	*Call
2098		5070<5122	V04 TO L02	*Call
2098		5070<5123	V05 TO L02	*Call
2098		5070<5124	W01 TO L02	*Call
2098		5070<5125	W02 TO L02	*Call
2098		5070<5126	W03 TO L02	*Call
2098		5070<5127	W04 TO L02	*Call
2098		5070<5128	W05 TO L02	*Call
2098		5070<5129	X01 TO L02	*Call
2098		5070<5130	X02 TO L02	*Call
2098		5070<5131	X03 TO L02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5070<5132	X04 TO L02	*Call
2098		5070<5133	X05 TO L02	*Call
2098		5070<5134	Y01 TO L02	*Call
2098		5070<5135	Y02 TO L02	*Call
2098		5070<5136	Y03 TO L02	*Call
2098		5070<5137	Y04 TO L02	*Call
2098		5070<5138	Y05 TO L02	*Call
2098		5070<5139	Z01 TO L02	*Call
2098		5070<5140	Z02 TO L02	*Call
2098		5070<5141	Z03 TO L02	*Call
2098		5070<5142	Z04 TO L02	*Call
2098		5070<5143	Z05 TO L02	*Call
2098		5071<5013	A00 TO L03	*Call
2098		5071<5014	A01 TO L03	*Call
2098		5071<5015	A02 TO L03	*Call
2098		5071<5016	A03 TO L03	*Call
2098		5071<5017	A04 TO L03	*Call
2098		5071<5018	A05 TO L03	*Call
2098		5071<5019	B01 TO L03	*Call
2098		5071<5020	B02 TO L03	*Call
2098		5071<5021	B03 TO L03	*Call
2098		5071<5022	B04 TO L03	*Call
2098		5071<5023	B05 TO L03	*Call
2098		5071<5024	C01 TO L03	*Call
2098		5071<5025	C02 TO L03	*Call
2098		5071<5026	C03 TO L03	*Call
2098		5071<5027	C04 TO L03	*Call
2098		5071<5028	C05 TO L03	*Call
2098		5071<5029	D01 TO L03	*Call
2098		5071<5030	D02 TO L03	*Call
2098		5071<5031	D03 TO L03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5071<5032	D04 TO L03	*Call
2098		5071<5033	D05 TO L03	*Call
2098		5071<5034	E01 TO L03	*Call
2098		5071<5035	E02 TO L03	*Call
2098		5071<5036	E03 TO L03	*Call
2098		5071<5037	E04 TO L03	*Call
2098		5071<5038	E05 TO L03	*Call
2098		5071<5039	F01 TO L03	*Call
2098		5071<5040	F02 TO L03	*Call
2098		5071<5041	F03 TO L03	*Call
2098		5071<5042	F04 TO L03	*Call
2098		5071<5043	F05 TO L03	*Call
2098		5071<5044	G01 TO L03	*Call
2098		5071<5045	G02 TO L03	*Call
2098		5071<5046	G03 TO L03	*Call
2098		5071<5047	G04 TO L03	*Call
2098		5071<5048	G05 TO L03	*Call
2098		5071<5049	H01 TO L03	*Call
2098		5071<5050	H02 TO L03	*Call
2098		5071<5051	H03 TO L03	*Call
2098		5071<5052	H04 TO L03	*Call
2098		5071<5053	H05 TO L03	*Call
2098		5071<5054	I01 TO L03	*Call
2098		5071<5055	I02 TO L03	*Call
2098		5071<5056	I03 TO L03	*Call
2098		5071<5057	I04 TO L03	*Call
2098		5071<5058	I05 TO L03	*Call
2098		5071<5059	J01 TO L03	*Call
2098		5071<5060	J02 TO L03	*Call
2098		5071<5061	J03 TO L03	*Call
2098		5071<5062	J04 TO L03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5071<5063	J05 TO L03	*Call
2098		5071<5064	K01 TO L03	*Call
2098		5071<5065	K02 TO L03	*Call
2098		5071<5066	K03 TO L03	*Call
2098		5071<5067	K04 TO L03	*Call
2098		5071<5068	K05 TO L03	*Call
2098		5071<5069	L01 TO L03	*Call
2098		5071<5070	L02 TO L03	*Call
2098		5071<5072	L04 TO L03	*Call
2098		5071<5073	L05 TO L03	*Call
2098		5071<5074	M01 TO L03	*Call
2098		5071<5075	M02 TO L03	*Call
2098		5071<5076	M03 TO L03	*Call
2098		5071<5077	M04 TO L03	*Call
2098		5071<5078	M05 TO L03	*Call
2098		5071<5079	N01 TO L03	*Call
2098		5071<5080	N02 TO L03	*Call
2098		5071<5081	N03 TO L03	*Call
2098		5071<5082	N04 TO L03	*Call
2098		5071<5083	N05 TO L03	*Call
2098		5071<5084	O01 TO L03	*Call
2098		5071<5085	O02 TO L03	*Call
2098		5071<5086	O03 TO L03	*Call
2098		5071<5087	O04 TO L03	*Call
2098		5071<5088	O05 TO L03	*Call
2098		5071<5089	P01 TO L03	*Call
2098		5071<5090	P02 TO L03	*Call
2098		5071<5091	P03 TO L03	*Call
2098		5071<5092	P04 TO L03	*Call
2098		5071<5093	P05 TO L03	*Call
2098		5071<5094	Q01 TO L03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5071<5095	Q02 TO L03	*Call
2098		5071<5096	Q03 TO L03	*Call
2098		5071<5097	Q04 TO L03	*Call
2098		5071<5098	Q05 TO L03	*Call
2098		5071<5099	R01 TO L03	*Call
2098		5071<5100	R02 TO L03	*Call
2098		5071<5101	R03 TO L03	*Call
2098		5071<5102	R04 TO L03	*Call
2098		5071<5103	R05 TO L03	*Call
2098		5071<5104	S01 TO L03	*Call
2098		5071<5105	S02 TO L03	*Call
2098		5071<5106	S03 TO L03	*Call
2098		5071<5107	S04 TO L03	*Call
2098		5071<5108	S05 TO L03	*Call
2098		5071<5109	T01 TO L03	*Call
2098		5071<5110	T02 TO L03	*Call
2098		5071<5111	T03 TO L03	*Call
2098		5071<5112	T04 TO L03	*Call
2098		5071<5113	T05 TO L03	*Call
2098		5071<5114	U01 TO L03	*Call
2098		5071<5115	U02 TO L03	*Call
2098		5071<5116	U03 TO L03	*Call
2098		5071<5117	U04 TO L03	*Call
2098		5071<5118	U05 TO L03	*Call
2098		5071<5119	V01 TO L03	*Call
2098		5071<5120	V02 TO L03	*Call
2098		5071<5121	V03 TO L03	*Call
2098		5071<5122	V04 TO L03	*Call
2098		5071<5123	V05 TO L03	*Call
2098		5071<5124	W01 TO L03	*Call
2098		5071<5125	W02 TO L03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5071<5126	W03 TO L03	*Call
2098		5071<5127	W04 TO L03	*Call
2098		5071<5128	W05 TO L03	*Call
2098		5071<5129	X01 TO L03	*Call
2098		5071<5130	X02 TO L03	*Call
2098		5071<5131	X03 TO L03	*Call
2098		5071<5132	X04 TO L03	*Call
2098		5071<5133	X05 TO L03	*Call
2098		5071<5134	Y01 TO L03	*Call
2098		5071<5135	Y02 TO L03	*Call
2098		5071<5136	Y03 TO L03	*Call
2098		5071<5137	Y04 TO L03	*Call
2098		5071<5138	Y05 TO L03	*Call
2098		5071<5139	Z01 TO L03	*Call
2098		5071<5140	Z02 TO L03	*Call
2098		5071<5141	Z03 TO L03	*Call
2098		5071<5142	Z04 TO L03	*Call
2098		5071<5143	Z05 TO L03	*Call
2098		5072<5013	A00 TO L04	*Call
2098		5072<5014	A01 TO L04	*Call
2098		5072<5015	A02 TO L04	*Call
2098		5072<5016	A03 TO L04	*Call
2098		5072<5017	A04 TO L04	*Call
2098		5072<5018	A05 TO L04	*Call
2098		5072<5019	B01 TO L04	*Call
2098		5072<5020	B02 TO L04	*Call
2098		5072<5021	B03 TO L04	*Call
2098		5072<5022	B04 TO L04	*Call
2098		5072<5023	B05 TO L04	*Call
2098		5072<5024	C01 TO L04	*Call
2098		5072<5025	C02 TO L04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5072<5026	C03 TO L04	*Call
2098		5072<5027	C04 TO L04	*Call
2098		5072<5028	C05 TO L04	*Call
2098		5072<5029	D01 TO L04	*Call
2098		5072<5030	D02 TO L04	*Call
2098		5072<5031	D03 TO L04	*Call
2098		5072<5032	D04 TO L04	*Call
2098		5072<5033	D05 TO L04	*Call
2098		5072<5034	E01 TO L04	*Call
2098		5072<5035	E02 TO L04	*Call
2098		5072<5036	E03 TO L04	*Call
2098		5072<5037	E04 TO L04	*Call
2098		5072<5038	E05 TO L04	*Call
2098		5072<5039	F01 TO L04	*Call
2098		5072<5040	F02 TO L04	*Call
2098		5072<5041	F03 TO L04	*Call
2098		5072<5042	F04 TO L04	*Call
2098		5072<5043	F05 TO L04	*Call
2098		5072<5044	G01 TO L04	*Call
2098		5072<5045	G02 TO L04	*Call
2098		5072<5046	G03 TO L04	*Call
2098		5072<5047	G04 TO L04	*Call
2098		5072<5048	G05 TO L04	*Call
2098		5072<5049	H01 TO L04	*Call
2098		5072<5050	H02 TO L04	*Call
2098		5072<5051	H03 TO L04	*Call
2098		5072<5052	H04 TO L04	*Call
2098		5072<5053	H05 TO L04	*Call
2098		5072<5054	I01 TO L04	*Call
2098		5072<5055	I02 TO L04	*Call
2098		5072<5056	I03 TO L04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5072<5057	I04 TO L04	*Call
2098		5072<5058	I05 TO L04	*Call
2098		5072<5059	J01 TO L04	*Call
2098		5072<5060	J02 TO L04	*Call
2098		5072<5061	J03 TO L04	*Call
2098		5072<5062	J04 TO L04	*Call
2098		5072<5063	J05 TO L04	*Call
2098		5072<5064	K01 TO L04	*Call
2098		5072<5065	K02 TO L04	*Call
2098		5072<5066	K03 TO L04	*Call
2098		5072<5067	K04 TO L04	*Call
2098		5072<5068	K05 TO L04	*Call
2098		5072<5069	L01 TO L04	*Call
2098		5072<5070	L02 TO L04	*Call
2098		5072<5071	L03 TO L04	*Call
2098		5072<5073	L05 TO L04	*Call
2098		5072<5074	M01 TO L04	*Call
2098		5072<5075	M02 TO L04	*Call
2098		5072<5076	M03 TO L04	*Call
2098		5072<5077	M04 TO L04	*Call
2098		5072<5078	M05 TO L04	*Call
2098		5072<5079	N01 TO L04	*Call
2098		5072<5080	N02 TO L04	*Call
2098		5072<5081	N03 TO L04	*Call
2098		5072<5082	N04 TO L04	*Call
2098		5072<5083	N05 TO L04	*Call
2098		5072<5084	O01 TO L04	*Call
2098		5072<5085	O02 TO L04	*Call
2098		5072<5086	O03 TO L04	*Call
2098		5072<5087	O04 TO L04	*Call
2098		5072<5088	O05 TO L04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5072<5089	P01 TO L04	*Call
2098		5072<5090	P02 TO L04	*Call
2098		5072<5091	P03 TO L04	*Call
2098		5072<5092	P04 TO L04	*Call
2098		5072<5093	P05 TO L04	*Call
2098		5072<5094	Q01 TO L04	*Call
2098		5072<5095	Q02 TO L04	*Call
2098		5072<5096	Q03 TO L04	*Call
2098		5072<5097	Q04 TO L04	*Call
2098		5072<5098	Q05 TO L04	*Call
2098		5072<5099	R01 TO L04	*Call
2098		5072<5100	R02 TO L04	*Call
2098		5072<5101	R03 TO L04	*Call
2098		5072<5102	R04 TO L04	*Call
2098		5072<5103	R05 TO L04	*Call
2098		5072<5104	S01 TO L04	*Call
2098		5072<5105	S02 TO L04	*Call
2098		5072<5106	S03 TO L04	*Call
2098		5072<5107	S04 TO L04	*Call
2098		5072<5108	S05 TO L04	*Call
2098		5072<5109	T01 TO L04	*Call
2098		5072<5110	T02 TO L04	*Call
2098		5072<5111	T03 TO L04	*Call
2098		5072<5112	T04 TO L04	*Call
2098		5072<5113	T05 TO L04	*Call
2098		5072<5114	U01 TO L04	*Call
2098		5072<5115	U02 TO L04	*Call
2098		5072<5116	U03 TO L04	*Call
2098		5072<5117	U04 TO L04	*Call
2098		5072<5118	U05 TO L04	*Call
2098		5072<5119	V01 TO L04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5072<5120	V02 TO L04	*Call
2098		5072<5121	V03 TO L04	*Call
2098		5072<5122	V04 TO L04	*Call
2098		5072<5123	V05 TO L04	*Call
2098		5072<5124	W01 TO L04	*Call
2098		5072<5125	W02 TO L04	*Call
2098		5072<5126	W03 TO L04	*Call
2098		5072<5127	W04 TO L04	*Call
2098		5072<5128	W05 TO L04	*Call
2098		5072<5129	X01 TO L04	*Call
2098		5072<5130	X02 TO L04	*Call
2098		5072<5131	X03 TO L04	*Call
2098		5072<5132	X04 TO L04	*Call
2098		5072<5133	X05 TO L04	*Call
2098		5072<5134	Y01 TO L04	*Call
2098		5072<5135	Y02 TO L04	*Call
2098		5072<5136	Y03 TO L04	*Call
2098		5072<5137	Y04 TO L04	*Call
2098		5072<5138	Y05 TO L04	*Call
2098		5072<5139	Z01 TO L04	*Call
2098		5072<5140	Z02 TO L04	*Call
2098		5072<5141	Z03 TO L04	*Call
2098		5072<5142	Z04 TO L04	*Call
2098		5072<5143	Z05 TO L04	*Call
2098		5073<5013	A00 TO L05	*Call
2098		5073<5014	A01 TO L05	*Call
2098		5073<5015	A02 TO L05	*Call
2098		5073<5016	A03 TO L05	*Call
2098		5073<5017	A04 TO L05	*Call
2098		5073<5018	A05 TO L05	*Call
2098		5073<5019	B01 TO L05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5073<5020	B02 TO L05	*Call
2098		5073<5021	B03 TO L05	*Call
2098		5073<5022	B04 TO L05	*Call
2098		5073<5023	B05 TO L05	*Call
2098		5073<5024	C01 TO L05	*Call
2098		5073<5025	C02 TO L05	*Call
2098		5073<5026	C03 TO L05	*Call
2098		5073<5027	C04 TO L05	*Call
2098		5073<5028	C05 TO L05	*Call
2098		5073<5029	D01 TO L05	*Call
2098		5073<5030	D02 TO L05	*Call
2098		5073<5031	D03 TO L05	*Call
2098		5073<5032	D04 TO L05	*Call
2098		5073<5033	D05 TO L05	*Call
2098		5073<5034	E01 TO L05	*Call
2098		5073<5035	E02 TO L05	*Call
2098		5073<5036	E03 TO L05	*Call
2098		5073<5037	E04 TO L05	*Call
2098		5073<5038	E05 TO L05	*Call
2098		5073<5039	F01 TO L05	*Call
2098		5073<5040	F02 TO L05	*Call
2098		5073<5041	F03 TO L05	*Call
2098		5073<5042	F04 TO L05	*Call
2098		5073<5043	F05 TO L05	*Call
2098		5073<5044	G01 TO L05	*Call
2098		5073<5045	G02 TO L05	*Call
2098		5073<5046	G03 TO L05	*Call
2098		5073<5047	G04 TO L05	*Call
2098		5073<5048	G05 TO L05	*Call
2098		5073<5049	H01 TO L05	*Call
2098		5073<5050	H02 TO L05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5073<5051	H03 TO L05	*Call
2098		5073<5052	H04 TO L05	*Call
2098		5073<5053	H05 TO L05	*Call
2098		5073<5054	I01 TO L05	*Call
2098		5073<5055	I02 TO L05	*Call
2098		5073<5056	I03 TO L05	*Call
2098		5073<5057	I04 TO L05	*Call
2098		5073<5058	I05 TO L05	*Call
2098		5073<5059	J01 TO L05	*Call
2098		5073<5060	J02 TO L05	*Call
2098		5073<5061	J03 TO L05	*Call
2098		5073<5062	J04 TO L05	*Call
2098		5073<5063	J05 TO L05	*Call
2098		5073<5064	K01 TO L05	*Call
2098		5073<5065	K02 TO L05	*Call
2098		5073<5066	K03 TO L05	*Call
2098		5073<5067	K04 TO L05	*Call
2098		5073<5068	K05 TO L05	*Call
2098		5073<5069	L01 TO L05	*Call
2098		5073<5070	L02 TO L05	*Call
2098		5073<5071	L03 TO L05	*Call
2098		5073<5072	L04 TO L05	*Call
2098		5073<5074	M01 TO L05	*Call
2098		5073<5075	M02 TO L05	*Call
2098		5073<5076	M03 TO L05	*Call
2098		5073<5077	M04 TO L05	*Call
2098		5073<5078	M05 TO L05	*Call
2098		5073<5079	N01 TO L05	*Call
2098		5073<5080	N02 TO L05	*Call
2098		5073<5081	N03 TO L05	*Call
2098		5073<5082	N04 TO L05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5073<5083	N05 TO L05	*Call
2098		5073<5084	O01 TO L05	*Call
2098		5073<5085	O02 TO L05	*Call
2098		5073<5086	O03 TO L05	*Call
2098		5073<5087	O04 TO L05	*Call
2098		5073<5088	O05 TO L05	*Call
2098		5073<5089	P01 TO L05	*Call
2098		5073<5090	P02 TO L05	*Call
2098		5073<5091	P03 TO L05	*Call
2098		5073<5092	P04 TO L05	*Call
2098		5073<5093	P05 TO L05	*Call
2098		5073<5094	Q01 TO L05	*Call
2098		5073<5095	Q02 TO L05	*Call
2098		5073<5096	Q03 TO L05	*Call
2098		5073<5097	Q04 TO L05	*Call
2098		5073<5098	Q05 TO L05	*Call
2098		5073<5099	R01 TO L05	*Call
2098		5073<5100	R02 TO L05	*Call
2098		5073<5101	R03 TO L05	*Call
2098		5073<5102	R04 TO L05	*Call
2098		5073<5103	R05 TO L05	*Call
2098		5073<5104	S01 TO L05	*Call
2098		5073<5105	S02 TO L05	*Call
2098		5073<5106	S03 TO L05	*Call
2098		5073<5107	S04 TO L05	*Call
2098		5073<5108	S05 TO L05	*Call
2098		5073<5109	T01 TO L05	*Call
2098		5073<5110	T02 TO L05	*Call
2098		5073<5111	T03 TO L05	*Call
2098		5073<5112	T04 TO L05	*Call
2098		5073<5113	T05 TO L05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5073<5114	U01 TO L05	*Call
2098		5073<5115	U02 TO L05	*Call
2098		5073<5116	U03 TO L05	*Call
2098		5073<5117	U04 TO L05	*Call
2098		5073<5118	U05 TO L05	*Call
2098		5073<5119	V01 TO L05	*Call
2098		5073<5120	V02 TO L05	*Call
2098		5073<5121	V03 TO L05	*Call
2098		5073<5122	V04 TO L05	*Call
2098		5073<5123	V05 TO L05	*Call
2098		5073<5124	W01 TO L05	*Call
2098		5073<5125	W02 TO L05	*Call
2098		5073<5126	W03 TO L05	*Call
2098		5073<5127	W04 TO L05	*Call
2098		5073<5128	W05 TO L05	*Call
2098		5073<5129	X01 TO L05	*Call
2098		5073<5130	X02 TO L05	*Call
2098		5073<5131	X03 TO L05	*Call
2098		5073<5132	X04 TO L05	*Call
2098		5073<5133	X05 TO L05	*Call
2098		5073<5134	Y01 TO L05	*Call
2098		5073<5135	Y02 TO L05	*Call
2098		5073<5136	Y03 TO L05	*Call
2098		5073<5137	Y04 TO L05	*Call
2098		5073<5138	Y05 TO L05	*Call
2098		5073<5139	Z01 TO L05	*Call
2098		5073<5140	Z02 TO L05	*Call
2098		5073<5141	Z03 TO L05	*Call
2098		5073<5142	Z04 TO L05	*Call
2098		5073<5143	Z05 TO L05	*Call
2098		5074<5013	A00 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5074<5014	A01 TO M01	*Call
2098		5074<5015	A02 TO M01	*Call
2098		5074<5016	A03 TO M01	*Call
2098		5074<5017	A04 TO M01	*Call
2098		5074<5018	A05 TO M01	*Call
2098		5074<5019	B01 TO M01	*Call
2098		5074<5020	B02 TO M01	*Call
2098		5074<5021	B03 TO M01	*Call
2098		5074<5022	B04 TO M01	*Call
2098		5074<5023	B05 TO M01	*Call
2098		5074<5024	C01 TO M01	*Call
2098		5074<5025	C02 TO M01	*Call
2098		5074<5026	C03 TO M01	*Call
2098		5074<5027	C04 TO M01	*Call
2098		5074<5028	C05 TO M01	*Call
2098		5074<5029	D01 TO M01	*Call
2098		5074<5030	D02 TO M01	*Call
2098		5074<5031	D03 TO M01	*Call
2098		5074<5032	D04 TO M01	*Call
2098		5074<5033	D05 TO M01	*Call
2098		5074<5034	E01 TO M01	*Call
2098		5074<5035	E02 TO M01	*Call
2098		5074<5036	E03 TO M01	*Call
2098		5074<5037	E04 TO M01	*Call
2098		5074<5038	E05 TO M01	*Call
2098		5074<5039	F01 TO M01	*Call
2098		5074<5040	F02 TO M01	*Call
2098		5074<5041	F03 TO M01	*Call
2098		5074<5042	F04 TO M01	*Call
2098		5074<5043	F05 TO M01	*Call
2098		5074<5044	G01 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5074<5045	G02 TO M01	*Call
2098		5074<5046	G03 TO M01	*Call
2098		5074<5047	G04 TO M01	*Call
2098		5074<5048	G05 TO M01	*Call
2098		5074<5049	H01 TO M01	*Call
2098		5074<5050	H02 TO M01	*Call
2098		5074<5051	H03 TO M01	*Call
2098		5074<5052	H04 TO M01	*Call
2098		5074<5053	H05 TO M01	*Call
2098		5074<5054	I01 TO M01	*Call
2098		5074<5055	I02 TO M01	*Call
2098		5074<5056	I03 TO M01	*Call
2098		5074<5057	I04 TO M01	*Call
2098		5074<5058	I05 TO M01	*Call
2098		5074<5059	J01 TO M01	*Call
2098		5074<5060	J02 TO M01	*Call
2098		5074<5061	J03 TO M01	*Call
2098		5074<5062	J04 TO M01	*Call
2098		5074<5063	J05 TO M01	*Call
2098		5074<5064	K01 TO M01	*Call
2098		5074<5065	K02 TO M01	*Call
2098		5074<5066	K03 TO M01	*Call
2098		5074<5067	K04 TO M01	*Call
2098		5074<5068	K05 TO M01	*Call
2098		5074<5069	L01 TO M01	*Call
2098		5074<5070	L02 TO M01	*Call
2098		5074<5071	L03 TO M01	*Call
2098		5074<5072	L04 TO M01	*Call
2098		5074<5073	L05 TO M01	*Call
2098		5074<5075	M02 TO M01	*Call
2098		5074<5076	M03 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5074<5077	M04 TO M01	*Call
2098		5074<5078	M05 TO M01	*Call
2098		5074<5079	N01 TO M01	*Call
2098		5074<5080	N02 TO M01	*Call
2098		5074<5081	N03 TO M01	*Call
2098		5074<5082	N04 TO M01	*Call
2098		5074<5083	N05 TO M01	*Call
2098		5074<5084	O01 TO M01	*Call
2098		5074<5085	O02 TO M01	*Call
2098		5074<5086	O03 TO M01	*Call
2098		5074<5087	O04 TO M01	*Call
2098		5074<5088	O05 TO M01	*Call
2098		5074<5089	P01 TO M01	*Call
2098		5074<5090	P02 TO M01	*Call
2098		5074<5091	P03 TO M01	*Call
2098		5074<5092	P04 TO M01	*Call
2098		5074<5093	P05 TO M01	*Call
2098		5074<5094	Q01 TO M01	*Call
2098		5074<5095	Q02 TO M01	*Call
2098		5074<5096	Q03 TO M01	*Call
2098		5074<5097	Q04 TO M01	*Call
2098		5074<5098	Q05 TO M01	*Call
2098		5074<5099	R01 TO M01	*Call
2098		5074<5100	R02 TO M01	*Call
2098		5074<5101	R03 TO M01	*Call
2098		5074<5102	R04 TO M01	*Call
2098		5074<5103	R05 TO M01	*Call
2098		5074<5104	S01 TO M01	*Call
2098		5074<5105	S02 TO M01	*Call
2098		5074<5106	S03 TO M01	*Call
2098		5074<5107	S04 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5074<5108	S05 TO M01	*Call
2098		5074<5109	T01 TO M01	*Call
2098		5074<5110	T02 TO M01	*Call
2098		5074<5111	T03 TO M01	*Call
2098		5074<5112	T04 TO M01	*Call
2098		5074<5113	T05 TO M01	*Call
2098		5074<5114	U01 TO M01	*Call
2098		5074<5115	U02 TO M01	*Call
2098		5074<5116	U03 TO M01	*Call
2098		5074<5117	U04 TO M01	*Call
2098		5074<5118	U05 TO M01	*Call
2098		5074<5119	V01 TO M01	*Call
2098		5074<5120	V02 TO M01	*Call
2098		5074<5121	V03 TO M01	*Call
2098		5074<5122	V04 TO M01	*Call
2098		5074<5123	V05 TO M01	*Call
2098		5074<5124	W01 TO M01	*Call
2098		5074<5125	W02 TO M01	*Call
2098		5074<5126	W03 TO M01	*Call
2098		5074<5127	W04 TO M01	*Call
2098		5074<5128	W05 TO M01	*Call
2098		5074<5129	X01 TO M01	*Call
2098		5074<5130	X02 TO M01	*Call
2098		5074<5131	X03 TO M01	*Call
2098		5074<5132	X04 TO M01	*Call
2098		5074<5133	X05 TO M01	*Call
2098		5074<5134	Y01 TO M01	*Call
2098		5074<5135	Y02 TO M01	*Call
2098		5074<5136	Y03 TO M01	*Call
2098		5074<5137	Y04 TO M01	*Call
2098		5074<5138	Y05 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5074<5139	Z01 TO M01	*Call
2098		5074<5140	Z02 TO M01	*Call
2098		5074<5141	Z03 TO M01	*Call
2098		5074<5142	Z04 TO M01	*Call
2098		5074<5143	Z05 TO M01	*Call
2098		5075<5013	A00 TO M02	*Call
2098		5075<5014	A01 TO M02	*Call
2098		5075<5015	A02 TO M02	*Call
2098		5075<5016	A03 TO M02	*Call
2098		5075<5017	A04 TO M02	*Call
2098		5075<5018	A05 TO M02	*Call
2098		5075<5019	B01 TO M02	*Call
2098		5075<5020	B02 TO M02	*Call
2098		5075<5021	B03 TO M02	*Call
2098		5075<5022	B04 TO M02	*Call
2098		5075<5023	B05 TO M02	*Call
2098		5075<5024	C01 TO M02	*Call
2098		5075<5025	C02 TO M02	*Call
2098		5075<5026	C03 TO M02	*Call
2098		5075<5027	C04 TO M02	*Call
2098		5075<5028	C05 TO M02	*Call
2098		5075<5029	D01 TO M02	*Call
2098		5075<5030	D02 TO M02	*Call
2098		5075<5031	D03 TO M02	*Call
2098		5075<5032	D04 TO M02	*Call
2098		5075<5033	D05 TO M02	*Call
2098		5075<5034	E01 TO M02	*Call
2098		5075<5035	E02 TO M02	*Call
2098		5075<5036	E03 TO M02	*Call
2098		5075<5037	E04 TO M02	*Call
2098		5075<5038	E05 TO M02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5075<5039	F01 TO M02	*Call
2098		5075<5040	F02 TO M02	*Call
2098		5075<5041	F03 TO M02	*Call
2098		5075<5042	F04 TO M02	*Call
2098		5075<5043	F05 TO M02	*Call
2098		5075<5044	G01 TO M02	*Call
2098		5075<5045	G02 TO M02	*Call
2098		5075<5046	G03 TO M02	*Call
2098		5075<5047	G04 TO M02	*Call
2098		5075<5048	G05 TO M02	*Call
2098		5075<5049	H01 TO M02	*Call
2098		5075<5050	H02 TO M02	*Call
2098		5075<5051	H03 TO M02	*Call
2098		5075<5052	H04 TO M02	*Call
2098		5075<5053	H05 TO M02	*Call
2098		5075<5054	I01 TO M02	*Call
2098		5075<5055	I02 TO M02	*Call
2098		5075<5056	I03 TO M02	*Call
2098		5075<5057	I04 TO M02	*Call
2098		5075<5058	I05 TO M02	*Call
2098		5075<5059	J01 TO M02	*Call
2098		5075<5060	J02 TO M02	*Call
2098		5075<5061	J03 TO M02	*Call
2098		5075<5062	J04 TO M02	*Call
2098		5075<5063	J05 TO M02	*Call
2098		5075<5064	K01 TO M02	*Call
2098		5075<5065	K02 TO M02	*Call
2098		5075<5066	K03 TO M02	*Call
2098		5075<5067	K04 TO M02	*Call
2098		5075<5068	K05 TO M02	*Call
2098		5075<5069	L01 TO M02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5075<5070	L02 TO M02	*Call
2098		5075<5071	L03 TO M02	*Call
2098		5075<5072	L04 TO M02	*Call
2098		5075<5073	L05 TO M02	*Call
2098		5075<5074	M01 TO M02	*Call
2098		5075<5076	M03 TO M02	*Call
2098		5075<5077	M04 TO M02	*Call
2098		5075<5078	M05 TO M02	*Call
2098		5075<5079	N01 TO M02	*Call
2098		5075<5080	N02 TO M02	*Call
2098		5075<5081	N03 TO M02	*Call
2098		5075<5082	N04 TO M02	*Call
2098		5075<5083	N05 TO M02	*Call
2098		5075<5084	O01 TO M02	*Call
2098		5075<5085	O02 TO M02	*Call
2098		5075<5086	O03 TO M02	*Call
2098		5075<5087	O04 TO M02	*Call
2098		5075<5088	O05 TO M02	*Call
2098		5075<5089	P01 TO M02	*Call
2098		5075<5090	P02 TO M02	*Call
2098		5075<5091	P03 TO M02	*Call
2098		5075<5092	P04 TO M02	*Call
2098		5075<5093	P05 TO M02	*Call
2098		5075<5094	Q01 TO M02	*Call
2098		5075<5095	Q02 TO M02	*Call
2098		5075<5096	Q03 TO M02	*Call
2098		5075<5097	Q04 TO M02	*Call
2098		5075<5098	Q05 TO M02	*Call
2098		5075<5099	R01 TO M02	*Call
2098		5075<5100	R02 TO M02	*Call
2098		5075<5101	R03 TO M02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5075<5102	R04 TO M02	*Call
2098		5075<5103	R05 TO M02	*Call
2098		5075<5104	S01 TO M02	*Call
2098		5075<5105	S02 TO M02	*Call
2098		5075<5106	S03 TO M02	*Call
2098		5075<5107	S04 TO M02	*Call
2098		5075<5108	S05 TO M02	*Call
2098		5075<5109	T01 TO M02	*Call
2098		5075<5110	T02 TO M02	*Call
2098		5075<5111	T03 TO M02	*Call
2098		5075<5112	T04 TO M02	*Call
2098		5075<5113	T05 TO M02	*Call
2098		5075<5114	U01 TO M02	*Call
2098		5075<5115	U02 TO M02	*Call
2098		5075<5116	U03 TO M02	*Call
2098		5075<5117	U04 TO M02	*Call
2098		5075<5118	U05 TO M02	*Call
2098		5075<5119	V01 TO M02	*Call
2098		5075<5120	V02 TO M02	*Call
2098		5075<5121	V03 TO M02	*Call
2098		5075<5122	V04 TO M02	*Call
2098		5075<5123	V05 TO M02	*Call
2098		5075<5124	W01 TO M02	*Call
2098		5075<5125	W02 TO M02	*Call
2098		5075<5126	W03 TO M02	*Call
2098		5075<5127	W04 TO M02	*Call
2098		5075<5128	W05 TO M02	*Call
2098		5075<5129	X01 TO M02	*Call
2098		5075<5130	X02 TO M02	*Call
2098		5075<5131	X03 TO M02	*Call
2098		5075<5132	X04 TO M02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5075<5133	X05 TO M02	*Call
2098		5075<5134	Y01 TO M02	*Call
2098		5075<5135	Y02 TO M02	*Call
2098		5075<5136	Y03 TO M02	*Call
2098		5075<5137	Y04 TO M02	*Call
2098		5075<5138	Y05 TO M02	*Call
2098		5075<5139	Z01 TO M02	*Call
2098		5075<5140	Z02 TO M02	*Call
2098		5075<5141	Z03 TO M02	*Call
2098		5075<5142	Z04 TO M02	*Call
2098		5075<5143	Z05 TO M02	*Call
2098		5076<5013	A00 TO M03	*Call
2098		5076<5014	A01 TO M03	*Call
2098		5076<5015	A02 TO M03	*Call
2098		5076<5016	A03 TO M03	*Call
2098		5076<5017	A04 TO M03	*Call
2098		5076<5018	A05 TO M03	*Call
2098		5076<5019	B01 TO M03	*Call
2098		5076<5020	B02 TO M03	*Call
2098		5076<5021	B03 TO M03	*Call
2098		5076<5022	B04 TO M03	*Call
2098		5076<5023	B05 TO M03	*Call
2098		5076<5024	C01 TO M03	*Call
2098		5076<5025	C02 TO M03	*Call
2098		5076<5026	C03 TO M03	*Call
2098		5076<5027	C04 TO M03	*Call
2098		5076<5028	C05 TO M03	*Call
2098		5076<5029	D01 TO M03	*Call
2098		5076<5030	D02 TO M03	*Call
2098		5076<5031	D03 TO M03	*Call
2098		5076<5032	D04 TO M03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5076<5033	D05 TO M03	*Call
2098		5076<5034	E01 TO M03	*Call
2098		5076<5035	E02 TO M03	*Call
2098		5076<5036	E03 TO M03	*Call
2098		5076<5037	E04 TO M03	*Call
2098		5076<5038	E05 TO M03	*Call
2098		5076<5039	F01 TO M03	*Call
2098		5076<5040	F02 TO M03	*Call
2098		5076<5041	F03 TO M03	*Call
2098		5076<5042	F04 TO M03	*Call
2098		5076<5043	F05 TO M03	*Call
2098		5076<5044	G01 TO M03	*Call
2098		5076<5045	G02 TO M03	*Call
2098		5076<5046	G03 TO M03	*Call
2098		5076<5047	G04 TO M03	*Call
2098		5076<5048	G05 TO M03	*Call
2098		5076<5049	H01 TO M03	*Call
2098		5076<5050	H02 TO M03	*Call
2098		5076<5051	H03 TO M03	*Call
2098		5076<5052	H04 TO M03	*Call
2098		5076<5053	H05 TO M03	*Call
2098		5076<5054	I01 TO M03	*Call
2098		5076<5055	I02 TO M03	*Call
2098		5076<5056	I03 TO M03	*Call
2098		5076<5057	I04 TO M03	*Call
2098		5076<5058	I05 TO M03	*Call
2098		5076<5059	J01 TO M03	*Call
2098		5076<5060	J02 TO M03	*Call
2098		5076<5061	J03 TO M03	*Call
2098		5076<5062	J04 TO M03	*Call
2098		5076<5063	J05 TO M03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5076<5064	K01 TO M03	*Call
2098		5076<5065	K02 TO M03	*Call
2098		5076<5066	K03 TO M03	*Call
2098		5076<5067	K04 TO M03	*Call
2098		5076<5068	K05 TO M03	*Call
2098		5076<5069	L01 TO M03	*Call
2098		5076<5070	L02 TO M03	*Call
2098		5076<5071	L03 TO M03	*Call
2098		5076<5072	L04 TO M03	*Call
2098		5076<5073	L05 TO M03	*Call
2098		5076<5074	M01 TO M03	*Call
2098		5076<5075	M02 TO M03	*Call
2098		5076<5077	M04 TO M03	*Call
2098		5076<5078	M05 TO M03	*Call
2098		5076<5079	N01 TO M03	*Call
2098		5076<5080	N02 TO M03	*Call
2098		5076<5081	N03 TO M03	*Call
2098		5076<5082	N04 TO M03	*Call
2098		5076<5083	N05 TO M03	*Call
2098		5076<5084	O01 TO M03	*Call
2098		5076<5085	O02 TO M03	*Call
2098		5076<5086	O03 TO M03	*Call
2098		5076<5087	O04 TO M03	*Call
2098		5076<5088	O05 TO M03	*Call
2098		5076<5089	P01 TO M03	*Call
2098		5076<5090	P02 TO M03	*Call
2098		5076<5091	P03 TO M03	*Call
2098		5076<5092	P04 TO M03	*Call
2098		5076<5093	P05 TO M03	*Call
2098		5076<5094	Q01 TO M03	*Call
2098		5076<5095	Q02 TO M03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5076<5096	Q03 TO M03	*Call
2098		5076<5097	Q04 TO M03	*Call
2098		5076<5098	Q05 TO M03	*Call
2098		5076<5099	R01 TO M03	*Call
2098		5076<5100	R02 TO M03	*Call
2098		5076<5101	R03 TO M03	*Call
2098		5076<5102	R04 TO M03	*Call
2098		5076<5103	R05 TO M03	*Call
2098		5076<5104	S01 TO M03	*Call
2098		5076<5105	S02 TO M03	*Call
2098		5076<5106	S03 TO M03	*Call
2098		5076<5107	S04 TO M03	*Call
2098		5076<5108	S05 TO M03	*Call
2098		5076<5109	T01 TO M03	*Call
2098		5076<5110	T02 TO M03	*Call
2098		5076<5111	T03 TO M03	*Call
2098		5076<5112	T04 TO M03	*Call
2098		5076<5113	T05 TO M03	*Call
2098		5076<5114	U01 TO M03	*Call
2098		5076<5115	U02 TO M03	*Call
2098		5076<5116	U03 TO M03	*Call
2098		5076<5117	U04 TO M03	*Call
2098		5076<5118	U05 TO M03	*Call
2098		5076<5119	V01 TO M03	*Call
2098		5076<5120	V02 TO M03	*Call
2098		5076<5121	V03 TO M03	*Call
2098		5076<5122	V04 TO M03	*Call
2098		5076<5123	V05 TO M03	*Call
2098		5076<5124	W01 TO M03	*Call
2098		5076<5125	W02 TO M03	*Call
2098		5076<5126	W03 TO M03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5076<5127	W04 TO M03	*Call
2098		5076<5128	W05 TO M03	*Call
2098		5076<5129	X01 TO M03	*Call
2098		5076<5130	X02 TO M03	*Call
2098		5076<5131	X03 TO M03	*Call
2098		5076<5132	X04 TO M03	*Call
2098		5076<5133	X05 TO M03	*Call
2098		5076<5134	Y01 TO M03	*Call
2098		5076<5135	Y02 TO M03	*Call
2098		5076<5136	Y03 TO M03	*Call
2098		5076<5137	Y04 TO M03	*Call
2098		5076<5138	Y05 TO M03	*Call
2098		5076<5139	Z01 TO M03	*Call
2098		5076<5140	Z02 TO M03	*Call
2098		5076<5141	Z03 TO M03	*Call
2098		5076<5142	Z04 TO M03	*Call
2098		5076<5143	Z05 TO M03	*Call
2098		5077<5013	A00 TO M04	*Call
2098		5077<5014	A01 TO M04	*Call
2098		5077<5015	A02 TO M04	*Call
2098		5077<5016	A03 TO M04	*Call
2098		5077<5017	A04 TO M04	*Call
2098		5077<5018	A05 TO M04	*Call
2098		5077<5019	B01 TO M04	*Call
2098		5077<5020	B02 TO M04	*Call
2098		5077<5021	B03 TO M04	*Call
2098		5077<5022	B04 TO M04	*Call
2098		5077<5023	B05 TO M04	*Call
2098		5077<5024	C01 TO M04	*Call
2098		5077<5025	C02 TO M04	*Call
2098		5077<5026	C03 TO M04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5077<5027	C04 TO M04	*Call
2098		5077<5028	C05 TO M04	*Call
2098		5077<5029	D01 TO M04	*Call
2098		5077<5030	D02 TO M04	*Call
2098		5077<5031	D03 TO M04	*Call
2098		5077<5032	D04 TO M04	*Call
2098		5077<5033	D05 TO M04	*Call
2098		5077<5034	E01 TO M04	*Call
2098		5077<5035	E02 TO M04	*Call
2098		5077<5036	E03 TO M04	*Call
2098		5077<5037	E04 TO M04	*Call
2098		5077<5038	E05 TO M04	*Call
2098		5077<5039	F01 TO M04	*Call
2098		5077<5040	F02 TO M04	*Call
2098		5077<5041	F03 TO M04	*Call
2098		5077<5042	F04 TO M04	*Call
2098		5077<5043	F05 TO M04	*Call
2098		5077<5044	G01 TO M04	*Call
2098		5077<5045	G02 TO M04	*Call
2098		5077<5046	G03 TO M04	*Call
2098		5077<5047	G04 TO M04	*Call
2098		5077<5048	G05 TO M04	*Call
2098		5077<5049	H01 TO M04	*Call
2098		5077<5050	H02 TO M04	*Call
2098		5077<5051	H03 TO M04	*Call
2098		5077<5052	H04 TO M04	*Call
2098		5077<5053	H05 TO M04	*Call
2098		5077<5054	I01 TO M04	*Call
2098		5077<5055	I02 TO M04	*Call
2098		5077<5056	I03 TO M04	*Call
2098		5077<5057	I04 TO M04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5077<5058	I05 TO M04	*Call
2098		5077<5059	J01 TO M04	*Call
2098		5077<5060	J02 TO M04	*Call
2098		5077<5061	J03 TO M04	*Call
2098		5077<5062	J04 TO M04	*Call
2098		5077<5063	J05 TO M04	*Call
2098		5077<5064	K01 TO M04	*Call
2098		5077<5065	K02 TO M04	*Call
2098		5077<5066	K03 TO M04	*Call
2098		5077<5067	K04 TO M04	*Call
2098		5077<5068	K05 TO M04	*Call
2098		5077<5069	L01 TO M04	*Call
2098		5077<5070	L02 TO M04	*Call
2098		5077<5071	L03 TO M04	*Call
2098		5077<5072	L04 TO M04	*Call
2098		5077<5073	L05 TO M04	*Call
2098		5077<5074	M01 TO M04	*Call
2098		5077<5075	M02 TO M04	*Call
2098		5077<5076	M03 TO M04	*Call
2098		5077<5078	M05 TO M04	*Call
2098		5077<5079	N01 TO M04	*Call
2098		5077<5080	N02 TO M04	*Call
2098		5077<5081	N03 TO M04	*Call
2098		5077<5082	N04 TO M04	*Call
2098		5077<5083	N05 TO M04	*Call
2098		5077<5084	O01 TO M04	*Call
2098		5077<5085	O02 TO M04	*Call
2098		5077<5086	O03 TO M04	*Call
2098		5077<5087	O04 TO M04	*Call
2098		5077<5088	O05 TO M04	*Call
2098		5077<5089	P01 TO M04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5077<5090	P02 TO M04	*Call
2098		5077<5091	P03 TO M04	*Call
2098		5077<5092	P04 TO M04	*Call
2098		5077<5093	P05 TO M04	*Call
2098		5077<5094	Q01 TO M04	*Call
2098		5077<5095	Q02 TO M04	*Call
2098		5077<5096	Q03 TO M04	*Call
2098		5077<5097	Q04 TO M04	*Call
2098		5077<5098	Q05 TO M04	*Call
2098		5077<5099	R01 TO M04	*Call
2098		5077<5100	R02 TO M04	*Call
2098		5077<5101	R03 TO M04	*Call
2098		5077<5102	R04 TO M04	*Call
2098		5077<5103	R05 TO M04	*Call
2098		5077<5104	S01 TO M04	*Call
2098		5077<5105	S02 TO M04	*Call
2098		5077<5106	S03 TO M04	*Call
2098		5077<5107	S04 TO M04	*Call
2098		5077<5108	S05 TO M04	*Call
2098		5077<5109	T01 TO M04	*Call
2098		5077<5110	T02 TO M04	*Call
2098		5077<5111	T03 TO M04	*Call
2098		5077<5112	T04 TO M04	*Call
2098		5077<5113	T05 TO M04	*Call
2098		5077<5114	U01 TO M04	*Call
2098		5077<5115	U02 TO M04	*Call
2098		5077<5116	U03 TO M04	*Call
2098		5077<5117	U04 TO M04	*Call
2098		5077<5118	U05 TO M04	*Call
2098		5077<5119	V01 TO M04	*Call
2098		5077<5120	V02 TO M04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5077<5121	V03 TO M04	*Call
2098		5077<5122	V04 TO M04	*Call
2098		5077<5123	V05 TO M04	*Call
2098		5077<5124	W01 TO M04	*Call
2098		5077<5125	W02 TO M04	*Call
2098		5077<5126	W03 TO M04	*Call
2098		5077<5127	W04 TO M04	*Call
2098		5077<5128	W05 TO M04	*Call
2098		5077<5129	X01 TO M04	*Call
2098		5077<5130	X02 TO M04	*Call
2098		5077<5131	X03 TO M04	*Call
2098		5077<5132	X04 TO M04	*Call
2098		5077<5133	X05 TO M04	*Call
2098		5077<5134	Y01 TO M04	*Call
2098		5077<5135	Y02 TO M04	*Call
2098		5077<5136	Y03 TO M04	*Call
2098		5077<5137	Y04 TO M04	*Call
2098		5077<5138	Y05 TO M04	*Call
2098		5077<5139	Z01 TO M04	*Call
2098		5077<5140	Z02 TO M04	*Call
2098		5077<5141	Z03 TO M04	*Call
2098		5077<5142	Z04 TO M04	*Call
2098		5077<5143	Z05 TO M04	*Call
2098		5078<5013	A00 TO M05	*Call
2098		5078<5014	A01 TO M05	*Call
2098		5078<5015	A02 TO M05	*Call
2098		5078<5016	A03 TO M05	*Call
2098		5078<5017	A04 TO M05	*Call
2098		5078<5018	A05 TO M05	*Call
2098		5078<5019	B01 TO M05	*Call
2098		5078<5020	B02 TO M05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5078<5021	B03 TO M05	*Call
2098		5078<5022	B04 TO M05	*Call
2098		5078<5023	B05 TO M05	*Call
2098		5078<5024	C01 TO M05	*Call
2098		5078<5025	C02 TO M05	*Call
2098		5078<5026	C03 TO M05	*Call
2098		5078<5027	C04 TO M05	*Call
2098		5078<5028	C05 TO M05	*Call
2098		5078<5029	D01 TO M05	*Call
2098		5078<5030	D02 TO M05	*Call
2098		5078<5031	D03 TO M05	*Call
2098		5078<5032	D04 TO M05	*Call
2098		5078<5033	D05 TO M05	*Call
2098		5078<5034	E01 TO M05	*Call
2098		5078<5035	E02 TO M05	*Call
2098		5078<5036	E03 TO M05	*Call
2098		5078<5037	E04 TO M05	*Call
2098		5078<5038	E05 TO M05	*Call
2098		5078<5039	F01 TO M05	*Call
2098		5078<5040	F02 TO M05	*Call
2098		5078<5041	F03 TO M05	*Call
2098		5078<5042	F04 TO M05	*Call
2098		5078<5043	F05 TO M05	*Call
2098		5078<5044	G01 TO M05	*Call
2098		5078<5045	G02 TO M05	*Call
2098		5078<5046	G03 TO M05	*Call
2098		5078<5047	G04 TO M05	*Call
2098		5078<5048	G05 TO M05	*Call
2098		5078<5049	H01 TO M05	*Call
2098		5078<5050	H02 TO M05	*Call
2098		5078<5051	H03 TO M05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5078<5052	H04 TO M05	*Call
2098		5078<5053	H05 TO M05	*Call
2098		5078<5054	I01 TO M05	*Call
2098		5078<5055	I02 TO M05	*Call
2098		5078<5056	I03 TO M05	*Call
2098		5078<5057	I04 TO M05	*Call
2098		5078<5058	I05 TO M05	*Call
2098		5078<5059	J01 TO M05	*Call
2098		5078<5060	J02 TO M05	*Call
2098		5078<5061	J03 TO M05	*Call
2098		5078<5062	J04 TO M05	*Call
2098		5078<5063	J05 TO M05	*Call
2098		5078<5064	K01 TO M05	*Call
2098		5078<5065	K02 TO M05	*Call
2098		5078<5066	K03 TO M05	*Call
2098		5078<5067	K04 TO M05	*Call
2098		5078<5068	K05 TO M05	*Call
2098		5078<5069	L01 TO M05	*Call
2098		5078<5070	L02 TO M05	*Call
2098		5078<5071	L03 TO M05	*Call
2098		5078<5072	L04 TO M05	*Call
2098		5078<5073	L05 TO M05	*Call
2098		5078<5074	M01 TO M05	*Call
2098		5078<5075	M02 TO M05	*Call
2098		5078<5076	M03 TO M05	*Call
2098		5078<5077	M04 TO M05	*Call
2098		5078<5079	N01 TO M05	*Call
2098		5078<5080	N02 TO M05	*Call
2098		5078<5081	N03 TO M05	*Call
2098		5078<5082	N04 TO M05	*Call
2098		5078<5083	N05 TO M05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5078<5084	O01 TO M05	*Call
2098		5078<5085	O02 TO M05	*Call
2098		5078<5086	O03 TO M05	*Call
2098		5078<5087	O04 TO M05	*Call
2098		5078<5088	O05 TO M05	*Call
2098		5078<5089	P01 TO M05	*Call
2098		5078<5090	P02 TO M05	*Call
2098		5078<5091	P03 TO M05	*Call
2098		5078<5092	P04 TO M05	*Call
2098		5078<5093	P05 TO M05	*Call
2098		5078<5094	Q01 TO M05	*Call
2098		5078<5095	Q02 TO M05	*Call
2098		5078<5096	Q03 TO M05	*Call
2098		5078<5097	Q04 TO M05	*Call
2098		5078<5098	Q05 TO M05	*Call
2098		5078<5099	R01 TO M05	*Call
2098		5078<5100	R02 TO M05	*Call
2098		5078<5101	R03 TO M05	*Call
2098		5078<5102	R04 TO M05	*Call
2098		5078<5103	R05 TO M05	*Call
2098		5078<5104	S01 TO M05	*Call
2098		5078<5105	S02 TO M05	*Call
2098		5078<5106	S03 TO M05	*Call
2098		5078<5107	S04 TO M05	*Call
2098		5078<5108	S05 TO M05	*Call
2098		5078<5109	T01 TO M05	*Call
2098		5078<5110	T02 TO M05	*Call
2098		5078<5111	T03 TO M05	*Call
2098		5078<5112	T04 TO M05	*Call
2098		5078<5113	T05 TO M05	*Call
2098		5078<5114	U01 TO M05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5078<5115	U02 TO M05	*Call
2098		5078<5116	U03 TO M05	*Call
2098		5078<5117	U04 TO M05	*Call
2098		5078<5118	U05 TO M05	*Call
2098		5078<5119	V01 TO M05	*Call
2098		5078<5120	V02 TO M05	*Call
2098		5078<5121	V03 TO M05	*Call
2098		5078<5122	V04 TO M05	*Call
2098		5078<5123	V05 TO M05	*Call
2098		5078<5124	W01 TO M05	*Call
2098		5078<5125	W02 TO M05	*Call
2098		5078<5126	W03 TO M05	*Call
2098		5078<5127	W04 TO M05	*Call
2098		5078<5128	W05 TO M05	*Call
2098		5078<5129	X01 TO M05	*Call
2098		5078<5130	X02 TO M05	*Call
2098		5078<5131	X03 TO M05	*Call
2098		5078<5132	X04 TO M05	*Call
2098		5078<5133	X05 TO M05	*Call
2098		5078<5134	Y01 TO M05	*Call
2098		5078<5135	Y02 TO M05	*Call
2098		5078<5136	Y03 TO M05	*Call
2098		5078<5137	Y04 TO M05	*Call
2098		5078<5138	Y05 TO M05	*Call
2098		5078<5139	Z01 TO M05	*Call
2098		5078<5140	Z02 TO M05	*Call
2098		5078<5141	Z03 TO M05	*Call
2098		5078<5142	Z04 TO M05	*Call
2098		5078<5143	Z05 TO M05	*Call
2098		5079<5013	A00 TO N01	*Call
2098		5079<5014	A01 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5079<5015	A02 TO N01	*Call
2098		5079<5016	A03 TO N01	*Call
2098		5079<5017	A04 TO N01	*Call
2098		5079<5018	A05 TO N01	*Call
2098		5079<5019	B01 TO N01	*Call
2098		5079<5020	B02 TO N01	*Call
2098		5079<5021	B03 TO N01	*Call
2098		5079<5022	B04 TO N01	*Call
2098		5079<5023	B05 TO N01	*Call
2098		5079<5024	C01 TO N01	*Call
2098		5079<5025	C02 TO N01	*Call
2098		5079<5026	C03 TO N01	*Call
2098		5079<5027	C04 TO N01	*Call
2098		5079<5028	C05 TO N01	*Call
2098		5079<5029	D01 TO N01	*Call
2098		5079<5030	D02 TO N01	*Call
2098		5079<5031	D03 TO N01	*Call
2098		5079<5032	D04 TO N01	*Call
2098		5079<5033	D05 TO N01	*Call
2098		5079<5034	E01 TO N01	*Call
2098		5079<5035	E02 TO N01	*Call
2098		5079<5036	E03 TO N01	*Call
2098		5079<5037	E04 TO N01	*Call
2098		5079<5038	E05 TO N01	*Call
2098		5079<5039	F01 TO N01	*Call
2098		5079<5040	F02 TO N01	*Call
2098		5079<5041	F03 TO N01	*Call
2098		5079<5042	F04 TO N01	*Call
2098		5079<5043	F05 TO N01	*Call
2098		5079<5044	G01 TO N01	*Call
2098		5079<5045	G02 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5079<5046	G03 TO N01	*Call
2098		5079<5047	G04 TO N01	*Call
2098		5079<5048	G05 TO N01	*Call
2098		5079<5049	H01 TO N01	*Call
2098		5079<5050	H02 TO N01	*Call
2098		5079<5051	H03 TO N01	*Call
2098		5079<5052	H04 TO N01	*Call
2098		5079<5053	H05 TO N01	*Call
2098		5079<5054	I01 TO N01	*Call
2098		5079<5055	I02 TO N01	*Call
2098		5079<5056	I03 TO N01	*Call
2098		5079<5057	I04 TO N01	*Call
2098		5079<5058	I05 TO N01	*Call
2098		5079<5059	J01 TO N01	*Call
2098		5079<5060	J02 TO N01	*Call
2098		5079<5061	J03 TO N01	*Call
2098		5079<5062	J04 TO N01	*Call
2098		5079<5063	J05 TO N01	*Call
2098		5079<5064	K01 TO N01	*Call
2098		5079<5065	K02 TO N01	*Call
2098		5079<5066	K03 TO N01	*Call
2098		5079<5067	K04 TO N01	*Call
2098		5079<5068	K05 TO N01	*Call
2098		5079<5069	L01 TO N01	*Call
2098		5079<5070	L02 TO N01	*Call
2098		5079<5071	L03 TO N01	*Call
2098		5079<5072	L04 TO N01	*Call
2098		5079<5073	L05 TO N01	*Call
2098		5079<5074	M01 TO N01	*Call
2098		5079<5075	M02 TO N01	*Call
2098		5079<5076	M03 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5079<5077	M04 TO N01	*Call
2098		5079<5078	M05 TO N01	*Call
2098		5079<5080	N02 TO N01	*Call
2098		5079<5081	N03 TO N01	*Call
2098		5079<5082	N04 TO N01	*Call
2098		5079<5083	N05 TO N01	*Call
2098		5079<5084	O01 TO N01	*Call
2098		5079<5085	O02 TO N01	*Call
2098		5079<5086	O03 TO N01	*Call
2098		5079<5087	O04 TO N01	*Call
2098		5079<5088	O05 TO N01	*Call
2098		5079<5089	P01 TO N01	*Call
2098		5079<5090	P02 TO N01	*Call
2098		5079<5091	P03 TO N01	*Call
2098		5079<5092	P04 TO N01	*Call
2098		5079<5093	P05 TO N01	*Call
2098		5079<5094	Q01 TO N01	*Call
2098		5079<5095	Q02 TO N01	*Call
2098		5079<5096	Q03 TO N01	*Call
2098		5079<5097	Q04 TO N01	*Call
2098		5079<5098	Q05 TO N01	*Call
2098		5079<5099	R01 TO N01	*Call
2098		5079<5100	R02 TO N01	*Call
2098		5079<5101	R03 TO N01	*Call
2098		5079<5102	R04 TO N01	*Call
2098		5079<5103	R05 TO N01	*Call
2098		5079<5104	S01 TO N01	*Call
2098		5079<5105	S02 TO N01	*Call
2098		5079<5106	S03 TO N01	*Call
2098		5079<5107	S04 TO N01	*Call
2098		5079<5108	S05 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5079<5109	T01 TO N01	*Call
2098		5079<5110	T02 TO N01	*Call
2098		5079<5111	T03 TO N01	*Call
2098		5079<5112	T04 TO N01	*Call
2098		5079<5113	T05 TO N01	*Call
2098		5079<5114	U01 TO N01	*Call
2098		5079<5115	U02 TO N01	*Call
2098		5079<5116	U03 TO N01	*Call
2098		5079<5117	U04 TO N01	*Call
2098		5079<5118	U05 TO N01	*Call
2098		5079<5119	V01 TO N01	*Call
2098		5079<5120	V02 TO N01	*Call
2098		5079<5121	V03 TO N01	*Call
2098		5079<5122	V04 TO N01	*Call
2098		5079<5123	V05 TO N01	*Call
2098		5079<5124	W01 TO N01	*Call
2098		5079<5125	W02 TO N01	*Call
2098		5079<5126	W03 TO N01	*Call
2098		5079<5127	W04 TO N01	*Call
2098		5079<5128	W05 TO N01	*Call
2098		5079<5129	X01 TO N01	*Call
2098		5079<5130	X02 TO N01	*Call
2098		5079<5131	X03 TO N01	*Call
2098		5079<5132	X04 TO N01	*Call
2098		5079<5133	X05 TO N01	*Call
2098		5079<5134	Y01 TO N01	*Call
2098		5079<5135	Y02 TO N01	*Call
2098		5079<5136	Y03 TO N01	*Call
2098		5079<5137	Y04 TO N01	*Call
2098		5079<5138	Y05 TO N01	*Call
2098		5079<5139	Z01 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5079<5140	Z02 TO N01	*Call
2098		5079<5141	Z03 TO N01	*Call
2098		5079<5142	Z04 TO N01	*Call
2098		5079<5143	Z05 TO N01	*Call
2098		5080<5013	A00 TO N02	*Call
2098		5080<5014	A01 TO N02	*Call
2098		5080<5015	A02 TO N02	*Call
2098		5080<5016	A03 TO N02	*Call
2098		5080<5017	A04 TO N02	*Call
2098		5080<5018	A05 TO N02	*Call
2098		5080<5019	B01 TO N02	*Call
2098		5080<5020	B02 TO N02	*Call
2098		5080<5021	B03 TO N02	*Call
2098		5080<5022	B04 TO N02	*Call
2098		5080<5023	B05 TO N02	*Call
2098		5080<5024	C01 TO N02	*Call
2098		5080<5025	C02 TO N02	*Call
2098		5080<5026	C03 TO N02	*Call
2098		5080<5027	C04 TO N02	*Call
2098		5080<5028	C05 TO N02	*Call
2098		5080<5029	D01 TO N02	*Call
2098		5080<5030	D02 TO N02	*Call
2098		5080<5031	D03 TO N02	*Call
2098		5080<5032	D04 TO N02	*Call
2098		5080<5033	D05 TO N02	*Call
2098		5080<5034	E01 TO N02	*Call
2098		5080<5035	E02 TO N02	*Call
2098		5080<5036	E03 TO N02	*Call
2098		5080<5037	E04 TO N02	*Call
2098		5080<5038	E05 TO N02	*Call
2098		5080<5039	F01 TO N02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5080<5040	F02 TO N02	*Call
2098		5080<5041	F03 TO N02	*Call
2098		5080<5042	F04 TO N02	*Call
2098		5080<5043	F05 TO N02	*Call
2098		5080<5044	G01 TO N02	*Call
2098		5080<5045	G02 TO N02	*Call
2098		5080<5046	G03 TO N02	*Call
2098		5080<5047	G04 TO N02	*Call
2098		5080<5048	G05 TO N02	*Call
2098		5080<5049	H01 TO N02	*Call
2098		5080<5050	H02 TO N02	*Call
2098		5080<5051	H03 TO N02	*Call
2098		5080<5052	H04 TO N02	*Call
2098		5080<5053	H05 TO N02	*Call
2098		5080<5054	I01 TO N02	*Call
2098		5080<5055	I02 TO N02	*Call
2098		5080<5056	I03 TO N02	*Call
2098		5080<5057	I04 TO N02	*Call
2098		5080<5058	I05 TO N02	*Call
2098		5080<5059	J01 TO N02	*Call
2098		5080<5060	J02 TO N02	*Call
2098		5080<5061	J03 TO N02	*Call
2098		5080<5062	J04 TO N02	*Call
2098		5080<5063	J05 TO N02	*Call
2098		5080<5064	K01 TO N02	*Call
2098		5080<5065	K02 TO N02	*Call
2098		5080<5066	K03 TO N02	*Call
2098		5080<5067	K04 TO N02	*Call
2098		5080<5068	K05 TO N02	*Call
2098		5080<5069	L01 TO N02	*Call
2098		5080<5070	L02 TO N02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5080<5071	L03 TO N02	*Call
2098		5080<5072	L04 TO N02	*Call
2098		5080<5073	L05 TO N02	*Call
2098		5080<5074	M01 TO N02	*Call
2098		5080<5075	M02 TO N02	*Call
2098		5080<5076	M03 TO N02	*Call
2098		5080<5077	M04 TO N02	*Call
2098		5080<5078	M05 TO N02	*Call
2098		5080<5079	N01 TO N02	*Call
2098		5080<5081	N03 TO N02	*Call
2098		5080<5082	N04 TO N02	*Call
2098		5080<5083	N05 TO N02	*Call
2098		5080<5084	O01 TO N02	*Call
2098		5080<5085	O02 TO N02	*Call
2098		5080<5086	O03 TO N02	*Call
2098		5080<5087	O04 TO N02	*Call
2098		5080<5088	O05 TO N02	*Call
2098		5080<5089	P01 TO N02	*Call
2098		5080<5090	P02 TO N02	*Call
2098		5080<5091	P03 TO N02	*Call
2098		5080<5092	P04 TO N02	*Call
2098		5080<5093	P05 TO N02	*Call
2098		5080<5094	Q01 TO N02	*Call
2098		5080<5095	Q02 TO N02	*Call
2098		5080<5096	Q03 TO N02	*Call
2098		5080<5097	Q04 TO N02	*Call
2098		5080<5098	Q05 TO N02	*Call
2098		5080<5099	R01 TO N02	*Call
2098		5080<5100	R02 TO N02	*Call
2098		5080<5101	R03 TO N02	*Call
2098		5080<5102	R04 TO N02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5080<5103	R05 TO N02	*Call
2098		5080<5104	S01 TO N02	*Call
2098		5080<5105	S02 TO N02	*Call
2098		5080<5106	S03 TO N02	*Call
2098		5080<5107	S04 TO N02	*Call
2098		5080<5108	S05 TO N02	*Call
2098		5080<5109	T01 TO N02	*Call
2098		5080<5110	T02 TO N02	*Call
2098		5080<5111	T03 TO N02	*Call
2098		5080<5112	T04 TO N02	*Call
2098		5080<5113	T05 TO N02	*Call
2098		5080<5114	U01 TO N02	*Call
2098		5080<5115	U02 TO N02	*Call
2098		5080<5116	U03 TO N02	*Call
2098		5080<5117	U04 TO N02	*Call
2098		5080<5118	U05 TO N02	*Call
2098		5080<5119	V01 TO N02	*Call
2098		5080<5120	V02 TO N02	*Call
2098		5080<5121	V03 TO N02	*Call
2098		5080<5122	V04 TO N02	*Call
2098		5080<5123	V05 TO N02	*Call
2098		5080<5124	W01 TO N02	*Call
2098		5080<5125	W02 TO N02	*Call
2098		5080<5126	W03 TO N02	*Call
2098		5080<5127	W04 TO N02	*Call
2098		5080<5128	W05 TO N02	*Call
2098		5080<5129	X01 TO N02	*Call
2098		5080<5130	X02 TO N02	*Call
2098		5080<5131	X03 TO N02	*Call
2098		5080<5132	X04 TO N02	*Call
2098		5080<5133	X05 TO N02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5080<5134	Y01 TO N02	*Call
2098		5080<5135	Y02 TO N02	*Call
2098		5080<5136	Y03 TO N02	*Call
2098		5080<5137	Y04 TO N02	*Call
2098		5080<5138	Y05 TO N02	*Call
2098		5080<5139	Z01 TO N02	*Call
2098		5080<5140	Z02 TO N02	*Call
2098		5080<5141	Z03 TO N02	*Call
2098		5080<5142	Z04 TO N02	*Call
2098		5080<5143	Z05 TO N02	*Call
2098		5081<5013	A00 TO N03	*Call
2098		5081<5014	A01 TO N03	*Call
2098		5081<5015	A02 TO N03	*Call
2098		5081<5016	A03 TO N03	*Call
2098		5081<5017	A04 TO N03	*Call
2098		5081<5018	A05 TO N03	*Call
2098		5081<5019	B01 TO N03	*Call
2098		5081<5020	B02 TO N03	*Call
2098		5081<5021	B03 TO N03	*Call
2098		5081<5022	B04 TO N03	*Call
2098		5081<5023	B05 TO N03	*Call
2098		5081<5024	C01 TO N03	*Call
2098		5081<5025	C02 TO N03	*Call
2098		5081<5026	C03 TO N03	*Call
2098		5081<5027	C04 TO N03	*Call
2098		5081<5028	C05 TO N03	*Call
2098		5081<5029	D01 TO N03	*Call
2098		5081<5030	D02 TO N03	*Call
2098		5081<5031	D03 TO N03	*Call
2098		5081<5032	D04 TO N03	*Call
2098		5081<5033	D05 TO N03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5081<5034	E01 TO N03	*Call
2098		5081<5035	E02 TO N03	*Call
2098		5081<5036	E03 TO N03	*Call
2098		5081<5037	E04 TO N03	*Call
2098		5081<5038	E05 TO N03	*Call
2098		5081<5039	F01 TO N03	*Call
2098		5081<5040	F02 TO N03	*Call
2098		5081<5041	F03 TO N03	*Call
2098		5081<5042	F04 TO N03	*Call
2098		5081<5043	F05 TO N03	*Call
2098		5081<5044	G01 TO N03	*Call
2098		5081<5045	G02 TO N03	*Call
2098		5081<5046	G03 TO N03	*Call
2098		5081<5047	G04 TO N03	*Call
2098		5081<5048	G05 TO N03	*Call
2098		5081<5049	H01 TO N03	*Call
2098		5081<5050	H02 TO N03	*Call
2098		5081<5051	H03 TO N03	*Call
2098		5081<5052	H04 TO N03	*Call
2098		5081<5053	H05 TO N03	*Call
2098		5081<5054	I01 TO N03	*Call
2098		5081<5055	I02 TO N03	*Call
2098		5081<5056	I03 TO N03	*Call
2098		5081<5057	I04 TO N03	*Call
2098		5081<5058	I05 TO N03	*Call
2098		5081<5059	J01 TO N03	*Call
2098		5081<5060	J02 TO N03	*Call
2098		5081<5061	J03 TO N03	*Call
2098		5081<5062	J04 TO N03	*Call
2098		5081<5063	J05 TO N03	*Call
2098		5081<5064	K01 TO N03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5081<5065	K02 TO N03	*Call
2098		5081<5066	K03 TO N03	*Call
2098		5081<5067	K04 TO N03	*Call
2098		5081<5068	K05 TO N03	*Call
2098		5081<5069	L01 TO N03	*Call
2098		5081<5070	L02 TO N03	*Call
2098		5081<5071	L03 TO N03	*Call
2098		5081<5072	L04 TO N03	*Call
2098		5081<5073	L05 TO N03	*Call
2098		5081<5074	M01 TO N03	*Call
2098		5081<5075	M02 TO N03	*Call
2098		5081<5076	M03 TO N03	*Call
2098		5081<5077	M04 TO N03	*Call
2098		5081<5078	M05 TO N03	*Call
2098		5081<5079	N01 TO N03	*Call
2098		5081<5080	N02 TO N03	*Call
2098		5081<5082	N04 TO N03	*Call
2098		5081<5083	N05 TO N03	*Call
2098		5081<5084	O01 TO N03	*Call
2098		5081<5085	O02 TO N03	*Call
2098		5081<5086	O03 TO N03	*Call
2098		5081<5087	O04 TO N03	*Call
2098		5081<5088	O05 TO N03	*Call
2098		5081<5089	P01 TO N03	*Call
2098		5081<5090	P02 TO N03	*Call
2098		5081<5091	P03 TO N03	*Call
2098		5081<5092	P04 TO N03	*Call
2098		5081<5093	P05 TO N03	*Call
2098		5081<5094	Q01 TO N03	*Call
2098		5081<5095	Q02 TO N03	*Call
2098		5081<5096	Q03 TO N03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5081<5097	Q04 TO N03	*Call
2098		5081<5098	Q05 TO N03	*Call
2098		5081<5099	R01 TO N03	*Call
2098		5081<5100	R02 TO N03	*Call
2098		5081<5101	R03 TO N03	*Call
2098		5081<5102	R04 TO N03	*Call
2098		5081<5103	R05 TO N03	*Call
2098		5081<5104	S01 TO N03	*Call
2098		5081<5105	S02 TO N03	*Call
2098		5081<5106	S03 TO N03	*Call
2098		5081<5107	S04 TO N03	*Call
2098		5081<5108	S05 TO N03	*Call
2098		5081<5109	T01 TO N03	*Call
2098		5081<5110	T02 TO N03	*Call
2098		5081<5111	T03 TO N03	*Call
2098		5081<5112	T04 TO N03	*Call
2098		5081<5113	T05 TO N03	*Call
2098		5081<5114	U01 TO N03	*Call
2098		5081<5115	U02 TO N03	*Call
2098		5081<5116	U03 TO N03	*Call
2098		5081<5117	U04 TO N03	*Call
2098		5081<5118	U05 TO N03	*Call
2098		5081<5119	V01 TO N03	*Call
2098		5081<5120	V02 TO N03	*Call
2098		5081<5121	V03 TO N03	*Call
2098		5081<5122	V04 TO N03	*Call
2098		5081<5123	V05 TO N03	*Call
2098		5081<5124	W01 TO N03	*Call
2098		5081<5125	W02 TO N03	*Call
2098		5081<5126	W03 TO N03	*Call
2098		5081<5127	W04 TO N03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5081<5128	W05 TO N03	*Call
2098		5081<5129	X01 TO N03	*Call
2098		5081<5130	X02 TO N03	*Call
2098		5081<5131	X03 TO N03	*Call
2098		5081<5132	X04 TO N03	*Call
2098		5081<5133	X05 TO N03	*Call
2098		5081<5134	Y01 TO N03	*Call
2098		5081<5135	Y02 TO N03	*Call
2098		5081<5136	Y03 TO N03	*Call
2098		5081<5137	Y04 TO N03	*Call
2098		5081<5138	Y05 TO N03	*Call
2098		5081<5139	Z01 TO N03	*Call
2098		5081<5140	Z02 TO N03	*Call
2098		5081<5141	Z03 TO N03	*Call
2098		5081<5142	Z04 TO N03	*Call
2098		5081<5143	Z05 TO N03	*Call
2098		5082<5013	A00 TO N04	*Call
2098		5082<5014	A01 TO N04	*Call
2098		5082<5015	A02 TO N04	*Call
2098		5082<5016	A03 TO N04	*Call
2098		5082<5017	A04 TO N04	*Call
2098		5082<5018	A05 TO N04	*Call
2098		5082<5019	B01 TO N04	*Call
2098		5082<5020	B02 TO N04	*Call
2098		5082<5021	B03 TO N04	*Call
2098		5082<5022	B04 TO N04	*Call
2098		5082<5023	B05 TO N04	*Call
2098		5082<5024	C01 TO N04	*Call
2098		5082<5025	C02 TO N04	*Call
2098		5082<5026	C03 TO N04	*Call
2098		5082<5027	C04 TO N04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5082<5028	C05 TO N04	*Call
2098		5082<5029	D01 TO N04	*Call
2098		5082<5030	D02 TO N04	*Call
2098		5082<5031	D03 TO N04	*Call
2098		5082<5032	D04 TO N04	*Call
2098		5082<5033	D05 TO N04	*Call
2098		5082<5034	E01 TO N04	*Call
2098		5082<5035	E02 TO N04	*Call
2098		5082<5036	E03 TO N04	*Call
2098		5082<5037	E04 TO N04	*Call
2098		5082<5038	E05 TO N04	*Call
2098		5082<5039	F01 TO N04	*Call
2098		5082<5040	F02 TO N04	*Call
2098		5082<5041	F03 TO N04	*Call
2098		5082<5042	F04 TO N04	*Call
2098		5082<5043	F05 TO N04	*Call
2098		5082<5044	G01 TO N04	*Call
2098		5082<5045	G02 TO N04	*Call
2098		5082<5046	G03 TO N04	*Call
2098		5082<5047	G04 TO N04	*Call
2098		5082<5048	G05 TO N04	*Call
2098		5082<5049	H01 TO N04	*Call
2098		5082<5050	H02 TO N04	*Call
2098		5082<5051	H03 TO N04	*Call
2098		5082<5052	H04 TO N04	*Call
2098		5082<5053	H05 TO N04	*Call
2098		5082<5054	I01 TO N04	*Call
2098		5082<5055	I02 TO N04	*Call
2098		5082<5056	I03 TO N04	*Call
2098		5082<5057	I04 TO N04	*Call
2098		5082<5058	I05 TO N04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5082<5059	J01 TO N04	*Call
2098		5082<5060	J02 TO N04	*Call
2098		5082<5061	J03 TO N04	*Call
2098		5082<5062	J04 TO N04	*Call
2098		5082<5063	J05 TO N04	*Call
2098		5082<5064	K01 TO N04	*Call
2098		5082<5065	K02 TO N04	*Call
2098		5082<5066	K03 TO N04	*Call
2098		5082<5067	K04 TO N04	*Call
2098		5082<5068	K05 TO N04	*Call
2098		5082<5069	L01 TO N04	*Call
2098		5082<5070	L02 TO N04	*Call
2098		5082<5071	L03 TO N04	*Call
2098		5082<5072	L04 TO N04	*Call
2098		5082<5073	L05 TO N04	*Call
2098		5082<5074	M01 TO N04	*Call
2098		5082<5075	M02 TO N04	*Call
2098		5082<5076	M03 TO N04	*Call
2098		5082<5077	M04 TO N04	*Call
2098		5082<5078	M05 TO N04	*Call
2098		5082<5079	N01 TO N04	*Call
2098		5082<5080	N02 TO N04	*Call
2098		5082<5081	N03 TO N04	*Call
2098		5082<5083	N05 TO N04	*Call
2098		5082<5084	O01 TO N04	*Call
2098		5082<5085	O02 TO N04	*Call
2098		5082<5086	O03 TO N04	*Call
2098		5082<5087	O04 TO N04	*Call
2098		5082<5088	O05 TO N04	*Call
2098		5082<5089	P01 TO N04	*Call
2098		5082<5090	P02 TO N04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5082<5091	P03 TO N04	*Call
2098		5082<5092	P04 TO N04	*Call
2098		5082<5093	P05 TO N04	*Call
2098		5082<5094	Q01 TO N04	*Call
2098		5082<5095	Q02 TO N04	*Call
2098		5082<5096	Q03 TO N04	*Call
2098		5082<5097	Q04 TO N04	*Call
2098		5082<5098	Q05 TO N04	*Call
2098		5082<5099	R01 TO N04	*Call
2098		5082<5100	R02 TO N04	*Call
2098		5082<5101	R03 TO N04	*Call
2098		5082<5102	R04 TO N04	*Call
2098		5082<5103	R05 TO N04	*Call
2098		5082<5104	S01 TO N04	*Call
2098		5082<5105	S02 TO N04	*Call
2098		5082<5106	S03 TO N04	*Call
2098		5082<5107	S04 TO N04	*Call
2098		5082<5108	S05 TO N04	*Call
2098		5082<5109	T01 TO N04	*Call
2098		5082<5110	T02 TO N04	*Call
2098		5082<5111	T03 TO N04	*Call
2098		5082<5112	T04 TO N04	*Call
2098		5082<5113	T05 TO N04	*Call
2098		5082<5114	U01 TO N04	*Call
2098		5082<5115	U02 TO N04	*Call
2098		5082<5116	U03 TO N04	*Call
2098		5082<5117	U04 TO N04	*Call
2098		5082<5118	U05 TO N04	*Call
2098		5082<5119	V01 TO N04	*Call
2098		5082<5120	V02 TO N04	*Call
2098		5082<5121	V03 TO N04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5082<5122	V04 TO N04	*Call
2098		5082<5123	V05 TO N04	*Call
2098		5082<5124	W01 TO N04	*Call
2098		5082<5125	W02 TO N04	*Call
2098		5082<5126	W03 TO N04	*Call
2098		5082<5127	W04 TO N04	*Call
2098		5082<5128	W05 TO N04	*Call
2098		5082<5129	X01 TO N04	*Call
2098		5082<5130	X02 TO N04	*Call
2098		5082<5131	X03 TO N04	*Call
2098		5082<5132	X04 TO N04	*Call
2098		5082<5133	X05 TO N04	*Call
2098		5082<5134	Y01 TO N04	*Call
2098		5082<5135	Y02 TO N04	*Call
2098		5082<5136	Y03 TO N04	*Call
2098		5082<5137	Y04 TO N04	*Call
2098		5082<5138	Y05 TO N04	*Call
2098		5082<5139	Z01 TO N04	*Call
2098		5082<5140	Z02 TO N04	*Call
2098		5082<5141	Z03 TO N04	*Call
2098		5082<5142	Z04 TO N04	*Call
2098		5082<5143	Z05 TO N04	*Call
2098		5083<5013	A00 TO N05	*Call
2098		5083<5014	A01 TO N05	*Call
2098		5083<5015	A02 TO N05	*Call
2098		5083<5016	A03 TO N05	*Call
2098		5083<5017	A04 TO N05	*Call
2098		5083<5018	A05 TO N05	*Call
2098		5083<5019	B01 TO N05	*Call
2098		5083<5020	B02 TO N05	*Call
2098		5083<5021	B03 TO N05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5083<5022	B04 TO N05	*Call
2098		5083<5023	B05 TO N05	*Call
2098		5083<5024	C01 TO N05	*Call
2098		5083<5025	C02 TO N05	*Call
2098		5083<5026	C03 TO N05	*Call
2098		5083<5027	C04 TO N05	*Call
2098		5083<5028	C05 TO N05	*Call
2098		5083<5029	D01 TO N05	*Call
2098		5083<5030	D02 TO N05	*Call
2098		5083<5031	D03 TO N05	*Call
2098		5083<5032	D04 TO N05	*Call
2098		5083<5033	D05 TO N05	*Call
2098		5083<5034	E01 TO N05	*Call
2098		5083<5035	E02 TO N05	*Call
2098		5083<5036	E03 TO N05	*Call
2098		5083<5037	E04 TO N05	*Call
2098		5083<5038	E05 TO N05	*Call
2098		5083<5039	F01 TO N05	*Call
2098		5083<5040	F02 TO N05	*Call
2098		5083<5041	F03 TO N05	*Call
2098		5083<5042	F04 TO N05	*Call
2098		5083<5043	F05 TO N05	*Call
2098		5083<5044	G01 TO N05	*Call
2098		5083<5045	G02 TO N05	*Call
2098		5083<5046	G03 TO N05	*Call
2098		5083<5047	G04 TO N05	*Call
2098		5083<5048	G05 TO N05	*Call
2098		5083<5049	H01 TO N05	*Call
2098		5083<5050	H02 TO N05	*Call
2098		5083<5051	H03 TO N05	*Call
2098		5083<5052	H04 TO N05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5083<5053	H05 TO N05	*Call
2098		5083<5054	I01 TO N05	*Call
2098		5083<5055	I02 TO N05	*Call
2098		5083<5056	I03 TO N05	*Call
2098		5083<5057	I04 TO N05	*Call
2098		5083<5058	I05 TO N05	*Call
2098		5083<5059	J01 TO N05	*Call
2098		5083<5060	J02 TO N05	*Call
2098		5083<5061	J03 TO N05	*Call
2098		5083<5062	J04 TO N05	*Call
2098		5083<5063	J05 TO N05	*Call
2098		5083<5064	K01 TO N05	*Call
2098		5083<5065	K02 TO N05	*Call
2098		5083<5066	K03 TO N05	*Call
2098		5083<5067	K04 TO N05	*Call
2098		5083<5068	K05 TO N05	*Call
2098		5083<5069	L01 TO N05	*Call
2098		5083<5070	L02 TO N05	*Call
2098		5083<5071	L03 TO N05	*Call
2098		5083<5072	L04 TO N05	*Call
2098		5083<5073	L05 TO N05	*Call
2098		5083<5074	M01 TO N05	*Call
2098		5083<5075	M02 TO N05	*Call
2098		5083<5076	M03 TO N05	*Call
2098		5083<5077	M04 TO N05	*Call
2098		5083<5078	M05 TO N05	*Call
2098		5083<5079	N01 TO N05	*Call
2098		5083<5080	N02 TO N05	*Call
2098		5083<5081	N03 TO N05	*Call
2098		5083<5082	N04 TO N05	*Call
2098		5083<5084	O01 TO N05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5083<5085	O02 TO N05	*Call
2098		5083<5086	O03 TO N05	*Call
2098		5083<5087	O04 TO N05	*Call
2098		5083<5088	O05 TO N05	*Call
2098		5083<5089	P01 TO N05	*Call
2098		5083<5090	P02 TO N05	*Call
2098		5083<5091	P03 TO N05	*Call
2098		5083<5092	P04 TO N05	*Call
2098		5083<5093	P05 TO N05	*Call
2098		5083<5094	Q01 TO N05	*Call
2098		5083<5095	Q02 TO N05	*Call
2098		5083<5096	Q03 TO N05	*Call
2098		5083<5097	Q04 TO N05	*Call
2098		5083<5098	Q05 TO N05	*Call
2098		5083<5099	R01 TO N05	*Call
2098		5083<5100	R02 TO N05	*Call
2098		5083<5101	R03 TO N05	*Call
2098		5083<5102	R04 TO N05	*Call
2098		5083<5103	R05 TO N05	*Call
2098		5083<5104	S01 TO N05	*Call
2098		5083<5105	S02 TO N05	*Call
2098		5083<5106	S03 TO N05	*Call
2098		5083<5107	S04 TO N05	*Call
2098		5083<5108	S05 TO N05	*Call
2098		5083<5109	T01 TO N05	*Call
2098		5083<5110	T02 TO N05	*Call
2098		5083<5111	T03 TO N05	*Call
2098		5083<5112	T04 TO N05	*Call
2098		5083<5113	T05 TO N05	*Call
2098		5083<5114	U01 TO N05	*Call
2098		5083<5115	U02 TO N05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5083<5116	U03 TO N05	*Call
2098		5083<5117	U04 TO N05	*Call
2098		5083<5118	U05 TO N05	*Call
2098		5083<5119	V01 TO N05	*Call
2098		5083<5120	V02 TO N05	*Call
2098		5083<5121	V03 TO N05	*Call
2098		5083<5122	V04 TO N05	*Call
2098		5083<5123	V05 TO N05	*Call
2098		5083<5124	W01 TO N05	*Call
2098		5083<5125	W02 TO N05	*Call
2098		5083<5126	W03 TO N05	*Call
2098		5083<5127	W04 TO N05	*Call
2098		5083<5128	W05 TO N05	*Call
2098		5083<5129	X01 TO N05	*Call
2098		5083<5130	X02 TO N05	*Call
2098		5083<5131	X03 TO N05	*Call
2098		5083<5132	X04 TO N05	*Call
2098		5083<5133	X05 TO N05	*Call
2098		5083<5134	Y01 TO N05	*Call
2098		5083<5135	Y02 TO N05	*Call
2098		5083<5136	Y03 TO N05	*Call
2098		5083<5137	Y04 TO N05	*Call
2098		5083<5138	Y05 TO N05	*Call
2098		5083<5139	Z01 TO N05	*Call
2098		5083<5140	Z02 TO N05	*Call
2098		5083<5141	Z03 TO N05	*Call
2098		5083<5142	Z04 TO N05	*Call
2098		5083<5143	Z05 TO N05	*Call
2098		5084<5013	A00 TO O01	*Call
2098		5084<5014	A01 TO O01	*Call
2098		5084<5015	A02 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5084<5016	A03 TO O01	*Call
2098		5084<5017	A04 TO O01	*Call
2098		5084<5018	A05 TO O01	*Call
2098		5084<5019	B01 TO O01	*Call
2098		5084<5020	B02 TO O01	*Call
2098		5084<5021	B03 TO O01	*Call
2098		5084<5022	B04 TO O01	*Call
2098		5084<5023	B05 TO O01	*Call
2098		5084<5024	C01 TO O01	*Call
2098		5084<5025	C02 TO O01	*Call
2098		5084<5026	C03 TO O01	*Call
2098		5084<5027	C04 TO O01	*Call
2098		5084<5028	C05 TO O01	*Call
2098		5084<5029	D01 TO O01	*Call
2098		5084<5030	D02 TO O01	*Call
2098		5084<5031	D03 TO O01	*Call
2098		5084<5032	D04 TO O01	*Call
2098		5084<5033	D05 TO O01	*Call
2098		5084<5034	E01 TO O01	*Call
2098		5084<5035	E02 TO O01	*Call
2098		5084<5036	E03 TO O01	*Call
2098		5084<5037	E04 TO O01	*Call
2098		5084<5038	E05 TO O01	*Call
2098		5084<5039	F01 TO O01	*Call
2098		5084<5040	F02 TO O01	*Call
2098		5084<5041	F03 TO O01	*Call
2098		5084<5042	F04 TO O01	*Call
2098		5084<5043	F05 TO O01	*Call
2098		5084<5044	G01 TO O01	*Call
2098		5084<5045	G02 TO O01	*Call
2098		5084<5046	G03 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5084<5047	G04 TO O01	*Call
2098		5084<5048	G05 TO O01	*Call
2098		5084<5049	H01 TO O01	*Call
2098		5084<5050	H02 TO O01	*Call
2098		5084<5051	H03 TO O01	*Call
2098		5084<5052	H04 TO O01	*Call
2098		5084<5053	H05 TO O01	*Call
2098		5084<5054	I01 TO O01	*Call
2098		5084<5055	I02 TO O01	*Call
2098		5084<5056	I03 TO O01	*Call
2098		5084<5057	I04 TO O01	*Call
2098		5084<5058	I05 TO O01	*Call
2098		5084<5059	J01 TO O01	*Call
2098		5084<5060	J02 TO O01	*Call
2098		5084<5061	J03 TO O01	*Call
2098		5084<5062	J04 TO O01	*Call
2098		5084<5063	J05 TO O01	*Call
2098		5084<5064	K01 TO O01	*Call
2098		5084<5065	K02 TO O01	*Call
2098		5084<5066	K03 TO O01	*Call
2098		5084<5067	K04 TO O01	*Call
2098		5084<5068	K05 TO O01	*Call
2098		5084<5069	L01 TO O01	*Call
2098		5084<5070	L02 TO O01	*Call
2098		5084<5071	L03 TO O01	*Call
2098		5084<5072	L04 TO O01	*Call
2098		5084<5073	L05 TO O01	*Call
2098		5084<5074	M01 TO O01	*Call
2098		5084<5075	M02 TO O01	*Call
2098		5084<5076	M03 TO O01	*Call
2098		5084<5077	M04 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5084<5078	M05 TO O01	*Call
2098		5084<5079	N01 TO O01	*Call
2098		5084<5080	N02 TO O01	*Call
2098		5084<5081	N03 TO O01	*Call
2098		5084<5082	N04 TO O01	*Call
2098		5084<5083	N05 TO O01	*Call
2098		5084<5085	O02 TO O01	*Call
2098		5084<5086	O03 TO O01	*Call
2098		5084<5087	O04 TO O01	*Call
2098		5084<5088	O05 TO O01	*Call
2098		5084<5089	P01 TO O01	*Call
2098		5084<5090	P02 TO O01	*Call
2098		5084<5091	P03 TO O01	*Call
2098		5084<5092	P04 TO O01	*Call
2098		5084<5093	P05 TO O01	*Call
2098		5084<5094	Q01 TO O01	*Call
2098		5084<5095	Q02 TO O01	*Call
2098		5084<5096	Q03 TO O01	*Call
2098		5084<5097	Q04 TO O01	*Call
2098		5084<5098	Q05 TO O01	*Call
2098		5084<5099	R01 TO O01	*Call
2098		5084<5100	R02 TO O01	*Call
2098		5084<5101	R03 TO O01	*Call
2098		5084<5102	R04 TO O01	*Call
2098		5084<5103	R05 TO O01	*Call
2098		5084<5104	S01 TO O01	*Call
2098		5084<5105	S02 TO O01	*Call
2098		5084<5106	S03 TO O01	*Call
2098		5084<5107	S04 TO O01	*Call
2098		5084<5108	S05 TO O01	*Call
2098		5084<5109	T01 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5084<5110	T02 TO O01	*Call
2098		5084<5111	T03 TO O01	*Call
2098		5084<5112	T04 TO O01	*Call
2098		5084<5113	T05 TO O01	*Call
2098		5084<5114	U01 TO O01	*Call
2098		5084<5115	U02 TO O01	*Call
2098		5084<5116	U03 TO O01	*Call
2098		5084<5117	U04 TO O01	*Call
2098		5084<5118	U05 TO O01	*Call
2098		5084<5119	V01 TO O01	*Call
2098		5084<5120	V02 TO O01	*Call
2098		5084<5121	V03 TO O01	*Call
2098		5084<5122	V04 TO O01	*Call
2098		5084<5123	V05 TO O01	*Call
2098		5084<5124	W01 TO O01	*Call
2098		5084<5125	W02 TO O01	*Call
2098		5084<5126	W03 TO O01	*Call
2098		5084<5127	W04 TO O01	*Call
2098		5084<5128	W05 TO O01	*Call
2098		5084<5129	X01 TO O01	*Call
2098		5084<5130	X02 TO O01	*Call
2098		5084<5131	X03 TO O01	*Call
2098		5084<5132	X04 TO O01	*Call
2098		5084<5133	X05 TO O01	*Call
2098		5084<5134	Y01 TO O01	*Call
2098		5084<5135	Y02 TO O01	*Call
2098		5084<5136	Y03 TO O01	*Call
2098		5084<5137	Y04 TO O01	*Call
2098		5084<5138	Y05 TO O01	*Call
2098		5084<5139	Z01 TO O01	*Call
2098		5084<5140	Z02 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5084<5141	Z03 TO O01	*Call
2098		5084<5142	Z04 TO O01	*Call
2098		5084<5143	Z05 TO O01	*Call
2098		5085<5013	A00 TO O02	*Call
2098		5085<5014	A01 TO O02	*Call
2098		5085<5015	A02 TO O02	*Call
2098		5085<5016	A03 TO O02	*Call
2098		5085<5017	A04 TO O02	*Call
2098		5085<5018	A05 TO O02	*Call
2098		5085<5019	B01 TO O02	*Call
2098		5085<5020	B02 TO O02	*Call
2098		5085<5021	B03 TO O02	*Call
2098		5085<5022	B04 TO O02	*Call
2098		5085<5023	B05 TO O02	*Call
2098		5085<5024	C01 TO O02	*Call
2098		5085<5025	C02 TO O02	*Call
2098		5085<5026	C03 TO O02	*Call
2098		5085<5027	C04 TO O02	*Call
2098		5085<5028	C05 TO O02	*Call
2098		5085<5029	D01 TO O02	*Call
2098		5085<5030	D02 TO O02	*Call
2098		5085<5031	D03 TO O02	*Call
2098		5085<5032	D04 TO O02	*Call
2098		5085<5033	D05 TO O02	*Call
2098		5085<5034	E01 TO O02	*Call
2098		5085<5035	E02 TO O02	*Call
2098		5085<5036	E03 TO O02	*Call
2098		5085<5037	E04 TO O02	*Call
2098		5085<5038	E05 TO O02	*Call
2098		5085<5039	F01 TO O02	*Call
2098		5085<5040	F02 TO O02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5085<5041	F03 TO O02	*Call
2098		5085<5042	F04 TO O02	*Call
2098		5085<5043	F05 TO O02	*Call
2098		5085<5044	G01 TO O02	*Call
2098		5085<5045	G02 TO O02	*Call
2098		5085<5046	G03 TO O02	*Call
2098		5085<5047	G04 TO O02	*Call
2098		5085<5048	G05 TO O02	*Call
2098		5085<5049	H01 TO O02	*Call
2098		5085<5050	H02 TO O02	*Call
2098		5085<5051	H03 TO O02	*Call
2098		5085<5052	H04 TO O02	*Call
2098		5085<5053	H05 TO O02	*Call
2098		5085<5054	I01 TO O02	*Call
2098		5085<5055	I02 TO O02	*Call
2098		5085<5056	I03 TO O02	*Call
2098		5085<5057	I04 TO O02	*Call
2098		5085<5058	I05 TO O02	*Call
2098		5085<5059	J01 TO O02	*Call
2098		5085<5060	J02 TO O02	*Call
2098		5085<5061	J03 TO O02	*Call
2098		5085<5062	J04 TO O02	*Call
2098		5085<5063	J05 TO O02	*Call
2098		5085<5064	K01 TO O02	*Call
2098		5085<5065	K02 TO O02	*Call
2098		5085<5066	K03 TO O02	*Call
2098		5085<5067	K04 TO O02	*Call
2098		5085<5068	K05 TO O02	*Call
2098		5085<5069	L01 TO O02	*Call
2098		5085<5070	L02 TO O02	*Call
2098		5085<5071	L03 TO O02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5085<5072	L04 TO O02	*Call
2098		5085<5073	L05 TO O02	*Call
2098		5085<5074	M01 TO O02	*Call
2098		5085<5075	M02 TO O02	*Call
2098		5085<5076	M03 TO O02	*Call
2098		5085<5077	M04 TO O02	*Call
2098		5085<5078	M05 TO O02	*Call
2098		5085<5079	N01 TO O02	*Call
2098		5085<5080	N02 TO O02	*Call
2098		5085<5081	N03 TO O02	*Call
2098		5085<5082	N04 TO O02	*Call
2098		5085<5083	N05 TO O02	*Call
2098		5085<5084	O01 TO O02	*Call
2098		5085<5086	O03 TO O02	*Call
2098		5085<5087	O04 TO O02	*Call
2098		5085<5088	O05 TO O02	*Call
2098		5085<5089	P01 TO O02	*Call
2098		5085<5090	P02 TO O02	*Call
2098		5085<5091	P03 TO O02	*Call
2098		5085<5092	P04 TO O02	*Call
2098		5085<5093	P05 TO O02	*Call
2098		5085<5094	Q01 TO O02	*Call
2098		5085<5095	Q02 TO O02	*Call
2098		5085<5096	Q03 TO O02	*Call
2098		5085<5097	Q04 TO O02	*Call
2098		5085<5098	Q05 TO O02	*Call
2098		5085<5099	R01 TO O02	*Call
2098		5085<5100	R02 TO O02	*Call
2098		5085<5101	R03 TO O02	*Call
2098		5085<5102	R04 TO O02	*Call
2098		5085<5103	R05 TO O02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5085<5104	S01 TO O02	*Call
2098		5085<5105	S02 TO O02	*Call
2098		5085<5106	S03 TO O02	*Call
2098		5085<5107	S04 TO O02	*Call
2098		5085<5108	S05 TO O02	*Call
2098		5085<5109	T01 TO O02	*Call
2098		5085<5110	T02 TO O02	*Call
2098		5085<5111	T03 TO O02	*Call
2098		5085<5112	T04 TO O02	*Call
2098		5085<5113	T05 TO O02	*Call
2098		5085<5114	U01 TO O02	*Call
2098		5085<5115	U02 TO O02	*Call
2098		5085<5116	U03 TO O02	*Call
2098		5085<5117	U04 TO O02	*Call
2098		5085<5118	U05 TO O02	*Call
2098		5085<5119	V01 TO O02	*Call
2098		5085<5120	V02 TO O02	*Call
2098		5085<5121	V03 TO O02	*Call
2098		5085<5122	V04 TO O02	*Call
2098		5085<5123	V05 TO O02	*Call
2098		5085<5124	W01 TO O02	*Call
2098		5085<5125	W02 TO O02	*Call
2098		5085<5126	W03 TO O02	*Call
2098		5085<5127	W04 TO O02	*Call
2098		5085<5128	W05 TO O02	*Call
2098		5085<5129	X01 TO O02	*Call
2098		5085<5130	X02 TO O02	*Call
2098		5085<5131	X03 TO O02	*Call
2098		5085<5132	X04 TO O02	*Call
2098		5085<5133	X05 TO O02	*Call
2098		5085<5134	Y01 TO O02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5085<5135	Y02 TO O02	*Call
2098		5085<5136	Y03 TO O02	*Call
2098		5085<5137	Y04 TO O02	*Call
2098		5085<5138	Y05 TO O02	*Call
2098		5085<5139	Z01 TO O02	*Call
2098		5085<5140	Z02 TO O02	*Call
2098		5085<5141	Z03 TO O02	*Call
2098		5085<5142	Z04 TO O02	*Call
2098		5085<5143	Z05 TO O02	*Call
2098		5086<5013	A00 TO O03	*Call
2098		5086<5014	A01 TO O03	*Call
2098		5086<5015	A02 TO O03	*Call
2098		5086<5016	A03 TO O03	*Call
2098		5086<5017	A04 TO O03	*Call
2098		5086<5018	A05 TO O03	*Call
2098		5086<5019	B01 TO O03	*Call
2098		5086<5020	B02 TO O03	*Call
2098		5086<5021	B03 TO O03	*Call
2098		5086<5022	B04 TO O03	*Call
2098		5086<5023	B05 TO O03	*Call
2098		5086<5024	C01 TO O03	*Call
2098		5086<5025	C02 TO O03	*Call
2098		5086<5026	C03 TO O03	*Call
2098		5086<5027	C04 TO O03	*Call
2098		5086<5028	C05 TO O03	*Call
2098		5086<5029	D01 TO O03	*Call
2098		5086<5030	D02 TO O03	*Call
2098		5086<5031	D03 TO O03	*Call
2098		5086<5032	D04 TO O03	*Call
2098		5086<5033	D05 TO O03	*Call
2098		5086<5034	E01 TO O03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5086<5035	E02 TO O03	*Call
2098		5086<5036	E03 TO O03	*Call
2098		5086<5037	E04 TO O03	*Call
2098		5086<5038	E05 TO O03	*Call
2098		5086<5039	F01 TO O03	*Call
2098		5086<5040	F02 TO O03	*Call
2098		5086<5041	F03 TO O03	*Call
2098		5086<5042	F04 TO O03	*Call
2098		5086<5043	F05 TO O03	*Call
2098		5086<5044	G01 TO O03	*Call
2098		5086<5045	G02 TO O03	*Call
2098		5086<5046	G03 TO O03	*Call
2098		5086<5047	G04 TO O03	*Call
2098		5086<5048	G05 TO O03	*Call
2098		5086<5049	H01 TO O03	*Call
2098		5086<5050	H02 TO O03	*Call
2098		5086<5051	H03 TO O03	*Call
2098		5086<5052	H04 TO O03	*Call
2098		5086<5053	H05 TO O03	*Call
2098		5086<5054	I01 TO O03	*Call
2098		5086<5055	I02 TO O03	*Call
2098		5086<5056	I03 TO O03	*Call
2098		5086<5057	I04 TO O03	*Call
2098		5086<5058	I05 TO O03	*Call
2098		5086<5059	J01 TO O03	*Call
2098		5086<5060	J02 TO O03	*Call
2098		5086<5061	J03 TO O03	*Call
2098		5086<5062	J04 TO O03	*Call
2098		5086<5063	J05 TO O03	*Call
2098		5086<5064	K01 TO O03	*Call
2098		5086<5065	K02 TO O03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5086<5066	K03 TO O03	*Call
2098		5086<5067	K04 TO O03	*Call
2098		5086<5068	K05 TO O03	*Call
2098		5086<5069	L01 TO O03	*Call
2098		5086<5070	L02 TO O03	*Call
2098		5086<5071	L03 TO O03	*Call
2098		5086<5072	L04 TO O03	*Call
2098		5086<5073	L05 TO O03	*Call
2098		5086<5074	M01 TO O03	*Call
2098		5086<5075	M02 TO O03	*Call
2098		5086<5076	M03 TO O03	*Call
2098		5086<5077	M04 TO O03	*Call
2098		5086<5078	M05 TO O03	*Call
2098		5086<5079	N01 TO O03	*Call
2098		5086<5080	N02 TO O03	*Call
2098		5086<5081	N03 TO O03	*Call
2098		5086<5082	N04 TO O03	*Call
2098		5086<5083	N05 TO O03	*Call
2098		5086<5084	O01 TO O03	*Call
2098		5086<5085	O02 TO O03	*Call
2098		5086<5087	O04 TO O03	*Call
2098		5086<5088	O05 TO O03	*Call
2098		5086<5089	P01 TO O03	*Call
2098		5086<5090	P02 TO O03	*Call
2098		5086<5091	P03 TO O03	*Call
2098		5086<5092	P04 TO O03	*Call
2098		5086<5093	P05 TO O03	*Call
2098		5086<5094	Q01 TO O03	*Call
2098		5086<5095	Q02 TO O03	*Call
2098		5086<5096	Q03 TO O03	*Call
2098		5086<5097	Q04 TO O03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5086<5098	Q05 TO O03	*Call
2098		5086<5099	R01 TO O03	*Call
2098		5086<5100	R02 TO O03	*Call
2098		5086<5101	R03 TO O03	*Call
2098		5086<5102	R04 TO O03	*Call
2098		5086<5103	R05 TO O03	*Call
2098		5086<5104	S01 TO O03	*Call
2098		5086<5105	S02 TO O03	*Call
2098		5086<5106	S03 TO O03	*Call
2098		5086<5107	S04 TO O03	*Call
2098		5086<5108	S05 TO O03	*Call
2098		5086<5109	T01 TO O03	*Call
2098		5086<5110	T02 TO O03	*Call
2098		5086<5111	T03 TO O03	*Call
2098		5086<5112	T04 TO O03	*Call
2098		5086<5113	T05 TO O03	*Call
2098		5086<5114	U01 TO O03	*Call
2098		5086<5115	U02 TO O03	*Call
2098		5086<5116	U03 TO O03	*Call
2098		5086<5117	U04 TO O03	*Call
2098		5086<5118	U05 TO O03	*Call
2098		5086<5119	V01 TO O03	*Call
2098		5086<5120	V02 TO O03	*Call
2098		5086<5121	V03 TO O03	*Call
2098		5086<5122	V04 TO O03	*Call
2098		5086<5123	V05 TO O03	*Call
2098		5086<5124	W01 TO O03	*Call
2098		5086<5125	W02 TO O03	*Call
2098		5086<5126	W03 TO O03	*Call
2098		5086<5127	W04 TO O03	*Call
2098		5086<5128	W05 TO O03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5086<5129	X01 TO O03	*Call
2098		5086<5130	X02 TO O03	*Call
2098		5086<5131	X03 TO O03	*Call
2098		5086<5132	X04 TO O03	*Call
2098		5086<5133	X05 TO O03	*Call
2098		5086<5134	Y01 TO O03	*Call
2098		5086<5135	Y02 TO O03	*Call
2098		5086<5136	Y03 TO O03	*Call
2098		5086<5137	Y04 TO O03	*Call
2098		5086<5138	Y05 TO O03	*Call
2098		5086<5139	Z01 TO O03	*Call
2098		5086<5140	Z02 TO O03	*Call
2098		5086<5141	Z03 TO O03	*Call
2098		5086<5142	Z04 TO O03	*Call
2098		5086<5143	Z05 TO O03	*Call
2098		5087<5013	A00 TO O04	*Call
2098		5087<5014	A01 TO O04	*Call
2098		5087<5015	A02 TO O04	*Call
2098		5087<5016	A03 TO O04	*Call
2098		5087<5017	A04 TO O04	*Call
2098		5087<5018	A05 TO O04	*Call
2098		5087<5019	B01 TO O04	*Call
2098		5087<5020	B02 TO O04	*Call
2098		5087<5021	B03 TO O04	*Call
2098		5087<5022	B04 TO O04	*Call
2098		5087<5023	B05 TO O04	*Call
2098		5087<5024	C01 TO O04	*Call
2098		5087<5025	C02 TO O04	*Call
2098		5087<5026	C03 TO O04	*Call
2098		5087<5027	C04 TO O04	*Call
2098		5087<5028	C05 TO O04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5087<5029	D01 TO O04	*Call
2098		5087<5030	D02 TO O04	*Call
2098		5087<5031	D03 TO O04	*Call
2098		5087<5032	D04 TO O04	*Call
2098		5087<5033	D05 TO O04	*Call
2098		5087<5034	E01 TO O04	*Call
2098		5087<5035	E02 TO O04	*Call
2098		5087<5036	E03 TO O04	*Call
2098		5087<5037	E04 TO O04	*Call
2098		5087<5038	E05 TO O04	*Call
2098		5087<5039	F01 TO O04	*Call
2098		5087<5040	F02 TO O04	*Call
2098		5087<5041	F03 TO O04	*Call
2098		5087<5042	F04 TO O04	*Call
2098		5087<5043	F05 TO O04	*Call
2098		5087<5044	G01 TO O04	*Call
2098		5087<5045	G02 TO O04	*Call
2098		5087<5046	G03 TO O04	*Call
2098		5087<5047	G04 TO O04	*Call
2098		5087<5048	G05 TO O04	*Call
2098		5087<5049	H01 TO O04	*Call
2098		5087<5050	H02 TO O04	*Call
2098		5087<5051	H03 TO O04	*Call
2098		5087<5052	H04 TO O04	*Call
2098		5087<5053	H05 TO O04	*Call
2098		5087<5054	I01 TO O04	*Call
2098		5087<5055	I02 TO O04	*Call
2098		5087<5056	I03 TO O04	*Call
2098		5087<5057	I04 TO O04	*Call
2098		5087<5058	I05 TO O04	*Call
2098		5087<5059	J01 TO O04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5087<5060	J02 TO O04	*Call
2098		5087<5061	J03 TO O04	*Call
2098		5087<5062	J04 TO O04	*Call
2098		5087<5063	J05 TO O04	*Call
2098		5087<5064	K01 TO O04	*Call
2098		5087<5065	K02 TO O04	*Call
2098		5087<5066	K03 TO O04	*Call
2098		5087<5067	K04 TO O04	*Call
2098		5087<5068	K05 TO O04	*Call
2098		5087<5069	L01 TO O04	*Call
2098		5087<5070	L02 TO O04	*Call
2098		5087<5071	L03 TO O04	*Call
2098		5087<5072	L04 TO O04	*Call
2098		5087<5073	L05 TO O04	*Call
2098		5087<5074	M01 TO O04	*Call
2098		5087<5075	M02 TO O04	*Call
2098		5087<5076	M03 TO O04	*Call
2098		5087<5077	M04 TO O04	*Call
2098		5087<5078	M05 TO O04	*Call
2098		5087<5079	N01 TO O04	*Call
2098		5087<5080	N02 TO O04	*Call
2098		5087<5081	N03 TO O04	*Call
2098		5087<5082	N04 TO O04	*Call
2098		5087<5083	N05 TO O04	*Call
2098		5087<5084	O01 TO O04	*Call
2098		5087<5085	O02 TO O04	*Call
2098		5087<5086	O03 TO O04	*Call
2098		5087<5088	O05 TO O04	*Call
2098		5087<5089	P01 TO O04	*Call
2098		5087<5090	P02 TO O04	*Call
2098		5087<5091	P03 TO O04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5087<5092	P04 TO O04	*Call
2098		5087<5093	P05 TO O04	*Call
2098		5087<5094	Q01 TO O04	*Call
2098		5087<5095	Q02 TO O04	*Call
2098		5087<5096	Q03 TO O04	*Call
2098		5087<5097	Q04 TO O04	*Call
2098		5087<5098	Q05 TO O04	*Call
2098		5087<5099	R01 TO O04	*Call
2098		5087<5100	R02 TO O04	*Call
2098		5087<5101	R03 TO O04	*Call
2098		5087<5102	R04 TO O04	*Call
2098		5087<5103	R05 TO O04	*Call
2098		5087<5104	S01 TO O04	*Call
2098		5087<5105	S02 TO O04	*Call
2098		5087<5106	S03 TO O04	*Call
2098		5087<5107	S04 TO O04	*Call
2098		5087<5108	S05 TO O04	*Call
2098		5087<5109	T01 TO O04	*Call
2098		5087<5110	T02 TO O04	*Call
2098		5087<5111	T03 TO O04	*Call
2098		5087<5112	T04 TO O04	*Call
2098		5087<5113	T05 TO O04	*Call
2098		5087<5114	U01 TO O04	*Call
2098		5087<5115	U02 TO O04	*Call
2098		5087<5116	U03 TO O04	*Call
2098		5087<5117	U04 TO O04	*Call
2098		5087<5118	U05 TO O04	*Call
2098		5087<5119	V01 TO O04	*Call
2098		5087<5120	V02 TO O04	*Call
2098		5087<5121	V03 TO O04	*Call
2098		5087<5122	V04 TO O04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5087<5123	V05 TO O04	*Call
2098		5087<5124	W01 TO O04	*Call
2098		5087<5125	W02 TO O04	*Call
2098		5087<5126	W03 TO O04	*Call
2098		5087<5127	W04 TO O04	*Call
2098		5087<5128	W05 TO O04	*Call
2098		5087<5129	X01 TO O04	*Call
2098		5087<5130	X02 TO O04	*Call
2098		5087<5131	X03 TO O04	*Call
2098		5087<5132	X04 TO O04	*Call
2098		5087<5133	X05 TO O04	*Call
2098		5087<5134	Y01 TO O04	*Call
2098		5087<5135	Y02 TO O04	*Call
2098		5087<5136	Y03 TO O04	*Call
2098		5087<5137	Y04 TO O04	*Call
2098		5087<5138	Y05 TO O04	*Call
2098		5087<5139	Z01 TO O04	*Call
2098		5087<5140	Z02 TO O04	*Call
2098		5087<5141	Z03 TO O04	*Call
2098		5087<5142	Z04 TO O04	*Call
2098		5087<5143	Z05 TO O04	*Call
2098		5088<5013	A00 TO O05	*Call
2098		5088<5014	A01 TO O05	*Call
2098		5088<5015	A02 TO O05	*Call
2098		5088<5016	A03 TO O05	*Call
2098		5088<5017	A04 TO O05	*Call
2098		5088<5018	A05 TO O05	*Call
2098		5088<5019	B01 TO O05	*Call
2098		5088<5020	B02 TO O05	*Call
2098		5088<5021	B03 TO O05	*Call
2098		5088<5022	B04 TO O05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5088<5023	B05 TO O05	*Call
2098		5088<5024	C01 TO O05	*Call
2098		5088<5025	C02 TO O05	*Call
2098		5088<5026	C03 TO O05	*Call
2098		5088<5027	C04 TO O05	*Call
2098		5088<5028	C05 TO O05	*Call
2098		5088<5029	D01 TO O05	*Call
2098		5088<5030	D02 TO O05	*Call
2098		5088<5031	D03 TO O05	*Call
2098		5088<5032	D04 TO O05	*Call
2098		5088<5033	D05 TO O05	*Call
2098		5088<5034	E01 TO O05	*Call
2098		5088<5035	E02 TO O05	*Call
2098		5088<5036	E03 TO O05	*Call
2098		5088<5037	E04 TO O05	*Call
2098		5088<5038	E05 TO O05	*Call
2098		5088<5039	F01 TO O05	*Call
2098		5088<5040	F02 TO O05	*Call
2098		5088<5041	F03 TO O05	*Call
2098		5088<5042	F04 TO O05	*Call
2098		5088<5043	F05 TO O05	*Call
2098		5088<5044	G01 TO O05	*Call
2098		5088<5045	G02 TO O05	*Call
2098		5088<5046	G03 TO O05	*Call
2098		5088<5047	G04 TO O05	*Call
2098		5088<5048	G05 TO O05	*Call
2098		5088<5049	H01 TO O05	*Call
2098		5088<5050	H02 TO O05	*Call
2098		5088<5051	H03 TO O05	*Call
2098		5088<5052	H04 TO O05	*Call
2098		5088<5053	H05 TO O05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5088<5054	I01 TO O05	*Call
2098		5088<5055	I02 TO O05	*Call
2098		5088<5056	I03 TO O05	*Call
2098		5088<5057	I04 TO O05	*Call
2098		5088<5058	I05 TO O05	*Call
2098		5088<5059	J01 TO O05	*Call
2098		5088<5060	J02 TO O05	*Call
2098		5088<5061	J03 TO O05	*Call
2098		5088<5062	J04 TO O05	*Call
2098		5088<5063	J05 TO O05	*Call
2098		5088<5064	K01 TO O05	*Call
2098		5088<5065	K02 TO O05	*Call
2098		5088<5066	K03 TO O05	*Call
2098		5088<5067	K04 TO O05	*Call
2098		5088<5068	K05 TO O05	*Call
2098		5088<5069	L01 TO O05	*Call
2098		5088<5070	L02 TO O05	*Call
2098		5088<5071	L03 TO O05	*Call
2098		5088<5072	L04 TO O05	*Call
2098		5088<5073	L05 TO O05	*Call
2098		5088<5074	M01 TO O05	*Call
2098		5088<5075	M02 TO O05	*Call
2098		5088<5076	M03 TO O05	*Call
2098		5088<5077	M04 TO O05	*Call
2098		5088<5078	M05 TO O05	*Call
2098		5088<5079	N01 TO O05	*Call
2098		5088<5080	N02 TO O05	*Call
2098		5088<5081	N03 TO O05	*Call
2098		5088<5082	N04 TO O05	*Call
2098		5088<5083	N05 TO O05	*Call
2098		5088<5084	O01 TO O05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5088<5085	O02 TO O05	*Call
2098		5088<5086	O03 TO O05	*Call
2098		5088<5087	O04 TO O05	*Call
2098		5088<5089	P01 TO O05	*Call
2098		5088<5090	P02 TO O05	*Call
2098		5088<5091	P03 TO O05	*Call
2098		5088<5092	P04 TO O05	*Call
2098		5088<5093	P05 TO O05	*Call
2098		5088<5094	Q01 TO O05	*Call
2098		5088<5095	Q02 TO O05	*Call
2098		5088<5096	Q03 TO O05	*Call
2098		5088<5097	Q04 TO O05	*Call
2098		5088<5098	Q05 TO O05	*Call
2098		5088<5099	R01 TO O05	*Call
2098		5088<5100	R02 TO O05	*Call
2098		5088<5101	R03 TO O05	*Call
2098		5088<5102	R04 TO O05	*Call
2098		5088<5103	R05 TO O05	*Call
2098		5088<5104	S01 TO O05	*Call
2098		5088<5105	S02 TO O05	*Call
2098		5088<5106	S03 TO O05	*Call
2098		5088<5107	S04 TO O05	*Call
2098		5088<5108	S05 TO O05	*Call
2098		5088<5109	T01 TO O05	*Call
2098		5088<5110	T02 TO O05	*Call
2098		5088<5111	T03 TO O05	*Call
2098		5088<5112	T04 TO O05	*Call
2098		5088<5113	T05 TO O05	*Call
2098		5088<5114	U01 TO O05	*Call
2098		5088<5115	U02 TO O05	*Call
2098		5088<5116	U03 TO O05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5088<5117	U04 TO O05	*Call
2098		5088<5118	U05 TO O05	*Call
2098		5088<5119	V01 TO O05	*Call
2098		5088<5120	V02 TO O05	*Call
2098		5088<5121	V03 TO O05	*Call
2098		5088<5122	V04 TO O05	*Call
2098		5088<5123	V05 TO O05	*Call
2098		5088<5124	W01 TO O05	*Call
2098		5088<5125	W02 TO O05	*Call
2098		5088<5126	W03 TO O05	*Call
2098		5088<5127	W04 TO O05	*Call
2098		5088<5128	W05 TO O05	*Call
2098		5088<5129	X01 TO O05	*Call
2098		5088<5130	X02 TO O05	*Call
2098		5088<5131	X03 TO O05	*Call
2098		5088<5132	X04 TO O05	*Call
2098		5088<5133	X05 TO O05	*Call
2098		5088<5134	Y01 TO O05	*Call
2098		5088<5135	Y02 TO O05	*Call
2098		5088<5136	Y03 TO O05	*Call
2098		5088<5137	Y04 TO O05	*Call
2098		5088<5138	Y05 TO O05	*Call
2098		5088<5139	Z01 TO O05	*Call
2098		5088<5140	Z02 TO O05	*Call
2098		5088<5141	Z03 TO O05	*Call
2098		5088<5142	Z04 TO O05	*Call
2098		5088<5143	Z05 TO O05	*Call
2098		5089<5013	A00 TO P01	*Call
2098		5089<5014	A01 TO P01	*Call
2098		5089<5015	A02 TO P01	*Call
2098		5089<5016	A03 TO P01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5089<5017	A04 TO P01	*Call
2098		5089<5018	A05 TO P01	*Call
2098		5089<5019	B01 TO P01	*Call
2098		5089<5020	B02 TO P01	*Call
2098		5089<5021	B03 TO P01	*Call
2098		5089<5022	B04 TO P01	*Call
2098		5089<5023	B05 TO P01	*Call
2098		5089<5024	C01 TO P01	*Call
2098		5089<5025	C02 TO P01	*Call
2098		5089<5026	C03 TO P01	*Call
2098		5089<5027	C04 TO P01	*Call
2098		5089<5028	C05 TO P01	*Call
2098		5089<5029	D01 TO P01	*Call
2098		5089<5030	D02 TO P01	*Call
2098		5089<5031	D03 TO P01	*Call
2098		5089<5032	D04 TO P01	*Call
2098		5089<5033	D05 TO P01	*Call
2098		5089<5034	E01 TO P01	*Call
2098		5089<5035	E02 TO P01	*Call
2098		5089<5036	E03 TO P01	*Call
2098		5089<5037	E04 TO P01	*Call
2098		5089<5038	E05 TO P01	*Call
2098		5089<5039	F01 TO P01	*Call
2098		5089<5040	F02 TO P01	*Call
2098		5089<5041	F03 TO P01	*Call
2098		5089<5042	F04 TO P01	*Call
2098		5089<5043	F05 TO P01	*Call
2098		5089<5044	G01 TO P01	*Call
2098		5089<5045	G02 TO P01	*Call
2098		5089<5046	G03 TO P01	*Call
2098		5089<5047	G04 TO P01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5089<5048	G05 TO P01	*Call
2098		5089<5049	H01 TO P01	*Call
2098		5089<5050	H02 TO P01	*Call
2098		5089<5051	H03 TO P01	*Call
2098		5089<5052	H04 TO P01	*Call
2098		5089<5053	H05 TO P01	*Call
2098		5089<5054	I01 TO P01	*Call
2098		5089<5055	I02 TO P01	*Call
2098		5089<5056	I03 TO P01	*Call
2098		5089<5057	I04 TO P01	*Call
2098		5089<5058	I05 TO P01	*Call
2098		5089<5059	J01 TO P01	*Call
2098		5089<5060	J02 TO P01	*Call
2098		5089<5061	J03 TO P01	*Call
2098		5089<5062	J04 TO P01	*Call
2098		5089<5063	J05 TO P01	*Call
2098		5089<5064	K01 TO P01	*Call
2098		5089<5065	K02 TO P01	*Call
2098		5089<5066	K03 TO P01	*Call
2098		5089<5067	K04 TO P01	*Call
2098		5089<5068	K05 TO P01	*Call
2098		5089<5069	L01 TO P01	*Call
2098		5089<5070	L02 TO P01	*Call
2098		5089<5071	L03 TO P01	*Call
2098		5089<5072	L04 TO P01	*Call
2098		5089<5073	L05 TO P01	*Call
2098		5089<5074	M01 TO P01	*Call
2098		5089<5075	M02 TO P01	*Call
2098		5089<5076	M03 TO P01	*Call
2098		5089<5077	M04 TO P01	*Call
2098		5089<5078	M05 TO P01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5089<5079	N01 TO P01	*Call
2098		5089<5080	N02 TO P01	*Call
2098		5089<5081	N03 TO P01	*Call
2098		5089<5082	N04 TO P01	*Call
2098		5089<5083	N05 TO P01	*Call
2098		5089<5084	O01 TO P01	*Call
2098		5089<5085	O02 TO P01	*Call
2098		5089<5086	O03 TO P01	*Call
2098		5089<5087	O04 TO P01	*Call
2098		5089<5088	O05 TO P01	*Call
2098		5089<5090	P02 TO P01	*Call
2098		5089<5091	P03 TO P01	*Call
2098		5089<5092	P04 TO P01	*Call
2098		5089<5093	P05 TO P01	*Call
2098		5089<5094	Q01 TO P01	*Call
2098		5089<5095	Q02 TO P01	*Call
2098		5089<5096	Q03 TO P01	*Call
2098		5089<5097	Q04 TO P01	*Call
2098		5089<5098	Q05 TO P01	*Call
2098		5089<5099	R01 TO P01	*Call
2098		5089<5100	R02 TO P01	*Call
2098		5089<5101	R03 TO P01	*Call
2098		5089<5102	R04 TO P01	*Call
2098		5089<5103	R05 TO P01	*Call
2098		5089<5104	S01 TO P01	*Call
2098		5089<5105	S02 TO P01	*Call
2098		5089<5106	S03 TO P01	*Call
2098		5089<5107	S04 TO P01	*Call
2098		5089<5108	S05 TO P01	*Call
2098		5089<5109	T01 TO P01	*Call
2098		5089<5110	T02 TO P01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5089<5111	T03 TO P01	*Call
2098		5089<5112	T04 TO P01	*Call
2098		5089<5113	T05 TO P01	*Call
2098		5089<5114	U01 TO P01	*Call
2098		5089<5115	U02 TO P01	*Call
2098		5089<5116	U03 TO P01	*Call
2098		5089<5117	U04 TO P01	*Call
2098		5089<5118	U05 TO P01	*Call
2098		5089<5119	V01 TO P01	*Call
2098		5089<5120	V02 TO P01	*Call
2098		5089<5121	V03 TO P01	*Call
2098		5089<5122	V04 TO P01	*Call
2098		5089<5123	V05 TO P01	*Call
2098		5089<5124	W01 TO P01	*Call
2098		5089<5125	W02 TO P01	*Call
2098		5089<5126	W03 TO P01	*Call
2098		5089<5127	W04 TO P01	*Call
2098		5089<5128	W05 TO P01	*Call
2098		5089<5129	X01 TO P01	*Call
2098		5089<5130	X02 TO P01	*Call
2098		5089<5131	X03 TO P01	*Call
2098		5089<5132	X04 TO P01	*Call
2098		5089<5133	X05 TO P01	*Call
2098		5089<5134	Y01 TO P01	*Call
2098		5089<5135	Y02 TO P01	*Call
2098		5089<5136	Y03 TO P01	*Call
2098		5089<5137	Y04 TO P01	*Call
2098		5089<5138	Y05 TO P01	*Call
2098		5089<5139	Z01 TO P01	*Call
2098		5089<5140	Z02 TO P01	*Call
2098		5089<5141	Z03 TO P01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5089<5142	Z04 TO P01	*Call
2098		5089<5143	Z05 TO P01	*Call
2098		5090<5013	A00 TO P02	*Call
2098		5090<5014	A01 TO P02	*Call
2098		5090<5015	A02 TO P02	*Call
2098		5090<5016	A03 TO P02	*Call
2098		5090<5017	A04 TO P02	*Call
2098		5090<5018	A05 TO P02	*Call
2098		5090<5019	B01 TO P02	*Call
2098		5090<5020	B02 TO P02	*Call
2098		5090<5021	B03 TO P02	*Call
2098		5090<5022	B04 TO P02	*Call
2098		5090<5023	B05 TO P02	*Call
2098		5090<5024	C01 TO P02	*Call
2098		5090<5025	C02 TO P02	*Call
2098		5090<5026	C03 TO P02	*Call
2098		5090<5027	C04 TO P02	*Call
2098		5090<5028	C05 TO P02	*Call
2098		5090<5029	D01 TO P02	*Call
2098		5090<5030	D02 TO P02	*Call
2098		5090<5031	D03 TO P02	*Call
2098		5090<5032	D04 TO P02	*Call
2098		5090<5033	D05 TO P02	*Call
2098		5090<5034	E01 TO P02	*Call
2098		5090<5035	E02 TO P02	*Call
2098		5090<5036	E03 TO P02	*Call
2098		5090<5037	E04 TO P02	*Call
2098		5090<5038	E05 TO P02	*Call
2098		5090<5039	F01 TO P02	*Call
2098		5090<5040	F02 TO P02	*Call
2098		5090<5041	F03 TO P02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5090<5042	F04 TO P02	*Call
2098		5090<5043	F05 TO P02	*Call
2098		5090<5044	G01 TO P02	*Call
2098		5090<5045	G02 TO P02	*Call
2098		5090<5046	G03 TO P02	*Call
2098		5090<5047	G04 TO P02	*Call
2098		5090<5048	G05 TO P02	*Call
2098		5090<5049	H01 TO P02	*Call
2098		5090<5050	H02 TO P02	*Call
2098		5090<5051	H03 TO P02	*Call
2098		5090<5052	H04 TO P02	*Call
2098		5090<5053	H05 TO P02	*Call
2098		5090<5054	I01 TO P02	*Call
2098		5090<5055	I02 TO P02	*Call
2098		5090<5056	I03 TO P02	*Call
2098		5090<5057	I04 TO P02	*Call
2098		5090<5058	I05 TO P02	*Call
2098		5090<5059	J01 TO P02	*Call
2098		5090<5060	J02 TO P02	*Call
2098		5090<5061	J03 TO P02	*Call
2098		5090<5062	J04 TO P02	*Call
2098		5090<5063	J05 TO P02	*Call
2098		5090<5064	K01 TO P02	*Call
2098		5090<5065	K02 TO P02	*Call
2098		5090<5066	K03 TO P02	*Call
2098		5090<5067	K04 TO P02	*Call
2098		5090<5068	K05 TO P02	*Call
2098		5090<5069	L01 TO P02	*Call
2098		5090<5070	L02 TO P02	*Call
2098		5090<5071	L03 TO P02	*Call
2098		5090<5072	L04 TO P02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5090<5073	L05 TO P02	*Call
2098		5090<5074	M01 TO P02	*Call
2098		5090<5075	M02 TO P02	*Call
2098		5090<5076	M03 TO P02	*Call
2098		5090<5077	M04 TO P02	*Call
2098		5090<5078	M05 TO P02	*Call
2098		5090<5079	N01 TO P02	*Call
2098		5090<5080	N02 TO P02	*Call
2098		5090<5081	N03 TO P02	*Call
2098		5090<5082	N04 TO P02	*Call
2098		5090<5083	N05 TO P02	*Call
2098		5090<5084	O01 TO P02	*Call
2098		5090<5085	O02 TO P02	*Call
2098		5090<5086	O03 TO P02	*Call
2098		5090<5087	O04 TO P02	*Call
2098		5090<5088	O05 TO P02	*Call
2098		5090<5089	P01 TO P02	*Call
2098		5090<5091	P03 TO P02	*Call
2098		5090<5092	P04 TO P02	*Call
2098		5090<5093	P05 TO P02	*Call
2098		5090<5094	Q01 TO P02	*Call
2098		5090<5095	Q02 TO P02	*Call
2098		5090<5096	Q03 TO P02	*Call
2098		5090<5097	Q04 TO P02	*Call
2098		5090<5098	Q05 TO P02	*Call
2098		5090<5099	R01 TO P02	*Call
2098		5090<5100	R02 TO P02	*Call
2098		5090<5101	R03 TO P02	*Call
2098		5090<5102	R04 TO P02	*Call
2098		5090<5103	R05 TO P02	*Call
2098		5090<5104	S01 TO P02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5090<5105	S02 TO P02	*Call
2098		5090<5106	S03 TO P02	*Call
2098		5090<5107	S04 TO P02	*Call
2098		5090<5108	S05 TO P02	*Call
2098		5090<5109	T01 TO P02	*Call
2098		5090<5110	T02 TO P02	*Call
2098		5090<5111	T03 TO P02	*Call
2098		5090<5112	T04 TO P02	*Call
2098		5090<5113	T05 TO P02	*Call
2098		5090<5114	U01 TO P02	*Call
2098		5090<5115	U02 TO P02	*Call
2098		5090<5116	U03 TO P02	*Call
2098		5090<5117	U04 TO P02	*Call
2098		5090<5118	U05 TO P02	*Call
2098		5090<5119	V01 TO P02	*Call
2098		5090<5120	V02 TO P02	*Call
2098		5090<5121	V03 TO P02	*Call
2098		5090<5122	V04 TO P02	*Call
2098		5090<5123	V05 TO P02	*Call
2098		5090<5124	W01 TO P02	*Call
2098		5090<5125	W02 TO P02	*Call
2098		5090<5126	W03 TO P02	*Call
2098		5090<5127	W04 TO P02	*Call
2098		5090<5128	W05 TO P02	*Call
2098		5090<5129	X01 TO P02	*Call
2098		5090<5130	X02 TO P02	*Call
2098		5090<5131	X03 TO P02	*Call
2098		5090<5132	X04 TO P02	*Call
2098		5090<5133	X05 TO P02	*Call
2098		5090<5134	Y01 TO P02	*Call
2098		5090<5135	Y02 TO P02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5090<5136	Y03 TO P02	*Call
2098		5090<5137	Y04 TO P02	*Call
2098		5090<5138	Y05 TO P02	*Call
2098		5090<5139	Z01 TO P02	*Call
2098		5090<5140	Z02 TO P02	*Call
2098		5090<5141	Z03 TO P02	*Call
2098		5090<5142	Z04 TO P02	*Call
2098		5090<5143	Z05 TO P02	*Call
2098		5091<5013	A00 TO P03	*Call
2098		5091<5014	A01 TO P03	*Call
2098		5091<5015	A02 TO P03	*Call
2098		5091<5016	A03 TO P03	*Call
2098		5091<5017	A04 TO P03	*Call
2098		5091<5018	A05 TO P03	*Call
2098		5091<5019	B01 TO P03	*Call
2098		5091<5020	B02 TO P03	*Call
2098		5091<5021	B03 TO P03	*Call
2098		5091<5022	B04 TO P03	*Call
2098		5091<5023	B05 TO P03	*Call
2098		5091<5024	C01 TO P03	*Call
2098		5091<5025	C02 TO P03	*Call
2098		5091<5026	C03 TO P03	*Call
2098		5091<5027	C04 TO P03	*Call
2098		5091<5028	C05 TO P03	*Call
2098		5091<5029	D01 TO P03	*Call
2098		5091<5030	D02 TO P03	*Call
2098		5091<5031	D03 TO P03	*Call
2098		5091<5032	D04 TO P03	*Call
2098		5091<5033	D05 TO P03	*Call
2098		5091<5034	E01 TO P03	*Call
2098		5091<5035	E02 TO P03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5091<5036	E03 TO P03	*Call
2098		5091<5037	E04 TO P03	*Call
2098		5091<5038	E05 TO P03	*Call
2098		5091<5039	F01 TO P03	*Call
2098		5091<5040	F02 TO P03	*Call
2098		5091<5041	F03 TO P03	*Call
2098		5091<5042	F04 TO P03	*Call
2098		5091<5043	F05 TO P03	*Call
2098		5091<5044	G01 TO P03	*Call
2098		5091<5045	G02 TO P03	*Call
2098		5091<5046	G03 TO P03	*Call
2098		5091<5047	G04 TO P03	*Call
2098		5091<5048	G05 TO P03	*Call
2098		5091<5049	H01 TO P03	*Call
2098		5091<5050	H02 TO P03	*Call
2098		5091<5051	H03 TO P03	*Call
2098		5091<5052	H04 TO P03	*Call
2098		5091<5053	H05 TO P03	*Call
2098		5091<5054	I01 TO P03	*Call
2098		5091<5055	I02 TO P03	*Call
2098		5091<5056	I03 TO P03	*Call
2098		5091<5057	I04 TO P03	*Call
2098		5091<5058	I05 TO P03	*Call
2098		5091<5059	J01 TO P03	*Call
2098		5091<5060	J02 TO P03	*Call
2098		5091<5061	J03 TO P03	*Call
2098		5091<5062	J04 TO P03	*Call
2098		5091<5063	J05 TO P03	*Call
2098		5091<5064	K01 TO P03	*Call
2098		5091<5065	K02 TO P03	*Call
2098		5091<5066	K03 TO P03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5091<5067	K04 TO P03	*Call
2098		5091<5068	K05 TO P03	*Call
2098		5091<5069	L01 TO P03	*Call
2098		5091<5070	L02 TO P03	*Call
2098		5091<5071	L03 TO P03	*Call
2098		5091<5072	L04 TO P03	*Call
2098		5091<5073	L05 TO P03	*Call
2098		5091<5074	M01 TO P03	*Call
2098		5091<5075	M02 TO P03	*Call
2098		5091<5076	M03 TO P03	*Call
2098		5091<5077	M04 TO P03	*Call
2098		5091<5078	M05 TO P03	*Call
2098		5091<5079	N01 TO P03	*Call
2098		5091<5080	N02 TO P03	*Call
2098		5091<5081	N03 TO P03	*Call
2098		5091<5082	N04 TO P03	*Call
2098		5091<5083	N05 TO P03	*Call
2098		5091<5084	O01 TO P03	*Call
2098		5091<5085	O02 TO P03	*Call
2098		5091<5086	O03 TO P03	*Call
2098		5091<5087	O04 TO P03	*Call
2098		5091<5088	O05 TO P03	*Call
2098		5091<5089	P01 TO P03	*Call
2098		5091<5090	P02 TO P03	*Call
2098		5091<5092	P04 TO P03	*Call
2098		5091<5093	P05 TO P03	*Call
2098		5091<5094	Q01 TO P03	*Call
2098		5091<5095	Q02 TO P03	*Call
2098		5091<5096	Q03 TO P03	*Call
2098		5091<5097	Q04 TO P03	*Call
2098		5091<5098	Q05 TO P03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5091<5099	R01 TO P03	*Call
2098		5091<5100	R02 TO P03	*Call
2098		5091<5101	R03 TO P03	*Call
2098		5091<5102	R04 TO P03	*Call
2098		5091<5103	R05 TO P03	*Call
2098		5091<5104	S01 TO P03	*Call
2098		5091<5105	S02 TO P03	*Call
2098		5091<5106	S03 TO P03	*Call
2098		5091<5107	S04 TO P03	*Call
2098		5091<5108	S05 TO P03	*Call
2098		5091<5109	T01 TO P03	*Call
2098		5091<5110	T02 TO P03	*Call
2098		5091<5111	T03 TO P03	*Call
2098		5091<5112	T04 TO P03	*Call
2098		5091<5113	T05 TO P03	*Call
2098		5091<5114	U01 TO P03	*Call
2098		5091<5115	U02 TO P03	*Call
2098		5091<5116	U03 TO P03	*Call
2098		5091<5117	U04 TO P03	*Call
2098		5091<5118	U05 TO P03	*Call
2098		5091<5119	V01 TO P03	*Call
2098		5091<5120	V02 TO P03	*Call
2098		5091<5121	V03 TO P03	*Call
2098		5091<5122	V04 TO P03	*Call
2098		5091<5123	V05 TO P03	*Call
2098		5091<5124	W01 TO P03	*Call
2098		5091<5125	W02 TO P03	*Call
2098		5091<5126	W03 TO P03	*Call
2098		5091<5127	W04 TO P03	*Call
2098		5091<5128	W05 TO P03	*Call
2098		5091<5129	X01 TO P03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5091<5130	X02 TO P03	*Call
2098		5091<5131	X03 TO P03	*Call
2098		5091<5132	X04 TO P03	*Call
2098		5091<5133	X05 TO P03	*Call
2098		5091<5134	Y01 TO P03	*Call
2098		5091<5135	Y02 TO P03	*Call
2098		5091<5136	Y03 TO P03	*Call
2098		5091<5137	Y04 TO P03	*Call
2098		5091<5138	Y05 TO P03	*Call
2098		5091<5139	Z01 TO P03	*Call
2098		5091<5140	Z02 TO P03	*Call
2098		5091<5141	Z03 TO P03	*Call
2098		5091<5142	Z04 TO P03	*Call
2098		5091<5143	Z05 TO P03	*Call
2098		5092<5013	A00 TO P04	*Call
2098		5092<5014	A01 TO P04	*Call
2098		5092<5015	A02 TO P04	*Call
2098		5092<5016	A03 TO P04	*Call
2098		5092<5017	A04 TO P04	*Call
2098		5092<5018	A05 TO P04	*Call
2098		5092<5019	B01 TO P04	*Call
2098		5092<5020	B02 TO P04	*Call
2098		5092<5021	B03 TO P04	*Call
2098		5092<5022	B04 TO P04	*Call
2098		5092<5023	B05 TO P04	*Call
2098		5092<5024	C01 TO P04	*Call
2098		5092<5025	C02 TO P04	*Call
2098		5092<5026	C03 TO P04	*Call
2098		5092<5027	C04 TO P04	*Call
2098		5092<5028	C05 TO P04	*Call
2098		5092<5029	D01 TO P04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5092<5030	D02 TO P04	*Call
2098		5092<5031	D03 TO P04	*Call
2098		5092<5032	D04 TO P04	*Call
2098		5092<5033	D05 TO P04	*Call
2098		5092<5034	E01 TO P04	*Call
2098		5092<5035	E02 TO P04	*Call
2098		5092<5036	E03 TO P04	*Call
2098		5092<5037	E04 TO P04	*Call
2098		5092<5038	E05 TO P04	*Call
2098		5092<5039	F01 TO P04	*Call
2098		5092<5040	F02 TO P04	*Call
2098		5092<5041	F03 TO P04	*Call
2098		5092<5042	F04 TO P04	*Call
2098		5092<5043	F05 TO P04	*Call
2098		5092<5044	G01 TO P04	*Call
2098		5092<5045	G02 TO P04	*Call
2098		5092<5046	G03 TO P04	*Call
2098		5092<5047	G04 TO P04	*Call
2098		5092<5048	G05 TO P04	*Call
2098		5092<5049	H01 TO P04	*Call
2098		5092<5050	H02 TO P04	*Call
2098		5092<5051	H03 TO P04	*Call
2098		5092<5052	H04 TO P04	*Call
2098		5092<5053	H05 TO P04	*Call
2098		5092<5054	I01 TO P04	*Call
2098		5092<5055	I02 TO P04	*Call
2098		5092<5056	I03 TO P04	*Call
2098		5092<5057	I04 TO P04	*Call
2098		5092<5058	I05 TO P04	*Call
2098		5092<5059	J01 TO P04	*Call
2098		5092<5060	J02 TO P04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5092<5061	J03 TO P04	*Call
2098		5092<5062	J04 TO P04	*Call
2098		5092<5063	J05 TO P04	*Call
2098		5092<5064	K01 TO P04	*Call
2098		5092<5065	K02 TO P04	*Call
2098		5092<5066	K03 TO P04	*Call
2098		5092<5067	K04 TO P04	*Call
2098		5092<5068	K05 TO P04	*Call
2098		5092<5069	L01 TO P04	*Call
2098		5092<5070	L02 TO P04	*Call
2098		5092<5071	L03 TO P04	*Call
2098		5092<5072	L04 TO P04	*Call
2098		5092<5073	L05 TO P04	*Call
2098		5092<5074	M01 TO P04	*Call
2098		5092<5075	M02 TO P04	*Call
2098		5092<5076	M03 TO P04	*Call
2098		5092<5077	M04 TO P04	*Call
2098		5092<5078	M05 TO P04	*Call
2098		5092<5079	N01 TO P04	*Call
2098		5092<5080	N02 TO P04	*Call
2098		5092<5081	N03 TO P04	*Call
2098		5092<5082	N04 TO P04	*Call
2098		5092<5083	N05 TO P04	*Call
2098		5092<5084	O01 TO P04	*Call
2098		5092<5085	O02 TO P04	*Call
2098		5092<5086	O03 TO P04	*Call
2098		5092<5087	O04 TO P04	*Call
2098		5092<5088	O05 TO P04	*Call
2098		5092<5089	P01 TO P04	*Call
2098		5092<5090	P02 TO P04	*Call
2098		5092<5091	P03 TO P04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5092<5093	P05 TO P04	*Call
2098		5092<5094	Q01 TO P04	*Call
2098		5092<5095	Q02 TO P04	*Call
2098		5092<5096	Q03 TO P04	*Call
2098		5092<5097	Q04 TO P04	*Call
2098		5092<5098	Q05 TO P04	*Call
2098		5092<5099	R01 TO P04	*Call
2098		5092<5100	R02 TO P04	*Call
2098		5092<5101	R03 TO P04	*Call
2098		5092<5102	R04 TO P04	*Call
2098		5092<5103	R05 TO P04	*Call
2098		5092<5104	S01 TO P04	*Call
2098		5092<5105	S02 TO P04	*Call
2098		5092<5106	S03 TO P04	*Call
2098		5092<5107	S04 TO P04	*Call
2098		5092<5108	S05 TO P04	*Call
2098		5092<5109	T01 TO P04	*Call
2098		5092<5110	T02 TO P04	*Call
2098		5092<5111	T03 TO P04	*Call
2098		5092<5112	T04 TO P04	*Call
2098		5092<5113	T05 TO P04	*Call
2098		5092<5114	U01 TO P04	*Call
2098		5092<5115	U02 TO P04	*Call
2098		5092<5116	U03 TO P04	*Call
2098		5092<5117	U04 TO P04	*Call
2098		5092<5118	U05 TO P04	*Call
2098		5092<5119	V01 TO P04	*Call
2098		5092<5120	V02 TO P04	*Call
2098		5092<5121	V03 TO P04	*Call
2098		5092<5122	V04 TO P04	*Call
2098		5092<5123	V05 TO P04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5092<5124	W01 TO P04	*Call
2098		5092<5125	W02 TO P04	*Call
2098		5092<5126	W03 TO P04	*Call
2098		5092<5127	W04 TO P04	*Call
2098		5092<5128	W05 TO P04	*Call
2098		5092<5129	X01 TO P04	*Call
2098		5092<5130	X02 TO P04	*Call
2098		5092<5131	X03 TO P04	*Call
2098		5092<5132	X04 TO P04	*Call
2098		5092<5133	X05 TO P04	*Call
2098		5092<5134	Y01 TO P04	*Call
2098		5092<5135	Y02 TO P04	*Call
2098		5092<5136	Y03 TO P04	*Call
2098		5092<5137	Y04 TO P04	*Call
2098		5092<5138	Y05 TO P04	*Call
2098		5092<5139	Z01 TO P04	*Call
2098		5092<5140	Z02 TO P04	*Call
2098		5092<5141	Z03 TO P04	*Call
2098		5092<5142	Z04 TO P04	*Call
2098		5092<5143	Z05 TO P04	*Call
2098		5093<5013	A00 TO P05	*Call
2098		5093<5014	A01 TO P05	*Call
2098		5093<5015	A02 TO P05	*Call
2098		5093<5016	A03 TO P05	*Call
2098		5093<5017	A04 TO P05	*Call
2098		5093<5018	A05 TO P05	*Call
2098		5093<5019	B01 TO P05	*Call
2098		5093<5020	B02 TO P05	*Call
2098		5093<5021	B03 TO P05	*Call
2098		5093<5022	B04 TO P05	*Call
2098		5093<5023	B05 TO P05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5093<5024	C01 TO P05	*Call
2098		5093<5025	C02 TO P05	*Call
2098		5093<5026	C03 TO P05	*Call
2098		5093<5027	C04 TO P05	*Call
2098		5093<5028	C05 TO P05	*Call
2098		5093<5029	D01 TO P05	*Call
2098		5093<5030	D02 TO P05	*Call
2098		5093<5031	D03 TO P05	*Call
2098		5093<5032	D04 TO P05	*Call
2098		5093<5033	D05 TO P05	*Call
2098		5093<5034	E01 TO P05	*Call
2098		5093<5035	E02 TO P05	*Call
2098		5093<5036	E03 TO P05	*Call
2098		5093<5037	E04 TO P05	*Call
2098		5093<5038	E05 TO P05	*Call
2098		5093<5039	F01 TO P05	*Call
2098		5093<5040	F02 TO P05	*Call
2098		5093<5041	F03 TO P05	*Call
2098		5093<5042	F04 TO P05	*Call
2098		5093<5043	F05 TO P05	*Call
2098		5093<5044	G01 TO P05	*Call
2098		5093<5045	G02 TO P05	*Call
2098		5093<5046	G03 TO P05	*Call
2098		5093<5047	G04 TO P05	*Call
2098		5093<5048	G05 TO P05	*Call
2098		5093<5049	H01 TO P05	*Call
2098		5093<5050	H02 TO P05	*Call
2098		5093<5051	H03 TO P05	*Call
2098		5093<5052	H04 TO P05	*Call
2098		5093<5053	H05 TO P05	*Call
2098		5093<5054	I01 TO P05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5093<5055	I02 TO P05	*Call
2098		5093<5056	I03 TO P05	*Call
2098		5093<5057	I04 TO P05	*Call
2098		5093<5058	I05 TO P05	*Call
2098		5093<5059	J01 TO P05	*Call
2098		5093<5060	J02 TO P05	*Call
2098		5093<5061	J03 TO P05	*Call
2098		5093<5062	J04 TO P05	*Call
2098		5093<5063	J05 TO P05	*Call
2098		5093<5064	K01 TO P05	*Call
2098		5093<5065	K02 TO P05	*Call
2098		5093<5066	K03 TO P05	*Call
2098		5093<5067	K04 TO P05	*Call
2098		5093<5068	K05 TO P05	*Call
2098		5093<5069	L01 TO P05	*Call
2098		5093<5070	L02 TO P05	*Call
2098		5093<5071	L03 TO P05	*Call
2098		5093<5072	L04 TO P05	*Call
2098		5093<5073	L05 TO P05	*Call
2098		5093<5074	M01 TO P05	*Call
2098		5093<5075	M02 TO P05	*Call
2098		5093<5076	M03 TO P05	*Call
2098		5093<5077	M04 TO P05	*Call
2098		5093<5078	M05 TO P05	*Call
2098		5093<5079	N01 TO P05	*Call
2098		5093<5080	N02 TO P05	*Call
2098		5093<5081	N03 TO P05	*Call
2098		5093<5082	N04 TO P05	*Call
2098		5093<5083	N05 TO P05	*Call
2098		5093<5084	O01 TO P05	*Call
2098		5093<5085	O02 TO P05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5093<5086	O03 TO P05	*Call
2098		5093<5087	O04 TO P05	*Call
2098		5093<5088	O05 TO P05	*Call
2098		5093<5089	P01 TO P05	*Call
2098		5093<5090	P02 TO P05	*Call
2098		5093<5091	P03 TO P05	*Call
2098		5093<5092	P04 TO P05	*Call
2098		5093<5094	Q01 TO P05	*Call
2098		5093<5095	Q02 TO P05	*Call
2098		5093<5096	Q03 TO P05	*Call
2098		5093<5097	Q04 TO P05	*Call
2098		5093<5098	Q05 TO P05	*Call
2098		5093<5099	R01 TO P05	*Call
2098		5093<5100	R02 TO P05	*Call
2098		5093<5101	R03 TO P05	*Call
2098		5093<5102	R04 TO P05	*Call
2098		5093<5103	R05 TO P05	*Call
2098		5093<5104	S01 TO P05	*Call
2098		5093<5105	S02 TO P05	*Call
2098		5093<5106	S03 TO P05	*Call
2098		5093<5107	S04 TO P05	*Call
2098		5093<5108	S05 TO P05	*Call
2098		5093<5109	T01 TO P05	*Call
2098		5093<5110	T02 TO P05	*Call
2098		5093<5111	T03 TO P05	*Call
2098		5093<5112	T04 TO P05	*Call
2098		5093<5113	T05 TO P05	*Call
2098		5093<5114	U01 TO P05	*Call
2098		5093<5115	U02 TO P05	*Call
2098		5093<5116	U03 TO P05	*Call
2098		5093<5117	U04 TO P05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5093<5118	U05 TO P05	*Call
2098		5093<5119	V01 TO P05	*Call
2098		5093<5120	V02 TO P05	*Call
2098		5093<5121	V03 TO P05	*Call
2098		5093<5122	V04 TO P05	*Call
2098		5093<5123	V05 TO P05	*Call
2098		5093<5124	W01 TO P05	*Call
2098		5093<5125	W02 TO P05	*Call
2098		5093<5126	W03 TO P05	*Call
2098		5093<5127	W04 TO P05	*Call
2098		5093<5128	W05 TO P05	*Call
2098		5093<5129	X01 TO P05	*Call
2098		5093<5130	X02 TO P05	*Call
2098		5093<5131	X03 TO P05	*Call
2098		5093<5132	X04 TO P05	*Call
2098		5093<5133	X05 TO P05	*Call
2098		5093<5134	Y01 TO P05	*Call
2098		5093<5135	Y02 TO P05	*Call
2098		5093<5136	Y03 TO P05	*Call
2098		5093<5137	Y04 TO P05	*Call
2098		5093<5138	Y05 TO P05	*Call
2098		5093<5139	Z01 TO P05	*Call
2098		5093<5140	Z02 TO P05	*Call
2098		5093<5141	Z03 TO P05	*Call
2098		5093<5142	Z04 TO P05	*Call
2098		5093<5143	Z05 TO P05	*Call
2098		5094<5013	A00 TO Q01	*Call
2098		5094<5014	A01 TO Q01	*Call
2098		5094<5015	A02 TO Q01	*Call
2098		5094<5016	A03 TO Q01	*Call
2098		5094<5017	A04 TO Q01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5094<5018	A05 TO Q01	*Call
2098		5094<5019	B01 TO Q01	*Call
2098		5094<5020	B02 TO Q01	*Call
2098		5094<5021	B03 TO Q01	*Call
2098		5094<5022	B04 TO Q01	*Call
2098		5094<5023	B05 TO Q01	*Call
2098		5094<5024	C01 TO Q01	*Call
2098		5094<5025	C02 TO Q01	*Call
2098		5094<5026	C03 TO Q01	*Call
2098		5094<5027	C04 TO Q01	*Call
2098		5094<5028	C05 TO Q01	*Call
2098		5094<5029	D01 TO Q01	*Call
2098		5094<5030	D02 TO Q01	*Call
2098		5094<5031	D03 TO Q01	*Call
2098		5094<5032	D04 TO Q01	*Call
2098		5094<5033	D05 TO Q01	*Call
2098		5094<5034	E01 TO Q01	*Call
2098		5094<5035	E02 TO Q01	*Call
2098		5094<5036	E03 TO Q01	*Call
2098		5094<5037	E04 TO Q01	*Call
2098		5094<5038	E05 TO Q01	*Call
2098		5094<5039	F01 TO Q01	*Call
2098		5094<5040	F02 TO Q01	*Call
2098		5094<5041	F03 TO Q01	*Call
2098		5094<5042	F04 TO Q01	*Call
2098		5094<5043	F05 TO Q01	*Call
2098		5094<5044	G01 TO Q01	*Call
2098		5094<5045	G02 TO Q01	*Call
2098		5094<5046	G03 TO Q01	*Call
2098		5094<5047	G04 TO Q01	*Call
2098		5094<5048	G05 TO Q01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5094<5049	H01 TO Q01	*Call
2098		5094<5050	H02 TO Q01	*Call
2098		5094<5051	H03 TO Q01	*Call
2098		5094<5052	H04 TO Q01	*Call
2098		5094<5053	H05 TO Q01	*Call
2098		5094<5054	I01 TO Q01	*Call
2098		5094<5055	I02 TO Q01	*Call
2098		5094<5056	I03 TO Q01	*Call
2098		5094<5057	I04 TO Q01	*Call
2098		5094<5058	I05 TO Q01	*Call
2098		5094<5059	J01 TO Q01	*Call
2098		5094<5060	J02 TO Q01	*Call
2098		5094<5061	J03 TO Q01	*Call
2098		5094<5062	J04 TO Q01	*Call
2098		5094<5063	J05 TO Q01	*Call
2098		5094<5064	K01 TO Q01	*Call
2098		5094<5065	K02 TO Q01	*Call
2098		5094<5066	K03 TO Q01	*Call
2098		5094<5067	K04 TO Q01	*Call
2098		5094<5068	K05 TO Q01	*Call
2098		5094<5069	L01 TO Q01	*Call
2098		5094<5070	L02 TO Q01	*Call
2098		5094<5071	L03 TO Q01	*Call
2098		5094<5072	L04 TO Q01	*Call
2098		5094<5073	L05 TO Q01	*Call
2098		5094<5074	M01 TO Q01	*Call
2098		5094<5075	M02 TO Q01	*Call
2098		5094<5076	M03 TO Q01	*Call
2098		5094<5077	M04 TO Q01	*Call
2098		5094<5078	M05 TO Q01	*Call
2098		5094<5079	N01 TO Q01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5094<5080	N02 TO Q01	*Call
2098		5094<5081	N03 TO Q01	*Call
2098		5094<5082	N04 TO Q01	*Call
2098		5094<5083	N05 TO Q01	*Call
2098		5094<5084	O01 TO Q01	*Call
2098		5094<5085	O02 TO Q01	*Call
2098		5094<5086	O03 TO Q01	*Call
2098		5094<5087	O04 TO Q01	*Call
2098		5094<5088	O05 TO Q01	*Call
2098		5094<5089	P01 TO Q01	*Call
2098		5094<5090	P02 TO Q01	*Call
2098		5094<5091	P03 TO Q01	*Call
2098		5094<5092	P04 TO Q01	*Call
2098		5094<5093	P05 TO Q01	*Call
2098		5094<5095	Q02 TO Q01	*Call
2098		5094<5096	Q03 TO Q01	*Call
2098		5094<5097	Q04 TO Q01	*Call
2098		5094<5098	Q05 TO Q01	*Call
2098		5094<5099	R01 TO Q01	*Call
2098		5094<5100	R02 TO Q01	*Call
2098		5094<5101	R03 TO Q01	*Call
2098		5094<5102	R04 TO Q01	*Call
2098		5094<5103	R05 TO Q01	*Call
2098		5094<5104	S01 TO Q01	*Call
2098		5094<5105	S02 TO Q01	*Call
2098		5094<5106	S03 TO Q01	*Call
2098		5094<5107	S04 TO Q01	*Call
2098		5094<5108	S05 TO Q01	*Call
2098		5094<5109	T01 TO Q01	*Call
2098		5094<5110	T02 TO Q01	*Call
2098		5094<5111	T03 TO Q01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5094<5112	T04 TO Q01	*Call
2098		5094<5113	T05 TO Q01	*Call
2098		5094<5114	U01 TO Q01	*Call
2098		5094<5115	U02 TO Q01	*Call
2098		5094<5116	U03 TO Q01	*Call
2098		5094<5117	U04 TO Q01	*Call
2098		5094<5118	U05 TO Q01	*Call
2098		5094<5119	V01 TO Q01	*Call
2098		5094<5120	V02 TO Q01	*Call
2098		5094<5121	V03 TO Q01	*Call
2098		5094<5122	V04 TO Q01	*Call
2098		5094<5123	V05 TO Q01	*Call
2098		5094<5124	W01 TO Q01	*Call
2098		5094<5125	W02 TO Q01	*Call
2098		5094<5126	W03 TO Q01	*Call
2098		5094<5127	W04 TO Q01	*Call
2098		5094<5128	W05 TO Q01	*Call
2098		5094<5129	X01 TO Q01	*Call
2098		5094<5130	X02 TO Q01	*Call
2098		5094<5131	X03 TO Q01	*Call
2098		5094<5132	X04 TO Q01	*Call
2098		5094<5133	X05 TO Q01	*Call
2098		5094<5134	Y01 TO Q01	*Call
2098		5094<5135	Y02 TO Q01	*Call
2098		5094<5136	Y03 TO Q01	*Call
2098		5094<5137	Y04 TO Q01	*Call
2098		5094<5138	Y05 TO Q01	*Call
2098		5094<5139	Z01 TO Q01	*Call
2098		5094<5140	Z02 TO Q01	*Call
2098		5094<5141	Z03 TO Q01	*Call
2098		5094<5142	Z04 TO Q01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5094<5143	Z05 TO Q01	*Call
2098		5095<5013	A00 TO Q02	*Call
2098		5095<5014	A01 TO Q02	*Call
2098		5095<5015	A02 TO Q02	*Call
2098		5095<5016	A03 TO Q02	*Call
2098		5095<5017	A04 TO Q02	*Call
2098		5095<5018	A05 TO Q02	*Call
2098		5095<5019	B01 TO Q02	*Call
2098		5095<5020	B02 TO Q02	*Call
2098		5095<5021	B03 TO Q02	*Call
2098		5095<5022	B04 TO Q02	*Call
2098		5095<5023	B05 TO Q02	*Call
2098		5095<5024	C01 TO Q02	*Call
2098		5095<5025	C02 TO Q02	*Call
2098		5095<5026	C03 TO Q02	*Call
2098		5095<5027	C04 TO Q02	*Call
2098		5095<5028	C05 TO Q02	*Call
2098		5095<5029	D01 TO Q02	*Call
2098		5095<5030	D02 TO Q02	*Call
2098		5095<5031	D03 TO Q02	*Call
2098		5095<5032	D04 TO Q02	*Call
2098		5095<5033	D05 TO Q02	*Call
2098		5095<5034	E01 TO Q02	*Call
2098		5095<5035	E02 TO Q02	*Call
2098		5095<5036	E03 TO Q02	*Call
2098		5095<5037	E04 TO Q02	*Call
2098		5095<5038	E05 TO Q02	*Call
2098		5095<5039	F01 TO Q02	*Call
2098		5095<5040	F02 TO Q02	*Call
2098		5095<5041	F03 TO Q02	*Call
2098		5095<5042	F04 TO Q02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5095<5043	F05 TO Q02	*Call
2098		5095<5044	G01 TO Q02	*Call
2098		5095<5045	G02 TO Q02	*Call
2098		5095<5046	G03 TO Q02	*Call
2098		5095<5047	G04 TO Q02	*Call
2098		5095<5048	G05 TO Q02	*Call
2098		5095<5049	H01 TO Q02	*Call
2098		5095<5050	H02 TO Q02	*Call
2098		5095<5051	H03 TO Q02	*Call
2098		5095<5052	H04 TO Q02	*Call
2098		5095<5053	H05 TO Q02	*Call
2098		5095<5054	I01 TO Q02	*Call
2098		5095<5055	I02 TO Q02	*Call
2098		5095<5056	I03 TO Q02	*Call
2098		5095<5057	I04 TO Q02	*Call
2098		5095<5058	I05 TO Q02	*Call
2098		5095<5059	J01 TO Q02	*Call
2098		5095<5060	J02 TO Q02	*Call
2098		5095<5061	J03 TO Q02	*Call
2098		5095<5062	J04 TO Q02	*Call
2098		5095<5063	J05 TO Q02	*Call
2098		5095<5064	K01 TO Q02	*Call
2098		5095<5065	K02 TO Q02	*Call
2098		5095<5066	K03 TO Q02	*Call
2098		5095<5067	K04 TO Q02	*Call
2098		5095<5068	K05 TO Q02	*Call
2098		5095<5069	L01 TO Q02	*Call
2098		5095<5070	L02 TO Q02	*Call
2098		5095<5071	L03 TO Q02	*Call
2098		5095<5072	L04 TO Q02	*Call
2098		5095<5073	L05 TO Q02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5095<5074	M01 TO Q02	*Call
2098		5095<5075	M02 TO Q02	*Call
2098		5095<5076	M03 TO Q02	*Call
2098		5095<5077	M04 TO Q02	*Call
2098		5095<5078	M05 TO Q02	*Call
2098		5095<5079	N01 TO Q02	*Call
2098		5095<5080	N02 TO Q02	*Call
2098		5095<5081	N03 TO Q02	*Call
2098		5095<5082	N04 TO Q02	*Call
2098		5095<5083	N05 TO Q02	*Call
2098		5095<5084	O01 TO Q02	*Call
2098		5095<5085	O02 TO Q02	*Call
2098		5095<5086	O03 TO Q02	*Call
2098		5095<5087	O04 TO Q02	*Call
2098		5095<5088	O05 TO Q02	*Call
2098		5095<5089	P01 TO Q02	*Call
2098		5095<5090	P02 TO Q02	*Call
2098		5095<5091	P03 TO Q02	*Call
2098		5095<5092	P04 TO Q02	*Call
2098		5095<5093	P05 TO Q02	*Call
2098		5095<5094	Q01 TO Q02	*Call
2098		5095<5096	Q03 TO Q02	*Call
2098		5095<5097	Q04 TO Q02	*Call
2098		5095<5098	Q05 TO Q02	*Call
2098		5095<5099	R01 TO Q02	*Call
2098		5095<5100	R02 TO Q02	*Call
2098		5095<5101	R03 TO Q02	*Call
2098		5095<5102	R04 TO Q02	*Call
2098		5095<5103	R05 TO Q02	*Call
2098		5095<5104	S01 TO Q02	*Call
2098		5095<5105	S02 TO Q02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5095<5106	S03 TO Q02	*Call
2098		5095<5107	S04 TO Q02	*Call
2098		5095<5108	S05 TO Q02	*Call
2098		5095<5109	T01 TO Q02	*Call
2098		5095<5110	T02 TO Q02	*Call
2098		5095<5111	T03 TO Q02	*Call
2098		5095<5112	T04 TO Q02	*Call
2098		5095<5113	T05 TO Q02	*Call
2098		5095<5114	U01 TO Q02	*Call
2098		5095<5115	U02 TO Q02	*Call
2098		5095<5116	U03 TO Q02	*Call
2098		5095<5117	U04 TO Q02	*Call
2098		5095<5118	U05 TO Q02	*Call
2098		5095<5119	V01 TO Q02	*Call
2098		5095<5120	V02 TO Q02	*Call
2098		5095<5121	V03 TO Q02	*Call
2098		5095<5122	V04 TO Q02	*Call
2098		5095<5123	V05 TO Q02	*Call
2098		5095<5124	W01 TO Q02	*Call
2098		5095<5125	W02 TO Q02	*Call
2098		5095<5126	W03 TO Q02	*Call
2098		5095<5127	W04 TO Q02	*Call
2098		5095<5128	W05 TO Q02	*Call
2098		5095<5129	X01 TO Q02	*Call
2098		5095<5130	X02 TO Q02	*Call
2098		5095<5131	X03 TO Q02	*Call
2098		5095<5132	X04 TO Q02	*Call
2098		5095<5133	X05 TO Q02	*Call
2098		5095<5134	Y01 TO Q02	*Call
2098		5095<5135	Y02 TO Q02	*Call
2098		5095<5136	Y03 TO Q02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5095<5137	Y04 TO Q02	*Call
2098		5095<5138	Y05 TO Q02	*Call
2098		5095<5139	Z01 TO Q02	*Call
2098		5095<5140	Z02 TO Q02	*Call
2098		5095<5141	Z03 TO Q02	*Call
2098		5095<5142	Z04 TO Q02	*Call
2098		5095<5143	Z05 TO Q02	*Call
2098		5096<5013	A00 TO Q03	*Call
2098		5096<5014	A01 TO Q03	*Call
2098		5096<5015	A02 TO Q03	*Call
2098		5096<5016	A03 TO Q03	*Call
2098		5096<5017	A04 TO Q03	*Call
2098		5096<5018	A05 TO Q03	*Call
2098		5096<5019	B01 TO Q03	*Call
2098		5096<5020	B02 TO Q03	*Call
2098		5096<5021	B03 TO Q03	*Call
2098		5096<5022	B04 TO Q03	*Call
2098		5096<5023	B05 TO Q03	*Call
2098		5096<5024	C01 TO Q03	*Call
2098		5096<5025	C02 TO Q03	*Call
2098		5096<5026	C03 TO Q03	*Call
2098		5096<5027	C04 TO Q03	*Call
2098		5096<5028	C05 TO Q03	*Call
2098		5096<5029	D01 TO Q03	*Call
2098		5096<5030	D02 TO Q03	*Call
2098		5096<5031	D03 TO Q03	*Call
2098		5096<5032	D04 TO Q03	*Call
2098		5096<5033	D05 TO Q03	*Call
2098		5096<5034	E01 TO Q03	*Call
2098		5096<5035	E02 TO Q03	*Call
2098		5096<5036	E03 TO Q03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5096<5037	E04 TO Q03	*Call
2098		5096<5038	E05 TO Q03	*Call
2098		5096<5039	F01 TO Q03	*Call
2098		5096<5040	F02 TO Q03	*Call
2098		5096<5041	F03 TO Q03	*Call
2098		5096<5042	F04 TO Q03	*Call
2098		5096<5043	F05 TO Q03	*Call
2098		5096<5044	G01 TO Q03	*Call
2098		5096<5045	G02 TO Q03	*Call
2098		5096<5046	G03 TO Q03	*Call
2098		5096<5047	G04 TO Q03	*Call
2098		5096<5048	G05 TO Q03	*Call
2098		5096<5049	H01 TO Q03	*Call
2098		5096<5050	H02 TO Q03	*Call
2098		5096<5051	H03 TO Q03	*Call
2098		5096<5052	H04 TO Q03	*Call
2098		5096<5053	H05 TO Q03	*Call
2098		5096<5054	I01 TO Q03	*Call
2098		5096<5055	I02 TO Q03	*Call
2098		5096<5056	I03 TO Q03	*Call
2098		5096<5057	I04 TO Q03	*Call
2098		5096<5058	I05 TO Q03	*Call
2098		5096<5059	J01 TO Q03	*Call
2098		5096<5060	J02 TO Q03	*Call
2098		5096<5061	J03 TO Q03	*Call
2098		5096<5062	J04 TO Q03	*Call
2098		5096<5063	J05 TO Q03	*Call
2098		5096<5064	K01 TO Q03	*Call
2098		5096<5065	K02 TO Q03	*Call
2098		5096<5066	K03 TO Q03	*Call
2098		5096<5067	K04 TO Q03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5096<5068	K05 TO Q03	*Call
2098		5096<5069	L01 TO Q03	*Call
2098		5096<5070	L02 TO Q03	*Call
2098		5096<5071	L03 TO Q03	*Call
2098		5096<5072	L04 TO Q03	*Call
2098		5096<5073	L05 TO Q03	*Call
2098		5096<5074	M01 TO Q03	*Call
2098		5096<5075	M02 TO Q03	*Call
2098		5096<5076	M03 TO Q03	*Call
2098		5096<5077	M04 TO Q03	*Call
2098		5096<5078	M05 TO Q03	*Call
2098		5096<5079	N01 TO Q03	*Call
2098		5096<5080	N02 TO Q03	*Call
2098		5096<5081	N03 TO Q03	*Call
2098		5096<5082	N04 TO Q03	*Call
2098		5096<5083	N05 TO Q03	*Call
2098		5096<5084	O01 TO Q03	*Call
2098		5096<5085	O02 TO Q03	*Call
2098		5096<5086	O03 TO Q03	*Call
2098		5096<5087	O04 TO Q03	*Call
2098		5096<5088	O05 TO Q03	*Call
2098		5096<5089	P01 TO Q03	*Call
2098		5096<5090	P02 TO Q03	*Call
2098		5096<5091	P03 TO Q03	*Call
2098		5096<5092	P04 TO Q03	*Call
2098		5096<5093	P05 TO Q03	*Call
2098		5096<5094	Q01 TO Q03	*Call
2098		5096<5095	Q02 TO Q03	*Call
2098		5096<5097	Q04 TO Q03	*Call
2098		5096<5098	Q05 TO Q03	*Call
2098		5096<5099	R01 TO Q03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5096<5100	R02 TO Q03	*Call
2098		5096<5101	R03 TO Q03	*Call
2098		5096<5102	R04 TO Q03	*Call
2098		5096<5103	R05 TO Q03	*Call
2098		5096<5104	S01 TO Q03	*Call
2098		5096<5105	S02 TO Q03	*Call
2098		5096<5106	S03 TO Q03	*Call
2098		5096<5107	S04 TO Q03	*Call
2098		5096<5108	S05 TO Q03	*Call
2098		5096<5109	T01 TO Q03	*Call
2098		5096<5110	T02 TO Q03	*Call
2098		5096<5111	T03 TO Q03	*Call
2098		5096<5112	T04 TO Q03	*Call
2098		5096<5113	T05 TO Q03	*Call
2098		5096<5114	U01 TO Q03	*Call
2098		5096<5115	U02 TO Q03	*Call
2098		5096<5116	U03 TO Q03	*Call
2098		5096<5117	U04 TO Q03	*Call
2098		5096<5118	U05 TO Q03	*Call
2098		5096<5119	V01 TO Q03	*Call
2098		5096<5120	V02 TO Q03	*Call
2098		5096<5121	V03 TO Q03	*Call
2098		5096<5122	V04 TO Q03	*Call
2098		5096<5123	V05 TO Q03	*Call
2098		5096<5124	W01 TO Q03	*Call
2098		5096<5125	W02 TO Q03	*Call
2098		5096<5126	W03 TO Q03	*Call
2098		5096<5127	W04 TO Q03	*Call
2098		5096<5128	W05 TO Q03	*Call
2098		5096<5129	X01 TO Q03	*Call
2098		5096<5130	X02 TO Q03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5096<5131	X03 TO Q03	*Call
2098		5096<5132	X04 TO Q03	*Call
2098		5096<5133	X05 TO Q03	*Call
2098		5096<5134	Y01 TO Q03	*Call
2098		5096<5135	Y02 TO Q03	*Call
2098		5096<5136	Y03 TO Q03	*Call
2098		5096<5137	Y04 TO Q03	*Call
2098		5096<5138	Y05 TO Q03	*Call
2098		5096<5139	Z01 TO Q03	*Call
2098		5096<5140	Z02 TO Q03	*Call
2098		5096<5141	Z03 TO Q03	*Call
2098		5096<5142	Z04 TO Q03	*Call
2098		5096<5143	Z05 TO Q03	*Call
2098		5097<5013	A00 TO Q04	*Call
2098		5097<5014	A01 TO Q04	*Call
2098		5097<5015	A02 TO Q04	*Call
2098		5097<5016	A03 TO Q04	*Call
2098		5097<5017	A04 TO Q04	*Call
2098		5097<5018	A05 TO Q04	*Call
2098		5097<5019	B01 TO Q04	*Call
2098		5097<5020	B02 TO Q04	*Call
2098		5097<5021	B03 TO Q04	*Call
2098		5097<5022	B04 TO Q04	*Call
2098		5097<5023	B05 TO Q04	*Call
2098		5097<5024	C01 TO Q04	*Call
2098		5097<5025	C02 TO Q04	*Call
2098		5097<5026	C03 TO Q04	*Call
2098		5097<5027	C04 TO Q04	*Call
2098		5097<5028	C05 TO Q04	*Call
2098		5097<5029	D01 TO Q04	*Call
2098		5097<5030	D02 TO Q04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5097<5031	D03 TO Q04	*Call
2098		5097<5032	D04 TO Q04	*Call
2098		5097<5033	D05 TO Q04	*Call
2098		5097<5034	E01 TO Q04	*Call
2098		5097<5035	E02 TO Q04	*Call
2098		5097<5036	E03 TO Q04	*Call
2098		5097<5037	E04 TO Q04	*Call
2098		5097<5038	E05 TO Q04	*Call
2098		5097<5039	F01 TO Q04	*Call
2098		5097<5040	F02 TO Q04	*Call
2098		5097<5041	F03 TO Q04	*Call
2098		5097<5042	F04 TO Q04	*Call
2098		5097<5043	F05 TO Q04	*Call
2098		5097<5044	G01 TO Q04	*Call
2098		5097<5045	G02 TO Q04	*Call
2098		5097<5046	G03 TO Q04	*Call
2098		5097<5047	G04 TO Q04	*Call
2098		5097<5048	G05 TO Q04	*Call
2098		5097<5049	H01 TO Q04	*Call
2098		5097<5050	H02 TO Q04	*Call
2098		5097<5051	H03 TO Q04	*Call
2098		5097<5052	H04 TO Q04	*Call
2098		5097<5053	H05 TO Q04	*Call
2098		5097<5054	I01 TO Q04	*Call
2098		5097<5055	I02 TO Q04	*Call
2098		5097<5056	I03 TO Q04	*Call
2098		5097<5057	I04 TO Q04	*Call
2098		5097<5058	I05 TO Q04	*Call
2098		5097<5059	J01 TO Q04	*Call
2098		5097<5060	J02 TO Q04	*Call
2098		5097<5061	J03 TO Q04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5097<5062	J04 TO Q04	*Call
2098		5097<5063	J05 TO Q04	*Call
2098		5097<5064	K01 TO Q04	*Call
2098		5097<5065	K02 TO Q04	*Call
2098		5097<5066	K03 TO Q04	*Call
2098		5097<5067	K04 TO Q04	*Call
2098		5097<5068	K05 TO Q04	*Call
2098		5097<5069	L01 TO Q04	*Call
2098		5097<5070	L02 TO Q04	*Call
2098		5097<5071	L03 TO Q04	*Call
2098		5097<5072	L04 TO Q04	*Call
2098		5097<5073	L05 TO Q04	*Call
2098		5097<5074	M01 TO Q04	*Call
2098		5097<5075	M02 TO Q04	*Call
2098		5097<5076	M03 TO Q04	*Call
2098		5097<5077	M04 TO Q04	*Call
2098		5097<5078	M05 TO Q04	*Call
2098		5097<5079	N01 TO Q04	*Call
2098		5097<5080	N02 TO Q04	*Call
2098		5097<5081	N03 TO Q04	*Call
2098		5097<5082	N04 TO Q04	*Call
2098		5097<5083	N05 TO Q04	*Call
2098		5097<5084	O01 TO Q04	*Call
2098		5097<5085	O02 TO Q04	*Call
2098		5097<5086	O03 TO Q04	*Call
2098		5097<5087	O04 TO Q04	*Call
2098		5097<5088	O05 TO Q04	*Call
2098		5097<5089	P01 TO Q04	*Call
2098		5097<5090	P02 TO Q04	*Call
2098		5097<5091	P03 TO Q04	*Call
2098		5097<5092	P04 TO Q04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5097<5093	P05 TO Q04	*Call
2098		5097<5094	Q01 TO Q04	*Call
2098		5097<5095	Q02 TO Q04	*Call
2098		5097<5096	Q03 TO Q04	*Call
2098		5097<5098	Q05 TO Q04	*Call
2098		5097<5099	R01 TO Q04	*Call
2098		5097<5100	R02 TO Q04	*Call
2098		5097<5101	R03 TO Q04	*Call
2098		5097<5102	R04 TO Q04	*Call
2098		5097<5103	R05 TO Q04	*Call
2098		5097<5104	S01 TO Q04	*Call
2098		5097<5105	S02 TO Q04	*Call
2098		5097<5106	S03 TO Q04	*Call
2098		5097<5107	S04 TO Q04	*Call
2098		5097<5108	S05 TO Q04	*Call
2098		5097<5109	T01 TO Q04	*Call
2098		5097<5110	T02 TO Q04	*Call
2098		5097<5111	T03 TO Q04	*Call
2098		5097<5112	T04 TO Q04	*Call
2098		5097<5113	T05 TO Q04	*Call
2098		5097<5114	U01 TO Q04	*Call
2098		5097<5115	U02 TO Q04	*Call
2098		5097<5116	U03 TO Q04	*Call
2098		5097<5117	U04 TO Q04	*Call
2098		5097<5118	U05 TO Q04	*Call
2098		5097<5119	V01 TO Q04	*Call
2098		5097<5120	V02 TO Q04	*Call
2098		5097<5121	V03 TO Q04	*Call
2098		5097<5122	V04 TO Q04	*Call
2098		5097<5123	V05 TO Q04	*Call
2098		5097<5124	W01 TO Q04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5097<5125	W02 TO Q04	*Call
2098		5097<5126	W03 TO Q04	*Call
2098		5097<5127	W04 TO Q04	*Call
2098		5097<5128	W05 TO Q04	*Call
2098		5097<5129	X01 TO Q04	*Call
2098		5097<5130	X02 TO Q04	*Call
2098		5097<5131	X03 TO Q04	*Call
2098		5097<5132	X04 TO Q04	*Call
2098		5097<5133	X05 TO Q04	*Call
2098		5097<5134	Y01 TO Q04	*Call
2098		5097<5135	Y02 TO Q04	*Call
2098		5097<5136	Y03 TO Q04	*Call
2098		5097<5137	Y04 TO Q04	*Call
2098		5097<5138	Y05 TO Q04	*Call
2098		5097<5139	Z01 TO Q04	*Call
2098		5097<5140	Z02 TO Q04	*Call
2098		5097<5141	Z03 TO Q04	*Call
2098		5097<5142	Z04 TO Q04	*Call
2098		5097<5143	Z05 TO Q04	*Call
2098		5098<5013	A00 TO Q05	*Call
2098		5098<5014	A01 TO Q05	*Call
2098		5098<5015	A02 TO Q05	*Call
2098		5098<5016	A03 TO Q05	*Call
2098		5098<5017	A04 TO Q05	*Call
2098		5098<5018	A05 TO Q05	*Call
2098		5098<5019	B01 TO Q05	*Call
2098		5098<5020	B02 TO Q05	*Call
2098		5098<5021	B03 TO Q05	*Call
2098		5098<5022	B04 TO Q05	*Call
2098		5098<5023	B05 TO Q05	*Call
2098		5098<5024	C01 TO Q05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5098<5025	C02 TO Q05	*Call
2098		5098<5026	C03 TO Q05	*Call
2098		5098<5027	C04 TO Q05	*Call
2098		5098<5028	C05 TO Q05	*Call
2098		5098<5029	D01 TO Q05	*Call
2098		5098<5030	D02 TO Q05	*Call
2098		5098<5031	D03 TO Q05	*Call
2098		5098<5032	D04 TO Q05	*Call
2098		5098<5033	D05 TO Q05	*Call
2098		5098<5034	E01 TO Q05	*Call
2098		5098<5035	E02 TO Q05	*Call
2098		5098<5036	E03 TO Q05	*Call
2098		5098<5037	E04 TO Q05	*Call
2098		5098<5038	E05 TO Q05	*Call
2098		5098<5039	F01 TO Q05	*Call
2098		5098<5040	F02 TO Q05	*Call
2098		5098<5041	F03 TO Q05	*Call
2098		5098<5042	F04 TO Q05	*Call
2098		5098<5043	F05 TO Q05	*Call
2098		5098<5044	G01 TO Q05	*Call
2098		5098<5045	G02 TO Q05	*Call
2098		5098<5046	G03 TO Q05	*Call
2098		5098<5047	G04 TO Q05	*Call
2098		5098<5048	G05 TO Q05	*Call
2098		5098<5049	H01 TO Q05	*Call
2098		5098<5050	H02 TO Q05	*Call
2098		5098<5051	H03 TO Q05	*Call
2098		5098<5052	H04 TO Q05	*Call
2098		5098<5053	H05 TO Q05	*Call
2098		5098<5054	I01 TO Q05	*Call
2098		5098<5055	I02 TO Q05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5098<5056	I03 TO Q05	*Call
2098		5098<5057	I04 TO Q05	*Call
2098		5098<5058	I05 TO Q05	*Call
2098		5098<5059	J01 TO Q05	*Call
2098		5098<5060	J02 TO Q05	*Call
2098		5098<5061	J03 TO Q05	*Call
2098		5098<5062	J04 TO Q05	*Call
2098		5098<5063	J05 TO Q05	*Call
2098		5098<5064	K01 TO Q05	*Call
2098		5098<5065	K02 TO Q05	*Call
2098		5098<5066	K03 TO Q05	*Call
2098		5098<5067	K04 TO Q05	*Call
2098		5098<5068	K05 TO Q05	*Call
2098		5098<5069	L01 TO Q05	*Call
2098		5098<5070	L02 TO Q05	*Call
2098		5098<5071	L03 TO Q05	*Call
2098		5098<5072	L04 TO Q05	*Call
2098		5098<5073	L05 TO Q05	*Call
2098		5098<5074	M01 TO Q05	*Call
2098		5098<5075	M02 TO Q05	*Call
2098		5098<5076	M03 TO Q05	*Call
2098		5098<5077	M04 TO Q05	*Call
2098		5098<5078	M05 TO Q05	*Call
2098		5098<5079	N01 TO Q05	*Call
2098		5098<5080	N02 TO Q05	*Call
2098		5098<5081	N03 TO Q05	*Call
2098		5098<5082	N04 TO Q05	*Call
2098		5098<5083	N05 TO Q05	*Call
2098		5098<5084	O01 TO Q05	*Call
2098		5098<5085	O02 TO Q05	*Call
2098		5098<5086	O03 TO Q05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5098<5087	O04 TO Q05	*Call
2098		5098<5088	O05 TO Q05	*Call
2098		5098<5089	P01 TO Q05	*Call
2098		5098<5090	P02 TO Q05	*Call
2098		5098<5091	P03 TO Q05	*Call
2098		5098<5092	P04 TO Q05	*Call
2098		5098<5093	P05 TO Q05	*Call
2098		5098<5094	Q01 TO Q05	*Call
2098		5098<5095	Q02 TO Q05	*Call
2098		5098<5096	Q03 TO Q05	*Call
2098		5098<5097	Q04 TO Q05	*Call
2098		5098<5099	R01 TO Q05	*Call
2098		5098<5100	R02 TO Q05	*Call
2098		5098<5101	R03 TO Q05	*Call
2098		5098<5102	R04 TO Q05	*Call
2098		5098<5103	R05 TO Q05	*Call
2098		5098<5104	S01 TO Q05	*Call
2098		5098<5105	S02 TO Q05	*Call
2098		5098<5106	S03 TO Q05	*Call
2098		5098<5107	S04 TO Q05	*Call
2098		5098<5108	S05 TO Q05	*Call
2098		5098<5109	T01 TO Q05	*Call
2098		5098<5110	T02 TO Q05	*Call
2098		5098<5111	T03 TO Q05	*Call
2098		5098<5112	T04 TO Q05	*Call
2098		5098<5113	T05 TO Q05	*Call
2098		5098<5114	U01 TO Q05	*Call
2098		5098<5115	U02 TO Q05	*Call
2098		5098<5116	U03 TO Q05	*Call
2098		5098<5117	U04 TO Q05	*Call
2098		5098<5118	U05 TO Q05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5098<5119	V01 TO Q05	*Call
2098		5098<5120	V02 TO Q05	*Call
2098		5098<5121	V03 TO Q05	*Call
2098		5098<5122	V04 TO Q05	*Call
2098		5098<5123	V05 TO Q05	*Call
2098		5098<5124	W01 TO Q05	*Call
2098		5098<5125	W02 TO Q05	*Call
2098		5098<5126	W03 TO Q05	*Call
2098		5098<5127	W04 TO Q05	*Call
2098		5098<5128	W05 TO Q05	*Call
2098		5098<5129	X01 TO Q05	*Call
2098		5098<5130	X02 TO Q05	*Call
2098		5098<5131	X03 TO Q05	*Call
2098		5098<5132	X04 TO Q05	*Call
2098		5098<5133	X05 TO Q05	*Call
2098		5098<5134	Y01 TO Q05	*Call
2098		5098<5135	Y02 TO Q05	*Call
2098		5098<5136	Y03 TO Q05	*Call
2098		5098<5137	Y04 TO Q05	*Call
2098		5098<5138	Y05 TO Q05	*Call
2098		5098<5139	Z01 TO Q05	*Call
2098		5098<5140	Z02 TO Q05	*Call
2098		5098<5141	Z03 TO Q05	*Call
2098		5098<5142	Z04 TO Q05	*Call
2098		5098<5143	Z05 TO Q05	*Call
2098		5099<5013	A00 TO R01	*Call
2098		5099<5014	A01 TO R01	*Call
2098		5099<5015	A02 TO R01	*Call
2098		5099<5016	A03 TO R01	*Call
2098		5099<5017	A04 TO R01	*Call
2098		5099<5018	A05 TO R01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5099<5019	B01 TO R01	*Call
2098		5099<5020	B02 TO R01	*Call
2098		5099<5021	B03 TO R01	*Call
2098		5099<5022	B04 TO R01	*Call
2098		5099<5023	B05 TO R01	*Call
2098		5099<5024	C01 TO R01	*Call
2098		5099<5025	C02 TO R01	*Call
2098		5099<5026	C03 TO R01	*Call
2098		5099<5027	C04 TO R01	*Call
2098		5099<5028	C05 TO R01	*Call
2098		5099<5029	D01 TO R01	*Call
2098		5099<5030	D02 TO R01	*Call
2098		5099<5031	D03 TO R01	*Call
2098		5099<5032	D04 TO R01	*Call
2098		5099<5033	D05 TO R01	*Call
2098		5099<5034	E01 TO R01	*Call
2098		5099<5035	E02 TO R01	*Call
2098		5099<5036	E03 TO R01	*Call
2098		5099<5037	E04 TO R01	*Call
2098		5099<5038	E05 TO R01	*Call
2098		5099<5039	F01 TO R01	*Call
2098		5099<5040	F02 TO R01	*Call
2098		5099<5041	F03 TO R01	*Call
2098		5099<5042	F04 TO R01	*Call
2098		5099<5043	F05 TO R01	*Call
2098		5099<5044	G01 TO R01	*Call
2098		5099<5045	G02 TO R01	*Call
2098		5099<5046	G03 TO R01	*Call
2098		5099<5047	G04 TO R01	*Call
2098		5099<5048	G05 TO R01	*Call
2098		5099<5049	H01 TO R01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5099<5050	H02 TO R01	*Call
2098		5099<5051	H03 TO R01	*Call
2098		5099<5052	H04 TO R01	*Call
2098		5099<5053	H05 TO R01	*Call
2098		5099<5054	I01 TO R01	*Call
2098		5099<5055	I02 TO R01	*Call
2098		5099<5056	I03 TO R01	*Call
2098		5099<5057	I04 TO R01	*Call
2098		5099<5058	I05 TO R01	*Call
2098		5099<5059	J01 TO R01	*Call
2098		5099<5060	J02 TO R01	*Call
2098		5099<5061	J03 TO R01	*Call
2098		5099<5062	J04 TO R01	*Call
2098		5099<5063	J05 TO R01	*Call
2098		5099<5064	K01 TO R01	*Call
2098		5099<5065	K02 TO R01	*Call
2098		5099<5066	K03 TO R01	*Call
2098		5099<5067	K04 TO R01	*Call
2098		5099<5068	K05 TO R01	*Call
2098		5099<5069	L01 TO R01	*Call
2098		5099<5070	L02 TO R01	*Call
2098		5099<5071	L03 TO R01	*Call
2098		5099<5072	L04 TO R01	*Call
2098		5099<5073	L05 TO R01	*Call
2098		5099<5074	M01 TO R01	*Call
2098		5099<5075	M02 TO R01	*Call
2098		5099<5076	M03 TO R01	*Call
2098		5099<5077	M04 TO R01	*Call
2098		5099<5078	M05 TO R01	*Call
2098		5099<5079	N01 TO R01	*Call
2098		5099<5080	N02 TO R01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5099<5081	N03 TO R01	*Call
2098		5099<5082	N04 TO R01	*Call
2098		5099<5083	N05 TO R01	*Call
2098		5099<5084	O01 TO R01	*Call
2098		5099<5085	O02 TO R01	*Call
2098		5099<5086	O03 TO R01	*Call
2098		5099<5087	O04 TO R01	*Call
2098		5099<5088	O05 TO R01	*Call
2098		5099<5089	P01 TO R01	*Call
2098		5099<5090	P02 TO R01	*Call
2098		5099<5091	P03 TO R01	*Call
2098		5099<5092	P04 TO R01	*Call
2098		5099<5093	P05 TO R01	*Call
2098		5099<5094	Q01 TO R01	*Call
2098		5099<5095	Q02 TO R01	*Call
2098		5099<5096	Q03 TO R01	*Call
2098		5099<5097	Q04 TO R01	*Call
2098		5099<5098	Q05 TO R01	*Call
2098		5099<5100	R02 TO R01	*Call
2098		5099<5101	R03 TO R01	*Call
2098		5099<5102	R04 TO R01	*Call
2098		5099<5103	R05 TO R01	*Call
2098		5099<5104	S01 TO R01	*Call
2098		5099<5105	S02 TO R01	*Call
2098		5099<5106	S03 TO R01	*Call
2098		5099<5107	S04 TO R01	*Call
2098		5099<5108	S05 TO R01	*Call
2098		5099<5109	T01 TO R01	*Call
2098		5099<5110	T02 TO R01	*Call
2098		5099<5111	T03 TO R01	*Call
2098		5099<5112	T04 TO R01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5099<5113	T05 TO R01	*Call
2098		5099<5114	U01 TO R01	*Call
2098		5099<5115	U02 TO R01	*Call
2098		5099<5116	U03 TO R01	*Call
2098		5099<5117	U04 TO R01	*Call
2098		5099<5118	U05 TO R01	*Call
2098		5099<5119	V01 TO R01	*Call
2098		5099<5120	V02 TO R01	*Call
2098		5099<5121	V03 TO R01	*Call
2098		5099<5122	V04 TO R01	*Call
2098		5099<5123	V05 TO R01	*Call
2098		5099<5124	W01 TO R01	*Call
2098		5099<5125	W02 TO R01	*Call
2098		5099<5126	W03 TO R01	*Call
2098		5099<5127	W04 TO R01	*Call
2098		5099<5128	W05 TO R01	*Call
2098		5099<5129	X01 TO R01	*Call
2098		5099<5130	X02 TO R01	*Call
2098		5099<5131	X03 TO R01	*Call
2098		5099<5132	X04 TO R01	*Call
2098		5099<5133	X05 TO R01	*Call
2098		5099<5134	Y01 TO R01	*Call
2098		5099<5135	Y02 TO R01	*Call
2098		5099<5136	Y03 TO R01	*Call
2098		5099<5137	Y04 TO R01	*Call
2098		5099<5138	Y05 TO R01	*Call
2098		5099<5139	Z01 TO R01	*Call
2098		5099<5140	Z02 TO R01	*Call
2098		5099<5141	Z03 TO R01	*Call
2098		5099<5142	Z04 TO R01	*Call
2098		5099<5143	Z05 TO R01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5100<5013	A00 TO R02	*Call
2098		5100<5014	A01 TO R02	*Call
2098		5100<5015	A02 TO R02	*Call
2098		5100<5016	A03 TO R02	*Call
2098		5100<5017	A04 TO R02	*Call
2098		5100<5018	A05 TO R02	*Call
2098		5100<5019	B01 TO R02	*Call
2098		5100<5020	B02 TO R02	*Call
2098		5100<5021	B03 TO R02	*Call
2098		5100<5022	B04 TO R02	*Call
2098		5100<5023	B05 TO R02	*Call
2098		5100<5024	C01 TO R02	*Call
2098		5100<5025	C02 TO R02	*Call
2098		5100<5026	C03 TO R02	*Call
2098		5100<5027	C04 TO R02	*Call
2098		5100<5028	C05 TO R02	*Call
2098		5100<5029	D01 TO R02	*Call
2098		5100<5030	D02 TO R02	*Call
2098		5100<5031	D03 TO R02	*Call
2098		5100<5032	D04 TO R02	*Call
2098		5100<5033	D05 TO R02	*Call
2098		5100<5034	E01 TO R02	*Call
2098		5100<5035	E02 TO R02	*Call
2098		5100<5036	E03 TO R02	*Call
2098		5100<5037	E04 TO R02	*Call
2098		5100<5038	E05 TO R02	*Call
2098		5100<5039	F01 TO R02	*Call
2098		5100<5040	F02 TO R02	*Call
2098		5100<5041	F03 TO R02	*Call
2098		5100<5042	F04 TO R02	*Call
2098		5100<5043	F05 TO R02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5100<5044	G01 TO R02	*Call
2098		5100<5045	G02 TO R02	*Call
2098		5100<5046	G03 TO R02	*Call
2098		5100<5047	G04 TO R02	*Call
2098		5100<5048	G05 TO R02	*Call
2098		5100<5049	H01 TO R02	*Call
2098		5100<5050	H02 TO R02	*Call
2098		5100<5051	H03 TO R02	*Call
2098		5100<5052	H04 TO R02	*Call
2098		5100<5053	H05 TO R02	*Call
2098		5100<5054	I01 TO R02	*Call
2098		5100<5055	I02 TO R02	*Call
2098		5100<5056	I03 TO R02	*Call
2098		5100<5057	I04 TO R02	*Call
2098		5100<5058	I05 TO R02	*Call
2098		5100<5059	J01 TO R02	*Call
2098		5100<5060	J02 TO R02	*Call
2098		5100<5061	J03 TO R02	*Call
2098		5100<5062	J04 TO R02	*Call
2098		5100<5063	J05 TO R02	*Call
2098		5100<5064	K01 TO R02	*Call
2098		5100<5065	K02 TO R02	*Call
2098		5100<5066	K03 TO R02	*Call
2098		5100<5067	K04 TO R02	*Call
2098		5100<5068	K05 TO R02	*Call
2098		5100<5069	L01 TO R02	*Call
2098		5100<5070	L02 TO R02	*Call
2098		5100<5071	L03 TO R02	*Call
2098		5100<5072	L04 TO R02	*Call
2098		5100<5073	L05 TO R02	*Call
2098		5100<5074	M01 TO R02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5100<5075	M02 TO R02	*Call
2098		5100<5076	M03 TO R02	*Call
2098		5100<5077	M04 TO R02	*Call
2098		5100<5078	M05 TO R02	*Call
2098		5100<5079	N01 TO R02	*Call
2098		5100<5080	N02 TO R02	*Call
2098		5100<5081	N03 TO R02	*Call
2098		5100<5082	N04 TO R02	*Call
2098		5100<5083	N05 TO R02	*Call
2098		5100<5084	O01 TO R02	*Call
2098		5100<5085	O02 TO R02	*Call
2098		5100<5086	O03 TO R02	*Call
2098		5100<5087	O04 TO R02	*Call
2098		5100<5088	O05 TO R02	*Call
2098		5100<5089	P01 TO R02	*Call
2098		5100<5090	P02 TO R02	*Call
2098		5100<5091	P03 TO R02	*Call
2098		5100<5092	P04 TO R02	*Call
2098		5100<5093	P05 TO R02	*Call
2098		5100<5094	Q01 TO R02	*Call
2098		5100<5095	Q02 TO R02	*Call
2098		5100<5096	Q03 TO R02	*Call
2098		5100<5097	Q04 TO R02	*Call
2098		5100<5098	Q05 TO R02	*Call
2098		5100<5099	R01 TO R02	*Call
2098		5100<5101	R03 TO R02	*Call
2098		5100<5102	R04 TO R02	*Call
2098		5100<5103	R05 TO R02	*Call
2098		5100<5104	S01 TO R02	*Call
2098		5100<5105	S02 TO R02	*Call
2098		5100<5106	S03 TO R02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5100<5107	S04 TO R02	*Call
2098		5100<5108	S05 TO R02	*Call
2098		5100<5109	T01 TO R02	*Call
2098		5100<5110	T02 TO R02	*Call
2098		5100<5111	T03 TO R02	*Call
2098		5100<5112	T04 TO R02	*Call
2098		5100<5113	T05 TO R02	*Call
2098		5100<5114	U01 TO R02	*Call
2098		5100<5115	U02 TO R02	*Call
2098		5100<5116	U03 TO R02	*Call
2098		5100<5117	U04 TO R02	*Call
2098		5100<5118	U05 TO R02	*Call
2098		5100<5119	V01 TO R02	*Call
2098		5100<5120	V02 TO R02	*Call
2098		5100<5121	V03 TO R02	*Call
2098		5100<5122	V04 TO R02	*Call
2098		5100<5123	V05 TO R02	*Call
2098		5100<5124	W01 TO R02	*Call
2098		5100<5125	W02 TO R02	*Call
2098		5100<5126	W03 TO R02	*Call
2098		5100<5127	W04 TO R02	*Call
2098		5100<5128	W05 TO R02	*Call
2098		5100<5129	X01 TO R02	*Call
2098		5100<5130	X02 TO R02	*Call
2098		5100<5131	X03 TO R02	*Call
2098		5100<5132	X04 TO R02	*Call
2098		5100<5133	X05 TO R02	*Call
2098		5100<5134	Y01 TO R02	*Call
2098		5100<5135	Y02 TO R02	*Call
2098		5100<5136	Y03 TO R02	*Call
2098		5100<5137	Y04 TO R02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5100<5138	Y05 TO R02	*Call
2098		5100<5139	Z01 TO R02	*Call
2098		5100<5140	Z02 TO R02	*Call
2098		5100<5141	Z03 TO R02	*Call
2098		5100<5142	Z04 TO R02	*Call
2098		5100<5143	Z05 TO R02	*Call
2098		5101<5013	A00 TO R03	*Call
2098		5101<5014	A01 TO R03	*Call
2098		5101<5015	A02 TO R03	*Call
2098		5101<5016	A03 TO R03	*Call
2098		5101<5017	A04 TO R03	*Call
2098		5101<5018	A05 TO R03	*Call
2098		5101<5019	B01 TO R03	*Call
2098		5101<5020	B02 TO R03	*Call
2098		5101<5021	B03 TO R03	*Call
2098		5101<5022	B04 TO R03	*Call
2098		5101<5023	B05 TO R03	*Call
2098		5101<5024	C01 TO R03	*Call
2098		5101<5025	C02 TO R03	*Call
2098		5101<5026	C03 TO R03	*Call
2098		5101<5027	C04 TO R03	*Call
2098		5101<5028	C05 TO R03	*Call
2098		5101<5029	D01 TO R03	*Call
2098		5101<5030	D02 TO R03	*Call
2098		5101<5031	D03 TO R03	*Call
2098		5101<5032	D04 TO R03	*Call
2098		5101<5033	D05 TO R03	*Call
2098		5101<5034	E01 TO R03	*Call
2098		5101<5035	E02 TO R03	*Call
2098		5101<5036	E03 TO R03	*Call
2098		5101<5037	E04 TO R03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5101<5038	E05 TO R03	*Call
2098		5101<5039	F01 TO R03	*Call
2098		5101<5040	F02 TO R03	*Call
2098		5101<5041	F03 TO R03	*Call
2098		5101<5042	F04 TO R03	*Call
2098		5101<5043	F05 TO R03	*Call
2098		5101<5044	G01 TO R03	*Call
2098		5101<5045	G02 TO R03	*Call
2098		5101<5046	G03 TO R03	*Call
2098		5101<5047	G04 TO R03	*Call
2098		5101<5048	G05 TO R03	*Call
2098		5101<5049	H01 TO R03	*Call
2098		5101<5050	H02 TO R03	*Call
2098		5101<5051	H03 TO R03	*Call
2098		5101<5052	H04 TO R03	*Call
2098		5101<5053	H05 TO R03	*Call
2098		5101<5054	I01 TO R03	*Call
2098		5101<5055	I02 TO R03	*Call
2098		5101<5056	I03 TO R03	*Call
2098		5101<5057	I04 TO R03	*Call
2098		5101<5058	I05 TO R03	*Call
2098		5101<5059	J01 TO R03	*Call
2098		5101<5060	J02 TO R03	*Call
2098		5101<5061	J03 TO R03	*Call
2098		5101<5062	J04 TO R03	*Call
2098		5101<5063	J05 TO R03	*Call
2098		5101<5064	K01 TO R03	*Call
2098		5101<5065	K02 TO R03	*Call
2098		5101<5066	K03 TO R03	*Call
2098		5101<5067	K04 TO R03	*Call
2098		5101<5068	K05 TO R03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5101<5069	L01 TO R03	*Call
2098		5101<5070	L02 TO R03	*Call
2098		5101<5071	L03 TO R03	*Call
2098		5101<5072	L04 TO R03	*Call
2098		5101<5073	L05 TO R03	*Call
2098		5101<5074	M01 TO R03	*Call
2098		5101<5075	M02 TO R03	*Call
2098		5101<5076	M03 TO R03	*Call
2098		5101<5077	M04 TO R03	*Call
2098		5101<5078	M05 TO R03	*Call
2098		5101<5079	N01 TO R03	*Call
2098		5101<5080	N02 TO R03	*Call
2098		5101<5081	N03 TO R03	*Call
2098		5101<5082	N04 TO R03	*Call
2098		5101<5083	N05 TO R03	*Call
2098		5101<5084	O01 TO R03	*Call
2098		5101<5085	O02 TO R03	*Call
2098		5101<5086	O03 TO R03	*Call
2098		5101<5087	O04 TO R03	*Call
2098		5101<5088	O05 TO R03	*Call
2098		5101<5089	P01 TO R03	*Call
2098		5101<5090	P02 TO R03	*Call
2098		5101<5091	P03 TO R03	*Call
2098		5101<5092	P04 TO R03	*Call
2098		5101<5093	P05 TO R03	*Call
2098		5101<5094	Q01 TO R03	*Call
2098		5101<5095	Q02 TO R03	*Call
2098		5101<5096	Q03 TO R03	*Call
2098		5101<5097	Q04 TO R03	*Call
2098		5101<5098	Q05 TO R03	*Call
2098		5101<5099	R01 TO R03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5101<5100	R02 TO R03	*Call
2098		5101<5102	R04 TO R03	*Call
2098		5101<5103	R05 TO R03	*Call
2098		5101<5104	S01 TO R03	*Call
2098		5101<5105	S02 TO R03	*Call
2098		5101<5106	S03 TO R03	*Call
2098		5101<5107	S04 TO R03	*Call
2098		5101<5108	S05 TO R03	*Call
2098		5101<5109	T01 TO R03	*Call
2098		5101<5110	T02 TO R03	*Call
2098		5101<5111	T03 TO R03	*Call
2098		5101<5112	T04 TO R03	*Call
2098		5101<5113	T05 TO R03	*Call
2098		5101<5114	U01 TO R03	*Call
2098		5101<5115	U02 TO R03	*Call
2098		5101<5116	U03 TO R03	*Call
2098		5101<5117	U04 TO R03	*Call
2098		5101<5118	U05 TO R03	*Call
2098		5101<5119	V01 TO R03	*Call
2098		5101<5120	V02 TO R03	*Call
2098		5101<5121	V03 TO R03	*Call
2098		5101<5122	V04 TO R03	*Call
2098		5101<5123	V05 TO R03	*Call
2098		5101<5124	W01 TO R03	*Call
2098		5101<5125	W02 TO R03	*Call
2098		5101<5126	W03 TO R03	*Call
2098		5101<5127	W04 TO R03	*Call
2098		5101<5128	W05 TO R03	*Call
2098		5101<5129	X01 TO R03	*Call
2098		5101<5130	X02 TO R03	*Call
2098		5101<5131	X03 TO R03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5101<5132	X04 TO R03	*Call
2098		5101<5133	X05 TO R03	*Call
2098		5101<5134	Y01 TO R03	*Call
2098		5101<5135	Y02 TO R03	*Call
2098		5101<5136	Y03 TO R03	*Call
2098		5101<5137	Y04 TO R03	*Call
2098		5101<5138	Y05 TO R03	*Call
2098		5101<5139	Z01 TO R03	*Call
2098		5101<5140	Z02 TO R03	*Call
2098		5101<5141	Z03 TO R03	*Call
2098		5101<5142	Z04 TO R03	*Call
2098		5101<5143	Z05 TO R03	*Call
2098		5102<5013	A00 TO R04	*Call
2098		5102<5014	A01 TO R04	*Call
2098		5102<5015	A02 TO R04	*Call
2098		5102<5016	A03 TO R04	*Call
2098		5102<5017	A04 TO R04	*Call
2098		5102<5018	A05 TO R04	*Call
2098		5102<5019	B01 TO R04	*Call
2098		5102<5020	B02 TO R04	*Call
2098		5102<5021	B03 TO R04	*Call
2098		5102<5022	B04 TO R04	*Call
2098		5102<5023	B05 TO R04	*Call
2098		5102<5024	C01 TO R04	*Call
2098		5102<5025	C02 TO R04	*Call
2098		5102<5026	C03 TO R04	*Call
2098		5102<5027	C04 TO R04	*Call
2098		5102<5028	C05 TO R04	*Call
2098		5102<5029	D01 TO R04	*Call
2098		5102<5030	D02 TO R04	*Call
2098		5102<5031	D03 TO R04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5102<5032	D04 TO R04	*Call
2098		5102<5033	D05 TO R04	*Call
2098		5102<5034	E01 TO R04	*Call
2098		5102<5035	E02 TO R04	*Call
2098		5102<5036	E03 TO R04	*Call
2098		5102<5037	E04 TO R04	*Call
2098		5102<5038	E05 TO R04	*Call
2098		5102<5039	F01 TO R04	*Call
2098		5102<5040	F02 TO R04	*Call
2098		5102<5041	F03 TO R04	*Call
2098		5102<5042	F04 TO R04	*Call
2098		5102<5043	F05 TO R04	*Call
2098		5102<5044	G01 TO R04	*Call
2098		5102<5045	G02 TO R04	*Call
2098		5102<5046	G03 TO R04	*Call
2098		5102<5047	G04 TO R04	*Call
2098		5102<5048	G05 TO R04	*Call
2098		5102<5049	H01 TO R04	*Call
2098		5102<5050	H02 TO R04	*Call
2098		5102<5051	H03 TO R04	*Call
2098		5102<5052	H04 TO R04	*Call
2098		5102<5053	H05 TO R04	*Call
2098		5102<5054	I01 TO R04	*Call
2098		5102<5055	I02 TO R04	*Call
2098		5102<5056	I03 TO R04	*Call
2098		5102<5057	I04 TO R04	*Call
2098		5102<5058	I05 TO R04	*Call
2098		5102<5059	J01 TO R04	*Call
2098		5102<5060	J02 TO R04	*Call
2098		5102<5061	J03 TO R04	*Call
2098		5102<5062	J04 TO R04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5102<5063	J05 TO R04	*Call
2098		5102<5064	K01 TO R04	*Call
2098		5102<5065	K02 TO R04	*Call
2098		5102<5066	K03 TO R04	*Call
2098		5102<5067	K04 TO R04	*Call
2098		5102<5068	K05 TO R04	*Call
2098		5102<5069	L01 TO R04	*Call
2098		5102<5070	L02 TO R04	*Call
2098		5102<5071	L03 TO R04	*Call
2098		5102<5072	L04 TO R04	*Call
2098		5102<5073	L05 TO R04	*Call
2098		5102<5074	M01 TO R04	*Call
2098		5102<5075	M02 TO R04	*Call
2098		5102<5076	M03 TO R04	*Call
2098		5102<5077	M04 TO R04	*Call
2098		5102<5078	M05 TO R04	*Call
2098		5102<5079	N01 TO R04	*Call
2098		5102<5080	N02 TO R04	*Call
2098		5102<5081	N03 TO R04	*Call
2098		5102<5082	N04 TO R04	*Call
2098		5102<5083	N05 TO R04	*Call
2098		5102<5084	O01 TO R04	*Call
2098		5102<5085	O02 TO R04	*Call
2098		5102<5086	O03 TO R04	*Call
2098		5102<5087	O04 TO R04	*Call
2098		5102<5088	O05 TO R04	*Call
2098		5102<5089	P01 TO R04	*Call
2098		5102<5090	P02 TO R04	*Call
2098		5102<5091	P03 TO R04	*Call
2098		5102<5092	P04 TO R04	*Call
2098		5102<5093	P05 TO R04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5102<5094	Q01 TO R04	*Call
2098		5102<5095	Q02 TO R04	*Call
2098		5102<5096	Q03 TO R04	*Call
2098		5102<5097	Q04 TO R04	*Call
2098		5102<5098	Q05 TO R04	*Call
2098		5102<5099	R01 TO R04	*Call
2098		5102<5100	R02 TO R04	*Call
2098		5102<5101	R03 TO R04	*Call
2098		5102<5103	R05 TO R04	*Call
2098		5102<5104	S01 TO R04	*Call
2098		5102<5105	S02 TO R04	*Call
2098		5102<5106	S03 TO R04	*Call
2098		5102<5107	S04 TO R04	*Call
2098		5102<5108	S05 TO R04	*Call
2098		5102<5109	T01 TO R04	*Call
2098		5102<5110	T02 TO R04	*Call
2098		5102<5111	T03 TO R04	*Call
2098		5102<5112	T04 TO R04	*Call
2098		5102<5113	T05 TO R04	*Call
2098		5102<5114	U01 TO R04	*Call
2098		5102<5115	U02 TO R04	*Call
2098		5102<5116	U03 TO R04	*Call
2098		5102<5117	U04 TO R04	*Call
2098		5102<5118	U05 TO R04	*Call
2098		5102<5119	V01 TO R04	*Call
2098		5102<5120	V02 TO R04	*Call
2098		5102<5121	V03 TO R04	*Call
2098		5102<5122	V04 TO R04	*Call
2098		5102<5123	V05 TO R04	*Call
2098		5102<5124	W01 TO R04	*Call
2098		5102<5125	W02 TO R04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5102<5126	W03 TO R04	*Call
2098		5102<5127	W04 TO R04	*Call
2098		5102<5128	W05 TO R04	*Call
2098		5102<5129	X01 TO R04	*Call
2098		5102<5130	X02 TO R04	*Call
2098		5102<5131	X03 TO R04	*Call
2098		5102<5132	X04 TO R04	*Call
2098		5102<5133	X05 TO R04	*Call
2098		5102<5134	Y01 TO R04	*Call
2098		5102<5135	Y02 TO R04	*Call
2098		5102<5136	Y03 TO R04	*Call
2098		5102<5137	Y04 TO R04	*Call
2098		5102<5138	Y05 TO R04	*Call
2098		5102<5139	Z01 TO R04	*Call
2098		5102<5140	Z02 TO R04	*Call
2098		5102<5141	Z03 TO R04	*Call
2098		5102<5142	Z04 TO R04	*Call
2098		5102<5143	Z05 TO R04	*Call
2098		5103<5013	A00 TO R05	*Call
2098		5103<5014	A01 TO R05	*Call
2098		5103<5015	A02 TO R05	*Call
2098		5103<5016	A03 TO R05	*Call
2098		5103<5017	A04 TO R05	*Call
2098		5103<5018	A05 TO R05	*Call
2098		5103<5019	B01 TO R05	*Call
2098		5103<5020	B02 TO R05	*Call
2098		5103<5021	B03 TO R05	*Call
2098		5103<5022	B04 TO R05	*Call
2098		5103<5023	B05 TO R05	*Call
2098		5103<5024	C01 TO R05	*Call
2098		5103<5025	C02 TO R05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5103<5026	C03 TO R05	*Call
2098		5103<5027	C04 TO R05	*Call
2098		5103<5028	C05 TO R05	*Call
2098		5103<5029	D01 TO R05	*Call
2098		5103<5030	D02 TO R05	*Call
2098		5103<5031	D03 TO R05	*Call
2098		5103<5032	D04 TO R05	*Call
2098		5103<5033	D05 TO R05	*Call
2098		5103<5034	E01 TO R05	*Call
2098		5103<5035	E02 TO R05	*Call
2098		5103<5036	E03 TO R05	*Call
2098		5103<5037	E04 TO R05	*Call
2098		5103<5038	E05 TO R05	*Call
2098		5103<5039	F01 TO R05	*Call
2098		5103<5040	F02 TO R05	*Call
2098		5103<5041	F03 TO R05	*Call
2098		5103<5042	F04 TO R05	*Call
2098		5103<5043	F05 TO R05	*Call
2098		5103<5044	G01 TO R05	*Call
2098		5103<5045	G02 TO R05	*Call
2098		5103<5046	G03 TO R05	*Call
2098		5103<5047	G04 TO R05	*Call
2098		5103<5048	G05 TO R05	*Call
2098		5103<5049	H01 TO R05	*Call
2098		5103<5050	H02 TO R05	*Call
2098		5103<5051	H03 TO R05	*Call
2098		5103<5052	H04 TO R05	*Call
2098		5103<5053	H05 TO R05	*Call
2098		5103<5054	I01 TO R05	*Call
2098		5103<5055	I02 TO R05	*Call
2098		5103<5056	I03 TO R05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5103<5057	I04 TO R05	*Call
2098		5103<5058	I05 TO R05	*Call
2098		5103<5059	J01 TO R05	*Call
2098		5103<5060	J02 TO R05	*Call
2098		5103<5061	J03 TO R05	*Call
2098		5103<5062	J04 TO R05	*Call
2098		5103<5063	J05 TO R05	*Call
2098		5103<5064	K01 TO R05	*Call
2098		5103<5065	K02 TO R05	*Call
2098		5103<5066	K03 TO R05	*Call
2098		5103<5067	K04 TO R05	*Call
2098		5103<5068	K05 TO R05	*Call
2098		5103<5069	L01 TO R05	*Call
2098		5103<5070	L02 TO R05	*Call
2098		5103<5071	L03 TO R05	*Call
2098		5103<5072	L04 TO R05	*Call
2098		5103<5073	L05 TO R05	*Call
2098		5103<5074	M01 TO R05	*Call
2098		5103<5075	M02 TO R05	*Call
2098		5103<5076	M03 TO R05	*Call
2098		5103<5077	M04 TO R05	*Call
2098		5103<5078	M05 TO R05	*Call
2098		5103<5079	N01 TO R05	*Call
2098		5103<5080	N02 TO R05	*Call
2098		5103<5081	N03 TO R05	*Call
2098		5103<5082	N04 TO R05	*Call
2098		5103<5083	N05 TO R05	*Call
2098		5103<5084	O01 TO R05	*Call
2098		5103<5085	O02 TO R05	*Call
2098		5103<5086	O03 TO R05	*Call
2098		5103<5087	O04 TO R05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5103<5088	O05 TO R05	*Call
2098		5103<5089	P01 TO R05	*Call
2098		5103<5090	P02 TO R05	*Call
2098		5103<5091	P03 TO R05	*Call
2098		5103<5092	P04 TO R05	*Call
2098		5103<5093	P05 TO R05	*Call
2098		5103<5094	Q01 TO R05	*Call
2098		5103<5095	Q02 TO R05	*Call
2098		5103<5096	Q03 TO R05	*Call
2098		5103<5097	Q04 TO R05	*Call
2098		5103<5098	Q05 TO R05	*Call
2098		5103<5099	R01 TO R05	*Call
2098		5103<5100	R02 TO R05	*Call
2098		5103<5101	R03 TO R05	*Call
2098		5103<5102	R04 TO R05	*Call
2098		5103<5104	S01 TO R05	*Call
2098		5103<5105	S02 TO R05	*Call
2098		5103<5106	S03 TO R05	*Call
2098		5103<5107	S04 TO R05	*Call
2098		5103<5108	S05 TO R05	*Call
2098		5103<5109	T01 TO R05	*Call
2098		5103<5110	T02 TO R05	*Call
2098		5103<5111	T03 TO R05	*Call
2098		5103<5112	T04 TO R05	*Call
2098		5103<5113	T05 TO R05	*Call
2098		5103<5114	U01 TO R05	*Call
2098		5103<5115	U02 TO R05	*Call
2098		5103<5116	U03 TO R05	*Call
2098		5103<5117	U04 TO R05	*Call
2098		5103<5118	U05 TO R05	*Call
2098		5103<5119	V01 TO R05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5103<5120	V02 TO R05	*Call
2098		5103<5121	V03 TO R05	*Call
2098		5103<5122	V04 TO R05	*Call
2098		5103<5123	V05 TO R05	*Call
2098		5103<5124	W01 TO R05	*Call
2098		5103<5125	W02 TO R05	*Call
2098		5103<5126	W03 TO R05	*Call
2098		5103<5127	W04 TO R05	*Call
2098		5103<5128	W05 TO R05	*Call
2098		5103<5129	X01 TO R05	*Call
2098		5103<5130	X02 TO R05	*Call
2098		5103<5131	X03 TO R05	*Call
2098		5103<5132	X04 TO R05	*Call
2098		5103<5133	X05 TO R05	*Call
2098		5103<5134	Y01 TO R05	*Call
2098		5103<5135	Y02 TO R05	*Call
2098		5103<5136	Y03 TO R05	*Call
2098		5103<5137	Y04 TO R05	*Call
2098		5103<5138	Y05 TO R05	*Call
2098		5103<5139	Z01 TO R05	*Call
2098		5103<5140	Z02 TO R05	*Call
2098		5103<5141	Z03 TO R05	*Call
2098		5103<5142	Z04 TO R05	*Call
2098		5103<5143	Z05 TO R05	*Call
2098		5104<5013	A00 TO S01	*Call
2098		5104<5014	A01 TO S01	*Call
2098		5104<5015	A02 TO S01	*Call
2098		5104<5016	A03 TO S01	*Call
2098		5104<5017	A04 TO S01	*Call
2098		5104<5018	A05 TO S01	*Call
2098		5104<5019	B01 TO S01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5104<5020	B02 TO S01	*Call
2098		5104<5021	B03 TO S01	*Call
2098		5104<5022	B04 TO S01	*Call
2098		5104<5023	B05 TO S01	*Call
2098		5104<5024	C01 TO S01	*Call
2098		5104<5025	C02 TO S01	*Call
2098		5104<5026	C03 TO S01	*Call
2098		5104<5027	C04 TO S01	*Call
2098		5104<5028	C05 TO S01	*Call
2098		5104<5029	D01 TO S01	*Call
2098		5104<5030	D02 TO S01	*Call
2098		5104<5031	D03 TO S01	*Call
2098		5104<5032	D04 TO S01	*Call
2098		5104<5033	D05 TO S01	*Call
2098		5104<5034	E01 TO S01	*Call
2098		5104<5035	E02 TO S01	*Call
2098		5104<5036	E03 TO S01	*Call
2098		5104<5037	E04 TO S01	*Call
2098		5104<5038	E05 TO S01	*Call
2098		5104<5039	F01 TO S01	*Call
2098		5104<5040	F02 TO S01	*Call
2098		5104<5041	F03 TO S01	*Call
2098		5104<5042	F04 TO S01	*Call
2098		5104<5043	F05 TO S01	*Call
2098		5104<5044	G01 TO S01	*Call
2098		5104<5045	G02 TO S01	*Call
2098		5104<5046	G03 TO S01	*Call
2098		5104<5047	G04 TO S01	*Call
2098		5104<5048	G05 TO S01	*Call
2098		5104<5049	H01 TO S01	*Call
2098		5104<5050	H02 TO S01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5104<5051	H03 TO S01	*Call
2098		5104<5052	H04 TO S01	*Call
2098		5104<5053	H05 TO S01	*Call
2098		5104<5054	I01 TO S01	*Call
2098		5104<5055	I02 TO S01	*Call
2098		5104<5056	I03 TO S01	*Call
2098		5104<5057	I04 TO S01	*Call
2098		5104<5058	I05 TO S01	*Call
2098		5104<5059	J01 TO S01	*Call
2098		5104<5060	J02 TO S01	*Call
2098		5104<5061	J03 TO S01	*Call
2098		5104<5062	J04 TO S01	*Call
2098		5104<5063	J05 TO S01	*Call
2098		5104<5064	K01 TO S01	*Call
2098		5104<5065	K02 TO S01	*Call
2098		5104<5066	K03 TO S01	*Call
2098		5104<5067	K04 TO S01	*Call
2098		5104<5068	K05 TO S01	*Call
2098		5104<5069	L01 TO S01	*Call
2098		5104<5070	L02 TO S01	*Call
2098		5104<5071	L03 TO S01	*Call
2098		5104<5072	L04 TO S01	*Call
2098		5104<5073	L05 TO S01	*Call
2098		5104<5074	M01 TO S01	*Call
2098		5104<5075	M02 TO S01	*Call
2098		5104<5076	M03 TO S01	*Call
2098		5104<5077	M04 TO S01	*Call
2098		5104<5078	M05 TO S01	*Call
2098		5104<5079	N01 TO S01	*Call
2098		5104<5080	N02 TO S01	*Call
2098		5104<5081	N03 TO S01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5104<5082	N04 TO S01	*Call
2098		5104<5083	N05 TO S01	*Call
2098		5104<5084	O01 TO S01	*Call
2098		5104<5085	O02 TO S01	*Call
2098		5104<5086	O03 TO S01	*Call
2098		5104<5087	O04 TO S01	*Call
2098		5104<5088	O05 TO S01	*Call
2098		5104<5089	P01 TO S01	*Call
2098		5104<5090	P02 TO S01	*Call
2098		5104<5091	P03 TO S01	*Call
2098		5104<5092	P04 TO S01	*Call
2098		5104<5093	P05 TO S01	*Call
2098		5104<5094	Q01 TO S01	*Call
2098		5104<5095	Q02 TO S01	*Call
2098		5104<5096	Q03 TO S01	*Call
2098		5104<5097	Q04 TO S01	*Call
2098		5104<5098	Q05 TO S01	*Call
2098		5104<5099	R01 TO S01	*Call
2098		5104<5100	R02 TO S01	*Call
2098		5104<5101	R03 TO S01	*Call
2098		5104<5102	R04 TO S01	*Call
2098		5104<5103	R05 TO S01	*Call
2098		5104<5105	S02 TO S01	*Call
2098		5104<5106	S03 TO S01	*Call
2098		5104<5107	S04 TO S01	*Call
2098		5104<5108	S05 TO S01	*Call
2098		5104<5109	T01 TO S01	*Call
2098		5104<5110	T02 TO S01	*Call
2098		5104<5111	T03 TO S01	*Call
2098		5104<5112	T04 TO S01	*Call
2098		5104<5113	T05 TO S01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5104<5114	U01 TO S01	*Call
2098		5104<5115	U02 TO S01	*Call
2098		5104<5116	U03 TO S01	*Call
2098		5104<5117	U04 TO S01	*Call
2098		5104<5118	U05 TO S01	*Call
2098		5104<5119	V01 TO S01	*Call
2098		5104<5120	V02 TO S01	*Call
2098		5104<5121	V03 TO S01	*Call
2098		5104<5122	V04 TO S01	*Call
2098		5104<5123	V05 TO S01	*Call
2098		5104<5124	W01 TO S01	*Call
2098		5104<5125	W02 TO S01	*Call
2098		5104<5126	W03 TO S01	*Call
2098		5104<5127	W04 TO S01	*Call
2098		5104<5128	W05 TO S01	*Call
2098		5104<5129	X01 TO S01	*Call
2098		5104<5130	X02 TO S01	*Call
2098		5104<5131	X03 TO S01	*Call
2098		5104<5132	X04 TO S01	*Call
2098		5104<5133	X05 TO S01	*Call
2098		5104<5134	Y01 TO S01	*Call
2098		5104<5135	Y02 TO S01	*Call
2098		5104<5136	Y03 TO S01	*Call
2098		5104<5137	Y04 TO S01	*Call
2098		5104<5138	Y05 TO S01	*Call
2098		5104<5139	Z01 TO S01	*Call
2098		5104<5140	Z02 TO S01	*Call
2098		5104<5141	Z03 TO S01	*Call
2098		5104<5142	Z04 TO S01	*Call
2098		5104<5143	Z05 TO S01	*Call
2098		5105<5013	A00 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5105<5014	A01 TO S02	*Call
2098		5105<5015	A02 TO S02	*Call
2098		5105<5016	A03 TO S02	*Call
2098		5105<5017	A04 TO S02	*Call
2098		5105<5018	A05 TO S02	*Call
2098		5105<5019	B01 TO S02	*Call
2098		5105<5020	B02 TO S02	*Call
2098		5105<5021	B03 TO S02	*Call
2098		5105<5022	B04 TO S02	*Call
2098		5105<5023	B05 TO S02	*Call
2098		5105<5024	C01 TO S02	*Call
2098		5105<5025	C02 TO S02	*Call
2098		5105<5026	C03 TO S02	*Call
2098		5105<5027	C04 TO S02	*Call
2098		5105<5028	C05 TO S02	*Call
2098		5105<5029	D01 TO S02	*Call
2098		5105<5030	D02 TO S02	*Call
2098		5105<5031	D03 TO S02	*Call
2098		5105<5032	D04 TO S02	*Call
2098		5105<5033	D05 TO S02	*Call
2098		5105<5034	E01 TO S02	*Call
2098		5105<5035	E02 TO S02	*Call
2098		5105<5036	E03 TO S02	*Call
2098		5105<5037	E04 TO S02	*Call
2098		5105<5038	E05 TO S02	*Call
2098		5105<5039	F01 TO S02	*Call
2098		5105<5040	F02 TO S02	*Call
2098		5105<5041	F03 TO S02	*Call
2098		5105<5042	F04 TO S02	*Call
2098		5105<5043	F05 TO S02	*Call
2098		5105<5044	G01 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5105<5045	G02 TO S02	*Call
2098		5105<5046	G03 TO S02	*Call
2098		5105<5047	G04 TO S02	*Call
2098		5105<5048	G05 TO S02	*Call
2098		5105<5049	H01 TO S02	*Call
2098		5105<5050	H02 TO S02	*Call
2098		5105<5051	H03 TO S02	*Call
2098		5105<5052	H04 TO S02	*Call
2098		5105<5053	H05 TO S02	*Call
2098		5105<5054	I01 TO S02	*Call
2098		5105<5055	I02 TO S02	*Call
2098		5105<5056	I03 TO S02	*Call
2098		5105<5057	I04 TO S02	*Call
2098		5105<5058	I05 TO S02	*Call
2098		5105<5059	J01 TO S02	*Call
2098		5105<5060	J02 TO S02	*Call
2098		5105<5061	J03 TO S02	*Call
2098		5105<5062	J04 TO S02	*Call
2098		5105<5063	J05 TO S02	*Call
2098		5105<5064	K01 TO S02	*Call
2098		5105<5065	K02 TO S02	*Call
2098		5105<5066	K03 TO S02	*Call
2098		5105<5067	K04 TO S02	*Call
2098		5105<5068	K05 TO S02	*Call
2098		5105<5069	L01 TO S02	*Call
2098		5105<5070	L02 TO S02	*Call
2098		5105<5071	L03 TO S02	*Call
2098		5105<5072	L04 TO S02	*Call
2098		5105<5073	L05 TO S02	*Call
2098		5105<5074	M01 TO S02	*Call
2098		5105<5075	M02 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5105<5076	M03 TO S02	*Call
2098		5105<5077	M04 TO S02	*Call
2098		5105<5078	M05 TO S02	*Call
2098		5105<5079	N01 TO S02	*Call
2098		5105<5080	N02 TO S02	*Call
2098		5105<5081	N03 TO S02	*Call
2098		5105<5082	N04 TO S02	*Call
2098		5105<5083	N05 TO S02	*Call
2098		5105<5084	O01 TO S02	*Call
2098		5105<5085	O02 TO S02	*Call
2098		5105<5086	O03 TO S02	*Call
2098		5105<5087	O04 TO S02	*Call
2098		5105<5088	O05 TO S02	*Call
2098		5105<5089	P01 TO S02	*Call
2098		5105<5090	P02 TO S02	*Call
2098		5105<5091	P03 TO S02	*Call
2098		5105<5092	P04 TO S02	*Call
2098		5105<5093	P05 TO S02	*Call
2098		5105<5094	Q01 TO S02	*Call
2098		5105<5095	Q02 TO S02	*Call
2098		5105<5096	Q03 TO S02	*Call
2098		5105<5097	Q04 TO S02	*Call
2098		5105<5098	Q05 TO S02	*Call
2098		5105<5099	R01 TO S02	*Call
2098		5105<5100	R02 TO S02	*Call
2098		5105<5101	R03 TO S02	*Call
2098		5105<5102	R04 TO S02	*Call
2098		5105<5103	R05 TO S02	*Call
2098		5105<5104	S01 TO S02	*Call
2098		5105<5106	S03 TO S02	*Call
2098		5105<5107	S04 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5105<5108	S05 TO S02	*Call
2098		5105<5109	T01 TO S02	*Call
2098		5105<5110	T02 TO S02	*Call
2098		5105<5111	T03 TO S02	*Call
2098		5105<5112	T04 TO S02	*Call
2098		5105<5113	T05 TO S02	*Call
2098		5105<5114	U01 TO S02	*Call
2098		5105<5115	U02 TO S02	*Call
2098		5105<5116	U03 TO S02	*Call
2098		5105<5117	U04 TO S02	*Call
2098		5105<5118	U05 TO S02	*Call
2098		5105<5119	V01 TO S02	*Call
2098		5105<5120	V02 TO S02	*Call
2098		5105<5121	V03 TO S02	*Call
2098		5105<5122	V04 TO S02	*Call
2098		5105<5123	V05 TO S02	*Call
2098		5105<5124	W01 TO S02	*Call
2098		5105<5125	W02 TO S02	*Call
2098		5105<5126	W03 TO S02	*Call
2098		5105<5127	W04 TO S02	*Call
2098		5105<5128	W05 TO S02	*Call
2098		5105<5129	X01 TO S02	*Call
2098		5105<5130	X02 TO S02	*Call
2098		5105<5131	X03 TO S02	*Call
2098		5105<5132	X04 TO S02	*Call
2098		5105<5133	X05 TO S02	*Call
2098		5105<5134	Y01 TO S02	*Call
2098		5105<5135	Y02 TO S02	*Call
2098		5105<5136	Y03 TO S02	*Call
2098		5105<5137	Y04 TO S02	*Call
2098		5105<5138	Y05 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5105<5139	Z01 TO S02	*Call
2098		5105<5140	Z02 TO S02	*Call
2098		5105<5141	Z03 TO S02	*Call
2098		5105<5142	Z04 TO S02	*Call
2098		5105<5143	Z05 TO S02	*Call
2098		5106<5013	A00 TO S03	*Call
2098		5106<5014	A01 TO S03	*Call
2098		5106<5015	A02 TO S03	*Call
2098		5106<5016	A03 TO S03	*Call
2098		5106<5017	A04 TO S03	*Call
2098		5106<5018	A05 TO S03	*Call
2098		5106<5019	B01 TO S03	*Call
2098		5106<5020	B02 TO S03	*Call
2098		5106<5021	B03 TO S03	*Call
2098		5106<5022	B04 TO S03	*Call
2098		5106<5023	B05 TO S03	*Call
2098		5106<5024	C01 TO S03	*Call
2098		5106<5025	C02 TO S03	*Call
2098		5106<5026	C03 TO S03	*Call
2098		5106<5027	C04 TO S03	*Call
2098		5106<5028	C05 TO S03	*Call
2098		5106<5029	D01 TO S03	*Call
2098		5106<5030	D02 TO S03	*Call
2098		5106<5031	D03 TO S03	*Call
2098		5106<5032	D04 TO S03	*Call
2098		5106<5033	D05 TO S03	*Call
2098		5106<5034	E01 TO S03	*Call
2098		5106<5035	E02 TO S03	*Call
2098		5106<5036	E03 TO S03	*Call
2098		5106<5037	E04 TO S03	*Call
2098		5106<5038	E05 TO S03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5106<5039	F01 TO S03	*Call
2098		5106<5040	F02 TO S03	*Call
2098		5106<5041	F03 TO S03	*Call
2098		5106<5042	F04 TO S03	*Call
2098		5106<5043	F05 TO S03	*Call
2098		5106<5044	G01 TO S03	*Call
2098		5106<5045	G02 TO S03	*Call
2098		5106<5046	G03 TO S03	*Call
2098		5106<5047	G04 TO S03	*Call
2098		5106<5048	G05 TO S03	*Call
2098		5106<5049	H01 TO S03	*Call
2098		5106<5050	H02 TO S03	*Call
2098		5106<5051	H03 TO S03	*Call
2098		5106<5052	H04 TO S03	*Call
2098		5106<5053	H05 TO S03	*Call
2098		5106<5054	I01 TO S03	*Call
2098		5106<5055	I02 TO S03	*Call
2098		5106<5056	I03 TO S03	*Call
2098		5106<5057	I04 TO S03	*Call
2098		5106<5058	I05 TO S03	*Call
2098		5106<5059	J01 TO S03	*Call
2098		5106<5060	J02 TO S03	*Call
2098		5106<5061	J03 TO S03	*Call
2098		5106<5062	J04 TO S03	*Call
2098		5106<5063	J05 TO S03	*Call
2098		5106<5064	K01 TO S03	*Call
2098		5106<5065	K02 TO S03	*Call
2098		5106<5066	K03 TO S03	*Call
2098		5106<5067	K04 TO S03	*Call
2098		5106<5068	K05 TO S03	*Call
2098		5106<5069	L01 TO S03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5106<5070	L02 TO S03	*Call
2098		5106<5071	L03 TO S03	*Call
2098		5106<5072	L04 TO S03	*Call
2098		5106<5073	L05 TO S03	*Call
2098		5106<5074	M01 TO S03	*Call
2098		5106<5075	M02 TO S03	*Call
2098		5106<5076	M03 TO S03	*Call
2098		5106<5077	M04 TO S03	*Call
2098		5106<5078	M05 TO S03	*Call
2098		5106<5079	N01 TO S03	*Call
2098		5106<5080	N02 TO S03	*Call
2098		5106<5081	N03 TO S03	*Call
2098		5106<5082	N04 TO S03	*Call
2098		5106<5083	N05 TO S03	*Call
2098		5106<5084	O01 TO S03	*Call
2098		5106<5085	O02 TO S03	*Call
2098		5106<5086	O03 TO S03	*Call
2098		5106<5087	O04 TO S03	*Call
2098		5106<5088	O05 TO S03	*Call
2098		5106<5089	P01 TO S03	*Call
2098		5106<5090	P02 TO S03	*Call
2098		5106<5091	P03 TO S03	*Call
2098		5106<5092	P04 TO S03	*Call
2098		5106<5093	P05 TO S03	*Call
2098		5106<5094	Q01 TO S03	*Call
2098		5106<5095	Q02 TO S03	*Call
2098		5106<5096	Q03 TO S03	*Call
2098		5106<5097	Q04 TO S03	*Call
2098		5106<5098	Q05 TO S03	*Call
2098		5106<5099	R01 TO S03	*Call
2098		5106<5100	R02 TO S03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5106<5101	R03 TO S03	*Call
2098		5106<5102	R04 TO S03	*Call
2098		5106<5103	R05 TO S03	*Call
2098		5106<5104	S01 TO S03	*Call
2098		5106<5105	S02 TO S03	*Call
2098		5106<5107	S04 TO S03	*Call
2098		5106<5108	S05 TO S03	*Call
2098		5106<5109	T01 TO S03	*Call
2098		5106<5110	T02 TO S03	*Call
2098		5106<5111	T03 TO S03	*Call
2098		5106<5112	T04 TO S03	*Call
2098		5106<5113	T05 TO S03	*Call
2098		5106<5114	U01 TO S03	*Call
2098		5106<5115	U02 TO S03	*Call
2098		5106<5116	U03 TO S03	*Call
2098		5106<5117	U04 TO S03	*Call
2098		5106<5118	U05 TO S03	*Call
2098		5106<5119	V01 TO S03	*Call
2098		5106<5120	V02 TO S03	*Call
2098		5106<5121	V03 TO S03	*Call
2098		5106<5122	V04 TO S03	*Call
2098		5106<5123	V05 TO S03	*Call
2098		5106<5124	W01 TO S03	*Call
2098		5106<5125	W02 TO S03	*Call
2098		5106<5126	W03 TO S03	*Call
2098		5106<5127	W04 TO S03	*Call
2098		5106<5128	W05 TO S03	*Call
2098		5106<5129	X01 TO S03	*Call
2098		5106<5130	X02 TO S03	*Call
2098		5106<5131	X03 TO S03	*Call
2098		5106<5132	X04 TO S03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5106<5133	X05 TO S03	*Call
2098		5106<5134	Y01 TO S03	*Call
2098		5106<5135	Y02 TO S03	*Call
2098		5106<5136	Y03 TO S03	*Call
2098		5106<5137	Y04 TO S03	*Call
2098		5106<5138	Y05 TO S03	*Call
2098		5106<5139	Z01 TO S03	*Call
2098		5106<5140	Z02 TO S03	*Call
2098		5106<5141	Z03 TO S03	*Call
2098		5106<5142	Z04 TO S03	*Call
2098		5106<5143	Z05 TO S03	*Call
2098		5107<5013	A00 TO S04	*Call
2098		5107<5014	A01 TO S04	*Call
2098		5107<5015	A02 TO S04	*Call
2098		5107<5016	A03 TO S04	*Call
2098		5107<5017	A04 TO S04	*Call
2098		5107<5018	A05 TO S04	*Call
2098		5107<5019	B01 TO S04	*Call
2098		5107<5020	B02 TO S04	*Call
2098		5107<5021	B03 TO S04	*Call
2098		5107<5022	B04 TO S04	*Call
2098		5107<5023	B05 TO S04	*Call
2098		5107<5024	C01 TO S04	*Call
2098		5107<5025	C02 TO S04	*Call
2098		5107<5026	C03 TO S04	*Call
2098		5107<5027	C04 TO S04	*Call
2098		5107<5028	C05 TO S04	*Call
2098		5107<5029	D01 TO S04	*Call
2098		5107<5030	D02 TO S04	*Call
2098		5107<5031	D03 TO S04	*Call
2098		5107<5032	D04 TO S04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5107<5033	D05 TO S04	*Call
2098		5107<5034	E01 TO S04	*Call
2098		5107<5035	E02 TO S04	*Call
2098		5107<5036	E03 TO S04	*Call
2098		5107<5037	E04 TO S04	*Call
2098		5107<5038	E05 TO S04	*Call
2098		5107<5039	F01 TO S04	*Call
2098		5107<5040	F02 TO S04	*Call
2098		5107<5041	F03 TO S04	*Call
2098		5107<5042	F04 TO S04	*Call
2098		5107<5043	F05 TO S04	*Call
2098		5107<5044	G01 TO S04	*Call
2098		5107<5045	G02 TO S04	*Call
2098		5107<5046	G03 TO S04	*Call
2098		5107<5047	G04 TO S04	*Call
2098		5107<5048	G05 TO S04	*Call
2098		5107<5049	H01 TO S04	*Call
2098		5107<5050	H02 TO S04	*Call
2098		5107<5051	H03 TO S04	*Call
2098		5107<5052	H04 TO S04	*Call
2098		5107<5053	H05 TO S04	*Call
2098		5107<5054	I01 TO S04	*Call
2098		5107<5055	I02 TO S04	*Call
2098		5107<5056	I03 TO S04	*Call
2098		5107<5057	I04 TO S04	*Call
2098		5107<5058	I05 TO S04	*Call
2098		5107<5059	J01 TO S04	*Call
2098		5107<5060	J02 TO S04	*Call
2098		5107<5061	J03 TO S04	*Call
2098		5107<5062	J04 TO S04	*Call
2098		5107<5063	J05 TO S04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5107<5064	K01 TO S04	*Call
2098		5107<5065	K02 TO S04	*Call
2098		5107<5066	K03 TO S04	*Call
2098		5107<5067	K04 TO S04	*Call
2098		5107<5068	K05 TO S04	*Call
2098		5107<5069	L01 TO S04	*Call
2098		5107<5070	L02 TO S04	*Call
2098		5107<5071	L03 TO S04	*Call
2098		5107<5072	L04 TO S04	*Call
2098		5107<5073	L05 TO S04	*Call
2098		5107<5074	M01 TO S04	*Call
2098		5107<5075	M02 TO S04	*Call
2098		5107<5076	M03 TO S04	*Call
2098		5107<5077	M04 TO S04	*Call
2098		5107<5078	M05 TO S04	*Call
2098		5107<5079	N01 TO S04	*Call
2098		5107<5080	N02 TO S04	*Call
2098		5107<5081	N03 TO S04	*Call
2098		5107<5082	N04 TO S04	*Call
2098		5107<5083	N05 TO S04	*Call
2098		5107<5084	O01 TO S04	*Call
2098		5107<5085	O02 TO S04	*Call
2098		5107<5086	O03 TO S04	*Call
2098		5107<5087	O04 TO S04	*Call
2098		5107<5088	O05 TO S04	*Call
2098		5107<5089	P01 TO S04	*Call
2098		5107<5090	P02 TO S04	*Call
2098		5107<5091	P03 TO S04	*Call
2098		5107<5092	P04 TO S04	*Call
2098		5107<5093	P05 TO S04	*Call
2098		5107<5094	Q01 TO S04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5107<5095	Q02 TO S04	*Call
2098		5107<5096	Q03 TO S04	*Call
2098		5107<5097	Q04 TO S04	*Call
2098		5107<5098	Q05 TO S04	*Call
2098		5107<5099	R01 TO S04	*Call
2098		5107<5100	R02 TO S04	*Call
2098		5107<5101	R03 TO S04	*Call
2098		5107<5102	R04 TO S04	*Call
2098		5107<5103	R05 TO S04	*Call
2098		5107<5104	S01 TO S04	*Call
2098		5107<5105	S02 TO S04	*Call
2098		5107<5106	S03 TO S04	*Call
2098		5107<5108	S05 TO S04	*Call
2098		5107<5109	T01 TO S04	*Call
2098		5107<5110	T02 TO S04	*Call
2098		5107<5111	T03 TO S04	*Call
2098		5107<5112	T04 TO S04	*Call
2098		5107<5113	T05 TO S04	*Call
2098		5107<5114	U01 TO S04	*Call
2098		5107<5115	U02 TO S04	*Call
2098		5107<5116	U03 TO S04	*Call
2098		5107<5117	U04 TO S04	*Call
2098		5107<5118	U05 TO S04	*Call
2098		5107<5119	V01 TO S04	*Call
2098		5107<5120	V02 TO S04	*Call
2098		5107<5121	V03 TO S04	*Call
2098		5107<5122	V04 TO S04	*Call
2098		5107<5123	V05 TO S04	*Call
2098		5107<5124	W01 TO S04	*Call
2098		5107<5125	W02 TO S04	*Call
2098		5107<5126	W03 TO S04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5107<5127	W04 TO S04	*Call
2098		5107<5128	W05 TO S04	*Call
2098		5107<5129	X01 TO S04	*Call
2098		5107<5130	X02 TO S04	*Call
2098		5107<5131	X03 TO S04	*Call
2098		5107<5132	X04 TO S04	*Call
2098		5107<5133	X05 TO S04	*Call
2098		5107<5134	Y01 TO S04	*Call
2098		5107<5135	Y02 TO S04	*Call
2098		5107<5136	Y03 TO S04	*Call
2098		5107<5137	Y04 TO S04	*Call
2098		5107<5138	Y05 TO S04	*Call
2098		5107<5139	Z01 TO S04	*Call
2098		5107<5140	Z02 TO S04	*Call
2098		5107<5141	Z03 TO S04	*Call
2098		5107<5142	Z04 TO S04	*Call
2098		5107<5143	Z05 TO S04	*Call
2098		5108<5013	A00 TO S05	*Call
2098		5108<5014	A01 TO S05	*Call
2098		5108<5015	A02 TO S05	*Call
2098		5108<5016	A03 TO S05	*Call
2098		5108<5017	A04 TO S05	*Call
2098		5108<5018	A05 TO S05	*Call
2098		5108<5019	B01 TO S05	*Call
2098		5108<5020	B02 TO S05	*Call
2098		5108<5021	B03 TO S05	*Call
2098		5108<5022	B04 TO S05	*Call
2098		5108<5023	B05 TO S05	*Call
2098		5108<5024	C01 TO S05	*Call
2098		5108<5025	C02 TO S05	*Call
2098		5108<5026	C03 TO S05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5108<5027	C04 TO S05	*Call
2098		5108<5028	C05 TO S05	*Call
2098		5108<5029	D01 TO S05	*Call
2098		5108<5030	D02 TO S05	*Call
2098		5108<5031	D03 TO S05	*Call
2098		5108<5032	D04 TO S05	*Call
2098		5108<5033	D05 TO S05	*Call
2098		5108<5034	E01 TO S05	*Call
2098		5108<5035	E02 TO S05	*Call
2098		5108<5036	E03 TO S05	*Call
2098		5108<5037	E04 TO S05	*Call
2098		5108<5038	E05 TO S05	*Call
2098		5108<5039	F01 TO S05	*Call
2098		5108<5040	F02 TO S05	*Call
2098		5108<5041	F03 TO S05	*Call
2098		5108<5042	F04 TO S05	*Call
2098		5108<5043	F05 TO S05	*Call
2098		5108<5044	G01 TO S05	*Call
2098		5108<5045	G02 TO S05	*Call
2098		5108<5046	G03 TO S05	*Call
2098		5108<5047	G04 TO S05	*Call
2098		5108<5048	G05 TO S05	*Call
2098		5108<5049	H01 TO S05	*Call
2098		5108<5050	H02 TO S05	*Call
2098		5108<5051	H03 TO S05	*Call
2098		5108<5052	H04 TO S05	*Call
2098		5108<5053	H05 TO S05	*Call
2098		5108<5054	I01 TO S05	*Call
2098		5108<5055	I02 TO S05	*Call
2098		5108<5056	I03 TO S05	*Call
2098		5108<5057	I04 TO S05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5108<5058	I05 TO S05	*Call
2098		5108<5059	J01 TO S05	*Call
2098		5108<5060	J02 TO S05	*Call
2098		5108<5061	J03 TO S05	*Call
2098		5108<5062	J04 TO S05	*Call
2098		5108<5063	J05 TO S05	*Call
2098		5108<5064	K01 TO S05	*Call
2098		5108<5065	K02 TO S05	*Call
2098		5108<5066	K03 TO S05	*Call
2098		5108<5067	K04 TO S05	*Call
2098		5108<5068	K05 TO S05	*Call
2098		5108<5069	L01 TO S05	*Call
2098		5108<5070	L02 TO S05	*Call
2098		5108<5071	L03 TO S05	*Call
2098		5108<5072	L04 TO S05	*Call
2098		5108<5073	L05 TO S05	*Call
2098		5108<5074	M01 TO S05	*Call
2098		5108<5075	M02 TO S05	*Call
2098		5108<5076	M03 TO S05	*Call
2098		5108<5077	M04 TO S05	*Call
2098		5108<5078	M05 TO S05	*Call
2098		5108<5079	N01 TO S05	*Call
2098		5108<5080	N02 TO S05	*Call
2098		5108<5081	N03 TO S05	*Call
2098		5108<5082	N04 TO S05	*Call
2098		5108<5083	N05 TO S05	*Call
2098		5108<5084	O01 TO S05	*Call
2098		5108<5085	O02 TO S05	*Call
2098		5108<5086	O03 TO S05	*Call
2098		5108<5087	O04 TO S05	*Call
2098		5108<5088	O05 TO S05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5108<5089	P01 TO S05	*Call
2098		5108<5090	P02 TO S05	*Call
2098		5108<5091	P03 TO S05	*Call
2098		5108<5092	P04 TO S05	*Call
2098		5108<5093	P05 TO S05	*Call
2098		5108<5094	Q01 TO S05	*Call
2098		5108<5095	Q02 TO S05	*Call
2098		5108<5096	Q03 TO S05	*Call
2098		5108<5097	Q04 TO S05	*Call
2098		5108<5098	Q05 TO S05	*Call
2098		5108<5099	R01 TO S05	*Call
2098		5108<5100	R02 TO S05	*Call
2098		5108<5101	R03 TO S05	*Call
2098		5108<5102	R04 TO S05	*Call
2098		5108<5103	R05 TO S05	*Call
2098		5108<5104	S01 TO S05	*Call
2098		5108<5105	S02 TO S05	*Call
2098		5108<5106	S03 TO S05	*Call
2098		5108<5107	S04 TO S05	*Call
2098		5108<5109	T01 TO S05	*Call
2098		5108<5110	T02 TO S05	*Call
2098		5108<5111	T03 TO S05	*Call
2098		5108<5112	T04 TO S05	*Call
2098		5108<5113	T05 TO S05	*Call
2098		5108<5114	U01 TO S05	*Call
2098		5108<5115	U02 TO S05	*Call
2098		5108<5116	U03 TO S05	*Call
2098		5108<5117	U04 TO S05	*Call
2098		5108<5118	U05 TO S05	*Call
2098		5108<5119	V01 TO S05	*Call
2098		5108<5120	V02 TO S05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5108<5121	V03 TO S05	*Call
2098		5108<5122	V04 TO S05	*Call
2098		5108<5123	V05 TO S05	*Call
2098		5108<5124	W01 TO S05	*Call
2098		5108<5125	W02 TO S05	*Call
2098		5108<5126	W03 TO S05	*Call
2098		5108<5127	W04 TO S05	*Call
2098		5108<5128	W05 TO S05	*Call
2098		5108<5129	X01 TO S05	*Call
2098		5108<5130	X02 TO S05	*Call
2098		5108<5131	X03 TO S05	*Call
2098		5108<5132	X04 TO S05	*Call
2098		5108<5133	X05 TO S05	*Call
2098		5108<5134	Y01 TO S05	*Call
2098		5108<5135	Y02 TO S05	*Call
2098		5108<5136	Y03 TO S05	*Call
2098		5108<5137	Y04 TO S05	*Call
2098		5108<5138	Y05 TO S05	*Call
2098		5108<5139	Z01 TO S05	*Call
2098		5108<5140	Z02 TO S05	*Call
2098		5108<5141	Z03 TO S05	*Call
2098		5108<5142	Z04 TO S05	*Call
2098		5108<5143	Z05 TO S05	*Call
2098		5109<5013	A00 TO T01	*Call
2098		5109<5014	A01 TO T01	*Call
2098		5109<5015	A02 TO T01	*Call
2098		5109<5016	A03 TO T01	*Call
2098		5109<5017	A04 TO T01	*Call
2098		5109<5018	A05 TO T01	*Call
2098		5109<5019	B01 TO T01	*Call
2098		5109<5020	B02 TO T01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5109<5021	B03 TO T01	*Call
2098		5109<5022	B04 TO T01	*Call
2098		5109<5023	B05 TO T01	*Call
2098		5109<5024	C01 TO T01	*Call
2098		5109<5025	C02 TO T01	*Call
2098		5109<5026	C03 TO T01	*Call
2098		5109<5027	C04 TO T01	*Call
2098		5109<5028	C05 TO T01	*Call
2098		5109<5029	D01 TO T01	*Call
2098		5109<5030	D02 TO T01	*Call
2098		5109<5031	D03 TO T01	*Call
2098		5109<5032	D04 TO T01	*Call
2098		5109<5033	D05 TO T01	*Call
2098		5109<5034	E01 TO T01	*Call
2098		5109<5035	E02 TO T01	*Call
2098		5109<5036	E03 TO T01	*Call
2098		5109<5037	E04 TO T01	*Call
2098		5109<5038	E05 TO T01	*Call
2098		5109<5039	F01 TO T01	*Call
2098		5109<5040	F02 TO T01	*Call
2098		5109<5041	F03 TO T01	*Call
2098		5109<5042	F04 TO T01	*Call
2098		5109<5043	F05 TO T01	*Call
2098		5109<5044	G01 TO T01	*Call
2098		5109<5045	G02 TO T01	*Call
2098		5109<5046	G03 TO T01	*Call
2098		5109<5047	G04 TO T01	*Call
2098		5109<5048	G05 TO T01	*Call
2098		5109<5049	H01 TO T01	*Call
2098		5109<5050	H02 TO T01	*Call
2098		5109<5051	H03 TO T01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5109<5052	H04 TO T01	*Call
2098		5109<5053	H05 TO T01	*Call
2098		5109<5054	I01 TO T01	*Call
2098		5109<5055	I02 TO T01	*Call
2098		5109<5056	I03 TO T01	*Call
2098		5109<5057	I04 TO T01	*Call
2098		5109<5058	I05 TO T01	*Call
2098		5109<5059	J01 TO T01	*Call
2098		5109<5060	J02 TO T01	*Call
2098		5109<5061	J03 TO T01	*Call
2098		5109<5062	J04 TO T01	*Call
2098		5109<5063	J05 TO T01	*Call
2098		5109<5064	K01 TO T01	*Call
2098		5109<5065	K02 TO T01	*Call
2098		5109<5066	K03 TO T01	*Call
2098		5109<5067	K04 TO T01	*Call
2098		5109<5068	K05 TO T01	*Call
2098		5109<5069	L01 TO T01	*Call
2098		5109<5070	L02 TO T01	*Call
2098		5109<5071	L03 TO T01	*Call
2098		5109<5072	L04 TO T01	*Call
2098		5109<5073	L05 TO T01	*Call
2098		5109<5074	M01 TO T01	*Call
2098		5109<5075	M02 TO T01	*Call
2098		5109<5076	M03 TO T01	*Call
2098		5109<5077	M04 TO T01	*Call
2098		5109<5078	M05 TO T01	*Call
2098		5109<5079	N01 TO T01	*Call
2098		5109<5080	N02 TO T01	*Call
2098		5109<5081	N03 TO T01	*Call
2098		5109<5082	N04 TO T01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5109<5083	N05 TO T01	*Call
2098		5109<5084	O01 TO T01	*Call
2098		5109<5085	O02 TO T01	*Call
2098		5109<5086	O03 TO T01	*Call
2098		5109<5087	O04 TO T01	*Call
2098		5109<5088	O05 TO T01	*Call
2098		5109<5089	P01 TO T01	*Call
2098		5109<5090	P02 TO T01	*Call
2098		5109<5091	P03 TO T01	*Call
2098		5109<5092	P04 TO T01	*Call
2098		5109<5093	P05 TO T01	*Call
2098		5109<5094	Q01 TO T01	*Call
2098		5109<5095	Q02 TO T01	*Call
2098		5109<5096	Q03 TO T01	*Call
2098		5109<5097	Q04 TO T01	*Call
2098		5109<5098	Q05 TO T01	*Call
2098		5109<5099	R01 TO T01	*Call
2098		5109<5100	R02 TO T01	*Call
2098		5109<5101	R03 TO T01	*Call
2098		5109<5102	R04 TO T01	*Call
2098		5109<5103	R05 TO T01	*Call
2098		5109<5104	S01 TO T01	*Call
2098		5109<5105	S02 TO T01	*Call
2098		5109<5106	S03 TO T01	*Call
2098		5109<5107	S04 TO T01	*Call
2098		5109<5108	S05 TO T01	*Call
2098		5109<5110	T02 TO T01	*Call
2098		5109<5111	T03 TO T01	*Call
2098		5109<5112	T04 TO T01	*Call
2098		5109<5113	T05 TO T01	*Call
2098		5109<5114	U01 TO T01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5109<5115	U02 TO T01	*Call
2098		5109<5116	U03 TO T01	*Call
2098		5109<5117	U04 TO T01	*Call
2098		5109<5118	U05 TO T01	*Call
2098		5109<5119	V01 TO T01	*Call
2098		5109<5120	V02 TO T01	*Call
2098		5109<5121	V03 TO T01	*Call
2098		5109<5122	V04 TO T01	*Call
2098		5109<5123	V05 TO T01	*Call
2098		5109<5124	W01 TO T01	*Call
2098		5109<5125	W02 TO T01	*Call
2098		5109<5126	W03 TO T01	*Call
2098		5109<5127	W04 TO T01	*Call
2098		5109<5128	W05 TO T01	*Call
2098		5109<5129	X01 TO T01	*Call
2098		5109<5130	X02 TO T01	*Call
2098		5109<5131	X03 TO T01	*Call
2098		5109<5132	X04 TO T01	*Call
2098		5109<5133	X05 TO T01	*Call
2098		5109<5134	Y01 TO T01	*Call
2098		5109<5135	Y02 TO T01	*Call
2098		5109<5136	Y03 TO T01	*Call
2098		5109<5137	Y04 TO T01	*Call
2098		5109<5138	Y05 TO T01	*Call
2098		5109<5139	Z01 TO T01	*Call
2098		5109<5140	Z02 TO T01	*Call
2098		5109<5141	Z03 TO T01	*Call
2098		5109<5142	Z04 TO T01	*Call
2098		5109<5143	Z05 TO T01	*Call
2098		5110<5013	A00 TO T02	*Call
2098		5110<5014	A01 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5110<5015	A02 TO T02	*Call
2098		5110<5016	A03 TO T02	*Call
2098		5110<5017	A04 TO T02	*Call
2098		5110<5018	A05 TO T02	*Call
2098		5110<5019	B01 TO T02	*Call
2098		5110<5020	B02 TO T02	*Call
2098		5110<5021	B03 TO T02	*Call
2098		5110<5022	B04 TO T02	*Call
2098		5110<5023	B05 TO T02	*Call
2098		5110<5024	C01 TO T02	*Call
2098		5110<5025	C02 TO T02	*Call
2098		5110<5026	C03 TO T02	*Call
2098		5110<5027	C04 TO T02	*Call
2098		5110<5028	C05 TO T02	*Call
2098		5110<5029	D01 TO T02	*Call
2098		5110<5030	D02 TO T02	*Call
2098		5110<5031	D03 TO T02	*Call
2098		5110<5032	D04 TO T02	*Call
2098		5110<5033	D05 TO T02	*Call
2098		5110<5034	E01 TO T02	*Call
2098		5110<5035	E02 TO T02	*Call
2098		5110<5036	E03 TO T02	*Call
2098		5110<5037	E04 TO T02	*Call
2098		5110<5038	E05 TO T02	*Call
2098		5110<5039	F01 TO T02	*Call
2098		5110<5040	F02 TO T02	*Call
2098		5110<5041	F03 TO T02	*Call
2098		5110<5042	F04 TO T02	*Call
2098		5110<5043	F05 TO T02	*Call
2098		5110<5044	G01 TO T02	*Call
2098		5110<5045	G02 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5110<5046	G03 TO T02	*Call
2098		5110<5047	G04 TO T02	*Call
2098		5110<5048	G05 TO T02	*Call
2098		5110<5049	H01 TO T02	*Call
2098		5110<5050	H02 TO T02	*Call
2098		5110<5051	H03 TO T02	*Call
2098		5110<5052	H04 TO T02	*Call
2098		5110<5053	H05 TO T02	*Call
2098		5110<5054	I01 TO T02	*Call
2098		5110<5055	I02 TO T02	*Call
2098		5110<5056	I03 TO T02	*Call
2098		5110<5057	I04 TO T02	*Call
2098		5110<5058	I05 TO T02	*Call
2098		5110<5059	J01 TO T02	*Call
2098		5110<5060	J02 TO T02	*Call
2098		5110<5061	J03 TO T02	*Call
2098		5110<5062	J04 TO T02	*Call
2098		5110<5063	J05 TO T02	*Call
2098		5110<5064	K01 TO T02	*Call
2098		5110<5065	K02 TO T02	*Call
2098		5110<5066	K03 TO T02	*Call
2098		5110<5067	K04 TO T02	*Call
2098		5110<5068	K05 TO T02	*Call
2098		5110<5069	L01 TO T02	*Call
2098		5110<5070	L02 TO T02	*Call
2098		5110<5071	L03 TO T02	*Call
2098		5110<5072	L04 TO T02	*Call
2098		5110<5073	L05 TO T02	*Call
2098		5110<5074	M01 TO T02	*Call
2098		5110<5075	M02 TO T02	*Call
2098		5110<5076	M03 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5110<5077	M04 TO T02	*Call
2098		5110<5078	M05 TO T02	*Call
2098		5110<5079	N01 TO T02	*Call
2098		5110<5080	N02 TO T02	*Call
2098		5110<5081	N03 TO T02	*Call
2098		5110<5082	N04 TO T02	*Call
2098		5110<5083	N05 TO T02	*Call
2098		5110<5084	O01 TO T02	*Call
2098		5110<5085	O02 TO T02	*Call
2098		5110<5086	O03 TO T02	*Call
2098		5110<5087	O04 TO T02	*Call
2098		5110<5088	O05 TO T02	*Call
2098		5110<5089	P01 TO T02	*Call
2098		5110<5090	P02 TO T02	*Call
2098		5110<5091	P03 TO T02	*Call
2098		5110<5092	P04 TO T02	*Call
2098		5110<5093	P05 TO T02	*Call
2098		5110<5094	Q01 TO T02	*Call
2098		5110<5095	Q02 TO T02	*Call
2098		5110<5096	Q03 TO T02	*Call
2098		5110<5097	Q04 TO T02	*Call
2098		5110<5098	Q05 TO T02	*Call
2098		5110<5099	R01 TO T02	*Call
2098		5110<5100	R02 TO T02	*Call
2098		5110<5101	R03 TO T02	*Call
2098		5110<5102	R04 TO T02	*Call
2098		5110<5103	R05 TO T02	*Call
2098		5110<5104	S01 TO T02	*Call
2098		5110<5105	S02 TO T02	*Call
2098		5110<5106	S03 TO T02	*Call
2098		5110<5107	S04 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5110<5108	S05 TO T02	*Call
2098		5110<5109	T01 TO T02	*Call
2098		5110<5111	T03 TO T02	*Call
2098		5110<5112	T04 TO T02	*Call
2098		5110<5113	T05 TO T02	*Call
2098		5110<5114	U01 TO T02	*Call
2098		5110<5115	U02 TO T02	*Call
2098		5110<5116	U03 TO T02	*Call
2098		5110<5117	U04 TO T02	*Call
2098		5110<5118	U05 TO T02	*Call
2098		5110<5119	V01 TO T02	*Call
2098		5110<5120	V02 TO T02	*Call
2098		5110<5121	V03 TO T02	*Call
2098		5110<5122	V04 TO T02	*Call
2098		5110<5123	V05 TO T02	*Call
2098		5110<5124	W01 TO T02	*Call
2098		5110<5125	W02 TO T02	*Call
2098		5110<5126	W03 TO T02	*Call
2098		5110<5127	W04 TO T02	*Call
2098		5110<5128	W05 TO T02	*Call
2098		5110<5129	X01 TO T02	*Call
2098		5110<5130	X02 TO T02	*Call
2098		5110<5131	X03 TO T02	*Call
2098		5110<5132	X04 TO T02	*Call
2098		5110<5133	X05 TO T02	*Call
2098		5110<5134	Y01 TO T02	*Call
2098		5110<5135	Y02 TO T02	*Call
2098		5110<5136	Y03 TO T02	*Call
2098		5110<5137	Y04 TO T02	*Call
2098		5110<5138	Y05 TO T02	*Call
2098		5110<5139	Z01 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5110<5140	Z02 TO T02	*Call
2098		5110<5141	Z03 TO T02	*Call
2098		5110<5142	Z04 TO T02	*Call
2098		5110<5143	Z05 TO T02	*Call
2098		5111<5013	A00 TO T03	*Call
2098		5111<5014	A01 TO T03	*Call
2098		5111<5015	A02 TO T03	*Call
2098		5111<5016	A03 TO T03	*Call
2098		5111<5017	A04 TO T03	*Call
2098		5111<5018	A05 TO T03	*Call
2098		5111<5019	B01 TO T03	*Call
2098		5111<5020	B02 TO T03	*Call
2098		5111<5021	B03 TO T03	*Call
2098		5111<5022	B04 TO T03	*Call
2098		5111<5023	B05 TO T03	*Call
2098		5111<5024	C01 TO T03	*Call
2098		5111<5025	C02 TO T03	*Call
2098		5111<5026	C03 TO T03	*Call
2098		5111<5027	C04 TO T03	*Call
2098		5111<5028	C05 TO T03	*Call
2098		5111<5029	D01 TO T03	*Call
2098		5111<5030	D02 TO T03	*Call
2098		5111<5031	D03 TO T03	*Call
2098		5111<5032	D04 TO T03	*Call
2098		5111<5033	D05 TO T03	*Call
2098		5111<5034	E01 TO T03	*Call
2098		5111<5035	E02 TO T03	*Call
2098		5111<5036	E03 TO T03	*Call
2098		5111<5037	E04 TO T03	*Call
2098		5111<5038	E05 TO T03	*Call
2098		5111<5039	F01 TO T03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5111<5040	F02 TO T03	*Call
2098		5111<5041	F03 TO T03	*Call
2098		5111<5042	F04 TO T03	*Call
2098		5111<5043	F05 TO T03	*Call
2098		5111<5044	G01 TO T03	*Call
2098		5111<5045	G02 TO T03	*Call
2098		5111<5046	G03 TO T03	*Call
2098		5111<5047	G04 TO T03	*Call
2098		5111<5048	G05 TO T03	*Call
2098		5111<5049	H01 TO T03	*Call
2098		5111<5050	H02 TO T03	*Call
2098		5111<5051	H03 TO T03	*Call
2098		5111<5052	H04 TO T03	*Call
2098		5111<5053	H05 TO T03	*Call
2098		5111<5054	I01 TO T03	*Call
2098		5111<5055	I02 TO T03	*Call
2098		5111<5056	I03 TO T03	*Call
2098		5111<5057	I04 TO T03	*Call
2098		5111<5058	I05 TO T03	*Call
2098		5111<5059	J01 TO T03	*Call
2098		5111<5060	J02 TO T03	*Call
2098		5111<5061	J03 TO T03	*Call
2098		5111<5062	J04 TO T03	*Call
2098		5111<5063	J05 TO T03	*Call
2098		5111<5064	K01 TO T03	*Call
2098		5111<5065	K02 TO T03	*Call
2098		5111<5066	K03 TO T03	*Call
2098		5111<5067	K04 TO T03	*Call
2098		5111<5068	K05 TO T03	*Call
2098		5111<5069	L01 TO T03	*Call
2098		5111<5070	L02 TO T03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5111<5071	L03 TO T03	*Call
2098		5111<5072	L04 TO T03	*Call
2098		5111<5073	L05 TO T03	*Call
2098		5111<5074	M01 TO T03	*Call
2098		5111<5075	M02 TO T03	*Call
2098		5111<5076	M03 TO T03	*Call
2098		5111<5077	M04 TO T03	*Call
2098		5111<5078	M05 TO T03	*Call
2098		5111<5079	N01 TO T03	*Call
2098		5111<5080	N02 TO T03	*Call
2098		5111<5081	N03 TO T03	*Call
2098		5111<5082	N04 TO T03	*Call
2098		5111<5083	N05 TO T03	*Call
2098		5111<5084	O01 TO T03	*Call
2098		5111<5085	O02 TO T03	*Call
2098		5111<5086	O03 TO T03	*Call
2098		5111<5087	O04 TO T03	*Call
2098		5111<5088	O05 TO T03	*Call
2098		5111<5089	P01 TO T03	*Call
2098		5111<5090	P02 TO T03	*Call
2098		5111<5091	P03 TO T03	*Call
2098		5111<5092	P04 TO T03	*Call
2098		5111<5093	P05 TO T03	*Call
2098		5111<5094	Q01 TO T03	*Call
2098		5111<5095	Q02 TO T03	*Call
2098		5111<5096	Q03 TO T03	*Call
2098		5111<5097	Q04 TO T03	*Call
2098		5111<5098	Q05 TO T03	*Call
2098		5111<5099	R01 TO T03	*Call
2098		5111<5100	R02 TO T03	*Call
2098		5111<5101	R03 TO T03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5111<5102	R04 TO T03	*Call
2098		5111<5103	R05 TO T03	*Call
2098		5111<5104	S01 TO T03	*Call
2098		5111<5105	S02 TO T03	*Call
2098		5111<5106	S03 TO T03	*Call
2098		5111<5107	S04 TO T03	*Call
2098		5111<5108	S05 TO T03	*Call
2098		5111<5109	T01 TO T03	*Call
2098		5111<5110	T02 TO T03	*Call
2098		5111<5112	T04 TO T03	*Call
2098		5111<5113	T05 TO T03	*Call
2098		5111<5114	U01 TO T03	*Call
2098		5111<5115	U02 TO T03	*Call
2098		5111<5116	U03 TO T03	*Call
2098		5111<5117	U04 TO T03	*Call
2098		5111<5118	U05 TO T03	*Call
2098		5111<5119	V01 TO T03	*Call
2098		5111<5120	V02 TO T03	*Call
2098		5111<5121	V03 TO T03	*Call
2098		5111<5122	V04 TO T03	*Call
2098		5111<5123	V05 TO T03	*Call
2098		5111<5124	W01 TO T03	*Call
2098		5111<5125	W02 TO T03	*Call
2098		5111<5126	W03 TO T03	*Call
2098		5111<5127	W04 TO T03	*Call
2098		5111<5128	W05 TO T03	*Call
2098		5111<5129	X01 TO T03	*Call
2098		5111<5130	X02 TO T03	*Call
2098		5111<5131	X03 TO T03	*Call
2098		5111<5132	X04 TO T03	*Call
2098		5111<5133	X05 TO T03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5111<5134	Y01 TO T03	*Call
2098		5111<5135	Y02 TO T03	*Call
2098		5111<5136	Y03 TO T03	*Call
2098		5111<5137	Y04 TO T03	*Call
2098		5111<5138	Y05 TO T03	*Call
2098		5111<5139	Z01 TO T03	*Call
2098		5111<5140	Z02 TO T03	*Call
2098		5111<5141	Z03 TO T03	*Call
2098		5111<5142	Z04 TO T03	*Call
2098		5111<5143	Z05 TO T03	*Call
2098		5112<5013	A00 TO T04	*Call
2098		5112<5014	A01 TO T04	*Call
2098		5112<5015	A02 TO T04	*Call
2098		5112<5016	A03 TO T04	*Call
2098		5112<5017	A04 TO T04	*Call
2098		5112<5018	A05 TO T04	*Call
2098		5112<5019	B01 TO T04	*Call
2098		5112<5020	B02 TO T04	*Call
2098		5112<5021	B03 TO T04	*Call
2098		5112<5022	B04 TO T04	*Call
2098		5112<5023	B05 TO T04	*Call
2098		5112<5024	C01 TO T04	*Call
2098		5112<5025	C02 TO T04	*Call
2098		5112<5026	C03 TO T04	*Call
2098		5112<5027	C04 TO T04	*Call
2098		5112<5028	C05 TO T04	*Call
2098		5112<5029	D01 TO T04	*Call
2098		5112<5030	D02 TO T04	*Call
2098		5112<5031	D03 TO T04	*Call
2098		5112<5032	D04 TO T04	*Call
2098		5112<5033	D05 TO T04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5112<5034	E01 TO T04	*Call
2098		5112<5035	E02 TO T04	*Call
2098		5112<5036	E03 TO T04	*Call
2098		5112<5037	E04 TO T04	*Call
2098		5112<5038	E05 TO T04	*Call
2098		5112<5039	F01 TO T04	*Call
2098		5112<5040	F02 TO T04	*Call
2098		5112<5041	F03 TO T04	*Call
2098		5112<5042	F04 TO T04	*Call
2098		5112<5043	F05 TO T04	*Call
2098		5112<5044	G01 TO T04	*Call
2098		5112<5045	G02 TO T04	*Call
2098		5112<5046	G03 TO T04	*Call
2098		5112<5047	G04 TO T04	*Call
2098		5112<5048	G05 TO T04	*Call
2098		5112<5049	H01 TO T04	*Call
2098		5112<5050	H02 TO T04	*Call
2098		5112<5051	H03 TO T04	*Call
2098		5112<5052	H04 TO T04	*Call
2098		5112<5053	H05 TO T04	*Call
2098		5112<5054	I01 TO T04	*Call
2098		5112<5055	I02 TO T04	*Call
2098		5112<5056	I03 TO T04	*Call
2098		5112<5057	I04 TO T04	*Call
2098		5112<5058	I05 TO T04	*Call
2098		5112<5059	J01 TO T04	*Call
2098		5112<5060	J02 TO T04	*Call
2098		5112<5061	J03 TO T04	*Call
2098		5112<5062	J04 TO T04	*Call
2098		5112<5063	J05 TO T04	*Call
2098		5112<5064	K01 TO T04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5112<5065	K02 TO T04	*Call
2098		5112<5066	K03 TO T04	*Call
2098		5112<5067	K04 TO T04	*Call
2098		5112<5068	K05 TO T04	*Call
2098		5112<5069	L01 TO T04	*Call
2098		5112<5070	L02 TO T04	*Call
2098		5112<5071	L03 TO T04	*Call
2098		5112<5072	L04 TO T04	*Call
2098		5112<5073	L05 TO T04	*Call
2098		5112<5074	M01 TO T04	*Call
2098		5112<5075	M02 TO T04	*Call
2098		5112<5076	M03 TO T04	*Call
2098		5112<5077	M04 TO T04	*Call
2098		5112<5078	M05 TO T04	*Call
2098		5112<5079	N01 TO T04	*Call
2098		5112<5080	N02 TO T04	*Call
2098		5112<5081	N03 TO T04	*Call
2098		5112<5082	N04 TO T04	*Call
2098		5112<5083	N05 TO T04	*Call
2098		5112<5084	O01 TO T04	*Call
2098		5112<5085	O02 TO T04	*Call
2098		5112<5086	O03 TO T04	*Call
2098		5112<5087	O04 TO T04	*Call
2098		5112<5088	O05 TO T04	*Call
2098		5112<5089	P01 TO T04	*Call
2098		5112<5090	P02 TO T04	*Call
2098		5112<5091	P03 TO T04	*Call
2098		5112<5092	P04 TO T04	*Call
2098		5112<5093	P05 TO T04	*Call
2098		5112<5094	Q01 TO T04	*Call
2098		5112<5095	Q02 TO T04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5112<5096	Q03 TO T04	*Call
2098		5112<5097	Q04 TO T04	*Call
2098		5112<5098	Q05 TO T04	*Call
2098		5112<5099	R01 TO T04	*Call
2098		5112<5100	R02 TO T04	*Call
2098		5112<5101	R03 TO T04	*Call
2098		5112<5102	R04 TO T04	*Call
2098		5112<5103	R05 TO T04	*Call
2098		5112<5104	S01 TO T04	*Call
2098		5112<5105	S02 TO T04	*Call
2098		5112<5106	S03 TO T04	*Call
2098		5112<5107	S04 TO T04	*Call
2098		5112<5108	S05 TO T04	*Call
2098		5112<5109	T01 TO T04	*Call
2098		5112<5110	T02 TO T04	*Call
2098		5112<5111	T03 TO T04	*Call
2098		5112<5113	T05 TO T04	*Call
2098		5112<5114	U01 TO T04	*Call
2098		5112<5115	U02 TO T04	*Call
2098		5112<5116	U03 TO T04	*Call
2098		5112<5117	U04 TO T04	*Call
2098		5112<5118	U05 TO T04	*Call
2098		5112<5119	V01 TO T04	*Call
2098		5112<5120	V02 TO T04	*Call
2098		5112<5121	V03 TO T04	*Call
2098		5112<5122	V04 TO T04	*Call
2098		5112<5123	V05 TO T04	*Call
2098		5112<5124	W01 TO T04	*Call
2098		5112<5125	W02 TO T04	*Call
2098		5112<5126	W03 TO T04	*Call
2098		5112<5127	W04 TO T04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5112<5128	W05 TO T04	*Call
2098		5112<5129	X01 TO T04	*Call
2098		5112<5130	X02 TO T04	*Call
2098		5112<5131	X03 TO T04	*Call
2098		5112<5132	X04 TO T04	*Call
2098		5112<5133	X05 TO T04	*Call
2098		5112<5134	Y01 TO T04	*Call
2098		5112<5135	Y02 TO T04	*Call
2098		5112<5136	Y03 TO T04	*Call
2098		5112<5137	Y04 TO T04	*Call
2098		5112<5138	Y05 TO T04	*Call
2098		5112<5139	Z01 TO T04	*Call
2098		5112<5140	Z02 TO T04	*Call
2098		5112<5141	Z03 TO T04	*Call
2098		5112<5142	Z04 TO T04	*Call
2098		5112<5143	Z05 TO T04	*Call
2098		5113<5013	A00 TO T05	*Call
2098		5113<5014	A01 TO T05	*Call
2098		5113<5015	A02 TO T05	*Call
2098		5113<5016	A03 TO T05	*Call
2098		5113<5017	A04 TO T05	*Call
2098		5113<5018	A05 TO T05	*Call
2098		5113<5019	B01 TO T05	*Call
2098		5113<5020	B02 TO T05	*Call
2098		5113<5021	B03 TO T05	*Call
2098		5113<5022	B04 TO T05	*Call
2098		5113<5023	B05 TO T05	*Call
2098		5113<5024	C01 TO T05	*Call
2098		5113<5025	C02 TO T05	*Call
2098		5113<5026	C03 TO T05	*Call
2098		5113<5027	C04 TO T05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5113<5028	C05 TO T05	*Call
2098		5113<5029	D01 TO T05	*Call
2098		5113<5030	D02 TO T05	*Call
2098		5113<5031	D03 TO T05	*Call
2098		5113<5032	D04 TO T05	*Call
2098		5113<5033	D05 TO T05	*Call
2098		5113<5034	E01 TO T05	*Call
2098		5113<5035	E02 TO T05	*Call
2098		5113<5036	E03 TO T05	*Call
2098		5113<5037	E04 TO T05	*Call
2098		5113<5038	E05 TO T05	*Call
2098		5113<5039	F01 TO T05	*Call
2098		5113<5040	F02 TO T05	*Call
2098		5113<5041	F03 TO T05	*Call
2098		5113<5042	F04 TO T05	*Call
2098		5113<5043	F05 TO T05	*Call
2098		5113<5044	G01 TO T05	*Call
2098		5113<5045	G02 TO T05	*Call
2098		5113<5046	G03 TO T05	*Call
2098		5113<5047	G04 TO T05	*Call
2098		5113<5048	G05 TO T05	*Call
2098		5113<5049	H01 TO T05	*Call
2098		5113<5050	H02 TO T05	*Call
2098		5113<5051	H03 TO T05	*Call
2098		5113<5052	H04 TO T05	*Call
2098		5113<5053	H05 TO T05	*Call
2098		5113<5054	I01 TO T05	*Call
2098		5113<5055	I02 TO T05	*Call
2098		5113<5056	I03 TO T05	*Call
2098		5113<5057	I04 TO T05	*Call
2098		5113<5058	I05 TO T05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5113<5059	J01 TO T05	*Call
2098		5113<5060	J02 TO T05	*Call
2098		5113<5061	J03 TO T05	*Call
2098		5113<5062	J04 TO T05	*Call
2098		5113<5063	J05 TO T05	*Call
2098		5113<5064	K01 TO T05	*Call
2098		5113<5065	K02 TO T05	*Call
2098		5113<5066	K03 TO T05	*Call
2098		5113<5067	K04 TO T05	*Call
2098		5113<5068	K05 TO T05	*Call
2098		5113<5069	L01 TO T05	*Call
2098		5113<5070	L02 TO T05	*Call
2098		5113<5071	L03 TO T05	*Call
2098		5113<5072	L04 TO T05	*Call
2098		5113<5073	L05 TO T05	*Call
2098		5113<5074	M01 TO T05	*Call
2098		5113<5075	M02 TO T05	*Call
2098		5113<5076	M03 TO T05	*Call
2098		5113<5077	M04 TO T05	*Call
2098		5113<5078	M05 TO T05	*Call
2098		5113<5079	N01 TO T05	*Call
2098		5113<5080	N02 TO T05	*Call
2098		5113<5081	N03 TO T05	*Call
2098		5113<5082	N04 TO T05	*Call
2098		5113<5083	N05 TO T05	*Call
2098		5113<5084	O01 TO T05	*Call
2098		5113<5085	O02 TO T05	*Call
2098		5113<5086	O03 TO T05	*Call
2098		5113<5087	O04 TO T05	*Call
2098		5113<5088	O05 TO T05	*Call
2098		5113<5089	P01 TO T05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5113<5090	P02 TO T05	*Call
2098		5113<5091	P03 TO T05	*Call
2098		5113<5092	P04 TO T05	*Call
2098		5113<5093	P05 TO T05	*Call
2098		5113<5094	Q01 TO T05	*Call
2098		5113<5095	Q02 TO T05	*Call
2098		5113<5096	Q03 TO T05	*Call
2098		5113<5097	Q04 TO T05	*Call
2098		5113<5098	Q05 TO T05	*Call
2098		5113<5099	R01 TO T05	*Call
2098		5113<5100	R02 TO T05	*Call
2098		5113<5101	R03 TO T05	*Call
2098		5113<5102	R04 TO T05	*Call
2098		5113<5103	R05 TO T05	*Call
2098		5113<5104	S01 TO T05	*Call
2098		5113<5105	S02 TO T05	*Call
2098		5113<5106	S03 TO T05	*Call
2098		5113<5107	S04 TO T05	*Call
2098		5113<5108	S05 TO T05	*Call
2098		5113<5109	T01 TO T05	*Call
2098		5113<5110	T02 TO T05	*Call
2098		5113<5111	T03 TO T05	*Call
2098		5113<5112	T04 TO T05	*Call
2098		5113<5114	U01 TO T05	*Call
2098		5113<5115	U02 TO T05	*Call
2098		5113<5116	U03 TO T05	*Call
2098		5113<5117	U04 TO T05	*Call
2098		5113<5118	U05 TO T05	*Call
2098		5113<5119	V01 TO T05	*Call
2098		5113<5120	V02 TO T05	*Call
2098		5113<5121	V03 TO T05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5113<5122	V04 TO T05	*Call
2098		5113<5123	V05 TO T05	*Call
2098		5113<5124	W01 TO T05	*Call
2098		5113<5125	W02 TO T05	*Call
2098		5113<5126	W03 TO T05	*Call
2098		5113<5127	W04 TO T05	*Call
2098		5113<5128	W05 TO T05	*Call
2098		5113<5129	X01 TO T05	*Call
2098		5113<5130	X02 TO T05	*Call
2098		5113<5131	X03 TO T05	*Call
2098		5113<5132	X04 TO T05	*Call
2098		5113<5133	X05 TO T05	*Call
2098		5113<5134	Y01 TO T05	*Call
2098		5113<5135	Y02 TO T05	*Call
2098		5113<5136	Y03 TO T05	*Call
2098		5113<5137	Y04 TO T05	*Call
2098		5113<5138	Y05 TO T05	*Call
2098		5113<5139	Z01 TO T05	*Call
2098		5113<5140	Z02 TO T05	*Call
2098		5113<5141	Z03 TO T05	*Call
2098		5113<5142	Z04 TO T05	*Call
2098		5113<5143	Z05 TO T05	*Call
2098		5114<5013	A00 TO U01	*Call
2098		5114<5014	A01 TO U01	*Call
2098		5114<5015	A02 TO U01	*Call
2098		5114<5016	A03 TO U01	*Call
2098		5114<5017	A04 TO U01	*Call
2098		5114<5018	A05 TO U01	*Call
2098		5114<5019	B01 TO U01	*Call
2098		5114<5020	B02 TO U01	*Call
2098		5114<5021	B03 TO U01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5114<5022	B04 TO U01	*Call
2098		5114<5023	B05 TO U01	*Call
2098		5114<5024	C01 TO U01	*Call
2098		5114<5025	C02 TO U01	*Call
2098		5114<5026	C03 TO U01	*Call
2098		5114<5027	C04 TO U01	*Call
2098		5114<5028	C05 TO U01	*Call
2098		5114<5029	D01 TO U01	*Call
2098		5114<5030	D02 TO U01	*Call
2098		5114<5031	D03 TO U01	*Call
2098		5114<5032	D04 TO U01	*Call
2098		5114<5033	D05 TO U01	*Call
2098		5114<5034	E01 TO U01	*Call
2098		5114<5035	E02 TO U01	*Call
2098		5114<5036	E03 TO U01	*Call
2098		5114<5037	E04 TO U01	*Call
2098		5114<5038	E05 TO U01	*Call
2098		5114<5039	F01 TO U01	*Call
2098		5114<5040	F02 TO U01	*Call
2098		5114<5041	F03 TO U01	*Call
2098		5114<5042	F04 TO U01	*Call
2098		5114<5043	F05 TO U01	*Call
2098		5114<5044	G01 TO U01	*Call
2098		5114<5045	G02 TO U01	*Call
2098		5114<5046	G03 TO U01	*Call
2098		5114<5047	G04 TO U01	*Call
2098		5114<5048	G05 TO U01	*Call
2098		5114<5049	H01 TO U01	*Call
2098		5114<5050	H02 TO U01	*Call
2098		5114<5051	H03 TO U01	*Call
2098		5114<5052	H04 TO U01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5114<5053	H05 TO U01	*Call
2098		5114<5054	I01 TO U01	*Call
2098		5114<5055	I02 TO U01	*Call
2098		5114<5056	I03 TO U01	*Call
2098		5114<5057	I04 TO U01	*Call
2098		5114<5058	I05 TO U01	*Call
2098		5114<5059	J01 TO U01	*Call
2098		5114<5060	J02 TO U01	*Call
2098		5114<5061	J03 TO U01	*Call
2098		5114<5062	J04 TO U01	*Call
2098		5114<5063	J05 TO U01	*Call
2098		5114<5064	K01 TO U01	*Call
2098		5114<5065	K02 TO U01	*Call
2098		5114<5066	K03 TO U01	*Call
2098		5114<5067	K04 TO U01	*Call
2098		5114<5068	K05 TO U01	*Call
2098		5114<5069	L01 TO U01	*Call
2098		5114<5070	L02 TO U01	*Call
2098		5114<5071	L03 TO U01	*Call
2098		5114<5072	L04 TO U01	*Call
2098		5114<5073	L05 TO U01	*Call
2098		5114<5074	M01 TO U01	*Call
2098		5114<5075	M02 TO U01	*Call
2098		5114<5076	M03 TO U01	*Call
2098		5114<5077	M04 TO U01	*Call
2098		5114<5078	M05 TO U01	*Call
2098		5114<5079	N01 TO U01	*Call
2098		5114<5080	N02 TO U01	*Call
2098		5114<5081	N03 TO U01	*Call
2098		5114<5082	N04 TO U01	*Call
2098		5114<5083	N05 TO U01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5114<5084	O01 TO U01	*Call
2098		5114<5085	O02 TO U01	*Call
2098		5114<5086	O03 TO U01	*Call
2098		5114<5087	O04 TO U01	*Call
2098		5114<5088	O05 TO U01	*Call
2098		5114<5089	P01 TO U01	*Call
2098		5114<5090	P02 TO U01	*Call
2098		5114<5091	P03 TO U01	*Call
2098		5114<5092	P04 TO U01	*Call
2098		5114<5093	P05 TO U01	*Call
2098		5114<5094	Q01 TO U01	*Call
2098		5114<5095	Q02 TO U01	*Call
2098		5114<5096	Q03 TO U01	*Call
2098		5114<5097	Q04 TO U01	*Call
2098		5114<5098	Q05 TO U01	*Call
2098		5114<5099	R01 TO U01	*Call
2098		5114<5100	R02 TO U01	*Call
2098		5114<5101	R03 TO U01	*Call
2098		5114<5102	R04 TO U01	*Call
2098		5114<5103	R05 TO U01	*Call
2098		5114<5104	S01 TO U01	*Call
2098		5114<5105	S02 TO U01	*Call
2098		5114<5106	S03 TO U01	*Call
2098		5114<5107	S04 TO U01	*Call
2098		5114<5108	S05 TO U01	*Call
2098		5114<5109	T01 TO U01	*Call
2098		5114<5110	T02 TO U01	*Call
2098		5114<5111	T03 TO U01	*Call
2098		5114<5112	T04 TO U01	*Call
2098		5114<5113	T05 TO U01	*Call
2098		5114<5115	U02 TO U01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5114<5116	U03 TO U01	*Call
2098		5114<5117	U04 TO U01	*Call
2098		5114<5118	U05 TO U01	*Call
2098		5114<5119	V01 TO U01	*Call
2098		5114<5120	V02 TO U01	*Call
2098		5114<5121	V03 TO U01	*Call
2098		5114<5122	V04 TO U01	*Call
2098		5114<5123	V05 TO U01	*Call
2098		5114<5124	W01 TO U01	*Call
2098		5114<5125	W02 TO U01	*Call
2098		5114<5126	W03 TO U01	*Call
2098		5114<5127	W04 TO U01	*Call
2098		5114<5128	W05 TO U01	*Call
2098		5114<5129	X01 TO U01	*Call
2098		5114<5130	X02 TO U01	*Call
2098		5114<5131	X03 TO U01	*Call
2098		5114<5132	X04 TO U01	*Call
2098		5114<5133	X05 TO U01	*Call
2098		5114<5134	Y01 TO U01	*Call
2098		5114<5135	Y02 TO U01	*Call
2098		5114<5136	Y03 TO U01	*Call
2098		5114<5137	Y04 TO U01	*Call
2098		5114<5138	Y05 TO U01	*Call
2098		5114<5139	Z01 TO U01	*Call
2098		5114<5140	Z02 TO U01	*Call
2098		5114<5141	Z03 TO U01	*Call
2098		5114<5142	Z04 TO U01	*Call
2098		5114<5143	Z05 TO U01	*Call
2098		5115<5013	A00 TO U02	*Call
2098		5115<5014	A01 TO U02	*Call
2098		5115<5015	A02 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5115<5016	A03 TO U02	*Call
2098		5115<5017	A04 TO U02	*Call
2098		5115<5018	A05 TO U02	*Call
2098		5115<5019	B01 TO U02	*Call
2098		5115<5020	B02 TO U02	*Call
2098		5115<5021	B03 TO U02	*Call
2098		5115<5022	B04 TO U02	*Call
2098		5115<5023	B05 TO U02	*Call
2098		5115<5024	C01 TO U02	*Call
2098		5115<5025	C02 TO U02	*Call
2098		5115<5026	C03 TO U02	*Call
2098		5115<5027	C04 TO U02	*Call
2098		5115<5028	C05 TO U02	*Call
2098		5115<5029	D01 TO U02	*Call
2098		5115<5030	D02 TO U02	*Call
2098		5115<5031	D03 TO U02	*Call
2098		5115<5032	D04 TO U02	*Call
2098		5115<5033	D05 TO U02	*Call
2098		5115<5034	E01 TO U02	*Call
2098		5115<5035	E02 TO U02	*Call
2098		5115<5036	E03 TO U02	*Call
2098		5115<5037	E04 TO U02	*Call
2098		5115<5038	E05 TO U02	*Call
2098		5115<5039	F01 TO U02	*Call
2098		5115<5040	F02 TO U02	*Call
2098		5115<5041	F03 TO U02	*Call
2098		5115<5042	F04 TO U02	*Call
2098		5115<5043	F05 TO U02	*Call
2098		5115<5044	G01 TO U02	*Call
2098		5115<5045	G02 TO U02	*Call
2098		5115<5046	G03 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5115<5047	G04 TO U02	*Call
2098		5115<5048	G05 TO U02	*Call
2098		5115<5049	H01 TO U02	*Call
2098		5115<5050	H02 TO U02	*Call
2098		5115<5051	H03 TO U02	*Call
2098		5115<5052	H04 TO U02	*Call
2098		5115<5053	H05 TO U02	*Call
2098		5115<5054	I01 TO U02	*Call
2098		5115<5055	I02 TO U02	*Call
2098		5115<5056	I03 TO U02	*Call
2098		5115<5057	I04 TO U02	*Call
2098		5115<5058	I05 TO U02	*Call
2098		5115<5059	J01 TO U02	*Call
2098		5115<5060	J02 TO U02	*Call
2098		5115<5061	J03 TO U02	*Call
2098		5115<5062	J04 TO U02	*Call
2098		5115<5063	J05 TO U02	*Call
2098		5115<5064	K01 TO U02	*Call
2098		5115<5065	K02 TO U02	*Call
2098		5115<5066	K03 TO U02	*Call
2098		5115<5067	K04 TO U02	*Call
2098		5115<5068	K05 TO U02	*Call
2098		5115<5069	L01 TO U02	*Call
2098		5115<5070	L02 TO U02	*Call
2098		5115<5071	L03 TO U02	*Call
2098		5115<5072	L04 TO U02	*Call
2098		5115<5073	L05 TO U02	*Call
2098		5115<5074	M01 TO U02	*Call
2098		5115<5075	M02 TO U02	*Call
2098		5115<5076	M03 TO U02	*Call
2098		5115<5077	M04 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5115<5078	M05 TO U02	*Call
2098		5115<5079	N01 TO U02	*Call
2098		5115<5080	N02 TO U02	*Call
2098		5115<5081	N03 TO U02	*Call
2098		5115<5082	N04 TO U02	*Call
2098		5115<5083	N05 TO U02	*Call
2098		5115<5084	O01 TO U02	*Call
2098		5115<5085	O02 TO U02	*Call
2098		5115<5086	O03 TO U02	*Call
2098		5115<5087	O04 TO U02	*Call
2098		5115<5088	O05 TO U02	*Call
2098		5115<5089	P01 TO U02	*Call
2098		5115<5090	P02 TO U02	*Call
2098		5115<5091	P03 TO U02	*Call
2098		5115<5092	P04 TO U02	*Call
2098		5115<5093	P05 TO U02	*Call
2098		5115<5094	Q01 TO U02	*Call
2098		5115<5095	Q02 TO U02	*Call
2098		5115<5096	Q03 TO U02	*Call
2098		5115<5097	Q04 TO U02	*Call
2098		5115<5098	Q05 TO U02	*Call
2098		5115<5099	R01 TO U02	*Call
2098		5115<5100	R02 TO U02	*Call
2098		5115<5101	R03 TO U02	*Call
2098		5115<5102	R04 TO U02	*Call
2098		5115<5103	R05 TO U02	*Call
2098		5115<5104	S01 TO U02	*Call
2098		5115<5105	S02 TO U02	*Call
2098		5115<5106	S03 TO U02	*Call
2098		5115<5107	S04 TO U02	*Call
2098		5115<5108	S05 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5115<5109	T01 TO U02	*Call
2098		5115<5110	T02 TO U02	*Call
2098		5115<5111	T03 TO U02	*Call
2098		5115<5112	T04 TO U02	*Call
2098		5115<5113	T05 TO U02	*Call
2098		5115<5114	U01 TO U02	*Call
2098		5115<5116	U03 TO U02	*Call
2098		5115<5117	U04 TO U02	*Call
2098		5115<5118	U05 TO U02	*Call
2098		5115<5119	V01 TO U02	*Call
2098		5115<5120	V02 TO U02	*Call
2098		5115<5121	V03 TO U02	*Call
2098		5115<5122	V04 TO U02	*Call
2098		5115<5123	V05 TO U02	*Call
2098		5115<5124	W01 TO U02	*Call
2098		5115<5125	W02 TO U02	*Call
2098		5115<5126	W03 TO U02	*Call
2098		5115<5127	W04 TO U02	*Call
2098		5115<5128	W05 TO U02	*Call
2098		5115<5129	X01 TO U02	*Call
2098		5115<5130	X02 TO U02	*Call
2098		5115<5131	X03 TO U02	*Call
2098		5115<5132	X04 TO U02	*Call
2098		5115<5133	X05 TO U02	*Call
2098		5115<5134	Y01 TO U02	*Call
2098		5115<5135	Y02 TO U02	*Call
2098		5115<5136	Y03 TO U02	*Call
2098		5115<5137	Y04 TO U02	*Call
2098		5115<5138	Y05 TO U02	*Call
2098		5115<5139	Z01 TO U02	*Call
2098		5115<5140	Z02 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5115<5141	Z03 TO U02	*Call
2098		5115<5142	Z04 TO U02	*Call
2098		5115<5143	Z05 TO U02	*Call
2098		5116<5013	A00 TO U03	*Call
2098		5116<5014	A01 TO U03	*Call
2098		5116<5015	A02 TO U03	*Call
2098		5116<5016	A03 TO U03	*Call
2098		5116<5017	A04 TO U03	*Call
2098		5116<5018	A05 TO U03	*Call
2098		5116<5019	B01 TO U03	*Call
2098		5116<5020	B02 TO U03	*Call
2098		5116<5021	B03 TO U03	*Call
2098		5116<5022	B04 TO U03	*Call
2098		5116<5023	B05 TO U03	*Call
2098		5116<5024	C01 TO U03	*Call
2098		5116<5025	C02 TO U03	*Call
2098		5116<5026	C03 TO U03	*Call
2098		5116<5027	C04 TO U03	*Call
2098		5116<5028	C05 TO U03	*Call
2098		5116<5029	D01 TO U03	*Call
2098		5116<5030	D02 TO U03	*Call
2098		5116<5031	D03 TO U03	*Call
2098		5116<5032	D04 TO U03	*Call
2098		5116<5033	D05 TO U03	*Call
2098		5116<5034	E01 TO U03	*Call
2098		5116<5035	E02 TO U03	*Call
2098		5116<5036	E03 TO U03	*Call
2098		5116<5037	E04 TO U03	*Call
2098		5116<5038	E05 TO U03	*Call
2098		5116<5039	F01 TO U03	*Call
2098		5116<5040	F02 TO U03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5116<5041	F03 TO U03	*Call
2098		5116<5042	F04 TO U03	*Call
2098		5116<5043	F05 TO U03	*Call
2098		5116<5044	G01 TO U03	*Call
2098		5116<5045	G02 TO U03	*Call
2098		5116<5046	G03 TO U03	*Call
2098		5116<5047	G04 TO U03	*Call
2098		5116<5048	G05 TO U03	*Call
2098		5116<5049	H01 TO U03	*Call
2098		5116<5050	H02 TO U03	*Call
2098		5116<5051	H03 TO U03	*Call
2098		5116<5052	H04 TO U03	*Call
2098		5116<5053	H05 TO U03	*Call
2098		5116<5054	I01 TO U03	*Call
2098		5116<5055	I02 TO U03	*Call
2098		5116<5056	I03 TO U03	*Call
2098		5116<5057	I04 TO U03	*Call
2098		5116<5058	I05 TO U03	*Call
2098		5116<5059	J01 TO U03	*Call
2098		5116<5060	J02 TO U03	*Call
2098		5116<5061	J03 TO U03	*Call
2098		5116<5062	J04 TO U03	*Call
2098		5116<5063	J05 TO U03	*Call
2098		5116<5064	K01 TO U03	*Call
2098		5116<5065	K02 TO U03	*Call
2098		5116<5066	K03 TO U03	*Call
2098		5116<5067	K04 TO U03	*Call
2098		5116<5068	K05 TO U03	*Call
2098		5116<5069	L01 TO U03	*Call
2098		5116<5070	L02 TO U03	*Call
2098		5116<5071	L03 TO U03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5116<5072	L04 TO U03	*Call
2098		5116<5073	L05 TO U03	*Call
2098		5116<5074	M01 TO U03	*Call
2098		5116<5075	M02 TO U03	*Call
2098		5116<5076	M03 TO U03	*Call
2098		5116<5077	M04 TO U03	*Call
2098		5116<5078	M05 TO U03	*Call
2098		5116<5079	N01 TO U03	*Call
2098		5116<5080	N02 TO U03	*Call
2098		5116<5081	N03 TO U03	*Call
2098		5116<5082	N04 TO U03	*Call
2098		5116<5083	N05 TO U03	*Call
2098		5116<5084	O01 TO U03	*Call
2098		5116<5085	O02 TO U03	*Call
2098		5116<5086	O03 TO U03	*Call
2098		5116<5087	O04 TO U03	*Call
2098		5116<5088	O05 TO U03	*Call
2098		5116<5089	P01 TO U03	*Call
2098		5116<5090	P02 TO U03	*Call
2098		5116<5091	P03 TO U03	*Call
2098		5116<5092	P04 TO U03	*Call
2098		5116<5093	P05 TO U03	*Call
2098		5116<5094	Q01 TO U03	*Call
2098		5116<5095	Q02 TO U03	*Call
2098		5116<5096	Q03 TO U03	*Call
2098		5116<5097	Q04 TO U03	*Call
2098		5116<5098	Q05 TO U03	*Call
2098		5116<5099	R01 TO U03	*Call
2098		5116<5100	R02 TO U03	*Call
2098		5116<5101	R03 TO U03	*Call
2098		5116<5102	R04 TO U03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5116<5103	R05 TO U03	*Call
2098		5116<5104	S01 TO U03	*Call
2098		5116<5105	S02 TO U03	*Call
2098		5116<5106	S03 TO U03	*Call
2098		5116<5107	S04 TO U03	*Call
2098		5116<5108	S05 TO U03	*Call
2098		5116<5109	T01 TO U03	*Call
2098		5116<5110	T02 TO U03	*Call
2098		5116<5111	T03 TO U03	*Call
2098		5116<5112	T04 TO U03	*Call
2098		5116<5113	T05 TO U03	*Call
2098		5116<5114	U01 TO U03	*Call
2098		5116<5115	U02 TO U03	*Call
2098		5116<5117	U04 TO U03	*Call
2098		5116<5118	U05 TO U03	*Call
2098		5116<5119	V01 TO U03	*Call
2098		5116<5120	V02 TO U03	*Call
2098		5116<5121	V03 TO U03	*Call
2098		5116<5122	V04 TO U03	*Call
2098		5116<5123	V05 TO U03	*Call
2098		5116<5124	W01 TO U03	*Call
2098		5116<5125	W02 TO U03	*Call
2098		5116<5126	W03 TO U03	*Call
2098		5116<5127	W04 TO U03	*Call
2098		5116<5128	W05 TO U03	*Call
2098		5116<5129	X01 TO U03	*Call
2098		5116<5130	X02 TO U03	*Call
2098		5116<5131	X03 TO U03	*Call
2098		5116<5132	X04 TO U03	*Call
2098		5116<5133	X05 TO U03	*Call
2098		5116<5134	Y01 TO U03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5116<5135	Y02 TO U03	*Call
2098		5116<5136	Y03 TO U03	*Call
2098		5116<5137	Y04 TO U03	*Call
2098		5116<5138	Y05 TO U03	*Call
2098		5116<5139	Z01 TO U03	*Call
2098		5116<5140	Z02 TO U03	*Call
2098		5116<5141	Z03 TO U03	*Call
2098		5116<5142	Z04 TO U03	*Call
2098		5116<5143	Z05 TO U03	*Call
2098		5117<5013	A00 TO U04	*Call
2098		5117<5014	A01 TO U04	*Call
2098		5117<5015	A02 TO U04	*Call
2098		5117<5016	A03 TO U04	*Call
2098		5117<5017	A04 TO U04	*Call
2098		5117<5018	A05 TO U04	*Call
2098		5117<5019	B01 TO U04	*Call
2098		5117<5020	B02 TO U04	*Call
2098		5117<5021	B03 TO U04	*Call
2098		5117<5022	B04 TO U04	*Call
2098		5117<5023	B05 TO U04	*Call
2098		5117<5024	C01 TO U04	*Call
2098		5117<5025	C02 TO U04	*Call
2098		5117<5026	C03 TO U04	*Call
2098		5117<5027	C04 TO U04	*Call
2098		5117<5028	C05 TO U04	*Call
2098		5117<5029	D01 TO U04	*Call
2098		5117<5030	D02 TO U04	*Call
2098		5117<5031	D03 TO U04	*Call
2098		5117<5032	D04 TO U04	*Call
2098		5117<5033	D05 TO U04	*Call
2098		5117<5034	E01 TO U04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5117<5035	E02 TO U04	*Call
2098		5117<5036	E03 TO U04	*Call
2098		5117<5037	E04 TO U04	*Call
2098		5117<5038	E05 TO U04	*Call
2098		5117<5039	F01 TO U04	*Call
2098		5117<5040	F02 TO U04	*Call
2098		5117<5041	F03 TO U04	*Call
2098		5117<5042	F04 TO U04	*Call
2098		5117<5043	F05 TO U04	*Call
2098		5117<5044	G01 TO U04	*Call
2098		5117<5045	G02 TO U04	*Call
2098		5117<5046	G03 TO U04	*Call
2098		5117<5047	G04 TO U04	*Call
2098		5117<5048	G05 TO U04	*Call
2098		5117<5049	H01 TO U04	*Call
2098		5117<5050	H02 TO U04	*Call
2098		5117<5051	H03 TO U04	*Call
2098		5117<5052	H04 TO U04	*Call
2098		5117<5053	H05 TO U04	*Call
2098		5117<5054	I01 TO U04	*Call
2098		5117<5055	I02 TO U04	*Call
2098		5117<5056	I03 TO U04	*Call
2098		5117<5057	I04 TO U04	*Call
2098		5117<5058	I05 TO U04	*Call
2098		5117<5059	J01 TO U04	*Call
2098		5117<5060	J02 TO U04	*Call
2098		5117<5061	J03 TO U04	*Call
2098		5117<5062	J04 TO U04	*Call
2098		5117<5063	J05 TO U04	*Call
2098		5117<5064	K01 TO U04	*Call
2098		5117<5065	K02 TO U04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5117<5066	K03 TO U04	*Call
2098		5117<5067	K04 TO U04	*Call
2098		5117<5068	K05 TO U04	*Call
2098		5117<5069	L01 TO U04	*Call
2098		5117<5070	L02 TO U04	*Call
2098		5117<5071	L03 TO U04	*Call
2098		5117<5072	L04 TO U04	*Call
2098		5117<5073	L05 TO U04	*Call
2098		5117<5074	M01 TO U04	*Call
2098		5117<5075	M02 TO U04	*Call
2098		5117<5076	M03 TO U04	*Call
2098		5117<5077	M04 TO U04	*Call
2098		5117<5078	M05 TO U04	*Call
2098		5117<5079	N01 TO U04	*Call
2098		5117<5080	N02 TO U04	*Call
2098		5117<5081	N03 TO U04	*Call
2098		5117<5082	N04 TO U04	*Call
2098		5117<5083	N05 TO U04	*Call
2098		5117<5084	O01 TO U04	*Call
2098		5117<5085	O02 TO U04	*Call
2098		5117<5086	O03 TO U04	*Call
2098		5117<5087	O04 TO U04	*Call
2098		5117<5088	O05 TO U04	*Call
2098		5117<5089	P01 TO U04	*Call
2098		5117<5090	P02 TO U04	*Call
2098		5117<5091	P03 TO U04	*Call
2098		5117<5092	P04 TO U04	*Call
2098		5117<5093	P05 TO U04	*Call
2098		5117<5094	Q01 TO U04	*Call
2098		5117<5095	Q02 TO U04	*Call
2098		5117<5096	Q03 TO U04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5117<5097	Q04 TO U04	*Call
2098		5117<5098	Q05 TO U04	*Call
2098		5117<5099	R01 TO U04	*Call
2098		5117<5100	R02 TO U04	*Call
2098		5117<5101	R03 TO U04	*Call
2098		5117<5102	R04 TO U04	*Call
2098		5117<5103	R05 TO U04	*Call
2098		5117<5104	S01 TO U04	*Call
2098		5117<5105	S02 TO U04	*Call
2098		5117<5106	S03 TO U04	*Call
2098		5117<5107	S04 TO U04	*Call
2098		5117<5108	S05 TO U04	*Call
2098		5117<5109	T01 TO U04	*Call
2098		5117<5110	T02 TO U04	*Call
2098		5117<5111	T03 TO U04	*Call
2098		5117<5112	T04 TO U04	*Call
2098		5117<5113	T05 TO U04	*Call
2098		5117<5114	U01 TO U04	*Call
2098		5117<5115	U02 TO U04	*Call
2098		5117<5116	U03 TO U04	*Call
2098		5117<5118	U05 TO U04	*Call
2098		5117<5119	V01 TO U04	*Call
2098		5117<5120	V02 TO U04	*Call
2098		5117<5121	V03 TO U04	*Call
2098		5117<5122	V04 TO U04	*Call
2098		5117<5123	V05 TO U04	*Call
2098		5117<5124	W01 TO U04	*Call
2098		5117<5125	W02 TO U04	*Call
2098		5117<5126	W03 TO U04	*Call
2098		5117<5127	W04 TO U04	*Call
2098		5117<5128	W05 TO U04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5117<5129	X01 TO U04	*Call
2098		5117<5130	X02 TO U04	*Call
2098		5117<5131	X03 TO U04	*Call
2098		5117<5132	X04 TO U04	*Call
2098		5117<5133	X05 TO U04	*Call
2098		5117<5134	Y01 TO U04	*Call
2098		5117<5135	Y02 TO U04	*Call
2098		5117<5136	Y03 TO U04	*Call
2098		5117<5137	Y04 TO U04	*Call
2098		5117<5138	Y05 TO U04	*Call
2098		5117<5139	Z01 TO U04	*Call
2098		5117<5140	Z02 TO U04	*Call
2098		5117<5141	Z03 TO U04	*Call
2098		5117<5142	Z04 TO U04	*Call
2098		5117<5143	Z05 TO U04	*Call
2098		5118<5013	A00 TO U05	*Call
2098		5118<5014	A01 TO U05	*Call
2098		5118<5015	A02 TO U05	*Call
2098		5118<5016	A03 TO U05	*Call
2098		5118<5017	A04 TO U05	*Call
2098		5118<5018	A05 TO U05	*Call
2098		5118<5019	B01 TO U05	*Call
2098		5118<5020	B02 TO U05	*Call
2098		5118<5021	B03 TO U05	*Call
2098		5118<5022	B04 TO U05	*Call
2098		5118<5023	B05 TO U05	*Call
2098		5118<5024	C01 TO U05	*Call
2098		5118<5025	C02 TO U05	*Call
2098		5118<5026	C03 TO U05	*Call
2098		5118<5027	C04 TO U05	*Call
2098		5118<5028	C05 TO U05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5118<5029	D01 TO U05	*Call
2098		5118<5030	D02 TO U05	*Call
2098		5118<5031	D03 TO U05	*Call
2098		5118<5032	D04 TO U05	*Call
2098		5118<5033	D05 TO U05	*Call
2098		5118<5034	E01 TO U05	*Call
2098		5118<5035	E02 TO U05	*Call
2098		5118<5036	E03 TO U05	*Call
2098		5118<5037	E04 TO U05	*Call
2098		5118<5038	E05 TO U05	*Call
2098		5118<5039	F01 TO U05	*Call
2098		5118<5040	F02 TO U05	*Call
2098		5118<5041	F03 TO U05	*Call
2098		5118<5042	F04 TO U05	*Call
2098		5118<5043	F05 TO U05	*Call
2098		5118<5044	G01 TO U05	*Call
2098		5118<5045	G02 TO U05	*Call
2098		5118<5046	G03 TO U05	*Call
2098		5118<5047	G04 TO U05	*Call
2098		5118<5048	G05 TO U05	*Call
2098		5118<5049	H01 TO U05	*Call
2098		5118<5050	H02 TO U05	*Call
2098		5118<5051	H03 TO U05	*Call
2098		5118<5052	H04 TO U05	*Call
2098		5118<5053	H05 TO U05	*Call
2098		5118<5054	I01 TO U05	*Call
2098		5118<5055	I02 TO U05	*Call
2098		5118<5056	I03 TO U05	*Call
2098		5118<5057	I04 TO U05	*Call
2098		5118<5058	I05 TO U05	*Call
2098		5118<5059	J01 TO U05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5118<5060	J02 TO U05	*Call
2098		5118<5061	J03 TO U05	*Call
2098		5118<5062	J04 TO U05	*Call
2098		5118<5063	J05 TO U05	*Call
2098		5118<5064	K01 TO U05	*Call
2098		5118<5065	K02 TO U05	*Call
2098		5118<5066	K03 TO U05	*Call
2098		5118<5067	K04 TO U05	*Call
2098		5118<5068	K05 TO U05	*Call
2098		5118<5069	L01 TO U05	*Call
2098		5118<5070	L02 TO U05	*Call
2098		5118<5071	L03 TO U05	*Call
2098		5118<5072	L04 TO U05	*Call
2098		5118<5073	L05 TO U05	*Call
2098		5118<5074	M01 TO U05	*Call
2098		5118<5075	M02 TO U05	*Call
2098		5118<5076	M03 TO U05	*Call
2098		5118<5077	M04 TO U05	*Call
2098		5118<5078	M05 TO U05	*Call
2098		5118<5079	N01 TO U05	*Call
2098		5118<5080	N02 TO U05	*Call
2098		5118<5081	N03 TO U05	*Call
2098		5118<5082	N04 TO U05	*Call
2098		5118<5083	N05 TO U05	*Call
2098		5118<5084	O01 TO U05	*Call
2098		5118<5085	O02 TO U05	*Call
2098		5118<5086	O03 TO U05	*Call
2098		5118<5087	O04 TO U05	*Call
2098		5118<5088	O05 TO U05	*Call
2098		5118<5089	P01 TO U05	*Call
2098		5118<5090	P02 TO U05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5118<5091	P03 TO U05	*Call
2098		5118<5092	P04 TO U05	*Call
2098		5118<5093	P05 TO U05	*Call
2098		5118<5094	Q01 TO U05	*Call
2098		5118<5095	Q02 TO U05	*Call
2098		5118<5096	Q03 TO U05	*Call
2098		5118<5097	Q04 TO U05	*Call
2098		5118<5098	Q05 TO U05	*Call
2098		5118<5099	R01 TO U05	*Call
2098		5118<5100	R02 TO U05	*Call
2098		5118<5101	R03 TO U05	*Call
2098		5118<5102	R04 TO U05	*Call
2098		5118<5103	R05 TO U05	*Call
2098		5118<5104	S01 TO U05	*Call
2098		5118<5105	S02 TO U05	*Call
2098		5118<5106	S03 TO U05	*Call
2098		5118<5107	S04 TO U05	*Call
2098		5118<5108	S05 TO U05	*Call
2098		5118<5109	T01 TO U05	*Call
2098		5118<5110	T02 TO U05	*Call
2098		5118<5111	T03 TO U05	*Call
2098		5118<5112	T04 TO U05	*Call
2098		5118<5113	T05 TO U05	*Call
2098		5118<5114	U01 TO U05	*Call
2098		5118<5115	U02 TO U05	*Call
2098		5118<5116	U03 TO U05	*Call
2098		5118<5117	U04 TO U05	*Call
2098		5118<5119	V01 TO U05	*Call
2098		5118<5120	V02 TO U05	*Call
2098		5118<5121	V03 TO U05	*Call
2098		5118<5122	V04 TO U05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5118<5123	V05 TO U05	*Call
2098		5118<5124	W01 TO U05	*Call
2098		5118<5125	W02 TO U05	*Call
2098		5118<5126	W03 TO U05	*Call
2098		5118<5127	W04 TO U05	*Call
2098		5118<5128	W05 TO U05	*Call
2098		5118<5129	X01 TO U05	*Call
2098		5118<5130	X02 TO U05	*Call
2098		5118<5131	X03 TO U05	*Call
2098		5118<5132	X04 TO U05	*Call
2098		5118<5133	X05 TO U05	*Call
2098		5118<5134	Y01 TO U05	*Call
2098		5118<5135	Y02 TO U05	*Call
2098		5118<5136	Y03 TO U05	*Call
2098		5118<5137	Y04 TO U05	*Call
2098		5118<5138	Y05 TO U05	*Call
2098		5118<5139	Z01 TO U05	*Call
2098		5118<5140	Z02 TO U05	*Call
2098		5118<5141	Z03 TO U05	*Call
2098		5118<5142	Z04 TO U05	*Call
2098		5118<5143	Z05 TO U05	*Call
2098		5119<5013	A00 TO V01	*Call
2098		5119<5014	A01 TO V01	*Call
2098		5119<5015	A02 TO V01	*Call
2098		5119<5016	A03 TO V01	*Call
2098		5119<5017	A04 TO V01	*Call
2098		5119<5018	A05 TO V01	*Call
2098		5119<5019	B01 TO V01	*Call
2098		5119<5020	B02 TO V01	*Call
2098		5119<5021	B03 TO V01	*Call
2098		5119<5022	B04 TO V01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5119<5023	B05 TO V01	*Call
2098		5119<5024	C01 TO V01	*Call
2098		5119<5025	C02 TO V01	*Call
2098		5119<5026	C03 TO V01	*Call
2098		5119<5027	C04 TO V01	*Call
2098		5119<5028	C05 TO V01	*Call
2098		5119<5029	D01 TO V01	*Call
2098		5119<5030	D02 TO V01	*Call
2098		5119<5031	D03 TO V01	*Call
2098		5119<5032	D04 TO V01	*Call
2098		5119<5033	D05 TO V01	*Call
2098		5119<5034	E01 TO V01	*Call
2098		5119<5035	E02 TO V01	*Call
2098		5119<5036	E03 TO V01	*Call
2098		5119<5037	E04 TO V01	*Call
2098		5119<5038	E05 TO V01	*Call
2098		5119<5039	F01 TO V01	*Call
2098		5119<5040	F02 TO V01	*Call
2098		5119<5041	F03 TO V01	*Call
2098		5119<5042	F04 TO V01	*Call
2098		5119<5043	F05 TO V01	*Call
2098		5119<5044	G01 TO V01	*Call
2098		5119<5045	G02 TO V01	*Call
2098		5119<5046	G03 TO V01	*Call
2098		5119<5047	G04 TO V01	*Call
2098		5119<5048	G05 TO V01	*Call
2098		5119<5049	H01 TO V01	*Call
2098		5119<5050	H02 TO V01	*Call
2098		5119<5051	H03 TO V01	*Call
2098		5119<5052	H04 TO V01	*Call
2098		5119<5053	H05 TO V01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5119<5054	I01 TO V01	*Call
2098		5119<5055	I02 TO V01	*Call
2098		5119<5056	I03 TO V01	*Call
2098		5119<5057	I04 TO V01	*Call
2098		5119<5058	I05 TO V01	*Call
2098		5119<5059	J01 TO V01	*Call
2098		5119<5060	J02 TO V01	*Call
2098		5119<5061	J03 TO V01	*Call
2098		5119<5062	J04 TO V01	*Call
2098		5119<5063	J05 TO V01	*Call
2098		5119<5064	K01 TO V01	*Call
2098		5119<5065	K02 TO V01	*Call
2098		5119<5066	K03 TO V01	*Call
2098		5119<5067	K04 TO V01	*Call
2098		5119<5068	K05 TO V01	*Call
2098		5119<5069	L01 TO V01	*Call
2098		5119<5070	L02 TO V01	*Call
2098		5119<5071	L03 TO V01	*Call
2098		5119<5072	L04 TO V01	*Call
2098		5119<5073	L05 TO V01	*Call
2098		5119<5074	M01 TO V01	*Call
2098		5119<5075	M02 TO V01	*Call
2098		5119<5076	M03 TO V01	*Call
2098		5119<5077	M04 TO V01	*Call
2098		5119<5078	M05 TO V01	*Call
2098		5119<5079	N01 TO V01	*Call
2098		5119<5080	N02 TO V01	*Call
2098		5119<5081	N03 TO V01	*Call
2098		5119<5082	N04 TO V01	*Call
2098		5119<5083	N05 TO V01	*Call
2098		5119<5084	O01 TO V01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5119<5085	O02 TO V01	*Call
2098		5119<5086	O03 TO V01	*Call
2098		5119<5087	O04 TO V01	*Call
2098		5119<5088	O05 TO V01	*Call
2098		5119<5089	P01 TO V01	*Call
2098		5119<5090	P02 TO V01	*Call
2098		5119<5091	P03 TO V01	*Call
2098		5119<5092	P04 TO V01	*Call
2098		5119<5093	P05 TO V01	*Call
2098		5119<5094	Q01 TO V01	*Call
2098		5119<5095	Q02 TO V01	*Call
2098		5119<5096	Q03 TO V01	*Call
2098		5119<5097	Q04 TO V01	*Call
2098		5119<5098	Q05 TO V01	*Call
2098		5119<5099	R01 TO V01	*Call
2098		5119<5100	R02 TO V01	*Call
2098		5119<5101	R03 TO V01	*Call
2098		5119<5102	R04 TO V01	*Call
2098		5119<5103	R05 TO V01	*Call
2098		5119<5104	S01 TO V01	*Call
2098		5119<5105	S02 TO V01	*Call
2098		5119<5106	S03 TO V01	*Call
2098		5119<5107	S04 TO V01	*Call
2098		5119<5108	S05 TO V01	*Call
2098		5119<5109	T01 TO V01	*Call
2098		5119<5110	T02 TO V01	*Call
2098		5119<5111	T03 TO V01	*Call
2098		5119<5112	T04 TO V01	*Call
2098		5119<5113	T05 TO V01	*Call
2098		5119<5114	U01 TO V01	*Call
2098		5119<5115	U02 TO V01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5119<5116	U03 TO V01	*Call
2098		5119<5117	U04 TO V01	*Call
2098		5119<5118	U05 TO V01	*Call
2098		5119<5120	V02 TO V01	*Call
2098		5119<5121	V03 TO V01	*Call
2098		5119<5122	V04 TO V01	*Call
2098		5119<5123	V05 TO V01	*Call
2098		5119<5124	W01 TO V01	*Call
2098		5119<5125	W02 TO V01	*Call
2098		5119<5126	W03 TO V01	*Call
2098		5119<5127	W04 TO V01	*Call
2098		5119<5128	W05 TO V01	*Call
2098		5119<5129	X01 TO V01	*Call
2098		5119<5130	X02 TO V01	*Call
2098		5119<5131	X03 TO V01	*Call
2098		5119<5132	X04 TO V01	*Call
2098		5119<5133	X05 TO V01	*Call
2098		5119<5134	Y01 TO V01	*Call
2098		5119<5135	Y02 TO V01	*Call
2098		5119<5136	Y03 TO V01	*Call
2098		5119<5137	Y04 TO V01	*Call
2098		5119<5138	Y05 TO V01	*Call
2098		5119<5139	Z01 TO V01	*Call
2098		5119<5140	Z02 TO V01	*Call
2098		5119<5141	Z03 TO V01	*Call
2098		5119<5142	Z04 TO V01	*Call
2098		5119<5143	Z05 TO V01	*Call
2098		5120<5013	A00 TO V02	*Call
2098		5120<5014	A01 TO V02	*Call
2098		5120<5015	A02 TO V02	*Call
2098		5120<5016	A03 TO V02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5120<5017	A04 TO V02	*Call
2098		5120<5018	A05 TO V02	*Call
2098		5120<5019	B01 TO V02	*Call
2098		5120<5020	B02 TO V02	*Call
2098		5120<5021	B03 TO V02	*Call
2098		5120<5022	B04 TO V02	*Call
2098		5120<5023	B05 TO V02	*Call
2098		5120<5024	C01 TO V02	*Call
2098		5120<5025	C02 TO V02	*Call
2098		5120<5026	C03 TO V02	*Call
2098		5120<5027	C04 TO V02	*Call
2098		5120<5028	C05 TO V02	*Call
2098		5120<5029	D01 TO V02	*Call
2098		5120<5030	D02 TO V02	*Call
2098		5120<5031	D03 TO V02	*Call
2098		5120<5032	D04 TO V02	*Call
2098		5120<5033	D05 TO V02	*Call
2098		5120<5034	E01 TO V02	*Call
2098		5120<5035	E02 TO V02	*Call
2098		5120<5036	E03 TO V02	*Call
2098		5120<5037	E04 TO V02	*Call
2098		5120<5038	E05 TO V02	*Call
2098		5120<5039	F01 TO V02	*Call
2098		5120<5040	F02 TO V02	*Call
2098		5120<5041	F03 TO V02	*Call
2098		5120<5042	F04 TO V02	*Call
2098		5120<5043	F05 TO V02	*Call
2098		5120<5044	G01 TO V02	*Call
2098		5120<5045	G02 TO V02	*Call
2098		5120<5046	G03 TO V02	*Call
2098		5120<5047	G04 TO V02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5120<5048	G05 TO V02	*Call
2098		5120<5049	H01 TO V02	*Call
2098		5120<5050	H02 TO V02	*Call
2098		5120<5051	H03 TO V02	*Call
2098		5120<5052	H04 TO V02	*Call
2098		5120<5053	H05 TO V02	*Call
2098		5120<5054	I01 TO V02	*Call
2098		5120<5055	I02 TO V02	*Call
2098		5120<5056	I03 TO V02	*Call
2098		5120<5057	I04 TO V02	*Call
2098		5120<5058	I05 TO V02	*Call
2098		5120<5059	J01 TO V02	*Call
2098		5120<5060	J02 TO V02	*Call
2098		5120<5061	J03 TO V02	*Call
2098		5120<5062	J04 TO V02	*Call
2098		5120<5063	J05 TO V02	*Call
2098		5120<5064	K01 TO V02	*Call
2098		5120<5065	K02 TO V02	*Call
2098		5120<5066	K03 TO V02	*Call
2098		5120<5067	K04 TO V02	*Call
2098		5120<5068	K05 TO V02	*Call
2098		5120<5069	L01 TO V02	*Call
2098		5120<5070	L02 TO V02	*Call
2098		5120<5071	L03 TO V02	*Call
2098		5120<5072	L04 TO V02	*Call
2098		5120<5073	L05 TO V02	*Call
2098		5120<5074	M01 TO V02	*Call
2098		5120<5075	M02 TO V02	*Call
2098		5120<5076	M03 TO V02	*Call
2098		5120<5077	M04 TO V02	*Call
2098		5120<5078	M05 TO V02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5120<5079	N01 TO V02	*Call
2098		5120<5080	N02 TO V02	*Call
2098		5120<5081	N03 TO V02	*Call
2098		5120<5082	N04 TO V02	*Call
2098		5120<5083	N05 TO V02	*Call
2098		5120<5084	O01 TO V02	*Call
2098		5120<5085	O02 TO V02	*Call
2098		5120<5086	O03 TO V02	*Call
2098		5120<5087	O04 TO V02	*Call
2098		5120<5088	O05 TO V02	*Call
2098		5120<5089	P01 TO V02	*Call
2098		5120<5090	P02 TO V02	*Call
2098		5120<5091	P03 TO V02	*Call
2098		5120<5092	P04 TO V02	*Call
2098		5120<5093	P05 TO V02	*Call
2098		5120<5094	Q01 TO V02	*Call
2098		5120<5095	Q02 TO V02	*Call
2098		5120<5096	Q03 TO V02	*Call
2098		5120<5097	Q04 TO V02	*Call
2098		5120<5098	Q05 TO V02	*Call
2098		5120<5099	R01 TO V02	*Call
2098		5120<5100	R02 TO V02	*Call
2098		5120<5101	R03 TO V02	*Call
2098		5120<5102	R04 TO V02	*Call
2098		5120<5103	R05 TO V02	*Call
2098		5120<5104	S01 TO V02	*Call
2098		5120<5105	S02 TO V02	*Call
2098		5120<5106	S03 TO V02	*Call
2098		5120<5107	S04 TO V02	*Call
2098		5120<5108	S05 TO V02	*Call
2098		5120<5109	T01 TO V02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5120<5110	T02 TO V02	*Call
2098		5120<5111	T03 TO V02	*Call
2098		5120<5112	T04 TO V02	*Call
2098		5120<5113	T05 TO V02	*Call
2098		5120<5114	U01 TO V02	*Call
2098		5120<5115	U02 TO V02	*Call
2098		5120<5116	U03 TO V02	*Call
2098		5120<5117	U04 TO V02	*Call
2098		5120<5118	U05 TO V02	*Call
2098		5120<5119	V01 TO V02	*Call
2098		5120<5121	V03 TO V02	*Call
2098		5120<5122	V04 TO V02	*Call
2098		5120<5123	V05 TO V02	*Call
2098		5120<5124	W01 TO V02	*Call
2098		5120<5125	W02 TO V02	*Call
2098		5120<5126	W03 TO V02	*Call
2098		5120<5127	W04 TO V02	*Call
2098		5120<5128	W05 TO V02	*Call
2098		5120<5129	X01 TO V02	*Call
2098		5120<5130	X02 TO V02	*Call
2098		5120<5131	X03 TO V02	*Call
2098		5120<5132	X04 TO V02	*Call
2098		5120<5133	X05 TO V02	*Call
2098		5120<5134	Y01 TO V02	*Call
2098		5120<5135	Y02 TO V02	*Call
2098		5120<5136	Y03 TO V02	*Call
2098		5120<5137	Y04 TO V02	*Call
2098		5120<5138	Y05 TO V02	*Call
2098		5120<5139	Z01 TO V02	*Call
2098		5120<5140	Z02 TO V02	*Call
2098		5120<5141	Z03 TO V02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5120<5142	Z04 TO V02	*Call
2098		5120<5143	Z05 TO V02	*Call
2098		5121<5013	A00 TO V03	*Call
2098		5121<5014	A01 TO V03	*Call
2098		5121<5015	A02 TO V03	*Call
2098		5121<5016	A03 TO V03	*Call
2098		5121<5017	A04 TO V03	*Call
2098		5121<5018	A05 TO V03	*Call
2098		5121<5019	B01 TO V03	*Call
2098		5121<5020	B02 TO V03	*Call
2098		5121<5021	B03 TO V03	*Call
2098		5121<5022	B04 TO V03	*Call
2098		5121<5023	B05 TO V03	*Call
2098		5121<5024	C01 TO V03	*Call
2098		5121<5025	C02 TO V03	*Call
2098		5121<5026	C03 TO V03	*Call
2098		5121<5027	C04 TO V03	*Call
2098		5121<5028	C05 TO V03	*Call
2098		5121<5029	D01 TO V03	*Call
2098		5121<5030	D02 TO V03	*Call
2098		5121<5031	D03 TO V03	*Call
2098		5121<5032	D04 TO V03	*Call
2098		5121<5033	D05 TO V03	*Call
2098		5121<5034	E01 TO V03	*Call
2098		5121<5035	E02 TO V03	*Call
2098		5121<5036	E03 TO V03	*Call
2098		5121<5037	E04 TO V03	*Call
2098		5121<5038	E05 TO V03	*Call
2098		5121<5039	F01 TO V03	*Call
2098		5121<5040	F02 TO V03	*Call
2098		5121<5041	F03 TO V03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5121<5042	F04 TO V03	*Call
2098		5121<5043	F05 TO V03	*Call
2098		5121<5044	G01 TO V03	*Call
2098		5121<5045	G02 TO V03	*Call
2098		5121<5046	G03 TO V03	*Call
2098		5121<5047	G04 TO V03	*Call
2098		5121<5048	G05 TO V03	*Call
2098		5121<5049	H01 TO V03	*Call
2098		5121<5050	H02 TO V03	*Call
2098		5121<5051	H03 TO V03	*Call
2098		5121<5052	H04 TO V03	*Call
2098		5121<5053	H05 TO V03	*Call
2098		5121<5054	I01 TO V03	*Call
2098		5121<5055	I02 TO V03	*Call
2098		5121<5056	I03 TO V03	*Call
2098		5121<5057	I04 TO V03	*Call
2098		5121<5058	I05 TO V03	*Call
2098		5121<5059	J01 TO V03	*Call
2098		5121<5060	J02 TO V03	*Call
2098		5121<5061	J03 TO V03	*Call
2098		5121<5062	J04 TO V03	*Call
2098		5121<5063	J05 TO V03	*Call
2098		5121<5064	K01 TO V03	*Call
2098		5121<5065	K02 TO V03	*Call
2098		5121<5066	K03 TO V03	*Call
2098		5121<5067	K04 TO V03	*Call
2098		5121<5068	K05 TO V03	*Call
2098		5121<5069	L01 TO V03	*Call
2098		5121<5070	L02 TO V03	*Call
2098		5121<5071	L03 TO V03	*Call
2098		5121<5072	L04 TO V03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5121<5073	L05 TO V03	*Call
2098		5121<5074	M01 TO V03	*Call
2098		5121<5075	M02 TO V03	*Call
2098		5121<5076	M03 TO V03	*Call
2098		5121<5077	M04 TO V03	*Call
2098		5121<5078	M05 TO V03	*Call
2098		5121<5079	N01 TO V03	*Call
2098		5121<5080	N02 TO V03	*Call
2098		5121<5081	N03 TO V03	*Call
2098		5121<5082	N04 TO V03	*Call
2098		5121<5083	N05 TO V03	*Call
2098		5121<5084	O01 TO V03	*Call
2098		5121<5085	O02 TO V03	*Call
2098		5121<5086	O03 TO V03	*Call
2098		5121<5087	O04 TO V03	*Call
2098		5121<5088	O05 TO V03	*Call
2098		5121<5089	P01 TO V03	*Call
2098		5121<5090	P02 TO V03	*Call
2098		5121<5091	P03 TO V03	*Call
2098		5121<5092	P04 TO V03	*Call
2098		5121<5093	P05 TO V03	*Call
2098		5121<5094	Q01 TO V03	*Call
2098		5121<5095	Q02 TO V03	*Call
2098		5121<5096	Q03 TO V03	*Call
2098		5121<5097	Q04 TO V03	*Call
2098		5121<5098	Q05 TO V03	*Call
2098		5121<5099	R01 TO V03	*Call
2098		5121<5100	R02 TO V03	*Call
2098		5121<5101	R03 TO V03	*Call
2098		5121<5102	R04 TO V03	*Call
2098		5121<5103	R05 TO V03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5121<5104	S01 TO V03	*Call
2098		5121<5105	S02 TO V03	*Call
2098		5121<5106	S03 TO V03	*Call
2098		5121<5107	S04 TO V03	*Call
2098		5121<5108	S05 TO V03	*Call
2098		5121<5109	T01 TO V03	*Call
2098		5121<5110	T02 TO V03	*Call
2098		5121<5111	T03 TO V03	*Call
2098		5121<5112	T04 TO V03	*Call
2098		5121<5113	T05 TO V03	*Call
2098		5121<5114	U01 TO V03	*Call
2098		5121<5115	U02 TO V03	*Call
2098		5121<5116	U03 TO V03	*Call
2098		5121<5117	U04 TO V03	*Call
2098		5121<5118	U05 TO V03	*Call
2098		5121<5119	V01 TO V03	*Call
2098		5121<5120	V02 TO V03	*Call
2098		5121<5122	V04 TO V03	*Call
2098		5121<5123	V05 TO V03	*Call
2098		5121<5124	W01 TO V03	*Call
2098		5121<5125	W02 TO V03	*Call
2098		5121<5126	W03 TO V03	*Call
2098		5121<5127	W04 TO V03	*Call
2098		5121<5128	W05 TO V03	*Call
2098		5121<5129	X01 TO V03	*Call
2098		5121<5130	X02 TO V03	*Call
2098		5121<5131	X03 TO V03	*Call
2098		5121<5132	X04 TO V03	*Call
2098		5121<5133	X05 TO V03	*Call
2098		5121<5134	Y01 TO V03	*Call
2098		5121<5135	Y02 TO V03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5121<5136	Y03 TO V03	*Call
2098		5121<5137	Y04 TO V03	*Call
2098		5121<5138	Y05 TO V03	*Call
2098		5121<5139	Z01 TO V03	*Call
2098		5121<5140	Z02 TO V03	*Call
2098		5121<5141	Z03 TO V03	*Call
2098		5121<5142	Z04 TO V03	*Call
2098		5121<5143	Z05 TO V03	*Call
2098		5122<5013	A00 TO V04	*Call
2098		5122<5014	A01 TO V04	*Call
2098		5122<5015	A02 TO V04	*Call
2098		5122<5016	A03 TO V04	*Call
2098		5122<5017	A04 TO V04	*Call
2098		5122<5018	A05 TO V04	*Call
2098		5122<5019	B01 TO V04	*Call
2098		5122<5020	B02 TO V04	*Call
2098		5122<5021	B03 TO V04	*Call
2098		5122<5022	B04 TO V04	*Call
2098		5122<5023	B05 TO V04	*Call
2098		5122<5024	C01 TO V04	*Call
2098		5122<5025	C02 TO V04	*Call
2098		5122<5026	C03 TO V04	*Call
2098		5122<5027	C04 TO V04	*Call
2098		5122<5028	C05 TO V04	*Call
2098		5122<5029	D01 TO V04	*Call
2098		5122<5030	D02 TO V04	*Call
2098		5122<5031	D03 TO V04	*Call
2098		5122<5032	D04 TO V04	*Call
2098		5122<5033	D05 TO V04	*Call
2098		5122<5034	E01 TO V04	*Call
2098		5122<5035	E02 TO V04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5122<5036	E03 TO V04	*Call
2098		5122<5037	E04 TO V04	*Call
2098		5122<5038	E05 TO V04	*Call
2098		5122<5039	F01 TO V04	*Call
2098		5122<5040	F02 TO V04	*Call
2098		5122<5041	F03 TO V04	*Call
2098		5122<5042	F04 TO V04	*Call
2098		5122<5043	F05 TO V04	*Call
2098		5122<5044	G01 TO V04	*Call
2098		5122<5045	G02 TO V04	*Call
2098		5122<5046	G03 TO V04	*Call
2098		5122<5047	G04 TO V04	*Call
2098		5122<5048	G05 TO V04	*Call
2098		5122<5049	H01 TO V04	*Call
2098		5122<5050	H02 TO V04	*Call
2098		5122<5051	H03 TO V04	*Call
2098		5122<5052	H04 TO V04	*Call
2098		5122<5053	H05 TO V04	*Call
2098		5122<5054	I01 TO V04	*Call
2098		5122<5055	I02 TO V04	*Call
2098		5122<5056	I03 TO V04	*Call
2098		5122<5057	I04 TO V04	*Call
2098		5122<5058	I05 TO V04	*Call
2098		5122<5059	J01 TO V04	*Call
2098		5122<5060	J02 TO V04	*Call
2098		5122<5061	J03 TO V04	*Call
2098		5122<5062	J04 TO V04	*Call
2098		5122<5063	J05 TO V04	*Call
2098		5122<5064	K01 TO V04	*Call
2098		5122<5065	K02 TO V04	*Call
2098		5122<5066	K03 TO V04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5122<5067	K04 TO V04	*Call
2098		5122<5068	K05 TO V04	*Call
2098		5122<5069	L01 TO V04	*Call
2098		5122<5070	L02 TO V04	*Call
2098		5122<5071	L03 TO V04	*Call
2098		5122<5072	L04 TO V04	*Call
2098		5122<5073	L05 TO V04	*Call
2098		5122<5074	M01 TO V04	*Call
2098		5122<5075	M02 TO V04	*Call
2098		5122<5076	M03 TO V04	*Call
2098		5122<5077	M04 TO V04	*Call
2098		5122<5078	M05 TO V04	*Call
2098		5122<5079	N01 TO V04	*Call
2098		5122<5080	N02 TO V04	*Call
2098		5122<5081	N03 TO V04	*Call
2098		5122<5082	N04 TO V04	*Call
2098		5122<5083	N05 TO V04	*Call
2098		5122<5084	O01 TO V04	*Call
2098		5122<5085	O02 TO V04	*Call
2098		5122<5086	O03 TO V04	*Call
2098		5122<5087	O04 TO V04	*Call
2098		5122<5088	O05 TO V04	*Call
2098		5122<5089	P01 TO V04	*Call
2098		5122<5090	P02 TO V04	*Call
2098		5122<5091	P03 TO V04	*Call
2098		5122<5092	P04 TO V04	*Call
2098		5122<5093	P05 TO V04	*Call
2098		5122<5094	Q01 TO V04	*Call
2098		5122<5095	Q02 TO V04	*Call
2098		5122<5096	Q03 TO V04	*Call
2098		5122<5097	Q04 TO V04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5122<5098	Q05 TO V04	*Call
2098		5122<5099	R01 TO V04	*Call
2098		5122<5100	R02 TO V04	*Call
2098		5122<5101	R03 TO V04	*Call
2098		5122<5102	R04 TO V04	*Call
2098		5122<5103	R05 TO V04	*Call
2098		5122<5104	S01 TO V04	*Call
2098		5122<5105	S02 TO V04	*Call
2098		5122<5106	S03 TO V04	*Call
2098		5122<5107	S04 TO V04	*Call
2098		5122<5108	S05 TO V04	*Call
2098		5122<5109	T01 TO V04	*Call
2098		5122<5110	T02 TO V04	*Call
2098		5122<5111	T03 TO V04	*Call
2098		5122<5112	T04 TO V04	*Call
2098		5122<5113	T05 TO V04	*Call
2098		5122<5114	U01 TO V04	*Call
2098		5122<5115	U02 TO V04	*Call
2098		5122<5116	U03 TO V04	*Call
2098		5122<5117	U04 TO V04	*Call
2098		5122<5118	U05 TO V04	*Call
2098		5122<5119	V01 TO V04	*Call
2098		5122<5120	V02 TO V04	*Call
2098		5122<5121	V03 TO V04	*Call
2098		5122<5123	V05 TO V04	*Call
2098		5122<5124	W01 TO V04	*Call
2098		5122<5125	W02 TO V04	*Call
2098		5122<5126	W03 TO V04	*Call
2098		5122<5127	W04 TO V04	*Call
2098		5122<5128	W05 TO V04	*Call
2098		5122<5129	X01 TO V04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5122<5130	X02 TO V04	*Call
2098		5122<5131	X03 TO V04	*Call
2098		5122<5132	X04 TO V04	*Call
2098		5122<5133	X05 TO V04	*Call
2098		5122<5134	Y01 TO V04	*Call
2098		5122<5135	Y02 TO V04	*Call
2098		5122<5136	Y03 TO V04	*Call
2098		5122<5137	Y04 TO V04	*Call
2098		5122<5138	Y05 TO V04	*Call
2098		5122<5139	Z01 TO V04	*Call
2098		5122<5140	Z02 TO V04	*Call
2098		5122<5141	Z03 TO V04	*Call
2098		5122<5142	Z04 TO V04	*Call
2098		5122<5143	Z05 TO V04	*Call
2098		5123<5013	A00 TO V05	*Call
2098		5123<5014	A01 TO V05	*Call
2098		5123<5015	A02 TO V05	*Call
2098		5123<5016	A03 TO V05	*Call
2098		5123<5017	A04 TO V05	*Call
2098		5123<5018	A05 TO V05	*Call
2098		5123<5019	B01 TO V05	*Call
2098		5123<5020	B02 TO V05	*Call
2098		5123<5021	B03 TO V05	*Call
2098		5123<5022	B04 TO V05	*Call
2098		5123<5023	B05 TO V05	*Call
2098		5123<5024	C01 TO V05	*Call
2098		5123<5025	C02 TO V05	*Call
2098		5123<5026	C03 TO V05	*Call
2098		5123<5027	C04 TO V05	*Call
2098		5123<5028	C05 TO V05	*Call
2098		5123<5029	D01 TO V05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5123<5030	D02 TO V05	*Call
2098		5123<5031	D03 TO V05	*Call
2098		5123<5032	D04 TO V05	*Call
2098		5123<5033	D05 TO V05	*Call
2098		5123<5034	E01 TO V05	*Call
2098		5123<5035	E02 TO V05	*Call
2098		5123<5036	E03 TO V05	*Call
2098		5123<5037	E04 TO V05	*Call
2098		5123<5038	E05 TO V05	*Call
2098		5123<5039	F01 TO V05	*Call
2098		5123<5040	F02 TO V05	*Call
2098		5123<5041	F03 TO V05	*Call
2098		5123<5042	F04 TO V05	*Call
2098		5123<5043	F05 TO V05	*Call
2098		5123<5044	G01 TO V05	*Call
2098		5123<5045	G02 TO V05	*Call
2098		5123<5046	G03 TO V05	*Call
2098		5123<5047	G04 TO V05	*Call
2098		5123<5048	G05 TO V05	*Call
2098		5123<5049	H01 TO V05	*Call
2098		5123<5050	H02 TO V05	*Call
2098		5123<5051	H03 TO V05	*Call
2098		5123<5052	H04 TO V05	*Call
2098		5123<5053	H05 TO V05	*Call
2098		5123<5054	I01 TO V05	*Call
2098		5123<5055	I02 TO V05	*Call
2098		5123<5056	I03 TO V05	*Call
2098		5123<5057	I04 TO V05	*Call
2098		5123<5058	I05 TO V05	*Call
2098		5123<5059	J01 TO V05	*Call
2098		5123<5060	J02 TO V05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5123<5061	J03 TO V05	*Call
2098		5123<5062	J04 TO V05	*Call
2098		5123<5063	J05 TO V05	*Call
2098		5123<5064	K01 TO V05	*Call
2098		5123<5065	K02 TO V05	*Call
2098		5123<5066	K03 TO V05	*Call
2098		5123<5067	K04 TO V05	*Call
2098		5123<5068	K05 TO V05	*Call
2098		5123<5069	L01 TO V05	*Call
2098		5123<5070	L02 TO V05	*Call
2098		5123<5071	L03 TO V05	*Call
2098		5123<5072	L04 TO V05	*Call
2098		5123<5073	L05 TO V05	*Call
2098		5123<5074	M01 TO V05	*Call
2098		5123<5075	M02 TO V05	*Call
2098		5123<5076	M03 TO V05	*Call
2098		5123<5077	M04 TO V05	*Call
2098		5123<5078	M05 TO V05	*Call
2098		5123<5079	N01 TO V05	*Call
2098		5123<5080	N02 TO V05	*Call
2098		5123<5081	N03 TO V05	*Call
2098		5123<5082	N04 TO V05	*Call
2098		5123<5083	N05 TO V05	*Call
2098		5123<5084	O01 TO V05	*Call
2098		5123<5085	O02 TO V05	*Call
2098		5123<5086	O03 TO V05	*Call
2098		5123<5087	O04 TO V05	*Call
2098		5123<5088	O05 TO V05	*Call
2098		5123<5089	P01 TO V05	*Call
2098		5123<5090	P02 TO V05	*Call
2098		5123<5091	P03 TO V05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5123<5092	P04 TO V05	*Call
2098		5123<5093	P05 TO V05	*Call
2098		5123<5094	Q01 TO V05	*Call
2098		5123<5095	Q02 TO V05	*Call
2098		5123<5096	Q03 TO V05	*Call
2098		5123<5097	Q04 TO V05	*Call
2098		5123<5098	Q05 TO V05	*Call
2098		5123<5099	R01 TO V05	*Call
2098		5123<5100	R02 TO V05	*Call
2098		5123<5101	R03 TO V05	*Call
2098		5123<5102	R04 TO V05	*Call
2098		5123<5103	R05 TO V05	*Call
2098		5123<5104	S01 TO V05	*Call
2098		5123<5105	S02 TO V05	*Call
2098		5123<5106	S03 TO V05	*Call
2098		5123<5107	S04 TO V05	*Call
2098		5123<5108	S05 TO V05	*Call
2098		5123<5109	T01 TO V05	*Call
2098		5123<5110	T02 TO V05	*Call
2098		5123<5111	T03 TO V05	*Call
2098		5123<5112	T04 TO V05	*Call
2098		5123<5113	T05 TO V05	*Call
2098		5123<5114	U01 TO V05	*Call
2098		5123<5115	U02 TO V05	*Call
2098		5123<5116	U03 TO V05	*Call
2098		5123<5117	U04 TO V05	*Call
2098		5123<5118	U05 TO V05	*Call
2098		5123<5119	V01 TO V05	*Call
2098		5123<5120	V02 TO V05	*Call
2098		5123<5121	V03 TO V05	*Call
2098		5123<5122	V04 TO V05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5123<5124	W01 TO V05	*Call
2098		5123<5125	W02 TO V05	*Call
2098		5123<5126	W03 TO V05	*Call
2098		5123<5127	W04 TO V05	*Call
2098		5123<5128	W05 TO V05	*Call
2098		5123<5129	X01 TO V05	*Call
2098		5123<5130	X02 TO V05	*Call
2098		5123<5131	X03 TO V05	*Call
2098		5123<5132	X04 TO V05	*Call
2098		5123<5133	X05 TO V05	*Call
2098		5123<5134	Y01 TO V05	*Call
2098		5123<5135	Y02 TO V05	*Call
2098		5123<5136	Y03 TO V05	*Call
2098		5123<5137	Y04 TO V05	*Call
2098		5123<5138	Y05 TO V05	*Call
2098		5123<5139	Z01 TO V05	*Call
2098		5123<5140	Z02 TO V05	*Call
2098		5123<5141	Z03 TO V05	*Call
2098		5123<5142	Z04 TO V05	*Call
2098		5123<5143	Z05 TO V05	*Call
2098		5124<5013	A00 TO W01	*Call
2098		5124<5014	A01 TO W01	*Call
2098		5124<5015	A02 TO W01	*Call
2098		5124<5016	A03 TO W01	*Call
2098		5124<5017	A04 TO W01	*Call
2098		5124<5018	A05 TO W01	*Call
2098		5124<5019	B01 TO W01	*Call
2098		5124<5020	B02 TO W01	*Call
2098		5124<5021	B03 TO W01	*Call
2098		5124<5022	B04 TO W01	*Call
2098		5124<5023	B05 TO W01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5124<5024	C01 TO W01	*Call
2098		5124<5025	C02 TO W01	*Call
2098		5124<5026	C03 TO W01	*Call
2098		5124<5027	C04 TO W01	*Call
2098		5124<5028	C05 TO W01	*Call
2098		5124<5029	D01 TO W01	*Call
2098		5124<5030	D02 TO W01	*Call
2098		5124<5031	D03 TO W01	*Call
2098		5124<5032	D04 TO W01	*Call
2098		5124<5033	D05 TO W01	*Call
2098		5124<5034	E01 TO W01	*Call
2098		5124<5035	E02 TO W01	*Call
2098		5124<5036	E03 TO W01	*Call
2098		5124<5037	E04 TO W01	*Call
2098		5124<5038	E05 TO W01	*Call
2098		5124<5039	F01 TO W01	*Call
2098		5124<5040	F02 TO W01	*Call
2098		5124<5041	F03 TO W01	*Call
2098		5124<5042	F04 TO W01	*Call
2098		5124<5043	F05 TO W01	*Call
2098		5124<5044	G01 TO W01	*Call
2098		5124<5045	G02 TO W01	*Call
2098		5124<5046	G03 TO W01	*Call
2098		5124<5047	G04 TO W01	*Call
2098		5124<5048	G05 TO W01	*Call
2098		5124<5049	H01 TO W01	*Call
2098		5124<5050	H02 TO W01	*Call
2098		5124<5051	H03 TO W01	*Call
2098		5124<5052	H04 TO W01	*Call
2098		5124<5053	H05 TO W01	*Call
2098		5124<5054	I01 TO W01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5124<5055	I02 TO W01	*Call
2098		5124<5056	I03 TO W01	*Call
2098		5124<5057	I04 TO W01	*Call
2098		5124<5058	I05 TO W01	*Call
2098		5124<5059	J01 TO W01	*Call
2098		5124<5060	J02 TO W01	*Call
2098		5124<5061	J03 TO W01	*Call
2098		5124<5062	J04 TO W01	*Call
2098		5124<5063	J05 TO W01	*Call
2098		5124<5064	K01 TO W01	*Call
2098		5124<5065	K02 TO W01	*Call
2098		5124<5066	K03 TO W01	*Call
2098		5124<5067	K04 TO W01	*Call
2098		5124<5068	K05 TO W01	*Call
2098		5124<5069	L01 TO W01	*Call
2098		5124<5070	L02 TO W01	*Call
2098		5124<5071	L03 TO W01	*Call
2098		5124<5072	L04 TO W01	*Call
2098		5124<5073	L05 TO W01	*Call
2098		5124<5074	M01 TO W01	*Call
2098		5124<5075	M02 TO W01	*Call
2098		5124<5076	M03 TO W01	*Call
2098		5124<5077	M04 TO W01	*Call
2098		5124<5078	M05 TO W01	*Call
2098		5124<5079	N01 TO W01	*Call
2098		5124<5080	N02 TO W01	*Call
2098		5124<5081	N03 TO W01	*Call
2098		5124<5082	N04 TO W01	*Call
2098		5124<5083	N05 TO W01	*Call
2098		5124<5084	O01 TO W01	*Call
2098		5124<5085	O02 TO W01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5124<5086	O03 TO W01	*Call
2098		5124<5087	O04 TO W01	*Call
2098		5124<5088	O05 TO W01	*Call
2098		5124<5089	P01 TO W01	*Call
2098		5124<5090	P02 TO W01	*Call
2098		5124<5091	P03 TO W01	*Call
2098		5124<5092	P04 TO W01	*Call
2098		5124<5093	P05 TO W01	*Call
2098		5124<5094	Q01 TO W01	*Call
2098		5124<5095	Q02 TO W01	*Call
2098		5124<5096	Q03 TO W01	*Call
2098		5124<5097	Q04 TO W01	*Call
2098		5124<5098	Q05 TO W01	*Call
2098		5124<5099	R01 TO W01	*Call
2098		5124<5100	R02 TO W01	*Call
2098		5124<5101	R03 TO W01	*Call
2098		5124<5102	R04 TO W01	*Call
2098		5124<5103	R05 TO W01	*Call
2098		5124<5104	S01 TO W01	*Call
2098		5124<5105	S02 TO W01	*Call
2098		5124<5106	S03 TO W01	*Call
2098		5124<5107	S04 TO W01	*Call
2098		5124<5108	S05 TO W01	*Call
2098		5124<5109	T01 TO W01	*Call
2098		5124<5110	T02 TO W01	*Call
2098		5124<5111	T03 TO W01	*Call
2098		5124<5112	T04 TO W01	*Call
2098		5124<5113	T05 TO W01	*Call
2098		5124<5114	U01 TO W01	*Call
2098		5124<5115	U02 TO W01	*Call
2098		5124<5116	U03 TO W01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5124<5117	U04 TO W01	*Call
2098		5124<5118	U05 TO W01	*Call
2098		5124<5119	V01 TO W01	*Call
2098		5124<5120	V02 TO W01	*Call
2098		5124<5121	V03 TO W01	*Call
2098		5124<5122	V04 TO W01	*Call
2098		5124<5123	V05 TO W01	*Call
2098		5124<5125	W02 TO W01	*Call
2098		5124<5126	W03 TO W01	*Call
2098		5124<5127	W04 TO W01	*Call
2098		5124<5128	W05 TO W01	*Call
2098		5124<5129	X01 TO W01	*Call
2098		5124<5130	X02 TO W01	*Call
2098		5124<5131	X03 TO W01	*Call
2098		5124<5132	X04 TO W01	*Call
2098		5124<5133	X05 TO W01	*Call
2098		5124<5134	Y01 TO W01	*Call
2098		5124<5135	Y02 TO W01	*Call
2098		5124<5136	Y03 TO W01	*Call
2098		5124<5137	Y04 TO W01	*Call
2098		5124<5138	Y05 TO W01	*Call
2098		5124<5139	Z01 TO W01	*Call
2098		5124<5140	Z02 TO W01	*Call
2098		5124<5141	Z03 TO W01	*Call
2098		5124<5142	Z04 TO W01	*Call
2098		5124<5143	Z05 TO W01	*Call
2098		5125<5013	A00 TO W02	*Call
2098		5125<5014	A01 TO W02	*Call
2098		5125<5015	A02 TO W02	*Call
2098		5125<5016	A03 TO W02	*Call
2098		5125<5017	A04 TO W02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5125<5018	A05 TO W02	*Call
2098		5125<5019	B01 TO W02	*Call
2098		5125<5020	B02 TO W02	*Call
2098		5125<5021	B03 TO W02	*Call
2098		5125<5022	B04 TO W02	*Call
2098		5125<5023	B05 TO W02	*Call
2098		5125<5024	C01 TO W02	*Call
2098		5125<5025	C02 TO W02	*Call
2098		5125<5026	C03 TO W02	*Call
2098		5125<5027	C04 TO W02	*Call
2098		5125<5028	C05 TO W02	*Call
2098		5125<5029	D01 TO W02	*Call
2098		5125<5030	D02 TO W02	*Call
2098		5125<5031	D03 TO W02	*Call
2098		5125<5032	D04 TO W02	*Call
2098		5125<5033	D05 TO W02	*Call
2098		5125<5034	E01 TO W02	*Call
2098		5125<5035	E02 TO W02	*Call
2098		5125<5036	E03 TO W02	*Call
2098		5125<5037	E04 TO W02	*Call
2098		5125<5038	E05 TO W02	*Call
2098		5125<5039	F01 TO W02	*Call
2098		5125<5040	F02 TO W02	*Call
2098		5125<5041	F03 TO W02	*Call
2098		5125<5042	F04 TO W02	*Call
2098		5125<5043	F05 TO W02	*Call
2098		5125<5044	G01 TO W02	*Call
2098		5125<5045	G02 TO W02	*Call
2098		5125<5046	G03 TO W02	*Call
2098		5125<5047	G04 TO W02	*Call
2098		5125<5048	G05 TO W02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5125<5049	H01 TO W02	*Call
2098		5125<5050	H02 TO W02	*Call
2098		5125<5051	H03 TO W02	*Call
2098		5125<5052	H04 TO W02	*Call
2098		5125<5053	H05 TO W02	*Call
2098		5125<5054	I01 TO W02	*Call
2098		5125<5055	I02 TO W02	*Call
2098		5125<5056	I03 TO W02	*Call
2098		5125<5057	I04 TO W02	*Call
2098		5125<5058	I05 TO W02	*Call
2098		5125<5059	J01 TO W02	*Call
2098		5125<5060	J02 TO W02	*Call
2098		5125<5061	J03 TO W02	*Call
2098		5125<5062	J04 TO W02	*Call
2098		5125<5063	J05 TO W02	*Call
2098		5125<5064	K01 TO W02	*Call
2098		5125<5065	K02 TO W02	*Call
2098		5125<5066	K03 TO W02	*Call
2098		5125<5067	K04 TO W02	*Call
2098		5125<5068	K05 TO W02	*Call
2098		5125<5069	L01 TO W02	*Call
2098		5125<5070	L02 TO W02	*Call
2098		5125<5071	L03 TO W02	*Call
2098		5125<5072	L04 TO W02	*Call
2098		5125<5073	L05 TO W02	*Call
2098		5125<5074	M01 TO W02	*Call
2098		5125<5075	M02 TO W02	*Call
2098		5125<5076	M03 TO W02	*Call
2098		5125<5077	M04 TO W02	*Call
2098		5125<5078	M05 TO W02	*Call
2098		5125<5079	N01 TO W02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5125<5080	N02 TO W02	*Call
2098		5125<5081	N03 TO W02	*Call
2098		5125<5082	N04 TO W02	*Call
2098		5125<5083	N05 TO W02	*Call
2098		5125<5084	O01 TO W02	*Call
2098		5125<5085	O02 TO W02	*Call
2098		5125<5086	O03 TO W02	*Call
2098		5125<5087	O04 TO W02	*Call
2098		5125<5088	O05 TO W02	*Call
2098		5125<5089	P01 TO W02	*Call
2098		5125<5090	P02 TO W02	*Call
2098		5125<5091	P03 TO W02	*Call
2098		5125<5092	P04 TO W02	*Call
2098		5125<5093	P05 TO W02	*Call
2098		5125<5094	Q01 TO W02	*Call
2098		5125<5095	Q02 TO W02	*Call
2098		5125<5096	Q03 TO W02	*Call
2098		5125<5097	Q04 TO W02	*Call
2098		5125<5098	Q05 TO W02	*Call
2098		5125<5099	R01 TO W02	*Call
2098		5125<5100	R02 TO W02	*Call
2098		5125<5101	R03 TO W02	*Call
2098		5125<5102	R04 TO W02	*Call
2098		5125<5103	R05 TO W02	*Call
2098		5125<5104	S01 TO W02	*Call
2098		5125<5105	S02 TO W02	*Call
2098		5125<5106	S03 TO W02	*Call
2098		5125<5107	S04 TO W02	*Call
2098		5125<5108	S05 TO W02	*Call
2098		5125<5109	T01 TO W02	*Call
2098		5125<5110	T02 TO W02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5125<5111	T03 TO W02	*Call
2098		5125<5112	T04 TO W02	*Call
2098		5125<5113	T05 TO W02	*Call
2098		5125<5114	U01 TO W02	*Call
2098		5125<5115	U02 TO W02	*Call
2098		5125<5116	U03 TO W02	*Call
2098		5125<5117	U04 TO W02	*Call
2098		5125<5118	U05 TO W02	*Call
2098		5125<5119	V01 TO W02	*Call
2098		5125<5120	V02 TO W02	*Call
2098		5125<5121	V03 TO W02	*Call
2098		5125<5122	V04 TO W02	*Call
2098		5125<5123	V05 TO W02	*Call
2098		5125<5124	W01 TO W02	*Call
2098		5125<5126	W03 TO W02	*Call
2098		5125<5127	W04 TO W02	*Call
2098		5125<5128	W05 TO W02	*Call
2098		5125<5129	X01 TO W02	*Call
2098		5125<5130	X02 TO W02	*Call
2098		5125<5131	X03 TO W02	*Call
2098		5125<5132	X04 TO W02	*Call
2098		5125<5133	X05 TO W02	*Call
2098		5125<5134	Y01 TO W02	*Call
2098		5125<5135	Y02 TO W02	*Call
2098		5125<5136	Y03 TO W02	*Call
2098		5125<5137	Y04 TO W02	*Call
2098		5125<5138	Y05 TO W02	*Call
2098		5125<5139	Z01 TO W02	*Call
2098		5125<5140	Z02 TO W02	*Call
2098		5125<5141	Z03 TO W02	*Call
2098		5125<5142	Z04 TO W02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5125<5143	Z05 TO W02	*Call
2098		5126<5013	A00 TO W03	*Call
2098		5126<5014	A01 TO W03	*Call
2098		5126<5015	A02 TO W03	*Call
2098		5126<5016	A03 TO W03	*Call
2098		5126<5017	A04 TO W03	*Call
2098		5126<5018	A05 TO W03	*Call
2098		5126<5019	B01 TO W03	*Call
2098		5126<5020	B02 TO W03	*Call
2098		5126<5021	B03 TO W03	*Call
2098		5126<5022	B04 TO W03	*Call
2098		5126<5023	B05 TO W03	*Call
2098		5126<5024	C01 TO W03	*Call
2098		5126<5025	C02 TO W03	*Call
2098		5126<5026	C03 TO W03	*Call
2098		5126<5027	C04 TO W03	*Call
2098		5126<5028	C05 TO W03	*Call
2098		5126<5029	D01 TO W03	*Call
2098		5126<5030	D02 TO W03	*Call
2098		5126<5031	D03 TO W03	*Call
2098		5126<5032	D04 TO W03	*Call
2098		5126<5033	D05 TO W03	*Call
2098		5126<5034	E01 TO W03	*Call
2098		5126<5035	E02 TO W03	*Call
2098		5126<5036	E03 TO W03	*Call
2098		5126<5037	E04 TO W03	*Call
2098		5126<5038	E05 TO W03	*Call
2098		5126<5039	F01 TO W03	*Call
2098		5126<5040	F02 TO W03	*Call
2098		5126<5041	F03 TO W03	*Call
2098		5126<5042	F04 TO W03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5126<5043	F05 TO W03	*Call
2098		5126<5044	G01 TO W03	*Call
2098		5126<5045	G02 TO W03	*Call
2098		5126<5046	G03 TO W03	*Call
2098		5126<5047	G04 TO W03	*Call
2098		5126<5048	G05 TO W03	*Call
2098		5126<5049	H01 TO W03	*Call
2098		5126<5050	H02 TO W03	*Call
2098		5126<5051	H03 TO W03	*Call
2098		5126<5052	H04 TO W03	*Call
2098		5126<5053	H05 TO W03	*Call
2098		5126<5054	I01 TO W03	*Call
2098		5126<5055	I02 TO W03	*Call
2098		5126<5056	I03 TO W03	*Call
2098		5126<5057	I04 TO W03	*Call
2098		5126<5058	I05 TO W03	*Call
2098		5126<5059	J01 TO W03	*Call
2098		5126<5060	J02 TO W03	*Call
2098		5126<5061	J03 TO W03	*Call
2098		5126<5062	J04 TO W03	*Call
2098		5126<5063	J05 TO W03	*Call
2098		5126<5064	K01 TO W03	*Call
2098		5126<5065	K02 TO W03	*Call
2098		5126<5066	K03 TO W03	*Call
2098		5126<5067	K04 TO W03	*Call
2098		5126<5068	K05 TO W03	*Call
2098		5126<5069	L01 TO W03	*Call
2098		5126<5070	L02 TO W03	*Call
2098		5126<5071	L03 TO W03	*Call
2098		5126<5072	L04 TO W03	*Call
2098		5126<5073	L05 TO W03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5126<5074	M01 TO W03	*Call
2098		5126<5075	M02 TO W03	*Call
2098		5126<5076	M03 TO W03	*Call
2098		5126<5077	M04 TO W03	*Call
2098		5126<5078	M05 TO W03	*Call
2098		5126<5079	N01 TO W03	*Call
2098		5126<5080	N02 TO W03	*Call
2098		5126<5081	N03 TO W03	*Call
2098		5126<5082	N04 TO W03	*Call
2098		5126<5083	N05 TO W03	*Call
2098		5126<5084	O01 TO W03	*Call
2098		5126<5085	O02 TO W03	*Call
2098		5126<5086	O03 TO W03	*Call
2098		5126<5087	O04 TO W03	*Call
2098		5126<5088	O05 TO W03	*Call
2098		5126<5089	P01 TO W03	*Call
2098		5126<5090	P02 TO W03	*Call
2098		5126<5091	P03 TO W03	*Call
2098		5126<5092	P04 TO W03	*Call
2098		5126<5093	P05 TO W03	*Call
2098		5126<5094	Q01 TO W03	*Call
2098		5126<5095	Q02 TO W03	*Call
2098		5126<5096	Q03 TO W03	*Call
2098		5126<5097	Q04 TO W03	*Call
2098		5126<5098	Q05 TO W03	*Call
2098		5126<5099	R01 TO W03	*Call
2098		5126<5100	R02 TO W03	*Call
2098		5126<5101	R03 TO W03	*Call
2098		5126<5102	R04 TO W03	*Call
2098		5126<5103	R05 TO W03	*Call
2098		5126<5104	S01 TO W03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5126<5105	S02 TO W03	*Call
2098		5126<5106	S03 TO W03	*Call
2098		5126<5107	S04 TO W03	*Call
2098		5126<5108	S05 TO W03	*Call
2098		5126<5109	T01 TO W03	*Call
2098		5126<5110	T02 TO W03	*Call
2098		5126<5111	T03 TO W03	*Call
2098		5126<5112	T04 TO W03	*Call
2098		5126<5113	T05 TO W03	*Call
2098		5126<5114	U01 TO W03	*Call
2098		5126<5115	U02 TO W03	*Call
2098		5126<5116	U03 TO W03	*Call
2098		5126<5117	U04 TO W03	*Call
2098		5126<5118	U05 TO W03	*Call
2098		5126<5119	V01 TO W03	*Call
2098		5126<5120	V02 TO W03	*Call
2098		5126<5121	V03 TO W03	*Call
2098		5126<5122	V04 TO W03	*Call
2098		5126<5123	V05 TO W03	*Call
2098		5126<5124	W01 TO W03	*Call
2098		5126<5125	W02 TO W03	*Call
2098		5126<5127	W04 TO W03	*Call
2098		5126<5128	W05 TO W03	*Call
2098		5126<5129	X01 TO W03	*Call
2098		5126<5130	X02 TO W03	*Call
2098		5126<5131	X03 TO W03	*Call
2098		5126<5132	X04 TO W03	*Call
2098		5126<5133	X05 TO W03	*Call
2098		5126<5134	Y01 TO W03	*Call
2098		5126<5135	Y02 TO W03	*Call
2098		5126<5136	Y03 TO W03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5126<5137	Y04 TO W03	*Call
2098		5126<5138	Y05 TO W03	*Call
2098		5126<5139	Z01 TO W03	*Call
2098		5126<5140	Z02 TO W03	*Call
2098		5126<5141	Z03 TO W03	*Call
2098		5126<5142	Z04 TO W03	*Call
2098		5126<5143	Z05 TO W03	*Call
2098		5127<5013	A00 TO W04	*Call
2098		5127<5014	A01 TO W04	*Call
2098		5127<5015	A02 TO W04	*Call
2098		5127<5016	A03 TO W04	*Call
2098		5127<5017	A04 TO W04	*Call
2098		5127<5018	A05 TO W04	*Call
2098		5127<5019	B01 TO W04	*Call
2098		5127<5020	B02 TO W04	*Call
2098		5127<5021	B03 TO W04	*Call
2098		5127<5022	B04 TO W04	*Call
2098		5127<5023	B05 TO W04	*Call
2098		5127<5024	C01 TO W04	*Call
2098		5127<5025	C02 TO W04	*Call
2098		5127<5026	C03 TO W04	*Call
2098		5127<5027	C04 TO W04	*Call
2098		5127<5028	C05 TO W04	*Call
2098		5127<5029	D01 TO W04	*Call
2098		5127<5030	D02 TO W04	*Call
2098		5127<5031	D03 TO W04	*Call
2098		5127<5032	D04 TO W04	*Call
2098		5127<5033	D05 TO W04	*Call
2098		5127<5034	E01 TO W04	*Call
2098		5127<5035	E02 TO W04	*Call
2098		5127<5036	E03 TO W04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5127<5037	E04 TO W04	*Call
2098		5127<5038	E05 TO W04	*Call
2098		5127<5039	F01 TO W04	*Call
2098		5127<5040	F02 TO W04	*Call
2098		5127<5041	F03 TO W04	*Call
2098		5127<5042	F04 TO W04	*Call
2098		5127<5043	F05 TO W04	*Call
2098		5127<5044	G01 TO W04	*Call
2098		5127<5045	G02 TO W04	*Call
2098		5127<5046	G03 TO W04	*Call
2098		5127<5047	G04 TO W04	*Call
2098		5127<5048	G05 TO W04	*Call
2098		5127<5049	H01 TO W04	*Call
2098		5127<5050	H02 TO W04	*Call
2098		5127<5051	H03 TO W04	*Call
2098		5127<5052	H04 TO W04	*Call
2098		5127<5053	H05 TO W04	*Call
2098		5127<5054	I01 TO W04	*Call
2098		5127<5055	I02 TO W04	*Call
2098		5127<5056	I03 TO W04	*Call
2098		5127<5057	I04 TO W04	*Call
2098		5127<5058	I05 TO W04	*Call
2098		5127<5059	J01 TO W04	*Call
2098		5127<5060	J02 TO W04	*Call
2098		5127<5061	J03 TO W04	*Call
2098		5127<5062	J04 TO W04	*Call
2098		5127<5063	J05 TO W04	*Call
2098		5127<5064	K01 TO W04	*Call
2098		5127<5065	K02 TO W04	*Call
2098		5127<5066	K03 TO W04	*Call
2098		5127<5067	K04 TO W04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5127<5068	K05 TO W04	*Call
2098		5127<5069	L01 TO W04	*Call
2098		5127<5070	L02 TO W04	*Call
2098		5127<5071	L03 TO W04	*Call
2098		5127<5072	L04 TO W04	*Call
2098		5127<5073	L05 TO W04	*Call
2098		5127<5074	M01 TO W04	*Call
2098		5127<5075	M02 TO W04	*Call
2098		5127<5076	M03 TO W04	*Call
2098		5127<5077	M04 TO W04	*Call
2098		5127<5078	M05 TO W04	*Call
2098		5127<5079	N01 TO W04	*Call
2098		5127<5080	N02 TO W04	*Call
2098		5127<5081	N03 TO W04	*Call
2098		5127<5082	N04 TO W04	*Call
2098		5127<5083	N05 TO W04	*Call
2098		5127<5084	O01 TO W04	*Call
2098		5127<5085	O02 TO W04	*Call
2098		5127<5086	O03 TO W04	*Call
2098		5127<5087	O04 TO W04	*Call
2098		5127<5088	O05 TO W04	*Call
2098		5127<5089	P01 TO W04	*Call
2098		5127<5090	P02 TO W04	*Call
2098		5127<5091	P03 TO W04	*Call
2098		5127<5092	P04 TO W04	*Call
2098		5127<5093	P05 TO W04	*Call
2098		5127<5094	Q01 TO W04	*Call
2098		5127<5095	Q02 TO W04	*Call
2098		5127<5096	Q03 TO W04	*Call
2098		5127<5097	Q04 TO W04	*Call
2098		5127<5098	Q05 TO W04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5127<5099	R01 TO W04	*Call
2098		5127<5100	R02 TO W04	*Call
2098		5127<5101	R03 TO W04	*Call
2098		5127<5102	R04 TO W04	*Call
2098		5127<5103	R05 TO W04	*Call
2098		5127<5104	S01 TO W04	*Call
2098		5127<5105	S02 TO W04	*Call
2098		5127<5106	S03 TO W04	*Call
2098		5127<5107	S04 TO W04	*Call
2098		5127<5108	S05 TO W04	*Call
2098		5127<5109	T01 TO W04	*Call
2098		5127<5110	T02 TO W04	*Call
2098		5127<5111	T03 TO W04	*Call
2098		5127<5112	T04 TO W04	*Call
2098		5127<5113	T05 TO W04	*Call
2098		5127<5114	U01 TO W04	*Call
2098		5127<5115	U02 TO W04	*Call
2098		5127<5116	U03 TO W04	*Call
2098		5127<5117	U04 TO W04	*Call
2098		5127<5118	U05 TO W04	*Call
2098		5127<5119	V01 TO W04	*Call
2098		5127<5120	V02 TO W04	*Call
2098		5127<5121	V03 TO W04	*Call
2098		5127<5122	V04 TO W04	*Call
2098		5127<5123	V05 TO W04	*Call
2098		5127<5124	W01 TO W04	*Call
2098		5127<5125	W02 TO W04	*Call
2098		5127<5126	W03 TO W04	*Call
2098		5127<5128	W05 TO W04	*Call
2098		5127<5129	X01 TO W04	*Call
2098		5127<5130	X02 TO W04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5127<5131	X03 TO W04	*Call
2098		5127<5132	X04 TO W04	*Call
2098		5127<5133	X05 TO W04	*Call
2098		5127<5134	Y01 TO W04	*Call
2098		5127<5135	Y02 TO W04	*Call
2098		5127<5136	Y03 TO W04	*Call
2098		5127<5137	Y04 TO W04	*Call
2098		5127<5138	Y05 TO W04	*Call
2098		5127<5139	Z01 TO W04	*Call
2098		5127<5140	Z02 TO W04	*Call
2098		5127<5141	Z03 TO W04	*Call
2098		5127<5142	Z04 TO W04	*Call
2098		5127<5143	Z05 TO W04	*Call
2098		5128<5013	A00 TO W05	*Call
2098		5128<5014	A01 TO W05	*Call
2098		5128<5015	A02 TO W05	*Call
2098		5128<5016	A03 TO W05	*Call
2098		5128<5017	A04 TO W05	*Call
2098		5128<5018	A05 TO W05	*Call
2098		5128<5019	B01 TO W05	*Call
2098		5128<5020	B02 TO W05	*Call
2098		5128<5021	B03 TO W05	*Call
2098		5128<5022	B04 TO W05	*Call
2098		5128<5023	B05 TO W05	*Call
2098		5128<5024	C01 TO W05	*Call
2098		5128<5025	C02 TO W05	*Call
2098		5128<5026	C03 TO W05	*Call
2098		5128<5027	C04 TO W05	*Call
2098		5128<5028	C05 TO W05	*Call
2098		5128<5029	D01 TO W05	*Call
2098		5128<5030	D02 TO W05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5128<5031	D03 TO W05	*Call
2098		5128<5032	D04 TO W05	*Call
2098		5128<5033	D05 TO W05	*Call
2098		5128<5034	E01 TO W05	*Call
2098		5128<5035	E02 TO W05	*Call
2098		5128<5036	E03 TO W05	*Call
2098		5128<5037	E04 TO W05	*Call
2098		5128<5038	E05 TO W05	*Call
2098		5128<5039	F01 TO W05	*Call
2098		5128<5040	F02 TO W05	*Call
2098		5128<5041	F03 TO W05	*Call
2098		5128<5042	F04 TO W05	*Call
2098		5128<5043	F05 TO W05	*Call
2098		5128<5044	G01 TO W05	*Call
2098		5128<5045	G02 TO W05	*Call
2098		5128<5046	G03 TO W05	*Call
2098		5128<5047	G04 TO W05	*Call
2098		5128<5048	G05 TO W05	*Call
2098		5128<5049	H01 TO W05	*Call
2098		5128<5050	H02 TO W05	*Call
2098		5128<5051	H03 TO W05	*Call
2098		5128<5052	H04 TO W05	*Call
2098		5128<5053	H05 TO W05	*Call
2098		5128<5054	I01 TO W05	*Call
2098		5128<5055	I02 TO W05	*Call
2098		5128<5056	I03 TO W05	*Call
2098		5128<5057	I04 TO W05	*Call
2098		5128<5058	I05 TO W05	*Call
2098		5128<5059	J01 TO W05	*Call
2098		5128<5060	J02 TO W05	*Call
2098		5128<5061	J03 TO W05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5128<5062	J04 TO W05	*Call
2098		5128<5063	J05 TO W05	*Call
2098		5128<5064	K01 TO W05	*Call
2098		5128<5065	K02 TO W05	*Call
2098		5128<5066	K03 TO W05	*Call
2098		5128<5067	K04 TO W05	*Call
2098		5128<5068	K05 TO W05	*Call
2098		5128<5069	L01 TO W05	*Call
2098		5128<5070	L02 TO W05	*Call
2098		5128<5071	L03 TO W05	*Call
2098		5128<5072	L04 TO W05	*Call
2098		5128<5073	L05 TO W05	*Call
2098		5128<5074	M01 TO W05	*Call
2098		5128<5075	M02 TO W05	*Call
2098		5128<5076	M03 TO W05	*Call
2098		5128<5077	M04 TO W05	*Call
2098		5128<5078	M05 TO W05	*Call
2098		5128<5079	N01 TO W05	*Call
2098		5128<5080	N02 TO W05	*Call
2098		5128<5081	N03 TO W05	*Call
2098		5128<5082	N04 TO W05	*Call
2098		5128<5083	N05 TO W05	*Call
2098		5128<5084	O01 TO W05	*Call
2098		5128<5085	O02 TO W05	*Call
2098		5128<5086	O03 TO W05	*Call
2098		5128<5087	O04 TO W05	*Call
2098		5128<5088	O05 TO W05	*Call
2098		5128<5089	P01 TO W05	*Call
2098		5128<5090	P02 TO W05	*Call
2098		5128<5091	P03 TO W05	*Call
2098		5128<5092	P04 TO W05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5128<5093	P05 TO W05	*Call
2098		5128<5094	Q01 TO W05	*Call
2098		5128<5095	Q02 TO W05	*Call
2098		5128<5096	Q03 TO W05	*Call
2098		5128<5097	Q04 TO W05	*Call
2098		5128<5098	Q05 TO W05	*Call
2098		5128<5099	R01 TO W05	*Call
2098		5128<5100	R02 TO W05	*Call
2098		5128<5101	R03 TO W05	*Call
2098		5128<5102	R04 TO W05	*Call
2098		5128<5103	R05 TO W05	*Call
2098		5128<5104	S01 TO W05	*Call
2098		5128<5105	S02 TO W05	*Call
2098		5128<5106	S03 TO W05	*Call
2098		5128<5107	S04 TO W05	*Call
2098		5128<5108	S05 TO W05	*Call
2098		5128<5109	T01 TO W05	*Call
2098		5128<5110	T02 TO W05	*Call
2098		5128<5111	T03 TO W05	*Call
2098		5128<5112	T04 TO W05	*Call
2098		5128<5113	T05 TO W05	*Call
2098		5128<5114	U01 TO W05	*Call
2098		5128<5115	U02 TO W05	*Call
2098		5128<5116	U03 TO W05	*Call
2098		5128<5117	U04 TO W05	*Call
2098		5128<5118	U05 TO W05	*Call
2098		5128<5119	V01 TO W05	*Call
2098		5128<5120	V02 TO W05	*Call
2098		5128<5121	V03 TO W05	*Call
2098		5128<5122	V04 TO W05	*Call
2098		5128<5123	V05 TO W05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5128<5124	W01 TO W05	*Call
2098		5128<5125	W02 TO W05	*Call
2098		5128<5126	W03 TO W05	*Call
2098		5128<5127	W04 TO W05	*Call
2098		5128<5129	X01 TO W05	*Call
2098		5128<5130	X02 TO W05	*Call
2098		5128<5131	X03 TO W05	*Call
2098		5128<5132	X04 TO W05	*Call
2098		5128<5133	X05 TO W05	*Call
2098		5128<5134	Y01 TO W05	*Call
2098		5128<5135	Y02 TO W05	*Call
2098		5128<5136	Y03 TO W05	*Call
2098		5128<5137	Y04 TO W05	*Call
2098		5128<5138	Y05 TO W05	*Call
2098		5128<5139	Z01 TO W05	*Call
2098		5128<5140	Z02 TO W05	*Call
2098		5128<5141	Z03 TO W05	*Call
2098		5128<5142	Z04 TO W05	*Call
2098		5128<5143	Z05 TO W05	*Call
2098		5129<5013	A00 TO X01	*Call
2098		5129<5014	A01 TO X01	*Call
2098		5129<5015	A02 TO X01	*Call
2098		5129<5016	A03 TO X01	*Call
2098		5129<5017	A04 TO X01	*Call
2098		5129<5018	A05 TO X01	*Call
2098		5129<5019	B01 TO X01	*Call
2098		5129<5020	B02 TO X01	*Call
2098		5129<5021	B03 TO X01	*Call
2098		5129<5022	B04 TO X01	*Call
2098		5129<5023	B05 TO X01	*Call
2098		5129<5024	C01 TO X01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5129<5025	C02 TO X01	*Call
2098		5129<5026	C03 TO X01	*Call
2098		5129<5027	C04 TO X01	*Call
2098		5129<5028	C05 TO X01	*Call
2098		5129<5029	D01 TO X01	*Call
2098		5129<5030	D02 TO X01	*Call
2098		5129<5031	D03 TO X01	*Call
2098		5129<5032	D04 TO X01	*Call
2098		5129<5033	D05 TO X01	*Call
2098		5129<5034	E01 TO X01	*Call
2098		5129<5035	E02 TO X01	*Call
2098		5129<5036	E03 TO X01	*Call
2098		5129<5037	E04 TO X01	*Call
2098		5129<5038	E05 TO X01	*Call
2098		5129<5039	F01 TO X01	*Call
2098		5129<5040	F02 TO X01	*Call
2098		5129<5041	F03 TO X01	*Call
2098		5129<5042	F04 TO X01	*Call
2098		5129<5043	F05 TO X01	*Call
2098		5129<5044	G01 TO X01	*Call
2098		5129<5045	G02 TO X01	*Call
2098		5129<5046	G03 TO X01	*Call
2098		5129<5047	G04 TO X01	*Call
2098		5129<5048	G05 TO X01	*Call
2098		5129<5049	H01 TO X01	*Call
2098		5129<5050	H02 TO X01	*Call
2098		5129<5051	H03 TO X01	*Call
2098		5129<5052	H04 TO X01	*Call
2098		5129<5053	H05 TO X01	*Call
2098		5129<5054	I01 TO X01	*Call
2098		5129<5055	I02 TO X01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5129<5056	I03 TO X01	*Call
2098		5129<5057	I04 TO X01	*Call
2098		5129<5058	I05 TO X01	*Call
2098		5129<5059	J01 TO X01	*Call
2098		5129<5060	J02 TO X01	*Call
2098		5129<5061	J03 TO X01	*Call
2098		5129<5062	J04 TO X01	*Call
2098		5129<5063	J05 TO X01	*Call
2098		5129<5064	K01 TO X01	*Call
2098		5129<5065	K02 TO X01	*Call
2098		5129<5066	K03 TO X01	*Call
2098		5129<5067	K04 TO X01	*Call
2098		5129<5068	K05 TO X01	*Call
2098		5129<5069	L01 TO X01	*Call
2098		5129<5070	L02 TO X01	*Call
2098		5129<5071	L03 TO X01	*Call
2098		5129<5072	L04 TO X01	*Call
2098		5129<5073	L05 TO X01	*Call
2098		5129<5074	M01 TO X01	*Call
2098		5129<5075	M02 TO X01	*Call
2098		5129<5076	M03 TO X01	*Call
2098		5129<5077	M04 TO X01	*Call
2098		5129<5078	M05 TO X01	*Call
2098		5129<5079	N01 TO X01	*Call
2098		5129<5080	N02 TO X01	*Call
2098		5129<5081	N03 TO X01	*Call
2098		5129<5082	N04 TO X01	*Call
2098		5129<5083	N05 TO X01	*Call
2098		5129<5084	O01 TO X01	*Call
2098		5129<5085	O02 TO X01	*Call
2098		5129<5086	O03 TO X01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5129<5087	O04 TO X01	*Call
2098		5129<5088	O05 TO X01	*Call
2098		5129<5089	P01 TO X01	*Call
2098		5129<5090	P02 TO X01	*Call
2098		5129<5091	P03 TO X01	*Call
2098		5129<5092	P04 TO X01	*Call
2098		5129<5093	P05 TO X01	*Call
2098		5129<5094	Q01 TO X01	*Call
2098		5129<5095	Q02 TO X01	*Call
2098		5129<5096	Q03 TO X01	*Call
2098		5129<5097	Q04 TO X01	*Call
2098		5129<5098	Q05 TO X01	*Call
2098		5129<5099	R01 TO X01	*Call
2098		5129<5100	R02 TO X01	*Call
2098		5129<5101	R03 TO X01	*Call
2098		5129<5102	R04 TO X01	*Call
2098		5129<5103	R05 TO X01	*Call
2098		5129<5104	S01 TO X01	*Call
2098		5129<5105	S02 TO X01	*Call
2098		5129<5106	S03 TO X01	*Call
2098		5129<5107	S04 TO X01	*Call
2098		5129<5108	S05 TO X01	*Call
2098		5129<5109	T01 TO X01	*Call
2098		5129<5110	T02 TO X01	*Call
2098		5129<5111	T03 TO X01	*Call
2098		5129<5112	T04 TO X01	*Call
2098		5129<5113	T05 TO X01	*Call
2098		5129<5114	U01 TO X01	*Call
2098		5129<5115	U02 TO X01	*Call
2098		5129<5116	U03 TO X01	*Call
2098		5129<5117	U04 TO X01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5129<5118	U05 TO X01	*Call
2098		5129<5119	V01 TO X01	*Call
2098		5129<5120	V02 TO X01	*Call
2098		5129<5121	V03 TO X01	*Call
2098		5129<5122	V04 TO X01	*Call
2098		5129<5123	V05 TO X01	*Call
2098		5129<5124	W01 TO X01	*Call
2098		5129<5125	W02 TO X01	*Call
2098		5129<5126	W03 TO X01	*Call
2098		5129<5127	W04 TO X01	*Call
2098		5129<5128	W05 TO X01	*Call
2098		5129<5130	X02 TO X01	*Call
2098		5129<5131	X03 TO X01	*Call
2098		5129<5132	X04 TO X01	*Call
2098		5129<5133	X05 TO X01	*Call
2098		5129<5134	Y01 TO X01	*Call
2098		5129<5135	Y02 TO X01	*Call
2098		5129<5136	Y03 TO X01	*Call
2098		5129<5137	Y04 TO X01	*Call
2098		5129<5138	Y05 TO X01	*Call
2098		5129<5139	Z01 TO X01	*Call
2098		5129<5140	Z02 TO X01	*Call
2098		5129<5141	Z03 TO X01	*Call
2098		5129<5142	Z04 TO X01	*Call
2098		5129<5143	Z05 TO X01	*Call
2098		5130<5013	A00 TO X02	*Call
2098		5130<5014	A01 TO X02	*Call
2098		5130<5015	A02 TO X02	*Call
2098		5130<5016	A03 TO X02	*Call
2098		5130<5017	A04 TO X02	*Call
2098		5130<5018	A05 TO X02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5130<5019	B01 TO X02	*Call
2098		5130<5020	B02 TO X02	*Call
2098		5130<5021	B03 TO X02	*Call
2098		5130<5022	B04 TO X02	*Call
2098		5130<5023	B05 TO X02	*Call
2098		5130<5024	C01 TO X02	*Call
2098		5130<5025	C02 TO X02	*Call
2098		5130<5026	C03 TO X02	*Call
2098		5130<5027	C04 TO X02	*Call
2098		5130<5028	C05 TO X02	*Call
2098		5130<5029	D01 TO X02	*Call
2098		5130<5030	D02 TO X02	*Call
2098		5130<5031	D03 TO X02	*Call
2098		5130<5032	D04 TO X02	*Call
2098		5130<5033	D05 TO X02	*Call
2098		5130<5034	E01 TO X02	*Call
2098		5130<5035	E02 TO X02	*Call
2098		5130<5036	E03 TO X02	*Call
2098		5130<5037	E04 TO X02	*Call
2098		5130<5038	E05 TO X02	*Call
2098		5130<5039	F01 TO X02	*Call
2098		5130<5040	F02 TO X02	*Call
2098		5130<5041	F03 TO X02	*Call
2098		5130<5042	F04 TO X02	*Call
2098		5130<5043	F05 TO X02	*Call
2098		5130<5044	G01 TO X02	*Call
2098		5130<5045	G02 TO X02	*Call
2098		5130<5046	G03 TO X02	*Call
2098		5130<5047	G04 TO X02	*Call
2098		5130<5048	G05 TO X02	*Call
2098		5130<5049	H01 TO X02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5130<5050	H02 TO X02	*Call
2098		5130<5051	H03 TO X02	*Call
2098		5130<5052	H04 TO X02	*Call
2098		5130<5053	H05 TO X02	*Call
2098		5130<5054	I01 TO X02	*Call
2098		5130<5055	I02 TO X02	*Call
2098		5130<5056	I03 TO X02	*Call
2098		5130<5057	I04 TO X02	*Call
2098		5130<5058	I05 TO X02	*Call
2098		5130<5059	J01 TO X02	*Call
2098		5130<5060	J02 TO X02	*Call
2098		5130<5061	J03 TO X02	*Call
2098		5130<5062	J04 TO X02	*Call
2098		5130<5063	J05 TO X02	*Call
2098		5130<5064	K01 TO X02	*Call
2098		5130<5065	K02 TO X02	*Call
2098		5130<5066	K03 TO X02	*Call
2098		5130<5067	K04 TO X02	*Call
2098		5130<5068	K05 TO X02	*Call
2098		5130<5069	L01 TO X02	*Call
2098		5130<5070	L02 TO X02	*Call
2098		5130<5071	L03 TO X02	*Call
2098		5130<5072	L04 TO X02	*Call
2098		5130<5073	L05 TO X02	*Call
2098		5130<5074	M01 TO X02	*Call
2098		5130<5075	M02 TO X02	*Call
2098		5130<5076	M03 TO X02	*Call
2098		5130<5077	M04 TO X02	*Call
2098		5130<5078	M05 TO X02	*Call
2098		5130<5079	N01 TO X02	*Call
2098		5130<5080	N02 TO X02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5130<5081	N03 TO X02	*Call
2098		5130<5082	N04 TO X02	*Call
2098		5130<5083	N05 TO X02	*Call
2098		5130<5084	O01 TO X02	*Call
2098		5130<5085	O02 TO X02	*Call
2098		5130<5086	O03 TO X02	*Call
2098		5130<5087	O04 TO X02	*Call
2098		5130<5088	O05 TO X02	*Call
2098		5130<5089	P01 TO X02	*Call
2098		5130<5090	P02 TO X02	*Call
2098		5130<5091	P03 TO X02	*Call
2098		5130<5092	P04 TO X02	*Call
2098		5130<5093	P05 TO X02	*Call
2098		5130<5094	Q01 TO X02	*Call
2098		5130<5095	Q02 TO X02	*Call
2098		5130<5096	Q03 TO X02	*Call
2098		5130<5097	Q04 TO X02	*Call
2098		5130<5098	Q05 TO X02	*Call
2098		5130<5099	R01 TO X02	*Call
2098		5130<5100	R02 TO X02	*Call
2098		5130<5101	R03 TO X02	*Call
2098		5130<5102	R04 TO X02	*Call
2098		5130<5103	R05 TO X02	*Call
2098		5130<5104	S01 TO X02	*Call
2098		5130<5105	S02 TO X02	*Call
2098		5130<5106	S03 TO X02	*Call
2098		5130<5107	S04 TO X02	*Call
2098		5130<5108	S05 TO X02	*Call
2098		5130<5109	T01 TO X02	*Call
2098		5130<5110	T02 TO X02	*Call
2098		5130<5111	T03 TO X02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5130<5112	T04 TO X02	*Call
2098		5130<5113	T05 TO X02	*Call
2098		5130<5114	U01 TO X02	*Call
2098		5130<5115	U02 TO X02	*Call
2098		5130<5116	U03 TO X02	*Call
2098		5130<5117	U04 TO X02	*Call
2098		5130<5118	U05 TO X02	*Call
2098		5130<5119	V01 TO X02	*Call
2098		5130<5120	V02 TO X02	*Call
2098		5130<5121	V03 TO X02	*Call
2098		5130<5122	V04 TO X02	*Call
2098		5130<5123	V05 TO X02	*Call
2098		5130<5124	W01 TO X02	*Call
2098		5130<5125	W02 TO X02	*Call
2098		5130<5126	W03 TO X02	*Call
2098		5130<5127	W04 TO X02	*Call
2098		5130<5128	W05 TO X02	*Call
2098		5130<5129	X01 TO X02	*Call
2098		5130<5131	X03 TO X02	*Call
2098		5130<5132	X04 TO X02	*Call
2098		5130<5133	X05 TO X02	*Call
2098		5130<5134	Y01 TO X02	*Call
2098		5130<5135	Y02 TO X02	*Call
2098		5130<5136	Y03 TO X02	*Call
2098		5130<5137	Y04 TO X02	*Call
2098		5130<5138	Y05 TO X02	*Call
2098		5130<5139	Z01 TO X02	*Call
2098		5130<5140	Z02 TO X02	*Call
2098		5130<5141	Z03 TO X02	*Call
2098		5130<5142	Z04 TO X02	*Call
2098		5130<5143	Z05 TO X02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5131<5013	A00 TO X03	*Call
2098		5131<5014	A01 TO X03	*Call
2098		5131<5015	A02 TO X03	*Call
2098		5131<5016	A03 TO X03	*Call
2098		5131<5017	A04 TO X03	*Call
2098		5131<5018	A05 TO X03	*Call
2098		5131<5019	B01 TO X03	*Call
2098		5131<5020	B02 TO X03	*Call
2098		5131<5021	B03 TO X03	*Call
2098		5131<5022	B04 TO X03	*Call
2098		5131<5023	B05 TO X03	*Call
2098		5131<5024	C01 TO X03	*Call
2098		5131<5025	C02 TO X03	*Call
2098		5131<5026	C03 TO X03	*Call
2098		5131<5027	C04 TO X03	*Call
2098		5131<5028	C05 TO X03	*Call
2098		5131<5029	D01 TO X03	*Call
2098		5131<5030	D02 TO X03	*Call
2098		5131<5031	D03 TO X03	*Call
2098		5131<5032	D04 TO X03	*Call
2098		5131<5033	D05 TO X03	*Call
2098		5131<5034	E01 TO X03	*Call
2098		5131<5035	E02 TO X03	*Call
2098		5131<5036	E03 TO X03	*Call
2098		5131<5037	E04 TO X03	*Call
2098		5131<5038	E05 TO X03	*Call
2098		5131<5039	F01 TO X03	*Call
2098		5131<5040	F02 TO X03	*Call
2098		5131<5041	F03 TO X03	*Call
2098		5131<5042	F04 TO X03	*Call
2098		5131<5043	F05 TO X03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5131<5044	G01 TO X03	*Call
2098		5131<5045	G02 TO X03	*Call
2098		5131<5046	G03 TO X03	*Call
2098		5131<5047	G04 TO X03	*Call
2098		5131<5048	G05 TO X03	*Call
2098		5131<5049	H01 TO X03	*Call
2098		5131<5050	H02 TO X03	*Call
2098		5131<5051	H03 TO X03	*Call
2098		5131<5052	H04 TO X03	*Call
2098		5131<5053	H05 TO X03	*Call
2098		5131<5054	I01 TO X03	*Call
2098		5131<5055	I02 TO X03	*Call
2098		5131<5056	I03 TO X03	*Call
2098		5131<5057	I04 TO X03	*Call
2098		5131<5058	I05 TO X03	*Call
2098		5131<5059	J01 TO X03	*Call
2098		5131<5060	J02 TO X03	*Call
2098		5131<5061	J03 TO X03	*Call
2098		5131<5062	J04 TO X03	*Call
2098		5131<5063	J05 TO X03	*Call
2098		5131<5064	K01 TO X03	*Call
2098		5131<5065	K02 TO X03	*Call
2098		5131<5066	K03 TO X03	*Call
2098		5131<5067	K04 TO X03	*Call
2098		5131<5068	K05 TO X03	*Call
2098		5131<5069	L01 TO X03	*Call
2098		5131<5070	L02 TO X03	*Call
2098		5131<5071	L03 TO X03	*Call
2098		5131<5072	L04 TO X03	*Call
2098		5131<5073	L05 TO X03	*Call
2098		5131<5074	M01 TO X03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5131<5075	M02 TO X03	*Call
2098		5131<5076	M03 TO X03	*Call
2098		5131<5077	M04 TO X03	*Call
2098		5131<5078	M05 TO X03	*Call
2098		5131<5079	N01 TO X03	*Call
2098		5131<5080	N02 TO X03	*Call
2098		5131<5081	N03 TO X03	*Call
2098		5131<5082	N04 TO X03	*Call
2098		5131<5083	N05 TO X03	*Call
2098		5131<5084	O01 TO X03	*Call
2098		5131<5085	O02 TO X03	*Call
2098		5131<5086	O03 TO X03	*Call
2098		5131<5087	O04 TO X03	*Call
2098		5131<5088	O05 TO X03	*Call
2098		5131<5089	P01 TO X03	*Call
2098		5131<5090	P02 TO X03	*Call
2098		5131<5091	P03 TO X03	*Call
2098		5131<5092	P04 TO X03	*Call
2098		5131<5093	P05 TO X03	*Call
2098		5131<5094	Q01 TO X03	*Call
2098		5131<5095	Q02 TO X03	*Call
2098		5131<5096	Q03 TO X03	*Call
2098		5131<5097	Q04 TO X03	*Call
2098		5131<5098	Q05 TO X03	*Call
2098		5131<5099	R01 TO X03	*Call
2098		5131<5100	R02 TO X03	*Call
2098		5131<5101	R03 TO X03	*Call
2098		5131<5102	R04 TO X03	*Call
2098		5131<5103	R05 TO X03	*Call
2098		5131<5104	S01 TO X03	*Call
2098		5131<5105	S02 TO X03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5131<5106	S03 TO X03	*Call
2098		5131<5107	S04 TO X03	*Call
2098		5131<5108	S05 TO X03	*Call
2098		5131<5109	T01 TO X03	*Call
2098		5131<5110	T02 TO X03	*Call
2098		5131<5111	T03 TO X03	*Call
2098		5131<5112	T04 TO X03	*Call
2098		5131<5113	T05 TO X03	*Call
2098		5131<5114	U01 TO X03	*Call
2098		5131<5115	U02 TO X03	*Call
2098		5131<5116	U03 TO X03	*Call
2098		5131<5117	U04 TO X03	*Call
2098		5131<5118	U05 TO X03	*Call
2098		5131<5119	V01 TO X03	*Call
2098		5131<5120	V02 TO X03	*Call
2098		5131<5121	V03 TO X03	*Call
2098		5131<5122	V04 TO X03	*Call
2098		5131<5123	V05 TO X03	*Call
2098		5131<5124	W01 TO X03	*Call
2098		5131<5125	W02 TO X03	*Call
2098		5131<5126	W03 TO X03	*Call
2098		5131<5127	W04 TO X03	*Call
2098		5131<5128	W05 TO X03	*Call
2098		5131<5129	X01 TO X03	*Call
2098		5131<5130	X02 TO X03	*Call
2098		5131<5132	X04 TO X03	*Call
2098		5131<5133	X05 TO X03	*Call
2098		5131<5134	Y01 TO X03	*Call
2098		5131<5135	Y02 TO X03	*Call
2098		5131<5136	Y03 TO X03	*Call
2098		5131<5137	Y04 TO X03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5131<5138	Y05 TO X03	*Call
2098		5131<5139	Z01 TO X03	*Call
2098		5131<5140	Z02 TO X03	*Call
2098		5131<5141	Z03 TO X03	*Call
2098		5131<5142	Z04 TO X03	*Call
2098		5131<5143	Z05 TO X03	*Call
2098		5132<5013	A00 TO X04	*Call
2098		5132<5014	A01 TO X04	*Call
2098		5132<5015	A02 TO X04	*Call
2098		5132<5016	A03 TO X04	*Call
2098		5132<5017	A04 TO X04	*Call
2098		5132<5018	A05 TO X04	*Call
2098		5132<5019	B01 TO X04	*Call
2098		5132<5020	B02 TO X04	*Call
2098		5132<5021	B03 TO X04	*Call
2098		5132<5022	B04 TO X04	*Call
2098		5132<5023	B05 TO X04	*Call
2098		5132<5024	C01 TO X04	*Call
2098		5132<5025	C02 TO X04	*Call
2098		5132<5026	C03 TO X04	*Call
2098		5132<5027	C04 TO X04	*Call
2098		5132<5028	C05 TO X04	*Call
2098		5132<5029	D01 TO X04	*Call
2098		5132<5030	D02 TO X04	*Call
2098		5132<5031	D03 TO X04	*Call
2098		5132<5032	D04 TO X04	*Call
2098		5132<5033	D05 TO X04	*Call
2098		5132<5034	E01 TO X04	*Call
2098		5132<5035	E02 TO X04	*Call
2098		5132<5036	E03 TO X04	*Call
2098		5132<5037	E04 TO X04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5132<5038	E05 TO X04	*Call
2098		5132<5039	F01 TO X04	*Call
2098		5132<5040	F02 TO X04	*Call
2098		5132<5041	F03 TO X04	*Call
2098		5132<5042	F04 TO X04	*Call
2098		5132<5043	F05 TO X04	*Call
2098		5132<5044	G01 TO X04	*Call
2098		5132<5045	G02 TO X04	*Call
2098		5132<5046	G03 TO X04	*Call
2098		5132<5047	G04 TO X04	*Call
2098		5132<5048	G05 TO X04	*Call
2098		5132<5049	H01 TO X04	*Call
2098		5132<5050	H02 TO X04	*Call
2098		5132<5051	H03 TO X04	*Call
2098		5132<5052	H04 TO X04	*Call
2098		5132<5053	H05 TO X04	*Call
2098		5132<5054	I01 TO X04	*Call
2098		5132<5055	I02 TO X04	*Call
2098		5132<5056	I03 TO X04	*Call
2098		5132<5057	I04 TO X04	*Call
2098		5132<5058	I05 TO X04	*Call
2098		5132<5059	J01 TO X04	*Call
2098		5132<5060	J02 TO X04	*Call
2098		5132<5061	J03 TO X04	*Call
2098		5132<5062	J04 TO X04	*Call
2098		5132<5063	J05 TO X04	*Call
2098		5132<5064	K01 TO X04	*Call
2098		5132<5065	K02 TO X04	*Call
2098		5132<5066	K03 TO X04	*Call
2098		5132<5067	K04 TO X04	*Call
2098		5132<5068	K05 TO X04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5132<5069	L01 TO X04	*Call
2098		5132<5070	L02 TO X04	*Call
2098		5132<5071	L03 TO X04	*Call
2098		5132<5072	L04 TO X04	*Call
2098		5132<5073	L05 TO X04	*Call
2098		5132<5074	M01 TO X04	*Call
2098		5132<5075	M02 TO X04	*Call
2098		5132<5076	M03 TO X04	*Call
2098		5132<5077	M04 TO X04	*Call
2098		5132<5078	M05 TO X04	*Call
2098		5132<5079	N01 TO X04	*Call
2098		5132<5080	N02 TO X04	*Call
2098		5132<5081	N03 TO X04	*Call
2098		5132<5082	N04 TO X04	*Call
2098		5132<5083	N05 TO X04	*Call
2098		5132<5084	O01 TO X04	*Call
2098		5132<5085	O02 TO X04	*Call
2098		5132<5086	O03 TO X04	*Call
2098		5132<5087	O04 TO X04	*Call
2098		5132<5088	O05 TO X04	*Call
2098		5132<5089	P01 TO X04	*Call
2098		5132<5090	P02 TO X04	*Call
2098		5132<5091	P03 TO X04	*Call
2098		5132<5092	P04 TO X04	*Call
2098		5132<5093	P05 TO X04	*Call
2098		5132<5094	Q01 TO X04	*Call
2098		5132<5095	Q02 TO X04	*Call
2098		5132<5096	Q03 TO X04	*Call
2098		5132<5097	Q04 TO X04	*Call
2098		5132<5098	Q05 TO X04	*Call
2098		5132<5099	R01 TO X04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5132<5100	R02 TO X04	*Call
2098		5132<5101	R03 TO X04	*Call
2098		5132<5102	R04 TO X04	*Call
2098		5132<5103	R05 TO X04	*Call
2098		5132<5104	S01 TO X04	*Call
2098		5132<5105	S02 TO X04	*Call
2098		5132<5106	S03 TO X04	*Call
2098		5132<5107	S04 TO X04	*Call
2098		5132<5108	S05 TO X04	*Call
2098		5132<5109	T01 TO X04	*Call
2098		5132<5110	T02 TO X04	*Call
2098		5132<5111	T03 TO X04	*Call
2098		5132<5112	T04 TO X04	*Call
2098		5132<5113	T05 TO X04	*Call
2098		5132<5114	U01 TO X04	*Call
2098		5132<5115	U02 TO X04	*Call
2098		5132<5116	U03 TO X04	*Call
2098		5132<5117	U04 TO X04	*Call
2098		5132<5118	U05 TO X04	*Call
2098		5132<5119	V01 TO X04	*Call
2098		5132<5120	V02 TO X04	*Call
2098		5132<5121	V03 TO X04	*Call
2098		5132<5122	V04 TO X04	*Call
2098		5132<5123	V05 TO X04	*Call
2098		5132<5124	W01 TO X04	*Call
2098		5132<5125	W02 TO X04	*Call
2098		5132<5126	W03 TO X04	*Call
2098		5132<5127	W04 TO X04	*Call
2098		5132<5128	W05 TO X04	*Call
2098		5132<5129	X01 TO X04	*Call
2098		5132<5130	X02 TO X04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5132<5131	X03 TO X04	*Call
2098		5132<5133	X05 TO X04	*Call
2098		5132<5134	Y01 TO X04	*Call
2098		5132<5135	Y02 TO X04	*Call
2098		5132<5136	Y03 TO X04	*Call
2098		5132<5137	Y04 TO X04	*Call
2098		5132<5138	Y05 TO X04	*Call
2098		5132<5139	Z01 TO X04	*Call
2098		5132<5140	Z02 TO X04	*Call
2098		5132<5141	Z03 TO X04	*Call
2098		5132<5142	Z04 TO X04	*Call
2098		5132<5143	Z05 TO X04	*Call
2098		5133<5013	A00 TO X05	*Call
2098		5133<5014	A01 TO X05	*Call
2098		5133<5015	A02 TO X05	*Call
2098		5133<5016	A03 TO X05	*Call
2098		5133<5017	A04 TO X05	*Call
2098		5133<5018	A05 TO X05	*Call
2098		5133<5019	B01 TO X05	*Call
2098		5133<5020	B02 TO X05	*Call
2098		5133<5021	B03 TO X05	*Call
2098		5133<5022	B04 TO X05	*Call
2098		5133<5023	B05 TO X05	*Call
2098		5133<5024	C01 TO X05	*Call
2098		5133<5025	C02 TO X05	*Call
2098		5133<5026	C03 TO X05	*Call
2098		5133<5027	C04 TO X05	*Call
2098		5133<5028	C05 TO X05	*Call
2098		5133<5029	D01 TO X05	*Call
2098		5133<5030	D02 TO X05	*Call
2098		5133<5031	D03 TO X05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5133<5032	D04 TO X05	*Call
2098		5133<5033	D05 TO X05	*Call
2098		5133<5034	E01 TO X05	*Call
2098		5133<5035	E02 TO X05	*Call
2098		5133<5036	E03 TO X05	*Call
2098		5133<5037	E04 TO X05	*Call
2098		5133<5038	E05 TO X05	*Call
2098		5133<5039	F01 TO X05	*Call
2098		5133<5040	F02 TO X05	*Call
2098		5133<5041	F03 TO X05	*Call
2098		5133<5042	F04 TO X05	*Call
2098		5133<5043	F05 TO X05	*Call
2098		5133<5044	G01 TO X05	*Call
2098		5133<5045	G02 TO X05	*Call
2098		5133<5046	G03 TO X05	*Call
2098		5133<5047	G04 TO X05	*Call
2098		5133<5048	G05 TO X05	*Call
2098		5133<5049	H01 TO X05	*Call
2098		5133<5050	H02 TO X05	*Call
2098		5133<5051	H03 TO X05	*Call
2098		5133<5052	H04 TO X05	*Call
2098		5133<5053	H05 TO X05	*Call
2098		5133<5054	I01 TO X05	*Call
2098		5133<5055	I02 TO X05	*Call
2098		5133<5056	I03 TO X05	*Call
2098		5133<5057	I04 TO X05	*Call
2098		5133<5058	I05 TO X05	*Call
2098		5133<5059	J01 TO X05	*Call
2098		5133<5060	J02 TO X05	*Call
2098		5133<5061	J03 TO X05	*Call
2098		5133<5062	J04 TO X05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5133<5063	J05 TO X05	*Call
2098		5133<5064	K01 TO X05	*Call
2098		5133<5065	K02 TO X05	*Call
2098		5133<5066	K03 TO X05	*Call
2098		5133<5067	K04 TO X05	*Call
2098		5133<5068	K05 TO X05	*Call
2098		5133<5069	L01 TO X05	*Call
2098		5133<5070	L02 TO X05	*Call
2098		5133<5071	L03 TO X05	*Call
2098		5133<5072	L04 TO X05	*Call
2098		5133<5073	L05 TO X05	*Call
2098		5133<5074	M01 TO X05	*Call
2098		5133<5075	M02 TO X05	*Call
2098		5133<5076	M03 TO X05	*Call
2098		5133<5077	M04 TO X05	*Call
2098		5133<5078	M05 TO X05	*Call
2098		5133<5079	N01 TO X05	*Call
2098		5133<5080	N02 TO X05	*Call
2098		5133<5081	N03 TO X05	*Call
2098		5133<5082	N04 TO X05	*Call
2098		5133<5083	N05 TO X05	*Call
2098		5133<5084	O01 TO X05	*Call
2098		5133<5085	O02 TO X05	*Call
2098		5133<5086	O03 TO X05	*Call
2098		5133<5087	O04 TO X05	*Call
2098		5133<5088	O05 TO X05	*Call
2098		5133<5089	P01 TO X05	*Call
2098		5133<5090	P02 TO X05	*Call
2098		5133<5091	P03 TO X05	*Call
2098		5133<5092	P04 TO X05	*Call
2098		5133<5093	P05 TO X05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5133<5094	Q01 TO X05	*Call
2098		5133<5095	Q02 TO X05	*Call
2098		5133<5096	Q03 TO X05	*Call
2098		5133<5097	Q04 TO X05	*Call
2098		5133<5098	Q05 TO X05	*Call
2098		5133<5099	R01 TO X05	*Call
2098		5133<5100	R02 TO X05	*Call
2098		5133<5101	R03 TO X05	*Call
2098		5133<5102	R04 TO X05	*Call
2098		5133<5103	R05 TO X05	*Call
2098		5133<5104	S01 TO X05	*Call
2098		5133<5105	S02 TO X05	*Call
2098		5133<5106	S03 TO X05	*Call
2098		5133<5107	S04 TO X05	*Call
2098		5133<5108	S05 TO X05	*Call
2098		5133<5109	T01 TO X05	*Call
2098		5133<5110	T02 TO X05	*Call
2098		5133<5111	T03 TO X05	*Call
2098		5133<5112	T04 TO X05	*Call
2098		5133<5113	T05 TO X05	*Call
2098		5133<5114	U01 TO X05	*Call
2098		5133<5115	U02 TO X05	*Call
2098		5133<5116	U03 TO X05	*Call
2098		5133<5117	U04 TO X05	*Call
2098		5133<5118	U05 TO X05	*Call
2098		5133<5119	V01 TO X05	*Call
2098		5133<5120	V02 TO X05	*Call
2098		5133<5121	V03 TO X05	*Call
2098		5133<5122	V04 TO X05	*Call
2098		5133<5123	V05 TO X05	*Call
2098		5133<5124	W01 TO X05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5133<5125	W02 TO X05	*Call
2098		5133<5126	W03 TO X05	*Call
2098		5133<5127	W04 TO X05	*Call
2098		5133<5128	W05 TO X05	*Call
2098		5133<5129	X01 TO X05	*Call
2098		5133<5130	X02 TO X05	*Call
2098		5133<5131	X03 TO X05	*Call
2098		5133<5132	X04 TO X05	*Call
2098		5133<5134	Y01 TO X05	*Call
2098		5133<5135	Y02 TO X05	*Call
2098		5133<5136	Y03 TO X05	*Call
2098		5133<5137	Y04 TO X05	*Call
2098		5133<5138	Y05 TO X05	*Call
2098		5133<5139	Z01 TO X05	*Call
2098		5133<5140	Z02 TO X05	*Call
2098		5133<5141	Z03 TO X05	*Call
2098		5133<5142	Z04 TO X05	*Call
2098		5133<5143	Z05 TO X05	*Call
2098		5134<5013	A00 TO Y01	*Call
2098		5134<5014	A01 TO Y01	*Call
2098		5134<5015	A02 TO Y01	*Call
2098		5134<5016	A03 TO Y01	*Call
2098		5134<5017	A04 TO Y01	*Call
2098		5134<5018	A05 TO Y01	*Call
2098		5134<5019	B01 TO Y01	*Call
2098		5134<5020	B02 TO Y01	*Call
2098		5134<5021	B03 TO Y01	*Call
2098		5134<5022	B04 TO Y01	*Call
2098		5134<5023	B05 TO Y01	*Call
2098		5134<5024	C01 TO Y01	*Call
2098		5134<5025	C02 TO Y01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5134<5026	C03 TO Y01	*Call
2098		5134<5027	C04 TO Y01	*Call
2098		5134<5028	C05 TO Y01	*Call
2098		5134<5029	D01 TO Y01	*Call
2098		5134<5030	D02 TO Y01	*Call
2098		5134<5031	D03 TO Y01	*Call
2098		5134<5032	D04 TO Y01	*Call
2098		5134<5033	D05 TO Y01	*Call
2098		5134<5034	E01 TO Y01	*Call
2098		5134<5035	E02 TO Y01	*Call
2098		5134<5036	E03 TO Y01	*Call
2098		5134<5037	E04 TO Y01	*Call
2098		5134<5038	E05 TO Y01	*Call
2098		5134<5039	F01 TO Y01	*Call
2098		5134<5040	F02 TO Y01	*Call
2098		5134<5041	F03 TO Y01	*Call
2098		5134<5042	F04 TO Y01	*Call
2098		5134<5043	F05 TO Y01	*Call
2098		5134<5044	G01 TO Y01	*Call
2098		5134<5045	G02 TO Y01	*Call
2098		5134<5046	G03 TO Y01	*Call
2098		5134<5047	G04 TO Y01	*Call
2098		5134<5048	G05 TO Y01	*Call
2098		5134<5049	H01 TO Y01	*Call
2098		5134<5050	H02 TO Y01	*Call
2098		5134<5051	H03 TO Y01	*Call
2098		5134<5052	H04 TO Y01	*Call
2098		5134<5053	H05 TO Y01	*Call
2098		5134<5054	I01 TO Y01	*Call
2098		5134<5055	I02 TO Y01	*Call
2098		5134<5056	I03 TO Y01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5134<5057	I04 TO Y01	*Call
2098		5134<5058	I05 TO Y01	*Call
2098		5134<5059	J01 TO Y01	*Call
2098		5134<5060	J02 TO Y01	*Call
2098		5134<5061	J03 TO Y01	*Call
2098		5134<5062	J04 TO Y01	*Call
2098		5134<5063	J05 TO Y01	*Call
2098		5134<5064	K01 TO Y01	*Call
2098		5134<5065	K02 TO Y01	*Call
2098		5134<5066	K03 TO Y01	*Call
2098		5134<5067	K04 TO Y01	*Call
2098		5134<5068	K05 TO Y01	*Call
2098		5134<5069	L01 TO Y01	*Call
2098		5134<5070	L02 TO Y01	*Call
2098		5134<5071	L03 TO Y01	*Call
2098		5134<5072	L04 TO Y01	*Call
2098		5134<5073	L05 TO Y01	*Call
2098		5134<5074	M01 TO Y01	*Call
2098		5134<5075	M02 TO Y01	*Call
2098		5134<5076	M03 TO Y01	*Call
2098		5134<5077	M04 TO Y01	*Call
2098		5134<5078	M05 TO Y01	*Call
2098		5134<5079	N01 TO Y01	*Call
2098		5134<5080	N02 TO Y01	*Call
2098		5134<5081	N03 TO Y01	*Call
2098		5134<5082	N04 TO Y01	*Call
2098		5134<5083	N05 TO Y01	*Call
2098		5134<5084	O01 TO Y01	*Call
2098		5134<5085	O02 TO Y01	*Call
2098		5134<5086	O03 TO Y01	*Call
2098		5134<5087	O04 TO Y01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5134<5088	O05 TO Y01	*Call
2098		5134<5089	P01 TO Y01	*Call
2098		5134<5090	P02 TO Y01	*Call
2098		5134<5091	P03 TO Y01	*Call
2098		5134<5092	P04 TO Y01	*Call
2098		5134<5093	P05 TO Y01	*Call
2098		5134<5094	Q01 TO Y01	*Call
2098		5134<5095	Q02 TO Y01	*Call
2098		5134<5096	Q03 TO Y01	*Call
2098		5134<5097	Q04 TO Y01	*Call
2098		5134<5098	Q05 TO Y01	*Call
2098		5134<5099	R01 TO Y01	*Call
2098		5134<5100	R02 TO Y01	*Call
2098		5134<5101	R03 TO Y01	*Call
2098		5134<5102	R04 TO Y01	*Call
2098		5134<5103	R05 TO Y01	*Call
2098		5134<5104	S01 TO Y01	*Call
2098		5134<5105	S02 TO Y01	*Call
2098		5134<5106	S03 TO Y01	*Call
2098		5134<5107	S04 TO Y01	*Call
2098		5134<5108	S05 TO Y01	*Call
2098		5134<5109	T01 TO Y01	*Call
2098		5134<5110	T02 TO Y01	*Call
2098		5134<5111	T03 TO Y01	*Call
2098		5134<5112	T04 TO Y01	*Call
2098		5134<5113	T05 TO Y01	*Call
2098		5134<5114	U01 TO Y01	*Call
2098		5134<5115	U02 TO Y01	*Call
2098		5134<5116	U03 TO Y01	*Call
2098		5134<5117	U04 TO Y01	*Call
2098		5134<5118	U05 TO Y01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5134<5119	V01 TO Y01	*Call
2098		5134<5120	V02 TO Y01	*Call
2098		5134<5121	V03 TO Y01	*Call
2098		5134<5122	V04 TO Y01	*Call
2098		5134<5123	V05 TO Y01	*Call
2098		5134<5124	W01 TO Y01	*Call
2098		5134<5125	W02 TO Y01	*Call
2098		5134<5126	W03 TO Y01	*Call
2098		5134<5127	W04 TO Y01	*Call
2098		5134<5128	W05 TO Y01	*Call
2098		5134<5129	X01 TO Y01	*Call
2098		5134<5130	X02 TO Y01	*Call
2098		5134<5131	X03 TO Y01	*Call
2098		5134<5132	X04 TO Y01	*Call
2098		5134<5133	X05 TO Y01	*Call
2098		5134<5135	Y02 TO Y01	*Call
2098		5134<5136	Y03 TO Y01	*Call
2098		5134<5137	Y04 TO Y01	*Call
2098		5134<5138	Y05 TO Y01	*Call
2098		5134<5139	Z01 TO Y01	*Call
2098		5134<5140	Z02 TO Y01	*Call
2098		5134<5141	Z03 TO Y01	*Call
2098		5134<5142	Z04 TO Y01	*Call
2098		5134<5143	Z05 TO Y01	*Call
2098		5135<5013	A00 TO Y02	*Call
2098		5135<5014	A01 TO Y02	*Call
2098		5135<5015	A02 TO Y02	*Call
2098		5135<5016	A03 TO Y02	*Call
2098		5135<5017	A04 TO Y02	*Call
2098		5135<5018	A05 TO Y02	*Call
2098		5135<5019	B01 TO Y02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5135<5020	B02 TO Y02	*Call
2098		5135<5021	B03 TO Y02	*Call
2098		5135<5022	B04 TO Y02	*Call
2098		5135<5023	B05 TO Y02	*Call
2098		5135<5024	C01 TO Y02	*Call
2098		5135<5025	C02 TO Y02	*Call
2098		5135<5026	C03 TO Y02	*Call
2098		5135<5027	C04 TO Y02	*Call
2098		5135<5028	C05 TO Y02	*Call
2098		5135<5029	D01 TO Y02	*Call
2098		5135<5030	D02 TO Y02	*Call
2098		5135<5031	D03 TO Y02	*Call
2098		5135<5032	D04 TO Y02	*Call
2098		5135<5033	D05 TO Y02	*Call
2098		5135<5034	E01 TO Y02	*Call
2098		5135<5035	E02 TO Y02	*Call
2098		5135<5036	E03 TO Y02	*Call
2098		5135<5037	E04 TO Y02	*Call
2098		5135<5038	E05 TO Y02	*Call
2098		5135<5039	F01 TO Y02	*Call
2098		5135<5040	F02 TO Y02	*Call
2098		5135<5041	F03 TO Y02	*Call
2098		5135<5042	F04 TO Y02	*Call
2098		5135<5043	F05 TO Y02	*Call
2098		5135<5044	G01 TO Y02	*Call
2098		5135<5045	G02 TO Y02	*Call
2098		5135<5046	G03 TO Y02	*Call
2098		5135<5047	G04 TO Y02	*Call
2098		5135<5048	G05 TO Y02	*Call
2098		5135<5049	H01 TO Y02	*Call
2098		5135<5050	H02 TO Y02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5135<5051	H03 TO Y02	*Call
2098		5135<5052	H04 TO Y02	*Call
2098		5135<5053	H05 TO Y02	*Call
2098		5135<5054	I01 TO Y02	*Call
2098		5135<5055	I02 TO Y02	*Call
2098		5135<5056	I03 TO Y02	*Call
2098		5135<5057	I04 TO Y02	*Call
2098		5135<5058	I05 TO Y02	*Call
2098		5135<5059	J01 TO Y02	*Call
2098		5135<5060	J02 TO Y02	*Call
2098		5135<5061	J03 TO Y02	*Call
2098		5135<5062	J04 TO Y02	*Call
2098		5135<5063	J05 TO Y02	*Call
2098		5135<5064	K01 TO Y02	*Call
2098		5135<5065	K02 TO Y02	*Call
2098		5135<5066	K03 TO Y02	*Call
2098		5135<5067	K04 TO Y02	*Call
2098		5135<5068	K05 TO Y02	*Call
2098		5135<5069	L01 TO Y02	*Call
2098		5135<5070	L02 TO Y02	*Call
2098		5135<5071	L03 TO Y02	*Call
2098		5135<5072	L04 TO Y02	*Call
2098		5135<5073	L05 TO Y02	*Call
2098		5135<5074	M01 TO Y02	*Call
2098		5135<5075	M02 TO Y02	*Call
2098		5135<5076	M03 TO Y02	*Call
2098		5135<5077	M04 TO Y02	*Call
2098		5135<5078	M05 TO Y02	*Call
2098		5135<5079	N01 TO Y02	*Call
2098		5135<5080	N02 TO Y02	*Call
2098		5135<5081	N03 TO Y02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5135<5082	N04 TO Y02	*Call
2098		5135<5083	N05 TO Y02	*Call
2098		5135<5084	O01 TO Y02	*Call
2098		5135<5085	O02 TO Y02	*Call
2098		5135<5086	O03 TO Y02	*Call
2098		5135<5087	O04 TO Y02	*Call
2098		5135<5088	O05 TO Y02	*Call
2098		5135<5089	P01 TO Y02	*Call
2098		5135<5090	P02 TO Y02	*Call
2098		5135<5091	P03 TO Y02	*Call
2098		5135<5092	P04 TO Y02	*Call
2098		5135<5093	P05 TO Y02	*Call
2098		5135<5094	Q01 TO Y02	*Call
2098		5135<5095	Q02 TO Y02	*Call
2098		5135<5096	Q03 TO Y02	*Call
2098		5135<5097	Q04 TO Y02	*Call
2098		5135<5098	Q05 TO Y02	*Call
2098		5135<5099	R01 TO Y02	*Call
2098		5135<5100	R02 TO Y02	*Call
2098		5135<5101	R03 TO Y02	*Call
2098		5135<5102	R04 TO Y02	*Call
2098		5135<5103	R05 TO Y02	*Call
2098		5135<5104	S01 TO Y02	*Call
2098		5135<5105	S02 TO Y02	*Call
2098		5135<5106	S03 TO Y02	*Call
2098		5135<5107	S04 TO Y02	*Call
2098		5135<5108	S05 TO Y02	*Call
2098		5135<5109	T01 TO Y02	*Call
2098		5135<5110	T02 TO Y02	*Call
2098		5135<5111	T03 TO Y02	*Call
2098		5135<5112	T04 TO Y02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5135<5113	T05 TO Y02	*Call
2098		5135<5114	U01 TO Y02	*Call
2098		5135<5115	U02 TO Y02	*Call
2098		5135<5116	U03 TO Y02	*Call
2098		5135<5117	U04 TO Y02	*Call
2098		5135<5118	U05 TO Y02	*Call
2098		5135<5119	V01 TO Y02	*Call
2098		5135<5120	V02 TO Y02	*Call
2098		5135<5121	V03 TO Y02	*Call
2098		5135<5122	V04 TO Y02	*Call
2098		5135<5123	V05 TO Y02	*Call
2098		5135<5124	W01 TO Y02	*Call
2098		5135<5125	W02 TO Y02	*Call
2098		5135<5126	W03 TO Y02	*Call
2098		5135<5127	W04 TO Y02	*Call
2098		5135<5128	W05 TO Y02	*Call
2098		5135<5129	X01 TO Y02	*Call
2098		5135<5130	X02 TO Y02	*Call
2098		5135<5131	X03 TO Y02	*Call
2098		5135<5132	X04 TO Y02	*Call
2098		5135<5133	X05 TO Y02	*Call
2098		5135<5134	Y01 TO Y02	*Call
2098		5135<5136	Y03 TO Y02	*Call
2098		5135<5137	Y04 TO Y02	*Call
2098		5135<5138	Y05 TO Y02	*Call
2098		5135<5139	Z01 TO Y02	*Call
2098		5135<5140	Z02 TO Y02	*Call
2098		5135<5141	Z03 TO Y02	*Call
2098		5135<5142	Z04 TO Y02	*Call
2098		5135<5143	Z05 TO Y02	*Call
2098		5136<5013	A00 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5136<5014	A01 TO Y03	*Call
2098		5136<5015	A02 TO Y03	*Call
2098		5136<5016	A03 TO Y03	*Call
2098		5136<5017	A04 TO Y03	*Call
2098		5136<5018	A05 TO Y03	*Call
2098		5136<5019	B01 TO Y03	*Call
2098		5136<5020	B02 TO Y03	*Call
2098		5136<5021	B03 TO Y03	*Call
2098		5136<5022	B04 TO Y03	*Call
2098		5136<5023	B05 TO Y03	*Call
2098		5136<5024	C01 TO Y03	*Call
2098		5136<5025	C02 TO Y03	*Call
2098		5136<5026	C03 TO Y03	*Call
2098		5136<5027	C04 TO Y03	*Call
2098		5136<5028	C05 TO Y03	*Call
2098		5136<5029	D01 TO Y03	*Call
2098		5136<5030	D02 TO Y03	*Call
2098		5136<5031	D03 TO Y03	*Call
2098		5136<5032	D04 TO Y03	*Call
2098		5136<5033	D05 TO Y03	*Call
2098		5136<5034	E01 TO Y03	*Call
2098		5136<5035	E02 TO Y03	*Call
2098		5136<5036	E03 TO Y03	*Call
2098		5136<5037	E04 TO Y03	*Call
2098		5136<5038	E05 TO Y03	*Call
2098		5136<5039	F01 TO Y03	*Call
2098		5136<5040	F02 TO Y03	*Call
2098		5136<5041	F03 TO Y03	*Call
2098		5136<5042	F04 TO Y03	*Call
2098		5136<5043	F05 TO Y03	*Call
2098		5136<5044	G01 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5136<5045	G02 TO Y03	*Call
2098		5136<5046	G03 TO Y03	*Call
2098		5136<5047	G04 TO Y03	*Call
2098		5136<5048	G05 TO Y03	*Call
2098		5136<5049	H01 TO Y03	*Call
2098		5136<5050	H02 TO Y03	*Call
2098		5136<5051	H03 TO Y03	*Call
2098		5136<5052	H04 TO Y03	*Call
2098		5136<5053	H05 TO Y03	*Call
2098		5136<5054	I01 TO Y03	*Call
2098		5136<5055	I02 TO Y03	*Call
2098		5136<5056	I03 TO Y03	*Call
2098		5136<5057	I04 TO Y03	*Call
2098		5136<5058	I05 TO Y03	*Call
2098		5136<5059	J01 TO Y03	*Call
2098		5136<5060	J02 TO Y03	*Call
2098		5136<5061	J03 TO Y03	*Call
2098		5136<5062	J04 TO Y03	*Call
2098		5136<5063	J05 TO Y03	*Call
2098		5136<5064	K01 TO Y03	*Call
2098		5136<5065	K02 TO Y03	*Call
2098		5136<5066	K03 TO Y03	*Call
2098		5136<5067	K04 TO Y03	*Call
2098		5136<5068	K05 TO Y03	*Call
2098		5136<5069	L01 TO Y03	*Call
2098		5136<5070	L02 TO Y03	*Call
2098		5136<5071	L03 TO Y03	*Call
2098		5136<5072	L04 TO Y03	*Call
2098		5136<5073	L05 TO Y03	*Call
2098		5136<5074	M01 TO Y03	*Call
2098		5136<5075	M02 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5136<5076	M03 TO Y03	*Call
2098		5136<5077	M04 TO Y03	*Call
2098		5136<5078	M05 TO Y03	*Call
2098		5136<5079	N01 TO Y03	*Call
2098		5136<5080	N02 TO Y03	*Call
2098		5136<5081	N03 TO Y03	*Call
2098		5136<5082	N04 TO Y03	*Call
2098		5136<5083	N05 TO Y03	*Call
2098		5136<5084	O01 TO Y03	*Call
2098		5136<5085	O02 TO Y03	*Call
2098		5136<5086	O03 TO Y03	*Call
2098		5136<5087	O04 TO Y03	*Call
2098		5136<5088	O05 TO Y03	*Call
2098		5136<5089	P01 TO Y03	*Call
2098		5136<5090	P02 TO Y03	*Call
2098		5136<5091	P03 TO Y03	*Call
2098		5136<5092	P04 TO Y03	*Call
2098		5136<5093	P05 TO Y03	*Call
2098		5136<5094	Q01 TO Y03	*Call
2098		5136<5095	Q02 TO Y03	*Call
2098		5136<5096	Q03 TO Y03	*Call
2098		5136<5097	Q04 TO Y03	*Call
2098		5136<5098	Q05 TO Y03	*Call
2098		5136<5099	R01 TO Y03	*Call
2098		5136<5100	R02 TO Y03	*Call
2098		5136<5101	R03 TO Y03	*Call
2098		5136<5102	R04 TO Y03	*Call
2098		5136<5103	R05 TO Y03	*Call
2098		5136<5104	S01 TO Y03	*Call
2098		5136<5105	S02 TO Y03	*Call
2098		5136<5106	S03 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5136<5107	S04 TO Y03	*Call
2098		5136<5108	S05 TO Y03	*Call
2098		5136<5109	T01 TO Y03	*Call
2098		5136<5110	T02 TO Y03	*Call
2098		5136<5111	T03 TO Y03	*Call
2098		5136<5112	T04 TO Y03	*Call
2098		5136<5113	T05 TO Y03	*Call
2098		5136<5114	U01 TO Y03	*Call
2098		5136<5115	U02 TO Y03	*Call
2098		5136<5116	U03 TO Y03	*Call
2098		5136<5117	U04 TO Y03	*Call
2098		5136<5118	U05 TO Y03	*Call
2098		5136<5119	V01 TO Y03	*Call
2098		5136<5120	V02 TO Y03	*Call
2098		5136<5121	V03 TO Y03	*Call
2098		5136<5122	V04 TO Y03	*Call
2098		5136<5123	V05 TO Y03	*Call
2098		5136<5124	W01 TO Y03	*Call
2098		5136<5125	W02 TO Y03	*Call
2098		5136<5126	W03 TO Y03	*Call
2098		5136<5127	W04 TO Y03	*Call
2098		5136<5128	W05 TO Y03	*Call
2098		5136<5129	X01 TO Y03	*Call
2098		5136<5130	X02 TO Y03	*Call
2098		5136<5131	X03 TO Y03	*Call
2098		5136<5132	X04 TO Y03	*Call
2098		5136<5133	X05 TO Y03	*Call
2098		5136<5134	Y01 TO Y03	*Call
2098		5136<5135	Y02 TO Y03	*Call
2098		5136<5137	Y04 TO Y03	*Call
2098		5136<5138	Y05 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5136<5139	Z01 TO Y03	*Call
2098		5136<5140	Z02 TO Y03	*Call
2098		5136<5141	Z03 TO Y03	*Call
2098		5136<5142	Z04 TO Y03	*Call
2098		5136<5143	Z05 TO Y03	*Call
2098		5137<5013	A00 TO Y04	*Call
2098		5137<5014	A01 TO Y04	*Call
2098		5137<5015	A02 TO Y04	*Call
2098		5137<5016	A03 TO Y04	*Call
2098		5137<5017	A04 TO Y04	*Call
2098		5137<5018	A05 TO Y04	*Call
2098		5137<5019	B01 TO Y04	*Call
2098		5137<5020	B02 TO Y04	*Call
2098		5137<5021	B03 TO Y04	*Call
2098		5137<5022	B04 TO Y04	*Call
2098		5137<5023	B05 TO Y04	*Call
2098		5137<5024	C01 TO Y04	*Call
2098		5137<5025	C02 TO Y04	*Call
2098		5137<5026	C03 TO Y04	*Call
2098		5137<5027	C04 TO Y04	*Call
2098		5137<5028	C05 TO Y04	*Call
2098		5137<5029	D01 TO Y04	*Call
2098		5137<5030	D02 TO Y04	*Call
2098		5137<5031	D03 TO Y04	*Call
2098		5137<5032	D04 TO Y04	*Call
2098		5137<5033	D05 TO Y04	*Call
2098		5137<5034	E01 TO Y04	*Call
2098		5137<5035	E02 TO Y04	*Call
2098		5137<5036	E03 TO Y04	*Call
2098		5137<5037	E04 TO Y04	*Call
2098		5137<5038	E05 TO Y04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5137<5039	F01 TO Y04	*Call
2098		5137<5040	F02 TO Y04	*Call
2098		5137<5041	F03 TO Y04	*Call
2098		5137<5042	F04 TO Y04	*Call
2098		5137<5043	F05 TO Y04	*Call
2098		5137<5044	G01 TO Y04	*Call
2098		5137<5045	G02 TO Y04	*Call
2098		5137<5046	G03 TO Y04	*Call
2098		5137<5047	G04 TO Y04	*Call
2098		5137<5048	G05 TO Y04	*Call
2098		5137<5049	H01 TO Y04	*Call
2098		5137<5050	H02 TO Y04	*Call
2098		5137<5051	H03 TO Y04	*Call
2098		5137<5052	H04 TO Y04	*Call
2098		5137<5053	H05 TO Y04	*Call
2098		5137<5054	I01 TO Y04	*Call
2098		5137<5055	I02 TO Y04	*Call
2098		5137<5056	I03 TO Y04	*Call
2098		5137<5057	I04 TO Y04	*Call
2098		5137<5058	I05 TO Y04	*Call
2098		5137<5059	J01 TO Y04	*Call
2098		5137<5060	J02 TO Y04	*Call
2098		5137<5061	J03 TO Y04	*Call
2098		5137<5062	J04 TO Y04	*Call
2098		5137<5063	J05 TO Y04	*Call
2098		5137<5064	K01 TO Y04	*Call
2098		5137<5065	K02 TO Y04	*Call
2098		5137<5066	K03 TO Y04	*Call
2098		5137<5067	K04 TO Y04	*Call
2098		5137<5068	K05 TO Y04	*Call
2098		5137<5069	L01 TO Y04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5137<5070	L02 TO Y04	*Call
2098		5137<5071	L03 TO Y04	*Call
2098		5137<5072	L04 TO Y04	*Call
2098		5137<5073	L05 TO Y04	*Call
2098		5137<5074	M01 TO Y04	*Call
2098		5137<5075	M02 TO Y04	*Call
2098		5137<5076	M03 TO Y04	*Call
2098		5137<5077	M04 TO Y04	*Call
2098		5137<5078	M05 TO Y04	*Call
2098		5137<5079	N01 TO Y04	*Call
2098		5137<5080	N02 TO Y04	*Call
2098		5137<5081	N03 TO Y04	*Call
2098		5137<5082	N04 TO Y04	*Call
2098		5137<5083	N05 TO Y04	*Call
2098		5137<5084	O01 TO Y04	*Call
2098		5137<5085	O02 TO Y04	*Call
2098		5137<5086	O03 TO Y04	*Call
2098		5137<5087	O04 TO Y04	*Call
2098		5137<5088	O05 TO Y04	*Call
2098		5137<5089	P01 TO Y04	*Call
2098		5137<5090	P02 TO Y04	*Call
2098		5137<5091	P03 TO Y04	*Call
2098		5137<5092	P04 TO Y04	*Call
2098		5137<5093	P05 TO Y04	*Call
2098		5137<5094	Q01 TO Y04	*Call
2098		5137<5095	Q02 TO Y04	*Call
2098		5137<5096	Q03 TO Y04	*Call
2098		5137<5097	Q04 TO Y04	*Call
2098		5137<5098	Q05 TO Y04	*Call
2098		5137<5099	R01 TO Y04	*Call
2098		5137<5100	R02 TO Y04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5137<5101	R03 TO Y04	*Call
2098		5137<5102	R04 TO Y04	*Call
2098		5137<5103	R05 TO Y04	*Call
2098		5137<5104	S01 TO Y04	*Call
2098		5137<5105	S02 TO Y04	*Call
2098		5137<5106	S03 TO Y04	*Call
2098		5137<5107	S04 TO Y04	*Call
2098		5137<5108	S05 TO Y04	*Call
2098		5137<5109	T01 TO Y04	*Call
2098		5137<5110	T02 TO Y04	*Call
2098		5137<5111	T03 TO Y04	*Call
2098		5137<5112	T04 TO Y04	*Call
2098		5137<5113	T05 TO Y04	*Call
2098		5137<5114	U01 TO Y04	*Call
2098		5137<5115	U02 TO Y04	*Call
2098		5137<5116	U03 TO Y04	*Call
2098		5137<5117	U04 TO Y04	*Call
2098		5137<5118	U05 TO Y04	*Call
2098		5137<5119	V01 TO Y04	*Call
2098		5137<5120	V02 TO Y04	*Call
2098		5137<5121	V03 TO Y04	*Call
2098		5137<5122	V04 TO Y04	*Call
2098		5137<5123	V05 TO Y04	*Call
2098		5137<5124	W01 TO Y04	*Call
2098		5137<5125	W02 TO Y04	*Call
2098		5137<5126	W03 TO Y04	*Call
2098		5137<5127	W04 TO Y04	*Call
2098		5137<5128	W05 TO Y04	*Call
2098		5137<5129	X01 TO Y04	*Call
2098		5137<5130	X02 TO Y04	*Call
2098		5137<5131	X03 TO Y04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5137<5132	X04 TO Y04	*Call
2098		5137<5133	X05 TO Y04	*Call
2098		5137<5134	Y01 TO Y04	*Call
2098		5137<5135	Y02 TO Y04	*Call
2098		5137<5136	Y03 TO Y04	*Call
2098		5137<5138	Y05 TO Y04	*Call
2098		5137<5139	Z01 TO Y04	*Call
2098		5137<5140	Z02 TO Y04	*Call
2098		5137<5141	Z03 TO Y04	*Call
2098		5137<5142	Z04 TO Y04	*Call
2098		5137<5143	Z05 TO Y04	*Call
2098		5138<5013	A00 TO Y05	*Call
2098		5138<5014	A01 TO Y05	*Call
2098		5138<5015	A02 TO Y05	*Call
2098		5138<5016	A03 TO Y05	*Call
2098		5138<5017	A04 TO Y05	*Call
2098		5138<5018	A05 TO Y05	*Call
2098		5138<5019	B01 TO Y05	*Call
2098		5138<5020	B02 TO Y05	*Call
2098		5138<5021	B03 TO Y05	*Call
2098		5138<5022	B04 TO Y05	*Call
2098		5138<5023	B05 TO Y05	*Call
2098		5138<5024	C01 TO Y05	*Call
2098		5138<5025	C02 TO Y05	*Call
2098		5138<5026	C03 TO Y05	*Call
2098		5138<5027	C04 TO Y05	*Call
2098		5138<5028	C05 TO Y05	*Call
2098		5138<5029	D01 TO Y05	*Call
2098		5138<5030	D02 TO Y05	*Call
2098		5138<5031	D03 TO Y05	*Call
2098		5138<5032	D04 TO Y05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5138<5033	D05 TO Y05	*Call
2098		5138<5034	E01 TO Y05	*Call
2098		5138<5035	E02 TO Y05	*Call
2098		5138<5036	E03 TO Y05	*Call
2098		5138<5037	E04 TO Y05	*Call
2098		5138<5038	E05 TO Y05	*Call
2098		5138<5039	F01 TO Y05	*Call
2098		5138<5040	F02 TO Y05	*Call
2098		5138<5041	F03 TO Y05	*Call
2098		5138<5042	F04 TO Y05	*Call
2098		5138<5043	F05 TO Y05	*Call
2098		5138<5044	G01 TO Y05	*Call
2098		5138<5045	G02 TO Y05	*Call
2098		5138<5046	G03 TO Y05	*Call
2098		5138<5047	G04 TO Y05	*Call
2098		5138<5048	G05 TO Y05	*Call
2098		5138<5049	H01 TO Y05	*Call
2098		5138<5050	H02 TO Y05	*Call
2098		5138<5051	H03 TO Y05	*Call
2098		5138<5052	H04 TO Y05	*Call
2098		5138<5053	H05 TO Y05	*Call
2098		5138<5054	I01 TO Y05	*Call
2098		5138<5055	I02 TO Y05	*Call
2098		5138<5056	I03 TO Y05	*Call
2098		5138<5057	I04 TO Y05	*Call
2098		5138<5058	I05 TO Y05	*Call
2098		5138<5059	J01 TO Y05	*Call
2098		5138<5060	J02 TO Y05	*Call
2098		5138<5061	J03 TO Y05	*Call
2098		5138<5062	J04 TO Y05	*Call
2098		5138<5063	J05 TO Y05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5138<5064	K01 TO Y05	*Call
2098		5138<5065	K02 TO Y05	*Call
2098		5138<5066	K03 TO Y05	*Call
2098		5138<5067	K04 TO Y05	*Call
2098		5138<5068	K05 TO Y05	*Call
2098		5138<5069	L01 TO Y05	*Call
2098		5138<5070	L02 TO Y05	*Call
2098		5138<5071	L03 TO Y05	*Call
2098		5138<5072	L04 TO Y05	*Call
2098		5138<5073	L05 TO Y05	*Call
2098		5138<5074	M01 TO Y05	*Call
2098		5138<5075	M02 TO Y05	*Call
2098		5138<5076	M03 TO Y05	*Call
2098		5138<5077	M04 TO Y05	*Call
2098		5138<5078	M05 TO Y05	*Call
2098		5138<5079	N01 TO Y05	*Call
2098		5138<5080	N02 TO Y05	*Call
2098		5138<5081	N03 TO Y05	*Call
2098		5138<5082	N04 TO Y05	*Call
2098		5138<5083	N05 TO Y05	*Call
2098		5138<5084	O01 TO Y05	*Call
2098		5138<5085	O02 TO Y05	*Call
2098		5138<5086	O03 TO Y05	*Call
2098		5138<5087	O04 TO Y05	*Call
2098		5138<5088	O05 TO Y05	*Call
2098		5138<5089	P01 TO Y05	*Call
2098		5138<5090	P02 TO Y05	*Call
2098		5138<5091	P03 TO Y05	*Call
2098		5138<5092	P04 TO Y05	*Call
2098		5138<5093	P05 TO Y05	*Call
2098		5138<5094	Q01 TO Y05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5138<5095	Q02 TO Y05	*Call
2098		5138<5096	Q03 TO Y05	*Call
2098		5138<5097	Q04 TO Y05	*Call
2098		5138<5098	Q05 TO Y05	*Call
2098		5138<5099	R01 TO Y05	*Call
2098		5138<5100	R02 TO Y05	*Call
2098		5138<5101	R03 TO Y05	*Call
2098		5138<5102	R04 TO Y05	*Call
2098		5138<5103	R05 TO Y05	*Call
2098		5138<5104	S01 TO Y05	*Call
2098		5138<5105	S02 TO Y05	*Call
2098		5138<5106	S03 TO Y05	*Call
2098		5138<5107	S04 TO Y05	*Call
2098		5138<5108	S05 TO Y05	*Call
2098		5138<5109	T01 TO Y05	*Call
2098		5138<5110	T02 TO Y05	*Call
2098		5138<5111	T03 TO Y05	*Call
2098		5138<5112	T04 TO Y05	*Call
2098		5138<5113	T05 TO Y05	*Call
2098		5138<5114	U01 TO Y05	*Call
2098		5138<5115	U02 TO Y05	*Call
2098		5138<5116	U03 TO Y05	*Call
2098		5138<5117	U04 TO Y05	*Call
2098		5138<5118	U05 TO Y05	*Call
2098		5138<5119	V01 TO Y05	*Call
2098		5138<5120	V02 TO Y05	*Call
2098		5138<5121	V03 TO Y05	*Call
2098		5138<5122	V04 TO Y05	*Call
2098		5138<5123	V05 TO Y05	*Call
2098		5138<5124	W01 TO Y05	*Call
2098		5138<5125	W02 TO Y05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5138<5126	W03 TO Y05	*Call
2098		5138<5127	W04 TO Y05	*Call
2098		5138<5128	W05 TO Y05	*Call
2098		5138<5129	X01 TO Y05	*Call
2098		5138<5130	X02 TO Y05	*Call
2098		5138<5131	X03 TO Y05	*Call
2098		5138<5132	X04 TO Y05	*Call
2098		5138<5133	X05 TO Y05	*Call
2098		5138<5134	Y01 TO Y05	*Call
2098		5138<5135	Y02 TO Y05	*Call
2098		5138<5136	Y03 TO Y05	*Call
2098		5138<5137	Y04 TO Y05	*Call
2098		5138<5139	Z01 TO Y05	*Call
2098		5138<5140	Z02 TO Y05	*Call
2098		5138<5141	Z03 TO Y05	*Call
2098		5138<5142	Z04 TO Y05	*Call
2098		5138<5143	Z05 TO Y05	*Call
2098		5139<5013	A00 TO Z01	*Call
2098		5139<5014	A01 TO Z01	*Call
2098		5139<5015	A02 TO Z01	*Call
2098		5139<5016	A03 TO Z01	*Call
2098		5139<5017	A04 TO Z01	*Call
2098		5139<5018	A05 TO Z01	*Call
2098		5139<5019	B01 TO Z01	*Call
2098		5139<5020	B02 TO Z01	*Call
2098		5139<5021	B03 TO Z01	*Call
2098		5139<5022	B04 TO Z01	*Call
2098		5139<5023	B05 TO Z01	*Call
2098		5139<5024	C01 TO Z01	*Call
2098		5139<5025	C02 TO Z01	*Call
2098		5139<5026	C03 TO Z01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5139<5027	C04 TO Z01	*Call
2098		5139<5028	C05 TO Z01	*Call
2098		5139<5029	D01 TO Z01	*Call
2098		5139<5030	D02 TO Z01	*Call
2098		5139<5031	D03 TO Z01	*Call
2098		5139<5032	D04 TO Z01	*Call
2098		5139<5033	D05 TO Z01	*Call
2098		5139<5034	E01 TO Z01	*Call
2098		5139<5035	E02 TO Z01	*Call
2098		5139<5036	E03 TO Z01	*Call
2098		5139<5037	E04 TO Z01	*Call
2098		5139<5038	E05 TO Z01	*Call
2098		5139<5039	F01 TO Z01	*Call
2098		5139<5040	F02 TO Z01	*Call
2098		5139<5041	F03 TO Z01	*Call
2098		5139<5042	F04 TO Z01	*Call
2098		5139<5043	F05 TO Z01	*Call
2098		5139<5044	G01 TO Z01	*Call
2098		5139<5045	G02 TO Z01	*Call
2098		5139<5046	G03 TO Z01	*Call
2098		5139<5047	G04 TO Z01	*Call
2098		5139<5048	G05 TO Z01	*Call
2098		5139<5049	H01 TO Z01	*Call
2098		5139<5050	H02 TO Z01	*Call
2098		5139<5051	H03 TO Z01	*Call
2098		5139<5052	H04 TO Z01	*Call
2098		5139<5053	H05 TO Z01	*Call
2098		5139<5054	I01 TO Z01	*Call
2098		5139<5055	I02 TO Z01	*Call
2098		5139<5056	I03 TO Z01	*Call
2098		5139<5057	I04 TO Z01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5139<5058	I05 TO Z01	*Call
2098		5139<5059	J01 TO Z01	*Call
2098		5139<5060	J02 TO Z01	*Call
2098		5139<5061	J03 TO Z01	*Call
2098		5139<5062	J04 TO Z01	*Call
2098		5139<5063	J05 TO Z01	*Call
2098		5139<5064	K01 TO Z01	*Call
2098		5139<5065	K02 TO Z01	*Call
2098		5139<5066	K03 TO Z01	*Call
2098		5139<5067	K04 TO Z01	*Call
2098		5139<5068	K05 TO Z01	*Call
2098		5139<5069	L01 TO Z01	*Call
2098		5139<5070	L02 TO Z01	*Call
2098		5139<5071	L03 TO Z01	*Call
2098		5139<5072	L04 TO Z01	*Call
2098		5139<5073	L05 TO Z01	*Call
2098		5139<5074	M01 TO Z01	*Call
2098		5139<5075	M02 TO Z01	*Call
2098		5139<5076	M03 TO Z01	*Call
2098		5139<5077	M04 TO Z01	*Call
2098		5139<5078	M05 TO Z01	*Call
2098		5139<5079	N01 TO Z01	*Call
2098		5139<5080	N02 TO Z01	*Call
2098		5139<5081	N03 TO Z01	*Call
2098		5139<5082	N04 TO Z01	*Call
2098		5139<5083	N05 TO Z01	*Call
2098		5139<5084	O01 TO Z01	*Call
2098		5139<5085	O02 TO Z01	*Call
2098		5139<5086	O03 TO Z01	*Call
2098		5139<5087	O04 TO Z01	*Call
2098		5139<5088	O05 TO Z01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5139<5089	P01 TO Z01	*Call
2098		5139<5090	P02 TO Z01	*Call
2098		5139<5091	P03 TO Z01	*Call
2098		5139<5092	P04 TO Z01	*Call
2098		5139<5093	P05 TO Z01	*Call
2098		5139<5094	Q01 TO Z01	*Call
2098		5139<5095	Q02 TO Z01	*Call
2098		5139<5096	Q03 TO Z01	*Call
2098		5139<5097	Q04 TO Z01	*Call
2098		5139<5098	Q05 TO Z01	*Call
2098		5139<5099	R01 TO Z01	*Call
2098		5139<5100	R02 TO Z01	*Call
2098		5139<5101	R03 TO Z01	*Call
2098		5139<5102	R04 TO Z01	*Call
2098		5139<5103	R05 TO Z01	*Call
2098		5139<5104	S01 TO Z01	*Call
2098		5139<5105	S02 TO Z01	*Call
2098		5139<5106	S03 TO Z01	*Call
2098		5139<5107	S04 TO Z01	*Call
2098		5139<5108	S05 TO Z01	*Call
2098		5139<5109	T01 TO Z01	*Call
2098		5139<5110	T02 TO Z01	*Call
2098		5139<5111	T03 TO Z01	*Call
2098		5139<5112	T04 TO Z01	*Call
2098		5139<5113	T05 TO Z01	*Call
2098		5139<5114	U01 TO Z01	*Call
2098		5139<5115	U02 TO Z01	*Call
2098		5139<5116	U03 TO Z01	*Call
2098		5139<5117	U04 TO Z01	*Call
2098		5139<5118	U05 TO Z01	*Call
2098		5139<5119	V01 TO Z01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5139<5120	V02 TO Z01	*Call
2098		5139<5121	V03 TO Z01	*Call
2098		5139<5122	V04 TO Z01	*Call
2098		5139<5123	V05 TO Z01	*Call
2098		5139<5124	W01 TO Z01	*Call
2098		5139<5125	W02 TO Z01	*Call
2098		5139<5126	W03 TO Z01	*Call
2098		5139<5127	W04 TO Z01	*Call
2098		5139<5128	W05 TO Z01	*Call
2098		5139<5129	X01 TO Z01	*Call
2098		5139<5130	X02 TO Z01	*Call
2098		5139<5131	X03 TO Z01	*Call
2098		5139<5132	X04 TO Z01	*Call
2098		5139<5133	X05 TO Z01	*Call
2098		5139<5134	Y01 TO Z01	*Call
2098		5139<5135	Y02 TO Z01	*Call
2098		5139<5136	Y03 TO Z01	*Call
2098		5139<5137	Y04 TO Z01	*Call
2098		5139<5138	Y05 TO Z01	*Call
2098		5139<5140	Z02 TO Z01	*Call
2098		5139<5141	Z03 TO Z01	*Call
2098		5139<5142	Z04 TO Z01	*Call
2098		5139<5143	Z05 TO Z01	*Call
2098		5140<5013	A00 TO Z02	*Call
2098		5140<5014	A01 TO Z02	*Call
2098		5140<5015	A02 TO Z02	*Call
2098		5140<5016	A03 TO Z02	*Call
2098		5140<5017	A04 TO Z02	*Call
2098		5140<5018	A05 TO Z02	*Call
2098		5140<5019	B01 TO Z02	*Call
2098		5140<5020	B02 TO Z02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5140<5021	B03 TO Z02	*Call
2098		5140<5022	B04 TO Z02	*Call
2098		5140<5023	B05 TO Z02	*Call
2098		5140<5024	C01 TO Z02	*Call
2098		5140<5025	C02 TO Z02	*Call
2098		5140<5026	C03 TO Z02	*Call
2098		5140<5027	C04 TO Z02	*Call
2098		5140<5028	C05 TO Z02	*Call
2098		5140<5029	D01 TO Z02	*Call
2098		5140<5030	D02 TO Z02	*Call
2098		5140<5031	D03 TO Z02	*Call
2098		5140<5032	D04 TO Z02	*Call
2098		5140<5033	D05 TO Z02	*Call
2098		5140<5034	E01 TO Z02	*Call
2098		5140<5035	E02 TO Z02	*Call
2098		5140<5036	E03 TO Z02	*Call
2098		5140<5037	E04 TO Z02	*Call
2098		5140<5038	E05 TO Z02	*Call
2098		5140<5039	F01 TO Z02	*Call
2098		5140<5040	F02 TO Z02	*Call
2098		5140<5041	F03 TO Z02	*Call
2098		5140<5042	F04 TO Z02	*Call
2098		5140<5043	F05 TO Z02	*Call
2098		5140<5044	G01 TO Z02	*Call
2098		5140<5045	G02 TO Z02	*Call
2098		5140<5046	G03 TO Z02	*Call
2098		5140<5047	G04 TO Z02	*Call
2098		5140<5048	G05 TO Z02	*Call
2098		5140<5049	H01 TO Z02	*Call
2098		5140<5050	H02 TO Z02	*Call
2098		5140<5051	H03 TO Z02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5140<5052	H04 TO Z02	*Call
2098		5140<5053	H05 TO Z02	*Call
2098		5140<5054	I01 TO Z02	*Call
2098		5140<5055	I02 TO Z02	*Call
2098		5140<5056	I03 TO Z02	*Call
2098		5140<5057	I04 TO Z02	*Call
2098		5140<5058	I05 TO Z02	*Call
2098		5140<5059	J01 TO Z02	*Call
2098		5140<5060	J02 TO Z02	*Call
2098		5140<5061	J03 TO Z02	*Call
2098		5140<5062	J04 TO Z02	*Call
2098		5140<5063	J05 TO Z02	*Call
2098		5140<5064	K01 TO Z02	*Call
2098		5140<5065	K02 TO Z02	*Call
2098		5140<5066	K03 TO Z02	*Call
2098		5140<5067	K04 TO Z02	*Call
2098		5140<5068	K05 TO Z02	*Call
2098		5140<5069	L01 TO Z02	*Call
2098		5140<5070	L02 TO Z02	*Call
2098		5140<5071	L03 TO Z02	*Call
2098		5140<5072	L04 TO Z02	*Call
2098		5140<5073	L05 TO Z02	*Call
2098		5140<5074	M01 TO Z02	*Call
2098		5140<5075	M02 TO Z02	*Call
2098		5140<5076	M03 TO Z02	*Call
2098		5140<5077	M04 TO Z02	*Call
2098		5140<5078	M05 TO Z02	*Call
2098		5140<5079	N01 TO Z02	*Call
2098		5140<5080	N02 TO Z02	*Call
2098		5140<5081	N03 TO Z02	*Call
2098		5140<5082	N04 TO Z02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5140<5083	N05 TO Z02	*Call
2098		5140<5084	O01 TO Z02	*Call
2098		5140<5085	O02 TO Z02	*Call
2098		5140<5086	O03 TO Z02	*Call
2098		5140<5087	O04 TO Z02	*Call
2098		5140<5088	O05 TO Z02	*Call
2098		5140<5089	P01 TO Z02	*Call
2098		5140<5090	P02 TO Z02	*Call
2098		5140<5091	P03 TO Z02	*Call
2098		5140<5092	P04 TO Z02	*Call
2098		5140<5093	P05 TO Z02	*Call
2098		5140<5094	Q01 TO Z02	*Call
2098		5140<5095	Q02 TO Z02	*Call
2098		5140<5096	Q03 TO Z02	*Call
2098		5140<5097	Q04 TO Z02	*Call
2098		5140<5098	Q05 TO Z02	*Call
2098		5140<5099	R01 TO Z02	*Call
2098		5140<5100	R02 TO Z02	*Call
2098		5140<5101	R03 TO Z02	*Call
2098		5140<5102	R04 TO Z02	*Call
2098		5140<5103	R05 TO Z02	*Call
2098		5140<5104	S01 TO Z02	*Call
2098		5140<5105	S02 TO Z02	*Call
2098		5140<5106	S03 TO Z02	*Call
2098		5140<5107	S04 TO Z02	*Call
2098		5140<5108	S05 TO Z02	*Call
2098		5140<5109	T01 TO Z02	*Call
2098		5140<5110	T02 TO Z02	*Call
2098		5140<5111	T03 TO Z02	*Call
2098		5140<5112	T04 TO Z02	*Call
2098		5140<5113	T05 TO Z02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5140<5114	U01 TO Z02	*Call
2098		5140<5115	U02 TO Z02	*Call
2098		5140<5116	U03 TO Z02	*Call
2098		5140<5117	U04 TO Z02	*Call
2098		5140<5118	U05 TO Z02	*Call
2098		5140<5119	V01 TO Z02	*Call
2098		5140<5120	V02 TO Z02	*Call
2098		5140<5121	V03 TO Z02	*Call
2098		5140<5122	V04 TO Z02	*Call
2098		5140<5123	V05 TO Z02	*Call
2098		5140<5124	W01 TO Z02	*Call
2098		5140<5125	W02 TO Z02	*Call
2098		5140<5126	W03 TO Z02	*Call
2098		5140<5127	W04 TO Z02	*Call
2098		5140<5128	W05 TO Z02	*Call
2098		5140<5129	X01 TO Z02	*Call
2098		5140<5130	X02 TO Z02	*Call
2098		5140<5131	X03 TO Z02	*Call
2098		5140<5132	X04 TO Z02	*Call
2098		5140<5133	X05 TO Z02	*Call
2098		5140<5134	Y01 TO Z02	*Call
2098		5140<5135	Y02 TO Z02	*Call
2098		5140<5136	Y03 TO Z02	*Call
2098		5140<5137	Y04 TO Z02	*Call
2098		5140<5138	Y05 TO Z02	*Call
2098		5140<5139	Z01 TO Z02	*Call
2098		5140<5141	Z03 TO Z02	*Call
2098		5140<5142	Z04 TO Z02	*Call
2098		5140<5143	Z05 TO Z02	*Call
2098		5141<5013	A00 TO Z03	*Call
2098		5141<5014	A01 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5141<5015	A02 TO Z03	*Call
2098		5141<5016	A03 TO Z03	*Call
2098		5141<5017	A04 TO Z03	*Call
2098		5141<5018	A05 TO Z03	*Call
2098		5141<5019	B01 TO Z03	*Call
2098		5141<5020	B02 TO Z03	*Call
2098		5141<5021	B03 TO Z03	*Call
2098		5141<5022	B04 TO Z03	*Call
2098		5141<5023	B05 TO Z03	*Call
2098		5141<5024	C01 TO Z03	*Call
2098		5141<5025	C02 TO Z03	*Call
2098		5141<5026	C03 TO Z03	*Call
2098		5141<5027	C04 TO Z03	*Call
2098		5141<5028	C05 TO Z03	*Call
2098		5141<5029	D01 TO Z03	*Call
2098		5141<5030	D02 TO Z03	*Call
2098		5141<5031	D03 TO Z03	*Call
2098		5141<5032	D04 TO Z03	*Call
2098		5141<5033	D05 TO Z03	*Call
2098		5141<5034	E01 TO Z03	*Call
2098		5141<5035	E02 TO Z03	*Call
2098		5141<5036	E03 TO Z03	*Call
2098		5141<5037	E04 TO Z03	*Call
2098		5141<5038	E05 TO Z03	*Call
2098		5141<5039	F01 TO Z03	*Call
2098		5141<5040	F02 TO Z03	*Call
2098		5141<5041	F03 TO Z03	*Call
2098		5141<5042	F04 TO Z03	*Call
2098		5141<5043	F05 TO Z03	*Call
2098		5141<5044	G01 TO Z03	*Call
2098		5141<5045	G02 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5141<5046	G03 TO Z03	*Call
2098		5141<5047	G04 TO Z03	*Call
2098		5141<5048	G05 TO Z03	*Call
2098		5141<5049	H01 TO Z03	*Call
2098		5141<5050	H02 TO Z03	*Call
2098		5141<5051	H03 TO Z03	*Call
2098		5141<5052	H04 TO Z03	*Call
2098		5141<5053	H05 TO Z03	*Call
2098		5141<5054	I01 TO Z03	*Call
2098		5141<5055	I02 TO Z03	*Call
2098		5141<5056	I03 TO Z03	*Call
2098		5141<5057	I04 TO Z03	*Call
2098		5141<5058	I05 TO Z03	*Call
2098		5141<5059	J01 TO Z03	*Call
2098		5141<5060	J02 TO Z03	*Call
2098		5141<5061	J03 TO Z03	*Call
2098		5141<5062	J04 TO Z03	*Call
2098		5141<5063	J05 TO Z03	*Call
2098		5141<5064	K01 TO Z03	*Call
2098		5141<5065	K02 TO Z03	*Call
2098		5141<5066	K03 TO Z03	*Call
2098		5141<5067	K04 TO Z03	*Call
2098		5141<5068	K05 TO Z03	*Call
2098		5141<5069	L01 TO Z03	*Call
2098		5141<5070	L02 TO Z03	*Call
2098		5141<5071	L03 TO Z03	*Call
2098		5141<5072	L04 TO Z03	*Call
2098		5141<5073	L05 TO Z03	*Call
2098		5141<5074	M01 TO Z03	*Call
2098		5141<5075	M02 TO Z03	*Call
2098		5141<5076	M03 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5141<5077	M04 TO Z03	*Call
2098		5141<5078	M05 TO Z03	*Call
2098		5141<5079	N01 TO Z03	*Call
2098		5141<5080	N02 TO Z03	*Call
2098		5141<5081	N03 TO Z03	*Call
2098		5141<5082	N04 TO Z03	*Call
2098		5141<5083	N05 TO Z03	*Call
2098		5141<5084	O01 TO Z03	*Call
2098		5141<5085	O02 TO Z03	*Call
2098		5141<5086	O03 TO Z03	*Call
2098		5141<5087	O04 TO Z03	*Call
2098		5141<5088	O05 TO Z03	*Call
2098		5141<5089	P01 TO Z03	*Call
2098		5141<5090	P02 TO Z03	*Call
2098		5141<5091	P03 TO Z03	*Call
2098		5141<5092	P04 TO Z03	*Call
2098		5141<5093	P05 TO Z03	*Call
2098		5141<5094	Q01 TO Z03	*Call
2098		5141<5095	Q02 TO Z03	*Call
2098		5141<5096	Q03 TO Z03	*Call
2098		5141<5097	Q04 TO Z03	*Call
2098		5141<5098	Q05 TO Z03	*Call
2098		5141<5099	R01 TO Z03	*Call
2098		5141<5100	R02 TO Z03	*Call
2098		5141<5101	R03 TO Z03	*Call
2098		5141<5102	R04 TO Z03	*Call
2098		5141<5103	R05 TO Z03	*Call
2098		5141<5104	S01 TO Z03	*Call
2098		5141<5105	S02 TO Z03	*Call
2098		5141<5106	S03 TO Z03	*Call
2098		5141<5107	S04 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5141<5108	S05 TO Z03	*Call
2098		5141<5109	T01 TO Z03	*Call
2098		5141<5110	T02 TO Z03	*Call
2098		5141<5111	T03 TO Z03	*Call
2098		5141<5112	T04 TO Z03	*Call
2098		5141<5113	T05 TO Z03	*Call
2098		5141<5114	U01 TO Z03	*Call
2098		5141<5115	U02 TO Z03	*Call
2098		5141<5116	U03 TO Z03	*Call
2098		5141<5117	U04 TO Z03	*Call
2098		5141<5118	U05 TO Z03	*Call
2098		5141<5119	V01 TO Z03	*Call
2098		5141<5120	V02 TO Z03	*Call
2098		5141<5121	V03 TO Z03	*Call
2098		5141<5122	V04 TO Z03	*Call
2098		5141<5123	V05 TO Z03	*Call
2098		5141<5124	W01 TO Z03	*Call
2098		5141<5125	W02 TO Z03	*Call
2098		5141<5126	W03 TO Z03	*Call
2098		5141<5127	W04 TO Z03	*Call
2098		5141<5128	W05 TO Z03	*Call
2098		5141<5129	X01 TO Z03	*Call
2098		5141<5130	X02 TO Z03	*Call
2098		5141<5131	X03 TO Z03	*Call
2098		5141<5132	X04 TO Z03	*Call
2098		5141<5133	X05 TO Z03	*Call
2098		5141<5134	Y01 TO Z03	*Call
2098		5141<5135	Y02 TO Z03	*Call
2098		5141<5136	Y03 TO Z03	*Call
2098		5141<5137	Y04 TO Z03	*Call
2098		5141<5138	Y05 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5141<5139	Z01 TO Z03	*Call
2098		5141<5140	Z02 TO Z03	*Call
2098		5141<5142	Z04 TO Z03	*Call
2098		5141<5143	Z05 TO Z03	*Call
2098		5142<5013	A00 TO Z04	*Call
2098		5142<5014	A01 TO Z04	*Call
2098		5142<5015	A02 TO Z04	*Call
2098		5142<5016	A03 TO Z04	*Call
2098		5142<5017	A04 TO Z04	*Call
2098		5142<5018	A05 TO Z04	*Call
2098		5142<5019	B01 TO Z04	*Call
2098		5142<5020	B02 TO Z04	*Call
2098		5142<5021	B03 TO Z04	*Call
2098		5142<5022	B04 TO Z04	*Call
2098		5142<5023	B05 TO Z04	*Call
2098		5142<5024	C01 TO Z04	*Call
2098		5142<5025	C02 TO Z04	*Call
2098		5142<5026	C03 TO Z04	*Call
2098		5142<5027	C04 TO Z04	*Call
2098		5142<5028	C05 TO Z04	*Call
2098		5142<5029	D01 TO Z04	*Call
2098		5142<5030	D02 TO Z04	*Call
2098		5142<5031	D03 TO Z04	*Call
2098		5142<5032	D04 TO Z04	*Call
2098		5142<5033	D05 TO Z04	*Call
2098		5142<5034	E01 TO Z04	*Call
2098		5142<5035	E02 TO Z04	*Call
2098		5142<5036	E03 TO Z04	*Call
2098		5142<5037	E04 TO Z04	*Call
2098		5142<5038	E05 TO Z04	*Call
2098		5142<5039	F01 TO Z04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5142<5040	F02 TO Z04	*Call
2098		5142<5041	F03 TO Z04	*Call
2098		5142<5042	F04 TO Z04	*Call
2098		5142<5043	F05 TO Z04	*Call
2098		5142<5044	G01 TO Z04	*Call
2098		5142<5045	G02 TO Z04	*Call
2098		5142<5046	G03 TO Z04	*Call
2098		5142<5047	G04 TO Z04	*Call
2098		5142<5048	G05 TO Z04	*Call
2098		5142<5049	H01 TO Z04	*Call
2098		5142<5050	H02 TO Z04	*Call
2098		5142<5051	H03 TO Z04	*Call
2098		5142<5052	H04 TO Z04	*Call
2098		5142<5053	H05 TO Z04	*Call
2098		5142<5054	I01 TO Z04	*Call
2098		5142<5055	I02 TO Z04	*Call
2098		5142<5056	I03 TO Z04	*Call
2098		5142<5057	I04 TO Z04	*Call
2098		5142<5058	I05 TO Z04	*Call
2098		5142<5059	J01 TO Z04	*Call
2098		5142<5060	J02 TO Z04	*Call
2098		5142<5061	J03 TO Z04	*Call
2098		5142<5062	J04 TO Z04	*Call
2098		5142<5063	J05 TO Z04	*Call
2098		5142<5064	K01 TO Z04	*Call
2098		5142<5065	K02 TO Z04	*Call
2098		5142<5066	K03 TO Z04	*Call
2098		5142<5067	K04 TO Z04	*Call
2098		5142<5068	K05 TO Z04	*Call
2098		5142<5069	L01 TO Z04	*Call
2098		5142<5070	L02 TO Z04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5142<5071	L03 TO Z04	*Call
2098		5142<5072	L04 TO Z04	*Call
2098		5142<5073	L05 TO Z04	*Call
2098		5142<5074	M01 TO Z04	*Call
2098		5142<5075	M02 TO Z04	*Call
2098		5142<5076	M03 TO Z04	*Call
2098		5142<5077	M04 TO Z04	*Call
2098		5142<5078	M05 TO Z04	*Call
2098		5142<5079	N01 TO Z04	*Call
2098		5142<5080	N02 TO Z04	*Call
2098		5142<5081	N03 TO Z04	*Call
2098		5142<5082	N04 TO Z04	*Call
2098		5142<5083	N05 TO Z04	*Call
2098		5142<5084	O01 TO Z04	*Call
2098		5142<5085	O02 TO Z04	*Call
2098		5142<5086	O03 TO Z04	*Call
2098		5142<5087	O04 TO Z04	*Call
2098		5142<5088	O05 TO Z04	*Call
2098		5142<5089	P01 TO Z04	*Call
2098		5142<5090	P02 TO Z04	*Call
2098		5142<5091	P03 TO Z04	*Call
2098		5142<5092	P04 TO Z04	*Call
2098		5142<5093	P05 TO Z04	*Call
2098		5142<5094	Q01 TO Z04	*Call
2098		5142<5095	Q02 TO Z04	*Call
2098		5142<5096	Q03 TO Z04	*Call
2098		5142<5097	Q04 TO Z04	*Call
2098		5142<5098	Q05 TO Z04	*Call
2098		5142<5099	R01 TO Z04	*Call
2098		5142<5100	R02 TO Z04	*Call
2098		5142<5101	R03 TO Z04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5142<5102	R04 TO Z04	*Call
2098		5142<5103	R05 TO Z04	*Call
2098		5142<5104	S01 TO Z04	*Call
2098		5142<5105	S02 TO Z04	*Call
2098		5142<5106	S03 TO Z04	*Call
2098		5142<5107	S04 TO Z04	*Call
2098		5142<5108	S05 TO Z04	*Call
2098		5142<5109	T01 TO Z04	*Call
2098		5142<5110	T02 TO Z04	*Call
2098		5142<5111	T03 TO Z04	*Call
2098		5142<5112	T04 TO Z04	*Call
2098		5142<5113	T05 TO Z04	*Call
2098		5142<5114	U01 TO Z04	*Call
2098		5142<5115	U02 TO Z04	*Call
2098		5142<5116	U03 TO Z04	*Call
2098		5142<5117	U04 TO Z04	*Call
2098		5142<5118	U05 TO Z04	*Call
2098		5142<5119	V01 TO Z04	*Call
2098		5142<5120	V02 TO Z04	*Call
2098		5142<5121	V03 TO Z04	*Call
2098		5142<5122	V04 TO Z04	*Call
2098		5142<5123	V05 TO Z04	*Call
2098		5142<5124	W01 TO Z04	*Call
2098		5142<5125	W02 TO Z04	*Call
2098		5142<5126	W03 TO Z04	*Call
2098		5142<5127	W04 TO Z04	*Call
2098		5142<5128	W05 TO Z04	*Call
2098		5142<5129	X01 TO Z04	*Call
2098		5142<5130	X02 TO Z04	*Call
2098		5142<5131	X03 TO Z04	*Call
2098		5142<5132	X04 TO Z04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5142<5133	X05 TO Z04	*Call
2098		5142<5134	Y01 TO Z04	*Call
2098		5142<5135	Y02 TO Z04	*Call
2098		5142<5136	Y03 TO Z04	*Call
2098		5142<5137	Y04 TO Z04	*Call
2098		5142<5138	Y05 TO Z04	*Call
2098		5142<5139	Z01 TO Z04	*Call
2098		5142<5140	Z02 TO Z04	*Call
2098		5142<5141	Z03 TO Z04	*Call
2098		5142<5143	Z05 TO Z04	*Call
2098		5143<5013	A00 TO Z05	*Call
2098		5143<5014	A01 TO Z05	*Call
2098		5143<5015	A02 TO Z05	*Call
2098		5143<5016	A03 TO Z05	*Call
2098		5143<5017	A04 TO Z05	*Call
2098		5143<5018	A05 TO Z05	*Call
2098		5143<5019	B01 TO Z05	*Call
2098		5143<5020	B02 TO Z05	*Call
2098		5143<5021	B03 TO Z05	*Call
2098		5143<5022	B04 TO Z05	*Call
2098		5143<5023	B05 TO Z05	*Call
2098		5143<5024	C01 TO Z05	*Call
2098		5143<5025	C02 TO Z05	*Call
2098		5143<5026	C03 TO Z05	*Call
2098		5143<5027	C04 TO Z05	*Call
2098		5143<5028	C05 TO Z05	*Call
2098		5143<5029	D01 TO Z05	*Call
2098		5143<5030	D02 TO Z05	*Call
2098		5143<5031	D03 TO Z05	*Call
2098		5143<5032	D04 TO Z05	*Call
2098		5143<5033	D05 TO Z05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5143<5034	E01 TO Z05	*Call
2098		5143<5035	E02 TO Z05	*Call
2098		5143<5036	E03 TO Z05	*Call
2098		5143<5037	E04 TO Z05	*Call
2098		5143<5038	E05 TO Z05	*Call
2098		5143<5039	F01 TO Z05	*Call
2098		5143<5040	F02 TO Z05	*Call
2098		5143<5041	F03 TO Z05	*Call
2098		5143<5042	F04 TO Z05	*Call
2098		5143<5043	F05 TO Z05	*Call
2098		5143<5044	G01 TO Z05	*Call
2098		5143<5045	G02 TO Z05	*Call
2098		5143<5046	G03 TO Z05	*Call
2098		5143<5047	G04 TO Z05	*Call
2098		5143<5048	G05 TO Z05	*Call
2098		5143<5049	H01 TO Z05	*Call
2098		5143<5050	H02 TO Z05	*Call
2098		5143<5051	H03 TO Z05	*Call
2098		5143<5052	H04 TO Z05	*Call
2098		5143<5053	H05 TO Z05	*Call
2098		5143<5054	I01 TO Z05	*Call
2098		5143<5055	I02 TO Z05	*Call
2098		5143<5056	I03 TO Z05	*Call
2098		5143<5057	I04 TO Z05	*Call
2098		5143<5058	I05 TO Z05	*Call
2098		5143<5059	J01 TO Z05	*Call
2098		5143<5060	J02 TO Z05	*Call
2098		5143<5061	J03 TO Z05	*Call
2098		5143<5062	J04 TO Z05	*Call
2098		5143<5063	J05 TO Z05	*Call
2098		5143<5064	K01 TO Z05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5143<5065	K02 TO Z05	*Call
2098		5143<5066	K03 TO Z05	*Call
2098		5143<5067	K04 TO Z05	*Call
2098		5143<5068	K05 TO Z05	*Call
2098		5143<5069	L01 TO Z05	*Call
2098		5143<5070	L02 TO Z05	*Call
2098		5143<5071	L03 TO Z05	*Call
2098		5143<5072	L04 TO Z05	*Call
2098		5143<5073	L05 TO Z05	*Call
2098		5143<5074	M01 TO Z05	*Call
2098		5143<5075	M02 TO Z05	*Call
2098		5143<5076	M03 TO Z05	*Call
2098		5143<5077	M04 TO Z05	*Call
2098		5143<5078	M05 TO Z05	*Call
2098		5143<5079	N01 TO Z05	*Call
2098		5143<5080	N02 TO Z05	*Call
2098		5143<5081	N03 TO Z05	*Call
2098		5143<5082	N04 TO Z05	*Call
2098		5143<5083	N05 TO Z05	*Call
2098		5143<5084	O01 TO Z05	*Call
2098		5143<5085	O02 TO Z05	*Call
2098		5143<5086	O03 TO Z05	*Call
2098		5143<5087	O04 TO Z05	*Call
2098		5143<5088	O05 TO Z05	*Call
2098		5143<5089	P01 TO Z05	*Call
2098		5143<5090	P02 TO Z05	*Call
2098		5143<5091	P03 TO Z05	*Call
2098		5143<5092	P04 TO Z05	*Call
2098		5143<5093	P05 TO Z05	*Call
2098		5143<5094	Q01 TO Z05	*Call
2098		5143<5095	Q02 TO Z05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5143<5096	Q03 TO Z05	*Call
2098		5143<5097	Q04 TO Z05	*Call
2098		5143<5098	Q05 TO Z05	*Call
2098		5143<5099	R01 TO Z05	*Call
2098		5143<5100	R02 TO Z05	*Call
2098		5143<5101	R03 TO Z05	*Call
2098		5143<5102	R04 TO Z05	*Call
2098		5143<5103	R05 TO Z05	*Call
2098		5143<5104	S01 TO Z05	*Call
2098		5143<5105	S02 TO Z05	*Call
2098		5143<5106	S03 TO Z05	*Call
2098		5143<5107	S04 TO Z05	*Call
2098		5143<5108	S05 TO Z05	*Call
2098		5143<5109	T01 TO Z05	*Call
2098		5143<5110	T02 TO Z05	*Call
2098		5143<5111	T03 TO Z05	*Call
2098		5143<5112	T04 TO Z05	*Call
2098		5143<5113	T05 TO Z05	*Call
2098		5143<5114	U01 TO Z05	*Call
2098		5143<5115	U02 TO Z05	*Call
2098		5143<5116	U03 TO Z05	*Call
2098		5143<5117	U04 TO Z05	*Call
2098		5143<5118	U05 TO Z05	*Call
2098		5143<5119	V01 TO Z05	*Call
2098		5143<5120	V02 TO Z05	*Call
2098		5143<5121	V03 TO Z05	*Call
2098		5143<5122	V04 TO Z05	*Call
2098		5143<5123	V05 TO Z05	*Call
2098		5143<5124	W01 TO Z05	*Call
2098		5143<5125	W02 TO Z05	*Call
2098		5143<5126	W03 TO Z05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		5143<5127	W04 TO Z05	*Call
2098		5143<5128	W05 TO Z05	*Call
2098		5143<5129	X01 TO Z05	*Call
2098		5143<5130	X02 TO Z05	*Call
2098		5143<5131	X03 TO Z05	*Call
2098		5143<5132	X04 TO Z05	*Call
2098		5143<5133	X05 TO Z05	*Call
2098		5143<5134	Y01 TO Z05	*Call
2098		5143<5135	Y02 TO Z05	*Call
2098		5143<5136	Y03 TO Z05	*Call
2098		5143<5137	Y04 TO Z05	*Call
2098		5143<5138	Y05 TO Z05	*Call
2098		5143<5139	Z01 TO Z05	*Call
2098		5143<5140	Z02 TO Z05	*Call
2098		5143<5141	Z03 TO Z05	*Call
2098		5143<5142	Z04 TO Z05	*Call
2098		6650<6651	ICF TO IFL	*Call
2098		6650<6652	ADDL SAP TO IFL	*Call
2098		6650<6653	ZAAP TO IFL	*Call
2098		6650<6654	ZIIP TO IFL	*Call
2098		6651<6650	IFL TO ICF	*Call
2098		6651<6652	ADDL SAP TO ICF	*Call
2098		6651<6653	ZAAP TO ICF	*Call
2098		6651<6654	ZIIP TO ICF	*Call
2098		6651<6655	UIFL TO ICF	*Call
2098		6652<6650	IFL TO ADDL SAP	*Call
2098		6652<6651	ICF TO ADDL SAP	*Call
2098		6652<6653	ZAAP TO ADDL SAP	*Call
2098		6652<6654	ZIIP TO ADDL SAP	*Call
2098		6652<6655	UIFL TO ADDL SAP	*Call
2098		6653<6650	IFL TO ZAAP	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098		6653<6651	ICF TO ZAAP	*Call
2098		6653<6652	ADDL SAP TO ZAAP	*Call
2098		6653<6654	ZIIP TO ZAAP	*Call
2098		6653<6655	UIFL TO ZAAP	*Call
2098		6654<6650	IFL TO ZIIP	*Call
2098		6654<6651	ICF TO ZIIP	*Call
2098		6654<6652	ADDL SAP TO ZIIP	*Call
2098		6654<6653	ZAAP TO ZIIP	*Call
2098		6654<6655	UIFL TO ZIIP	*Call
2098		6655<6651	ICF TO UIFL	*Call
2098		6655<6652	ADDL SAP TO UIFL	*Call
2098		6655<6653	ZAAP TO UIFL	*Call
2098		6655<6654	ZIIP TO UIFL	*Call
2098<2086		0079<0080	IC TR/EN TO HMC DUAL EN	*Call
2098<2086		0081<0082	IC TR/EN TO HMC DUAL EN	*Call
2098<2086		0084<0085	IC TR/EN TO HMC DUAL EN	*Call
2098<2086		2403<3102	8 GB TO 12 GB	*Call
2098<2086		2404<3102	8 GB TO 16 GB	*Call
2098<2086		2405<3102	8 GB TO 20 GB	*Call
2098<2086		2405<3104	16 GB TO 20 GB	*Call
2098<2086		2406<3102	8 GB TO 24 GB	*Call
2098<2086		2406<3104	16 GB TO 24 GB	*Call
2098<2086		2407<3102	8 GB TO 28 GB	*Call
2098<2086		2407<3104	16 GB TO 28 GB	*Call
2098<2086		2407<3106	24 GB TO 28 GB	*Call
2098<2086		2408<3102	8 GB TO 32 GB	*Call
2098<2086		2408<3104	16 GB TO 32 GB	*Call
2098<2086		2408<3106	24 GB TO 32 GB	*Call
2098<2086		2409<3102	8 GB TO 40 GB	*Call
2098<2086		2409<3104	16 GB TO 40 GB	*Call
2098<2086		2409<3106	24 GB TO 40 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		2409<3108	32 GB TO 40 GB	*Call
2098<2086		2410<3102	8 GB TO 48 GB	*Call
2098<2086		2410<3104	16 GB TO 48 GB	*Call
2098<2086		2410<3106	24 GB TO 48 GB	*Call
2098<2086		2410<3108	32 GB TO 48 GB	*Call
2098<2086		2411<3102	8 GB TO 56 GB	*Call
2098<2086		2411<3104	16 GB TO 56 GB	*Call
2098<2086		2411<3106	24 GB TO 56 GB	*Call
2098<2086		2411<3108	32 GB TO 56 GB	*Call
2098<2086		2412<3102	8 GB TO 64 GB	*Call
2098<2086		2412<3104	16 GB TO 64 GB	*Call
2098<2086		2412<3106	24 GB TO 64 GB	*Call
2098<2086		2412<3108	32 GB TO 64 GB	*Call
2098<2086		2413<3102	8 GB TO 72 GB	*Call
2098<2086		2413<3104	16 GB TO 72 GB	*Call
2098<2086		2413<3106	24 GB TO 72 GB	*Call
2098<2086		2413<3108	32 GB TO 72 GB	*Call
2098<2086		2414<3102	8 GB TO 80 GB	*Call
2098<2086		2414<3104	16 GB TO 80 GB	*Call
2098<2086		2414<3106	24 GB TO 80 GB	*Call
2098<2086		2414<3108	32 GB TO 80 GB	*Call
2098<2086		2415<3102	8 GB TO 88 GB	*Call
2098<2086		2415<3104	16 GB TO 88 GB	*Call
2098<2086		2415<3106	24 GB TO 88 GB	*Call
2098<2086		2415<3108	32 GB TO 88 GB	*Call
2098<2086		2416<3102	8 GB TO 96 GB	*Call
2098<2086		2416<3104	16 GB TO 96 GB	*Call
2098<2086		2416<3106	24 GB TO 96 GB	*Call
2098<2086		2416<3108	32 GB TO 96 GB	*Call
2098<2086		2417<3102	8 GB TO 104 GB	*Call
2098<2086		2417<3104	16 GB TO 104 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		2417<3106	24 GB TO 104 GB	*Call
2098<2086		2417<3108	32 GB TO 104 GB	*Call
2098<2086		2418<3102	8 GB TO 112 GB	*Call
2098<2086		2418<3104	16 GB TO 112 GB	*Call
2098<2086		2418<3106	24 GB TO 112 GB	*Call
2098<2086		2418<3108	32 GB TO 112 GB	*Call
2098<2086		2419<3102	8 GB TO 120 GB	*Call
2098<2086		2419<3104	16 GB TO 120 GB	*Call
2098<2086		2419<3106	24 GB TO 120 GB	*Call
2098<2086		2419<3108	32 GB TO 120 GB	*Call
2098<2086		2420<3102	8 GB TO 152 GB	*Call
2098<2086		2420<3104	16 GB TO 152 GB	*Call
2098<2086		2420<3106	24 GB TO 152 GB	*Call
2098<2086		2420<3108	32 GB TO 152 GB	*Call
2098<2086		2421<3102	8 GB TO 184 GB	*Call
2098<2086		2421<3104	16 GB TO 184 GB	*Call
2098<2086		2421<3106	24 GB TO 184 GB	*Call
2098<2086		2421<3108	32 GB TO 184 GB	*Call
2098<2086		2422<3102	8 GB TO 216 GB	*Call
2098<2086		2422<3104	16 GB TO 216 GB	*Call
2098<2086		2422<3106	24 GB TO 216 GB	*Call
2098<2086		2422<3108	32 GB TO 216 GB	*Call
2098<2086		2423<3102	8 GB TO 248 GB	*Call
2098<2086		2423<3104	16 GB TO 248 GB	*Call
2098<2086		2423<3106	24 GB TO 248 GB	*Call
2098<2086		2423<3108	32 GB TO 248 GB	*Call
2098<2086		5013<6070	070 TO A00	*Call
2098<2086		5013<6110	110 TO A00	*Call
2098<2086		5013<6120	120 TO A00	*Call
2098<2086		5013<6130	130 TO A00	*Call
2098<2086		5013<6140	140 TO A00	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5013<6150	150 TO A00	*Call
2098<2086		5013<6160	160 TO A00	*Call
2098<2086		5013<6170	170 TO A00	*Call
2098<2086		5013<6210	210 TO A00	*Call
2098<2086		5013<6220	220 TO A00	*Call
2098<2086		5013<6230	230 TO A00	*Call
2098<2086		5013<6240	240 TO A00	*Call
2098<2086		5013<6250	250 TO A00	*Call
2098<2086		5013<6260	260 TO A00	*Call
2098<2086		5013<6270	270 TO A00	*Call
2098<2086		5013<6310	310 TO A00	*Call
2098<2086		5013<6320	320 TO A00	*Call
2098<2086		5013<6330	330 TO A00	*Call
2098<2086		5013<6340	340 TO A00	*Call
2098<2086		5013<6350	350 TO A00	*Call
2098<2086		5013<6360	360 TO A00	*Call
2098<2086		5013<6370	370 TO A00	*Call
2098<2086		5013<6410	410 TO A00	*Call
2098<2086		5013<6420	420 TO A00	*Call
2098<2086		5013<6430	430 TO A00	*Call
2098<2086		5013<6440	440 TO A00	*Call
2098<2086		5013<6450	450 TO A00	*Call
2098<2086		5013<6460	460 TO A00	*Call
2098<2086		5013<6470	470 TO A00	*Call
2098<2086		5014<6070	070 TO A01	*Call
2098<2086		5014<6110	110 TO A01	*Call
2098<2086		5014<6120	120 TO A01	*Call
2098<2086		5014<6130	130 TO A01	*Call
2098<2086		5014<6140	140 TO A01	*Call
2098<2086		5014<6150	150 TO A01	*Call
2098<2086		5014<6160	160 TO A01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5014<6170	170 TO A01	*Call
2098<2086		5014<6210	210 TO A01	*Call
2098<2086		5014<6220	220 TO A01	*Call
2098<2086		5014<6230	230 TO A01	*Call
2098<2086		5014<6240	240 TO A01	*Call
2098<2086		5014<6250	250 TO A01	*Call
2098<2086		5014<6260	260 TO A01	*Call
2098<2086		5014<6270	270 TO A01	*Call
2098<2086		5014<6310	310 TO A01	*Call
2098<2086		5014<6320	320 TO A01	*Call
2098<2086		5014<6330	330 TO A01	*Call
2098<2086		5014<6340	340 TO A01	*Call
2098<2086		5014<6350	350 TO A01	*Call
2098<2086		5014<6360	360 TO A01	*Call
2098<2086		5014<6370	370 TO A01	*Call
2098<2086		5014<6410	410 TO A01	*Call
2098<2086		5014<6420	420 TO A01	*Call
2098<2086		5014<6430	430 TO A01	*Call
2098<2086		5014<6440	440 TO A01	*Call
2098<2086		5014<6450	450 TO A01	*Call
2098<2086		5014<6460	460 TO A01	*Call
2098<2086		5014<6470	470 TO A01	*Call
2098<2086		5015<6070	070 TO A02	*Call
2098<2086		5015<6110	110 TO A02	*Call
2098<2086		5015<6120	120 TO A02	*Call
2098<2086		5015<6130	130 TO A02	*Call
2098<2086		5015<6140	140 TO A02	*Call
2098<2086		5015<6150	150 TO A02	*Call
2098<2086		5015<6160	160 TO A02	*Call
2098<2086		5015<6170	170 TO A02	*Call
2098<2086		5015<6210	210 TO A02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5015<6220	220 TO A02	*Call
2098<2086		5015<6230	230 TO A02	*Call
2098<2086		5015<6240	240 TO A02	*Call
2098<2086		5015<6250	250 TO A02	*Call
2098<2086		5015<6260	260 TO A02	*Call
2098<2086		5015<6270	270 TO A02	*Call
2098<2086		5015<6310	310 TO A02	*Call
2098<2086		5015<6320	320 TO A02	*Call
2098<2086		5015<6330	330 TO A02	*Call
2098<2086		5015<6340	340 TO A02	*Call
2098<2086		5015<6350	350 TO A02	*Call
2098<2086		5015<6360	360 TO A02	*Call
2098<2086		5015<6370	370 TO A02	*Call
2098<2086		5015<6410	410 TO A02	*Call
2098<2086		5015<6420	420 TO A02	*Call
2098<2086		5015<6430	430 TO A02	*Call
2098<2086		5015<6440	440 TO A02	*Call
2098<2086		5015<6450	450 TO A02	*Call
2098<2086		5015<6460	460 TO A02	*Call
2098<2086		5015<6470	470 TO A02	*Call
2098<2086		5016<6070	070 TO A03	*Call
2098<2086		5016<6110	110 TO A03	*Call
2098<2086		5016<6120	120 TO A03	*Call
2098<2086		5016<6130	130 TO A03	*Call
2098<2086		5016<6140	140 TO A03	*Call
2098<2086		5016<6150	150 TO A03	*Call
2098<2086		5016<6160	160 TO A03	*Call
2098<2086		5016<6170	170 TO A03	*Call
2098<2086		5016<6210	210 TO A03	*Call
2098<2086		5016<6220	220 TO A03	*Call
2098<2086		5016<6230	230 TO A03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5016<6240	240 TO A03	*Call
2098<2086		5016<6250	250 TO A03	*Call
2098<2086		5016<6260	260 TO A03	*Call
2098<2086		5016<6270	270 TO A03	*Call
2098<2086		5016<6310	310 TO A03	*Call
2098<2086		5016<6320	320 TO A03	*Call
2098<2086		5016<6330	330 TO A03	*Call
2098<2086		5016<6340	340 TO A03	*Call
2098<2086		5016<6350	350 TO A03	*Call
2098<2086		5016<6360	360 TO A03	*Call
2098<2086		5016<6370	370 TO A03	*Call
2098<2086		5016<6410	410 TO A03	*Call
2098<2086		5016<6420	420 TO A03	*Call
2098<2086		5016<6430	430 TO A03	*Call
2098<2086		5016<6440	440 TO A03	*Call
2098<2086		5016<6450	450 TO A03	*Call
2098<2086		5016<6460	460 TO A03	*Call
2098<2086		5016<6470	470 TO A03	*Call
2098<2086		5017<6070	070 TO A04	*Call
2098<2086		5017<6110	110 TO A04	*Call
2098<2086		5017<6120	120 TO A04	*Call
2098<2086		5017<6130	130 TO A04	*Call
2098<2086		5017<6140	140 TO A04	*Call
2098<2086		5017<6150	150 TO A04	*Call
2098<2086		5017<6160	160 TO A04	*Call
2098<2086		5017<6170	170 TO A04	*Call
2098<2086		5017<6210	210 TO A04	*Call
2098<2086		5017<6220	220 TO A04	*Call
2098<2086		5017<6230	230 TO A04	*Call
2098<2086		5017<6240	240 TO A04	*Call
2098<2086		5017<6250	250 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5017<6260	260 TO A04	*Call
2098<2086		5017<6270	270 TO A04	*Call
2098<2086		5017<6310	310 TO A04	*Call
2098<2086		5017<6320	320 TO A04	*Call
2098<2086		5017<6330	330 TO A04	*Call
2098<2086		5017<6340	340 TO A04	*Call
2098<2086		5017<6350	350 TO A04	*Call
2098<2086		5017<6360	360 TO A04	*Call
2098<2086		5017<6370	370 TO A04	*Call
2098<2086		5017<6410	410 TO A04	*Call
2098<2086		5017<6420	420 TO A04	*Call
2098<2086		5017<6430	430 TO A04	*Call
2098<2086		5017<6440	440 TO A04	*Call
2098<2086		5017<6450	450 TO A04	*Call
2098<2086		5017<6460	460 TO A04	*Call
2098<2086		5017<6470	470 TO A04	*Call
2098<2086		5018<6070	070 TO A05	*Call
2098<2086		5018<6110	110 TO A05	*Call
2098<2086		5018<6120	120 TO A05	*Call
2098<2086		5018<6130	130 TO A05	*Call
2098<2086		5018<6140	140 TO A05	*Call
2098<2086		5018<6150	150 TO A05	*Call
2098<2086		5018<6160	160 TO A05	*Call
2098<2086		5018<6170	170 TO A05	*Call
2098<2086		5018<6210	210 TO A05	*Call
2098<2086		5018<6220	220 TO A05	*Call
2098<2086		5018<6230	230 TO A05	*Call
2098<2086		5018<6240	240 TO A05	*Call
2098<2086		5018<6250	250 TO A05	*Call
2098<2086		5018<6260	260 TO A05	*Call
2098<2086		5018<6270	270 TO A05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5018<6310	310 TO A05	*Call
2098<2086		5018<6320	320 TO A05	*Call
2098<2086		5018<6330	330 TO A05	*Call
2098<2086		5018<6340	340 TO A05	*Call
2098<2086		5018<6350	350 TO A05	*Call
2098<2086		5018<6360	360 TO A05	*Call
2098<2086		5018<6370	370 TO A05	*Call
2098<2086		5018<6410	410 TO A05	*Call
2098<2086		5018<6420	420 TO A05	*Call
2098<2086		5018<6430	430 TO A05	*Call
2098<2086		5018<6440	440 TO A05	*Call
2098<2086		5018<6450	450 TO A05	*Call
2098<2086		5018<6460	460 TO A05	*Call
2098<2086		5018<6470	470 TO A05	*Call
2098<2086		5019<6070	070 TO B01	*Call
2098<2086		5019<6110	110 TO B01	*Call
2098<2086		5019<6120	120 TO B01	*Call
2098<2086		5019<6130	130 TO B01	*Call
2098<2086		5019<6140	140 TO B01	*Call
2098<2086		5019<6150	150 TO B01	*Call
2098<2086		5019<6160	160 TO B01	*Call
2098<2086		5019<6170	170 TO B01	*Call
2098<2086		5019<6210	210 TO B01	*Call
2098<2086		5019<6220	220 TO B01	*Call
2098<2086		5019<6230	230 TO B01	*Call
2098<2086		5019<6240	240 TO B01	*Call
2098<2086		5019<6250	250 TO B01	*Call
2098<2086		5019<6260	260 TO B01	*Call
2098<2086		5019<6270	270 TO B01	*Call
2098<2086		5019<6310	310 TO B01	*Call
2098<2086		5019<6320	320 TO B01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5019<6330	330 TO B01	*Call
2098<2086		5019<6340	340 TO B01	*Call
2098<2086		5019<6350	350 TO B01	*Call
2098<2086		5019<6360	360 TO B01	*Call
2098<2086		5019<6370	370 TO B01	*Call
2098<2086		5019<6410	410 TO B01	*Call
2098<2086		5019<6420	420 TO B01	*Call
2098<2086		5019<6430	430 TO B01	*Call
2098<2086		5019<6440	440 TO B01	*Call
2098<2086		5019<6450	450 TO B01	*Call
2098<2086		5019<6460	460 TO B01	*Call
2098<2086		5019<6470	470 TO B01	*Call
2098<2086		5020<6070	070 TO B02	*Call
2098<2086		5020<6110	110 TO B02	*Call
2098<2086		5020<6120	120 TO B02	*Call
2098<2086		5020<6130	130 TO B02	*Call
2098<2086		5020<6140	140 TO B02	*Call
2098<2086		5020<6150	150 TO B02	*Call
2098<2086		5020<6160	160 TO B02	*Call
2098<2086		5020<6170	170 TO B02	*Call
2098<2086		5020<6210	210 TO B02	*Call
2098<2086		5020<6220	220 TO B02	*Call
2098<2086		5020<6230	230 TO B02	*Call
2098<2086		5020<6240	240 TO B02	*Call
2098<2086		5020<6250	250 TO B02	*Call
2098<2086		5020<6260	260 TO B02	*Call
2098<2086		5020<6270	270 TO B02	*Call
2098<2086		5020<6310	310 TO B02	*Call
2098<2086		5020<6320	320 TO B02	*Call
2098<2086		5020<6330	330 TO B02	*Call
2098<2086		5020<6340	340 TO B02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5020<6350	350 TO B02	*Call
2098<2086		5020<6360	360 TO B02	*Call
2098<2086		5020<6370	370 TO B02	*Call
2098<2086		5020<6410	410 TO B02	*Call
2098<2086		5020<6420	420 TO B02	*Call
2098<2086		5020<6430	430 TO B02	*Call
2098<2086		5020<6440	440 TO B02	*Call
2098<2086		5020<6450	450 TO B02	*Call
2098<2086		5020<6460	460 TO B02	*Call
2098<2086		5020<6470	470 TO B02	*Call
2098<2086		5021<6070	070 TO B03	*Call
2098<2086		5021<6110	110 TO B03	*Call
2098<2086		5021<6120	120 TO B03	*Call
2098<2086		5021<6130	130 TO B03	*Call
2098<2086		5021<6140	140 TO B03	*Call
2098<2086		5021<6150	150 TO B03	*Call
2098<2086		5021<6160	160 TO B03	*Call
2098<2086		5021<6170	170 TO B03	*Call
2098<2086		5021<6210	210 TO B03	*Call
2098<2086		5021<6220	220 TO B03	*Call
2098<2086		5021<6230	230 TO B03	*Call
2098<2086		5021<6240	240 TO B03	*Call
2098<2086		5021<6250	250 TO B03	*Call
2098<2086		5021<6260	260 TO B03	*Call
2098<2086		5021<6270	270 TO B03	*Call
2098<2086		5021<6310	310 TO B03	*Call
2098<2086		5021<6320	320 TO B03	*Call
2098<2086		5021<6330	330 TO B03	*Call
2098<2086		5021<6340	340 TO B03	*Call
2098<2086		5021<6350	350 TO B03	*Call
2098<2086		5021<6360	360 TO B03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5021<6370	370 TO B03	*Call
2098<2086		5021<6410	410 TO B03	*Call
2098<2086		5021<6420	420 TO B03	*Call
2098<2086		5021<6430	430 TO B03	*Call
2098<2086		5021<6440	440 TO B03	*Call
2098<2086		5021<6450	450 TO B03	*Call
2098<2086		5021<6460	460 TO B03	*Call
2098<2086		5021<6470	470 TO B03	*Call
2098<2086		5022<6070	070 TO B04	*Call
2098<2086		5022<6110	110 TO B04	*Call
2098<2086		5022<6120	120 TO B04	*Call
2098<2086		5022<6130	130 TO B04	*Call
2098<2086		5022<6140	140 TO B04	*Call
2098<2086		5022<6150	150 TO B04	*Call
2098<2086		5022<6160	160 TO B04	*Call
2098<2086		5022<6170	170 TO B04	*Call
2098<2086		5022<6210	210 TO B04	*Call
2098<2086		5022<6220	220 TO B04	*Call
2098<2086		5022<6230	230 TO B04	*Call
2098<2086		5022<6240	240 TO B04	*Call
2098<2086		5022<6250	250 TO B04	*Call
2098<2086		5022<6260	260 TO B04	*Call
2098<2086		5022<6270	270 TO B04	*Call
2098<2086		5022<6310	310 TO B04	*Call
2098<2086		5022<6320	320 TO B04	*Call
2098<2086		5022<6330	330 TO B04	*Call
2098<2086		5022<6340	340 TO B04	*Call
2098<2086		5022<6350	350 TO B04	*Call
2098<2086		5022<6360	360 TO B04	*Call
2098<2086		5022<6370	370 TO B04	*Call
2098<2086		5022<6410	410 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5022<6420	420 TO B04	*Call
2098<2086		5022<6430	430 TO B04	*Call
2098<2086		5022<6440	440 TO B04	*Call
2098<2086		5022<6450	450 TO B04	*Call
2098<2086		5022<6460	460 TO B04	*Call
2098<2086		5022<6470	470 TO B04	*Call
2098<2086		5023<6070	070 TO B05	*Call
2098<2086		5023<6110	110 TO B05	*Call
2098<2086		5023<6120	120 TO B05	*Call
2098<2086		5023<6130	130 TO B05	*Call
2098<2086		5023<6140	140 TO B05	*Call
2098<2086		5023<6150	150 TO B05	*Call
2098<2086		5023<6160	160 TO B05	*Call
2098<2086		5023<6170	170 TO B05	*Call
2098<2086		5023<6210	210 TO B05	*Call
2098<2086		5023<6220	220 TO B05	*Call
2098<2086		5023<6230	230 TO B05	*Call
2098<2086		5023<6240	240 TO B05	*Call
2098<2086		5023<6250	250 TO B05	*Call
2098<2086		5023<6260	260 TO B05	*Call
2098<2086		5023<6270	270 TO B05	*Call
2098<2086		5023<6310	310 TO B05	*Call
2098<2086		5023<6320	320 TO B05	*Call
2098<2086		5023<6330	330 TO B05	*Call
2098<2086		5023<6340	340 TO B05	*Call
2098<2086		5023<6350	350 TO B05	*Call
2098<2086		5023<6360	360 TO B05	*Call
2098<2086		5023<6370	370 TO B05	*Call
2098<2086		5023<6410	410 TO B05	*Call
2098<2086		5023<6420	420 TO B05	*Call
2098<2086		5023<6430	430 TO B05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5023<6440	440 TO B05	*Call
2098<2086		5023<6450	450 TO B05	*Call
2098<2086		5023<6460	460 TO B05	*Call
2098<2086		5023<6470	470 TO B05	*Call
2098<2086		5024<6070	070 TO C01	*Call
2098<2086		5024<6110	110 TO C01	*Call
2098<2086		5024<6120	120 TO C01	*Call
2098<2086		5024<6130	130 TO C01	*Call
2098<2086		5024<6140	140 TO C01	*Call
2098<2086		5024<6150	150 TO C01	*Call
2098<2086		5024<6160	160 TO C01	*Call
2098<2086		5024<6170	170 TO C01	*Call
2098<2086		5024<6210	210 TO C01	*Call
2098<2086		5024<6220	220 TO C01	*Call
2098<2086		5024<6230	230 TO C01	*Call
2098<2086		5024<6240	240 TO C01	*Call
2098<2086		5024<6250	250 TO C01	*Call
2098<2086		5024<6260	260 TO C01	*Call
2098<2086		5024<6270	270 TO C01	*Call
2098<2086		5024<6310	310 TO C01	*Call
2098<2086		5024<6320	320 TO C01	*Call
2098<2086		5024<6330	330 TO C01	*Call
2098<2086		5024<6340	340 TO C01	*Call
2098<2086		5024<6350	350 TO C01	*Call
2098<2086		5024<6360	360 TO C01	*Call
2098<2086		5024<6370	370 TO C01	*Call
2098<2086		5024<6410	410 TO C01	*Call
2098<2086		5024<6420	420 TO C01	*Call
2098<2086		5024<6430	430 TO C01	*Call
2098<2086		5024<6440	440 TO C01	*Call
2098<2086		5024<6450	450 TO C01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5024<6460	460 TO C01	*Call
2098<2086		5024<6470	470 TO C01	*Call
2098<2086		5025<6070	070 TO C02	*Call
2098<2086		5025<6110	110 TO C02	*Call
2098<2086		5025<6120	120 TO C02	*Call
2098<2086		5025<6130	130 TO C02	*Call
2098<2086		5025<6140	140 TO C02	*Call
2098<2086		5025<6150	150 TO C02	*Call
2098<2086		5025<6160	160 TO C02	*Call
2098<2086		5025<6170	170 TO C02	*Call
2098<2086		5025<6210	210 TO C02	*Call
2098<2086		5025<6220	220 TO C02	*Call
2098<2086		5025<6230	230 TO C02	*Call
2098<2086		5025<6240	240 TO C02	*Call
2098<2086		5025<6250	250 TO C02	*Call
2098<2086		5025<6260	260 TO C02	*Call
2098<2086		5025<6270	270 TO C02	*Call
2098<2086		5025<6310	310 TO C02	*Call
2098<2086		5025<6320	320 TO C02	*Call
2098<2086		5025<6330	330 TO C02	*Call
2098<2086		5025<6340	340 TO C02	*Call
2098<2086		5025<6350	350 TO C02	*Call
2098<2086		5025<6360	360 TO C02	*Call
2098<2086		5025<6370	370 TO C02	*Call
2098<2086		5025<6410	410 TO C02	*Call
2098<2086		5025<6420	420 TO C02	*Call
2098<2086		5025<6430	430 TO C02	*Call
2098<2086		5025<6440	440 TO C02	*Call
2098<2086		5025<6450	450 TO C02	*Call
2098<2086		5025<6460	460 TO C02	*Call
2098<2086		5025<6470	470 TO C02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5026<6070	070 TO C03	*Call
2098<2086		5026<6110	110 TO C03	*Call
2098<2086		5026<6120	120 TO C03	*Call
2098<2086		5026<6130	130 TO C03	*Call
2098<2086		5026<6140	140 TO C03	*Call
2098<2086		5026<6150	150 TO C03	*Call
2098<2086		5026<6160	160 TO C03	*Call
2098<2086		5026<6170	170 TO C03	*Call
2098<2086		5026<6210	210 TO C03	*Call
2098<2086		5026<6220	220 TO C03	*Call
2098<2086		5026<6230	230 TO C03	*Call
2098<2086		5026<6240	240 TO C03	*Call
2098<2086		5026<6250	250 TO C03	*Call
2098<2086		5026<6260	260 TO C03	*Call
2098<2086		5026<6270	270 TO C03	*Call
2098<2086		5026<6310	310 TO C03	*Call
2098<2086		5026<6320	320 TO C03	*Call
2098<2086		5026<6330	330 TO C03	*Call
2098<2086		5026<6340	340 TO C03	*Call
2098<2086		5026<6350	350 TO C03	*Call
2098<2086		5026<6360	360 TO C03	*Call
2098<2086		5026<6370	370 TO C03	*Call
2098<2086		5026<6410	410 TO C03	*Call
2098<2086		5026<6420	420 TO C03	*Call
2098<2086		5026<6430	430 TO C03	*Call
2098<2086		5026<6440	440 TO C03	*Call
2098<2086		5026<6450	450 TO C03	*Call
2098<2086		5026<6460	460 TO C03	*Call
2098<2086		5026<6470	470 TO C03	*Call
2098<2086		5027<6070	070 TO C04	*Call
2098<2086		5027<6110	110 TO C04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5027<6120	120 TO C04	*Call
2098<2086		5027<6130	130 TO C04	*Call
2098<2086		5027<6140	140 TO C04	*Call
2098<2086		5027<6150	150 TO C04	*Call
2098<2086		5027<6160	160 TO C04	*Call
2098<2086		5027<6170	170 TO C04	*Call
2098<2086		5027<6210	210 TO C04	*Call
2098<2086		5027<6220	220 TO C04	*Call
2098<2086		5027<6230	230 TO C04	*Call
2098<2086		5027<6240	240 TO C04	*Call
2098<2086		5027<6250	250 TO C04	*Call
2098<2086		5027<6260	260 TO C04	*Call
2098<2086		5027<6270	270 TO C04	*Call
2098<2086		5027<6310	310 TO C04	*Call
2098<2086		5027<6320	320 TO C04	*Call
2098<2086		5027<6330	330 TO C04	*Call
2098<2086		5027<6340	340 TO C04	*Call
2098<2086		5027<6350	350 TO C04	*Call
2098<2086		5027<6360	360 TO C04	*Call
2098<2086		5027<6370	370 TO C04	*Call
2098<2086		5027<6410	410 TO C04	*Call
2098<2086		5027<6420	420 TO C04	*Call
2098<2086		5027<6430	430 TO C04	*Call
2098<2086		5027<6440	440 TO C04	*Call
2098<2086		5027<6450	450 TO C04	*Call
2098<2086		5027<6460	460 TO C04	*Call
2098<2086		5027<6470	470 TO C04	*Call
2098<2086		5028<6070	070 TO C05	*Call
2098<2086		5028<6110	110 TO C05	*Call
2098<2086		5028<6120	120 TO C05	*Call
2098<2086		5028<6130	130 TO C05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5028<6140	140 TO C05	*Call
2098<2086		5028<6150	150 TO C05	*Call
2098<2086		5028<6160	160 TO C05	*Call
2098<2086		5028<6170	170 TO C05	*Call
2098<2086		5028<6210	210 TO C05	*Call
2098<2086		5028<6220	220 TO C05	*Call
2098<2086		5028<6230	230 TO C05	*Call
2098<2086		5028<6240	240 TO C05	*Call
2098<2086		5028<6250	250 TO C05	*Call
2098<2086		5028<6260	260 TO C05	*Call
2098<2086		5028<6270	270 TO C05	*Call
2098<2086		5028<6310	310 TO C05	*Call
2098<2086		5028<6320	320 TO C05	*Call
2098<2086		5028<6330	330 TO C05	*Call
2098<2086		5028<6340	340 TO C05	*Call
2098<2086		5028<6350	350 TO C05	*Call
2098<2086		5028<6360	360 TO C05	*Call
2098<2086		5028<6370	370 TO C05	*Call
2098<2086		5028<6410	410 TO C05	*Call
2098<2086		5028<6420	420 TO C05	*Call
2098<2086		5028<6430	430 TO C05	*Call
2098<2086		5028<6440	440 TO C05	*Call
2098<2086		5028<6450	450 TO C05	*Call
2098<2086		5028<6460	460 TO C05	*Call
2098<2086		5028<6470	470 TO C05	*Call
2098<2086		5029<6070	070 TO D01	*Call
2098<2086		5029<6110	110 TO D01	*Call
2098<2086		5029<6120	120 TO D01	*Call
2098<2086		5029<6130	130 TO D01	*Call
2098<2086		5029<6140	140 TO D01	*Call
2098<2086		5029<6150	150 TO D01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5029<6160	160 TO D01	*Call
2098<2086		5029<6170	170 TO D01	*Call
2098<2086		5029<6210	210 TO D01	*Call
2098<2086		5029<6220	220 TO D01	*Call
2098<2086		5029<6230	230 TO D01	*Call
2098<2086		5029<6240	240 TO D01	*Call
2098<2086		5029<6250	250 TO D01	*Call
2098<2086		5029<6260	260 TO D01	*Call
2098<2086		5029<6270	270 TO D01	*Call
2098<2086		5029<6310	310 TO D01	*Call
2098<2086		5029<6320	320 TO D01	*Call
2098<2086		5029<6330	330 TO D01	*Call
2098<2086		5029<6340	340 TO D01	*Call
2098<2086		5029<6350	350 TO D01	*Call
2098<2086		5029<6360	360 TO D01	*Call
2098<2086		5029<6370	370 TO D01	*Call
2098<2086		5029<6410	410 TO D01	*Call
2098<2086		5029<6420	420 TO D01	*Call
2098<2086		5029<6430	430 TO D01	*Call
2098<2086		5029<6440	440 TO D01	*Call
2098<2086		5029<6450	450 TO D01	*Call
2098<2086		5029<6460	460 TO D01	*Call
2098<2086		5029<6470	470 TO D01	*Call
2098<2086		5030<6070	070 TO D02	*Call
2098<2086		5030<6110	110 TO D02	*Call
2098<2086		5030<6120	120 TO D02	*Call
2098<2086		5030<6130	130 TO D02	*Call
2098<2086		5030<6140	140 TO D02	*Call
2098<2086		5030<6150	150 TO D02	*Call
2098<2086		5030<6160	160 TO D02	*Call
2098<2086		5030<6170	170 TO D02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5030<6210	210 TO D02	*Call
2098<2086		5030<6220	220 TO D02	*Call
2098<2086		5030<6230	230 TO D02	*Call
2098<2086		5030<6240	240 TO D02	*Call
2098<2086		5030<6250	250 TO D02	*Call
2098<2086		5030<6260	260 TO D02	*Call
2098<2086		5030<6270	270 TO D02	*Call
2098<2086		5030<6310	310 TO D02	*Call
2098<2086		5030<6320	320 TO D02	*Call
2098<2086		5030<6330	330 TO D02	*Call
2098<2086		5030<6340	340 TO D02	*Call
2098<2086		5030<6350	350 TO D02	*Call
2098<2086		5030<6360	360 TO D02	*Call
2098<2086		5030<6370	370 TO D02	*Call
2098<2086		5030<6410	410 TO D02	*Call
2098<2086		5030<6420	420 TO D02	*Call
2098<2086		5030<6430	430 TO D02	*Call
2098<2086		5030<6440	440 TO D02	*Call
2098<2086		5030<6450	450 TO D02	*Call
2098<2086		5030<6460	460 TO D02	*Call
2098<2086		5030<6470	470 TO D02	*Call
2098<2086		5031<6070	070 TO D03	*Call
2098<2086		5031<6110	110 TO D03	*Call
2098<2086		5031<6120	120 TO D03	*Call
2098<2086		5031<6130	130 TO D03	*Call
2098<2086		5031<6140	140 TO D03	*Call
2098<2086		5031<6150	150 TO D03	*Call
2098<2086		5031<6160	160 TO D03	*Call
2098<2086		5031<6170	170 TO D03	*Call
2098<2086		5031<6210	210 TO D03	*Call
2098<2086		5031<6220	220 TO D03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5031<6230	230 TO D03	*Call
2098<2086		5031<6240	240 TO D03	*Call
2098<2086		5031<6250	250 TO D03	*Call
2098<2086		5031<6260	260 TO D03	*Call
2098<2086		5031<6270	270 TO D03	*Call
2098<2086		5031<6310	310 TO D03	*Call
2098<2086		5031<6320	320 TO D03	*Call
2098<2086		5031<6330	330 TO D03	*Call
2098<2086		5031<6340	340 TO D03	*Call
2098<2086		5031<6350	350 TO D03	*Call
2098<2086		5031<6360	360 TO D03	*Call
2098<2086		5031<6370	370 TO D03	*Call
2098<2086		5031<6410	410 TO D03	*Call
2098<2086		5031<6420	420 TO D03	*Call
2098<2086		5031<6430	430 TO D03	*Call
2098<2086		5031<6440	440 TO D03	*Call
2098<2086		5031<6450	450 TO D03	*Call
2098<2086		5031<6460	460 TO D03	*Call
2098<2086		5031<6470	470 TO D03	*Call
2098<2086		5032<6070	070 TO D04	*Call
2098<2086		5032<6110	110 TO D04	*Call
2098<2086		5032<6120	120 TO D04	*Call
2098<2086		5032<6130	130 TO D04	*Call
2098<2086		5032<6140	140 TO D04	*Call
2098<2086		5032<6150	150 TO D04	*Call
2098<2086		5032<6160	160 TO D04	*Call
2098<2086		5032<6170	170 TO D04	*Call
2098<2086		5032<6210	210 TO D04	*Call
2098<2086		5032<6220	220 TO D04	*Call
2098<2086		5032<6230	230 TO D04	*Call
2098<2086		5032<6240	240 TO D04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5032<6250	250 TO D04	*Call
2098<2086		5032<6260	260 TO D04	*Call
2098<2086		5032<6270	270 TO D04	*Call
2098<2086		5032<6310	310 TO D04	*Call
2098<2086		5032<6320	320 TO D04	*Call
2098<2086		5032<6330	330 TO D04	*Call
2098<2086		5032<6340	340 TO D04	*Call
2098<2086		5032<6350	350 TO D04	*Call
2098<2086		5032<6360	360 TO D04	*Call
2098<2086		5032<6370	370 TO D04	*Call
2098<2086		5032<6410	410 TO D04	*Call
2098<2086		5032<6420	420 TO D04	*Call
2098<2086		5032<6430	430 TO D04	*Call
2098<2086		5032<6440	440 TO D04	*Call
2098<2086		5032<6450	450 TO D04	*Call
2098<2086		5032<6460	460 TO D04	*Call
2098<2086		5032<6470	470 TO D04	*Call
2098<2086		5033<6070	070 TO D05	*Call
2098<2086		5033<6110	110 TO D05	*Call
2098<2086		5033<6120	120 TO D05	*Call
2098<2086		5033<6130	130 TO D05	*Call
2098<2086		5033<6140	140 TO D05	*Call
2098<2086		5033<6150	150 TO D05	*Call
2098<2086		5033<6160	160 TO D05	*Call
2098<2086		5033<6170	170 TO D05	*Call
2098<2086		5033<6210	210 TO D05	*Call
2098<2086		5033<6220	220 TO D05	*Call
2098<2086		5033<6230	230 TO D05	*Call
2098<2086		5033<6240	240 TO D05	*Call
2098<2086		5033<6250	250 TO D05	*Call
2098<2086		5033<6260	260 TO D05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5033<6270	270 TO D05	*Call
2098<2086		5033<6310	310 TO D05	*Call
2098<2086		5033<6320	320 TO D05	*Call
2098<2086		5033<6330	330 TO D05	*Call
2098<2086		5033<6340	340 TO D05	*Call
2098<2086		5033<6350	350 TO D05	*Call
2098<2086		5033<6360	360 TO D05	*Call
2098<2086		5033<6370	370 TO D05	*Call
2098<2086		5033<6410	410 TO D05	*Call
2098<2086		5033<6420	420 TO D05	*Call
2098<2086		5033<6430	430 TO D05	*Call
2098<2086		5033<6440	440 TO D05	*Call
2098<2086		5033<6450	450 TO D05	*Call
2098<2086		5033<6460	460 TO D05	*Call
2098<2086		5033<6470	470 TO D05	*Call
2098<2086		5034<6070	070 TO E01	*Call
2098<2086		5034<6110	110 TO E01	*Call
2098<2086		5034<6120	120 TO E01	*Call
2098<2086		5034<6130	130 TO E01	*Call
2098<2086		5034<6140	140 TO E01	*Call
2098<2086		5034<6150	150 TO E01	*Call
2098<2086		5034<6160	160 TO E01	*Call
2098<2086		5034<6170	170 TO E01	*Call
2098<2086		5034<6210	210 TO E01	*Call
2098<2086		5034<6220	220 TO E01	*Call
2098<2086		5034<6230	230 TO E01	*Call
2098<2086		5034<6240	240 TO E01	*Call
2098<2086		5034<6250	250 TO E01	*Call
2098<2086		5034<6260	260 TO E01	*Call
2098<2086		5034<6270	270 TO E01	*Call
2098<2086		5034<6310	310 TO E01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5034<6320	320 TO E01	*Call
2098<2086		5034<6330	330 TO E01	*Call
2098<2086		5034<6340	340 TO E01	*Call
2098<2086		5034<6350	350 TO E01	*Call
2098<2086		5034<6360	360 TO E01	*Call
2098<2086		5034<6370	370 TO E01	*Call
2098<2086		5034<6410	410 TO E01	*Call
2098<2086		5034<6420	420 TO E01	*Call
2098<2086		5034<6430	430 TO E01	*Call
2098<2086		5034<6440	440 TO E01	*Call
2098<2086		5034<6450	450 TO E01	*Call
2098<2086		5034<6460	460 TO E01	*Call
2098<2086		5034<6470	470 TO E01	*Call
2098<2086		5035<6070	070 TO E02	*Call
2098<2086		5035<6110	110 TO E02	*Call
2098<2086		5035<6120	120 TO E02	*Call
2098<2086		5035<6130	130 TO E02	*Call
2098<2086		5035<6140	140 TO E02	*Call
2098<2086		5035<6150	150 TO E02	*Call
2098<2086		5035<6160	160 TO E02	*Call
2098<2086		5035<6170	170 TO E02	*Call
2098<2086		5035<6210	210 TO E02	*Call
2098<2086		5035<6220	220 TO E02	*Call
2098<2086		5035<6230	230 TO E02	*Call
2098<2086		5035<6240	240 TO E02	*Call
2098<2086		5035<6250	250 TO E02	*Call
2098<2086		5035<6260	260 TO E02	*Call
2098<2086		5035<6270	270 TO E02	*Call
2098<2086		5035<6310	310 TO E02	*Call
2098<2086		5035<6320	320 TO E02	*Call
2098<2086		5035<6330	330 TO E02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5035<6340	340 TO E02	*Call
2098<2086		5035<6350	350 TO E02	*Call
2098<2086		5035<6360	360 TO E02	*Call
2098<2086		5035<6370	370 TO E02	*Call
2098<2086		5035<6410	410 TO E02	*Call
2098<2086		5035<6420	420 TO E02	*Call
2098<2086		5035<6430	430 TO E02	*Call
2098<2086		5035<6440	440 TO E02	*Call
2098<2086		5035<6450	450 TO E02	*Call
2098<2086		5035<6460	460 TO E02	*Call
2098<2086		5035<6470	470 TO E02	*Call
2098<2086		5036<6070	070 TO E03	*Call
2098<2086		5036<6110	110 TO E03	*Call
2098<2086		5036<6120	120 TO E03	*Call
2098<2086		5036<6130	130 TO E03	*Call
2098<2086		5036<6140	140 TO E03	*Call
2098<2086		5036<6150	150 TO E03	*Call
2098<2086		5036<6160	160 TO E03	*Call
2098<2086		5036<6170	170 TO E03	*Call
2098<2086		5036<6210	210 TO E03	*Call
2098<2086		5036<6220	220 TO E03	*Call
2098<2086		5036<6230	230 TO E03	*Call
2098<2086		5036<6240	240 TO E03	*Call
2098<2086		5036<6250	250 TO E03	*Call
2098<2086		5036<6260	260 TO E03	*Call
2098<2086		5036<6270	270 TO E03	*Call
2098<2086		5036<6310	310 TO E03	*Call
2098<2086		5036<6320	320 TO E03	*Call
2098<2086		5036<6330	330 TO E03	*Call
2098<2086		5036<6340	340 TO E03	*Call
2098<2086		5036<6350	350 TO E03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5036<6360	360 TO E03	*Call
2098<2086		5036<6370	370 TO E03	*Call
2098<2086		5036<6410	410 TO E03	*Call
2098<2086		5036<6420	420 TO E03	*Call
2098<2086		5036<6430	430 TO E03	*Call
2098<2086		5036<6440	440 TO E03	*Call
2098<2086		5036<6450	450 TO E03	*Call
2098<2086		5036<6460	460 TO E03	*Call
2098<2086		5036<6470	470 TO E03	*Call
2098<2086		5037<6070	070 TO E04	*Call
2098<2086		5037<6110	110 TO E04	*Call
2098<2086		5037<6120	120 TO E04	*Call
2098<2086		5037<6130	130 TO E04	*Call
2098<2086		5037<6140	140 TO E04	*Call
2098<2086		5037<6150	150 TO E04	*Call
2098<2086		5037<6160	160 TO E04	*Call
2098<2086		5037<6170	170 TO E04	*Call
2098<2086		5037<6210	210 TO E04	*Call
2098<2086		5037<6220	220 TO E04	*Call
2098<2086		5037<6230	230 TO E04	*Call
2098<2086		5037<6240	240 TO E04	*Call
2098<2086		5037<6250	250 TO E04	*Call
2098<2086		5037<6260	260 TO E04	*Call
2098<2086		5037<6270	270 TO E04	*Call
2098<2086		5037<6310	310 TO E04	*Call
2098<2086		5037<6320	320 TO E04	*Call
2098<2086		5037<6330	330 TO E04	*Call
2098<2086		5037<6340	340 TO E04	*Call
2098<2086		5037<6350	350 TO E04	*Call
2098<2086		5037<6360	360 TO E04	*Call
2098<2086		5037<6370	370 TO E04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5037<6410	410 TO E04	*Call
2098<2086		5037<6420	420 TO E04	*Call
2098<2086		5037<6430	430 TO E04	*Call
2098<2086		5037<6440	440 TO E04	*Call
2098<2086		5037<6450	450 TO E04	*Call
2098<2086		5037<6460	460 TO E04	*Call
2098<2086		5037<6470	470 TO E04	*Call
2098<2086		5038<6070	070 TO E05	*Call
2098<2086		5038<6110	110 TO E05	*Call
2098<2086		5038<6120	120 TO E05	*Call
2098<2086		5038<6130	130 TO E05	*Call
2098<2086		5038<6140	140 TO E05	*Call
2098<2086		5038<6150	150 TO E05	*Call
2098<2086		5038<6160	160 TO E05	*Call
2098<2086		5038<6170	170 TO E05	*Call
2098<2086		5038<6210	210 TO E05	*Call
2098<2086		5038<6220	220 TO E05	*Call
2098<2086		5038<6230	230 TO E05	*Call
2098<2086		5038<6240	240 TO E05	*Call
2098<2086		5038<6250	250 TO E05	*Call
2098<2086		5038<6260	260 TO E05	*Call
2098<2086		5038<6270	270 TO E05	*Call
2098<2086		5038<6310	310 TO E05	*Call
2098<2086		5038<6320	320 TO E05	*Call
2098<2086		5038<6330	330 TO E05	*Call
2098<2086		5038<6340	340 TO E05	*Call
2098<2086		5038<6350	350 TO E05	*Call
2098<2086		5038<6360	360 TO E05	*Call
2098<2086		5038<6370	370 TO E05	*Call
2098<2086		5038<6410	410 TO E05	*Call
2098<2086		5038<6420	420 TO E05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5038<6430	430 TO E05	*Call
2098<2086		5038<6440	440 TO E05	*Call
2098<2086		5038<6450	450 TO E05	*Call
2098<2086		5038<6460	460 TO E05	*Call
2098<2086		5038<6470	470 TO E05	*Call
2098<2086		5039<6070	070 TO F01	*Call
2098<2086		5039<6110	110 TO F01	*Call
2098<2086		5039<6120	120 TO F01	*Call
2098<2086		5039<6130	130 TO F01	*Call
2098<2086		5039<6140	140 TO F01	*Call
2098<2086		5039<6150	150 TO F01	*Call
2098<2086		5039<6160	160 TO F01	*Call
2098<2086		5039<6170	170 TO F01	*Call
2098<2086		5039<6210	210 TO F01	*Call
2098<2086		5039<6220	220 TO F01	*Call
2098<2086		5039<6230	230 TO F01	*Call
2098<2086		5039<6240	240 TO F01	*Call
2098<2086		5039<6250	250 TO F01	*Call
2098<2086		5039<6260	260 TO F01	*Call
2098<2086		5039<6270	270 TO F01	*Call
2098<2086		5039<6310	310 TO F01	*Call
2098<2086		5039<6320	320 TO F01	*Call
2098<2086		5039<6330	330 TO F01	*Call
2098<2086		5039<6340	340 TO F01	*Call
2098<2086		5039<6350	350 TO F01	*Call
2098<2086		5039<6360	360 TO F01	*Call
2098<2086		5039<6370	370 TO F01	*Call
2098<2086		5039<6410	410 TO F01	*Call
2098<2086		5039<6420	420 TO F01	*Call
2098<2086		5039<6430	430 TO F01	*Call
2098<2086		5039<6440	440 TO F01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5039<6450	450 TO F01	*Call
2098<2086		5039<6460	460 TO F01	*Call
2098<2086		5039<6470	470 TO F01	*Call
2098<2086		5040<6070	070 TO F02	*Call
2098<2086		5040<6110	110 TO F02	*Call
2098<2086		5040<6120	120 TO F02	*Call
2098<2086		5040<6130	130 TO F02	*Call
2098<2086		5040<6140	140 TO F02	*Call
2098<2086		5040<6150	150 TO F02	*Call
2098<2086		5040<6160	160 TO F02	*Call
2098<2086		5040<6170	170 TO F02	*Call
2098<2086		5040<6210	210 TO F02	*Call
2098<2086		5040<6220	220 TO F02	*Call
2098<2086		5040<6230	230 TO F02	*Call
2098<2086		5040<6240	240 TO F02	*Call
2098<2086		5040<6250	250 TO F02	*Call
2098<2086		5040<6260	260 TO F02	*Call
2098<2086		5040<6270	270 TO F02	*Call
2098<2086		5040<6310	310 TO F02	*Call
2098<2086		5040<6320	320 TO F02	*Call
2098<2086		5040<6330	330 TO F02	*Call
2098<2086		5040<6340	340 TO F02	*Call
2098<2086		5040<6350	350 TO F02	*Call
2098<2086		5040<6360	360 TO F02	*Call
2098<2086		5040<6370	370 TO F02	*Call
2098<2086		5040<6410	410 TO F02	*Call
2098<2086		5040<6420	420 TO F02	*Call
2098<2086		5040<6430	430 TO F02	*Call
2098<2086		5040<6440	440 TO F02	*Call
2098<2086		5040<6450	450 TO F02	*Call
2098<2086		5040<6460	460 TO F02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5040<6470	470 TO F02	*Call
2098<2086		5041<6070	070 TO F03	*Call
2098<2086		5041<6110	110 TO F03	*Call
2098<2086		5041<6120	120 TO F03	*Call
2098<2086		5041<6130	130 TO F03	*Call
2098<2086		5041<6140	140 TO F03	*Call
2098<2086		5041<6150	150 TO F03	*Call
2098<2086		5041<6160	160 TO F03	*Call
2098<2086		5041<6170	170 TO F03	*Call
2098<2086		5041<6210	210 TO F03	*Call
2098<2086		5041<6220	220 TO F03	*Call
2098<2086		5041<6230	230 TO F03	*Call
2098<2086		5041<6240	240 TO F03	*Call
2098<2086		5041<6250	250 TO F03	*Call
2098<2086		5041<6260	260 TO F03	*Call
2098<2086		5041<6270	270 TO F03	*Call
2098<2086		5041<6310	310 TO F03	*Call
2098<2086		5041<6320	320 TO F03	*Call
2098<2086		5041<6330	330 TO F03	*Call
2098<2086		5041<6340	340 TO F03	*Call
2098<2086		5041<6350	350 TO F03	*Call
2098<2086		5041<6360	360 TO F03	*Call
2098<2086		5041<6370	370 TO F03	*Call
2098<2086		5041<6410	410 TO F03	*Call
2098<2086		5041<6420	420 TO F03	*Call
2098<2086		5041<6430	430 TO F03	*Call
2098<2086		5041<6440	440 TO F03	*Call
2098<2086		5041<6450	450 TO F03	*Call
2098<2086		5041<6460	460 TO F03	*Call
2098<2086		5041<6470	470 TO F03	*Call
2098<2086		5042<6070	070 TO F04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5042<6110	110 TO F04	*Call
2098<2086		5042<6120	120 TO F04	*Call
2098<2086		5042<6130	130 TO F04	*Call
2098<2086		5042<6140	140 TO F04	*Call
2098<2086		5042<6150	150 TO F04	*Call
2098<2086		5042<6160	160 TO F04	*Call
2098<2086		5042<6170	170 TO F04	*Call
2098<2086		5042<6210	210 TO F04	*Call
2098<2086		5042<6220	220 TO F04	*Call
2098<2086		5042<6230	230 TO F04	*Call
2098<2086		5042<6240	240 TO F04	*Call
2098<2086		5042<6250	250 TO F04	*Call
2098<2086		5042<6260	260 TO F04	*Call
2098<2086		5042<6270	270 TO F04	*Call
2098<2086		5042<6310	310 TO F04	*Call
2098<2086		5042<6320	320 TO F04	*Call
2098<2086		5042<6330	330 TO F04	*Call
2098<2086		5042<6340	340 TO F04	*Call
2098<2086		5042<6350	350 TO F04	*Call
2098<2086		5042<6360	360 TO F04	*Call
2098<2086		5042<6370	370 TO F04	*Call
2098<2086		5042<6410	410 TO F04	*Call
2098<2086		5042<6420	420 TO F04	*Call
2098<2086		5042<6430	430 TO F04	*Call
2098<2086		5042<6440	440 TO F04	*Call
2098<2086		5042<6450	450 TO F04	*Call
2098<2086		5042<6460	460 TO F04	*Call
2098<2086		5042<6470	470 TO F04	*Call
2098<2086		5043<6070	070 TO F05	*Call
2098<2086		5043<6110	110 TO F05	*Call
2098<2086		5043<6120	120 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5043<6130	130 TO F05	*Call
2098<2086		5043<6140	140 TO F05	*Call
2098<2086		5043<6150	150 TO F05	*Call
2098<2086		5043<6160	160 TO F05	*Call
2098<2086		5043<6170	170 TO F05	*Call
2098<2086		5043<6210	210 TO F05	*Call
2098<2086		5043<6220	220 TO F05	*Call
2098<2086		5043<6230	230 TO F05	*Call
2098<2086		5043<6240	240 TO F05	*Call
2098<2086		5043<6250	250 TO F05	*Call
2098<2086		5043<6260	260 TO F05	*Call
2098<2086		5043<6270	270 TO F05	*Call
2098<2086		5043<6310	310 TO F05	*Call
2098<2086		5043<6320	320 TO F05	*Call
2098<2086		5043<6330	330 TO F05	*Call
2098<2086		5043<6340	340 TO F05	*Call
2098<2086		5043<6350	350 TO F05	*Call
2098<2086		5043<6360	360 TO F05	*Call
2098<2086		5043<6370	370 TO F05	*Call
2098<2086		5043<6410	410 TO F05	*Call
2098<2086		5043<6420	420 TO F05	*Call
2098<2086		5043<6430	430 TO F05	*Call
2098<2086		5043<6440	440 TO F05	*Call
2098<2086		5043<6450	450 TO F05	*Call
2098<2086		5043<6460	460 TO F05	*Call
2098<2086		5043<6470	470 TO F05	*Call
2098<2086		5044<6070	070 TO G01	*Call
2098<2086		5044<6110	110 TO G01	*Call
2098<2086		5044<6120	120 TO G01	*Call
2098<2086		5044<6130	130 TO G01	*Call
2098<2086		5044<6140	140 TO G01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5044<6150	150 TO G01	*Call
2098<2086		5044<6160	160 TO G01	*Call
2098<2086		5044<6170	170 TO G01	*Call
2098<2086		5044<6210	210 TO G01	*Call
2098<2086		5044<6220	220 TO G01	*Call
2098<2086		5044<6230	230 TO G01	*Call
2098<2086		5044<6240	240 TO G01	*Call
2098<2086		5044<6250	250 TO G01	*Call
2098<2086		5044<6260	260 TO G01	*Call
2098<2086		5044<6270	270 TO G01	*Call
2098<2086		5044<6310	310 TO G01	*Call
2098<2086		5044<6320	320 TO G01	*Call
2098<2086		5044<6330	330 TO G01	*Call
2098<2086		5044<6340	340 TO G01	*Call
2098<2086		5044<6350	350 TO G01	*Call
2098<2086		5044<6360	360 TO G01	*Call
2098<2086		5044<6370	370 TO G01	*Call
2098<2086		5044<6410	410 TO G01	*Call
2098<2086		5044<6420	420 TO G01	*Call
2098<2086		5044<6430	430 TO G01	*Call
2098<2086		5044<6440	440 TO G01	*Call
2098<2086		5044<6450	450 TO G01	*Call
2098<2086		5044<6460	460 TO G01	*Call
2098<2086		5044<6470	470 TO G01	*Call
2098<2086		5045<6070	070 TO G02	*Call
2098<2086		5045<6110	110 TO G02	*Call
2098<2086		5045<6120	120 TO G02	*Call
2098<2086		5045<6130	130 TO G02	*Call
2098<2086		5045<6140	140 TO G02	*Call
2098<2086		5045<6150	150 TO G02	*Call
2098<2086		5045<6160	160 TO G02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5045<6170	170 TO G02	*Call
2098<2086		5045<6210	210 TO G02	*Call
2098<2086		5045<6220	220 TO G02	*Call
2098<2086		5045<6230	230 TO G02	*Call
2098<2086		5045<6240	240 TO G02	*Call
2098<2086		5045<6250	250 TO G02	*Call
2098<2086		5045<6260	260 TO G02	*Call
2098<2086		5045<6270	270 TO G02	*Call
2098<2086		5045<6310	310 TO G02	*Call
2098<2086		5045<6320	320 TO G02	*Call
2098<2086		5045<6330	330 TO G02	*Call
2098<2086		5045<6340	340 TO G02	*Call
2098<2086		5045<6350	350 TO G02	*Call
2098<2086		5045<6360	360 TO G02	*Call
2098<2086		5045<6370	370 TO G02	*Call
2098<2086		5045<6410	410 TO G02	*Call
2098<2086		5045<6420	420 TO G02	*Call
2098<2086		5045<6430	430 TO G02	*Call
2098<2086		5045<6440	440 TO G02	*Call
2098<2086		5045<6450	450 TO G02	*Call
2098<2086		5045<6460	460 TO G02	*Call
2098<2086		5045<6470	470 TO G02	*Call
2098<2086		5046<6070	070 TO G03	*Call
2098<2086		5046<6110	110 TO G03	*Call
2098<2086		5046<6120	120 TO G03	*Call
2098<2086		5046<6130	130 TO G03	*Call
2098<2086		5046<6140	140 TO G03	*Call
2098<2086		5046<6150	150 TO G03	*Call
2098<2086		5046<6160	160 TO G03	*Call
2098<2086		5046<6170	170 TO G03	*Call
2098<2086		5046<6210	210 TO G03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5046<6220	220 TO G03	*Call
2098<2086		5046<6230	230 TO G03	*Call
2098<2086		5046<6240	240 TO G03	*Call
2098<2086		5046<6250	250 TO G03	*Call
2098<2086		5046<6260	260 TO G03	*Call
2098<2086		5046<6270	270 TO G03	*Call
2098<2086		5046<6310	310 TO G03	*Call
2098<2086		5046<6320	320 TO G03	*Call
2098<2086		5046<6330	330 TO G03	*Call
2098<2086		5046<6340	340 TO G03	*Call
2098<2086		5046<6350	350 TO G03	*Call
2098<2086		5046<6360	360 TO G03	*Call
2098<2086		5046<6370	370 TO G03	*Call
2098<2086		5046<6410	410 TO G03	*Call
2098<2086		5046<6420	420 TO G03	*Call
2098<2086		5046<6430	430 TO G03	*Call
2098<2086		5046<6440	440 TO G03	*Call
2098<2086		5046<6450	450 TO G03	*Call
2098<2086		5046<6460	460 TO G03	*Call
2098<2086		5046<6470	470 TO G03	*Call
2098<2086		5047<6070	070 TO G04	*Call
2098<2086		5047<6110	110 TO G04	*Call
2098<2086		5047<6120	120 TO G04	*Call
2098<2086		5047<6130	130 TO G04	*Call
2098<2086		5047<6140	140 TO G04	*Call
2098<2086		5047<6150	150 TO G04	*Call
2098<2086		5047<6160	160 TO G04	*Call
2098<2086		5047<6170	170 TO G04	*Call
2098<2086		5047<6210	210 TO G04	*Call
2098<2086		5047<6220	220 TO G04	*Call
2098<2086		5047<6230	230 TO G04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5047<6240	240 TO G04	*Call
2098<2086		5047<6250	250 TO G04	*Call
2098<2086		5047<6260	260 TO G04	*Call
2098<2086		5047<6270	270 TO G04	*Call
2098<2086		5047<6310	310 TO G04	*Call
2098<2086		5047<6320	320 TO G04	*Call
2098<2086		5047<6330	330 TO G04	*Call
2098<2086		5047<6340	340 TO G04	*Call
2098<2086		5047<6350	350 TO G04	*Call
2098<2086		5047<6360	360 TO G04	*Call
2098<2086		5047<6370	370 TO G04	*Call
2098<2086		5047<6410	410 TO G04	*Call
2098<2086		5047<6420	420 TO G04	*Call
2098<2086		5047<6430	430 TO G04	*Call
2098<2086		5047<6440	440 TO G04	*Call
2098<2086		5047<6450	450 TO G04	*Call
2098<2086		5047<6460	460 TO G04	*Call
2098<2086		5047<6470	470 TO G04	*Call
2098<2086		5048<6070	070 TO G05	*Call
2098<2086		5048<6110	110 TO G05	*Call
2098<2086		5048<6120	120 TO G05	*Call
2098<2086		5048<6130	130 TO G05	*Call
2098<2086		5048<6140	140 TO G05	*Call
2098<2086		5048<6150	150 TO G05	*Call
2098<2086		5048<6160	160 TO G05	*Call
2098<2086		5048<6170	170 TO G05	*Call
2098<2086		5048<6210	210 TO G05	*Call
2098<2086		5048<6220	220 TO G05	*Call
2098<2086		5048<6230	230 TO G05	*Call
2098<2086		5048<6240	240 TO G05	*Call
2098<2086		5048<6250	250 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5048<6260	260 TO G05	*Call
2098<2086		5048<6270	270 TO G05	*Call
2098<2086		5048<6310	310 TO G05	*Call
2098<2086		5048<6320	320 TO G05	*Call
2098<2086		5048<6330	330 TO G05	*Call
2098<2086		5048<6340	340 TO G05	*Call
2098<2086		5048<6350	350 TO G05	*Call
2098<2086		5048<6360	360 TO G05	*Call
2098<2086		5048<6370	370 TO G05	*Call
2098<2086		5048<6410	410 TO G05	*Call
2098<2086		5048<6420	420 TO G05	*Call
2098<2086		5048<6430	430 TO G05	*Call
2098<2086		5048<6440	440 TO G05	*Call
2098<2086		5048<6450	450 TO G05	*Call
2098<2086		5048<6460	460 TO G05	*Call
2098<2086		5048<6470	470 TO G05	*Call
2098<2086		5049<6070	070 TO H01	*Call
2098<2086		5049<6110	110 TO H01	*Call
2098<2086		5049<6120	120 TO H01	*Call
2098<2086		5049<6130	130 TO H01	*Call
2098<2086		5049<6140	140 TO H01	*Call
2098<2086		5049<6150	150 TO H01	*Call
2098<2086		5049<6160	160 TO H01	*Call
2098<2086		5049<6170	170 TO H01	*Call
2098<2086		5049<6210	210 TO H01	*Call
2098<2086		5049<6220	220 TO H01	*Call
2098<2086		5049<6230	230 TO H01	*Call
2098<2086		5049<6240	240 TO H01	*Call
2098<2086		5049<6250	250 TO H01	*Call
2098<2086		5049<6260	260 TO H01	*Call
2098<2086		5049<6270	270 TO H01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5049<6310	310 TO H01	*Call
2098<2086		5049<6320	320 TO H01	*Call
2098<2086		5049<6330	330 TO H01	*Call
2098<2086		5049<6340	340 TO H01	*Call
2098<2086		5049<6350	350 TO H01	*Call
2098<2086		5049<6360	360 TO H01	*Call
2098<2086		5049<6370	370 TO H01	*Call
2098<2086		5049<6410	410 TO H01	*Call
2098<2086		5049<6420	420 TO H01	*Call
2098<2086		5049<6430	430 TO H01	*Call
2098<2086		5049<6440	440 TO H01	*Call
2098<2086		5049<6450	450 TO H01	*Call
2098<2086		5049<6460	460 TO H01	*Call
2098<2086		5049<6470	470 TO H01	*Call
2098<2086		5050<6070	070 TO H02	*Call
2098<2086		5050<6110	110 TO H02	*Call
2098<2086		5050<6120	120 TO H02	*Call
2098<2086		5050<6130	130 TO H02	*Call
2098<2086		5050<6140	140 TO H02	*Call
2098<2086		5050<6150	150 TO H02	*Call
2098<2086		5050<6160	160 TO H02	*Call
2098<2086		5050<6170	170 TO H02	*Call
2098<2086		5050<6210	210 TO H02	*Call
2098<2086		5050<6220	220 TO H02	*Call
2098<2086		5050<6230	230 TO H02	*Call
2098<2086		5050<6240	240 TO H02	*Call
2098<2086		5050<6250	250 TO H02	*Call
2098<2086		5050<6260	260 TO H02	*Call
2098<2086		5050<6270	270 TO H02	*Call
2098<2086		5050<6310	310 TO H02	*Call
2098<2086		5050<6320	320 TO H02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5050<6330	330 TO H02	*Call
2098<2086		5050<6340	340 TO H02	*Call
2098<2086		5050<6350	350 TO H02	*Call
2098<2086		5050<6360	360 TO H02	*Call
2098<2086		5050<6370	370 TO H02	*Call
2098<2086		5050<6410	410 TO H02	*Call
2098<2086		5050<6420	420 TO H02	*Call
2098<2086		5050<6430	430 TO H02	*Call
2098<2086		5050<6440	440 TO H02	*Call
2098<2086		5050<6450	450 TO H02	*Call
2098<2086		5050<6460	460 TO H02	*Call
2098<2086		5050<6470	470 TO H02	*Call
2098<2086		5051<6070	070 TO H03	*Call
2098<2086		5051<6110	110 TO H03	*Call
2098<2086		5051<6120	120 TO H03	*Call
2098<2086		5051<6130	130 TO H03	*Call
2098<2086		5051<6140	140 TO H03	*Call
2098<2086		5051<6150	150 TO H03	*Call
2098<2086		5051<6160	160 TO H03	*Call
2098<2086		5051<6170	170 TO H03	*Call
2098<2086		5051<6210	210 TO H03	*Call
2098<2086		5051<6220	220 TO H03	*Call
2098<2086		5051<6230	230 TO H03	*Call
2098<2086		5051<6240	240 TO H03	*Call
2098<2086		5051<6250	250 TO H03	*Call
2098<2086		5051<6260	260 TO H03	*Call
2098<2086		5051<6270	270 TO H03	*Call
2098<2086		5051<6310	310 TO H03	*Call
2098<2086		5051<6320	320 TO H03	*Call
2098<2086		5051<6330	330 TO H03	*Call
2098<2086		5051<6340	340 TO H03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5051<6350	350 TO H03	*Call
2098<2086		5051<6360	360 TO H03	*Call
2098<2086		5051<6370	370 TO H03	*Call
2098<2086		5051<6410	410 TO H03	*Call
2098<2086		5051<6420	420 TO H03	*Call
2098<2086		5051<6430	430 TO H03	*Call
2098<2086		5051<6440	440 TO H03	*Call
2098<2086		5051<6450	450 TO H03	*Call
2098<2086		5051<6460	460 TO H03	*Call
2098<2086		5051<6470	470 TO H03	*Call
2098<2086		5052<6070	070 TO H04	*Call
2098<2086		5052<6110	110 TO H04	*Call
2098<2086		5052<6120	120 TO H04	*Call
2098<2086		5052<6130	130 TO H04	*Call
2098<2086		5052<6140	140 TO H04	*Call
2098<2086		5052<6150	150 TO H04	*Call
2098<2086		5052<6160	160 TO H04	*Call
2098<2086		5052<6170	170 TO H04	*Call
2098<2086		5052<6210	210 TO H04	*Call
2098<2086		5052<6220	220 TO H04	*Call
2098<2086		5052<6230	230 TO H04	*Call
2098<2086		5052<6240	240 TO H04	*Call
2098<2086		5052<6250	250 TO H04	*Call
2098<2086		5052<6260	260 TO H04	*Call
2098<2086		5052<6270	270 TO H04	*Call
2098<2086		5052<6310	310 TO H04	*Call
2098<2086		5052<6320	320 TO H04	*Call
2098<2086		5052<6330	330 TO H04	*Call
2098<2086		5052<6340	340 TO H04	*Call
2098<2086		5052<6350	350 TO H04	*Call
2098<2086		5052<6360	360 TO H04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5052<6370	370 TO H04	*Call
2098<2086		5052<6410	410 TO H04	*Call
2098<2086		5052<6420	420 TO H04	*Call
2098<2086		5052<6430	430 TO H04	*Call
2098<2086		5052<6440	440 TO H04	*Call
2098<2086		5052<6450	450 TO H04	*Call
2098<2086		5052<6460	460 TO H04	*Call
2098<2086		5052<6470	470 TO H04	*Call
2098<2086		5053<6070	070 TO H05	*Call
2098<2086		5053<6110	110 TO H05	*Call
2098<2086		5053<6120	120 TO H05	*Call
2098<2086		5053<6130	130 TO H05	*Call
2098<2086		5053<6140	140 TO H05	*Call
2098<2086		5053<6150	150 TO H05	*Call
2098<2086		5053<6160	160 TO H05	*Call
2098<2086		5053<6170	170 TO H05	*Call
2098<2086		5053<6210	210 TO H05	*Call
2098<2086		5053<6220	220 TO H05	*Call
2098<2086		5053<6230	230 TO H05	*Call
2098<2086		5053<6240	240 TO H05	*Call
2098<2086		5053<6250	250 TO H05	*Call
2098<2086		5053<6260	260 TO H05	*Call
2098<2086		5053<6270	270 TO H05	*Call
2098<2086		5053<6310	310 TO H05	*Call
2098<2086		5053<6320	320 TO H05	*Call
2098<2086		5053<6330	330 TO H05	*Call
2098<2086		5053<6340	340 TO H05	*Call
2098<2086		5053<6350	350 TO H05	*Call
2098<2086		5053<6360	360 TO H05	*Call
2098<2086		5053<6370	370 TO H05	*Call
2098<2086		5053<6410	410 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5053<6420	420 TO H05	*Call
2098<2086		5053<6430	430 TO H05	*Call
2098<2086		5053<6440	440 TO H05	*Call
2098<2086		5053<6450	450 TO H05	*Call
2098<2086		5053<6460	460 TO H05	*Call
2098<2086		5053<6470	470 TO H05	*Call
2098<2086		5054<6070	070 TO I01	*Call
2098<2086		5054<6110	110 TO I01	*Call
2098<2086		5054<6120	120 TO I01	*Call
2098<2086		5054<6130	130 TO I01	*Call
2098<2086		5054<6140	140 TO I01	*Call
2098<2086		5054<6150	150 TO I01	*Call
2098<2086		5054<6160	160 TO I01	*Call
2098<2086		5054<6170	170 TO I01	*Call
2098<2086		5054<6210	210 TO I01	*Call
2098<2086		5054<6220	220 TO I01	*Call
2098<2086		5054<6230	230 TO I01	*Call
2098<2086		5054<6240	240 TO I01	*Call
2098<2086		5054<6250	250 TO I01	*Call
2098<2086		5054<6260	260 TO I01	*Call
2098<2086		5054<6270	270 TO I01	*Call
2098<2086		5054<6310	310 TO I01	*Call
2098<2086		5054<6320	320 TO I01	*Call
2098<2086		5054<6330	330 TO I01	*Call
2098<2086		5054<6340	340 TO I01	*Call
2098<2086		5054<6350	350 TO I01	*Call
2098<2086		5054<6360	360 TO I01	*Call
2098<2086		5054<6370	370 TO I01	*Call
2098<2086		5054<6410	410 TO I01	*Call
2098<2086		5054<6420	420 TO I01	*Call
2098<2086		5054<6430	430 TO I01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5054<6440	440 TO I01	*Call
2098<2086		5054<6450	450 TO I01	*Call
2098<2086		5054<6460	460 TO I01	*Call
2098<2086		5054<6470	470 TO I01	*Call
2098<2086		5055<6070	070 TO I02	*Call
2098<2086		5055<6110	110 TO I02	*Call
2098<2086		5055<6120	120 TO I02	*Call
2098<2086		5055<6130	130 TO I02	*Call
2098<2086		5055<6140	140 TO I02	*Call
2098<2086		5055<6150	150 TO I02	*Call
2098<2086		5055<6160	160 TO I02	*Call
2098<2086		5055<6170	170 TO I02	*Call
2098<2086		5055<6210	210 TO I02	*Call
2098<2086		5055<6220	220 TO I02	*Call
2098<2086		5055<6230	230 TO I02	*Call
2098<2086		5055<6240	240 TO I02	*Call
2098<2086		5055<6250	250 TO I02	*Call
2098<2086		5055<6260	260 TO I02	*Call
2098<2086		5055<6270	270 TO I02	*Call
2098<2086		5055<6310	310 TO I02	*Call
2098<2086		5055<6320	320 TO I02	*Call
2098<2086		5055<6330	330 TO I02	*Call
2098<2086		5055<6340	340 TO I02	*Call
2098<2086		5055<6350	350 TO I02	*Call
2098<2086		5055<6360	360 TO I02	*Call
2098<2086		5055<6370	370 TO I02	*Call
2098<2086		5055<6410	410 TO I02	*Call
2098<2086		5055<6420	420 TO I02	*Call
2098<2086		5055<6430	430 TO I02	*Call
2098<2086		5055<6440	440 TO I02	*Call
2098<2086		5055<6450	450 TO I02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5055<6460	460 TO I02	*Call
2098<2086		5055<6470	470 TO I02	*Call
2098<2086		5056<6070	070 TO I03	*Call
2098<2086		5056<6110	110 TO I03	*Call
2098<2086		5056<6120	120 TO I03	*Call
2098<2086		5056<6130	130 TO I03	*Call
2098<2086		5056<6140	140 TO I03	*Call
2098<2086		5056<6150	150 TO I03	*Call
2098<2086		5056<6160	160 TO I03	*Call
2098<2086		5056<6170	170 TO I03	*Call
2098<2086		5056<6210	210 TO I03	*Call
2098<2086		5056<6220	220 TO I03	*Call
2098<2086		5056<6230	230 TO I03	*Call
2098<2086		5056<6240	240 TO I03	*Call
2098<2086		5056<6250	250 TO I03	*Call
2098<2086		5056<6260	260 TO I03	*Call
2098<2086		5056<6270	270 TO I03	*Call
2098<2086		5056<6310	310 TO I03	*Call
2098<2086		5056<6320	320 TO I03	*Call
2098<2086		5056<6330	330 TO I03	*Call
2098<2086		5056<6340	340 TO I03	*Call
2098<2086		5056<6350	350 TO I03	*Call
2098<2086		5056<6360	360 TO I03	*Call
2098<2086		5056<6370	370 TO I03	*Call
2098<2086		5056<6410	410 TO I03	*Call
2098<2086		5056<6420	420 TO I03	*Call
2098<2086		5056<6430	430 TO I03	*Call
2098<2086		5056<6440	440 TO I03	*Call
2098<2086		5056<6450	450 TO I03	*Call
2098<2086		5056<6460	460 TO I03	*Call
2098<2086		5056<6470	470 TO I03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5057<6070	070 TO I04	*Call
2098<2086		5057<6110	110 TO I04	*Call
2098<2086		5057<6120	120 TO I04	*Call
2098<2086		5057<6130	130 TO I04	*Call
2098<2086		5057<6140	140 TO I04	*Call
2098<2086		5057<6150	150 TO I04	*Call
2098<2086		5057<6160	160 TO I04	*Call
2098<2086		5057<6170	170 TO I04	*Call
2098<2086		5057<6210	210 TO I04	*Call
2098<2086		5057<6220	220 TO I04	*Call
2098<2086		5057<6230	230 TO I04	*Call
2098<2086		5057<6240	240 TO I04	*Call
2098<2086		5057<6250	250 TO I04	*Call
2098<2086		5057<6260	260 TO I04	*Call
2098<2086		5057<6270	270 TO I04	*Call
2098<2086		5057<6310	310 TO I04	*Call
2098<2086		5057<6320	320 TO I04	*Call
2098<2086		5057<6330	330 TO I04	*Call
2098<2086		5057<6340	340 TO I04	*Call
2098<2086		5057<6350	350 TO I04	*Call
2098<2086		5057<6360	360 TO I04	*Call
2098<2086		5057<6370	370 TO I04	*Call
2098<2086		5057<6410	410 TO I04	*Call
2098<2086		5057<6420	420 TO I04	*Call
2098<2086		5057<6430	430 TO I04	*Call
2098<2086		5057<6440	440 TO I04	*Call
2098<2086		5057<6450	450 TO I04	*Call
2098<2086		5057<6460	460 TO I04	*Call
2098<2086		5057<6470	470 TO I04	*Call
2098<2086		5058<6070	070 TO I05	*Call
2098<2086		5058<6110	110 TO I05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5058<6120	120 TO I05	*Call
2098<2086		5058<6130	130 TO I05	*Call
2098<2086		5058<6140	140 TO I05	*Call
2098<2086		5058<6150	150 TO I05	*Call
2098<2086		5058<6160	160 TO I05	*Call
2098<2086		5058<6170	170 TO I05	*Call
2098<2086		5058<6210	210 TO I05	*Call
2098<2086		5058<6220	220 TO I05	*Call
2098<2086		5058<6230	230 TO I05	*Call
2098<2086		5058<6240	240 TO I05	*Call
2098<2086		5058<6250	250 TO I05	*Call
2098<2086		5058<6260	260 TO I05	*Call
2098<2086		5058<6270	270 TO I05	*Call
2098<2086		5058<6310	310 TO I05	*Call
2098<2086		5058<6320	320 TO I05	*Call
2098<2086		5058<6330	330 TO I05	*Call
2098<2086		5058<6340	340 TO I05	*Call
2098<2086		5058<6350	350 TO I05	*Call
2098<2086		5058<6360	360 TO I05	*Call
2098<2086		5058<6370	370 TO I05	*Call
2098<2086		5058<6410	410 TO I05	*Call
2098<2086		5058<6420	420 TO I05	*Call
2098<2086		5058<6430	430 TO I05	*Call
2098<2086		5058<6440	440 TO I05	*Call
2098<2086		5058<6450	450 TO I05	*Call
2098<2086		5058<6460	460 TO I05	*Call
2098<2086		5058<6470	470 TO I05	*Call
2098<2086		5059<6070	070 TO J01	*Call
2098<2086		5059<6110	110 TO J01	*Call
2098<2086		5059<6120	120 TO J01	*Call
2098<2086		5059<6130	130 TO J01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5059<6140	140 TO J01	*Call
2098<2086		5059<6150	150 TO J01	*Call
2098<2086		5059<6160	160 TO J01	*Call
2098<2086		5059<6170	170 TO J01	*Call
2098<2086		5059<6210	210 TO J01	*Call
2098<2086		5059<6220	220 TO J01	*Call
2098<2086		5059<6230	230 TO J01	*Call
2098<2086		5059<6240	240 TO J01	*Call
2098<2086		5059<6250	250 TO J01	*Call
2098<2086		5059<6260	260 TO J01	*Call
2098<2086		5059<6270	270 TO J01	*Call
2098<2086		5059<6310	310 TO J01	*Call
2098<2086		5059<6320	320 TO J01	*Call
2098<2086		5059<6330	330 TO J01	*Call
2098<2086		5059<6340	340 TO J01	*Call
2098<2086		5059<6350	350 TO J01	*Call
2098<2086		5059<6360	360 TO J01	*Call
2098<2086		5059<6370	370 TO J01	*Call
2098<2086		5059<6410	410 TO J01	*Call
2098<2086		5059<6420	420 TO J01	*Call
2098<2086		5059<6430	430 TO J01	*Call
2098<2086		5059<6440	440 TO J01	*Call
2098<2086		5059<6450	450 TO J01	*Call
2098<2086		5059<6460	460 TO J01	*Call
2098<2086		5059<6470	470 TO J01	*Call
2098<2086		5060<6070	070 TO J02	*Call
2098<2086		5060<6110	110 TO J02	*Call
2098<2086		5060<6120	120 TO J02	*Call
2098<2086		5060<6130	130 TO J02	*Call
2098<2086		5060<6140	140 TO J02	*Call
2098<2086		5060<6150	150 TO J02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5060<6160	160 TO J02	*Call
2098<2086		5060<6170	170 TO J02	*Call
2098<2086		5060<6210	210 TO J02	*Call
2098<2086		5060<6220	220 TO J02	*Call
2098<2086		5060<6230	230 TO J02	*Call
2098<2086		5060<6240	240 TO J02	*Call
2098<2086		5060<6250	250 TO J02	*Call
2098<2086		5060<6260	260 TO J02	*Call
2098<2086		5060<6270	270 TO J02	*Call
2098<2086		5060<6310	310 TO J02	*Call
2098<2086		5060<6320	320 TO J02	*Call
2098<2086		5060<6330	330 TO J02	*Call
2098<2086		5060<6340	340 TO J02	*Call
2098<2086		5060<6350	350 TO J02	*Call
2098<2086		5060<6360	360 TO J02	*Call
2098<2086		5060<6370	370 TO J02	*Call
2098<2086		5060<6410	410 TO J02	*Call
2098<2086		5060<6420	420 TO J02	*Call
2098<2086		5060<6430	430 TO J02	*Call
2098<2086		5060<6440	440 TO J02	*Call
2098<2086		5060<6450	450 TO J02	*Call
2098<2086		5060<6460	460 TO J02	*Call
2098<2086		5060<6470	470 TO J02	*Call
2098<2086		5061<6070	070 TO J03	*Call
2098<2086		5061<6110	110 TO J03	*Call
2098<2086		5061<6120	120 TO J03	*Call
2098<2086		5061<6130	130 TO J03	*Call
2098<2086		5061<6140	140 TO J03	*Call
2098<2086		5061<6150	150 TO J03	*Call
2098<2086		5061<6160	160 TO J03	*Call
2098<2086		5061<6170	170 TO J03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5061<6210	210 TO J03	*Call
2098<2086		5061<6220	220 TO J03	*Call
2098<2086		5061<6230	230 TO J03	*Call
2098<2086		5061<6240	240 TO J03	*Call
2098<2086		5061<6250	250 TO J03	*Call
2098<2086		5061<6260	260 TO J03	*Call
2098<2086		5061<6270	270 TO J03	*Call
2098<2086		5061<6310	310 TO J03	*Call
2098<2086		5061<6320	320 TO J03	*Call
2098<2086		5061<6330	330 TO J03	*Call
2098<2086		5061<6340	340 TO J03	*Call
2098<2086		5061<6350	350 TO J03	*Call
2098<2086		5061<6360	360 TO J03	*Call
2098<2086		5061<6370	370 TO J03	*Call
2098<2086		5061<6410	410 TO J03	*Call
2098<2086		5061<6420	420 TO J03	*Call
2098<2086		5061<6430	430 TO J03	*Call
2098<2086		5061<6440	440 TO J03	*Call
2098<2086		5061<6450	450 TO J03	*Call
2098<2086		5061<6460	460 TO J03	*Call
2098<2086		5061<6470	470 TO J03	*Call
2098<2086		5062<6070	070 TO J04	*Call
2098<2086		5062<6110	110 TO J04	*Call
2098<2086		5062<6120	120 TO J04	*Call
2098<2086		5062<6130	130 TO J04	*Call
2098<2086		5062<6140	140 TO J04	*Call
2098<2086		5062<6150	150 TO J04	*Call
2098<2086		5062<6160	160 TO J04	*Call
2098<2086		5062<6170	170 TO J04	*Call
2098<2086		5062<6210	210 TO J04	*Call
2098<2086		5062<6220	220 TO J04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5062<6230	230 TO J04	*Call
2098<2086		5062<6240	240 TO J04	*Call
2098<2086		5062<6250	250 TO J04	*Call
2098<2086		5062<6260	260 TO J04	*Call
2098<2086		5062<6270	270 TO J04	*Call
2098<2086		5062<6310	310 TO J04	*Call
2098<2086		5062<6320	320 TO J04	*Call
2098<2086		5062<6330	330 TO J04	*Call
2098<2086		5062<6340	340 TO J04	*Call
2098<2086		5062<6350	350 TO J04	*Call
2098<2086		5062<6360	360 TO J04	*Call
2098<2086		5062<6370	370 TO J04	*Call
2098<2086		5062<6410	410 TO J04	*Call
2098<2086		5062<6420	420 TO J04	*Call
2098<2086		5062<6430	430 TO J04	*Call
2098<2086		5062<6440	440 TO J04	*Call
2098<2086		5062<6450	450 TO J04	*Call
2098<2086		5062<6460	460 TO J04	*Call
2098<2086		5062<6470	470 TO J04	*Call
2098<2086		5063<6070	070 TO J05	*Call
2098<2086		5063<6110	110 TO J05	*Call
2098<2086		5063<6120	120 TO J05	*Call
2098<2086		5063<6130	130 TO J05	*Call
2098<2086		5063<6140	140 TO J05	*Call
2098<2086		5063<6150	150 TO J05	*Call
2098<2086		5063<6160	160 TO J05	*Call
2098<2086		5063<6170	170 TO J05	*Call
2098<2086		5063<6210	210 TO J05	*Call
2098<2086		5063<6220	220 TO J05	*Call
2098<2086		5063<6230	230 TO J05	*Call
2098<2086		5063<6240	240 TO J05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5063<6250	250 TO J05	*Call
2098<2086		5063<6260	260 TO J05	*Call
2098<2086		5063<6270	270 TO J05	*Call
2098<2086		5063<6310	310 TO J05	*Call
2098<2086		5063<6320	320 TO J05	*Call
2098<2086		5063<6330	330 TO J05	*Call
2098<2086		5063<6340	340 TO J05	*Call
2098<2086		5063<6350	350 TO J05	*Call
2098<2086		5063<6360	360 TO J05	*Call
2098<2086		5063<6370	370 TO J05	*Call
2098<2086		5063<6410	410 TO J05	*Call
2098<2086		5063<6420	420 TO J05	*Call
2098<2086		5063<6430	430 TO J05	*Call
2098<2086		5063<6440	440 TO J05	*Call
2098<2086		5063<6450	450 TO J05	*Call
2098<2086		5063<6460	460 TO J05	*Call
2098<2086		5063<6470	470 TO J05	*Call
2098<2086		5064<6070	070 TO K01	*Call
2098<2086		5064<6110	110 TO K01	*Call
2098<2086		5064<6120	120 TO K01	*Call
2098<2086		5064<6130	130 TO K01	*Call
2098<2086		5064<6140	140 TO K01	*Call
2098<2086		5064<6150	150 TO K01	*Call
2098<2086		5064<6160	160 TO K01	*Call
2098<2086		5064<6170	170 TO K01	*Call
2098<2086		5064<6210	210 TO K01	*Call
2098<2086		5064<6220	220 TO K01	*Call
2098<2086		5064<6230	230 TO K01	*Call
2098<2086		5064<6240	240 TO K01	*Call
2098<2086		5064<6250	250 TO K01	*Call
2098<2086		5064<6260	260 TO K01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5064<6270	270 TO K01	*Call
2098<2086		5064<6310	310 TO K01	*Call
2098<2086		5064<6320	320 TO K01	*Call
2098<2086		5064<6330	330 TO K01	*Call
2098<2086		5064<6340	340 TO K01	*Call
2098<2086		5064<6350	350 TO K01	*Call
2098<2086		5064<6360	360 TO K01	*Call
2098<2086		5064<6370	370 TO K01	*Call
2098<2086		5064<6410	410 TO K01	*Call
2098<2086		5064<6420	420 TO K01	*Call
2098<2086		5064<6430	430 TO K01	*Call
2098<2086		5064<6440	440 TO K01	*Call
2098<2086		5064<6450	450 TO K01	*Call
2098<2086		5064<6460	460 TO K01	*Call
2098<2086		5064<6470	470 TO K01	*Call
2098<2086		5065<6070	070 TO K02	*Call
2098<2086		5065<6110	110 TO K02	*Call
2098<2086		5065<6120	120 TO K02	*Call
2098<2086		5065<6130	130 TO K02	*Call
2098<2086		5065<6140	140 TO K02	*Call
2098<2086		5065<6150	150 TO K02	*Call
2098<2086		5065<6160	160 TO K02	*Call
2098<2086		5065<6170	170 TO K02	*Call
2098<2086		5065<6210	210 TO K02	*Call
2098<2086		5065<6220	220 TO K02	*Call
2098<2086		5065<6230	230 TO K02	*Call
2098<2086		5065<6240	240 TO K02	*Call
2098<2086		5065<6250	250 TO K02	*Call
2098<2086		5065<6260	260 TO K02	*Call
2098<2086		5065<6270	270 TO K02	*Call
2098<2086		5065<6310	310 TO K02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5065<6320	320 TO K02	*Call
2098<2086		5065<6330	330 TO K02	*Call
2098<2086		5065<6340	340 TO K02	*Call
2098<2086		5065<6350	350 TO K02	*Call
2098<2086		5065<6360	360 TO K02	*Call
2098<2086		5065<6370	370 TO K02	*Call
2098<2086		5065<6410	410 TO K02	*Call
2098<2086		5065<6420	420 TO K02	*Call
2098<2086		5065<6430	430 TO K02	*Call
2098<2086		5065<6440	440 TO K02	*Call
2098<2086		5065<6450	450 TO K02	*Call
2098<2086		5065<6460	460 TO K02	*Call
2098<2086		5065<6470	470 TO K02	*Call
2098<2086		5066<6070	070 TO K03	*Call
2098<2086		5066<6110	110 TO K03	*Call
2098<2086		5066<6120	120 TO K03	*Call
2098<2086		5066<6130	130 TO K03	*Call
2098<2086		5066<6140	140 TO K03	*Call
2098<2086		5066<6150	150 TO K03	*Call
2098<2086		5066<6160	160 TO K03	*Call
2098<2086		5066<6170	170 TO K03	*Call
2098<2086		5066<6210	210 TO K03	*Call
2098<2086		5066<6220	220 TO K03	*Call
2098<2086		5066<6230	230 TO K03	*Call
2098<2086		5066<6240	240 TO K03	*Call
2098<2086		5066<6250	250 TO K03	*Call
2098<2086		5066<6260	260 TO K03	*Call
2098<2086		5066<6270	270 TO K03	*Call
2098<2086		5066<6310	310 TO K03	*Call
2098<2086		5066<6320	320 TO K03	*Call
2098<2086		5066<6330	330 TO K03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5066<6340	340 TO K03	*Call
2098<2086		5066<6350	350 TO K03	*Call
2098<2086		5066<6360	360 TO K03	*Call
2098<2086		5066<6370	370 TO K03	*Call
2098<2086		5066<6410	410 TO K03	*Call
2098<2086		5066<6420	420 TO K03	*Call
2098<2086		5066<6430	430 TO K03	*Call
2098<2086		5066<6440	440 TO K03	*Call
2098<2086		5066<6450	450 TO K03	*Call
2098<2086		5066<6460	460 TO K03	*Call
2098<2086		5066<6470	470 TO K03	*Call
2098<2086		5067<6070	070 TO K04	*Call
2098<2086		5067<6110	110 TO K04	*Call
2098<2086		5067<6120	120 TO K04	*Call
2098<2086		5067<6130	130 TO K04	*Call
2098<2086		5067<6140	140 TO K04	*Call
2098<2086		5067<6150	150 TO K04	*Call
2098<2086		5067<6160	160 TO K04	*Call
2098<2086		5067<6170	170 TO K04	*Call
2098<2086		5067<6210	210 TO K04	*Call
2098<2086		5067<6220	220 TO K04	*Call
2098<2086		5067<6230	230 TO K04	*Call
2098<2086		5067<6240	240 TO K04	*Call
2098<2086		5067<6250	250 TO K04	*Call
2098<2086		5067<6260	260 TO K04	*Call
2098<2086		5067<6270	270 TO K04	*Call
2098<2086		5067<6310	310 TO K04	*Call
2098<2086		5067<6320	320 TO K04	*Call
2098<2086		5067<6330	330 TO K04	*Call
2098<2086		5067<6340	340 TO K04	*Call
2098<2086		5067<6350	350 TO K04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5067<6360	360 TO K04	*Call
2098<2086		5067<6370	370 TO K04	*Call
2098<2086		5067<6410	410 TO K04	*Call
2098<2086		5067<6420	420 TO K04	*Call
2098<2086		5067<6430	430 TO K04	*Call
2098<2086		5067<6440	440 TO K04	*Call
2098<2086		5067<6450	450 TO K04	*Call
2098<2086		5067<6460	460 TO K04	*Call
2098<2086		5067<6470	470 TO K04	*Call
2098<2086		5068<6070	070 TO K05	*Call
2098<2086		5068<6110	110 TO K05	*Call
2098<2086		5068<6120	120 TO K05	*Call
2098<2086		5068<6130	130 TO K05	*Call
2098<2086		5068<6140	140 TO K05	*Call
2098<2086		5068<6150	150 TO K05	*Call
2098<2086		5068<6160	160 TO K05	*Call
2098<2086		5068<6170	170 TO K05	*Call
2098<2086		5068<6210	210 TO K05	*Call
2098<2086		5068<6220	220 TO K05	*Call
2098<2086		5068<6230	230 TO K05	*Call
2098<2086		5068<6240	240 TO K05	*Call
2098<2086		5068<6250	250 TO K05	*Call
2098<2086		5068<6260	260 TO K05	*Call
2098<2086		5068<6270	270 TO K05	*Call
2098<2086		5068<6310	310 TO K05	*Call
2098<2086		5068<6320	320 TO K05	*Call
2098<2086		5068<6330	330 TO K05	*Call
2098<2086		5068<6340	340 TO K05	*Call
2098<2086		5068<6350	350 TO K05	*Call
2098<2086		5068<6360	360 TO K05	*Call
2098<2086		5068<6370	370 TO K05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5068<6410	410 TO K05	*Call
2098<2086		5068<6420	420 TO K05	*Call
2098<2086		5068<6430	430 TO K05	*Call
2098<2086		5068<6440	440 TO K05	*Call
2098<2086		5068<6450	450 TO K05	*Call
2098<2086		5068<6460	460 TO K05	*Call
2098<2086		5068<6470	470 TO K05	*Call
2098<2086		5069<6070	070 TO L01	*Call
2098<2086		5069<6110	110 TO L01	*Call
2098<2086		5069<6120	120 TO L01	*Call
2098<2086		5069<6130	130 TO L01	*Call
2098<2086		5069<6140	140 TO L01	*Call
2098<2086		5069<6150	150 TO L01	*Call
2098<2086		5069<6160	160 TO L01	*Call
2098<2086		5069<6170	170 TO L01	*Call
2098<2086		5069<6210	210 TO L01	*Call
2098<2086		5069<6220	220 TO L01	*Call
2098<2086		5069<6230	230 TO L01	*Call
2098<2086		5069<6240	240 TO L01	*Call
2098<2086		5069<6250	250 TO L01	*Call
2098<2086		5069<6260	260 TO L01	*Call
2098<2086		5069<6270	270 TO L01	*Call
2098<2086		5069<6310	310 TO L01	*Call
2098<2086		5069<6320	320 TO L01	*Call
2098<2086		5069<6330	330 TO L01	*Call
2098<2086		5069<6340	340 TO L01	*Call
2098<2086		5069<6350	350 TO L01	*Call
2098<2086		5069<6360	360 TO L01	*Call
2098<2086		5069<6370	370 TO L01	*Call
2098<2086		5069<6410	410 TO L01	*Call
2098<2086		5069<6420	420 TO L01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5069<6430	430 TO L01	*Call
2098<2086		5069<6440	440 TO L01	*Call
2098<2086		5069<6450	450 TO L01	*Call
2098<2086		5069<6460	460 TO L01	*Call
2098<2086		5069<6470	470 TO L01	*Call
2098<2086		5070<6070	070 TO L02	*Call
2098<2086		5070<6110	110 TO L02	*Call
2098<2086		5070<6120	120 TO L02	*Call
2098<2086		5070<6130	130 TO L02	*Call
2098<2086		5070<6140	140 TO L02	*Call
2098<2086		5070<6150	150 TO L02	*Call
2098<2086		5070<6160	160 TO L02	*Call
2098<2086		5070<6170	170 TO L02	*Call
2098<2086		5070<6210	210 TO L02	*Call
2098<2086		5070<6220	220 TO L02	*Call
2098<2086		5070<6230	230 TO L02	*Call
2098<2086		5070<6240	240 TO L02	*Call
2098<2086		5070<6250	250 TO L02	*Call
2098<2086		5070<6260	260 TO L02	*Call
2098<2086		5070<6270	270 TO L02	*Call
2098<2086		5070<6310	310 TO L02	*Call
2098<2086		5070<6320	320 TO L02	*Call
2098<2086		5070<6330	330 TO L02	*Call
2098<2086		5070<6340	340 TO L02	*Call
2098<2086		5070<6350	350 TO L02	*Call
2098<2086		5070<6360	360 TO L02	*Call
2098<2086		5070<6370	370 TO L02	*Call
2098<2086		5070<6410	410 TO L02	*Call
2098<2086		5070<6420	420 TO L02	*Call
2098<2086		5070<6430	430 TO L02	*Call
2098<2086		5070<6440	440 TO L02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5070<6450	450 TO L02	*Call
2098<2086		5070<6460	460 TO L02	*Call
2098<2086		5070<6470	470 TO L02	*Call
2098<2086		5071<6070	070 TO L03	*Call
2098<2086		5071<6110	110 TO L03	*Call
2098<2086		5071<6120	120 TO L03	*Call
2098<2086		5071<6130	130 TO L03	*Call
2098<2086		5071<6140	140 TO L03	*Call
2098<2086		5071<6150	150 TO L03	*Call
2098<2086		5071<6160	160 TO L03	*Call
2098<2086		5071<6170	170 TO L03	*Call
2098<2086		5071<6210	210 TO L03	*Call
2098<2086		5071<6220	220 TO L03	*Call
2098<2086		5071<6230	230 TO L03	*Call
2098<2086		5071<6240	240 TO L03	*Call
2098<2086		5071<6250	250 TO L03	*Call
2098<2086		5071<6260	260 TO L03	*Call
2098<2086		5071<6270	270 TO L03	*Call
2098<2086		5071<6310	310 TO L03	*Call
2098<2086		5071<6320	320 TO L03	*Call
2098<2086		5071<6330	330 TO L03	*Call
2098<2086		5071<6340	340 TO L03	*Call
2098<2086		5071<6350	350 TO L03	*Call
2098<2086		5071<6360	360 TO L03	*Call
2098<2086		5071<6370	370 TO L03	*Call
2098<2086		5071<6410	410 TO L03	*Call
2098<2086		5071<6420	420 TO L03	*Call
2098<2086		5071<6430	430 TO L03	*Call
2098<2086		5071<6440	440 TO L03	*Call
2098<2086		5071<6450	450 TO L03	*Call
2098<2086		5071<6460	460 TO L03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5071<6470	470 TO L03	*Call
2098<2086		5072<6070	070 TO L04	*Call
2098<2086		5072<6110	110 TO L04	*Call
2098<2086		5072<6120	120 TO L04	*Call
2098<2086		5072<6130	130 TO L04	*Call
2098<2086		5072<6140	140 TO L04	*Call
2098<2086		5072<6150	150 TO L04	*Call
2098<2086		5072<6160	160 TO L04	*Call
2098<2086		5072<6170	170 TO L04	*Call
2098<2086		5072<6210	210 TO L04	*Call
2098<2086		5072<6220	220 TO L04	*Call
2098<2086		5072<6230	230 TO L04	*Call
2098<2086		5072<6240	240 TO L04	*Call
2098<2086		5072<6250	250 TO L04	*Call
2098<2086		5072<6260	260 TO L04	*Call
2098<2086		5072<6270	270 TO L04	*Call
2098<2086		5072<6310	310 TO L04	*Call
2098<2086		5072<6320	320 TO L04	*Call
2098<2086		5072<6330	330 TO L04	*Call
2098<2086		5072<6340	340 TO L04	*Call
2098<2086		5072<6350	350 TO L04	*Call
2098<2086		5072<6360	360 TO L04	*Call
2098<2086		5072<6370	370 TO L04	*Call
2098<2086		5072<6410	410 TO L04	*Call
2098<2086		5072<6420	420 TO L04	*Call
2098<2086		5072<6430	430 TO L04	*Call
2098<2086		5072<6440	440 TO L04	*Call
2098<2086		5072<6450	450 TO L04	*Call
2098<2086		5072<6460	460 TO L04	*Call
2098<2086		5072<6470	470 TO L04	*Call
2098<2086		5073<6070	070 TO L05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5073<6110	110 TO L05	*Call
2098<2086		5073<6120	120 TO L05	*Call
2098<2086		5073<6130	130 TO L05	*Call
2098<2086		5073<6140	140 TO L05	*Call
2098<2086		5073<6150	150 TO L05	*Call
2098<2086		5073<6160	160 TO L05	*Call
2098<2086		5073<6170	170 TO L05	*Call
2098<2086		5073<6210	210 TO L05	*Call
2098<2086		5073<6220	220 TO L05	*Call
2098<2086		5073<6230	230 TO L05	*Call
2098<2086		5073<6240	240 TO L05	*Call
2098<2086		5073<6250	250 TO L05	*Call
2098<2086		5073<6260	260 TO L05	*Call
2098<2086		5073<6270	270 TO L05	*Call
2098<2086		5073<6310	310 TO L05	*Call
2098<2086		5073<6320	320 TO L05	*Call
2098<2086		5073<6330	330 TO L05	*Call
2098<2086		5073<6340	340 TO L05	*Call
2098<2086		5073<6350	350 TO L05	*Call
2098<2086		5073<6360	360 TO L05	*Call
2098<2086		5073<6370	370 TO L05	*Call
2098<2086		5073<6410	410 TO L05	*Call
2098<2086		5073<6420	420 TO L05	*Call
2098<2086		5073<6430	430 TO L05	*Call
2098<2086		5073<6440	440 TO L05	*Call
2098<2086		5073<6450	450 TO L05	*Call
2098<2086		5073<6460	460 TO L05	*Call
2098<2086		5073<6470	470 TO L05	*Call
2098<2086		5074<6070	070 TO M01	*Call
2098<2086		5074<6110	110 TO M01	*Call
2098<2086		5074<6120	120 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5074<6130	130 TO M01	*Call
2098<2086		5074<6140	140 TO M01	*Call
2098<2086		5074<6150	150 TO M01	*Call
2098<2086		5074<6160	160 TO M01	*Call
2098<2086		5074<6170	170 TO M01	*Call
2098<2086		5074<6210	210 TO M01	*Call
2098<2086		5074<6220	220 TO M01	*Call
2098<2086		5074<6230	230 TO M01	*Call
2098<2086		5074<6240	240 TO M01	*Call
2098<2086		5074<6250	250 TO M01	*Call
2098<2086		5074<6260	260 TO M01	*Call
2098<2086		5074<6270	270 TO M01	*Call
2098<2086		5074<6310	310 TO M01	*Call
2098<2086		5074<6320	320 TO M01	*Call
2098<2086		5074<6330	330 TO M01	*Call
2098<2086		5074<6340	340 TO M01	*Call
2098<2086		5074<6350	350 TO M01	*Call
2098<2086		5074<6360	360 TO M01	*Call
2098<2086		5074<6370	370 TO M01	*Call
2098<2086		5074<6410	410 TO M01	*Call
2098<2086		5074<6420	420 TO M01	*Call
2098<2086		5074<6430	430 TO M01	*Call
2098<2086		5074<6440	440 TO M01	*Call
2098<2086		5074<6450	450 TO M01	*Call
2098<2086		5074<6460	460 TO M01	*Call
2098<2086		5074<6470	470 TO M01	*Call
2098<2086		5075<6070	070 TO M02	*Call
2098<2086		5075<6110	110 TO M02	*Call
2098<2086		5075<6120	120 TO M02	*Call
2098<2086		5075<6130	130 TO M02	*Call
2098<2086		5075<6140	140 TO M02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5075<6150	150 TO M02	*Call
2098<2086		5075<6160	160 TO M02	*Call
2098<2086		5075<6170	170 TO M02	*Call
2098<2086		5075<6210	210 TO M02	*Call
2098<2086		5075<6220	220 TO M02	*Call
2098<2086		5075<6230	230 TO M02	*Call
2098<2086		5075<6240	240 TO M02	*Call
2098<2086		5075<6250	250 TO M02	*Call
2098<2086		5075<6260	260 TO M02	*Call
2098<2086		5075<6270	270 TO M02	*Call
2098<2086		5075<6310	310 TO M02	*Call
2098<2086		5075<6320	320 TO M02	*Call
2098<2086		5075<6330	330 TO M02	*Call
2098<2086		5075<6340	340 TO M02	*Call
2098<2086		5075<6350	350 TO M02	*Call
2098<2086		5075<6360	360 TO M02	*Call
2098<2086		5075<6370	370 TO M02	*Call
2098<2086		5075<6410	410 TO M02	*Call
2098<2086		5075<6420	420 TO M02	*Call
2098<2086		5075<6430	430 TO M02	*Call
2098<2086		5075<6440	440 TO M02	*Call
2098<2086		5075<6450	450 TO M02	*Call
2098<2086		5075<6460	460 TO M02	*Call
2098<2086		5075<6470	470 TO M02	*Call
2098<2086		5076<6070	070 TO M03	*Call
2098<2086		5076<6110	110 TO M03	*Call
2098<2086		5076<6120	120 TO M03	*Call
2098<2086		5076<6130	130 TO M03	*Call
2098<2086		5076<6140	140 TO M03	*Call
2098<2086		5076<6150	150 TO M03	*Call
2098<2086		5076<6160	160 TO M03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5076<6170	170 TO M03	*Call
2098<2086		5076<6210	210 TO M03	*Call
2098<2086		5076<6220	220 TO M03	*Call
2098<2086		5076<6230	230 TO M03	*Call
2098<2086		5076<6240	240 TO M03	*Call
2098<2086		5076<6250	250 TO M03	*Call
2098<2086		5076<6260	260 TO M03	*Call
2098<2086		5076<6270	270 TO M03	*Call
2098<2086		5076<6310	310 TO M03	*Call
2098<2086		5076<6320	320 TO M03	*Call
2098<2086		5076<6330	330 TO M03	*Call
2098<2086		5076<6340	340 TO M03	*Call
2098<2086		5076<6350	350 TO M03	*Call
2098<2086		5076<6360	360 TO M03	*Call
2098<2086		5076<6370	370 TO M03	*Call
2098<2086		5076<6410	410 TO M03	*Call
2098<2086		5076<6420	420 TO M03	*Call
2098<2086		5076<6430	430 TO M03	*Call
2098<2086		5076<6440	440 TO M03	*Call
2098<2086		5076<6450	450 TO M03	*Call
2098<2086		5076<6460	460 TO M03	*Call
2098<2086		5076<6470	470 TO M03	*Call
2098<2086		5077<6070	070 TO M04	*Call
2098<2086		5077<6110	110 TO M04	*Call
2098<2086		5077<6120	120 TO M04	*Call
2098<2086		5077<6130	130 TO M04	*Call
2098<2086		5077<6140	140 TO M04	*Call
2098<2086		5077<6150	150 TO M04	*Call
2098<2086		5077<6160	160 TO M04	*Call
2098<2086		5077<6170	170 TO M04	*Call
2098<2086		5077<6210	210 TO M04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5077<6220	220 TO M04	*Call
2098<2086		5077<6230	230 TO M04	*Call
2098<2086		5077<6240	240 TO M04	*Call
2098<2086		5077<6250	250 TO M04	*Call
2098<2086		5077<6260	260 TO M04	*Call
2098<2086		5077<6270	270 TO M04	*Call
2098<2086		5077<6310	310 TO M04	*Call
2098<2086		5077<6320	320 TO M04	*Call
2098<2086		5077<6330	330 TO M04	*Call
2098<2086		5077<6340	340 TO M04	*Call
2098<2086		5077<6350	350 TO M04	*Call
2098<2086		5077<6360	360 TO M04	*Call
2098<2086		5077<6370	370 TO M04	*Call
2098<2086		5077<6410	410 TO M04	*Call
2098<2086		5077<6420	420 TO M04	*Call
2098<2086		5077<6430	430 TO M04	*Call
2098<2086		5077<6440	440 TO M04	*Call
2098<2086		5077<6450	450 TO M04	*Call
2098<2086		5077<6460	460 TO M04	*Call
2098<2086		5077<6470	470 TO M04	*Call
2098<2086		5078<6070	070 TO M05	*Call
2098<2086		5078<6110	110 TO M05	*Call
2098<2086		5078<6120	120 TO M05	*Call
2098<2086		5078<6130	130 TO M05	*Call
2098<2086		5078<6140	140 TO M05	*Call
2098<2086		5078<6150	150 TO M05	*Call
2098<2086		5078<6160	160 TO M05	*Call
2098<2086		5078<6170	170 TO M05	*Call
2098<2086		5078<6210	210 TO M05	*Call
2098<2086		5078<6220	220 TO M05	*Call
2098<2086		5078<6230	230 TO M05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5078<6240	240 TO M05	*Call
2098<2086		5078<6250	250 TO M05	*Call
2098<2086		5078<6260	260 TO M05	*Call
2098<2086		5078<6270	270 TO M05	*Call
2098<2086		5078<6310	310 TO M05	*Call
2098<2086		5078<6320	320 TO M05	*Call
2098<2086		5078<6330	330 TO M05	*Call
2098<2086		5078<6340	340 TO M05	*Call
2098<2086		5078<6350	350 TO M05	*Call
2098<2086		5078<6360	360 TO M05	*Call
2098<2086		5078<6370	370 TO M05	*Call
2098<2086		5078<6410	410 TO M05	*Call
2098<2086		5078<6420	420 TO M05	*Call
2098<2086		5078<6430	430 TO M05	*Call
2098<2086		5078<6440	440 TO M05	*Call
2098<2086		5078<6450	450 TO M05	*Call
2098<2086		5078<6460	460 TO M05	*Call
2098<2086		5078<6470	470 TO M05	*Call
2098<2086		5079<6070	070 TO N01	*Call
2098<2086		5079<6110	110 TO N01	*Call
2098<2086		5079<6120	120 TO N01	*Call
2098<2086		5079<6130	130 TO N01	*Call
2098<2086		5079<6140	140 TO N01	*Call
2098<2086		5079<6150	150 TO N01	*Call
2098<2086		5079<6160	160 TO N01	*Call
2098<2086		5079<6170	170 TO N01	*Call
2098<2086		5079<6210	210 TO N01	*Call
2098<2086		5079<6220	220 TO N01	*Call
2098<2086		5079<6230	230 TO N01	*Call
2098<2086		5079<6240	240 TO N01	*Call
2098<2086		5079<6250	250 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5079<6260	260 TO N01	*Call
2098<2086		5079<6270	270 TO N01	*Call
2098<2086		5079<6310	310 TO N01	*Call
2098<2086		5079<6320	320 TO N01	*Call
2098<2086		5079<6330	330 TO N01	*Call
2098<2086		5079<6340	340 TO N01	*Call
2098<2086		5079<6350	350 TO N01	*Call
2098<2086		5079<6360	360 TO N01	*Call
2098<2086		5079<6370	370 TO N01	*Call
2098<2086		5079<6410	410 TO N01	*Call
2098<2086		5079<6420	420 TO N01	*Call
2098<2086		5079<6430	430 TO N01	*Call
2098<2086		5079<6440	440 TO N01	*Call
2098<2086		5079<6450	450 TO N01	*Call
2098<2086		5079<6460	460 TO N01	*Call
2098<2086		5079<6470	470 TO N01	*Call
2098<2086		5080<6070	070 TO N02	*Call
2098<2086		5080<6110	110 TO N02	*Call
2098<2086		5080<6120	120 TO N02	*Call
2098<2086		5080<6130	130 TO N02	*Call
2098<2086		5080<6140	140 TO N02	*Call
2098<2086		5080<6150	150 TO N02	*Call
2098<2086		5080<6160	160 TO N02	*Call
2098<2086		5080<6170	170 TO N02	*Call
2098<2086		5080<6210	210 TO N02	*Call
2098<2086		5080<6220	220 TO N02	*Call
2098<2086		5080<6230	230 TO N02	*Call
2098<2086		5080<6240	240 TO N02	*Call
2098<2086		5080<6250	250 TO N02	*Call
2098<2086		5080<6260	260 TO N02	*Call
2098<2086		5080<6270	270 TO N02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5080<6310	310 TO N02	*Call
2098<2086		5080<6320	320 TO N02	*Call
2098<2086		5080<6330	330 TO N02	*Call
2098<2086		5080<6340	340 TO N02	*Call
2098<2086		5080<6350	350 TO N02	*Call
2098<2086		5080<6360	360 TO N02	*Call
2098<2086		5080<6370	370 TO N02	*Call
2098<2086		5080<6410	410 TO N02	*Call
2098<2086		5080<6420	420 TO N02	*Call
2098<2086		5080<6430	430 TO N02	*Call
2098<2086		5080<6440	440 TO N02	*Call
2098<2086		5080<6450	450 TO N02	*Call
2098<2086		5080<6460	460 TO N02	*Call
2098<2086		5080<6470	470 TO N02	*Call
2098<2086		5081<6070	070 TO N03	*Call
2098<2086		5081<6110	110 TO N03	*Call
2098<2086		5081<6120	120 TO N03	*Call
2098<2086		5081<6130	130 TO N03	*Call
2098<2086		5081<6140	140 TO N03	*Call
2098<2086		5081<6150	150 TO N03	*Call
2098<2086		5081<6160	160 TO N03	*Call
2098<2086		5081<6170	170 TO N03	*Call
2098<2086		5081<6210	210 TO N03	*Call
2098<2086		5081<6220	220 TO N03	*Call
2098<2086		5081<6230	230 TO N03	*Call
2098<2086		5081<6240	240 TO N03	*Call
2098<2086		5081<6250	250 TO N03	*Call
2098<2086		5081<6260	260 TO N03	*Call
2098<2086		5081<6270	270 TO N03	*Call
2098<2086		5081<6310	310 TO N03	*Call
2098<2086		5081<6320	320 TO N03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5081<6330	330 TO N03	*Call
2098<2086		5081<6340	340 TO N03	*Call
2098<2086		5081<6350	350 TO N03	*Call
2098<2086		5081<6360	360 TO N03	*Call
2098<2086		5081<6370	370 TO N03	*Call
2098<2086		5081<6410	410 TO N03	*Call
2098<2086		5081<6420	420 TO N03	*Call
2098<2086		5081<6430	430 TO N03	*Call
2098<2086		5081<6440	440 TO N03	*Call
2098<2086		5081<6450	450 TO N03	*Call
2098<2086		5081<6460	460 TO N03	*Call
2098<2086		5081<6470	470 TO N03	*Call
2098<2086		5082<6070	070 TO N04	*Call
2098<2086		5082<6110	110 TO N04	*Call
2098<2086		5082<6120	120 TO N04	*Call
2098<2086		5082<6130	130 TO N04	*Call
2098<2086		5082<6140	140 TO N04	*Call
2098<2086		5082<6150	150 TO N04	*Call
2098<2086		5082<6160	160 TO N04	*Call
2098<2086		5082<6170	170 TO N04	*Call
2098<2086		5082<6210	210 TO N04	*Call
2098<2086		5082<6220	220 TO N04	*Call
2098<2086		5082<6230	230 TO N04	*Call
2098<2086		5082<6240	240 TO N04	*Call
2098<2086		5082<6250	250 TO N04	*Call
2098<2086		5082<6260	260 TO N04	*Call
2098<2086		5082<6270	270 TO N04	*Call
2098<2086		5082<6310	310 TO N04	*Call
2098<2086		5082<6320	320 TO N04	*Call
2098<2086		5082<6330	330 TO N04	*Call
2098<2086		5082<6340	340 TO N04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5082<6350	350 TO N04	*Call
2098<2086		5082<6360	360 TO N04	*Call
2098<2086		5082<6370	370 TO N04	*Call
2098<2086		5082<6410	410 TO N04	*Call
2098<2086		5082<6420	420 TO N04	*Call
2098<2086		5082<6430	430 TO N04	*Call
2098<2086		5082<6440	440 TO N04	*Call
2098<2086		5082<6450	450 TO N04	*Call
2098<2086		5082<6460	460 TO N04	*Call
2098<2086		5082<6470	470 TO N04	*Call
2098<2086		5083<6070	070 TO N05	*Call
2098<2086		5083<6110	110 TO N05	*Call
2098<2086		5083<6120	120 TO N05	*Call
2098<2086		5083<6130	130 TO N05	*Call
2098<2086		5083<6140	140 TO N05	*Call
2098<2086		5083<6150	150 TO N05	*Call
2098<2086		5083<6160	160 TO N05	*Call
2098<2086		5083<6170	170 TO N05	*Call
2098<2086		5083<6210	210 TO N05	*Call
2098<2086		5083<6220	220 TO N05	*Call
2098<2086		5083<6230	230 TO N05	*Call
2098<2086		5083<6240	240 TO N05	*Call
2098<2086		5083<6250	250 TO N05	*Call
2098<2086		5083<6260	260 TO N05	*Call
2098<2086		5083<6270	270 TO N05	*Call
2098<2086		5083<6310	310 TO N05	*Call
2098<2086		5083<6320	320 TO N05	*Call
2098<2086		5083<6330	330 TO N05	*Call
2098<2086		5083<6340	340 TO N05	*Call
2098<2086		5083<6350	350 TO N05	*Call
2098<2086		5083<6360	360 TO N05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5083<6370	370 TO N05	*Call
2098<2086		5083<6410	410 TO N05	*Call
2098<2086		5083<6420	420 TO N05	*Call
2098<2086		5083<6430	430 TO N05	*Call
2098<2086		5083<6440	440 TO N05	*Call
2098<2086		5083<6450	450 TO N05	*Call
2098<2086		5083<6460	460 TO N05	*Call
2098<2086		5083<6470	470 TO N05	*Call
2098<2086		5084<6070	070 TO O01	*Call
2098<2086		5084<6110	110 TO O01	*Call
2098<2086		5084<6120	120 TO O01	*Call
2098<2086		5084<6130	130 TO O01	*Call
2098<2086		5084<6140	140 TO O01	*Call
2098<2086		5084<6150	150 TO O01	*Call
2098<2086		5084<6160	160 TO O01	*Call
2098<2086		5084<6170	170 TO O01	*Call
2098<2086		5084<6210	210 TO O01	*Call
2098<2086		5084<6220	220 TO O01	*Call
2098<2086		5084<6230	230 TO O01	*Call
2098<2086		5084<6240	240 TO O01	*Call
2098<2086		5084<6250	250 TO O01	*Call
2098<2086		5084<6260	260 TO O01	*Call
2098<2086		5084<6270	270 TO O01	*Call
2098<2086		5084<6310	310 TO O01	*Call
2098<2086		5084<6320	320 TO O01	*Call
2098<2086		5084<6330	330 TO O01	*Call
2098<2086		5084<6340	340 TO O01	*Call
2098<2086		5084<6350	350 TO O01	*Call
2098<2086		5084<6360	360 TO O01	*Call
2098<2086		5084<6370	370 TO O01	*Call
2098<2086		5084<6410	410 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5084<6420	420 TO O01	*Call
2098<2086		5084<6430	430 TO O01	*Call
2098<2086		5084<6440	440 TO O01	*Call
2098<2086		5084<6450	450 TO O01	*Call
2098<2086		5084<6460	460 TO O01	*Call
2098<2086		5084<6470	470 TO O01	*Call
2098<2086		5085<6070	070 TO O02	*Call
2098<2086		5085<6110	110 TO O02	*Call
2098<2086		5085<6120	120 TO O02	*Call
2098<2086		5085<6130	130 TO O02	*Call
2098<2086		5085<6140	140 TO O02	*Call
2098<2086		5085<6150	150 TO O02	*Call
2098<2086		5085<6160	160 TO O02	*Call
2098<2086		5085<6170	170 TO O02	*Call
2098<2086		5085<6210	210 TO O02	*Call
2098<2086		5085<6220	220 TO O02	*Call
2098<2086		5085<6230	230 TO O02	*Call
2098<2086		5085<6240	240 TO O02	*Call
2098<2086		5085<6250	250 TO O02	*Call
2098<2086		5085<6260	260 TO O02	*Call
2098<2086		5085<6270	270 TO O02	*Call
2098<2086		5085<6310	310 TO O02	*Call
2098<2086		5085<6320	320 TO O02	*Call
2098<2086		5085<6330	330 TO O02	*Call
2098<2086		5085<6340	340 TO O02	*Call
2098<2086		5085<6350	350 TO O02	*Call
2098<2086		5085<6360	360 TO O02	*Call
2098<2086		5085<6370	370 TO O02	*Call
2098<2086		5085<6410	410 TO O02	*Call
2098<2086		5085<6420	420 TO O02	*Call
2098<2086		5085<6430	430 TO O02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5085<6440	440 TO O02	*Call
2098<2086		5085<6450	450 TO O02	*Call
2098<2086		5085<6460	460 TO O02	*Call
2098<2086		5085<6470	470 TO O02	*Call
2098<2086		5086<6070	070 TO O03	*Call
2098<2086		5086<6110	110 TO O03	*Call
2098<2086		5086<6120	120 TO O03	*Call
2098<2086		5086<6130	130 TO O03	*Call
2098<2086		5086<6140	140 TO O03	*Call
2098<2086		5086<6150	150 TO O03	*Call
2098<2086		5086<6160	160 TO O03	*Call
2098<2086		5086<6170	170 TO O03	*Call
2098<2086		5086<6210	210 TO O03	*Call
2098<2086		5086<6220	220 TO O03	*Call
2098<2086		5086<6230	230 TO O03	*Call
2098<2086		5086<6240	240 TO O03	*Call
2098<2086		5086<6250	250 TO O03	*Call
2098<2086		5086<6260	260 TO O03	*Call
2098<2086		5086<6270	270 TO O03	*Call
2098<2086		5086<6310	310 TO O03	*Call
2098<2086		5086<6320	320 TO O03	*Call
2098<2086		5086<6330	330 TO O03	*Call
2098<2086		5086<6340	340 TO O03	*Call
2098<2086		5086<6350	350 TO O03	*Call
2098<2086		5086<6360	360 TO O03	*Call
2098<2086		5086<6370	370 TO O03	*Call
2098<2086		5086<6410	410 TO O03	*Call
2098<2086		5086<6420	420 TO O03	*Call
2098<2086		5086<6430	430 TO O03	*Call
2098<2086		5086<6440	440 TO O03	*Call
2098<2086		5086<6450	450 TO O03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5086<6460	460 TO O03	*Call
2098<2086		5086<6470	470 TO O03	*Call
2098<2086		5087<6070	070 TO O04	*Call
2098<2086		5087<6110	110 TO O04	*Call
2098<2086		5087<6120	120 TO O04	*Call
2098<2086		5087<6130	130 TO O04	*Call
2098<2086		5087<6140	140 TO O04	*Call
2098<2086		5087<6150	150 TO O04	*Call
2098<2086		5087<6160	160 TO O04	*Call
2098<2086		5087<6170	170 TO O04	*Call
2098<2086		5087<6210	210 TO O04	*Call
2098<2086		5087<6220	220 TO O04	*Call
2098<2086		5087<6230	230 TO O04	*Call
2098<2086		5087<6240	240 TO O04	*Call
2098<2086		5087<6250	250 TO O04	*Call
2098<2086		5087<6260	260 TO O04	*Call
2098<2086		5087<6270	270 TO O04	*Call
2098<2086		5087<6310	310 TO O04	*Call
2098<2086		5087<6320	320 TO O04	*Call
2098<2086		5087<6330	330 TO O04	*Call
2098<2086		5087<6340	340 TO O04	*Call
2098<2086		5087<6350	350 TO O04	*Call
2098<2086		5087<6360	360 TO O04	*Call
2098<2086		5087<6370	370 TO O04	*Call
2098<2086		5087<6410	410 TO O04	*Call
2098<2086		5087<6420	420 TO O04	*Call
2098<2086		5087<6430	430 TO O04	*Call
2098<2086		5087<6440	440 TO O04	*Call
2098<2086		5087<6450	450 TO O04	*Call
2098<2086		5087<6460	460 TO O04	*Call
2098<2086		5087<6470	470 TO O04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5088<6070	070 TO O05	*Call
2098<2086		5088<6110	110 TO O05	*Call
2098<2086		5088<6120	120 TO O05	*Call
2098<2086		5088<6130	130 TO O05	*Call
2098<2086		5088<6140	140 TO O05	*Call
2098<2086		5088<6150	150 TO O05	*Call
2098<2086		5088<6160	160 TO O05	*Call
2098<2086		5088<6170	170 TO O05	*Call
2098<2086		5088<6210	210 TO O05	*Call
2098<2086		5088<6220	220 TO O05	*Call
2098<2086		5088<6230	230 TO O05	*Call
2098<2086		5088<6240	240 TO O05	*Call
2098<2086		5088<6250	250 TO O05	*Call
2098<2086		5088<6260	260 TO O05	*Call
2098<2086		5088<6270	270 TO O05	*Call
2098<2086		5088<6310	310 TO O05	*Call
2098<2086		5088<6320	320 TO O05	*Call
2098<2086		5088<6330	330 TO O05	*Call
2098<2086		5088<6340	340 TO O05	*Call
2098<2086		5088<6350	350 TO O05	*Call
2098<2086		5088<6360	360 TO O05	*Call
2098<2086		5088<6370	370 TO O05	*Call
2098<2086		5088<6410	410 TO O05	*Call
2098<2086		5088<6420	420 TO O05	*Call
2098<2086		5088<6430	430 TO O05	*Call
2098<2086		5088<6440	440 TO O05	*Call
2098<2086		5088<6450	450 TO O05	*Call
2098<2086		5088<6460	460 TO O05	*Call
2098<2086		5088<6470	470 TO O05	*Call
2098<2086		5089<6070	070 TO P01	*Call
2098<2086		5089<6110	110 TO P01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5089<6120	120 TO P01	*Call
2098<2086		5089<6130	130 TO P01	*Call
2098<2086		5089<6140	140 TO P01	*Call
2098<2086		5089<6150	150 TO P01	*Call
2098<2086		5089<6160	160 TO P01	*Call
2098<2086		5089<6170	170 TO P01	*Call
2098<2086		5089<6210	210 TO P01	*Call
2098<2086		5089<6220	220 TO P01	*Call
2098<2086		5089<6230	230 TO P01	*Call
2098<2086		5089<6240	240 TO P01	*Call
2098<2086		5089<6250	250 TO P01	*Call
2098<2086		5089<6260	260 TO P01	*Call
2098<2086		5089<6270	270 TO P01	*Call
2098<2086		5089<6310	310 TO P01	*Call
2098<2086		5089<6320	320 TO P01	*Call
2098<2086		5089<6330	330 TO P01	*Call
2098<2086		5089<6340	340 TO P01	*Call
2098<2086		5089<6350	350 TO P01	*Call
2098<2086		5089<6360	360 TO P01	*Call
2098<2086		5089<6370	370 TO P01	*Call
2098<2086		5089<6410	410 TO P01	*Call
2098<2086		5089<6420	420 TO P01	*Call
2098<2086		5089<6430	430 TO P01	*Call
2098<2086		5089<6440	440 TO P01	*Call
2098<2086		5089<6450	450 TO P01	*Call
2098<2086		5089<6460	460 TO P01	*Call
2098<2086		5089<6470	470 TO P01	*Call
2098<2086		5090<6070	070 TO P02	*Call
2098<2086		5090<6110	110 TO P02	*Call
2098<2086		5090<6120	120 TO P02	*Call
2098<2086		5090<6130	130 TO P02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5090<6140	140 TO P02	*Call
2098<2086		5090<6150	150 TO P02	*Call
2098<2086		5090<6160	160 TO P02	*Call
2098<2086		5090<6170	170 TO P02	*Call
2098<2086		5090<6210	210 TO P02	*Call
2098<2086		5090<6220	220 TO P02	*Call
2098<2086		5090<6230	230 TO P02	*Call
2098<2086		5090<6240	240 TO P02	*Call
2098<2086		5090<6250	250 TO P02	*Call
2098<2086		5090<6260	260 TO P02	*Call
2098<2086		5090<6270	270 TO P02	*Call
2098<2086		5090<6310	310 TO P02	*Call
2098<2086		5090<6320	320 TO P02	*Call
2098<2086		5090<6330	330 TO P02	*Call
2098<2086		5090<6340	340 TO P02	*Call
2098<2086		5090<6350	350 TO P02	*Call
2098<2086		5090<6360	360 TO P02	*Call
2098<2086		5090<6370	370 TO P02	*Call
2098<2086		5090<6410	410 TO P02	*Call
2098<2086		5090<6420	420 TO P02	*Call
2098<2086		5090<6430	430 TO P02	*Call
2098<2086		5090<6440	440 TO P02	*Call
2098<2086		5090<6450	450 TO P02	*Call
2098<2086		5090<6460	460 TO P02	*Call
2098<2086		5090<6470	470 TO P02	*Call
2098<2086		5091<6070	070 TO P03	*Call
2098<2086		5091<6110	110 TO P03	*Call
2098<2086		5091<6120	120 TO P03	*Call
2098<2086		5091<6130	130 TO P03	*Call
2098<2086		5091<6140	140 TO P03	*Call
2098<2086		5091<6150	150 TO P03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5091<6160	160 TO P03	*Call
2098<2086		5091<6170	170 TO P03	*Call
2098<2086		5091<6210	210 TO P03	*Call
2098<2086		5091<6220	220 TO P03	*Call
2098<2086		5091<6230	230 TO P03	*Call
2098<2086		5091<6240	240 TO P03	*Call
2098<2086		5091<6250	250 TO P03	*Call
2098<2086		5091<6260	260 TO P03	*Call
2098<2086		5091<6270	270 TO P03	*Call
2098<2086		5091<6310	310 TO P03	*Call
2098<2086		5091<6320	320 TO P03	*Call
2098<2086		5091<6330	330 TO P03	*Call
2098<2086		5091<6340	340 TO P03	*Call
2098<2086		5091<6350	350 TO P03	*Call
2098<2086		5091<6360	360 TO P03	*Call
2098<2086		5091<6370	370 TO P03	*Call
2098<2086		5091<6410	410 TO P03	*Call
2098<2086		5091<6420	420 TO P03	*Call
2098<2086		5091<6430	430 TO P03	*Call
2098<2086		5091<6440	440 TO P03	*Call
2098<2086		5091<6450	450 TO P03	*Call
2098<2086		5091<6460	460 TO P03	*Call
2098<2086		5091<6470	470 TO P03	*Call
2098<2086		5092<6070	070 TO P04	*Call
2098<2086		5092<6110	110 TO P04	*Call
2098<2086		5092<6120	120 TO P04	*Call
2098<2086		5092<6130	130 TO P04	*Call
2098<2086		5092<6140	140 TO P04	*Call
2098<2086		5092<6150	150 TO P04	*Call
2098<2086		5092<6160	160 TO P04	*Call
2098<2086		5092<6170	170 TO P04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5092<6210	210 TO P04	*Call
2098<2086		5092<6220	220 TO P04	*Call
2098<2086		5092<6230	230 TO P04	*Call
2098<2086		5092<6240	240 TO P04	*Call
2098<2086		5092<6250	250 TO P04	*Call
2098<2086		5092<6260	260 TO P04	*Call
2098<2086		5092<6270	270 TO P04	*Call
2098<2086		5092<6310	310 TO P04	*Call
2098<2086		5092<6320	320 TO P04	*Call
2098<2086		5092<6330	330 TO P04	*Call
2098<2086		5092<6340	340 TO P04	*Call
2098<2086		5092<6350	350 TO P04	*Call
2098<2086		5092<6360	360 TO P04	*Call
2098<2086		5092<6370	370 TO P04	*Call
2098<2086		5092<6410	410 TO P04	*Call
2098<2086		5092<6420	420 TO P04	*Call
2098<2086		5092<6430	430 TO P04	*Call
2098<2086		5092<6440	440 TO P04	*Call
2098<2086		5092<6450	450 TO P04	*Call
2098<2086		5092<6460	460 TO P04	*Call
2098<2086		5092<6470	470 TO P04	*Call
2098<2086		5093<6070	070 TO P05	*Call
2098<2086		5093<6110	110 TO P05	*Call
2098<2086		5093<6120	120 TO P05	*Call
2098<2086		5093<6130	130 TO P05	*Call
2098<2086		5093<6140	140 TO P05	*Call
2098<2086		5093<6150	150 TO P05	*Call
2098<2086		5093<6160	160 TO P05	*Call
2098<2086		5093<6170	170 TO P05	*Call
2098<2086		5093<6210	210 TO P05	*Call
2098<2086		5093<6220	220 TO P05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5093<6230	230 TO P05	*Call
2098<2086		5093<6240	240 TO P05	*Call
2098<2086		5093<6250	250 TO P05	*Call
2098<2086		5093<6260	260 TO P05	*Call
2098<2086		5093<6270	270 TO P05	*Call
2098<2086		5093<6310	310 TO P05	*Call
2098<2086		5093<6320	320 TO P05	*Call
2098<2086		5093<6330	330 TO P05	*Call
2098<2086		5093<6340	340 TO P05	*Call
2098<2086		5093<6350	350 TO P05	*Call
2098<2086		5093<6360	360 TO P05	*Call
2098<2086		5093<6370	370 TO P05	*Call
2098<2086		5093<6410	410 TO P05	*Call
2098<2086		5093<6420	420 TO P05	*Call
2098<2086		5093<6430	430 TO P05	*Call
2098<2086		5093<6440	440 TO P05	*Call
2098<2086		5093<6450	450 TO P05	*Call
2098<2086		5093<6460	460 TO P05	*Call
2098<2086		5093<6470	470 TO P05	*Call
2098<2086		5094<6070	070 TO Q01	*Call
2098<2086		5094<6110	110 TO Q01	*Call
2098<2086		5094<6120	120 TO Q01	*Call
2098<2086		5094<6130	130 TO Q01	*Call
2098<2086		5094<6140	140 TO Q01	*Call
2098<2086		5094<6150	150 TO Q01	*Call
2098<2086		5094<6160	160 TO Q01	*Call
2098<2086		5094<6170	170 TO Q01	*Call
2098<2086		5094<6210	210 TO Q01	*Call
2098<2086		5094<6220	220 TO Q01	*Call
2098<2086		5094<6230	230 TO Q01	*Call
2098<2086		5094<6240	240 TO Q01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5094<6250	250 TO Q01	*Call
2098<2086		5094<6260	260 TO Q01	*Call
2098<2086		5094<6270	270 TO Q01	*Call
2098<2086		5094<6310	310 TO Q01	*Call
2098<2086		5094<6320	320 TO Q01	*Call
2098<2086		5094<6330	330 TO Q01	*Call
2098<2086		5094<6340	340 TO Q01	*Call
2098<2086		5094<6350	350 TO Q01	*Call
2098<2086		5094<6360	360 TO Q01	*Call
2098<2086		5094<6370	370 TO Q01	*Call
2098<2086		5094<6410	410 TO Q01	*Call
2098<2086		5094<6420	420 TO Q01	*Call
2098<2086		5094<6430	430 TO Q01	*Call
2098<2086		5094<6440	440 TO Q01	*Call
2098<2086		5094<6450	450 TO Q01	*Call
2098<2086		5094<6460	460 TO Q01	*Call
2098<2086		5094<6470	470 TO Q01	*Call
2098<2086		5095<6070	070 TO Q02	*Call
2098<2086		5095<6110	110 TO Q02	*Call
2098<2086		5095<6120	120 TO Q02	*Call
2098<2086		5095<6130	130 TO Q02	*Call
2098<2086		5095<6140	140 TO Q02	*Call
2098<2086		5095<6150	150 TO Q02	*Call
2098<2086		5095<6160	160 TO Q02	*Call
2098<2086		5095<6170	170 TO Q02	*Call
2098<2086		5095<6210	210 TO Q02	*Call
2098<2086		5095<6220	220 TO Q02	*Call
2098<2086		5095<6230	230 TO Q02	*Call
2098<2086		5095<6240	240 TO Q02	*Call
2098<2086		5095<6250	250 TO Q02	*Call
2098<2086		5095<6260	260 TO Q02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5095<6270	270 TO Q02	*Call
2098<2086		5095<6310	310 TO Q02	*Call
2098<2086		5095<6320	320 TO Q02	*Call
2098<2086		5095<6330	330 TO Q02	*Call
2098<2086		5095<6340	340 TO Q02	*Call
2098<2086		5095<6350	350 TO Q02	*Call
2098<2086		5095<6360	360 TO Q02	*Call
2098<2086		5095<6370	370 TO Q02	*Call
2098<2086		5095<6410	410 TO Q02	*Call
2098<2086		5095<6420	420 TO Q02	*Call
2098<2086		5095<6430	430 TO Q02	*Call
2098<2086		5095<6440	440 TO Q02	*Call
2098<2086		5095<6450	450 TO Q02	*Call
2098<2086		5095<6460	460 TO Q02	*Call
2098<2086		5095<6470	470 TO Q02	*Call
2098<2086		5096<6070	070 TO Q03	*Call
2098<2086		5096<6110	110 TO Q03	*Call
2098<2086		5096<6120	120 TO Q03	*Call
2098<2086		5096<6130	130 TO Q03	*Call
2098<2086		5096<6140	140 TO Q03	*Call
2098<2086		5096<6150	150 TO Q03	*Call
2098<2086		5096<6160	160 TO Q03	*Call
2098<2086		5096<6170	170 TO Q03	*Call
2098<2086		5096<6210	210 TO Q03	*Call
2098<2086		5096<6220	220 TO Q03	*Call
2098<2086		5096<6230	230 TO Q03	*Call
2098<2086		5096<6240	240 TO Q03	*Call
2098<2086		5096<6250	250 TO Q03	*Call
2098<2086		5096<6260	260 TO Q03	*Call
2098<2086		5096<6270	270 TO Q03	*Call
2098<2086		5096<6310	310 TO Q03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5096<6320	320 TO Q03	*Call
2098<2086		5096<6330	330 TO Q03	*Call
2098<2086		5096<6340	340 TO Q03	*Call
2098<2086		5096<6350	350 TO Q03	*Call
2098<2086		5096<6360	360 TO Q03	*Call
2098<2086		5096<6370	370 TO Q03	*Call
2098<2086		5096<6410	410 TO Q03	*Call
2098<2086		5096<6420	420 TO Q03	*Call
2098<2086		5096<6430	430 TO Q03	*Call
2098<2086		5096<6440	440 TO Q03	*Call
2098<2086		5096<6450	450 TO Q03	*Call
2098<2086		5096<6460	460 TO Q03	*Call
2098<2086		5096<6470	470 TO Q03	*Call
2098<2086		5097<6070	070 TO Q04	*Call
2098<2086		5097<6110	110 TO Q04	*Call
2098<2086		5097<6120	120 TO Q04	*Call
2098<2086		5097<6130	130 TO Q04	*Call
2098<2086		5097<6140	140 TO Q04	*Call
2098<2086		5097<6150	150 TO Q04	*Call
2098<2086		5097<6160	160 TO Q04	*Call
2098<2086		5097<6170	170 TO Q04	*Call
2098<2086		5097<6210	210 TO Q04	*Call
2098<2086		5097<6220	220 TO Q04	*Call
2098<2086		5097<6230	230 TO Q04	*Call
2098<2086		5097<6240	240 TO Q04	*Call
2098<2086		5097<6250	250 TO Q04	*Call
2098<2086		5097<6260	260 TO Q04	*Call
2098<2086		5097<6270	270 TO Q04	*Call
2098<2086		5097<6310	310 TO Q04	*Call
2098<2086		5097<6320	320 TO Q04	*Call
2098<2086		5097<6330	330 TO Q04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5097<6340	340 TO Q04	*Call
2098<2086		5097<6350	350 TO Q04	*Call
2098<2086		5097<6360	360 TO Q04	*Call
2098<2086		5097<6370	370 TO Q04	*Call
2098<2086		5097<6410	410 TO Q04	*Call
2098<2086		5097<6420	420 TO Q04	*Call
2098<2086		5097<6430	430 TO Q04	*Call
2098<2086		5097<6440	440 TO Q04	*Call
2098<2086		5097<6450	450 TO Q04	*Call
2098<2086		5097<6460	460 TO Q04	*Call
2098<2086		5097<6470	470 TO Q04	*Call
2098<2086		5098<6070	070 TO Q05	*Call
2098<2086		5098<6110	110 TO Q05	*Call
2098<2086		5098<6120	120 TO Q05	*Call
2098<2086		5098<6130	130 TO Q05	*Call
2098<2086		5098<6140	140 TO Q05	*Call
2098<2086		5098<6150	150 TO Q05	*Call
2098<2086		5098<6160	160 TO Q05	*Call
2098<2086		5098<6170	170 TO Q05	*Call
2098<2086		5098<6210	210 TO Q05	*Call
2098<2086		5098<6220	220 TO Q05	*Call
2098<2086		5098<6230	230 TO Q05	*Call
2098<2086		5098<6240	240 TO Q05	*Call
2098<2086		5098<6250	250 TO Q05	*Call
2098<2086		5098<6260	260 TO Q05	*Call
2098<2086		5098<6270	270 TO Q05	*Call
2098<2086		5098<6310	310 TO Q05	*Call
2098<2086		5098<6320	320 TO Q05	*Call
2098<2086		5098<6330	330 TO Q05	*Call
2098<2086		5098<6340	340 TO Q05	*Call
2098<2086		5098<6350	350 TO Q05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5098<6360	360 TO Q05	*Call
2098<2086		5098<6370	370 TO Q05	*Call
2098<2086		5098<6410	410 TO Q05	*Call
2098<2086		5098<6420	420 TO Q05	*Call
2098<2086		5098<6430	430 TO Q05	*Call
2098<2086		5098<6440	440 TO Q05	*Call
2098<2086		5098<6450	450 TO Q05	*Call
2098<2086		5098<6460	460 TO Q05	*Call
2098<2086		5098<6470	470 TO Q05	*Call
2098<2086		5099<6070	070 TO R01	*Call
2098<2086		5099<6110	110 TO R01	*Call
2098<2086		5099<6120	120 TO R01	*Call
2098<2086		5099<6130	130 TO R01	*Call
2098<2086		5099<6140	140 TO R01	*Call
2098<2086		5099<6150	150 TO R01	*Call
2098<2086		5099<6160	160 TO R01	*Call
2098<2086		5099<6170	170 TO R01	*Call
2098<2086		5099<6210	210 TO R01	*Call
2098<2086		5099<6220	220 TO R01	*Call
2098<2086		5099<6230	230 TO R01	*Call
2098<2086		5099<6240	240 TO R01	*Call
2098<2086		5099<6250	250 TO R01	*Call
2098<2086		5099<6260	260 TO R01	*Call
2098<2086		5099<6270	270 TO R01	*Call
2098<2086		5099<6310	310 TO R01	*Call
2098<2086		5099<6320	320 TO R01	*Call
2098<2086		5099<6330	330 TO R01	*Call
2098<2086		5099<6340	340 TO R01	*Call
2098<2086		5099<6350	350 TO R01	*Call
2098<2086		5099<6360	360 TO R01	*Call
2098<2086		5099<6370	370 TO R01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5099<6410	410 TO R01	*Call
2098<2086		5099<6420	420 TO R01	*Call
2098<2086		5099<6430	430 TO R01	*Call
2098<2086		5099<6440	440 TO R01	*Call
2098<2086		5099<6450	450 TO R01	*Call
2098<2086		5099<6460	460 TO R01	*Call
2098<2086		5099<6470	470 TO R01	*Call
2098<2086		5100<6070	070 TO R02	*Call
2098<2086		5100<6110	110 TO R02	*Call
2098<2086		5100<6120	120 TO R02	*Call
2098<2086		5100<6130	130 TO R02	*Call
2098<2086		5100<6140	140 TO R02	*Call
2098<2086		5100<6150	150 TO R02	*Call
2098<2086		5100<6160	160 TO R02	*Call
2098<2086		5100<6170	170 TO R02	*Call
2098<2086		5100<6210	210 TO R02	*Call
2098<2086		5100<6220	220 TO R02	*Call
2098<2086		5100<6230	230 TO R02	*Call
2098<2086		5100<6240	240 TO R02	*Call
2098<2086		5100<6250	250 TO R02	*Call
2098<2086		5100<6260	260 TO R02	*Call
2098<2086		5100<6270	270 TO R02	*Call
2098<2086		5100<6310	310 TO R02	*Call
2098<2086		5100<6320	320 TO R02	*Call
2098<2086		5100<6330	330 TO R02	*Call
2098<2086		5100<6340	340 TO R02	*Call
2098<2086		5100<6350	350 TO R02	*Call
2098<2086		5100<6360	360 TO R02	*Call
2098<2086		5100<6370	370 TO R02	*Call
2098<2086		5100<6410	410 TO R02	*Call
2098<2086		5100<6420	420 TO R02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5100<6430	430 TO R02	*Call
2098<2086		5100<6440	440 TO R02	*Call
2098<2086		5100<6450	450 TO R02	*Call
2098<2086		5100<6460	460 TO R02	*Call
2098<2086		5100<6470	470 TO R02	*Call
2098<2086		5101<6070	070 TO R03	*Call
2098<2086		5101<6110	110 TO R03	*Call
2098<2086		5101<6120	120 TO R03	*Call
2098<2086		5101<6130	130 TO R03	*Call
2098<2086		5101<6140	140 TO R03	*Call
2098<2086		5101<6150	150 TO R03	*Call
2098<2086		5101<6160	160 TO R03	*Call
2098<2086		5101<6170	170 TO R03	*Call
2098<2086		5101<6210	210 TO R03	*Call
2098<2086		5101<6220	220 TO R03	*Call
2098<2086		5101<6230	230 TO R03	*Call
2098<2086		5101<6240	240 TO R03	*Call
2098<2086		5101<6250	250 TO R03	*Call
2098<2086		5101<6260	260 TO R03	*Call
2098<2086		5101<6270	270 TO R03	*Call
2098<2086		5101<6310	310 TO R03	*Call
2098<2086		5101<6320	320 TO R03	*Call
2098<2086		5101<6330	330 TO R03	*Call
2098<2086		5101<6340	340 TO R03	*Call
2098<2086		5101<6350	350 TO R03	*Call
2098<2086		5101<6360	360 TO R03	*Call
2098<2086		5101<6370	370 TO R03	*Call
2098<2086		5101<6410	410 TO R03	*Call
2098<2086		5101<6420	420 TO R03	*Call
2098<2086		5101<6430	430 TO R03	*Call
2098<2086		5101<6440	440 TO R03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5101<6450	450 TO R03	*Call
2098<2086		5101<6460	460 TO R03	*Call
2098<2086		5101<6470	470 TO R03	*Call
2098<2086		5102<6070	070 TO R04	*Call
2098<2086		5102<6110	110 TO R04	*Call
2098<2086		5102<6120	120 TO R04	*Call
2098<2086		5102<6130	130 TO R04	*Call
2098<2086		5102<6140	140 TO R04	*Call
2098<2086		5102<6150	150 TO R04	*Call
2098<2086		5102<6160	160 TO R04	*Call
2098<2086		5102<6170	170 TO R04	*Call
2098<2086		5102<6210	210 TO R04	*Call
2098<2086		5102<6220	220 TO R04	*Call
2098<2086		5102<6230	230 TO R04	*Call
2098<2086		5102<6240	240 TO R04	*Call
2098<2086		5102<6250	250 TO R04	*Call
2098<2086		5102<6260	260 TO R04	*Call
2098<2086		5102<6270	270 TO R04	*Call
2098<2086		5102<6310	310 TO R04	*Call
2098<2086		5102<6320	320 TO R04	*Call
2098<2086		5102<6330	330 TO R04	*Call
2098<2086		5102<6340	340 TO R04	*Call
2098<2086		5102<6350	350 TO R04	*Call
2098<2086		5102<6360	360 TO R04	*Call
2098<2086		5102<6370	370 TO R04	*Call
2098<2086		5102<6410	410 TO R04	*Call
2098<2086		5102<6420	420 TO R04	*Call
2098<2086		5102<6430	430 TO R04	*Call
2098<2086		5102<6440	440 TO R04	*Call
2098<2086		5102<6450	450 TO R04	*Call
2098<2086		5102<6460	460 TO R04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5102<6470	470 TO R04	*Call
2098<2086		5103<6070	070 TO R05	*Call
2098<2086		5103<6110	110 TO R05	*Call
2098<2086		5103<6120	120 TO R05	*Call
2098<2086		5103<6130	130 TO R05	*Call
2098<2086		5103<6140	140 TO R05	*Call
2098<2086		5103<6150	150 TO R05	*Call
2098<2086		5103<6160	160 TO R05	*Call
2098<2086		5103<6170	170 TO R05	*Call
2098<2086		5103<6210	210 TO R05	*Call
2098<2086		5103<6220	220 TO R05	*Call
2098<2086		5103<6230	230 TO R05	*Call
2098<2086		5103<6240	240 TO R05	*Call
2098<2086		5103<6250	250 TO R05	*Call
2098<2086		5103<6260	260 TO R05	*Call
2098<2086		5103<6270	270 TO R05	*Call
2098<2086		5103<6310	310 TO R05	*Call
2098<2086		5103<6320	320 TO R05	*Call
2098<2086		5103<6330	330 TO R05	*Call
2098<2086		5103<6340	340 TO R05	*Call
2098<2086		5103<6350	350 TO R05	*Call
2098<2086		5103<6360	360 TO R05	*Call
2098<2086		5103<6370	370 TO R05	*Call
2098<2086		5103<6410	410 TO R05	*Call
2098<2086		5103<6420	420 TO R05	*Call
2098<2086		5103<6430	430 TO R05	*Call
2098<2086		5103<6440	440 TO R05	*Call
2098<2086		5103<6450	450 TO R05	*Call
2098<2086		5103<6460	460 TO R05	*Call
2098<2086		5103<6470	470 TO R05	*Call
2098<2086		5104<6070	070 TO S01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5104<6110	110 TO S01	*Call
2098<2086		5104<6120	120 TO S01	*Call
2098<2086		5104<6130	130 TO S01	*Call
2098<2086		5104<6140	140 TO S01	*Call
2098<2086		5104<6150	150 TO S01	*Call
2098<2086		5104<6160	160 TO S01	*Call
2098<2086		5104<6170	170 TO S01	*Call
2098<2086		5104<6210	210 TO S01	*Call
2098<2086		5104<6220	220 TO S01	*Call
2098<2086		5104<6230	230 TO S01	*Call
2098<2086		5104<6240	240 TO S01	*Call
2098<2086		5104<6250	250 TO S01	*Call
2098<2086		5104<6260	260 TO S01	*Call
2098<2086		5104<6270	270 TO S01	*Call
2098<2086		5104<6310	310 TO S01	*Call
2098<2086		5104<6320	320 TO S01	*Call
2098<2086		5104<6330	330 TO S01	*Call
2098<2086		5104<6340	340 TO S01	*Call
2098<2086		5104<6350	350 TO S01	*Call
2098<2086		5104<6360	360 TO S01	*Call
2098<2086		5104<6370	370 TO S01	*Call
2098<2086		5104<6410	410 TO S01	*Call
2098<2086		5104<6420	420 TO S01	*Call
2098<2086		5104<6430	430 TO S01	*Call
2098<2086		5104<6440	440 TO S01	*Call
2098<2086		5104<6450	450 TO S01	*Call
2098<2086		5104<6460	460 TO S01	*Call
2098<2086		5104<6470	470 TO S01	*Call
2098<2086		5105<6070	070 TO S02	*Call
2098<2086		5105<6110	110 TO S02	*Call
2098<2086		5105<6120	120 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5105<6130	130 TO S02	*Call
2098<2086		5105<6140	140 TO S02	*Call
2098<2086		5105<6150	150 TO S02	*Call
2098<2086		5105<6160	160 TO S02	*Call
2098<2086		5105<6170	170 TO S02	*Call
2098<2086		5105<6210	210 TO S02	*Call
2098<2086		5105<6220	220 TO S02	*Call
2098<2086		5105<6230	230 TO S02	*Call
2098<2086		5105<6240	240 TO S02	*Call
2098<2086		5105<6250	250 TO S02	*Call
2098<2086		5105<6260	260 TO S02	*Call
2098<2086		5105<6270	270 TO S02	*Call
2098<2086		5105<6310	310 TO S02	*Call
2098<2086		5105<6320	320 TO S02	*Call
2098<2086		5105<6330	330 TO S02	*Call
2098<2086		5105<6340	340 TO S02	*Call
2098<2086		5105<6350	350 TO S02	*Call
2098<2086		5105<6360	360 TO S02	*Call
2098<2086		5105<6370	370 TO S02	*Call
2098<2086		5105<6410	410 TO S02	*Call
2098<2086		5105<6420	420 TO S02	*Call
2098<2086		5105<6430	430 TO S02	*Call
2098<2086		5105<6440	440 TO S02	*Call
2098<2086		5105<6450	450 TO S02	*Call
2098<2086		5105<6460	460 TO S02	*Call
2098<2086		5105<6470	470 TO S02	*Call
2098<2086		5106<6070	070 TO S03	*Call
2098<2086		5106<6110	110 TO S03	*Call
2098<2086		5106<6120	120 TO S03	*Call
2098<2086		5106<6130	130 TO S03	*Call
2098<2086		5106<6140	140 TO S03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5106<6150	150 TO S03	*Call
2098<2086		5106<6160	160 TO S03	*Call
2098<2086		5106<6170	170 TO S03	*Call
2098<2086		5106<6210	210 TO S03	*Call
2098<2086		5106<6220	220 TO S03	*Call
2098<2086		5106<6230	230 TO S03	*Call
2098<2086		5106<6240	240 TO S03	*Call
2098<2086		5106<6250	250 TO S03	*Call
2098<2086		5106<6260	260 TO S03	*Call
2098<2086		5106<6270	270 TO S03	*Call
2098<2086		5106<6310	310 TO S03	*Call
2098<2086		5106<6320	320 TO S03	*Call
2098<2086		5106<6330	330 TO S03	*Call
2098<2086		5106<6340	340 TO S03	*Call
2098<2086		5106<6350	350 TO S03	*Call
2098<2086		5106<6360	360 TO S03	*Call
2098<2086		5106<6370	370 TO S03	*Call
2098<2086		5106<6410	410 TO S03	*Call
2098<2086		5106<6420	420 TO S03	*Call
2098<2086		5106<6430	430 TO S03	*Call
2098<2086		5106<6440	440 TO S03	*Call
2098<2086		5106<6450	450 TO S03	*Call
2098<2086		5106<6460	460 TO S03	*Call
2098<2086		5106<6470	470 TO S03	*Call
2098<2086		5107<6070	070 TO S04	*Call
2098<2086		5107<6110	110 TO S04	*Call
2098<2086		5107<6120	120 TO S04	*Call
2098<2086		5107<6130	130 TO S04	*Call
2098<2086		5107<6140	140 TO S04	*Call
2098<2086		5107<6150	150 TO S04	*Call
2098<2086		5107<6160	160 TO S04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5107<6170	170 TO S04	*Call
2098<2086		5107<6210	210 TO S04	*Call
2098<2086		5107<6220	220 TO S04	*Call
2098<2086		5107<6230	230 TO S04	*Call
2098<2086		5107<6240	240 TO S04	*Call
2098<2086		5107<6250	250 TO S04	*Call
2098<2086		5107<6260	260 TO S04	*Call
2098<2086		5107<6270	270 TO S04	*Call
2098<2086		5107<6310	310 TO S04	*Call
2098<2086		5107<6320	320 TO S04	*Call
2098<2086		5107<6330	330 TO S04	*Call
2098<2086		5107<6340	340 TO S04	*Call
2098<2086		5107<6350	350 TO S04	*Call
2098<2086		5107<6360	360 TO S04	*Call
2098<2086		5107<6370	370 TO S04	*Call
2098<2086		5107<6410	410 TO S04	*Call
2098<2086		5107<6420	420 TO S04	*Call
2098<2086		5107<6430	430 TO S04	*Call
2098<2086		5107<6440	440 TO S04	*Call
2098<2086		5107<6450	450 TO S04	*Call
2098<2086		5107<6460	460 TO S04	*Call
2098<2086		5107<6470	470 TO S04	*Call
2098<2086		5108<6070	070 TO S05	*Call
2098<2086		5108<6110	110 TO S05	*Call
2098<2086		5108<6120	120 TO S05	*Call
2098<2086		5108<6130	130 TO S05	*Call
2098<2086		5108<6140	140 TO S05	*Call
2098<2086		5108<6150	150 TO S05	*Call
2098<2086		5108<6160	160 TO S05	*Call
2098<2086		5108<6170	170 TO S05	*Call
2098<2086		5108<6210	210 TO S05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5108<6220	220 TO S05	*Call
2098<2086		5108<6230	230 TO S05	*Call
2098<2086		5108<6240	240 TO S05	*Call
2098<2086		5108<6250	250 TO S05	*Call
2098<2086		5108<6260	260 TO S05	*Call
2098<2086		5108<6270	270 TO S05	*Call
2098<2086		5108<6310	310 TO S05	*Call
2098<2086		5108<6320	320 TO S05	*Call
2098<2086		5108<6330	330 TO S05	*Call
2098<2086		5108<6340	340 TO S05	*Call
2098<2086		5108<6350	350 TO S05	*Call
2098<2086		5108<6360	360 TO S05	*Call
2098<2086		5108<6370	370 TO S05	*Call
2098<2086		5108<6410	410 TO S05	*Call
2098<2086		5108<6420	420 TO S05	*Call
2098<2086		5108<6430	430 TO S05	*Call
2098<2086		5108<6440	440 TO S05	*Call
2098<2086		5108<6450	450 TO S05	*Call
2098<2086		5108<6460	460 TO S05	*Call
2098<2086		5108<6470	470 TO S05	*Call
2098<2086		5109<6070	070 TO T01	*Call
2098<2086		5109<6110	110 TO T01	*Call
2098<2086		5109<6120	120 TO T01	*Call
2098<2086		5109<6130	130 TO T01	*Call
2098<2086		5109<6140	140 TO T01	*Call
2098<2086		5109<6150	150 TO T01	*Call
2098<2086		5109<6160	160 TO T01	*Call
2098<2086		5109<6170	170 TO T01	*Call
2098<2086		5109<6210	210 TO T01	*Call
2098<2086		5109<6220	220 TO T01	*Call
2098<2086		5109<6230	230 TO T01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5109<6240	240 TO T01	*Call
2098<2086		5109<6250	250 TO T01	*Call
2098<2086		5109<6260	260 TO T01	*Call
2098<2086		5109<6270	270 TO T01	*Call
2098<2086		5109<6310	310 TO T01	*Call
2098<2086		5109<6320	320 TO T01	*Call
2098<2086		5109<6330	330 TO T01	*Call
2098<2086		5109<6340	340 TO T01	*Call
2098<2086		5109<6350	350 TO T01	*Call
2098<2086		5109<6360	360 TO T01	*Call
2098<2086		5109<6370	370 TO T01	*Call
2098<2086		5109<6410	410 TO T01	*Call
2098<2086		5109<6420	420 TO T01	*Call
2098<2086		5109<6430	430 TO T01	*Call
2098<2086		5109<6440	440 TO T01	*Call
2098<2086		5109<6450	450 TO T01	*Call
2098<2086		5109<6460	460 TO T01	*Call
2098<2086		5109<6470	470 TO T01	*Call
2098<2086		5110<6070	070 TO T02	*Call
2098<2086		5110<6110	110 TO T02	*Call
2098<2086		5110<6120	120 TO T02	*Call
2098<2086		5110<6130	130 TO T02	*Call
2098<2086		5110<6140	140 TO T02	*Call
2098<2086		5110<6150	150 TO T02	*Call
2098<2086		5110<6160	160 TO T02	*Call
2098<2086		5110<6170	170 TO T02	*Call
2098<2086		5110<6210	210 TO T02	*Call
2098<2086		5110<6220	220 TO T02	*Call
2098<2086		5110<6230	230 TO T02	*Call
2098<2086		5110<6240	240 TO T02	*Call
2098<2086		5110<6250	250 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5110<6260	260 TO T02	*Call
2098<2086		5110<6270	270 TO T02	*Call
2098<2086		5110<6310	310 TO T02	*Call
2098<2086		5110<6320	320 TO T02	*Call
2098<2086		5110<6330	330 TO T02	*Call
2098<2086		5110<6340	340 TO T02	*Call
2098<2086		5110<6350	350 TO T02	*Call
2098<2086		5110<6360	360 TO T02	*Call
2098<2086		5110<6370	370 TO T02	*Call
2098<2086		5110<6410	410 TO T02	*Call
2098<2086		5110<6420	420 TO T02	*Call
2098<2086		5110<6430	430 TO T02	*Call
2098<2086		5110<6440	440 TO T02	*Call
2098<2086		5110<6450	450 TO T02	*Call
2098<2086		5110<6460	460 TO T02	*Call
2098<2086		5110<6470	470 TO T02	*Call
2098<2086		5111<6070	070 TO T03	*Call
2098<2086		5111<6110	110 TO T03	*Call
2098<2086		5111<6120	120 TO T03	*Call
2098<2086		5111<6130	130 TO T03	*Call
2098<2086		5111<6140	140 TO T03	*Call
2098<2086		5111<6150	150 TO T03	*Call
2098<2086		5111<6160	160 TO T03	*Call
2098<2086		5111<6170	170 TO T03	*Call
2098<2086		5111<6210	210 TO T03	*Call
2098<2086		5111<6220	220 TO T03	*Call
2098<2086		5111<6230	230 TO T03	*Call
2098<2086		5111<6240	240 TO T03	*Call
2098<2086		5111<6250	250 TO T03	*Call
2098<2086		5111<6260	260 TO T03	*Call
2098<2086		5111<6270	270 TO T03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5111<6310	310 TO T03	*Call
2098<2086		5111<6320	320 TO T03	*Call
2098<2086		5111<6330	330 TO T03	*Call
2098<2086		5111<6340	340 TO T03	*Call
2098<2086		5111<6350	350 TO T03	*Call
2098<2086		5111<6360	360 TO T03	*Call
2098<2086		5111<6370	370 TO T03	*Call
2098<2086		5111<6410	410 TO T03	*Call
2098<2086		5111<6420	420 TO T03	*Call
2098<2086		5111<6430	430 TO T03	*Call
2098<2086		5111<6440	440 TO T03	*Call
2098<2086		5111<6450	450 TO T03	*Call
2098<2086		5111<6460	460 TO T03	*Call
2098<2086		5111<6470	470 TO T03	*Call
2098<2086		5112<6070	070 TO T04	*Call
2098<2086		5112<6110	110 TO T04	*Call
2098<2086		5112<6120	120 TO T04	*Call
2098<2086		5112<6130	130 TO T04	*Call
2098<2086		5112<6140	140 TO T04	*Call
2098<2086		5112<6150	150 TO T04	*Call
2098<2086		5112<6160	160 TO T04	*Call
2098<2086		5112<6170	170 TO T04	*Call
2098<2086		5112<6210	210 TO T04	*Call
2098<2086		5112<6220	220 TO T04	*Call
2098<2086		5112<6230	230 TO T04	*Call
2098<2086		5112<6240	240 TO T04	*Call
2098<2086		5112<6250	250 TO T04	*Call
2098<2086		5112<6260	260 TO T04	*Call
2098<2086		5112<6270	270 TO T04	*Call
2098<2086		5112<6310	310 TO T04	*Call
2098<2086		5112<6320	320 TO T04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5112<6330	330 TO T04	*Call
2098<2086		5112<6340	340 TO T04	*Call
2098<2086		5112<6350	350 TO T04	*Call
2098<2086		5112<6360	360 TO T04	*Call
2098<2086		5112<6370	370 TO T04	*Call
2098<2086		5112<6410	410 TO T04	*Call
2098<2086		5112<6420	420 TO T04	*Call
2098<2086		5112<6430	430 TO T04	*Call
2098<2086		5112<6440	440 TO T04	*Call
2098<2086		5112<6450	450 TO T04	*Call
2098<2086		5112<6460	460 TO T04	*Call
2098<2086		5112<6470	470 TO T04	*Call
2098<2086		5113<6070	070 TO T05	*Call
2098<2086		5113<6110	110 TO T05	*Call
2098<2086		5113<6120	120 TO T05	*Call
2098<2086		5113<6130	130 TO T05	*Call
2098<2086		5113<6140	140 TO T05	*Call
2098<2086		5113<6150	150 TO T05	*Call
2098<2086		5113<6160	160 TO T05	*Call
2098<2086		5113<6170	170 TO T05	*Call
2098<2086		5113<6210	210 TO T05	*Call
2098<2086		5113<6220	220 TO T05	*Call
2098<2086		5113<6230	230 TO T05	*Call
2098<2086		5113<6240	240 TO T05	*Call
2098<2086		5113<6250	250 TO T05	*Call
2098<2086		5113<6260	260 TO T05	*Call
2098<2086		5113<6270	270 TO T05	*Call
2098<2086		5113<6310	310 TO T05	*Call
2098<2086		5113<6320	320 TO T05	*Call
2098<2086		5113<6330	330 TO T05	*Call
2098<2086		5113<6340	340 TO T05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5113<6350	350 TO T05	*Call
2098<2086		5113<6360	360 TO T05	*Call
2098<2086		5113<6370	370 TO T05	*Call
2098<2086		5113<6410	410 TO T05	*Call
2098<2086		5113<6420	420 TO T05	*Call
2098<2086		5113<6430	430 TO T05	*Call
2098<2086		5113<6440	440 TO T05	*Call
2098<2086		5113<6450	450 TO T05	*Call
2098<2086		5113<6460	460 TO T05	*Call
2098<2086		5113<6470	470 TO T05	*Call
2098<2086		5114<6070	070 TO U01	*Call
2098<2086		5114<6110	110 TO U01	*Call
2098<2086		5114<6120	120 TO U01	*Call
2098<2086		5114<6130	130 TO U01	*Call
2098<2086		5114<6140	140 TO U01	*Call
2098<2086		5114<6150	150 TO U01	*Call
2098<2086		5114<6160	160 TO U01	*Call
2098<2086		5114<6170	170 TO U01	*Call
2098<2086		5114<6210	210 TO U01	*Call
2098<2086		5114<6220	220 TO U01	*Call
2098<2086		5114<6230	230 TO U01	*Call
2098<2086		5114<6240	240 TO U01	*Call
2098<2086		5114<6250	250 TO U01	*Call
2098<2086		5114<6260	260 TO U01	*Call
2098<2086		5114<6270	270 TO U01	*Call
2098<2086		5114<6310	310 TO U01	*Call
2098<2086		5114<6320	320 TO U01	*Call
2098<2086		5114<6330	330 TO U01	*Call
2098<2086		5114<6340	340 TO U01	*Call
2098<2086		5114<6350	350 TO U01	*Call
2098<2086		5114<6360	360 TO U01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5114<6370	370 TO U01	*Call
2098<2086		5114<6410	410 TO U01	*Call
2098<2086		5114<6420	420 TO U01	*Call
2098<2086		5114<6430	430 TO U01	*Call
2098<2086		5114<6440	440 TO U01	*Call
2098<2086		5114<6450	450 TO U01	*Call
2098<2086		5114<6460	460 TO U01	*Call
2098<2086		5114<6470	470 TO U01	*Call
2098<2086		5115<6070	070 TO U02	*Call
2098<2086		5115<6110	110 TO U02	*Call
2098<2086		5115<6120	120 TO U02	*Call
2098<2086		5115<6130	130 TO U02	*Call
2098<2086		5115<6140	140 TO U02	*Call
2098<2086		5115<6150	150 TO U02	*Call
2098<2086		5115<6160	160 TO U02	*Call
2098<2086		5115<6170	170 TO U02	*Call
2098<2086		5115<6210	210 TO U02	*Call
2098<2086		5115<6220	220 TO U02	*Call
2098<2086		5115<6230	230 TO U02	*Call
2098<2086		5115<6240	240 TO U02	*Call
2098<2086		5115<6250	250 TO U02	*Call
2098<2086		5115<6260	260 TO U02	*Call
2098<2086		5115<6270	270 TO U02	*Call
2098<2086		5115<6310	310 TO U02	*Call
2098<2086		5115<6320	320 TO U02	*Call
2098<2086		5115<6330	330 TO U02	*Call
2098<2086		5115<6340	340 TO U02	*Call
2098<2086		5115<6350	350 TO U02	*Call
2098<2086		5115<6360	360 TO U02	*Call
2098<2086		5115<6370	370 TO U02	*Call
2098<2086		5115<6410	410 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5115<6420	420 TO U02	*Call
2098<2086		5115<6430	430 TO U02	*Call
2098<2086		5115<6440	440 TO U02	*Call
2098<2086		5115<6450	450 TO U02	*Call
2098<2086		5115<6460	460 TO U02	*Call
2098<2086		5115<6470	470 TO U02	*Call
2098<2086		5116<6070	070 TO U03	*Call
2098<2086		5116<6110	110 TO U03	*Call
2098<2086		5116<6120	120 TO U03	*Call
2098<2086		5116<6130	130 TO U03	*Call
2098<2086		5116<6140	140 TO U03	*Call
2098<2086		5116<6150	150 TO U03	*Call
2098<2086		5116<6160	160 TO U03	*Call
2098<2086		5116<6170	170 TO U03	*Call
2098<2086		5116<6210	210 TO U03	*Call
2098<2086		5116<6220	220 TO U03	*Call
2098<2086		5116<6230	230 TO U03	*Call
2098<2086		5116<6240	240 TO U03	*Call
2098<2086		5116<6250	250 TO U03	*Call
2098<2086		5116<6260	260 TO U03	*Call
2098<2086		5116<6270	270 TO U03	*Call
2098<2086		5116<6310	310 TO U03	*Call
2098<2086		5116<6320	320 TO U03	*Call
2098<2086		5116<6330	330 TO U03	*Call
2098<2086		5116<6340	340 TO U03	*Call
2098<2086		5116<6350	350 TO U03	*Call
2098<2086		5116<6360	360 TO U03	*Call
2098<2086		5116<6370	370 TO U03	*Call
2098<2086		5116<6410	410 TO U03	*Call
2098<2086		5116<6420	420 TO U03	*Call
2098<2086		5116<6430	430 TO U03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5116<6440	440 TO U03	*Call
2098<2086		5116<6450	450 TO U03	*Call
2098<2086		5116<6460	460 TO U03	*Call
2098<2086		5116<6470	470 TO U03	*Call
2098<2086		5117<6070	070 TO U04	*Call
2098<2086		5117<6110	110 TO U04	*Call
2098<2086		5117<6120	120 TO U04	*Call
2098<2086		5117<6130	130 TO U04	*Call
2098<2086		5117<6140	140 TO U04	*Call
2098<2086		5117<6150	150 TO U04	*Call
2098<2086		5117<6160	160 TO U04	*Call
2098<2086		5117<6170	170 TO U04	*Call
2098<2086		5117<6210	210 TO U04	*Call
2098<2086		5117<6220	220 TO U04	*Call
2098<2086		5117<6230	230 TO U04	*Call
2098<2086		5117<6240	240 TO U04	*Call
2098<2086		5117<6250	250 TO U04	*Call
2098<2086		5117<6260	260 TO U04	*Call
2098<2086		5117<6270	270 TO U04	*Call
2098<2086		5117<6310	310 TO U04	*Call
2098<2086		5117<6320	320 TO U04	*Call
2098<2086		5117<6330	330 TO U04	*Call
2098<2086		5117<6340	340 TO U04	*Call
2098<2086		5117<6350	350 TO U04	*Call
2098<2086		5117<6360	360 TO U04	*Call
2098<2086		5117<6370	370 TO U04	*Call
2098<2086		5117<6410	410 TO U04	*Call
2098<2086		5117<6420	420 TO U04	*Call
2098<2086		5117<6430	430 TO U04	*Call
2098<2086		5117<6440	440 TO U04	*Call
2098<2086		5117<6450	450 TO U04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5117<6460	460 TO U04	*Call
2098<2086		5117<6470	470 TO U04	*Call
2098<2086		5118<6070	070 TO U05	*Call
2098<2086		5118<6110	110 TO U05	*Call
2098<2086		5118<6120	120 TO U05	*Call
2098<2086		5118<6130	130 TO U05	*Call
2098<2086		5118<6140	140 TO U05	*Call
2098<2086		5118<6150	150 TO U05	*Call
2098<2086		5118<6160	160 TO U05	*Call
2098<2086		5118<6170	170 TO U05	*Call
2098<2086		5118<6210	210 TO U05	*Call
2098<2086		5118<6220	220 TO U05	*Call
2098<2086		5118<6230	230 TO U05	*Call
2098<2086		5118<6240	240 TO U05	*Call
2098<2086		5118<6250	250 TO U05	*Call
2098<2086		5118<6260	260 TO U05	*Call
2098<2086		5118<6270	270 TO U05	*Call
2098<2086		5118<6310	310 TO U05	*Call
2098<2086		5118<6320	320 TO U05	*Call
2098<2086		5118<6330	330 TO U05	*Call
2098<2086		5118<6340	340 TO U05	*Call
2098<2086		5118<6350	350 TO U05	*Call
2098<2086		5118<6360	360 TO U05	*Call
2098<2086		5118<6370	370 TO U05	*Call
2098<2086		5118<6410	410 TO U05	*Call
2098<2086		5118<6420	420 TO U05	*Call
2098<2086		5118<6430	430 TO U05	*Call
2098<2086		5118<6440	440 TO U05	*Call
2098<2086		5118<6450	450 TO U05	*Call
2098<2086		5118<6460	460 TO U05	*Call
2098<2086		5118<6470	470 TO U05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5119<6070	070 TO V01	*Call
2098<2086		5119<6110	110 TO V01	*Call
2098<2086		5119<6120	120 TO V01	*Call
2098<2086		5119<6130	130 TO V01	*Call
2098<2086		5119<6140	140 TO V01	*Call
2098<2086		5119<6150	150 TO V01	*Call
2098<2086		5119<6160	160 TO V01	*Call
2098<2086		5119<6170	170 TO V01	*Call
2098<2086		5119<6210	210 TO V01	*Call
2098<2086		5119<6220	220 TO V01	*Call
2098<2086		5119<6230	230 TO V01	*Call
2098<2086		5119<6240	240 TO V01	*Call
2098<2086		5119<6250	250 TO V01	*Call
2098<2086		5119<6260	260 TO V01	*Call
2098<2086		5119<6270	270 TO V01	*Call
2098<2086		5119<6310	310 TO V01	*Call
2098<2086		5119<6320	320 TO V01	*Call
2098<2086		5119<6330	330 TO V01	*Call
2098<2086		5119<6340	340 TO V01	*Call
2098<2086		5119<6350	350 TO V01	*Call
2098<2086		5119<6360	360 TO V01	*Call
2098<2086		5119<6370	370 TO V01	*Call
2098<2086		5119<6410	410 TO V01	*Call
2098<2086		5119<6420	420 TO V01	*Call
2098<2086		5119<6430	430 TO V01	*Call
2098<2086		5119<6440	440 TO V01	*Call
2098<2086		5119<6450	450 TO V01	*Call
2098<2086		5119<6460	460 TO V01	*Call
2098<2086		5119<6470	470 TO V01	*Call
2098<2086		5120<6070	070 TO V02	*Call
2098<2086		5120<6110	110 TO V02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5120<6120	120 TO V02	*Call
2098<2086		5120<6130	130 TO V02	*Call
2098<2086		5120<6140	140 TO V02	*Call
2098<2086		5120<6150	150 TO V02	*Call
2098<2086		5120<6160	160 TO V02	*Call
2098<2086		5120<6170	170 TO V02	*Call
2098<2086		5120<6210	210 TO V02	*Call
2098<2086		5120<6220	220 TO V02	*Call
2098<2086		5120<6230	230 TO V02	*Call
2098<2086		5120<6240	240 TO V02	*Call
2098<2086		5120<6250	250 TO V02	*Call
2098<2086		5120<6260	260 TO V02	*Call
2098<2086		5120<6270	270 TO V02	*Call
2098<2086		5120<6310	310 TO V02	*Call
2098<2086		5120<6320	320 TO V02	*Call
2098<2086		5120<6330	330 TO V02	*Call
2098<2086		5120<6340	340 TO V02	*Call
2098<2086		5120<6350	350 TO V02	*Call
2098<2086		5120<6360	360 TO V02	*Call
2098<2086		5120<6370	370 TO V02	*Call
2098<2086		5120<6410	410 TO V02	*Call
2098<2086		5120<6420	420 TO V02	*Call
2098<2086		5120<6430	430 TO V02	*Call
2098<2086		5120<6440	440 TO V02	*Call
2098<2086		5120<6450	450 TO V02	*Call
2098<2086		5120<6460	460 TO V02	*Call
2098<2086		5120<6470	470 TO V02	*Call
2098<2086		5121<6070	070 TO V03	*Call
2098<2086		5121<6110	110 TO V03	*Call
2098<2086		5121<6120	120 TO V03	*Call
2098<2086		5121<6130	130 TO V03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5121<6140	140 TO V03	*Call
2098<2086		5121<6150	150 TO V03	*Call
2098<2086		5121<6160	160 TO V03	*Call
2098<2086		5121<6170	170 TO V03	*Call
2098<2086		5121<6210	210 TO V03	*Call
2098<2086		5121<6220	220 TO V03	*Call
2098<2086		5121<6230	230 TO V03	*Call
2098<2086		5121<6240	240 TO V03	*Call
2098<2086		5121<6250	250 TO V03	*Call
2098<2086		5121<6260	260 TO V03	*Call
2098<2086		5121<6270	270 TO V03	*Call
2098<2086		5121<6310	310 TO V03	*Call
2098<2086		5121<6320	320 TO V03	*Call
2098<2086		5121<6330	330 TO V03	*Call
2098<2086		5121<6340	340 TO V03	*Call
2098<2086		5121<6350	350 TO V03	*Call
2098<2086		5121<6360	360 TO V03	*Call
2098<2086		5121<6370	370 TO V03	*Call
2098<2086		5121<6410	410 TO V03	*Call
2098<2086		5121<6420	420 TO V03	*Call
2098<2086		5121<6430	430 TO V03	*Call
2098<2086		5121<6440	440 TO V03	*Call
2098<2086		5121<6450	450 TO V03	*Call
2098<2086		5121<6460	460 TO V03	*Call
2098<2086		5121<6470	470 TO V03	*Call
2098<2086		5122<6070	070 TO V04	*Call
2098<2086		5122<6110	110 TO V04	*Call
2098<2086		5122<6120	120 TO V04	*Call
2098<2086		5122<6130	130 TO V04	*Call
2098<2086		5122<6140	140 TO V04	*Call
2098<2086		5122<6150	150 TO V04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5122<6160	160 TO V04	*Call
2098<2086		5122<6170	170 TO V04	*Call
2098<2086		5122<6210	210 TO V04	*Call
2098<2086		5122<6220	220 TO V04	*Call
2098<2086		5122<6230	230 TO V04	*Call
2098<2086		5122<6240	240 TO V04	*Call
2098<2086		5122<6250	250 TO V04	*Call
2098<2086		5122<6260	260 TO V04	*Call
2098<2086		5122<6270	270 TO V04	*Call
2098<2086		5122<6310	310 TO V04	*Call
2098<2086		5122<6320	320 TO V04	*Call
2098<2086		5122<6330	330 TO V04	*Call
2098<2086		5122<6340	340 TO V04	*Call
2098<2086		5122<6350	350 TO V04	*Call
2098<2086		5122<6360	360 TO V04	*Call
2098<2086		5122<6370	370 TO V04	*Call
2098<2086		5122<6410	410 TO V04	*Call
2098<2086		5122<6420	420 TO V04	*Call
2098<2086		5122<6430	430 TO V04	*Call
2098<2086		5122<6440	440 TO V04	*Call
2098<2086		5122<6450	450 TO V04	*Call
2098<2086		5122<6460	460 TO V04	*Call
2098<2086		5122<6470	470 TO V04	*Call
2098<2086		5123<6070	070 TO V05	*Call
2098<2086		5123<6110	110 TO V05	*Call
2098<2086		5123<6120	120 TO V05	*Call
2098<2086		5123<6130	130 TO V05	*Call
2098<2086		5123<6140	140 TO V05	*Call
2098<2086		5123<6150	150 TO V05	*Call
2098<2086		5123<6160	160 TO V05	*Call
2098<2086		5123<6170	170 TO V05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5123<6210	210 TO V05	*Call
2098<2086		5123<6220	220 TO V05	*Call
2098<2086		5123<6230	230 TO V05	*Call
2098<2086		5123<6240	240 TO V05	*Call
2098<2086		5123<6250	250 TO V05	*Call
2098<2086		5123<6260	260 TO V05	*Call
2098<2086		5123<6270	270 TO V05	*Call
2098<2086		5123<6310	310 TO V05	*Call
2098<2086		5123<6320	320 TO V05	*Call
2098<2086		5123<6330	330 TO V05	*Call
2098<2086		5123<6340	340 TO V05	*Call
2098<2086		5123<6350	350 TO V05	*Call
2098<2086		5123<6360	360 TO V05	*Call
2098<2086		5123<6370	370 TO V05	*Call
2098<2086		5123<6410	410 TO V05	*Call
2098<2086		5123<6420	420 TO V05	*Call
2098<2086		5123<6430	430 TO V05	*Call
2098<2086		5123<6440	440 TO V05	*Call
2098<2086		5123<6450	450 TO V05	*Call
2098<2086		5123<6460	460 TO V05	*Call
2098<2086		5123<6470	470 TO V05	*Call
2098<2086		5124<6070	070 TO W01	*Call
2098<2086		5124<6110	110 TO W01	*Call
2098<2086		5124<6120	120 TO W01	*Call
2098<2086		5124<6130	130 TO W01	*Call
2098<2086		5124<6140	140 TO W01	*Call
2098<2086		5124<6150	150 TO W01	*Call
2098<2086		5124<6160	160 TO W01	*Call
2098<2086		5124<6170	170 TO W01	*Call
2098<2086		5124<6210	210 TO W01	*Call
2098<2086		5124<6220	220 TO W01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5124<6230	230 TO W01	*Call
2098<2086		5124<6240	240 TO W01	*Call
2098<2086		5124<6250	250 TO W01	*Call
2098<2086		5124<6260	260 TO W01	*Call
2098<2086		5124<6270	270 TO W01	*Call
2098<2086		5124<6310	310 TO W01	*Call
2098<2086		5124<6320	320 TO W01	*Call
2098<2086		5124<6330	330 TO W01	*Call
2098<2086		5124<6340	340 TO W01	*Call
2098<2086		5124<6350	350 TO W01	*Call
2098<2086		5124<6360	360 TO W01	*Call
2098<2086		5124<6370	370 TO W01	*Call
2098<2086		5124<6410	410 TO W01	*Call
2098<2086		5124<6420	420 TO W01	*Call
2098<2086		5124<6430	430 TO W01	*Call
2098<2086		5124<6440	440 TO W01	*Call
2098<2086		5124<6450	450 TO W01	*Call
2098<2086		5124<6460	460 TO W01	*Call
2098<2086		5124<6470	470 TO W01	*Call
2098<2086		5125<6070	070 TO W02	*Call
2098<2086		5125<6110	110 TO W02	*Call
2098<2086		5125<6120	120 TO W02	*Call
2098<2086		5125<6130	130 TO W02	*Call
2098<2086		5125<6140	140 TO W02	*Call
2098<2086		5125<6150	150 TO W02	*Call
2098<2086		5125<6160	160 TO W02	*Call
2098<2086		5125<6170	170 TO W02	*Call
2098<2086		5125<6210	210 TO W02	*Call
2098<2086		5125<6220	220 TO W02	*Call
2098<2086		5125<6230	230 TO W02	*Call
2098<2086		5125<6240	240 TO W02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5125<6250	250 TO W02	*Call
2098<2086		5125<6260	260 TO W02	*Call
2098<2086		5125<6270	270 TO W02	*Call
2098<2086		5125<6310	310 TO W02	*Call
2098<2086		5125<6320	320 TO W02	*Call
2098<2086		5125<6330	330 TO W02	*Call
2098<2086		5125<6340	340 TO W02	*Call
2098<2086		5125<6350	350 TO W02	*Call
2098<2086		5125<6360	360 TO W02	*Call
2098<2086		5125<6370	370 TO W02	*Call
2098<2086		5125<6410	410 TO W02	*Call
2098<2086		5125<6420	420 TO W02	*Call
2098<2086		5125<6430	430 TO W02	*Call
2098<2086		5125<6440	440 TO W02	*Call
2098<2086		5125<6450	450 TO W02	*Call
2098<2086		5125<6460	460 TO W02	*Call
2098<2086		5125<6470	470 TO W02	*Call
2098<2086		5126<6070	070 TO W03	*Call
2098<2086		5126<6110	110 TO W03	*Call
2098<2086		5126<6120	120 TO W03	*Call
2098<2086		5126<6130	130 TO W03	*Call
2098<2086		5126<6140	140 TO W03	*Call
2098<2086		5126<6150	150 TO W03	*Call
2098<2086		5126<6160	160 TO W03	*Call
2098<2086		5126<6170	170 TO W03	*Call
2098<2086		5126<6210	210 TO W03	*Call
2098<2086		5126<6220	220 TO W03	*Call
2098<2086		5126<6230	230 TO W03	*Call
2098<2086		5126<6240	240 TO W03	*Call
2098<2086		5126<6250	250 TO W03	*Call
2098<2086		5126<6260	260 TO W03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5126<6270	270 TO W03	*Call
2098<2086		5126<6310	310 TO W03	*Call
2098<2086		5126<6320	320 TO W03	*Call
2098<2086		5126<6330	330 TO W03	*Call
2098<2086		5126<6340	340 TO W03	*Call
2098<2086		5126<6350	350 TO W03	*Call
2098<2086		5126<6360	360 TO W03	*Call
2098<2086		5126<6370	370 TO W03	*Call
2098<2086		5126<6410	410 TO W03	*Call
2098<2086		5126<6420	420 TO W03	*Call
2098<2086		5126<6430	430 TO W03	*Call
2098<2086		5126<6440	440 TO W03	*Call
2098<2086		5126<6450	450 TO W03	*Call
2098<2086		5126<6460	460 TO W03	*Call
2098<2086		5126<6470	470 TO W03	*Call
2098<2086		5127<6070	070 TO W04	*Call
2098<2086		5127<6110	110 TO W04	*Call
2098<2086		5127<6120	120 TO W04	*Call
2098<2086		5127<6130	130 TO W04	*Call
2098<2086		5127<6140	140 TO W04	*Call
2098<2086		5127<6150	150 TO W04	*Call
2098<2086		5127<6160	160 TO W04	*Call
2098<2086		5127<6170	170 TO W04	*Call
2098<2086		5127<6210	210 TO W04	*Call
2098<2086		5127<6220	220 TO W04	*Call
2098<2086		5127<6230	230 TO W04	*Call
2098<2086		5127<6240	240 TO W04	*Call
2098<2086		5127<6250	250 TO W04	*Call
2098<2086		5127<6260	260 TO W04	*Call
2098<2086		5127<6270	270 TO W04	*Call
2098<2086		5127<6310	310 TO W04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5127<6320	320 TO W04	*Call
2098<2086		5127<6330	330 TO W04	*Call
2098<2086		5127<6340	340 TO W04	*Call
2098<2086		5127<6350	350 TO W04	*Call
2098<2086		5127<6360	360 TO W04	*Call
2098<2086		5127<6370	370 TO W04	*Call
2098<2086		5127<6410	410 TO W04	*Call
2098<2086		5127<6420	420 TO W04	*Call
2098<2086		5127<6430	430 TO W04	*Call
2098<2086		5127<6440	440 TO W04	*Call
2098<2086		5127<6450	450 TO W04	*Call
2098<2086		5127<6460	460 TO W04	*Call
2098<2086		5127<6470	470 TO W04	*Call
2098<2086		5128<6070	070 TO W05	*Call
2098<2086		5128<6110	110 TO W05	*Call
2098<2086		5128<6120	120 TO W05	*Call
2098<2086		5128<6130	130 TO W05	*Call
2098<2086		5128<6140	140 TO W05	*Call
2098<2086		5128<6150	150 TO W05	*Call
2098<2086		5128<6160	160 TO W05	*Call
2098<2086		5128<6170	170 TO W05	*Call
2098<2086		5128<6210	210 TO W05	*Call
2098<2086		5128<6220	220 TO W05	*Call
2098<2086		5128<6230	230 TO W05	*Call
2098<2086		5128<6240	240 TO W05	*Call
2098<2086		5128<6250	250 TO W05	*Call
2098<2086		5128<6260	260 TO W05	*Call
2098<2086		5128<6270	270 TO W05	*Call
2098<2086		5128<6310	310 TO W05	*Call
2098<2086		5128<6320	320 TO W05	*Call
2098<2086		5128<6330	330 TO W05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5128<6340	340 TO W05	*Call
2098<2086		5128<6350	350 TO W05	*Call
2098<2086		5128<6360	360 TO W05	*Call
2098<2086		5128<6370	370 TO W05	*Call
2098<2086		5128<6410	410 TO W05	*Call
2098<2086		5128<6420	420 TO W05	*Call
2098<2086		5128<6430	430 TO W05	*Call
2098<2086		5128<6440	440 TO W05	*Call
2098<2086		5128<6450	450 TO W05	*Call
2098<2086		5128<6460	460 TO W05	*Call
2098<2086		5128<6470	470 TO W05	*Call
2098<2086		5129<6070	070 TO X01	*Call
2098<2086		5129<6110	110 TO X01	*Call
2098<2086		5129<6120	120 TO X01	*Call
2098<2086		5129<6130	130 TO X01	*Call
2098<2086		5129<6140	140 TO X01	*Call
2098<2086		5129<6150	150 TO X01	*Call
2098<2086		5129<6160	160 TO X01	*Call
2098<2086		5129<6170	170 TO X01	*Call
2098<2086		5129<6210	210 TO X01	*Call
2098<2086		5129<6220	220 TO X01	*Call
2098<2086		5129<6230	230 TO X01	*Call
2098<2086		5129<6240	240 TO X01	*Call
2098<2086		5129<6250	250 TO X01	*Call
2098<2086		5129<6260	260 TO X01	*Call
2098<2086		5129<6270	270 TO X01	*Call
2098<2086		5129<6310	310 TO X01	*Call
2098<2086		5129<6320	320 TO X01	*Call
2098<2086		5129<6330	330 TO X01	*Call
2098<2086		5129<6340	340 TO X01	*Call
2098<2086		5129<6350	350 TO X01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5129<6360	360 TO X01	*Call
2098<2086		5129<6370	370 TO X01	*Call
2098<2086		5129<6410	410 TO X01	*Call
2098<2086		5129<6420	420 TO X01	*Call
2098<2086		5129<6430	430 TO X01	*Call
2098<2086		5129<6440	440 TO X01	*Call
2098<2086		5129<6450	450 TO X01	*Call
2098<2086		5129<6460	460 TO X01	*Call
2098<2086		5129<6470	470 TO X01	*Call
2098<2086		5130<6070	070 TO X02	*Call
2098<2086		5130<6110	110 TO X02	*Call
2098<2086		5130<6120	120 TO X02	*Call
2098<2086		5130<6130	130 TO X02	*Call
2098<2086		5130<6140	140 TO X02	*Call
2098<2086		5130<6150	150 TO X02	*Call
2098<2086		5130<6160	160 TO X02	*Call
2098<2086		5130<6170	170 TO X02	*Call
2098<2086		5130<6210	210 TO X02	*Call
2098<2086		5130<6220	220 TO X02	*Call
2098<2086		5130<6230	230 TO X02	*Call
2098<2086		5130<6240	240 TO X02	*Call
2098<2086		5130<6250	250 TO X02	*Call
2098<2086		5130<6260	260 TO X02	*Call
2098<2086		5130<6270	270 TO X02	*Call
2098<2086		5130<6310	310 TO X02	*Call
2098<2086		5130<6320	320 TO X02	*Call
2098<2086		5130<6330	330 TO X02	*Call
2098<2086		5130<6340	340 TO X02	*Call
2098<2086		5130<6350	350 TO X02	*Call
2098<2086		5130<6360	360 TO X02	*Call
2098<2086		5130<6370	370 TO X02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5130<6410	410 TO X02	*Call
2098<2086		5130<6420	420 TO X02	*Call
2098<2086		5130<6430	430 TO X02	*Call
2098<2086		5130<6440	440 TO X02	*Call
2098<2086		5130<6450	450 TO X02	*Call
2098<2086		5130<6460	460 TO X02	*Call
2098<2086		5130<6470	470 TO X02	*Call
2098<2086		5131<6070	070 TO X03	*Call
2098<2086		5131<6110	110 TO X03	*Call
2098<2086		5131<6120	120 TO X03	*Call
2098<2086		5131<6130	130 TO X03	*Call
2098<2086		5131<6140	140 TO X03	*Call
2098<2086		5131<6150	150 TO X03	*Call
2098<2086		5131<6160	160 TO X03	*Call
2098<2086		5131<6170	170 TO X03	*Call
2098<2086		5131<6210	210 TO X03	*Call
2098<2086		5131<6220	220 TO X03	*Call
2098<2086		5131<6230	230 TO X03	*Call
2098<2086		5131<6240	240 TO X03	*Call
2098<2086		5131<6250	250 TO X03	*Call
2098<2086		5131<6260	260 TO X03	*Call
2098<2086		5131<6270	270 TO X03	*Call
2098<2086		5131<6310	310 TO X03	*Call
2098<2086		5131<6320	320 TO X03	*Call
2098<2086		5131<6330	330 TO X03	*Call
2098<2086		5131<6340	340 TO X03	*Call
2098<2086		5131<6350	350 TO X03	*Call
2098<2086		5131<6360	360 TO X03	*Call
2098<2086		5131<6370	370 TO X03	*Call
2098<2086		5131<6410	410 TO X03	*Call
2098<2086		5131<6420	420 TO X03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5131<6430	430 TO X03	*Call
2098<2086		5131<6440	440 TO X03	*Call
2098<2086		5131<6450	450 TO X03	*Call
2098<2086		5131<6460	460 TO X03	*Call
2098<2086		5131<6470	470 TO X03	*Call
2098<2086		5132<6070	070 TO X04	*Call
2098<2086		5132<6110	110 TO X04	*Call
2098<2086		5132<6120	120 TO X04	*Call
2098<2086		5132<6130	130 TO X04	*Call
2098<2086		5132<6140	140 TO X04	*Call
2098<2086		5132<6150	150 TO X04	*Call
2098<2086		5132<6160	160 TO X04	*Call
2098<2086		5132<6170	170 TO X04	*Call
2098<2086		5132<6210	210 TO X04	*Call
2098<2086		5132<6220	220 TO X04	*Call
2098<2086		5132<6230	230 TO X04	*Call
2098<2086		5132<6240	240 TO X04	*Call
2098<2086		5132<6250	250 TO X04	*Call
2098<2086		5132<6260	260 TO X04	*Call
2098<2086		5132<6270	270 TO X04	*Call
2098<2086		5132<6310	310 TO X04	*Call
2098<2086		5132<6320	320 TO X04	*Call
2098<2086		5132<6330	330 TO X04	*Call
2098<2086		5132<6340	340 TO X04	*Call
2098<2086		5132<6350	350 TO X04	*Call
2098<2086		5132<6360	360 TO X04	*Call
2098<2086		5132<6370	370 TO X04	*Call
2098<2086		5132<6410	410 TO X04	*Call
2098<2086		5132<6420	420 TO X04	*Call
2098<2086		5132<6430	430 TO X04	*Call
2098<2086		5132<6440	440 TO X04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5132<6450	450 TO X04	*Call
2098<2086		5132<6460	460 TO X04	*Call
2098<2086		5132<6470	470 TO X04	*Call
2098<2086		5133<6070	070 TO X05	*Call
2098<2086		5133<6110	110 TO X05	*Call
2098<2086		5133<6120	120 TO X05	*Call
2098<2086		5133<6130	130 TO X05	*Call
2098<2086		5133<6140	140 TO X05	*Call
2098<2086		5133<6150	150 TO X05	*Call
2098<2086		5133<6160	160 TO X05	*Call
2098<2086		5133<6170	170 TO X05	*Call
2098<2086		5133<6210	210 TO X05	*Call
2098<2086		5133<6220	220 TO X05	*Call
2098<2086		5133<6230	230 TO X05	*Call
2098<2086		5133<6240	240 TO X05	*Call
2098<2086		5133<6250	250 TO X05	*Call
2098<2086		5133<6260	260 TO X05	*Call
2098<2086		5133<6270	270 TO X05	*Call
2098<2086		5133<6310	310 TO X05	*Call
2098<2086		5133<6320	320 TO X05	*Call
2098<2086		5133<6330	330 TO X05	*Call
2098<2086		5133<6340	340 TO X05	*Call
2098<2086		5133<6350	350 TO X05	*Call
2098<2086		5133<6360	360 TO X05	*Call
2098<2086		5133<6370	370 TO X05	*Call
2098<2086		5133<6410	410 TO X05	*Call
2098<2086		5133<6420	420 TO X05	*Call
2098<2086		5133<6430	430 TO X05	*Call
2098<2086		5133<6440	440 TO X05	*Call
2098<2086		5133<6450	450 TO X05	*Call
2098<2086		5133<6460	460 TO X05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5133<6470	470 TO X05	*Call
2098<2086		5134<6070	070 TO Y01	*Call
2098<2086		5134<6110	110 TO Y01	*Call
2098<2086		5134<6120	120 TO Y01	*Call
2098<2086		5134<6130	130 TO Y01	*Call
2098<2086		5134<6140	140 TO Y01	*Call
2098<2086		5134<6150	150 TO Y01	*Call
2098<2086		5134<6160	160 TO Y01	*Call
2098<2086		5134<6170	170 TO Y01	*Call
2098<2086		5134<6210	210 TO Y01	*Call
2098<2086		5134<6220	220 TO Y01	*Call
2098<2086		5134<6230	230 TO Y01	*Call
2098<2086		5134<6240	240 TO Y01	*Call
2098<2086		5134<6250	250 TO Y01	*Call
2098<2086		5134<6260	260 TO Y01	*Call
2098<2086		5134<6270	270 TO Y01	*Call
2098<2086		5134<6310	310 TO Y01	*Call
2098<2086		5134<6320	320 TO Y01	*Call
2098<2086		5134<6330	330 TO Y01	*Call
2098<2086		5134<6340	340 TO Y01	*Call
2098<2086		5134<6350	350 TO Y01	*Call
2098<2086		5134<6360	360 TO Y01	*Call
2098<2086		5134<6370	370 TO Y01	*Call
2098<2086		5134<6410	410 TO Y01	*Call
2098<2086		5134<6420	420 TO Y01	*Call
2098<2086		5134<6430	430 TO Y01	*Call
2098<2086		5134<6440	440 TO Y01	*Call
2098<2086		5134<6450	450 TO Y01	*Call
2098<2086		5134<6460	460 TO Y01	*Call
2098<2086		5134<6470	470 TO Y01	*Call
2098<2086		5135<6070	070 TO Y02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5135<6110	110 TO Y02	*Call
2098<2086		5135<6120	120 TO Y02	*Call
2098<2086		5135<6130	130 TO Y02	*Call
2098<2086		5135<6140	140 TO Y02	*Call
2098<2086		5135<6150	150 TO Y02	*Call
2098<2086		5135<6160	160 TO Y02	*Call
2098<2086		5135<6170	170 TO Y02	*Call
2098<2086		5135<6210	210 TO Y02	*Call
2098<2086		5135<6220	220 TO Y02	*Call
2098<2086		5135<6230	230 TO Y02	*Call
2098<2086		5135<6240	240 TO Y02	*Call
2098<2086		5135<6250	250 TO Y02	*Call
2098<2086		5135<6260	260 TO Y02	*Call
2098<2086		5135<6270	270 TO Y02	*Call
2098<2086		5135<6310	310 TO Y02	*Call
2098<2086		5135<6320	320 TO Y02	*Call
2098<2086		5135<6330	330 TO Y02	*Call
2098<2086		5135<6340	340 TO Y02	*Call
2098<2086		5135<6350	350 TO Y02	*Call
2098<2086		5135<6360	360 TO Y02	*Call
2098<2086		5135<6370	370 TO Y02	*Call
2098<2086		5135<6410	410 TO Y02	*Call
2098<2086		5135<6420	420 TO Y02	*Call
2098<2086		5135<6430	430 TO Y02	*Call
2098<2086		5135<6440	440 TO Y02	*Call
2098<2086		5135<6450	450 TO Y02	*Call
2098<2086		5135<6460	460 TO Y02	*Call
2098<2086		5135<6470	470 TO Y02	*Call
2098<2086		5136<6070	070 TO Y03	*Call
2098<2086		5136<6110	110 TO Y03	*Call
2098<2086		5136<6120	120 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5136<6130	130 TO Y03	*Call
2098<2086		5136<6140	140 TO Y03	*Call
2098<2086		5136<6150	150 TO Y03	*Call
2098<2086		5136<6160	160 TO Y03	*Call
2098<2086		5136<6170	170 TO Y03	*Call
2098<2086		5136<6210	210 TO Y03	*Call
2098<2086		5136<6220	220 TO Y03	*Call
2098<2086		5136<6230	230 TO Y03	*Call
2098<2086		5136<6240	240 TO Y03	*Call
2098<2086		5136<6250	250 TO Y03	*Call
2098<2086		5136<6260	260 TO Y03	*Call
2098<2086		5136<6270	270 TO Y03	*Call
2098<2086		5136<6310	310 TO Y03	*Call
2098<2086		5136<6320	320 TO Y03	*Call
2098<2086		5136<6330	330 TO Y03	*Call
2098<2086		5136<6340	340 TO Y03	*Call
2098<2086		5136<6350	350 TO Y03	*Call
2098<2086		5136<6360	360 TO Y03	*Call
2098<2086		5136<6370	370 TO Y03	*Call
2098<2086		5136<6410	410 TO Y03	*Call
2098<2086		5136<6420	420 TO Y03	*Call
2098<2086		5136<6430	430 TO Y03	*Call
2098<2086		5136<6440	440 TO Y03	*Call
2098<2086		5136<6450	450 TO Y03	*Call
2098<2086		5136<6460	460 TO Y03	*Call
2098<2086		5136<6470	470 TO Y03	*Call
2098<2086		5137<6070	070 TO Y04	*Call
2098<2086		5137<6110	110 TO Y04	*Call
2098<2086		5137<6120	120 TO Y04	*Call
2098<2086		5137<6130	130 TO Y04	*Call
2098<2086		5137<6140	140 TO Y04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5137<6150	150 TO Y04	*Call
2098<2086		5137<6160	160 TO Y04	*Call
2098<2086		5137<6170	170 TO Y04	*Call
2098<2086		5137<6210	210 TO Y04	*Call
2098<2086		5137<6220	220 TO Y04	*Call
2098<2086		5137<6230	230 TO Y04	*Call
2098<2086		5137<6240	240 TO Y04	*Call
2098<2086		5137<6250	250 TO Y04	*Call
2098<2086		5137<6260	260 TO Y04	*Call
2098<2086		5137<6270	270 TO Y04	*Call
2098<2086		5137<6310	310 TO Y04	*Call
2098<2086		5137<6320	320 TO Y04	*Call
2098<2086		5137<6330	330 TO Y04	*Call
2098<2086		5137<6340	340 TO Y04	*Call
2098<2086		5137<6350	350 TO Y04	*Call
2098<2086		5137<6360	360 TO Y04	*Call
2098<2086		5137<6370	370 TO Y04	*Call
2098<2086		5137<6410	410 TO Y04	*Call
2098<2086		5137<6420	420 TO Y04	*Call
2098<2086		5137<6430	430 TO Y04	*Call
2098<2086		5137<6440	440 TO Y04	*Call
2098<2086		5137<6450	450 TO Y04	*Call
2098<2086		5137<6460	460 TO Y04	*Call
2098<2086		5137<6470	470 TO Y04	*Call
2098<2086		5138<6070	070 TO Y05	*Call
2098<2086		5138<6110	110 TO Y05	*Call
2098<2086		5138<6120	120 TO Y05	*Call
2098<2086		5138<6130	130 TO Y05	*Call
2098<2086		5138<6140	140 TO Y05	*Call
2098<2086		5138<6150	150 TO Y05	*Call
2098<2086		5138<6160	160 TO Y05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5138<6170	170 TO Y05	*Call
2098<2086		5138<6210	210 TO Y05	*Call
2098<2086		5138<6220	220 TO Y05	*Call
2098<2086		5138<6230	230 TO Y05	*Call
2098<2086		5138<6240	240 TO Y05	*Call
2098<2086		5138<6250	250 TO Y05	*Call
2098<2086		5138<6260	260 TO Y05	*Call
2098<2086		5138<6270	270 TO Y05	*Call
2098<2086		5138<6310	310 TO Y05	*Call
2098<2086		5138<6320	320 TO Y05	*Call
2098<2086		5138<6330	330 TO Y05	*Call
2098<2086		5138<6340	340 TO Y05	*Call
2098<2086		5138<6350	350 TO Y05	*Call
2098<2086		5138<6360	360 TO Y05	*Call
2098<2086		5138<6370	370 TO Y05	*Call
2098<2086		5138<6410	410 TO Y05	*Call
2098<2086		5138<6420	420 TO Y05	*Call
2098<2086		5138<6430	430 TO Y05	*Call
2098<2086		5138<6440	440 TO Y05	*Call
2098<2086		5138<6450	450 TO Y05	*Call
2098<2086		5138<6460	460 TO Y05	*Call
2098<2086		5138<6470	470 TO Y05	*Call
2098<2086		5139<6070	070 TO Z01	*Call
2098<2086		5139<6110	110 TO Z01	*Call
2098<2086		5139<6120	120 TO Z01	*Call
2098<2086		5139<6130	130 TO Z01	*Call
2098<2086		5139<6140	140 TO Z01	*Call
2098<2086		5139<6150	150 TO Z01	*Call
2098<2086		5139<6160	160 TO Z01	*Call
2098<2086		5139<6170	170 TO Z01	*Call
2098<2086		5139<6210	210 TO Z01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5139<6220	220 TO Z01	*Call
2098<2086		5139<6230	230 TO Z01	*Call
2098<2086		5139<6240	240 TO Z01	*Call
2098<2086		5139<6250	250 TO Z01	*Call
2098<2086		5139<6260	260 TO Z01	*Call
2098<2086		5139<6270	270 TO Z01	*Call
2098<2086		5139<6310	310 TO Z01	*Call
2098<2086		5139<6320	320 TO Z01	*Call
2098<2086		5139<6330	330 TO Z01	*Call
2098<2086		5139<6340	340 TO Z01	*Call
2098<2086		5139<6350	350 TO Z01	*Call
2098<2086		5139<6360	360 TO Z01	*Call
2098<2086		5139<6370	370 TO Z01	*Call
2098<2086		5139<6410	410 TO Z01	*Call
2098<2086		5139<6420	420 TO Z01	*Call
2098<2086		5139<6430	430 TO Z01	*Call
2098<2086		5139<6440	440 TO Z01	*Call
2098<2086		5139<6450	450 TO Z01	*Call
2098<2086		5139<6460	460 TO Z01	*Call
2098<2086		5139<6470	470 TO Z01	*Call
2098<2086		5140<6070	070 TO Z02	*Call
2098<2086		5140<6110	110 TO Z02	*Call
2098<2086		5140<6120	120 TO Z02	*Call
2098<2086		5140<6130	130 TO Z02	*Call
2098<2086		5140<6140	140 TO Z02	*Call
2098<2086		5140<6150	150 TO Z02	*Call
2098<2086		5140<6160	160 TO Z02	*Call
2098<2086		5140<6170	170 TO Z02	*Call
2098<2086		5140<6210	210 TO Z02	*Call
2098<2086		5140<6220	220 TO Z02	*Call
2098<2086		5140<6230	230 TO Z02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5140<6240	240 TO Z02	*Call
2098<2086		5140<6250	250 TO Z02	*Call
2098<2086		5140<6260	260 TO Z02	*Call
2098<2086		5140<6270	270 TO Z02	*Call
2098<2086		5140<6310	310 TO Z02	*Call
2098<2086		5140<6320	320 TO Z02	*Call
2098<2086		5140<6330	330 TO Z02	*Call
2098<2086		5140<6340	340 TO Z02	*Call
2098<2086		5140<6350	350 TO Z02	*Call
2098<2086		5140<6360	360 TO Z02	*Call
2098<2086		5140<6370	370 TO Z02	*Call
2098<2086		5140<6410	410 TO Z02	*Call
2098<2086		5140<6420	420 TO Z02	*Call
2098<2086		5140<6430	430 TO Z02	*Call
2098<2086		5140<6440	440 TO Z02	*Call
2098<2086		5140<6450	450 TO Z02	*Call
2098<2086		5140<6460	460 TO Z02	*Call
2098<2086		5140<6470	470 TO Z02	*Call
2098<2086		5141<6070	070 TO Z03	*Call
2098<2086		5141<6110	110 TO Z03	*Call
2098<2086		5141<6120	120 TO Z03	*Call
2098<2086		5141<6130	130 TO Z03	*Call
2098<2086		5141<6140	140 TO Z03	*Call
2098<2086		5141<6150	150 TO Z03	*Call
2098<2086		5141<6160	160 TO Z03	*Call
2098<2086		5141<6170	170 TO Z03	*Call
2098<2086		5141<6210	210 TO Z03	*Call
2098<2086		5141<6220	220 TO Z03	*Call
2098<2086		5141<6230	230 TO Z03	*Call
2098<2086		5141<6240	240 TO Z03	*Call
2098<2086		5141<6250	250 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5141<6260	260 TO Z03	*Call
2098<2086		5141<6270	270 TO Z03	*Call
2098<2086		5141<6310	310 TO Z03	*Call
2098<2086		5141<6320	320 TO Z03	*Call
2098<2086		5141<6330	330 TO Z03	*Call
2098<2086		5141<6340	340 TO Z03	*Call
2098<2086		5141<6350	350 TO Z03	*Call
2098<2086		5141<6360	360 TO Z03	*Call
2098<2086		5141<6370	370 TO Z03	*Call
2098<2086		5141<6410	410 TO Z03	*Call
2098<2086		5141<6420	420 TO Z03	*Call
2098<2086		5141<6430	430 TO Z03	*Call
2098<2086		5141<6440	440 TO Z03	*Call
2098<2086		5141<6450	450 TO Z03	*Call
2098<2086		5141<6460	460 TO Z03	*Call
2098<2086		5141<6470	470 TO Z03	*Call
2098<2086		5142<6070	070 TO Z04	*Call
2098<2086		5142<6110	110 TO Z04	*Call
2098<2086		5142<6120	120 TO Z04	*Call
2098<2086		5142<6130	130 TO Z04	*Call
2098<2086		5142<6140	140 TO Z04	*Call
2098<2086		5142<6150	150 TO Z04	*Call
2098<2086		5142<6160	160 TO Z04	*Call
2098<2086		5142<6170	170 TO Z04	*Call
2098<2086		5142<6210	210 TO Z04	*Call
2098<2086		5142<6220	220 TO Z04	*Call
2098<2086		5142<6230	230 TO Z04	*Call
2098<2086		5142<6240	240 TO Z04	*Call
2098<2086		5142<6250	250 TO Z04	*Call
2098<2086		5142<6260	260 TO Z04	*Call
2098<2086		5142<6270	270 TO Z04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5142<6310	310 TO Z04	*Call
2098<2086		5142<6320	320 TO Z04	*Call
2098<2086		5142<6330	330 TO Z04	*Call
2098<2086		5142<6340	340 TO Z04	*Call
2098<2086		5142<6350	350 TO Z04	*Call
2098<2086		5142<6360	360 TO Z04	*Call
2098<2086		5142<6370	370 TO Z04	*Call
2098<2086		5142<6410	410 TO Z04	*Call
2098<2086		5142<6420	420 TO Z04	*Call
2098<2086		5142<6430	430 TO Z04	*Call
2098<2086		5142<6440	440 TO Z04	*Call
2098<2086		5142<6450	450 TO Z04	*Call
2098<2086		5142<6460	460 TO Z04	*Call
2098<2086		5142<6470	470 TO Z04	*Call
2098<2086		5143<6070	070 TO Z05	*Call
2098<2086		5143<6110	110 TO Z05	*Call
2098<2086		5143<6120	120 TO Z05	*Call
2098<2086		5143<6130	130 TO Z05	*Call
2098<2086		5143<6140	140 TO Z05	*Call
2098<2086		5143<6150	150 TO Z05	*Call
2098<2086		5143<6160	160 TO Z05	*Call
2098<2086		5143<6170	170 TO Z05	*Call
2098<2086		5143<6210	210 TO Z05	*Call
2098<2086		5143<6220	220 TO Z05	*Call
2098<2086		5143<6230	230 TO Z05	*Call
2098<2086		5143<6240	240 TO Z05	*Call
2098<2086		5143<6250	250 TO Z05	*Call
2098<2086		5143<6260	260 TO Z05	*Call
2098<2086		5143<6270	270 TO Z05	*Call
2098<2086		5143<6310	310 TO Z05	*Call
2098<2086		5143<6320	320 TO Z05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		5143<6330	330 TO Z05	*Call
2098<2086		5143<6340	340 TO Z05	*Call
2098<2086		5143<6350	350 TO Z05	*Call
2098<2086		5143<6360	360 TO Z05	*Call
2098<2086		5143<6370	370 TO Z05	*Call
2098<2086		5143<6410	410 TO Z05	*Call
2098<2086		5143<6420	420 TO Z05	*Call
2098<2086		5143<6430	430 TO Z05	*Call
2098<2086		5143<6440	440 TO Z05	*Call
2098<2086		5143<6450	450 TO Z05	*Call
2098<2086		5143<6460	460 TO Z05	*Call
2098<2086		5143<6470	470 TO Z05	*Call
2098<2086		6650<6518	ICF TO IFL	*Call
2098<2086		6650<6519	ADDL SAP TO IFL	*Call
2098<2086		6650<6520	ZAAP TO IFL	*Call
2098<2086		6651<6516	IFL TO ICF	*Call
2098<2086		6651<6517	UIFL TO ICF	*Call
2098<2086		6651<6519	ADDL SAP TO ICF	*Call
2098<2086		6651<6520	ZAAP TO ICF	*Call
2098<2086		6652<6516	IFL TO ADDL SAP	*Call
2098<2086		6652<6517	UIFL TO ADDL SAP	*Call
2098<2086		6652<6518	ICF TO ADDL SAP	*Call
2098<2086		6652<6520	ZAAP TO ADDL SAP	*Call
2098<2086		6653<6516	IFL TO ZAAP	*Call
2098<2086		6653<6517	UIFL TO ZAAP	*Call
2098<2086		6653<6518	ICF TO ZAAP	*Call
2098<2086		6653<6519	ADDL SAP TO ZAAP	*Call
2098<2086		6654<6516	IFL TO ZIIP	*Call
2098<2086		6654<6517	UIFL TO ZIIP	*Call
2098<2086		6654<6518	ICF TO ZIIP	*Call
2098<2086		6654<6519	ADDL SAP TO ZIIP	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2086		6654<6520	ZAAP TO ZIIP	*Call
2098<2086		6655<6518	ICF TO UIFL	*Call
2098<2086		6655<6519	ADDL SAP TO UIFL	*Call
2098<2086		6655<6520	ZAAP TO UIFL	*Call
2098<2096		0079<0080	IC TR/EN TO HMC DUAL EN	*Call
2098<2096		0081<0082	IC TR/EN TO HMC DUAL EN	*Call
2098<2096		0084<0085	IC TR/EN TO HMC DUAL EN	*Call
2098<2096		2403<2901	8 GB TO 12 GB	*Call
2098<2096		2404<2901	8 GB TO 16 GB	*Call
2098<2096		2405<2901	8 GB TO 20 GB	*Call
2098<2096		2405<2902	16 GB TO 20 GB	*Call
2098<2096		2406<2901	8 GB TO 24 GB	*Call
2098<2096		2406<2902	16 GB TO 24 GB	*Call
2098<2096		2407<2901	8 GB TO 28 GB	*Call
2098<2096		2407<2902	16 GB TO 28 GB	*Call
2098<2096		2407<2903	24 GB TO 28 GB	*Call
2098<2096		2408<2901	8 GB TO 32 GB	*Call
2098<2096		2408<2902	16 GB TO 32 GB	*Call
2098<2096		2408<2903	24 GB TO 32 GB	*Call
2098<2096		2409<2901	8 GB TO 40 GB	*Call
2098<2096		2409<2902	16 GB TO 40 GB	*Call
2098<2096		2409<2903	24 GB TO 40 GB	*Call
2098<2096		2409<2904	32 GB TO 40 GB	*Call
2098<2096		2410<2901	8 GB TO 48 GB	*Call
2098<2096		2410<2902	16 GB TO 48 GB	*Call
2098<2096		2410<2903	24 GB TO 48 GB	*Call
2098<2096		2410<2904	32 GB TO 48 GB	*Call
2098<2096		2410<2905	40 GB TO 48 GB	*Call
2098<2096		2411<2901	8 GB TO 56 GB	*Call
2098<2096		2411<2902	16 GB TO 56 GB	*Call
2098<2096		2411<2903	24 GB TO 56 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		2411<2904	32 GB TO 56 GB	*Call
2098<2096		2411<2905	40 GB TO 56 GB	*Call
2098<2096		2411<2906	48 GB TO 56 GB	*Call
2098<2096		2412<2901	8 GB TO 64 GB	*Call
2098<2096		2412<2902	16 GB TO 64 GB	*Call
2098<2096		2412<2903	24 GB TO 64 GB	*Call
2098<2096		2412<2904	32 GB TO 64 GB	*Call
2098<2096		2412<2905	40 GB TO 64 GB	*Call
2098<2096		2412<2906	48 GB TO 64 GB	*Call
2098<2096		2412<2907	56 GB TO 64 GB	*Call
2098<2096		2413<2901	8 GB TO 72 GB	*Call
2098<2096		2413<2902	16 GB TO 72 GB	*Call
2098<2096		2413<2903	24 GB TO 72 GB	*Call
2098<2096		2413<2904	32 GB TO 72 GB	*Call
2098<2096		2413<2905	40 GB TO 72 GB	*Call
2098<2096		2413<2906	48 GB TO 72 GB	*Call
2098<2096		2413<2907	56 GB TO 72 GB	*Call
2098<2096		2413<2908	64 GB TO 72 GB	*Call
2098<2096		2414<2901	8 GB TO 80 GB	*Call
2098<2096		2414<2902	16 GB TO 80 GB	*Call
2098<2096		2414<2903	24 GB TO 80 GB	*Call
2098<2096		2414<2904	32 GB TO 80 GB	*Call
2098<2096		2414<2905	40 GB TO 80 GB	*Call
2098<2096		2414<2906	48 GB TO 80 GB	*Call
2098<2096		2414<2907	56 GB TO 80 GB	*Call
2098<2096		2414<2908	64 GB TO 80 GB	*Call
2098<2096		2415<2901	8 GB TO 88 GB	*Call
2098<2096		2415<2902	16 GB TO 88 GB	*Call
2098<2096		2415<2903	24 GB TO 88 GB	*Call
2098<2096		2415<2904	32 GB TO 88 GB	*Call
2098<2096		2415<2905	40 GB TO 88 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		2415<2906	48 GB TO 88 GB	*Call
2098<2096		2415<2907	56 GB TO 88 GB	*Call
2098<2096		2415<2908	64 GB TO 88 GB	*Call
2098<2096		2416<2901	8 GB TO 96 GB	*Call
2098<2096		2416<2902	16 GB TO 96 GB	*Call
2098<2096		2416<2903	24 GB TO 96 GB	*Call
2098<2096		2416<2904	32 GB TO 96 GB	*Call
2098<2096		2416<2905	40 GB TO 96 GB	*Call
2098<2096		2416<2906	48 GB TO 96 GB	*Call
2098<2096		2416<2907	56 GB TO 96 GB	*Call
2098<2096		2416<2908	64 GB TO 96 GB	*Call
2098<2096		2417<2901	8 GB TO 104 GB	*Call
2098<2096		2417<2902	16 GB TO 104 GB	*Call
2098<2096		2417<2903	24 GB TO 104 GB	*Call
2098<2096		2417<2904	32 GB TO 104 GB	*Call
2098<2096		2417<2905	40 GB TO 104 GB	*Call
2098<2096		2417<2906	48 GB TO 104 GB	*Call
2098<2096		2417<2907	56 GB TO 104 GB	*Call
2098<2096		2417<2908	64 GB TO 104 GB	*Call
2098<2096		2418<2901	8 GB TO 112 GB	*Call
2098<2096		2418<2902	16 GB TO 112 GB	*Call
2098<2096		2418<2903	24 GB TO 112 GB	*Call
2098<2096		2418<2904	32 GB TO 112 GB	*Call
2098<2096		2418<2905	40 GB TO 112 GB	*Call
2098<2096		2418<2906	48 GB TO 112 GB	*Call
2098<2096		2418<2907	56 GB TO 112 GB	*Call
2098<2096		2418<2908	64 GB TO 112 GB	*Call
2098<2096		2419<2901	8 GB TO 120 GB	*Call
2098<2096		2419<2902	16 GB TO 120 GB	*Call
2098<2096		2419<2903	24 GB TO 120 GB	*Call
2098<2096		2419<2904	32 GB TO 120 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		2419<2905	40 GB TO 120 GB	*Call
2098<2096		2419<2906	48 GB TO 120 GB	*Call
2098<2096		2419<2907	56 GB TO 120 GB	*Call
2098<2096		2419<2908	64 GB TO 120 GB	*Call
2098<2096		2420<2901	8 GB TO 152 GB	*Call
2098<2096		2420<2902	16 GB TO 152 GB	*Call
2098<2096		2420<2903	24 GB TO 152 GB	*Call
2098<2096		2420<2904	32 GB TO 152 GB	*Call
2098<2096		2420<2905	40 GB TO 152 GB	*Call
2098<2096		2420<2906	48 GB TO 152 GB	*Call
2098<2096		2420<2907	56 GB TO 152 GB	*Call
2098<2096		2420<2908	64 GB TO 152 GB	*Call
2098<2096		2421<2901	8 GB TO 184 GB	*Call
2098<2096		2421<2902	16 GB TO 184 GB	*Call
2098<2096		2421<2903	24 GB TO 184 GB	*Call
2098<2096		2421<2904	32 GB TO 184 GB	*Call
2098<2096		2421<2905	40 GB TO 184 GB	*Call
2098<2096		2421<2906	48 GB TO 184 GB	*Call
2098<2096		2421<2907	56 GB TO 184 GB	*Call
2098<2096		2421<2908	64 GB TO 184 GB	*Call
2098<2096		2422<2901	8 GB TO 216 GB	*Call
2098<2096		2422<2902	16 GB TO 216 GB	*Call
2098<2096		2422<2903	24 GB TO 216 GB	*Call
2098<2096		2422<2904	32 GB TO 216 GB	*Call
2098<2096		2422<2905	40 GB TO 216 GB	*Call
2098<2096		2422<2906	48 GB TO 216 GB	*Call
2098<2096		2422<2907	56 GB TO 216 GB	*Call
2098<2096		2422<2908	64 GB TO 216 GB	*Call
2098<2096		2423<2901	8 GB TO 248 GB	*Call
2098<2096		2423<2902	16 GB TO 248 GB	*Call
2098<2096		2423<2903	24 GB TO 248 GB	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		2423<2904	32 GB TO 248 GB	*Call
2098<2096		2423<2905	40 GB TO 248 GB	*Call
2098<2096		2423<2906	48 GB TO 248 GB	*Call
2098<2096		2423<2907	56 GB TO 248 GB	*Call
2098<2096		2423<2908	64 GB TO 248 GB	*Call
2098<2096		5013<4900	Z00 TO A00	*Call
2098<2096		5013<4901	A01 TO A00	*Call
2098<2096		5013<4902	A02 TO A00	*Call
2098<2096		5013<4903	A03 TO A00	*Call
2098<2096		5013<4905	B01 TO A00	*Call
2098<2096		5013<4906	B02 TO A00	*Call
2098<2096		5013<4907	B03 TO A00	*Call
2098<2096		5013<4909	C01 TO A00	*Call
2098<2096		5013<4910	C02 TO A00	*Call
2098<2096		5013<4911	C03 TO A00	*Call
2098<2096		5013<4913	D01 TO A00	*Call
2098<2096		5013<4914	D02 TO A00	*Call
2098<2096		5013<4915	D03 TO A00	*Call
2098<2096		5013<4917	E01 TO A00	*Call
2098<2096		5013<4918	E02 TO A00	*Call
2098<2096		5013<4921	F01 TO A00	*Call
2098<2096		5013<4922	F02 TO A00	*Call
2098<2096		5013<4925	G01 TO A00	*Call
2098<2096		5013<4929	H01 TO A00	*Call
2098<2096		5013<4933	I01 TO A00	*Call
2098<2096		5013<4937	J01 TO A00	*Call
2098<2096		5013<4944	K04 TO A00	*Call
2098<2096		5013<4947	L03 TO A00	*Call
2098<2096		5013<4948	L04 TO A00	*Call
2098<2096		5013<4951	M03 TO A00	*Call
2098<2096		5013<4952	M04 TO A00	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5013<4954	N02 TO A00	*Call
2098<2096		5013<4955	N03 TO A00	*Call
2098<2096		5013<4956	N04 TO A00	*Call
2098<2096		5013<4958	O02 TO A00	*Call
2098<2096		5013<4959	O03 TO A00	*Call
2098<2096		5013<4960	O04 TO A00	*Call
2098<2096		5013<4962	P02 TO A00	*Call
2098<2096		5013<4963	P03 TO A00	*Call
2098<2096		5013<4964	P04 TO A00	*Call
2098<2096		5013<4966	Q02 TO A00	*Call
2098<2096		5013<4967	Q03 TO A00	*Call
2098<2096		5013<4968	Q04 TO A00	*Call
2098<2096		5013<4969	R01 TO A00	*Call
2098<2096		5013<4970	R02 TO A00	*Call
2098<2096		5013<4971	R03 TO A00	*Call
2098<2096		5013<4972	R04 TO A00	*Call
2098<2096		5013<4973	S01 TO A00	*Call
2098<2096		5013<4974	S02 TO A00	*Call
2098<2096		5013<4975	S03 TO A00	*Call
2098<2096		5013<4976	S04 TO A00	*Call
2098<2096		5013<4977	T01 TO A00	*Call
2098<2096		5013<4978	T02 TO A00	*Call
2098<2096		5013<4979	T03 TO A00	*Call
2098<2096		5013<4980	T04 TO A00	*Call
2098<2096		5013<4981	U01 TO A00	*Call
2098<2096		5013<4982	U02 TO A00	*Call
2098<2096		5013<4983	U03 TO A00	*Call
2098<2096		5013<4984	U04 TO A00	*Call
2098<2096		5013<4985	V01 TO A00	*Call
2098<2096		5013<4986	V02 TO A00	*Call
2098<2096		5013<4987	V03 TO A00	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5013<4988	V04 TO A00	*Call
2098<2096		5013<4989	W01 TO A00	*Call
2098<2096		5013<4990	W02 TO A00	*Call
2098<2096		5013<4991	W03 TO A00	*Call
2098<2096		5013<4992	W04 TO A00	*Call
2098<2096		5013<4993	X01 TO A00	*Call
2098<2096		5013<4994	X02 TO A00	*Call
2098<2096		5013<4995	X03 TO A00	*Call
2098<2096		5013<4996	X04 TO A00	*Call
2098<2096		5013<4997	Y01 TO A00	*Call
2098<2096		5013<4998	Y02 TO A00	*Call
2098<2096		5013<4999	Y03 TO A00	*Call
2098<2096		5013<5000	Y04 TO A00	*Call
2098<2096		5013<5001	Z01 TO A00	*Call
2098<2096		5013<5002	Z02 TO A00	*Call
2098<2096		5013<5003	Z03 TO A00	*Call
2098<2096		5013<5004	Z04 TO A00	*Call
2098<2096		5014<4900	Z00 TO A01	*Call
2098<2096		5014<4901	A01 TO A01	*Call
2098<2096		5014<4902	A02 TO A01	*Call
2098<2096		5014<4903	A03 TO A01	*Call
2098<2096		5014<4905	B01 TO A01	*Call
2098<2096		5014<4906	B02 TO A01	*Call
2098<2096		5014<4907	B03 TO A01	*Call
2098<2096		5014<4909	C01 TO A01	*Call
2098<2096		5014<4910	C02 TO A01	*Call
2098<2096		5014<4911	C03 TO A01	*Call
2098<2096		5014<4913	D01 TO A01	*Call
2098<2096		5014<4914	D02 TO A01	*Call
2098<2096		5014<4915	D03 TO A01	*Call
2098<2096		5014<4917	E01 TO A01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5014<4918	E02 TO A01	*Call
2098<2096		5014<4921	F01 TO A01	*Call
2098<2096		5014<4922	F02 TO A01	*Call
2098<2096		5014<4925	G01 TO A01	*Call
2098<2096		5014<4929	H01 TO A01	*Call
2098<2096		5014<4933	I01 TO A01	*Call
2098<2096		5014<4937	J01 TO A01	*Call
2098<2096		5014<4944	K04 TO A01	*Call
2098<2096		5014<4947	L03 TO A01	*Call
2098<2096		5014<4948	L04 TO A01	*Call
2098<2096		5014<4951	M03 TO A01	*Call
2098<2096		5014<4952	M04 TO A01	*Call
2098<2096		5014<4954	N02 TO A01	*Call
2098<2096		5014<4955	N03 TO A01	*Call
2098<2096		5014<4956	N04 TO A01	*Call
2098<2096		5014<4958	O02 TO A01	*Call
2098<2096		5014<4959	O03 TO A01	*Call
2098<2096		5014<4960	O04 TO A01	*Call
2098<2096		5014<4962	P02 TO A01	*Call
2098<2096		5014<4963	P03 TO A01	*Call
2098<2096		5014<4964	P04 TO A01	*Call
2098<2096		5014<4966	Q02 TO A01	*Call
2098<2096		5014<4967	Q03 TO A01	*Call
2098<2096		5014<4968	Q04 TO A01	*Call
2098<2096		5014<4969	R01 TO A01	*Call
2098<2096		5014<4970	R02 TO A01	*Call
2098<2096		5014<4971	R03 TO A01	*Call
2098<2096		5014<4972	R04 TO A01	*Call
2098<2096		5014<4973	S01 TO A01	*Call
2098<2096		5014<4974	S02 TO A01	*Call
2098<2096		5014<4975	S03 TO A01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5014<4976	S04 TO A01	*Call
2098<2096		5014<4977	T01 TO A01	*Call
2098<2096		5014<4978	T02 TO A01	*Call
2098<2096		5014<4979	T03 TO A01	*Call
2098<2096		5014<4980	T04 TO A01	*Call
2098<2096		5014<4981	U01 TO A01	*Call
2098<2096		5014<4982	U02 TO A01	*Call
2098<2096		5014<4983	U03 TO A01	*Call
2098<2096		5014<4984	U04 TO A01	*Call
2098<2096		5014<4985	V01 TO A01	*Call
2098<2096		5014<4986	V02 TO A01	*Call
2098<2096		5014<4987	V03 TO A01	*Call
2098<2096		5014<4988	V04 TO A01	*Call
2098<2096		5014<4989	W01 TO A01	*Call
2098<2096		5014<4990	W02 TO A01	*Call
2098<2096		5014<4991	W03 TO A01	*Call
2098<2096		5014<4992	W04 TO A01	*Call
2098<2096		5014<4993	X01 TO A01	*Call
2098<2096		5014<4994	X02 TO A01	*Call
2098<2096		5014<4995	X03 TO A01	*Call
2098<2096		5014<4996	X04 TO A01	*Call
2098<2096		5014<4997	Y01 TO A01	*Call
2098<2096		5014<4998	Y02 TO A01	*Call
2098<2096		5014<4999	Y03 TO A01	*Call
2098<2096		5014<5000	Y04 TO A01	*Call
2098<2096		5014<5001	Z01 TO A01	*Call
2098<2096		5014<5002	Z02 TO A01	*Call
2098<2096		5014<5003	Z03 TO A01	*Call
2098<2096		5014<5004	Z04 TO A01	*Call
2098<2096		5015<4900	Z00 TO A02	*Call
2098<2096		5015<4901	A01 TO A02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5015<4902	A02 TO A02	*Call
2098<2096		5015<4903	A03 TO A02	*Call
2098<2096		5015<4905	B01 TO A02	*Call
2098<2096		5015<4906	B02 TO A02	*Call
2098<2096		5015<4907	B03 TO A02	*Call
2098<2096		5015<4909	C01 TO A02	*Call
2098<2096		5015<4910	C02 TO A02	*Call
2098<2096		5015<4911	C03 TO A02	*Call
2098<2096		5015<4913	D01 TO A02	*Call
2098<2096		5015<4914	D02 TO A02	*Call
2098<2096		5015<4915	D03 TO A02	*Call
2098<2096		5015<4917	E01 TO A02	*Call
2098<2096		5015<4918	E02 TO A02	*Call
2098<2096		5015<4921	F01 TO A02	*Call
2098<2096		5015<4922	F02 TO A02	*Call
2098<2096		5015<4925	G01 TO A02	*Call
2098<2096		5015<4929	H01 TO A02	*Call
2098<2096		5015<4933	I01 TO A02	*Call
2098<2096		5015<4937	J01 TO A02	*Call
2098<2096		5015<4944	K04 TO A02	*Call
2098<2096		5015<4947	L03 TO A02	*Call
2098<2096		5015<4948	L04 TO A02	*Call
2098<2096		5015<4951	M03 TO A02	*Call
2098<2096		5015<4952	M04 TO A02	*Call
2098<2096		5015<4954	N02 TO A02	*Call
2098<2096		5015<4955	N03 TO A02	*Call
2098<2096		5015<4956	N04 TO A02	*Call
2098<2096		5015<4958	O02 TO A02	*Call
2098<2096		5015<4959	O03 TO A02	*Call
2098<2096		5015<4960	O04 TO A02	*Call
2098<2096		5015<4962	P02 TO A02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5015<4963	P03 TO A02	*Call
2098<2096		5015<4964	P04 TO A02	*Call
2098<2096		5015<4966	Q02 TO A02	*Call
2098<2096		5015<4967	Q03 TO A02	*Call
2098<2096		5015<4968	Q04 TO A02	*Call
2098<2096		5015<4969	R01 TO A02	*Call
2098<2096		5015<4970	R02 TO A02	*Call
2098<2096		5015<4971	R03 TO A02	*Call
2098<2096		5015<4972	R04 TO A02	*Call
2098<2096		5015<4973	S01 TO A02	*Call
2098<2096		5015<4974	S02 TO A02	*Call
2098<2096		5015<4975	S03 TO A02	*Call
2098<2096		5015<4976	S04 TO A02	*Call
2098<2096		5015<4977	T01 TO A02	*Call
2098<2096		5015<4978	T02 TO A02	*Call
2098<2096		5015<4979	T03 TO A02	*Call
2098<2096		5015<4980	T04 TO A02	*Call
2098<2096		5015<4981	U01 TO A02	*Call
2098<2096		5015<4982	U02 TO A02	*Call
2098<2096		5015<4983	U03 TO A02	*Call
2098<2096		5015<4984	U04 TO A02	*Call
2098<2096		5015<4985	V01 TO A02	*Call
2098<2096		5015<4986	V02 TO A02	*Call
2098<2096		5015<4987	V03 TO A02	*Call
2098<2096		5015<4988	V04 TO A02	*Call
2098<2096		5015<4989	W01 TO A02	*Call
2098<2096		5015<4990	W02 TO A02	*Call
2098<2096		5015<4991	W03 TO A02	*Call
2098<2096		5015<4992	W04 TO A02	*Call
2098<2096		5015<4993	X01 TO A02	*Call
2098<2096		5015<4994	X02 TO A02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5015<4995	X03 TO A02	*Call
2098<2096		5015<4996	X04 TO A02	*Call
2098<2096		5015<4997	Y01 TO A02	*Call
2098<2096		5015<4998	Y02 TO A02	*Call
2098<2096		5015<4999	Y03 TO A02	*Call
2098<2096		5015<5000	Y04 TO A02	*Call
2098<2096		5015<5001	Z01 TO A02	*Call
2098<2096		5015<5002	Z02 TO A02	*Call
2098<2096		5015<5003	Z03 TO A02	*Call
2098<2096		5015<5004	Z04 TO A02	*Call
2098<2096		5016<4900	Z00 TO A03	*Call
2098<2096		5016<4901	A01 TO A03	*Call
2098<2096		5016<4902	A02 TO A03	*Call
2098<2096		5016<4903	A03 TO A03	*Call
2098<2096		5016<4905	B01 TO A03	*Call
2098<2096		5016<4906	B02 TO A03	*Call
2098<2096		5016<4907	B03 TO A03	*Call
2098<2096		5016<4909	C01 TO A03	*Call
2098<2096		5016<4910	C02 TO A03	*Call
2098<2096		5016<4911	C03 TO A03	*Call
2098<2096		5016<4913	D01 TO A03	*Call
2098<2096		5016<4914	D02 TO A03	*Call
2098<2096		5016<4915	D03 TO A03	*Call
2098<2096		5016<4917	E01 TO A03	*Call
2098<2096		5016<4918	E02 TO A03	*Call
2098<2096		5016<4921	F01 TO A03	*Call
2098<2096		5016<4922	F02 TO A03	*Call
2098<2096		5016<4925	G01 TO A03	*Call
2098<2096		5016<4929	H01 TO A03	*Call
2098<2096		5016<4933	I01 TO A03	*Call
2098<2096		5016<4937	J01 TO A03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5016<4944	K04 TO A03	*Call
2098<2096		5016<4947	L03 TO A03	*Call
2098<2096		5016<4948	L04 TO A03	*Call
2098<2096		5016<4951	M03 TO A03	*Call
2098<2096		5016<4952	M04 TO A03	*Call
2098<2096		5016<4954	N02 TO A03	*Call
2098<2096		5016<4955	N03 TO A03	*Call
2098<2096		5016<4956	N04 TO A03	*Call
2098<2096		5016<4958	O02 TO A03	*Call
2098<2096		5016<4959	O03 TO A03	*Call
2098<2096		5016<4960	O04 TO A03	*Call
2098<2096		5016<4962	P02 TO A03	*Call
2098<2096		5016<4963	P03 TO A03	*Call
2098<2096		5016<4964	P04 TO A03	*Call
2098<2096		5016<4966	Q02 TO A03	*Call
2098<2096		5016<4967	Q03 TO A03	*Call
2098<2096		5016<4968	Q04 TO A03	*Call
2098<2096		5016<4969	R01 TO A03	*Call
2098<2096		5016<4970	R02 TO A03	*Call
2098<2096		5016<4971	R03 TO A03	*Call
2098<2096		5016<4972	R04 TO A03	*Call
2098<2096		5016<4973	S01 TO A03	*Call
2098<2096		5016<4974	S02 TO A03	*Call
2098<2096		5016<4975	S03 TO A03	*Call
2098<2096		5016<4976	S04 TO A03	*Call
2098<2096		5016<4977	T01 TO A03	*Call
2098<2096		5016<4978	T02 TO A03	*Call
2098<2096		5016<4979	T03 TO A03	*Call
2098<2096		5016<4980	T04 TO A03	*Call
2098<2096		5016<4981	U01 TO A03	*Call
2098<2096		5016<4982	U02 TO A03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5016<4983	U03 TO A03	*Call
2098<2096		5016<4984	U04 TO A03	*Call
2098<2096		5016<4985	V01 TO A03	*Call
2098<2096		5016<4986	V02 TO A03	*Call
2098<2096		5016<4987	V03 TO A03	*Call
2098<2096		5016<4988	V04 TO A03	*Call
2098<2096		5016<4989	W01 TO A03	*Call
2098<2096		5016<4990	W02 TO A03	*Call
2098<2096		5016<4991	W03 TO A03	*Call
2098<2096		5016<4992	W04 TO A03	*Call
2098<2096		5016<4993	X01 TO A03	*Call
2098<2096		5016<4994	X02 TO A03	*Call
2098<2096		5016<4995	X03 TO A03	*Call
2098<2096		5016<4996	X04 TO A03	*Call
2098<2096		5016<4997	Y01 TO A03	*Call
2098<2096		5016<4998	Y02 TO A03	*Call
2098<2096		5016<4999	Y03 TO A03	*Call
2098<2096		5016<5000	Y04 TO A03	*Call
2098<2096		5016<5001	Z01 TO A03	*Call
2098<2096		5016<5002	Z02 TO A03	*Call
2098<2096		5016<5003	Z03 TO A03	*Call
2098<2096		5016<5004	Z04 TO A03	*Call
2098<2096		5017<4900	Z00 TO A04	*Call
2098<2096		5017<4901	A01 TO A04	*Call
2098<2096		5017<4902	A02 TO A04	*Call
2098<2096		5017<4903	A03 TO A04	*Call
2098<2096		5017<4905	B01 TO A04	*Call
2098<2096		5017<4906	B02 TO A04	*Call
2098<2096		5017<4907	B03 TO A04	*Call
2098<2096		5017<4909	C01 TO A04	*Call
2098<2096		5017<4910	C02 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5017<4911	C03 TO A04	*Call
2098<2096		5017<4913	D01 TO A04	*Call
2098<2096		5017<4914	D02 TO A04	*Call
2098<2096		5017<4915	D03 TO A04	*Call
2098<2096		5017<4917	E01 TO A04	*Call
2098<2096		5017<4918	E02 TO A04	*Call
2098<2096		5017<4921	F01 TO A04	*Call
2098<2096		5017<4922	F02 TO A04	*Call
2098<2096		5017<4925	G01 TO A04	*Call
2098<2096		5017<4929	H01 TO A04	*Call
2098<2096		5017<4933	I01 TO A04	*Call
2098<2096		5017<4937	J01 TO A04	*Call
2098<2096		5017<4944	K04 TO A04	*Call
2098<2096		5017<4947	L03 TO A04	*Call
2098<2096		5017<4948	L04 TO A04	*Call
2098<2096		5017<4951	M03 TO A04	*Call
2098<2096		5017<4952	M04 TO A04	*Call
2098<2096		5017<4954	N02 TO A04	*Call
2098<2096		5017<4955	N03 TO A04	*Call
2098<2096		5017<4956	N04 TO A04	*Call
2098<2096		5017<4958	O02 TO A04	*Call
2098<2096		5017<4959	O03 TO A04	*Call
2098<2096		5017<4960	O04 TO A04	*Call
2098<2096		5017<4962	P02 TO A04	*Call
2098<2096		5017<4963	P03 TO A04	*Call
2098<2096		5017<4964	P04 TO A04	*Call
2098<2096		5017<4966	Q02 TO A04	*Call
2098<2096		5017<4967	Q03 TO A04	*Call
2098<2096		5017<4968	Q04 TO A04	*Call
2098<2096		5017<4969	R01 TO A04	*Call
2098<2096		5017<4970	R02 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5017<4971	R03 TO A04	*Call
2098<2096		5017<4972	R04 TO A04	*Call
2098<2096		5017<4973	S01 TO A04	*Call
2098<2096		5017<4974	S02 TO A04	*Call
2098<2096		5017<4975	S03 TO A04	*Call
2098<2096		5017<4976	S04 TO A04	*Call
2098<2096		5017<4977	T01 TO A04	*Call
2098<2096		5017<4978	T02 TO A04	*Call
2098<2096		5017<4979	T03 TO A04	*Call
2098<2096		5017<4980	T04 TO A04	*Call
2098<2096		5017<4981	U01 TO A04	*Call
2098<2096		5017<4982	U02 TO A04	*Call
2098<2096		5017<4983	U03 TO A04	*Call
2098<2096		5017<4984	U04 TO A04	*Call
2098<2096		5017<4985	V01 TO A04	*Call
2098<2096		5017<4986	V02 TO A04	*Call
2098<2096		5017<4987	V03 TO A04	*Call
2098<2096		5017<4988	V04 TO A04	*Call
2098<2096		5017<4989	W01 TO A04	*Call
2098<2096		5017<4990	W02 TO A04	*Call
2098<2096		5017<4991	W03 TO A04	*Call
2098<2096		5017<4992	W04 TO A04	*Call
2098<2096		5017<4993	X01 TO A04	*Call
2098<2096		5017<4994	X02 TO A04	*Call
2098<2096		5017<4995	X03 TO A04	*Call
2098<2096		5017<4996	X04 TO A04	*Call
2098<2096		5017<4997	Y01 TO A04	*Call
2098<2096		5017<4998	Y02 TO A04	*Call
2098<2096		5017<4999	Y03 TO A04	*Call
2098<2096		5017<5000	Y04 TO A04	*Call
2098<2096		5017<5001	Z01 TO A04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5017<5002	Z02 TO A04	*Call
2098<2096		5017<5003	Z03 TO A04	*Call
2098<2096		5017<5004	Z04 TO A04	*Call
2098<2096		5018<4900	Z00 TO A05	*Call
2098<2096		5018<4901	A01 TO A05	*Call
2098<2096		5018<4902	A02 TO A05	*Call
2098<2096		5018<4903	A03 TO A05	*Call
2098<2096		5018<4905	B01 TO A05	*Call
2098<2096		5018<4906	B02 TO A05	*Call
2098<2096		5018<4907	B03 TO A05	*Call
2098<2096		5018<4909	C01 TO A05	*Call
2098<2096		5018<4910	C02 TO A05	*Call
2098<2096		5018<4911	C03 TO A05	*Call
2098<2096		5018<4913	D01 TO A05	*Call
2098<2096		5018<4914	D02 TO A05	*Call
2098<2096		5018<4915	D03 TO A05	*Call
2098<2096		5018<4917	E01 TO A05	*Call
2098<2096		5018<4918	E02 TO A05	*Call
2098<2096		5018<4921	F01 TO A05	*Call
2098<2096		5018<4922	F02 TO A05	*Call
2098<2096		5018<4925	G01 TO A05	*Call
2098<2096		5018<4929	H01 TO A05	*Call
2098<2096		5018<4933	I01 TO A05	*Call
2098<2096		5018<4937	J01 TO A05	*Call
2098<2096		5018<4944	K04 TO A05	*Call
2098<2096		5018<4947	L03 TO A05	*Call
2098<2096		5018<4948	L04 TO A05	*Call
2098<2096		5018<4951	M03 TO A05	*Call
2098<2096		5018<4952	M04 TO A05	*Call
2098<2096		5018<4954	N02 TO A05	*Call
2098<2096		5018<4955	N03 TO A05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5018<4956	N04 TO A05	*Call
2098<2096		5018<4958	O02 TO A05	*Call
2098<2096		5018<4959	O03 TO A05	*Call
2098<2096		5018<4960	O04 TO A05	*Call
2098<2096		5018<4962	P02 TO A05	*Call
2098<2096		5018<4963	P03 TO A05	*Call
2098<2096		5018<4964	P04 TO A05	*Call
2098<2096		5018<4966	Q02 TO A05	*Call
2098<2096		5018<4967	Q03 TO A05	*Call
2098<2096		5018<4968	Q04 TO A05	*Call
2098<2096		5018<4969	R01 TO A05	*Call
2098<2096		5018<4970	R02 TO A05	*Call
2098<2096		5018<4971	R03 TO A05	*Call
2098<2096		5018<4972	R04 TO A05	*Call
2098<2096		5018<4973	S01 TO A05	*Call
2098<2096		5018<4974	S02 TO A05	*Call
2098<2096		5018<4975	S03 TO A05	*Call
2098<2096		5018<4976	S04 TO A05	*Call
2098<2096		5018<4977	T01 TO A05	*Call
2098<2096		5018<4978	T02 TO A05	*Call
2098<2096		5018<4979	T03 TO A05	*Call
2098<2096		5018<4980	T04 TO A05	*Call
2098<2096		5018<4981	U01 TO A05	*Call
2098<2096		5018<4982	U02 TO A05	*Call
2098<2096		5018<4983	U03 TO A05	*Call
2098<2096		5018<4984	U04 TO A05	*Call
2098<2096		5018<4985	V01 TO A05	*Call
2098<2096		5018<4986	V02 TO A05	*Call
2098<2096		5018<4987	V03 TO A05	*Call
2098<2096		5018<4988	V04 TO A05	*Call
2098<2096		5018<4989	W01 TO A05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5018<4990	W02 TO A05	*Call
2098<2096		5018<4991	W03 TO A05	*Call
2098<2096		5018<4992	W04 TO A05	*Call
2098<2096		5018<4993	X01 TO A05	*Call
2098<2096		5018<4994	X02 TO A05	*Call
2098<2096		5018<4995	X03 TO A05	*Call
2098<2096		5018<4996	X04 TO A05	*Call
2098<2096		5018<4997	Y01 TO A05	*Call
2098<2096		5018<4998	Y02 TO A05	*Call
2098<2096		5018<4999	Y03 TO A05	*Call
2098<2096		5018<5000	Y04 TO A05	*Call
2098<2096		5018<5001	Z01 TO A05	*Call
2098<2096		5018<5002	Z02 TO A05	*Call
2098<2096		5018<5003	Z03 TO A05	*Call
2098<2096		5018<5004	Z04 TO A05	*Call
2098<2096		5019<4900	Z00 TO B01	*Call
2098<2096		5019<4901	A01 TO B01	*Call
2098<2096		5019<4902	A02 TO B01	*Call
2098<2096		5019<4903	A03 TO B01	*Call
2098<2096		5019<4905	B01 TO B01	*Call
2098<2096		5019<4906	B02 TO B01	*Call
2098<2096		5019<4907	B03 TO B01	*Call
2098<2096		5019<4909	C01 TO B01	*Call
2098<2096		5019<4910	C02 TO B01	*Call
2098<2096		5019<4911	C03 TO B01	*Call
2098<2096		5019<4913	D01 TO B01	*Call
2098<2096		5019<4914	D02 TO B01	*Call
2098<2096		5019<4915	D03 TO B01	*Call
2098<2096		5019<4917	E01 TO B01	*Call
2098<2096		5019<4918	E02 TO B01	*Call
2098<2096		5019<4921	F01 TO B01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5019<4922	F02 TO B01	*Call
2098<2096		5019<4925	G01 TO B01	*Call
2098<2096		5019<4929	H01 TO B01	*Call
2098<2096		5019<4933	I01 TO B01	*Call
2098<2096		5019<4937	J01 TO B01	*Call
2098<2096		5019<4944	K04 TO B01	*Call
2098<2096		5019<4947	L03 TO B01	*Call
2098<2096		5019<4948	L04 TO B01	*Call
2098<2096		5019<4951	M03 TO B01	*Call
2098<2096		5019<4952	M04 TO B01	*Call
2098<2096		5019<4954	N02 TO B01	*Call
2098<2096		5019<4955	N03 TO B01	*Call
2098<2096		5019<4956	N04 TO B01	*Call
2098<2096		5019<4958	O02 TO B01	*Call
2098<2096		5019<4959	O03 TO B01	*Call
2098<2096		5019<4960	O04 TO B01	*Call
2098<2096		5019<4962	P02 TO B01	*Call
2098<2096		5019<4963	P03 TO B01	*Call
2098<2096		5019<4964	P04 TO B01	*Call
2098<2096		5019<4966	Q02 TO B01	*Call
2098<2096		5019<4967	Q03 TO B01	*Call
2098<2096		5019<4968	Q04 TO B01	*Call
2098<2096		5019<4969	R01 TO B01	*Call
2098<2096		5019<4970	R02 TO B01	*Call
2098<2096		5019<4971	R03 TO B01	*Call
2098<2096		5019<4972	R04 TO B01	*Call
2098<2096		5019<4973	S01 TO B01	*Call
2098<2096		5019<4974	S02 TO B01	*Call
2098<2096		5019<4975	S03 TO B01	*Call
2098<2096		5019<4976	S04 TO B01	*Call
2098<2096		5019<4977	T01 TO B01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5019<4978	T02 TO B01	*Call
2098<2096		5019<4979	T03 TO B01	*Call
2098<2096		5019<4980	T04 TO B01	*Call
2098<2096		5019<4981	U01 TO B01	*Call
2098<2096		5019<4982	U02 TO B01	*Call
2098<2096		5019<4983	U03 TO B01	*Call
2098<2096		5019<4984	U04 TO B01	*Call
2098<2096		5019<4985	V01 TO B01	*Call
2098<2096		5019<4986	V02 TO B01	*Call
2098<2096		5019<4987	V03 TO B01	*Call
2098<2096		5019<4988	V04 TO B01	*Call
2098<2096		5019<4989	W01 TO B01	*Call
2098<2096		5019<4990	W02 TO B01	*Call
2098<2096		5019<4991	W03 TO B01	*Call
2098<2096		5019<4992	W04 TO B01	*Call
2098<2096		5019<4993	X01 TO B01	*Call
2098<2096		5019<4994	X02 TO B01	*Call
2098<2096		5019<4995	X03 TO B01	*Call
2098<2096		5019<4996	X04 TO B01	*Call
2098<2096		5019<4997	Y01 TO B01	*Call
2098<2096		5019<4998	Y02 TO B01	*Call
2098<2096		5019<4999	Y03 TO B01	*Call
2098<2096		5019<5000	Y04 TO B01	*Call
2098<2096		5019<5001	Z01 TO B01	*Call
2098<2096		5019<5002	Z02 TO B01	*Call
2098<2096		5019<5003	Z03 TO B01	*Call
2098<2096		5019<5004	Z04 TO B01	*Call
2098<2096		5020<4900	Z00 TO B02	*Call
2098<2096		5020<4901	A01 TO B02	*Call
2098<2096		5020<4902	A02 TO B02	*Call
2098<2096		5020<4903	A03 TO B02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5020<4905	B01 TO B02	*Call
2098<2096		5020<4906	B02 TO B02	*Call
2098<2096		5020<4907	B03 TO B02	*Call
2098<2096		5020<4909	C01 TO B02	*Call
2098<2096		5020<4910	C02 TO B02	*Call
2098<2096		5020<4911	C03 TO B02	*Call
2098<2096		5020<4913	D01 TO B02	*Call
2098<2096		5020<4914	D02 TO B02	*Call
2098<2096		5020<4915	D03 TO B02	*Call
2098<2096		5020<4917	E01 TO B02	*Call
2098<2096		5020<4918	E02 TO B02	*Call
2098<2096		5020<4921	F01 TO B02	*Call
2098<2096		5020<4922	F02 TO B02	*Call
2098<2096		5020<4925	G01 TO B02	*Call
2098<2096		5020<4929	H01 TO B02	*Call
2098<2096		5020<4933	I01 TO B02	*Call
2098<2096		5020<4937	J01 TO B02	*Call
2098<2096		5020<4944	K04 TO B02	*Call
2098<2096		5020<4947	L03 TO B02	*Call
2098<2096		5020<4948	L04 TO B02	*Call
2098<2096		5020<4951	M03 TO B02	*Call
2098<2096		5020<4952	M04 TO B02	*Call
2098<2096		5020<4954	N02 TO B02	*Call
2098<2096		5020<4955	N03 TO B02	*Call
2098<2096		5020<4956	N04 TO B02	*Call
2098<2096		5020<4958	O02 TO B02	*Call
2098<2096		5020<4959	O03 TO B02	*Call
2098<2096		5020<4960	O04 TO B02	*Call
2098<2096		5020<4962	P02 TO B02	*Call
2098<2096		5020<4963	P03 TO B02	*Call
2098<2096		5020<4964	P04 TO B02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5020<4966	Q02 TO B02	*Call
2098<2096		5020<4967	Q03 TO B02	*Call
2098<2096		5020<4968	Q04 TO B02	*Call
2098<2096		5020<4969	R01 TO B02	*Call
2098<2096		5020<4970	R02 TO B02	*Call
2098<2096		5020<4971	R03 TO B02	*Call
2098<2096		5020<4972	R04 TO B02	*Call
2098<2096		5020<4973	S01 TO B02	*Call
2098<2096		5020<4974	S02 TO B02	*Call
2098<2096		5020<4975	S03 TO B02	*Call
2098<2096		5020<4976	S04 TO B02	*Call
2098<2096		5020<4977	T01 TO B02	*Call
2098<2096		5020<4978	T02 TO B02	*Call
2098<2096		5020<4979	T03 TO B02	*Call
2098<2096		5020<4980	T04 TO B02	*Call
2098<2096		5020<4981	U01 TO B02	*Call
2098<2096		5020<4982	U02 TO B02	*Call
2098<2096		5020<4983	U03 TO B02	*Call
2098<2096		5020<4984	U04 TO B02	*Call
2098<2096		5020<4985	V01 TO B02	*Call
2098<2096		5020<4986	V02 TO B02	*Call
2098<2096		5020<4987	V03 TO B02	*Call
2098<2096		5020<4988	V04 TO B02	*Call
2098<2096		5020<4989	W01 TO B02	*Call
2098<2096		5020<4990	W02 TO B02	*Call
2098<2096		5020<4991	W03 TO B02	*Call
2098<2096		5020<4992	W04 TO B02	*Call
2098<2096		5020<4993	X01 TO B02	*Call
2098<2096		5020<4994	X02 TO B02	*Call
2098<2096		5020<4995	X03 TO B02	*Call
2098<2096		5020<4996	X04 TO B02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5020<4997	Y01 TO B02	*Call
2098<2096		5020<4998	Y02 TO B02	*Call
2098<2096		5020<4999	Y03 TO B02	*Call
2098<2096		5020<5000	Y04 TO B02	*Call
2098<2096		5020<5001	Z01 TO B02	*Call
2098<2096		5020<5002	Z02 TO B02	*Call
2098<2096		5020<5003	Z03 TO B02	*Call
2098<2096		5020<5004	Z04 TO B02	*Call
2098<2096		5021<4900	Z00 TO B03	*Call
2098<2096		5021<4901	A01 TO B03	*Call
2098<2096		5021<4902	A02 TO B03	*Call
2098<2096		5021<4903	A03 TO B03	*Call
2098<2096		5021<4905	B01 TO B03	*Call
2098<2096		5021<4906	B02 TO B03	*Call
2098<2096		5021<4907	B03 TO B03	*Call
2098<2096		5021<4909	C01 TO B03	*Call
2098<2096		5021<4910	C02 TO B03	*Call
2098<2096		5021<4911	C03 TO B03	*Call
2098<2096		5021<4913	D01 TO B03	*Call
2098<2096		5021<4914	D02 TO B03	*Call
2098<2096		5021<4915	D03 TO B03	*Call
2098<2096		5021<4917	E01 TO B03	*Call
2098<2096		5021<4918	E02 TO B03	*Call
2098<2096		5021<4921	F01 TO B03	*Call
2098<2096		5021<4922	F02 TO B03	*Call
2098<2096		5021<4925	G01 TO B03	*Call
2098<2096		5021<4929	H01 TO B03	*Call
2098<2096		5021<4933	I01 TO B03	*Call
2098<2096		5021<4937	J01 TO B03	*Call
2098<2096		5021<4944	K04 TO B03	*Call
2098<2096		5021<4947	L03 TO B03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5021<4948	L04 TO B03	*Call
2098<2096		5021<4951	M03 TO B03	*Call
2098<2096		5021<4952	M04 TO B03	*Call
2098<2096		5021<4954	N02 TO B03	*Call
2098<2096		5021<4955	N03 TO B03	*Call
2098<2096		5021<4956	N04 TO B03	*Call
2098<2096		5021<4958	O02 TO B03	*Call
2098<2096		5021<4959	O03 TO B03	*Call
2098<2096		5021<4960	O04 TO B03	*Call
2098<2096		5021<4962	P02 TO B03	*Call
2098<2096		5021<4963	P03 TO B03	*Call
2098<2096		5021<4964	P04 TO B03	*Call
2098<2096		5021<4966	Q02 TO B03	*Call
2098<2096		5021<4967	Q03 TO B03	*Call
2098<2096		5021<4968	Q04 TO B03	*Call
2098<2096		5021<4969	R01 TO B03	*Call
2098<2096		5021<4970	R02 TO B03	*Call
2098<2096		5021<4971	R03 TO B03	*Call
2098<2096		5021<4972	R04 TO B03	*Call
2098<2096		5021<4973	S01 TO B03	*Call
2098<2096		5021<4974	S02 TO B03	*Call
2098<2096		5021<4975	S03 TO B03	*Call
2098<2096		5021<4976	S04 TO B03	*Call
2098<2096		5021<4977	T01 TO B03	*Call
2098<2096		5021<4978	T02 TO B03	*Call
2098<2096		5021<4979	T03 TO B03	*Call
2098<2096		5021<4980	T04 TO B03	*Call
2098<2096		5021<4981	U01 TO B03	*Call
2098<2096		5021<4982	U02 TO B03	*Call
2098<2096		5021<4983	U03 TO B03	*Call
2098<2096		5021<4984	U04 TO B03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5021<4985	V01 TO B03	*Call
2098<2096		5021<4986	V02 TO B03	*Call
2098<2096		5021<4987	V03 TO B03	*Call
2098<2096		5021<4988	V04 TO B03	*Call
2098<2096		5021<4989	W01 TO B03	*Call
2098<2096		5021<4990	W02 TO B03	*Call
2098<2096		5021<4991	W03 TO B03	*Call
2098<2096		5021<4992	W04 TO B03	*Call
2098<2096		5021<4993	X01 TO B03	*Call
2098<2096		5021<4994	X02 TO B03	*Call
2098<2096		5021<4995	X03 TO B03	*Call
2098<2096		5021<4996	X04 TO B03	*Call
2098<2096		5021<4997	Y01 TO B03	*Call
2098<2096		5021<4998	Y02 TO B03	*Call
2098<2096		5021<4999	Y03 TO B03	*Call
2098<2096		5021<5000	Y04 TO B03	*Call
2098<2096		5021<5001	Z01 TO B03	*Call
2098<2096		5021<5002	Z02 TO B03	*Call
2098<2096		5021<5003	Z03 TO B03	*Call
2098<2096		5021<5004	Z04 TO B03	*Call
2098<2096		5022<4900	Z00 TO B04	*Call
2098<2096		5022<4901	A01 TO B04	*Call
2098<2096		5022<4902	A02 TO B04	*Call
2098<2096		5022<4903	A03 TO B04	*Call
2098<2096		5022<4905	B01 TO B04	*Call
2098<2096		5022<4906	B02 TO B04	*Call
2098<2096		5022<4907	B03 TO B04	*Call
2098<2096		5022<4909	C01 TO B04	*Call
2098<2096		5022<4910	C02 TO B04	*Call
2098<2096		5022<4911	C03 TO B04	*Call
2098<2096		5022<4913	D01 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5022<4914	D02 TO B04	*Call
2098<2096		5022<4915	D03 TO B04	*Call
2098<2096		5022<4917	E01 TO B04	*Call
2098<2096		5022<4918	E02 TO B04	*Call
2098<2096		5022<4921	F01 TO B04	*Call
2098<2096		5022<4922	F02 TO B04	*Call
2098<2096		5022<4925	G01 TO B04	*Call
2098<2096		5022<4929	H01 TO B04	*Call
2098<2096		5022<4933	I01 TO B04	*Call
2098<2096		5022<4937	J01 TO B04	*Call
2098<2096		5022<4944	K04 TO B04	*Call
2098<2096		5022<4947	L03 TO B04	*Call
2098<2096		5022<4948	L04 TO B04	*Call
2098<2096		5022<4951	M03 TO B04	*Call
2098<2096		5022<4952	M04 TO B04	*Call
2098<2096		5022<4954	N02 TO B04	*Call
2098<2096		5022<4955	N03 TO B04	*Call
2098<2096		5022<4956	N04 TO B04	*Call
2098<2096		5022<4958	O02 TO B04	*Call
2098<2096		5022<4959	O03 TO B04	*Call
2098<2096		5022<4960	O04 TO B04	*Call
2098<2096		5022<4962	P02 TO B04	*Call
2098<2096		5022<4963	P03 TO B04	*Call
2098<2096		5022<4964	P04 TO B04	*Call
2098<2096		5022<4966	Q02 TO B04	*Call
2098<2096		5022<4967	Q03 TO B04	*Call
2098<2096		5022<4968	Q04 TO B04	*Call
2098<2096		5022<4969	R01 TO B04	*Call
2098<2096		5022<4970	R02 TO B04	*Call
2098<2096		5022<4971	R03 TO B04	*Call
2098<2096		5022<4972	R04 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5022<4973	S01 TO B04	*Call
2098<2096		5022<4974	S02 TO B04	*Call
2098<2096		5022<4975	S03 TO B04	*Call
2098<2096		5022<4976	S04 TO B04	*Call
2098<2096		5022<4977	T01 TO B04	*Call
2098<2096		5022<4978	T02 TO B04	*Call
2098<2096		5022<4979	T03 TO B04	*Call
2098<2096		5022<4980	T04 TO B04	*Call
2098<2096		5022<4981	U01 TO B04	*Call
2098<2096		5022<4982	U02 TO B04	*Call
2098<2096		5022<4983	U03 TO B04	*Call
2098<2096		5022<4984	U04 TO B04	*Call
2098<2096		5022<4985	V01 TO B04	*Call
2098<2096		5022<4986	V02 TO B04	*Call
2098<2096		5022<4987	V03 TO B04	*Call
2098<2096		5022<4988	V04 TO B04	*Call
2098<2096		5022<4989	W01 TO B04	*Call
2098<2096		5022<4990	W02 TO B04	*Call
2098<2096		5022<4991	W03 TO B04	*Call
2098<2096		5022<4992	W04 TO B04	*Call
2098<2096		5022<4993	X01 TO B04	*Call
2098<2096		5022<4994	X02 TO B04	*Call
2098<2096		5022<4995	X03 TO B04	*Call
2098<2096		5022<4996	X04 TO B04	*Call
2098<2096		5022<4997	Y01 TO B04	*Call
2098<2096		5022<4998	Y02 TO B04	*Call
2098<2096		5022<4999	Y03 TO B04	*Call
2098<2096		5022<5000	Y04 TO B04	*Call
2098<2096		5022<5001	Z01 TO B04	*Call
2098<2096		5022<5002	Z02 TO B04	*Call
2098<2096		5022<5003	Z03 TO B04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5022<5004	Z04 TO B04	*Call
2098<2096		5023<4900	Z00 TO B05	*Call
2098<2096		5023<4901	A01 TO B05	*Call
2098<2096		5023<4902	A02 TO B05	*Call
2098<2096		5023<4903	A03 TO B05	*Call
2098<2096		5023<4905	B01 TO B05	*Call
2098<2096		5023<4906	B02 TO B05	*Call
2098<2096		5023<4907	B03 TO B05	*Call
2098<2096		5023<4909	C01 TO B05	*Call
2098<2096		5023<4910	C02 TO B05	*Call
2098<2096		5023<4911	C03 TO B05	*Call
2098<2096		5023<4913	D01 TO B05	*Call
2098<2096		5023<4914	D02 TO B05	*Call
2098<2096		5023<4915	D03 TO B05	*Call
2098<2096		5023<4917	E01 TO B05	*Call
2098<2096		5023<4918	E02 TO B05	*Call
2098<2096		5023<4921	F01 TO B05	*Call
2098<2096		5023<4922	F02 TO B05	*Call
2098<2096		5023<4925	G01 TO B05	*Call
2098<2096		5023<4929	H01 TO B05	*Call
2098<2096		5023<4933	I01 TO B05	*Call
2098<2096		5023<4937	J01 TO B05	*Call
2098<2096		5023<4944	K04 TO B05	*Call
2098<2096		5023<4947	L03 TO B05	*Call
2098<2096		5023<4948	L04 TO B05	*Call
2098<2096		5023<4951	M03 TO B05	*Call
2098<2096		5023<4952	M04 TO B05	*Call
2098<2096		5023<4954	N02 TO B05	*Call
2098<2096		5023<4955	N03 TO B05	*Call
2098<2096		5023<4956	N04 TO B05	*Call
2098<2096		5023<4958	O02 TO B05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5023<4959	O03 TO B05	*Call
2098<2096		5023<4960	O04 TO B05	*Call
2098<2096		5023<4962	P02 TO B05	*Call
2098<2096		5023<4963	P03 TO B05	*Call
2098<2096		5023<4964	P04 TO B05	*Call
2098<2096		5023<4966	Q02 TO B05	*Call
2098<2096		5023<4967	Q03 TO B05	*Call
2098<2096		5023<4968	Q04 TO B05	*Call
2098<2096		5023<4969	R01 TO B05	*Call
2098<2096		5023<4970	R02 TO B05	*Call
2098<2096		5023<4971	R03 TO B05	*Call
2098<2096		5023<4972	R04 TO B05	*Call
2098<2096		5023<4973	S01 TO B05	*Call
2098<2096		5023<4974	S02 TO B05	*Call
2098<2096		5023<4975	S03 TO B05	*Call
2098<2096		5023<4976	S04 TO B05	*Call
2098<2096		5023<4977	T01 TO B05	*Call
2098<2096		5023<4978	T02 TO B05	*Call
2098<2096		5023<4979	T03 TO B05	*Call
2098<2096		5023<4980	T04 TO B05	*Call
2098<2096		5023<4981	U01 TO B05	*Call
2098<2096		5023<4982	U02 TO B05	*Call
2098<2096		5023<4983	U03 TO B05	*Call
2098<2096		5023<4984	U04 TO B05	*Call
2098<2096		5023<4985	V01 TO B05	*Call
2098<2096		5023<4986	V02 TO B05	*Call
2098<2096		5023<4987	V03 TO B05	*Call
2098<2096		5023<4988	V04 TO B05	*Call
2098<2096		5023<4989	W01 TO B05	*Call
2098<2096		5023<4990	W02 TO B05	*Call
2098<2096		5023<4991	W03 TO B05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5023<4992	W04 TO B05	*Call
2098<2096		5023<4993	X01 TO B05	*Call
2098<2096		5023<4994	X02 TO B05	*Call
2098<2096		5023<4995	X03 TO B05	*Call
2098<2096		5023<4996	X04 TO B05	*Call
2098<2096		5023<4997	Y01 TO B05	*Call
2098<2096		5023<4998	Y02 TO B05	*Call
2098<2096		5023<4999	Y03 TO B05	*Call
2098<2096		5023<5000	Y04 TO B05	*Call
2098<2096		5023<5001	Z01 TO B05	*Call
2098<2096		5023<5002	Z02 TO B05	*Call
2098<2096		5023<5003	Z03 TO B05	*Call
2098<2096		5023<5004	Z04 TO B05	*Call
2098<2096		5024<4900	Z00 TO C01	*Call
2098<2096		5024<4901	A01 TO C01	*Call
2098<2096		5024<4902	A02 TO C01	*Call
2098<2096		5024<4903	A03 TO C01	*Call
2098<2096		5024<4905	B01 TO C01	*Call
2098<2096		5024<4906	B02 TO C01	*Call
2098<2096		5024<4907	B03 TO C01	*Call
2098<2096		5024<4909	C01 TO C01	*Call
2098<2096		5024<4910	C02 TO C01	*Call
2098<2096		5024<4911	C03 TO C01	*Call
2098<2096		5024<4913	D01 TO C01	*Call
2098<2096		5024<4914	D02 TO C01	*Call
2098<2096		5024<4915	D03 TO C01	*Call
2098<2096		5024<4917	E01 TO C01	*Call
2098<2096		5024<4918	E02 TO C01	*Call
2098<2096		5024<4921	F01 TO C01	*Call
2098<2096		5024<4922	F02 TO C01	*Call
2098<2096		5024<4925	G01 TO C01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5024<4929	H01 TO C01	*Call
2098<2096		5024<4933	I01 TO C01	*Call
2098<2096		5024<4937	J01 TO C01	*Call
2098<2096		5024<4944	K04 TO C01	*Call
2098<2096		5024<4947	L03 TO C01	*Call
2098<2096		5024<4948	L04 TO C01	*Call
2098<2096		5024<4951	M03 TO C01	*Call
2098<2096		5024<4952	M04 TO C01	*Call
2098<2096		5024<4954	N02 TO C01	*Call
2098<2096		5024<4955	N03 TO C01	*Call
2098<2096		5024<4956	N04 TO C01	*Call
2098<2096		5024<4958	O02 TO C01	*Call
2098<2096		5024<4959	O03 TO C01	*Call
2098<2096		5024<4960	O04 TO C01	*Call
2098<2096		5024<4962	P02 TO C01	*Call
2098<2096		5024<4963	P03 TO C01	*Call
2098<2096		5024<4964	P04 TO C01	*Call
2098<2096		5024<4966	Q02 TO C01	*Call
2098<2096		5024<4967	Q03 TO C01	*Call
2098<2096		5024<4968	Q04 TO C01	*Call
2098<2096		5024<4969	R01 TO C01	*Call
2098<2096		5024<4970	R02 TO C01	*Call
2098<2096		5024<4971	R03 TO C01	*Call
2098<2096		5024<4972	R04 TO C01	*Call
2098<2096		5024<4973	S01 TO C01	*Call
2098<2096		5024<4974	S02 TO C01	*Call
2098<2096		5024<4975	S03 TO C01	*Call
2098<2096		5024<4976	S04 TO C01	*Call
2098<2096		5024<4977	T01 TO C01	*Call
2098<2096		5024<4978	T02 TO C01	*Call
2098<2096		5024<4979	T03 TO C01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5024<4980	T04 TO C01	*Call
2098<2096		5024<4981	U01 TO C01	*Call
2098<2096		5024<4982	U02 TO C01	*Call
2098<2096		5024<4983	U03 TO C01	*Call
2098<2096		5024<4984	U04 TO C01	*Call
2098<2096		5024<4985	V01 TO C01	*Call
2098<2096		5024<4986	V02 TO C01	*Call
2098<2096		5024<4987	V03 TO C01	*Call
2098<2096		5024<4988	V04 TO C01	*Call
2098<2096		5024<4989	W01 TO C01	*Call
2098<2096		5024<4990	W02 TO C01	*Call
2098<2096		5024<4991	W03 TO C01	*Call
2098<2096		5024<4992	W04 TO C01	*Call
2098<2096		5024<4993	X01 TO C01	*Call
2098<2096		5024<4994	X02 TO C01	*Call
2098<2096		5024<4995	X03 TO C01	*Call
2098<2096		5024<4996	X04 TO C01	*Call
2098<2096		5024<4997	Y01 TO C01	*Call
2098<2096		5024<4998	Y02 TO C01	*Call
2098<2096		5024<4999	Y03 TO C01	*Call
2098<2096		5024<5000	Y04 TO C01	*Call
2098<2096		5024<5001	Z01 TO C01	*Call
2098<2096		5024<5002	Z02 TO C01	*Call
2098<2096		5024<5003	Z03 TO C01	*Call
2098<2096		5024<5004	Z04 TO C01	*Call
2098<2096		5025<4900	Z00 TO C02	*Call
2098<2096		5025<4901	A01 TO C02	*Call
2098<2096		5025<4902	A02 TO C02	*Call
2098<2096		5025<4903	A03 TO C02	*Call
2098<2096		5025<4905	B01 TO C02	*Call
2098<2096		5025<4906	B02 TO C02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5025<4907	B03 TO C02	*Call
2098<2096		5025<4909	C01 TO C02	*Call
2098<2096		5025<4910	C02 TO C02	*Call
2098<2096		5025<4911	C03 TO C02	*Call
2098<2096		5025<4913	D01 TO C02	*Call
2098<2096		5025<4914	D02 TO C02	*Call
2098<2096		5025<4915	D03 TO C02	*Call
2098<2096		5025<4917	E01 TO C02	*Call
2098<2096		5025<4918	E02 TO C02	*Call
2098<2096		5025<4921	F01 TO C02	*Call
2098<2096		5025<4922	F02 TO C02	*Call
2098<2096		5025<4925	G01 TO C02	*Call
2098<2096		5025<4929	H01 TO C02	*Call
2098<2096		5025<4933	I01 TO C02	*Call
2098<2096		5025<4937	J01 TO C02	*Call
2098<2096		5025<4944	K04 TO C02	*Call
2098<2096		5025<4947	L03 TO C02	*Call
2098<2096		5025<4948	L04 TO C02	*Call
2098<2096		5025<4951	M03 TO C02	*Call
2098<2096		5025<4952	M04 TO C02	*Call
2098<2096		5025<4954	N02 TO C02	*Call
2098<2096		5025<4955	N03 TO C02	*Call
2098<2096		5025<4956	N04 TO C02	*Call
2098<2096		5025<4958	O02 TO C02	*Call
2098<2096		5025<4959	O03 TO C02	*Call
2098<2096		5025<4960	O04 TO C02	*Call
2098<2096		5025<4962	P02 TO C02	*Call
2098<2096		5025<4963	P03 TO C02	*Call
2098<2096		5025<4964	P04 TO C02	*Call
2098<2096		5025<4966	Q02 TO C02	*Call
2098<2096		5025<4967	Q03 TO C02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5025<4968	Q04 TO C02	*Call
2098<2096		5025<4969	R01 TO C02	*Call
2098<2096		5025<4970	R02 TO C02	*Call
2098<2096		5025<4971	R03 TO C02	*Call
2098<2096		5025<4972	R04 TO C02	*Call
2098<2096		5025<4973	S01 TO C02	*Call
2098<2096		5025<4974	S02 TO C02	*Call
2098<2096		5025<4975	S03 TO C02	*Call
2098<2096		5025<4976	S04 TO C02	*Call
2098<2096		5025<4977	T01 TO C02	*Call
2098<2096		5025<4978	T02 TO C02	*Call
2098<2096		5025<4979	T03 TO C02	*Call
2098<2096		5025<4980	T04 TO C02	*Call
2098<2096		5025<4981	U01 TO C02	*Call
2098<2096		5025<4982	U02 TO C02	*Call
2098<2096		5025<4983	U03 TO C02	*Call
2098<2096		5025<4984	U04 TO C02	*Call
2098<2096		5025<4985	V01 TO C02	*Call
2098<2096		5025<4986	V02 TO C02	*Call
2098<2096		5025<4987	V03 TO C02	*Call
2098<2096		5025<4988	V04 TO C02	*Call
2098<2096		5025<4989	W01 TO C02	*Call
2098<2096		5025<4990	W02 TO C02	*Call
2098<2096		5025<4991	W03 TO C02	*Call
2098<2096		5025<4992	W04 TO C02	*Call
2098<2096		5025<4993	X01 TO C02	*Call
2098<2096		5025<4994	X02 TO C02	*Call
2098<2096		5025<4995	X03 TO C02	*Call
2098<2096		5025<4996	X04 TO C02	*Call
2098<2096		5025<4997	Y01 TO C02	*Call
2098<2096		5025<4998	Y02 TO C02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5025<4999	Y03 TO C02	*Call
2098<2096		5025<5000	Y04 TO C02	*Call
2098<2096		5025<5001	Z01 TO C02	*Call
2098<2096		5025<5002	Z02 TO C02	*Call
2098<2096		5025<5003	Z03 TO C02	*Call
2098<2096		5025<5004	Z04 TO C02	*Call
2098<2096		5026<4900	Z00 TO C03	*Call
2098<2096		5026<4901	A01 TO C03	*Call
2098<2096		5026<4902	A02 TO C03	*Call
2098<2096		5026<4903	A03 TO C03	*Call
2098<2096		5026<4905	B01 TO C03	*Call
2098<2096		5026<4906	B02 TO C03	*Call
2098<2096		5026<4907	B03 TO C03	*Call
2098<2096		5026<4909	C01 TO C03	*Call
2098<2096		5026<4910	C02 TO C03	*Call
2098<2096		5026<4911	C03 TO C03	*Call
2098<2096		5026<4913	D01 TO C03	*Call
2098<2096		5026<4914	D02 TO C03	*Call
2098<2096		5026<4915	D03 TO C03	*Call
2098<2096		5026<4917	E01 TO C03	*Call
2098<2096		5026<4918	E02 TO C03	*Call
2098<2096		5026<4921	F01 TO C03	*Call
2098<2096		5026<4922	F02 TO C03	*Call
2098<2096		5026<4925	G01 TO C03	*Call
2098<2096		5026<4929	H01 TO C03	*Call
2098<2096		5026<4933	I01 TO C03	*Call
2098<2096		5026<4937	J01 TO C03	*Call
2098<2096		5026<4944	K04 TO C03	*Call
2098<2096		5026<4947	L03 TO C03	*Call
2098<2096		5026<4948	L04 TO C03	*Call
2098<2096		5026<4951	M03 TO C03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5026<4952	M04 TO C03	*Call
2098<2096		5026<4954	N02 TO C03	*Call
2098<2096		5026<4955	N03 TO C03	*Call
2098<2096		5026<4956	N04 TO C03	*Call
2098<2096		5026<4958	O02 TO C03	*Call
2098<2096		5026<4959	O03 TO C03	*Call
2098<2096		5026<4960	O04 TO C03	*Call
2098<2096		5026<4962	P02 TO C03	*Call
2098<2096		5026<4963	P03 TO C03	*Call
2098<2096		5026<4964	P04 TO C03	*Call
2098<2096		5026<4966	Q02 TO C03	*Call
2098<2096		5026<4967	Q03 TO C03	*Call
2098<2096		5026<4968	Q04 TO C03	*Call
2098<2096		5026<4969	R01 TO C03	*Call
2098<2096		5026<4970	R02 TO C03	*Call
2098<2096		5026<4971	R03 TO C03	*Call
2098<2096		5026<4972	R04 TO C03	*Call
2098<2096		5026<4973	S01 TO C03	*Call
2098<2096		5026<4974	S02 TO C03	*Call
2098<2096		5026<4975	S03 TO C03	*Call
2098<2096		5026<4976	S04 TO C03	*Call
2098<2096		5026<4977	T01 TO C03	*Call
2098<2096		5026<4978	T02 TO C03	*Call
2098<2096		5026<4979	T03 TO C03	*Call
2098<2096		5026<4980	T04 TO C03	*Call
2098<2096		5026<4981	U01 TO C03	*Call
2098<2096		5026<4982	U02 TO C03	*Call
2098<2096		5026<4983	U03 TO C03	*Call
2098<2096		5026<4984	U04 TO C03	*Call
2098<2096		5026<4985	V01 TO C03	*Call
2098<2096		5026<4986	V02 TO C03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5026<4987	V03 TO C03	*Call
2098<2096		5026<4988	V04 TO C03	*Call
2098<2096		5026<4989	W01 TO C03	*Call
2098<2096		5026<4990	W02 TO C03	*Call
2098<2096		5026<4991	W03 TO C03	*Call
2098<2096		5026<4992	W04 TO C03	*Call
2098<2096		5026<4993	X01 TO C03	*Call
2098<2096		5026<4994	X02 TO C03	*Call
2098<2096		5026<4995	X03 TO C03	*Call
2098<2096		5026<4996	X04 TO C03	*Call
2098<2096		5026<4997	Y01 TO C03	*Call
2098<2096		5026<4998	Y02 TO C03	*Call
2098<2096		5026<4999	Y03 TO C03	*Call
2098<2096		5026<5000	Y04 TO C03	*Call
2098<2096		5026<5001	Z01 TO C03	*Call
2098<2096		5026<5002	Z02 TO C03	*Call
2098<2096		5026<5003	Z03 TO C03	*Call
2098<2096		5026<5004	Z04 TO C03	*Call
2098<2096		5027<4900	Z00 TO C04	*Call
2098<2096		5027<4901	A01 TO C04	*Call
2098<2096		5027<4902	A02 TO C04	*Call
2098<2096		5027<4903	A03 TO C04	*Call
2098<2096		5027<4905	B01 TO C04	*Call
2098<2096		5027<4906	B02 TO C04	*Call
2098<2096		5027<4907	B03 TO C04	*Call
2098<2096		5027<4909	C01 TO C04	*Call
2098<2096		5027<4910	C02 TO C04	*Call
2098<2096		5027<4911	C03 TO C04	*Call
2098<2096		5027<4913	D01 TO C04	*Call
2098<2096		5027<4914	D02 TO C04	*Call
2098<2096		5027<4915	D03 TO C04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5027<4917	E01 TO C04	*Call
2098<2096		5027<4918	E02 TO C04	*Call
2098<2096		5027<4921	F01 TO C04	*Call
2098<2096		5027<4922	F02 TO C04	*Call
2098<2096		5027<4925	G01 TO C04	*Call
2098<2096		5027<4929	H01 TO C04	*Call
2098<2096		5027<4933	I01 TO C04	*Call
2098<2096		5027<4937	J01 TO C04	*Call
2098<2096		5027<4944	K04 TO C04	*Call
2098<2096		5027<4947	L03 TO C04	*Call
2098<2096		5027<4948	L04 TO C04	*Call
2098<2096		5027<4951	M03 TO C04	*Call
2098<2096		5027<4952	M04 TO C04	*Call
2098<2096		5027<4954	N02 TO C04	*Call
2098<2096		5027<4955	N03 TO C04	*Call
2098<2096		5027<4956	N04 TO C04	*Call
2098<2096		5027<4958	O02 TO C04	*Call
2098<2096		5027<4959	O03 TO C04	*Call
2098<2096		5027<4960	O04 TO C04	*Call
2098<2096		5027<4962	P02 TO C04	*Call
2098<2096		5027<4963	P03 TO C04	*Call
2098<2096		5027<4964	P04 TO C04	*Call
2098<2096		5027<4966	Q02 TO C04	*Call
2098<2096		5027<4967	Q03 TO C04	*Call
2098<2096		5027<4968	Q04 TO C04	*Call
2098<2096		5027<4969	R01 TO C04	*Call
2098<2096		5027<4970	R02 TO C04	*Call
2098<2096		5027<4971	R03 TO C04	*Call
2098<2096		5027<4972	R04 TO C04	*Call
2098<2096		5027<4973	S01 TO C04	*Call
2098<2096		5027<4974	S02 TO C04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5027<4975	S03 TO C04	*Call
2098<2096		5027<4976	S04 TO C04	*Call
2098<2096		5027<4977	T01 TO C04	*Call
2098<2096		5027<4978	T02 TO C04	*Call
2098<2096		5027<4979	T03 TO C04	*Call
2098<2096		5027<4980	T04 TO C04	*Call
2098<2096		5027<4981	U01 TO C04	*Call
2098<2096		5027<4982	U02 TO C04	*Call
2098<2096		5027<4983	U03 TO C04	*Call
2098<2096		5027<4984	U04 TO C04	*Call
2098<2096		5027<4985	V01 TO C04	*Call
2098<2096		5027<4986	V02 TO C04	*Call
2098<2096		5027<4987	V03 TO C04	*Call
2098<2096		5027<4988	V04 TO C04	*Call
2098<2096		5027<4989	W01 TO C04	*Call
2098<2096		5027<4990	W02 TO C04	*Call
2098<2096		5027<4991	W03 TO C04	*Call
2098<2096		5027<4992	W04 TO C04	*Call
2098<2096		5027<4993	X01 TO C04	*Call
2098<2096		5027<4994	X02 TO C04	*Call
2098<2096		5027<4995	X03 TO C04	*Call
2098<2096		5027<4996	X04 TO C04	*Call
2098<2096		5027<4997	Y01 TO C04	*Call
2098<2096		5027<4998	Y02 TO C04	*Call
2098<2096		5027<4999	Y03 TO C04	*Call
2098<2096		5027<5000	Y04 TO C04	*Call
2098<2096		5027<5001	Z01 TO C04	*Call
2098<2096		5027<5002	Z02 TO C04	*Call
2098<2096		5027<5003	Z03 TO C04	*Call
2098<2096		5027<5004	Z04 TO C04	*Call
2098<2096		5028<4900	Z00 TO C05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5028<4901	A01 TO C05	*Call
2098<2096		5028<4902	A02 TO C05	*Call
2098<2096		5028<4903	A03 TO C05	*Call
2098<2096		5028<4905	B01 TO C05	*Call
2098<2096		5028<4906	B02 TO C05	*Call
2098<2096		5028<4907	B03 TO C05	*Call
2098<2096		5028<4909	C01 TO C05	*Call
2098<2096		5028<4910	C02 TO C05	*Call
2098<2096		5028<4911	C03 TO C05	*Call
2098<2096		5028<4913	D01 TO C05	*Call
2098<2096		5028<4914	D02 TO C05	*Call
2098<2096		5028<4915	D03 TO C05	*Call
2098<2096		5028<4917	E01 TO C05	*Call
2098<2096		5028<4918	E02 TO C05	*Call
2098<2096		5028<4921	F01 TO C05	*Call
2098<2096		5028<4922	F02 TO C05	*Call
2098<2096		5028<4925	G01 TO C05	*Call
2098<2096		5028<4929	H01 TO C05	*Call
2098<2096		5028<4933	I01 TO C05	*Call
2098<2096		5028<4937	J01 TO C05	*Call
2098<2096		5028<4944	K04 TO C05	*Call
2098<2096		5028<4947	L03 TO C05	*Call
2098<2096		5028<4948	L04 TO C05	*Call
2098<2096		5028<4951	M03 TO C05	*Call
2098<2096		5028<4952	M04 TO C05	*Call
2098<2096		5028<4954	N02 TO C05	*Call
2098<2096		5028<4955	N03 TO C05	*Call
2098<2096		5028<4956	N04 TO C05	*Call
2098<2096		5028<4958	O02 TO C05	*Call
2098<2096		5028<4959	O03 TO C05	*Call
2098<2096		5028<4960	O04 TO C05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5028<4962	P02 TO C05	*Call
2098<2096		5028<4963	P03 TO C05	*Call
2098<2096		5028<4964	P04 TO C05	*Call
2098<2096		5028<4966	Q02 TO C05	*Call
2098<2096		5028<4967	Q03 TO C05	*Call
2098<2096		5028<4968	Q04 TO C05	*Call
2098<2096		5028<4969	R01 TO C05	*Call
2098<2096		5028<4970	R02 TO C05	*Call
2098<2096		5028<4971	R03 TO C05	*Call
2098<2096		5028<4972	R04 TO C05	*Call
2098<2096		5028<4973	S01 TO C05	*Call
2098<2096		5028<4974	S02 TO C05	*Call
2098<2096		5028<4975	S03 TO C05	*Call
2098<2096		5028<4976	S04 TO C05	*Call
2098<2096		5028<4977	T01 TO C05	*Call
2098<2096		5028<4978	T02 TO C05	*Call
2098<2096		5028<4979	T03 TO C05	*Call
2098<2096		5028<4980	T04 TO C05	*Call
2098<2096		5028<4981	U01 TO C05	*Call
2098<2096		5028<4982	U02 TO C05	*Call
2098<2096		5028<4983	U03 TO C05	*Call
2098<2096		5028<4984	U04 TO C05	*Call
2098<2096		5028<4985	V01 TO C05	*Call
2098<2096		5028<4986	V02 TO C05	*Call
2098<2096		5028<4987	V03 TO C05	*Call
2098<2096		5028<4988	V04 TO C05	*Call
2098<2096		5028<4989	W01 TO C05	*Call
2098<2096		5028<4990	W02 TO C05	*Call
2098<2096		5028<4991	W03 TO C05	*Call
2098<2096		5028<4992	W04 TO C05	*Call
2098<2096		5028<4993	X01 TO C05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5028<4994	X02 TO C05	*Call
2098<2096		5028<4995	X03 TO C05	*Call
2098<2096		5028<4996	X04 TO C05	*Call
2098<2096		5028<4997	Y01 TO C05	*Call
2098<2096		5028<4998	Y02 TO C05	*Call
2098<2096		5028<4999	Y03 TO C05	*Call
2098<2096		5028<5000	Y04 TO C05	*Call
2098<2096		5028<5001	Z01 TO C05	*Call
2098<2096		5028<5002	Z02 TO C05	*Call
2098<2096		5028<5003	Z03 TO C05	*Call
2098<2096		5028<5004	Z04 TO C05	*Call
2098<2096		5029<4900	Z00 TO D01	*Call
2098<2096		5029<4901	A01 TO D01	*Call
2098<2096		5029<4902	A02 TO D01	*Call
2098<2096		5029<4903	A03 TO D01	*Call
2098<2096		5029<4905	B01 TO D01	*Call
2098<2096		5029<4906	B02 TO D01	*Call
2098<2096		5029<4907	B03 TO D01	*Call
2098<2096		5029<4909	C01 TO D01	*Call
2098<2096		5029<4910	C02 TO D01	*Call
2098<2096		5029<4911	C03 TO D01	*Call
2098<2096		5029<4913	D01 TO D01	*Call
2098<2096		5029<4914	D02 TO D01	*Call
2098<2096		5029<4915	D03 TO D01	*Call
2098<2096		5029<4917	E01 TO D01	*Call
2098<2096		5029<4918	E02 TO D01	*Call
2098<2096		5029<4921	F01 TO D01	*Call
2098<2096		5029<4922	F02 TO D01	*Call
2098<2096		5029<4925	G01 TO D01	*Call
2098<2096		5029<4929	H01 TO D01	*Call
2098<2096		5029<4933	I01 TO D01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5029<4937	J01 TO D01	*Call
2098<2096		5029<4944	K04 TO D01	*Call
2098<2096		5029<4947	L03 TO D01	*Call
2098<2096		5029<4948	L04 TO D01	*Call
2098<2096		5029<4951	M03 TO D01	*Call
2098<2096		5029<4952	M04 TO D01	*Call
2098<2096		5029<4954	N02 TO D01	*Call
2098<2096		5029<4955	N03 TO D01	*Call
2098<2096		5029<4956	N04 TO D01	*Call
2098<2096		5029<4958	O02 TO D01	*Call
2098<2096		5029<4959	O03 TO D01	*Call
2098<2096		5029<4960	O04 TO D01	*Call
2098<2096		5029<4962	P02 TO D01	*Call
2098<2096		5029<4963	P03 TO D01	*Call
2098<2096		5029<4964	P04 TO D01	*Call
2098<2096		5029<4966	Q02 TO D01	*Call
2098<2096		5029<4967	Q03 TO D01	*Call
2098<2096		5029<4968	Q04 TO D01	*Call
2098<2096		5029<4969	R01 TO D01	*Call
2098<2096		5029<4970	R02 TO D01	*Call
2098<2096		5029<4971	R03 TO D01	*Call
2098<2096		5029<4972	R04 TO D01	*Call
2098<2096		5029<4973	S01 TO D01	*Call
2098<2096		5029<4974	S02 TO D01	*Call
2098<2096		5029<4975	S03 TO D01	*Call
2098<2096		5029<4976	S04 TO D01	*Call
2098<2096		5029<4977	T01 TO D01	*Call
2098<2096		5029<4978	T02 TO D01	*Call
2098<2096		5029<4979	T03 TO D01	*Call
2098<2096		5029<4980	T04 TO D01	*Call
2098<2096		5029<4981	U01 TO D01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5029<4982	U02 TO D01	*Call
2098<2096		5029<4983	U03 TO D01	*Call
2098<2096		5029<4984	U04 TO D01	*Call
2098<2096		5029<4985	V01 TO D01	*Call
2098<2096		5029<4986	V02 TO D01	*Call
2098<2096		5029<4987	V03 TO D01	*Call
2098<2096		5029<4988	V04 TO D01	*Call
2098<2096		5029<4989	W01 TO D01	*Call
2098<2096		5029<4990	W02 TO D01	*Call
2098<2096		5029<4991	W03 TO D01	*Call
2098<2096		5029<4992	W04 TO D01	*Call
2098<2096		5029<4993	X01 TO D01	*Call
2098<2096		5029<4994	X02 TO D01	*Call
2098<2096		5029<4995	X03 TO D01	*Call
2098<2096		5029<4996	X04 TO D01	*Call
2098<2096		5029<4997	Y01 TO D01	*Call
2098<2096		5029<4998	Y02 TO D01	*Call
2098<2096		5029<4999	Y03 TO D01	*Call
2098<2096		5029<5000	Y04 TO D01	*Call
2098<2096		5029<5001	Z01 TO D01	*Call
2098<2096		5029<5002	Z02 TO D01	*Call
2098<2096		5029<5003	Z03 TO D01	*Call
2098<2096		5029<5004	Z04 TO D01	*Call
2098<2096		5030<4900	Z00 TO D02	*Call
2098<2096		5030<4901	A01 TO D02	*Call
2098<2096		5030<4902	A02 TO D02	*Call
2098<2096		5030<4903	A03 TO D02	*Call
2098<2096		5030<4905	B01 TO D02	*Call
2098<2096		5030<4906	B02 TO D02	*Call
2098<2096		5030<4907	B03 TO D02	*Call
2098<2096		5030<4909	C01 TO D02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5030<4910	C02 TO D02	*Call
2098<2096		5030<4911	C03 TO D02	*Call
2098<2096		5030<4913	D01 TO D02	*Call
2098<2096		5030<4914	D02 TO D02	*Call
2098<2096		5030<4915	D03 TO D02	*Call
2098<2096		5030<4917	E01 TO D02	*Call
2098<2096		5030<4918	E02 TO D02	*Call
2098<2096		5030<4921	F01 TO D02	*Call
2098<2096		5030<4922	F02 TO D02	*Call
2098<2096		5030<4925	G01 TO D02	*Call
2098<2096		5030<4929	H01 TO D02	*Call
2098<2096		5030<4933	I01 TO D02	*Call
2098<2096		5030<4937	J01 TO D02	*Call
2098<2096		5030<4944	K04 TO D02	*Call
2098<2096		5030<4947	L03 TO D02	*Call
2098<2096		5030<4948	L04 TO D02	*Call
2098<2096		5030<4951	M03 TO D02	*Call
2098<2096		5030<4952	M04 TO D02	*Call
2098<2096		5030<4954	N02 TO D02	*Call
2098<2096		5030<4955	N03 TO D02	*Call
2098<2096		5030<4956	N04 TO D02	*Call
2098<2096		5030<4958	O02 TO D02	*Call
2098<2096		5030<4959	O03 TO D02	*Call
2098<2096		5030<4960	O04 TO D02	*Call
2098<2096		5030<4962	P02 TO D02	*Call
2098<2096		5030<4963	P03 TO D02	*Call
2098<2096		5030<4964	P04 TO D02	*Call
2098<2096		5030<4966	Q02 TO D02	*Call
2098<2096		5030<4967	Q03 TO D02	*Call
2098<2096		5030<4968	Q04 TO D02	*Call
2098<2096		5030<4969	R01 TO D02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5030<4970	R02 TO D02	*Call
2098<2096		5030<4971	R03 TO D02	*Call
2098<2096		5030<4972	R04 TO D02	*Call
2098<2096		5030<4973	S01 TO D02	*Call
2098<2096		5030<4974	S02 TO D02	*Call
2098<2096		5030<4975	S03 TO D02	*Call
2098<2096		5030<4976	S04 TO D02	*Call
2098<2096		5030<4977	T01 TO D02	*Call
2098<2096		5030<4978	T02 TO D02	*Call
2098<2096		5030<4979	T03 TO D02	*Call
2098<2096		5030<4980	T04 TO D02	*Call
2098<2096		5030<4981	U01 TO D02	*Call
2098<2096		5030<4982	U02 TO D02	*Call
2098<2096		5030<4983	U03 TO D02	*Call
2098<2096		5030<4984	U04 TO D02	*Call
2098<2096		5030<4985	V01 TO D02	*Call
2098<2096		5030<4986	V02 TO D02	*Call
2098<2096		5030<4987	V03 TO D02	*Call
2098<2096		5030<4988	V04 TO D02	*Call
2098<2096		5030<4989	W01 TO D02	*Call
2098<2096		5030<4990	W02 TO D02	*Call
2098<2096		5030<4991	W03 TO D02	*Call
2098<2096		5030<4992	W04 TO D02	*Call
2098<2096		5030<4993	X01 TO D02	*Call
2098<2096		5030<4994	X02 TO D02	*Call
2098<2096		5030<4995	X03 TO D02	*Call
2098<2096		5030<4996	X04 TO D02	*Call
2098<2096		5030<4997	Y01 TO D02	*Call
2098<2096		5030<4998	Y02 TO D02	*Call
2098<2096		5030<4999	Y03 TO D02	*Call
2098<2096		5030<5000	Y04 TO D02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5030<5001	Z01 TO D02	*Call
2098<2096		5030<5002	Z02 TO D02	*Call
2098<2096		5030<5003	Z03 TO D02	*Call
2098<2096		5030<5004	Z04 TO D02	*Call
2098<2096		5031<4900	Z00 TO D03	*Call
2098<2096		5031<4901	A01 TO D03	*Call
2098<2096		5031<4902	A02 TO D03	*Call
2098<2096		5031<4903	A03 TO D03	*Call
2098<2096		5031<4905	B01 TO D03	*Call
2098<2096		5031<4906	B02 TO D03	*Call
2098<2096		5031<4907	B03 TO D03	*Call
2098<2096		5031<4909	C01 TO D03	*Call
2098<2096		5031<4910	C02 TO D03	*Call
2098<2096		5031<4911	C03 TO D03	*Call
2098<2096		5031<4913	D01 TO D03	*Call
2098<2096		5031<4914	D02 TO D03	*Call
2098<2096		5031<4915	D03 TO D03	*Call
2098<2096		5031<4917	E01 TO D03	*Call
2098<2096		5031<4918	E02 TO D03	*Call
2098<2096		5031<4921	F01 TO D03	*Call
2098<2096		5031<4922	F02 TO D03	*Call
2098<2096		5031<4925	G01 TO D03	*Call
2098<2096		5031<4929	H01 TO D03	*Call
2098<2096		5031<4933	I01 TO D03	*Call
2098<2096		5031<4937	J01 TO D03	*Call
2098<2096		5031<4944	K04 TO D03	*Call
2098<2096		5031<4947	L03 TO D03	*Call
2098<2096		5031<4948	L04 TO D03	*Call
2098<2096		5031<4951	M03 TO D03	*Call
2098<2096		5031<4952	M04 TO D03	*Call
2098<2096		5031<4954	N02 TO D03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5031<4955	N03 TO D03	*Call
2098<2096		5031<4956	N04 TO D03	*Call
2098<2096		5031<4958	O02 TO D03	*Call
2098<2096		5031<4959	O03 TO D03	*Call
2098<2096		5031<4960	O04 TO D03	*Call
2098<2096		5031<4962	P02 TO D03	*Call
2098<2096		5031<4963	P03 TO D03	*Call
2098<2096		5031<4964	P04 TO D03	*Call
2098<2096		5031<4966	Q02 TO D03	*Call
2098<2096		5031<4967	Q03 TO D03	*Call
2098<2096		5031<4968	Q04 TO D03	*Call
2098<2096		5031<4969	R01 TO D03	*Call
2098<2096		5031<4970	R02 TO D03	*Call
2098<2096		5031<4971	R03 TO D03	*Call
2098<2096		5031<4972	R04 TO D03	*Call
2098<2096		5031<4973	S01 TO D03	*Call
2098<2096		5031<4974	S02 TO D03	*Call
2098<2096		5031<4975	S03 TO D03	*Call
2098<2096		5031<4976	S04 TO D03	*Call
2098<2096		5031<4977	T01 TO D03	*Call
2098<2096		5031<4978	T02 TO D03	*Call
2098<2096		5031<4979	T03 TO D03	*Call
2098<2096		5031<4980	T04 TO D03	*Call
2098<2096		5031<4981	U01 TO D03	*Call
2098<2096		5031<4982	U02 TO D03	*Call
2098<2096		5031<4983	U03 TO D03	*Call
2098<2096		5031<4984	U04 TO D03	*Call
2098<2096		5031<4985	V01 TO D03	*Call
2098<2096		5031<4986	V02 TO D03	*Call
2098<2096		5031<4987	V03 TO D03	*Call
2098<2096		5031<4988	V04 TO D03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5031<4989	W01 TO D03	*Call
2098<2096		5031<4990	W02 TO D03	*Call
2098<2096		5031<4991	W03 TO D03	*Call
2098<2096		5031<4992	W04 TO D03	*Call
2098<2096		5031<4993	X01 TO D03	*Call
2098<2096		5031<4994	X02 TO D03	*Call
2098<2096		5031<4995	X03 TO D03	*Call
2098<2096		5031<4996	X04 TO D03	*Call
2098<2096		5031<4997	Y01 TO D03	*Call
2098<2096		5031<4998	Y02 TO D03	*Call
2098<2096		5031<4999	Y03 TO D03	*Call
2098<2096		5031<5000	Y04 TO D03	*Call
2098<2096		5031<5001	Z01 TO D03	*Call
2098<2096		5031<5002	Z02 TO D03	*Call
2098<2096		5031<5003	Z03 TO D03	*Call
2098<2096		5031<5004	Z04 TO D03	*Call
2098<2096		5032<4900	Z00 TO D04	*Call
2098<2096		5032<4901	A01 TO D04	*Call
2098<2096		5032<4902	A02 TO D04	*Call
2098<2096		5032<4903	A03 TO D04	*Call
2098<2096		5032<4905	B01 TO D04	*Call
2098<2096		5032<4906	B02 TO D04	*Call
2098<2096		5032<4907	B03 TO D04	*Call
2098<2096		5032<4909	C01 TO D04	*Call
2098<2096		5032<4910	C02 TO D04	*Call
2098<2096		5032<4911	C03 TO D04	*Call
2098<2096		5032<4913	D01 TO D04	*Call
2098<2096		5032<4914	D02 TO D04	*Call
2098<2096		5032<4915	D03 TO D04	*Call
2098<2096		5032<4917	E01 TO D04	*Call
2098<2096		5032<4918	E02 TO D04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5032<4921	F01 TO D04	*Call
2098<2096		5032<4922	F02 TO D04	*Call
2098<2096		5032<4925	G01 TO D04	*Call
2098<2096		5032<4929	H01 TO D04	*Call
2098<2096		5032<4933	I01 TO D04	*Call
2098<2096		5032<4937	J01 TO D04	*Call
2098<2096		5032<4944	K04 TO D04	*Call
2098<2096		5032<4947	L03 TO D04	*Call
2098<2096		5032<4948	L04 TO D04	*Call
2098<2096		5032<4951	M03 TO D04	*Call
2098<2096		5032<4952	M04 TO D04	*Call
2098<2096		5032<4954	N02 TO D04	*Call
2098<2096		5032<4955	N03 TO D04	*Call
2098<2096		5032<4956	N04 TO D04	*Call
2098<2096		5032<4958	O02 TO D04	*Call
2098<2096		5032<4959	O03 TO D04	*Call
2098<2096		5032<4960	O04 TO D04	*Call
2098<2096		5032<4962	P02 TO D04	*Call
2098<2096		5032<4963	P03 TO D04	*Call
2098<2096		5032<4964	P04 TO D04	*Call
2098<2096		5032<4966	Q02 TO D04	*Call
2098<2096		5032<4967	Q03 TO D04	*Call
2098<2096		5032<4968	Q04 TO D04	*Call
2098<2096		5032<4969	R01 TO D04	*Call
2098<2096		5032<4970	R02 TO D04	*Call
2098<2096		5032<4971	R03 TO D04	*Call
2098<2096		5032<4972	R04 TO D04	*Call
2098<2096		5032<4973	S01 TO D04	*Call
2098<2096		5032<4974	S02 TO D04	*Call
2098<2096		5032<4975	S03 TO D04	*Call
2098<2096		5032<4976	S04 TO D04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5032<4977	T01 TO D04	*Call
2098<2096		5032<4978	T02 TO D04	*Call
2098<2096		5032<4979	T03 TO D04	*Call
2098<2096		5032<4980	T04 TO D04	*Call
2098<2096		5032<4981	U01 TO D04	*Call
2098<2096		5032<4982	U02 TO D04	*Call
2098<2096		5032<4983	U03 TO D04	*Call
2098<2096		5032<4984	U04 TO D04	*Call
2098<2096		5032<4985	V01 TO D04	*Call
2098<2096		5032<4986	V02 TO D04	*Call
2098<2096		5032<4987	V03 TO D04	*Call
2098<2096		5032<4988	V04 TO D04	*Call
2098<2096		5032<4989	W01 TO D04	*Call
2098<2096		5032<4990	W02 TO D04	*Call
2098<2096		5032<4991	W03 TO D04	*Call
2098<2096		5032<4992	W04 TO D04	*Call
2098<2096		5032<4993	X01 TO D04	*Call
2098<2096		5032<4994	X02 TO D04	*Call
2098<2096		5032<4995	X03 TO D04	*Call
2098<2096		5032<4996	X04 TO D04	*Call
2098<2096		5032<4997	Y01 TO D04	*Call
2098<2096		5032<4998	Y02 TO D04	*Call
2098<2096		5032<4999	Y03 TO D04	*Call
2098<2096		5032<5000	Y04 TO D04	*Call
2098<2096		5032<5001	Z01 TO D04	*Call
2098<2096		5032<5002	Z02 TO D04	*Call
2098<2096		5032<5003	Z03 TO D04	*Call
2098<2096		5032<5004	Z04 TO D04	*Call
2098<2096		5033<4900	Z00 TO D05	*Call
2098<2096		5033<4901	A01 TO D05	*Call
2098<2096		5033<4902	A02 TO D05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5033<4903	A03 TO D05	*Call
2098<2096		5033<4905	B01 TO D05	*Call
2098<2096		5033<4906	B02 TO D05	*Call
2098<2096		5033<4907	B03 TO D05	*Call
2098<2096		5033<4909	C01 TO D05	*Call
2098<2096		5033<4910	C02 TO D05	*Call
2098<2096		5033<4911	C03 TO D05	*Call
2098<2096		5033<4913	D01 TO D05	*Call
2098<2096		5033<4914	D02 TO D05	*Call
2098<2096		5033<4915	D03 TO D05	*Call
2098<2096		5033<4917	E01 TO D05	*Call
2098<2096		5033<4918	E02 TO D05	*Call
2098<2096		5033<4921	F01 TO D05	*Call
2098<2096		5033<4922	F02 TO D05	*Call
2098<2096		5033<4925	G01 TO D05	*Call
2098<2096		5033<4929	H01 TO D05	*Call
2098<2096		5033<4933	I01 TO D05	*Call
2098<2096		5033<4937	J01 TO D05	*Call
2098<2096		5033<4944	K04 TO D05	*Call
2098<2096		5033<4947	L03 TO D05	*Call
2098<2096		5033<4948	L04 TO D05	*Call
2098<2096		5033<4951	M03 TO D05	*Call
2098<2096		5033<4952	M04 TO D05	*Call
2098<2096		5033<4954	N02 TO D05	*Call
2098<2096		5033<4955	N03 TO D05	*Call
2098<2096		5033<4956	N04 TO D05	*Call
2098<2096		5033<4958	O02 TO D05	*Call
2098<2096		5033<4959	O03 TO D05	*Call
2098<2096		5033<4960	O04 TO D05	*Call
2098<2096		5033<4962	P02 TO D05	*Call
2098<2096		5033<4963	P03 TO D05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5033<4964	P04 TO D05	*Call
2098<2096		5033<4966	Q02 TO D05	*Call
2098<2096		5033<4967	Q03 TO D05	*Call
2098<2096		5033<4968	Q04 TO D05	*Call
2098<2096		5033<4969	R01 TO D05	*Call
2098<2096		5033<4970	R02 TO D05	*Call
2098<2096		5033<4971	R03 TO D05	*Call
2098<2096		5033<4972	R04 TO D05	*Call
2098<2096		5033<4973	S01 TO D05	*Call
2098<2096		5033<4974	S02 TO D05	*Call
2098<2096		5033<4975	S03 TO D05	*Call
2098<2096		5033<4976	S04 TO D05	*Call
2098<2096		5033<4977	T01 TO D05	*Call
2098<2096		5033<4978	T02 TO D05	*Call
2098<2096		5033<4979	T03 TO D05	*Call
2098<2096		5033<4980	T04 TO D05	*Call
2098<2096		5033<4981	U01 TO D05	*Call
2098<2096		5033<4982	U02 TO D05	*Call
2098<2096		5033<4983	U03 TO D05	*Call
2098<2096		5033<4984	U04 TO D05	*Call
2098<2096		5033<4985	V01 TO D05	*Call
2098<2096		5033<4986	V02 TO D05	*Call
2098<2096		5033<4987	V03 TO D05	*Call
2098<2096		5033<4988	V04 TO D05	*Call
2098<2096		5033<4989	W01 TO D05	*Call
2098<2096		5033<4990	W02 TO D05	*Call
2098<2096		5033<4991	W03 TO D05	*Call
2098<2096		5033<4992	W04 TO D05	*Call
2098<2096		5033<4993	X01 TO D05	*Call
2098<2096		5033<4994	X02 TO D05	*Call
2098<2096		5033<4995	X03 TO D05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5033<4996	X04 TO D05	*Call
2098<2096		5033<4997	Y01 TO D05	*Call
2098<2096		5033<4998	Y02 TO D05	*Call
2098<2096		5033<4999	Y03 TO D05	*Call
2098<2096		5033<5000	Y04 TO D05	*Call
2098<2096		5033<5001	Z01 TO D05	*Call
2098<2096		5033<5002	Z02 TO D05	*Call
2098<2096		5033<5003	Z03 TO D05	*Call
2098<2096		5033<5004	Z04 TO D05	*Call
2098<2096		5034<4900	Z00 TO E01	*Call
2098<2096		5034<4901	A01 TO E01	*Call
2098<2096		5034<4902	A02 TO E01	*Call
2098<2096		5034<4903	A03 TO E01	*Call
2098<2096		5034<4905	B01 TO E01	*Call
2098<2096		5034<4906	B02 TO E01	*Call
2098<2096		5034<4907	B03 TO E01	*Call
2098<2096		5034<4909	C01 TO E01	*Call
2098<2096		5034<4910	C02 TO E01	*Call
2098<2096		5034<4911	C03 TO E01	*Call
2098<2096		5034<4913	D01 TO E01	*Call
2098<2096		5034<4914	D02 TO E01	*Call
2098<2096		5034<4915	D03 TO E01	*Call
2098<2096		5034<4917	E01 TO E01	*Call
2098<2096		5034<4918	E02 TO E01	*Call
2098<2096		5034<4921	F01 TO E01	*Call
2098<2096		5034<4922	F02 TO E01	*Call
2098<2096		5034<4925	G01 TO E01	*Call
2098<2096		5034<4929	H01 TO E01	*Call
2098<2096		5034<4933	I01 TO E01	*Call
2098<2096		5034<4937	J01 TO E01	*Call
2098<2096		5034<4944	K04 TO E01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5034<4947	L03 TO E01	*Call
2098<2096		5034<4948	L04 TO E01	*Call
2098<2096		5034<4951	M03 TO E01	*Call
2098<2096		5034<4952	M04 TO E01	*Call
2098<2096		5034<4954	N02 TO E01	*Call
2098<2096		5034<4955	N03 TO E01	*Call
2098<2096		5034<4956	N04 TO E01	*Call
2098<2096		5034<4958	O02 TO E01	*Call
2098<2096		5034<4959	O03 TO E01	*Call
2098<2096		5034<4960	O04 TO E01	*Call
2098<2096		5034<4962	P02 TO E01	*Call
2098<2096		5034<4963	P03 TO E01	*Call
2098<2096		5034<4964	P04 TO E01	*Call
2098<2096		5034<4966	Q02 TO E01	*Call
2098<2096		5034<4967	Q03 TO E01	*Call
2098<2096		5034<4968	Q04 TO E01	*Call
2098<2096		5034<4969	R01 TO E01	*Call
2098<2096		5034<4970	R02 TO E01	*Call
2098<2096		5034<4971	R03 TO E01	*Call
2098<2096		5034<4972	R04 TO E01	*Call
2098<2096		5034<4973	S01 TO E01	*Call
2098<2096		5034<4974	S02 TO E01	*Call
2098<2096		5034<4975	S03 TO E01	*Call
2098<2096		5034<4976	S04 TO E01	*Call
2098<2096		5034<4977	T01 TO E01	*Call
2098<2096		5034<4978	T02 TO E01	*Call
2098<2096		5034<4979	T03 TO E01	*Call
2098<2096		5034<4980	T04 TO E01	*Call
2098<2096		5034<4981	U01 TO E01	*Call
2098<2096		5034<4982	U02 TO E01	*Call
2098<2096		5034<4983	U03 TO E01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5034<4984	U04 TO E01	*Call
2098<2096		5034<4985	V01 TO E01	*Call
2098<2096		5034<4986	V02 TO E01	*Call
2098<2096		5034<4987	V03 TO E01	*Call
2098<2096		5034<4988	V04 TO E01	*Call
2098<2096		5034<4989	W01 TO E01	*Call
2098<2096		5034<4990	W02 TO E01	*Call
2098<2096		5034<4991	W03 TO E01	*Call
2098<2096		5034<4992	W04 TO E01	*Call
2098<2096		5034<4993	X01 TO E01	*Call
2098<2096		5034<4994	X02 TO E01	*Call
2098<2096		5034<4995	X03 TO E01	*Call
2098<2096		5034<4996	X04 TO E01	*Call
2098<2096		5034<4997	Y01 TO E01	*Call
2098<2096		5034<4998	Y02 TO E01	*Call
2098<2096		5034<4999	Y03 TO E01	*Call
2098<2096		5034<5000	Y04 TO E01	*Call
2098<2096		5034<5001	Z01 TO E01	*Call
2098<2096		5034<5002	Z02 TO E01	*Call
2098<2096		5034<5003	Z03 TO E01	*Call
2098<2096		5034<5004	Z04 TO E01	*Call
2098<2096		5035<4900	Z00 TO E02	*Call
2098<2096		5035<4901	A01 TO E02	*Call
2098<2096		5035<4902	A02 TO E02	*Call
2098<2096		5035<4903	A03 TO E02	*Call
2098<2096		5035<4905	B01 TO E02	*Call
2098<2096		5035<4906	B02 TO E02	*Call
2098<2096		5035<4907	B03 TO E02	*Call
2098<2096		5035<4909	C01 TO E02	*Call
2098<2096		5035<4910	C02 TO E02	*Call
2098<2096		5035<4911	C03 TO E02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5035<4913	D01 TO E02	*Call
2098<2096		5035<4914	D02 TO E02	*Call
2098<2096		5035<4915	D03 TO E02	*Call
2098<2096		5035<4917	E01 TO E02	*Call
2098<2096		5035<4918	E02 TO E02	*Call
2098<2096		5035<4921	F01 TO E02	*Call
2098<2096		5035<4922	F02 TO E02	*Call
2098<2096		5035<4925	G01 TO E02	*Call
2098<2096		5035<4929	H01 TO E02	*Call
2098<2096		5035<4933	I01 TO E02	*Call
2098<2096		5035<4937	J01 TO E02	*Call
2098<2096		5035<4944	K04 TO E02	*Call
2098<2096		5035<4947	L03 TO E02	*Call
2098<2096		5035<4948	L04 TO E02	*Call
2098<2096		5035<4951	M03 TO E02	*Call
2098<2096		5035<4952	M04 TO E02	*Call
2098<2096		5035<4954	N02 TO E02	*Call
2098<2096		5035<4955	N03 TO E02	*Call
2098<2096		5035<4956	N04 TO E02	*Call
2098<2096		5035<4958	O02 TO E02	*Call
2098<2096		5035<4959	O03 TO E02	*Call
2098<2096		5035<4960	O04 TO E02	*Call
2098<2096		5035<4962	P02 TO E02	*Call
2098<2096		5035<4963	P03 TO E02	*Call
2098<2096		5035<4964	P04 TO E02	*Call
2098<2096		5035<4966	Q02 TO E02	*Call
2098<2096		5035<4967	Q03 TO E02	*Call
2098<2096		5035<4968	Q04 TO E02	*Call
2098<2096		5035<4969	R01 TO E02	*Call
2098<2096		5035<4970	R02 TO E02	*Call
2098<2096		5035<4971	R03 TO E02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5035<4972	R04 TO E02	*Call
2098<2096		5035<4973	S01 TO E02	*Call
2098<2096		5035<4974	S02 TO E02	*Call
2098<2096		5035<4975	S03 TO E02	*Call
2098<2096		5035<4976	S04 TO E02	*Call
2098<2096		5035<4977	T01 TO E02	*Call
2098<2096		5035<4978	T02 TO E02	*Call
2098<2096		5035<4979	T03 TO E02	*Call
2098<2096		5035<4980	T04 TO E02	*Call
2098<2096		5035<4981	U01 TO E02	*Call
2098<2096		5035<4982	U02 TO E02	*Call
2098<2096		5035<4983	U03 TO E02	*Call
2098<2096		5035<4984	U04 TO E02	*Call
2098<2096		5035<4985	V01 TO E02	*Call
2098<2096		5035<4986	V02 TO E02	*Call
2098<2096		5035<4987	V03 TO E02	*Call
2098<2096		5035<4988	V04 TO E02	*Call
2098<2096		5035<4989	W01 TO E02	*Call
2098<2096		5035<4990	W02 TO E02	*Call
2098<2096		5035<4991	W03 TO E02	*Call
2098<2096		5035<4992	W04 TO E02	*Call
2098<2096		5035<4993	X01 TO E02	*Call
2098<2096		5035<4994	X02 TO E02	*Call
2098<2096		5035<4995	X03 TO E02	*Call
2098<2096		5035<4996	X04 TO E02	*Call
2098<2096		5035<4997	Y01 TO E02	*Call
2098<2096		5035<4998	Y02 TO E02	*Call
2098<2096		5035<4999	Y03 TO E02	*Call
2098<2096		5035<5000	Y04 TO E02	*Call
2098<2096		5035<5001	Z01 TO E02	*Call
2098<2096		5035<5002	Z02 TO E02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5035<5003	Z03 TO E02	*Call
2098<2096		5035<5004	Z04 TO E02	*Call
2098<2096		5036<4900	Z00 TO E03	*Call
2098<2096		5036<4901	A01 TO E03	*Call
2098<2096		5036<4902	A02 TO E03	*Call
2098<2096		5036<4903	A03 TO E03	*Call
2098<2096		5036<4905	B01 TO E03	*Call
2098<2096		5036<4906	B02 TO E03	*Call
2098<2096		5036<4907	B03 TO E03	*Call
2098<2096		5036<4909	C01 TO E03	*Call
2098<2096		5036<4910	C02 TO E03	*Call
2098<2096		5036<4911	C03 TO E03	*Call
2098<2096		5036<4913	D01 TO E03	*Call
2098<2096		5036<4914	D02 TO E03	*Call
2098<2096		5036<4915	D03 TO E03	*Call
2098<2096		5036<4917	E01 TO E03	*Call
2098<2096		5036<4918	E02 TO E03	*Call
2098<2096		5036<4921	F01 TO E03	*Call
2098<2096		5036<4922	F02 TO E03	*Call
2098<2096		5036<4925	G01 TO E03	*Call
2098<2096		5036<4929	H01 TO E03	*Call
2098<2096		5036<4933	I01 TO E03	*Call
2098<2096		5036<4937	J01 TO E03	*Call
2098<2096		5036<4944	K04 TO E03	*Call
2098<2096		5036<4947	L03 TO E03	*Call
2098<2096		5036<4948	L04 TO E03	*Call
2098<2096		5036<4951	M03 TO E03	*Call
2098<2096		5036<4952	M04 TO E03	*Call
2098<2096		5036<4954	N02 TO E03	*Call
2098<2096		5036<4955	N03 TO E03	*Call
2098<2096		5036<4956	N04 TO E03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5036<4958	O02 TO E03	*Call
2098<2096		5036<4959	O03 TO E03	*Call
2098<2096		5036<4960	O04 TO E03	*Call
2098<2096		5036<4962	P02 TO E03	*Call
2098<2096		5036<4963	P03 TO E03	*Call
2098<2096		5036<4964	P04 TO E03	*Call
2098<2096		5036<4966	Q02 TO E03	*Call
2098<2096		5036<4967	Q03 TO E03	*Call
2098<2096		5036<4968	Q04 TO E03	*Call
2098<2096		5036<4969	R01 TO E03	*Call
2098<2096		5036<4970	R02 TO E03	*Call
2098<2096		5036<4971	R03 TO E03	*Call
2098<2096		5036<4972	R04 TO E03	*Call
2098<2096		5036<4973	S01 TO E03	*Call
2098<2096		5036<4974	S02 TO E03	*Call
2098<2096		5036<4975	S03 TO E03	*Call
2098<2096		5036<4976	S04 TO E03	*Call
2098<2096		5036<4977	T01 TO E03	*Call
2098<2096		5036<4978	T02 TO E03	*Call
2098<2096		5036<4979	T03 TO E03	*Call
2098<2096		5036<4980	T04 TO E03	*Call
2098<2096		5036<4981	U01 TO E03	*Call
2098<2096		5036<4982	U02 TO E03	*Call
2098<2096		5036<4983	U03 TO E03	*Call
2098<2096		5036<4984	U04 TO E03	*Call
2098<2096		5036<4985	V01 TO E03	*Call
2098<2096		5036<4986	V02 TO E03	*Call
2098<2096		5036<4987	V03 TO E03	*Call
2098<2096		5036<4988	V04 TO E03	*Call
2098<2096		5036<4989	W01 TO E03	*Call
2098<2096		5036<4990	W02 TO E03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5036<4991	W03 TO E03	*Call
2098<2096		5036<4992	W04 TO E03	*Call
2098<2096		5036<4993	X01 TO E03	*Call
2098<2096		5036<4994	X02 TO E03	*Call
2098<2096		5036<4995	X03 TO E03	*Call
2098<2096		5036<4996	X04 TO E03	*Call
2098<2096		5036<4997	Y01 TO E03	*Call
2098<2096		5036<4998	Y02 TO E03	*Call
2098<2096		5036<4999	Y03 TO E03	*Call
2098<2096		5036<5000	Y04 TO E03	*Call
2098<2096		5036<5001	Z01 TO E03	*Call
2098<2096		5036<5002	Z02 TO E03	*Call
2098<2096		5036<5003	Z03 TO E03	*Call
2098<2096		5036<5004	Z04 TO E03	*Call
2098<2096		5037<4900	Z00 TO E04	*Call
2098<2096		5037<4901	A01 TO E04	*Call
2098<2096		5037<4902	A02 TO E04	*Call
2098<2096		5037<4903	A03 TO E04	*Call
2098<2096		5037<4905	B01 TO E04	*Call
2098<2096		5037<4906	B02 TO E04	*Call
2098<2096		5037<4907	B03 TO E04	*Call
2098<2096		5037<4909	C01 TO E04	*Call
2098<2096		5037<4910	C02 TO E04	*Call
2098<2096		5037<4911	C03 TO E04	*Call
2098<2096		5037<4913	D01 TO E04	*Call
2098<2096		5037<4914	D02 TO E04	*Call
2098<2096		5037<4915	D03 TO E04	*Call
2098<2096		5037<4917	E01 TO E04	*Call
2098<2096		5037<4918	E02 TO E04	*Call
2098<2096		5037<4921	F01 TO E04	*Call
2098<2096		5037<4922	F02 TO E04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5037<4925	G01 TO E04	*Call
2098<2096		5037<4929	H01 TO E04	*Call
2098<2096		5037<4933	I01 TO E04	*Call
2098<2096		5037<4937	J01 TO E04	*Call
2098<2096		5037<4944	K04 TO E04	*Call
2098<2096		5037<4947	L03 TO E04	*Call
2098<2096		5037<4948	L04 TO E04	*Call
2098<2096		5037<4951	M03 TO E04	*Call
2098<2096		5037<4952	M04 TO E04	*Call
2098<2096		5037<4954	N02 TO E04	*Call
2098<2096		5037<4955	N03 TO E04	*Call
2098<2096		5037<4956	N04 TO E04	*Call
2098<2096		5037<4958	O02 TO E04	*Call
2098<2096		5037<4959	O03 TO E04	*Call
2098<2096		5037<4960	O04 TO E04	*Call
2098<2096		5037<4962	P02 TO E04	*Call
2098<2096		5037<4963	P03 TO E04	*Call
2098<2096		5037<4964	P04 TO E04	*Call
2098<2096		5037<4966	Q02 TO E04	*Call
2098<2096		5037<4967	Q03 TO E04	*Call
2098<2096		5037<4968	Q04 TO E04	*Call
2098<2096		5037<4969	R01 TO E04	*Call
2098<2096		5037<4970	R02 TO E04	*Call
2098<2096		5037<4971	R03 TO E04	*Call
2098<2096		5037<4972	R04 TO E04	*Call
2098<2096		5037<4973	S01 TO E04	*Call
2098<2096		5037<4974	S02 TO E04	*Call
2098<2096		5037<4975	S03 TO E04	*Call
2098<2096		5037<4976	S04 TO E04	*Call
2098<2096		5037<4977	T01 TO E04	*Call
2098<2096		5037<4978	T02 TO E04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5037<4979	T03 TO E04	*Call
2098<2096		5037<4980	T04 TO E04	*Call
2098<2096		5037<4981	U01 TO E04	*Call
2098<2096		5037<4982	U02 TO E04	*Call
2098<2096		5037<4983	U03 TO E04	*Call
2098<2096		5037<4984	U04 TO E04	*Call
2098<2096		5037<4985	V01 TO E04	*Call
2098<2096		5037<4986	V02 TO E04	*Call
2098<2096		5037<4987	V03 TO E04	*Call
2098<2096		5037<4988	V04 TO E04	*Call
2098<2096		5037<4989	W01 TO E04	*Call
2098<2096		5037<4990	W02 TO E04	*Call
2098<2096		5037<4991	W03 TO E04	*Call
2098<2096		5037<4992	W04 TO E04	*Call
2098<2096		5037<4993	X01 TO E04	*Call
2098<2096		5037<4994	X02 TO E04	*Call
2098<2096		5037<4995	X03 TO E04	*Call
2098<2096		5037<4996	X04 TO E04	*Call
2098<2096		5037<4997	Y01 TO E04	*Call
2098<2096		5037<4998	Y02 TO E04	*Call
2098<2096		5037<4999	Y03 TO E04	*Call
2098<2096		5037<5000	Y04 TO E04	*Call
2098<2096		5037<5001	Z01 TO E04	*Call
2098<2096		5037<5002	Z02 TO E04	*Call
2098<2096		5037<5003	Z03 TO E04	*Call
2098<2096		5037<5004	Z04 TO E04	*Call
2098<2096		5038<4900	Z00 TO E05	*Call
2098<2096		5038<4901	A01 TO E05	*Call
2098<2096		5038<4902	A02 TO E05	*Call
2098<2096		5038<4903	A03 TO E05	*Call
2098<2096		5038<4905	B01 TO E05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5038<4906	B02 TO E05	*Call
2098<2096		5038<4907	B03 TO E05	*Call
2098<2096		5038<4909	C01 TO E05	*Call
2098<2096		5038<4910	C02 TO E05	*Call
2098<2096		5038<4911	C03 TO E05	*Call
2098<2096		5038<4913	D01 TO E05	*Call
2098<2096		5038<4914	D02 TO E05	*Call
2098<2096		5038<4915	D03 TO E05	*Call
2098<2096		5038<4917	E01 TO E05	*Call
2098<2096		5038<4918	E02 TO E05	*Call
2098<2096		5038<4921	F01 TO E05	*Call
2098<2096		5038<4922	F02 TO E05	*Call
2098<2096		5038<4925	G01 TO E05	*Call
2098<2096		5038<4929	H01 TO E05	*Call
2098<2096		5038<4933	I01 TO E05	*Call
2098<2096		5038<4937	J01 TO E05	*Call
2098<2096		5038<4944	K04 TO E05	*Call
2098<2096		5038<4947	L03 TO E05	*Call
2098<2096		5038<4948	L04 TO E05	*Call
2098<2096		5038<4951	M03 TO E05	*Call
2098<2096		5038<4952	M04 TO E05	*Call
2098<2096		5038<4954	N02 TO E05	*Call
2098<2096		5038<4955	N03 TO E05	*Call
2098<2096		5038<4956	N04 TO E05	*Call
2098<2096		5038<4958	O02 TO E05	*Call
2098<2096		5038<4959	O03 TO E05	*Call
2098<2096		5038<4960	O04 TO E05	*Call
2098<2096		5038<4962	P02 TO E05	*Call
2098<2096		5038<4963	P03 TO E05	*Call
2098<2096		5038<4964	P04 TO E05	*Call
2098<2096		5038<4966	Q02 TO E05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5038<4967	Q03 TO E05	*Call
2098<2096		5038<4968	Q04 TO E05	*Call
2098<2096		5038<4969	R01 TO E05	*Call
2098<2096		5038<4970	R02 TO E05	*Call
2098<2096		5038<4971	R03 TO E05	*Call
2098<2096		5038<4972	R04 TO E05	*Call
2098<2096		5038<4973	S01 TO E05	*Call
2098<2096		5038<4974	S02 TO E05	*Call
2098<2096		5038<4975	S03 TO E05	*Call
2098<2096		5038<4976	S04 TO E05	*Call
2098<2096		5038<4977	T01 TO E05	*Call
2098<2096		5038<4978	T02 TO E05	*Call
2098<2096		5038<4979	T03 TO E05	*Call
2098<2096		5038<4980	T04 TO E05	*Call
2098<2096		5038<4981	U01 TO E05	*Call
2098<2096		5038<4982	U02 TO E05	*Call
2098<2096		5038<4983	U03 TO E05	*Call
2098<2096		5038<4984	U04 TO E05	*Call
2098<2096		5038<4985	V01 TO E05	*Call
2098<2096		5038<4986	V02 TO E05	*Call
2098<2096		5038<4987	V03 TO E05	*Call
2098<2096		5038<4988	V04 TO E05	*Call
2098<2096		5038<4989	W01 TO E05	*Call
2098<2096		5038<4990	W02 TO E05	*Call
2098<2096		5038<4991	W03 TO E05	*Call
2098<2096		5038<4992	W04 TO E05	*Call
2098<2096		5038<4993	X01 TO E05	*Call
2098<2096		5038<4994	X02 TO E05	*Call
2098<2096		5038<4995	X03 TO E05	*Call
2098<2096		5038<4996	X04 TO E05	*Call
2098<2096		5038<4997	Y01 TO E05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5038<4998	Y02 TO E05	*Call
2098<2096		5038<4999	Y03 TO E05	*Call
2098<2096		5038<5000	Y04 TO E05	*Call
2098<2096		5038<5001	Z01 TO E05	*Call
2098<2096		5038<5002	Z02 TO E05	*Call
2098<2096		5038<5003	Z03 TO E05	*Call
2098<2096		5038<5004	Z04 TO E05	*Call
2098<2096		5039<4900	Z00 TO F01	*Call
2098<2096		5039<4901	A01 TO F01	*Call
2098<2096		5039<4902	A02 TO F01	*Call
2098<2096		5039<4903	A03 TO F01	*Call
2098<2096		5039<4905	B01 TO F01	*Call
2098<2096		5039<4906	B02 TO F01	*Call
2098<2096		5039<4907	B03 TO F01	*Call
2098<2096		5039<4909	C01 TO F01	*Call
2098<2096		5039<4910	C02 TO F01	*Call
2098<2096		5039<4911	C03 TO F01	*Call
2098<2096		5039<4913	D01 TO F01	*Call
2098<2096		5039<4914	D02 TO F01	*Call
2098<2096		5039<4915	D03 TO F01	*Call
2098<2096		5039<4917	E01 TO F01	*Call
2098<2096		5039<4918	E02 TO F01	*Call
2098<2096		5039<4921	F01 TO F01	*Call
2098<2096		5039<4922	F02 TO F01	*Call
2098<2096		5039<4925	G01 TO F01	*Call
2098<2096		5039<4929	H01 TO F01	*Call
2098<2096		5039<4933	I01 TO F01	*Call
2098<2096		5039<4937	J01 TO F01	*Call
2098<2096		5039<4944	K04 TO F01	*Call
2098<2096		5039<4947	L03 TO F01	*Call
2098<2096		5039<4948	L04 TO F01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5039<4951	M03 TO F01	*Call
2098<2096		5039<4952	M04 TO F01	*Call
2098<2096		5039<4954	N02 TO F01	*Call
2098<2096		5039<4955	N03 TO F01	*Call
2098<2096		5039<4956	N04 TO F01	*Call
2098<2096		5039<4958	O02 TO F01	*Call
2098<2096		5039<4959	O03 TO F01	*Call
2098<2096		5039<4960	O04 TO F01	*Call
2098<2096		5039<4962	P02 TO F01	*Call
2098<2096		5039<4963	P03 TO F01	*Call
2098<2096		5039<4964	P04 TO F01	*Call
2098<2096		5039<4966	Q02 TO F01	*Call
2098<2096		5039<4967	Q03 TO F01	*Call
2098<2096		5039<4968	Q04 TO F01	*Call
2098<2096		5039<4969	R01 TO F01	*Call
2098<2096		5039<4970	R02 TO F01	*Call
2098<2096		5039<4971	R03 TO F01	*Call
2098<2096		5039<4972	R04 TO F01	*Call
2098<2096		5039<4973	S01 TO F01	*Call
2098<2096		5039<4974	S02 TO F01	*Call
2098<2096		5039<4975	S03 TO F01	*Call
2098<2096		5039<4976	S04 TO F01	*Call
2098<2096		5039<4977	T01 TO F01	*Call
2098<2096		5039<4978	T02 TO F01	*Call
2098<2096		5039<4979	T03 TO F01	*Call
2098<2096		5039<4980	T04 TO F01	*Call
2098<2096		5039<4981	U01 TO F01	*Call
2098<2096		5039<4982	U02 TO F01	*Call
2098<2096		5039<4983	U03 TO F01	*Call
2098<2096		5039<4984	U04 TO F01	*Call
2098<2096		5039<4985	V01 TO F01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5039<4986	V02 TO F01	*Call
2098<2096		5039<4987	V03 TO F01	*Call
2098<2096		5039<4988	V04 TO F01	*Call
2098<2096		5039<4989	W01 TO F01	*Call
2098<2096		5039<4990	W02 TO F01	*Call
2098<2096		5039<4991	W03 TO F01	*Call
2098<2096		5039<4992	W04 TO F01	*Call
2098<2096		5039<4993	X01 TO F01	*Call
2098<2096		5039<4994	X02 TO F01	*Call
2098<2096		5039<4995	X03 TO F01	*Call
2098<2096		5039<4996	X04 TO F01	*Call
2098<2096		5039<4997	Y01 TO F01	*Call
2098<2096		5039<4998	Y02 TO F01	*Call
2098<2096		5039<4999	Y03 TO F01	*Call
2098<2096		5039<5000	Y04 TO F01	*Call
2098<2096		5039<5001	Z01 TO F01	*Call
2098<2096		5039<5002	Z02 TO F01	*Call
2098<2096		5039<5003	Z03 TO F01	*Call
2098<2096		5039<5004	Z04 TO F01	*Call
2098<2096		5040<4900	Z00 TO F02	*Call
2098<2096		5040<4901	A01 TO F02	*Call
2098<2096		5040<4902	A02 TO F02	*Call
2098<2096		5040<4903	A03 TO F02	*Call
2098<2096		5040<4905	B01 TO F02	*Call
2098<2096		5040<4906	B02 TO F02	*Call
2098<2096		5040<4907	B03 TO F02	*Call
2098<2096		5040<4909	C01 TO F02	*Call
2098<2096		5040<4910	C02 TO F02	*Call
2098<2096		5040<4911	C03 TO F02	*Call
2098<2096		5040<4913	D01 TO F02	*Call
2098<2096		5040<4914	D02 TO F02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5040<4915	D03 TO F02	*Call
2098<2096		5040<4917	E01 TO F02	*Call
2098<2096		5040<4918	E02 TO F02	*Call
2098<2096		5040<4921	F01 TO F02	*Call
2098<2096		5040<4922	F02 TO F02	*Call
2098<2096		5040<4925	G01 TO F02	*Call
2098<2096		5040<4929	H01 TO F02	*Call
2098<2096		5040<4933	I01 TO F02	*Call
2098<2096		5040<4937	J01 TO F02	*Call
2098<2096		5040<4944	K04 TO F02	*Call
2098<2096		5040<4947	L03 TO F02	*Call
2098<2096		5040<4948	L04 TO F02	*Call
2098<2096		5040<4951	M03 TO F02	*Call
2098<2096		5040<4952	M04 TO F02	*Call
2098<2096		5040<4954	N02 TO F02	*Call
2098<2096		5040<4955	N03 TO F02	*Call
2098<2096		5040<4956	N04 TO F02	*Call
2098<2096		5040<4958	O02 TO F02	*Call
2098<2096		5040<4959	O03 TO F02	*Call
2098<2096		5040<4960	O04 TO F02	*Call
2098<2096		5040<4962	P02 TO F02	*Call
2098<2096		5040<4963	P03 TO F02	*Call
2098<2096		5040<4964	P04 TO F02	*Call
2098<2096		5040<4966	Q02 TO F02	*Call
2098<2096		5040<4967	Q03 TO F02	*Call
2098<2096		5040<4968	Q04 TO F02	*Call
2098<2096		5040<4969	R01 TO F02	*Call
2098<2096		5040<4970	R02 TO F02	*Call
2098<2096		5040<4971	R03 TO F02	*Call
2098<2096		5040<4972	R04 TO F02	*Call
2098<2096		5040<4973	S01 TO F02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5040<4974	S02 TO F02	*Call
2098<2096		5040<4975	S03 TO F02	*Call
2098<2096		5040<4976	S04 TO F02	*Call
2098<2096		5040<4977	T01 TO F02	*Call
2098<2096		5040<4978	T02 TO F02	*Call
2098<2096		5040<4979	T03 TO F02	*Call
2098<2096		5040<4980	T04 TO F02	*Call
2098<2096		5040<4981	U01 TO F02	*Call
2098<2096		5040<4982	U02 TO F02	*Call
2098<2096		5040<4983	U03 TO F02	*Call
2098<2096		5040<4984	U04 TO F02	*Call
2098<2096		5040<4985	V01 TO F02	*Call
2098<2096		5040<4986	V02 TO F02	*Call
2098<2096		5040<4987	V03 TO F02	*Call
2098<2096		5040<4988	V04 TO F02	*Call
2098<2096		5040<4989	W01 TO F02	*Call
2098<2096		5040<4990	W02 TO F02	*Call
2098<2096		5040<4991	W03 TO F02	*Call
2098<2096		5040<4992	W04 TO F02	*Call
2098<2096		5040<4993	X01 TO F02	*Call
2098<2096		5040<4994	X02 TO F02	*Call
2098<2096		5040<4995	X03 TO F02	*Call
2098<2096		5040<4996	X04 TO F02	*Call
2098<2096		5040<4997	Y01 TO F02	*Call
2098<2096		5040<4998	Y02 TO F02	*Call
2098<2096		5040<4999	Y03 TO F02	*Call
2098<2096		5040<5000	Y04 TO F02	*Call
2098<2096		5040<5001	Z01 TO F02	*Call
2098<2096		5040<5002	Z02 TO F02	*Call
2098<2096		5040<5003	Z03 TO F02	*Call
2098<2096		5040<5004	Z04 TO F02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5041<4900	Z00 TO F03	*Call
2098<2096		5041<4901	A01 TO F03	*Call
2098<2096		5041<4902	A02 TO F03	*Call
2098<2096		5041<4903	A03 TO F03	*Call
2098<2096		5041<4905	B01 TO F03	*Call
2098<2096		5041<4906	B02 TO F03	*Call
2098<2096		5041<4907	B03 TO F03	*Call
2098<2096		5041<4909	C01 TO F03	*Call
2098<2096		5041<4910	C02 TO F03	*Call
2098<2096		5041<4911	C03 TO F03	*Call
2098<2096		5041<4913	D01 TO F03	*Call
2098<2096		5041<4914	D02 TO F03	*Call
2098<2096		5041<4915	D03 TO F03	*Call
2098<2096		5041<4917	E01 TO F03	*Call
2098<2096		5041<4918	E02 TO F03	*Call
2098<2096		5041<4921	F01 TO F03	*Call
2098<2096		5041<4922	F02 TO F03	*Call
2098<2096		5041<4925	G01 TO F03	*Call
2098<2096		5041<4929	H01 TO F03	*Call
2098<2096		5041<4933	I01 TO F03	*Call
2098<2096		5041<4937	J01 TO F03	*Call
2098<2096		5041<4944	K04 TO F03	*Call
2098<2096		5041<4947	L03 TO F03	*Call
2098<2096		5041<4948	L04 TO F03	*Call
2098<2096		5041<4951	M03 TO F03	*Call
2098<2096		5041<4952	M04 TO F03	*Call
2098<2096		5041<4954	N02 TO F03	*Call
2098<2096		5041<4955	N03 TO F03	*Call
2098<2096		5041<4956	N04 TO F03	*Call
2098<2096		5041<4958	O02 TO F03	*Call
2098<2096		5041<4959	O03 TO F03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5041<4960	O04 TO F03	*Call
2098<2096		5041<4962	P02 TO F03	*Call
2098<2096		5041<4963	P03 TO F03	*Call
2098<2096		5041<4964	P04 TO F03	*Call
2098<2096		5041<4966	Q02 TO F03	*Call
2098<2096		5041<4967	Q03 TO F03	*Call
2098<2096		5041<4968	Q04 TO F03	*Call
2098<2096		5041<4969	R01 TO F03	*Call
2098<2096		5041<4970	R02 TO F03	*Call
2098<2096		5041<4971	R03 TO F03	*Call
2098<2096		5041<4972	R04 TO F03	*Call
2098<2096		5041<4973	S01 TO F03	*Call
2098<2096		5041<4974	S02 TO F03	*Call
2098<2096		5041<4975	S03 TO F03	*Call
2098<2096		5041<4976	S04 TO F03	*Call
2098<2096		5041<4977	T01 TO F03	*Call
2098<2096		5041<4978	T02 TO F03	*Call
2098<2096		5041<4979	T03 TO F03	*Call
2098<2096		5041<4980	T04 TO F03	*Call
2098<2096		5041<4981	U01 TO F03	*Call
2098<2096		5041<4982	U02 TO F03	*Call
2098<2096		5041<4983	U03 TO F03	*Call
2098<2096		5041<4984	U04 TO F03	*Call
2098<2096		5041<4985	V01 TO F03	*Call
2098<2096		5041<4986	V02 TO F03	*Call
2098<2096		5041<4987	V03 TO F03	*Call
2098<2096		5041<4988	V04 TO F03	*Call
2098<2096		5041<4989	W01 TO F03	*Call
2098<2096		5041<4990	W02 TO F03	*Call
2098<2096		5041<4991	W03 TO F03	*Call
2098<2096		5041<4992	W04 TO F03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5041<4993	X01 TO F03	*Call
2098<2096		5041<4994	X02 TO F03	*Call
2098<2096		5041<4995	X03 TO F03	*Call
2098<2096		5041<4996	X04 TO F03	*Call
2098<2096		5041<4997	Y01 TO F03	*Call
2098<2096		5041<4998	Y02 TO F03	*Call
2098<2096		5041<4999	Y03 TO F03	*Call
2098<2096		5041<5000	Y04 TO F03	*Call
2098<2096		5041<5001	Z01 TO F03	*Call
2098<2096		5041<5002	Z02 TO F03	*Call
2098<2096		5041<5003	Z03 TO F03	*Call
2098<2096		5041<5004	Z04 TO F03	*Call
2098<2096		5042<4900	Z00 TO F04	*Call
2098<2096		5042<4901	A01 TO F04	*Call
2098<2096		5042<4902	A02 TO F04	*Call
2098<2096		5042<4903	A03 TO F04	*Call
2098<2096		5042<4905	B01 TO F04	*Call
2098<2096		5042<4906	B02 TO F04	*Call
2098<2096		5042<4907	B03 TO F04	*Call
2098<2096		5042<4909	C01 TO F04	*Call
2098<2096		5042<4910	C02 TO F04	*Call
2098<2096		5042<4911	C03 TO F04	*Call
2098<2096		5042<4913	D01 TO F04	*Call
2098<2096		5042<4914	D02 TO F04	*Call
2098<2096		5042<4915	D03 TO F04	*Call
2098<2096		5042<4917	E01 TO F04	*Call
2098<2096		5042<4918	E02 TO F04	*Call
2098<2096		5042<4921	F01 TO F04	*Call
2098<2096		5042<4922	F02 TO F04	*Call
2098<2096		5042<4925	G01 TO F04	*Call
2098<2096		5042<4929	H01 TO F04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5042<4933	I01 TO F04	*Call
2098<2096		5042<4937	J01 TO F04	*Call
2098<2096		5042<4944	K04 TO F04	*Call
2098<2096		5042<4947	L03 TO F04	*Call
2098<2096		5042<4948	L04 TO F04	*Call
2098<2096		5042<4951	M03 TO F04	*Call
2098<2096		5042<4952	M04 TO F04	*Call
2098<2096		5042<4954	N02 TO F04	*Call
2098<2096		5042<4955	N03 TO F04	*Call
2098<2096		5042<4956	N04 TO F04	*Call
2098<2096		5042<4958	O02 TO F04	*Call
2098<2096		5042<4959	O03 TO F04	*Call
2098<2096		5042<4960	O04 TO F04	*Call
2098<2096		5042<4962	P02 TO F04	*Call
2098<2096		5042<4963	P03 TO F04	*Call
2098<2096		5042<4964	P04 TO F04	*Call
2098<2096		5042<4966	Q02 TO F04	*Call
2098<2096		5042<4967	Q03 TO F04	*Call
2098<2096		5042<4968	Q04 TO F04	*Call
2098<2096		5042<4969	R01 TO F04	*Call
2098<2096		5042<4970	R02 TO F04	*Call
2098<2096		5042<4971	R03 TO F04	*Call
2098<2096		5042<4972	R04 TO F04	*Call
2098<2096		5042<4973	S01 TO F04	*Call
2098<2096		5042<4974	S02 TO F04	*Call
2098<2096		5042<4975	S03 TO F04	*Call
2098<2096		5042<4976	S04 TO F04	*Call
2098<2096		5042<4977	T01 TO F04	*Call
2098<2096		5042<4978	T02 TO F04	*Call
2098<2096		5042<4979	T03 TO F04	*Call
2098<2096		5042<4980	T04 TO F04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5042<4981	U01 TO F04	*Call
2098<2096		5042<4982	U02 TO F04	*Call
2098<2096		5042<4983	U03 TO F04	*Call
2098<2096		5042<4984	U04 TO F04	*Call
2098<2096		5042<4985	V01 TO F04	*Call
2098<2096		5042<4986	V02 TO F04	*Call
2098<2096		5042<4987	V03 TO F04	*Call
2098<2096		5042<4988	V04 TO F04	*Call
2098<2096		5042<4989	W01 TO F04	*Call
2098<2096		5042<4990	W02 TO F04	*Call
2098<2096		5042<4991	W03 TO F04	*Call
2098<2096		5042<4992	W04 TO F04	*Call
2098<2096		5042<4993	X01 TO F04	*Call
2098<2096		5042<4994	X02 TO F04	*Call
2098<2096		5042<4995	X03 TO F04	*Call
2098<2096		5042<4996	X04 TO F04	*Call
2098<2096		5042<4997	Y01 TO F04	*Call
2098<2096		5042<4998	Y02 TO F04	*Call
2098<2096		5042<4999	Y03 TO F04	*Call
2098<2096		5042<5000	Y04 TO F04	*Call
2098<2096		5042<5001	Z01 TO F04	*Call
2098<2096		5042<5002	Z02 TO F04	*Call
2098<2096		5042<5003	Z03 TO F04	*Call
2098<2096		5042<5004	Z04 TO F04	*Call
2098<2096		5043<4900	Z00 TO F05	*Call
2098<2096		5043<4901	A01 TO F05	*Call
2098<2096		5043<4902	A02 TO F05	*Call
2098<2096		5043<4903	A03 TO F05	*Call
2098<2096		5043<4905	B01 TO F05	*Call
2098<2096		5043<4906	B02 TO F05	*Call
2098<2096		5043<4907	B03 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5043<4909	C01 TO F05	*Call
2098<2096		5043<4910	C02 TO F05	*Call
2098<2096		5043<4911	C03 TO F05	*Call
2098<2096		5043<4913	D01 TO F05	*Call
2098<2096		5043<4914	D02 TO F05	*Call
2098<2096		5043<4915	D03 TO F05	*Call
2098<2096		5043<4917	E01 TO F05	*Call
2098<2096		5043<4918	E02 TO F05	*Call
2098<2096		5043<4921	F01 TO F05	*Call
2098<2096		5043<4922	F02 TO F05	*Call
2098<2096		5043<4925	G01 TO F05	*Call
2098<2096		5043<4929	H01 TO F05	*Call
2098<2096		5043<4933	I01 TO F05	*Call
2098<2096		5043<4937	J01 TO F05	*Call
2098<2096		5043<4944	K04 TO F05	*Call
2098<2096		5043<4947	L03 TO F05	*Call
2098<2096		5043<4948	L04 TO F05	*Call
2098<2096		5043<4951	M03 TO F05	*Call
2098<2096		5043<4952	M04 TO F05	*Call
2098<2096		5043<4954	N02 TO F05	*Call
2098<2096		5043<4955	N03 TO F05	*Call
2098<2096		5043<4956	N04 TO F05	*Call
2098<2096		5043<4958	O02 TO F05	*Call
2098<2096		5043<4959	O03 TO F05	*Call
2098<2096		5043<4960	O04 TO F05	*Call
2098<2096		5043<4962	P02 TO F05	*Call
2098<2096		5043<4963	P03 TO F05	*Call
2098<2096		5043<4964	P04 TO F05	*Call
2098<2096		5043<4966	Q02 TO F05	*Call
2098<2096		5043<4967	Q03 TO F05	*Call
2098<2096		5043<4968	Q04 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5043<4969	R01 TO F05	*Call
2098<2096		5043<4970	R02 TO F05	*Call
2098<2096		5043<4971	R03 TO F05	*Call
2098<2096		5043<4972	R04 TO F05	*Call
2098<2096		5043<4973	S01 TO F05	*Call
2098<2096		5043<4974	S02 TO F05	*Call
2098<2096		5043<4975	S03 TO F05	*Call
2098<2096		5043<4976	S04 TO F05	*Call
2098<2096		5043<4977	T01 TO F05	*Call
2098<2096		5043<4978	T02 TO F05	*Call
2098<2096		5043<4979	T03 TO F05	*Call
2098<2096		5043<4980	T04 TO F05	*Call
2098<2096		5043<4981	U01 TO F05	*Call
2098<2096		5043<4982	U02 TO F05	*Call
2098<2096		5043<4983	U03 TO F05	*Call
2098<2096		5043<4984	U04 TO F05	*Call
2098<2096		5043<4985	V01 TO F05	*Call
2098<2096		5043<4986	V02 TO F05	*Call
2098<2096		5043<4987	V03 TO F05	*Call
2098<2096		5043<4988	V04 TO F05	*Call
2098<2096		5043<4989	W01 TO F05	*Call
2098<2096		5043<4990	W02 TO F05	*Call
2098<2096		5043<4991	W03 TO F05	*Call
2098<2096		5043<4992	W04 TO F05	*Call
2098<2096		5043<4993	X01 TO F05	*Call
2098<2096		5043<4994	X02 TO F05	*Call
2098<2096		5043<4995	X03 TO F05	*Call
2098<2096		5043<4996	X04 TO F05	*Call
2098<2096		5043<4997	Y01 TO F05	*Call
2098<2096		5043<4998	Y02 TO F05	*Call
2098<2096		5043<4999	Y03 TO F05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5043<5000	Y04 TO F05	*Call
2098<2096		5043<5001	Z01 TO F05	*Call
2098<2096		5043<5002	Z02 TO F05	*Call
2098<2096		5043<5003	Z03 TO F05	*Call
2098<2096		5043<5004	Z04 TO F05	*Call
2098<2096		5044<4900	Z00 TO G01	*Call
2098<2096		5044<4901	A01 TO G01	*Call
2098<2096		5044<4902	A02 TO G01	*Call
2098<2096		5044<4903	A03 TO G01	*Call
2098<2096		5044<4905	B01 TO G01	*Call
2098<2096		5044<4906	B02 TO G01	*Call
2098<2096		5044<4907	B03 TO G01	*Call
2098<2096		5044<4909	C01 TO G01	*Call
2098<2096		5044<4910	C02 TO G01	*Call
2098<2096		5044<4911	C03 TO G01	*Call
2098<2096		5044<4913	D01 TO G01	*Call
2098<2096		5044<4914	D02 TO G01	*Call
2098<2096		5044<4915	D03 TO G01	*Call
2098<2096		5044<4917	E01 TO G01	*Call
2098<2096		5044<4918	E02 TO G01	*Call
2098<2096		5044<4921	F01 TO G01	*Call
2098<2096		5044<4922	F02 TO G01	*Call
2098<2096		5044<4925	G01 TO G01	*Call
2098<2096		5044<4929	H01 TO G01	*Call
2098<2096		5044<4933	I01 TO G01	*Call
2098<2096		5044<4937	J01 TO G01	*Call
2098<2096		5044<4944	K04 TO G01	*Call
2098<2096		5044<4947	L03 TO G01	*Call
2098<2096		5044<4948	L04 TO G01	*Call
2098<2096		5044<4951	M03 TO G01	*Call
2098<2096		5044<4952	M04 TO G01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5044<4954	N02 TO G01	*Call
2098<2096		5044<4955	N03 TO G01	*Call
2098<2096		5044<4956	N04 TO G01	*Call
2098<2096		5044<4958	O02 TO G01	*Call
2098<2096		5044<4959	O03 TO G01	*Call
2098<2096		5044<4960	O04 TO G01	*Call
2098<2096		5044<4962	P02 TO G01	*Call
2098<2096		5044<4963	P03 TO G01	*Call
2098<2096		5044<4964	P04 TO G01	*Call
2098<2096		5044<4966	Q02 TO G01	*Call
2098<2096		5044<4967	Q03 TO G01	*Call
2098<2096		5044<4968	Q04 TO G01	*Call
2098<2096		5044<4969	R01 TO G01	*Call
2098<2096		5044<4970	R02 TO G01	*Call
2098<2096		5044<4971	R03 TO G01	*Call
2098<2096		5044<4972	R04 TO G01	*Call
2098<2096		5044<4973	S01 TO G01	*Call
2098<2096		5044<4974	S02 TO G01	*Call
2098<2096		5044<4975	S03 TO G01	*Call
2098<2096		5044<4976	S04 TO G01	*Call
2098<2096		5044<4977	T01 TO G01	*Call
2098<2096		5044<4978	T02 TO G01	*Call
2098<2096		5044<4979	T03 TO G01	*Call
2098<2096		5044<4980	T04 TO G01	*Call
2098<2096		5044<4981	U01 TO G01	*Call
2098<2096		5044<4982	U02 TO G01	*Call
2098<2096		5044<4983	U03 TO G01	*Call
2098<2096		5044<4984	U04 TO G01	*Call
2098<2096		5044<4985	V01 TO G01	*Call
2098<2096		5044<4986	V02 TO G01	*Call
2098<2096		5044<4987	V03 TO G01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5044<4988	V04 TO G01	*Call
2098<2096		5044<4989	W01 TO G01	*Call
2098<2096		5044<4990	W02 TO G01	*Call
2098<2096		5044<4991	W03 TO G01	*Call
2098<2096		5044<4992	W04 TO G01	*Call
2098<2096		5044<4993	X01 TO G01	*Call
2098<2096		5044<4994	X02 TO G01	*Call
2098<2096		5044<4995	X03 TO G01	*Call
2098<2096		5044<4996	X04 TO G01	*Call
2098<2096		5044<4997	Y01 TO G01	*Call
2098<2096		5044<4998	Y02 TO G01	*Call
2098<2096		5044<4999	Y03 TO G01	*Call
2098<2096		5044<5000	Y04 TO G01	*Call
2098<2096		5044<5001	Z01 TO G01	*Call
2098<2096		5044<5002	Z02 TO G01	*Call
2098<2096		5044<5003	Z03 TO G01	*Call
2098<2096		5044<5004	Z04 TO G01	*Call
2098<2096		5045<4900	Z00 TO G02	*Call
2098<2096		5045<4901	A01 TO G02	*Call
2098<2096		5045<4902	A02 TO G02	*Call
2098<2096		5045<4903	A03 TO G02	*Call
2098<2096		5045<4905	B01 TO G02	*Call
2098<2096		5045<4906	B02 TO G02	*Call
2098<2096		5045<4907	B03 TO G02	*Call
2098<2096		5045<4909	C01 TO G02	*Call
2098<2096		5045<4910	C02 TO G02	*Call
2098<2096		5045<4911	C03 TO G02	*Call
2098<2096		5045<4913	D01 TO G02	*Call
2098<2096		5045<4914	D02 TO G02	*Call
2098<2096		5045<4915	D03 TO G02	*Call
2098<2096		5045<4917	E01 TO G02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5045<4918	E02 TO G02	*Call
2098<2096		5045<4921	F01 TO G02	*Call
2098<2096		5045<4922	F02 TO G02	*Call
2098<2096		5045<4925	G01 TO G02	*Call
2098<2096		5045<4929	H01 TO G02	*Call
2098<2096		5045<4933	I01 TO G02	*Call
2098<2096		5045<4937	J01 TO G02	*Call
2098<2096		5045<4944	K04 TO G02	*Call
2098<2096		5045<4947	L03 TO G02	*Call
2098<2096		5045<4948	L04 TO G02	*Call
2098<2096		5045<4951	M03 TO G02	*Call
2098<2096		5045<4952	M04 TO G02	*Call
2098<2096		5045<4954	N02 TO G02	*Call
2098<2096		5045<4955	N03 TO G02	*Call
2098<2096		5045<4956	N04 TO G02	*Call
2098<2096		5045<4958	O02 TO G02	*Call
2098<2096		5045<4959	O03 TO G02	*Call
2098<2096		5045<4960	O04 TO G02	*Call
2098<2096		5045<4962	P02 TO G02	*Call
2098<2096		5045<4963	P03 TO G02	*Call
2098<2096		5045<4964	P04 TO G02	*Call
2098<2096		5045<4966	Q02 TO G02	*Call
2098<2096		5045<4967	Q03 TO G02	*Call
2098<2096		5045<4968	Q04 TO G02	*Call
2098<2096		5045<4969	R01 TO G02	*Call
2098<2096		5045<4970	R02 TO G02	*Call
2098<2096		5045<4971	R03 TO G02	*Call
2098<2096		5045<4972	R04 TO G02	*Call
2098<2096		5045<4973	S01 TO G02	*Call
2098<2096		5045<4974	S02 TO G02	*Call
2098<2096		5045<4975	S03 TO G02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5045<4976	S04 TO G02	*Call
2098<2096		5045<4977	T01 TO G02	*Call
2098<2096		5045<4978	T02 TO G02	*Call
2098<2096		5045<4979	T03 TO G02	*Call
2098<2096		5045<4980	T04 TO G02	*Call
2098<2096		5045<4981	U01 TO G02	*Call
2098<2096		5045<4982	U02 TO G02	*Call
2098<2096		5045<4983	U03 TO G02	*Call
2098<2096		5045<4984	U04 TO G02	*Call
2098<2096		5045<4985	V01 TO G02	*Call
2098<2096		5045<4986	V02 TO G02	*Call
2098<2096		5045<4987	V03 TO G02	*Call
2098<2096		5045<4988	V04 TO G02	*Call
2098<2096		5045<4989	W01 TO G02	*Call
2098<2096		5045<4990	W02 TO G02	*Call
2098<2096		5045<4991	W03 TO G02	*Call
2098<2096		5045<4992	W04 TO G02	*Call
2098<2096		5045<4993	X01 TO G02	*Call
2098<2096		5045<4994	X02 TO G02	*Call
2098<2096		5045<4995	X03 TO G02	*Call
2098<2096		5045<4996	X04 TO G02	*Call
2098<2096		5045<4997	Y01 TO G02	*Call
2098<2096		5045<4998	Y02 TO G02	*Call
2098<2096		5045<4999	Y03 TO G02	*Call
2098<2096		5045<5000	Y04 TO G02	*Call
2098<2096		5045<5001	Z01 TO G02	*Call
2098<2096		5045<5002	Z02 TO G02	*Call
2098<2096		5045<5003	Z03 TO G02	*Call
2098<2096		5045<5004	Z04 TO G02	*Call
2098<2096		5046<4900	Z00 TO G03	*Call
2098<2096		5046<4901	A01 TO G03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5046<4902	A02 TO G03	*Call
2098<2096		5046<4903	A03 TO G03	*Call
2098<2096		5046<4905	B01 TO G03	*Call
2098<2096		5046<4906	B02 TO G03	*Call
2098<2096		5046<4907	B03 TO G03	*Call
2098<2096		5046<4909	C01 TO G03	*Call
2098<2096		5046<4910	C02 TO G03	*Call
2098<2096		5046<4911	C03 TO G03	*Call
2098<2096		5046<4913	D01 TO G03	*Call
2098<2096		5046<4914	D02 TO G03	*Call
2098<2096		5046<4915	D03 TO G03	*Call
2098<2096		5046<4917	E01 TO G03	*Call
2098<2096		5046<4918	E02 TO G03	*Call
2098<2096		5046<4921	F01 TO G03	*Call
2098<2096		5046<4922	F02 TO G03	*Call
2098<2096		5046<4925	G01 TO G03	*Call
2098<2096		5046<4929	H01 TO G03	*Call
2098<2096		5046<4933	I01 TO G03	*Call
2098<2096		5046<4937	J01 TO G03	*Call
2098<2096		5046<4944	K04 TO G03	*Call
2098<2096		5046<4947	L03 TO G03	*Call
2098<2096		5046<4948	L04 TO G03	*Call
2098<2096		5046<4951	M03 TO G03	*Call
2098<2096		5046<4952	M04 TO G03	*Call
2098<2096		5046<4954	N02 TO G03	*Call
2098<2096		5046<4955	N03 TO G03	*Call
2098<2096		5046<4956	N04 TO G03	*Call
2098<2096		5046<4958	O02 TO G03	*Call
2098<2096		5046<4959	O03 TO G03	*Call
2098<2096		5046<4960	O04 TO G03	*Call
2098<2096		5046<4962	P02 TO G03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5046<4963	P03 TO G03	*Call
2098<2096		5046<4964	P04 TO G03	*Call
2098<2096		5046<4966	Q02 TO G03	*Call
2098<2096		5046<4967	Q03 TO G03	*Call
2098<2096		5046<4968	Q04 TO G03	*Call
2098<2096		5046<4969	R01 TO G03	*Call
2098<2096		5046<4970	R02 TO G03	*Call
2098<2096		5046<4971	R03 TO G03	*Call
2098<2096		5046<4972	R04 TO G03	*Call
2098<2096		5046<4973	S01 TO G03	*Call
2098<2096		5046<4974	S02 TO G03	*Call
2098<2096		5046<4975	S03 TO G03	*Call
2098<2096		5046<4976	S04 TO G03	*Call
2098<2096		5046<4977	T01 TO G03	*Call
2098<2096		5046<4978	T02 TO G03	*Call
2098<2096		5046<4979	T03 TO G03	*Call
2098<2096		5046<4980	T04 TO G03	*Call
2098<2096		5046<4981	U01 TO G03	*Call
2098<2096		5046<4982	U02 TO G03	*Call
2098<2096		5046<4983	U03 TO G03	*Call
2098<2096		5046<4984	U04 TO G03	*Call
2098<2096		5046<4985	V01 TO G03	*Call
2098<2096		5046<4986	V02 TO G03	*Call
2098<2096		5046<4987	V03 TO G03	*Call
2098<2096		5046<4988	V04 TO G03	*Call
2098<2096		5046<4989	W01 TO G03	*Call
2098<2096		5046<4990	W02 TO G03	*Call
2098<2096		5046<4991	W03 TO G03	*Call
2098<2096		5046<4992	W04 TO G03	*Call
2098<2096		5046<4993	X01 TO G03	*Call
2098<2096		5046<4994	X02 TO G03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5046<4995	X03 TO G03	*Call
2098<2096		5046<4996	X04 TO G03	*Call
2098<2096		5046<4997	Y01 TO G03	*Call
2098<2096		5046<4998	Y02 TO G03	*Call
2098<2096		5046<4999	Y03 TO G03	*Call
2098<2096		5046<5000	Y04 TO G03	*Call
2098<2096		5046<5001	Z01 TO G03	*Call
2098<2096		5046<5002	Z02 TO G03	*Call
2098<2096		5046<5003	Z03 TO G03	*Call
2098<2096		5046<5004	Z04 TO G03	*Call
2098<2096		5047<4900	Z00 TO G04	*Call
2098<2096		5047<4901	A01 TO G04	*Call
2098<2096		5047<4902	A02 TO G04	*Call
2098<2096		5047<4903	A03 TO G04	*Call
2098<2096		5047<4905	B01 TO G04	*Call
2098<2096		5047<4906	B02 TO G04	*Call
2098<2096		5047<4907	B03 TO G04	*Call
2098<2096		5047<4909	C01 TO G04	*Call
2098<2096		5047<4910	C02 TO G04	*Call
2098<2096		5047<4911	C03 TO G04	*Call
2098<2096		5047<4913	D01 TO G04	*Call
2098<2096		5047<4914	D02 TO G04	*Call
2098<2096		5047<4915	D03 TO G04	*Call
2098<2096		5047<4917	E01 TO G04	*Call
2098<2096		5047<4918	E02 TO G04	*Call
2098<2096		5047<4921	F01 TO G04	*Call
2098<2096		5047<4922	F02 TO G04	*Call
2098<2096		5047<4925	G01 TO G04	*Call
2098<2096		5047<4929	H01 TO G04	*Call
2098<2096		5047<4933	I01 TO G04	*Call
2098<2096		5047<4937	J01 TO G04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5047<4944	K04 TO G04	*Call
2098<2096		5047<4947	L03 TO G04	*Call
2098<2096		5047<4948	L04 TO G04	*Call
2098<2096		5047<4951	M03 TO G04	*Call
2098<2096		5047<4952	M04 TO G04	*Call
2098<2096		5047<4954	N02 TO G04	*Call
2098<2096		5047<4955	N03 TO G04	*Call
2098<2096		5047<4956	N04 TO G04	*Call
2098<2096		5047<4958	O02 TO G04	*Call
2098<2096		5047<4959	O03 TO G04	*Call
2098<2096		5047<4960	O04 TO G04	*Call
2098<2096		5047<4962	P02 TO G04	*Call
2098<2096		5047<4963	P03 TO G04	*Call
2098<2096		5047<4964	P04 TO G04	*Call
2098<2096		5047<4966	Q02 TO G04	*Call
2098<2096		5047<4967	Q03 TO G04	*Call
2098<2096		5047<4968	Q04 TO G04	*Call
2098<2096		5047<4969	R01 TO G04	*Call
2098<2096		5047<4970	R02 TO G04	*Call
2098<2096		5047<4971	R03 TO G04	*Call
2098<2096		5047<4972	R04 TO G04	*Call
2098<2096		5047<4973	S01 TO G04	*Call
2098<2096		5047<4974	S02 TO G04	*Call
2098<2096		5047<4975	S03 TO G04	*Call
2098<2096		5047<4976	S04 TO G04	*Call
2098<2096		5047<4977	T01 TO G04	*Call
2098<2096		5047<4978	T02 TO G04	*Call
2098<2096		5047<4979	T03 TO G04	*Call
2098<2096		5047<4980	T04 TO G04	*Call
2098<2096		5047<4981	U01 TO G04	*Call
2098<2096		5047<4982	U02 TO G04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5047<4983	U03 TO G04	*Call
2098<2096		5047<4984	U04 TO G04	*Call
2098<2096		5047<4985	V01 TO G04	*Call
2098<2096		5047<4986	V02 TO G04	*Call
2098<2096		5047<4987	V03 TO G04	*Call
2098<2096		5047<4988	V04 TO G04	*Call
2098<2096		5047<4989	W01 TO G04	*Call
2098<2096		5047<4990	W02 TO G04	*Call
2098<2096		5047<4991	W03 TO G04	*Call
2098<2096		5047<4992	W04 TO G04	*Call
2098<2096		5047<4993	X01 TO G04	*Call
2098<2096		5047<4994	X02 TO G04	*Call
2098<2096		5047<4995	X03 TO G04	*Call
2098<2096		5047<4996	X04 TO G04	*Call
2098<2096		5047<4997	Y01 TO G04	*Call
2098<2096		5047<4998	Y02 TO G04	*Call
2098<2096		5047<4999	Y03 TO G04	*Call
2098<2096		5047<5000	Y04 TO G04	*Call
2098<2096		5047<5001	Z01 TO G04	*Call
2098<2096		5047<5002	Z02 TO G04	*Call
2098<2096		5047<5003	Z03 TO G04	*Call
2098<2096		5047<5004	Z04 TO G04	*Call
2098<2096		5048<4900	Z00 TO G05	*Call
2098<2096		5048<4901	A01 TO G05	*Call
2098<2096		5048<4902	A02 TO G05	*Call
2098<2096		5048<4903	A03 TO G05	*Call
2098<2096		5048<4905	B01 TO G05	*Call
2098<2096		5048<4906	B02 TO G05	*Call
2098<2096		5048<4907	B03 TO G05	*Call
2098<2096		5048<4909	C01 TO G05	*Call
2098<2096		5048<4910	C02 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5048<4911	C03 TO G05	*Call
2098<2096		5048<4913	D01 TO G05	*Call
2098<2096		5048<4914	D02 TO G05	*Call
2098<2096		5048<4915	D03 TO G05	*Call
2098<2096		5048<4917	E01 TO G05	*Call
2098<2096		5048<4918	E02 TO G05	*Call
2098<2096		5048<4921	F01 TO G05	*Call
2098<2096		5048<4922	F02 TO G05	*Call
2098<2096		5048<4925	G01 TO G05	*Call
2098<2096		5048<4929	H01 TO G05	*Call
2098<2096		5048<4933	I01 TO G05	*Call
2098<2096		5048<4937	J01 TO G05	*Call
2098<2096		5048<4944	K04 TO G05	*Call
2098<2096		5048<4947	L03 TO G05	*Call
2098<2096		5048<4948	L04 TO G05	*Call
2098<2096		5048<4951	M03 TO G05	*Call
2098<2096		5048<4952	M04 TO G05	*Call
2098<2096		5048<4954	N02 TO G05	*Call
2098<2096		5048<4955	N03 TO G05	*Call
2098<2096		5048<4956	N04 TO G05	*Call
2098<2096		5048<4958	O02 TO G05	*Call
2098<2096		5048<4959	O03 TO G05	*Call
2098<2096		5048<4960	O04 TO G05	*Call
2098<2096		5048<4962	P02 TO G05	*Call
2098<2096		5048<4963	P03 TO G05	*Call
2098<2096		5048<4964	P04 TO G05	*Call
2098<2096		5048<4966	Q02 TO G05	*Call
2098<2096		5048<4967	Q03 TO G05	*Call
2098<2096		5048<4968	Q04 TO G05	*Call
2098<2096		5048<4969	R01 TO G05	*Call
2098<2096		5048<4970	R02 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5048<4971	R03 TO G05	*Call
2098<2096		5048<4972	R04 TO G05	*Call
2098<2096		5048<4973	S01 TO G05	*Call
2098<2096		5048<4974	S02 TO G05	*Call
2098<2096		5048<4975	S03 TO G05	*Call
2098<2096		5048<4976	S04 TO G05	*Call
2098<2096		5048<4977	T01 TO G05	*Call
2098<2096		5048<4978	T02 TO G05	*Call
2098<2096		5048<4979	T03 TO G05	*Call
2098<2096		5048<4980	T04 TO G05	*Call
2098<2096		5048<4981	U01 TO G05	*Call
2098<2096		5048<4982	U02 TO G05	*Call
2098<2096		5048<4983	U03 TO G05	*Call
2098<2096		5048<4984	U04 TO G05	*Call
2098<2096		5048<4985	V01 TO G05	*Call
2098<2096		5048<4986	V02 TO G05	*Call
2098<2096		5048<4987	V03 TO G05	*Call
2098<2096		5048<4988	V04 TO G05	*Call
2098<2096		5048<4989	W01 TO G05	*Call
2098<2096		5048<4990	W02 TO G05	*Call
2098<2096		5048<4991	W03 TO G05	*Call
2098<2096		5048<4992	W04 TO G05	*Call
2098<2096		5048<4993	X01 TO G05	*Call
2098<2096		5048<4994	X02 TO G05	*Call
2098<2096		5048<4995	X03 TO G05	*Call
2098<2096		5048<4996	X04 TO G05	*Call
2098<2096		5048<4997	Y01 TO G05	*Call
2098<2096		5048<4998	Y02 TO G05	*Call
2098<2096		5048<4999	Y03 TO G05	*Call
2098<2096		5048<5000	Y04 TO G05	*Call
2098<2096		5048<5001	Z01 TO G05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5048<5002	Z02 TO G05	*Call
2098<2096		5048<5003	Z03 TO G05	*Call
2098<2096		5048<5004	Z04 TO G05	*Call
2098<2096		5049<4900	Z00 TO H01	*Call
2098<2096		5049<4901	A01 TO H01	*Call
2098<2096		5049<4902	A02 TO H01	*Call
2098<2096		5049<4903	A03 TO H01	*Call
2098<2096		5049<4905	B01 TO H01	*Call
2098<2096		5049<4906	B02 TO H01	*Call
2098<2096		5049<4907	B03 TO H01	*Call
2098<2096		5049<4909	C01 TO H01	*Call
2098<2096		5049<4910	C02 TO H01	*Call
2098<2096		5049<4911	C03 TO H01	*Call
2098<2096		5049<4913	D01 TO H01	*Call
2098<2096		5049<4914	D02 TO H01	*Call
2098<2096		5049<4915	D03 TO H01	*Call
2098<2096		5049<4917	E01 TO H01	*Call
2098<2096		5049<4918	E02 TO H01	*Call
2098<2096		5049<4921	F01 TO H01	*Call
2098<2096		5049<4922	F02 TO H01	*Call
2098<2096		5049<4925	G01 TO H01	*Call
2098<2096		5049<4929	H01 TO H01	*Call
2098<2096		5049<4933	I01 TO H01	*Call
2098<2096		5049<4937	J01 TO H01	*Call
2098<2096		5049<4944	K04 TO H01	*Call
2098<2096		5049<4947	L03 TO H01	*Call
2098<2096		5049<4948	L04 TO H01	*Call
2098<2096		5049<4951	M03 TO H01	*Call
2098<2096		5049<4952	M04 TO H01	*Call
2098<2096		5049<4954	N02 TO H01	*Call
2098<2096		5049<4955	N03 TO H01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5049<4956	N04 TO H01	*Call
2098<2096		5049<4958	O02 TO H01	*Call
2098<2096		5049<4959	O03 TO H01	*Call
2098<2096		5049<4960	O04 TO H01	*Call
2098<2096		5049<4962	P02 TO H01	*Call
2098<2096		5049<4963	P03 TO H01	*Call
2098<2096		5049<4964	P04 TO H01	*Call
2098<2096		5049<4966	Q02 TO H01	*Call
2098<2096		5049<4967	Q03 TO H01	*Call
2098<2096		5049<4968	Q04 TO H01	*Call
2098<2096		5049<4969	R01 TO H01	*Call
2098<2096		5049<4970	R02 TO H01	*Call
2098<2096		5049<4971	R03 TO H01	*Call
2098<2096		5049<4972	R04 TO H01	*Call
2098<2096		5049<4973	S01 TO H01	*Call
2098<2096		5049<4974	S02 TO H01	*Call
2098<2096		5049<4975	S03 TO H01	*Call
2098<2096		5049<4976	S04 TO H01	*Call
2098<2096		5049<4977	T01 TO H01	*Call
2098<2096		5049<4978	T02 TO H01	*Call
2098<2096		5049<4979	T03 TO H01	*Call
2098<2096		5049<4980	T04 TO H01	*Call
2098<2096		5049<4981	U01 TO H01	*Call
2098<2096		5049<4982	U02 TO H01	*Call
2098<2096		5049<4983	U03 TO H01	*Call
2098<2096		5049<4984	U04 TO H01	*Call
2098<2096		5049<4985	V01 TO H01	*Call
2098<2096		5049<4986	V02 TO H01	*Call
2098<2096		5049<4987	V03 TO H01	*Call
2098<2096		5049<4988	V04 TO H01	*Call
2098<2096		5049<4989	W01 TO H01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5049<4990	W02 TO H01	*Call
2098<2096		5049<4991	W03 TO H01	*Call
2098<2096		5049<4992	W04 TO H01	*Call
2098<2096		5049<4993	X01 TO H01	*Call
2098<2096		5049<4994	X02 TO H01	*Call
2098<2096		5049<4995	X03 TO H01	*Call
2098<2096		5049<4996	X04 TO H01	*Call
2098<2096		5049<4997	Y01 TO H01	*Call
2098<2096		5049<4998	Y02 TO H01	*Call
2098<2096		5049<4999	Y03 TO H01	*Call
2098<2096		5049<5000	Y04 TO H01	*Call
2098<2096		5049<5001	Z01 TO H01	*Call
2098<2096		5049<5002	Z02 TO H01	*Call
2098<2096		5049<5003	Z03 TO H01	*Call
2098<2096		5049<5004	Z04 TO H01	*Call
2098<2096		5050<4900	Z00 TO H02	*Call
2098<2096		5050<4901	A01 TO H02	*Call
2098<2096		5050<4902	A02 TO H02	*Call
2098<2096		5050<4903	A03 TO H02	*Call
2098<2096		5050<4905	B01 TO H02	*Call
2098<2096		5050<4906	B02 TO H02	*Call
2098<2096		5050<4907	B03 TO H02	*Call
2098<2096		5050<4909	C01 TO H02	*Call
2098<2096		5050<4910	C02 TO H02	*Call
2098<2096		5050<4911	C03 TO H02	*Call
2098<2096		5050<4913	D01 TO H02	*Call
2098<2096		5050<4914	D02 TO H02	*Call
2098<2096		5050<4915	D03 TO H02	*Call
2098<2096		5050<4917	E01 TO H02	*Call
2098<2096		5050<4918	E02 TO H02	*Call
2098<2096		5050<4921	F01 TO H02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5050<4922	F02 TO H02	*Call
2098<2096		5050<4925	G01 TO H02	*Call
2098<2096		5050<4929	H01 TO H02	*Call
2098<2096		5050<4933	I01 TO H02	*Call
2098<2096		5050<4937	J01 TO H02	*Call
2098<2096		5050<4944	K04 TO H02	*Call
2098<2096		5050<4947	L03 TO H02	*Call
2098<2096		5050<4948	L04 TO H02	*Call
2098<2096		5050<4951	M03 TO H02	*Call
2098<2096		5050<4952	M04 TO H02	*Call
2098<2096		5050<4954	N02 TO H02	*Call
2098<2096		5050<4955	N03 TO H02	*Call
2098<2096		5050<4956	N04 TO H02	*Call
2098<2096		5050<4958	O02 TO H02	*Call
2098<2096		5050<4959	O03 TO H02	*Call
2098<2096		5050<4960	O04 TO H02	*Call
2098<2096		5050<4962	P02 TO H02	*Call
2098<2096		5050<4963	P03 TO H02	*Call
2098<2096		5050<4964	P04 TO H02	*Call
2098<2096		5050<4966	Q02 TO H02	*Call
2098<2096		5050<4967	Q03 TO H02	*Call
2098<2096		5050<4968	Q04 TO H02	*Call
2098<2096		5050<4969	R01 TO H02	*Call
2098<2096		5050<4970	R02 TO H02	*Call
2098<2096		5050<4971	R03 TO H02	*Call
2098<2096		5050<4972	R04 TO H02	*Call
2098<2096		5050<4973	S01 TO H02	*Call
2098<2096		5050<4974	S02 TO H02	*Call
2098<2096		5050<4975	S03 TO H02	*Call
2098<2096		5050<4976	S04 TO H02	*Call
2098<2096		5050<4977	T01 TO H02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5050<4978	T02 TO H02	*Call
2098<2096		5050<4979	T03 TO H02	*Call
2098<2096		5050<4980	T04 TO H02	*Call
2098<2096		5050<4981	U01 TO H02	*Call
2098<2096		5050<4982	U02 TO H02	*Call
2098<2096		5050<4983	U03 TO H02	*Call
2098<2096		5050<4984	U04 TO H02	*Call
2098<2096		5050<4985	V01 TO H02	*Call
2098<2096		5050<4986	V02 TO H02	*Call
2098<2096		5050<4987	V03 TO H02	*Call
2098<2096		5050<4988	V04 TO H02	*Call
2098<2096		5050<4989	W01 TO H02	*Call
2098<2096		5050<4990	W02 TO H02	*Call
2098<2096		5050<4991	W03 TO H02	*Call
2098<2096		5050<4992	W04 TO H02	*Call
2098<2096		5050<4993	X01 TO H02	*Call
2098<2096		5050<4994	X02 TO H02	*Call
2098<2096		5050<4995	X03 TO H02	*Call
2098<2096		5050<4996	X04 TO H02	*Call
2098<2096		5050<4997	Y01 TO H02	*Call
2098<2096		5050<4998	Y02 TO H02	*Call
2098<2096		5050<4999	Y03 TO H02	*Call
2098<2096		5050<5000	Y04 TO H02	*Call
2098<2096		5050<5001	Z01 TO H02	*Call
2098<2096		5050<5002	Z02 TO H02	*Call
2098<2096		5050<5003	Z03 TO H02	*Call
2098<2096		5050<5004	Z04 TO H02	*Call
2098<2096		5051<4900	Z00 TO H03	*Call
2098<2096		5051<4901	A01 TO H03	*Call
2098<2096		5051<4902	A02 TO H03	*Call
2098<2096		5051<4903	A03 TO H03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5051<4905	B01 TO H03	*Call
2098<2096		5051<4906	B02 TO H03	*Call
2098<2096		5051<4907	B03 TO H03	*Call
2098<2096		5051<4909	C01 TO H03	*Call
2098<2096		5051<4910	C02 TO H03	*Call
2098<2096		5051<4911	C03 TO H03	*Call
2098<2096		5051<4913	D01 TO H03	*Call
2098<2096		5051<4914	D02 TO H03	*Call
2098<2096		5051<4915	D03 TO H03	*Call
2098<2096		5051<4917	E01 TO H03	*Call
2098<2096		5051<4918	E02 TO H03	*Call
2098<2096		5051<4921	F01 TO H03	*Call
2098<2096		5051<4922	F02 TO H03	*Call
2098<2096		5051<4925	G01 TO H03	*Call
2098<2096		5051<4929	H01 TO H03	*Call
2098<2096		5051<4933	I01 TO H03	*Call
2098<2096		5051<4937	J01 TO H03	*Call
2098<2096		5051<4944	K04 TO H03	*Call
2098<2096		5051<4947	L03 TO H03	*Call
2098<2096		5051<4948	L04 TO H03	*Call
2098<2096		5051<4951	M03 TO H03	*Call
2098<2096		5051<4952	M04 TO H03	*Call
2098<2096		5051<4954	N02 TO H03	*Call
2098<2096		5051<4955	N03 TO H03	*Call
2098<2096		5051<4956	N04 TO H03	*Call
2098<2096		5051<4958	O02 TO H03	*Call
2098<2096		5051<4959	O03 TO H03	*Call
2098<2096		5051<4960	O04 TO H03	*Call
2098<2096		5051<4962	P02 TO H03	*Call
2098<2096		5051<4963	P03 TO H03	*Call
2098<2096		5051<4964	P04 TO H03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5051<4966	Q02 TO H03	*Call
2098<2096		5051<4967	Q03 TO H03	*Call
2098<2096		5051<4968	Q04 TO H03	*Call
2098<2096		5051<4969	R01 TO H03	*Call
2098<2096		5051<4970	R02 TO H03	*Call
2098<2096		5051<4971	R03 TO H03	*Call
2098<2096		5051<4972	R04 TO H03	*Call
2098<2096		5051<4973	S01 TO H03	*Call
2098<2096		5051<4974	S02 TO H03	*Call
2098<2096		5051<4975	S03 TO H03	*Call
2098<2096		5051<4976	S04 TO H03	*Call
2098<2096		5051<4977	T01 TO H03	*Call
2098<2096		5051<4978	T02 TO H03	*Call
2098<2096		5051<4979	T03 TO H03	*Call
2098<2096		5051<4980	T04 TO H03	*Call
2098<2096		5051<4981	U01 TO H03	*Call
2098<2096		5051<4982	U02 TO H03	*Call
2098<2096		5051<4983	U03 TO H03	*Call
2098<2096		5051<4984	U04 TO H03	*Call
2098<2096		5051<4985	V01 TO H03	*Call
2098<2096		5051<4986	V02 TO H03	*Call
2098<2096		5051<4987	V03 TO H03	*Call
2098<2096		5051<4988	V04 TO H03	*Call
2098<2096		5051<4989	W01 TO H03	*Call
2098<2096		5051<4990	W02 TO H03	*Call
2098<2096		5051<4991	W03 TO H03	*Call
2098<2096		5051<4992	W04 TO H03	*Call
2098<2096		5051<4993	X01 TO H03	*Call
2098<2096		5051<4994	X02 TO H03	*Call
2098<2096		5051<4995	X03 TO H03	*Call
2098<2096		5051<4996	X04 TO H03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5051<4997	Y01 TO H03	*Call
2098<2096		5051<4998	Y02 TO H03	*Call
2098<2096		5051<4999	Y03 TO H03	*Call
2098<2096		5051<5000	Y04 TO H03	*Call
2098<2096		5051<5001	Z01 TO H03	*Call
2098<2096		5051<5002	Z02 TO H03	*Call
2098<2096		5051<5003	Z03 TO H03	*Call
2098<2096		5051<5004	Z04 TO H03	*Call
2098<2096		5052<4900	Z00 TO H04	*Call
2098<2096		5052<4901	A01 TO H04	*Call
2098<2096		5052<4902	A02 TO H04	*Call
2098<2096		5052<4903	A03 TO H04	*Call
2098<2096		5052<4905	B01 TO H04	*Call
2098<2096		5052<4906	B02 TO H04	*Call
2098<2096		5052<4907	B03 TO H04	*Call
2098<2096		5052<4909	C01 TO H04	*Call
2098<2096		5052<4910	C02 TO H04	*Call
2098<2096		5052<4911	C03 TO H04	*Call
2098<2096		5052<4913	D01 TO H04	*Call
2098<2096		5052<4914	D02 TO H04	*Call
2098<2096		5052<4915	D03 TO H04	*Call
2098<2096		5052<4917	E01 TO H04	*Call
2098<2096		5052<4918	E02 TO H04	*Call
2098<2096		5052<4921	F01 TO H04	*Call
2098<2096		5052<4922	F02 TO H04	*Call
2098<2096		5052<4925	G01 TO H04	*Call
2098<2096		5052<4929	H01 TO H04	*Call
2098<2096		5052<4933	I01 TO H04	*Call
2098<2096		5052<4937	J01 TO H04	*Call
2098<2096		5052<4944	K04 TO H04	*Call
2098<2096		5052<4947	L03 TO H04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5052<4948	L04 TO H04	*Call
2098<2096		5052<4951	M03 TO H04	*Call
2098<2096		5052<4952	M04 TO H04	*Call
2098<2096		5052<4954	N02 TO H04	*Call
2098<2096		5052<4955	N03 TO H04	*Call
2098<2096		5052<4956	N04 TO H04	*Call
2098<2096		5052<4958	O02 TO H04	*Call
2098<2096		5052<4959	O03 TO H04	*Call
2098<2096		5052<4960	O04 TO H04	*Call
2098<2096		5052<4962	P02 TO H04	*Call
2098<2096		5052<4963	P03 TO H04	*Call
2098<2096		5052<4964	P04 TO H04	*Call
2098<2096		5052<4966	Q02 TO H04	*Call
2098<2096		5052<4967	Q03 TO H04	*Call
2098<2096		5052<4968	Q04 TO H04	*Call
2098<2096		5052<4969	R01 TO H04	*Call
2098<2096		5052<4970	R02 TO H04	*Call
2098<2096		5052<4971	R03 TO H04	*Call
2098<2096		5052<4972	R04 TO H04	*Call
2098<2096		5052<4973	S01 TO H04	*Call
2098<2096		5052<4974	S02 TO H04	*Call
2098<2096		5052<4975	S03 TO H04	*Call
2098<2096		5052<4976	S04 TO H04	*Call
2098<2096		5052<4977	T01 TO H04	*Call
2098<2096		5052<4978	T02 TO H04	*Call
2098<2096		5052<4979	T03 TO H04	*Call
2098<2096		5052<4980	T04 TO H04	*Call
2098<2096		5052<4981	U01 TO H04	*Call
2098<2096		5052<4982	U02 TO H04	*Call
2098<2096		5052<4983	U03 TO H04	*Call
2098<2096		5052<4984	U04 TO H04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5052<4985	V01 TO H04	*Call
2098<2096		5052<4986	V02 TO H04	*Call
2098<2096		5052<4987	V03 TO H04	*Call
2098<2096		5052<4988	V04 TO H04	*Call
2098<2096		5052<4989	W01 TO H04	*Call
2098<2096		5052<4990	W02 TO H04	*Call
2098<2096		5052<4991	W03 TO H04	*Call
2098<2096		5052<4992	W04 TO H04	*Call
2098<2096		5052<4993	X01 TO H04	*Call
2098<2096		5052<4994	X02 TO H04	*Call
2098<2096		5052<4995	X03 TO H04	*Call
2098<2096		5052<4996	X04 TO H04	*Call
2098<2096		5052<4997	Y01 TO H04	*Call
2098<2096		5052<4998	Y02 TO H04	*Call
2098<2096		5052<4999	Y03 TO H04	*Call
2098<2096		5052<5000	Y04 TO H04	*Call
2098<2096		5052<5001	Z01 TO H04	*Call
2098<2096		5052<5002	Z02 TO H04	*Call
2098<2096		5052<5003	Z03 TO H04	*Call
2098<2096		5052<5004	Z04 TO H04	*Call
2098<2096		5053<4900	Z00 TO H05	*Call
2098<2096		5053<4901	A01 TO H05	*Call
2098<2096		5053<4902	A02 TO H05	*Call
2098<2096		5053<4903	A03 TO H05	*Call
2098<2096		5053<4905	B01 TO H05	*Call
2098<2096		5053<4906	B02 TO H05	*Call
2098<2096		5053<4907	B03 TO H05	*Call
2098<2096		5053<4909	C01 TO H05	*Call
2098<2096		5053<4910	C02 TO H05	*Call
2098<2096		5053<4911	C03 TO H05	*Call
2098<2096		5053<4913	D01 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5053<4914	D02 TO H05	*Call
2098<2096		5053<4915	D03 TO H05	*Call
2098<2096		5053<4917	E01 TO H05	*Call
2098<2096		5053<4918	E02 TO H05	*Call
2098<2096		5053<4921	F01 TO H05	*Call
2098<2096		5053<4922	F02 TO H05	*Call
2098<2096		5053<4925	G01 TO H05	*Call
2098<2096		5053<4929	H01 TO H05	*Call
2098<2096		5053<4933	I01 TO H05	*Call
2098<2096		5053<4937	J01 TO H05	*Call
2098<2096		5053<4944	K04 TO H05	*Call
2098<2096		5053<4947	L03 TO H05	*Call
2098<2096		5053<4948	L04 TO H05	*Call
2098<2096		5053<4951	M03 TO H05	*Call
2098<2096		5053<4952	M04 TO H05	*Call
2098<2096		5053<4954	N02 TO H05	*Call
2098<2096		5053<4955	N03 TO H05	*Call
2098<2096		5053<4956	N04 TO H05	*Call
2098<2096		5053<4958	O02 TO H05	*Call
2098<2096		5053<4959	O03 TO H05	*Call
2098<2096		5053<4960	O04 TO H05	*Call
2098<2096		5053<4962	P02 TO H05	*Call
2098<2096		5053<4963	P03 TO H05	*Call
2098<2096		5053<4964	P04 TO H05	*Call
2098<2096		5053<4966	Q02 TO H05	*Call
2098<2096		5053<4967	Q03 TO H05	*Call
2098<2096		5053<4968	Q04 TO H05	*Call
2098<2096		5053<4969	R01 TO H05	*Call
2098<2096		5053<4970	R02 TO H05	*Call
2098<2096		5053<4971	R03 TO H05	*Call
2098<2096		5053<4972	R04 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5053<4973	S01 TO H05	*Call
2098<2096		5053<4974	S02 TO H05	*Call
2098<2096		5053<4975	S03 TO H05	*Call
2098<2096		5053<4976	S04 TO H05	*Call
2098<2096		5053<4977	T01 TO H05	*Call
2098<2096		5053<4978	T02 TO H05	*Call
2098<2096		5053<4979	T03 TO H05	*Call
2098<2096		5053<4980	T04 TO H05	*Call
2098<2096		5053<4981	U01 TO H05	*Call
2098<2096		5053<4982	U02 TO H05	*Call
2098<2096		5053<4983	U03 TO H05	*Call
2098<2096		5053<4984	U04 TO H05	*Call
2098<2096		5053<4985	V01 TO H05	*Call
2098<2096		5053<4986	V02 TO H05	*Call
2098<2096		5053<4987	V03 TO H05	*Call
2098<2096		5053<4988	V04 TO H05	*Call
2098<2096		5053<4989	W01 TO H05	*Call
2098<2096		5053<4990	W02 TO H05	*Call
2098<2096		5053<4991	W03 TO H05	*Call
2098<2096		5053<4992	W04 TO H05	*Call
2098<2096		5053<4993	X01 TO H05	*Call
2098<2096		5053<4994	X02 TO H05	*Call
2098<2096		5053<4995	X03 TO H05	*Call
2098<2096		5053<4996	X04 TO H05	*Call
2098<2096		5053<4997	Y01 TO H05	*Call
2098<2096		5053<4998	Y02 TO H05	*Call
2098<2096		5053<4999	Y03 TO H05	*Call
2098<2096		5053<5000	Y04 TO H05	*Call
2098<2096		5053<5001	Z01 TO H05	*Call
2098<2096		5053<5002	Z02 TO H05	*Call
2098<2096		5053<5003	Z03 TO H05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5053<5004	Z04 TO H05	*Call
2098<2096		5054<4900	Z00 TO I01	*Call
2098<2096		5054<4901	A01 TO I01	*Call
2098<2096		5054<4902	A02 TO I01	*Call
2098<2096		5054<4903	A03 TO I01	*Call
2098<2096		5054<4905	B01 TO I01	*Call
2098<2096		5054<4906	B02 TO I01	*Call
2098<2096		5054<4907	B03 TO I01	*Call
2098<2096		5054<4909	C01 TO I01	*Call
2098<2096		5054<4910	C02 TO I01	*Call
2098<2096		5054<4911	C03 TO I01	*Call
2098<2096		5054<4913	D01 TO I01	*Call
2098<2096		5054<4914	D02 TO I01	*Call
2098<2096		5054<4915	D03 TO I01	*Call
2098<2096		5054<4917	E01 TO I01	*Call
2098<2096		5054<4918	E02 TO I01	*Call
2098<2096		5054<4921	F01 TO I01	*Call
2098<2096		5054<4922	F02 TO I01	*Call
2098<2096		5054<4925	G01 TO I01	*Call
2098<2096		5054<4929	H01 TO I01	*Call
2098<2096		5054<4933	I01 TO I01	*Call
2098<2096		5054<4937	J01 TO I01	*Call
2098<2096		5054<4944	K04 TO I01	*Call
2098<2096		5054<4947	L03 TO I01	*Call
2098<2096		5054<4948	L04 TO I01	*Call
2098<2096		5054<4951	M03 TO I01	*Call
2098<2096		5054<4952	M04 TO I01	*Call
2098<2096		5054<4954	N02 TO I01	*Call
2098<2096		5054<4955	N03 TO I01	*Call
2098<2096		5054<4956	N04 TO I01	*Call
2098<2096		5054<4958	O02 TO I01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5054<4959	O03 TO I01	*Call
2098<2096		5054<4960	O04 TO I01	*Call
2098<2096		5054<4962	P02 TO I01	*Call
2098<2096		5054<4963	P03 TO I01	*Call
2098<2096		5054<4964	P04 TO I01	*Call
2098<2096		5054<4966	Q02 TO I01	*Call
2098<2096		5054<4967	Q03 TO I01	*Call
2098<2096		5054<4968	Q04 TO I01	*Call
2098<2096		5054<4969	R01 TO I01	*Call
2098<2096		5054<4970	R02 TO I01	*Call
2098<2096		5054<4971	R03 TO I01	*Call
2098<2096		5054<4972	R04 TO I01	*Call
2098<2096		5054<4973	S01 TO I01	*Call
2098<2096		5054<4974	S02 TO I01	*Call
2098<2096		5054<4975	S03 TO I01	*Call
2098<2096		5054<4976	S04 TO I01	*Call
2098<2096		5054<4977	T01 TO I01	*Call
2098<2096		5054<4978	T02 TO I01	*Call
2098<2096		5054<4979	T03 TO I01	*Call
2098<2096		5054<4980	T04 TO I01	*Call
2098<2096		5054<4981	U01 TO I01	*Call
2098<2096		5054<4982	U02 TO I01	*Call
2098<2096		5054<4983	U03 TO I01	*Call
2098<2096		5054<4984	U04 TO I01	*Call
2098<2096		5054<4985	V01 TO I01	*Call
2098<2096		5054<4986	V02 TO I01	*Call
2098<2096		5054<4987	V03 TO I01	*Call
2098<2096		5054<4988	V04 TO I01	*Call
2098<2096		5054<4989	W01 TO I01	*Call
2098<2096		5054<4990	W02 TO I01	*Call
2098<2096		5054<4991	W03 TO I01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5054<4992	W04 TO I01	*Call
2098<2096		5054<4993	X01 TO I01	*Call
2098<2096		5054<4994	X02 TO I01	*Call
2098<2096		5054<4995	X03 TO I01	*Call
2098<2096		5054<4996	X04 TO I01	*Call
2098<2096		5054<4997	Y01 TO I01	*Call
2098<2096		5054<4998	Y02 TO I01	*Call
2098<2096		5054<4999	Y03 TO I01	*Call
2098<2096		5054<5000	Y04 TO I01	*Call
2098<2096		5054<5001	Z01 TO I01	*Call
2098<2096		5054<5002	Z02 TO I01	*Call
2098<2096		5054<5003	Z03 TO I01	*Call
2098<2096		5054<5004	Z04 TO I01	*Call
2098<2096		5055<4900	Z00 TO I02	*Call
2098<2096		5055<4901	A01 TO I02	*Call
2098<2096		5055<4902	A02 TO I02	*Call
2098<2096		5055<4903	A03 TO I02	*Call
2098<2096		5055<4905	B01 TO I02	*Call
2098<2096		5055<4906	B02 TO I02	*Call
2098<2096		5055<4907	B03 TO I02	*Call
2098<2096		5055<4909	C01 TO I02	*Call
2098<2096		5055<4910	C02 TO I02	*Call
2098<2096		5055<4911	C03 TO I02	*Call
2098<2096		5055<4913	D01 TO I02	*Call
2098<2096		5055<4914	D02 TO I02	*Call
2098<2096		5055<4915	D03 TO I02	*Call
2098<2096		5055<4917	E01 TO I02	*Call
2098<2096		5055<4918	E02 TO I02	*Call
2098<2096		5055<4921	F01 TO I02	*Call
2098<2096		5055<4922	F02 TO I02	*Call
2098<2096		5055<4925	G01 TO I02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5055<4929	H01 TO I02	*Call
2098<2096		5055<4933	I01 TO I02	*Call
2098<2096		5055<4937	J01 TO I02	*Call
2098<2096		5055<4944	K04 TO I02	*Call
2098<2096		5055<4947	L03 TO I02	*Call
2098<2096		5055<4948	L04 TO I02	*Call
2098<2096		5055<4951	M03 TO I02	*Call
2098<2096		5055<4952	M04 TO I02	*Call
2098<2096		5055<4954	N02 TO I02	*Call
2098<2096		5055<4955	N03 TO I02	*Call
2098<2096		5055<4956	N04 TO I02	*Call
2098<2096		5055<4958	O02 TO I02	*Call
2098<2096		5055<4959	O03 TO I02	*Call
2098<2096		5055<4960	O04 TO I02	*Call
2098<2096		5055<4962	P02 TO I02	*Call
2098<2096		5055<4963	P03 TO I02	*Call
2098<2096		5055<4964	P04 TO I02	*Call
2098<2096		5055<4966	Q02 TO I02	*Call
2098<2096		5055<4967	Q03 TO I02	*Call
2098<2096		5055<4968	Q04 TO I02	*Call
2098<2096		5055<4969	R01 TO I02	*Call
2098<2096		5055<4970	R02 TO I02	*Call
2098<2096		5055<4971	R03 TO I02	*Call
2098<2096		5055<4972	R04 TO I02	*Call
2098<2096		5055<4973	S01 TO I02	*Call
2098<2096		5055<4974	S02 TO I02	*Call
2098<2096		5055<4975	S03 TO I02	*Call
2098<2096		5055<4976	S04 TO I02	*Call
2098<2096		5055<4977	T01 TO I02	*Call
2098<2096		5055<4978	T02 TO I02	*Call
2098<2096		5055<4979	T03 TO I02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5055<4980	T04 TO I02	*Call
2098<2096		5055<4981	U01 TO I02	*Call
2098<2096		5055<4982	U02 TO I02	*Call
2098<2096		5055<4983	U03 TO I02	*Call
2098<2096		5055<4984	U04 TO I02	*Call
2098<2096		5055<4985	V01 TO I02	*Call
2098<2096		5055<4986	V02 TO I02	*Call
2098<2096		5055<4987	V03 TO I02	*Call
2098<2096		5055<4988	V04 TO I02	*Call
2098<2096		5055<4989	W01 TO I02	*Call
2098<2096		5055<4990	W02 TO I02	*Call
2098<2096		5055<4991	W03 TO I02	*Call
2098<2096		5055<4992	W04 TO I02	*Call
2098<2096		5055<4993	X01 TO I02	*Call
2098<2096		5055<4994	X02 TO I02	*Call
2098<2096		5055<4995	X03 TO I02	*Call
2098<2096		5055<4996	X04 TO I02	*Call
2098<2096		5055<4997	Y01 TO I02	*Call
2098<2096		5055<4998	Y02 TO I02	*Call
2098<2096		5055<4999	Y03 TO I02	*Call
2098<2096		5055<5000	Y04 TO I02	*Call
2098<2096		5055<5001	Z01 TO I02	*Call
2098<2096		5055<5002	Z02 TO I02	*Call
2098<2096		5055<5003	Z03 TO I02	*Call
2098<2096		5055<5004	Z04 TO I02	*Call
2098<2096		5056<4900	Z00 TO I03	*Call
2098<2096		5056<4901	A01 TO I03	*Call
2098<2096		5056<4902	A02 TO I03	*Call
2098<2096		5056<4903	A03 TO I03	*Call
2098<2096		5056<4905	B01 TO I03	*Call
2098<2096		5056<4906	B02 TO I03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5056<4907	B03 TO I03	*Call
2098<2096		5056<4909	C01 TO I03	*Call
2098<2096		5056<4910	C02 TO I03	*Call
2098<2096		5056<4911	C03 TO I03	*Call
2098<2096		5056<4913	D01 TO I03	*Call
2098<2096		5056<4914	D02 TO I03	*Call
2098<2096		5056<4915	D03 TO I03	*Call
2098<2096		5056<4917	E01 TO I03	*Call
2098<2096		5056<4918	E02 TO I03	*Call
2098<2096		5056<4921	F01 TO I03	*Call
2098<2096		5056<4922	F02 TO I03	*Call
2098<2096		5056<4925	G01 TO I03	*Call
2098<2096		5056<4929	H01 TO I03	*Call
2098<2096		5056<4933	I01 TO I03	*Call
2098<2096		5056<4937	J01 TO I03	*Call
2098<2096		5056<4944	K04 TO I03	*Call
2098<2096		5056<4947	L03 TO I03	*Call
2098<2096		5056<4948	L04 TO I03	*Call
2098<2096		5056<4951	M03 TO I03	*Call
2098<2096		5056<4952	M04 TO I03	*Call
2098<2096		5056<4954	N02 TO I03	*Call
2098<2096		5056<4955	N03 TO I03	*Call
2098<2096		5056<4956	N04 TO I03	*Call
2098<2096		5056<4958	O02 TO I03	*Call
2098<2096		5056<4959	O03 TO I03	*Call
2098<2096		5056<4960	O04 TO I03	*Call
2098<2096		5056<4962	P02 TO I03	*Call
2098<2096		5056<4963	P03 TO I03	*Call
2098<2096		5056<4964	P04 TO I03	*Call
2098<2096		5056<4966	Q02 TO I03	*Call
2098<2096		5056<4967	Q03 TO I03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5056<4968	Q04 TO I03	*Call
2098<2096		5056<4969	R01 TO I03	*Call
2098<2096		5056<4970	R02 TO I03	*Call
2098<2096		5056<4971	R03 TO I03	*Call
2098<2096		5056<4972	R04 TO I03	*Call
2098<2096		5056<4973	S01 TO I03	*Call
2098<2096		5056<4974	S02 TO I03	*Call
2098<2096		5056<4975	S03 TO I03	*Call
2098<2096		5056<4976	S04 TO I03	*Call
2098<2096		5056<4977	T01 TO I03	*Call
2098<2096		5056<4978	T02 TO I03	*Call
2098<2096		5056<4979	T03 TO I03	*Call
2098<2096		5056<4980	T04 TO I03	*Call
2098<2096		5056<4981	U01 TO I03	*Call
2098<2096		5056<4982	U02 TO I03	*Call
2098<2096		5056<4983	U03 TO I03	*Call
2098<2096		5056<4984	U04 TO I03	*Call
2098<2096		5056<4985	V01 TO I03	*Call
2098<2096		5056<4986	V02 TO I03	*Call
2098<2096		5056<4987	V03 TO I03	*Call
2098<2096		5056<4988	V04 TO I03	*Call
2098<2096		5056<4989	W01 TO I03	*Call
2098<2096		5056<4990	W02 TO I03	*Call
2098<2096		5056<4991	W03 TO I03	*Call
2098<2096		5056<4992	W04 TO I03	*Call
2098<2096		5056<4993	X01 TO I03	*Call
2098<2096		5056<4994	X02 TO I03	*Call
2098<2096		5056<4995	X03 TO I03	*Call
2098<2096		5056<4996	X04 TO I03	*Call
2098<2096		5056<4997	Y01 TO I03	*Call
2098<2096		5056<4998	Y02 TO I03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5056<4999	Y03 TO I03	*Call
2098<2096		5056<5000	Y04 TO I03	*Call
2098<2096		5056<5001	Z01 TO I03	*Call
2098<2096		5056<5002	Z02 TO I03	*Call
2098<2096		5056<5003	Z03 TO I03	*Call
2098<2096		5056<5004	Z04 TO I03	*Call
2098<2096		5057<4900	Z00 TO I04	*Call
2098<2096		5057<4901	A01 TO I04	*Call
2098<2096		5057<4902	A02 TO I04	*Call
2098<2096		5057<4903	A03 TO I04	*Call
2098<2096		5057<4905	B01 TO I04	*Call
2098<2096		5057<4906	B02 TO I04	*Call
2098<2096		5057<4907	B03 TO I04	*Call
2098<2096		5057<4909	C01 TO I04	*Call
2098<2096		5057<4910	C02 TO I04	*Call
2098<2096		5057<4911	C03 TO I04	*Call
2098<2096		5057<4913	D01 TO I04	*Call
2098<2096		5057<4914	D02 TO I04	*Call
2098<2096		5057<4915	D03 TO I04	*Call
2098<2096		5057<4917	E01 TO I04	*Call
2098<2096		5057<4918	E02 TO I04	*Call
2098<2096		5057<4921	F01 TO I04	*Call
2098<2096		5057<4922	F02 TO I04	*Call
2098<2096		5057<4925	G01 TO I04	*Call
2098<2096		5057<4929	H01 TO I04	*Call
2098<2096		5057<4933	I01 TO I04	*Call
2098<2096		5057<4937	J01 TO I04	*Call
2098<2096		5057<4944	K04 TO I04	*Call
2098<2096		5057<4947	L03 TO I04	*Call
2098<2096		5057<4948	L04 TO I04	*Call
2098<2096		5057<4951	M03 TO I04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5057<4952	M04 TO I04	*Call
2098<2096		5057<4954	N02 TO I04	*Call
2098<2096		5057<4955	N03 TO I04	*Call
2098<2096		5057<4956	N04 TO I04	*Call
2098<2096		5057<4958	O02 TO I04	*Call
2098<2096		5057<4959	O03 TO I04	*Call
2098<2096		5057<4960	O04 TO I04	*Call
2098<2096		5057<4962	P02 TO I04	*Call
2098<2096		5057<4963	P03 TO I04	*Call
2098<2096		5057<4964	P04 TO I04	*Call
2098<2096		5057<4966	Q02 TO I04	*Call
2098<2096		5057<4967	Q03 TO I04	*Call
2098<2096		5057<4968	Q04 TO I04	*Call
2098<2096		5057<4969	R01 TO I04	*Call
2098<2096		5057<4970	R02 TO I04	*Call
2098<2096		5057<4971	R03 TO I04	*Call
2098<2096		5057<4972	R04 TO I04	*Call
2098<2096		5057<4973	S01 TO I04	*Call
2098<2096		5057<4974	S02 TO I04	*Call
2098<2096		5057<4975	S03 TO I04	*Call
2098<2096		5057<4976	S04 TO I04	*Call
2098<2096		5057<4977	T01 TO I04	*Call
2098<2096		5057<4978	T02 TO I04	*Call
2098<2096		5057<4979	T03 TO I04	*Call
2098<2096		5057<4980	T04 TO I04	*Call
2098<2096		5057<4981	U01 TO I04	*Call
2098<2096		5057<4982	U02 TO I04	*Call
2098<2096		5057<4983	U03 TO I04	*Call
2098<2096		5057<4984	U04 TO I04	*Call
2098<2096		5057<4985	V01 TO I04	*Call
2098<2096		5057<4986	V02 TO I04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5057<4987	V03 TO I04	*Call
2098<2096		5057<4988	V04 TO I04	*Call
2098<2096		5057<4989	W01 TO I04	*Call
2098<2096		5057<4990	W02 TO I04	*Call
2098<2096		5057<4991	W03 TO I04	*Call
2098<2096		5057<4992	W04 TO I04	*Call
2098<2096		5057<4993	X01 TO I04	*Call
2098<2096		5057<4994	X02 TO I04	*Call
2098<2096		5057<4995	X03 TO I04	*Call
2098<2096		5057<4996	X04 TO I04	*Call
2098<2096		5057<4997	Y01 TO I04	*Call
2098<2096		5057<4998	Y02 TO I04	*Call
2098<2096		5057<4999	Y03 TO I04	*Call
2098<2096		5057<5000	Y04 TO I04	*Call
2098<2096		5057<5001	Z01 TO I04	*Call
2098<2096		5057<5002	Z02 TO I04	*Call
2098<2096		5057<5003	Z03 TO I04	*Call
2098<2096		5057<5004	Z04 TO I04	*Call
2098<2096		5058<4900	Z00 TO I05	*Call
2098<2096		5058<4901	A01 TO I05	*Call
2098<2096		5058<4902	A02 TO I05	*Call
2098<2096		5058<4903	A03 TO I05	*Call
2098<2096		5058<4905	B01 TO I05	*Call
2098<2096		5058<4906	B02 TO I05	*Call
2098<2096		5058<4907	B03 TO I05	*Call
2098<2096		5058<4909	C01 TO I05	*Call
2098<2096		5058<4910	C02 TO I05	*Call
2098<2096		5058<4911	C03 TO I05	*Call
2098<2096		5058<4913	D01 TO I05	*Call
2098<2096		5058<4914	D02 TO I05	*Call
2098<2096		5058<4915	D03 TO I05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5058<4917	E01 TO I05	*Call
2098<2096		5058<4918	E02 TO I05	*Call
2098<2096		5058<4921	F01 TO I05	*Call
2098<2096		5058<4922	F02 TO I05	*Call
2098<2096		5058<4925	G01 TO I05	*Call
2098<2096		5058<4929	H01 TO I05	*Call
2098<2096		5058<4933	I01 TO I05	*Call
2098<2096		5058<4937	J01 TO I05	*Call
2098<2096		5058<4944	K04 TO I05	*Call
2098<2096		5058<4947	L03 TO I05	*Call
2098<2096		5058<4948	L04 TO I05	*Call
2098<2096		5058<4951	M03 TO I05	*Call
2098<2096		5058<4952	M04 TO I05	*Call
2098<2096		5058<4954	N02 TO I05	*Call
2098<2096		5058<4955	N03 TO I05	*Call
2098<2096		5058<4956	N04 TO I05	*Call
2098<2096		5058<4958	O02 TO I05	*Call
2098<2096		5058<4959	O03 TO I05	*Call
2098<2096		5058<4960	O04 TO I05	*Call
2098<2096		5058<4962	P02 TO I05	*Call
2098<2096		5058<4963	P03 TO I05	*Call
2098<2096		5058<4964	P04 TO I05	*Call
2098<2096		5058<4966	Q02 TO I05	*Call
2098<2096		5058<4967	Q03 TO I05	*Call
2098<2096		5058<4968	Q04 TO I05	*Call
2098<2096		5058<4969	R01 TO I05	*Call
2098<2096		5058<4970	R02 TO I05	*Call
2098<2096		5058<4971	R03 TO I05	*Call
2098<2096		5058<4972	R04 TO I05	*Call
2098<2096		5058<4973	S01 TO I05	*Call
2098<2096		5058<4974	S02 TO I05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5058<4975	S03 TO I05	*Call
2098<2096		5058<4976	S04 TO I05	*Call
2098<2096		5058<4977	T01 TO I05	*Call
2098<2096		5058<4978	T02 TO I05	*Call
2098<2096		5058<4979	T03 TO I05	*Call
2098<2096		5058<4980	T04 TO I05	*Call
2098<2096		5058<4981	U01 TO I05	*Call
2098<2096		5058<4982	U02 TO I05	*Call
2098<2096		5058<4983	U03 TO I05	*Call
2098<2096		5058<4984	U04 TO I05	*Call
2098<2096		5058<4985	V01 TO I05	*Call
2098<2096		5058<4986	V02 TO I05	*Call
2098<2096		5058<4987	V03 TO I05	*Call
2098<2096		5058<4988	V04 TO I05	*Call
2098<2096		5058<4989	W01 TO I05	*Call
2098<2096		5058<4990	W02 TO I05	*Call
2098<2096		5058<4991	W03 TO I05	*Call
2098<2096		5058<4992	W04 TO I05	*Call
2098<2096		5058<4993	X01 TO I05	*Call
2098<2096		5058<4994	X02 TO I05	*Call
2098<2096		5058<4995	X03 TO I05	*Call
2098<2096		5058<4996	X04 TO I05	*Call
2098<2096		5058<4997	Y01 TO I05	*Call
2098<2096		5058<4998	Y02 TO I05	*Call
2098<2096		5058<4999	Y03 TO I05	*Call
2098<2096		5058<5000	Y04 TO I05	*Call
2098<2096		5058<5001	Z01 TO I05	*Call
2098<2096		5058<5002	Z02 TO I05	*Call
2098<2096		5058<5003	Z03 TO I05	*Call
2098<2096		5058<5004	Z04 TO I05	*Call
2098<2096		5059<4900	Z00 TO J01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5059<4901	A01 TO J01	*Call
2098<2096		5059<4902	A02 TO J01	*Call
2098<2096		5059<4903	A03 TO J01	*Call
2098<2096		5059<4905	B01 TO J01	*Call
2098<2096		5059<4906	B02 TO J01	*Call
2098<2096		5059<4907	B03 TO J01	*Call
2098<2096		5059<4909	C01 TO J01	*Call
2098<2096		5059<4910	C02 TO J01	*Call
2098<2096		5059<4911	C03 TO J01	*Call
2098<2096		5059<4913	D01 TO J01	*Call
2098<2096		5059<4914	D02 TO J01	*Call
2098<2096		5059<4915	D03 TO J01	*Call
2098<2096		5059<4917	E01 TO J01	*Call
2098<2096		5059<4918	E02 TO J01	*Call
2098<2096		5059<4921	F01 TO J01	*Call
2098<2096		5059<4922	F02 TO J01	*Call
2098<2096		5059<4925	G01 TO J01	*Call
2098<2096		5059<4929	H01 TO J01	*Call
2098<2096		5059<4933	I01 TO J01	*Call
2098<2096		5059<4937	J01 TO J01	*Call
2098<2096		5059<4944	K04 TO J01	*Call
2098<2096		5059<4947	L03 TO J01	*Call
2098<2096		5059<4948	L04 TO J01	*Call
2098<2096		5059<4951	M03 TO J01	*Call
2098<2096		5059<4952	M04 TO J01	*Call
2098<2096		5059<4954	N02 TO J01	*Call
2098<2096		5059<4955	N03 TO J01	*Call
2098<2096		5059<4956	N04 TO J01	*Call
2098<2096		5059<4958	O02 TO J01	*Call
2098<2096		5059<4959	O03 TO J01	*Call
2098<2096		5059<4960	O04 TO J01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5059<4962	P02 TO J01	*Call
2098<2096		5059<4963	P03 TO J01	*Call
2098<2096		5059<4964	P04 TO J01	*Call
2098<2096		5059<4966	Q02 TO J01	*Call
2098<2096		5059<4967	Q03 TO J01	*Call
2098<2096		5059<4968	Q04 TO J01	*Call
2098<2096		5059<4969	R01 TO J01	*Call
2098<2096		5059<4970	R02 TO J01	*Call
2098<2096		5059<4971	R03 TO J01	*Call
2098<2096		5059<4972	R04 TO J01	*Call
2098<2096		5059<4973	S01 TO J01	*Call
2098<2096		5059<4974	S02 TO J01	*Call
2098<2096		5059<4975	S03 TO J01	*Call
2098<2096		5059<4976	S04 TO J01	*Call
2098<2096		5059<4977	T01 TO J01	*Call
2098<2096		5059<4978	T02 TO J01	*Call
2098<2096		5059<4979	T03 TO J01	*Call
2098<2096		5059<4980	T04 TO J01	*Call
2098<2096		5059<4981	U01 TO J01	*Call
2098<2096		5059<4982	U02 TO J01	*Call
2098<2096		5059<4983	U03 TO J01	*Call
2098<2096		5059<4984	U04 TO J01	*Call
2098<2096		5059<4985	V01 TO J01	*Call
2098<2096		5059<4986	V02 TO J01	*Call
2098<2096		5059<4987	V03 TO J01	*Call
2098<2096		5059<4988	V04 TO J01	*Call
2098<2096		5059<4989	W01 TO J01	*Call
2098<2096		5059<4990	W02 TO J01	*Call
2098<2096		5059<4991	W03 TO J01	*Call
2098<2096		5059<4992	W04 TO J01	*Call
2098<2096		5059<4993	X01 TO J01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5059<4994	X02 TO J01	*Call
2098<2096		5059<4995	X03 TO J01	*Call
2098<2096		5059<4996	X04 TO J01	*Call
2098<2096		5059<4997	Y01 TO J01	*Call
2098<2096		5059<4998	Y02 TO J01	*Call
2098<2096		5059<4999	Y03 TO J01	*Call
2098<2096		5059<5000	Y04 TO J01	*Call
2098<2096		5059<5001	Z01 TO J01	*Call
2098<2096		5059<5002	Z02 TO J01	*Call
2098<2096		5059<5003	Z03 TO J01	*Call
2098<2096		5059<5004	Z04 TO J01	*Call
2098<2096		5060<4900	Z00 TO J02	*Call
2098<2096		5060<4901	A01 TO J02	*Call
2098<2096		5060<4902	A02 TO J02	*Call
2098<2096		5060<4903	A03 TO J02	*Call
2098<2096		5060<4905	B01 TO J02	*Call
2098<2096		5060<4906	B02 TO J02	*Call
2098<2096		5060<4907	B03 TO J02	*Call
2098<2096		5060<4909	C01 TO J02	*Call
2098<2096		5060<4910	C02 TO J02	*Call
2098<2096		5060<4911	C03 TO J02	*Call
2098<2096		5060<4913	D01 TO J02	*Call
2098<2096		5060<4914	D02 TO J02	*Call
2098<2096		5060<4915	D03 TO J02	*Call
2098<2096		5060<4917	E01 TO J02	*Call
2098<2096		5060<4918	E02 TO J02	*Call
2098<2096		5060<4921	F01 TO J02	*Call
2098<2096		5060<4922	F02 TO J02	*Call
2098<2096		5060<4925	G01 TO J02	*Call
2098<2096		5060<4929	H01 TO J02	*Call
2098<2096		5060<4933	I01 TO J02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5060<4937	J01 TO J02	*Call
2098<2096		5060<4944	K04 TO J02	*Call
2098<2096		5060<4947	L03 TO J02	*Call
2098<2096		5060<4948	L04 TO J02	*Call
2098<2096		5060<4951	M03 TO J02	*Call
2098<2096		5060<4952	M04 TO J02	*Call
2098<2096		5060<4954	N02 TO J02	*Call
2098<2096		5060<4955	N03 TO J02	*Call
2098<2096		5060<4956	N04 TO J02	*Call
2098<2096		5060<4958	O02 TO J02	*Call
2098<2096		5060<4959	O03 TO J02	*Call
2098<2096		5060<4960	O04 TO J02	*Call
2098<2096		5060<4962	P02 TO J02	*Call
2098<2096		5060<4963	P03 TO J02	*Call
2098<2096		5060<4964	P04 TO J02	*Call
2098<2096		5060<4966	Q02 TO J02	*Call
2098<2096		5060<4967	Q03 TO J02	*Call
2098<2096		5060<4968	Q04 TO J02	*Call
2098<2096		5060<4969	R01 TO J02	*Call
2098<2096		5060<4970	R02 TO J02	*Call
2098<2096		5060<4971	R03 TO J02	*Call
2098<2096		5060<4972	R04 TO J02	*Call
2098<2096		5060<4973	S01 TO J02	*Call
2098<2096		5060<4974	S02 TO J02	*Call
2098<2096		5060<4975	S03 TO J02	*Call
2098<2096		5060<4976	S04 TO J02	*Call
2098<2096		5060<4977	T01 TO J02	*Call
2098<2096		5060<4978	T02 TO J02	*Call
2098<2096		5060<4979	T03 TO J02	*Call
2098<2096		5060<4980	T04 TO J02	*Call
2098<2096		5060<4981	U01 TO J02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5060<4982	U02 TO J02	*Call
2098<2096		5060<4983	U03 TO J02	*Call
2098<2096		5060<4984	U04 TO J02	*Call
2098<2096		5060<4985	V01 TO J02	*Call
2098<2096		5060<4986	V02 TO J02	*Call
2098<2096		5060<4987	V03 TO J02	*Call
2098<2096		5060<4988	V04 TO J02	*Call
2098<2096		5060<4989	W01 TO J02	*Call
2098<2096		5060<4990	W02 TO J02	*Call
2098<2096		5060<4991	W03 TO J02	*Call
2098<2096		5060<4992	W04 TO J02	*Call
2098<2096		5060<4993	X01 TO J02	*Call
2098<2096		5060<4994	X02 TO J02	*Call
2098<2096		5060<4995	X03 TO J02	*Call
2098<2096		5060<4996	X04 TO J02	*Call
2098<2096		5060<4997	Y01 TO J02	*Call
2098<2096		5060<4998	Y02 TO J02	*Call
2098<2096		5060<4999	Y03 TO J02	*Call
2098<2096		5060<5000	Y04 TO J02	*Call
2098<2096		5060<5001	Z01 TO J02	*Call
2098<2096		5060<5002	Z02 TO J02	*Call
2098<2096		5060<5003	Z03 TO J02	*Call
2098<2096		5060<5004	Z04 TO J02	*Call
2098<2096		5061<4900	Z00 TO J03	*Call
2098<2096		5061<4901	A01 TO J03	*Call
2098<2096		5061<4902	A02 TO J03	*Call
2098<2096		5061<4903	A03 TO J03	*Call
2098<2096		5061<4905	B01 TO J03	*Call
2098<2096		5061<4906	B02 TO J03	*Call
2098<2096		5061<4907	B03 TO J03	*Call
2098<2096		5061<4909	C01 TO J03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5061<4910	C02 TO J03	*Call
2098<2096		5061<4911	C03 TO J03	*Call
2098<2096		5061<4913	D01 TO J03	*Call
2098<2096		5061<4914	D02 TO J03	*Call
2098<2096		5061<4915	D03 TO J03	*Call
2098<2096		5061<4917	E01 TO J03	*Call
2098<2096		5061<4918	E02 TO J03	*Call
2098<2096		5061<4921	F01 TO J03	*Call
2098<2096		5061<4922	F02 TO J03	*Call
2098<2096		5061<4925	G01 TO J03	*Call
2098<2096		5061<4929	H01 TO J03	*Call
2098<2096		5061<4933	I01 TO J03	*Call
2098<2096		5061<4937	J01 TO J03	*Call
2098<2096		5061<4944	K04 TO J03	*Call
2098<2096		5061<4947	L03 TO J03	*Call
2098<2096		5061<4948	L04 TO J03	*Call
2098<2096		5061<4951	M03 TO J03	*Call
2098<2096		5061<4952	M04 TO J03	*Call
2098<2096		5061<4954	N02 TO J03	*Call
2098<2096		5061<4955	N03 TO J03	*Call
2098<2096		5061<4956	N04 TO J03	*Call
2098<2096		5061<4958	O02 TO J03	*Call
2098<2096		5061<4959	O03 TO J03	*Call
2098<2096		5061<4960	O04 TO J03	*Call
2098<2096		5061<4962	P02 TO J03	*Call
2098<2096		5061<4963	P03 TO J03	*Call
2098<2096		5061<4964	P04 TO J03	*Call
2098<2096		5061<4966	Q02 TO J03	*Call
2098<2096		5061<4967	Q03 TO J03	*Call
2098<2096		5061<4968	Q04 TO J03	*Call
2098<2096		5061<4969	R01 TO J03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5061<4970	R02 TO J03	*Call
2098<2096		5061<4971	R03 TO J03	*Call
2098<2096		5061<4972	R04 TO J03	*Call
2098<2096		5061<4973	S01 TO J03	*Call
2098<2096		5061<4974	S02 TO J03	*Call
2098<2096		5061<4975	S03 TO J03	*Call
2098<2096		5061<4976	S04 TO J03	*Call
2098<2096		5061<4977	T01 TO J03	*Call
2098<2096		5061<4978	T02 TO J03	*Call
2098<2096		5061<4979	T03 TO J03	*Call
2098<2096		5061<4980	T04 TO J03	*Call
2098<2096		5061<4981	U01 TO J03	*Call
2098<2096		5061<4982	U02 TO J03	*Call
2098<2096		5061<4983	U03 TO J03	*Call
2098<2096		5061<4984	U04 TO J03	*Call
2098<2096		5061<4985	V01 TO J03	*Call
2098<2096		5061<4986	V02 TO J03	*Call
2098<2096		5061<4987	V03 TO J03	*Call
2098<2096		5061<4988	V04 TO J03	*Call
2098<2096		5061<4989	W01 TO J03	*Call
2098<2096		5061<4990	W02 TO J03	*Call
2098<2096		5061<4991	W03 TO J03	*Call
2098<2096		5061<4992	W04 TO J03	*Call
2098<2096		5061<4993	X01 TO J03	*Call
2098<2096		5061<4994	X02 TO J03	*Call
2098<2096		5061<4995	X03 TO J03	*Call
2098<2096		5061<4996	X04 TO J03	*Call
2098<2096		5061<4997	Y01 TO J03	*Call
2098<2096		5061<4998	Y02 TO J03	*Call
2098<2096		5061<4999	Y03 TO J03	*Call
2098<2096		5061<5000	Y04 TO J03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5061<5001	Z01 TO J03	*Call
2098<2096		5061<5002	Z02 TO J03	*Call
2098<2096		5061<5003	Z03 TO J03	*Call
2098<2096		5061<5004	Z04 TO J03	*Call
2098<2096		5062<4900	Z00 TO J04	*Call
2098<2096		5062<4901	A01 TO J04	*Call
2098<2096		5062<4902	A02 TO J04	*Call
2098<2096		5062<4903	A03 TO J04	*Call
2098<2096		5062<4905	B01 TO J04	*Call
2098<2096		5062<4906	B02 TO J04	*Call
2098<2096		5062<4907	B03 TO J04	*Call
2098<2096		5062<4909	C01 TO J04	*Call
2098<2096		5062<4910	C02 TO J04	*Call
2098<2096		5062<4911	C03 TO J04	*Call
2098<2096		5062<4913	D01 TO J04	*Call
2098<2096		5062<4914	D02 TO J04	*Call
2098<2096		5062<4915	D03 TO J04	*Call
2098<2096		5062<4917	E01 TO J04	*Call
2098<2096		5062<4918	E02 TO J04	*Call
2098<2096		5062<4921	F01 TO J04	*Call
2098<2096		5062<4922	F02 TO J04	*Call
2098<2096		5062<4925	G01 TO J04	*Call
2098<2096		5062<4929	H01 TO J04	*Call
2098<2096		5062<4933	I01 TO J04	*Call
2098<2096		5062<4937	J01 TO J04	*Call
2098<2096		5062<4944	K04 TO J04	*Call
2098<2096		5062<4947	L03 TO J04	*Call
2098<2096		5062<4948	L04 TO J04	*Call
2098<2096		5062<4951	M03 TO J04	*Call
2098<2096		5062<4952	M04 TO J04	*Call
2098<2096		5062<4954	N02 TO J04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5062<4955	N03 TO J04	*Call
2098<2096		5062<4956	N04 TO J04	*Call
2098<2096		5062<4958	O02 TO J04	*Call
2098<2096		5062<4959	O03 TO J04	*Call
2098<2096		5062<4960	O04 TO J04	*Call
2098<2096		5062<4962	P02 TO J04	*Call
2098<2096		5062<4963	P03 TO J04	*Call
2098<2096		5062<4964	P04 TO J04	*Call
2098<2096		5062<4966	Q02 TO J04	*Call
2098<2096		5062<4967	Q03 TO J04	*Call
2098<2096		5062<4968	Q04 TO J04	*Call
2098<2096		5062<4969	R01 TO J04	*Call
2098<2096		5062<4970	R02 TO J04	*Call
2098<2096		5062<4971	R03 TO J04	*Call
2098<2096		5062<4972	R04 TO J04	*Call
2098<2096		5062<4973	S01 TO J04	*Call
2098<2096		5062<4974	S02 TO J04	*Call
2098<2096		5062<4975	S03 TO J04	*Call
2098<2096		5062<4976	S04 TO J04	*Call
2098<2096		5062<4977	T01 TO J04	*Call
2098<2096		5062<4978	T02 TO J04	*Call
2098<2096		5062<4979	T03 TO J04	*Call
2098<2096		5062<4980	T04 TO J04	*Call
2098<2096		5062<4981	U01 TO J04	*Call
2098<2096		5062<4982	U02 TO J04	*Call
2098<2096		5062<4983	U03 TO J04	*Call
2098<2096		5062<4984	U04 TO J04	*Call
2098<2096		5062<4985	V01 TO J04	*Call
2098<2096		5062<4986	V02 TO J04	*Call
2098<2096		5062<4987	V03 TO J04	*Call
2098<2096		5062<4988	V04 TO J04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5062<4989	W01 TO J04	*Call
2098<2096		5062<4990	W02 TO J04	*Call
2098<2096		5062<4991	W03 TO J04	*Call
2098<2096		5062<4992	W04 TO J04	*Call
2098<2096		5062<4993	X01 TO J04	*Call
2098<2096		5062<4994	X02 TO J04	*Call
2098<2096		5062<4995	X03 TO J04	*Call
2098<2096		5062<4996	X04 TO J04	*Call
2098<2096		5062<4997	Y01 TO J04	*Call
2098<2096		5062<4998	Y02 TO J04	*Call
2098<2096		5062<4999	Y03 TO J04	*Call
2098<2096		5062<5000	Y04 TO J04	*Call
2098<2096		5062<5001	Z01 TO J04	*Call
2098<2096		5062<5002	Z02 TO J04	*Call
2098<2096		5062<5003	Z03 TO J04	*Call
2098<2096		5062<5004	Z04 TO J04	*Call
2098<2096		5063<4900	Z00 TO J05	*Call
2098<2096		5063<4901	A01 TO J05	*Call
2098<2096		5063<4902	A02 TO J05	*Call
2098<2096		5063<4903	A03 TO J05	*Call
2098<2096		5063<4905	B01 TO J05	*Call
2098<2096		5063<4906	B02 TO J05	*Call
2098<2096		5063<4907	B03 TO J05	*Call
2098<2096		5063<4909	C01 TO J05	*Call
2098<2096		5063<4910	C02 TO J05	*Call
2098<2096		5063<4911	C03 TO J05	*Call
2098<2096		5063<4913	D01 TO J05	*Call
2098<2096		5063<4914	D02 TO J05	*Call
2098<2096		5063<4915	D03 TO J05	*Call
2098<2096		5063<4917	E01 TO J05	*Call
2098<2096		5063<4918	E02 TO J05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5063<4921	F01 TO J05	*Call
2098<2096		5063<4922	F02 TO J05	*Call
2098<2096		5063<4925	G01 TO J05	*Call
2098<2096		5063<4929	H01 TO J05	*Call
2098<2096		5063<4933	I01 TO J05	*Call
2098<2096		5063<4937	J01 TO J05	*Call
2098<2096		5063<4944	K04 TO J05	*Call
2098<2096		5063<4947	L03 TO J05	*Call
2098<2096		5063<4948	L04 TO J05	*Call
2098<2096		5063<4951	M03 TO J05	*Call
2098<2096		5063<4952	M04 TO J05	*Call
2098<2096		5063<4954	N02 TO J05	*Call
2098<2096		5063<4955	N03 TO J05	*Call
2098<2096		5063<4956	N04 TO J05	*Call
2098<2096		5063<4958	O02 TO J05	*Call
2098<2096		5063<4959	O03 TO J05	*Call
2098<2096		5063<4960	O04 TO J05	*Call
2098<2096		5063<4962	P02 TO J05	*Call
2098<2096		5063<4963	P03 TO J05	*Call
2098<2096		5063<4964	P04 TO J05	*Call
2098<2096		5063<4966	Q02 TO J05	*Call
2098<2096		5063<4967	Q03 TO J05	*Call
2098<2096		5063<4968	Q04 TO J05	*Call
2098<2096		5063<4969	R01 TO J05	*Call
2098<2096		5063<4970	R02 TO J05	*Call
2098<2096		5063<4971	R03 TO J05	*Call
2098<2096		5063<4972	R04 TO J05	*Call
2098<2096		5063<4973	S01 TO J05	*Call
2098<2096		5063<4974	S02 TO J05	*Call
2098<2096		5063<4975	S03 TO J05	*Call
2098<2096		5063<4976	S04 TO J05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5063<4977	T01 TO J05	*Call
2098<2096		5063<4978	T02 TO J05	*Call
2098<2096		5063<4979	T03 TO J05	*Call
2098<2096		5063<4980	T04 TO J05	*Call
2098<2096		5063<4981	U01 TO J05	*Call
2098<2096		5063<4982	U02 TO J05	*Call
2098<2096		5063<4983	U03 TO J05	*Call
2098<2096		5063<4984	U04 TO J05	*Call
2098<2096		5063<4985	V01 TO J05	*Call
2098<2096		5063<4986	V02 TO J05	*Call
2098<2096		5063<4987	V03 TO J05	*Call
2098<2096		5063<4988	V04 TO J05	*Call
2098<2096		5063<4989	W01 TO J05	*Call
2098<2096		5063<4990	W02 TO J05	*Call
2098<2096		5063<4991	W03 TO J05	*Call
2098<2096		5063<4992	W04 TO J05	*Call
2098<2096		5063<4993	X01 TO J05	*Call
2098<2096		5063<4994	X02 TO J05	*Call
2098<2096		5063<4995	X03 TO J05	*Call
2098<2096		5063<4996	X04 TO J05	*Call
2098<2096		5063<4997	Y01 TO J05	*Call
2098<2096		5063<4998	Y02 TO J05	*Call
2098<2096		5063<4999	Y03 TO J05	*Call
2098<2096		5063<5000	Y04 TO J05	*Call
2098<2096		5063<5001	Z01 TO J05	*Call
2098<2096		5063<5002	Z02 TO J05	*Call
2098<2096		5063<5003	Z03 TO J05	*Call
2098<2096		5063<5004	Z04 TO J05	*Call
2098<2096		5064<4900	Z00 TO K01	*Call
2098<2096		5064<4901	A01 TO K01	*Call
2098<2096		5064<4902	A02 TO K01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5064<4903	A03 TO K01	*Call
2098<2096		5064<4905	B01 TO K01	*Call
2098<2096		5064<4906	B02 TO K01	*Call
2098<2096		5064<4907	B03 TO K01	*Call
2098<2096		5064<4909	C01 TO K01	*Call
2098<2096		5064<4910	C02 TO K01	*Call
2098<2096		5064<4911	C03 TO K01	*Call
2098<2096		5064<4913	D01 TO K01	*Call
2098<2096		5064<4914	D02 TO K01	*Call
2098<2096		5064<4915	D03 TO K01	*Call
2098<2096		5064<4917	E01 TO K01	*Call
2098<2096		5064<4918	E02 TO K01	*Call
2098<2096		5064<4921	F01 TO K01	*Call
2098<2096		5064<4922	F02 TO K01	*Call
2098<2096		5064<4925	G01 TO K01	*Call
2098<2096		5064<4929	H01 TO K01	*Call
2098<2096		5064<4933	I01 TO K01	*Call
2098<2096		5064<4937	J01 TO K01	*Call
2098<2096		5064<4944	K04 TO K01	*Call
2098<2096		5064<4947	L03 TO K01	*Call
2098<2096		5064<4948	L04 TO K01	*Call
2098<2096		5064<4951	M03 TO K01	*Call
2098<2096		5064<4952	M04 TO K01	*Call
2098<2096		5064<4954	N02 TO K01	*Call
2098<2096		5064<4955	N03 TO K01	*Call
2098<2096		5064<4956	N04 TO K01	*Call
2098<2096		5064<4958	O02 TO K01	*Call
2098<2096		5064<4959	O03 TO K01	*Call
2098<2096		5064<4960	O04 TO K01	*Call
2098<2096		5064<4962	P02 TO K01	*Call
2098<2096		5064<4963	P03 TO K01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5064<4964	P04 TO K01	*Call
2098<2096		5064<4966	Q02 TO K01	*Call
2098<2096		5064<4967	Q03 TO K01	*Call
2098<2096		5064<4968	Q04 TO K01	*Call
2098<2096		5064<4969	R01 TO K01	*Call
2098<2096		5064<4970	R02 TO K01	*Call
2098<2096		5064<4971	R03 TO K01	*Call
2098<2096		5064<4972	R04 TO K01	*Call
2098<2096		5064<4973	S01 TO K01	*Call
2098<2096		5064<4974	S02 TO K01	*Call
2098<2096		5064<4975	S03 TO K01	*Call
2098<2096		5064<4976	S04 TO K01	*Call
2098<2096		5064<4977	T01 TO K01	*Call
2098<2096		5064<4978	T02 TO K01	*Call
2098<2096		5064<4979	T03 TO K01	*Call
2098<2096		5064<4980	T04 TO K01	*Call
2098<2096		5064<4981	U01 TO K01	*Call
2098<2096		5064<4982	U02 TO K01	*Call
2098<2096		5064<4983	U03 TO K01	*Call
2098<2096		5064<4984	U04 TO K01	*Call
2098<2096		5064<4985	V01 TO K01	*Call
2098<2096		5064<4986	V02 TO K01	*Call
2098<2096		5064<4987	V03 TO K01	*Call
2098<2096		5064<4988	V04 TO K01	*Call
2098<2096		5064<4989	W01 TO K01	*Call
2098<2096		5064<4990	W02 TO K01	*Call
2098<2096		5064<4991	W03 TO K01	*Call
2098<2096		5064<4992	W04 TO K01	*Call
2098<2096		5064<4993	X01 TO K01	*Call
2098<2096		5064<4994	X02 TO K01	*Call
2098<2096		5064<4995	X03 TO K01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5064<4996	X04 TO K01	*Call
2098<2096		5064<4997	Y01 TO K01	*Call
2098<2096		5064<4998	Y02 TO K01	*Call
2098<2096		5064<4999	Y03 TO K01	*Call
2098<2096		5064<5000	Y04 TO K01	*Call
2098<2096		5064<5001	Z01 TO K01	*Call
2098<2096		5064<5002	Z02 TO K01	*Call
2098<2096		5064<5003	Z03 TO K01	*Call
2098<2096		5064<5004	Z04 TO K01	*Call
2098<2096		5065<4900	Z00 TO K02	*Call
2098<2096		5065<4901	A01 TO K02	*Call
2098<2096		5065<4902	A02 TO K02	*Call
2098<2096		5065<4903	A03 TO K02	*Call
2098<2096		5065<4905	B01 TO K02	*Call
2098<2096		5065<4906	B02 TO K02	*Call
2098<2096		5065<4907	B03 TO K02	*Call
2098<2096		5065<4909	C01 TO K02	*Call
2098<2096		5065<4910	C02 TO K02	*Call
2098<2096		5065<4911	C03 TO K02	*Call
2098<2096		5065<4913	D01 TO K02	*Call
2098<2096		5065<4914	D02 TO K02	*Call
2098<2096		5065<4915	D03 TO K02	*Call
2098<2096		5065<4917	E01 TO K02	*Call
2098<2096		5065<4918	E02 TO K02	*Call
2098<2096		5065<4921	F01 TO K02	*Call
2098<2096		5065<4922	F02 TO K02	*Call
2098<2096		5065<4925	G01 TO K02	*Call
2098<2096		5065<4929	H01 TO K02	*Call
2098<2096		5065<4933	I01 TO K02	*Call
2098<2096		5065<4937	J01 TO K02	*Call
2098<2096		5065<4944	K04 TO K02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5065<4947	L03 TO K02	*Call
2098<2096		5065<4948	L04 TO K02	*Call
2098<2096		5065<4951	M03 TO K02	*Call
2098<2096		5065<4952	M04 TO K02	*Call
2098<2096		5065<4954	N02 TO K02	*Call
2098<2096		5065<4955	N03 TO K02	*Call
2098<2096		5065<4956	N04 TO K02	*Call
2098<2096		5065<4958	O02 TO K02	*Call
2098<2096		5065<4959	O03 TO K02	*Call
2098<2096		5065<4960	O04 TO K02	*Call
2098<2096		5065<4962	P02 TO K02	*Call
2098<2096		5065<4963	P03 TO K02	*Call
2098<2096		5065<4964	P04 TO K02	*Call
2098<2096		5065<4966	Q02 TO K02	*Call
2098<2096		5065<4967	Q03 TO K02	*Call
2098<2096		5065<4968	Q04 TO K02	*Call
2098<2096		5065<4969	R01 TO K02	*Call
2098<2096		5065<4970	R02 TO K02	*Call
2098<2096		5065<4971	R03 TO K02	*Call
2098<2096		5065<4972	R04 TO K02	*Call
2098<2096		5065<4973	S01 TO K02	*Call
2098<2096		5065<4974	S02 TO K02	*Call
2098<2096		5065<4975	S03 TO K02	*Call
2098<2096		5065<4976	S04 TO K02	*Call
2098<2096		5065<4977	T01 TO K02	*Call
2098<2096		5065<4978	T02 TO K02	*Call
2098<2096		5065<4979	T03 TO K02	*Call
2098<2096		5065<4980	T04 TO K02	*Call
2098<2096		5065<4981	U01 TO K02	*Call
2098<2096		5065<4982	U02 TO K02	*Call
2098<2096		5065<4983	U03 TO K02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5065<4984	U04 TO K02	*Call
2098<2096		5065<4985	V01 TO K02	*Call
2098<2096		5065<4986	V02 TO K02	*Call
2098<2096		5065<4987	V03 TO K02	*Call
2098<2096		5065<4988	V04 TO K02	*Call
2098<2096		5065<4989	W01 TO K02	*Call
2098<2096		5065<4990	W02 TO K02	*Call
2098<2096		5065<4991	W03 TO K02	*Call
2098<2096		5065<4992	W04 TO K02	*Call
2098<2096		5065<4993	X01 TO K02	*Call
2098<2096		5065<4994	X02 TO K02	*Call
2098<2096		5065<4995	X03 TO K02	*Call
2098<2096		5065<4996	X04 TO K02	*Call
2098<2096		5065<4997	Y01 TO K02	*Call
2098<2096		5065<4998	Y02 TO K02	*Call
2098<2096		5065<4999	Y03 TO K02	*Call
2098<2096		5065<5000	Y04 TO K02	*Call
2098<2096		5065<5001	Z01 TO K02	*Call
2098<2096		5065<5002	Z02 TO K02	*Call
2098<2096		5065<5003	Z03 TO K02	*Call
2098<2096		5065<5004	Z04 TO K02	*Call
2098<2096		5066<4900	Z00 TO K03	*Call
2098<2096		5066<4901	A01 TO K03	*Call
2098<2096		5066<4902	A02 TO K03	*Call
2098<2096		5066<4903	A03 TO K03	*Call
2098<2096		5066<4905	B01 TO K03	*Call
2098<2096		5066<4906	B02 TO K03	*Call
2098<2096		5066<4907	B03 TO K03	*Call
2098<2096		5066<4909	C01 TO K03	*Call
2098<2096		5066<4910	C02 TO K03	*Call
2098<2096		5066<4911	C03 TO K03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5066<4913	D01 TO K03	*Call
2098<2096		5066<4914	D02 TO K03	*Call
2098<2096		5066<4915	D03 TO K03	*Call
2098<2096		5066<4917	E01 TO K03	*Call
2098<2096		5066<4918	E02 TO K03	*Call
2098<2096		5066<4921	F01 TO K03	*Call
2098<2096		5066<4922	F02 TO K03	*Call
2098<2096		5066<4925	G01 TO K03	*Call
2098<2096		5066<4929	H01 TO K03	*Call
2098<2096		5066<4933	I01 TO K03	*Call
2098<2096		5066<4937	J01 TO K03	*Call
2098<2096		5066<4944	K04 TO K03	*Call
2098<2096		5066<4947	L03 TO K03	*Call
2098<2096		5066<4948	L04 TO K03	*Call
2098<2096		5066<4951	M03 TO K03	*Call
2098<2096		5066<4952	M04 TO K03	*Call
2098<2096		5066<4954	N02 TO K03	*Call
2098<2096		5066<4955	N03 TO K03	*Call
2098<2096		5066<4956	N04 TO K03	*Call
2098<2096		5066<4958	O02 TO K03	*Call
2098<2096		5066<4959	O03 TO K03	*Call
2098<2096		5066<4960	O04 TO K03	*Call
2098<2096		5066<4962	P02 TO K03	*Call
2098<2096		5066<4963	P03 TO K03	*Call
2098<2096		5066<4964	P04 TO K03	*Call
2098<2096		5066<4966	Q02 TO K03	*Call
2098<2096		5066<4967	Q03 TO K03	*Call
2098<2096		5066<4968	Q04 TO K03	*Call
2098<2096		5066<4969	R01 TO K03	*Call
2098<2096		5066<4970	R02 TO K03	*Call
2098<2096		5066<4971	R03 TO K03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5066<4972	R04 TO K03	*Call
2098<2096		5066<4973	S01 TO K03	*Call
2098<2096		5066<4974	S02 TO K03	*Call
2098<2096		5066<4975	S03 TO K03	*Call
2098<2096		5066<4976	S04 TO K03	*Call
2098<2096		5066<4977	T01 TO K03	*Call
2098<2096		5066<4978	T02 TO K03	*Call
2098<2096		5066<4979	T03 TO K03	*Call
2098<2096		5066<4980	T04 TO K03	*Call
2098<2096		5066<4981	U01 TO K03	*Call
2098<2096		5066<4982	U02 TO K03	*Call
2098<2096		5066<4983	U03 TO K03	*Call
2098<2096		5066<4984	U04 TO K03	*Call
2098<2096		5066<4985	V01 TO K03	*Call
2098<2096		5066<4986	V02 TO K03	*Call
2098<2096		5066<4987	V03 TO K03	*Call
2098<2096		5066<4988	V04 TO K03	*Call
2098<2096		5066<4989	W01 TO K03	*Call
2098<2096		5066<4990	W02 TO K03	*Call
2098<2096		5066<4991	W03 TO K03	*Call
2098<2096		5066<4992	W04 TO K03	*Call
2098<2096		5066<4993	X01 TO K03	*Call
2098<2096		5066<4994	X02 TO K03	*Call
2098<2096		5066<4995	X03 TO K03	*Call
2098<2096		5066<4996	X04 TO K03	*Call
2098<2096		5066<4997	Y01 TO K03	*Call
2098<2096		5066<4998	Y02 TO K03	*Call
2098<2096		5066<4999	Y03 TO K03	*Call
2098<2096		5066<5000	Y04 TO K03	*Call
2098<2096		5066<5001	Z01 TO K03	*Call
2098<2096		5066<5002	Z02 TO K03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5066<5003	Z03 TO K03	*Call
2098<2096		5066<5004	Z04 TO K03	*Call
2098<2096		5067<4900	Z00 TO K04	*Call
2098<2096		5067<4901	A01 TO K04	*Call
2098<2096		5067<4902	A02 TO K04	*Call
2098<2096		5067<4903	A03 TO K04	*Call
2098<2096		5067<4905	B01 TO K04	*Call
2098<2096		5067<4906	B02 TO K04	*Call
2098<2096		5067<4907	B03 TO K04	*Call
2098<2096		5067<4909	C01 TO K04	*Call
2098<2096		5067<4910	C02 TO K04	*Call
2098<2096		5067<4911	C03 TO K04	*Call
2098<2096		5067<4913	D01 TO K04	*Call
2098<2096		5067<4914	D02 TO K04	*Call
2098<2096		5067<4915	D03 TO K04	*Call
2098<2096		5067<4917	E01 TO K04	*Call
2098<2096		5067<4918	E02 TO K04	*Call
2098<2096		5067<4921	F01 TO K04	*Call
2098<2096		5067<4922	F02 TO K04	*Call
2098<2096		5067<4925	G01 TO K04	*Call
2098<2096		5067<4929	H01 TO K04	*Call
2098<2096		5067<4933	I01 TO K04	*Call
2098<2096		5067<4937	J01 TO K04	*Call
2098<2096		5067<4944	K04 TO K04	*Call
2098<2096		5067<4947	L03 TO K04	*Call
2098<2096		5067<4948	L04 TO K04	*Call
2098<2096		5067<4951	M03 TO K04	*Call
2098<2096		5067<4952	M04 TO K04	*Call
2098<2096		5067<4954	N02 TO K04	*Call
2098<2096		5067<4955	N03 TO K04	*Call
2098<2096		5067<4956	N04 TO K04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5067<4958	O02 TO K04	*Call
2098<2096		5067<4959	O03 TO K04	*Call
2098<2096		5067<4960	O04 TO K04	*Call
2098<2096		5067<4962	P02 TO K04	*Call
2098<2096		5067<4963	P03 TO K04	*Call
2098<2096		5067<4964	P04 TO K04	*Call
2098<2096		5067<4966	Q02 TO K04	*Call
2098<2096		5067<4967	Q03 TO K04	*Call
2098<2096		5067<4968	Q04 TO K04	*Call
2098<2096		5067<4969	R01 TO K04	*Call
2098<2096		5067<4970	R02 TO K04	*Call
2098<2096		5067<4971	R03 TO K04	*Call
2098<2096		5067<4972	R04 TO K04	*Call
2098<2096		5067<4973	S01 TO K04	*Call
2098<2096		5067<4974	S02 TO K04	*Call
2098<2096		5067<4975	S03 TO K04	*Call
2098<2096		5067<4976	S04 TO K04	*Call
2098<2096		5067<4977	T01 TO K04	*Call
2098<2096		5067<4978	T02 TO K04	*Call
2098<2096		5067<4979	T03 TO K04	*Call
2098<2096		5067<4980	T04 TO K04	*Call
2098<2096		5067<4981	U01 TO K04	*Call
2098<2096		5067<4982	U02 TO K04	*Call
2098<2096		5067<4983	U03 TO K04	*Call
2098<2096		5067<4984	U04 TO K04	*Call
2098<2096		5067<4985	V01 TO K04	*Call
2098<2096		5067<4986	V02 TO K04	*Call
2098<2096		5067<4987	V03 TO K04	*Call
2098<2096		5067<4988	V04 TO K04	*Call
2098<2096		5067<4989	W01 TO K04	*Call
2098<2096		5067<4990	W02 TO K04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5067<4991	W03 TO K04	*Call
2098<2096		5067<4992	W04 TO K04	*Call
2098<2096		5067<4993	X01 TO K04	*Call
2098<2096		5067<4994	X02 TO K04	*Call
2098<2096		5067<4995	X03 TO K04	*Call
2098<2096		5067<4996	X04 TO K04	*Call
2098<2096		5067<4997	Y01 TO K04	*Call
2098<2096		5067<4998	Y02 TO K04	*Call
2098<2096		5067<4999	Y03 TO K04	*Call
2098<2096		5067<5000	Y04 TO K04	*Call
2098<2096		5067<5001	Z01 TO K04	*Call
2098<2096		5067<5002	Z02 TO K04	*Call
2098<2096		5067<5003	Z03 TO K04	*Call
2098<2096		5067<5004	Z04 TO K04	*Call
2098<2096		5068<4900	Z00 TO K05	*Call
2098<2096		5068<4901	A01 TO K05	*Call
2098<2096		5068<4902	A02 TO K05	*Call
2098<2096		5068<4903	A03 TO K05	*Call
2098<2096		5068<4905	B01 TO K05	*Call
2098<2096		5068<4906	B02 TO K05	*Call
2098<2096		5068<4907	B03 TO K05	*Call
2098<2096		5068<4909	C01 TO K05	*Call
2098<2096		5068<4910	C02 TO K05	*Call
2098<2096		5068<4911	C03 TO K05	*Call
2098<2096		5068<4913	D01 TO K05	*Call
2098<2096		5068<4914	D02 TO K05	*Call
2098<2096		5068<4915	D03 TO K05	*Call
2098<2096		5068<4917	E01 TO K05	*Call
2098<2096		5068<4918	E02 TO K05	*Call
2098<2096		5068<4921	F01 TO K05	*Call
2098<2096		5068<4922	F02 TO K05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5068<4925	G01 TO K05	*Call
2098<2096		5068<4929	H01 TO K05	*Call
2098<2096		5068<4933	I01 TO K05	*Call
2098<2096		5068<4937	J01 TO K05	*Call
2098<2096		5068<4944	K04 TO K05	*Call
2098<2096		5068<4947	L03 TO K05	*Call
2098<2096		5068<4948	L04 TO K05	*Call
2098<2096		5068<4951	M03 TO K05	*Call
2098<2096		5068<4952	M04 TO K05	*Call
2098<2096		5068<4954	N02 TO K05	*Call
2098<2096		5068<4955	N03 TO K05	*Call
2098<2096		5068<4956	N04 TO K05	*Call
2098<2096		5068<4958	O02 TO K05	*Call
2098<2096		5068<4959	O03 TO K05	*Call
2098<2096		5068<4960	O04 TO K05	*Call
2098<2096		5068<4962	P02 TO K05	*Call
2098<2096		5068<4963	P03 TO K05	*Call
2098<2096		5068<4964	P04 TO K05	*Call
2098<2096		5068<4966	Q02 TO K05	*Call
2098<2096		5068<4967	Q03 TO K05	*Call
2098<2096		5068<4968	Q04 TO K05	*Call
2098<2096		5068<4969	R01 TO K05	*Call
2098<2096		5068<4970	R02 TO K05	*Call
2098<2096		5068<4971	R03 TO K05	*Call
2098<2096		5068<4972	R04 TO K05	*Call
2098<2096		5068<4973	S01 TO K05	*Call
2098<2096		5068<4974	S02 TO K05	*Call
2098<2096		5068<4975	S03 TO K05	*Call
2098<2096		5068<4976	S04 TO K05	*Call
2098<2096		5068<4977	T01 TO K05	*Call
2098<2096		5068<4978	T02 TO K05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5068<4979	T03 TO K05	*Call
2098<2096		5068<4980	T04 TO K05	*Call
2098<2096		5068<4981	U01 TO K05	*Call
2098<2096		5068<4982	U02 TO K05	*Call
2098<2096		5068<4983	U03 TO K05	*Call
2098<2096		5068<4984	U04 TO K05	*Call
2098<2096		5068<4985	V01 TO K05	*Call
2098<2096		5068<4986	V02 TO K05	*Call
2098<2096		5068<4987	V03 TO K05	*Call
2098<2096		5068<4988	V04 TO K05	*Call
2098<2096		5068<4989	W01 TO K05	*Call
2098<2096		5068<4990	W02 TO K05	*Call
2098<2096		5068<4991	W03 TO K05	*Call
2098<2096		5068<4992	W04 TO K05	*Call
2098<2096		5068<4993	X01 TO K05	*Call
2098<2096		5068<4994	X02 TO K05	*Call
2098<2096		5068<4995	X03 TO K05	*Call
2098<2096		5068<4996	X04 TO K05	*Call
2098<2096		5068<4997	Y01 TO K05	*Call
2098<2096		5068<4998	Y02 TO K05	*Call
2098<2096		5068<4999	Y03 TO K05	*Call
2098<2096		5068<5000	Y04 TO K05	*Call
2098<2096		5068<5001	Z01 TO K05	*Call
2098<2096		5068<5002	Z02 TO K05	*Call
2098<2096		5068<5003	Z03 TO K05	*Call
2098<2096		5068<5004	Z04 TO K05	*Call
2098<2096		5069<4900	Z00 TO L01	*Call
2098<2096		5069<4901	A01 TO L01	*Call
2098<2096		5069<4902	A02 TO L01	*Call
2098<2096		5069<4903	A03 TO L01	*Call
2098<2096		5069<4905	B01 TO L01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5069<4906	B02 TO L01	*Call
2098<2096		5069<4907	B03 TO L01	*Call
2098<2096		5069<4909	C01 TO L01	*Call
2098<2096		5069<4910	C02 TO L01	*Call
2098<2096		5069<4911	C03 TO L01	*Call
2098<2096		5069<4913	D01 TO L01	*Call
2098<2096		5069<4914	D02 TO L01	*Call
2098<2096		5069<4915	D03 TO L01	*Call
2098<2096		5069<4917	E01 TO L01	*Call
2098<2096		5069<4918	E02 TO L01	*Call
2098<2096		5069<4921	F01 TO L01	*Call
2098<2096		5069<4922	F02 TO L01	*Call
2098<2096		5069<4925	G01 TO L01	*Call
2098<2096		5069<4929	H01 TO L01	*Call
2098<2096		5069<4933	I01 TO L01	*Call
2098<2096		5069<4937	J01 TO L01	*Call
2098<2096		5069<4944	K04 TO L01	*Call
2098<2096		5069<4947	L03 TO L01	*Call
2098<2096		5069<4948	L04 TO L01	*Call
2098<2096		5069<4951	M03 TO L01	*Call
2098<2096		5069<4952	M04 TO L01	*Call
2098<2096		5069<4954	N02 TO L01	*Call
2098<2096		5069<4955	N03 TO L01	*Call
2098<2096		5069<4956	N04 TO L01	*Call
2098<2096		5069<4958	O02 TO L01	*Call
2098<2096		5069<4959	O03 TO L01	*Call
2098<2096		5069<4960	O04 TO L01	*Call
2098<2096		5069<4962	P02 TO L01	*Call
2098<2096		5069<4963	P03 TO L01	*Call
2098<2096		5069<4964	P04 TO L01	*Call
2098<2096		5069<4966	Q02 TO L01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5069<4967	Q03 TO L01	*Call
2098<2096		5069<4968	Q04 TO L01	*Call
2098<2096		5069<4969	R01 TO L01	*Call
2098<2096		5069<4970	R02 TO L01	*Call
2098<2096		5069<4971	R03 TO L01	*Call
2098<2096		5069<4972	R04 TO L01	*Call
2098<2096		5069<4973	S01 TO L01	*Call
2098<2096		5069<4974	S02 TO L01	*Call
2098<2096		5069<4975	S03 TO L01	*Call
2098<2096		5069<4976	S04 TO L01	*Call
2098<2096		5069<4977	T01 TO L01	*Call
2098<2096		5069<4978	T02 TO L01	*Call
2098<2096		5069<4979	T03 TO L01	*Call
2098<2096		5069<4980	T04 TO L01	*Call
2098<2096		5069<4981	U01 TO L01	*Call
2098<2096		5069<4982	U02 TO L01	*Call
2098<2096		5069<4983	U03 TO L01	*Call
2098<2096		5069<4984	U04 TO L01	*Call
2098<2096		5069<4985	V01 TO L01	*Call
2098<2096		5069<4986	V02 TO L01	*Call
2098<2096		5069<4987	V03 TO L01	*Call
2098<2096		5069<4988	V04 TO L01	*Call
2098<2096		5069<4989	W01 TO L01	*Call
2098<2096		5069<4990	W02 TO L01	*Call
2098<2096		5069<4991	W03 TO L01	*Call
2098<2096		5069<4992	W04 TO L01	*Call
2098<2096		5069<4993	X01 TO L01	*Call
2098<2096		5069<4994	X02 TO L01	*Call
2098<2096		5069<4995	X03 TO L01	*Call
2098<2096		5069<4996	X04 TO L01	*Call
2098<2096		5069<4997	Y01 TO L01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5069<4998	Y02 TO L01	*Call
2098<2096		5069<4999	Y03 TO L01	*Call
2098<2096		5069<5000	Y04 TO L01	*Call
2098<2096		5069<5001	Z01 TO L01	*Call
2098<2096		5069<5002	Z02 TO L01	*Call
2098<2096		5069<5003	Z03 TO L01	*Call
2098<2096		5069<5004	Z04 TO L01	*Call
2098<2096		5070<4900	Z00 TO L02	*Call
2098<2096		5070<4901	A01 TO L02	*Call
2098<2096		5070<4902	A02 TO L02	*Call
2098<2096		5070<4903	A03 TO L02	*Call
2098<2096		5070<4905	B01 TO L02	*Call
2098<2096		5070<4906	B02 TO L02	*Call
2098<2096		5070<4907	B03 TO L02	*Call
2098<2096		5070<4909	C01 TO L02	*Call
2098<2096		5070<4910	C02 TO L02	*Call
2098<2096		5070<4911	C03 TO L02	*Call
2098<2096		5070<4913	D01 TO L02	*Call
2098<2096		5070<4914	D02 TO L02	*Call
2098<2096		5070<4915	D03 TO L02	*Call
2098<2096		5070<4917	E01 TO L02	*Call
2098<2096		5070<4918	E02 TO L02	*Call
2098<2096		5070<4921	F01 TO L02	*Call
2098<2096		5070<4922	F02 TO L02	*Call
2098<2096		5070<4925	G01 TO L02	*Call
2098<2096		5070<4929	H01 TO L02	*Call
2098<2096		5070<4933	I01 TO L02	*Call
2098<2096		5070<4937	J01 TO L02	*Call
2098<2096		5070<4944	K04 TO L02	*Call
2098<2096		5070<4947	L03 TO L02	*Call
2098<2096		5070<4948	L04 TO L02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5070<4951	M03 TO L02	*Call
2098<2096		5070<4952	M04 TO L02	*Call
2098<2096		5070<4954	N02 TO L02	*Call
2098<2096		5070<4955	N03 TO L02	*Call
2098<2096		5070<4956	N04 TO L02	*Call
2098<2096		5070<4958	O02 TO L02	*Call
2098<2096		5070<4959	O03 TO L02	*Call
2098<2096		5070<4960	O04 TO L02	*Call
2098<2096		5070<4962	P02 TO L02	*Call
2098<2096		5070<4963	P03 TO L02	*Call
2098<2096		5070<4964	P04 TO L02	*Call
2098<2096		5070<4966	Q02 TO L02	*Call
2098<2096		5070<4967	Q03 TO L02	*Call
2098<2096		5070<4968	Q04 TO L02	*Call
2098<2096		5070<4969	R01 TO L02	*Call
2098<2096		5070<4970	R02 TO L02	*Call
2098<2096		5070<4971	R03 TO L02	*Call
2098<2096		5070<4972	R04 TO L02	*Call
2098<2096		5070<4973	S01 TO L02	*Call
2098<2096		5070<4974	S02 TO L02	*Call
2098<2096		5070<4975	S03 TO L02	*Call
2098<2096		5070<4976	S04 TO L02	*Call
2098<2096		5070<4977	T01 TO L02	*Call
2098<2096		5070<4978	T02 TO L02	*Call
2098<2096		5070<4979	T03 TO L02	*Call
2098<2096		5070<4980	T04 TO L02	*Call
2098<2096		5070<4981	U01 TO L02	*Call
2098<2096		5070<4982	U02 TO L02	*Call
2098<2096		5070<4983	U03 TO L02	*Call
2098<2096		5070<4984	U04 TO L02	*Call
2098<2096		5070<4985	V01 TO L02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5070<4986	V02 TO L02	*Call
2098<2096		5070<4987	V03 TO L02	*Call
2098<2096		5070<4988	V04 TO L02	*Call
2098<2096		5070<4989	W01 TO L02	*Call
2098<2096		5070<4990	W02 TO L02	*Call
2098<2096		5070<4991	W03 TO L02	*Call
2098<2096		5070<4992	W04 TO L02	*Call
2098<2096		5070<4993	X01 TO L02	*Call
2098<2096		5070<4994	X02 TO L02	*Call
2098<2096		5070<4995	X03 TO L02	*Call
2098<2096		5070<4996	X04 TO L02	*Call
2098<2096		5070<4997	Y01 TO L02	*Call
2098<2096		5070<4998	Y02 TO L02	*Call
2098<2096		5070<4999	Y03 TO L02	*Call
2098<2096		5070<5000	Y04 TO L02	*Call
2098<2096		5070<5001	Z01 TO L02	*Call
2098<2096		5070<5002	Z02 TO L02	*Call
2098<2096		5070<5003	Z03 TO L02	*Call
2098<2096		5070<5004	Z04 TO L02	*Call
2098<2096		5071<4900	Z00 TO L03	*Call
2098<2096		5071<4901	A01 TO L03	*Call
2098<2096		5071<4902	A02 TO L03	*Call
2098<2096		5071<4903	A03 TO L03	*Call
2098<2096		5071<4905	B01 TO L03	*Call
2098<2096		5071<4906	B02 TO L03	*Call
2098<2096		5071<4907	B03 TO L03	*Call
2098<2096		5071<4909	C01 TO L03	*Call
2098<2096		5071<4910	C02 TO L03	*Call
2098<2096		5071<4911	C03 TO L03	*Call
2098<2096		5071<4913	D01 TO L03	*Call
2098<2096		5071<4914	D02 TO L03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5071<4915	D03 TO L03	*Call
2098<2096		5071<4917	E01 TO L03	*Call
2098<2096		5071<4918	E02 TO L03	*Call
2098<2096		5071<4921	F01 TO L03	*Call
2098<2096		5071<4922	F02 TO L03	*Call
2098<2096		5071<4925	G01 TO L03	*Call
2098<2096		5071<4929	H01 TO L03	*Call
2098<2096		5071<4933	I01 TO L03	*Call
2098<2096		5071<4937	J01 TO L03	*Call
2098<2096		5071<4944	K04 TO L03	*Call
2098<2096		5071<4947	L03 TO L03	*Call
2098<2096		5071<4948	L04 TO L03	*Call
2098<2096		5071<4951	M03 TO L03	*Call
2098<2096		5071<4952	M04 TO L03	*Call
2098<2096		5071<4954	N02 TO L03	*Call
2098<2096		5071<4955	N03 TO L03	*Call
2098<2096		5071<4956	N04 TO L03	*Call
2098<2096		5071<4958	O02 TO L03	*Call
2098<2096		5071<4959	O03 TO L03	*Call
2098<2096		5071<4960	O04 TO L03	*Call
2098<2096		5071<4962	P02 TO L03	*Call
2098<2096		5071<4963	P03 TO L03	*Call
2098<2096		5071<4964	P04 TO L03	*Call
2098<2096		5071<4966	Q02 TO L03	*Call
2098<2096		5071<4967	Q03 TO L03	*Call
2098<2096		5071<4968	Q04 TO L03	*Call
2098<2096		5071<4969	R01 TO L03	*Call
2098<2096		5071<4970	R02 TO L03	*Call
2098<2096		5071<4971	R03 TO L03	*Call
2098<2096		5071<4972	R04 TO L03	*Call
2098<2096		5071<4973	S01 TO L03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5071<4974	S02 TO L03	*Call
2098<2096		5071<4975	S03 TO L03	*Call
2098<2096		5071<4976	S04 TO L03	*Call
2098<2096		5071<4977	T01 TO L03	*Call
2098<2096		5071<4978	T02 TO L03	*Call
2098<2096		5071<4979	T03 TO L03	*Call
2098<2096		5071<4980	T04 TO L03	*Call
2098<2096		5071<4981	U01 TO L03	*Call
2098<2096		5071<4982	U02 TO L03	*Call
2098<2096		5071<4983	U03 TO L03	*Call
2098<2096		5071<4984	U04 TO L03	*Call
2098<2096		5071<4985	V01 TO L03	*Call
2098<2096		5071<4986	V02 TO L03	*Call
2098<2096		5071<4987	V03 TO L03	*Call
2098<2096		5071<4988	V04 TO L03	*Call
2098<2096		5071<4989	W01 TO L03	*Call
2098<2096		5071<4990	W02 TO L03	*Call
2098<2096		5071<4991	W03 TO L03	*Call
2098<2096		5071<4992	W04 TO L03	*Call
2098<2096		5071<4993	X01 TO L03	*Call
2098<2096		5071<4994	X02 TO L03	*Call
2098<2096		5071<4995	X03 TO L03	*Call
2098<2096		5071<4996	X04 TO L03	*Call
2098<2096		5071<4997	Y01 TO L03	*Call
2098<2096		5071<4998	Y02 TO L03	*Call
2098<2096		5071<4999	Y03 TO L03	*Call
2098<2096		5071<5000	Y04 TO L03	*Call
2098<2096		5071<5001	Z01 TO L03	*Call
2098<2096		5071<5002	Z02 TO L03	*Call
2098<2096		5071<5003	Z03 TO L03	*Call
2098<2096		5071<5004	Z04 TO L03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5072<4900	Z00 TO L04	*Call
2098<2096		5072<4901	A01 TO L04	*Call
2098<2096		5072<4902	A02 TO L04	*Call
2098<2096		5072<4903	A03 TO L04	*Call
2098<2096		5072<4905	B01 TO L04	*Call
2098<2096		5072<4906	B02 TO L04	*Call
2098<2096		5072<4907	B03 TO L04	*Call
2098<2096		5072<4909	C01 TO L04	*Call
2098<2096		5072<4910	C02 TO L04	*Call
2098<2096		5072<4911	C03 TO L04	*Call
2098<2096		5072<4913	D01 TO L04	*Call
2098<2096		5072<4914	D02 TO L04	*Call
2098<2096		5072<4915	D03 TO L04	*Call
2098<2096		5072<4917	E01 TO L04	*Call
2098<2096		5072<4918	E02 TO L04	*Call
2098<2096		5072<4921	F01 TO L04	*Call
2098<2096		5072<4922	F02 TO L04	*Call
2098<2096		5072<4925	G01 TO L04	*Call
2098<2096		5072<4929	H01 TO L04	*Call
2098<2096		5072<4933	I01 TO L04	*Call
2098<2096		5072<4937	J01 TO L04	*Call
2098<2096		5072<4944	K04 TO L04	*Call
2098<2096		5072<4947	L03 TO L04	*Call
2098<2096		5072<4948	L04 TO L04	*Call
2098<2096		5072<4951	M03 TO L04	*Call
2098<2096		5072<4952	M04 TO L04	*Call
2098<2096		5072<4954	N02 TO L04	*Call
2098<2096		5072<4955	N03 TO L04	*Call
2098<2096		5072<4956	N04 TO L04	*Call
2098<2096		5072<4958	O02 TO L04	*Call
2098<2096		5072<4959	O03 TO L04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5072<4960	O04 TO L04	*Call
2098<2096		5072<4962	P02 TO L04	*Call
2098<2096		5072<4963	P03 TO L04	*Call
2098<2096		5072<4964	P04 TO L04	*Call
2098<2096		5072<4966	Q02 TO L04	*Call
2098<2096		5072<4967	Q03 TO L04	*Call
2098<2096		5072<4968	Q04 TO L04	*Call
2098<2096		5072<4969	R01 TO L04	*Call
2098<2096		5072<4970	R02 TO L04	*Call
2098<2096		5072<4971	R03 TO L04	*Call
2098<2096		5072<4972	R04 TO L04	*Call
2098<2096		5072<4973	S01 TO L04	*Call
2098<2096		5072<4974	S02 TO L04	*Call
2098<2096		5072<4975	S03 TO L04	*Call
2098<2096		5072<4976	S04 TO L04	*Call
2098<2096		5072<4977	T01 TO L04	*Call
2098<2096		5072<4978	T02 TO L04	*Call
2098<2096		5072<4979	T03 TO L04	*Call
2098<2096		5072<4980	T04 TO L04	*Call
2098<2096		5072<4981	U01 TO L04	*Call
2098<2096		5072<4982	U02 TO L04	*Call
2098<2096		5072<4983	U03 TO L04	*Call
2098<2096		5072<4984	U04 TO L04	*Call
2098<2096		5072<4985	V01 TO L04	*Call
2098<2096		5072<4986	V02 TO L04	*Call
2098<2096		5072<4987	V03 TO L04	*Call
2098<2096		5072<4988	V04 TO L04	*Call
2098<2096		5072<4989	W01 TO L04	*Call
2098<2096		5072<4990	W02 TO L04	*Call
2098<2096		5072<4991	W03 TO L04	*Call
2098<2096		5072<4992	W04 TO L04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5072<4993	X01 TO L04	*Call
2098<2096		5072<4994	X02 TO L04	*Call
2098<2096		5072<4995	X03 TO L04	*Call
2098<2096		5072<4996	X04 TO L04	*Call
2098<2096		5072<4997	Y01 TO L04	*Call
2098<2096		5072<4998	Y02 TO L04	*Call
2098<2096		5072<4999	Y03 TO L04	*Call
2098<2096		5072<5000	Y04 TO L04	*Call
2098<2096		5072<5001	Z01 TO L04	*Call
2098<2096		5072<5002	Z02 TO L04	*Call
2098<2096		5072<5003	Z03 TO L04	*Call
2098<2096		5072<5004	Z04 TO L04	*Call
2098<2096		5073<4900	Z00 TO L05	*Call
2098<2096		5073<4901	A01 TO L05	*Call
2098<2096		5073<4902	A02 TO L05	*Call
2098<2096		5073<4903	A03 TO L05	*Call
2098<2096		5073<4905	B01 TO L05	*Call
2098<2096		5073<4906	B02 TO L05	*Call
2098<2096		5073<4907	B03 TO L05	*Call
2098<2096		5073<4909	C01 TO L05	*Call
2098<2096		5073<4910	C02 TO L05	*Call
2098<2096		5073<4911	C03 TO L05	*Call
2098<2096		5073<4913	D01 TO L05	*Call
2098<2096		5073<4914	D02 TO L05	*Call
2098<2096		5073<4915	D03 TO L05	*Call
2098<2096		5073<4917	E01 TO L05	*Call
2098<2096		5073<4918	E02 TO L05	*Call
2098<2096		5073<4921	F01 TO L05	*Call
2098<2096		5073<4922	F02 TO L05	*Call
2098<2096		5073<4925	G01 TO L05	*Call
2098<2096		5073<4929	H01 TO L05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5073<4933	I01 TO L05	*Call
2098<2096		5073<4937	J01 TO L05	*Call
2098<2096		5073<4944	K04 TO L05	*Call
2098<2096		5073<4947	L03 TO L05	*Call
2098<2096		5073<4948	L04 TO L05	*Call
2098<2096		5073<4951	M03 TO L05	*Call
2098<2096		5073<4952	M04 TO L05	*Call
2098<2096		5073<4954	N02 TO L05	*Call
2098<2096		5073<4955	N03 TO L05	*Call
2098<2096		5073<4956	N04 TO L05	*Call
2098<2096		5073<4958	O02 TO L05	*Call
2098<2096		5073<4959	O03 TO L05	*Call
2098<2096		5073<4960	O04 TO L05	*Call
2098<2096		5073<4962	P02 TO L05	*Call
2098<2096		5073<4963	P03 TO L05	*Call
2098<2096		5073<4964	P04 TO L05	*Call
2098<2096		5073<4966	Q02 TO L05	*Call
2098<2096		5073<4967	Q03 TO L05	*Call
2098<2096		5073<4968	Q04 TO L05	*Call
2098<2096		5073<4969	R01 TO L05	*Call
2098<2096		5073<4970	R02 TO L05	*Call
2098<2096		5073<4971	R03 TO L05	*Call
2098<2096		5073<4972	R04 TO L05	*Call
2098<2096		5073<4973	S01 TO L05	*Call
2098<2096		5073<4974	S02 TO L05	*Call
2098<2096		5073<4975	S03 TO L05	*Call
2098<2096		5073<4976	S04 TO L05	*Call
2098<2096		5073<4977	T01 TO L05	*Call
2098<2096		5073<4978	T02 TO L05	*Call
2098<2096		5073<4979	T03 TO L05	*Call
2098<2096		5073<4980	T04 TO L05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5073<4981	U01 TO L05	*Call
2098<2096		5073<4982	U02 TO L05	*Call
2098<2096		5073<4983	U03 TO L05	*Call
2098<2096		5073<4984	U04 TO L05	*Call
2098<2096		5073<4985	V01 TO L05	*Call
2098<2096		5073<4986	V02 TO L05	*Call
2098<2096		5073<4987	V03 TO L05	*Call
2098<2096		5073<4988	V04 TO L05	*Call
2098<2096		5073<4989	W01 TO L05	*Call
2098<2096		5073<4990	W02 TO L05	*Call
2098<2096		5073<4991	W03 TO L05	*Call
2098<2096		5073<4992	W04 TO L05	*Call
2098<2096		5073<4993	X01 TO L05	*Call
2098<2096		5073<4994	X02 TO L05	*Call
2098<2096		5073<4995	X03 TO L05	*Call
2098<2096		5073<4996	X04 TO L05	*Call
2098<2096		5073<4997	Y01 TO L05	*Call
2098<2096		5073<4998	Y02 TO L05	*Call
2098<2096		5073<4999	Y03 TO L05	*Call
2098<2096		5073<5000	Y04 TO L05	*Call
2098<2096		5073<5001	Z01 TO L05	*Call
2098<2096		5073<5002	Z02 TO L05	*Call
2098<2096		5073<5003	Z03 TO L05	*Call
2098<2096		5073<5004	Z04 TO L05	*Call
2098<2096		5074<4900	Z00 TO M01	*Call
2098<2096		5074<4901	A01 TO M01	*Call
2098<2096		5074<4902	A02 TO M01	*Call
2098<2096		5074<4903	A03 TO M01	*Call
2098<2096		5074<4905	B01 TO M01	*Call
2098<2096		5074<4906	B02 TO M01	*Call
2098<2096		5074<4907	B03 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5074<4909	C01 TO M01	*Call
2098<2096		5074<4910	C02 TO M01	*Call
2098<2096		5074<4911	C03 TO M01	*Call
2098<2096		5074<4913	D01 TO M01	*Call
2098<2096		5074<4914	D02 TO M01	*Call
2098<2096		5074<4915	D03 TO M01	*Call
2098<2096		5074<4917	E01 TO M01	*Call
2098<2096		5074<4918	E02 TO M01	*Call
2098<2096		5074<4921	F01 TO M01	*Call
2098<2096		5074<4922	F02 TO M01	*Call
2098<2096		5074<4925	G01 TO M01	*Call
2098<2096		5074<4929	H01 TO M01	*Call
2098<2096		5074<4933	I01 TO M01	*Call
2098<2096		5074<4937	J01 TO M01	*Call
2098<2096		5074<4944	K04 TO M01	*Call
2098<2096		5074<4947	L03 TO M01	*Call
2098<2096		5074<4948	L04 TO M01	*Call
2098<2096		5074<4951	M03 TO M01	*Call
2098<2096		5074<4952	M04 TO M01	*Call
2098<2096		5074<4954	N02 TO M01	*Call
2098<2096		5074<4955	N03 TO M01	*Call
2098<2096		5074<4956	N04 TO M01	*Call
2098<2096		5074<4958	O02 TO M01	*Call
2098<2096		5074<4959	O03 TO M01	*Call
2098<2096		5074<4960	O04 TO M01	*Call
2098<2096		5074<4962	P02 TO M01	*Call
2098<2096		5074<4963	P03 TO M01	*Call
2098<2096		5074<4964	P04 TO M01	*Call
2098<2096		5074<4966	Q02 TO M01	*Call
2098<2096		5074<4967	Q03 TO M01	*Call
2098<2096		5074<4968	Q04 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5074<4969	R01 TO M01	*Call
2098<2096		5074<4970	R02 TO M01	*Call
2098<2096		5074<4971	R03 TO M01	*Call
2098<2096		5074<4972	R04 TO M01	*Call
2098<2096		5074<4973	S01 TO M01	*Call
2098<2096		5074<4974	S02 TO M01	*Call
2098<2096		5074<4975	S03 TO M01	*Call
2098<2096		5074<4976	S04 TO M01	*Call
2098<2096		5074<4977	T01 TO M01	*Call
2098<2096		5074<4978	T02 TO M01	*Call
2098<2096		5074<4979	T03 TO M01	*Call
2098<2096		5074<4980	T04 TO M01	*Call
2098<2096		5074<4981	U01 TO M01	*Call
2098<2096		5074<4982	U02 TO M01	*Call
2098<2096		5074<4983	U03 TO M01	*Call
2098<2096		5074<4984	U04 TO M01	*Call
2098<2096		5074<4985	V01 TO M01	*Call
2098<2096		5074<4986	V02 TO M01	*Call
2098<2096		5074<4987	V03 TO M01	*Call
2098<2096		5074<4988	V04 TO M01	*Call
2098<2096		5074<4989	W01 TO M01	*Call
2098<2096		5074<4990	W02 TO M01	*Call
2098<2096		5074<4991	W03 TO M01	*Call
2098<2096		5074<4992	W04 TO M01	*Call
2098<2096		5074<4993	X01 TO M01	*Call
2098<2096		5074<4994	X02 TO M01	*Call
2098<2096		5074<4995	X03 TO M01	*Call
2098<2096		5074<4996	X04 TO M01	*Call
2098<2096		5074<4997	Y01 TO M01	*Call
2098<2096		5074<4998	Y02 TO M01	*Call
2098<2096		5074<4999	Y03 TO M01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5074<5000	Y04 TO M01	*Call
2098<2096		5074<5001	Z01 TO M01	*Call
2098<2096		5074<5002	Z02 TO M01	*Call
2098<2096		5074<5003	Z03 TO M01	*Call
2098<2096		5074<5004	Z04 TO M01	*Call
2098<2096		5075<4900	Z00 TO M02	*Call
2098<2096		5075<4901	A01 TO M02	*Call
2098<2096		5075<4902	A02 TO M02	*Call
2098<2096		5075<4903	A03 TO M02	*Call
2098<2096		5075<4905	B01 TO M02	*Call
2098<2096		5075<4906	B02 TO M02	*Call
2098<2096		5075<4907	B03 TO M02	*Call
2098<2096		5075<4909	C01 TO M02	*Call
2098<2096		5075<4910	C02 TO M02	*Call
2098<2096		5075<4911	C03 TO M02	*Call
2098<2096		5075<4913	D01 TO M02	*Call
2098<2096		5075<4914	D02 TO M02	*Call
2098<2096		5075<4915	D03 TO M02	*Call
2098<2096		5075<4917	E01 TO M02	*Call
2098<2096		5075<4918	E02 TO M02	*Call
2098<2096		5075<4921	F01 TO M02	*Call
2098<2096		5075<4922	F02 TO M02	*Call
2098<2096		5075<4925	G01 TO M02	*Call
2098<2096		5075<4929	H01 TO M02	*Call
2098<2096		5075<4933	I01 TO M02	*Call
2098<2096		5075<4937	J01 TO M02	*Call
2098<2096		5075<4944	K04 TO M02	*Call
2098<2096		5075<4947	L03 TO M02	*Call
2098<2096		5075<4948	L04 TO M02	*Call
2098<2096		5075<4951	M03 TO M02	*Call
2098<2096		5075<4952	M04 TO M02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5075<4954	N02 TO M02	*Call
2098<2096		5075<4955	N03 TO M02	*Call
2098<2096		5075<4956	N04 TO M02	*Call
2098<2096		5075<4958	O02 TO M02	*Call
2098<2096		5075<4959	O03 TO M02	*Call
2098<2096		5075<4960	O04 TO M02	*Call
2098<2096		5075<4962	P02 TO M02	*Call
2098<2096		5075<4963	P03 TO M02	*Call
2098<2096		5075<4964	P04 TO M02	*Call
2098<2096		5075<4966	Q02 TO M02	*Call
2098<2096		5075<4967	Q03 TO M02	*Call
2098<2096		5075<4968	Q04 TO M02	*Call
2098<2096		5075<4969	R01 TO M02	*Call
2098<2096		5075<4970	R02 TO M02	*Call
2098<2096		5075<4971	R03 TO M02	*Call
2098<2096		5075<4972	R04 TO M02	*Call
2098<2096		5075<4973	S01 TO M02	*Call
2098<2096		5075<4974	S02 TO M02	*Call
2098<2096		5075<4975	S03 TO M02	*Call
2098<2096		5075<4976	S04 TO M02	*Call
2098<2096		5075<4977	T01 TO M02	*Call
2098<2096		5075<4978	T02 TO M02	*Call
2098<2096		5075<4979	T03 TO M02	*Call
2098<2096		5075<4980	T04 TO M02	*Call
2098<2096		5075<4981	U01 TO M02	*Call
2098<2096		5075<4982	U02 TO M02	*Call
2098<2096		5075<4983	U03 TO M02	*Call
2098<2096		5075<4984	U04 TO M02	*Call
2098<2096		5075<4985	V01 TO M02	*Call
2098<2096		5075<4986	V02 TO M02	*Call
2098<2096		5075<4987	V03 TO M02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5075<4988	V04 TO M02	*Call
2098<2096		5075<4989	W01 TO M02	*Call
2098<2096		5075<4990	W02 TO M02	*Call
2098<2096		5075<4991	W03 TO M02	*Call
2098<2096		5075<4992	W04 TO M02	*Call
2098<2096		5075<4993	X01 TO M02	*Call
2098<2096		5075<4994	X02 TO M02	*Call
2098<2096		5075<4995	X03 TO M02	*Call
2098<2096		5075<4996	X04 TO M02	*Call
2098<2096		5075<4997	Y01 TO M02	*Call
2098<2096		5075<4998	Y02 TO M02	*Call
2098<2096		5075<4999	Y03 TO M02	*Call
2098<2096		5075<5000	Y04 TO M02	*Call
2098<2096		5075<5001	Z01 TO M02	*Call
2098<2096		5075<5002	Z02 TO M02	*Call
2098<2096		5075<5003	Z03 TO M02	*Call
2098<2096		5075<5004	Z04 TO M02	*Call
2098<2096		5076<4900	Z00 TO M03	*Call
2098<2096		5076<4901	A01 TO M03	*Call
2098<2096		5076<4902	A02 TO M03	*Call
2098<2096		5076<4903	A03 TO M03	*Call
2098<2096		5076<4905	B01 TO M03	*Call
2098<2096		5076<4906	B02 TO M03	*Call
2098<2096		5076<4907	B03 TO M03	*Call
2098<2096		5076<4909	C01 TO M03	*Call
2098<2096		5076<4910	C02 TO M03	*Call
2098<2096		5076<4911	C03 TO M03	*Call
2098<2096		5076<4913	D01 TO M03	*Call
2098<2096		5076<4914	D02 TO M03	*Call
2098<2096		5076<4915	D03 TO M03	*Call
2098<2096		5076<4917	E01 TO M03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5076<4918	E02 TO M03	*Call
2098<2096		5076<4921	F01 TO M03	*Call
2098<2096		5076<4922	F02 TO M03	*Call
2098<2096		5076<4925	G01 TO M03	*Call
2098<2096		5076<4929	H01 TO M03	*Call
2098<2096		5076<4933	I01 TO M03	*Call
2098<2096		5076<4937	J01 TO M03	*Call
2098<2096		5076<4944	K04 TO M03	*Call
2098<2096		5076<4947	L03 TO M03	*Call
2098<2096		5076<4948	L04 TO M03	*Call
2098<2096		5076<4951	M03 TO M03	*Call
2098<2096		5076<4952	M04 TO M03	*Call
2098<2096		5076<4954	N02 TO M03	*Call
2098<2096		5076<4955	N03 TO M03	*Call
2098<2096		5076<4956	N04 TO M03	*Call
2098<2096		5076<4958	O02 TO M03	*Call
2098<2096		5076<4959	O03 TO M03	*Call
2098<2096		5076<4960	O04 TO M03	*Call
2098<2096		5076<4962	P02 TO M03	*Call
2098<2096		5076<4963	P03 TO M03	*Call
2098<2096		5076<4964	P04 TO M03	*Call
2098<2096		5076<4966	Q02 TO M03	*Call
2098<2096		5076<4967	Q03 TO M03	*Call
2098<2096		5076<4968	Q04 TO M03	*Call
2098<2096		5076<4969	R01 TO M03	*Call
2098<2096		5076<4970	R02 TO M03	*Call
2098<2096		5076<4971	R03 TO M03	*Call
2098<2096		5076<4972	R04 TO M03	*Call
2098<2096		5076<4973	S01 TO M03	*Call
2098<2096		5076<4974	S02 TO M03	*Call
2098<2096		5076<4975	S03 TO M03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5076<4976	S04 TO M03	*Call
2098<2096		5076<4977	T01 TO M03	*Call
2098<2096		5076<4978	T02 TO M03	*Call
2098<2096		5076<4979	T03 TO M03	*Call
2098<2096		5076<4980	T04 TO M03	*Call
2098<2096		5076<4981	U01 TO M03	*Call
2098<2096		5076<4982	U02 TO M03	*Call
2098<2096		5076<4983	U03 TO M03	*Call
2098<2096		5076<4984	U04 TO M03	*Call
2098<2096		5076<4985	V01 TO M03	*Call
2098<2096		5076<4986	V02 TO M03	*Call
2098<2096		5076<4987	V03 TO M03	*Call
2098<2096		5076<4988	V04 TO M03	*Call
2098<2096		5076<4989	W01 TO M03	*Call
2098<2096		5076<4990	W02 TO M03	*Call
2098<2096		5076<4991	W03 TO M03	*Call
2098<2096		5076<4992	W04 TO M03	*Call
2098<2096		5076<4993	X01 TO M03	*Call
2098<2096		5076<4994	X02 TO M03	*Call
2098<2096		5076<4995	X03 TO M03	*Call
2098<2096		5076<4996	X04 TO M03	*Call
2098<2096		5076<4997	Y01 TO M03	*Call
2098<2096		5076<4998	Y02 TO M03	*Call
2098<2096		5076<4999	Y03 TO M03	*Call
2098<2096		5076<5000	Y04 TO M03	*Call
2098<2096		5076<5001	Z01 TO M03	*Call
2098<2096		5076<5002	Z02 TO M03	*Call
2098<2096		5076<5003	Z03 TO M03	*Call
2098<2096		5076<5004	Z04 TO M03	*Call
2098<2096		5077<4900	Z00 TO M04	*Call
2098<2096		5077<4901	A01 TO M04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5077<4902	A02 TO M04	*Call
2098<2096		5077<4903	A03 TO M04	*Call
2098<2096		5077<4905	B01 TO M04	*Call
2098<2096		5077<4906	B02 TO M04	*Call
2098<2096		5077<4907	B03 TO M04	*Call
2098<2096		5077<4909	C01 TO M04	*Call
2098<2096		5077<4910	C02 TO M04	*Call
2098<2096		5077<4911	C03 TO M04	*Call
2098<2096		5077<4913	D01 TO M04	*Call
2098<2096		5077<4914	D02 TO M04	*Call
2098<2096		5077<4915	D03 TO M04	*Call
2098<2096		5077<4917	E01 TO M04	*Call
2098<2096		5077<4918	E02 TO M04	*Call
2098<2096		5077<4921	F01 TO M04	*Call
2098<2096		5077<4922	F02 TO M04	*Call
2098<2096		5077<4925	G01 TO M04	*Call
2098<2096		5077<4929	H01 TO M04	*Call
2098<2096		5077<4933	I01 TO M04	*Call
2098<2096		5077<4937	J01 TO M04	*Call
2098<2096		5077<4944	K04 TO M04	*Call
2098<2096		5077<4947	L03 TO M04	*Call
2098<2096		5077<4948	L04 TO M04	*Call
2098<2096		5077<4951	M03 TO M04	*Call
2098<2096		5077<4952	M04 TO M04	*Call
2098<2096		5077<4954	N02 TO M04	*Call
2098<2096		5077<4955	N03 TO M04	*Call
2098<2096		5077<4956	N04 TO M04	*Call
2098<2096		5077<4958	O02 TO M04	*Call
2098<2096		5077<4959	O03 TO M04	*Call
2098<2096		5077<4960	O04 TO M04	*Call
2098<2096		5077<4962	P02 TO M04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5077<4963	P03 TO M04	*Call
2098<2096		5077<4964	P04 TO M04	*Call
2098<2096		5077<4966	Q02 TO M04	*Call
2098<2096		5077<4967	Q03 TO M04	*Call
2098<2096		5077<4968	Q04 TO M04	*Call
2098<2096		5077<4969	R01 TO M04	*Call
2098<2096		5077<4970	R02 TO M04	*Call
2098<2096		5077<4971	R03 TO M04	*Call
2098<2096		5077<4972	R04 TO M04	*Call
2098<2096		5077<4973	S01 TO M04	*Call
2098<2096		5077<4974	S02 TO M04	*Call
2098<2096		5077<4975	S03 TO M04	*Call
2098<2096		5077<4976	S04 TO M04	*Call
2098<2096		5077<4977	T01 TO M04	*Call
2098<2096		5077<4978	T02 TO M04	*Call
2098<2096		5077<4979	T03 TO M04	*Call
2098<2096		5077<4980	T04 TO M04	*Call
2098<2096		5077<4981	U01 TO M04	*Call
2098<2096		5077<4982	U02 TO M04	*Call
2098<2096		5077<4983	U03 TO M04	*Call
2098<2096		5077<4984	U04 TO M04	*Call
2098<2096		5077<4985	V01 TO M04	*Call
2098<2096		5077<4986	V02 TO M04	*Call
2098<2096		5077<4987	V03 TO M04	*Call
2098<2096		5077<4988	V04 TO M04	*Call
2098<2096		5077<4989	W01 TO M04	*Call
2098<2096		5077<4990	W02 TO M04	*Call
2098<2096		5077<4991	W03 TO M04	*Call
2098<2096		5077<4992	W04 TO M04	*Call
2098<2096		5077<4993	X01 TO M04	*Call
2098<2096		5077<4994	X02 TO M04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5077<4995	X03 TO M04	*Call
2098<2096		5077<4996	X04 TO M04	*Call
2098<2096		5077<4997	Y01 TO M04	*Call
2098<2096		5077<4998	Y02 TO M04	*Call
2098<2096		5077<4999	Y03 TO M04	*Call
2098<2096		5077<5000	Y04 TO M04	*Call
2098<2096		5077<5001	Z01 TO M04	*Call
2098<2096		5077<5002	Z02 TO M04	*Call
2098<2096		5077<5003	Z03 TO M04	*Call
2098<2096		5077<5004	Z04 TO M04	*Call
2098<2096		5078<4900	Z00 TO M05	*Call
2098<2096		5078<4901	A01 TO M05	*Call
2098<2096		5078<4902	A02 TO M05	*Call
2098<2096		5078<4903	A03 TO M05	*Call
2098<2096		5078<4905	B01 TO M05	*Call
2098<2096		5078<4906	B02 TO M05	*Call
2098<2096		5078<4907	B03 TO M05	*Call
2098<2096		5078<4909	C01 TO M05	*Call
2098<2096		5078<4910	C02 TO M05	*Call
2098<2096		5078<4911	C03 TO M05	*Call
2098<2096		5078<4913	D01 TO M05	*Call
2098<2096		5078<4914	D02 TO M05	*Call
2098<2096		5078<4915	D03 TO M05	*Call
2098<2096		5078<4917	E01 TO M05	*Call
2098<2096		5078<4918	E02 TO M05	*Call
2098<2096		5078<4921	F01 TO M05	*Call
2098<2096		5078<4922	F02 TO M05	*Call
2098<2096		5078<4925	G01 TO M05	*Call
2098<2096		5078<4929	H01 TO M05	*Call
2098<2096		5078<4933	I01 TO M05	*Call
2098<2096		5078<4937	J01 TO M05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5078<4944	K04 TO M05	*Call
2098<2096		5078<4947	L03 TO M05	*Call
2098<2096		5078<4948	L04 TO M05	*Call
2098<2096		5078<4951	M03 TO M05	*Call
2098<2096		5078<4952	M04 TO M05	*Call
2098<2096		5078<4954	N02 TO M05	*Call
2098<2096		5078<4955	N03 TO M05	*Call
2098<2096		5078<4956	N04 TO M05	*Call
2098<2096		5078<4958	O02 TO M05	*Call
2098<2096		5078<4959	O03 TO M05	*Call
2098<2096		5078<4960	O04 TO M05	*Call
2098<2096		5078<4962	P02 TO M05	*Call
2098<2096		5078<4963	P03 TO M05	*Call
2098<2096		5078<4964	P04 TO M05	*Call
2098<2096		5078<4966	Q02 TO M05	*Call
2098<2096		5078<4967	Q03 TO M05	*Call
2098<2096		5078<4968	Q04 TO M05	*Call
2098<2096		5078<4969	R01 TO M05	*Call
2098<2096		5078<4970	R02 TO M05	*Call
2098<2096		5078<4971	R03 TO M05	*Call
2098<2096		5078<4972	R04 TO M05	*Call
2098<2096		5078<4973	S01 TO M05	*Call
2098<2096		5078<4974	S02 TO M05	*Call
2098<2096		5078<4975	S03 TO M05	*Call
2098<2096		5078<4976	S04 TO M05	*Call
2098<2096		5078<4977	T01 TO M05	*Call
2098<2096		5078<4978	T02 TO M05	*Call
2098<2096		5078<4979	T03 TO M05	*Call
2098<2096		5078<4980	T04 TO M05	*Call
2098<2096		5078<4981	U01 TO M05	*Call
2098<2096		5078<4982	U02 TO M05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5078<4983	U03 TO M05	*Call
2098<2096		5078<4984	U04 TO M05	*Call
2098<2096		5078<4985	V01 TO M05	*Call
2098<2096		5078<4986	V02 TO M05	*Call
2098<2096		5078<4987	V03 TO M05	*Call
2098<2096		5078<4988	V04 TO M05	*Call
2098<2096		5078<4989	W01 TO M05	*Call
2098<2096		5078<4990	W02 TO M05	*Call
2098<2096		5078<4991	W03 TO M05	*Call
2098<2096		5078<4992	W04 TO M05	*Call
2098<2096		5078<4993	X01 TO M05	*Call
2098<2096		5078<4994	X02 TO M05	*Call
2098<2096		5078<4995	X03 TO M05	*Call
2098<2096		5078<4996	X04 TO M05	*Call
2098<2096		5078<4997	Y01 TO M05	*Call
2098<2096		5078<4998	Y02 TO M05	*Call
2098<2096		5078<4999	Y03 TO M05	*Call
2098<2096		5078<5000	Y04 TO M05	*Call
2098<2096		5078<5001	Z01 TO M05	*Call
2098<2096		5078<5002	Z02 TO M05	*Call
2098<2096		5078<5003	Z03 TO M05	*Call
2098<2096		5078<5004	Z04 TO M05	*Call
2098<2096		5079<4900	Z00 TO N01	*Call
2098<2096		5079<4901	A01 TO N01	*Call
2098<2096		5079<4902	A02 TO N01	*Call
2098<2096		5079<4903	A03 TO N01	*Call
2098<2096		5079<4905	B01 TO N01	*Call
2098<2096		5079<4906	B02 TO N01	*Call
2098<2096		5079<4907	B03 TO N01	*Call
2098<2096		5079<4909	C01 TO N01	*Call
2098<2096		5079<4910	C02 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5079<4911	C03 TO N01	*Call
2098<2096		5079<4913	D01 TO N01	*Call
2098<2096		5079<4914	D02 TO N01	*Call
2098<2096		5079<4915	D03 TO N01	*Call
2098<2096		5079<4917	E01 TO N01	*Call
2098<2096		5079<4918	E02 TO N01	*Call
2098<2096		5079<4921	F01 TO N01	*Call
2098<2096		5079<4922	F02 TO N01	*Call
2098<2096		5079<4925	G01 TO N01	*Call
2098<2096		5079<4929	H01 TO N01	*Call
2098<2096		5079<4933	I01 TO N01	*Call
2098<2096		5079<4937	J01 TO N01	*Call
2098<2096		5079<4944	K04 TO N01	*Call
2098<2096		5079<4947	L03 TO N01	*Call
2098<2096		5079<4948	L04 TO N01	*Call
2098<2096		5079<4951	M03 TO N01	*Call
2098<2096		5079<4952	M04 TO N01	*Call
2098<2096		5079<4954	N02 TO N01	*Call
2098<2096		5079<4955	N03 TO N01	*Call
2098<2096		5079<4956	N04 TO N01	*Call
2098<2096		5079<4958	O02 TO N01	*Call
2098<2096		5079<4959	O03 TO N01	*Call
2098<2096		5079<4960	O04 TO N01	*Call
2098<2096		5079<4962	P02 TO N01	*Call
2098<2096		5079<4963	P03 TO N01	*Call
2098<2096		5079<4964	P04 TO N01	*Call
2098<2096		5079<4966	Q02 TO N01	*Call
2098<2096		5079<4967	Q03 TO N01	*Call
2098<2096		5079<4968	Q04 TO N01	*Call
2098<2096		5079<4969	R01 TO N01	*Call
2098<2096		5079<4970	R02 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5079<4971	R03 TO N01	*Call
2098<2096		5079<4972	R04 TO N01	*Call
2098<2096		5079<4973	S01 TO N01	*Call
2098<2096		5079<4974	S02 TO N01	*Call
2098<2096		5079<4975	S03 TO N01	*Call
2098<2096		5079<4976	S04 TO N01	*Call
2098<2096		5079<4977	T01 TO N01	*Call
2098<2096		5079<4978	T02 TO N01	*Call
2098<2096		5079<4979	T03 TO N01	*Call
2098<2096		5079<4980	T04 TO N01	*Call
2098<2096		5079<4981	U01 TO N01	*Call
2098<2096		5079<4982	U02 TO N01	*Call
2098<2096		5079<4983	U03 TO N01	*Call
2098<2096		5079<4984	U04 TO N01	*Call
2098<2096		5079<4985	V01 TO N01	*Call
2098<2096		5079<4986	V02 TO N01	*Call
2098<2096		5079<4987	V03 TO N01	*Call
2098<2096		5079<4988	V04 TO N01	*Call
2098<2096		5079<4989	W01 TO N01	*Call
2098<2096		5079<4990	W02 TO N01	*Call
2098<2096		5079<4991	W03 TO N01	*Call
2098<2096		5079<4992	W04 TO N01	*Call
2098<2096		5079<4993	X01 TO N01	*Call
2098<2096		5079<4994	X02 TO N01	*Call
2098<2096		5079<4995	X03 TO N01	*Call
2098<2096		5079<4996	X04 TO N01	*Call
2098<2096		5079<4997	Y01 TO N01	*Call
2098<2096		5079<4998	Y02 TO N01	*Call
2098<2096		5079<4999	Y03 TO N01	*Call
2098<2096		5079<5000	Y04 TO N01	*Call
2098<2096		5079<5001	Z01 TO N01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5079<5002	Z02 TO N01	*Call
2098<2096		5079<5003	Z03 TO N01	*Call
2098<2096		5079<5004	Z04 TO N01	*Call
2098<2096		5080<4900	Z00 TO N02	*Call
2098<2096		5080<4901	A01 TO N02	*Call
2098<2096		5080<4902	A02 TO N02	*Call
2098<2096		5080<4903	A03 TO N02	*Call
2098<2096		5080<4905	B01 TO N02	*Call
2098<2096		5080<4906	B02 TO N02	*Call
2098<2096		5080<4907	B03 TO N02	*Call
2098<2096		5080<4909	C01 TO N02	*Call
2098<2096		5080<4910	C02 TO N02	*Call
2098<2096		5080<4911	C03 TO N02	*Call
2098<2096		5080<4913	D01 TO N02	*Call
2098<2096		5080<4914	D02 TO N02	*Call
2098<2096		5080<4915	D03 TO N02	*Call
2098<2096		5080<4917	E01 TO N02	*Call
2098<2096		5080<4918	E02 TO N02	*Call
2098<2096		5080<4921	F01 TO N02	*Call
2098<2096		5080<4922	F02 TO N02	*Call
2098<2096		5080<4925	G01 TO N02	*Call
2098<2096		5080<4929	H01 TO N02	*Call
2098<2096		5080<4933	I01 TO N02	*Call
2098<2096		5080<4937	J01 TO N02	*Call
2098<2096		5080<4944	K04 TO N02	*Call
2098<2096		5080<4947	L03 TO N02	*Call
2098<2096		5080<4948	L04 TO N02	*Call
2098<2096		5080<4951	M03 TO N02	*Call
2098<2096		5080<4952	M04 TO N02	*Call
2098<2096		5080<4954	N02 TO N02	*Call
2098<2096		5080<4955	N03 TO N02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5080<4956	N04 TO N02	*Call
2098<2096		5080<4958	O02 TO N02	*Call
2098<2096		5080<4959	O03 TO N02	*Call
2098<2096		5080<4960	O04 TO N02	*Call
2098<2096		5080<4962	P02 TO N02	*Call
2098<2096		5080<4963	P03 TO N02	*Call
2098<2096		5080<4964	P04 TO N02	*Call
2098<2096		5080<4966	Q02 TO N02	*Call
2098<2096		5080<4967	Q03 TO N02	*Call
2098<2096		5080<4968	Q04 TO N02	*Call
2098<2096		5080<4969	R01 TO N02	*Call
2098<2096		5080<4970	R02 TO N02	*Call
2098<2096		5080<4971	R03 TO N02	*Call
2098<2096		5080<4972	R04 TO N02	*Call
2098<2096		5080<4973	S01 TO N02	*Call
2098<2096		5080<4974	S02 TO N02	*Call
2098<2096		5080<4975	S03 TO N02	*Call
2098<2096		5080<4976	S04 TO N02	*Call
2098<2096		5080<4977	T01 TO N02	*Call
2098<2096		5080<4978	T02 TO N02	*Call
2098<2096		5080<4979	T03 TO N02	*Call
2098<2096		5080<4980	T04 TO N02	*Call
2098<2096		5080<4981	U01 TO N02	*Call
2098<2096		5080<4982	U02 TO N02	*Call
2098<2096		5080<4983	U03 TO N02	*Call
2098<2096		5080<4984	U04 TO N02	*Call
2098<2096		5080<4985	V01 TO N02	*Call
2098<2096		5080<4986	V02 TO N02	*Call
2098<2096		5080<4987	V03 TO N02	*Call
2098<2096		5080<4988	V04 TO N02	*Call
2098<2096		5080<4989	W01 TO N02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5080<4990	W02 TO N02	*Call
2098<2096		5080<4991	W03 TO N02	*Call
2098<2096		5080<4992	W04 TO N02	*Call
2098<2096		5080<4993	X01 TO N02	*Call
2098<2096		5080<4994	X02 TO N02	*Call
2098<2096		5080<4995	X03 TO N02	*Call
2098<2096		5080<4996	X04 TO N02	*Call
2098<2096		5080<4997	Y01 TO N02	*Call
2098<2096		5080<4998	Y02 TO N02	*Call
2098<2096		5080<4999	Y03 TO N02	*Call
2098<2096		5080<5000	Y04 TO N02	*Call
2098<2096		5080<5001	Z01 TO N02	*Call
2098<2096		5080<5002	Z02 TO N02	*Call
2098<2096		5080<5003	Z03 TO N02	*Call
2098<2096		5080<5004	Z04 TO N02	*Call
2098<2096		5081<4900	Z00 TO N03	*Call
2098<2096		5081<4901	A01 TO N03	*Call
2098<2096		5081<4902	A02 TO N03	*Call
2098<2096		5081<4903	A03 TO N03	*Call
2098<2096		5081<4905	B01 TO N03	*Call
2098<2096		5081<4906	B02 TO N03	*Call
2098<2096		5081<4907	B03 TO N03	*Call
2098<2096		5081<4909	C01 TO N03	*Call
2098<2096		5081<4910	C02 TO N03	*Call
2098<2096		5081<4911	C03 TO N03	*Call
2098<2096		5081<4913	D01 TO N03	*Call
2098<2096		5081<4914	D02 TO N03	*Call
2098<2096		5081<4915	D03 TO N03	*Call
2098<2096		5081<4917	E01 TO N03	*Call
2098<2096		5081<4918	E02 TO N03	*Call
2098<2096		5081<4921	F01 TO N03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5081<4922	F02 TO N03	*Call
2098<2096		5081<4925	G01 TO N03	*Call
2098<2096		5081<4929	H01 TO N03	*Call
2098<2096		5081<4933	I01 TO N03	*Call
2098<2096		5081<4937	J01 TO N03	*Call
2098<2096		5081<4944	K04 TO N03	*Call
2098<2096		5081<4947	L03 TO N03	*Call
2098<2096		5081<4948	L04 TO N03	*Call
2098<2096		5081<4951	M03 TO N03	*Call
2098<2096		5081<4952	M04 TO N03	*Call
2098<2096		5081<4954	N02 TO N03	*Call
2098<2096		5081<4955	N03 TO N03	*Call
2098<2096		5081<4956	N04 TO N03	*Call
2098<2096		5081<4958	O02 TO N03	*Call
2098<2096		5081<4959	O03 TO N03	*Call
2098<2096		5081<4960	O04 TO N03	*Call
2098<2096		5081<4962	P02 TO N03	*Call
2098<2096		5081<4963	P03 TO N03	*Call
2098<2096		5081<4964	P04 TO N03	*Call
2098<2096		5081<4966	Q02 TO N03	*Call
2098<2096		5081<4967	Q03 TO N03	*Call
2098<2096		5081<4968	Q04 TO N03	*Call
2098<2096		5081<4969	R01 TO N03	*Call
2098<2096		5081<4970	R02 TO N03	*Call
2098<2096		5081<4971	R03 TO N03	*Call
2098<2096		5081<4972	R04 TO N03	*Call
2098<2096		5081<4973	S01 TO N03	*Call
2098<2096		5081<4974	S02 TO N03	*Call
2098<2096		5081<4975	S03 TO N03	*Call
2098<2096		5081<4976	S04 TO N03	*Call
2098<2096		5081<4977	T01 TO N03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5081<4978	T02 TO N03	*Call
2098<2096		5081<4979	T03 TO N03	*Call
2098<2096		5081<4980	T04 TO N03	*Call
2098<2096		5081<4981	U01 TO N03	*Call
2098<2096		5081<4982	U02 TO N03	*Call
2098<2096		5081<4983	U03 TO N03	*Call
2098<2096		5081<4984	U04 TO N03	*Call
2098<2096		5081<4985	V01 TO N03	*Call
2098<2096		5081<4986	V02 TO N03	*Call
2098<2096		5081<4987	V03 TO N03	*Call
2098<2096		5081<4988	V04 TO N03	*Call
2098<2096		5081<4989	W01 TO N03	*Call
2098<2096		5081<4990	W02 TO N03	*Call
2098<2096		5081<4991	W03 TO N03	*Call
2098<2096		5081<4992	W04 TO N03	*Call
2098<2096		5081<4993	X01 TO N03	*Call
2098<2096		5081<4994	X02 TO N03	*Call
2098<2096		5081<4995	X03 TO N03	*Call
2098<2096		5081<4996	X04 TO N03	*Call
2098<2096		5081<4997	Y01 TO N03	*Call
2098<2096		5081<4998	Y02 TO N03	*Call
2098<2096		5081<4999	Y03 TO N03	*Call
2098<2096		5081<5000	Y04 TO N03	*Call
2098<2096		5081<5001	Z01 TO N03	*Call
2098<2096		5081<5002	Z02 TO N03	*Call
2098<2096		5081<5003	Z03 TO N03	*Call
2098<2096		5081<5004	Z04 TO N03	*Call
2098<2096		5082<4900	Z00 TO N04	*Call
2098<2096		5082<4901	A01 TO N04	*Call
2098<2096		5082<4902	A02 TO N04	*Call
2098<2096		5082<4903	A03 TO N04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5082<4905	B01 TO N04	*Call
2098<2096		5082<4906	B02 TO N04	*Call
2098<2096		5082<4907	B03 TO N04	*Call
2098<2096		5082<4909	C01 TO N04	*Call
2098<2096		5082<4910	C02 TO N04	*Call
2098<2096		5082<4911	C03 TO N04	*Call
2098<2096		5082<4913	D01 TO N04	*Call
2098<2096		5082<4914	D02 TO N04	*Call
2098<2096		5082<4915	D03 TO N04	*Call
2098<2096		5082<4917	E01 TO N04	*Call
2098<2096		5082<4918	E02 TO N04	*Call
2098<2096		5082<4921	F01 TO N04	*Call
2098<2096		5082<4922	F02 TO N04	*Call
2098<2096		5082<4925	G01 TO N04	*Call
2098<2096		5082<4929	H01 TO N04	*Call
2098<2096		5082<4933	I01 TO N04	*Call
2098<2096		5082<4937	J01 TO N04	*Call
2098<2096		5082<4944	K04 TO N04	*Call
2098<2096		5082<4947	L03 TO N04	*Call
2098<2096		5082<4948	L04 TO N04	*Call
2098<2096		5082<4951	M03 TO N04	*Call
2098<2096		5082<4952	M04 TO N04	*Call
2098<2096		5082<4954	N02 TO N04	*Call
2098<2096		5082<4955	N03 TO N04	*Call
2098<2096		5082<4956	N04 TO N04	*Call
2098<2096		5082<4958	O02 TO N04	*Call
2098<2096		5082<4959	O03 TO N04	*Call
2098<2096		5082<4960	O04 TO N04	*Call
2098<2096		5082<4962	P02 TO N04	*Call
2098<2096		5082<4963	P03 TO N04	*Call
2098<2096		5082<4964	P04 TO N04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5082<4966	Q02 TO N04	*Call
2098<2096		5082<4967	Q03 TO N04	*Call
2098<2096		5082<4968	Q04 TO N04	*Call
2098<2096		5082<4969	R01 TO N04	*Call
2098<2096		5082<4970	R02 TO N04	*Call
2098<2096		5082<4971	R03 TO N04	*Call
2098<2096		5082<4972	R04 TO N04	*Call
2098<2096		5082<4973	S01 TO N04	*Call
2098<2096		5082<4974	S02 TO N04	*Call
2098<2096		5082<4975	S03 TO N04	*Call
2098<2096		5082<4976	S04 TO N04	*Call
2098<2096		5082<4977	T01 TO N04	*Call
2098<2096		5082<4978	T02 TO N04	*Call
2098<2096		5082<4979	T03 TO N04	*Call
2098<2096		5082<4980	T04 TO N04	*Call
2098<2096		5082<4981	U01 TO N04	*Call
2098<2096		5082<4982	U02 TO N04	*Call
2098<2096		5082<4983	U03 TO N04	*Call
2098<2096		5082<4984	U04 TO N04	*Call
2098<2096		5082<4985	V01 TO N04	*Call
2098<2096		5082<4986	V02 TO N04	*Call
2098<2096		5082<4987	V03 TO N04	*Call
2098<2096		5082<4988	V04 TO N04	*Call
2098<2096		5082<4989	W01 TO N04	*Call
2098<2096		5082<4990	W02 TO N04	*Call
2098<2096		5082<4991	W03 TO N04	*Call
2098<2096		5082<4992	W04 TO N04	*Call
2098<2096		5082<4993	X01 TO N04	*Call
2098<2096		5082<4994	X02 TO N04	*Call
2098<2096		5082<4995	X03 TO N04	*Call
2098<2096		5082<4996	X04 TO N04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5082<4997	Y01 TO N04	*Call
2098<2096		5082<4998	Y02 TO N04	*Call
2098<2096		5082<4999	Y03 TO N04	*Call
2098<2096		5082<5000	Y04 TO N04	*Call
2098<2096		5082<5001	Z01 TO N04	*Call
2098<2096		5082<5002	Z02 TO N04	*Call
2098<2096		5082<5003	Z03 TO N04	*Call
2098<2096		5082<5004	Z04 TO N04	*Call
2098<2096		5083<4900	Z00 TO N05	*Call
2098<2096		5083<4901	A01 TO N05	*Call
2098<2096		5083<4902	A02 TO N05	*Call
2098<2096		5083<4903	A03 TO N05	*Call
2098<2096		5083<4905	B01 TO N05	*Call
2098<2096		5083<4906	B02 TO N05	*Call
2098<2096		5083<4907	B03 TO N05	*Call
2098<2096		5083<4909	C01 TO N05	*Call
2098<2096		5083<4910	C02 TO N05	*Call
2098<2096		5083<4911	C03 TO N05	*Call
2098<2096		5083<4913	D01 TO N05	*Call
2098<2096		5083<4914	D02 TO N05	*Call
2098<2096		5083<4915	D03 TO N05	*Call
2098<2096		5083<4917	E01 TO N05	*Call
2098<2096		5083<4918	E02 TO N05	*Call
2098<2096		5083<4921	F01 TO N05	*Call
2098<2096		5083<4922	F02 TO N05	*Call
2098<2096		5083<4925	G01 TO N05	*Call
2098<2096		5083<4929	H01 TO N05	*Call
2098<2096		5083<4933	I01 TO N05	*Call
2098<2096		5083<4937	J01 TO N05	*Call
2098<2096		5083<4944	K04 TO N05	*Call
2098<2096		5083<4947	L03 TO N05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5083<4948	L04 TO N05	*Call
2098<2096		5083<4951	M03 TO N05	*Call
2098<2096		5083<4952	M04 TO N05	*Call
2098<2096		5083<4954	N02 TO N05	*Call
2098<2096		5083<4955	N03 TO N05	*Call
2098<2096		5083<4956	N04 TO N05	*Call
2098<2096		5083<4958	O02 TO N05	*Call
2098<2096		5083<4959	O03 TO N05	*Call
2098<2096		5083<4960	O04 TO N05	*Call
2098<2096		5083<4962	P02 TO N05	*Call
2098<2096		5083<4963	P03 TO N05	*Call
2098<2096		5083<4964	P04 TO N05	*Call
2098<2096		5083<4966	Q02 TO N05	*Call
2098<2096		5083<4967	Q03 TO N05	*Call
2098<2096		5083<4968	Q04 TO N05	*Call
2098<2096		5083<4969	R01 TO N05	*Call
2098<2096		5083<4970	R02 TO N05	*Call
2098<2096		5083<4971	R03 TO N05	*Call
2098<2096		5083<4972	R04 TO N05	*Call
2098<2096		5083<4973	S01 TO N05	*Call
2098<2096		5083<4974	S02 TO N05	*Call
2098<2096		5083<4975	S03 TO N05	*Call
2098<2096		5083<4976	S04 TO N05	*Call
2098<2096		5083<4977	T01 TO N05	*Call
2098<2096		5083<4978	T02 TO N05	*Call
2098<2096		5083<4979	T03 TO N05	*Call
2098<2096		5083<4980	T04 TO N05	*Call
2098<2096		5083<4981	U01 TO N05	*Call
2098<2096		5083<4982	U02 TO N05	*Call
2098<2096		5083<4983	U03 TO N05	*Call
2098<2096		5083<4984	U04 TO N05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5083<4985	V01 TO N05	*Call
2098<2096		5083<4986	V02 TO N05	*Call
2098<2096		5083<4987	V03 TO N05	*Call
2098<2096		5083<4988	V04 TO N05	*Call
2098<2096		5083<4989	W01 TO N05	*Call
2098<2096		5083<4990	W02 TO N05	*Call
2098<2096		5083<4991	W03 TO N05	*Call
2098<2096		5083<4992	W04 TO N05	*Call
2098<2096		5083<4993	X01 TO N05	*Call
2098<2096		5083<4994	X02 TO N05	*Call
2098<2096		5083<4995	X03 TO N05	*Call
2098<2096		5083<4996	X04 TO N05	*Call
2098<2096		5083<4997	Y01 TO N05	*Call
2098<2096		5083<4998	Y02 TO N05	*Call
2098<2096		5083<4999	Y03 TO N05	*Call
2098<2096		5083<5000	Y04 TO N05	*Call
2098<2096		5083<5001	Z01 TO N05	*Call
2098<2096		5083<5002	Z02 TO N05	*Call
2098<2096		5083<5003	Z03 TO N05	*Call
2098<2096		5083<5004	Z04 TO N05	*Call
2098<2096		5084<4900	Z00 TO O01	*Call
2098<2096		5084<4901	A01 TO O01	*Call
2098<2096		5084<4902	A02 TO O01	*Call
2098<2096		5084<4903	A03 TO O01	*Call
2098<2096		5084<4905	B01 TO O01	*Call
2098<2096		5084<4906	B02 TO O01	*Call
2098<2096		5084<4907	B03 TO O01	*Call
2098<2096		5084<4909	C01 TO O01	*Call
2098<2096		5084<4910	C02 TO O01	*Call
2098<2096		5084<4911	C03 TO O01	*Call
2098<2096		5084<4913	D01 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5084<4914	D02 TO O01	*Call
2098<2096		5084<4915	D03 TO O01	*Call
2098<2096		5084<4917	E01 TO O01	*Call
2098<2096		5084<4918	E02 TO O01	*Call
2098<2096		5084<4921	F01 TO O01	*Call
2098<2096		5084<4922	F02 TO O01	*Call
2098<2096		5084<4925	G01 TO O01	*Call
2098<2096		5084<4929	H01 TO O01	*Call
2098<2096		5084<4933	I01 TO O01	*Call
2098<2096		5084<4937	J01 TO O01	*Call
2098<2096		5084<4944	K04 TO O01	*Call
2098<2096		5084<4947	L03 TO O01	*Call
2098<2096		5084<4948	L04 TO O01	*Call
2098<2096		5084<4951	M03 TO O01	*Call
2098<2096		5084<4952	M04 TO O01	*Call
2098<2096		5084<4954	N02 TO O01	*Call
2098<2096		5084<4955	N03 TO O01	*Call
2098<2096		5084<4956	N04 TO O01	*Call
2098<2096		5084<4958	O02 TO O01	*Call
2098<2096		5084<4959	O03 TO O01	*Call
2098<2096		5084<4960	O04 TO O01	*Call
2098<2096		5084<4962	P02 TO O01	*Call
2098<2096		5084<4963	P03 TO O01	*Call
2098<2096		5084<4964	P04 TO O01	*Call
2098<2096		5084<4966	Q02 TO O01	*Call
2098<2096		5084<4967	Q03 TO O01	*Call
2098<2096		5084<4968	Q04 TO O01	*Call
2098<2096		5084<4969	R01 TO O01	*Call
2098<2096		5084<4970	R02 TO O01	*Call
2098<2096		5084<4971	R03 TO O01	*Call
2098<2096		5084<4972	R04 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5084<4973	S01 TO O01	*Call
2098<2096		5084<4974	S02 TO O01	*Call
2098<2096		5084<4975	S03 TO O01	*Call
2098<2096		5084<4976	S04 TO O01	*Call
2098<2096		5084<4977	T01 TO O01	*Call
2098<2096		5084<4978	T02 TO O01	*Call
2098<2096		5084<4979	T03 TO O01	*Call
2098<2096		5084<4980	T04 TO O01	*Call
2098<2096		5084<4981	U01 TO O01	*Call
2098<2096		5084<4982	U02 TO O01	*Call
2098<2096		5084<4983	U03 TO O01	*Call
2098<2096		5084<4984	U04 TO O01	*Call
2098<2096		5084<4985	V01 TO O01	*Call
2098<2096		5084<4986	V02 TO O01	*Call
2098<2096		5084<4987	V03 TO O01	*Call
2098<2096		5084<4988	V04 TO O01	*Call
2098<2096		5084<4989	W01 TO O01	*Call
2098<2096		5084<4990	W02 TO O01	*Call
2098<2096		5084<4991	W03 TO O01	*Call
2098<2096		5084<4992	W04 TO O01	*Call
2098<2096		5084<4993	X01 TO O01	*Call
2098<2096		5084<4994	X02 TO O01	*Call
2098<2096		5084<4995	X03 TO O01	*Call
2098<2096		5084<4996	X04 TO O01	*Call
2098<2096		5084<4997	Y01 TO O01	*Call
2098<2096		5084<4998	Y02 TO O01	*Call
2098<2096		5084<4999	Y03 TO O01	*Call
2098<2096		5084<5000	Y04 TO O01	*Call
2098<2096		5084<5001	Z01 TO O01	*Call
2098<2096		5084<5002	Z02 TO O01	*Call
2098<2096		5084<5003	Z03 TO O01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5084<5004	Z04 TO O01	*Call
2098<2096		5085<4900	Z00 TO O02	*Call
2098<2096		5085<4901	A01 TO O02	*Call
2098<2096		5085<4902	A02 TO O02	*Call
2098<2096		5085<4903	A03 TO O02	*Call
2098<2096		5085<4905	B01 TO O02	*Call
2098<2096		5085<4906	B02 TO O02	*Call
2098<2096		5085<4907	B03 TO O02	*Call
2098<2096		5085<4909	C01 TO O02	*Call
2098<2096		5085<4910	C02 TO O02	*Call
2098<2096		5085<4911	C03 TO O02	*Call
2098<2096		5085<4913	D01 TO O02	*Call
2098<2096		5085<4914	D02 TO O02	*Call
2098<2096		5085<4915	D03 TO O02	*Call
2098<2096		5085<4917	E01 TO O02	*Call
2098<2096		5085<4918	E02 TO O02	*Call
2098<2096		5085<4921	F01 TO O02	*Call
2098<2096		5085<4922	F02 TO O02	*Call
2098<2096		5085<4925	G01 TO O02	*Call
2098<2096		5085<4929	H01 TO O02	*Call
2098<2096		5085<4933	I01 TO O02	*Call
2098<2096		5085<4937	J01 TO O02	*Call
2098<2096		5085<4944	K04 TO O02	*Call
2098<2096		5085<4947	L03 TO O02	*Call
2098<2096		5085<4948	L04 TO O02	*Call
2098<2096		5085<4951	M03 TO O02	*Call
2098<2096		5085<4952	M04 TO O02	*Call
2098<2096		5085<4954	N02 TO O02	*Call
2098<2096		5085<4955	N03 TO O02	*Call
2098<2096		5085<4956	N04 TO O02	*Call
2098<2096		5085<4958	O02 TO O02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5085<4959	O03 TO O02	*Call
2098<2096		5085<4960	O04 TO O02	*Call
2098<2096		5085<4962	P02 TO O02	*Call
2098<2096		5085<4963	P03 TO O02	*Call
2098<2096		5085<4964	P04 TO O02	*Call
2098<2096		5085<4966	Q02 TO O02	*Call
2098<2096		5085<4967	Q03 TO O02	*Call
2098<2096		5085<4968	Q04 TO O02	*Call
2098<2096		5085<4969	R01 TO O02	*Call
2098<2096		5085<4970	R02 TO O02	*Call
2098<2096		5085<4971	R03 TO O02	*Call
2098<2096		5085<4972	R04 TO O02	*Call
2098<2096		5085<4973	S01 TO O02	*Call
2098<2096		5085<4974	S02 TO O02	*Call
2098<2096		5085<4975	S03 TO O02	*Call
2098<2096		5085<4976	S04 TO O02	*Call
2098<2096		5085<4977	T01 TO O02	*Call
2098<2096		5085<4978	T02 TO O02	*Call
2098<2096		5085<4979	T03 TO O02	*Call
2098<2096		5085<4980	T04 TO O02	*Call
2098<2096		5085<4981	U01 TO O02	*Call
2098<2096		5085<4982	U02 TO O02	*Call
2098<2096		5085<4983	U03 TO O02	*Call
2098<2096		5085<4984	U04 TO O02	*Call
2098<2096		5085<4985	V01 TO O02	*Call
2098<2096		5085<4986	V02 TO O02	*Call
2098<2096		5085<4987	V03 TO O02	*Call
2098<2096		5085<4988	V04 TO O02	*Call
2098<2096		5085<4989	W01 TO O02	*Call
2098<2096		5085<4990	W02 TO O02	*Call
2098<2096		5085<4991	W03 TO O02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5085<4992	W04 TO O02	*Call
2098<2096		5085<4993	X01 TO O02	*Call
2098<2096		5085<4994	X02 TO O02	*Call
2098<2096		5085<4995	X03 TO O02	*Call
2098<2096		5085<4996	X04 TO O02	*Call
2098<2096		5085<4997	Y01 TO O02	*Call
2098<2096		5085<4998	Y02 TO O02	*Call
2098<2096		5085<4999	Y03 TO O02	*Call
2098<2096		5085<5000	Y04 TO O02	*Call
2098<2096		5085<5001	Z01 TO O02	*Call
2098<2096		5085<5002	Z02 TO O02	*Call
2098<2096		5085<5003	Z03 TO O02	*Call
2098<2096		5085<5004	Z04 TO O02	*Call
2098<2096		5086<4900	Z00 TO O03	*Call
2098<2096		5086<4901	A01 TO O03	*Call
2098<2096		5086<4902	A02 TO O03	*Call
2098<2096		5086<4903	A03 TO O03	*Call
2098<2096		5086<4905	B01 TO O03	*Call
2098<2096		5086<4906	B02 TO O03	*Call
2098<2096		5086<4907	B03 TO O03	*Call
2098<2096		5086<4909	C01 TO O03	*Call
2098<2096		5086<4910	C02 TO O03	*Call
2098<2096		5086<4911	C03 TO O03	*Call
2098<2096		5086<4913	D01 TO O03	*Call
2098<2096		5086<4914	D02 TO O03	*Call
2098<2096		5086<4915	D03 TO O03	*Call
2098<2096		5086<4917	E01 TO O03	*Call
2098<2096		5086<4918	E02 TO O03	*Call
2098<2096		5086<4921	F01 TO O03	*Call
2098<2096		5086<4922	F02 TO O03	*Call
2098<2096		5086<4925	G01 TO O03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5086<4929	H01 TO O03	*Call
2098<2096		5086<4933	I01 TO O03	*Call
2098<2096		5086<4937	J01 TO O03	*Call
2098<2096		5086<4944	K04 TO O03	*Call
2098<2096		5086<4947	L03 TO O03	*Call
2098<2096		5086<4948	L04 TO O03	*Call
2098<2096		5086<4951	M03 TO O03	*Call
2098<2096		5086<4952	M04 TO O03	*Call
2098<2096		5086<4954	N02 TO O03	*Call
2098<2096		5086<4955	N03 TO O03	*Call
2098<2096		5086<4956	N04 TO O03	*Call
2098<2096		5086<4958	O02 TO O03	*Call
2098<2096		5086<4959	O03 TO O03	*Call
2098<2096		5086<4960	O04 TO O03	*Call
2098<2096		5086<4962	P02 TO O03	*Call
2098<2096		5086<4963	P03 TO O03	*Call
2098<2096		5086<4964	P04 TO O03	*Call
2098<2096		5086<4966	Q02 TO O03	*Call
2098<2096		5086<4967	Q03 TO O03	*Call
2098<2096		5086<4968	Q04 TO O03	*Call
2098<2096		5086<4969	R01 TO O03	*Call
2098<2096		5086<4970	R02 TO O03	*Call
2098<2096		5086<4971	R03 TO O03	*Call
2098<2096		5086<4972	R04 TO O03	*Call
2098<2096		5086<4973	S01 TO O03	*Call
2098<2096		5086<4974	S02 TO O03	*Call
2098<2096		5086<4975	S03 TO O03	*Call
2098<2096		5086<4976	S04 TO O03	*Call
2098<2096		5086<4977	T01 TO O03	*Call
2098<2096		5086<4978	T02 TO O03	*Call
2098<2096		5086<4979	T03 TO O03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5086<4980	T04 TO O03	*Call
2098<2096		5086<4981	U01 TO O03	*Call
2098<2096		5086<4982	U02 TO O03	*Call
2098<2096		5086<4983	U03 TO O03	*Call
2098<2096		5086<4984	U04 TO O03	*Call
2098<2096		5086<4985	V01 TO O03	*Call
2098<2096		5086<4986	V02 TO O03	*Call
2098<2096		5086<4987	V03 TO O03	*Call
2098<2096		5086<4988	V04 TO O03	*Call
2098<2096		5086<4989	W01 TO O03	*Call
2098<2096		5086<4990	W02 TO O03	*Call
2098<2096		5086<4991	W03 TO O03	*Call
2098<2096		5086<4992	W04 TO O03	*Call
2098<2096		5086<4993	X01 TO O03	*Call
2098<2096		5086<4994	X02 TO O03	*Call
2098<2096		5086<4995	X03 TO O03	*Call
2098<2096		5086<4996	X04 TO O03	*Call
2098<2096		5086<4997	Y01 TO O03	*Call
2098<2096		5086<4998	Y02 TO O03	*Call
2098<2096		5086<4999	Y03 TO O03	*Call
2098<2096		5086<5000	Y04 TO O03	*Call
2098<2096		5086<5001	Z01 TO O03	*Call
2098<2096		5086<5002	Z02 TO O03	*Call
2098<2096		5086<5003	Z03 TO O03	*Call
2098<2096		5086<5004	Z04 TO O03	*Call
2098<2096		5087<4900	Z00 TO O04	*Call
2098<2096		5087<4901	A01 TO O04	*Call
2098<2096		5087<4902	A02 TO O04	*Call
2098<2096		5087<4903	A03 TO O04	*Call
2098<2096		5087<4905	B01 TO O04	*Call
2098<2096		5087<4906	B02 TO O04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5087<4907	B03 TO O04	*Call
2098<2096		5087<4909	C01 TO O04	*Call
2098<2096		5087<4910	C02 TO O04	*Call
2098<2096		5087<4911	C03 TO O04	*Call
2098<2096		5087<4913	D01 TO O04	*Call
2098<2096		5087<4914	D02 TO O04	*Call
2098<2096		5087<4915	D03 TO O04	*Call
2098<2096		5087<4917	E01 TO O04	*Call
2098<2096		5087<4918	E02 TO O04	*Call
2098<2096		5087<4921	F01 TO O04	*Call
2098<2096		5087<4922	F02 TO O04	*Call
2098<2096		5087<4925	G01 TO O04	*Call
2098<2096		5087<4929	H01 TO O04	*Call
2098<2096		5087<4933	I01 TO O04	*Call
2098<2096		5087<4937	J01 TO O04	*Call
2098<2096		5087<4944	K04 TO O04	*Call
2098<2096		5087<4947	L03 TO O04	*Call
2098<2096		5087<4948	L04 TO O04	*Call
2098<2096		5087<4951	M03 TO O04	*Call
2098<2096		5087<4952	M04 TO O04	*Call
2098<2096		5087<4954	N02 TO O04	*Call
2098<2096		5087<4955	N03 TO O04	*Call
2098<2096		5087<4956	N04 TO O04	*Call
2098<2096		5087<4958	O02 TO O04	*Call
2098<2096		5087<4959	O03 TO O04	*Call
2098<2096		5087<4960	O04 TO O04	*Call
2098<2096		5087<4962	P02 TO O04	*Call
2098<2096		5087<4963	P03 TO O04	*Call
2098<2096		5087<4964	P04 TO O04	*Call
2098<2096		5087<4966	Q02 TO O04	*Call
2098<2096		5087<4967	Q03 TO O04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5087<4968	Q04 TO O04	*Call
2098<2096		5087<4969	R01 TO O04	*Call
2098<2096		5087<4970	R02 TO O04	*Call
2098<2096		5087<4971	R03 TO O04	*Call
2098<2096		5087<4972	R04 TO O04	*Call
2098<2096		5087<4973	S01 TO O04	*Call
2098<2096		5087<4974	S02 TO O04	*Call
2098<2096		5087<4975	S03 TO O04	*Call
2098<2096		5087<4976	S04 TO O04	*Call
2098<2096		5087<4977	T01 TO O04	*Call
2098<2096		5087<4978	T02 TO O04	*Call
2098<2096		5087<4979	T03 TO O04	*Call
2098<2096		5087<4980	T04 TO O04	*Call
2098<2096		5087<4981	U01 TO O04	*Call
2098<2096		5087<4982	U02 TO O04	*Call
2098<2096		5087<4983	U03 TO O04	*Call
2098<2096		5087<4984	U04 TO O04	*Call
2098<2096		5087<4985	V01 TO O04	*Call
2098<2096		5087<4986	V02 TO O04	*Call
2098<2096		5087<4987	V03 TO O04	*Call
2098<2096		5087<4988	V04 TO O04	*Call
2098<2096		5087<4989	W01 TO O04	*Call
2098<2096		5087<4990	W02 TO O04	*Call
2098<2096		5087<4991	W03 TO O04	*Call
2098<2096		5087<4992	W04 TO O04	*Call
2098<2096		5087<4993	X01 TO O04	*Call
2098<2096		5087<4994	X02 TO O04	*Call
2098<2096		5087<4995	X03 TO O04	*Call
2098<2096		5087<4996	X04 TO O04	*Call
2098<2096		5087<4997	Y01 TO O04	*Call
2098<2096		5087<4998	Y02 TO O04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5087<4999	Y03 TO O04	*Call
2098<2096		5087<5000	Y04 TO O04	*Call
2098<2096		5087<5001	Z01 TO O04	*Call
2098<2096		5087<5002	Z02 TO O04	*Call
2098<2096		5087<5003	Z03 TO O04	*Call
2098<2096		5087<5004	Z04 TO O04	*Call
2098<2096		5088<4900	Z00 TO O05	*Call
2098<2096		5088<4901	A01 TO O05	*Call
2098<2096		5088<4902	A02 TO O05	*Call
2098<2096		5088<4903	A03 TO O05	*Call
2098<2096		5088<4905	B01 TO O05	*Call
2098<2096		5088<4906	B02 TO O05	*Call
2098<2096		5088<4907	B03 TO O05	*Call
2098<2096		5088<4909	C01 TO O05	*Call
2098<2096		5088<4910	C02 TO O05	*Call
2098<2096		5088<4911	C03 TO O05	*Call
2098<2096		5088<4913	D01 TO O05	*Call
2098<2096		5088<4914	D02 TO O05	*Call
2098<2096		5088<4915	D03 TO O05	*Call
2098<2096		5088<4917	E01 TO O05	*Call
2098<2096		5088<4918	E02 TO O05	*Call
2098<2096		5088<4921	F01 TO O05	*Call
2098<2096		5088<4922	F02 TO O05	*Call
2098<2096		5088<4925	G01 TO O05	*Call
2098<2096		5088<4929	H01 TO O05	*Call
2098<2096		5088<4933	I01 TO O05	*Call
2098<2096		5088<4937	J01 TO O05	*Call
2098<2096		5088<4944	K04 TO O05	*Call
2098<2096		5088<4947	L03 TO O05	*Call
2098<2096		5088<4948	L04 TO O05	*Call
2098<2096		5088<4951	M03 TO O05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5088<4952	M04 TO O05	*Call
2098<2096		5088<4954	N02 TO O05	*Call
2098<2096		5088<4955	N03 TO O05	*Call
2098<2096		5088<4956	N04 TO O05	*Call
2098<2096		5088<4958	O02 TO O05	*Call
2098<2096		5088<4959	O03 TO O05	*Call
2098<2096		5088<4960	O04 TO O05	*Call
2098<2096		5088<4962	P02 TO O05	*Call
2098<2096		5088<4963	P03 TO O05	*Call
2098<2096		5088<4964	P04 TO O05	*Call
2098<2096		5088<4966	Q02 TO O05	*Call
2098<2096		5088<4967	Q03 TO O05	*Call
2098<2096		5088<4968	Q04 TO O05	*Call
2098<2096		5088<4969	R01 TO O05	*Call
2098<2096		5088<4970	R02 TO O05	*Call
2098<2096		5088<4971	R03 TO O05	*Call
2098<2096		5088<4972	R04 TO O05	*Call
2098<2096		5088<4973	S01 TO O05	*Call
2098<2096		5088<4974	S02 TO O05	*Call
2098<2096		5088<4975	S03 TO O05	*Call
2098<2096		5088<4976	S04 TO O05	*Call
2098<2096		5088<4977	T01 TO O05	*Call
2098<2096		5088<4978	T02 TO O05	*Call
2098<2096		5088<4979	T03 TO O05	*Call
2098<2096		5088<4980	T04 TO O05	*Call
2098<2096		5088<4981	U01 TO O05	*Call
2098<2096		5088<4982	U02 TO O05	*Call
2098<2096		5088<4983	U03 TO O05	*Call
2098<2096		5088<4984	U04 TO O05	*Call
2098<2096		5088<4985	V01 TO O05	*Call
2098<2096		5088<4986	V02 TO O05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5088<4987	V03 TO O05	*Call
2098<2096		5088<4988	V04 TO O05	*Call
2098<2096		5088<4989	W01 TO O05	*Call
2098<2096		5088<4990	W02 TO O05	*Call
2098<2096		5088<4991	W03 TO O05	*Call
2098<2096		5088<4992	W04 TO O05	*Call
2098<2096		5088<4993	X01 TO O05	*Call
2098<2096		5088<4994	X02 TO O05	*Call
2098<2096		5088<4995	X03 TO O05	*Call
2098<2096		5088<4996	X04 TO O05	*Call
2098<2096		5088<4997	Y01 TO O05	*Call
2098<2096		5088<4998	Y02 TO O05	*Call
2098<2096		5088<4999	Y03 TO O05	*Call
2098<2096		5088<5000	Y04 TO O05	*Call
2098<2096		5088<5001	Z01 TO O05	*Call
2098<2096		5088<5002	Z02 TO O05	*Call
2098<2096		5088<5003	Z03 TO O05	*Call
2098<2096		5088<5004	Z04 TO O05	*Call
2098<2096		5089<4900	Z00 TO P01	*Call
2098<2096		5089<4901	A01 TO P01	*Call
2098<2096		5089<4902	A02 TO P01	*Call
2098<2096		5089<4903	A03 TO P01	*Call
2098<2096		5089<4905	B01 TO P01	*Call
2098<2096		5089<4906	B02 TO P01	*Call
2098<2096		5089<4907	B03 TO P01	*Call
2098<2096		5089<4909	C01 TO P01	*Call
2098<2096		5089<4910	C02 TO P01	*Call
2098<2096		5089<4911	C03 TO P01	*Call
2098<2096		5089<4913	D01 TO P01	*Call
2098<2096		5089<4914	D02 TO P01	*Call
2098<2096		5089<4915	D03 TO P01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5089<4917	E01 TO P01	*Call
2098<2096		5089<4918	E02 TO P01	*Call
2098<2096		5089<4921	F01 TO P01	*Call
2098<2096		5089<4922	F02 TO P01	*Call
2098<2096		5089<4925	G01 TO P01	*Call
2098<2096		5089<4929	H01 TO P01	*Call
2098<2096		5089<4933	I01 TO P01	*Call
2098<2096		5089<4937	J01 TO P01	*Call
2098<2096		5089<4944	K04 TO P01	*Call
2098<2096		5089<4947	L03 TO P01	*Call
2098<2096		5089<4948	L04 TO P01	*Call
2098<2096		5089<4951	M03 TO P01	*Call
2098<2096		5089<4952	M04 TO P01	*Call
2098<2096		5089<4954	N02 TO P01	*Call
2098<2096		5089<4955	N03 TO P01	*Call
2098<2096		5089<4956	N04 TO P01	*Call
2098<2096		5089<4958	O02 TO P01	*Call
2098<2096		5089<4959	O03 TO P01	*Call
2098<2096		5089<4960	O04 TO P01	*Call
2098<2096		5089<4962	P02 TO P01	*Call
2098<2096		5089<4963	P03 TO P01	*Call
2098<2096		5089<4964	P04 TO P01	*Call
2098<2096		5089<4966	Q02 TO P01	*Call
2098<2096		5089<4967	Q03 TO P01	*Call
2098<2096		5089<4968	Q04 TO P01	*Call
2098<2096		5089<4969	R01 TO P01	*Call
2098<2096		5089<4970	R02 TO P01	*Call
2098<2096		5089<4971	R03 TO P01	*Call
2098<2096		5089<4972	R04 TO P01	*Call
2098<2096		5089<4973	S01 TO P01	*Call
2098<2096		5089<4974	S02 TO P01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5089<4975	S03 TO P01	*Call
2098<2096		5089<4976	S04 TO P01	*Call
2098<2096		5089<4977	T01 TO P01	*Call
2098<2096		5089<4978	T02 TO P01	*Call
2098<2096		5089<4979	T03 TO P01	*Call
2098<2096		5089<4980	T04 TO P01	*Call
2098<2096		5089<4981	U01 TO P01	*Call
2098<2096		5089<4982	U02 TO P01	*Call
2098<2096		5089<4983	U03 TO P01	*Call
2098<2096		5089<4984	U04 TO P01	*Call
2098<2096		5089<4985	V01 TO P01	*Call
2098<2096		5089<4986	V02 TO P01	*Call
2098<2096		5089<4987	V03 TO P01	*Call
2098<2096		5089<4988	V04 TO P01	*Call
2098<2096		5089<4989	W01 TO P01	*Call
2098<2096		5089<4990	W02 TO P01	*Call
2098<2096		5089<4991	W03 TO P01	*Call
2098<2096		5089<4992	W04 TO P01	*Call
2098<2096		5089<4993	X01 TO P01	*Call
2098<2096		5089<4994	X02 TO P01	*Call
2098<2096		5089<4995	X03 TO P01	*Call
2098<2096		5089<4996	X04 TO P01	*Call
2098<2096		5089<4997	Y01 TO P01	*Call
2098<2096		5089<4998	Y02 TO P01	*Call
2098<2096		5089<4999	Y03 TO P01	*Call
2098<2096		5089<5000	Y04 TO P01	*Call
2098<2096		5089<5001	Z01 TO P01	*Call
2098<2096		5089<5002	Z02 TO P01	*Call
2098<2096		5089<5003	Z03 TO P01	*Call
2098<2096		5089<5004	Z04 TO P01	*Call
2098<2096		5090<4900	Z00 TO P02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5090<4901	A01 TO P02	*Call
2098<2096		5090<4902	A02 TO P02	*Call
2098<2096		5090<4903	A03 TO P02	*Call
2098<2096		5090<4905	B01 TO P02	*Call
2098<2096		5090<4906	B02 TO P02	*Call
2098<2096		5090<4907	B03 TO P02	*Call
2098<2096		5090<4909	C01 TO P02	*Call
2098<2096		5090<4910	C02 TO P02	*Call
2098<2096		5090<4911	C03 TO P02	*Call
2098<2096		5090<4913	D01 TO P02	*Call
2098<2096		5090<4914	D02 TO P02	*Call
2098<2096		5090<4915	D03 TO P02	*Call
2098<2096		5090<4917	E01 TO P02	*Call
2098<2096		5090<4918	E02 TO P02	*Call
2098<2096		5090<4921	F01 TO P02	*Call
2098<2096		5090<4922	F02 TO P02	*Call
2098<2096		5090<4925	G01 TO P02	*Call
2098<2096		5090<4929	H01 TO P02	*Call
2098<2096		5090<4933	I01 TO P02	*Call
2098<2096		5090<4937	J01 TO P02	*Call
2098<2096		5090<4944	K04 TO P02	*Call
2098<2096		5090<4947	L03 TO P02	*Call
2098<2096		5090<4948	L04 TO P02	*Call
2098<2096		5090<4951	M03 TO P02	*Call
2098<2096		5090<4952	M04 TO P02	*Call
2098<2096		5090<4954	N02 TO P02	*Call
2098<2096		5090<4955	N03 TO P02	*Call
2098<2096		5090<4956	N04 TO P02	*Call
2098<2096		5090<4958	O02 TO P02	*Call
2098<2096		5090<4959	O03 TO P02	*Call
2098<2096		5090<4960	O04 TO P02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5090<4962	P02 TO P02	*Call
2098<2096		5090<4963	P03 TO P02	*Call
2098<2096		5090<4964	P04 TO P02	*Call
2098<2096		5090<4966	Q02 TO P02	*Call
2098<2096		5090<4967	Q03 TO P02	*Call
2098<2096		5090<4968	Q04 TO P02	*Call
2098<2096		5090<4969	R01 TO P02	*Call
2098<2096		5090<4970	R02 TO P02	*Call
2098<2096		5090<4971	R03 TO P02	*Call
2098<2096		5090<4972	R04 TO P02	*Call
2098<2096		5090<4973	S01 TO P02	*Call
2098<2096		5090<4974	S02 TO P02	*Call
2098<2096		5090<4975	S03 TO P02	*Call
2098<2096		5090<4976	S04 TO P02	*Call
2098<2096		5090<4977	T01 TO P02	*Call
2098<2096		5090<4978	T02 TO P02	*Call
2098<2096		5090<4979	T03 TO P02	*Call
2098<2096		5090<4980	T04 TO P02	*Call
2098<2096		5090<4981	U01 TO P02	*Call
2098<2096		5090<4982	U02 TO P02	*Call
2098<2096		5090<4983	U03 TO P02	*Call
2098<2096		5090<4984	U04 TO P02	*Call
2098<2096		5090<4985	V01 TO P02	*Call
2098<2096		5090<4986	V02 TO P02	*Call
2098<2096		5090<4987	V03 TO P02	*Call
2098<2096		5090<4988	V04 TO P02	*Call
2098<2096		5090<4989	W01 TO P02	*Call
2098<2096		5090<4990	W02 TO P02	*Call
2098<2096		5090<4991	W03 TO P02	*Call
2098<2096		5090<4992	W04 TO P02	*Call
2098<2096		5090<4993	X01 TO P02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5090<4994	X02 TO P02	*Call
2098<2096		5090<4995	X03 TO P02	*Call
2098<2096		5090<4996	X04 TO P02	*Call
2098<2096		5090<4997	Y01 TO P02	*Call
2098<2096		5090<4998	Y02 TO P02	*Call
2098<2096		5090<4999	Y03 TO P02	*Call
2098<2096		5090<5000	Y04 TO P02	*Call
2098<2096		5090<5001	Z01 TO P02	*Call
2098<2096		5090<5002	Z02 TO P02	*Call
2098<2096		5090<5003	Z03 TO P02	*Call
2098<2096		5090<5004	Z04 TO P02	*Call
2098<2096		5091<4900	Z00 TO P03	*Call
2098<2096		5091<4901	A01 TO P03	*Call
2098<2096		5091<4902	A02 TO P03	*Call
2098<2096		5091<4903	A03 TO P03	*Call
2098<2096		5091<4905	B01 TO P03	*Call
2098<2096		5091<4906	B02 TO P03	*Call
2098<2096		5091<4907	B03 TO P03	*Call
2098<2096		5091<4909	C01 TO P03	*Call
2098<2096		5091<4910	C02 TO P03	*Call
2098<2096		5091<4911	C03 TO P03	*Call
2098<2096		5091<4913	D01 TO P03	*Call
2098<2096		5091<4914	D02 TO P03	*Call
2098<2096		5091<4915	D03 TO P03	*Call
2098<2096		5091<4917	E01 TO P03	*Call
2098<2096		5091<4918	E02 TO P03	*Call
2098<2096		5091<4921	F01 TO P03	*Call
2098<2096		5091<4922	F02 TO P03	*Call
2098<2096		5091<4925	G01 TO P03	*Call
2098<2096		5091<4929	H01 TO P03	*Call
2098<2096		5091<4933	I01 TO P03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5091<4937	J01 TO P03	*Call
2098<2096		5091<4944	K04 TO P03	*Call
2098<2096		5091<4947	L03 TO P03	*Call
2098<2096		5091<4948	L04 TO P03	*Call
2098<2096		5091<4951	M03 TO P03	*Call
2098<2096		5091<4952	M04 TO P03	*Call
2098<2096		5091<4954	N02 TO P03	*Call
2098<2096		5091<4955	N03 TO P03	*Call
2098<2096		5091<4956	N04 TO P03	*Call
2098<2096		5091<4958	O02 TO P03	*Call
2098<2096		5091<4959	O03 TO P03	*Call
2098<2096		5091<4960	O04 TO P03	*Call
2098<2096		5091<4962	P02 TO P03	*Call
2098<2096		5091<4963	P03 TO P03	*Call
2098<2096		5091<4964	P04 TO P03	*Call
2098<2096		5091<4966	Q02 TO P03	*Call
2098<2096		5091<4967	Q03 TO P03	*Call
2098<2096		5091<4968	Q04 TO P03	*Call
2098<2096		5091<4969	R01 TO P03	*Call
2098<2096		5091<4970	R02 TO P03	*Call
2098<2096		5091<4971	R03 TO P03	*Call
2098<2096		5091<4972	R04 TO P03	*Call
2098<2096		5091<4973	S01 TO P03	*Call
2098<2096		5091<4974	S02 TO P03	*Call
2098<2096		5091<4975	S03 TO P03	*Call
2098<2096		5091<4976	S04 TO P03	*Call
2098<2096		5091<4977	T01 TO P03	*Call
2098<2096		5091<4978	T02 TO P03	*Call
2098<2096		5091<4979	T03 TO P03	*Call
2098<2096		5091<4980	T04 TO P03	*Call
2098<2096		5091<4981	U01 TO P03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5091<4982	U02 TO P03	*Call
2098<2096		5091<4983	U03 TO P03	*Call
2098<2096		5091<4984	U04 TO P03	*Call
2098<2096		5091<4985	V01 TO P03	*Call
2098<2096		5091<4986	V02 TO P03	*Call
2098<2096		5091<4987	V03 TO P03	*Call
2098<2096		5091<4988	V04 TO P03	*Call
2098<2096		5091<4989	W01 TO P03	*Call
2098<2096		5091<4990	W02 TO P03	*Call
2098<2096		5091<4991	W03 TO P03	*Call
2098<2096		5091<4992	W04 TO P03	*Call
2098<2096		5091<4993	X01 TO P03	*Call
2098<2096		5091<4994	X02 TO P03	*Call
2098<2096		5091<4995	X03 TO P03	*Call
2098<2096		5091<4996	X04 TO P03	*Call
2098<2096		5091<4997	Y01 TO P03	*Call
2098<2096		5091<4998	Y02 TO P03	*Call
2098<2096		5091<4999	Y03 TO P03	*Call
2098<2096		5091<5000	Y04 TO P03	*Call
2098<2096		5091<5001	Z01 TO P03	*Call
2098<2096		5091<5002	Z02 TO P03	*Call
2098<2096		5091<5003	Z03 TO P03	*Call
2098<2096		5091<5004	Z04 TO P03	*Call
2098<2096		5092<4900	Z00 TO P04	*Call
2098<2096		5092<4901	A01 TO P04	*Call
2098<2096		5092<4902	A02 TO P04	*Call
2098<2096		5092<4903	A03 TO P04	*Call
2098<2096		5092<4905	B01 TO P04	*Call
2098<2096		5092<4906	B02 TO P04	*Call
2098<2096		5092<4907	B03 TO P04	*Call
2098<2096		5092<4909	C01 TO P04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5092<4910	C02 TO P04	*Call
2098<2096		5092<4911	C03 TO P04	*Call
2098<2096		5092<4913	D01 TO P04	*Call
2098<2096		5092<4914	D02 TO P04	*Call
2098<2096		5092<4915	D03 TO P04	*Call
2098<2096		5092<4917	E01 TO P04	*Call
2098<2096		5092<4918	E02 TO P04	*Call
2098<2096		5092<4921	F01 TO P04	*Call
2098<2096		5092<4922	F02 TO P04	*Call
2098<2096		5092<4925	G01 TO P04	*Call
2098<2096		5092<4929	H01 TO P04	*Call
2098<2096		5092<4933	I01 TO P04	*Call
2098<2096		5092<4937	J01 TO P04	*Call
2098<2096		5092<4944	K04 TO P04	*Call
2098<2096		5092<4947	L03 TO P04	*Call
2098<2096		5092<4948	L04 TO P04	*Call
2098<2096		5092<4951	M03 TO P04	*Call
2098<2096		5092<4952	M04 TO P04	*Call
2098<2096		5092<4954	N02 TO P04	*Call
2098<2096		5092<4955	N03 TO P04	*Call
2098<2096		5092<4956	N04 TO P04	*Call
2098<2096		5092<4958	O02 TO P04	*Call
2098<2096		5092<4959	O03 TO P04	*Call
2098<2096		5092<4960	O04 TO P04	*Call
2098<2096		5092<4962	P02 TO P04	*Call
2098<2096		5092<4963	P03 TO P04	*Call
2098<2096		5092<4964	P04 TO P04	*Call
2098<2096		5092<4966	Q02 TO P04	*Call
2098<2096		5092<4967	Q03 TO P04	*Call
2098<2096		5092<4968	Q04 TO P04	*Call
2098<2096		5092<4969	R01 TO P04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5092<4970	R02 TO P04	*Call
2098<2096		5092<4971	R03 TO P04	*Call
2098<2096		5092<4972	R04 TO P04	*Call
2098<2096		5092<4973	S01 TO P04	*Call
2098<2096		5092<4974	S02 TO P04	*Call
2098<2096		5092<4975	S03 TO P04	*Call
2098<2096		5092<4976	S04 TO P04	*Call
2098<2096		5092<4977	T01 TO P04	*Call
2098<2096		5092<4978	T02 TO P04	*Call
2098<2096		5092<4979	T03 TO P04	*Call
2098<2096		5092<4980	T04 TO P04	*Call
2098<2096		5092<4981	U01 TO P04	*Call
2098<2096		5092<4982	U02 TO P04	*Call
2098<2096		5092<4983	U03 TO P04	*Call
2098<2096		5092<4984	U04 TO P04	*Call
2098<2096		5092<4985	V01 TO P04	*Call
2098<2096		5092<4986	V02 TO P04	*Call
2098<2096		5092<4987	V03 TO P04	*Call
2098<2096		5092<4988	V04 TO P04	*Call
2098<2096		5092<4989	W01 TO P04	*Call
2098<2096		5092<4990	W02 TO P04	*Call
2098<2096		5092<4991	W03 TO P04	*Call
2098<2096		5092<4992	W04 TO P04	*Call
2098<2096		5092<4993	X01 TO P04	*Call
2098<2096		5092<4994	X02 TO P04	*Call
2098<2096		5092<4995	X03 TO P04	*Call
2098<2096		5092<4996	X04 TO P04	*Call
2098<2096		5092<4997	Y01 TO P04	*Call
2098<2096		5092<4998	Y02 TO P04	*Call
2098<2096		5092<4999	Y03 TO P04	*Call
2098<2096		5092<5000	Y04 TO P04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5092<5001	Z01 TO P04	*Call
2098<2096		5092<5002	Z02 TO P04	*Call
2098<2096		5092<5003	Z03 TO P04	*Call
2098<2096		5092<5004	Z04 TO P04	*Call
2098<2096		5093<4900	Z00 TO P05	*Call
2098<2096		5093<4901	A01 TO P05	*Call
2098<2096		5093<4902	A02 TO P05	*Call
2098<2096		5093<4903	A03 TO P05	*Call
2098<2096		5093<4905	B01 TO P05	*Call
2098<2096		5093<4906	B02 TO P05	*Call
2098<2096		5093<4907	B03 TO P05	*Call
2098<2096		5093<4909	C01 TO P05	*Call
2098<2096		5093<4910	C02 TO P05	*Call
2098<2096		5093<4911	C03 TO P05	*Call
2098<2096		5093<4913	D01 TO P05	*Call
2098<2096		5093<4914	D02 TO P05	*Call
2098<2096		5093<4915	D03 TO P05	*Call
2098<2096		5093<4917	E01 TO P05	*Call
2098<2096		5093<4918	E02 TO P05	*Call
2098<2096		5093<4921	F01 TO P05	*Call
2098<2096		5093<4922	F02 TO P05	*Call
2098<2096		5093<4925	G01 TO P05	*Call
2098<2096		5093<4929	H01 TO P05	*Call
2098<2096		5093<4933	I01 TO P05	*Call
2098<2096		5093<4937	J01 TO P05	*Call
2098<2096		5093<4944	K04 TO P05	*Call
2098<2096		5093<4947	L03 TO P05	*Call
2098<2096		5093<4948	L04 TO P05	*Call
2098<2096		5093<4951	M03 TO P05	*Call
2098<2096		5093<4952	M04 TO P05	*Call
2098<2096		5093<4954	N02 TO P05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5093<4955	N03 TO P05	*Call
2098<2096		5093<4956	N04 TO P05	*Call
2098<2096		5093<4958	O02 TO P05	*Call
2098<2096		5093<4959	O03 TO P05	*Call
2098<2096		5093<4960	O04 TO P05	*Call
2098<2096		5093<4962	P02 TO P05	*Call
2098<2096		5093<4963	P03 TO P05	*Call
2098<2096		5093<4964	P04 TO P05	*Call
2098<2096		5093<4966	Q02 TO P05	*Call
2098<2096		5093<4967	Q03 TO P05	*Call
2098<2096		5093<4968	Q04 TO P05	*Call
2098<2096		5093<4969	R01 TO P05	*Call
2098<2096		5093<4970	R02 TO P05	*Call
2098<2096		5093<4971	R03 TO P05	*Call
2098<2096		5093<4972	R04 TO P05	*Call
2098<2096		5093<4973	S01 TO P05	*Call
2098<2096		5093<4974	S02 TO P05	*Call
2098<2096		5093<4975	S03 TO P05	*Call
2098<2096		5093<4976	S04 TO P05	*Call
2098<2096		5093<4977	T01 TO P05	*Call
2098<2096		5093<4978	T02 TO P05	*Call
2098<2096		5093<4979	T03 TO P05	*Call
2098<2096		5093<4980	T04 TO P05	*Call
2098<2096		5093<4981	U01 TO P05	*Call
2098<2096		5093<4982	U02 TO P05	*Call
2098<2096		5093<4983	U03 TO P05	*Call
2098<2096		5093<4984	U04 TO P05	*Call
2098<2096		5093<4985	V01 TO P05	*Call
2098<2096		5093<4986	V02 TO P05	*Call
2098<2096		5093<4987	V03 TO P05	*Call
2098<2096		5093<4988	V04 TO P05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5093<4989	W01 TO P05	*Call
2098<2096		5093<4990	W02 TO P05	*Call
2098<2096		5093<4991	W03 TO P05	*Call
2098<2096		5093<4992	W04 TO P05	*Call
2098<2096		5093<4993	X01 TO P05	*Call
2098<2096		5093<4994	X02 TO P05	*Call
2098<2096		5093<4995	X03 TO P05	*Call
2098<2096		5093<4996	X04 TO P05	*Call
2098<2096		5093<4997	Y01 TO P05	*Call
2098<2096		5093<4998	Y02 TO P05	*Call
2098<2096		5093<4999	Y03 TO P05	*Call
2098<2096		5093<5000	Y04 TO P05	*Call
2098<2096		5093<5001	Z01 TO P05	*Call
2098<2096		5093<5002	Z02 TO P05	*Call
2098<2096		5093<5003	Z03 TO P05	*Call
2098<2096		5093<5004	Z04 TO P05	*Call
2098<2096		5094<4900	Z00 TO Q01	*Call
2098<2096		5094<4901	A01 TO Q01	*Call
2098<2096		5094<4902	A02 TO Q01	*Call
2098<2096		5094<4903	A03 TO Q01	*Call
2098<2096		5094<4905	B01 TO Q01	*Call
2098<2096		5094<4906	B02 TO Q01	*Call
2098<2096		5094<4907	B03 TO Q01	*Call
2098<2096		5094<4909	C01 TO Q01	*Call
2098<2096		5094<4910	C02 TO Q01	*Call
2098<2096		5094<4911	C03 TO Q01	*Call
2098<2096		5094<4913	D01 TO Q01	*Call
2098<2096		5094<4914	D02 TO Q01	*Call
2098<2096		5094<4915	D03 TO Q01	*Call
2098<2096		5094<4917	E01 TO Q01	*Call
2098<2096		5094<4918	E02 TO Q01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5094<4921	F01 TO Q01	*Call
2098<2096		5094<4922	F02 TO Q01	*Call
2098<2096		5094<4925	G01 TO Q01	*Call
2098<2096		5094<4929	H01 TO Q01	*Call
2098<2096		5094<4933	I01 TO Q01	*Call
2098<2096		5094<4937	J01 TO Q01	*Call
2098<2096		5094<4944	K04 TO Q01	*Call
2098<2096		5094<4947	L03 TO Q01	*Call
2098<2096		5094<4948	L04 TO Q01	*Call
2098<2096		5094<4951	M03 TO Q01	*Call
2098<2096		5094<4952	M04 TO Q01	*Call
2098<2096		5094<4954	N02 TO Q01	*Call
2098<2096		5094<4955	N03 TO Q01	*Call
2098<2096		5094<4956	N04 TO Q01	*Call
2098<2096		5094<4958	O02 TO Q01	*Call
2098<2096		5094<4959	O03 TO Q01	*Call
2098<2096		5094<4960	O04 TO Q01	*Call
2098<2096		5094<4962	P02 TO Q01	*Call
2098<2096		5094<4963	P03 TO Q01	*Call
2098<2096		5094<4964	P04 TO Q01	*Call
2098<2096		5094<4966	Q02 TO Q01	*Call
2098<2096		5094<4967	Q03 TO Q01	*Call
2098<2096		5094<4968	Q04 TO Q01	*Call
2098<2096		5094<4969	R01 TO Q01	*Call
2098<2096		5094<4970	R02 TO Q01	*Call
2098<2096		5094<4971	R03 TO Q01	*Call
2098<2096		5094<4972	R04 TO Q01	*Call
2098<2096		5094<4973	S01 TO Q01	*Call
2098<2096		5094<4974	S02 TO Q01	*Call
2098<2096		5094<4975	S03 TO Q01	*Call
2098<2096		5094<4976	S04 TO Q01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5094<4977	T01 TO Q01	*Call
2098<2096		5094<4978	T02 TO Q01	*Call
2098<2096		5094<4979	T03 TO Q01	*Call
2098<2096		5094<4980	T04 TO Q01	*Call
2098<2096		5094<4981	U01 TO Q01	*Call
2098<2096		5094<4982	U02 TO Q01	*Call
2098<2096		5094<4983	U03 TO Q01	*Call
2098<2096		5094<4984	U04 TO Q01	*Call
2098<2096		5094<4985	V01 TO Q01	*Call
2098<2096		5094<4986	V02 TO Q01	*Call
2098<2096		5094<4987	V03 TO Q01	*Call
2098<2096		5094<4988	V04 TO Q01	*Call
2098<2096		5094<4989	W01 TO Q01	*Call
2098<2096		5094<4990	W02 TO Q01	*Call
2098<2096		5094<4991	W03 TO Q01	*Call
2098<2096		5094<4992	W04 TO Q01	*Call
2098<2096		5094<4993	X01 TO Q01	*Call
2098<2096		5094<4994	X02 TO Q01	*Call
2098<2096		5094<4995	X03 TO Q01	*Call
2098<2096		5094<4996	X04 TO Q01	*Call
2098<2096		5094<4997	Y01 TO Q01	*Call
2098<2096		5094<4998	Y02 TO Q01	*Call
2098<2096		5094<4999	Y03 TO Q01	*Call
2098<2096		5094<5000	Y04 TO Q01	*Call
2098<2096		5094<5001	Z01 TO Q01	*Call
2098<2096		5094<5002	Z02 TO Q01	*Call
2098<2096		5094<5003	Z03 TO Q01	*Call
2098<2096		5094<5004	Z04 TO Q01	*Call
2098<2096		5095<4900	Z00 TO Q02	*Call
2098<2096		5095<4901	A01 TO Q02	*Call
2098<2096		5095<4902	A02 TO Q02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5095<4903	A03 TO Q02	*Call
2098<2096		5095<4905	B01 TO Q02	*Call
2098<2096		5095<4906	B02 TO Q02	*Call
2098<2096		5095<4907	B03 TO Q02	*Call
2098<2096		5095<4909	C01 TO Q02	*Call
2098<2096		5095<4910	C02 TO Q02	*Call
2098<2096		5095<4911	C03 TO Q02	*Call
2098<2096		5095<4913	D01 TO Q02	*Call
2098<2096		5095<4914	D02 TO Q02	*Call
2098<2096		5095<4915	D03 TO Q02	*Call
2098<2096		5095<4917	E01 TO Q02	*Call
2098<2096		5095<4918	E02 TO Q02	*Call
2098<2096		5095<4921	F01 TO Q02	*Call
2098<2096		5095<4922	F02 TO Q02	*Call
2098<2096		5095<4925	G01 TO Q02	*Call
2098<2096		5095<4929	H01 TO Q02	*Call
2098<2096		5095<4933	I01 TO Q02	*Call
2098<2096		5095<4937	J01 TO Q02	*Call
2098<2096		5095<4944	K04 TO Q02	*Call
2098<2096		5095<4947	L03 TO Q02	*Call
2098<2096		5095<4948	L04 TO Q02	*Call
2098<2096		5095<4951	M03 TO Q02	*Call
2098<2096		5095<4952	M04 TO Q02	*Call
2098<2096		5095<4954	N02 TO Q02	*Call
2098<2096		5095<4955	N03 TO Q02	*Call
2098<2096		5095<4956	N04 TO Q02	*Call
2098<2096		5095<4958	O02 TO Q02	*Call
2098<2096		5095<4959	O03 TO Q02	*Call
2098<2096		5095<4960	O04 TO Q02	*Call
2098<2096		5095<4962	P02 TO Q02	*Call
2098<2096		5095<4963	P03 TO Q02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5095<4964	P04 TO Q02	*Call
2098<2096		5095<4966	Q02 TO Q02	*Call
2098<2096		5095<4967	Q03 TO Q02	*Call
2098<2096		5095<4968	Q04 TO Q02	*Call
2098<2096		5095<4969	R01 TO Q02	*Call
2098<2096		5095<4970	R02 TO Q02	*Call
2098<2096		5095<4971	R03 TO Q02	*Call
2098<2096		5095<4972	R04 TO Q02	*Call
2098<2096		5095<4973	S01 TO Q02	*Call
2098<2096		5095<4974	S02 TO Q02	*Call
2098<2096		5095<4975	S03 TO Q02	*Call
2098<2096		5095<4976	S04 TO Q02	*Call
2098<2096		5095<4977	T01 TO Q02	*Call
2098<2096		5095<4978	T02 TO Q02	*Call
2098<2096		5095<4979	T03 TO Q02	*Call
2098<2096		5095<4980	T04 TO Q02	*Call
2098<2096		5095<4981	U01 TO Q02	*Call
2098<2096		5095<4982	U02 TO Q02	*Call
2098<2096		5095<4983	U03 TO Q02	*Call
2098<2096		5095<4984	U04 TO Q02	*Call
2098<2096		5095<4985	V01 TO Q02	*Call
2098<2096		5095<4986	V02 TO Q02	*Call
2098<2096		5095<4987	V03 TO Q02	*Call
2098<2096		5095<4988	V04 TO Q02	*Call
2098<2096		5095<4989	W01 TO Q02	*Call
2098<2096		5095<4990	W02 TO Q02	*Call
2098<2096		5095<4991	W03 TO Q02	*Call
2098<2096		5095<4992	W04 TO Q02	*Call
2098<2096		5095<4993	X01 TO Q02	*Call
2098<2096		5095<4994	X02 TO Q02	*Call
2098<2096		5095<4995	X03 TO Q02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5095<4996	X04 TO Q02	*Call
2098<2096		5095<4997	Y01 TO Q02	*Call
2098<2096		5095<4998	Y02 TO Q02	*Call
2098<2096		5095<4999	Y03 TO Q02	*Call
2098<2096		5095<5000	Y04 TO Q02	*Call
2098<2096		5095<5001	Z01 TO Q02	*Call
2098<2096		5095<5002	Z02 TO Q02	*Call
2098<2096		5095<5003	Z03 TO Q02	*Call
2098<2096		5095<5004	Z04 TO Q02	*Call
2098<2096		5096<4900	Z00 TO Q03	*Call
2098<2096		5096<4901	A01 TO Q03	*Call
2098<2096		5096<4902	A02 TO Q03	*Call
2098<2096		5096<4903	A03 TO Q03	*Call
2098<2096		5096<4905	B01 TO Q03	*Call
2098<2096		5096<4906	B02 TO Q03	*Call
2098<2096		5096<4907	B03 TO Q03	*Call
2098<2096		5096<4909	C01 TO Q03	*Call
2098<2096		5096<4910	C02 TO Q03	*Call
2098<2096		5096<4911	C03 TO Q03	*Call
2098<2096		5096<4913	D01 TO Q03	*Call
2098<2096		5096<4914	D02 TO Q03	*Call
2098<2096		5096<4915	D03 TO Q03	*Call
2098<2096		5096<4917	E01 TO Q03	*Call
2098<2096		5096<4918	E02 TO Q03	*Call
2098<2096		5096<4921	F01 TO Q03	*Call
2098<2096		5096<4922	F02 TO Q03	*Call
2098<2096		5096<4925	G01 TO Q03	*Call
2098<2096		5096<4929	H01 TO Q03	*Call
2098<2096		5096<4933	I01 TO Q03	*Call
2098<2096		5096<4937	J01 TO Q03	*Call
2098<2096		5096<4944	K04 TO Q03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5096<4947	L03 TO Q03	*Call
2098<2096		5096<4948	L04 TO Q03	*Call
2098<2096		5096<4951	M03 TO Q03	*Call
2098<2096		5096<4952	M04 TO Q03	*Call
2098<2096		5096<4954	N02 TO Q03	*Call
2098<2096		5096<4955	N03 TO Q03	*Call
2098<2096		5096<4956	N04 TO Q03	*Call
2098<2096		5096<4958	O02 TO Q03	*Call
2098<2096		5096<4959	O03 TO Q03	*Call
2098<2096		5096<4960	O04 TO Q03	*Call
2098<2096		5096<4962	P02 TO Q03	*Call
2098<2096		5096<4963	P03 TO Q03	*Call
2098<2096		5096<4964	P04 TO Q03	*Call
2098<2096		5096<4966	Q02 TO Q03	*Call
2098<2096		5096<4967	Q03 TO Q03	*Call
2098<2096		5096<4968	Q04 TO Q03	*Call
2098<2096		5096<4969	R01 TO Q03	*Call
2098<2096		5096<4970	R02 TO Q03	*Call
2098<2096		5096<4971	R03 TO Q03	*Call
2098<2096		5096<4972	R04 TO Q03	*Call
2098<2096		5096<4973	S01 TO Q03	*Call
2098<2096		5096<4974	S02 TO Q03	*Call
2098<2096		5096<4975	S03 TO Q03	*Call
2098<2096		5096<4976	S04 TO Q03	*Call
2098<2096		5096<4977	T01 TO Q03	*Call
2098<2096		5096<4978	T02 TO Q03	*Call
2098<2096		5096<4979	T03 TO Q03	*Call
2098<2096		5096<4980	T04 TO Q03	*Call
2098<2096		5096<4981	U01 TO Q03	*Call
2098<2096		5096<4982	U02 TO Q03	*Call
2098<2096		5096<4983	U03 TO Q03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5096<4984	U04 TO Q03	*Call
2098<2096		5096<4985	V01 TO Q03	*Call
2098<2096		5096<4986	V02 TO Q03	*Call
2098<2096		5096<4987	V03 TO Q03	*Call
2098<2096		5096<4988	V04 TO Q03	*Call
2098<2096		5096<4989	W01 TO Q03	*Call
2098<2096		5096<4990	W02 TO Q03	*Call
2098<2096		5096<4991	W03 TO Q03	*Call
2098<2096		5096<4992	W04 TO Q03	*Call
2098<2096		5096<4993	X01 TO Q03	*Call
2098<2096		5096<4994	X02 TO Q03	*Call
2098<2096		5096<4995	X03 TO Q03	*Call
2098<2096		5096<4996	X04 TO Q03	*Call
2098<2096		5096<4997	Y01 TO Q03	*Call
2098<2096		5096<4998	Y02 TO Q03	*Call
2098<2096		5096<4999	Y03 TO Q03	*Call
2098<2096		5096<5000	Y04 TO Q03	*Call
2098<2096		5096<5001	Z01 TO Q03	*Call
2098<2096		5096<5002	Z02 TO Q03	*Call
2098<2096		5096<5003	Z03 TO Q03	*Call
2098<2096		5096<5004	Z04 TO Q03	*Call
2098<2096		5097<4900	Z00 TO Q04	*Call
2098<2096		5097<4901	A01 TO Q04	*Call
2098<2096		5097<4902	A02 TO Q04	*Call
2098<2096		5097<4903	A03 TO Q04	*Call
2098<2096		5097<4905	B01 TO Q04	*Call
2098<2096		5097<4906	B02 TO Q04	*Call
2098<2096		5097<4907	B03 TO Q04	*Call
2098<2096		5097<4909	C01 TO Q04	*Call
2098<2096		5097<4910	C02 TO Q04	*Call
2098<2096		5097<4911	C03 TO Q04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5097<4913	D01 TO Q04	*Call
2098<2096		5097<4914	D02 TO Q04	*Call
2098<2096		5097<4915	D03 TO Q04	*Call
2098<2096		5097<4917	E01 TO Q04	*Call
2098<2096		5097<4918	E02 TO Q04	*Call
2098<2096		5097<4921	F01 TO Q04	*Call
2098<2096		5097<4922	F02 TO Q04	*Call
2098<2096		5097<4925	G01 TO Q04	*Call
2098<2096		5097<4929	H01 TO Q04	*Call
2098<2096		5097<4933	I01 TO Q04	*Call
2098<2096		5097<4937	J01 TO Q04	*Call
2098<2096		5097<4944	K04 TO Q04	*Call
2098<2096		5097<4947	L03 TO Q04	*Call
2098<2096		5097<4948	L04 TO Q04	*Call
2098<2096		5097<4951	M03 TO Q04	*Call
2098<2096		5097<4952	M04 TO Q04	*Call
2098<2096		5097<4954	N02 TO Q04	*Call
2098<2096		5097<4955	N03 TO Q04	*Call
2098<2096		5097<4956	N04 TO Q04	*Call
2098<2096		5097<4958	O02 TO Q04	*Call
2098<2096		5097<4959	O03 TO Q04	*Call
2098<2096		5097<4960	O04 TO Q04	*Call
2098<2096		5097<4962	P02 TO Q04	*Call
2098<2096		5097<4963	P03 TO Q04	*Call
2098<2096		5097<4964	P04 TO Q04	*Call
2098<2096		5097<4966	Q02 TO Q04	*Call
2098<2096		5097<4967	Q03 TO Q04	*Call
2098<2096		5097<4968	Q04 TO Q04	*Call
2098<2096		5097<4969	R01 TO Q04	*Call
2098<2096		5097<4970	R02 TO Q04	*Call
2098<2096		5097<4971	R03 TO Q04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5097<4972	R04 TO Q04	*Call
2098<2096		5097<4973	S01 TO Q04	*Call
2098<2096		5097<4974	S02 TO Q04	*Call
2098<2096		5097<4975	S03 TO Q04	*Call
2098<2096		5097<4976	S04 TO Q04	*Call
2098<2096		5097<4977	T01 TO Q04	*Call
2098<2096		5097<4978	T02 TO Q04	*Call
2098<2096		5097<4979	T03 TO Q04	*Call
2098<2096		5097<4980	T04 TO Q04	*Call
2098<2096		5097<4981	U01 TO Q04	*Call
2098<2096		5097<4982	U02 TO Q04	*Call
2098<2096		5097<4983	U03 TO Q04	*Call
2098<2096		5097<4984	U04 TO Q04	*Call
2098<2096		5097<4985	V01 TO Q04	*Call
2098<2096		5097<4986	V02 TO Q04	*Call
2098<2096		5097<4987	V03 TO Q04	*Call
2098<2096		5097<4988	V04 TO Q04	*Call
2098<2096		5097<4989	W01 TO Q04	*Call
2098<2096		5097<4990	W02 TO Q04	*Call
2098<2096		5097<4991	W03 TO Q04	*Call
2098<2096		5097<4992	W04 TO Q04	*Call
2098<2096		5097<4993	X01 TO Q04	*Call
2098<2096		5097<4994	X02 TO Q04	*Call
2098<2096		5097<4995	X03 TO Q04	*Call
2098<2096		5097<4996	X04 TO Q04	*Call
2098<2096		5097<4997	Y01 TO Q04	*Call
2098<2096		5097<4998	Y02 TO Q04	*Call
2098<2096		5097<4999	Y03 TO Q04	*Call
2098<2096		5097<5000	Y04 TO Q04	*Call
2098<2096		5097<5001	Z01 TO Q04	*Call
2098<2096		5097<5002	Z02 TO Q04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5097<5003	Z03 TO Q04	*Call
2098<2096		5097<5004	Z04 TO Q04	*Call
2098<2096		5098<4900	Z00 TO Q05	*Call
2098<2096		5098<4901	A01 TO Q05	*Call
2098<2096		5098<4902	A02 TO Q05	*Call
2098<2096		5098<4903	A03 TO Q05	*Call
2098<2096		5098<4905	B01 TO Q05	*Call
2098<2096		5098<4906	B02 TO Q05	*Call
2098<2096		5098<4907	B03 TO Q05	*Call
2098<2096		5098<4909	C01 TO Q05	*Call
2098<2096		5098<4910	C02 TO Q05	*Call
2098<2096		5098<4911	C03 TO Q05	*Call
2098<2096		5098<4913	D01 TO Q05	*Call
2098<2096		5098<4914	D02 TO Q05	*Call
2098<2096		5098<4915	D03 TO Q05	*Call
2098<2096		5098<4917	E01 TO Q05	*Call
2098<2096		5098<4918	E02 TO Q05	*Call
2098<2096		5098<4921	F01 TO Q05	*Call
2098<2096		5098<4922	F02 TO Q05	*Call
2098<2096		5098<4925	G01 TO Q05	*Call
2098<2096		5098<4929	H01 TO Q05	*Call
2098<2096		5098<4933	I01 TO Q05	*Call
2098<2096		5098<4937	J01 TO Q05	*Call
2098<2096		5098<4944	K04 TO Q05	*Call
2098<2096		5098<4947	L03 TO Q05	*Call
2098<2096		5098<4948	L04 TO Q05	*Call
2098<2096		5098<4951	M03 TO Q05	*Call
2098<2096		5098<4952	M04 TO Q05	*Call
2098<2096		5098<4954	N02 TO Q05	*Call
2098<2096		5098<4955	N03 TO Q05	*Call
2098<2096		5098<4956	N04 TO Q05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5098<4958	O02 TO Q05	*Call
2098<2096		5098<4959	O03 TO Q05	*Call
2098<2096		5098<4960	O04 TO Q05	*Call
2098<2096		5098<4962	P02 TO Q05	*Call
2098<2096		5098<4963	P03 TO Q05	*Call
2098<2096		5098<4964	P04 TO Q05	*Call
2098<2096		5098<4966	Q02 TO Q05	*Call
2098<2096		5098<4967	Q03 TO Q05	*Call
2098<2096		5098<4968	Q04 TO Q05	*Call
2098<2096		5098<4969	R01 TO Q05	*Call
2098<2096		5098<4970	R02 TO Q05	*Call
2098<2096		5098<4971	R03 TO Q05	*Call
2098<2096		5098<4972	R04 TO Q05	*Call
2098<2096		5098<4973	S01 TO Q05	*Call
2098<2096		5098<4974	S02 TO Q05	*Call
2098<2096		5098<4975	S03 TO Q05	*Call
2098<2096		5098<4976	S04 TO Q05	*Call
2098<2096		5098<4977	T01 TO Q05	*Call
2098<2096		5098<4978	T02 TO Q05	*Call
2098<2096		5098<4979	T03 TO Q05	*Call
2098<2096		5098<4980	T04 TO Q05	*Call
2098<2096		5098<4981	U01 TO Q05	*Call
2098<2096		5098<4982	U02 TO Q05	*Call
2098<2096		5098<4983	U03 TO Q05	*Call
2098<2096		5098<4984	U04 TO Q05	*Call
2098<2096		5098<4985	V01 TO Q05	*Call
2098<2096		5098<4986	V02 TO Q05	*Call
2098<2096		5098<4987	V03 TO Q05	*Call
2098<2096		5098<4988	V04 TO Q05	*Call
2098<2096		5098<4989	W01 TO Q05	*Call
2098<2096		5098<4990	W02 TO Q05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5098<4991	W03 TO Q05	*Call
2098<2096		5098<4992	W04 TO Q05	*Call
2098<2096		5098<4993	X01 TO Q05	*Call
2098<2096		5098<4994	X02 TO Q05	*Call
2098<2096		5098<4995	X03 TO Q05	*Call
2098<2096		5098<4996	X04 TO Q05	*Call
2098<2096		5098<4997	Y01 TO Q05	*Call
2098<2096		5098<4998	Y02 TO Q05	*Call
2098<2096		5098<4999	Y03 TO Q05	*Call
2098<2096		5098<5000	Y04 TO Q05	*Call
2098<2096		5098<5001	Z01 TO Q05	*Call
2098<2096		5098<5002	Z02 TO Q05	*Call
2098<2096		5098<5003	Z03 TO Q05	*Call
2098<2096		5098<5004	Z04 TO Q05	*Call
2098<2096		5099<4900	Z00 TO R01	*Call
2098<2096		5099<4901	A01 TO R01	*Call
2098<2096		5099<4902	A02 TO R01	*Call
2098<2096		5099<4903	A03 TO R01	*Call
2098<2096		5099<4905	B01 TO R01	*Call
2098<2096		5099<4906	B02 TO R01	*Call
2098<2096		5099<4907	B03 TO R01	*Call
2098<2096		5099<4909	C01 TO R01	*Call
2098<2096		5099<4910	C02 TO R01	*Call
2098<2096		5099<4911	C03 TO R01	*Call
2098<2096		5099<4913	D01 TO R01	*Call
2098<2096		5099<4914	D02 TO R01	*Call
2098<2096		5099<4915	D03 TO R01	*Call
2098<2096		5099<4917	E01 TO R01	*Call
2098<2096		5099<4918	E02 TO R01	*Call
2098<2096		5099<4921	F01 TO R01	*Call
2098<2096		5099<4922	F02 TO R01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5099<4925	G01 TO R01	*Call
2098<2096		5099<4929	H01 TO R01	*Call
2098<2096		5099<4933	I01 TO R01	*Call
2098<2096		5099<4937	J01 TO R01	*Call
2098<2096		5099<4944	K04 TO R01	*Call
2098<2096		5099<4947	L03 TO R01	*Call
2098<2096		5099<4948	L04 TO R01	*Call
2098<2096		5099<4951	M03 TO R01	*Call
2098<2096		5099<4952	M04 TO R01	*Call
2098<2096		5099<4954	N02 TO R01	*Call
2098<2096		5099<4955	N03 TO R01	*Call
2098<2096		5099<4956	N04 TO R01	*Call
2098<2096		5099<4958	O02 TO R01	*Call
2098<2096		5099<4959	O03 TO R01	*Call
2098<2096		5099<4960	O04 TO R01	*Call
2098<2096		5099<4962	P02 TO R01	*Call
2098<2096		5099<4963	P03 TO R01	*Call
2098<2096		5099<4964	P04 TO R01	*Call
2098<2096		5099<4966	Q02 TO R01	*Call
2098<2096		5099<4967	Q03 TO R01	*Call
2098<2096		5099<4968	Q04 TO R01	*Call
2098<2096		5099<4969	R01 TO R01	*Call
2098<2096		5099<4970	R02 TO R01	*Call
2098<2096		5099<4971	R03 TO R01	*Call
2098<2096		5099<4972	R04 TO R01	*Call
2098<2096		5099<4973	S01 TO R01	*Call
2098<2096		5099<4974	S02 TO R01	*Call
2098<2096		5099<4975	S03 TO R01	*Call
2098<2096		5099<4976	S04 TO R01	*Call
2098<2096		5099<4977	T01 TO R01	*Call
2098<2096		5099<4978	T02 TO R01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5099<4979	T03 TO R01	*Call
2098<2096		5099<4980	T04 TO R01	*Call
2098<2096		5099<4981	U01 TO R01	*Call
2098<2096		5099<4982	U02 TO R01	*Call
2098<2096		5099<4983	U03 TO R01	*Call
2098<2096		5099<4984	U04 TO R01	*Call
2098<2096		5099<4985	V01 TO R01	*Call
2098<2096		5099<4986	V02 TO R01	*Call
2098<2096		5099<4987	V03 TO R01	*Call
2098<2096		5099<4988	V04 TO R01	*Call
2098<2096		5099<4989	W01 TO R01	*Call
2098<2096		5099<4990	W02 TO R01	*Call
2098<2096		5099<4991	W03 TO R01	*Call
2098<2096		5099<4992	W04 TO R01	*Call
2098<2096		5099<4993	X01 TO R01	*Call
2098<2096		5099<4994	X02 TO R01	*Call
2098<2096		5099<4995	X03 TO R01	*Call
2098<2096		5099<4996	X04 TO R01	*Call
2098<2096		5099<4997	Y01 TO R01	*Call
2098<2096		5099<4998	Y02 TO R01	*Call
2098<2096		5099<4999	Y03 TO R01	*Call
2098<2096		5099<5000	Y04 TO R01	*Call
2098<2096		5099<5001	Z01 TO R01	*Call
2098<2096		5099<5002	Z02 TO R01	*Call
2098<2096		5099<5003	Z03 TO R01	*Call
2098<2096		5099<5004	Z04 TO R01	*Call
2098<2096		5100<4900	Z00 TO R02	*Call
2098<2096		5100<4901	A01 TO R02	*Call
2098<2096		5100<4902	A02 TO R02	*Call
2098<2096		5100<4903	A03 TO R02	*Call
2098<2096		5100<4905	B01 TO R02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5100<4906	B02 TO R02	*Call
2098<2096		5100<4907	B03 TO R02	*Call
2098<2096		5100<4909	C01 TO R02	*Call
2098<2096		5100<4910	C02 TO R02	*Call
2098<2096		5100<4911	C03 TO R02	*Call
2098<2096		5100<4913	D01 TO R02	*Call
2098<2096		5100<4914	D02 TO R02	*Call
2098<2096		5100<4915	D03 TO R02	*Call
2098<2096		5100<4917	E01 TO R02	*Call
2098<2096		5100<4918	E02 TO R02	*Call
2098<2096		5100<4921	F01 TO R02	*Call
2098<2096		5100<4922	F02 TO R02	*Call
2098<2096		5100<4925	G01 TO R02	*Call
2098<2096		5100<4929	H01 TO R02	*Call
2098<2096		5100<4933	I01 TO R02	*Call
2098<2096		5100<4937	J01 TO R02	*Call
2098<2096		5100<4944	K04 TO R02	*Call
2098<2096		5100<4947	L03 TO R02	*Call
2098<2096		5100<4948	L04 TO R02	*Call
2098<2096		5100<4951	M03 TO R02	*Call
2098<2096		5100<4952	M04 TO R02	*Call
2098<2096		5100<4954	N02 TO R02	*Call
2098<2096		5100<4955	N03 TO R02	*Call
2098<2096		5100<4956	N04 TO R02	*Call
2098<2096		5100<4958	O02 TO R02	*Call
2098<2096		5100<4959	O03 TO R02	*Call
2098<2096		5100<4960	O04 TO R02	*Call
2098<2096		5100<4962	P02 TO R02	*Call
2098<2096		5100<4963	P03 TO R02	*Call
2098<2096		5100<4964	P04 TO R02	*Call
2098<2096		5100<4966	Q02 TO R02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5100<4967	Q03 TO R02	*Call
2098<2096		5100<4968	Q04 TO R02	*Call
2098<2096		5100<4969	R01 TO R02	*Call
2098<2096		5100<4970	R02 TO R02	*Call
2098<2096		5100<4971	R03 TO R02	*Call
2098<2096		5100<4972	R04 TO R02	*Call
2098<2096		5100<4973	S01 TO R02	*Call
2098<2096		5100<4974	S02 TO R02	*Call
2098<2096		5100<4975	S03 TO R02	*Call
2098<2096		5100<4976	S04 TO R02	*Call
2098<2096		5100<4977	T01 TO R02	*Call
2098<2096		5100<4978	T02 TO R02	*Call
2098<2096		5100<4979	T03 TO R02	*Call
2098<2096		5100<4980	T04 TO R02	*Call
2098<2096		5100<4981	U01 TO R02	*Call
2098<2096		5100<4982	U02 TO R02	*Call
2098<2096		5100<4983	U03 TO R02	*Call
2098<2096		5100<4984	U04 TO R02	*Call
2098<2096		5100<4985	V01 TO R02	*Call
2098<2096		5100<4986	V02 TO R02	*Call
2098<2096		5100<4987	V03 TO R02	*Call
2098<2096		5100<4988	V04 TO R02	*Call
2098<2096		5100<4989	W01 TO R02	*Call
2098<2096		5100<4990	W02 TO R02	*Call
2098<2096		5100<4991	W03 TO R02	*Call
2098<2096		5100<4992	W04 TO R02	*Call
2098<2096		5100<4993	X01 TO R02	*Call
2098<2096		5100<4994	X02 TO R02	*Call
2098<2096		5100<4995	X03 TO R02	*Call
2098<2096		5100<4996	X04 TO R02	*Call
2098<2096		5100<4997	Y01 TO R02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5100<4998	Y02 TO R02	*Call
2098<2096		5100<4999	Y03 TO R02	*Call
2098<2096		5100<5000	Y04 TO R02	*Call
2098<2096		5100<5001	Z01 TO R02	*Call
2098<2096		5100<5002	Z02 TO R02	*Call
2098<2096		5100<5003	Z03 TO R02	*Call
2098<2096		5100<5004	Z04 TO R02	*Call
2098<2096		5101<4900	Z00 TO R03	*Call
2098<2096		5101<4901	A01 TO R03	*Call
2098<2096		5101<4902	A02 TO R03	*Call
2098<2096		5101<4903	A03 TO R03	*Call
2098<2096		5101<4905	B01 TO R03	*Call
2098<2096		5101<4906	B02 TO R03	*Call
2098<2096		5101<4907	B03 TO R03	*Call
2098<2096		5101<4909	C01 TO R03	*Call
2098<2096		5101<4910	C02 TO R03	*Call
2098<2096		5101<4911	C03 TO R03	*Call
2098<2096		5101<4913	D01 TO R03	*Call
2098<2096		5101<4914	D02 TO R03	*Call
2098<2096		5101<4915	D03 TO R03	*Call
2098<2096		5101<4917	E01 TO R03	*Call
2098<2096		5101<4918	E02 TO R03	*Call
2098<2096		5101<4921	F01 TO R03	*Call
2098<2096		5101<4922	F02 TO R03	*Call
2098<2096		5101<4925	G01 TO R03	*Call
2098<2096		5101<4929	H01 TO R03	*Call
2098<2096		5101<4933	I01 TO R03	*Call
2098<2096		5101<4937	J01 TO R03	*Call
2098<2096		5101<4944	K04 TO R03	*Call
2098<2096		5101<4947	L03 TO R03	*Call
2098<2096		5101<4948	L04 TO R03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5101<4951	M03 TO R03	*Call
2098<2096		5101<4952	M04 TO R03	*Call
2098<2096		5101<4954	N02 TO R03	*Call
2098<2096		5101<4955	N03 TO R03	*Call
2098<2096		5101<4956	N04 TO R03	*Call
2098<2096		5101<4958	O02 TO R03	*Call
2098<2096		5101<4959	O03 TO R03	*Call
2098<2096		5101<4960	O04 TO R03	*Call
2098<2096		5101<4962	P02 TO R03	*Call
2098<2096		5101<4963	P03 TO R03	*Call
2098<2096		5101<4964	P04 TO R03	*Call
2098<2096		5101<4966	Q02 TO R03	*Call
2098<2096		5101<4967	Q03 TO R03	*Call
2098<2096		5101<4968	Q04 TO R03	*Call
2098<2096		5101<4969	R01 TO R03	*Call
2098<2096		5101<4970	R02 TO R03	*Call
2098<2096		5101<4971	R03 TO R03	*Call
2098<2096		5101<4972	R04 TO R03	*Call
2098<2096		5101<4973	S01 TO R03	*Call
2098<2096		5101<4974	S02 TO R03	*Call
2098<2096		5101<4975	S03 TO R03	*Call
2098<2096		5101<4976	S04 TO R03	*Call
2098<2096		5101<4977	T01 TO R03	*Call
2098<2096		5101<4978	T02 TO R03	*Call
2098<2096		5101<4979	T03 TO R03	*Call
2098<2096		5101<4980	T04 TO R03	*Call
2098<2096		5101<4981	U01 TO R03	*Call
2098<2096		5101<4982	U02 TO R03	*Call
2098<2096		5101<4983	U03 TO R03	*Call
2098<2096		5101<4984	U04 TO R03	*Call
2098<2096		5101<4985	V01 TO R03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5101<4986	V02 TO R03	*Call
2098<2096		5101<4987	V03 TO R03	*Call
2098<2096		5101<4988	V04 TO R03	*Call
2098<2096		5101<4989	W01 TO R03	*Call
2098<2096		5101<4990	W02 TO R03	*Call
2098<2096		5101<4991	W03 TO R03	*Call
2098<2096		5101<4992	W04 TO R03	*Call
2098<2096		5101<4993	X01 TO R03	*Call
2098<2096		5101<4994	X02 TO R03	*Call
2098<2096		5101<4995	X03 TO R03	*Call
2098<2096		5101<4996	X04 TO R03	*Call
2098<2096		5101<4997	Y01 TO R03	*Call
2098<2096		5101<4998	Y02 TO R03	*Call
2098<2096		5101<4999	Y03 TO R03	*Call
2098<2096		5101<5000	Y04 TO R03	*Call
2098<2096		5101<5001	Z01 TO R03	*Call
2098<2096		5101<5002	Z02 TO R03	*Call
2098<2096		5101<5003	Z03 TO R03	*Call
2098<2096		5101<5004	Z04 TO R03	*Call
2098<2096		5102<4900	Z00 TO R04	*Call
2098<2096		5102<4901	A01 TO R04	*Call
2098<2096		5102<4902	A02 TO R04	*Call
2098<2096		5102<4903	A03 TO R04	*Call
2098<2096		5102<4905	B01 TO R04	*Call
2098<2096		5102<4906	B02 TO R04	*Call
2098<2096		5102<4907	B03 TO R04	*Call
2098<2096		5102<4909	C01 TO R04	*Call
2098<2096		5102<4910	C02 TO R04	*Call
2098<2096		5102<4911	C03 TO R04	*Call
2098<2096		5102<4913	D01 TO R04	*Call
2098<2096		5102<4914	D02 TO R04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5102<4915	D03 TO R04	*Call
2098<2096		5102<4917	E01 TO R04	*Call
2098<2096		5102<4918	E02 TO R04	*Call
2098<2096		5102<4921	F01 TO R04	*Call
2098<2096		5102<4922	F02 TO R04	*Call
2098<2096		5102<4925	G01 TO R04	*Call
2098<2096		5102<4929	H01 TO R04	*Call
2098<2096		5102<4933	I01 TO R04	*Call
2098<2096		5102<4937	J01 TO R04	*Call
2098<2096		5102<4944	K04 TO R04	*Call
2098<2096		5102<4947	L03 TO R04	*Call
2098<2096		5102<4948	L04 TO R04	*Call
2098<2096		5102<4951	M03 TO R04	*Call
2098<2096		5102<4952	M04 TO R04	*Call
2098<2096		5102<4954	N02 TO R04	*Call
2098<2096		5102<4955	N03 TO R04	*Call
2098<2096		5102<4956	N04 TO R04	*Call
2098<2096		5102<4958	O02 TO R04	*Call
2098<2096		5102<4959	O03 TO R04	*Call
2098<2096		5102<4960	O04 TO R04	*Call
2098<2096		5102<4962	P02 TO R04	*Call
2098<2096		5102<4963	P03 TO R04	*Call
2098<2096		5102<4964	P04 TO R04	*Call
2098<2096		5102<4966	Q02 TO R04	*Call
2098<2096		5102<4967	Q03 TO R04	*Call
2098<2096		5102<4968	Q04 TO R04	*Call
2098<2096		5102<4969	R01 TO R04	*Call
2098<2096		5102<4970	R02 TO R04	*Call
2098<2096		5102<4971	R03 TO R04	*Call
2098<2096		5102<4972	R04 TO R04	*Call
2098<2096		5102<4973	S01 TO R04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5102<4974	S02 TO R04	*Call
2098<2096		5102<4975	S03 TO R04	*Call
2098<2096		5102<4976	S04 TO R04	*Call
2098<2096		5102<4977	T01 TO R04	*Call
2098<2096		5102<4978	T02 TO R04	*Call
2098<2096		5102<4979	T03 TO R04	*Call
2098<2096		5102<4980	T04 TO R04	*Call
2098<2096		5102<4981	U01 TO R04	*Call
2098<2096		5102<4982	U02 TO R04	*Call
2098<2096		5102<4983	U03 TO R04	*Call
2098<2096		5102<4984	U04 TO R04	*Call
2098<2096		5102<4985	V01 TO R04	*Call
2098<2096		5102<4986	V02 TO R04	*Call
2098<2096		5102<4987	V03 TO R04	*Call
2098<2096		5102<4988	V04 TO R04	*Call
2098<2096		5102<4989	W01 TO R04	*Call
2098<2096		5102<4990	W02 TO R04	*Call
2098<2096		5102<4991	W03 TO R04	*Call
2098<2096		5102<4992	W04 TO R04	*Call
2098<2096		5102<4993	X01 TO R04	*Call
2098<2096		5102<4994	X02 TO R04	*Call
2098<2096		5102<4995	X03 TO R04	*Call
2098<2096		5102<4996	X04 TO R04	*Call
2098<2096		5102<4997	Y01 TO R04	*Call
2098<2096		5102<4998	Y02 TO R04	*Call
2098<2096		5102<4999	Y03 TO R04	*Call
2098<2096		5102<5000	Y04 TO R04	*Call
2098<2096		5102<5001	Z01 TO R04	*Call
2098<2096		5102<5002	Z02 TO R04	*Call
2098<2096		5102<5003	Z03 TO R04	*Call
2098<2096		5102<5004	Z04 TO R04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5103<4900	Z00 TO R05	*Call
2098<2096		5103<4901	A01 TO R05	*Call
2098<2096		5103<4902	A02 TO R05	*Call
2098<2096		5103<4903	A03 TO R05	*Call
2098<2096		5103<4905	B01 TO R05	*Call
2098<2096		5103<4906	B02 TO R05	*Call
2098<2096		5103<4907	B03 TO R05	*Call
2098<2096		5103<4909	C01 TO R05	*Call
2098<2096		5103<4910	C02 TO R05	*Call
2098<2096		5103<4911	C03 TO R05	*Call
2098<2096		5103<4913	D01 TO R05	*Call
2098<2096		5103<4914	D02 TO R05	*Call
2098<2096		5103<4915	D03 TO R05	*Call
2098<2096		5103<4917	E01 TO R05	*Call
2098<2096		5103<4918	E02 TO R05	*Call
2098<2096		5103<4921	F01 TO R05	*Call
2098<2096		5103<4922	F02 TO R05	*Call
2098<2096		5103<4925	G01 TO R05	*Call
2098<2096		5103<4929	H01 TO R05	*Call
2098<2096		5103<4933	I01 TO R05	*Call
2098<2096		5103<4937	J01 TO R05	*Call
2098<2096		5103<4944	K04 TO R05	*Call
2098<2096		5103<4947	L03 TO R05	*Call
2098<2096		5103<4948	L04 TO R05	*Call
2098<2096		5103<4951	M03 TO R05	*Call
2098<2096		5103<4952	M04 TO R05	*Call
2098<2096		5103<4954	N02 TO R05	*Call
2098<2096		5103<4955	N03 TO R05	*Call
2098<2096		5103<4956	N04 TO R05	*Call
2098<2096		5103<4958	O02 TO R05	*Call
2098<2096		5103<4959	O03 TO R05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5103<4960	O04 TO R05	*Call
2098<2096		5103<4962	P02 TO R05	*Call
2098<2096		5103<4963	P03 TO R05	*Call
2098<2096		5103<4964	P04 TO R05	*Call
2098<2096		5103<4966	Q02 TO R05	*Call
2098<2096		5103<4967	Q03 TO R05	*Call
2098<2096		5103<4968	Q04 TO R05	*Call
2098<2096		5103<4969	R01 TO R05	*Call
2098<2096		5103<4970	R02 TO R05	*Call
2098<2096		5103<4971	R03 TO R05	*Call
2098<2096		5103<4972	R04 TO R05	*Call
2098<2096		5103<4973	S01 TO R05	*Call
2098<2096		5103<4974	S02 TO R05	*Call
2098<2096		5103<4975	S03 TO R05	*Call
2098<2096		5103<4976	S04 TO R05	*Call
2098<2096		5103<4977	T01 TO R05	*Call
2098<2096		5103<4978	T02 TO R05	*Call
2098<2096		5103<4979	T03 TO R05	*Call
2098<2096		5103<4980	T04 TO R05	*Call
2098<2096		5103<4981	U01 TO R05	*Call
2098<2096		5103<4982	U02 TO R05	*Call
2098<2096		5103<4983	U03 TO R05	*Call
2098<2096		5103<4984	U04 TO R05	*Call
2098<2096		5103<4985	V01 TO R05	*Call
2098<2096		5103<4986	V02 TO R05	*Call
2098<2096		5103<4987	V03 TO R05	*Call
2098<2096		5103<4988	V04 TO R05	*Call
2098<2096		5103<4989	W01 TO R05	*Call
2098<2096		5103<4990	W02 TO R05	*Call
2098<2096		5103<4991	W03 TO R05	*Call
2098<2096		5103<4992	W04 TO R05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5103<4993	X01 TO R05	*Call
2098<2096		5103<4994	X02 TO R05	*Call
2098<2096		5103<4995	X03 TO R05	*Call
2098<2096		5103<4996	X04 TO R05	*Call
2098<2096		5103<4997	Y01 TO R05	*Call
2098<2096		5103<4998	Y02 TO R05	*Call
2098<2096		5103<4999	Y03 TO R05	*Call
2098<2096		5103<5000	Y04 TO R05	*Call
2098<2096		5103<5001	Z01 TO R05	*Call
2098<2096		5103<5002	Z02 TO R05	*Call
2098<2096		5103<5003	Z03 TO R05	*Call
2098<2096		5103<5004	Z04 TO R05	*Call
2098<2096		5104<4900	Z00 TO S01	*Call
2098<2096		5104<4901	A01 TO S01	*Call
2098<2096		5104<4902	A02 TO S01	*Call
2098<2096		5104<4903	A03 TO S01	*Call
2098<2096		5104<4905	B01 TO S01	*Call
2098<2096		5104<4906	B02 TO S01	*Call
2098<2096		5104<4907	B03 TO S01	*Call
2098<2096		5104<4909	C01 TO S01	*Call
2098<2096		5104<4910	C02 TO S01	*Call
2098<2096		5104<4911	C03 TO S01	*Call
2098<2096		5104<4913	D01 TO S01	*Call
2098<2096		5104<4914	D02 TO S01	*Call
2098<2096		5104<4915	D03 TO S01	*Call
2098<2096		5104<4917	E01 TO S01	*Call
2098<2096		5104<4918	E02 TO S01	*Call
2098<2096		5104<4921	F01 TO S01	*Call
2098<2096		5104<4922	F02 TO S01	*Call
2098<2096		5104<4925	G01 TO S01	*Call
2098<2096		5104<4929	H01 TO S01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5104<4933	I01 TO S01	*Call
2098<2096		5104<4937	J01 TO S01	*Call
2098<2096		5104<4944	K04 TO S01	*Call
2098<2096		5104<4947	L03 TO S01	*Call
2098<2096		5104<4948	L04 TO S01	*Call
2098<2096		5104<4951	M03 TO S01	*Call
2098<2096		5104<4952	M04 TO S01	*Call
2098<2096		5104<4954	N02 TO S01	*Call
2098<2096		5104<4955	N03 TO S01	*Call
2098<2096		5104<4956	N04 TO S01	*Call
2098<2096		5104<4958	O02 TO S01	*Call
2098<2096		5104<4959	O03 TO S01	*Call
2098<2096		5104<4960	O04 TO S01	*Call
2098<2096		5104<4962	P02 TO S01	*Call
2098<2096		5104<4963	P03 TO S01	*Call
2098<2096		5104<4964	P04 TO S01	*Call
2098<2096		5104<4966	Q02 TO S01	*Call
2098<2096		5104<4967	Q03 TO S01	*Call
2098<2096		5104<4968	Q04 TO S01	*Call
2098<2096		5104<4969	R01 TO S01	*Call
2098<2096		5104<4970	R02 TO S01	*Call
2098<2096		5104<4971	R03 TO S01	*Call
2098<2096		5104<4972	R04 TO S01	*Call
2098<2096		5104<4973	S01 TO S01	*Call
2098<2096		5104<4974	S02 TO S01	*Call
2098<2096		5104<4975	S03 TO S01	*Call
2098<2096		5104<4976	S04 TO S01	*Call
2098<2096		5104<4977	T01 TO S01	*Call
2098<2096		5104<4978	T02 TO S01	*Call
2098<2096		5104<4979	T03 TO S01	*Call
2098<2096		5104<4980	T04 TO S01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5104<4981	U01 TO S01	*Call
2098<2096		5104<4982	U02 TO S01	*Call
2098<2096		5104<4983	U03 TO S01	*Call
2098<2096		5104<4984	U04 TO S01	*Call
2098<2096		5104<4985	V01 TO S01	*Call
2098<2096		5104<4986	V02 TO S01	*Call
2098<2096		5104<4987	V03 TO S01	*Call
2098<2096		5104<4988	V04 TO S01	*Call
2098<2096		5104<4989	W01 TO S01	*Call
2098<2096		5104<4990	W02 TO S01	*Call
2098<2096		5104<4991	W03 TO S01	*Call
2098<2096		5104<4992	W04 TO S01	*Call
2098<2096		5104<4993	X01 TO S01	*Call
2098<2096		5104<4994	X02 TO S01	*Call
2098<2096		5104<4995	X03 TO S01	*Call
2098<2096		5104<4996	X04 TO S01	*Call
2098<2096		5104<4997	Y01 TO S01	*Call
2098<2096		5104<4998	Y02 TO S01	*Call
2098<2096		5104<4999	Y03 TO S01	*Call
2098<2096		5104<5000	Y04 TO S01	*Call
2098<2096		5104<5001	Z01 TO S01	*Call
2098<2096		5104<5002	Z02 TO S01	*Call
2098<2096		5104<5003	Z03 TO S01	*Call
2098<2096		5104<5004	Z04 TO S01	*Call
2098<2096		5105<4900	Z00 TO S02	*Call
2098<2096		5105<4901	A01 TO S02	*Call
2098<2096		5105<4902	A02 TO S02	*Call
2098<2096		5105<4903	A03 TO S02	*Call
2098<2096		5105<4905	B01 TO S02	*Call
2098<2096		5105<4906	B02 TO S02	*Call
2098<2096		5105<4907	B03 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5105<4909	C01 TO S02	*Call
2098<2096		5105<4910	C02 TO S02	*Call
2098<2096		5105<4911	C03 TO S02	*Call
2098<2096		5105<4913	D01 TO S02	*Call
2098<2096		5105<4914	D02 TO S02	*Call
2098<2096		5105<4915	D03 TO S02	*Call
2098<2096		5105<4917	E01 TO S02	*Call
2098<2096		5105<4918	E02 TO S02	*Call
2098<2096		5105<4921	F01 TO S02	*Call
2098<2096		5105<4922	F02 TO S02	*Call
2098<2096		5105<4925	G01 TO S02	*Call
2098<2096		5105<4929	H01 TO S02	*Call
2098<2096		5105<4933	I01 TO S02	*Call
2098<2096		5105<4937	J01 TO S02	*Call
2098<2096		5105<4944	K04 TO S02	*Call
2098<2096		5105<4947	L03 TO S02	*Call
2098<2096		5105<4948	L04 TO S02	*Call
2098<2096		5105<4951	M03 TO S02	*Call
2098<2096		5105<4952	M04 TO S02	*Call
2098<2096		5105<4954	N02 TO S02	*Call
2098<2096		5105<4955	N03 TO S02	*Call
2098<2096		5105<4956	N04 TO S02	*Call
2098<2096		5105<4958	O02 TO S02	*Call
2098<2096		5105<4959	O03 TO S02	*Call
2098<2096		5105<4960	O04 TO S02	*Call
2098<2096		5105<4962	P02 TO S02	*Call
2098<2096		5105<4963	P03 TO S02	*Call
2098<2096		5105<4964	P04 TO S02	*Call
2098<2096		5105<4966	Q02 TO S02	*Call
2098<2096		5105<4967	Q03 TO S02	*Call
2098<2096		5105<4968	Q04 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5105<4969	R01 TO S02	*Call
2098<2096		5105<4970	R02 TO S02	*Call
2098<2096		5105<4971	R03 TO S02	*Call
2098<2096		5105<4972	R04 TO S02	*Call
2098<2096		5105<4973	S01 TO S02	*Call
2098<2096		5105<4974	S02 TO S02	*Call
2098<2096		5105<4975	S03 TO S02	*Call
2098<2096		5105<4976	S04 TO S02	*Call
2098<2096		5105<4977	T01 TO S02	*Call
2098<2096		5105<4978	T02 TO S02	*Call
2098<2096		5105<4979	T03 TO S02	*Call
2098<2096		5105<4980	T04 TO S02	*Call
2098<2096		5105<4981	U01 TO S02	*Call
2098<2096		5105<4982	U02 TO S02	*Call
2098<2096		5105<4983	U03 TO S02	*Call
2098<2096		5105<4984	U04 TO S02	*Call
2098<2096		5105<4985	V01 TO S02	*Call
2098<2096		5105<4986	V02 TO S02	*Call
2098<2096		5105<4987	V03 TO S02	*Call
2098<2096		5105<4988	V04 TO S02	*Call
2098<2096		5105<4989	W01 TO S02	*Call
2098<2096		5105<4990	W02 TO S02	*Call
2098<2096		5105<4991	W03 TO S02	*Call
2098<2096		5105<4992	W04 TO S02	*Call
2098<2096		5105<4993	X01 TO S02	*Call
2098<2096		5105<4994	X02 TO S02	*Call
2098<2096		5105<4995	X03 TO S02	*Call
2098<2096		5105<4996	X04 TO S02	*Call
2098<2096		5105<4997	Y01 TO S02	*Call
2098<2096		5105<4998	Y02 TO S02	*Call
2098<2096		5105<4999	Y03 TO S02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5105<5000	Y04 TO S02	*Call
2098<2096		5105<5001	Z01 TO S02	*Call
2098<2096		5105<5002	Z02 TO S02	*Call
2098<2096		5105<5003	Z03 TO S02	*Call
2098<2096		5105<5004	Z04 TO S02	*Call
2098<2096		5106<4900	Z00 TO S03	*Call
2098<2096		5106<4901	A01 TO S03	*Call
2098<2096		5106<4902	A02 TO S03	*Call
2098<2096		5106<4903	A03 TO S03	*Call
2098<2096		5106<4905	B01 TO S03	*Call
2098<2096		5106<4906	B02 TO S03	*Call
2098<2096		5106<4907	B03 TO S03	*Call
2098<2096		5106<4909	C01 TO S03	*Call
2098<2096		5106<4910	C02 TO S03	*Call
2098<2096		5106<4911	C03 TO S03	*Call
2098<2096		5106<4913	D01 TO S03	*Call
2098<2096		5106<4914	D02 TO S03	*Call
2098<2096		5106<4915	D03 TO S03	*Call
2098<2096		5106<4917	E01 TO S03	*Call
2098<2096		5106<4918	E02 TO S03	*Call
2098<2096		5106<4921	F01 TO S03	*Call
2098<2096		5106<4922	F02 TO S03	*Call
2098<2096		5106<4925	G01 TO S03	*Call
2098<2096		5106<4929	H01 TO S03	*Call
2098<2096		5106<4933	I01 TO S03	*Call
2098<2096		5106<4937	J01 TO S03	*Call
2098<2096		5106<4944	K04 TO S03	*Call
2098<2096		5106<4947	L03 TO S03	*Call
2098<2096		5106<4948	L04 TO S03	*Call
2098<2096		5106<4951	M03 TO S03	*Call
2098<2096		5106<4952	M04 TO S03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5106<4954	N02 TO S03	*Call
2098<2096		5106<4955	N03 TO S03	*Call
2098<2096		5106<4956	N04 TO S03	*Call
2098<2096		5106<4958	O02 TO S03	*Call
2098<2096		5106<4959	O03 TO S03	*Call
2098<2096		5106<4960	O04 TO S03	*Call
2098<2096		5106<4962	P02 TO S03	*Call
2098<2096		5106<4963	P03 TO S03	*Call
2098<2096		5106<4964	P04 TO S03	*Call
2098<2096		5106<4966	Q02 TO S03	*Call
2098<2096		5106<4967	Q03 TO S03	*Call
2098<2096		5106<4968	Q04 TO S03	*Call
2098<2096		5106<4969	R01 TO S03	*Call
2098<2096		5106<4970	R02 TO S03	*Call
2098<2096		5106<4971	R03 TO S03	*Call
2098<2096		5106<4972	R04 TO S03	*Call
2098<2096		5106<4973	S01 TO S03	*Call
2098<2096		5106<4974	S02 TO S03	*Call
2098<2096		5106<4975	S03 TO S03	*Call
2098<2096		5106<4976	S04 TO S03	*Call
2098<2096		5106<4977	T01 TO S03	*Call
2098<2096		5106<4978	T02 TO S03	*Call
2098<2096		5106<4979	T03 TO S03	*Call
2098<2096		5106<4980	T04 TO S03	*Call
2098<2096		5106<4981	U01 TO S03	*Call
2098<2096		5106<4982	U02 TO S03	*Call
2098<2096		5106<4983	U03 TO S03	*Call
2098<2096		5106<4984	U04 TO S03	*Call
2098<2096		5106<4985	V01 TO S03	*Call
2098<2096		5106<4986	V02 TO S03	*Call
2098<2096		5106<4987	V03 TO S03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5106<4988	V04 TO S03	*Call
2098<2096		5106<4989	W01 TO S03	*Call
2098<2096		5106<4990	W02 TO S03	*Call
2098<2096		5106<4991	W03 TO S03	*Call
2098<2096		5106<4992	W04 TO S03	*Call
2098<2096		5106<4993	X01 TO S03	*Call
2098<2096		5106<4994	X02 TO S03	*Call
2098<2096		5106<4995	X03 TO S03	*Call
2098<2096		5106<4996	X04 TO S03	*Call
2098<2096		5106<4997	Y01 TO S03	*Call
2098<2096		5106<4998	Y02 TO S03	*Call
2098<2096		5106<4999	Y03 TO S03	*Call
2098<2096		5106<5000	Y04 TO S03	*Call
2098<2096		5106<5001	Z01 TO S03	*Call
2098<2096		5106<5002	Z02 TO S03	*Call
2098<2096		5106<5003	Z03 TO S03	*Call
2098<2096		5106<5004	Z04 TO S03	*Call
2098<2096		5107<4900	Z00 TO S04	*Call
2098<2096		5107<4901	A01 TO S04	*Call
2098<2096		5107<4902	A02 TO S04	*Call
2098<2096		5107<4903	A03 TO S04	*Call
2098<2096		5107<4905	B01 TO S04	*Call
2098<2096		5107<4906	B02 TO S04	*Call
2098<2096		5107<4907	B03 TO S04	*Call
2098<2096		5107<4909	C01 TO S04	*Call
2098<2096		5107<4910	C02 TO S04	*Call
2098<2096		5107<4911	C03 TO S04	*Call
2098<2096		5107<4913	D01 TO S04	*Call
2098<2096		5107<4914	D02 TO S04	*Call
2098<2096		5107<4915	D03 TO S04	*Call
2098<2096		5107<4917	E01 TO S04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5107<4918	E02 TO S04	*Call
2098<2096		5107<4921	F01 TO S04	*Call
2098<2096		5107<4922	F02 TO S04	*Call
2098<2096		5107<4925	G01 TO S04	*Call
2098<2096		5107<4929	H01 TO S04	*Call
2098<2096		5107<4933	I01 TO S04	*Call
2098<2096		5107<4937	J01 TO S04	*Call
2098<2096		5107<4944	K04 TO S04	*Call
2098<2096		5107<4947	L03 TO S04	*Call
2098<2096		5107<4948	L04 TO S04	*Call
2098<2096		5107<4951	M03 TO S04	*Call
2098<2096		5107<4952	M04 TO S04	*Call
2098<2096		5107<4954	N02 TO S04	*Call
2098<2096		5107<4955	N03 TO S04	*Call
2098<2096		5107<4956	N04 TO S04	*Call
2098<2096		5107<4958	O02 TO S04	*Call
2098<2096		5107<4959	O03 TO S04	*Call
2098<2096		5107<4960	O04 TO S04	*Call
2098<2096		5107<4962	P02 TO S04	*Call
2098<2096		5107<4963	P03 TO S04	*Call
2098<2096		5107<4964	P04 TO S04	*Call
2098<2096		5107<4966	Q02 TO S04	*Call
2098<2096		5107<4967	Q03 TO S04	*Call
2098<2096		5107<4968	Q04 TO S04	*Call
2098<2096		5107<4969	R01 TO S04	*Call
2098<2096		5107<4970	R02 TO S04	*Call
2098<2096		5107<4971	R03 TO S04	*Call
2098<2096		5107<4972	R04 TO S04	*Call
2098<2096		5107<4973	S01 TO S04	*Call
2098<2096		5107<4974	S02 TO S04	*Call
2098<2096		5107<4975	S03 TO S04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5107<4976	S04 TO S04	*Call
2098<2096		5107<4977	T01 TO S04	*Call
2098<2096		5107<4978	T02 TO S04	*Call
2098<2096		5107<4979	T03 TO S04	*Call
2098<2096		5107<4980	T04 TO S04	*Call
2098<2096		5107<4981	U01 TO S04	*Call
2098<2096		5107<4982	U02 TO S04	*Call
2098<2096		5107<4983	U03 TO S04	*Call
2098<2096		5107<4984	U04 TO S04	*Call
2098<2096		5107<4985	V01 TO S04	*Call
2098<2096		5107<4986	V02 TO S04	*Call
2098<2096		5107<4987	V03 TO S04	*Call
2098<2096		5107<4988	V04 TO S04	*Call
2098<2096		5107<4989	W01 TO S04	*Call
2098<2096		5107<4990	W02 TO S04	*Call
2098<2096		5107<4991	W03 TO S04	*Call
2098<2096		5107<4992	W04 TO S04	*Call
2098<2096		5107<4993	X01 TO S04	*Call
2098<2096		5107<4994	X02 TO S04	*Call
2098<2096		5107<4995	X03 TO S04	*Call
2098<2096		5107<4996	X04 TO S04	*Call
2098<2096		5107<4997	Y01 TO S04	*Call
2098<2096		5107<4998	Y02 TO S04	*Call
2098<2096		5107<4999	Y03 TO S04	*Call
2098<2096		5107<5000	Y04 TO S04	*Call
2098<2096		5107<5001	Z01 TO S04	*Call
2098<2096		5107<5002	Z02 TO S04	*Call
2098<2096		5107<5003	Z03 TO S04	*Call
2098<2096		5107<5004	Z04 TO S04	*Call
2098<2096		5108<4900	Z00 TO S05	*Call
2098<2096		5108<4901	A01 TO S05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5108<4902	A02 TO S05	*Call
2098<2096		5108<4903	A03 TO S05	*Call
2098<2096		5108<4905	B01 TO S05	*Call
2098<2096		5108<4906	B02 TO S05	*Call
2098<2096		5108<4907	B03 TO S05	*Call
2098<2096		5108<4909	C01 TO S05	*Call
2098<2096		5108<4910	C02 TO S05	*Call
2098<2096		5108<4911	C03 TO S05	*Call
2098<2096		5108<4913	D01 TO S05	*Call
2098<2096		5108<4914	D02 TO S05	*Call
2098<2096		5108<4915	D03 TO S05	*Call
2098<2096		5108<4917	E01 TO S05	*Call
2098<2096		5108<4918	E02 TO S05	*Call
2098<2096		5108<4921	F01 TO S05	*Call
2098<2096		5108<4922	F02 TO S05	*Call
2098<2096		5108<4925	G01 TO S05	*Call
2098<2096		5108<4929	H01 TO S05	*Call
2098<2096		5108<4933	I01 TO S05	*Call
2098<2096		5108<4937	J01 TO S05	*Call
2098<2096		5108<4944	K04 TO S05	*Call
2098<2096		5108<4947	L03 TO S05	*Call
2098<2096		5108<4948	L04 TO S05	*Call
2098<2096		5108<4951	M03 TO S05	*Call
2098<2096		5108<4952	M04 TO S05	*Call
2098<2096		5108<4954	N02 TO S05	*Call
2098<2096		5108<4955	N03 TO S05	*Call
2098<2096		5108<4956	N04 TO S05	*Call
2098<2096		5108<4958	O02 TO S05	*Call
2098<2096		5108<4959	O03 TO S05	*Call
2098<2096		5108<4960	O04 TO S05	*Call
2098<2096		5108<4962	P02 TO S05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5108<4963	P03 TO S05	*Call
2098<2096		5108<4964	P04 TO S05	*Call
2098<2096		5108<4966	Q02 TO S05	*Call
2098<2096		5108<4967	Q03 TO S05	*Call
2098<2096		5108<4968	Q04 TO S05	*Call
2098<2096		5108<4969	R01 TO S05	*Call
2098<2096		5108<4970	R02 TO S05	*Call
2098<2096		5108<4971	R03 TO S05	*Call
2098<2096		5108<4972	R04 TO S05	*Call
2098<2096		5108<4973	S01 TO S05	*Call
2098<2096		5108<4974	S02 TO S05	*Call
2098<2096		5108<4975	S03 TO S05	*Call
2098<2096		5108<4976	S04 TO S05	*Call
2098<2096		5108<4977	T01 TO S05	*Call
2098<2096		5108<4978	T02 TO S05	*Call
2098<2096		5108<4979	T03 TO S05	*Call
2098<2096		5108<4980	T04 TO S05	*Call
2098<2096		5108<4981	U01 TO S05	*Call
2098<2096		5108<4982	U02 TO S05	*Call
2098<2096		5108<4983	U03 TO S05	*Call
2098<2096		5108<4984	U04 TO S05	*Call
2098<2096		5108<4985	V01 TO S05	*Call
2098<2096		5108<4986	V02 TO S05	*Call
2098<2096		5108<4987	V03 TO S05	*Call
2098<2096		5108<4988	V04 TO S05	*Call
2098<2096		5108<4989	W01 TO S05	*Call
2098<2096		5108<4990	W02 TO S05	*Call
2098<2096		5108<4991	W03 TO S05	*Call
2098<2096		5108<4992	W04 TO S05	*Call
2098<2096		5108<4993	X01 TO S05	*Call
2098<2096		5108<4994	X02 TO S05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5108<4995	X03 TO S05	*Call
2098<2096		5108<4996	X04 TO S05	*Call
2098<2096		5108<4997	Y01 TO S05	*Call
2098<2096		5108<4998	Y02 TO S05	*Call
2098<2096		5108<4999	Y03 TO S05	*Call
2098<2096		5108<5000	Y04 TO S05	*Call
2098<2096		5108<5001	Z01 TO S05	*Call
2098<2096		5108<5002	Z02 TO S05	*Call
2098<2096		5108<5003	Z03 TO S05	*Call
2098<2096		5108<5004	Z04 TO S05	*Call
2098<2096		5109<4900	Z00 TO T01	*Call
2098<2096		5109<4901	A01 TO T01	*Call
2098<2096		5109<4902	A02 TO T01	*Call
2098<2096		5109<4903	A03 TO T01	*Call
2098<2096		5109<4905	B01 TO T01	*Call
2098<2096		5109<4906	B02 TO T01	*Call
2098<2096		5109<4907	B03 TO T01	*Call
2098<2096		5109<4909	C01 TO T01	*Call
2098<2096		5109<4910	C02 TO T01	*Call
2098<2096		5109<4911	C03 TO T01	*Call
2098<2096		5109<4913	D01 TO T01	*Call
2098<2096		5109<4914	D02 TO T01	*Call
2098<2096		5109<4915	D03 TO T01	*Call
2098<2096		5109<4917	E01 TO T01	*Call
2098<2096		5109<4918	E02 TO T01	*Call
2098<2096		5109<4921	F01 TO T01	*Call
2098<2096		5109<4922	F02 TO T01	*Call
2098<2096		5109<4925	G01 TO T01	*Call
2098<2096		5109<4929	H01 TO T01	*Call
2098<2096		5109<4933	I01 TO T01	*Call
2098<2096		5109<4937	J01 TO T01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5109<4944	K04 TO T01	*Call
2098<2096		5109<4947	L03 TO T01	*Call
2098<2096		5109<4948	L04 TO T01	*Call
2098<2096		5109<4951	M03 TO T01	*Call
2098<2096		5109<4952	M04 TO T01	*Call
2098<2096		5109<4954	N02 TO T01	*Call
2098<2096		5109<4955	N03 TO T01	*Call
2098<2096		5109<4956	N04 TO T01	*Call
2098<2096		5109<4958	O02 TO T01	*Call
2098<2096		5109<4959	O03 TO T01	*Call
2098<2096		5109<4960	O04 TO T01	*Call
2098<2096		5109<4962	P02 TO T01	*Call
2098<2096		5109<4963	P03 TO T01	*Call
2098<2096		5109<4964	P04 TO T01	*Call
2098<2096		5109<4966	Q02 TO T01	*Call
2098<2096		5109<4967	Q03 TO T01	*Call
2098<2096		5109<4968	Q04 TO T01	*Call
2098<2096		5109<4969	R01 TO T01	*Call
2098<2096		5109<4970	R02 TO T01	*Call
2098<2096		5109<4971	R03 TO T01	*Call
2098<2096		5109<4972	R04 TO T01	*Call
2098<2096		5109<4973	S01 TO T01	*Call
2098<2096		5109<4974	S02 TO T01	*Call
2098<2096		5109<4975	S03 TO T01	*Call
2098<2096		5109<4976	S04 TO T01	*Call
2098<2096		5109<4977	T01 TO T01	*Call
2098<2096		5109<4978	T02 TO T01	*Call
2098<2096		5109<4979	T03 TO T01	*Call
2098<2096		5109<4980	T04 TO T01	*Call
2098<2096		5109<4981	U01 TO T01	*Call
2098<2096		5109<4982	U02 TO T01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5109<4983	U03 TO T01	*Call
2098<2096		5109<4984	U04 TO T01	*Call
2098<2096		5109<4985	V01 TO T01	*Call
2098<2096		5109<4986	V02 TO T01	*Call
2098<2096		5109<4987	V03 TO T01	*Call
2098<2096		5109<4988	V04 TO T01	*Call
2098<2096		5109<4989	W01 TO T01	*Call
2098<2096		5109<4990	W02 TO T01	*Call
2098<2096		5109<4991	W03 TO T01	*Call
2098<2096		5109<4992	W04 TO T01	*Call
2098<2096		5109<4993	X01 TO T01	*Call
2098<2096		5109<4994	X02 TO T01	*Call
2098<2096		5109<4995	X03 TO T01	*Call
2098<2096		5109<4996	X04 TO T01	*Call
2098<2096		5109<4997	Y01 TO T01	*Call
2098<2096		5109<4998	Y02 TO T01	*Call
2098<2096		5109<4999	Y03 TO T01	*Call
2098<2096		5109<5000	Y04 TO T01	*Call
2098<2096		5109<5001	Z01 TO T01	*Call
2098<2096		5109<5002	Z02 TO T01	*Call
2098<2096		5109<5003	Z03 TO T01	*Call
2098<2096		5109<5004	Z04 TO T01	*Call
2098<2096		5110<4900	Z00 TO T02	*Call
2098<2096		5110<4901	A01 TO T02	*Call
2098<2096		5110<4902	A02 TO T02	*Call
2098<2096		5110<4903	A03 TO T02	*Call
2098<2096		5110<4905	B01 TO T02	*Call
2098<2096		5110<4906	B02 TO T02	*Call
2098<2096		5110<4907	B03 TO T02	*Call
2098<2096		5110<4909	C01 TO T02	*Call
2098<2096		5110<4910	C02 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5110<4911	C03 TO T02	*Call
2098<2096		5110<4913	D01 TO T02	*Call
2098<2096		5110<4914	D02 TO T02	*Call
2098<2096		5110<4915	D03 TO T02	*Call
2098<2096		5110<4917	E01 TO T02	*Call
2098<2096		5110<4918	E02 TO T02	*Call
2098<2096		5110<4921	F01 TO T02	*Call
2098<2096		5110<4922	F02 TO T02	*Call
2098<2096		5110<4925	G01 TO T02	*Call
2098<2096		5110<4929	H01 TO T02	*Call
2098<2096		5110<4933	I01 TO T02	*Call
2098<2096		5110<4937	J01 TO T02	*Call
2098<2096		5110<4944	K04 TO T02	*Call
2098<2096		5110<4947	L03 TO T02	*Call
2098<2096		5110<4948	L04 TO T02	*Call
2098<2096		5110<4951	M03 TO T02	*Call
2098<2096		5110<4952	M04 TO T02	*Call
2098<2096		5110<4954	N02 TO T02	*Call
2098<2096		5110<4955	N03 TO T02	*Call
2098<2096		5110<4956	N04 TO T02	*Call
2098<2096		5110<4958	O02 TO T02	*Call
2098<2096		5110<4959	O03 TO T02	*Call
2098<2096		5110<4960	O04 TO T02	*Call
2098<2096		5110<4962	P02 TO T02	*Call
2098<2096		5110<4963	P03 TO T02	*Call
2098<2096		5110<4964	P04 TO T02	*Call
2098<2096		5110<4966	Q02 TO T02	*Call
2098<2096		5110<4967	Q03 TO T02	*Call
2098<2096		5110<4968	Q04 TO T02	*Call
2098<2096		5110<4969	R01 TO T02	*Call
2098<2096		5110<4970	R02 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5110<4971	R03 TO T02	*Call
2098<2096		5110<4972	R04 TO T02	*Call
2098<2096		5110<4973	S01 TO T02	*Call
2098<2096		5110<4974	S02 TO T02	*Call
2098<2096		5110<4975	S03 TO T02	*Call
2098<2096		5110<4976	S04 TO T02	*Call
2098<2096		5110<4977	T01 TO T02	*Call
2098<2096		5110<4978	T02 TO T02	*Call
2098<2096		5110<4979	T03 TO T02	*Call
2098<2096		5110<4980	T04 TO T02	*Call
2098<2096		5110<4981	U01 TO T02	*Call
2098<2096		5110<4982	U02 TO T02	*Call
2098<2096		5110<4983	U03 TO T02	*Call
2098<2096		5110<4984	U04 TO T02	*Call
2098<2096		5110<4985	V01 TO T02	*Call
2098<2096		5110<4986	V02 TO T02	*Call
2098<2096		5110<4987	V03 TO T02	*Call
2098<2096		5110<4988	V04 TO T02	*Call
2098<2096		5110<4989	W01 TO T02	*Call
2098<2096		5110<4990	W02 TO T02	*Call
2098<2096		5110<4991	W03 TO T02	*Call
2098<2096		5110<4992	W04 TO T02	*Call
2098<2096		5110<4993	X01 TO T02	*Call
2098<2096		5110<4994	X02 TO T02	*Call
2098<2096		5110<4995	X03 TO T02	*Call
2098<2096		5110<4996	X04 TO T02	*Call
2098<2096		5110<4997	Y01 TO T02	*Call
2098<2096		5110<4998	Y02 TO T02	*Call
2098<2096		5110<4999	Y03 TO T02	*Call
2098<2096		5110<5000	Y04 TO T02	*Call
2098<2096		5110<5001	Z01 TO T02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5110<5002	Z02 TO T02	*Call
2098<2096		5110<5003	Z03 TO T02	*Call
2098<2096		5110<5004	Z04 TO T02	*Call
2098<2096		5111<4900	Z00 TO T03	*Call
2098<2096		5111<4901	A01 TO T03	*Call
2098<2096		5111<4902	A02 TO T03	*Call
2098<2096		5111<4903	A03 TO T03	*Call
2098<2096		5111<4905	B01 TO T03	*Call
2098<2096		5111<4906	B02 TO T03	*Call
2098<2096		5111<4907	B03 TO T03	*Call
2098<2096		5111<4909	C01 TO T03	*Call
2098<2096		5111<4910	C02 TO T03	*Call
2098<2096		5111<4911	C03 TO T03	*Call
2098<2096		5111<4913	D01 TO T03	*Call
2098<2096		5111<4914	D02 TO T03	*Call
2098<2096		5111<4915	D03 TO T03	*Call
2098<2096		5111<4917	E01 TO T03	*Call
2098<2096		5111<4918	E02 TO T03	*Call
2098<2096		5111<4921	F01 TO T03	*Call
2098<2096		5111<4922	F02 TO T03	*Call
2098<2096		5111<4925	G01 TO T03	*Call
2098<2096		5111<4929	H01 TO T03	*Call
2098<2096		5111<4933	I01 TO T03	*Call
2098<2096		5111<4937	J01 TO T03	*Call
2098<2096		5111<4944	K04 TO T03	*Call
2098<2096		5111<4947	L03 TO T03	*Call
2098<2096		5111<4948	L04 TO T03	*Call
2098<2096		5111<4951	M03 TO T03	*Call
2098<2096		5111<4952	M04 TO T03	*Call
2098<2096		5111<4954	N02 TO T03	*Call
2098<2096		5111<4955	N03 TO T03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5111<4956	N04 TO T03	*Call
2098<2096		5111<4958	O02 TO T03	*Call
2098<2096		5111<4959	O03 TO T03	*Call
2098<2096		5111<4960	O04 TO T03	*Call
2098<2096		5111<4962	P02 TO T03	*Call
2098<2096		5111<4963	P03 TO T03	*Call
2098<2096		5111<4964	P04 TO T03	*Call
2098<2096		5111<4966	Q02 TO T03	*Call
2098<2096		5111<4967	Q03 TO T03	*Call
2098<2096		5111<4968	Q04 TO T03	*Call
2098<2096		5111<4969	R01 TO T03	*Call
2098<2096		5111<4970	R02 TO T03	*Call
2098<2096		5111<4971	R03 TO T03	*Call
2098<2096		5111<4972	R04 TO T03	*Call
2098<2096		5111<4973	S01 TO T03	*Call
2098<2096		5111<4974	S02 TO T03	*Call
2098<2096		5111<4975	S03 TO T03	*Call
2098<2096		5111<4976	S04 TO T03	*Call
2098<2096		5111<4977	T01 TO T03	*Call
2098<2096		5111<4978	T02 TO T03	*Call
2098<2096		5111<4979	T03 TO T03	*Call
2098<2096		5111<4980	T04 TO T03	*Call
2098<2096		5111<4981	U01 TO T03	*Call
2098<2096		5111<4982	U02 TO T03	*Call
2098<2096		5111<4983	U03 TO T03	*Call
2098<2096		5111<4984	U04 TO T03	*Call
2098<2096		5111<4985	V01 TO T03	*Call
2098<2096		5111<4986	V02 TO T03	*Call
2098<2096		5111<4987	V03 TO T03	*Call
2098<2096		5111<4988	V04 TO T03	*Call
2098<2096		5111<4989	W01 TO T03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5111<4990	W02 TO T03	*Call
2098<2096		5111<4991	W03 TO T03	*Call
2098<2096		5111<4992	W04 TO T03	*Call
2098<2096		5111<4993	X01 TO T03	*Call
2098<2096		5111<4994	X02 TO T03	*Call
2098<2096		5111<4995	X03 TO T03	*Call
2098<2096		5111<4996	X04 TO T03	*Call
2098<2096		5111<4997	Y01 TO T03	*Call
2098<2096		5111<4998	Y02 TO T03	*Call
2098<2096		5111<4999	Y03 TO T03	*Call
2098<2096		5111<5000	Y04 TO T03	*Call
2098<2096		5111<5001	Z01 TO T03	*Call
2098<2096		5111<5002	Z02 TO T03	*Call
2098<2096		5111<5003	Z03 TO T03	*Call
2098<2096		5111<5004	Z04 TO T03	*Call
2098<2096		5112<4900	Z00 TO T04	*Call
2098<2096		5112<4901	A01 TO T04	*Call
2098<2096		5112<4902	A02 TO T04	*Call
2098<2096		5112<4903	A03 TO T04	*Call
2098<2096		5112<4905	B01 TO T04	*Call
2098<2096		5112<4906	B02 TO T04	*Call
2098<2096		5112<4907	B03 TO T04	*Call
2098<2096		5112<4909	C01 TO T04	*Call
2098<2096		5112<4910	C02 TO T04	*Call
2098<2096		5112<4911	C03 TO T04	*Call
2098<2096		5112<4913	D01 TO T04	*Call
2098<2096		5112<4914	D02 TO T04	*Call
2098<2096		5112<4915	D03 TO T04	*Call
2098<2096		5112<4917	E01 TO T04	*Call
2098<2096		5112<4918	E02 TO T04	*Call
2098<2096		5112<4921	F01 TO T04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5112<4922	F02 TO T04	*Call
2098<2096		5112<4925	G01 TO T04	*Call
2098<2096		5112<4929	H01 TO T04	*Call
2098<2096		5112<4933	I01 TO T04	*Call
2098<2096		5112<4937	J01 TO T04	*Call
2098<2096		5112<4944	K04 TO T04	*Call
2098<2096		5112<4947	L03 TO T04	*Call
2098<2096		5112<4948	L04 TO T04	*Call
2098<2096		5112<4951	M03 TO T04	*Call
2098<2096		5112<4952	M04 TO T04	*Call
2098<2096		5112<4954	N02 TO T04	*Call
2098<2096		5112<4955	N03 TO T04	*Call
2098<2096		5112<4956	N04 TO T04	*Call
2098<2096		5112<4958	O02 TO T04	*Call
2098<2096		5112<4959	O03 TO T04	*Call
2098<2096		5112<4960	O04 TO T04	*Call
2098<2096		5112<4962	P02 TO T04	*Call
2098<2096		5112<4963	P03 TO T04	*Call
2098<2096		5112<4964	P04 TO T04	*Call
2098<2096		5112<4966	Q02 TO T04	*Call
2098<2096		5112<4967	Q03 TO T04	*Call
2098<2096		5112<4968	Q04 TO T04	*Call
2098<2096		5112<4969	R01 TO T04	*Call
2098<2096		5112<4970	R02 TO T04	*Call
2098<2096		5112<4971	R03 TO T04	*Call
2098<2096		5112<4972	R04 TO T04	*Call
2098<2096		5112<4973	S01 TO T04	*Call
2098<2096		5112<4974	S02 TO T04	*Call
2098<2096		5112<4975	S03 TO T04	*Call
2098<2096		5112<4976	S04 TO T04	*Call
2098<2096		5112<4977	T01 TO T04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5112<4978	T02 TO T04	*Call
2098<2096		5112<4979	T03 TO T04	*Call
2098<2096		5112<4980	T04 TO T04	*Call
2098<2096		5112<4981	U01 TO T04	*Call
2098<2096		5112<4982	U02 TO T04	*Call
2098<2096		5112<4983	U03 TO T04	*Call
2098<2096		5112<4984	U04 TO T04	*Call
2098<2096		5112<4985	V01 TO T04	*Call
2098<2096		5112<4986	V02 TO T04	*Call
2098<2096		5112<4987	V03 TO T04	*Call
2098<2096		5112<4988	V04 TO T04	*Call
2098<2096		5112<4989	W01 TO T04	*Call
2098<2096		5112<4990	W02 TO T04	*Call
2098<2096		5112<4991	W03 TO T04	*Call
2098<2096		5112<4992	W04 TO T04	*Call
2098<2096		5112<4993	X01 TO T04	*Call
2098<2096		5112<4994	X02 TO T04	*Call
2098<2096		5112<4995	X03 TO T04	*Call
2098<2096		5112<4996	X04 TO T04	*Call
2098<2096		5112<4997	Y01 TO T04	*Call
2098<2096		5112<4998	Y02 TO T04	*Call
2098<2096		5112<4999	Y03 TO T04	*Call
2098<2096		5112<5000	Y04 TO T04	*Call
2098<2096		5112<5001	Z01 TO T04	*Call
2098<2096		5112<5002	Z02 TO T04	*Call
2098<2096		5112<5003	Z03 TO T04	*Call
2098<2096		5112<5004	Z04 TO T04	*Call
2098<2096		5113<4900	Z00 TO T05	*Call
2098<2096		5113<4901	A01 TO T05	*Call
2098<2096		5113<4902	A02 TO T05	*Call
2098<2096		5113<4903	A03 TO T05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5113<4905	B01 TO T05	*Call
2098<2096		5113<4906	B02 TO T05	*Call
2098<2096		5113<4907	B03 TO T05	*Call
2098<2096		5113<4909	C01 TO T05	*Call
2098<2096		5113<4910	C02 TO T05	*Call
2098<2096		5113<4911	C03 TO T05	*Call
2098<2096		5113<4913	D01 TO T05	*Call
2098<2096		5113<4914	D02 TO T05	*Call
2098<2096		5113<4915	D03 TO T05	*Call
2098<2096		5113<4917	E01 TO T05	*Call
2098<2096		5113<4918	E02 TO T05	*Call
2098<2096		5113<4921	F01 TO T05	*Call
2098<2096		5113<4922	F02 TO T05	*Call
2098<2096		5113<4925	G01 TO T05	*Call
2098<2096		5113<4929	H01 TO T05	*Call
2098<2096		5113<4933	I01 TO T05	*Call
2098<2096		5113<4937	J01 TO T05	*Call
2098<2096		5113<4944	K04 TO T05	*Call
2098<2096		5113<4947	L03 TO T05	*Call
2098<2096		5113<4948	L04 TO T05	*Call
2098<2096		5113<4951	M03 TO T05	*Call
2098<2096		5113<4952	M04 TO T05	*Call
2098<2096		5113<4954	N02 TO T05	*Call
2098<2096		5113<4955	N03 TO T05	*Call
2098<2096		5113<4956	N04 TO T05	*Call
2098<2096		5113<4958	O02 TO T05	*Call
2098<2096		5113<4959	O03 TO T05	*Call
2098<2096		5113<4960	O04 TO T05	*Call
2098<2096		5113<4962	P02 TO T05	*Call
2098<2096		5113<4963	P03 TO T05	*Call
2098<2096		5113<4964	P04 TO T05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5113<4966	Q02 TO T05	*Call
2098<2096		5113<4967	Q03 TO T05	*Call
2098<2096		5113<4968	Q04 TO T05	*Call
2098<2096		5113<4969	R01 TO T05	*Call
2098<2096		5113<4970	R02 TO T05	*Call
2098<2096		5113<4971	R03 TO T05	*Call
2098<2096		5113<4972	R04 TO T05	*Call
2098<2096		5113<4973	S01 TO T05	*Call
2098<2096		5113<4974	S02 TO T05	*Call
2098<2096		5113<4975	S03 TO T05	*Call
2098<2096		5113<4976	S04 TO T05	*Call
2098<2096		5113<4977	T01 TO T05	*Call
2098<2096		5113<4978	T02 TO T05	*Call
2098<2096		5113<4979	T03 TO T05	*Call
2098<2096		5113<4980	T04 TO T05	*Call
2098<2096		5113<4981	U01 TO T05	*Call
2098<2096		5113<4982	U02 TO T05	*Call
2098<2096		5113<4983	U03 TO T05	*Call
2098<2096		5113<4984	U04 TO T05	*Call
2098<2096		5113<4985	V01 TO T05	*Call
2098<2096		5113<4986	V02 TO T05	*Call
2098<2096		5113<4987	V03 TO T05	*Call
2098<2096		5113<4988	V04 TO T05	*Call
2098<2096		5113<4989	W01 TO T05	*Call
2098<2096		5113<4990	W02 TO T05	*Call
2098<2096		5113<4991	W03 TO T05	*Call
2098<2096		5113<4992	W04 TO T05	*Call
2098<2096		5113<4993	X01 TO T05	*Call
2098<2096		5113<4994	X02 TO T05	*Call
2098<2096		5113<4995	X03 TO T05	*Call
2098<2096		5113<4996	X04 TO T05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5113<4997	Y01 TO T05	*Call
2098<2096		5113<4998	Y02 TO T05	*Call
2098<2096		5113<4999	Y03 TO T05	*Call
2098<2096		5113<5000	Y04 TO T05	*Call
2098<2096		5113<5001	Z01 TO T05	*Call
2098<2096		5113<5002	Z02 TO T05	*Call
2098<2096		5113<5003	Z03 TO T05	*Call
2098<2096		5113<5004	Z04 TO T05	*Call
2098<2096		5114<4900	Z00 TO U01	*Call
2098<2096		5114<4901	A01 TO U01	*Call
2098<2096		5114<4902	A02 TO U01	*Call
2098<2096		5114<4903	A03 TO U01	*Call
2098<2096		5114<4905	B01 TO U01	*Call
2098<2096		5114<4906	B02 TO U01	*Call
2098<2096		5114<4907	B03 TO U01	*Call
2098<2096		5114<4909	C01 TO U01	*Call
2098<2096		5114<4910	C02 TO U01	*Call
2098<2096		5114<4911	C03 TO U01	*Call
2098<2096		5114<4913	D01 TO U01	*Call
2098<2096		5114<4914	D02 TO U01	*Call
2098<2096		5114<4915	D03 TO U01	*Call
2098<2096		5114<4917	E01 TO U01	*Call
2098<2096		5114<4918	E02 TO U01	*Call
2098<2096		5114<4921	F01 TO U01	*Call
2098<2096		5114<4922	F02 TO U01	*Call
2098<2096		5114<4925	G01 TO U01	*Call
2098<2096		5114<4929	H01 TO U01	*Call
2098<2096		5114<4933	I01 TO U01	*Call
2098<2096		5114<4937	J01 TO U01	*Call
2098<2096		5114<4944	K04 TO U01	*Call
2098<2096		5114<4947	L03 TO U01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5114<4948	L04 TO U01	*Call
2098<2096		5114<4951	M03 TO U01	*Call
2098<2096		5114<4952	M04 TO U01	*Call
2098<2096		5114<4954	N02 TO U01	*Call
2098<2096		5114<4955	N03 TO U01	*Call
2098<2096		5114<4956	N04 TO U01	*Call
2098<2096		5114<4958	O02 TO U01	*Call
2098<2096		5114<4959	O03 TO U01	*Call
2098<2096		5114<4960	O04 TO U01	*Call
2098<2096		5114<4962	P02 TO U01	*Call
2098<2096		5114<4963	P03 TO U01	*Call
2098<2096		5114<4964	P04 TO U01	*Call
2098<2096		5114<4966	Q02 TO U01	*Call
2098<2096		5114<4967	Q03 TO U01	*Call
2098<2096		5114<4968	Q04 TO U01	*Call
2098<2096		5114<4969	R01 TO U01	*Call
2098<2096		5114<4970	R02 TO U01	*Call
2098<2096		5114<4971	R03 TO U01	*Call
2098<2096		5114<4972	R04 TO U01	*Call
2098<2096		5114<4973	S01 TO U01	*Call
2098<2096		5114<4974	S02 TO U01	*Call
2098<2096		5114<4975	S03 TO U01	*Call
2098<2096		5114<4976	S04 TO U01	*Call
2098<2096		5114<4977	T01 TO U01	*Call
2098<2096		5114<4978	T02 TO U01	*Call
2098<2096		5114<4979	T03 TO U01	*Call
2098<2096		5114<4980	T04 TO U01	*Call
2098<2096		5114<4981	U01 TO U01	*Call
2098<2096		5114<4982	U02 TO U01	*Call
2098<2096		5114<4983	U03 TO U01	*Call
2098<2096		5114<4984	U04 TO U01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5114<4985	V01 TO U01	*Call
2098<2096		5114<4986	V02 TO U01	*Call
2098<2096		5114<4987	V03 TO U01	*Call
2098<2096		5114<4988	V04 TO U01	*Call
2098<2096		5114<4989	W01 TO U01	*Call
2098<2096		5114<4990	W02 TO U01	*Call
2098<2096		5114<4991	W03 TO U01	*Call
2098<2096		5114<4992	W04 TO U01	*Call
2098<2096		5114<4993	X01 TO U01	*Call
2098<2096		5114<4994	X02 TO U01	*Call
2098<2096		5114<4995	X03 TO U01	*Call
2098<2096		5114<4996	X04 TO U01	*Call
2098<2096		5114<4997	Y01 TO U01	*Call
2098<2096		5114<4998	Y02 TO U01	*Call
2098<2096		5114<4999	Y03 TO U01	*Call
2098<2096		5114<5000	Y04 TO U01	*Call
2098<2096		5114<5001	Z01 TO U01	*Call
2098<2096		5114<5002	Z02 TO U01	*Call
2098<2096		5114<5003	Z03 TO U01	*Call
2098<2096		5114<5004	Z04 TO U01	*Call
2098<2096		5115<4900	Z00 TO U02	*Call
2098<2096		5115<4901	A01 TO U02	*Call
2098<2096		5115<4902	A02 TO U02	*Call
2098<2096		5115<4903	A03 TO U02	*Call
2098<2096		5115<4905	B01 TO U02	*Call
2098<2096		5115<4906	B02 TO U02	*Call
2098<2096		5115<4907	B03 TO U02	*Call
2098<2096		5115<4909	C01 TO U02	*Call
2098<2096		5115<4910	C02 TO U02	*Call
2098<2096		5115<4911	C03 TO U02	*Call
2098<2096		5115<4913	D01 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5115<4914	D02 TO U02	*Call
2098<2096		5115<4915	D03 TO U02	*Call
2098<2096		5115<4917	E01 TO U02	*Call
2098<2096		5115<4918	E02 TO U02	*Call
2098<2096		5115<4921	F01 TO U02	*Call
2098<2096		5115<4922	F02 TO U02	*Call
2098<2096		5115<4925	G01 TO U02	*Call
2098<2096		5115<4929	H01 TO U02	*Call
2098<2096		5115<4933	I01 TO U02	*Call
2098<2096		5115<4937	J01 TO U02	*Call
2098<2096		5115<4944	K04 TO U02	*Call
2098<2096		5115<4947	L03 TO U02	*Call
2098<2096		5115<4948	L04 TO U02	*Call
2098<2096		5115<4951	M03 TO U02	*Call
2098<2096		5115<4952	M04 TO U02	*Call
2098<2096		5115<4954	N02 TO U02	*Call
2098<2096		5115<4955	N03 TO U02	*Call
2098<2096		5115<4956	N04 TO U02	*Call
2098<2096		5115<4958	O02 TO U02	*Call
2098<2096		5115<4959	O03 TO U02	*Call
2098<2096		5115<4960	O04 TO U02	*Call
2098<2096		5115<4962	P02 TO U02	*Call
2098<2096		5115<4963	P03 TO U02	*Call
2098<2096		5115<4964	P04 TO U02	*Call
2098<2096		5115<4966	Q02 TO U02	*Call
2098<2096		5115<4967	Q03 TO U02	*Call
2098<2096		5115<4968	Q04 TO U02	*Call
2098<2096		5115<4969	R01 TO U02	*Call
2098<2096		5115<4970	R02 TO U02	*Call
2098<2096		5115<4971	R03 TO U02	*Call
2098<2096		5115<4972	R04 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5115<4973	S01 TO U02	*Call
2098<2096		5115<4974	S02 TO U02	*Call
2098<2096		5115<4975	S03 TO U02	*Call
2098<2096		5115<4976	S04 TO U02	*Call
2098<2096		5115<4977	T01 TO U02	*Call
2098<2096		5115<4978	T02 TO U02	*Call
2098<2096		5115<4979	T03 TO U02	*Call
2098<2096		5115<4980	T04 TO U02	*Call
2098<2096		5115<4981	U01 TO U02	*Call
2098<2096		5115<4982	U02 TO U02	*Call
2098<2096		5115<4983	U03 TO U02	*Call
2098<2096		5115<4984	U04 TO U02	*Call
2098<2096		5115<4985	V01 TO U02	*Call
2098<2096		5115<4986	V02 TO U02	*Call
2098<2096		5115<4987	V03 TO U02	*Call
2098<2096		5115<4988	V04 TO U02	*Call
2098<2096		5115<4989	W01 TO U02	*Call
2098<2096		5115<4990	W02 TO U02	*Call
2098<2096		5115<4991	W03 TO U02	*Call
2098<2096		5115<4992	W04 TO U02	*Call
2098<2096		5115<4993	X01 TO U02	*Call
2098<2096		5115<4994	X02 TO U02	*Call
2098<2096		5115<4995	X03 TO U02	*Call
2098<2096		5115<4996	X04 TO U02	*Call
2098<2096		5115<4997	Y01 TO U02	*Call
2098<2096		5115<4998	Y02 TO U02	*Call
2098<2096		5115<4999	Y03 TO U02	*Call
2098<2096		5115<5000	Y04 TO U02	*Call
2098<2096		5115<5001	Z01 TO U02	*Call
2098<2096		5115<5002	Z02 TO U02	*Call
2098<2096		5115<5003	Z03 TO U02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5115<5004	Z04 TO U02	*Call
2098<2096		5116<4900	Z00 TO U03	*Call
2098<2096		5116<4901	A01 TO U03	*Call
2098<2096		5116<4902	A02 TO U03	*Call
2098<2096		5116<4903	A03 TO U03	*Call
2098<2096		5116<4905	B01 TO U03	*Call
2098<2096		5116<4906	B02 TO U03	*Call
2098<2096		5116<4907	B03 TO U03	*Call
2098<2096		5116<4909	C01 TO U03	*Call
2098<2096		5116<4910	C02 TO U03	*Call
2098<2096		5116<4911	C03 TO U03	*Call
2098<2096		5116<4913	D01 TO U03	*Call
2098<2096		5116<4914	D02 TO U03	*Call
2098<2096		5116<4915	D03 TO U03	*Call
2098<2096		5116<4917	E01 TO U03	*Call
2098<2096		5116<4918	E02 TO U03	*Call
2098<2096		5116<4921	F01 TO U03	*Call
2098<2096		5116<4922	F02 TO U03	*Call
2098<2096		5116<4925	G01 TO U03	*Call
2098<2096		5116<4929	H01 TO U03	*Call
2098<2096		5116<4933	I01 TO U03	*Call
2098<2096		5116<4937	J01 TO U03	*Call
2098<2096		5116<4944	K04 TO U03	*Call
2098<2096		5116<4947	L03 TO U03	*Call
2098<2096		5116<4948	L04 TO U03	*Call
2098<2096		5116<4951	M03 TO U03	*Call
2098<2096		5116<4952	M04 TO U03	*Call
2098<2096		5116<4954	N02 TO U03	*Call
2098<2096		5116<4955	N03 TO U03	*Call
2098<2096		5116<4956	N04 TO U03	*Call
2098<2096		5116<4958	O02 TO U03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5116<4959	O03 TO U03	*Call
2098<2096		5116<4960	O04 TO U03	*Call
2098<2096		5116<4962	P02 TO U03	*Call
2098<2096		5116<4963	P03 TO U03	*Call
2098<2096		5116<4964	P04 TO U03	*Call
2098<2096		5116<4966	Q02 TO U03	*Call
2098<2096		5116<4967	Q03 TO U03	*Call
2098<2096		5116<4968	Q04 TO U03	*Call
2098<2096		5116<4969	R01 TO U03	*Call
2098<2096		5116<4970	R02 TO U03	*Call
2098<2096		5116<4971	R03 TO U03	*Call
2098<2096		5116<4972	R04 TO U03	*Call
2098<2096		5116<4973	S01 TO U03	*Call
2098<2096		5116<4974	S02 TO U03	*Call
2098<2096		5116<4975	S03 TO U03	*Call
2098<2096		5116<4976	S04 TO U03	*Call
2098<2096		5116<4977	T01 TO U03	*Call
2098<2096		5116<4978	T02 TO U03	*Call
2098<2096		5116<4979	T03 TO U03	*Call
2098<2096		5116<4980	T04 TO U03	*Call
2098<2096		5116<4981	U01 TO U03	*Call
2098<2096		5116<4982	U02 TO U03	*Call
2098<2096		5116<4983	U03 TO U03	*Call
2098<2096		5116<4984	U04 TO U03	*Call
2098<2096		5116<4985	V01 TO U03	*Call
2098<2096		5116<4986	V02 TO U03	*Call
2098<2096		5116<4987	V03 TO U03	*Call
2098<2096		5116<4988	V04 TO U03	*Call
2098<2096		5116<4989	W01 TO U03	*Call
2098<2096		5116<4990	W02 TO U03	*Call
2098<2096		5116<4991	W03 TO U03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5116<4992	W04 TO U03	*Call
2098<2096		5116<4993	X01 TO U03	*Call
2098<2096		5116<4994	X02 TO U03	*Call
2098<2096		5116<4995	X03 TO U03	*Call
2098<2096		5116<4996	X04 TO U03	*Call
2098<2096		5116<4997	Y01 TO U03	*Call
2098<2096		5116<4998	Y02 TO U03	*Call
2098<2096		5116<4999	Y03 TO U03	*Call
2098<2096		5116<5000	Y04 TO U03	*Call
2098<2096		5116<5001	Z01 TO U03	*Call
2098<2096		5116<5002	Z02 TO U03	*Call
2098<2096		5116<5003	Z03 TO U03	*Call
2098<2096		5116<5004	Z04 TO U03	*Call
2098<2096		5117<4900	Z00 TO U04	*Call
2098<2096		5117<4901	A01 TO U04	*Call
2098<2096		5117<4902	A02 TO U04	*Call
2098<2096		5117<4903	A03 TO U04	*Call
2098<2096		5117<4905	B01 TO U04	*Call
2098<2096		5117<4906	B02 TO U04	*Call
2098<2096		5117<4907	B03 TO U04	*Call
2098<2096		5117<4909	C01 TO U04	*Call
2098<2096		5117<4910	C02 TO U04	*Call
2098<2096		5117<4911	C03 TO U04	*Call
2098<2096		5117<4913	D01 TO U04	*Call
2098<2096		5117<4914	D02 TO U04	*Call
2098<2096		5117<4915	D03 TO U04	*Call
2098<2096		5117<4917	E01 TO U04	*Call
2098<2096		5117<4918	E02 TO U04	*Call
2098<2096		5117<4921	F01 TO U04	*Call
2098<2096		5117<4922	F02 TO U04	*Call
2098<2096		5117<4925	G01 TO U04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5117<4929	H01 TO U04	*Call
2098<2096		5117<4933	I01 TO U04	*Call
2098<2096		5117<4937	J01 TO U04	*Call
2098<2096		5117<4944	K04 TO U04	*Call
2098<2096		5117<4947	L03 TO U04	*Call
2098<2096		5117<4948	L04 TO U04	*Call
2098<2096		5117<4951	M03 TO U04	*Call
2098<2096		5117<4952	M04 TO U04	*Call
2098<2096		5117<4954	N02 TO U04	*Call
2098<2096		5117<4955	N03 TO U04	*Call
2098<2096		5117<4956	N04 TO U04	*Call
2098<2096		5117<4958	O02 TO U04	*Call
2098<2096		5117<4959	O03 TO U04	*Call
2098<2096		5117<4960	O04 TO U04	*Call
2098<2096		5117<4962	P02 TO U04	*Call
2098<2096		5117<4963	P03 TO U04	*Call
2098<2096		5117<4964	P04 TO U04	*Call
2098<2096		5117<4966	Q02 TO U04	*Call
2098<2096		5117<4967	Q03 TO U04	*Call
2098<2096		5117<4968	Q04 TO U04	*Call
2098<2096		5117<4969	R01 TO U04	*Call
2098<2096		5117<4970	R02 TO U04	*Call
2098<2096		5117<4971	R03 TO U04	*Call
2098<2096		5117<4972	R04 TO U04	*Call
2098<2096		5117<4973	S01 TO U04	*Call
2098<2096		5117<4974	S02 TO U04	*Call
2098<2096		5117<4975	S03 TO U04	*Call
2098<2096		5117<4976	S04 TO U04	*Call
2098<2096		5117<4977	T01 TO U04	*Call
2098<2096		5117<4978	T02 TO U04	*Call
2098<2096		5117<4979	T03 TO U04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5117<4980	T04 TO U04	*Call
2098<2096		5117<4981	U01 TO U04	*Call
2098<2096		5117<4982	U02 TO U04	*Call
2098<2096		5117<4983	U03 TO U04	*Call
2098<2096		5117<4984	U04 TO U04	*Call
2098<2096		5117<4985	V01 TO U04	*Call
2098<2096		5117<4986	V02 TO U04	*Call
2098<2096		5117<4987	V03 TO U04	*Call
2098<2096		5117<4988	V04 TO U04	*Call
2098<2096		5117<4989	W01 TO U04	*Call
2098<2096		5117<4990	W02 TO U04	*Call
2098<2096		5117<4991	W03 TO U04	*Call
2098<2096		5117<4992	W04 TO U04	*Call
2098<2096		5117<4993	X01 TO U04	*Call
2098<2096		5117<4994	X02 TO U04	*Call
2098<2096		5117<4995	X03 TO U04	*Call
2098<2096		5117<4996	X04 TO U04	*Call
2098<2096		5117<4997	Y01 TO U04	*Call
2098<2096		5117<4998	Y02 TO U04	*Call
2098<2096		5117<4999	Y03 TO U04	*Call
2098<2096		5117<5000	Y04 TO U04	*Call
2098<2096		5117<5001	Z01 TO U04	*Call
2098<2096		5117<5002	Z02 TO U04	*Call
2098<2096		5117<5003	Z03 TO U04	*Call
2098<2096		5117<5004	Z04 TO U04	*Call
2098<2096		5118<4900	Z00 TO U05	*Call
2098<2096		5118<4901	A01 TO U05	*Call
2098<2096		5118<4902	A02 TO U05	*Call
2098<2096		5118<4903	A03 TO U05	*Call
2098<2096		5118<4905	B01 TO U05	*Call
2098<2096		5118<4906	B02 TO U05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5118<4907	B03 TO U05	*Call
2098<2096		5118<4909	C01 TO U05	*Call
2098<2096		5118<4910	C02 TO U05	*Call
2098<2096		5118<4911	C03 TO U05	*Call
2098<2096		5118<4913	D01 TO U05	*Call
2098<2096		5118<4914	D02 TO U05	*Call
2098<2096		5118<4915	D03 TO U05	*Call
2098<2096		5118<4917	E01 TO U05	*Call
2098<2096		5118<4918	E02 TO U05	*Call
2098<2096		5118<4921	F01 TO U05	*Call
2098<2096		5118<4922	F02 TO U05	*Call
2098<2096		5118<4925	G01 TO U05	*Call
2098<2096		5118<4929	H01 TO U05	*Call
2098<2096		5118<4933	I01 TO U05	*Call
2098<2096		5118<4937	J01 TO U05	*Call
2098<2096		5118<4944	K04 TO U05	*Call
2098<2096		5118<4947	L03 TO U05	*Call
2098<2096		5118<4948	L04 TO U05	*Call
2098<2096		5118<4951	M03 TO U05	*Call
2098<2096		5118<4952	M04 TO U05	*Call
2098<2096		5118<4954	N02 TO U05	*Call
2098<2096		5118<4955	N03 TO U05	*Call
2098<2096		5118<4956	N04 TO U05	*Call
2098<2096		5118<4958	O02 TO U05	*Call
2098<2096		5118<4959	O03 TO U05	*Call
2098<2096		5118<4960	O04 TO U05	*Call
2098<2096		5118<4962	P02 TO U05	*Call
2098<2096		5118<4963	P03 TO U05	*Call
2098<2096		5118<4964	P04 TO U05	*Call
2098<2096		5118<4966	Q02 TO U05	*Call
2098<2096		5118<4967	Q03 TO U05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5118<4968	Q04 TO U05	*Call
2098<2096		5118<4969	R01 TO U05	*Call
2098<2096		5118<4970	R02 TO U05	*Call
2098<2096		5118<4971	R03 TO U05	*Call
2098<2096		5118<4972	R04 TO U05	*Call
2098<2096		5118<4973	S01 TO U05	*Call
2098<2096		5118<4974	S02 TO U05	*Call
2098<2096		5118<4975	S03 TO U05	*Call
2098<2096		5118<4976	S04 TO U05	*Call
2098<2096		5118<4977	T01 TO U05	*Call
2098<2096		5118<4978	T02 TO U05	*Call
2098<2096		5118<4979	T03 TO U05	*Call
2098<2096		5118<4980	T04 TO U05	*Call
2098<2096		5118<4981	U01 TO U05	*Call
2098<2096		5118<4982	U02 TO U05	*Call
2098<2096		5118<4983	U03 TO U05	*Call
2098<2096		5118<4984	U04 TO U05	*Call
2098<2096		5118<4985	V01 TO U05	*Call
2098<2096		5118<4986	V02 TO U05	*Call
2098<2096		5118<4987	V03 TO U05	*Call
2098<2096		5118<4988	V04 TO U05	*Call
2098<2096		5118<4989	W01 TO U05	*Call
2098<2096		5118<4990	W02 TO U05	*Call
2098<2096		5118<4991	W03 TO U05	*Call
2098<2096		5118<4992	W04 TO U05	*Call
2098<2096		5118<4993	X01 TO U05	*Call
2098<2096		5118<4994	X02 TO U05	*Call
2098<2096		5118<4995	X03 TO U05	*Call
2098<2096		5118<4996	X04 TO U05	*Call
2098<2096		5118<4997	Y01 TO U05	*Call
2098<2096		5118<4998	Y02 TO U05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5118<4999	Y03 TO U05	*Call
2098<2096		5118<5000	Y04 TO U05	*Call
2098<2096		5118<5001	Z01 TO U05	*Call
2098<2096		5118<5002	Z02 TO U05	*Call
2098<2096		5118<5003	Z03 TO U05	*Call
2098<2096		5118<5004	Z04 TO U05	*Call
2098<2096		5119<4900	Z00 TO V01	*Call
2098<2096		5119<4901	A01 TO V01	*Call
2098<2096		5119<4902	A02 TO V01	*Call
2098<2096		5119<4903	A03 TO V01	*Call
2098<2096		5119<4905	B01 TO V01	*Call
2098<2096		5119<4906	B02 TO V01	*Call
2098<2096		5119<4907	B03 TO V01	*Call
2098<2096		5119<4909	C01 TO V01	*Call
2098<2096		5119<4910	C02 TO V01	*Call
2098<2096		5119<4911	C03 TO V01	*Call
2098<2096		5119<4913	D01 TO V01	*Call
2098<2096		5119<4914	D02 TO V01	*Call
2098<2096		5119<4915	D03 TO V01	*Call
2098<2096		5119<4917	E01 TO V01	*Call
2098<2096		5119<4918	E02 TO V01	*Call
2098<2096		5119<4921	F01 TO V01	*Call
2098<2096		5119<4922	F02 TO V01	*Call
2098<2096		5119<4925	G01 TO V01	*Call
2098<2096		5119<4929	H01 TO V01	*Call
2098<2096		5119<4933	I01 TO V01	*Call
2098<2096		5119<4937	J01 TO V01	*Call
2098<2096		5119<4944	K04 TO V01	*Call
2098<2096		5119<4947	L03 TO V01	*Call
2098<2096		5119<4948	L04 TO V01	*Call
2098<2096		5119<4951	M03 TO V01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5119<4952	M04 TO V01	*Call
2098<2096		5119<4954	N02 TO V01	*Call
2098<2096		5119<4955	N03 TO V01	*Call
2098<2096		5119<4956	N04 TO V01	*Call
2098<2096		5119<4958	O02 TO V01	*Call
2098<2096		5119<4959	O03 TO V01	*Call
2098<2096		5119<4960	O04 TO V01	*Call
2098<2096		5119<4962	P02 TO V01	*Call
2098<2096		5119<4963	P03 TO V01	*Call
2098<2096		5119<4964	P04 TO V01	*Call
2098<2096		5119<4966	Q02 TO V01	*Call
2098<2096		5119<4967	Q03 TO V01	*Call
2098<2096		5119<4968	Q04 TO V01	*Call
2098<2096		5119<4969	R01 TO V01	*Call
2098<2096		5119<4970	R02 TO V01	*Call
2098<2096		5119<4971	R03 TO V01	*Call
2098<2096		5119<4972	R04 TO V01	*Call
2098<2096		5119<4973	S01 TO V01	*Call
2098<2096		5119<4974	S02 TO V01	*Call
2098<2096		5119<4975	S03 TO V01	*Call
2098<2096		5119<4976	S04 TO V01	*Call
2098<2096		5119<4977	T01 TO V01	*Call
2098<2096		5119<4978	T02 TO V01	*Call
2098<2096		5119<4979	T03 TO V01	*Call
2098<2096		5119<4980	T04 TO V01	*Call
2098<2096		5119<4981	U01 TO V01	*Call
2098<2096		5119<4982	U02 TO V01	*Call
2098<2096		5119<4983	U03 TO V01	*Call
2098<2096		5119<4984	U04 TO V01	*Call
2098<2096		5119<4985	V01 TO V01	*Call
2098<2096		5119<4986	V02 TO V01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5119<4987	V03 TO V01	*Call
2098<2096		5119<4988	V04 TO V01	*Call
2098<2096		5119<4989	W01 TO V01	*Call
2098<2096		5119<4990	W02 TO V01	*Call
2098<2096		5119<4991	W03 TO V01	*Call
2098<2096		5119<4992	W04 TO V01	*Call
2098<2096		5119<4993	X01 TO V01	*Call
2098<2096		5119<4994	X02 TO V01	*Call
2098<2096		5119<4995	X03 TO V01	*Call
2098<2096		5119<4996	X04 TO V01	*Call
2098<2096		5119<4997	Y01 TO V01	*Call
2098<2096		5119<4998	Y02 TO V01	*Call
2098<2096		5119<4999	Y03 TO V01	*Call
2098<2096		5119<5000	Y04 TO V01	*Call
2098<2096		5119<5001	Z01 TO V01	*Call
2098<2096		5119<5002	Z02 TO V01	*Call
2098<2096		5119<5003	Z03 TO V01	*Call
2098<2096		5119<5004	Z04 TO V01	*Call
2098<2096		5120<4900	Z00 TO V02	*Call
2098<2096		5120<4901	A01 TO V02	*Call
2098<2096		5120<4902	A02 TO V02	*Call
2098<2096		5120<4903	A03 TO V02	*Call
2098<2096		5120<4905	B01 TO V02	*Call
2098<2096		5120<4906	B02 TO V02	*Call
2098<2096		5120<4907	B03 TO V02	*Call
2098<2096		5120<4909	C01 TO V02	*Call
2098<2096		5120<4910	C02 TO V02	*Call
2098<2096		5120<4911	C03 TO V02	*Call
2098<2096		5120<4913	D01 TO V02	*Call
2098<2096		5120<4914	D02 TO V02	*Call
2098<2096		5120<4915	D03 TO V02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5120<4917	E01 TO V02	*Call
2098<2096		5120<4918	E02 TO V02	*Call
2098<2096		5120<4921	F01 TO V02	*Call
2098<2096		5120<4922	F02 TO V02	*Call
2098<2096		5120<4925	G01 TO V02	*Call
2098<2096		5120<4929	H01 TO V02	*Call
2098<2096		5120<4933	I01 TO V02	*Call
2098<2096		5120<4937	J01 TO V02	*Call
2098<2096		5120<4944	K04 TO V02	*Call
2098<2096		5120<4947	L03 TO V02	*Call
2098<2096		5120<4948	L04 TO V02	*Call
2098<2096		5120<4951	M03 TO V02	*Call
2098<2096		5120<4952	M04 TO V02	*Call
2098<2096		5120<4954	N02 TO V02	*Call
2098<2096		5120<4955	N03 TO V02	*Call
2098<2096		5120<4956	N04 TO V02	*Call
2098<2096		5120<4958	O02 TO V02	*Call
2098<2096		5120<4959	O03 TO V02	*Call
2098<2096		5120<4960	O04 TO V02	*Call
2098<2096		5120<4962	P02 TO V02	*Call
2098<2096		5120<4963	P03 TO V02	*Call
2098<2096		5120<4964	P04 TO V02	*Call
2098<2096		5120<4966	Q02 TO V02	*Call
2098<2096		5120<4967	Q03 TO V02	*Call
2098<2096		5120<4968	Q04 TO V02	*Call
2098<2096		5120<4969	R01 TO V02	*Call
2098<2096		5120<4970	R02 TO V02	*Call
2098<2096		5120<4971	R03 TO V02	*Call
2098<2096		5120<4972	R04 TO V02	*Call
2098<2096		5120<4973	S01 TO V02	*Call
2098<2096		5120<4974	S02 TO V02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5120<4975	S03 TO V02	*Call
2098<2096		5120<4976	S04 TO V02	*Call
2098<2096		5120<4977	T01 TO V02	*Call
2098<2096		5120<4978	T02 TO V02	*Call
2098<2096		5120<4979	T03 TO V02	*Call
2098<2096		5120<4980	T04 TO V02	*Call
2098<2096		5120<4981	U01 TO V02	*Call
2098<2096		5120<4982	U02 TO V02	*Call
2098<2096		5120<4983	U03 TO V02	*Call
2098<2096		5120<4984	U04 TO V02	*Call
2098<2096		5120<4985	V01 TO V02	*Call
2098<2096		5120<4986	V02 TO V02	*Call
2098<2096		5120<4987	V03 TO V02	*Call
2098<2096		5120<4988	V04 TO V02	*Call
2098<2096		5120<4989	W01 TO V02	*Call
2098<2096		5120<4990	W02 TO V02	*Call
2098<2096		5120<4991	W03 TO V02	*Call
2098<2096		5120<4992	W04 TO V02	*Call
2098<2096		5120<4993	X01 TO V02	*Call
2098<2096		5120<4994	X02 TO V02	*Call
2098<2096		5120<4995	X03 TO V02	*Call
2098<2096		5120<4996	X04 TO V02	*Call
2098<2096		5120<4997	Y01 TO V02	*Call
2098<2096		5120<4998	Y02 TO V02	*Call
2098<2096		5120<4999	Y03 TO V02	*Call
2098<2096		5120<5000	Y04 TO V02	*Call
2098<2096		5120<5001	Z01 TO V02	*Call
2098<2096		5120<5002	Z02 TO V02	*Call
2098<2096		5120<5003	Z03 TO V02	*Call
2098<2096		5120<5004	Z04 TO V02	*Call
2098<2096		5121<4900	Z00 TO V03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5121<4901	A01 TO V03	*Call
2098<2096		5121<4902	A02 TO V03	*Call
2098<2096		5121<4903	A03 TO V03	*Call
2098<2096		5121<4905	B01 TO V03	*Call
2098<2096		5121<4906	B02 TO V03	*Call
2098<2096		5121<4907	B03 TO V03	*Call
2098<2096		5121<4909	C01 TO V03	*Call
2098<2096		5121<4910	C02 TO V03	*Call
2098<2096		5121<4911	C03 TO V03	*Call
2098<2096		5121<4913	D01 TO V03	*Call
2098<2096		5121<4914	D02 TO V03	*Call
2098<2096		5121<4915	D03 TO V03	*Call
2098<2096		5121<4917	E01 TO V03	*Call
2098<2096		5121<4918	E02 TO V03	*Call
2098<2096		5121<4921	F01 TO V03	*Call
2098<2096		5121<4922	F02 TO V03	*Call
2098<2096		5121<4925	G01 TO V03	*Call
2098<2096		5121<4929	H01 TO V03	*Call
2098<2096		5121<4933	I01 TO V03	*Call
2098<2096		5121<4937	J01 TO V03	*Call
2098<2096		5121<4944	K04 TO V03	*Call
2098<2096		5121<4947	L03 TO V03	*Call
2098<2096		5121<4948	L04 TO V03	*Call
2098<2096		5121<4951	M03 TO V03	*Call
2098<2096		5121<4952	M04 TO V03	*Call
2098<2096		5121<4954	N02 TO V03	*Call
2098<2096		5121<4955	N03 TO V03	*Call
2098<2096		5121<4956	N04 TO V03	*Call
2098<2096		5121<4958	O02 TO V03	*Call
2098<2096		5121<4959	O03 TO V03	*Call
2098<2096		5121<4960	O04 TO V03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5121<4962	P02 TO V03	*Call
2098<2096		5121<4963	P03 TO V03	*Call
2098<2096		5121<4964	P04 TO V03	*Call
2098<2096		5121<4966	Q02 TO V03	*Call
2098<2096		5121<4967	Q03 TO V03	*Call
2098<2096		5121<4968	Q04 TO V03	*Call
2098<2096		5121<4969	R01 TO V03	*Call
2098<2096		5121<4970	R02 TO V03	*Call
2098<2096		5121<4971	R03 TO V03	*Call
2098<2096		5121<4972	R04 TO V03	*Call
2098<2096		5121<4973	S01 TO V03	*Call
2098<2096		5121<4974	S02 TO V03	*Call
2098<2096		5121<4975	S03 TO V03	*Call
2098<2096		5121<4976	S04 TO V03	*Call
2098<2096		5121<4977	T01 TO V03	*Call
2098<2096		5121<4978	T02 TO V03	*Call
2098<2096		5121<4979	T03 TO V03	*Call
2098<2096		5121<4980	T04 TO V03	*Call
2098<2096		5121<4981	U01 TO V03	*Call
2098<2096		5121<4982	U02 TO V03	*Call
2098<2096		5121<4983	U03 TO V03	*Call
2098<2096		5121<4984	U04 TO V03	*Call
2098<2096		5121<4985	V01 TO V03	*Call
2098<2096		5121<4986	V02 TO V03	*Call
2098<2096		5121<4987	V03 TO V03	*Call
2098<2096		5121<4988	V04 TO V03	*Call
2098<2096		5121<4989	W01 TO V03	*Call
2098<2096		5121<4990	W02 TO V03	*Call
2098<2096		5121<4991	W03 TO V03	*Call
2098<2096		5121<4992	W04 TO V03	*Call
2098<2096		5121<4993	X01 TO V03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5121<4994	X02 TO V03	*Call
2098<2096		5121<4995	X03 TO V03	*Call
2098<2096		5121<4996	X04 TO V03	*Call
2098<2096		5121<4997	Y01 TO V03	*Call
2098<2096		5121<4998	Y02 TO V03	*Call
2098<2096		5121<4999	Y03 TO V03	*Call
2098<2096		5121<5000	Y04 TO V03	*Call
2098<2096		5121<5001	Z01 TO V03	*Call
2098<2096		5121<5002	Z02 TO V03	*Call
2098<2096		5121<5003	Z03 TO V03	*Call
2098<2096		5121<5004	Z04 TO V03	*Call
2098<2096		5122<4900	Z00 TO V04	*Call
2098<2096		5122<4901	A01 TO V04	*Call
2098<2096		5122<4902	A02 TO V04	*Call
2098<2096		5122<4903	A03 TO V04	*Call
2098<2096		5122<4905	B01 TO V04	*Call
2098<2096		5122<4906	B02 TO V04	*Call
2098<2096		5122<4907	B03 TO V04	*Call
2098<2096		5122<4909	C01 TO V04	*Call
2098<2096		5122<4910	C02 TO V04	*Call
2098<2096		5122<4911	C03 TO V04	*Call
2098<2096		5122<4913	D01 TO V04	*Call
2098<2096		5122<4914	D02 TO V04	*Call
2098<2096		5122<4915	D03 TO V04	*Call
2098<2096		5122<4917	E01 TO V04	*Call
2098<2096		5122<4918	E02 TO V04	*Call
2098<2096		5122<4921	F01 TO V04	*Call
2098<2096		5122<4922	F02 TO V04	*Call
2098<2096		5122<4925	G01 TO V04	*Call
2098<2096		5122<4929	H01 TO V04	*Call
2098<2096		5122<4933	I01 TO V04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5122<4937	J01 TO V04	*Call
2098<2096		5122<4944	K04 TO V04	*Call
2098<2096		5122<4947	L03 TO V04	*Call
2098<2096		5122<4948	L04 TO V04	*Call
2098<2096		5122<4951	M03 TO V04	*Call
2098<2096		5122<4952	M04 TO V04	*Call
2098<2096		5122<4954	N02 TO V04	*Call
2098<2096		5122<4955	N03 TO V04	*Call
2098<2096		5122<4956	N04 TO V04	*Call
2098<2096		5122<4958	O02 TO V04	*Call
2098<2096		5122<4959	O03 TO V04	*Call
2098<2096		5122<4960	O04 TO V04	*Call
2098<2096		5122<4962	P02 TO V04	*Call
2098<2096		5122<4963	P03 TO V04	*Call
2098<2096		5122<4964	P04 TO V04	*Call
2098<2096		5122<4966	Q02 TO V04	*Call
2098<2096		5122<4967	Q03 TO V04	*Call
2098<2096		5122<4968	Q04 TO V04	*Call
2098<2096		5122<4969	R01 TO V04	*Call
2098<2096		5122<4970	R02 TO V04	*Call
2098<2096		5122<4971	R03 TO V04	*Call
2098<2096		5122<4972	R04 TO V04	*Call
2098<2096		5122<4973	S01 TO V04	*Call
2098<2096		5122<4974	S02 TO V04	*Call
2098<2096		5122<4975	S03 TO V04	*Call
2098<2096		5122<4976	S04 TO V04	*Call
2098<2096		5122<4977	T01 TO V04	*Call
2098<2096		5122<4978	T02 TO V04	*Call
2098<2096		5122<4979	T03 TO V04	*Call
2098<2096		5122<4980	T04 TO V04	*Call
2098<2096		5122<4981	U01 TO V04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5122<4982	U02 TO V04	*Call
2098<2096		5122<4983	U03 TO V04	*Call
2098<2096		5122<4984	U04 TO V04	*Call
2098<2096		5122<4985	V01 TO V04	*Call
2098<2096		5122<4986	V02 TO V04	*Call
2098<2096		5122<4987	V03 TO V04	*Call
2098<2096		5122<4988	V04 TO V04	*Call
2098<2096		5122<4989	W01 TO V04	*Call
2098<2096		5122<4990	W02 TO V04	*Call
2098<2096		5122<4991	W03 TO V04	*Call
2098<2096		5122<4992	W04 TO V04	*Call
2098<2096		5122<4993	X01 TO V04	*Call
2098<2096		5122<4994	X02 TO V04	*Call
2098<2096		5122<4995	X03 TO V04	*Call
2098<2096		5122<4996	X04 TO V04	*Call
2098<2096		5122<4997	Y01 TO V04	*Call
2098<2096		5122<4998	Y02 TO V04	*Call
2098<2096		5122<4999	Y03 TO V04	*Call
2098<2096		5122<5000	Y04 TO V04	*Call
2098<2096		5122<5001	Z01 TO V04	*Call
2098<2096		5122<5002	Z02 TO V04	*Call
2098<2096		5122<5003	Z03 TO V04	*Call
2098<2096		5122<5004	Z04 TO V04	*Call
2098<2096		5123<4900	Z00 TO V05	*Call
2098<2096		5123<4901	A01 TO V05	*Call
2098<2096		5123<4902	A02 TO V05	*Call
2098<2096		5123<4903	A03 TO V05	*Call
2098<2096		5123<4905	B01 TO V05	*Call
2098<2096		5123<4906	B02 TO V05	*Call
2098<2096		5123<4907	B03 TO V05	*Call
2098<2096		5123<4909	C01 TO V05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5123<4910	C02 TO V05	*Call
2098<2096		5123<4911	C03 TO V05	*Call
2098<2096		5123<4913	D01 TO V05	*Call
2098<2096		5123<4914	D02 TO V05	*Call
2098<2096		5123<4915	D03 TO V05	*Call
2098<2096		5123<4917	E01 TO V05	*Call
2098<2096		5123<4918	E02 TO V05	*Call
2098<2096		5123<4921	F01 TO V05	*Call
2098<2096		5123<4922	F02 TO V05	*Call
2098<2096		5123<4925	G01 TO V05	*Call
2098<2096		5123<4929	H01 TO V05	*Call
2098<2096		5123<4933	I01 TO V05	*Call
2098<2096		5123<4937	J01 TO V05	*Call
2098<2096		5123<4944	K04 TO V05	*Call
2098<2096		5123<4947	L03 TO V05	*Call
2098<2096		5123<4948	L04 TO V05	*Call
2098<2096		5123<4951	M03 TO V05	*Call
2098<2096		5123<4952	M04 TO V05	*Call
2098<2096		5123<4954	N02 TO V05	*Call
2098<2096		5123<4955	N03 TO V05	*Call
2098<2096		5123<4956	N04 TO V05	*Call
2098<2096		5123<4958	O02 TO V05	*Call
2098<2096		5123<4959	O03 TO V05	*Call
2098<2096		5123<4960	O04 TO V05	*Call
2098<2096		5123<4962	P02 TO V05	*Call
2098<2096		5123<4963	P03 TO V05	*Call
2098<2096		5123<4964	P04 TO V05	*Call
2098<2096		5123<4966	Q02 TO V05	*Call
2098<2096		5123<4967	Q03 TO V05	*Call
2098<2096		5123<4968	Q04 TO V05	*Call
2098<2096		5123<4969	R01 TO V05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5123<4970	R02 TO V05	*Call
2098<2096		5123<4971	R03 TO V05	*Call
2098<2096		5123<4972	R04 TO V05	*Call
2098<2096		5123<4973	S01 TO V05	*Call
2098<2096		5123<4974	S02 TO V05	*Call
2098<2096		5123<4975	S03 TO V05	*Call
2098<2096		5123<4976	S04 TO V05	*Call
2098<2096		5123<4977	T01 TO V05	*Call
2098<2096		5123<4978	T02 TO V05	*Call
2098<2096		5123<4979	T03 TO V05	*Call
2098<2096		5123<4980	T04 TO V05	*Call
2098<2096		5123<4981	U01 TO V05	*Call
2098<2096		5123<4982	U02 TO V05	*Call
2098<2096		5123<4983	U03 TO V05	*Call
2098<2096		5123<4984	U04 TO V05	*Call
2098<2096		5123<4985	V01 TO V05	*Call
2098<2096		5123<4986	V02 TO V05	*Call
2098<2096		5123<4987	V03 TO V05	*Call
2098<2096		5123<4988	V04 TO V05	*Call
2098<2096		5123<4989	W01 TO V05	*Call
2098<2096		5123<4990	W02 TO V05	*Call
2098<2096		5123<4991	W03 TO V05	*Call
2098<2096		5123<4992	W04 TO V05	*Call
2098<2096		5123<4993	X01 TO V05	*Call
2098<2096		5123<4994	X02 TO V05	*Call
2098<2096		5123<4995	X03 TO V05	*Call
2098<2096		5123<4996	X04 TO V05	*Call
2098<2096		5123<4997	Y01 TO V05	*Call
2098<2096		5123<4998	Y02 TO V05	*Call
2098<2096		5123<4999	Y03 TO V05	*Call
2098<2096		5123<5000	Y04 TO V05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5123<5001	Z01 TO V05	*Call
2098<2096		5123<5002	Z02 TO V05	*Call
2098<2096		5123<5003	Z03 TO V05	*Call
2098<2096		5123<5004	Z04 TO V05	*Call
2098<2096		5124<4900	Z00 TO W01	*Call
2098<2096		5124<4901	A01 TO W01	*Call
2098<2096		5124<4902	A02 TO W01	*Call
2098<2096		5124<4903	A03 TO W01	*Call
2098<2096		5124<4905	B01 TO W01	*Call
2098<2096		5124<4906	B02 TO W01	*Call
2098<2096		5124<4907	B03 TO W01	*Call
2098<2096		5124<4909	C01 TO W01	*Call
2098<2096		5124<4910	C02 TO W01	*Call
2098<2096		5124<4911	C03 TO W01	*Call
2098<2096		5124<4913	D01 TO W01	*Call
2098<2096		5124<4914	D02 TO W01	*Call
2098<2096		5124<4915	D03 TO W01	*Call
2098<2096		5124<4917	E01 TO W01	*Call
2098<2096		5124<4918	E02 TO W01	*Call
2098<2096		5124<4921	F01 TO W01	*Call
2098<2096		5124<4922	F02 TO W01	*Call
2098<2096		5124<4925	G01 TO W01	*Call
2098<2096		5124<4929	H01 TO W01	*Call
2098<2096		5124<4933	I01 TO W01	*Call
2098<2096		5124<4937	J01 TO W01	*Call
2098<2096		5124<4944	K04 TO W01	*Call
2098<2096		5124<4947	L03 TO W01	*Call
2098<2096		5124<4948	L04 TO W01	*Call
2098<2096		5124<4951	M03 TO W01	*Call
2098<2096		5124<4952	M04 TO W01	*Call
2098<2096		5124<4954	N02 TO W01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5124<4955	N03 TO W01	*Call
2098<2096		5124<4956	N04 TO W01	*Call
2098<2096		5124<4958	O02 TO W01	*Call
2098<2096		5124<4959	O03 TO W01	*Call
2098<2096		5124<4960	O04 TO W01	*Call
2098<2096		5124<4962	P02 TO W01	*Call
2098<2096		5124<4963	P03 TO W01	*Call
2098<2096		5124<4964	P04 TO W01	*Call
2098<2096		5124<4966	Q02 TO W01	*Call
2098<2096		5124<4967	Q03 TO W01	*Call
2098<2096		5124<4968	Q04 TO W01	*Call
2098<2096		5124<4969	R01 TO W01	*Call
2098<2096		5124<4970	R02 TO W01	*Call
2098<2096		5124<4971	R03 TO W01	*Call
2098<2096		5124<4972	R04 TO W01	*Call
2098<2096		5124<4973	S01 TO W01	*Call
2098<2096		5124<4974	S02 TO W01	*Call
2098<2096		5124<4975	S03 TO W01	*Call
2098<2096		5124<4976	S04 TO W01	*Call
2098<2096		5124<4977	T01 TO W01	*Call
2098<2096		5124<4978	T02 TO W01	*Call
2098<2096		5124<4979	T03 TO W01	*Call
2098<2096		5124<4980	T04 TO W01	*Call
2098<2096		5124<4981	U01 TO W01	*Call
2098<2096		5124<4982	U02 TO W01	*Call
2098<2096		5124<4983	U03 TO W01	*Call
2098<2096		5124<4984	U04 TO W01	*Call
2098<2096		5124<4985	V01 TO W01	*Call
2098<2096		5124<4986	V02 TO W01	*Call
2098<2096		5124<4987	V03 TO W01	*Call
2098<2096		5124<4988	V04 TO W01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5124<4989	W01 TO W01	*Call
2098<2096		5124<4990	W02 TO W01	*Call
2098<2096		5124<4991	W03 TO W01	*Call
2098<2096		5124<4992	W04 TO W01	*Call
2098<2096		5124<4993	X01 TO W01	*Call
2098<2096		5124<4994	X02 TO W01	*Call
2098<2096		5124<4995	X03 TO W01	*Call
2098<2096		5124<4996	X04 TO W01	*Call
2098<2096		5124<4997	Y01 TO W01	*Call
2098<2096		5124<4998	Y02 TO W01	*Call
2098<2096		5124<4999	Y03 TO W01	*Call
2098<2096		5124<5000	Y04 TO W01	*Call
2098<2096		5124<5001	Z01 TO W01	*Call
2098<2096		5124<5002	Z02 TO W01	*Call
2098<2096		5124<5003	Z03 TO W01	*Call
2098<2096		5124<5004	Z04 TO W01	*Call
2098<2096		5125<4900	Z00 TO W02	*Call
2098<2096		5125<4901	A01 TO W02	*Call
2098<2096		5125<4902	A02 TO W02	*Call
2098<2096		5125<4903	A03 TO W02	*Call
2098<2096		5125<4905	B01 TO W02	*Call
2098<2096		5125<4906	B02 TO W02	*Call
2098<2096		5125<4907	B03 TO W02	*Call
2098<2096		5125<4909	C01 TO W02	*Call
2098<2096		5125<4910	C02 TO W02	*Call
2098<2096		5125<4911	C03 TO W02	*Call
2098<2096		5125<4913	D01 TO W02	*Call
2098<2096		5125<4914	D02 TO W02	*Call
2098<2096		5125<4915	D03 TO W02	*Call
2098<2096		5125<4917	E01 TO W02	*Call
2098<2096		5125<4918	E02 TO W02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5125<4921	F01 TO W02	*Call
2098<2096		5125<4922	F02 TO W02	*Call
2098<2096		5125<4925	G01 TO W02	*Call
2098<2096		5125<4929	H01 TO W02	*Call
2098<2096		5125<4933	I01 TO W02	*Call
2098<2096		5125<4937	J01 TO W02	*Call
2098<2096		5125<4944	K04 TO W02	*Call
2098<2096		5125<4947	L03 TO W02	*Call
2098<2096		5125<4948	L04 TO W02	*Call
2098<2096		5125<4951	M03 TO W02	*Call
2098<2096		5125<4952	M04 TO W02	*Call
2098<2096		5125<4954	N02 TO W02	*Call
2098<2096		5125<4955	N03 TO W02	*Call
2098<2096		5125<4956	N04 TO W02	*Call
2098<2096		5125<4958	O02 TO W02	*Call
2098<2096		5125<4959	O03 TO W02	*Call
2098<2096		5125<4960	O04 TO W02	*Call
2098<2096		5125<4962	P02 TO W02	*Call
2098<2096		5125<4963	P03 TO W02	*Call
2098<2096		5125<4964	P04 TO W02	*Call
2098<2096		5125<4966	Q02 TO W02	*Call
2098<2096		5125<4967	Q03 TO W02	*Call
2098<2096		5125<4968	Q04 TO W02	*Call
2098<2096		5125<4969	R01 TO W02	*Call
2098<2096		5125<4970	R02 TO W02	*Call
2098<2096		5125<4971	R03 TO W02	*Call
2098<2096		5125<4972	R04 TO W02	*Call
2098<2096		5125<4973	S01 TO W02	*Call
2098<2096		5125<4974	S02 TO W02	*Call
2098<2096		5125<4975	S03 TO W02	*Call
2098<2096		5125<4976	S04 TO W02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5125<4977	T01 TO W02	*Call
2098<2096		5125<4978	T02 TO W02	*Call
2098<2096		5125<4979	T03 TO W02	*Call
2098<2096		5125<4980	T04 TO W02	*Call
2098<2096		5125<4981	U01 TO W02	*Call
2098<2096		5125<4982	U02 TO W02	*Call
2098<2096		5125<4983	U03 TO W02	*Call
2098<2096		5125<4984	U04 TO W02	*Call
2098<2096		5125<4985	V01 TO W02	*Call
2098<2096		5125<4986	V02 TO W02	*Call
2098<2096		5125<4987	V03 TO W02	*Call
2098<2096		5125<4988	V04 TO W02	*Call
2098<2096		5125<4989	W01 TO W02	*Call
2098<2096		5125<4990	W02 TO W02	*Call
2098<2096		5125<4991	W03 TO W02	*Call
2098<2096		5125<4992	W04 TO W02	*Call
2098<2096		5125<4993	X01 TO W02	*Call
2098<2096		5125<4994	X02 TO W02	*Call
2098<2096		5125<4995	X03 TO W02	*Call
2098<2096		5125<4996	X04 TO W02	*Call
2098<2096		5125<4997	Y01 TO W02	*Call
2098<2096		5125<4998	Y02 TO W02	*Call
2098<2096		5125<4999	Y03 TO W02	*Call
2098<2096		5125<5000	Y04 TO W02	*Call
2098<2096		5125<5001	Z01 TO W02	*Call
2098<2096		5125<5002	Z02 TO W02	*Call
2098<2096		5125<5003	Z03 TO W02	*Call
2098<2096		5125<5004	Z04 TO W02	*Call
2098<2096		5126<4900	Z00 TO W03	*Call
2098<2096		5126<4901	A01 TO W03	*Call
2098<2096		5126<4902	A02 TO W03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5126<4903	A03 TO W03	*Call
2098<2096		5126<4905	B01 TO W03	*Call
2098<2096		5126<4906	B02 TO W03	*Call
2098<2096		5126<4907	B03 TO W03	*Call
2098<2096		5126<4909	C01 TO W03	*Call
2098<2096		5126<4910	C02 TO W03	*Call
2098<2096		5126<4911	C03 TO W03	*Call
2098<2096		5126<4913	D01 TO W03	*Call
2098<2096		5126<4914	D02 TO W03	*Call
2098<2096		5126<4915	D03 TO W03	*Call
2098<2096		5126<4917	E01 TO W03	*Call
2098<2096		5126<4918	E02 TO W03	*Call
2098<2096		5126<4921	F01 TO W03	*Call
2098<2096		5126<4922	F02 TO W03	*Call
2098<2096		5126<4925	G01 TO W03	*Call
2098<2096		5126<4929	H01 TO W03	*Call
2098<2096		5126<4933	I01 TO W03	*Call
2098<2096		5126<4937	J01 TO W03	*Call
2098<2096		5126<4944	K04 TO W03	*Call
2098<2096		5126<4947	L03 TO W03	*Call
2098<2096		5126<4948	L04 TO W03	*Call
2098<2096		5126<4951	M03 TO W03	*Call
2098<2096		5126<4952	M04 TO W03	*Call
2098<2096		5126<4954	N02 TO W03	*Call
2098<2096		5126<4955	N03 TO W03	*Call
2098<2096		5126<4956	N04 TO W03	*Call
2098<2096		5126<4958	O02 TO W03	*Call
2098<2096		5126<4959	O03 TO W03	*Call
2098<2096		5126<4960	O04 TO W03	*Call
2098<2096		5126<4962	P02 TO W03	*Call
2098<2096		5126<4963	P03 TO W03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5126<4964	P04 TO W03	*Call
2098<2096		5126<4966	Q02 TO W03	*Call
2098<2096		5126<4967	Q03 TO W03	*Call
2098<2096		5126<4968	Q04 TO W03	*Call
2098<2096		5126<4969	R01 TO W03	*Call
2098<2096		5126<4970	R02 TO W03	*Call
2098<2096		5126<4971	R03 TO W03	*Call
2098<2096		5126<4972	R04 TO W03	*Call
2098<2096		5126<4973	S01 TO W03	*Call
2098<2096		5126<4974	S02 TO W03	*Call
2098<2096		5126<4975	S03 TO W03	*Call
2098<2096		5126<4976	S04 TO W03	*Call
2098<2096		5126<4977	T01 TO W03	*Call
2098<2096		5126<4978	T02 TO W03	*Call
2098<2096		5126<4979	T03 TO W03	*Call
2098<2096		5126<4980	T04 TO W03	*Call
2098<2096		5126<4981	U01 TO W03	*Call
2098<2096		5126<4982	U02 TO W03	*Call
2098<2096		5126<4983	U03 TO W03	*Call
2098<2096		5126<4984	U04 TO W03	*Call
2098<2096		5126<4985	V01 TO W03	*Call
2098<2096		5126<4986	V02 TO W03	*Call
2098<2096		5126<4987	V03 TO W03	*Call
2098<2096		5126<4988	V04 TO W03	*Call
2098<2096		5126<4989	W01 TO W03	*Call
2098<2096		5126<4990	W02 TO W03	*Call
2098<2096		5126<4991	W03 TO W03	*Call
2098<2096		5126<4992	W04 TO W03	*Call
2098<2096		5126<4993	X01 TO W03	*Call
2098<2096		5126<4994	X02 TO W03	*Call
2098<2096		5126<4995	X03 TO W03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5126<4996	X04 TO W03	*Call
2098<2096		5126<4997	Y01 TO W03	*Call
2098<2096		5126<4998	Y02 TO W03	*Call
2098<2096		5126<4999	Y03 TO W03	*Call
2098<2096		5126<5000	Y04 TO W03	*Call
2098<2096		5126<5001	Z01 TO W03	*Call
2098<2096		5126<5002	Z02 TO W03	*Call
2098<2096		5126<5003	Z03 TO W03	*Call
2098<2096		5126<5004	Z04 TO W03	*Call
2098<2096		5127<4900	Z00 TO W04	*Call
2098<2096		5127<4901	A01 TO W04	*Call
2098<2096		5127<4902	A02 TO W04	*Call
2098<2096		5127<4903	A03 TO W04	*Call
2098<2096		5127<4905	B01 TO W04	*Call
2098<2096		5127<4906	B02 TO W04	*Call
2098<2096		5127<4907	B03 TO W04	*Call
2098<2096		5127<4909	C01 TO W04	*Call
2098<2096		5127<4910	C02 TO W04	*Call
2098<2096		5127<4911	C03 TO W04	*Call
2098<2096		5127<4913	D01 TO W04	*Call
2098<2096		5127<4914	D02 TO W04	*Call
2098<2096		5127<4915	D03 TO W04	*Call
2098<2096		5127<4917	E01 TO W04	*Call
2098<2096		5127<4918	E02 TO W04	*Call
2098<2096		5127<4921	F01 TO W04	*Call
2098<2096		5127<4922	F02 TO W04	*Call
2098<2096		5127<4925	G01 TO W04	*Call
2098<2096		5127<4929	H01 TO W04	*Call
2098<2096		5127<4933	I01 TO W04	*Call
2098<2096		5127<4937	J01 TO W04	*Call
2098<2096		5127<4944	K04 TO W04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5127<4947	L03 TO W04	*Call
2098<2096		5127<4948	L04 TO W04	*Call
2098<2096		5127<4951	M03 TO W04	*Call
2098<2096		5127<4952	M04 TO W04	*Call
2098<2096		5127<4954	N02 TO W04	*Call
2098<2096		5127<4955	N03 TO W04	*Call
2098<2096		5127<4956	N04 TO W04	*Call
2098<2096		5127<4958	O02 TO W04	*Call
2098<2096		5127<4959	O03 TO W04	*Call
2098<2096		5127<4960	O04 TO W04	*Call
2098<2096		5127<4962	P02 TO W04	*Call
2098<2096		5127<4963	P03 TO W04	*Call
2098<2096		5127<4964	P04 TO W04	*Call
2098<2096		5127<4966	Q02 TO W04	*Call
2098<2096		5127<4967	Q03 TO W04	*Call
2098<2096		5127<4968	Q04 TO W04	*Call
2098<2096		5127<4969	R01 TO W04	*Call
2098<2096		5127<4970	R02 TO W04	*Call
2098<2096		5127<4971	R03 TO W04	*Call
2098<2096		5127<4972	R04 TO W04	*Call
2098<2096		5127<4973	S01 TO W04	*Call
2098<2096		5127<4974	S02 TO W04	*Call
2098<2096		5127<4975	S03 TO W04	*Call
2098<2096		5127<4976	S04 TO W04	*Call
2098<2096		5127<4977	T01 TO W04	*Call
2098<2096		5127<4978	T02 TO W04	*Call
2098<2096		5127<4979	T03 TO W04	*Call
2098<2096		5127<4980	T04 TO W04	*Call
2098<2096		5127<4981	U01 TO W04	*Call
2098<2096		5127<4982	U02 TO W04	*Call
2098<2096		5127<4983	U03 TO W04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5127<4984	U04 TO W04	*Call
2098<2096		5127<4985	V01 TO W04	*Call
2098<2096		5127<4986	V02 TO W04	*Call
2098<2096		5127<4987	V03 TO W04	*Call
2098<2096		5127<4988	V04 TO W04	*Call
2098<2096		5127<4989	W01 TO W04	*Call
2098<2096		5127<4990	W02 TO W04	*Call
2098<2096		5127<4991	W03 TO W04	*Call
2098<2096		5127<4992	W04 TO W04	*Call
2098<2096		5127<4993	X01 TO W04	*Call
2098<2096		5127<4994	X02 TO W04	*Call
2098<2096		5127<4995	X03 TO W04	*Call
2098<2096		5127<4996	X04 TO W04	*Call
2098<2096		5127<4997	Y01 TO W04	*Call
2098<2096		5127<4998	Y02 TO W04	*Call
2098<2096		5127<4999	Y03 TO W04	*Call
2098<2096		5127<5000	Y04 TO W04	*Call
2098<2096		5127<5001	Z01 TO W04	*Call
2098<2096		5127<5002	Z02 TO W04	*Call
2098<2096		5127<5003	Z03 TO W04	*Call
2098<2096		5127<5004	Z04 TO W04	*Call
2098<2096		5128<4900	Z00 TO W05	*Call
2098<2096		5128<4901	A01 TO W05	*Call
2098<2096		5128<4902	A02 TO W05	*Call
2098<2096		5128<4903	A03 TO W05	*Call
2098<2096		5128<4905	B01 TO W05	*Call
2098<2096		5128<4906	B02 TO W05	*Call
2098<2096		5128<4907	B03 TO W05	*Call
2098<2096		5128<4909	C01 TO W05	*Call
2098<2096		5128<4910	C02 TO W05	*Call
2098<2096		5128<4911	C03 TO W05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5128<4913	D01 TO W05	*Call
2098<2096		5128<4914	D02 TO W05	*Call
2098<2096		5128<4915	D03 TO W05	*Call
2098<2096		5128<4917	E01 TO W05	*Call
2098<2096		5128<4918	E02 TO W05	*Call
2098<2096		5128<4921	F01 TO W05	*Call
2098<2096		5128<4922	F02 TO W05	*Call
2098<2096		5128<4925	G01 TO W05	*Call
2098<2096		5128<4929	H01 TO W05	*Call
2098<2096		5128<4933	I01 TO W05	*Call
2098<2096		5128<4937	J01 TO W05	*Call
2098<2096		5128<4944	K04 TO W05	*Call
2098<2096		5128<4947	L03 TO W05	*Call
2098<2096		5128<4948	L04 TO W05	*Call
2098<2096		5128<4951	M03 TO W05	*Call
2098<2096		5128<4952	M04 TO W05	*Call
2098<2096		5128<4954	N02 TO W05	*Call
2098<2096		5128<4955	N03 TO W05	*Call
2098<2096		5128<4956	N04 TO W05	*Call
2098<2096		5128<4958	O02 TO W05	*Call
2098<2096		5128<4959	O03 TO W05	*Call
2098<2096		5128<4960	O04 TO W05	*Call
2098<2096		5128<4962	P02 TO W05	*Call
2098<2096		5128<4963	P03 TO W05	*Call
2098<2096		5128<4964	P04 TO W05	*Call
2098<2096		5128<4966	Q02 TO W05	*Call
2098<2096		5128<4967	Q03 TO W05	*Call
2098<2096		5128<4968	Q04 TO W05	*Call
2098<2096		5128<4969	R01 TO W05	*Call
2098<2096		5128<4970	R02 TO W05	*Call
2098<2096		5128<4971	R03 TO W05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5128<4972	R04 TO W05	*Call
2098<2096		5128<4973	S01 TO W05	*Call
2098<2096		5128<4974	S02 TO W05	*Call
2098<2096		5128<4975	S03 TO W05	*Call
2098<2096		5128<4976	S04 TO W05	*Call
2098<2096		5128<4977	T01 TO W05	*Call
2098<2096		5128<4978	T02 TO W05	*Call
2098<2096		5128<4979	T03 TO W05	*Call
2098<2096		5128<4980	T04 TO W05	*Call
2098<2096		5128<4981	U01 TO W05	*Call
2098<2096		5128<4982	U02 TO W05	*Call
2098<2096		5128<4983	U03 TO W05	*Call
2098<2096		5128<4984	U04 TO W05	*Call
2098<2096		5128<4985	V01 TO W05	*Call
2098<2096		5128<4986	V02 TO W05	*Call
2098<2096		5128<4987	V03 TO W05	*Call
2098<2096		5128<4988	V04 TO W05	*Call
2098<2096		5128<4989	W01 TO W05	*Call
2098<2096		5128<4990	W02 TO W05	*Call
2098<2096		5128<4991	W03 TO W05	*Call
2098<2096		5128<4992	W04 TO W05	*Call
2098<2096		5128<4993	X01 TO W05	*Call
2098<2096		5128<4994	X02 TO W05	*Call
2098<2096		5128<4995	X03 TO W05	*Call
2098<2096		5128<4996	X04 TO W05	*Call
2098<2096		5128<4997	Y01 TO W05	*Call
2098<2096		5128<4998	Y02 TO W05	*Call
2098<2096		5128<4999	Y03 TO W05	*Call
2098<2096		5128<5000	Y04 TO W05	*Call
2098<2096		5128<5001	Z01 TO W05	*Call
2098<2096		5128<5002	Z02 TO W05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5128<5003	Z03 TO W05	*Call
2098<2096		5128<5004	Z04 TO W05	*Call
2098<2096		5129<4900	Z00 TO X01	*Call
2098<2096		5129<4901	A01 TO X01	*Call
2098<2096		5129<4902	A02 TO X01	*Call
2098<2096		5129<4903	A03 TO X01	*Call
2098<2096		5129<4905	B01 TO X01	*Call
2098<2096		5129<4906	B02 TO X01	*Call
2098<2096		5129<4907	B03 TO X01	*Call
2098<2096		5129<4909	C01 TO X01	*Call
2098<2096		5129<4910	C02 TO X01	*Call
2098<2096		5129<4911	C03 TO X01	*Call
2098<2096		5129<4913	D01 TO X01	*Call
2098<2096		5129<4914	D02 TO X01	*Call
2098<2096		5129<4915	D03 TO X01	*Call
2098<2096		5129<4917	E01 TO X01	*Call
2098<2096		5129<4918	E02 TO X01	*Call
2098<2096		5129<4921	F01 TO X01	*Call
2098<2096		5129<4922	F02 TO X01	*Call
2098<2096		5129<4925	G01 TO X01	*Call
2098<2096		5129<4929	H01 TO X01	*Call
2098<2096		5129<4933	I01 TO X01	*Call
2098<2096		5129<4937	J01 TO X01	*Call
2098<2096		5129<4944	K04 TO X01	*Call
2098<2096		5129<4947	L03 TO X01	*Call
2098<2096		5129<4948	L04 TO X01	*Call
2098<2096		5129<4951	M03 TO X01	*Call
2098<2096		5129<4952	M04 TO X01	*Call
2098<2096		5129<4954	N02 TO X01	*Call
2098<2096		5129<4955	N03 TO X01	*Call
2098<2096		5129<4956	N04 TO X01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5129<4958	O02 TO X01	*Call
2098<2096		5129<4959	O03 TO X01	*Call
2098<2096		5129<4960	O04 TO X01	*Call
2098<2096		5129<4962	P02 TO X01	*Call
2098<2096		5129<4963	P03 TO X01	*Call
2098<2096		5129<4964	P04 TO X01	*Call
2098<2096		5129<4966	Q02 TO X01	*Call
2098<2096		5129<4967	Q03 TO X01	*Call
2098<2096		5129<4968	Q04 TO X01	*Call
2098<2096		5129<4969	R01 TO X01	*Call
2098<2096		5129<4970	R02 TO X01	*Call
2098<2096		5129<4971	R03 TO X01	*Call
2098<2096		5129<4972	R04 TO X01	*Call
2098<2096		5129<4973	S01 TO X01	*Call
2098<2096		5129<4974	S02 TO X01	*Call
2098<2096		5129<4975	S03 TO X01	*Call
2098<2096		5129<4976	S04 TO X01	*Call
2098<2096		5129<4977	T01 TO X01	*Call
2098<2096		5129<4978	T02 TO X01	*Call
2098<2096		5129<4979	T03 TO X01	*Call
2098<2096		5129<4980	T04 TO X01	*Call
2098<2096		5129<4981	U01 TO X01	*Call
2098<2096		5129<4982	U02 TO X01	*Call
2098<2096		5129<4983	U03 TO X01	*Call
2098<2096		5129<4984	U04 TO X01	*Call
2098<2096		5129<4985	V01 TO X01	*Call
2098<2096		5129<4986	V02 TO X01	*Call
2098<2096		5129<4987	V03 TO X01	*Call
2098<2096		5129<4988	V04 TO X01	*Call
2098<2096		5129<4989	W01 TO X01	*Call
2098<2096		5129<4990	W02 TO X01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5129<4991	W03 TO X01	*Call
2098<2096		5129<4992	W04 TO X01	*Call
2098<2096		5129<4993	X01 TO X01	*Call
2098<2096		5129<4994	X02 TO X01	*Call
2098<2096		5129<4995	X03 TO X01	*Call
2098<2096		5129<4996	X04 TO X01	*Call
2098<2096		5129<4997	Y01 TO X01	*Call
2098<2096		5129<4998	Y02 TO X01	*Call
2098<2096		5129<4999	Y03 TO X01	*Call
2098<2096		5129<5000	Y04 TO X01	*Call
2098<2096		5129<5001	Z01 TO X01	*Call
2098<2096		5129<5002	Z02 TO X01	*Call
2098<2096		5129<5003	Z03 TO X01	*Call
2098<2096		5129<5004	Z04 TO X01	*Call
2098<2096		5130<4900	Z00 TO X02	*Call
2098<2096		5130<4901	A01 TO X02	*Call
2098<2096		5130<4902	A02 TO X02	*Call
2098<2096		5130<4903	A03 TO X02	*Call
2098<2096		5130<4905	B01 TO X02	*Call
2098<2096		5130<4906	B02 TO X02	*Call
2098<2096		5130<4907	B03 TO X02	*Call
2098<2096		5130<4909	C01 TO X02	*Call
2098<2096		5130<4910	C02 TO X02	*Call
2098<2096		5130<4911	C03 TO X02	*Call
2098<2096		5130<4913	D01 TO X02	*Call
2098<2096		5130<4914	D02 TO X02	*Call
2098<2096		5130<4915	D03 TO X02	*Call
2098<2096		5130<4917	E01 TO X02	*Call
2098<2096		5130<4918	E02 TO X02	*Call
2098<2096		5130<4921	F01 TO X02	*Call
2098<2096		5130<4922	F02 TO X02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5130<4925	G01 TO X02	*Call
2098<2096		5130<4929	H01 TO X02	*Call
2098<2096		5130<4933	I01 TO X02	*Call
2098<2096		5130<4937	J01 TO X02	*Call
2098<2096		5130<4944	K04 TO X02	*Call
2098<2096		5130<4947	L03 TO X02	*Call
2098<2096		5130<4948	L04 TO X02	*Call
2098<2096		5130<4951	M03 TO X02	*Call
2098<2096		5130<4952	M04 TO X02	*Call
2098<2096		5130<4954	N02 TO X02	*Call
2098<2096		5130<4955	N03 TO X02	*Call
2098<2096		5130<4956	N04 TO X02	*Call
2098<2096		5130<4958	O02 TO X02	*Call
2098<2096		5130<4959	O03 TO X02	*Call
2098<2096		5130<4960	O04 TO X02	*Call
2098<2096		5130<4962	P02 TO X02	*Call
2098<2096		5130<4963	P03 TO X02	*Call
2098<2096		5130<4964	P04 TO X02	*Call
2098<2096		5130<4966	Q02 TO X02	*Call
2098<2096		5130<4967	Q03 TO X02	*Call
2098<2096		5130<4968	Q04 TO X02	*Call
2098<2096		5130<4969	R01 TO X02	*Call
2098<2096		5130<4970	R02 TO X02	*Call
2098<2096		5130<4971	R03 TO X02	*Call
2098<2096		5130<4972	R04 TO X02	*Call
2098<2096		5130<4973	S01 TO X02	*Call
2098<2096		5130<4974	S02 TO X02	*Call
2098<2096		5130<4975	S03 TO X02	*Call
2098<2096		5130<4976	S04 TO X02	*Call
2098<2096		5130<4977	T01 TO X02	*Call
2098<2096		5130<4978	T02 TO X02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5130<4979	T03 TO X02	*Call
2098<2096		5130<4980	T04 TO X02	*Call
2098<2096		5130<4981	U01 TO X02	*Call
2098<2096		5130<4982	U02 TO X02	*Call
2098<2096		5130<4983	U03 TO X02	*Call
2098<2096		5130<4984	U04 TO X02	*Call
2098<2096		5130<4985	V01 TO X02	*Call
2098<2096		5130<4986	V02 TO X02	*Call
2098<2096		5130<4987	V03 TO X02	*Call
2098<2096		5130<4988	V04 TO X02	*Call
2098<2096		5130<4989	W01 TO X02	*Call
2098<2096		5130<4990	W02 TO X02	*Call
2098<2096		5130<4991	W03 TO X02	*Call
2098<2096		5130<4992	W04 TO X02	*Call
2098<2096		5130<4993	X01 TO X02	*Call
2098<2096		5130<4994	X02 TO X02	*Call
2098<2096		5130<4995	X03 TO X02	*Call
2098<2096		5130<4996	X04 TO X02	*Call
2098<2096		5130<4997	Y01 TO X02	*Call
2098<2096		5130<4998	Y02 TO X02	*Call
2098<2096		5130<4999	Y03 TO X02	*Call
2098<2096		5130<5000	Y04 TO X02	*Call
2098<2096		5130<5001	Z01 TO X02	*Call
2098<2096		5130<5002	Z02 TO X02	*Call
2098<2096		5130<5003	Z03 TO X02	*Call
2098<2096		5130<5004	Z04 TO X02	*Call
2098<2096		5131<4900	Z00 TO X03	*Call
2098<2096		5131<4901	A01 TO X03	*Call
2098<2096		5131<4902	A02 TO X03	*Call
2098<2096		5131<4903	A03 TO X03	*Call
2098<2096		5131<4905	B01 TO X03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5131<4906	B02 TO X03	*Call
2098<2096		5131<4907	B03 TO X03	*Call
2098<2096		5131<4909	C01 TO X03	*Call
2098<2096		5131<4910	C02 TO X03	*Call
2098<2096		5131<4911	C03 TO X03	*Call
2098<2096		5131<4913	D01 TO X03	*Call
2098<2096		5131<4914	D02 TO X03	*Call
2098<2096		5131<4915	D03 TO X03	*Call
2098<2096		5131<4917	E01 TO X03	*Call
2098<2096		5131<4918	E02 TO X03	*Call
2098<2096		5131<4921	F01 TO X03	*Call
2098<2096		5131<4922	F02 TO X03	*Call
2098<2096		5131<4925	G01 TO X03	*Call
2098<2096		5131<4929	H01 TO X03	*Call
2098<2096		5131<4933	I01 TO X03	*Call
2098<2096		5131<4937	J01 TO X03	*Call
2098<2096		5131<4944	K04 TO X03	*Call
2098<2096		5131<4947	L03 TO X03	*Call
2098<2096		5131<4948	L04 TO X03	*Call
2098<2096		5131<4951	M03 TO X03	*Call
2098<2096		5131<4952	M04 TO X03	*Call
2098<2096		5131<4954	N02 TO X03	*Call
2098<2096		5131<4955	N03 TO X03	*Call
2098<2096		5131<4956	N04 TO X03	*Call
2098<2096		5131<4958	O02 TO X03	*Call
2098<2096		5131<4959	O03 TO X03	*Call
2098<2096		5131<4960	O04 TO X03	*Call
2098<2096		5131<4962	P02 TO X03	*Call
2098<2096		5131<4963	P03 TO X03	*Call
2098<2096		5131<4964	P04 TO X03	*Call
2098<2096		5131<4966	Q02 TO X03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5131<4967	Q03 TO X03	*Call
2098<2096		5131<4968	Q04 TO X03	*Call
2098<2096		5131<4969	R01 TO X03	*Call
2098<2096		5131<4970	R02 TO X03	*Call
2098<2096		5131<4971	R03 TO X03	*Call
2098<2096		5131<4972	R04 TO X03	*Call
2098<2096		5131<4973	S01 TO X03	*Call
2098<2096		5131<4974	S02 TO X03	*Call
2098<2096		5131<4975	S03 TO X03	*Call
2098<2096		5131<4976	S04 TO X03	*Call
2098<2096		5131<4977	T01 TO X03	*Call
2098<2096		5131<4978	T02 TO X03	*Call
2098<2096		5131<4979	T03 TO X03	*Call
2098<2096		5131<4980	T04 TO X03	*Call
2098<2096		5131<4981	U01 TO X03	*Call
2098<2096		5131<4982	U02 TO X03	*Call
2098<2096		5131<4983	U03 TO X03	*Call
2098<2096		5131<4984	U04 TO X03	*Call
2098<2096		5131<4985	V01 TO X03	*Call
2098<2096		5131<4986	V02 TO X03	*Call
2098<2096		5131<4987	V03 TO X03	*Call
2098<2096		5131<4988	V04 TO X03	*Call
2098<2096		5131<4989	W01 TO X03	*Call
2098<2096		5131<4990	W02 TO X03	*Call
2098<2096		5131<4991	W03 TO X03	*Call
2098<2096		5131<4992	W04 TO X03	*Call
2098<2096		5131<4993	X01 TO X03	*Call
2098<2096		5131<4994	X02 TO X03	*Call
2098<2096		5131<4995	X03 TO X03	*Call
2098<2096		5131<4996	X04 TO X03	*Call
2098<2096		5131<4997	Y01 TO X03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5131<4998	Y02 TO X03	*Call
2098<2096		5131<4999	Y03 TO X03	*Call
2098<2096		5131<5000	Y04 TO X03	*Call
2098<2096		5131<5001	Z01 TO X03	*Call
2098<2096		5131<5002	Z02 TO X03	*Call
2098<2096		5131<5003	Z03 TO X03	*Call
2098<2096		5131<5004	Z04 TO X03	*Call
2098<2096		5132<4900	Z00 TO X04	*Call
2098<2096		5132<4901	A01 TO X04	*Call
2098<2096		5132<4902	A02 TO X04	*Call
2098<2096		5132<4903	A03 TO X04	*Call
2098<2096		5132<4905	B01 TO X04	*Call
2098<2096		5132<4906	B02 TO X04	*Call
2098<2096		5132<4907	B03 TO X04	*Call
2098<2096		5132<4909	C01 TO X04	*Call
2098<2096		5132<4910	C02 TO X04	*Call
2098<2096		5132<4911	C03 TO X04	*Call
2098<2096		5132<4913	D01 TO X04	*Call
2098<2096		5132<4914	D02 TO X04	*Call
2098<2096		5132<4915	D03 TO X04	*Call
2098<2096		5132<4917	E01 TO X04	*Call
2098<2096		5132<4918	E02 TO X04	*Call
2098<2096		5132<4921	F01 TO X04	*Call
2098<2096		5132<4922	F02 TO X04	*Call
2098<2096		5132<4925	G01 TO X04	*Call
2098<2096		5132<4929	H01 TO X04	*Call
2098<2096		5132<4933	I01 TO X04	*Call
2098<2096		5132<4937	J01 TO X04	*Call
2098<2096		5132<4944	K04 TO X04	*Call
2098<2096		5132<4947	L03 TO X04	*Call
2098<2096		5132<4948	L04 TO X04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5132<4951	M03 TO X04	*Call
2098<2096		5132<4952	M04 TO X04	*Call
2098<2096		5132<4954	N02 TO X04	*Call
2098<2096		5132<4955	N03 TO X04	*Call
2098<2096		5132<4956	N04 TO X04	*Call
2098<2096		5132<4958	O02 TO X04	*Call
2098<2096		5132<4959	O03 TO X04	*Call
2098<2096		5132<4960	O04 TO X04	*Call
2098<2096		5132<4962	P02 TO X04	*Call
2098<2096		5132<4963	P03 TO X04	*Call
2098<2096		5132<4964	P04 TO X04	*Call
2098<2096		5132<4966	Q02 TO X04	*Call
2098<2096		5132<4967	Q03 TO X04	*Call
2098<2096		5132<4968	Q04 TO X04	*Call
2098<2096		5132<4969	R01 TO X04	*Call
2098<2096		5132<4970	R02 TO X04	*Call
2098<2096		5132<4971	R03 TO X04	*Call
2098<2096		5132<4972	R04 TO X04	*Call
2098<2096		5132<4973	S01 TO X04	*Call
2098<2096		5132<4974	S02 TO X04	*Call
2098<2096		5132<4975	S03 TO X04	*Call
2098<2096		5132<4976	S04 TO X04	*Call
2098<2096		5132<4977	T01 TO X04	*Call
2098<2096		5132<4978	T02 TO X04	*Call
2098<2096		5132<4979	T03 TO X04	*Call
2098<2096		5132<4980	T04 TO X04	*Call
2098<2096		5132<4981	U01 TO X04	*Call
2098<2096		5132<4982	U02 TO X04	*Call
2098<2096		5132<4983	U03 TO X04	*Call
2098<2096		5132<4984	U04 TO X04	*Call
2098<2096		5132<4985	V01 TO X04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5132<4986	V02 TO X04	*Call
2098<2096		5132<4987	V03 TO X04	*Call
2098<2096		5132<4988	V04 TO X04	*Call
2098<2096		5132<4989	W01 TO X04	*Call
2098<2096		5132<4990	W02 TO X04	*Call
2098<2096		5132<4991	W03 TO X04	*Call
2098<2096		5132<4992	W04 TO X04	*Call
2098<2096		5132<4993	X01 TO X04	*Call
2098<2096		5132<4994	X02 TO X04	*Call
2098<2096		5132<4995	X03 TO X04	*Call
2098<2096		5132<4996	X04 TO X04	*Call
2098<2096		5132<4997	Y01 TO X04	*Call
2098<2096		5132<4998	Y02 TO X04	*Call
2098<2096		5132<4999	Y03 TO X04	*Call
2098<2096		5132<5000	Y04 TO X04	*Call
2098<2096		5132<5001	Z01 TO X04	*Call
2098<2096		5132<5002	Z02 TO X04	*Call
2098<2096		5132<5003	Z03 TO X04	*Call
2098<2096		5132<5004	Z04 TO X04	*Call
2098<2096		5133<4900	Z00 TO X05	*Call
2098<2096		5133<4901	A01 TO X05	*Call
2098<2096		5133<4902	A02 TO X05	*Call
2098<2096		5133<4903	A03 TO X05	*Call
2098<2096		5133<4905	B01 TO X05	*Call
2098<2096		5133<4906	B02 TO X05	*Call
2098<2096		5133<4907	B03 TO X05	*Call
2098<2096		5133<4909	C01 TO X05	*Call
2098<2096		5133<4910	C02 TO X05	*Call
2098<2096		5133<4911	C03 TO X05	*Call
2098<2096		5133<4913	D01 TO X05	*Call
2098<2096		5133<4914	D02 TO X05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5133<4915	D03 TO X05	*Call
2098<2096		5133<4917	E01 TO X05	*Call
2098<2096		5133<4918	E02 TO X05	*Call
2098<2096		5133<4921	F01 TO X05	*Call
2098<2096		5133<4922	F02 TO X05	*Call
2098<2096		5133<4925	G01 TO X05	*Call
2098<2096		5133<4929	H01 TO X05	*Call
2098<2096		5133<4933	I01 TO X05	*Call
2098<2096		5133<4937	J01 TO X05	*Call
2098<2096		5133<4944	K04 TO X05	*Call
2098<2096		5133<4947	L03 TO X05	*Call
2098<2096		5133<4948	L04 TO X05	*Call
2098<2096		5133<4951	M03 TO X05	*Call
2098<2096		5133<4952	M04 TO X05	*Call
2098<2096		5133<4954	N02 TO X05	*Call
2098<2096		5133<4955	N03 TO X05	*Call
2098<2096		5133<4956	N04 TO X05	*Call
2098<2096		5133<4958	O02 TO X05	*Call
2098<2096		5133<4959	O03 TO X05	*Call
2098<2096		5133<4960	O04 TO X05	*Call
2098<2096		5133<4962	P02 TO X05	*Call
2098<2096		5133<4963	P03 TO X05	*Call
2098<2096		5133<4964	P04 TO X05	*Call
2098<2096		5133<4966	Q02 TO X05	*Call
2098<2096		5133<4967	Q03 TO X05	*Call
2098<2096		5133<4968	Q04 TO X05	*Call
2098<2096		5133<4969	R01 TO X05	*Call
2098<2096		5133<4970	R02 TO X05	*Call
2098<2096		5133<4971	R03 TO X05	*Call
2098<2096		5133<4972	R04 TO X05	*Call
2098<2096		5133<4973	S01 TO X05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5133<4974	S02 TO X05	*Call
2098<2096		5133<4975	S03 TO X05	*Call
2098<2096		5133<4976	S04 TO X05	*Call
2098<2096		5133<4977	T01 TO X05	*Call
2098<2096		5133<4978	T02 TO X05	*Call
2098<2096		5133<4979	T03 TO X05	*Call
2098<2096		5133<4980	T04 TO X05	*Call
2098<2096		5133<4981	U01 TO X05	*Call
2098<2096		5133<4982	U02 TO X05	*Call
2098<2096		5133<4983	U03 TO X05	*Call
2098<2096		5133<4984	U04 TO X05	*Call
2098<2096		5133<4985	V01 TO X05	*Call
2098<2096		5133<4986	V02 TO X05	*Call
2098<2096		5133<4987	V03 TO X05	*Call
2098<2096		5133<4988	V04 TO X05	*Call
2098<2096		5133<4989	W01 TO X05	*Call
2098<2096		5133<4990	W02 TO X05	*Call
2098<2096		5133<4991	W03 TO X05	*Call
2098<2096		5133<4992	W04 TO X05	*Call
2098<2096		5133<4993	X01 TO X05	*Call
2098<2096		5133<4994	X02 TO X05	*Call
2098<2096		5133<4995	X03 TO X05	*Call
2098<2096		5133<4996	X04 TO X05	*Call
2098<2096		5133<4997	Y01 TO X05	*Call
2098<2096		5133<4998	Y02 TO X05	*Call
2098<2096		5133<4999	Y03 TO X05	*Call
2098<2096		5133<5000	Y04 TO X05	*Call
2098<2096		5133<5001	Z01 TO X05	*Call
2098<2096		5133<5002	Z02 TO X05	*Call
2098<2096		5133<5003	Z03 TO X05	*Call
2098<2096		5133<5004	Z04 TO X05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5134<4900	Z00 TO Y01	*Call
2098<2096		5134<4901	A01 TO Y01	*Call
2098<2096		5134<4902	A02 TO Y01	*Call
2098<2096		5134<4903	A03 TO Y01	*Call
2098<2096		5134<4905	B01 TO Y01	*Call
2098<2096		5134<4906	B02 TO Y01	*Call
2098<2096		5134<4907	B03 TO Y01	*Call
2098<2096		5134<4909	C01 TO Y01	*Call
2098<2096		5134<4910	C02 TO Y01	*Call
2098<2096		5134<4911	C03 TO Y01	*Call
2098<2096		5134<4913	D01 TO Y01	*Call
2098<2096		5134<4914	D02 TO Y01	*Call
2098<2096		5134<4915	D03 TO Y01	*Call
2098<2096		5134<4917	E01 TO Y01	*Call
2098<2096		5134<4918	E02 TO Y01	*Call
2098<2096		5134<4921	F01 TO Y01	*Call
2098<2096		5134<4922	F02 TO Y01	*Call
2098<2096		5134<4925	G01 TO Y01	*Call
2098<2096		5134<4929	H01 TO Y01	*Call
2098<2096		5134<4933	I01 TO Y01	*Call
2098<2096		5134<4937	J01 TO Y01	*Call
2098<2096		5134<4944	K04 TO Y01	*Call
2098<2096		5134<4947	L03 TO Y01	*Call
2098<2096		5134<4948	L04 TO Y01	*Call
2098<2096		5134<4951	M03 TO Y01	*Call
2098<2096		5134<4952	M04 TO Y01	*Call
2098<2096		5134<4954	N02 TO Y01	*Call
2098<2096		5134<4955	N03 TO Y01	*Call
2098<2096		5134<4956	N04 TO Y01	*Call
2098<2096		5134<4958	O02 TO Y01	*Call
2098<2096		5134<4959	O03 TO Y01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5134<4960	O04 TO Y01	*Call
2098<2096		5134<4962	P02 TO Y01	*Call
2098<2096		5134<4963	P03 TO Y01	*Call
2098<2096		5134<4964	P04 TO Y01	*Call
2098<2096		5134<4966	Q02 TO Y01	*Call
2098<2096		5134<4967	Q03 TO Y01	*Call
2098<2096		5134<4968	Q04 TO Y01	*Call
2098<2096		5134<4969	R01 TO Y01	*Call
2098<2096		5134<4970	R02 TO Y01	*Call
2098<2096		5134<4971	R03 TO Y01	*Call
2098<2096		5134<4972	R04 TO Y01	*Call
2098<2096		5134<4973	S01 TO Y01	*Call
2098<2096		5134<4974	S02 TO Y01	*Call
2098<2096		5134<4975	S03 TO Y01	*Call
2098<2096		5134<4976	S04 TO Y01	*Call
2098<2096		5134<4977	T01 TO Y01	*Call
2098<2096		5134<4978	T02 TO Y01	*Call
2098<2096		5134<4979	T03 TO Y01	*Call
2098<2096		5134<4980	T04 TO Y01	*Call
2098<2096		5134<4981	U01 TO Y01	*Call
2098<2096		5134<4982	U02 TO Y01	*Call
2098<2096		5134<4983	U03 TO Y01	*Call
2098<2096		5134<4984	U04 TO Y01	*Call
2098<2096		5134<4985	V01 TO Y01	*Call
2098<2096		5134<4986	V02 TO Y01	*Call
2098<2096		5134<4987	V03 TO Y01	*Call
2098<2096		5134<4988	V04 TO Y01	*Call
2098<2096		5134<4989	W01 TO Y01	*Call
2098<2096		5134<4990	W02 TO Y01	*Call
2098<2096		5134<4991	W03 TO Y01	*Call
2098<2096		5134<4992	W04 TO Y01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5134<4993	X01 TO Y01	*Call
2098<2096		5134<4994	X02 TO Y01	*Call
2098<2096		5134<4995	X03 TO Y01	*Call
2098<2096		5134<4996	X04 TO Y01	*Call
2098<2096		5134<4997	Y01 TO Y01	*Call
2098<2096		5134<4998	Y02 TO Y01	*Call
2098<2096		5134<4999	Y03 TO Y01	*Call
2098<2096		5134<5000	Y04 TO Y01	*Call
2098<2096		5134<5001	Z01 TO Y01	*Call
2098<2096		5134<5002	Z02 TO Y01	*Call
2098<2096		5134<5003	Z03 TO Y01	*Call
2098<2096		5134<5004	Z04 TO Y01	*Call
2098<2096		5135<4900	Z00 TO Y02	*Call
2098<2096		5135<4901	A01 TO Y02	*Call
2098<2096		5135<4902	A02 TO Y02	*Call
2098<2096		5135<4903	A03 TO Y02	*Call
2098<2096		5135<4905	B01 TO Y02	*Call
2098<2096		5135<4906	B02 TO Y02	*Call
2098<2096		5135<4907	B03 TO Y02	*Call
2098<2096		5135<4909	C01 TO Y02	*Call
2098<2096		5135<4910	C02 TO Y02	*Call
2098<2096		5135<4911	C03 TO Y02	*Call
2098<2096		5135<4913	D01 TO Y02	*Call
2098<2096		5135<4914	D02 TO Y02	*Call
2098<2096		5135<4915	D03 TO Y02	*Call
2098<2096		5135<4917	E01 TO Y02	*Call
2098<2096		5135<4918	E02 TO Y02	*Call
2098<2096		5135<4921	F01 TO Y02	*Call
2098<2096		5135<4922	F02 TO Y02	*Call
2098<2096		5135<4925	G01 TO Y02	*Call
2098<2096		5135<4929	H01 TO Y02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5135<4933	I01 TO Y02	*Call
2098<2096		5135<4937	J01 TO Y02	*Call
2098<2096		5135<4944	K04 TO Y02	*Call
2098<2096		5135<4947	L03 TO Y02	*Call
2098<2096		5135<4948	L04 TO Y02	*Call
2098<2096		5135<4951	M03 TO Y02	*Call
2098<2096		5135<4952	M04 TO Y02	*Call
2098<2096		5135<4954	N02 TO Y02	*Call
2098<2096		5135<4955	N03 TO Y02	*Call
2098<2096		5135<4956	N04 TO Y02	*Call
2098<2096		5135<4958	O02 TO Y02	*Call
2098<2096		5135<4959	O03 TO Y02	*Call
2098<2096		5135<4960	O04 TO Y02	*Call
2098<2096		5135<4962	P02 TO Y02	*Call
2098<2096		5135<4963	P03 TO Y02	*Call
2098<2096		5135<4964	P04 TO Y02	*Call
2098<2096		5135<4966	Q02 TO Y02	*Call
2098<2096		5135<4967	Q03 TO Y02	*Call
2098<2096		5135<4968	Q04 TO Y02	*Call
2098<2096		5135<4969	R01 TO Y02	*Call
2098<2096		5135<4970	R02 TO Y02	*Call
2098<2096		5135<4971	R03 TO Y02	*Call
2098<2096		5135<4972	R04 TO Y02	*Call
2098<2096		5135<4973	S01 TO Y02	*Call
2098<2096		5135<4974	S02 TO Y02	*Call
2098<2096		5135<4975	S03 TO Y02	*Call
2098<2096		5135<4976	S04 TO Y02	*Call
2098<2096		5135<4977	T01 TO Y02	*Call
2098<2096		5135<4978	T02 TO Y02	*Call
2098<2096		5135<4979	T03 TO Y02	*Call
2098<2096		5135<4980	T04 TO Y02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5135<4981	U01 TO Y02	*Call
2098<2096		5135<4982	U02 TO Y02	*Call
2098<2096		5135<4983	U03 TO Y02	*Call
2098<2096		5135<4984	U04 TO Y02	*Call
2098<2096		5135<4985	V01 TO Y02	*Call
2098<2096		5135<4986	V02 TO Y02	*Call
2098<2096		5135<4987	V03 TO Y02	*Call
2098<2096		5135<4988	V04 TO Y02	*Call
2098<2096		5135<4989	W01 TO Y02	*Call
2098<2096		5135<4990	W02 TO Y02	*Call
2098<2096		5135<4991	W03 TO Y02	*Call
2098<2096		5135<4992	W04 TO Y02	*Call
2098<2096		5135<4993	X01 TO Y02	*Call
2098<2096		5135<4994	X02 TO Y02	*Call
2098<2096		5135<4995	X03 TO Y02	*Call
2098<2096		5135<4996	X04 TO Y02	*Call
2098<2096		5135<4997	Y01 TO Y02	*Call
2098<2096		5135<4998	Y02 TO Y02	*Call
2098<2096		5135<4999	Y03 TO Y02	*Call
2098<2096		5135<5000	Y04 TO Y02	*Call
2098<2096		5135<5001	Z01 TO Y02	*Call
2098<2096		5135<5002	Z02 TO Y02	*Call
2098<2096		5135<5003	Z03 TO Y02	*Call
2098<2096		5135<5004	Z04 TO Y02	*Call
2098<2096		5136<4900	Z00 TO Y03	*Call
2098<2096		5136<4901	A01 TO Y03	*Call
2098<2096		5136<4902	A02 TO Y03	*Call
2098<2096		5136<4903	A03 TO Y03	*Call
2098<2096		5136<4905	B01 TO Y03	*Call
2098<2096		5136<4906	B02 TO Y03	*Call
2098<2096		5136<4907	B03 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5136<4909	C01 TO Y03	*Call
2098<2096		5136<4910	C02 TO Y03	*Call
2098<2096		5136<4911	C03 TO Y03	*Call
2098<2096		5136<4913	D01 TO Y03	*Call
2098<2096		5136<4914	D02 TO Y03	*Call
2098<2096		5136<4915	D03 TO Y03	*Call
2098<2096		5136<4917	E01 TO Y03	*Call
2098<2096		5136<4918	E02 TO Y03	*Call
2098<2096		5136<4921	F01 TO Y03	*Call
2098<2096		5136<4922	F02 TO Y03	*Call
2098<2096		5136<4925	G01 TO Y03	*Call
2098<2096		5136<4929	H01 TO Y03	*Call
2098<2096		5136<4933	I01 TO Y03	*Call
2098<2096		5136<4937	J01 TO Y03	*Call
2098<2096		5136<4944	K04 TO Y03	*Call
2098<2096		5136<4947	L03 TO Y03	*Call
2098<2096		5136<4948	L04 TO Y03	*Call
2098<2096		5136<4951	M03 TO Y03	*Call
2098<2096		5136<4952	M04 TO Y03	*Call
2098<2096		5136<4954	N02 TO Y03	*Call
2098<2096		5136<4955	N03 TO Y03	*Call
2098<2096		5136<4956	N04 TO Y03	*Call
2098<2096		5136<4958	O02 TO Y03	*Call
2098<2096		5136<4959	O03 TO Y03	*Call
2098<2096		5136<4960	O04 TO Y03	*Call
2098<2096		5136<4962	P02 TO Y03	*Call
2098<2096		5136<4963	P03 TO Y03	*Call
2098<2096		5136<4964	P04 TO Y03	*Call
2098<2096		5136<4966	Q02 TO Y03	*Call
2098<2096		5136<4967	Q03 TO Y03	*Call
2098<2096		5136<4968	Q04 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5136<4969	R01 TO Y03	*Call
2098<2096		5136<4970	R02 TO Y03	*Call
2098<2096		5136<4971	R03 TO Y03	*Call
2098<2096		5136<4972	R04 TO Y03	*Call
2098<2096		5136<4973	S01 TO Y03	*Call
2098<2096		5136<4974	S02 TO Y03	*Call
2098<2096		5136<4975	S03 TO Y03	*Call
2098<2096		5136<4976	S04 TO Y03	*Call
2098<2096		5136<4977	T01 TO Y03	*Call
2098<2096		5136<4978	T02 TO Y03	*Call
2098<2096		5136<4979	T03 TO Y03	*Call
2098<2096		5136<4980	T04 TO Y03	*Call
2098<2096		5136<4981	U01 TO Y03	*Call
2098<2096		5136<4982	U02 TO Y03	*Call
2098<2096		5136<4983	U03 TO Y03	*Call
2098<2096		5136<4984	U04 TO Y03	*Call
2098<2096		5136<4985	V01 TO Y03	*Call
2098<2096		5136<4986	V02 TO Y03	*Call
2098<2096		5136<4987	V03 TO Y03	*Call
2098<2096		5136<4988	V04 TO Y03	*Call
2098<2096		5136<4989	W01 TO Y03	*Call
2098<2096		5136<4990	W02 TO Y03	*Call
2098<2096		5136<4991	W03 TO Y03	*Call
2098<2096		5136<4992	W04 TO Y03	*Call
2098<2096		5136<4993	X01 TO Y03	*Call
2098<2096		5136<4994	X02 TO Y03	*Call
2098<2096		5136<4995	X03 TO Y03	*Call
2098<2096		5136<4996	X04 TO Y03	*Call
2098<2096		5136<4997	Y01 TO Y03	*Call
2098<2096		5136<4998	Y02 TO Y03	*Call
2098<2096		5136<4999	Y03 TO Y03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5136<5000	Y04 TO Y03	*Call
2098<2096		5136<5001	Z01 TO Y03	*Call
2098<2096		5136<5002	Z02 TO Y03	*Call
2098<2096		5136<5003	Z03 TO Y03	*Call
2098<2096		5136<5004	Z04 TO Y03	*Call
2098<2096		5137<4900	Z00 TO Y04	*Call
2098<2096		5137<4901	A01 TO Y04	*Call
2098<2096		5137<4902	A02 TO Y04	*Call
2098<2096		5137<4903	A03 TO Y04	*Call
2098<2096		5137<4905	B01 TO Y04	*Call
2098<2096		5137<4906	B02 TO Y04	*Call
2098<2096		5137<4907	B03 TO Y04	*Call
2098<2096		5137<4909	C01 TO Y04	*Call
2098<2096		5137<4910	C02 TO Y04	*Call
2098<2096		5137<4911	C03 TO Y04	*Call
2098<2096		5137<4913	D01 TO Y04	*Call
2098<2096		5137<4914	D02 TO Y04	*Call
2098<2096		5137<4915	D03 TO Y04	*Call
2098<2096		5137<4917	E01 TO Y04	*Call
2098<2096		5137<4918	E02 TO Y04	*Call
2098<2096		5137<4921	F01 TO Y04	*Call
2098<2096		5137<4922	F02 TO Y04	*Call
2098<2096		5137<4925	G01 TO Y04	*Call
2098<2096		5137<4929	H01 TO Y04	*Call
2098<2096		5137<4933	I01 TO Y04	*Call
2098<2096		5137<4937	J01 TO Y04	*Call
2098<2096		5137<4944	K04 TO Y04	*Call
2098<2096		5137<4947	L03 TO Y04	*Call
2098<2096		5137<4948	L04 TO Y04	*Call
2098<2096		5137<4951	M03 TO Y04	*Call
2098<2096		5137<4952	M04 TO Y04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5137<4954	N02 TO Y04	*Call
2098<2096		5137<4955	N03 TO Y04	*Call
2098<2096		5137<4956	N04 TO Y04	*Call
2098<2096		5137<4958	O02 TO Y04	*Call
2098<2096		5137<4959	O03 TO Y04	*Call
2098<2096		5137<4960	O04 TO Y04	*Call
2098<2096		5137<4962	P02 TO Y04	*Call
2098<2096		5137<4963	P03 TO Y04	*Call
2098<2096		5137<4964	P04 TO Y04	*Call
2098<2096		5137<4966	Q02 TO Y04	*Call
2098<2096		5137<4967	Q03 TO Y04	*Call
2098<2096		5137<4968	Q04 TO Y04	*Call
2098<2096		5137<4969	R01 TO Y04	*Call
2098<2096		5137<4970	R02 TO Y04	*Call
2098<2096		5137<4971	R03 TO Y04	*Call
2098<2096		5137<4972	R04 TO Y04	*Call
2098<2096		5137<4973	S01 TO Y04	*Call
2098<2096		5137<4974	S02 TO Y04	*Call
2098<2096		5137<4975	S03 TO Y04	*Call
2098<2096		5137<4976	S04 TO Y04	*Call
2098<2096		5137<4977	T01 TO Y04	*Call
2098<2096		5137<4978	T02 TO Y04	*Call
2098<2096		5137<4979	T03 TO Y04	*Call
2098<2096		5137<4980	T04 TO Y04	*Call
2098<2096		5137<4981	U01 TO Y04	*Call
2098<2096		5137<4982	U02 TO Y04	*Call
2098<2096		5137<4983	U03 TO Y04	*Call
2098<2096		5137<4984	U04 TO Y04	*Call
2098<2096		5137<4985	V01 TO Y04	*Call
2098<2096		5137<4986	V02 TO Y04	*Call
2098<2096		5137<4987	V03 TO Y04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5137<4988	V04 TO Y04	*Call
2098<2096		5137<4989	W01 TO Y04	*Call
2098<2096		5137<4990	W02 TO Y04	*Call
2098<2096		5137<4991	W03 TO Y04	*Call
2098<2096		5137<4992	W04 TO Y04	*Call
2098<2096		5137<4993	X01 TO Y04	*Call
2098<2096		5137<4994	X02 TO Y04	*Call
2098<2096		5137<4995	X03 TO Y04	*Call
2098<2096		5137<4996	X04 TO Y04	*Call
2098<2096		5137<4997	Y01 TO Y04	*Call
2098<2096		5137<4998	Y02 TO Y04	*Call
2098<2096		5137<4999	Y03 TO Y04	*Call
2098<2096		5137<5000	Y04 TO Y04	*Call
2098<2096		5137<5001	Z01 TO Y04	*Call
2098<2096		5137<5002	Z02 TO Y04	*Call
2098<2096		5137<5003	Z03 TO Y04	*Call
2098<2096		5137<5004	Z04 TO Y04	*Call
2098<2096		5138<4900	Z00 TO Y05	*Call
2098<2096		5138<4901	A01 TO Y05	*Call
2098<2096		5138<4902	A02 TO Y05	*Call
2098<2096		5138<4903	A03 TO Y05	*Call
2098<2096		5138<4905	B01 TO Y05	*Call
2098<2096		5138<4906	B02 TO Y05	*Call
2098<2096		5138<4907	B03 TO Y05	*Call
2098<2096		5138<4909	C01 TO Y05	*Call
2098<2096		5138<4910	C02 TO Y05	*Call
2098<2096		5138<4911	C03 TO Y05	*Call
2098<2096		5138<4913	D01 TO Y05	*Call
2098<2096		5138<4914	D02 TO Y05	*Call
2098<2096		5138<4915	D03 TO Y05	*Call
2098<2096		5138<4917	E01 TO Y05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5138<4918	E02 TO Y05	*Call
2098<2096		5138<4921	F01 TO Y05	*Call
2098<2096		5138<4922	F02 TO Y05	*Call
2098<2096		5138<4925	G01 TO Y05	*Call
2098<2096		5138<4929	H01 TO Y05	*Call
2098<2096		5138<4933	I01 TO Y05	*Call
2098<2096		5138<4937	J01 TO Y05	*Call
2098<2096		5138<4944	K04 TO Y05	*Call
2098<2096		5138<4947	L03 TO Y05	*Call
2098<2096		5138<4948	L04 TO Y05	*Call
2098<2096		5138<4951	M03 TO Y05	*Call
2098<2096		5138<4952	M04 TO Y05	*Call
2098<2096		5138<4954	N02 TO Y05	*Call
2098<2096		5138<4955	N03 TO Y05	*Call
2098<2096		5138<4956	N04 TO Y05	*Call
2098<2096		5138<4958	O02 TO Y05	*Call
2098<2096		5138<4959	O03 TO Y05	*Call
2098<2096		5138<4960	O04 TO Y05	*Call
2098<2096		5138<4962	P02 TO Y05	*Call
2098<2096		5138<4963	P03 TO Y05	*Call
2098<2096		5138<4964	P04 TO Y05	*Call
2098<2096		5138<4966	Q02 TO Y05	*Call
2098<2096		5138<4967	Q03 TO Y05	*Call
2098<2096		5138<4968	Q04 TO Y05	*Call
2098<2096		5138<4969	R01 TO Y05	*Call
2098<2096		5138<4970	R02 TO Y05	*Call
2098<2096		5138<4971	R03 TO Y05	*Call
2098<2096		5138<4972	R04 TO Y05	*Call
2098<2096		5138<4973	S01 TO Y05	*Call
2098<2096		5138<4974	S02 TO Y05	*Call
2098<2096		5138<4975	S03 TO Y05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5138<4976	S04 TO Y05	*Call
2098<2096		5138<4977	T01 TO Y05	*Call
2098<2096		5138<4978	T02 TO Y05	*Call
2098<2096		5138<4979	T03 TO Y05	*Call
2098<2096		5138<4980	T04 TO Y05	*Call
2098<2096		5138<4981	U01 TO Y05	*Call
2098<2096		5138<4982	U02 TO Y05	*Call
2098<2096		5138<4983	U03 TO Y05	*Call
2098<2096		5138<4984	U04 TO Y05	*Call
2098<2096		5138<4985	V01 TO Y05	*Call
2098<2096		5138<4986	V02 TO Y05	*Call
2098<2096		5138<4987	V03 TO Y05	*Call
2098<2096		5138<4988	V04 TO Y05	*Call
2098<2096		5138<4989	W01 TO Y05	*Call
2098<2096		5138<4990	W02 TO Y05	*Call
2098<2096		5138<4991	W03 TO Y05	*Call
2098<2096		5138<4992	W04 TO Y05	*Call
2098<2096		5138<4993	X01 TO Y05	*Call
2098<2096		5138<4994	X02 TO Y05	*Call
2098<2096		5138<4995	X03 TO Y05	*Call
2098<2096		5138<4996	X04 TO Y05	*Call
2098<2096		5138<4997	Y01 TO Y05	*Call
2098<2096		5138<4998	Y02 TO Y05	*Call
2098<2096		5138<4999	Y03 TO Y05	*Call
2098<2096		5138<5000	Y04 TO Y05	*Call
2098<2096		5138<5001	Z01 TO Y05	*Call
2098<2096		5138<5002	Z02 TO Y05	*Call
2098<2096		5138<5003	Z03 TO Y05	*Call
2098<2096		5138<5004	Z04 TO Y05	*Call
2098<2096		5139<4900	Z00 TO Z01	*Call
2098<2096		5139<4901	A01 TO Z01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5139<4902	A02 TO Z01	*Call
2098<2096		5139<4903	A03 TO Z01	*Call
2098<2096		5139<4905	B01 TO Z01	*Call
2098<2096		5139<4906	B02 TO Z01	*Call
2098<2096		5139<4907	B03 TO Z01	*Call
2098<2096		5139<4909	C01 TO Z01	*Call
2098<2096		5139<4910	C02 TO Z01	*Call
2098<2096		5139<4911	C03 TO Z01	*Call
2098<2096		5139<4913	D01 TO Z01	*Call
2098<2096		5139<4914	D02 TO Z01	*Call
2098<2096		5139<4915	D03 TO Z01	*Call
2098<2096		5139<4917	E01 TO Z01	*Call
2098<2096		5139<4918	E02 TO Z01	*Call
2098<2096		5139<4921	F01 TO Z01	*Call
2098<2096		5139<4922	F02 TO Z01	*Call
2098<2096		5139<4925	G01 TO Z01	*Call
2098<2096		5139<4929	H01 TO Z01	*Call
2098<2096		5139<4933	I01 TO Z01	*Call
2098<2096		5139<4937	J01 TO Z01	*Call
2098<2096		5139<4944	K04 TO Z01	*Call
2098<2096		5139<4947	L03 TO Z01	*Call
2098<2096		5139<4948	L04 TO Z01	*Call
2098<2096		5139<4951	M03 TO Z01	*Call
2098<2096		5139<4952	M04 TO Z01	*Call
2098<2096		5139<4954	N02 TO Z01	*Call
2098<2096		5139<4955	N03 TO Z01	*Call
2098<2096		5139<4956	N04 TO Z01	*Call
2098<2096		5139<4958	O02 TO Z01	*Call
2098<2096		5139<4959	O03 TO Z01	*Call
2098<2096		5139<4960	O04 TO Z01	*Call
2098<2096		5139<4962	P02 TO Z01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5139<4963	P03 TO Z01	*Call
2098<2096		5139<4964	P04 TO Z01	*Call
2098<2096		5139<4966	Q02 TO Z01	*Call
2098<2096		5139<4967	Q03 TO Z01	*Call
2098<2096		5139<4968	Q04 TO Z01	*Call
2098<2096		5139<4969	R01 TO Z01	*Call
2098<2096		5139<4970	R02 TO Z01	*Call
2098<2096		5139<4971	R03 TO Z01	*Call
2098<2096		5139<4972	R04 TO Z01	*Call
2098<2096		5139<4973	S01 TO Z01	*Call
2098<2096		5139<4974	S02 TO Z01	*Call
2098<2096		5139<4975	S03 TO Z01	*Call
2098<2096		5139<4976	S04 TO Z01	*Call
2098<2096		5139<4977	T01 TO Z01	*Call
2098<2096		5139<4978	T02 TO Z01	*Call
2098<2096		5139<4979	T03 TO Z01	*Call
2098<2096		5139<4980	T04 TO Z01	*Call
2098<2096		5139<4981	U01 TO Z01	*Call
2098<2096		5139<4982	U02 TO Z01	*Call
2098<2096		5139<4983	U03 TO Z01	*Call
2098<2096		5139<4984	U04 TO Z01	*Call
2098<2096		5139<4985	V01 TO Z01	*Call
2098<2096		5139<4986	V02 TO Z01	*Call
2098<2096		5139<4987	V03 TO Z01	*Call
2098<2096		5139<4988	V04 TO Z01	*Call
2098<2096		5139<4989	W01 TO Z01	*Call
2098<2096		5139<4990	W02 TO Z01	*Call
2098<2096		5139<4991	W03 TO Z01	*Call
2098<2096		5139<4992	W04 TO Z01	*Call
2098<2096		5139<4993	X01 TO Z01	*Call
2098<2096		5139<4994	X02 TO Z01	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5139<4995	X03 TO Z01	*Call
2098<2096		5139<4996	X04 TO Z01	*Call
2098<2096		5139<4997	Y01 TO Z01	*Call
2098<2096		5139<4998	Y02 TO Z01	*Call
2098<2096		5139<4999	Y03 TO Z01	*Call
2098<2096		5139<5000	Y04 TO Z01	*Call
2098<2096		5139<5001	Z01 TO Z01	*Call
2098<2096		5139<5002	Z02 TO Z01	*Call
2098<2096		5139<5003	Z03 TO Z01	*Call
2098<2096		5139<5004	Z04 TO Z01	*Call
2098<2096		5140<4900	Z00 TO Z02	*Call
2098<2096		5140<4901	A01 TO Z02	*Call
2098<2096		5140<4902	A02 TO Z02	*Call
2098<2096		5140<4903	A03 TO Z02	*Call
2098<2096		5140<4905	B01 TO Z02	*Call
2098<2096		5140<4906	B02 TO Z02	*Call
2098<2096		5140<4907	B03 TO Z02	*Call
2098<2096		5140<4909	C01 TO Z02	*Call
2098<2096		5140<4910	C02 TO Z02	*Call
2098<2096		5140<4911	C03 TO Z02	*Call
2098<2096		5140<4913	D01 TO Z02	*Call
2098<2096		5140<4914	D02 TO Z02	*Call
2098<2096		5140<4915	D03 TO Z02	*Call
2098<2096		5140<4917	E01 TO Z02	*Call
2098<2096		5140<4918	E02 TO Z02	*Call
2098<2096		5140<4921	F01 TO Z02	*Call
2098<2096		5140<4922	F02 TO Z02	*Call
2098<2096		5140<4925	G01 TO Z02	*Call
2098<2096		5140<4929	H01 TO Z02	*Call
2098<2096		5140<4933	I01 TO Z02	*Call
2098<2096		5140<4937	J01 TO Z02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5140<4944	K04 TO Z02	*Call
2098<2096		5140<4947	L03 TO Z02	*Call
2098<2096		5140<4948	L04 TO Z02	*Call
2098<2096		5140<4951	M03 TO Z02	*Call
2098<2096		5140<4952	M04 TO Z02	*Call
2098<2096		5140<4954	N02 TO Z02	*Call
2098<2096		5140<4955	N03 TO Z02	*Call
2098<2096		5140<4956	N04 TO Z02	*Call
2098<2096		5140<4958	O02 TO Z02	*Call
2098<2096		5140<4959	O03 TO Z02	*Call
2098<2096		5140<4960	O04 TO Z02	*Call
2098<2096		5140<4962	P02 TO Z02	*Call
2098<2096		5140<4963	P03 TO Z02	*Call
2098<2096		5140<4964	P04 TO Z02	*Call
2098<2096		5140<4966	Q02 TO Z02	*Call
2098<2096		5140<4967	Q03 TO Z02	*Call
2098<2096		5140<4968	Q04 TO Z02	*Call
2098<2096		5140<4969	R01 TO Z02	*Call
2098<2096		5140<4970	R02 TO Z02	*Call
2098<2096		5140<4971	R03 TO Z02	*Call
2098<2096		5140<4972	R04 TO Z02	*Call
2098<2096		5140<4973	S01 TO Z02	*Call
2098<2096		5140<4974	S02 TO Z02	*Call
2098<2096		5140<4975	S03 TO Z02	*Call
2098<2096		5140<4976	S04 TO Z02	*Call
2098<2096		5140<4977	T01 TO Z02	*Call
2098<2096		5140<4978	T02 TO Z02	*Call
2098<2096		5140<4979	T03 TO Z02	*Call
2098<2096		5140<4980	T04 TO Z02	*Call
2098<2096		5140<4981	U01 TO Z02	*Call
2098<2096		5140<4982	U02 TO Z02	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5140<4983	U03 TO Z02	*Call
2098<2096		5140<4984	U04 TO Z02	*Call
2098<2096		5140<4985	V01 TO Z02	*Call
2098<2096		5140<4986	V02 TO Z02	*Call
2098<2096		5140<4987	V03 TO Z02	*Call
2098<2096		5140<4988	V04 TO Z02	*Call
2098<2096		5140<4989	W01 TO Z02	*Call
2098<2096		5140<4990	W02 TO Z02	*Call
2098<2096		5140<4991	W03 TO Z02	*Call
2098<2096		5140<4992	W04 TO Z02	*Call
2098<2096		5140<4993	X01 TO Z02	*Call
2098<2096		5140<4994	X02 TO Z02	*Call
2098<2096		5140<4995	X03 TO Z02	*Call
2098<2096		5140<4996	X04 TO Z02	*Call
2098<2096		5140<4997	Y01 TO Z02	*Call
2098<2096		5140<4998	Y02 TO Z02	*Call
2098<2096		5140<4999	Y03 TO Z02	*Call
2098<2096		5140<5000	Y04 TO Z02	*Call
2098<2096		5140<5001	Z01 TO Z02	*Call
2098<2096		5140<5002	Z02 TO Z02	*Call
2098<2096		5140<5003	Z03 TO Z02	*Call
2098<2096		5140<5004	Z04 TO Z02	*Call
2098<2096		5141<4900	Z00 TO Z03	*Call
2098<2096		5141<4901	A01 TO Z03	*Call
2098<2096		5141<4902	A02 TO Z03	*Call
2098<2096		5141<4903	A03 TO Z03	*Call
2098<2096		5141<4905	B01 TO Z03	*Call
2098<2096		5141<4906	B02 TO Z03	*Call
2098<2096		5141<4907	B03 TO Z03	*Call
2098<2096		5141<4909	C01 TO Z03	*Call
2098<2096		5141<4910	C02 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5141<4911	C03 TO Z03	*Call
2098<2096		5141<4913	D01 TO Z03	*Call
2098<2096		5141<4914	D02 TO Z03	*Call
2098<2096		5141<4915	D03 TO Z03	*Call
2098<2096		5141<4917	E01 TO Z03	*Call
2098<2096		5141<4918	E02 TO Z03	*Call
2098<2096		5141<4921	F01 TO Z03	*Call
2098<2096		5141<4922	F02 TO Z03	*Call
2098<2096		5141<4925	G01 TO Z03	*Call
2098<2096		5141<4929	H01 TO Z03	*Call
2098<2096		5141<4933	I01 TO Z03	*Call
2098<2096		5141<4937	J01 TO Z03	*Call
2098<2096		5141<4944	K04 TO Z03	*Call
2098<2096		5141<4947	L03 TO Z03	*Call
2098<2096		5141<4948	L04 TO Z03	*Call
2098<2096		5141<4951	M03 TO Z03	*Call
2098<2096		5141<4952	M04 TO Z03	*Call
2098<2096		5141<4954	N02 TO Z03	*Call
2098<2096		5141<4955	N03 TO Z03	*Call
2098<2096		5141<4956	N04 TO Z03	*Call
2098<2096		5141<4958	O02 TO Z03	*Call
2098<2096		5141<4959	O03 TO Z03	*Call
2098<2096		5141<4960	O04 TO Z03	*Call
2098<2096		5141<4962	P02 TO Z03	*Call
2098<2096		5141<4963	P03 TO Z03	*Call
2098<2096		5141<4964	P04 TO Z03	*Call
2098<2096		5141<4966	Q02 TO Z03	*Call
2098<2096		5141<4967	Q03 TO Z03	*Call
2098<2096		5141<4968	Q04 TO Z03	*Call
2098<2096		5141<4969	R01 TO Z03	*Call
2098<2096		5141<4970	R02 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5141<4971	R03 TO Z03	*Call
2098<2096		5141<4972	R04 TO Z03	*Call
2098<2096		5141<4973	S01 TO Z03	*Call
2098<2096		5141<4974	S02 TO Z03	*Call
2098<2096		5141<4975	S03 TO Z03	*Call
2098<2096		5141<4976	S04 TO Z03	*Call
2098<2096		5141<4977	T01 TO Z03	*Call
2098<2096		5141<4978	T02 TO Z03	*Call
2098<2096		5141<4979	T03 TO Z03	*Call
2098<2096		5141<4980	T04 TO Z03	*Call
2098<2096		5141<4981	U01 TO Z03	*Call
2098<2096		5141<4982	U02 TO Z03	*Call
2098<2096		5141<4983	U03 TO Z03	*Call
2098<2096		5141<4984	U04 TO Z03	*Call
2098<2096		5141<4985	V01 TO Z03	*Call
2098<2096		5141<4986	V02 TO Z03	*Call
2098<2096		5141<4987	V03 TO Z03	*Call
2098<2096		5141<4988	V04 TO Z03	*Call
2098<2096		5141<4989	W01 TO Z03	*Call
2098<2096		5141<4990	W02 TO Z03	*Call
2098<2096		5141<4991	W03 TO Z03	*Call
2098<2096		5141<4992	W04 TO Z03	*Call
2098<2096		5141<4993	X01 TO Z03	*Call
2098<2096		5141<4994	X02 TO Z03	*Call
2098<2096		5141<4995	X03 TO Z03	*Call
2098<2096		5141<4996	X04 TO Z03	*Call
2098<2096		5141<4997	Y01 TO Z03	*Call
2098<2096		5141<4998	Y02 TO Z03	*Call
2098<2096		5141<4999	Y03 TO Z03	*Call
2098<2096		5141<5000	Y04 TO Z03	*Call
2098<2096		5141<5001	Z01 TO Z03	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5141<5002	Z02 TO Z03	*Call
2098<2096		5141<5003	Z03 TO Z03	*Call
2098<2096		5141<5004	Z04 TO Z03	*Call
2098<2096		5142<4900	Z00 TO Z04	*Call
2098<2096		5142<4901	A01 TO Z04	*Call
2098<2096		5142<4902	A02 TO Z04	*Call
2098<2096		5142<4903	A03 TO Z04	*Call
2098<2096		5142<4905	B01 TO Z04	*Call
2098<2096		5142<4906	B02 TO Z04	*Call
2098<2096		5142<4907	B03 TO Z04	*Call
2098<2096		5142<4909	C01 TO Z04	*Call
2098<2096		5142<4910	C02 TO Z04	*Call
2098<2096		5142<4911	C03 TO Z04	*Call
2098<2096		5142<4913	D01 TO Z04	*Call
2098<2096		5142<4914	D02 TO Z04	*Call
2098<2096		5142<4915	D03 TO Z04	*Call
2098<2096		5142<4917	E01 TO Z04	*Call
2098<2096		5142<4918	E02 TO Z04	*Call
2098<2096		5142<4921	F01 TO Z04	*Call
2098<2096		5142<4922	F02 TO Z04	*Call
2098<2096		5142<4925	G01 TO Z04	*Call
2098<2096		5142<4929	H01 TO Z04	*Call
2098<2096		5142<4933	I01 TO Z04	*Call
2098<2096		5142<4937	J01 TO Z04	*Call
2098<2096		5142<4944	K04 TO Z04	*Call
2098<2096		5142<4947	L03 TO Z04	*Call
2098<2096		5142<4948	L04 TO Z04	*Call
2098<2096		5142<4951	M03 TO Z04	*Call
2098<2096		5142<4952	M04 TO Z04	*Call
2098<2096		5142<4954	N02 TO Z04	*Call
2098<2096		5142<4955	N03 TO Z04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5142<4956	N04 TO Z04	*Call
2098<2096		5142<4958	O02 TO Z04	*Call
2098<2096		5142<4959	O03 TO Z04	*Call
2098<2096		5142<4960	O04 TO Z04	*Call
2098<2096		5142<4962	P02 TO Z04	*Call
2098<2096		5142<4963	P03 TO Z04	*Call
2098<2096		5142<4964	P04 TO Z04	*Call
2098<2096		5142<4966	Q02 TO Z04	*Call
2098<2096		5142<4967	Q03 TO Z04	*Call
2098<2096		5142<4968	Q04 TO Z04	*Call
2098<2096		5142<4969	R01 TO Z04	*Call
2098<2096		5142<4970	R02 TO Z04	*Call
2098<2096		5142<4971	R03 TO Z04	*Call
2098<2096		5142<4972	R04 TO Z04	*Call
2098<2096		5142<4973	S01 TO Z04	*Call
2098<2096		5142<4974	S02 TO Z04	*Call
2098<2096		5142<4975	S03 TO Z04	*Call
2098<2096		5142<4976	S04 TO Z04	*Call
2098<2096		5142<4977	T01 TO Z04	*Call
2098<2096		5142<4978	T02 TO Z04	*Call
2098<2096		5142<4979	T03 TO Z04	*Call
2098<2096		5142<4980	T04 TO Z04	*Call
2098<2096		5142<4981	U01 TO Z04	*Call
2098<2096		5142<4982	U02 TO Z04	*Call
2098<2096		5142<4983	U03 TO Z04	*Call
2098<2096		5142<4984	U04 TO Z04	*Call
2098<2096		5142<4985	V01 TO Z04	*Call
2098<2096		5142<4986	V02 TO Z04	*Call
2098<2096		5142<4987	V03 TO Z04	*Call
2098<2096		5142<4988	V04 TO Z04	*Call
2098<2096		5142<4989	W01 TO Z04	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5142<4990	W02 TO Z04	*Call
2098<2096		5142<4991	W03 TO Z04	*Call
2098<2096		5142<4992	W04 TO Z04	*Call
2098<2096		5142<4993	X01 TO Z04	*Call
2098<2096		5142<4994	X02 TO Z04	*Call
2098<2096		5142<4995	X03 TO Z04	*Call
2098<2096		5142<4996	X04 TO Z04	*Call
2098<2096		5142<4997	Y01 TO Z04	*Call
2098<2096		5142<4998	Y02 TO Z04	*Call
2098<2096		5142<4999	Y03 TO Z04	*Call
2098<2096		5142<5000	Y04 TO Z04	*Call
2098<2096		5142<5001	Z01 TO Z04	*Call
2098<2096		5142<5002	Z02 TO Z04	*Call
2098<2096		5142<5003	Z03 TO Z04	*Call
2098<2096		5142<5004	Z04 TO Z04	*Call
2098<2096		5143<4900	Z00 TO Z05	*Call
2098<2096		5143<4901	A01 TO Z05	*Call
2098<2096		5143<4902	A02 TO Z05	*Call
2098<2096		5143<4903	A03 TO Z05	*Call
2098<2096		5143<4905	B01 TO Z05	*Call
2098<2096		5143<4906	B02 TO Z05	*Call
2098<2096		5143<4907	B03 TO Z05	*Call
2098<2096		5143<4909	C01 TO Z05	*Call
2098<2096		5143<4910	C02 TO Z05	*Call
2098<2096		5143<4911	C03 TO Z05	*Call
2098<2096		5143<4913	D01 TO Z05	*Call
2098<2096		5143<4914	D02 TO Z05	*Call
2098<2096		5143<4915	D03 TO Z05	*Call
2098<2096		5143<4917	E01 TO Z05	*Call
2098<2096		5143<4918	E02 TO Z05	*Call
2098<2096		5143<4921	F01 TO Z05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5143<4922	F02 TO Z05	*Call
2098<2096		5143<4925	G01 TO Z05	*Call
2098<2096		5143<4929	H01 TO Z05	*Call
2098<2096		5143<4933	I01 TO Z05	*Call
2098<2096		5143<4937	J01 TO Z05	*Call
2098<2096		5143<4944	K04 TO Z05	*Call
2098<2096		5143<4947	L03 TO Z05	*Call
2098<2096		5143<4948	L04 TO Z05	*Call
2098<2096		5143<4951	M03 TO Z05	*Call
2098<2096		5143<4952	M04 TO Z05	*Call
2098<2096		5143<4954	N02 TO Z05	*Call
2098<2096		5143<4955	N03 TO Z05	*Call
2098<2096		5143<4956	N04 TO Z05	*Call
2098<2096		5143<4958	O02 TO Z05	*Call
2098<2096		5143<4959	O03 TO Z05	*Call
2098<2096		5143<4960	O04 TO Z05	*Call
2098<2096		5143<4962	P02 TO Z05	*Call
2098<2096		5143<4963	P03 TO Z05	*Call
2098<2096		5143<4964	P04 TO Z05	*Call
2098<2096		5143<4966	Q02 TO Z05	*Call
2098<2096		5143<4967	Q03 TO Z05	*Call
2098<2096		5143<4968	Q04 TO Z05	*Call
2098<2096		5143<4969	R01 TO Z05	*Call
2098<2096		5143<4970	R02 TO Z05	*Call
2098<2096		5143<4971	R03 TO Z05	*Call
2098<2096		5143<4972	R04 TO Z05	*Call
2098<2096		5143<4973	S01 TO Z05	*Call
2098<2096		5143<4974	S02 TO Z05	*Call
2098<2096		5143<4975	S03 TO Z05	*Call
2098<2096		5143<4976	S04 TO Z05	*Call
2098<2096		5143<4977	T01 TO Z05	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		5143<4978	T02 TO Z05	*Call
2098<2096		5143<4979	T03 TO Z05	*Call
2098<2096		5143<4980	T04 TO Z05	*Call
2098<2096		5143<4981	U01 TO Z05	*Call
2098<2096		5143<4982	U02 TO Z05	*Call
2098<2096		5143<4983	U03 TO Z05	*Call
2098<2096		5143<4984	U04 TO Z05	*Call
2098<2096		5143<4985	V01 TO Z05	*Call
2098<2096		5143<4986	V02 TO Z05	*Call
2098<2096		5143<4987	V03 TO Z05	*Call
2098<2096		5143<4988	V04 TO Z05	*Call
2098<2096		5143<4989	W01 TO Z05	*Call
2098<2096		5143<4990	W02 TO Z05	*Call
2098<2096		5143<4991	W03 TO Z05	*Call
2098<2096		5143<4992	W04 TO Z05	*Call
2098<2096		5143<4993	X01 TO Z05	*Call
2098<2096		5143<4994	X02 TO Z05	*Call
2098<2096		5143<4995	X03 TO Z05	*Call
2098<2096		5143<4996	X04 TO Z05	*Call
2098<2096		5143<4997	Y01 TO Z05	*Call
2098<2096		5143<4998	Y02 TO Z05	*Call
2098<2096		5143<4999	Y03 TO Z05	*Call
2098<2096		5143<5000	Y04 TO Z05	*Call
2098<2096		5143<5001	Z01 TO Z05	*Call
2098<2096		5143<5002	Z02 TO Z05	*Call
2098<2096		5143<5003	Z03 TO Z05	*Call
2098<2096		5143<5004	Z04 TO Z05	*Call
2098<2096		6650<7838	ADDL SAP TO IFL	*Call
2098<2096		6650<7867	ICF TO IFL	*Call
2098<2096		6650<7868	ZIIP TO IFL	*Call
2098<2096		6650<7869	ZAAP TO IFL	*Call

*Call- For pricing information please call the
IBM Federal Information Call Center at 1-800-333-6705

Machine Type	Model	Feature	Description	GSA Price
2098<2096		6651<7838	ADDL SAP TO ICF	*Call
2098<2096		6651<7839	UIFL TO ICF	*Call
2098<2096		6651<7866	IFL TO ICF	*Call
2098<2096		6651<7868	ZIIP TO ICF	*Call
2098<2096		6651<7869	ZAAP TO ICF	*Call
2098<2096		6652<7839	UIFL TO ADDL SAP	*Call
2098<2096		6652<7866	IFL TO ADDL SAP	*Call
2098<2096		6652<7867	ICF TO ADDL SAP	*Call
2098<2096		6652<7868	ZIIP TO ADDL SAP	*Call
2098<2096		6652<7869	ZAAP TO ADDL SAP	*Call
2098<2096		6653<7838	ADDL SAP TO ZAAP	*Call
2098<2096		6653<7839	UIFL TO ZAAP	*Call
2098<2096		6653<7866	IFL TO ZAAP	*Call
2098<2096		6653<7867	ICF TO ZAAP	*Call
2098<2096		6653<7868	ZIIP TO ZAAP	*Call
2098<2096		6654<7838	ADDL SAP TO ZIIP	*Call
2098<2096		6654<7839	UIFL TO ZIIP	*Call
2098<2096		6654<7866	IFL TO ZIIP	*Call
2098<2096		6654<7867	ICF TO ZIIP	*Call
2098<2096		6654<7869	ZAAP TO ZIIP	*Call
2098<2096		6655<7838	ADDL SAP TO UIFL	*Call
2098<2096		6655<7867	ICF TO UIFL	*Call
2098<2096		6655<7868	ZIIP TO UIFL	*Call
2098<2096		6655<7869	ZAAP TO UIFL	*Call