

**Effective
10/7/2013**

Machine Type	Model	Feature	Description	GSA Price
2084<2064		2601<8051	MEMORY TO MEMORY	*Call
2084<2064		2601<8061	MEMORY TO MEMORY	*Call
2084<2064		2601<8071	MEMORY TO MEMORY	*Call
2084<2064		2602<8051	MEMORY TO MEMORY	*Call
2084<2064		2602<8061	MEMORY TO MEMORY	*Call
2084<2064		2602<8071	MEMORY TO MEMORY	*Call
2084<2064		2603<8051	MEMORY TO MEMORY	*Call
2084<2064		2603<8061	MEMORY TO MEMORY	*Call
2084<2064		2603<8071	MEMORY TO MEMORY	*Call
2084<2064		2603<8081	MEMORY TO MEMORY	*Call
2084<2064		2603<8100	MEMORY TO MEMORY	*Call
2084<2064		2603<8101	MEMORY TO MEMORY	*Call
2084<2064		2603<8120	MEMORY TO MEMORY	*Call
2084<2064		2603<8121	MEMORY TO MEMORY	*Call
2084<2064		2603<8140	MEMORY TO MEMORY	*Call
2084<2064		2603<8141	MEMORY TO MEMORY	*Call
2084<2064		2604<8051	MEMORY TO MEMORY	*Call
2084<2064		2604<8061	MEMORY TO MEMORY	*Call
2084<2064		2604<8071	MEMORY TO MEMORY	*Call
2084<2064		2604<8081	MEMORY TO MEMORY	*Call
2084<2064		2604<8100	MEMORY TO MEMORY	*Call
2084<2064		2604<8101	MEMORY TO MEMORY	*Call
2084<2064		2604<8120	MEMORY TO MEMORY	*Call
2084<2064		2604<8121	MEMORY TO MEMORY	*Call
2084<2064		2604<8140	MEMORY TO MEMORY	*Call
2084<2064		2604<8141	MEMORY TO MEMORY	*Call
2084<2064		2604<8160	MEMORY TO MEMORY	*Call
2084<2064		2604<8161	MEMORY TO MEMORY	*Call
2084<2064		2604<8181	MEMORY TO MEMORY	*Call
2084<2064		2604<8200	MEMORY TO MEMORY	*Call
2084<2064		2604<8201	MEMORY TO MEMORY	*Call
2084<2064		2605<8051	MEMORY TO MEMORY	*Call
2084<2064		2605<8061	MEMORY TO MEMORY	*Call
2084<2064		2605<8071	MEMORY TO MEMORY	*Call
2084<2064		2605<8081	MEMORY TO MEMORY	*Call
2084<2064		2605<8100	MEMORY TO MEMORY	*Call
2084<2064		2605<8101	MEMORY TO MEMORY	*Call
2084<2064		2605<8120	MEMORY TO MEMORY	*Call
2084<2064		2605<8121	MEMORY TO MEMORY	*Call
2084<2064		2605<8140	MEMORY TO MEMORY	*Call
2084<2064		2605<8141	MEMORY TO MEMORY	*Call
2084<2064		2605<8160	MEMORY TO MEMORY	*Call
2084<2064		2605<8161	MEMORY TO MEMORY	*Call
2084<2064		2605<8181	MEMORY TO MEMORY	*Call
2084<2064		2605<8200	MEMORY TO MEMORY	*Call
2084<2064		2605<8201	MEMORY TO MEMORY	*Call
2084<2064		2605<8240	MEMORY TO MEMORY	*Call
2084<2064		2605<8241	MEMORY TO MEMORY	*Call
2084<2064		2605<8280	MEMORY TO MEMORY	*Call
2084<2064		2605<8281	MEMORY TO MEMORY	*Call
2084<2064		2606<8051	MEMORY TO MEMORY	*Call
2084<2064		2606<8061	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		2608<8241	MEMORY TO MEMORY	*Call
2084<2064		2608<8280	MEMORY TO MEMORY	*Call
2084<2064		2608<8281	MEMORY TO MEMORY	*Call
2084<2064		2608<8320	MEMORY TO MEMORY	*Call
2084<2064		2608<8321	MEMORY TO MEMORY	*Call
2084<2064		2608<8400	MEMORY TO MEMORY	*Call
2084<2064		2608<8480	MEMORY TO MEMORY	*Call
2084<2064		2609<8051	MEMORY TO MEMORY	*Call
2084<2064		2609<8061	MEMORY TO MEMORY	*Call
2084<2064		2609<8071	MEMORY TO MEMORY	*Call
2084<2064		2609<8081	MEMORY TO MEMORY	*Call
2084<2064		2609<8100	MEMORY TO MEMORY	*Call
2084<2064		2609<8101	MEMORY TO MEMORY	*Call
2084<2064		2609<8120	MEMORY TO MEMORY	*Call
2084<2064		2609<8121	MEMORY TO MEMORY	*Call
2084<2064		2609<8140	MEMORY TO MEMORY	*Call
2084<2064		2609<8141	MEMORY TO MEMORY	*Call
2084<2064		2609<8160	MEMORY TO MEMORY	*Call
2084<2064		2609<8161	MEMORY TO MEMORY	*Call
2084<2064		2609<8181	MEMORY TO MEMORY	*Call
2084<2064		2609<8200	MEMORY TO MEMORY	*Call
2084<2064		2609<8201	MEMORY TO MEMORY	*Call
2084<2064		2609<8240	MEMORY TO MEMORY	*Call
2084<2064		2609<8241	MEMORY TO MEMORY	*Call
2084<2064		2609<8280	MEMORY TO MEMORY	*Call
2084<2064		2609<8281	MEMORY TO MEMORY	*Call
2084<2064		2609<8320	MEMORY TO MEMORY	*Call
2084<2064		2609<8321	MEMORY TO MEMORY	*Call
2084<2064		2609<8400	MEMORY TO MEMORY	*Call
2084<2064		2609<8480	MEMORY TO MEMORY	*Call
2084<2064		2609<8560	MEMORY TO MEMORY	*Call
2084<2064		2610<8051	MEMORY TO MEMORY	*Call
2084<2064		2610<8061	MEMORY TO MEMORY	*Call
2084<2064		2610<8071	MEMORY TO MEMORY	*Call
2084<2064		2610<8081	MEMORY TO MEMORY	*Call
2084<2064		2610<8100	MEMORY TO MEMORY	*Call
2084<2064		2610<8101	MEMORY TO MEMORY	*Call
2084<2064		2610<8120	MEMORY TO MEMORY	*Call
2084<2064		2610<8121	MEMORY TO MEMORY	*Call
2084<2064		2610<8140	MEMORY TO MEMORY	*Call
2084<2064		2610<8141	MEMORY TO MEMORY	*Call
2084<2064		2610<8160	MEMORY TO MEMORY	*Call
2084<2064		2610<8161	MEMORY TO MEMORY	*Call
2084<2064		2610<8181	MEMORY TO MEMORY	*Call
2084<2064		2610<8200	MEMORY TO MEMORY	*Call
2084<2064		2610<8201	MEMORY TO MEMORY	*Call
2084<2064		2610<8240	MEMORY TO MEMORY	*Call
2084<2064		2610<8241	MEMORY TO MEMORY	*Call
2084<2064		2610<8280	MEMORY TO MEMORY	*Call
2084<2064		2610<8281	MEMORY TO MEMORY	*Call
2084<2064		2610<8320	MEMORY TO MEMORY	*Call
2084<2064		2610<8321	MEMORY TO MEMORY	*Call
2084<2064		2610<8400	MEMORY TO MEMORY	*Call
2084<2064		2610<8480	MEMORY TO MEMORY	*Call
2084<2064		2610<8560	MEMORY TO MEMORY	*Call
2084<2064		2610<8640	MEMORY TO MEMORY	*Call
2084<2064		2611<8051	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		2631<8061	MEMORY TO MEMORY	*Call
2084<2064		2631<8071	MEMORY TO MEMORY	*Call
2084<2064		2631<8081	MEMORY TO MEMORY	*Call
2084<2064		2631<8100	MEMORY TO MEMORY	*Call
2084<2064		2631<8101	MEMORY TO MEMORY	*Call
2084<2064		2631<8120	MEMORY TO MEMORY	*Call
2084<2064		2631<8121	MEMORY TO MEMORY	*Call
2084<2064		2631<8140	MEMORY TO MEMORY	*Call
2084<2064		2631<8141	MEMORY TO MEMORY	*Call
2084<2064		2631<8160	MEMORY TO MEMORY	*Call
2084<2064		2631<8161	MEMORY TO MEMORY	*Call
2084<2064		2631<8180	MEMORY TO MEMORY	*Call
2084<2064		2631<8181	MEMORY TO MEMORY	*Call
2084<2064		2631<8200	MEMORY TO MEMORY	*Call
2084<2064		2631<8201	MEMORY TO MEMORY	*Call
2084<2064		2631<8240	MEMORY TO MEMORY	*Call
2084<2064		2631<8241	MEMORY TO MEMORY	*Call
2084<2064		2631<8280	MEMORY TO MEMORY	*Call
2084<2064		2631<8281	MEMORY TO MEMORY	*Call
2084<2064		2631<8320	MEMORY TO MEMORY	*Call
2084<2064		2631<8321	MEMORY TO MEMORY	*Call
2084<2064		2631<8400	MEMORY TO MEMORY	*Call
2084<2064		2631<8480	MEMORY TO MEMORY	*Call
2084<2064		2631<8560	MEMORY TO MEMORY	*Call
2084<2064		2631<8640	MEMORY TO MEMORY	*Call
2084<2064		2632<8051	MEMORY TO MEMORY	*Call
2084<2064		2632<8061	MEMORY TO MEMORY	*Call
2084<2064		2632<8071	MEMORY TO MEMORY	*Call
2084<2064		2632<8081	MEMORY TO MEMORY	*Call
2084<2064		2632<8100	MEMORY TO MEMORY	*Call
2084<2064		2632<8101	MEMORY TO MEMORY	*Call
2084<2064		2632<8120	MEMORY TO MEMORY	*Call
2084<2064		2632<8121	MEMORY TO MEMORY	*Call
2084<2064		2632<8140	MEMORY TO MEMORY	*Call
2084<2064		2632<8141	MEMORY TO MEMORY	*Call
2084<2064		2632<8160	MEMORY TO MEMORY	*Call
2084<2064		2632<8161	MEMORY TO MEMORY	*Call
2084<2064		2632<8180	MEMORY TO MEMORY	*Call
2084<2064		2632<8181	MEMORY TO MEMORY	*Call
2084<2064		2632<8200	MEMORY TO MEMORY	*Call
2084<2064		2632<8201	MEMORY TO MEMORY	*Call
2084<2064		2632<8240	MEMORY TO MEMORY	*Call
2084<2064		2632<8241	MEMORY TO MEMORY	*Call
2084<2064		2632<8280	MEMORY TO MEMORY	*Call
2084<2064		2632<8281	MEMORY TO MEMORY	*Call
2084<2064		2632<8320	MEMORY TO MEMORY	*Call
2084<2064		2632<8321	MEMORY TO MEMORY	*Call
2084<2064		2632<8400	MEMORY TO MEMORY	*Call
2084<2064		2632<8480	MEMORY TO MEMORY	*Call
2084<2064		2632<8560	MEMORY TO MEMORY	*Call
2084<2064		2632<8640	MEMORY TO MEMORY	*Call
2084<2064		4400<1051	1-WAY TO ZERO-WAY	*Call
2084<2064		4400<1052	2-WAY TO ZERO-WAY	*Call
2084<2064		4400<1053	3-WAY TO ZERO-WAY	*Call
2084<2064		4400<1054	4-WAY TO ZERO-WAY	*Call
2084<2064		4400<1055	5-WAY TO ZERO-WAY	*Call
2084<2064		4400<1056	6-WAY TO ZERO-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4400<1057	7-WAY TO ZERO-WAY	*Call
2084<2064		4400<1058	8-WAY TO ZERO-WAY	*Call
2084<2064		4400<1059	9-WAY TO ZERO-WAY	*Call
2084<2064		4400<1061	1-WAY TO ZERO-WAY	*Call
2084<2064		4400<1062	2-WAY TO ZERO-WAY	*Call
2084<2064		4400<1063	3-WAY TO ZERO-WAY	*Call
2084<2064		4400<1064	4-WAY TO ZERO-WAY	*Call
2084<2064		4400<1065	5-WAY TO ZERO-WAY	*Call
2084<2064		4400<1066	6-WAY TO ZERO-WAY	*Call
2084<2064		4400<1067	7-WAY TO ZERO-WAY	*Call
2084<2064		4400<1068	8-WAY TO ZERO-WAY	*Call
2084<2064		4400<1069	9-WAY TO ZERO-WAY	*Call
2084<2064		4400<1070	10-WAY TO ZERO-WAY	*Call
2084<2064		4400<1071	11-WAY TO ZERO-WAY	*Call
2084<2064		4400<1072	12-WAY TO ZERO-WAY	*Call
2084<2064		4400<1073	13-WAY TO ZERO-WAY	*Call
2084<2064		4400<1074	14-WAY TO ZERO-WAY	*Call
2084<2064		4400<1075	15-WAY TO ZERO-WAY	*Call
2084<2064		4400<1076	16-WAY TO ZERO-WAY	*Call
2084<2064		4400<2061	1-WAY TO ZERO-WAY	*Call
2084<2064		4400<2062	2-WAY TO ZERO-WAY	*Call
2084<2064		4400<2063	3-WAY TO ZERO-WAY	*Call
2084<2064		4400<2064	4-WAY TO ZERO-WAY	*Call
2084<2064		4400<2065	5-WAY TO ZERO-WAY	*Call
2084<2064		4400<2066	6-WAY TO ZERO-WAY	*Call
2084<2064		4400<2067	7-WAY TO ZERO-WAY	*Call
2084<2064		4400<2068	8-WAY TO ZERO-WAY	*Call
2084<2064		4400<2069	9-WAY TO ZERO-WAY	*Call
2084<2064		4400<2070	10-WAY TO ZERO-WAY	*Call
2084<2064		4400<2071	11-WAY TO ZERO-WAY	*Call
2084<2064		4400<2072	12-WAY TO ZERO-WAY	*Call
2084<2064		4400<2073	13-WAY TO ZERO-WAY	*Call
2084<2064		4400<2074	14-WAY TO ZERO-WAY	*Call
2084<2064		4400<2075	15-WAY TO ZERO-WAY	*Call
2084<2064		4400<2076	16-WAY TO ZERO-WAY	*Call
2084<2064		4401<1051	1-WAY TO 1-WAY	*Call
2084<2064		4401<1052	2-WAY TO 1-WAY	*Call
2084<2064		4401<1053	3-WAY TO 1-WAY	*Call
2084<2064		4401<1054	4-WAY TO 1-WAY	*Call
2084<2064		4401<1055	5-WAY TO 1-WAY	*Call
2084<2064		4401<1056	6-WAY TO 1-WAY	*Call
2084<2064		4401<1057	7-WAY TO 1-WAY	*Call
2084<2064		4401<1058	8-WAY TO 1-WAY	*Call
2084<2064		4401<1059	9-WAY TO 1-WAY	*Call
2084<2064		4401<1061	1-WAY TO 1-WAY	*Call
2084<2064		4401<1062	2-WAY TO 1-WAY	*Call
2084<2064		4401<1063	3-WAY TO 1-WAY	*Call
2084<2064		4401<1064	4-WAY TO 1-WAY	*Call
2084<2064		4401<1065	5-WAY TO 1-WAY	*Call
2084<2064		4401<1066	6-WAY TO 1-WAY	*Call
2084<2064		4401<1067	7-WAY TO 1-WAY	*Call
2084<2064		4401<1068	8-WAY TO 1-WAY	*Call
2084<2064		4401<1069	9-WAY TO 1-WAY	*Call
2084<2064		4401<1070	10-WAY TO 1-WAY	*Call
2084<2064		4401<1071	11-WAY TO 1-WAY	*Call
2084<2064		4401<1072	12-WAY TO 1-WAY	*Call
2084<2064		4401<1073	13-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4401<1074	14-WAY TO 1-WAY	*Call
2084<2064		4401<1075	15-WAY TO 1-WAY	*Call
2084<2064		4401<1076	16-WAY TO 1-WAY	*Call
2084<2064		4401<2061	1-WAY TO 1-WAY	*Call
2084<2064		4401<2062	2-WAY TO 1-WAY	*Call
2084<2064		4401<2063	3-WAY TO 1-WAY	*Call
2084<2064		4401<2064	4-WAY TO 1-WAY	*Call
2084<2064		4401<2065	5-WAY TO 1-WAY	*Call
2084<2064		4401<2066	6-WAY TO 1-WAY	*Call
2084<2064		4401<2067	7-WAY TO 1-WAY	*Call
2084<2064		4401<2068	8-WAY TO 1-WAY	*Call
2084<2064		4401<2069	9-WAY TO 1-WAY	*Call
2084<2064		4401<2070	10-WAY TO 1-WAY	*Call
2084<2064		4401<2071	11-WAY TO 1-WAY	*Call
2084<2064		4401<2072	12-WAY TO 1-WAY	*Call
2084<2064		4401<2073	13-WAY TO 1-WAY	*Call
2084<2064		4401<2074	14-WAY TO 1-WAY	*Call
2084<2064		4401<2075	15-WAY TO 1-WAY	*Call
2084<2064		4401<2076	16-WAY TO 1-WAY	*Call
2084<2064		4402<1051	1-WAY TO 2-WAY	*Call
2084<2064		4402<1052	2-WAY TO 2-WAY	*Call
2084<2064		4402<1053	3-WAY TO 2-WAY	*Call
2084<2064		4402<1054	4-WAY TO 2-WAY	*Call
2084<2064		4402<1055	5-WAY TO 2-WAY	*Call
2084<2064		4402<1056	6-WAY TO 2-WAY	*Call
2084<2064		4402<1057	7-WAY TO 2-WAY	*Call
2084<2064		4402<1058	8-WAY TO 2-WAY	*Call
2084<2064		4402<1059	9-WAY TO 2-WAY	*Call
2084<2064		4402<1061	1-WAY TO 2-WAY	*Call
2084<2064		4402<1062	2-WAY TO 2-WAY	*Call
2084<2064		4402<1063	3-WAY TO 2-WAY	*Call
2084<2064		4402<1064	4-WAY TO 2-WAY	*Call
2084<2064		4402<1065	5-WAY TO 2-WAY	*Call
2084<2064		4402<1066	6-WAY TO 2-WAY	*Call
2084<2064		4402<1067	7-WAY TO 2-WAY	*Call
2084<2064		4402<1068	8-WAY TO 2-WAY	*Call
2084<2064		4402<1069	9-WAY TO 2-WAY	*Call
2084<2064		4402<1070	10-WAY TO 2-WAY	*Call
2084<2064		4402<1071	11-WAY TO 2-WAY	*Call
2084<2064		4402<1072	12-WAY TO 2-WAY	*Call
2084<2064		4402<1073	13-WAY TO 2-WAY	*Call
2084<2064		4402<1074	14-WAY TO 2-WAY	*Call
2084<2064		4402<1075	15-WAY TO 2-WAY	*Call
2084<2064		4402<1076	16-WAY TO 2-WAY	*Call
2084<2064		4402<2061	1-WAY TO 2-WAY	*Call
2084<2064		4402<2062	2-WAY TO 2-WAY	*Call
2084<2064		4402<2063	3-WAY TO 2-WAY	*Call
2084<2064		4402<2064	4-WAY TO 2-WAY	*Call
2084<2064		4402<2065	5-WAY TO 2-WAY	*Call
2084<2064		4402<2066	6-WAY TO 2-WAY	*Call
2084<2064		4402<2067	7-WAY TO 2-WAY	*Call
2084<2064		4402<2068	8-WAY TO 2-WAY	*Call
2084<2064		4402<2069	9-WAY TO 2-WAY	*Call
2084<2064		4402<2070	10-WAY TO 2-WAY	*Call
2084<2064		4402<2071	11-WAY TO 2-WAY	*Call
2084<2064		4402<2072	12-WAY TO 2-WAY	*Call
2084<2064		4402<2073	13-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4402<2074	14-WAY TO 2-WAY	*Call
2084<2064		4402<2075	15-WAY TO 2-WAY	*Call
2084<2064		4402<2076	16-WAY TO 2-WAY	*Call
2084<2064		4403<1051	1-WAY TO 3-WAY	*Call
2084<2064		4403<1052	2-WAY TO 3-WAY	*Call
2084<2064		4403<1053	3-WAY TO 3-WAY	*Call
2084<2064		4403<1054	4-WAY TO 3-WAY	*Call
2084<2064		4403<1055	5-WAY TO 3-WAY	*Call
2084<2064		4403<1056	6-WAY TO 3-WAY	*Call
2084<2064		4403<1057	7-WAY TO 3-WAY	*Call
2084<2064		4403<1058	8-WAY TO 3-WAY	*Call
2084<2064		4403<1059	9-WAY TO 3-WAY	*Call
2084<2064		4403<1061	1-WAY TO 3-WAY	*Call
2084<2064		4403<1062	2-WAY TO 3-WAY	*Call
2084<2064		4403<1063	3-WAY TO 3-WAY	*Call
2084<2064		4403<1064	4-WAY TO 3-WAY	*Call
2084<2064		4403<1065	5-WAY TO 3-WAY	*Call
2084<2064		4403<1066	6-WAY TO 3-WAY	*Call
2084<2064		4403<1067	7-WAY TO 3-WAY	*Call
2084<2064		4403<1068	8-WAY TO 3-WAY	*Call
2084<2064		4403<1069	9-WAY TO 3-WAY	*Call
2084<2064		4403<1070	10-WAY TO 3-WAY	*Call
2084<2064		4403<1071	11-WAY TO 3-WAY	*Call
2084<2064		4403<1072	12-WAY TO 3-WAY	*Call
2084<2064		4403<1073	13-WAY TO 3-WAY	*Call
2084<2064		4403<1074	14-WAY TO 3-WAY	*Call
2084<2064		4403<1075	15-WAY TO 3-WAY	*Call
2084<2064		4403<1076	16-WAY TO 3-WAY	*Call
2084<2064		4403<2061	1-WAY TO 3-WAY	*Call
2084<2064		4403<2062	2-WAY TO 3-WAY	*Call
2084<2064		4403<2063	3-WAY TO 3-WAY	*Call
2084<2064		4403<2064	4-WAY TO 3-WAY	*Call
2084<2064		4403<2065	5-WAY TO 3-WAY	*Call
2084<2064		4403<2066	6-WAY TO 3-WAY	*Call
2084<2064		4403<2067	7-WAY TO 3-WAY	*Call
2084<2064		4403<2068	8-WAY TO 3-WAY	*Call
2084<2064		4403<2069	9-WAY TO 3-WAY	*Call
2084<2064		4403<2070	10-WAY TO 3-WAY	*Call
2084<2064		4403<2071	11-WAY TO 3-WAY	*Call
2084<2064		4403<2072	12-WAY TO 3-WAY	*Call
2084<2064		4403<2073	13-WAY TO 3-WAY	*Call
2084<2064		4403<2074	14-WAY TO 3-WAY	*Call
2084<2064		4403<2075	15-WAY TO 3-WAY	*Call
2084<2064		4403<2076	16-WAY TO 3-WAY	*Call
2084<2064		4404<1051	1-WAY TO 4-WAY	*Call
2084<2064		4404<1052	2-WAY TO 4-WAY	*Call
2084<2064		4404<1053	3-WAY TO 4-WAY	*Call
2084<2064		4404<1054	4-WAY TO 4-WAY	*Call
2084<2064		4404<1055	5-WAY TO 4-WAY	*Call
2084<2064		4404<1056	6-WAY TO 4-WAY	*Call
2084<2064		4404<1057	7-WAY TO 4-WAY	*Call
2084<2064		4404<1058	8-WAY TO 4-WAY	*Call
2084<2064		4404<1059	9-WAY TO 4-WAY	*Call
2084<2064		4404<1061	1-WAY TO 4-WAY	*Call
2084<2064		4404<1062	2-WAY TO 4-WAY	*Call
2084<2064		4404<1063	3-WAY TO 4-WAY	*Call
2084<2064		4404<1064	4-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4404<1065	5-WAY TO 4-WAY	*Call
2084<2064		4404<1066	6-WAY TO 4-WAY	*Call
2084<2064		4404<1067	7-WAY TO 4-WAY	*Call
2084<2064		4404<1068	8-WAY TO 4-WAY	*Call
2084<2064		4404<1069	9-WAY TO 4-WAY	*Call
2084<2064		4404<1070	10-WAY TO 4-WAY	*Call
2084<2064		4404<1071	11-WAY TO 4-WAY	*Call
2084<2064		4404<1072	12-WAY TO 4-WAY	*Call
2084<2064		4404<1073	13-WAY TO 4-WAY	*Call
2084<2064		4404<1074	14-WAY TO 4-WAY	*Call
2084<2064		4404<1075	15-WAY TO 4-WAY	*Call
2084<2064		4404<1076	16-WAY TO 4-WAY	*Call
2084<2064		4404<2061	1-WAY TO 4-WAY	*Call
2084<2064		4404<2062	2-WAY TO 4-WAY	*Call
2084<2064		4404<2063	3-WAY TO 4-WAY	*Call
2084<2064		4404<2064	4-WAY TO 4-WAY	*Call
2084<2064		4404<2065	5-WAY TO 4-WAY	*Call
2084<2064		4404<2066	6-WAY TO 4-WAY	*Call
2084<2064		4404<2067	7-WAY TO 4-WAY	*Call
2084<2064		4404<2068	8-WAY TO 4-WAY	*Call
2084<2064		4404<2069	9-WAY TO 4-WAY	*Call
2084<2064		4404<2070	10-WAY TO 4-WAY	*Call
2084<2064		4404<2071	11-WAY TO 4-WAY	*Call
2084<2064		4404<2072	12-WAY TO 4-WAY	*Call
2084<2064		4404<2073	13-WAY TO 4-WAY	*Call
2084<2064		4404<2074	14-WAY TO 4-WAY	*Call
2084<2064		4404<2075	15-WAY TO 4-WAY	*Call
2084<2064		4404<2076	16-WAY TO 4-WAY	*Call
2084<2064		4405<1051	1-WAY TO 5-WAY	*Call
2084<2064		4405<1052	2-WAY TO 5-WAY	*Call
2084<2064		4405<1053	3-WAY TO 5-WAY	*Call
2084<2064		4405<1054	4-WAY TO 5-WAY	*Call
2084<2064		4405<1055	5-WAY TO 5-WAY	*Call
2084<2064		4405<1056	6-WAY TO 5-WAY	*Call
2084<2064		4405<1057	7-WAY TO 5-WAY	*Call
2084<2064		4405<1058	8-WAY TO 5-WAY	*Call
2084<2064		4405<1059	9-WAY TO 5-WAY	*Call
2084<2064		4405<1061	1-WAY TO 5-WAY	*Call
2084<2064		4405<1062	2-WAY TO 5-WAY	*Call
2084<2064		4405<1063	3-WAY TO 5-WAY	*Call
2084<2064		4405<1064	4-WAY TO 5-WAY	*Call
2084<2064		4405<1065	5-WAY TO 5-WAY	*Call
2084<2064		4405<1066	6-WAY TO 5-WAY	*Call
2084<2064		4405<1067	7-WAY TO 5-WAY	*Call
2084<2064		4405<1068	8-WAY TO 5-WAY	*Call
2084<2064		4405<1069	9-WAY TO 5-WAY	*Call
2084<2064		4405<1070	10-WAY TO 5-WAY	*Call
2084<2064		4405<1071	11-WAY TO 5-WAY	*Call
2084<2064		4405<1072	12-WAY TO 5-WAY	*Call
2084<2064		4405<1073	13-WAY TO 5-WAY	*Call
2084<2064		4405<1074	14-WAY TO 5-WAY	*Call
2084<2064		4405<1075	15-WAY TO 5-WAY	*Call
2084<2064		4405<1076	16-WAY TO 5-WAY	*Call
2084<2064		4405<2061	1-WAY TO 5-WAY	*Call
2084<2064		4405<2062	2-WAY TO 5-WAY	*Call
2084<2064		4405<2063	3-WAY TO 5-WAY	*Call
2084<2064		4405<2064	4-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4405<2065	5-WAY TO 5-WAY	*Call
2084<2064		4405<2066	6-WAY TO 5-WAY	*Call
2084<2064		4405<2067	7-WAY TO 5-WAY	*Call
2084<2064		4405<2068	8-WAY TO 5-WAY	*Call
2084<2064		4405<2069	9-WAY TO 5-WAY	*Call
2084<2064		4405<2070	10-WAY TO 5-WAY	*Call
2084<2064		4405<2071	11-WAY TO 5-WAY	*Call
2084<2064		4405<2072	12-WAY TO 5-WAY	*Call
2084<2064		4405<2073	13-WAY TO 5-WAY	*Call
2084<2064		4405<2074	14-WAY TO 5-WAY	*Call
2084<2064		4405<2075	15-WAY TO 5-WAY	*Call
2084<2064		4405<2076	16-WAY TO 5-WAY	*Call
2084<2064		4406<1051	1-WAY TO 6-WAY	*Call
2084<2064		4406<1052	2-WAY TO 6-WAY	*Call
2084<2064		4406<1053	3-WAY TO 6-WAY	*Call
2084<2064		4406<1054	4-WAY TO 6-WAY	*Call
2084<2064		4406<1055	5-WAY TO 6-WAY	*Call
2084<2064		4406<1056	6-WAY TO 6-WAY	*Call
2084<2064		4406<1057	7-WAY TO 6-WAY	*Call
2084<2064		4406<1058	8-WAY TO 6-WAY	*Call
2084<2064		4406<1059	9-WAY TO 6-WAY	*Call
2084<2064		4406<1061	1-WAY TO 6-WAY	*Call
2084<2064		4406<1062	2-WAY TO 6-WAY	*Call
2084<2064		4406<1063	3-WAY TO 6-WAY	*Call
2084<2064		4406<1064	4-WAY TO 6-WAY	*Call
2084<2064		4406<1065	5-WAY TO 6-WAY	*Call
2084<2064		4406<1066	6-WAY TO 6-WAY	*Call
2084<2064		4406<1067	7-WAY TO 6-WAY	*Call
2084<2064		4406<1068	8-WAY TO 6-WAY	*Call
2084<2064		4406<1069	9-WAY TO 6-WAY	*Call
2084<2064		4406<1070	10-WAY TO 6-WAY	*Call
2084<2064		4406<1071	11-WAY TO 6-WAY	*Call
2084<2064		4406<1072	12-WAY TO 6-WAY	*Call
2084<2064		4406<1073	13-WAY TO 6-WAY	*Call
2084<2064		4406<1074	14-WAY TO 6-WAY	*Call
2084<2064		4406<1075	15-WAY TO 6-WAY	*Call
2084<2064		4406<1076	16-WAY TO 6-WAY	*Call
2084<2064		4406<2061	1-WAY TO 6-WAY	*Call
2084<2064		4406<2062	2-WAY TO 6-WAY	*Call
2084<2064		4406<2063	3-WAY TO 6-WAY	*Call
2084<2064		4406<2064	4-WAY TO 6-WAY	*Call
2084<2064		4406<2065	5-WAY TO 6-WAY	*Call
2084<2064		4406<2066	6-WAY TO 6-WAY	*Call
2084<2064		4406<2067	7-WAY TO 6-WAY	*Call
2084<2064		4406<2068	8-WAY TO 6-WAY	*Call
2084<2064		4406<2069	9-WAY TO 6-WAY	*Call
2084<2064		4406<2070	10-WAY TO 6-WAY	*Call
2084<2064		4406<2071	11-WAY TO 6-WAY	*Call
2084<2064		4406<2072	12-WAY TO 6-WAY	*Call
2084<2064		4406<2073	13-WAY TO 6-WAY	*Call
2084<2064		4406<2074	14-WAY TO 6-WAY	*Call
2084<2064		4406<2075	15-WAY TO 6-WAY	*Call
2084<2064		4406<2076	16-WAY TO 6-WAY	*Call
2084<2064		4407<1051	1-WAY TO 7-WAY	*Call
2084<2064		4407<1052	2-WAY TO 7-WAY	*Call
2084<2064		4407<1053	3-WAY TO 7-WAY	*Call
2084<2064		4407<1054	4-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4407<1055	5-WAY TO 7-WAY	*Call
2084<2064		4407<1056	6-WAY TO 7-WAY	*Call
2084<2064		4407<1057	7-WAY TO 7-WAY	*Call
2084<2064		4407<1058	8-WAY TO 7-WAY	*Call
2084<2064		4407<1059	9-WAY TO 7-WAY	*Call
2084<2064		4407<1061	1-WAY TO 7-WAY	*Call
2084<2064		4407<1062	2-WAY TO 7-WAY	*Call
2084<2064		4407<1063	3-WAY TO 7-WAY	*Call
2084<2064		4407<1064	4-WAY TO 7-WAY	*Call
2084<2064		4407<1065	5-WAY TO 7-WAY	*Call
2084<2064		4407<1066	6-WAY TO 7-WAY	*Call
2084<2064		4407<1067	7-WAY TO 7-WAY	*Call
2084<2064		4407<1068	8-WAY TO 7-WAY	*Call
2084<2064		4407<1069	9-WAY TO 7-WAY	*Call
2084<2064		4407<1070	10-WAY TO 7-WAY	*Call
2084<2064		4407<1071	11-WAY TO 7-WAY	*Call
2084<2064		4407<1072	12-WAY TO 7-WAY	*Call
2084<2064		4407<1073	13-WAY TO 7-WAY	*Call
2084<2064		4407<1074	14-WAY TO 7-WAY	*Call
2084<2064		4407<1075	15-WAY TO 7-WAY	*Call
2084<2064		4407<1076	16-WAY TO 7-WAY	*Call
2084<2064		4407<2061	1-WAY TO 7-WAY	*Call
2084<2064		4407<2062	2-WAY TO 7-WAY	*Call
2084<2064		4407<2063	3-WAY TO 7-WAY	*Call
2084<2064		4407<2064	4-WAY TO 7-WAY	*Call
2084<2064		4407<2065	5-WAY TO 7-WAY	*Call
2084<2064		4407<2066	6-WAY TO 7-WAY	*Call
2084<2064		4407<2067	7-WAY TO 7-WAY	*Call
2084<2064		4407<2068	8-WAY TO 7-WAY	*Call
2084<2064		4407<2069	9-WAY TO 7-WAY	*Call
2084<2064		4407<2070	10-WAY TO 7-WAY	*Call
2084<2064		4407<2071	11-WAY TO 7-WAY	*Call
2084<2064		4407<2072	12-WAY TO 7-WAY	*Call
2084<2064		4407<2073	13-WAY TO 7-WAY	*Call
2084<2064		4407<2074	14-WAY TO 7-WAY	*Call
2084<2064		4407<2075	15-WAY TO 7-WAY	*Call
2084<2064		4407<2076	16-WAY TO 7-WAY	*Call
2084<2064		4408<1051	1-WAY TO 8-WAY	*Call
2084<2064		4408<1052	2-WAY TO 8-WAY	*Call
2084<2064		4408<1053	3-WAY TO 8-WAY	*Call
2084<2064		4408<1054	4-WAY TO 8-WAY	*Call
2084<2064		4408<1055	5-WAY TO 8-WAY	*Call
2084<2064		4408<1056	6-WAY TO 8-WAY	*Call
2084<2064		4408<1057	7-WAY TO 8-WAY	*Call
2084<2064		4408<1058	8-WAY TO 8-WAY	*Call
2084<2064		4408<1059	9-WAY TO 8-WAY	*Call
2084<2064		4408<1061	1-WAY TO 8-WAY	*Call
2084<2064		4408<1062	2-WAY TO 8-WAY	*Call
2084<2064		4408<1063	3-WAY TO 8-WAY	*Call
2084<2064		4408<1064	4-WAY TO 8-WAY	*Call
2084<2064		4408<1065	5-WAY TO 8-WAY	*Call
2084<2064		4408<1066	6-WAY TO 8-WAY	*Call
2084<2064		4408<1067	7-WAY TO 8-WAY	*Call
2084<2064		4408<1068	8-WAY TO 8-WAY	*Call
2084<2064		4408<1069	9-WAY TO 8-WAY	*Call
2084<2064		4408<1070	10-WAY TO 8-WAY	*Call
2084<2064		4408<1071	11-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4408<1072	12-WAY TO 8-WAY	*Call
2084<2064		4408<1073	13-WAY TO 8-WAY	*Call
2084<2064		4408<1074	14-WAY TO 8-WAY	*Call
2084<2064		4408<1075	15-WAY TO 8-WAY	*Call
2084<2064		4408<1076	16-WAY TO 8-WAY	*Call
2084<2064		4408<2061	1-WAY TO 8-WAY	*Call
2084<2064		4408<2062	2-WAY TO 8-WAY	*Call
2084<2064		4408<2063	3-WAY TO 8-WAY	*Call
2084<2064		4408<2064	4-WAY TO 8-WAY	*Call
2084<2064		4408<2065	5-WAY TO 8-WAY	*Call
2084<2064		4408<2066	6-WAY TO 8-WAY	*Call
2084<2064		4408<2067	7-WAY TO 8-WAY	*Call
2084<2064		4408<2068	8-WAY TO 8-WAY	*Call
2084<2064		4408<2069	9-WAY TO 8-WAY	*Call
2084<2064		4408<2070	10-WAY TO 8-WAY	*Call
2084<2064		4408<2071	11-WAY TO 8-WAY	*Call
2084<2064		4408<2072	12-WAY TO 8-WAY	*Call
2084<2064		4408<2073	13-WAY TO 8-WAY	*Call
2084<2064		4408<2074	14-WAY TO 8-WAY	*Call
2084<2064		4408<2075	15-WAY TO 8-WAY	*Call
2084<2064		4408<2076	16-WAY TO 8-WAY	*Call
2084<2064		4409<1051	1-WAY TO 9-WAY	*Call
2084<2064		4409<1052	2-WAY TO 9-WAY	*Call
2084<2064		4409<1053	3-WAY TO 9-WAY	*Call
2084<2064		4409<1054	4-WAY TO 9-WAY	*Call
2084<2064		4409<1055	5-WAY TO 9-WAY	*Call
2084<2064		4409<1056	6-WAY TO 9-WAY	*Call
2084<2064		4409<1057	7-WAY TO 9-WAY	*Call
2084<2064		4409<1058	8-WAY TO 9-WAY	*Call
2084<2064		4409<1059	9-WAY TO 9-WAY	*Call
2084<2064		4409<1061	1-WAY TO 9-WAY	*Call
2084<2064		4409<1062	2-WAY TO 9-WAY	*Call
2084<2064		4409<1063	3-WAY TO 9-WAY	*Call
2084<2064		4409<1064	4-WAY TO 9-WAY	*Call
2084<2064		4409<1065	5-WAY TO 9-WAY	*Call
2084<2064		4409<1066	6-WAY TO 9-WAY	*Call
2084<2064		4409<1067	7-WAY TO 9-WAY	*Call
2084<2064		4409<1068	8-WAY TO 9-WAY	*Call
2084<2064		4409<1069	9-WAY TO 9-WAY	*Call
2084<2064		4409<1070	10-WAY TO 9-WAY	*Call
2084<2064		4409<1071	11-WAY TO 9-WAY	*Call
2084<2064		4409<1072	12-WAY TO 9-WAY	*Call
2084<2064		4409<1073	13-WAY TO 9-WAY	*Call
2084<2064		4409<1074	14-WAY TO 9-WAY	*Call
2084<2064		4409<1075	15-WAY TO 9-WAY	*Call
2084<2064		4409<1076	16-WAY TO 9-WAY	*Call
2084<2064		4409<2061	1-WAY TO 9-WAY	*Call
2084<2064		4409<2062	2-WAY TO 9-WAY	*Call
2084<2064		4409<2063	3-WAY TO 9-WAY	*Call
2084<2064		4409<2064	4-WAY TO 9-WAY	*Call
2084<2064		4409<2065	5-WAY TO 9-WAY	*Call
2084<2064		4409<2066	6-WAY TO 9-WAY	*Call
2084<2064		4409<2067	7-WAY TO 9-WAY	*Call
2084<2064		4409<2068	8-WAY TO 9-WAY	*Call
2084<2064		4409<2069	9-WAY TO 9-WAY	*Call
2084<2064		4409<2070	10-WAY TO 9-WAY	*Call
2084<2064		4409<2071	11-WAY TO 9-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4409<2072	12-WAY TO 9-WAY	*Call
2084<2064		4409<2073	13-WAY TO 9-WAY	*Call
2084<2064		4409<2074	14-WAY TO 9-WAY	*Call
2084<2064		4409<2075	15-WAY TO 9-WAY	*Call
2084<2064		4409<2076	16-WAY TO 9-WAY	*Call
2084<2064		4410<1051	1-WAY TO 10-WAY	*Call
2084<2064		4410<1052	2-WAY TO 10-WAY	*Call
2084<2064		4410<1053	3-WAY TO 10-WAY	*Call
2084<2064		4410<1054	4-WAY TO 10-WAY	*Call
2084<2064		4410<1055	5-WAY TO 10-WAY	*Call
2084<2064		4410<1056	6-WAY TO 10-WAY	*Call
2084<2064		4410<1057	7-WAY TO 10-WAY	*Call
2084<2064		4410<1058	8-WAY TO 10-WAY	*Call
2084<2064		4410<1059	9-WAY TO 10-WAY	*Call
2084<2064		4410<1061	1-WAY TO 10-WAY	*Call
2084<2064		4410<1062	2-WAY TO 10-WAY	*Call
2084<2064		4410<1063	3-WAY TO 10-WAY	*Call
2084<2064		4410<1064	4-WAY TO 10-WAY	*Call
2084<2064		4410<1065	5-WAY TO 10-WAY	*Call
2084<2064		4410<1066	6-WAY TO 10-WAY	*Call
2084<2064		4410<1067	7-WAY TO 10-WAY	*Call
2084<2064		4410<1068	8-WAY TO 10-WAY	*Call
2084<2064		4410<1069	9-WAY TO 10-WAY	*Call
2084<2064		4410<1070	10-WAY TO 10-WAY	*Call
2084<2064		4410<1071	11-WAY TO 10-WAY	*Call
2084<2064		4410<1072	12-WAY TO 10-WAY	*Call
2084<2064		4410<1073	13-WAY TO 10-WAY	*Call
2084<2064		4410<1074	14-WAY TO 10-WAY	*Call
2084<2064		4410<1075	15-WAY TO 10-WAY	*Call
2084<2064		4410<1076	16-WAY TO 10-WAY	*Call
2084<2064		4410<2061	1-WAY TO 10-WAY	*Call
2084<2064		4410<2062	2-WAY TO 10-WAY	*Call
2084<2064		4410<2063	3-WAY TO 10-WAY	*Call
2084<2064		4410<2064	4-WAY TO 10-WAY	*Call
2084<2064		4410<2065	5-WAY TO 10-WAY	*Call
2084<2064		4410<2066	6-WAY TO 10-WAY	*Call
2084<2064		4410<2067	7-WAY TO 10-WAY	*Call
2084<2064		4410<2068	8-WAY TO 10-WAY	*Call
2084<2064		4410<2069	9-WAY TO 10-WAY	*Call
2084<2064		4410<2070	10-WAY TO 10-WAY	*Call
2084<2064		4410<2071	11-WAY TO 10-WAY	*Call
2084<2064		4410<2072	12-WAY TO 10-WAY	*Call
2084<2064		4410<2073	13-WAY TO 10-WAY	*Call
2084<2064		4410<2074	14-WAY TO 10-WAY	*Call
2084<2064		4410<2075	15-WAY TO 10-WAY	*Call
2084<2064		4410<2076	16-WAY TO 10-WAY	*Call
2084<2064		4411<1051	1-WAY TO 11-WAY	*Call
2084<2064		4411<1052	2-WAY TO 11-WAY	*Call
2084<2064		4411<1053	3-WAY TO 11-WAY	*Call
2084<2064		4411<1054	4-WAY TO 11-WAY	*Call
2084<2064		4411<1055	5-WAY TO 11-WAY	*Call
2084<2064		4411<1056	6-WAY TO 11-WAY	*Call
2084<2064		4411<1057	7-WAY TO 11-WAY	*Call
2084<2064		4411<1058	8-WAY TO 11-WAY	*Call
2084<2064		4411<1059	9-WAY TO 11-WAY	*Call
2084<2064		4411<1061	1-WAY TO 11-WAY	*Call
2084<2064		4411<1062	2-WAY TO 11-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4411<1063	3-WAY TO 11-WAY	*Call
2084<2064		4411<1064	4-WAY TO 11-WAY	*Call
2084<2064		4411<1065	5-WAY TO 11-WAY	*Call
2084<2064		4411<1066	6-WAY TO 11-WAY	*Call
2084<2064		4411<1067	7-WAY TO 11-WAY	*Call
2084<2064		4411<1068	8-WAY TO 11-WAY	*Call
2084<2064		4411<1069	9-WAY TO 11-WAY	*Call
2084<2064		4411<1070	10-WAY TO 11-WAY	*Call
2084<2064		4411<1071	11-WAY TO 11-WAY	*Call
2084<2064		4411<1072	12-WAY TO 11-WAY	*Call
2084<2064		4411<1073	13-WAY TO 11-WAY	*Call
2084<2064		4411<1074	14-WAY TO 11-WAY	*Call
2084<2064		4411<1075	15-WAY TO 11-WAY	*Call
2084<2064		4411<1076	16-WAY TO 11-WAY	*Call
2084<2064		4411<2061	1-WAY TO 11-WAY	*Call
2084<2064		4411<2062	2-WAY TO 11-WAY	*Call
2084<2064		4411<2063	3-WAY TO 11-WAY	*Call
2084<2064		4411<2064	4-WAY TO 11-WAY	*Call
2084<2064		4411<2065	5-WAY TO 11-WAY	*Call
2084<2064		4411<2066	6-WAY TO 11-WAY	*Call
2084<2064		4411<2067	7-WAY TO 11-WAY	*Call
2084<2064		4411<2068	8-WAY TO 11-WAY	*Call
2084<2064		4411<2069	9-WAY TO 11-WAY	*Call
2084<2064		4411<2070	10-WAY TO 11-WAY	*Call
2084<2064		4411<2071	11-WAY TO 11-WAY	*Call
2084<2064		4411<2072	12-WAY TO 11-WAY	*Call
2084<2064		4411<2073	13-WAY TO 11-WAY	*Call
2084<2064		4411<2074	14-WAY TO 11-WAY	*Call
2084<2064		4411<2075	15-WAY TO 11-WAY	*Call
2084<2064		4411<2076	16-WAY TO 11-WAY	*Call
2084<2064		4412<1051	1-WAY TO 12-WAY	*Call
2084<2064		4412<1052	2-WAY TO 12-WAY	*Call
2084<2064		4412<1053	3-WAY TO 12-WAY	*Call
2084<2064		4412<1054	4-WAY TO 12-WAY	*Call
2084<2064		4412<1055	5-WAY TO 12-WAY	*Call
2084<2064		4412<1056	6-WAY TO 12-WAY	*Call
2084<2064		4412<1057	7-WAY TO 12-WAY	*Call
2084<2064		4412<1058	8-WAY TO 12-WAY	*Call
2084<2064		4412<1059	9-WAY TO 12-WAY	*Call
2084<2064		4412<1061	1-WAY TO 12-WAY	*Call
2084<2064		4412<1062	2-WAY TO 12-WAY	*Call
2084<2064		4412<1063	3-WAY TO 12-WAY	*Call
2084<2064		4412<1064	4-WAY TO 12-WAY	*Call
2084<2064		4412<1065	5-WAY TO 12-WAY	*Call
2084<2064		4412<1066	6-WAY TO 12-WAY	*Call
2084<2064		4412<1067	7-WAY TO 12-WAY	*Call
2084<2064		4412<1068	8-WAY TO 12-WAY	*Call
2084<2064		4412<1069	9-WAY TO 12-WAY	*Call
2084<2064		4412<1070	10-WAY TO 12-WAY	*Call
2084<2064		4412<1071	11-WAY TO 12-WAY	*Call
2084<2064		4412<1072	12-WAY TO 12-WAY	*Call
2084<2064		4412<1073	13-WAY TO 12-WAY	*Call
2084<2064		4412<1074	14-WAY TO 12-WAY	*Call
2084<2064		4412<1075	15-WAY TO 12-WAY	*Call
2084<2064		4412<1076	16-WAY TO 12-WAY	*Call
2084<2064		4412<2061	1-WAY TO 12-WAY	*Call
2084<2064		4412<2062	2-WAY TO 12-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4412<2063	3-WAY TO 12-WAY	*Call
2084<2064		4412<2064	4-WAY TO 12-WAY	*Call
2084<2064		4412<2065	5-WAY TO 12-WAY	*Call
2084<2064		4412<2066	6-WAY TO 12-WAY	*Call
2084<2064		4412<2067	7-WAY TO 12-WAY	*Call
2084<2064		4412<2068	8-WAY TO 12-WAY	*Call
2084<2064		4412<2069	9-WAY TO 12-WAY	*Call
2084<2064		4412<2070	10-WAY TO 12-WAY	*Call
2084<2064		4412<2071	11-WAY TO 12-WAY	*Call
2084<2064		4412<2072	12-WAY TO 12-WAY	*Call
2084<2064		4412<2073	13-WAY TO 12-WAY	*Call
2084<2064		4412<2074	14-WAY TO 12-WAY	*Call
2084<2064		4412<2075	15-WAY TO 12-WAY	*Call
2084<2064		4412<2076	16-WAY TO 12-WAY	*Call
2084<2064		4413<1051	1-WAY TO 13-WAY	*Call
2084<2064		4413<1052	2-WAY TO 13-WAY	*Call
2084<2064		4413<1053	3-WAY TO 13-WAY	*Call
2084<2064		4413<1054	4-WAY TO 13-WAY	*Call
2084<2064		4413<1055	5-WAY TO 13-WAY	*Call
2084<2064		4413<1056	6-WAY TO 13-WAY	*Call
2084<2064		4413<1057	7-WAY TO 13-WAY	*Call
2084<2064		4413<1058	8-WAY TO 13-WAY	*Call
2084<2064		4413<1059	9-WAY TO 13-WAY	*Call
2084<2064		4413<1061	1-WAY TO 13-WAY	*Call
2084<2064		4413<1062	2-WAY TO 13-WAY	*Call
2084<2064		4413<1063	3-WAY TO 13-WAY	*Call
2084<2064		4413<1064	4-WAY TO 13-WAY	*Call
2084<2064		4413<1065	5-WAY TO 13-WAY	*Call
2084<2064		4413<1066	6-WAY TO 13-WAY	*Call
2084<2064		4413<1067	7-WAY TO 13-WAY	*Call
2084<2064		4413<1068	8-WAY TO 13-WAY	*Call
2084<2064		4413<1069	9-WAY TO 13-WAY	*Call
2084<2064		4413<1070	10-WAY TO 13-WAY	*Call
2084<2064		4413<1071	11-WAY TO 13-WAY	*Call
2084<2064		4413<1072	12-WAY TO 13-WAY	*Call
2084<2064		4413<1073	13-WAY TO 13-WAY	*Call
2084<2064		4413<1074	14-WAY TO 13-WAY	*Call
2084<2064		4413<1075	15-WAY TO 13-WAY	*Call
2084<2064		4413<1076	16-WAY TO 13-WAY	*Call
2084<2064		4413<2061	1-WAY TO 13-WAY	*Call
2084<2064		4413<2062	2-WAY TO 13-WAY	*Call
2084<2064		4413<2063	3-WAY TO 13-WAY	*Call
2084<2064		4413<2064	4-WAY TO 13-WAY	*Call
2084<2064		4413<2065	5-WAY TO 13-WAY	*Call
2084<2064		4413<2066	6-WAY TO 13-WAY	*Call
2084<2064		4413<2067	7-WAY TO 13-WAY	*Call
2084<2064		4413<2068	8-WAY TO 13-WAY	*Call
2084<2064		4413<2069	9-WAY TO 13-WAY	*Call
2084<2064		4413<2070	10-WAY TO 13-WAY	*Call
2084<2064		4413<2071	11-WAY TO 13-WAY	*Call
2084<2064		4413<2072	12-WAY TO 13-WAY	*Call
2084<2064		4413<2073	13-WAY TO 13-WAY	*Call
2084<2064		4413<2074	14-WAY TO 13-WAY	*Call
2084<2064		4413<2075	15-WAY TO 13-WAY	*Call
2084<2064		4413<2076	16-WAY TO 13-WAY	*Call
2084<2064		4414<1051	1-WAY TO 14-WAY	*Call
2084<2064		4414<1052	2-WAY TO 14-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4414<1053	3-WAY TO 14-WAY	*Call
2084<2064		4414<1054	4-WAY TO 14-WAY	*Call
2084<2064		4414<1055	5-WAY TO 14-WAY	*Call
2084<2064		4414<1056	6-WAY TO 14-WAY	*Call
2084<2064		4414<1057	7-WAY TO 14-WAY	*Call
2084<2064		4414<1058	8-WAY TO 14-WAY	*Call
2084<2064		4414<1059	9-WAY TO 14-WAY	*Call
2084<2064		4414<1061	1-WAY TO 14-WAY	*Call
2084<2064		4414<1062	2-WAY TO 14-WAY	*Call
2084<2064		4414<1063	3-WAY TO 14-WAY	*Call
2084<2064		4414<1064	4-WAY TO 14-WAY	*Call
2084<2064		4414<1065	5-WAY TO 14-WAY	*Call
2084<2064		4414<1066	6-WAY TO 14-WAY	*Call
2084<2064		4414<1067	7-WAY TO 14-WAY	*Call
2084<2064		4414<1068	8-WAY TO 14-WAY	*Call
2084<2064		4414<1069	9-WAY TO 14-WAY	*Call
2084<2064		4414<1070	10-WAY TO 14-WAY	*Call
2084<2064		4414<1071	11-WAY TO 14-WAY	*Call
2084<2064		4414<1072	12-WAY TO 14-WAY	*Call
2084<2064		4414<1073	13-WAY TO 14-WAY	*Call
2084<2064		4414<1074	14-WAY TO 14-WAY	*Call
2084<2064		4414<1075	15-WAY TO 14-WAY	*Call
2084<2064		4414<1076	16-WAY TO 14-WAY	*Call
2084<2064		4414<2061	1-WAY TO 14-WAY	*Call
2084<2064		4414<2062	2-WAY TO 14-WAY	*Call
2084<2064		4414<2063	3-WAY TO 14-WAY	*Call
2084<2064		4414<2064	4-WAY TO 14-WAY	*Call
2084<2064		4414<2065	5-WAY TO 14-WAY	*Call
2084<2064		4414<2066	6-WAY TO 14-WAY	*Call
2084<2064		4414<2067	7-WAY TO 14-WAY	*Call
2084<2064		4414<2068	8-WAY TO 14-WAY	*Call
2084<2064		4414<2069	9-WAY TO 14-WAY	*Call
2084<2064		4414<2070	10-WAY TO 14-WAY	*Call
2084<2064		4414<2071	11-WAY TO 14-WAY	*Call
2084<2064		4414<2072	12-WAY TO 14-WAY	*Call
2084<2064		4414<2073	13-WAY TO 14-WAY	*Call
2084<2064		4414<2074	14-WAY TO 14-WAY	*Call
2084<2064		4414<2075	15-WAY TO 14-WAY	*Call
2084<2064		4414<2076	16-WAY TO 14-WAY	*Call
2084<2064		4415<1051	1-WAY TO 15-WAY	*Call
2084<2064		4415<1052	2-WAY TO 15-WAY	*Call
2084<2064		4415<1053	3-WAY TO 15-WAY	*Call
2084<2064		4415<1054	4-WAY TO 15-WAY	*Call
2084<2064		4415<1055	5-WAY TO 15-WAY	*Call
2084<2064		4415<1056	6-WAY TO 15-WAY	*Call
2084<2064		4415<1057	7-WAY TO 15-WAY	*Call
2084<2064		4415<1058	8-WAY TO 15-WAY	*Call
2084<2064		4415<1059	9-WAY TO 15-WAY	*Call
2084<2064		4415<1061	1-WAY TO 15-WAY	*Call
2084<2064		4415<1062	2-WAY TO 15-WAY	*Call
2084<2064		4415<1063	3-WAY TO 15-WAY	*Call
2084<2064		4415<1064	4-WAY TO 15-WAY	*Call
2084<2064		4415<1065	5-WAY TO 15-WAY	*Call
2084<2064		4415<1066	6-WAY TO 15-WAY	*Call
2084<2064		4415<1067	7-WAY TO 15-WAY	*Call
2084<2064		4415<1068	8-WAY TO 15-WAY	*Call
2084<2064		4415<1069	9-WAY TO 15-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4415<1070	10-WAY TO 15-WAY	*Call
2084<2064		4415<1071	11-WAY TO 15-WAY	*Call
2084<2064		4415<1072	12-WAY TO 15-WAY	*Call
2084<2064		4415<1073	13-WAY TO 15-WAY	*Call
2084<2064		4415<1074	14-WAY TO 15-WAY	*Call
2084<2064		4415<1075	15-WAY TO 15-WAY	*Call
2084<2064		4415<1076	16-WAY TO 15-WAY	*Call
2084<2064		4415<2061	1-WAY TO 15-WAY	*Call
2084<2064		4415<2062	2-WAY TO 15-WAY	*Call
2084<2064		4415<2063	3-WAY TO 15-WAY	*Call
2084<2064		4415<2064	4-WAY TO 15-WAY	*Call
2084<2064		4415<2065	5-WAY TO 15-WAY	*Call
2084<2064		4415<2066	6-WAY TO 15-WAY	*Call
2084<2064		4415<2067	7-WAY TO 15-WAY	*Call
2084<2064		4415<2068	8-WAY TO 15-WAY	*Call
2084<2064		4415<2069	9-WAY TO 15-WAY	*Call
2084<2064		4415<2070	10-WAY TO 15-WAY	*Call
2084<2064		4415<2071	11-WAY TO 15-WAY	*Call
2084<2064		4415<2072	12-WAY TO 15-WAY	*Call
2084<2064		4415<2073	13-WAY TO 15-WAY	*Call
2084<2064		4415<2074	14-WAY TO 15-WAY	*Call
2084<2064		4415<2075	15-WAY TO 15-WAY	*Call
2084<2064		4415<2076	16-WAY TO 15-WAY	*Call
2084<2064		4416<1051	1-WAY TO 16-WAY	*Call
2084<2064		4416<1052	2-WAY TO 16-WAY	*Call
2084<2064		4416<1053	3-WAY TO 16-WAY	*Call
2084<2064		4416<1054	4-WAY TO 16-WAY	*Call
2084<2064		4416<1055	5-WAY TO 16-WAY	*Call
2084<2064		4416<1056	6-WAY TO 16-WAY	*Call
2084<2064		4416<1057	7-WAY TO 16-WAY	*Call
2084<2064		4416<1058	8-WAY TO 16-WAY	*Call
2084<2064		4416<1059	9-WAY TO 16-WAY	*Call
2084<2064		4416<1061	1-WAY TO 16-WAY	*Call
2084<2064		4416<1062	2-WAY TO 16-WAY	*Call
2084<2064		4416<1063	3-WAY TO 16-WAY	*Call
2084<2064		4416<1064	4-WAY TO 16-WAY	*Call
2084<2064		4416<1065	5-WAY TO 16-WAY	*Call
2084<2064		4416<1066	6-WAY TO 16-WAY	*Call
2084<2064		4416<1067	7-WAY TO 16-WAY	*Call
2084<2064		4416<1068	8-WAY TO 16-WAY	*Call
2084<2064		4416<1069	9-WAY TO 16-WAY	*Call
2084<2064		4416<1070	10-WAY TO 16-WAY	*Call
2084<2064		4416<1071	11-WAY TO 16-WAY	*Call
2084<2064		4416<1072	12-WAY TO 16-WAY	*Call
2084<2064		4416<1073	13-WAY TO 16-WAY	*Call
2084<2064		4416<1074	14-WAY TO 16-WAY	*Call
2084<2064		4416<1075	15-WAY TO 16-WAY	*Call
2084<2064		4416<1076	16-WAY TO 16-WAY	*Call
2084<2064		4416<2061	1-WAY TO 16-WAY	*Call
2084<2064		4416<2062	2-WAY TO 16-WAY	*Call
2084<2064		4416<2063	3-WAY TO 16-WAY	*Call
2084<2064		4416<2064	4-WAY TO 16-WAY	*Call
2084<2064		4416<2065	5-WAY TO 16-WAY	*Call
2084<2064		4416<2066	6-WAY TO 16-WAY	*Call
2084<2064		4416<2067	7-WAY TO 16-WAY	*Call
2084<2064		4416<2068	8-WAY TO 16-WAY	*Call
2084<2064		4416<2069	9-WAY TO 16-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4416<2070	10-WAY TO 16-WAY	*Call
2084<2064		4416<2071	11-WAY TO 16-WAY	*Call
2084<2064		4416<2072	12-WAY TO 16-WAY	*Call
2084<2064		4416<2073	13-WAY TO 16-WAY	*Call
2084<2064		4416<2074	14-WAY TO 16-WAY	*Call
2084<2064		4416<2075	15-WAY TO 16-WAY	*Call
2084<2064		4416<2076	16-WAY TO 16-WAY	*Call
2084<2064		4417<1051	1-WAY TO 17-WAY	*Call
2084<2064		4417<1052	2-WAY TO 17-WAY	*Call
2084<2064		4417<1053	3-WAY TO 17-WAY	*Call
2084<2064		4417<1054	4-WAY TO 17-WAY	*Call
2084<2064		4417<1055	5-WAY TO 17-WAY	*Call
2084<2064		4417<1056	6-WAY TO 17-WAY	*Call
2084<2064		4417<1057	7-WAY TO 17-WAY	*Call
2084<2064		4417<1058	8-WAY TO 17-WAY	*Call
2084<2064		4417<1059	9-WAY TO 17-WAY	*Call
2084<2064		4417<1061	1-WAY TO 17-WAY	*Call
2084<2064		4417<1062	2-WAY TO 17-WAY	*Call
2084<2064		4417<1063	3-WAY TO 17-WAY	*Call
2084<2064		4417<1064	4-WAY TO 17-WAY	*Call
2084<2064		4417<1065	5-WAY TO 17-WAY	*Call
2084<2064		4417<1066	6-WAY TO 17-WAY	*Call
2084<2064		4417<1067	7-WAY TO 17-WAY	*Call
2084<2064		4417<1068	8-WAY TO 17-WAY	*Call
2084<2064		4417<1069	9-WAY TO 17-WAY	*Call
2084<2064		4417<1070	10-WAY TO 17-WAY	*Call
2084<2064		4417<1071	11-WAY TO 17-WAY	*Call
2084<2064		4417<1072	12-WAY TO 17-WAY	*Call
2084<2064		4417<1073	13-WAY TO 17-WAY	*Call
2084<2064		4417<1074	14-WAY TO 17-WAY	*Call
2084<2064		4417<1075	15-WAY TO 17-WAY	*Call
2084<2064		4417<1076	16-WAY TO 17-WAY	*Call
2084<2064		4417<2061	1-WAY TO 17-WAY	*Call
2084<2064		4417<2062	2-WAY TO 17-WAY	*Call
2084<2064		4417<2063	3-WAY TO 17-WAY	*Call
2084<2064		4417<2064	4-WAY TO 17-WAY	*Call
2084<2064		4417<2065	5-WAY TO 17-WAY	*Call
2084<2064		4417<2066	6-WAY TO 17-WAY	*Call
2084<2064		4417<2067	7-WAY TO 17-WAY	*Call
2084<2064		4417<2068	8-WAY TO 17-WAY	*Call
2084<2064		4417<2069	9-WAY TO 17-WAY	*Call
2084<2064		4417<2070	10-WAY TO 17-WAY	*Call
2084<2064		4417<2071	11-WAY TO 17-WAY	*Call
2084<2064		4417<2072	12-WAY TO 17-WAY	*Call
2084<2064		4417<2073	13-WAY TO 17-WAY	*Call
2084<2064		4417<2074	14-WAY TO 17-WAY	*Call
2084<2064		4417<2075	15-WAY TO 17-WAY	*Call
2084<2064		4417<2076	16-WAY TO 17-WAY	*Call
2084<2064		4418<1051	1-WAY TO 18-WAY	*Call
2084<2064		4418<1052	2-WAY TO 18-WAY	*Call
2084<2064		4418<1053	3-WAY TO 18-WAY	*Call
2084<2064		4418<1054	4-WAY TO 18-WAY	*Call
2084<2064		4418<1055	5-WAY TO 18-WAY	*Call
2084<2064		4418<1056	6-WAY TO 18-WAY	*Call
2084<2064		4418<1057	7-WAY TO 18-WAY	*Call
2084<2064		4418<1058	8-WAY TO 18-WAY	*Call
2084<2064		4418<1059	9-WAY TO 18-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4418<1061	1-WAY TO 18-WAY	*Call
2084<2064		4418<1062	2-WAY TO 18-WAY	*Call
2084<2064		4418<1063	3-WAY TO 18-WAY	*Call
2084<2064		4418<1064	4-WAY TO 18-WAY	*Call
2084<2064		4418<1065	5-WAY TO 18-WAY	*Call
2084<2064		4418<1066	6-WAY TO 18-WAY	*Call
2084<2064		4418<1067	7-WAY TO 18-WAY	*Call
2084<2064		4418<1068	8-WAY TO 18-WAY	*Call
2084<2064		4418<1069	9-WAY TO 18-WAY	*Call
2084<2064		4418<1070	10-WAY TO 18-WAY	*Call
2084<2064		4418<1071	11-WAY TO 18-WAY	*Call
2084<2064		4418<1072	12-WAY TO 18-WAY	*Call
2084<2064		4418<1073	13-WAY TO 18-WAY	*Call
2084<2064		4418<1074	14-WAY TO 18-WAY	*Call
2084<2064		4418<1075	15-WAY TO 18-WAY	*Call
2084<2064		4418<1076	16-WAY TO 18-WAY	*Call
2084<2064		4418<2061	1-WAY TO 18-WAY	*Call
2084<2064		4418<2062	2-WAY TO 18-WAY	*Call
2084<2064		4418<2063	3-WAY TO 18-WAY	*Call
2084<2064		4418<2064	4-WAY TO 18-WAY	*Call
2084<2064		4418<2065	5-WAY TO 18-WAY	*Call
2084<2064		4418<2066	6-WAY TO 18-WAY	*Call
2084<2064		4418<2067	7-WAY TO 18-WAY	*Call
2084<2064		4418<2068	8-WAY TO 18-WAY	*Call
2084<2064		4418<2069	9-WAY TO 18-WAY	*Call
2084<2064		4418<2070	10-WAY TO 18-WAY	*Call
2084<2064		4418<2071	11-WAY TO 18-WAY	*Call
2084<2064		4418<2072	12-WAY TO 18-WAY	*Call
2084<2064		4418<2073	13-WAY TO 18-WAY	*Call
2084<2064		4418<2074	14-WAY TO 18-WAY	*Call
2084<2064		4418<2075	15-WAY TO 18-WAY	*Call
2084<2064		4418<2076	16-WAY TO 18-WAY	*Call
2084<2064		4419<1051	1-WAY TO 19-WAY	*Call
2084<2064		4419<1052	2-WAY TO 19-WAY	*Call
2084<2064		4419<1053	3-WAY TO 19-WAY	*Call
2084<2064		4419<1054	4-WAY TO 19-WAY	*Call
2084<2064		4419<1055	5-WAY TO 19-WAY	*Call
2084<2064		4419<1056	6-WAY TO 19-WAY	*Call
2084<2064		4419<1057	7-WAY TO 19-WAY	*Call
2084<2064		4419<1058	8-WAY TO 19-WAY	*Call
2084<2064		4419<1059	9-WAY TO 19-WAY	*Call
2084<2064		4419<1061	1-WAY TO 19-WAY	*Call
2084<2064		4419<1062	2-WAY TO 19-WAY	*Call
2084<2064		4419<1063	3-WAY TO 19-WAY	*Call
2084<2064		4419<1064	4-WAY TO 19-WAY	*Call
2084<2064		4419<1065	5-WAY TO 19-WAY	*Call
2084<2064		4419<1066	6-WAY TO 19-WAY	*Call
2084<2064		4419<1067	7-WAY TO 19-WAY	*Call
2084<2064		4419<1068	8-WAY TO 19-WAY	*Call
2084<2064		4419<1069	9-WAY TO 19-WAY	*Call
2084<2064		4419<1070	10-WAY TO 19-WAY	*Call
2084<2064		4419<1071	11-WAY TO 19-WAY	*Call
2084<2064		4419<1072	12-WAY TO 19-WAY	*Call
2084<2064		4419<1073	13-WAY TO 19-WAY	*Call
2084<2064		4419<1074	14-WAY TO 19-WAY	*Call
2084<2064		4419<1075	15-WAY TO 19-WAY	*Call
2084<2064		4419<1076	16-WAY TO 19-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4419<2061	1-WAY TO 19-WAY	*Call
2084<2064		4419<2062	2-WAY TO 19-WAY	*Call
2084<2064		4419<2063	3-WAY TO 19-WAY	*Call
2084<2064		4419<2064	4-WAY TO 19-WAY	*Call
2084<2064		4419<2065	5-WAY TO 19-WAY	*Call
2084<2064		4419<2066	6-WAY TO 19-WAY	*Call
2084<2064		4419<2067	7-WAY TO 19-WAY	*Call
2084<2064		4419<2068	8-WAY TO 19-WAY	*Call
2084<2064		4419<2069	9-WAY TO 19-WAY	*Call
2084<2064		4419<2070	10-WAY TO 19-WAY	*Call
2084<2064		4419<2071	11-WAY TO 19-WAY	*Call
2084<2064		4419<2072	12-WAY TO 19-WAY	*Call
2084<2064		4419<2073	13-WAY TO 19-WAY	*Call
2084<2064		4419<2074	14-WAY TO 19-WAY	*Call
2084<2064		4419<2075	15-WAY TO 19-WAY	*Call
2084<2064		4419<2076	16-WAY TO 19-WAY	*Call
2084<2064		4420<1051	1-WAY TO 20-WAY	*Call
2084<2064		4420<1052	2-WAY TO 20-WAY	*Call
2084<2064		4420<1053	3-WAY TO 20-WAY	*Call
2084<2064		4420<1054	4-WAY TO 20-WAY	*Call
2084<2064		4420<1055	5-WAY TO 20-WAY	*Call
2084<2064		4420<1056	6-WAY TO 20-WAY	*Call
2084<2064		4420<1057	7-WAY TO 20-WAY	*Call
2084<2064		4420<1058	8-WAY TO 20-WAY	*Call
2084<2064		4420<1059	9-WAY TO 20-WAY	*Call
2084<2064		4420<1061	1-WAY TO 20-WAY	*Call
2084<2064		4420<1062	2-WAY TO 20-WAY	*Call
2084<2064		4420<1063	3-WAY TO 20-WAY	*Call
2084<2064		4420<1064	4-WAY TO 20-WAY	*Call
2084<2064		4420<1065	5-WAY TO 20-WAY	*Call
2084<2064		4420<1066	6-WAY TO 20-WAY	*Call
2084<2064		4420<1067	7-WAY TO 20-WAY	*Call
2084<2064		4420<1068	8-WAY TO 20-WAY	*Call
2084<2064		4420<1069	9-WAY TO 20-WAY	*Call
2084<2064		4420<1070	10-WAY TO 20-WAY	*Call
2084<2064		4420<1071	11-WAY TO 20-WAY	*Call
2084<2064		4420<1072	12-WAY TO 20-WAY	*Call
2084<2064		4420<1073	13-WAY TO 20-WAY	*Call
2084<2064		4420<1074	14-WAY TO 20-WAY	*Call
2084<2064		4420<1075	15-WAY TO 20-WAY	*Call
2084<2064		4420<1076	16-WAY TO 20-WAY	*Call
2084<2064		4420<2061	1-WAY TO 20-WAY	*Call
2084<2064		4420<2062	2-WAY TO 20-WAY	*Call
2084<2064		4420<2063	3-WAY TO 20-WAY	*Call
2084<2064		4420<2064	4-WAY TO 20-WAY	*Call
2084<2064		4420<2065	5-WAY TO 20-WAY	*Call
2084<2064		4420<2066	6-WAY TO 20-WAY	*Call
2084<2064		4420<2067	7-WAY TO 20-WAY	*Call
2084<2064		4420<2068	8-WAY TO 20-WAY	*Call
2084<2064		4420<2069	9-WAY TO 20-WAY	*Call
2084<2064		4420<2070	10-WAY TO 20-WAY	*Call
2084<2064		4420<2071	11-WAY TO 20-WAY	*Call
2084<2064		4420<2072	12-WAY TO 20-WAY	*Call
2084<2064		4420<2073	13-WAY TO 20-WAY	*Call
2084<2064		4420<2074	14-WAY TO 20-WAY	*Call
2084<2064		4420<2075	15-WAY TO 20-WAY	*Call
2084<2064		4420<2076	16-WAY TO 20-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4421<1051	1-WAY TO 21-WAY	*Call
2084<2064		4421<1052	2-WAY TO 21-WAY	*Call
2084<2064		4421<1053	3-WAY TO 21-WAY	*Call
2084<2064		4421<1054	4-WAY TO 21-WAY	*Call
2084<2064		4421<1055	5-WAY TO 21-WAY	*Call
2084<2064		4421<1056	6-WAY TO 21-WAY	*Call
2084<2064		4421<1057	7-WAY TO 21-WAY	*Call
2084<2064		4421<1058	8-WAY TO 21-WAY	*Call
2084<2064		4421<1059	9-WAY TO 21-WAY	*Call
2084<2064		4421<1061	1-WAY TO 21-WAY	*Call
2084<2064		4421<1062	2-WAY TO 21-WAY	*Call
2084<2064		4421<1063	3-WAY TO 21-WAY	*Call
2084<2064		4421<1064	4-WAY TO 21-WAY	*Call
2084<2064		4421<1065	5-WAY TO 21-WAY	*Call
2084<2064		4421<1066	6-WAY TO 21-WAY	*Call
2084<2064		4421<1067	7-WAY TO 21-WAY	*Call
2084<2064		4421<1068	8-WAY TO 21-WAY	*Call
2084<2064		4421<1069	9-WAY TO 21-WAY	*Call
2084<2064		4421<1070	10-WAY TO 21-WAY	*Call
2084<2064		4421<1071	11-WAY TO 21-WAY	*Call
2084<2064		4421<1072	12-WAY TO 21-WAY	*Call
2084<2064		4421<1073	13-WAY TO 21-WAY	*Call
2084<2064		4421<1074	14-WAY TO 21-WAY	*Call
2084<2064		4421<1075	15-WAY TO 21-WAY	*Call
2084<2064		4421<1076	16-WAY TO 21-WAY	*Call
2084<2064		4421<2061	1-WAY TO 21-WAY	*Call
2084<2064		4421<2062	2-WAY TO 21-WAY	*Call
2084<2064		4421<2063	3-WAY TO 21-WAY	*Call
2084<2064		4421<2064	4-WAY TO 21-WAY	*Call
2084<2064		4421<2065	5-WAY TO 21-WAY	*Call
2084<2064		4421<2066	6-WAY TO 21-WAY	*Call
2084<2064		4421<2067	7-WAY TO 21-WAY	*Call
2084<2064		4421<2068	8-WAY TO 21-WAY	*Call
2084<2064		4421<2069	9-WAY TO 21-WAY	*Call
2084<2064		4421<2070	10-WAY TO 21-WAY	*Call
2084<2064		4421<2071	11-WAY TO 21-WAY	*Call
2084<2064		4421<2072	12-WAY TO 21-WAY	*Call
2084<2064		4421<2073	13-WAY TO 21-WAY	*Call
2084<2064		4421<2074	14-WAY TO 21-WAY	*Call
2084<2064		4421<2075	15-WAY TO 21-WAY	*Call
2084<2064		4421<2076	16-WAY TO 21-WAY	*Call
2084<2064		4422<1051	1-WAY TO 22-WAY	*Call
2084<2064		4422<1052	2-WAY TO 22-WAY	*Call
2084<2064		4422<1053	3-WAY TO 22-WAY	*Call
2084<2064		4422<1054	4-WAY TO 22-WAY	*Call
2084<2064		4422<1055	5-WAY TO 22-WAY	*Call
2084<2064		4422<1056	6-WAY TO 22-WAY	*Call
2084<2064		4422<1057	7-WAY TO 22-WAY	*Call
2084<2064		4422<1058	8-WAY TO 22-WAY	*Call
2084<2064		4422<1059	9-WAY TO 22-WAY	*Call
2084<2064		4422<1061	1-WAY TO 22-WAY	*Call
2084<2064		4422<1062	2-WAY TO 22-WAY	*Call
2084<2064		4422<1063	3-WAY TO 22-WAY	*Call
2084<2064		4422<1064	4-WAY TO 22-WAY	*Call
2084<2064		4422<1065	5-WAY TO 22-WAY	*Call
2084<2064		4422<1066	6-WAY TO 22-WAY	*Call
2084<2064		4422<1067	7-WAY TO 22-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4422<1068	8-WAY TO 22-WAY	*Call
2084<2064		4422<1069	9-WAY TO 22-WAY	*Call
2084<2064		4422<1070	10-WAY TO 22-WAY	*Call
2084<2064		4422<1071	11-WAY TO 22-WAY	*Call
2084<2064		4422<1072	12-WAY TO 22-WAY	*Call
2084<2064		4422<1073	13-WAY TO 22-WAY	*Call
2084<2064		4422<1074	14-WAY TO 22-WAY	*Call
2084<2064		4422<1075	15-WAY TO 22-WAY	*Call
2084<2064		4422<1076	16-WAY TO 22-WAY	*Call
2084<2064		4422<2061	1-WAY TO 22-WAY	*Call
2084<2064		4422<2062	2-WAY TO 22-WAY	*Call
2084<2064		4422<2063	3-WAY TO 22-WAY	*Call
2084<2064		4422<2064	4-WAY TO 22-WAY	*Call
2084<2064		4422<2065	5-WAY TO 22-WAY	*Call
2084<2064		4422<2066	6-WAY TO 22-WAY	*Call
2084<2064		4422<2067	7-WAY TO 22-WAY	*Call
2084<2064		4422<2068	8-WAY TO 22-WAY	*Call
2084<2064		4422<2069	9-WAY TO 22-WAY	*Call
2084<2064		4422<2070	10-WAY TO 22-WAY	*Call
2084<2064		4422<2071	11-WAY TO 22-WAY	*Call
2084<2064		4422<2072	12-WAY TO 22-WAY	*Call
2084<2064		4422<2073	13-WAY TO 22-WAY	*Call
2084<2064		4422<2074	14-WAY TO 22-WAY	*Call
2084<2064		4422<2075	15-WAY TO 22-WAY	*Call
2084<2064		4422<2076	16-WAY TO 22-WAY	*Call
2084<2064		4423<1051	1-WAY TO 23-WAY	*Call
2084<2064		4423<1052	2-WAY TO 23-WAY	*Call
2084<2064		4423<1053	3-WAY TO 23-WAY	*Call
2084<2064		4423<1054	4-WAY TO 23-WAY	*Call
2084<2064		4423<1055	5-WAY TO 23-WAY	*Call
2084<2064		4423<1056	6-WAY TO 23-WAY	*Call
2084<2064		4423<1057	7-WAY TO 23-WAY	*Call
2084<2064		4423<1058	8-WAY TO 23-WAY	*Call
2084<2064		4423<1059	9-WAY TO 23-WAY	*Call
2084<2064		4423<1061	1-WAY TO 23-WAY	*Call
2084<2064		4423<1062	2-WAY TO 23-WAY	*Call
2084<2064		4423<1063	3-WAY TO 23-WAY	*Call
2084<2064		4423<1064	4-WAY TO 23-WAY	*Call
2084<2064		4423<1065	5-WAY TO 23-WAY	*Call
2084<2064		4423<1066	6-WAY TO 23-WAY	*Call
2084<2064		4423<1067	7-WAY TO 23-WAY	*Call
2084<2064		4423<1068	8-WAY TO 23-WAY	*Call
2084<2064		4423<1069	9-WAY TO 23-WAY	*Call
2084<2064		4423<1070	10-WAY TO 23-WAY	*Call
2084<2064		4423<1071	11-WAY TO 23-WAY	*Call
2084<2064		4423<1072	12-WAY TO 23-WAY	*Call
2084<2064		4423<1073	13-WAY TO 23-WAY	*Call
2084<2064		4423<1074	14-WAY TO 23-WAY	*Call
2084<2064		4423<1075	15-WAY TO 23-WAY	*Call
2084<2064		4423<1076	16-WAY TO 23-WAY	*Call
2084<2064		4423<2061	1-WAY TO 23-WAY	*Call
2084<2064		4423<2062	2-WAY TO 23-WAY	*Call
2084<2064		4423<2063	3-WAY TO 23-WAY	*Call
2084<2064		4423<2064	4-WAY TO 23-WAY	*Call
2084<2064		4423<2065	5-WAY TO 23-WAY	*Call
2084<2064		4423<2066	6-WAY TO 23-WAY	*Call
2084<2064		4423<2067	7-WAY TO 23-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4423<2068	8-WAY TO 23-WAY	*Call
2084<2064		4423<2069	9-WAY TO 23-WAY	*Call
2084<2064		4423<2070	10-WAY TO 23-WAY	*Call
2084<2064		4423<2071	11-WAY TO 23-WAY	*Call
2084<2064		4423<2072	12-WAY TO 23-WAY	*Call
2084<2064		4423<2073	13-WAY TO 23-WAY	*Call
2084<2064		4423<2074	14-WAY TO 23-WAY	*Call
2084<2064		4423<2075	15-WAY TO 23-WAY	*Call
2084<2064		4423<2076	16-WAY TO 23-WAY	*Call
2084<2064		4424<1051	1-WAY TO 24-WAY	*Call
2084<2064		4424<1052	2-WAY TO 24-WAY	*Call
2084<2064		4424<1053	3-WAY TO 24-WAY	*Call
2084<2064		4424<1054	4-WAY TO 24-WAY	*Call
2084<2064		4424<1055	5-WAY TO 24-WAY	*Call
2084<2064		4424<1056	6-WAY TO 24-WAY	*Call
2084<2064		4424<1057	7-WAY TO 24-WAY	*Call
2084<2064		4424<1058	8-WAY TO 24-WAY	*Call
2084<2064		4424<1059	9-WAY TO 24-WAY	*Call
2084<2064		4424<1061	1-WAY TO 24-WAY	*Call
2084<2064		4424<1062	2-WAY TO 24-WAY	*Call
2084<2064		4424<1063	3-WAY TO 24-WAY	*Call
2084<2064		4424<1064	4-WAY TO 24-WAY	*Call
2084<2064		4424<1065	5-WAY TO 24-WAY	*Call
2084<2064		4424<1066	6-WAY TO 24-WAY	*Call
2084<2064		4424<1067	7-WAY TO 24-WAY	*Call
2084<2064		4424<1068	8-WAY TO 24-WAY	*Call
2084<2064		4424<1069	9-WAY TO 24-WAY	*Call
2084<2064		4424<1070	10-WAY TO 24-WAY	*Call
2084<2064		4424<1071	11-WAY TO 24-WAY	*Call
2084<2064		4424<1072	12-WAY TO 24-WAY	*Call
2084<2064		4424<1073	13-WAY TO 24-WAY	*Call
2084<2064		4424<1074	14-WAY TO 24-WAY	*Call
2084<2064		4424<1075	15-WAY TO 24-WAY	*Call
2084<2064		4424<1076	16-WAY TO 24-WAY	*Call
2084<2064		4424<2061	1-WAY TO 24-WAY	*Call
2084<2064		4424<2062	2-WAY TO 24-WAY	*Call
2084<2064		4424<2063	3-WAY TO 24-WAY	*Call
2084<2064		4424<2064	4-WAY TO 24-WAY	*Call
2084<2064		4424<2065	5-WAY TO 24-WAY	*Call
2084<2064		4424<2066	6-WAY TO 24-WAY	*Call
2084<2064		4424<2067	7-WAY TO 24-WAY	*Call
2084<2064		4424<2068	8-WAY TO 24-WAY	*Call
2084<2064		4424<2069	9-WAY TO 24-WAY	*Call
2084<2064		4424<2070	10-WAY TO 24-WAY	*Call
2084<2064		4424<2071	11-WAY TO 24-WAY	*Call
2084<2064		4424<2072	12-WAY TO 24-WAY	*Call
2084<2064		4424<2073	13-WAY TO 24-WAY	*Call
2084<2064		4424<2074	14-WAY TO 24-WAY	*Call
2084<2064		4424<2075	15-WAY TO 24-WAY	*Call
2084<2064		4424<2076	16-WAY TO 24-WAY	*Call
2084<2064		4425<1051	1-WAY TO 25-WAY	*Call
2084<2064		4425<1052	2-WAY TO 25-WAY	*Call
2084<2064		4425<1053	3-WAY TO 25-WAY	*Call
2084<2064		4425<1054	4-WAY TO 25-WAY	*Call
2084<2064		4425<1055	5-WAY TO 25-WAY	*Call
2084<2064		4425<1056	6-WAY TO 25-WAY	*Call
2084<2064		4425<1057	7-WAY TO 25-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4425<1058	8-WAY TO 25-WAY	*Call
2084<2064		4425<1059	9-WAY TO 25-WAY	*Call
2084<2064		4425<1061	1-WAY TO 25-WAY	*Call
2084<2064		4425<1062	2-WAY TO 25-WAY	*Call
2084<2064		4425<1063	3-WAY TO 25-WAY	*Call
2084<2064		4425<1064	4-WAY TO 25-WAY	*Call
2084<2064		4425<1065	5-WAY TO 25-WAY	*Call
2084<2064		4425<1066	6-WAY TO 25-WAY	*Call
2084<2064		4425<1067	7-WAY TO 25-WAY	*Call
2084<2064		4425<1068	8-WAY TO 25-WAY	*Call
2084<2064		4425<1069	9-WAY TO 25-WAY	*Call
2084<2064		4425<1070	10-WAY TO 25-WAY	*Call
2084<2064		4425<1071	11-WAY TO 25-WAY	*Call
2084<2064		4425<1072	12-WAY TO 25-WAY	*Call
2084<2064		4425<1073	13-WAY TO 25-WAY	*Call
2084<2064		4425<1074	14-WAY TO 25-WAY	*Call
2084<2064		4425<1075	15-WAY TO 25-WAY	*Call
2084<2064		4425<1076	16-WAY TO 25-WAY	*Call
2084<2064		4425<2061	1-WAY TO 25-WAY	*Call
2084<2064		4425<2062	2-WAY TO 25-WAY	*Call
2084<2064		4425<2063	3-WAY TO 25-WAY	*Call
2084<2064		4425<2064	4-WAY TO 25-WAY	*Call
2084<2064		4425<2065	5-WAY TO 25-WAY	*Call
2084<2064		4425<2066	6-WAY TO 25-WAY	*Call
2084<2064		4425<2067	7-WAY TO 25-WAY	*Call
2084<2064		4425<2068	8-WAY TO 25-WAY	*Call
2084<2064		4425<2069	9-WAY TO 25-WAY	*Call
2084<2064		4425<2070	10-WAY TO 25-WAY	*Call
2084<2064		4425<2071	11-WAY TO 25-WAY	*Call
2084<2064		4425<2072	12-WAY TO 25-WAY	*Call
2084<2064		4425<2073	13-WAY TO 25-WAY	*Call
2084<2064		4425<2074	14-WAY TO 25-WAY	*Call
2084<2064		4425<2075	15-WAY TO 25-WAY	*Call
2084<2064		4425<2076	16-WAY TO 25-WAY	*Call
2084<2064		4426<1051	1-WAY TO 26-WAY	*Call
2084<2064		4426<1052	2-WAY TO 26-WAY	*Call
2084<2064		4426<1053	3-WAY TO 26-WAY	*Call
2084<2064		4426<1054	4-WAY TO 26-WAY	*Call
2084<2064		4426<1055	5-WAY TO 26-WAY	*Call
2084<2064		4426<1056	6-WAY TO 26-WAY	*Call
2084<2064		4426<1057	7-WAY TO 26-WAY	*Call
2084<2064		4426<1058	8-WAY TO 26-WAY	*Call
2084<2064		4426<1059	9-WAY TO 26-WAY	*Call
2084<2064		4426<1061	1-WAY TO 26-WAY	*Call
2084<2064		4426<1062	2-WAY TO 26-WAY	*Call
2084<2064		4426<1063	3-WAY TO 26-WAY	*Call
2084<2064		4426<1064	4-WAY TO 26-WAY	*Call
2084<2064		4426<1065	5-WAY TO 26-WAY	*Call
2084<2064		4426<1066	6-WAY TO 26-WAY	*Call
2084<2064		4426<1067	7-WAY TO 26-WAY	*Call
2084<2064		4426<1068	8-WAY TO 26-WAY	*Call
2084<2064		4426<1069	9-WAY TO 26-WAY	*Call
2084<2064		4426<1070	10-WAY TO 26-WAY	*Call
2084<2064		4426<1071	11-WAY TO 26-WAY	*Call
2084<2064		4426<1072	12-WAY TO 26-WAY	*Call
2084<2064		4426<1073	13-WAY TO 26-WAY	*Call
2084<2064		4426<1074	14-WAY TO 26-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4426<1075	15-WAY TO 26-WAY	*Call
2084<2064		4426<1076	16-WAY TO 26-WAY	*Call
2084<2064		4426<2061	1-WAY TO 26-WAY	*Call
2084<2064		4426<2062	2-WAY TO 26-WAY	*Call
2084<2064		4426<2063	3-WAY TO 26-WAY	*Call
2084<2064		4426<2064	4-WAY TO 26-WAY	*Call
2084<2064		4426<2065	5-WAY TO 26-WAY	*Call
2084<2064		4426<2066	6-WAY TO 26-WAY	*Call
2084<2064		4426<2067	7-WAY TO 26-WAY	*Call
2084<2064		4426<2068	8-WAY TO 26-WAY	*Call
2084<2064		4426<2069	9-WAY TO 26-WAY	*Call
2084<2064		4426<2070	10-WAY TO 26-WAY	*Call
2084<2064		4426<2071	11-WAY TO 26-WAY	*Call
2084<2064		4426<2072	12-WAY TO 26-WAY	*Call
2084<2064		4426<2073	13-WAY TO 26-WAY	*Call
2084<2064		4426<2074	14-WAY TO 26-WAY	*Call
2084<2064		4426<2075	15-WAY TO 26-WAY	*Call
2084<2064		4426<2076	16-WAY TO 26-WAY	*Call
2084<2064		4427<1051	1-WAY TO 27-WAY	*Call
2084<2064		4427<1052	2-WAY TO 27-WAY	*Call
2084<2064		4427<1053	3-WAY TO 27-WAY	*Call
2084<2064		4427<1054	4-WAY TO 27-WAY	*Call
2084<2064		4427<1055	5-WAY TO 27-WAY	*Call
2084<2064		4427<1056	6-WAY TO 27-WAY	*Call
2084<2064		4427<1057	7-WAY TO 27-WAY	*Call
2084<2064		4427<1058	8-WAY TO 27-WAY	*Call
2084<2064		4427<1059	9-WAY TO 27-WAY	*Call
2084<2064		4427<1061	1-WAY TO 27-WAY	*Call
2084<2064		4427<1062	2-WAY TO 27-WAY	*Call
2084<2064		4427<1063	3-WAY TO 27-WAY	*Call
2084<2064		4427<1064	4-WAY TO 27-WAY	*Call
2084<2064		4427<1065	5-WAY TO 27-WAY	*Call
2084<2064		4427<1066	6-WAY TO 27-WAY	*Call
2084<2064		4427<1067	7-WAY TO 27-WAY	*Call
2084<2064		4427<1068	8-WAY TO 27-WAY	*Call
2084<2064		4427<1069	9-WAY TO 27-WAY	*Call
2084<2064		4427<1070	10-WAY TO 27-WAY	*Call
2084<2064		4427<1071	11-WAY TO 27-WAY	*Call
2084<2064		4427<1072	12-WAY TO 27-WAY	*Call
2084<2064		4427<1073	13-WAY TO 27-WAY	*Call
2084<2064		4427<1074	14-WAY TO 27-WAY	*Call
2084<2064		4427<1075	15-WAY TO 27-WAY	*Call
2084<2064		4427<1076	16-WAY TO 27-WAY	*Call
2084<2064		4427<2061	1-WAY TO 27-WAY	*Call
2084<2064		4427<2062	2-WAY TO 27-WAY	*Call
2084<2064		4427<2063	3-WAY TO 27-WAY	*Call
2084<2064		4427<2064	4-WAY TO 27-WAY	*Call
2084<2064		4427<2065	5-WAY TO 27-WAY	*Call
2084<2064		4427<2066	6-WAY TO 27-WAY	*Call
2084<2064		4427<2067	7-WAY TO 27-WAY	*Call
2084<2064		4427<2068	8-WAY TO 27-WAY	*Call
2084<2064		4427<2069	9-WAY TO 27-WAY	*Call
2084<2064		4427<2070	10-WAY TO 27-WAY	*Call
2084<2064		4427<2071	11-WAY TO 27-WAY	*Call
2084<2064		4427<2072	12-WAY TO 27-WAY	*Call
2084<2064		4427<2073	13-WAY TO 27-WAY	*Call
2084<2064		4427<2074	14-WAY TO 27-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4427<2075	15-WAY TO 27-WAY	*Call
2084<2064		4427<2076	16-WAY TO 27-WAY	*Call
2084<2064		4428<1051	1-WAY TO 28-WAY	*Call
2084<2064		4428<1052	2-WAY TO 28-WAY	*Call
2084<2064		4428<1053	3-WAY TO 28-WAY	*Call
2084<2064		4428<1054	4-WAY TO 28-WAY	*Call
2084<2064		4428<1055	5-WAY TO 28-WAY	*Call
2084<2064		4428<1056	6-WAY TO 28-WAY	*Call
2084<2064		4428<1057	7-WAY TO 28-WAY	*Call
2084<2064		4428<1058	8-WAY TO 28-WAY	*Call
2084<2064		4428<1059	9-WAY TO 28-WAY	*Call
2084<2064		4428<1061	1-WAY TO 28-WAY	*Call
2084<2064		4428<1062	2-WAY TO 28-WAY	*Call
2084<2064		4428<1063	3-WAY TO 28-WAY	*Call
2084<2064		4428<1064	4-WAY TO 28-WAY	*Call
2084<2064		4428<1065	5-WAY TO 28-WAY	*Call
2084<2064		4428<1066	6-WAY TO 28-WAY	*Call
2084<2064		4428<1067	7-WAY TO 28-WAY	*Call
2084<2064		4428<1068	8-WAY TO 28-WAY	*Call
2084<2064		4428<1069	9-WAY TO 28-WAY	*Call
2084<2064		4428<1070	10-WAY TO 28-WAY	*Call
2084<2064		4428<1071	11-WAY TO 28-WAY	*Call
2084<2064		4428<1072	12-WAY TO 28-WAY	*Call
2084<2064		4428<1073	13-WAY TO 28-WAY	*Call
2084<2064		4428<1074	14-WAY TO 28-WAY	*Call
2084<2064		4428<1075	15-WAY TO 28-WAY	*Call
2084<2064		4428<1076	16-WAY TO 28-WAY	*Call
2084<2064		4428<2061	1-WAY TO 28-WAY	*Call
2084<2064		4428<2062	2-WAY TO 28-WAY	*Call
2084<2064		4428<2063	3-WAY TO 28-WAY	*Call
2084<2064		4428<2064	4-WAY TO 28-WAY	*Call
2084<2064		4428<2065	5-WAY TO 28-WAY	*Call
2084<2064		4428<2066	6-WAY TO 28-WAY	*Call
2084<2064		4428<2067	7-WAY TO 28-WAY	*Call
2084<2064		4428<2068	8-WAY TO 28-WAY	*Call
2084<2064		4428<2069	9-WAY TO 28-WAY	*Call
2084<2064		4428<2070	10-WAY TO 28-WAY	*Call
2084<2064		4428<2071	11-WAY TO 28-WAY	*Call
2084<2064		4428<2072	12-WAY TO 28-WAY	*Call
2084<2064		4428<2073	13-WAY TO 28-WAY	*Call
2084<2064		4428<2074	14-WAY TO 28-WAY	*Call
2084<2064		4428<2075	15-WAY TO 28-WAY	*Call
2084<2064		4428<2076	16-WAY TO 28-WAY	*Call
2084<2064		4429<1051	1-WAY TO 29-WAY	*Call
2084<2064		4429<1052	2-WAY TO 29-WAY	*Call
2084<2064		4429<1053	3-WAY TO 29-WAY	*Call
2084<2064		4429<1054	4-WAY TO 29-WAY	*Call
2084<2064		4429<1055	5-WAY TO 29-WAY	*Call
2084<2064		4429<1056	6-WAY TO 29-WAY	*Call
2084<2064		4429<1057	7-WAY TO 29-WAY	*Call
2084<2064		4429<1058	8-WAY TO 29-WAY	*Call
2084<2064		4429<1059	9-WAY TO 29-WAY	*Call
2084<2064		4429<1061	1-WAY TO 29-WAY	*Call
2084<2064		4429<1062	2-WAY TO 29-WAY	*Call
2084<2064		4429<1063	3-WAY TO 29-WAY	*Call
2084<2064		4429<1064	4-WAY TO 29-WAY	*Call
2084<2064		4429<1065	5-WAY TO 29-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4429<1066	6-WAY TO 29-WAY	*Call
2084<2064		4429<1067	7-WAY TO 29-WAY	*Call
2084<2064		4429<1068	8-WAY TO 29-WAY	*Call
2084<2064		4429<1069	9-WAY TO 29-WAY	*Call
2084<2064		4429<1070	10-WAY TO 29-WAY	*Call
2084<2064		4429<1071	11-WAY TO 29-WAY	*Call
2084<2064		4429<1072	12-WAY TO 29-WAY	*Call
2084<2064		4429<1073	13-WAY TO 29-WAY	*Call
2084<2064		4429<1074	14-WAY TO 29-WAY	*Call
2084<2064		4429<1075	15-WAY TO 29-WAY	*Call
2084<2064		4429<1076	16-WAY TO 29-WAY	*Call
2084<2064		4429<2061	1-WAY TO 29-WAY	*Call
2084<2064		4429<2062	2-WAY TO 29-WAY	*Call
2084<2064		4429<2063	3-WAY TO 29-WAY	*Call
2084<2064		4429<2064	4-WAY TO 29-WAY	*Call
2084<2064		4429<2065	5-WAY TO 29-WAY	*Call
2084<2064		4429<2066	6-WAY TO 29-WAY	*Call
2084<2064		4429<2067	7-WAY TO 29-WAY	*Call
2084<2064		4429<2068	8-WAY TO 29-WAY	*Call
2084<2064		4429<2069	9-WAY TO 29-WAY	*Call
2084<2064		4429<2070	10-WAY TO 29-WAY	*Call
2084<2064		4429<2071	11-WAY TO 29-WAY	*Call
2084<2064		4429<2072	12-WAY TO 29-WAY	*Call
2084<2064		4429<2073	13-WAY TO 29-WAY	*Call
2084<2064		4429<2074	14-WAY TO 29-WAY	*Call
2084<2064		4429<2075	15-WAY TO 29-WAY	*Call
2084<2064		4429<2076	16-WAY TO 29-WAY	*Call
2084<2064		4430<1051	1-WAY TO 30-WAY	*Call
2084<2064		4430<1052	2-WAY TO 30-WAY	*Call
2084<2064		4430<1053	3-WAY TO 30-WAY	*Call
2084<2064		4430<1054	4-WAY TO 30-WAY	*Call
2084<2064		4430<1055	5-WAY TO 30-WAY	*Call
2084<2064		4430<1056	6-WAY TO 30-WAY	*Call
2084<2064		4430<1057	7-WAY TO 30-WAY	*Call
2084<2064		4430<1058	8-WAY TO 30-WAY	*Call
2084<2064		4430<1059	9-WAY TO 30-WAY	*Call
2084<2064		4430<1061	1-WAY TO 30-WAY	*Call
2084<2064		4430<1062	2-WAY TO 30-WAY	*Call
2084<2064		4430<1063	3-WAY TO 30-WAY	*Call
2084<2064		4430<1064	4-WAY TO 30-WAY	*Call
2084<2064		4430<1065	5-WAY TO 30-WAY	*Call
2084<2064		4430<1066	6-WAY TO 30-WAY	*Call
2084<2064		4430<1067	7-WAY TO 30-WAY	*Call
2084<2064		4430<1068	8-WAY TO 30-WAY	*Call
2084<2064		4430<1069	9-WAY TO 30-WAY	*Call
2084<2064		4430<1070	10-WAY TO 30-WAY	*Call
2084<2064		4430<1071	11-WAY TO 30-WAY	*Call
2084<2064		4430<1072	12-WAY TO 30-WAY	*Call
2084<2064		4430<1073	13-WAY TO 30-WAY	*Call
2084<2064		4430<1074	14-WAY TO 30-WAY	*Call
2084<2064		4430<1075	15-WAY TO 30-WAY	*Call
2084<2064		4430<1076	16-WAY TO 30-WAY	*Call
2084<2064		4430<2061	1-WAY TO 30-WAY	*Call
2084<2064		4430<2062	2-WAY TO 30-WAY	*Call
2084<2064		4430<2063	3-WAY TO 30-WAY	*Call
2084<2064		4430<2064	4-WAY TO 30-WAY	*Call
2084<2064		4430<2065	5-WAY TO 30-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4430<2066	6-WAY TO 30-WAY	*Call
2084<2064		4430<2067	7-WAY TO 30-WAY	*Call
2084<2064		4430<2068	8-WAY TO 30-WAY	*Call
2084<2064		4430<2069	9-WAY TO 30-WAY	*Call
2084<2064		4430<2070	10-WAY TO 30-WAY	*Call
2084<2064		4430<2071	11-WAY TO 30-WAY	*Call
2084<2064		4430<2072	12-WAY TO 30-WAY	*Call
2084<2064		4430<2073	13-WAY TO 30-WAY	*Call
2084<2064		4430<2074	14-WAY TO 30-WAY	*Call
2084<2064		4430<2075	15-WAY TO 30-WAY	*Call
2084<2064		4430<2076	16-WAY TO 30-WAY	*Call
2084<2064		4431<1051	1-WAY TO 31-WAY	*Call
2084<2064		4431<1052	2-WAY TO 31-WAY	*Call
2084<2064		4431<1053	3-WAY TO 31-WAY	*Call
2084<2064		4431<1054	4-WAY TO 31-WAY	*Call
2084<2064		4431<1055	5-WAY TO 31-WAY	*Call
2084<2064		4431<1056	6-WAY TO 31-WAY	*Call
2084<2064		4431<1057	7-WAY TO 31-WAY	*Call
2084<2064		4431<1058	8-WAY TO 31-WAY	*Call
2084<2064		4431<1059	9-WAY TO 31-WAY	*Call
2084<2064		4431<1061	1-WAY TO 31-WAY	*Call
2084<2064		4431<1062	2-WAY TO 31-WAY	*Call
2084<2064		4431<1063	3-WAY TO 31-WAY	*Call
2084<2064		4431<1064	4-WAY TO 31-WAY	*Call
2084<2064		4431<1065	5-WAY TO 31-WAY	*Call
2084<2064		4431<1066	6-WAY TO 31-WAY	*Call
2084<2064		4431<1067	7-WAY TO 31-WAY	*Call
2084<2064		4431<1068	8-WAY TO 31-WAY	*Call
2084<2064		4431<1069	9-WAY TO 31-WAY	*Call
2084<2064		4431<1070	10-WAY TO 31-WAY	*Call
2084<2064		4431<1071	11-WAY TO 31-WAY	*Call
2084<2064		4431<1072	12-WAY TO 31-WAY	*Call
2084<2064		4431<1073	13-WAY TO 31-WAY	*Call
2084<2064		4431<1074	14-WAY TO 31-WAY	*Call
2084<2064		4431<1075	15-WAY TO 31-WAY	*Call
2084<2064		4431<1076	16-WAY TO 31-WAY	*Call
2084<2064		4431<2061	1-WAY TO 31-WAY	*Call
2084<2064		4431<2062	2-WAY TO 31-WAY	*Call
2084<2064		4431<2063	3-WAY TO 31-WAY	*Call
2084<2064		4431<2064	4-WAY TO 31-WAY	*Call
2084<2064		4431<2065	5-WAY TO 31-WAY	*Call
2084<2064		4431<2066	6-WAY TO 31-WAY	*Call
2084<2064		4431<2067	7-WAY TO 31-WAY	*Call
2084<2064		4431<2068	8-WAY TO 31-WAY	*Call
2084<2064		4431<2069	9-WAY TO 31-WAY	*Call
2084<2064		4431<2070	10-WAY TO 31-WAY	*Call
2084<2064		4431<2071	11-WAY TO 31-WAY	*Call
2084<2064		4431<2072	12-WAY TO 31-WAY	*Call
2084<2064		4431<2073	13-WAY TO 31-WAY	*Call
2084<2064		4431<2074	14-WAY TO 31-WAY	*Call
2084<2064		4431<2075	15-WAY TO 31-WAY	*Call
2084<2064		4431<2076	16-WAY TO 31-WAY	*Call
2084<2064		4432<1061	1-WAY TO 32-WAY	*Call
2084<2064		4432<1062	2-WAY TO 32-WAY	*Call
2084<2064		4432<1063	3-WAY TO 32-WAY	*Call
2084<2064		4432<1064	4-WAY TO 32-WAY	*Call
2084<2064		4432<1065	5-WAY TO 32-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2064		4432<1066	6-WAY TO 32-WAY	*Call
2084<2064		4432<1067	7-WAY TO 32-WAY	*Call
2084<2064		4432<1068	8-WAY TO 32-WAY	*Call
2084<2064		4432<1069	9-WAY TO 32-WAY	*Call
2084<2064		4432<1070	10-WAY TO 32-WAY	*Call
2084<2064		4432<1071	11-WAY TO 32-WAY	*Call
2084<2064		4432<1072	12-WAY TO 32-WAY	*Call
2084<2064		4432<1073	13-WAY TO 32-WAY	*Call
2084<2064		4432<1074	14-WAY TO 32-WAY	*Call
2084<2064		4432<1075	15-WAY TO 32-WAY	*Call
2084<2064		4432<1076	16-WAY TO 32-WAY	*Call
2084<2064		4432<2061	1-WAY TO 32-WAY	*Call
2084<2064		4432<2062	2-WAY TO 32-WAY	*Call
2084<2064		4432<2063	3-WAY TO 32-WAY	*Call
2084<2064		4432<2064	4-WAY TO 32-WAY	*Call
2084<2064		4432<2065	5-WAY TO 32-WAY	*Call
2084<2064		4432<2066	6-WAY TO 32-WAY	*Call
2084<2064		4432<2067	7-WAY TO 32-WAY	*Call
2084<2064		4432<2068	8-WAY TO 32-WAY	*Call
2084<2064		4432<2069	9-WAY TO 32-WAY	*Call
2084<2064		4432<2070	10-WAY TO 32-WAY	*Call
2084<2064		4432<2071	11-WAY TO 32-WAY	*Call
2084<2064		4432<2072	12-WAY TO 32-WAY	*Call
2084<2064		4432<2073	13-WAY TO 32-WAY	*Call
2084<2064		4432<2074	14-WAY TO 32-WAY	*Call
2084<2064		4432<2075	15-WAY TO 32-WAY	*Call
2084<2064		4432<2076	16-WAY TO 32-WAY	*Call
2084<2086		0519<6519	OPTIONAL SAP	*Call
2084<2086		2602<3102	MEMORY TO MEMORY	*Call
2084<2086		2603<3102	MEMORY TO MEMORY	*Call
2084<2086		2603<3104	MEMORY TO MEMORY	*Call
2084<2086		2604<3102	MEMORY TO MEMORY	*Call
2084<2086		2604<3104	MEMORY TO MEMORY	*Call
2084<2086		2604<3106	MEMORY TO MEMORY	*Call
2084<2086		2605<3102	MEMORY TO MEMORY	*Call
2084<2086		2605<3104	MEMORY TO MEMORY	*Call
2084<2086		2605<3106	MEMORY TO MEMORY	*Call
2084<2086		2605<3108	MEMORY TO MEMORY	*Call
2084<2086		2606<3102	MEMORY TO MEMORY	*Call
2084<2086		2606<3104	MEMORY TO MEMORY	*Call
2084<2086		2606<3106	MEMORY TO MEMORY	*Call
2084<2086		2606<3108	MEMORY TO MEMORY	*Call
2084<2086		2607<3102	MEMORY TO MEMORY	*Call
2084<2086		2607<3104	MEMORY TO MEMORY	*Call
2084<2086		2607<3106	MEMORY TO MEMORY	*Call
2084<2086		2607<3108	MEMORY TO MEMORY	*Call
2084<2086		2608<3102	MEMORY TO MEMORY	*Call
2084<2086		2608<3104	MEMORY TO MEMORY	*Call
2084<2086		2608<3106	MEMORY TO MEMORY	*Call
2084<2086		2608<3108	MEMORY TO MEMORY	*Call
2084<2086		4400<6170	1WAY TO A ZERO WAY	*Call
2084<2086		4400<6250	2WAY TO A ZERO WAY	*Call
2084<2086		4400<6260	2WAY TO A ZERO WAY	*Call
2084<2086		4400<6270	2WAY TO A ZERO WAY	*Call
2084<2086		4400<6330	3WAY TO A ZERO WAY	*Call
2084<2086		4400<6340	3WAY TO A ZERO WAY	*Call
2084<2086		4400<6350	3WAY TO A ZERO WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2086		4400<6360	3WAY TO A ZERO WAY	*Call
2084<2086		4400<6370	3WAY TO A ZERO WAY	*Call
2084<2086		4400<6430	4WAY TO A ZERO WAY	*Call
2084<2086		4400<6440	4WAY TO A ZERO WAY	*Call
2084<2086		4400<6450	4WAY TO A ZERO WAY	*Call
2084<2086		4400<6460	4WAY TO A ZERO WAY	*Call
2084<2086		4400<6470	4WAY TO A ZERO WAY	*Call
2084<2086		4401<6170	1WAY TO A 1 WAY	*Call
2084<2086		4401<6250	2WAY TO A 1 WAY	*Call
2084<2086		4401<6260	2WAY TO A 1 WAY	*Call
2084<2086		4401<6270	2WAY TO A 1 WAY	*Call
2084<2086		4401<6330	3WAY TO A 1 WAY	*Call
2084<2086		4401<6340	3WAY TO A 1 WAY	*Call
2084<2086		4401<6350	3WAY TO A 1 WAY	*Call
2084<2086		4401<6360	3WAY TO A 1 WAY	*Call
2084<2086		4401<6370	3WAY TO A 1 WAY	*Call
2084<2086		4401<6430	4WAY TO A 1 WAY	*Call
2084<2086		4401<6440	4WAY TO A 1 WAY	*Call
2084<2086		4401<6450	4WAY TO A 1 WAY	*Call
2084<2086		4401<6460	4WAY TO A 1 WAY	*Call
2084<2086		4401<6470	4WAY TO A 1 WAY	*Call
2084<2086		4402<6170	1WAY TO A 2 WAY	*Call
2084<2086		4402<6250	2WAY TO A 2 WAY	*Call
2084<2086		4402<6260	2WAY TO A 2 WAY	*Call
2084<2086		4402<6270	2WAY TO A 2 WAY	*Call
2084<2086		4402<6330	3WAY TO A 2 WAY	*Call
2084<2086		4402<6340	3WAY TO A 2 WAY	*Call
2084<2086		4402<6350	3WAY TO A 2 WAY	*Call
2084<2086		4402<6360	3WAY TO A 2 WAY	*Call
2084<2086		4402<6370	3WAY TO A 2 WAY	*Call
2084<2086		4402<6430	4WAY TO A 2 WAY	*Call
2084<2086		4402<6440	4WAY TO A 2 WAY	*Call
2084<2086		4402<6450	4WAY TO A 2 WAY	*Call
2084<2086		4402<6460	4WAY TO A 2 WAY	*Call
2084<2086		4402<6470	4WAY TO A 2 WAY	*Call
2084<2086		4403<6170	1WAY TO A 3 WAY	*Call
2084<2086		4403<6250	2WAY TO A 3WAY	*Call
2084<2086		4403<6260	2WAY TO A 3WAY	*Call
2084<2086		4403<6270	2WAY TO A 3 WAY	*Call
2084<2086		4403<6330	3WAY TO A 3 WAY	*Call
2084<2086		4403<6340	3WAY TO A 3 WAY	*Call
2084<2086		4403<6350	3WAY TO A 3 WAY	*Call
2084<2086		4403<6360	3WAY TO A 3 WAY	*Call
2084<2086		4403<6370	3WAY TO A 3 WAY	*Call
2084<2086		4403<6430	4WAY TO A 3 WAY	*Call
2084<2086		4403<6440	4WAY TO A 3 WAY	*Call
2084<2086		4403<6450	4WAY TO A 3 WAY	*Call
2084<2086		4403<6460	4WAY TO A 3 WAY	*Call
2084<2086		4403<6470	4WAY TO A 3 WAY	*Call
2084<2086		4404<6170	1WAY TO A 4 WAY	*Call
2084<2086		4404<6250	2WAY TO A 4WAY	*Call
2084<2086		4404<6260	2WAY TO A 4WAY	*Call
2084<2086		4404<6270	2WAY TO A 4 WAY	*Call
2084<2086		4404<6330	3WAY TO A 4 WAY	*Call
2084<2086		4404<6340	3WAY TO A 4 WAY	*Call
2084<2086		4404<6350	3WAY TO A 4 WAY	*Call
2084<2086		4404<6360	3WAY TO A 4 WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2086		4404<6370	3WAY TO A 4 WAY	*Call
2084<2086		4404<6430	4WAY TO A 4 WAY	*Call
2084<2086		4404<6440	4WAY TO A 4 WAY	*Call
2084<2086		4404<6450	4WAY TO A 4 WAY	*Call
2084<2086		4404<6460	4WAY TO A 4 WAY	*Call
2084<2086		4404<6470	4WAY TO A 4 WAY	*Call
2084<2086		4405<6170	1WAY TO A 5 WAY	*Call
2084<2086		4405<6250	2WAY TO A 5WAY	*Call
2084<2086		4405<6260	2WAY TO A 5WAY	*Call
2084<2086		4405<6270	2WAY TO A 5 WAY	*Call
2084<2086		4405<6330	3WAY TO A 5 WAY	*Call
2084<2086		4405<6340	3WAY TO A 5 WAY	*Call
2084<2086		4405<6350	3WAY TO A 5 WAY	*Call
2084<2086		4405<6360	3WAY TO A 5 WAY	*Call
2084<2086		4405<6370	3WAY TO A 5 WAY	*Call
2084<2086		4405<6430	4WAY TO A 5 WAY	*Call
2084<2086		4405<6440	4WAY TO A 5 WAY	*Call
2084<2086		4405<6450	4WAY TO A 5 WAY	*Call
2084<2086		4405<6460	4WAY TO A 5 WAY	*Call
2084<2086		4405<6470	4WAY TO A 5 WAY	*Call
2084<2086		4406<6170	1WAY TO A 6 WAY	*Call
2084<2086		4406<6250	2WAY TO A 6WAY	*Call
2084<2086		4406<6260	2WAY TO A 6WAY	*Call
2084<2086		4406<6270	2WAY TO A 6 WAY	*Call
2084<2086		4406<6330	3WAY TO A 6 WAY	*Call
2084<2086		4406<6340	3WAY TO A 6 WAY	*Call
2084<2086		4406<6350	3WAY TO A 6 WAY	*Call
2084<2086		4406<6360	3WAY TO A 6 WAY	*Call
2084<2086		4406<6370	3WAY TO A 6 WAY	*Call
2084<2086		4406<6430	4WAY TO A 6 WAY	*Call
2084<2086		4406<6440	4WAY TO A 6 WAY	*Call
2084<2086		4406<6450	4WAY TO A 6 WAY	*Call
2084<2086		4406<6460	4WAY TO A 6 WAY	*Call
2084<2086		4406<6470	4WAY TO A 6 WAY	*Call
2084<2086		4407<6170	1WAY TO A 7 WAY	*Call
2084<2086		4407<6250	2WAY TO A 7WAY	*Call
2084<2086		4407<6260	2WAY TO A 7WAY	*Call
2084<2086		4407<6270	2WAY TO A 7 WAY	*Call
2084<2086		4407<6330	3WAY TO A 7 WAY	*Call
2084<2086		4407<6340	3WAY TO A 7 WAY	*Call
2084<2086		4407<6350	3WAY TO A 7 WAY	*Call
2084<2086		4407<6360	3WAY TO A 7 WAY	*Call
2084<2086		4407<6370	3WAY TO A 7 WAY	*Call
2084<2086		4407<6430	4WAY TO A 7 WAY	*Call
2084<2086		4407<6440	4WAY TO A 7 WAY	*Call
2084<2086		4407<6450	4WAY TO A 7 WAY	*Call
2084<2086		4407<6460	4WAY TO A 7 WAY	*Call
2084<2086		4407<6470	4WAY TO A 7 WAY	*Call
2084<2086		4408<6170	1WAY TO A 8 WAY	*Call
2084<2086		4408<6250	2WAY TO A 8WAY	*Call
2084<2086		4408<6260	2WAY TO A 8WAY	*Call
2084<2086		4408<6270	2WAY TO A 8 WAY	*Call
2084<2086		4408<6330	3WAY TO A 8 WAY	*Call
2084<2086		4408<6340	3WAY TO A 8 WAY	*Call
2084<2086		4408<6350	3WAY TO A 8 WAY	*Call
2084<2086		4408<6360	3WAY TO A 8 WAY	*Call
2084<2086		4408<6370	3WAY TO A 8 WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2084<2086		4408<6430	4WAY TO A 8 WAY	*Call
2084<2086		4408<6440	4WAY TO A 8WAY	*Call
2084<2086		4408<6450	4WAY TO A 8 WAY	*Call
2084<2086		4408<6460	4WAY TO A 8 WAY	*Call
2084<2086		4408<6470	4WAY TO A 8 WAY	*Call
2094		0077<0078	TR/EN COMBO TO DUAL EN	*Call
2094		1111<1110	S08 TO S18	*Call
2094		1112<1110	S08 TO S28	*Call
2094		1112<1111	S18 TO S28	*Call
2094		1113<1110	S08 TO S38	*Call
2094		1113<1111	S18 TO S38	*Call
2094		1113<1112	S28 TO S38	*Call
2094		1114<1110	S08 TO S54	*Call
2094		1114<1111	S18 TO S54	*Call
2094		1114<1112	S28 TO S54	*Call
2094		1114<1113	S38 TO S54	*Call
2094		2702<2701	MEMORY TO MEMORY	*Call
2094		2703<2701	MEMORY TO MEMORY	*Call
2094		2703<2702	MEMORY TO MEMORY	*Call
2094		2703<2802	MEMORY TO MEMORY	*Call
2094		2704<2701	MEMORY TO MEMORY	*Call
2094		2704<2702	MEMORY TO MEMORY	*Call
2094		2704<2703	MEMORY TO MEMORY	*Call
2094		2704<2802	MEMORY TO MEMORY	*Call
2094		2704<2803	MEMORY TO MEMORY	*Call
2094		2705<2701	MEMORY TO MEMORY	*Call
2094		2705<2702	MEMORY TO MEMORY	*Call
2094		2705<2703	MEMORY TO MEMORY	*Call
2094		2705<2704	MEMORY TO MEMORY	*Call
2094		2705<2802	MEMORY TO MEMORY	*Call
2094		2705<2803	MEMORY TO MEMORY	*Call
2094		2705<2804	MEMORY TO MEMORY	*Call
2094		2706<2701	MEMORY TO MEMORY	*Call
2094		2706<2702	MEMORY TO MEMORY	*Call
2094		2706<2703	MEMORY TO MEMORY	*Call
2094		2706<2704	MEMORY TO MEMORY	*Call
2094		2706<2705	MEMORY TO MEMORY	*Call
2094		2706<2802	MEMORY TO MEMORY	*Call
2094		2706<2803	MEMORY TO MEMORY	*Call
2094		2706<2804	MEMORY TO MEMORY	*Call
2094		2706<2805	MEMORY TO MEMORY	*Call
2094		2707<2701	MEMORY TO MEMORY	*Call
2094		2707<2702	MEMORY TO MEMORY	*Call
2094		2707<2703	MEMORY TO MEMORY	*Call
2094		2707<2704	MEMORY TO MEMORY	*Call
2094		2707<2705	MEMORY TO MEMORY	*Call
2094		2707<2706	MEMORY TO MEMORY	*Call
2094		2707<2802	MEMORY TO MEMORY	*Call
2094		2707<2803	MEMORY TO MEMORY	*Call
2094		2707<2804	MEMORY TO MEMORY	*Call
2094		2707<2805	MEMORY TO MEMORY	*Call
2094		2707<2806	MEMORY TO MEMORY	*Call
2094		2708<2701	MEMORY TO MEMORY	*Call
2094		2708<2702	MEMORY TO MEMORY	*Call
2094		2708<2703	MEMORY TO MEMORY	*Call
2094		2708<2704	MEMORY TO MEMORY	*Call
2094		2708<2705	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2708<2706	MEMORY TO MEMORY	*Call
2094		2708<2707	MEMORY TO MEMORY	*Call
2094		2708<2802	MEMORY TO MEMORY	*Call
2094		2708<2803	MEMORY TO MEMORY	*Call
2094		2708<2804	MEMORY TO MEMORY	*Call
2094		2708<2805	MEMORY TO MEMORY	*Call
2094		2708<2806	MEMORY TO MEMORY	*Call
2094		2708<2807	MEMORY TO MEMORY	*Call
2094		2709<2701	MEMORY TO MEMORY	*Call
2094		2709<2702	MEMORY TO MEMORY	*Call
2094		2709<2703	MEMORY TO MEMORY	*Call
2094		2709<2704	MEMORY TO MEMORY	*Call
2094		2709<2705	MEMORY TO MEMORY	*Call
2094		2709<2706	MEMORY TO MEMORY	*Call
2094		2709<2707	MEMORY TO MEMORY	*Call
2094		2709<2708	MEMORY TO MEMORY	*Call
2094		2709<2802	MEMORY TO MEMORY	*Call
2094		2709<2803	MEMORY TO MEMORY	*Call
2094		2709<2804	MEMORY TO MEMORY	*Call
2094		2709<2805	MEMORY TO MEMORY	*Call
2094		2709<2806	MEMORY TO MEMORY	*Call
2094		2709<2807	MEMORY TO MEMORY	*Call
2094		2709<2808	MEMORY TO MEMORY	*Call
2094		2710<2701	MEMORY TO MEMORY	*Call
2094		2710<2702	MEMORY TO MEMORY	*Call
2094		2710<2703	MEMORY TO MEMORY	*Call
2094		2710<2704	MEMORY TO MEMORY	*Call
2094		2710<2705	MEMORY TO MEMORY	*Call
2094		2710<2706	MEMORY TO MEMORY	*Call
2094		2710<2707	MEMORY TO MEMORY	*Call
2094		2710<2708	MEMORY TO MEMORY	*Call
2094		2710<2709	MEMORY TO MEMORY	*Call
2094		2710<2802	MEMORY TO MEMORY	*Call
2094		2710<2803	MEMORY TO MEMORY	*Call
2094		2710<2804	MEMORY TO MEMORY	*Call
2094		2710<2805	MEMORY TO MEMORY	*Call
2094		2710<2806	MEMORY TO MEMORY	*Call
2094		2710<2807	MEMORY TO MEMORY	*Call
2094		2710<2808	MEMORY TO MEMORY	*Call
2094		2710<2809	MEMORY TO MEMORY	*Call
2094		2711<2701	MEMORY TO MEMORY	*Call
2094		2711<2702	MEMORY TO MEMORY	*Call
2094		2711<2703	MEMORY TO MEMORY	*Call
2094		2711<2704	MEMORY TO MEMORY	*Call
2094		2711<2705	MEMORY TO MEMORY	*Call
2094		2711<2706	MEMORY TO MEMORY	*Call
2094		2711<2707	MEMORY TO MEMORY	*Call
2094		2711<2708	MEMORY TO MEMORY	*Call
2094		2711<2709	MEMORY TO MEMORY	*Call
2094		2711<2710	MEMORY TO MEMORY	*Call
2094		2711<2802	MEMORY TO MEMORY	*Call
2094		2711<2803	MEMORY TO MEMORY	*Call
2094		2711<2804	MEMORY TO MEMORY	*Call
2094		2711<2805	MEMORY TO MEMORY	*Call
2094		2711<2806	MEMORY TO MEMORY	*Call
2094		2711<2807	MEMORY TO MEMORY	*Call
2094		2711<2808	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2711<2809	MEMORY TO MEMORY	*Call
2094		2711<2810	MEMORY TO MEMORY	*Call
2094		2712<2701	MEMORY TO MEMORY	*Call
2094		2712<2702	MEMORY TO MEMORY	*Call
2094		2712<2703	MEMORY TO MEMORY	*Call
2094		2712<2704	MEMORY TO MEMORY	*Call
2094		2712<2705	MEMORY TO MEMORY	*Call
2094		2712<2706	MEMORY TO MEMORY	*Call
2094		2712<2707	MEMORY TO MEMORY	*Call
2094		2712<2708	MEMORY TO MEMORY	*Call
2094		2712<2709	MEMORY TO MEMORY	*Call
2094		2712<2710	MEMORY TO MEMORY	*Call
2094		2712<2711	MEMORY TO MEMORY	*Call
2094		2712<2802	MEMORY TO MEMORY	*Call
2094		2712<2803	MEMORY TO MEMORY	*Call
2094		2712<2804	MEMORY TO MEMORY	*Call
2094		2712<2805	MEMORY TO MEMORY	*Call
2094		2712<2806	MEMORY TO MEMORY	*Call
2094		2712<2807	MEMORY TO MEMORY	*Call
2094		2712<2808	MEMORY TO MEMORY	*Call
2094		2712<2809	MEMORY TO MEMORY	*Call
2094		2712<2810	MEMORY TO MEMORY	*Call
2094		2712<2811	MEMORY TO MEMORY	*Call
2094		2713<2701	MEMORY TO MEMORY	*Call
2094		2713<2702	MEMORY TO MEMORY	*Call
2094		2713<2703	MEMORY TO MEMORY	*Call
2094		2713<2704	MEMORY TO MEMORY	*Call
2094		2713<2705	MEMORY TO MEMORY	*Call
2094		2713<2706	MEMORY TO MEMORY	*Call
2094		2713<2707	MEMORY TO MEMORY	*Call
2094		2713<2708	MEMORY TO MEMORY	*Call
2094		2713<2709	MEMORY TO MEMORY	*Call
2094		2713<2710	MEMORY TO MEMORY	*Call
2094		2713<2711	MEMORY TO MEMORY	*Call
2094		2713<2712	MEMORY TO MEMORY	*Call
2094		2713<2802	MEMORY TO MEMORY	*Call
2094		2713<2803	MEMORY TO MEMORY	*Call
2094		2713<2804	MEMORY TO MEMORY	*Call
2094		2713<2805	MEMORY TO MEMORY	*Call
2094		2713<2806	MEMORY TO MEMORY	*Call
2094		2713<2807	MEMORY TO MEMORY	*Call
2094		2713<2808	MEMORY TO MEMORY	*Call
2094		2713<2809	MEMORY TO MEMORY	*Call
2094		2713<2810	MEMORY TO MEMORY	*Call
2094		2713<2811	MEMORY TO MEMORY	*Call
2094		2713<2812	MEMORY TO MEMORY	*Call
2094		2714<2701	MEMORY TO MEMORY	*Call
2094		2714<2702	MEMORY TO MEMORY	*Call
2094		2714<2703	MEMORY TO MEMORY	*Call
2094		2714<2704	MEMORY TO MEMORY	*Call
2094		2714<2705	MEMORY TO MEMORY	*Call
2094		2714<2706	MEMORY TO MEMORY	*Call
2094		2714<2707	MEMORY TO MEMORY	*Call
2094		2714<2708	MEMORY TO MEMORY	*Call
2094		2714<2709	MEMORY TO MEMORY	*Call
2094		2714<2710	MEMORY TO MEMORY	*Call
2094		2714<2711	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2714<2712	MEMORY TO MEMORY	*Call
2094		2714<2713	MEMORY TO MEMORY	*Call
2094		2714<2802	MEMORY TO MEMORY	*Call
2094		2714<2803	MEMORY TO MEMORY	*Call
2094		2714<2804	MEMORY TO MEMORY	*Call
2094		2714<2805	MEMORY TO MEMORY	*Call
2094		2714<2806	MEMORY TO MEMORY	*Call
2094		2714<2807	MEMORY TO MEMORY	*Call
2094		2714<2808	MEMORY TO MEMORY	*Call
2094		2714<2809	MEMORY TO MEMORY	*Call
2094		2714<2810	MEMORY TO MEMORY	*Call
2094		2714<2811	MEMORY TO MEMORY	*Call
2094		2714<2812	MEMORY TO MEMORY	*Call
2094		2714<2813	MEMORY TO MEMORY	*Call
2094		2715<2701	MEMORY TO MEMORY	*Call
2094		2715<2702	MEMORY TO MEMORY	*Call
2094		2715<2703	MEMORY TO MEMORY	*Call
2094		2715<2704	MEMORY TO MEMORY	*Call
2094		2715<2705	MEMORY TO MEMORY	*Call
2094		2715<2706	MEMORY TO MEMORY	*Call
2094		2715<2707	MEMORY TO MEMORY	*Call
2094		2715<2708	MEMORY TO MEMORY	*Call
2094		2715<2709	MEMORY TO MEMORY	*Call
2094		2715<2710	MEMORY TO MEMORY	*Call
2094		2715<2711	MEMORY TO MEMORY	*Call
2094		2715<2712	MEMORY TO MEMORY	*Call
2094		2715<2713	MEMORY TO MEMORY	*Call
2094		2715<2714	MEMORY TO MEMORY	*Call
2094		2715<2802	MEMORY TO MEMORY	*Call
2094		2715<2803	MEMORY TO MEMORY	*Call
2094		2715<2804	MEMORY TO MEMORY	*Call
2094		2715<2805	MEMORY TO MEMORY	*Call
2094		2715<2806	MEMORY TO MEMORY	*Call
2094		2715<2807	MEMORY TO MEMORY	*Call
2094		2715<2808	MEMORY TO MEMORY	*Call
2094		2715<2809	MEMORY TO MEMORY	*Call
2094		2715<2810	MEMORY TO MEMORY	*Call
2094		2715<2811	MEMORY TO MEMORY	*Call
2094		2715<2812	MEMORY TO MEMORY	*Call
2094		2715<2813	MEMORY TO MEMORY	*Call
2094		2715<2814	MEMORY TO MEMORY	*Call
2094		2716<2701	MEMORY TO MEMORY	*Call
2094		2716<2702	MEMORY TO MEMORY	*Call
2094		2716<2703	MEMORY TO MEMORY	*Call
2094		2716<2704	MEMORY TO MEMORY	*Call
2094		2716<2705	MEMORY TO MEMORY	*Call
2094		2716<2706	MEMORY TO MEMORY	*Call
2094		2716<2707	MEMORY TO MEMORY	*Call
2094		2716<2708	MEMORY TO MEMORY	*Call
2094		2716<2709	MEMORY TO MEMORY	*Call
2094		2716<2710	MEMORY TO MEMORY	*Call
2094		2716<2711	MEMORY TO MEMORY	*Call
2094		2716<2712	MEMORY TO MEMORY	*Call
2094		2716<2713	MEMORY TO MEMORY	*Call
2094		2716<2714	MEMORY TO MEMORY	*Call
2094		2716<2715	MEMORY TO MEMORY	*Call
2094		2716<2802	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2716<2803	MEMORY TO MEMORY	*Call
2094		2716<2804	MEMORY TO MEMORY	*Call
2094		2716<2805	MEMORY TO MEMORY	*Call
2094		2716<2806	MEMORY TO MEMORY	*Call
2094		2716<2807	MEMORY TO MEMORY	*Call
2094		2716<2808	MEMORY TO MEMORY	*Call
2094		2716<2809	MEMORY TO MEMORY	*Call
2094		2716<2810	MEMORY TO MEMORY	*Call
2094		2716<2811	MEMORY TO MEMORY	*Call
2094		2716<2812	MEMORY TO MEMORY	*Call
2094		2716<2813	MEMORY TO MEMORY	*Call
2094		2716<2814	MEMORY TO MEMORY	*Call
2094		2716<2815	MEMORY TO MEMORY	*Call
2094		2717<2701	MEMORY TO MEMORY	*Call
2094		2717<2702	MEMORY TO MEMORY	*Call
2094		2717<2703	MEMORY TO MEMORY	*Call
2094		2717<2704	MEMORY TO MEMORY	*Call
2094		2717<2705	MEMORY TO MEMORY	*Call
2094		2717<2706	MEMORY TO MEMORY	*Call
2094		2717<2707	MEMORY TO MEMORY	*Call
2094		2717<2708	MEMORY TO MEMORY	*Call
2094		2717<2709	MEMORY TO MEMORY	*Call
2094		2717<2710	MEMORY TO MEMORY	*Call
2094		2717<2711	MEMORY TO MEMORY	*Call
2094		2717<2712	MEMORY TO MEMORY	*Call
2094		2717<2713	MEMORY TO MEMORY	*Call
2094		2717<2714	MEMORY TO MEMORY	*Call
2094		2717<2715	MEMORY TO MEMORY	*Call
2094		2717<2716	MEMORY TO MEMORY	*Call
2094		2717<2802	MEMORY TO MEMORY	*Call
2094		2717<2803	MEMORY TO MEMORY	*Call
2094		2717<2804	MEMORY TO MEMORY	*Call
2094		2717<2805	MEMORY TO MEMORY	*Call
2094		2717<2806	MEMORY TO MEMORY	*Call
2094		2717<2807	MEMORY TO MEMORY	*Call
2094		2717<2808	MEMORY TO MEMORY	*Call
2094		2717<2809	MEMORY TO MEMORY	*Call
2094		2717<2810	MEMORY TO MEMORY	*Call
2094		2717<2811	MEMORY TO MEMORY	*Call
2094		2717<2812	MEMORY TO MEMORY	*Call
2094		2717<2813	MEMORY TO MEMORY	*Call
2094		2717<2814	MEMORY TO MEMORY	*Call
2094		2717<2815	MEMORY TO MEMORY	*Call
2094		2717<2816	MEMORY TO MEMORY	*Call
2094		2718<2701	MEMORY TO MEMORY	*Call
2094		2718<2702	MEMORY TO MEMORY	*Call
2094		2718<2703	MEMORY TO MEMORY	*Call
2094		2718<2704	MEMORY TO MEMORY	*Call
2094		2718<2705	MEMORY TO MEMORY	*Call
2094		2718<2706	MEMORY TO MEMORY	*Call
2094		2718<2707	MEMORY TO MEMORY	*Call
2094		2718<2708	MEMORY TO MEMORY	*Call
2094		2718<2709	MEMORY TO MEMORY	*Call
2094		2718<2710	MEMORY TO MEMORY	*Call
2094		2718<2711	MEMORY TO MEMORY	*Call
2094		2718<2712	MEMORY TO MEMORY	*Call
2094		2718<2713	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2718<2714	MEMORY TO MEMORY	*Call
2094		2718<2715	MEMORY TO MEMORY	*Call
2094		2718<2716	MEMORY TO MEMORY	*Call
2094		2718<2717	MEMORY TO MEMORY	*Call
2094		2718<2802	MEMORY TO MEMORY	*Call
2094		2718<2803	MEMORY TO MEMORY	*Call
2094		2718<2804	MEMORY TO MEMORY	*Call
2094		2718<2805	MEMORY TO MEMORY	*Call
2094		2718<2806	MEMORY TO MEMORY	*Call
2094		2718<2807	MEMORY TO MEMORY	*Call
2094		2718<2808	MEMORY TO MEMORY	*Call
2094		2718<2809	MEMORY TO MEMORY	*Call
2094		2718<2810	MEMORY TO MEMORY	*Call
2094		2718<2811	MEMORY TO MEMORY	*Call
2094		2718<2812	MEMORY TO MEMORY	*Call
2094		2718<2813	MEMORY TO MEMORY	*Call
2094		2718<2814	MEMORY TO MEMORY	*Call
2094		2718<2815	MEMORY TO MEMORY	*Call
2094		2718<2816	MEMORY TO MEMORY	*Call
2094		2718<2817	MEMORY TO MEMORY	*Call
2094		2719<2701	MEMORY TO MEMORY	*Call
2094		2719<2702	MEMORY TO MEMORY	*Call
2094		2719<2703	MEMORY TO MEMORY	*Call
2094		2719<2704	MEMORY TO MEMORY	*Call
2094		2719<2705	MEMORY TO MEMORY	*Call
2094		2719<2706	MEMORY TO MEMORY	*Call
2094		2719<2707	MEMORY TO MEMORY	*Call
2094		2719<2708	MEMORY TO MEMORY	*Call
2094		2719<2709	MEMORY TO MEMORY	*Call
2094		2719<2710	MEMORY TO MEMORY	*Call
2094		2719<2711	MEMORY TO MEMORY	*Call
2094		2719<2712	MEMORY TO MEMORY	*Call
2094		2719<2713	MEMORY TO MEMORY	*Call
2094		2719<2714	MEMORY TO MEMORY	*Call
2094		2719<2715	MEMORY TO MEMORY	*Call
2094		2719<2716	MEMORY TO MEMORY	*Call
2094		2719<2717	MEMORY TO MEMORY	*Call
2094		2719<2718	MEMORY TO MEMORY	*Call
2094		2719<2802	MEMORY TO MEMORY	*Call
2094		2719<2803	MEMORY TO MEMORY	*Call
2094		2719<2804	MEMORY TO MEMORY	*Call
2094		2719<2805	MEMORY TO MEMORY	*Call
2094		2719<2806	MEMORY TO MEMORY	*Call
2094		2719<2807	MEMORY TO MEMORY	*Call
2094		2719<2808	MEMORY TO MEMORY	*Call
2094		2719<2809	MEMORY TO MEMORY	*Call
2094		2719<2810	MEMORY TO MEMORY	*Call
2094		2719<2811	MEMORY TO MEMORY	*Call
2094		2719<2812	MEMORY TO MEMORY	*Call
2094		2719<2813	MEMORY TO MEMORY	*Call
2094		2719<2814	MEMORY TO MEMORY	*Call
2094		2719<2815	MEMORY TO MEMORY	*Call
2094		2719<2816	MEMORY TO MEMORY	*Call
2094		2719<2817	MEMORY TO MEMORY	*Call
2094		2719<2818	MEMORY TO MEMORY	*Call
2094		2720<2701	MEMORY TO MEMORY	*Call
2094		2720<2702	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2720<2703	MEMORY TO MEMORY	*Call
2094		2720<2704	MEMORY TO MEMORY	*Call
2094		2720<2705	MEMORY TO MEMORY	*Call
2094		2720<2706	MEMORY TO MEMORY	*Call
2094		2720<2707	MEMORY TO MEMORY	*Call
2094		2720<2708	MEMORY TO MEMORY	*Call
2094		2720<2709	MEMORY TO MEMORY	*Call
2094		2720<2710	MEMORY TO MEMORY	*Call
2094		2720<2711	MEMORY TO MEMORY	*Call
2094		2720<2712	MEMORY TO MEMORY	*Call
2094		2720<2713	MEMORY TO MEMORY	*Call
2094		2720<2714	MEMORY TO MEMORY	*Call
2094		2720<2715	MEMORY TO MEMORY	*Call
2094		2720<2716	MEMORY TO MEMORY	*Call
2094		2720<2717	MEMORY TO MEMORY	*Call
2094		2720<2718	MEMORY TO MEMORY	*Call
2094		2720<2719	MEMORY TO MEMORY	*Call
2094		2720<2802	MEMORY TO MEMORY	*Call
2094		2720<2803	MEMORY TO MEMORY	*Call
2094		2720<2804	MEMORY TO MEMORY	*Call
2094		2720<2805	MEMORY TO MEMORY	*Call
2094		2720<2806	MEMORY TO MEMORY	*Call
2094		2720<2807	MEMORY TO MEMORY	*Call
2094		2720<2808	MEMORY TO MEMORY	*Call
2094		2720<2809	MEMORY TO MEMORY	*Call
2094		2720<2810	MEMORY TO MEMORY	*Call
2094		2720<2811	MEMORY TO MEMORY	*Call
2094		2720<2812	MEMORY TO MEMORY	*Call
2094		2720<2813	MEMORY TO MEMORY	*Call
2094		2720<2814	MEMORY TO MEMORY	*Call
2094		2720<2815	MEMORY TO MEMORY	*Call
2094		2720<2816	MEMORY TO MEMORY	*Call
2094		2720<2817	MEMORY TO MEMORY	*Call
2094		2720<2818	MEMORY TO MEMORY	*Call
2094		2720<2819	MEMORY TO MEMORY	*Call
2094		2721<2701	MEMORY TO MEMORY	*Call
2094		2721<2702	MEMORY TO MEMORY	*Call
2094		2721<2703	MEMORY TO MEMORY	*Call
2094		2721<2704	MEMORY TO MEMORY	*Call
2094		2721<2705	MEMORY TO MEMORY	*Call
2094		2721<2706	MEMORY TO MEMORY	*Call
2094		2721<2707	MEMORY TO MEMORY	*Call
2094		2721<2708	MEMORY TO MEMORY	*Call
2094		2721<2709	MEMORY TO MEMORY	*Call
2094		2721<2710	MEMORY TO MEMORY	*Call
2094		2721<2711	MEMORY TO MEMORY	*Call
2094		2721<2712	MEMORY TO MEMORY	*Call
2094		2721<2713	MEMORY TO MEMORY	*Call
2094		2721<2714	MEMORY TO MEMORY	*Call
2094		2721<2715	MEMORY TO MEMORY	*Call
2094		2721<2716	MEMORY TO MEMORY	*Call
2094		2721<2717	MEMORY TO MEMORY	*Call
2094		2721<2718	MEMORY TO MEMORY	*Call
2094		2721<2719	MEMORY TO MEMORY	*Call
2094		2721<2720	MEMORY TO MEMORY	*Call
2094		2721<2802	MEMORY TO MEMORY	*Call
2094		2721<2803	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2721<2804	MEMORY TO MEMORY	*Call
2094		2721<2805	MEMORY TO MEMORY	*Call
2094		2721<2806	MEMORY TO MEMORY	*Call
2094		2721<2807	MEMORY TO MEMORY	*Call
2094		2721<2808	MEMORY TO MEMORY	*Call
2094		2721<2809	MEMORY TO MEMORY	*Call
2094		2721<2810	MEMORY TO MEMORY	*Call
2094		2721<2811	MEMORY TO MEMORY	*Call
2094		2721<2812	MEMORY TO MEMORY	*Call
2094		2721<2813	MEMORY TO MEMORY	*Call
2094		2721<2814	MEMORY TO MEMORY	*Call
2094		2721<2815	MEMORY TO MEMORY	*Call
2094		2721<2816	MEMORY TO MEMORY	*Call
2094		2721<2817	MEMORY TO MEMORY	*Call
2094		2721<2818	MEMORY TO MEMORY	*Call
2094		2721<2819	MEMORY TO MEMORY	*Call
2094		2721<2820	MEMORY TO MEMORY	*Call
2094		2722<2701	MEMORY TO MEMORY	*Call
2094		2722<2702	MEMORY TO MEMORY	*Call
2094		2722<2703	MEMORY TO MEMORY	*Call
2094		2722<2704	MEMORY TO MEMORY	*Call
2094		2722<2705	MEMORY TO MEMORY	*Call
2094		2722<2706	MEMORY TO MEMORY	*Call
2094		2722<2707	MEMORY TO MEMORY	*Call
2094		2722<2708	MEMORY TO MEMORY	*Call
2094		2722<2709	MEMORY TO MEMORY	*Call
2094		2722<2710	MEMORY TO MEMORY	*Call
2094		2722<2711	MEMORY TO MEMORY	*Call
2094		2722<2712	MEMORY TO MEMORY	*Call
2094		2722<2713	MEMORY TO MEMORY	*Call
2094		2722<2714	MEMORY TO MEMORY	*Call
2094		2722<2715	MEMORY TO MEMORY	*Call
2094		2722<2716	MEMORY TO MEMORY	*Call
2094		2722<2717	MEMORY TO MEMORY	*Call
2094		2722<2718	MEMORY TO MEMORY	*Call
2094		2722<2719	MEMORY TO MEMORY	*Call
2094		2722<2720	MEMORY TO MEMORY	*Call
2094		2722<2721	MEMORY TO MEMORY	*Call
2094		2722<2802	MEMORY TO MEMORY	*Call
2094		2722<2803	MEMORY TO MEMORY	*Call
2094		2722<2804	MEMORY TO MEMORY	*Call
2094		2722<2805	MEMORY TO MEMORY	*Call
2094		2722<2806	MEMORY TO MEMORY	*Call
2094		2722<2807	MEMORY TO MEMORY	*Call
2094		2722<2808	MEMORY TO MEMORY	*Call
2094		2722<2809	MEMORY TO MEMORY	*Call
2094		2722<2810	MEMORY TO MEMORY	*Call
2094		2722<2811	MEMORY TO MEMORY	*Call
2094		2722<2812	MEMORY TO MEMORY	*Call
2094		2722<2813	MEMORY TO MEMORY	*Call
2094		2722<2814	MEMORY TO MEMORY	*Call
2094		2722<2815	MEMORY TO MEMORY	*Call
2094		2722<2816	MEMORY TO MEMORY	*Call
2094		2722<2817	MEMORY TO MEMORY	*Call
2094		2722<2818	MEMORY TO MEMORY	*Call
2094		2722<2819	MEMORY TO MEMORY	*Call
2094		2722<2820	MEMORY TO MEMORY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			2722<2821	MEMORY TO MEMORY	*Call
2094			2723<2701	MEMORY TO MEMORY	*Call
2094			2723<2702	MEMORY TO MEMORY	*Call
2094			2723<2703	MEMORY TO MEMORY	*Call
2094			2723<2704	MEMORY TO MEMORY	*Call
2094			2723<2705	MEMORY TO MEMORY	*Call
2094			2723<2706	MEMORY TO MEMORY	*Call
2094			2723<2707	MEMORY TO MEMORY	*Call
2094			2723<2708	MEMORY TO MEMORY	*Call
2094			2723<2709	MEMORY TO MEMORY	*Call
2094			2723<2710	MEMORY TO MEMORY	*Call
2094			2723<2711	MEMORY TO MEMORY	*Call
2094			2723<2712	MEMORY TO MEMORY	*Call
2094			2723<2713	MEMORY TO MEMORY	*Call
2094			2723<2714	MEMORY TO MEMORY	*Call
2094			2723<2715	MEMORY TO MEMORY	*Call
2094			2723<2716	MEMORY TO MEMORY	*Call
2094			2723<2717	MEMORY TO MEMORY	*Call
2094			2723<2718	MEMORY TO MEMORY	*Call
2094			2723<2719	MEMORY TO MEMORY	*Call
2094			2723<2720	MEMORY TO MEMORY	*Call
2094			2723<2721	MEMORY TO MEMORY	*Call
2094			2723<2722	MEMORY TO MEMORY	*Call
2094			2723<2802	MEMORY TO MEMORY	*Call
2094			2723<2803	MEMORY TO MEMORY	*Call
2094			2723<2804	MEMORY TO MEMORY	*Call
2094			2723<2805	MEMORY TO MEMORY	*Call
2094			2723<2806	MEMORY TO MEMORY	*Call
2094			2723<2807	MEMORY TO MEMORY	*Call
2094			2723<2808	MEMORY TO MEMORY	*Call
2094			2723<2809	MEMORY TO MEMORY	*Call
2094			2723<2810	MEMORY TO MEMORY	*Call
2094			2723<2811	MEMORY TO MEMORY	*Call
2094			2723<2812	MEMORY TO MEMORY	*Call
2094			2723<2813	MEMORY TO MEMORY	*Call
2094			2723<2814	MEMORY TO MEMORY	*Call
2094			2723<2815	MEMORY TO MEMORY	*Call
2094			2723<2816	MEMORY TO MEMORY	*Call
2094			2723<2817	MEMORY TO MEMORY	*Call
2094			2723<2818	MEMORY TO MEMORY	*Call
2094			2723<2819	MEMORY TO MEMORY	*Call
2094			2723<2820	MEMORY TO MEMORY	*Call
2094			2723<2821	MEMORY TO MEMORY	*Call
2094			2723<2822	MEMORY TO MEMORY	*Call
2094			2724<2701	MEMORY TO MEMORY	*Call
2094			2724<2702	MEMORY TO MEMORY	*Call
2094			2724<2703	MEMORY TO MEMORY	*Call
2094			2724<2704	MEMORY TO MEMORY	*Call
2094			2724<2705	MEMORY TO MEMORY	*Call
2094			2724<2706	MEMORY TO MEMORY	*Call
2094			2724<2707	MEMORY TO MEMORY	*Call
2094			2724<2708	MEMORY TO MEMORY	*Call
2094			2724<2709	MEMORY TO MEMORY	*Call
2094			2724<2710	MEMORY TO MEMORY	*Call
2094			2724<2711	MEMORY TO MEMORY	*Call
2094			2724<2712	MEMORY TO MEMORY	*Call
2094			2724<2713	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2724<2714	MEMORY TO MEMORY	*Call
2094		2724<2715	MEMORY TO MEMORY	*Call
2094		2724<2716	MEMORY TO MEMORY	*Call
2094		2724<2717	MEMORY TO MEMORY	*Call
2094		2724<2718	MEMORY TO MEMORY	*Call
2094		2724<2719	MEMORY TO MEMORY	*Call
2094		2724<2720	MEMORY TO MEMORY	*Call
2094		2724<2721	MEMORY TO MEMORY	*Call
2094		2724<2722	MEMORY TO MEMORY	*Call
2094		2724<2723	MEMORY TO MEMORY	*Call
2094		2724<2802	MEMORY TO MEMORY	*Call
2094		2724<2803	MEMORY TO MEMORY	*Call
2094		2724<2804	MEMORY TO MEMORY	*Call
2094		2724<2805	MEMORY TO MEMORY	*Call
2094		2724<2806	MEMORY TO MEMORY	*Call
2094		2724<2807	MEMORY TO MEMORY	*Call
2094		2724<2808	MEMORY TO MEMORY	*Call
2094		2724<2809	MEMORY TO MEMORY	*Call
2094		2724<2810	MEMORY TO MEMORY	*Call
2094		2724<2811	MEMORY TO MEMORY	*Call
2094		2724<2812	MEMORY TO MEMORY	*Call
2094		2724<2813	MEMORY TO MEMORY	*Call
2094		2724<2814	MEMORY TO MEMORY	*Call
2094		2724<2815	MEMORY TO MEMORY	*Call
2094		2724<2816	MEMORY TO MEMORY	*Call
2094		2724<2817	MEMORY TO MEMORY	*Call
2094		2724<2818	MEMORY TO MEMORY	*Call
2094		2724<2819	MEMORY TO MEMORY	*Call
2094		2724<2820	MEMORY TO MEMORY	*Call
2094		2724<2821	MEMORY TO MEMORY	*Call
2094		2724<2822	MEMORY TO MEMORY	*Call
2094		2724<2823	MEMORY TO MEMORY	*Call
2094		2725<2701	MEMORY TO MEMORY	*Call
2094		2725<2702	MEMORY TO MEMORY	*Call
2094		2725<2703	MEMORY TO MEMORY	*Call
2094		2725<2704	MEMORY TO MEMORY	*Call
2094		2725<2705	MEMORY TO MEMORY	*Call
2094		2725<2706	MEMORY TO MEMORY	*Call
2094		2725<2707	MEMORY TO MEMORY	*Call
2094		2725<2708	MEMORY TO MEMORY	*Call
2094		2725<2709	MEMORY TO MEMORY	*Call
2094		2725<2710	MEMORY TO MEMORY	*Call
2094		2725<2711	MEMORY TO MEMORY	*Call
2094		2725<2712	MEMORY TO MEMORY	*Call
2094		2725<2713	MEMORY TO MEMORY	*Call
2094		2725<2714	MEMORY TO MEMORY	*Call
2094		2725<2715	MEMORY TO MEMORY	*Call
2094		2725<2716	MEMORY TO MEMORY	*Call
2094		2725<2717	MEMORY TO MEMORY	*Call
2094		2725<2718	MEMORY TO MEMORY	*Call
2094		2725<2719	MEMORY TO MEMORY	*Call
2094		2725<2720	MEMORY TO MEMORY	*Call
2094		2725<2721	MEMORY TO MEMORY	*Call
2094		2725<2722	MEMORY TO MEMORY	*Call
2094		2725<2723	MEMORY TO MEMORY	*Call
2094		2725<2724	MEMORY TO MEMORY	*Call
2094		2725<2802	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2725<2803	MEMORY TO MEMORY	*Call
2094		2725<2804	MEMORY TO MEMORY	*Call
2094		2725<2805	MEMORY TO MEMORY	*Call
2094		2725<2806	MEMORY TO MEMORY	*Call
2094		2725<2807	MEMORY TO MEMORY	*Call
2094		2725<2808	MEMORY TO MEMORY	*Call
2094		2725<2809	MEMORY TO MEMORY	*Call
2094		2725<2810	MEMORY TO MEMORY	*Call
2094		2725<2811	MEMORY TO MEMORY	*Call
2094		2725<2812	MEMORY TO MEMORY	*Call
2094		2725<2813	MEMORY TO MEMORY	*Call
2094		2725<2814	MEMORY TO MEMORY	*Call
2094		2725<2815	MEMORY TO MEMORY	*Call
2094		2725<2816	MEMORY TO MEMORY	*Call
2094		2725<2817	MEMORY TO MEMORY	*Call
2094		2725<2818	MEMORY TO MEMORY	*Call
2094		2725<2819	MEMORY TO MEMORY	*Call
2094		2725<2820	MEMORY TO MEMORY	*Call
2094		2725<2821	MEMORY TO MEMORY	*Call
2094		2725<2822	MEMORY TO MEMORY	*Call
2094		2725<2823	MEMORY TO MEMORY	*Call
2094		2725<2824	MEMORY TO MEMORY	*Call
2094		2726<2701	MEMORY TO MEMORY	*Call
2094		2726<2702	MEMORY TO MEMORY	*Call
2094		2726<2703	MEMORY TO MEMORY	*Call
2094		2726<2704	MEMORY TO MEMORY	*Call
2094		2726<2705	MEMORY TO MEMORY	*Call
2094		2726<2706	MEMORY TO MEMORY	*Call
2094		2726<2707	MEMORY TO MEMORY	*Call
2094		2726<2708	MEMORY TO MEMORY	*Call
2094		2726<2709	MEMORY TO MEMORY	*Call
2094		2726<2710	MEMORY TO MEMORY	*Call
2094		2726<2711	MEMORY TO MEMORY	*Call
2094		2726<2712	MEMORY TO MEMORY	*Call
2094		2726<2713	MEMORY TO MEMORY	*Call
2094		2726<2714	MEMORY TO MEMORY	*Call
2094		2726<2715	MEMORY TO MEMORY	*Call
2094		2726<2716	MEMORY TO MEMORY	*Call
2094		2726<2717	MEMORY TO MEMORY	*Call
2094		2726<2718	MEMORY TO MEMORY	*Call
2094		2726<2719	MEMORY TO MEMORY	*Call
2094		2726<2720	MEMORY TO MEMORY	*Call
2094		2726<2721	MEMORY TO MEMORY	*Call
2094		2726<2722	MEMORY TO MEMORY	*Call
2094		2726<2723	MEMORY TO MEMORY	*Call
2094		2726<2724	MEMORY TO MEMORY	*Call
2094		2726<2725	MEMORY TO MEMORY	*Call
2094		2726<2802	MEMORY TO MEMORY	*Call
2094		2726<2803	MEMORY TO MEMORY	*Call
2094		2726<2804	MEMORY TO MEMORY	*Call
2094		2726<2805	MEMORY TO MEMORY	*Call
2094		2726<2806	MEMORY TO MEMORY	*Call
2094		2726<2807	MEMORY TO MEMORY	*Call
2094		2726<2808	MEMORY TO MEMORY	*Call
2094		2726<2809	MEMORY TO MEMORY	*Call
2094		2726<2810	MEMORY TO MEMORY	*Call
2094		2726<2811	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2726<2812	MEMORY TO MEMORY	*Call
2094		2726<2813	MEMORY TO MEMORY	*Call
2094		2726<2814	MEMORY TO MEMORY	*Call
2094		2726<2815	MEMORY TO MEMORY	*Call
2094		2726<2816	MEMORY TO MEMORY	*Call
2094		2726<2817	MEMORY TO MEMORY	*Call
2094		2726<2818	MEMORY TO MEMORY	*Call
2094		2726<2819	MEMORY TO MEMORY	*Call
2094		2726<2820	MEMORY TO MEMORY	*Call
2094		2726<2821	MEMORY TO MEMORY	*Call
2094		2726<2822	MEMORY TO MEMORY	*Call
2094		2726<2823	MEMORY TO MEMORY	*Call
2094		2726<2824	MEMORY TO MEMORY	*Call
2094		2727<2701	MEMORY TO MEMORY	*Call
2094		2727<2702	MEMORY TO MEMORY	*Call
2094		2727<2703	MEMORY TO MEMORY	*Call
2094		2727<2704	MEMORY TO MEMORY	*Call
2094		2727<2705	MEMORY TO MEMORY	*Call
2094		2727<2706	MEMORY TO MEMORY	*Call
2094		2727<2707	MEMORY TO MEMORY	*Call
2094		2727<2708	MEMORY TO MEMORY	*Call
2094		2727<2709	MEMORY TO MEMORY	*Call
2094		2727<2710	MEMORY TO MEMORY	*Call
2094		2727<2711	MEMORY TO MEMORY	*Call
2094		2727<2712	MEMORY TO MEMORY	*Call
2094		2727<2713	MEMORY TO MEMORY	*Call
2094		2727<2714	MEMORY TO MEMORY	*Call
2094		2727<2715	MEMORY TO MEMORY	*Call
2094		2727<2716	MEMORY TO MEMORY	*Call
2094		2727<2717	MEMORY TO MEMORY	*Call
2094		2727<2718	MEMORY TO MEMORY	*Call
2094		2727<2719	MEMORY TO MEMORY	*Call
2094		2727<2720	MEMORY TO MEMORY	*Call
2094		2727<2721	MEMORY TO MEMORY	*Call
2094		2727<2722	MEMORY TO MEMORY	*Call
2094		2727<2723	MEMORY TO MEMORY	*Call
2094		2727<2724	MEMORY TO MEMORY	*Call
2094		2727<2725	MEMORY TO MEMORY	*Call
2094		2727<2726	MEMORY TO MEMORY	*Call
2094		2727<2802	MEMORY TO MEMORY	*Call
2094		2727<2803	MEMORY TO MEMORY	*Call
2094		2727<2804	MEMORY TO MEMORY	*Call
2094		2727<2805	MEMORY TO MEMORY	*Call
2094		2727<2806	MEMORY TO MEMORY	*Call
2094		2727<2807	MEMORY TO MEMORY	*Call
2094		2727<2808	MEMORY TO MEMORY	*Call
2094		2727<2809	MEMORY TO MEMORY	*Call
2094		2727<2810	MEMORY TO MEMORY	*Call
2094		2727<2811	MEMORY TO MEMORY	*Call
2094		2727<2812	MEMORY TO MEMORY	*Call
2094		2727<2813	MEMORY TO MEMORY	*Call
2094		2727<2814	MEMORY TO MEMORY	*Call
2094		2727<2815	MEMORY TO MEMORY	*Call
2094		2727<2816	MEMORY TO MEMORY	*Call
2094		2727<2817	MEMORY TO MEMORY	*Call
2094		2727<2818	MEMORY TO MEMORY	*Call
2094		2727<2819	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2727<2820	MEMORY TO MEMORY	*Call
2094		2727<2821	MEMORY TO MEMORY	*Call
2094		2727<2822	MEMORY TO MEMORY	*Call
2094		2727<2823	MEMORY TO MEMORY	*Call
2094		2727<2824	MEMORY TO MEMORY	*Call
2094		2728<2701	MEMORY TO MEMORY	*Call
2094		2728<2702	MEMORY TO MEMORY	*Call
2094		2728<2703	MEMORY TO MEMORY	*Call
2094		2728<2704	MEMORY TO MEMORY	*Call
2094		2728<2705	MEMORY TO MEMORY	*Call
2094		2728<2706	MEMORY TO MEMORY	*Call
2094		2728<2707	MEMORY TO MEMORY	*Call
2094		2728<2708	MEMORY TO MEMORY	*Call
2094		2728<2709	MEMORY TO MEMORY	*Call
2094		2728<2710	MEMORY TO MEMORY	*Call
2094		2728<2711	MEMORY TO MEMORY	*Call
2094		2728<2712	MEMORY TO MEMORY	*Call
2094		2728<2713	MEMORY TO MEMORY	*Call
2094		2728<2714	MEMORY TO MEMORY	*Call
2094		2728<2715	MEMORY TO MEMORY	*Call
2094		2728<2716	MEMORY TO MEMORY	*Call
2094		2728<2717	MEMORY TO MEMORY	*Call
2094		2728<2718	MEMORY TO MEMORY	*Call
2094		2728<2719	MEMORY TO MEMORY	*Call
2094		2728<2720	MEMORY TO MEMORY	*Call
2094		2728<2721	MEMORY TO MEMORY	*Call
2094		2728<2722	MEMORY TO MEMORY	*Call
2094		2728<2723	MEMORY TO MEMORY	*Call
2094		2728<2724	MEMORY TO MEMORY	*Call
2094		2728<2725	MEMORY TO MEMORY	*Call
2094		2728<2726	MEMORY TO MEMORY	*Call
2094		2728<2727	MEMORY TO MEMORY	*Call
2094		2728<2802	MEMORY TO MEMORY	*Call
2094		2728<2803	MEMORY TO MEMORY	*Call
2094		2728<2804	MEMORY TO MEMORY	*Call
2094		2728<2805	MEMORY TO MEMORY	*Call
2094		2728<2806	MEMORY TO MEMORY	*Call
2094		2728<2807	MEMORY TO MEMORY	*Call
2094		2728<2808	MEMORY TO MEMORY	*Call
2094		2728<2809	MEMORY TO MEMORY	*Call
2094		2728<2810	MEMORY TO MEMORY	*Call
2094		2728<2811	MEMORY TO MEMORY	*Call
2094		2728<2812	MEMORY TO MEMORY	*Call
2094		2728<2813	MEMORY TO MEMORY	*Call
2094		2728<2814	MEMORY TO MEMORY	*Call
2094		2728<2815	MEMORY TO MEMORY	*Call
2094		2728<2816	MEMORY TO MEMORY	*Call
2094		2728<2817	MEMORY TO MEMORY	*Call
2094		2728<2818	MEMORY TO MEMORY	*Call
2094		2728<2819	MEMORY TO MEMORY	*Call
2094		2728<2820	MEMORY TO MEMORY	*Call
2094		2728<2821	MEMORY TO MEMORY	*Call
2094		2728<2822	MEMORY TO MEMORY	*Call
2094		2728<2823	MEMORY TO MEMORY	*Call
2094		2728<2824	MEMORY TO MEMORY	*Call
2094		2729<2701	MEMORY TO MEMORY	*Call
2094		2729<2702	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2729<2703	MEMORY TO MEMORY	*Call
2094		2729<2704	MEMORY TO MEMORY	*Call
2094		2729<2705	MEMORY TO MEMORY	*Call
2094		2729<2706	MEMORY TO MEMORY	*Call
2094		2729<2707	MEMORY TO MEMORY	*Call
2094		2729<2708	MEMORY TO MEMORY	*Call
2094		2729<2709	MEMORY TO MEMORY	*Call
2094		2729<2710	MEMORY TO MEMORY	*Call
2094		2729<2711	MEMORY TO MEMORY	*Call
2094		2729<2712	MEMORY TO MEMORY	*Call
2094		2729<2713	MEMORY TO MEMORY	*Call
2094		2729<2714	MEMORY TO MEMORY	*Call
2094		2729<2715	MEMORY TO MEMORY	*Call
2094		2729<2716	MEMORY TO MEMORY	*Call
2094		2729<2717	MEMORY TO MEMORY	*Call
2094		2729<2718	MEMORY TO MEMORY	*Call
2094		2729<2719	MEMORY TO MEMORY	*Call
2094		2729<2720	MEMORY TO MEMORY	*Call
2094		2729<2721	MEMORY TO MEMORY	*Call
2094		2729<2722	MEMORY TO MEMORY	*Call
2094		2729<2723	MEMORY TO MEMORY	*Call
2094		2729<2724	MEMORY TO MEMORY	*Call
2094		2729<2725	MEMORY TO MEMORY	*Call
2094		2729<2726	MEMORY TO MEMORY	*Call
2094		2729<2727	MEMORY TO MEMORY	*Call
2094		2729<2728	MEMORY TO MEMORY	*Call
2094		2729<2802	MEMORY TO MEMORY	*Call
2094		2729<2803	MEMORY TO MEMORY	*Call
2094		2729<2804	MEMORY TO MEMORY	*Call
2094		2729<2805	MEMORY TO MEMORY	*Call
2094		2729<2806	MEMORY TO MEMORY	*Call
2094		2729<2807	MEMORY TO MEMORY	*Call
2094		2729<2808	MEMORY TO MEMORY	*Call
2094		2729<2809	MEMORY TO MEMORY	*Call
2094		2729<2810	MEMORY TO MEMORY	*Call
2094		2729<2811	MEMORY TO MEMORY	*Call
2094		2729<2812	MEMORY TO MEMORY	*Call
2094		2729<2813	MEMORY TO MEMORY	*Call
2094		2729<2814	MEMORY TO MEMORY	*Call
2094		2729<2815	MEMORY TO MEMORY	*Call
2094		2729<2816	MEMORY TO MEMORY	*Call
2094		2729<2817	MEMORY TO MEMORY	*Call
2094		2729<2818	MEMORY TO MEMORY	*Call
2094		2729<2819	MEMORY TO MEMORY	*Call
2094		2729<2820	MEMORY TO MEMORY	*Call
2094		2729<2821	MEMORY TO MEMORY	*Call
2094		2729<2822	MEMORY TO MEMORY	*Call
2094		2729<2823	MEMORY TO MEMORY	*Call
2094		2729<2824	MEMORY TO MEMORY	*Call
2094		2730<2701	MEMORY TO MEMORY	*Call
2094		2730<2702	MEMORY TO MEMORY	*Call
2094		2730<2703	MEMORY TO MEMORY	*Call
2094		2730<2704	MEMORY TO MEMORY	*Call
2094		2730<2705	MEMORY TO MEMORY	*Call
2094		2730<2706	MEMORY TO MEMORY	*Call
2094		2730<2707	MEMORY TO MEMORY	*Call
2094		2730<2708	MEMORY TO MEMORY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			2730<2709	MEMORY TO MEMORY	*Call
2094			2730<2710	MEMORY TO MEMORY	*Call
2094			2730<2711	MEMORY TO MEMORY	*Call
2094			2730<2712	MEMORY TO MEMORY	*Call
2094			2730<2713	MEMORY TO MEMORY	*Call
2094			2730<2714	MEMORY TO MEMORY	*Call
2094			2730<2715	MEMORY TO MEMORY	*Call
2094			2730<2716	MEMORY TO MEMORY	*Call
2094			2730<2717	MEMORY TO MEMORY	*Call
2094			2730<2718	MEMORY TO MEMORY	*Call
2094			2730<2719	MEMORY TO MEMORY	*Call
2094			2730<2720	MEMORY TO MEMORY	*Call
2094			2730<2721	MEMORY TO MEMORY	*Call
2094			2730<2722	MEMORY TO MEMORY	*Call
2094			2730<2723	MEMORY TO MEMORY	*Call
2094			2730<2724	MEMORY TO MEMORY	*Call
2094			2730<2725	MEMORY TO MEMORY	*Call
2094			2730<2726	MEMORY TO MEMORY	*Call
2094			2730<2727	MEMORY TO MEMORY	*Call
2094			2730<2728	MEMORY TO MEMORY	*Call
2094			2730<2729	MEMORY TO MEMORY	*Call
2094			2730<2802	MEMORY TO MEMORY	*Call
2094			2730<2803	MEMORY TO MEMORY	*Call
2094			2730<2804	MEMORY TO MEMORY	*Call
2094			2730<2805	MEMORY TO MEMORY	*Call
2094			2730<2806	MEMORY TO MEMORY	*Call
2094			2730<2807	MEMORY TO MEMORY	*Call
2094			2730<2808	MEMORY TO MEMORY	*Call
2094			2730<2809	MEMORY TO MEMORY	*Call
2094			2730<2810	MEMORY TO MEMORY	*Call
2094			2730<2811	MEMORY TO MEMORY	*Call
2094			2730<2812	MEMORY TO MEMORY	*Call
2094			2730<2813	MEMORY TO MEMORY	*Call
2094			2730<2814	MEMORY TO MEMORY	*Call
2094			2730<2815	MEMORY TO MEMORY	*Call
2094			2730<2816	MEMORY TO MEMORY	*Call
2094			2730<2817	MEMORY TO MEMORY	*Call
2094			2730<2818	MEMORY TO MEMORY	*Call
2094			2730<2819	MEMORY TO MEMORY	*Call
2094			2730<2820	MEMORY TO MEMORY	*Call
2094			2730<2821	MEMORY TO MEMORY	*Call
2094			2730<2822	MEMORY TO MEMORY	*Call
2094			2730<2823	MEMORY TO MEMORY	*Call
2094			2730<2824	MEMORY TO MEMORY	*Call
2094			2731<2701	MEMORY TO MEMORY	*Call
2094			2731<2702	MEMORY TO MEMORY	*Call
2094			2731<2703	MEMORY TO MEMORY	*Call
2094			2731<2704	MEMORY TO MEMORY	*Call
2094			2731<2705	MEMORY TO MEMORY	*Call
2094			2731<2706	MEMORY TO MEMORY	*Call
2094			2731<2707	MEMORY TO MEMORY	*Call
2094			2731<2708	MEMORY TO MEMORY	*Call
2094			2731<2709	MEMORY TO MEMORY	*Call
2094			2731<2710	MEMORY TO MEMORY	*Call
2094			2731<2711	MEMORY TO MEMORY	*Call
2094			2731<2712	MEMORY TO MEMORY	*Call
2094			2731<2713	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2731<2714	MEMORY TO MEMORY	*Call
2094		2731<2715	MEMORY TO MEMORY	*Call
2094		2731<2716	MEMORY TO MEMORY	*Call
2094		2731<2717	MEMORY TO MEMORY	*Call
2094		2731<2718	MEMORY TO MEMORY	*Call
2094		2731<2719	MEMORY TO MEMORY	*Call
2094		2731<2720	MEMORY TO MEMORY	*Call
2094		2731<2721	MEMORY TO MEMORY	*Call
2094		2731<2722	MEMORY TO MEMORY	*Call
2094		2731<2723	MEMORY TO MEMORY	*Call
2094		2731<2724	MEMORY TO MEMORY	*Call
2094		2731<2725	MEMORY TO MEMORY	*Call
2094		2731<2726	MEMORY TO MEMORY	*Call
2094		2731<2727	MEMORY TO MEMORY	*Call
2094		2731<2728	MEMORY TO MEMORY	*Call
2094		2731<2729	MEMORY TO MEMORY	*Call
2094		2731<2730	MEMORY TO MEMORY	*Call
2094		2731<2802	MEMORY TO MEMORY	*Call
2094		2731<2803	MEMORY TO MEMORY	*Call
2094		2731<2804	MEMORY TO MEMORY	*Call
2094		2731<2805	MEMORY TO MEMORY	*Call
2094		2731<2806	MEMORY TO MEMORY	*Call
2094		2731<2807	MEMORY TO MEMORY	*Call
2094		2731<2808	MEMORY TO MEMORY	*Call
2094		2731<2809	MEMORY TO MEMORY	*Call
2094		2731<2810	MEMORY TO MEMORY	*Call
2094		2731<2811	MEMORY TO MEMORY	*Call
2094		2731<2812	MEMORY TO MEMORY	*Call
2094		2731<2813	MEMORY TO MEMORY	*Call
2094		2731<2814	MEMORY TO MEMORY	*Call
2094		2731<2815	MEMORY TO MEMORY	*Call
2094		2731<2816	MEMORY TO MEMORY	*Call
2094		2731<2817	MEMORY TO MEMORY	*Call
2094		2731<2818	MEMORY TO MEMORY	*Call
2094		2731<2819	MEMORY TO MEMORY	*Call
2094		2731<2820	MEMORY TO MEMORY	*Call
2094		2731<2821	MEMORY TO MEMORY	*Call
2094		2731<2822	MEMORY TO MEMORY	*Call
2094		2731<2823	MEMORY TO MEMORY	*Call
2094		2731<2824	MEMORY TO MEMORY	*Call
2094		2732<2701	MEMORY TO MEMORY	*Call
2094		2732<2702	MEMORY TO MEMORY	*Call
2094		2732<2703	MEMORY TO MEMORY	*Call
2094		2732<2704	MEMORY TO MEMORY	*Call
2094		2732<2705	MEMORY TO MEMORY	*Call
2094		2732<2706	MEMORY TO MEMORY	*Call
2094		2732<2707	MEMORY TO MEMORY	*Call
2094		2732<2708	MEMORY TO MEMORY	*Call
2094		2732<2709	MEMORY TO MEMORY	*Call
2094		2732<2710	MEMORY TO MEMORY	*Call
2094		2732<2711	MEMORY TO MEMORY	*Call
2094		2732<2712	MEMORY TO MEMORY	*Call
2094		2732<2713	MEMORY TO MEMORY	*Call
2094		2732<2714	MEMORY TO MEMORY	*Call
2094		2732<2715	MEMORY TO MEMORY	*Call
2094		2732<2716	MEMORY TO MEMORY	*Call
2094		2732<2717	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2732<2718	MEMORY TO MEMORY	*Call
2094		2732<2719	MEMORY TO MEMORY	*Call
2094		2732<2720	MEMORY TO MEMORY	*Call
2094		2732<2721	MEMORY TO MEMORY	*Call
2094		2732<2722	MEMORY TO MEMORY	*Call
2094		2732<2723	MEMORY TO MEMORY	*Call
2094		2732<2724	MEMORY TO MEMORY	*Call
2094		2732<2725	MEMORY TO MEMORY	*Call
2094		2732<2726	MEMORY TO MEMORY	*Call
2094		2732<2727	MEMORY TO MEMORY	*Call
2094		2732<2728	MEMORY TO MEMORY	*Call
2094		2732<2729	MEMORY TO MEMORY	*Call
2094		2732<2730	MEMORY TO MEMORY	*Call
2094		2732<2731	MEMORY TO MEMORY	*Call
2094		2732<2802	MEMORY TO MEMORY	*Call
2094		2732<2803	MEMORY TO MEMORY	*Call
2094		2732<2804	MEMORY TO MEMORY	*Call
2094		2732<2805	MEMORY TO MEMORY	*Call
2094		2732<2806	MEMORY TO MEMORY	*Call
2094		2732<2807	MEMORY TO MEMORY	*Call
2094		2732<2808	MEMORY TO MEMORY	*Call
2094		2732<2809	MEMORY TO MEMORY	*Call
2094		2732<2810	MEMORY TO MEMORY	*Call
2094		2732<2811	MEMORY TO MEMORY	*Call
2094		2732<2812	MEMORY TO MEMORY	*Call
2094		2732<2813	MEMORY TO MEMORY	*Call
2094		2732<2814	MEMORY TO MEMORY	*Call
2094		2732<2815	MEMORY TO MEMORY	*Call
2094		2732<2816	MEMORY TO MEMORY	*Call
2094		2732<2817	MEMORY TO MEMORY	*Call
2094		2732<2818	MEMORY TO MEMORY	*Call
2094		2732<2819	MEMORY TO MEMORY	*Call
2094		2732<2820	MEMORY TO MEMORY	*Call
2094		2732<2821	MEMORY TO MEMORY	*Call
2094		2732<2822	MEMORY TO MEMORY	*Call
2094		2732<2823	MEMORY TO MEMORY	*Call
2094		2732<2824	MEMORY TO MEMORY	*Call
2094		2802<2701	MEMORY TO MEMORY	*Call
2094		2802<2702	MEMORY TO MEMORY	*Call
2094		2803<2701	MEMORY TO MEMORY	*Call
2094		2803<2702	MEMORY TO MEMORY	*Call
2094		2803<2703	MEMORY TO MEMORY	*Call
2094		2803<2802	MEMORY TO MEMORY	*Call
2094		2804<2701	MEMORY TO MEMORY	*Call
2094		2804<2702	MEMORY TO MEMORY	*Call
2094		2804<2703	MEMORY TO MEMORY	*Call
2094		2804<2704	MEMORY TO MEMORY	*Call
2094		2804<2802	MEMORY TO MEMORY	*Call
2094		2804<2803	MEMORY TO MEMORY	*Call
2094		2805<2701	MEMORY TO MEMORY	*Call
2094		2805<2702	MEMORY TO MEMORY	*Call
2094		2805<2703	MEMORY TO MEMORY	*Call
2094		2805<2704	MEMORY TO MEMORY	*Call
2094		2805<2705	MEMORY TO MEMORY	*Call
2094		2805<2802	MEMORY TO MEMORY	*Call
2094		2805<2803	MEMORY TO MEMORY	*Call
2094		2805<2804	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2806<2701	MEMORY TO MEMORY	*Call
2094		2806<2702	MEMORY TO MEMORY	*Call
2094		2806<2703	MEMORY TO MEMORY	*Call
2094		2806<2704	MEMORY TO MEMORY	*Call
2094		2806<2705	MEMORY TO MEMORY	*Call
2094		2806<2706	MEMORY TO MEMORY	*Call
2094		2806<2802	MEMORY TO MEMORY	*Call
2094		2806<2803	MEMORY TO MEMORY	*Call
2094		2806<2804	MEMORY TO MEMORY	*Call
2094		2806<2805	MEMORY TO MEMORY	*Call
2094		2807<2701	MEMORY TO MEMORY	*Call
2094		2807<2702	MEMORY TO MEMORY	*Call
2094		2807<2703	MEMORY TO MEMORY	*Call
2094		2807<2704	MEMORY TO MEMORY	*Call
2094		2807<2705	MEMORY TO MEMORY	*Call
2094		2807<2706	MEMORY TO MEMORY	*Call
2094		2807<2707	MEMORY TO MEMORY	*Call
2094		2807<2802	MEMORY TO MEMORY	*Call
2094		2807<2803	MEMORY TO MEMORY	*Call
2094		2807<2804	MEMORY TO MEMORY	*Call
2094		2807<2805	MEMORY TO MEMORY	*Call
2094		2807<2806	MEMORY TO MEMORY	*Call
2094		2808<2701	MEMORY TO MEMORY	*Call
2094		2808<2702	MEMORY TO MEMORY	*Call
2094		2808<2703	MEMORY TO MEMORY	*Call
2094		2808<2704	MEMORY TO MEMORY	*Call
2094		2808<2705	MEMORY TO MEMORY	*Call
2094		2808<2706	MEMORY TO MEMORY	*Call
2094		2808<2707	MEMORY TO MEMORY	*Call
2094		2808<2708	MEMORY TO MEMORY	*Call
2094		2808<2802	MEMORY TO MEMORY	*Call
2094		2808<2803	MEMORY TO MEMORY	*Call
2094		2808<2804	MEMORY TO MEMORY	*Call
2094		2808<2805	MEMORY TO MEMORY	*Call
2094		2808<2806	MEMORY TO MEMORY	*Call
2094		2808<2807	MEMORY TO MEMORY	*Call
2094		2809<2701	MEMORY TO MEMORY	*Call
2094		2809<2702	MEMORY TO MEMORY	*Call
2094		2809<2703	MEMORY TO MEMORY	*Call
2094		2809<2704	MEMORY TO MEMORY	*Call
2094		2809<2705	MEMORY TO MEMORY	*Call
2094		2809<2706	MEMORY TO MEMORY	*Call
2094		2809<2707	MEMORY TO MEMORY	*Call
2094		2809<2708	MEMORY TO MEMORY	*Call
2094		2809<2709	MEMORY TO MEMORY	*Call
2094		2809<2802	MEMORY TO MEMORY	*Call
2094		2809<2803	MEMORY TO MEMORY	*Call
2094		2809<2804	MEMORY TO MEMORY	*Call
2094		2809<2805	MEMORY TO MEMORY	*Call
2094		2809<2806	MEMORY TO MEMORY	*Call
2094		2809<2807	MEMORY TO MEMORY	*Call
2094		2809<2808	MEMORY TO MEMORY	*Call
2094		2810<2701	MEMORY TO MEMORY	*Call
2094		2810<2702	MEMORY TO MEMORY	*Call
2094		2810<2703	MEMORY TO MEMORY	*Call
2094		2810<2704	MEMORY TO MEMORY	*Call
2094		2810<2705	MEMORY TO MEMORY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			2810<2706	MEMORY TO MEMORY	*Call
2094			2810<2707	MEMORY TO MEMORY	*Call
2094			2810<2708	MEMORY TO MEMORY	*Call
2094			2810<2709	MEMORY TO MEMORY	*Call
2094			2810<2710	MEMORY TO MEMORY	*Call
2094			2810<2802	MEMORY TO MEMORY	*Call
2094			2810<2803	MEMORY TO MEMORY	*Call
2094			2810<2804	MEMORY TO MEMORY	*Call
2094			2810<2805	MEMORY TO MEMORY	*Call
2094			2810<2806	MEMORY TO MEMORY	*Call
2094			2810<2807	MEMORY TO MEMORY	*Call
2094			2810<2808	MEMORY TO MEMORY	*Call
2094			2810<2809	MEMORY TO MEMORY	*Call
2094			2811<2701	MEMORY TO MEMORY	*Call
2094			2811<2702	MEMORY TO MEMORY	*Call
2094			2811<2703	MEMORY TO MEMORY	*Call
2094			2811<2704	MEMORY TO MEMORY	*Call
2094			2811<2705	MEMORY TO MEMORY	*Call
2094			2811<2706	MEMORY TO MEMORY	*Call
2094			2811<2707	MEMORY TO MEMORY	*Call
2094			2811<2708	MEMORY TO MEMORY	*Call
2094			2811<2709	MEMORY TO MEMORY	*Call
2094			2811<2710	MEMORY TO MEMORY	*Call
2094			2811<2711	MEMORY TO MEMORY	*Call
2094			2811<2802	MEMORY TO MEMORY	*Call
2094			2811<2803	MEMORY TO MEMORY	*Call
2094			2811<2804	MEMORY TO MEMORY	*Call
2094			2811<2805	MEMORY TO MEMORY	*Call
2094			2811<2806	MEMORY TO MEMORY	*Call
2094			2811<2807	MEMORY TO MEMORY	*Call
2094			2811<2808	MEMORY TO MEMORY	*Call
2094			2811<2809	MEMORY TO MEMORY	*Call
2094			2811<2810	MEMORY TO MEMORY	*Call
2094			2812<2701	MEMORY TO MEMORY	*Call
2094			2812<2702	MEMORY TO MEMORY	*Call
2094			2812<2703	MEMORY TO MEMORY	*Call
2094			2812<2704	MEMORY TO MEMORY	*Call
2094			2812<2705	MEMORY TO MEMORY	*Call
2094			2812<2706	MEMORY TO MEMORY	*Call
2094			2812<2707	MEMORY TO MEMORY	*Call
2094			2812<2708	MEMORY TO MEMORY	*Call
2094			2812<2709	MEMORY TO MEMORY	*Call
2094			2812<2710	MEMORY TO MEMORY	*Call
2094			2812<2711	MEMORY TO MEMORY	*Call
2094			2812<2712	MEMORY TO MEMORY	*Call
2094			2812<2802	MEMORY TO MEMORY	*Call
2094			2812<2803	MEMORY TO MEMORY	*Call
2094			2812<2804	MEMORY TO MEMORY	*Call
2094			2812<2805	MEMORY TO MEMORY	*Call
2094			2812<2806	MEMORY TO MEMORY	*Call
2094			2812<2807	MEMORY TO MEMORY	*Call
2094			2812<2808	MEMORY TO MEMORY	*Call
2094			2812<2809	MEMORY TO MEMORY	*Call
2094			2812<2810	MEMORY TO MEMORY	*Call
2094			2812<2811	MEMORY TO MEMORY	*Call
2094			2813<2701	MEMORY TO MEMORY	*Call
2094			2813<2702	MEMORY TO MEMORY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			2813<2703	MEMORY TO MEMORY	*Call
2094			2813<2704	MEMORY TO MEMORY	*Call
2094			2813<2705	MEMORY TO MEMORY	*Call
2094			2813<2706	MEMORY TO MEMORY	*Call
2094			2813<2707	MEMORY TO MEMORY	*Call
2094			2813<2708	MEMORY TO MEMORY	*Call
2094			2813<2709	MEMORY TO MEMORY	*Call
2094			2813<2710	MEMORY TO MEMORY	*Call
2094			2813<2711	MEMORY TO MEMORY	*Call
2094			2813<2712	MEMORY TO MEMORY	*Call
2094			2813<2713	MEMORY TO MEMORY	*Call
2094			2813<2802	MEMORY TO MEMORY	*Call
2094			2813<2803	MEMORY TO MEMORY	*Call
2094			2813<2804	MEMORY TO MEMORY	*Call
2094			2813<2805	MEMORY TO MEMORY	*Call
2094			2813<2806	MEMORY TO MEMORY	*Call
2094			2813<2807	MEMORY TO MEMORY	*Call
2094			2813<2808	MEMORY TO MEMORY	*Call
2094			2813<2809	MEMORY TO MEMORY	*Call
2094			2813<2810	MEMORY TO MEMORY	*Call
2094			2813<2811	MEMORY TO MEMORY	*Call
2094			2813<2812	MEMORY TO MEMORY	*Call
2094			2814<2701	MEMORY TO MEMORY	*Call
2094			2814<2702	MEMORY TO MEMORY	*Call
2094			2814<2703	MEMORY TO MEMORY	*Call
2094			2814<2704	MEMORY TO MEMORY	*Call
2094			2814<2705	MEMORY TO MEMORY	*Call
2094			2814<2706	MEMORY TO MEMORY	*Call
2094			2814<2707	MEMORY TO MEMORY	*Call
2094			2814<2708	MEMORY TO MEMORY	*Call
2094			2814<2709	MEMORY TO MEMORY	*Call
2094			2814<2710	MEMORY TO MEMORY	*Call
2094			2814<2711	MEMORY TO MEMORY	*Call
2094			2814<2712	MEMORY TO MEMORY	*Call
2094			2814<2713	MEMORY TO MEMORY	*Call
2094			2814<2714	MEMORY TO MEMORY	*Call
2094			2814<2802	MEMORY TO MEMORY	*Call
2094			2814<2803	MEMORY TO MEMORY	*Call
2094			2814<2804	MEMORY TO MEMORY	*Call
2094			2814<2805	MEMORY TO MEMORY	*Call
2094			2814<2806	MEMORY TO MEMORY	*Call
2094			2814<2807	MEMORY TO MEMORY	*Call
2094			2814<2808	MEMORY TO MEMORY	*Call
2094			2814<2809	MEMORY TO MEMORY	*Call
2094			2814<2810	MEMORY TO MEMORY	*Call
2094			2814<2811	MEMORY TO MEMORY	*Call
2094			2814<2812	MEMORY TO MEMORY	*Call
2094			2814<2813	MEMORY TO MEMORY	*Call
2094			2815<2701	MEMORY TO MEMORY	*Call
2094			2815<2702	MEMORY TO MEMORY	*Call
2094			2815<2703	MEMORY TO MEMORY	*Call
2094			2815<2704	MEMORY TO MEMORY	*Call
2094			2815<2705	MEMORY TO MEMORY	*Call
2094			2815<2706	MEMORY TO MEMORY	*Call
2094			2815<2707	MEMORY TO MEMORY	*Call
2094			2815<2708	MEMORY TO MEMORY	*Call
2094			2815<2709	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2815<2710	MEMORY TO MEMORY	*Call
2094		2815<2711	MEMORY TO MEMORY	*Call
2094		2815<2712	MEMORY TO MEMORY	*Call
2094		2815<2713	MEMORY TO MEMORY	*Call
2094		2815<2714	MEMORY TO MEMORY	*Call
2094		2815<2715	MEMORY TO MEMORY	*Call
2094		2815<2802	MEMORY TO MEMORY	*Call
2094		2815<2803	MEMORY TO MEMORY	*Call
2094		2815<2804	MEMORY TO MEMORY	*Call
2094		2815<2805	MEMORY TO MEMORY	*Call
2094		2815<2806	MEMORY TO MEMORY	*Call
2094		2815<2807	MEMORY TO MEMORY	*Call
2094		2815<2808	MEMORY TO MEMORY	*Call
2094		2815<2809	MEMORY TO MEMORY	*Call
2094		2815<2810	MEMORY TO MEMORY	*Call
2094		2815<2811	MEMORY TO MEMORY	*Call
2094		2815<2812	MEMORY TO MEMORY	*Call
2094		2815<2813	MEMORY TO MEMORY	*Call
2094		2815<2814	MEMORY TO MEMORY	*Call
2094		2816<2701	MEMORY TO MEMORY	*Call
2094		2816<2702	MEMORY TO MEMORY	*Call
2094		2816<2703	MEMORY TO MEMORY	*Call
2094		2816<2704	MEMORY TO MEMORY	*Call
2094		2816<2705	MEMORY TO MEMORY	*Call
2094		2816<2706	MEMORY TO MEMORY	*Call
2094		2816<2707	MEMORY TO MEMORY	*Call
2094		2816<2708	MEMORY TO MEMORY	*Call
2094		2816<2709	MEMORY TO MEMORY	*Call
2094		2816<2710	MEMORY TO MEMORY	*Call
2094		2816<2711	MEMORY TO MEMORY	*Call
2094		2816<2712	MEMORY TO MEMORY	*Call
2094		2816<2713	MEMORY TO MEMORY	*Call
2094		2816<2714	MEMORY TO MEMORY	*Call
2094		2816<2715	MEMORY TO MEMORY	*Call
2094		2816<2716	MEMORY TO MEMORY	*Call
2094		2816<2802	MEMORY TO MEMORY	*Call
2094		2816<2803	MEMORY TO MEMORY	*Call
2094		2816<2804	MEMORY TO MEMORY	*Call
2094		2816<2805	MEMORY TO MEMORY	*Call
2094		2816<2806	MEMORY TO MEMORY	*Call
2094		2816<2807	MEMORY TO MEMORY	*Call
2094		2816<2808	MEMORY TO MEMORY	*Call
2094		2816<2809	MEMORY TO MEMORY	*Call
2094		2816<2810	MEMORY TO MEMORY	*Call
2094		2816<2811	MEMORY TO MEMORY	*Call
2094		2816<2812	MEMORY TO MEMORY	*Call
2094		2816<2813	MEMORY TO MEMORY	*Call
2094		2816<2814	MEMORY TO MEMORY	*Call
2094		2816<2815	MEMORY TO MEMORY	*Call
2094		2817<2701	MEMORY TO MEMORY	*Call
2094		2817<2702	MEMORY TO MEMORY	*Call
2094		2817<2703	MEMORY TO MEMORY	*Call
2094		2817<2704	MEMORY TO MEMORY	*Call
2094		2817<2705	MEMORY TO MEMORY	*Call
2094		2817<2706	MEMORY TO MEMORY	*Call
2094		2817<2707	MEMORY TO MEMORY	*Call
2094		2817<2708	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2817<2709	MEMORY TO MEMORY	*Call
2094		2817<2710	MEMORY TO MEMORY	*Call
2094		2817<2711	MEMORY TO MEMORY	*Call
2094		2817<2712	MEMORY TO MEMORY	*Call
2094		2817<2713	MEMORY TO MEMORY	*Call
2094		2817<2714	MEMORY TO MEMORY	*Call
2094		2817<2715	MEMORY TO MEMORY	*Call
2094		2817<2716	MEMORY TO MEMORY	*Call
2094		2817<2717	MEMORY TO MEMORY	*Call
2094		2817<2802	MEMORY TO MEMORY	*Call
2094		2817<2803	MEMORY TO MEMORY	*Call
2094		2817<2804	MEMORY TO MEMORY	*Call
2094		2817<2805	MEMORY TO MEMORY	*Call
2094		2817<2806	MEMORY TO MEMORY	*Call
2094		2817<2807	MEMORY TO MEMORY	*Call
2094		2817<2808	MEMORY TO MEMORY	*Call
2094		2817<2809	MEMORY TO MEMORY	*Call
2094		2817<2810	MEMORY TO MEMORY	*Call
2094		2817<2811	MEMORY TO MEMORY	*Call
2094		2817<2812	MEMORY TO MEMORY	*Call
2094		2817<2813	MEMORY TO MEMORY	*Call
2094		2817<2814	MEMORY TO MEMORY	*Call
2094		2817<2815	MEMORY TO MEMORY	*Call
2094		2817<2816	MEMORY TO MEMORY	*Call
2094		2818<2701	MEMORY TO MEMORY	*Call
2094		2818<2702	MEMORY TO MEMORY	*Call
2094		2818<2703	MEMORY TO MEMORY	*Call
2094		2818<2704	MEMORY TO MEMORY	*Call
2094		2818<2705	MEMORY TO MEMORY	*Call
2094		2818<2706	MEMORY TO MEMORY	*Call
2094		2818<2707	MEMORY TO MEMORY	*Call
2094		2818<2708	MEMORY TO MEMORY	*Call
2094		2818<2709	MEMORY TO MEMORY	*Call
2094		2818<2710	MEMORY TO MEMORY	*Call
2094		2818<2711	MEMORY TO MEMORY	*Call
2094		2818<2712	MEMORY TO MEMORY	*Call
2094		2818<2713	MEMORY TO MEMORY	*Call
2094		2818<2714	MEMORY TO MEMORY	*Call
2094		2818<2715	MEMORY TO MEMORY	*Call
2094		2818<2716	MEMORY TO MEMORY	*Call
2094		2818<2717	MEMORY TO MEMORY	*Call
2094		2818<2718	MEMORY TO MEMORY	*Call
2094		2818<2802	MEMORY TO MEMORY	*Call
2094		2818<2803	MEMORY TO MEMORY	*Call
2094		2818<2804	MEMORY TO MEMORY	*Call
2094		2818<2805	MEMORY TO MEMORY	*Call
2094		2818<2806	MEMORY TO MEMORY	*Call
2094		2818<2807	MEMORY TO MEMORY	*Call
2094		2818<2808	MEMORY TO MEMORY	*Call
2094		2818<2809	MEMORY TO MEMORY	*Call
2094		2818<2810	MEMORY TO MEMORY	*Call
2094		2818<2811	MEMORY TO MEMORY	*Call
2094		2818<2812	MEMORY TO MEMORY	*Call
2094		2818<2813	MEMORY TO MEMORY	*Call
2094		2818<2814	MEMORY TO MEMORY	*Call
2094		2818<2815	MEMORY TO MEMORY	*Call
2094		2818<2816	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2818<2817	MEMORY TO MEMORY	*Call
2094		2819<2701	MEMORY TO MEMORY	*Call
2094		2819<2702	MEMORY TO MEMORY	*Call
2094		2819<2703	MEMORY TO MEMORY	*Call
2094		2819<2704	MEMORY TO MEMORY	*Call
2094		2819<2705	MEMORY TO MEMORY	*Call
2094		2819<2706	MEMORY TO MEMORY	*Call
2094		2819<2707	MEMORY TO MEMORY	*Call
2094		2819<2708	MEMORY TO MEMORY	*Call
2094		2819<2709	MEMORY TO MEMORY	*Call
2094		2819<2710	MEMORY TO MEMORY	*Call
2094		2819<2711	MEMORY TO MEMORY	*Call
2094		2819<2712	MEMORY TO MEMORY	*Call
2094		2819<2713	MEMORY TO MEMORY	*Call
2094		2819<2714	MEMORY TO MEMORY	*Call
2094		2819<2715	MEMORY TO MEMORY	*Call
2094		2819<2716	MEMORY TO MEMORY	*Call
2094		2819<2717	MEMORY TO MEMORY	*Call
2094		2819<2718	MEMORY TO MEMORY	*Call
2094		2819<2719	MEMORY TO MEMORY	*Call
2094		2819<2802	MEMORY TO MEMORY	*Call
2094		2819<2803	MEMORY TO MEMORY	*Call
2094		2819<2804	MEMORY TO MEMORY	*Call
2094		2819<2805	MEMORY TO MEMORY	*Call
2094		2819<2806	MEMORY TO MEMORY	*Call
2094		2819<2807	MEMORY TO MEMORY	*Call
2094		2819<2808	MEMORY TO MEMORY	*Call
2094		2819<2809	MEMORY TO MEMORY	*Call
2094		2819<2810	MEMORY TO MEMORY	*Call
2094		2819<2811	MEMORY TO MEMORY	*Call
2094		2819<2812	MEMORY TO MEMORY	*Call
2094		2819<2813	MEMORY TO MEMORY	*Call
2094		2819<2814	MEMORY TO MEMORY	*Call
2094		2819<2815	MEMORY TO MEMORY	*Call
2094		2819<2816	MEMORY TO MEMORY	*Call
2094		2819<2817	MEMORY TO MEMORY	*Call
2094		2819<2818	MEMORY TO MEMORY	*Call
2094		2820<2701	MEMORY TO MEMORY	*Call
2094		2820<2702	MEMORY TO MEMORY	*Call
2094		2820<2703	MEMORY TO MEMORY	*Call
2094		2820<2704	MEMORY TO MEMORY	*Call
2094		2820<2705	MEMORY TO MEMORY	*Call
2094		2820<2706	MEMORY TO MEMORY	*Call
2094		2820<2707	MEMORY TO MEMORY	*Call
2094		2820<2708	MEMORY TO MEMORY	*Call
2094		2820<2709	MEMORY TO MEMORY	*Call
2094		2820<2710	MEMORY TO MEMORY	*Call
2094		2820<2711	MEMORY TO MEMORY	*Call
2094		2820<2712	MEMORY TO MEMORY	*Call
2094		2820<2713	MEMORY TO MEMORY	*Call
2094		2820<2714	MEMORY TO MEMORY	*Call
2094		2820<2715	MEMORY TO MEMORY	*Call
2094		2820<2716	MEMORY TO MEMORY	*Call
2094		2820<2717	MEMORY TO MEMORY	*Call
2094		2820<2718	MEMORY TO MEMORY	*Call
2094		2820<2719	MEMORY TO MEMORY	*Call
2094		2820<2720	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2820<2802	MEMORY TO MEMORY	*Call
2094		2820<2803	MEMORY TO MEMORY	*Call
2094		2820<2804	MEMORY TO MEMORY	*Call
2094		2820<2805	MEMORY TO MEMORY	*Call
2094		2820<2806	MEMORY TO MEMORY	*Call
2094		2820<2807	MEMORY TO MEMORY	*Call
2094		2820<2808	MEMORY TO MEMORY	*Call
2094		2820<2809	MEMORY TO MEMORY	*Call
2094		2820<2810	MEMORY TO MEMORY	*Call
2094		2820<2811	MEMORY TO MEMORY	*Call
2094		2820<2812	MEMORY TO MEMORY	*Call
2094		2820<2813	MEMORY TO MEMORY	*Call
2094		2820<2814	MEMORY TO MEMORY	*Call
2094		2820<2815	MEMORY TO MEMORY	*Call
2094		2820<2816	MEMORY TO MEMORY	*Call
2094		2820<2817	MEMORY TO MEMORY	*Call
2094		2820<2818	MEMORY TO MEMORY	*Call
2094		2820<2819	MEMORY TO MEMORY	*Call
2094		2821<2701	MEMORY TO MEMORY	*Call
2094		2821<2702	MEMORY TO MEMORY	*Call
2094		2821<2703	MEMORY TO MEMORY	*Call
2094		2821<2704	MEMORY TO MEMORY	*Call
2094		2821<2705	MEMORY TO MEMORY	*Call
2094		2821<2706	MEMORY TO MEMORY	*Call
2094		2821<2707	MEMORY TO MEMORY	*Call
2094		2821<2708	MEMORY TO MEMORY	*Call
2094		2821<2709	MEMORY TO MEMORY	*Call
2094		2821<2710	MEMORY TO MEMORY	*Call
2094		2821<2711	MEMORY TO MEMORY	*Call
2094		2821<2712	MEMORY TO MEMORY	*Call
2094		2821<2713	MEMORY TO MEMORY	*Call
2094		2821<2714	MEMORY TO MEMORY	*Call
2094		2821<2715	MEMORY TO MEMORY	*Call
2094		2821<2716	MEMORY TO MEMORY	*Call
2094		2821<2717	MEMORY TO MEMORY	*Call
2094		2821<2718	MEMORY TO MEMORY	*Call
2094		2821<2719	MEMORY TO MEMORY	*Call
2094		2821<2720	MEMORY TO MEMORY	*Call
2094		2821<2721	MEMORY TO MEMORY	*Call
2094		2821<2802	MEMORY TO MEMORY	*Call
2094		2821<2803	MEMORY TO MEMORY	*Call
2094		2821<2804	MEMORY TO MEMORY	*Call
2094		2821<2805	MEMORY TO MEMORY	*Call
2094		2821<2806	MEMORY TO MEMORY	*Call
2094		2821<2807	MEMORY TO MEMORY	*Call
2094		2821<2808	MEMORY TO MEMORY	*Call
2094		2821<2809	MEMORY TO MEMORY	*Call
2094		2821<2810	MEMORY TO MEMORY	*Call
2094		2821<2811	MEMORY TO MEMORY	*Call
2094		2821<2812	MEMORY TO MEMORY	*Call
2094		2821<2813	MEMORY TO MEMORY	*Call
2094		2821<2814	MEMORY TO MEMORY	*Call
2094		2821<2815	MEMORY TO MEMORY	*Call
2094		2821<2816	MEMORY TO MEMORY	*Call
2094		2821<2817	MEMORY TO MEMORY	*Call
2094		2821<2818	MEMORY TO MEMORY	*Call
2094		2821<2819	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2821<2820	MEMORY TO MEMORY	*Call
2094		2822<2701	MEMORY TO MEMORY	*Call
2094		2822<2702	MEMORY TO MEMORY	*Call
2094		2822<2703	MEMORY TO MEMORY	*Call
2094		2822<2704	MEMORY TO MEMORY	*Call
2094		2822<2705	MEMORY TO MEMORY	*Call
2094		2822<2706	MEMORY TO MEMORY	*Call
2094		2822<2707	MEMORY TO MEMORY	*Call
2094		2822<2708	MEMORY TO MEMORY	*Call
2094		2822<2709	MEMORY TO MEMORY	*Call
2094		2822<2710	MEMORY TO MEMORY	*Call
2094		2822<2711	MEMORY TO MEMORY	*Call
2094		2822<2712	MEMORY TO MEMORY	*Call
2094		2822<2713	MEMORY TO MEMORY	*Call
2094		2822<2714	MEMORY TO MEMORY	*Call
2094		2822<2715	MEMORY TO MEMORY	*Call
2094		2822<2716	MEMORY TO MEMORY	*Call
2094		2822<2717	MEMORY TO MEMORY	*Call
2094		2822<2718	MEMORY TO MEMORY	*Call
2094		2822<2719	MEMORY TO MEMORY	*Call
2094		2822<2720	MEMORY TO MEMORY	*Call
2094		2822<2721	MEMORY TO MEMORY	*Call
2094		2822<2722	MEMORY TO MEMORY	*Call
2094		2822<2802	MEMORY TO MEMORY	*Call
2094		2822<2803	MEMORY TO MEMORY	*Call
2094		2822<2804	MEMORY TO MEMORY	*Call
2094		2822<2805	MEMORY TO MEMORY	*Call
2094		2822<2806	MEMORY TO MEMORY	*Call
2094		2822<2807	MEMORY TO MEMORY	*Call
2094		2822<2808	MEMORY TO MEMORY	*Call
2094		2822<2809	MEMORY TO MEMORY	*Call
2094		2822<2810	MEMORY TO MEMORY	*Call
2094		2822<2811	MEMORY TO MEMORY	*Call
2094		2822<2812	MEMORY TO MEMORY	*Call
2094		2822<2813	MEMORY TO MEMORY	*Call
2094		2822<2814	MEMORY TO MEMORY	*Call
2094		2822<2815	MEMORY TO MEMORY	*Call
2094		2822<2816	MEMORY TO MEMORY	*Call
2094		2822<2817	MEMORY TO MEMORY	*Call
2094		2822<2818	MEMORY TO MEMORY	*Call
2094		2822<2819	MEMORY TO MEMORY	*Call
2094		2822<2820	MEMORY TO MEMORY	*Call
2094		2822<2821	MEMORY TO MEMORY	*Call
2094		2823<2701	MEMORY TO MEMORY	*Call
2094		2823<2702	MEMORY TO MEMORY	*Call
2094		2823<2703	MEMORY TO MEMORY	*Call
2094		2823<2704	MEMORY TO MEMORY	*Call
2094		2823<2705	MEMORY TO MEMORY	*Call
2094		2823<2706	MEMORY TO MEMORY	*Call
2094		2823<2707	MEMORY TO MEMORY	*Call
2094		2823<2708	MEMORY TO MEMORY	*Call
2094		2823<2709	MEMORY TO MEMORY	*Call
2094		2823<2710	MEMORY TO MEMORY	*Call
2094		2823<2711	MEMORY TO MEMORY	*Call
2094		2823<2712	MEMORY TO MEMORY	*Call
2094		2823<2713	MEMORY TO MEMORY	*Call
2094		2823<2714	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2823<2715	MEMORY TO MEMORY	*Call
2094		2823<2716	MEMORY TO MEMORY	*Call
2094		2823<2717	MEMORY TO MEMORY	*Call
2094		2823<2718	MEMORY TO MEMORY	*Call
2094		2823<2719	MEMORY TO MEMORY	*Call
2094		2823<2720	MEMORY TO MEMORY	*Call
2094		2823<2721	MEMORY TO MEMORY	*Call
2094		2823<2722	MEMORY TO MEMORY	*Call
2094		2823<2723	MEMORY TO MEMORY	*Call
2094		2823<2802	MEMORY TO MEMORY	*Call
2094		2823<2803	MEMORY TO MEMORY	*Call
2094		2823<2804	MEMORY TO MEMORY	*Call
2094		2823<2805	MEMORY TO MEMORY	*Call
2094		2823<2806	MEMORY TO MEMORY	*Call
2094		2823<2807	MEMORY TO MEMORY	*Call
2094		2823<2808	MEMORY TO MEMORY	*Call
2094		2823<2809	MEMORY TO MEMORY	*Call
2094		2823<2810	MEMORY TO MEMORY	*Call
2094		2823<2811	MEMORY TO MEMORY	*Call
2094		2823<2812	MEMORY TO MEMORY	*Call
2094		2823<2813	MEMORY TO MEMORY	*Call
2094		2823<2814	MEMORY TO MEMORY	*Call
2094		2823<2815	MEMORY TO MEMORY	*Call
2094		2823<2816	MEMORY TO MEMORY	*Call
2094		2823<2817	MEMORY TO MEMORY	*Call
2094		2823<2818	MEMORY TO MEMORY	*Call
2094		2823<2819	MEMORY TO MEMORY	*Call
2094		2823<2820	MEMORY TO MEMORY	*Call
2094		2823<2821	MEMORY TO MEMORY	*Call
2094		2823<2822	MEMORY TO MEMORY	*Call
2094		2824<2701	MEMORY TO MEMORY	*Call
2094		2824<2702	MEMORY TO MEMORY	*Call
2094		2824<2703	MEMORY TO MEMORY	*Call
2094		2824<2704	MEMORY TO MEMORY	*Call
2094		2824<2705	MEMORY TO MEMORY	*Call
2094		2824<2706	MEMORY TO MEMORY	*Call
2094		2824<2707	MEMORY TO MEMORY	*Call
2094		2824<2708	MEMORY TO MEMORY	*Call
2094		2824<2709	MEMORY TO MEMORY	*Call
2094		2824<2710	MEMORY TO MEMORY	*Call
2094		2824<2711	MEMORY TO MEMORY	*Call
2094		2824<2712	MEMORY TO MEMORY	*Call
2094		2824<2713	MEMORY TO MEMORY	*Call
2094		2824<2714	MEMORY TO MEMORY	*Call
2094		2824<2715	MEMORY TO MEMORY	*Call
2094		2824<2716	MEMORY TO MEMORY	*Call
2094		2824<2717	MEMORY TO MEMORY	*Call
2094		2824<2718	MEMORY TO MEMORY	*Call
2094		2824<2719	MEMORY TO MEMORY	*Call
2094		2824<2720	MEMORY TO MEMORY	*Call
2094		2824<2721	MEMORY TO MEMORY	*Call
2094		2824<2722	MEMORY TO MEMORY	*Call
2094		2824<2723	MEMORY TO MEMORY	*Call
2094		2824<2724	MEMORY TO MEMORY	*Call
2094		2824<2802	MEMORY TO MEMORY	*Call
2094		2824<2803	MEMORY TO MEMORY	*Call
2094		2824<2804	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		2824<2805	MEMORY TO MEMORY	*Call
2094		2824<2806	MEMORY TO MEMORY	*Call
2094		2824<2807	MEMORY TO MEMORY	*Call
2094		2824<2808	MEMORY TO MEMORY	*Call
2094		2824<2809	MEMORY TO MEMORY	*Call
2094		2824<2810	MEMORY TO MEMORY	*Call
2094		2824<2811	MEMORY TO MEMORY	*Call
2094		2824<2812	MEMORY TO MEMORY	*Call
2094		2824<2813	MEMORY TO MEMORY	*Call
2094		2824<2814	MEMORY TO MEMORY	*Call
2094		2824<2815	MEMORY TO MEMORY	*Call
2094		2824<2816	MEMORY TO MEMORY	*Call
2094		2824<2817	MEMORY TO MEMORY	*Call
2094		2824<2818	MEMORY TO MEMORY	*Call
2094		2824<2819	MEMORY TO MEMORY	*Call
2094		2824<2820	MEMORY TO MEMORY	*Call
2094		2824<2821	MEMORY TO MEMORY	*Call
2094		2824<2822	MEMORY TO MEMORY	*Call
2094		2824<2823	MEMORY TO MEMORY	*Call
2094		4500<4501	1-WAY TO ZERO-WAY	*Call
2094		4500<4502	2-WAY TO ZERO-WAY	*Call
2094		4500<4503	3-WAY TO ZERO-WAY	*Call
2094		4500<4504	4-WAY TO ZERO-WAY	*Call
2094		4500<4505	5-WAY TO ZERO-WAY	*Call
2094		4500<4506	6-WAY TO ZERO-WAY	*Call
2094		4500<4507	7-WAY TO ZERO-WAY	*Call
2094		4500<4508	8-WAY TO ZERO-WAY	*Call
2094		4500<4509	9-WAY TO ZERO-WAY	*Call
2094		4500<4510	10-WAY TO ZERO-WAY	*Call
2094		4500<4511	11-WAY TO ZERO-WAY	*Call
2094		4500<4512	12-WAY TO ZERO-WAY	*Call
2094		4500<4513	13-WAY TO ZERO-WAY	*Call
2094		4500<4514	14-WAY TO ZERO-WAY	*Call
2094		4500<4515	15-WAY TO ZERO-WAY	*Call
2094		4500<4516	16-WAY TO ZERO-WAY	*Call
2094		4500<4517	17-WAY TO ZERO-WAY	*Call
2094		4500<4518	18-WAY TO ZERO-WAY	*Call
2094		4500<4519	19-WAY TO ZERO-WAY	*Call
2094		4500<4520	20-WAY TO ZERO-WAY	*Call
2094		4500<4521	21-WAY TO ZERO-WAY	*Call
2094		4500<4522	22-WAY TO ZERO-WAY	*Call
2094		4500<4523	23-WAY TO ZERO-WAY	*Call
2094		4500<4524	24-WAY TO ZERO-WAY	*Call
2094		4500<4525	25-WAY TO ZERO-WAY	*Call
2094		4500<4526	26-WAY TO ZERO-WAY	*Call
2094		4500<4527	27-WAY TO ZERO-WAY	*Call
2094		4500<4528	28-WAY TO ZERO-WAY	*Call
2094		4500<4529	29-WAY TO ZERO-WAY	*Call
2094		4500<4530	30-WAY TO ZERO-WAY	*Call
2094		4500<4531	31-WAY TO ZERO-WAY	*Call
2094		4500<4532	32-WAY TO ZERO-WAY	*Call
2094		4500<4533	33-WAY TO ZERO-WAY	*Call
2094		4500<4534	34-WAY TO ZERO-WAY	*Call
2094		4500<4535	35-WAY TO ZERO-WAY	*Call
2094		4500<4536	36-WAY TO ZERO-WAY	*Call
2094		4500<4537	37-WAY TO ZERO-WAY	*Call
2094		4500<4538	38-WAY TO ZERO-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4500<4539	39-WAY TO ZERO-WAY	*Call
2094		4500<4540	40-WAY TO ZERO-WAY	*Call
2094		4500<4541	41-WAY TO ZERO-WAY	*Call
2094		4500<4542	42-WAY TO ZERO-WAY	*Call
2094		4500<4543	43-WAY TO ZERO-WAY	*Call
2094		4500<4544	44-WAY TO ZERO-WAY	*Call
2094		4500<4545	45-WAY TO ZERO-WAY	*Call
2094		4500<4546	46-WAY TO ZERO-WAY	*Call
2094		4500<4547	47-WAY TO ZERO-WAY	*Call
2094		4500<4548	48-WAY TO ZERO-WAY	*Call
2094		4500<4549	49-WAY TO ZERO-WAY	*Call
2094		4500<4550	50-WAY TO ZERO-WAY	*Call
2094		4500<4551	51-WAY TO ZERO-WAY	*Call
2094		4500<4552	52-WAY TO ZERO-WAY	*Call
2094		4500<4553	53-WAY TO ZERO-WAY	*Call
2094		4500<4554	54-WAY TO ZERO-WAY	*Call
2094		4500<4601	1-WAY TO ZERO-WAY	*Call
2094		4500<4602	2-WAY TO ZERO-WAY	*Call
2094		4500<4603	3-WAY TO ZERO-WAY	*Call
2094		4500<4604	4-WAY TO ZERO-WAY	*Call
2094		4500<4605	5-WAY TO ZERO-WAY	*Call
2094		4500<4606	6-WAY TO ZERO-WAY	*Call
2094		4500<4607	7-WAY TO ZERO-WAY	*Call
2094		4500<4608	8-WAY TO ZERO-WAY	*Call
2094		4500<4701	1-WAY TO ZERO-WAY	*Call
2094		4500<4702	2-WAY TO ZERO-WAY	*Call
2094		4500<4703	3-WAY TO ZERO-WAY	*Call
2094		4500<4704	4-WAY TO ZERO-WAY	*Call
2094		4500<4705	5-WAY TO ZERO-WAY	*Call
2094		4500<4706	6-WAY TO ZERO-WAY	*Call
2094		4500<4707	7-WAY TO ZERO-WAY	*Call
2094		4500<4708	8-WAY TO ZERO-WAY	*Call
2094		4500<4801	1-WAY TO ZERO-WAY	*Call
2094		4500<4802	2-WAY TO ZERO-WAY	*Call
2094		4500<4803	3-WAY TO ZERO-WAY	*Call
2094		4500<4804	4-WAY TO ZERO-WAY	*Call
2094		4500<4805	5-WAY TO ZERO-WAY	*Call
2094		4500<4806	6-WAY TO ZERO-WAY	*Call
2094		4500<4807	7-WAY TO ZERO-WAY	*Call
2094		4500<4808	8-WAY TO ZERO-WAY	*Call
2094		4501<4500	ZERO-WAY TO 1-WAY	*Call
2094		4501<4502	2-WAY TO 1-WAY	*Call
2094		4501<4503	3-WAY TO 1-WAY	*Call
2094		4501<4504	4-WAY TO 1-WAY	*Call
2094		4501<4505	5-WAY TO 1-WAY	*Call
2094		4501<4506	6-WAY TO 1-WAY	*Call
2094		4501<4507	7-WAY TO 1-WAY	*Call
2094		4501<4508	8-WAY TO 1-WAY	*Call
2094		4501<4509	9-WAY TO 1-WAY	*Call
2094		4501<4510	10-WAY TO 1-WAY	*Call
2094		4501<4511	11-WAY TO 1-WAY	*Call
2094		4501<4512	12-WAY TO 1-WAY	*Call
2094		4501<4513	13-WAY TO 1-WAY	*Call
2094		4501<4514	14-WAY TO 1-WAY	*Call
2094		4501<4515	15-WAY TO 1-WAY	*Call
2094		4501<4516	16-WAY TO 1-WAY	*Call
2094		4501<4517	17-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4501<4518	18-WAY TO 1-WAY	*Call
2094		4501<4519	19-WAY TO 1-WAY	*Call
2094		4501<4520	20-WAY TO 1-WAY	*Call
2094		4501<4521	21-WAY TO 1-WAY	*Call
2094		4501<4522	22-WAY TO 1-WAY	*Call
2094		4501<4523	23-WAY TO 1-WAY	*Call
2094		4501<4524	24-WAY TO 1-WAY	*Call
2094		4501<4525	25-WAY TO 1-WAY	*Call
2094		4501<4526	26-WAY TO 1-WAY	*Call
2094		4501<4527	27-WAY TO 1-WAY	*Call
2094		4501<4528	28-WAY TO 1-WAY	*Call
2094		4501<4529	29-WAY TO 1-WAY	*Call
2094		4501<4530	30-WAY TO 1-WAY	*Call
2094		4501<4531	31-WAY TO 1-WAY	*Call
2094		4501<4532	32-WAY TO 1-WAY	*Call
2094		4501<4533	33-WAY TO 1-WAY	*Call
2094		4501<4534	34-WAY TO 1-WAY	*Call
2094		4501<4535	35-WAY TO 1-WAY	*Call
2094		4501<4536	36-WAY TO 1-WAY	*Call
2094		4501<4537	37-WAY TO 1-WAY	*Call
2094		4501<4538	38-WAY TO 1-WAY	*Call
2094		4501<4539	39-WAY TO 1-WAY	*Call
2094		4501<4540	40-WAY TO 1-WAY	*Call
2094		4501<4541	41-WAY TO 1-WAY	*Call
2094		4501<4542	42-WAY TO 1-WAY	*Call
2094		4501<4543	43-WAY TO 1-WAY	*Call
2094		4501<4544	44-WAY TO 1-WAY	*Call
2094		4501<4545	45-WAY TO 1-WAY	*Call
2094		4501<4546	46-WAY TO 1-WAY	*Call
2094		4501<4547	47-WAY TO 1-WAY	*Call
2094		4501<4548	48-WAY TO 1-WAY	*Call
2094		4501<4549	49-WAY TO 1-WAY	*Call
2094		4501<4550	50-WAY TO 1-WAY	*Call
2094		4501<4551	51-WAY TO 1-WAY	*Call
2094		4501<4552	52-WAY TO 1-WAY	*Call
2094		4501<4553	53-WAY TO 1-WAY	*Call
2094		4501<4554	54-WAY TO 1-WAY	*Call
2094		4501<4601	1-WAY TO 1_WAY	*Call
2094		4501<4602	2-WAY TO 1-WAY	*Call
2094		4501<4603	3-WAY TO 1-WAY	*Call
2094		4501<4604	4-WAY TO 1-WAY	*Call
2094		4501<4605	5-WAY TO 1-WAY	*Call
2094		4501<4606	6-WAY TO 1-WAY	*Call
2094		4501<4607	7-WAY TO 1-WAY	*Call
2094		4501<4608	8-WAY TO 1-WAY	*Call
2094		4501<4701	1-WAY TO 1-WAY	*Call
2094		4501<4702	2-WAY TO 1-WAY	*Call
2094		4501<4703	3-WAY TO 1-WAY	*Call
2094		4501<4704	4-WAY TO 1-WAY	*Call
2094		4501<4705	5-WAY TO 1-WAY	*Call
2094		4501<4706	6-WAY TO 1-WAY	*Call
2094		4501<4707	7-WAY TO 1-WAY	*Call
2094		4501<4708	8-WAY TO 1-WAY	*Call
2094		4501<4801	1-WAY TO 1-WAY	*Call
2094		4501<4802	2-WAY TO 1-WAY	*Call
2094		4501<4803	3-WAY TO 1-WAY	*Call
2094		4501<4804	4-WAY TO 1-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4501<4805	5-WAY TO 1-WAY	*Call
2094			4501<4806	6-WAY TO 1-WAY	*Call
2094			4501<4807	7-WAY TO 1-WAY	*Call
2094			4501<4808	8-WAY TO 1-WAY	*Call
2094			4502<4500	ZERO-WAY TO 2-WAY	*Call
2094			4502<4501	1-WAY TO 2-WAY	*Call
2094			4502<4503	3-WAY TO 2-WAY	*Call
2094			4502<4504	4-WAY TO 2-WAY	*Call
2094			4502<4505	5-WAY TO 2-WAY	*Call
2094			4502<4506	6-WAY TO 2-WAY	*Call
2094			4502<4507	7-WAY TO 2-WAY	*Call
2094			4502<4508	8-WAY TO 2-WAY	*Call
2094			4502<4509	9-WAY TO 2-WAY	*Call
2094			4502<4510	10-WAY TO 2-WAY	*Call
2094			4502<4511	11-WAY TO 2-WAY	*Call
2094			4502<4512	12-WAY TO 2-WAY	*Call
2094			4502<4513	13-WAY TO 2-WAY	*Call
2094			4502<4514	14-WAY TO 2-WAY	*Call
2094			4502<4515	15-WAY TO 2-WAY	*Call
2094			4502<4516	16-WAY TO 2-WAY	*Call
2094			4502<4517	17-WAY TO 2-WAY	*Call
2094			4502<4518	18-WAY TO 2-WAY	*Call
2094			4502<4519	19-WAY TO 2-WAY	*Call
2094			4502<4520	20-WAY TO 2-WAY	*Call
2094			4502<4521	21-WAY TO 2-WAY	*Call
2094			4502<4522	22-WAY TO 2-WAY	*Call
2094			4502<4523	23-WAY TO 2-WAY	*Call
2094			4502<4524	24-WAY TO 2-WAY	*Call
2094			4502<4525	25-WAY TO 2-WAY	*Call
2094			4502<4526	26-WAY TO 2-WAY	*Call
2094			4502<4527	27-WAY TO 2-WAY	*Call
2094			4502<4528	28-WAY TO 2-WAY	*Call
2094			4502<4529	29-WAY TO 2-WAY	*Call
2094			4502<4530	30-WAY TO 2-WAY	*Call
2094			4502<4531	31-WAY TO 2-WAY	*Call
2094			4502<4532	32-WAY TO 2-WAY	*Call
2094			4502<4533	33-WAY TO 2-WAY	*Call
2094			4502<4534	34-WAY TO 2-WAY	*Call
2094			4502<4535	35-WAY TO 2-WAY	*Call
2094			4502<4536	36-WAY TO 2-WAY	*Call
2094			4502<4537	37-WAY TO 2-WAY	*Call
2094			4502<4538	38-WAY TO 2-WAY	*Call
2094			4502<4539	39-WAY TO 2-WAY	*Call
2094			4502<4540	40-WAY TO 2-WAY	*Call
2094			4502<4541	41-WAY TO 2-WAY	*Call
2094			4502<4542	42-WAY TO 2-WAY	*Call
2094			4502<4543	43-WAY TO 2-WAY	*Call
2094			4502<4544	44-WAY TO 2-WAY	*Call
2094			4502<4545	45-WAY TO 2-WAY	*Call
2094			4502<4546	46-WAY TO 2-WAY	*Call
2094			4502<4547	47-WAY TO 2-WAY	*Call
2094			4502<4548	48-WAY TO 2-WAY	*Call
2094			4502<4549	49-WAY TO 2-WAY	*Call
2094			4502<4550	50-WAY TO 2-WAY	*Call
2094			4502<4551	51-WAY TO 2-WAY	*Call
2094			4502<4552	52-WAY TO 2-WAY	*Call
2094			4502<4553	53-WAY TO 2-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4502<4554	54-WAY TO 2-WAY	*Call
2094			4502<4601	1-WAY TO 2-WAY	*Call
2094			4502<4602	2-WAY TO 2-WAY	*Call
2094			4502<4603	3-WAY TO 2-WAY	*Call
2094			4502<4604	4-WAY TO 2-WAY	*Call
2094			4502<4605	5-WAY TO 2-WAY	*Call
2094			4502<4606	6-WAY TO 2-WAY	*Call
2094			4502<4607	7-WAY TO 2-WAY	*Call
2094			4502<4608	8-WAY TO 2-WAY	*Call
2094			4502<4701	1-WAY TO 2-WAY	*Call
2094			4502<4702	2-WAY TO 2-WAY	*Call
2094			4502<4703	3-WAY TO 2-WAY	*Call
2094			4502<4704	4-WAY TO 2-WAY	*Call
2094			4502<4705	5-WAY TO 2-WAY	*Call
2094			4502<4706	6-WAY TO 2-WAY	*Call
2094			4502<4707	7-WAY TO 2-WAY	*Call
2094			4502<4708	8-WAY TO 2-WAY	*Call
2094			4502<4801	1-WAY TO 2-WAY	*Call
2094			4502<4802	2-WAY TO 2-WAY	*Call
2094			4502<4803	3-WAY TO 2-WAY	*Call
2094			4502<4804	4-WAY TO 2-WAY	*Call
2094			4502<4805	5-WAY TO 2-WAY	*Call
2094			4502<4806	6-WAY TO 2-WAY	*Call
2094			4502<4807	7-WAY TO 2-WAY	*Call
2094			4502<4808	8-WAY TO 2-WAY	*Call
2094			4503<4500	ZERO-WAY TO 3-WAY	*Call
2094			4503<4501	1-WAY TO 3-WAY	*Call
2094			4503<4502	2-WAY TO 3-WAY	*Call
2094			4503<4504	4-WAY TO 3-WAY	*Call
2094			4503<4505	5-WAY TO 3-WAY	*Call
2094			4503<4506	6-WAY TO 3-WAY	*Call
2094			4503<4507	7-WAY TO 3-WAY	*Call
2094			4503<4508	8-WAY TO 3-WAY	*Call
2094			4503<4509	9-WAY TO 3-WAY	*Call
2094			4503<4510	10-WAY TO 3-WAY	*Call
2094			4503<4511	11-WAY TO 3-WAY	*Call
2094			4503<4512	12-WAY TO 3-WAY	*Call
2094			4503<4513	13-WAY TO 3-WAY	*Call
2094			4503<4514	14-WAY TO 3-WAY	*Call
2094			4503<4515	15-WAY TO 3-WAY	*Call
2094			4503<4516	16-WAY TO 3-WAY	*Call
2094			4503<4517	17-WAY TO 3-WAY	*Call
2094			4503<4518	18-WAY TO 3-WAY	*Call
2094			4503<4519	19-WAY TO 3-WAY	*Call
2094			4503<4520	20-WAY TO 3-WAY	*Call
2094			4503<4521	21-WAY TO 3-WAY	*Call
2094			4503<4522	22-WAY TO 3-WAY	*Call
2094			4503<4523	23-WAY TO 3-WAY	*Call
2094			4503<4524	24-WAY TO 3-WAY	*Call
2094			4503<4525	25-WAY TO 3-WAY	*Call
2094			4503<4526	26-WAY TO 3-WAY	*Call
2094			4503<4527	27-WAY TO 3-WAY	*Call
2094			4503<4528	28-WAY TO 3-WAY	*Call
2094			4503<4529	29-WAY TO 3-WAY	*Call
2094			4503<4530	30-WAY TO 3-WAY	*Call
2094			4503<4531	31-WAY TO 3-WAY	*Call
2094			4503<4532	32-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4503<4533	33-WAY TO 3-WAY	*Call
2094		4503<4534	34-WAY TO 3-WAY	*Call
2094		4503<4535	35-WAY TO 3-WAY	*Call
2094		4503<4536	36-WAY TO 3-WAY	*Call
2094		4503<4537	37-WAY TO 3-WAY	*Call
2094		4503<4538	38-WAY TO 3-WAY	*Call
2094		4503<4539	39-WAY TO 3-WAY	*Call
2094		4503<4540	40-WAY TO 3-WAY	*Call
2094		4503<4541	41-WAY TO 3-WAY	*Call
2094		4503<4542	42-WAY TO 3-WAY	*Call
2094		4503<4543	43-WAY TO 3-WAY	*Call
2094		4503<4544	44-WAY TO 3-WAY	*Call
2094		4503<4545	45-WAY TO 3-WAY	*Call
2094		4503<4546	46-WAY TO 3-WAY	*Call
2094		4503<4547	47-WAY TO 3-WAY	*Call
2094		4503<4548	48-WAY TO 3-WAY	*Call
2094		4503<4549	49-WAY TO 3-WAY	*Call
2094		4503<4550	50-WAY TO 3-WAY	*Call
2094		4503<4551	51-WAY TO 3-WAY	*Call
2094		4503<4552	52-WAY TO 3-WAY	*Call
2094		4503<4553	53-WAY TO 3-WAY	*Call
2094		4503<4554	54-WAY TO 3-WAY	*Call
2094		4503<4601	1-WAY TO 3-WAY	*Call
2094		4503<4602	2-WAY TO 3-WAY	*Call
2094		4503<4603	3-WAY TO 3-WAY	*Call
2094		4503<4604	4-WAY TO 3-WAY	*Call
2094		4503<4605	5-WAY TO 3-WAY	*Call
2094		4503<4606	6-WAY TO 3-WAY	*Call
2094		4503<4607	7-WAY TO 3-WAY	*Call
2094		4503<4608	8-WAY TO 3-WAY	*Call
2094		4503<4701	1-WAY TO 3-WAY	*Call
2094		4503<4702	2-WAY TO 3-WAY	*Call
2094		4503<4703	3-WAY TO 3-WAY	*Call
2094		4503<4704	4-WAY TO 3-WAY	*Call
2094		4503<4705	5-WAY TO 3-WAY	*Call
2094		4503<4706	6-WAY TO 3-WAY	*Call
2094		4503<4707	7-WAY TO 3-WAY	*Call
2094		4503<4708	8-WAY TO 3-WAY	*Call
2094		4503<4801	1-WAY TO 3-WAY	*Call
2094		4503<4802	2-WAY TO 3-WAY	*Call
2094		4503<4803	3-WAY TO 3-WAY	*Call
2094		4503<4804	4-WAY TO 3-WAY	*Call
2094		4503<4805	5-WAY TO 3-WAY	*Call
2094		4503<4806	6-WAY TO 3-WAY	*Call
2094		4503<4807	7-WAY TO 3-WAY	*Call
2094		4503<4808	8-WAY TO 3-WAY	*Call
2094		4504<4500	ZERO-WAY TO 4-WAY	*Call
2094		4504<4501	1-WAY TO 4-WAY	*Call
2094		4504<4502	2-WAY TO 4-WAY	*Call
2094		4504<4503	3-WAY TO 4-WAY	*Call
2094		4504<4505	5-WAY TO 4-WAY	*Call
2094		4504<4506	6-WAY TO 4-WAY	*Call
2094		4504<4507	7-WAY TO 4-WAY	*Call
2094		4504<4508	8-WAY TO 4-WAY	*Call
2094		4504<4509	9-WAY TO 4-WAY	*Call
2094		4504<4510	10-WAY TO 4-WAY	*Call
2094		4504<4511	11-WAY TO 4-WAY	*Call

Machine	Model	Feature	Description	GSA Price
2094		4504<4512	12-WAY TO 4-WAY	*Call
2094		4504<4513	13-WAY TO 4-WAY	*Call
2094		4504<4514	14-WAY TO 4-WAY	*Call
2094		4504<4515	15-WAY TO 4-WAY	*Call
2094		4504<4516	16-WAY TO 4-WAY	*Call
2094		4504<4517	17-WAY TO 4-WAY	*Call
2094		4504<4518	18-WAY TO 4-WAY	*Call
2094		4504<4519	19-WAY TO 4-WAY	*Call
2094		4504<4520	20-WAY TO 4-WAY	*Call
2094		4504<4521	21-WAY TO 4-WAY	*Call
2094		4504<4522	22-WAY TO 4-WAY	*Call
2094		4504<4523	23-WAY TO 4-WAY	*Call
2094		4504<4524	24-WAY TO 4-WAY	*Call
2094		4504<4525	25-WAY TO 4-WAY	*Call
2094		4504<4526	26-WAY TO 4-WAY	*Call
2094		4504<4527	27-WAY TO 4-WAY	*Call
2094		4504<4528	28-WAY TO 4-WAY	*Call
2094		4504<4529	29-WAY TO 4-WAY	*Call
2094		4504<4530	30-WAY TO 4-WAY	*Call
2094		4504<4531	31-WAY TO 4-WAY	*Call
2094		4504<4532	32-WAY TO 4-WAY	*Call
2094		4504<4533	33-WAY TO 4-WAY	*Call
2094		4504<4534	34-WAY TO 4-WAY	*Call
2094		4504<4535	35-WAY TO 4-WAY	*Call
2094		4504<4536	36-WAY TO 4-WAY	*Call
2094		4504<4537	37-WAY TO 4-WAY	*Call
2094		4504<4538	38-WAY TO 4-WAY	*Call
2094		4504<4539	39-WAY TO 4-WAY	*Call
2094		4504<4540	40-WAY TO 4-WAY	*Call
2094		4504<4541	41-WAY TO 4-WAY	*Call
2094		4504<4542	42-WAY TO 4-WAY	*Call
2094		4504<4543	43-WAY TO 4-WAY	*Call
2094		4504<4544	44-WAY TO 4-WAY	*Call
2094		4504<4545	45-WAY TO 4-WAY	*Call
2094		4504<4546	46-WAY TO 4-WAY	*Call
2094		4504<4547	47-WAY TO 4-WAY	*Call
2094		4504<4548	48-WAY TO 4-WAY	*Call
2094		4504<4549	49-WAY TO 4-WAY	*Call
2094		4504<4550	50-WAY TO 4-WAY	*Call
2094		4504<4551	51-WAY TO 4-WAY	*Call
2094		4504<4552	52-WAY TO 4-WAY	*Call
2094		4504<4553	53-WAY TO 4-WAY	*Call
2094		4504<4554	54-WAY TO 4-WAY	*Call
2094		4504<4601	1-WAY TO 4-WAY	*Call
2094		4504<4602	2-WAY TO 4-WAY	*Call
2094		4504<4603	3-WAY TO 4-WAY	*Call
2094		4504<4604	4-WAY TO 4-WAY	*Call
2094		4504<4605	5-WAY TO 4-WAY	*Call
2094		4504<4606	6-WAY TO 4-WAY	*Call
2094		4504<4607	7-WAY TO 4-WAY	*Call
2094		4504<4608	8-WAY TO 4-WAY	*Call
2094		4504<4701	1-WAY TO 4-WAY	*Call
2094		4504<4702	2-WAY TO 4-WAY	*Call
2094		4504<4703	3-WAY TO 4-WAY	*Call
2094		4504<4704	4-WAY TO 4-WAY	*Call
2094		4504<4705	5-WAY TO 4-WAY	*Call
2094		4504<4706	6-WAY TO 4-WAY	*Call

Machine	Model	Feature	Description	GSA Price
2094		4504<4707	7-WAY TO 4-WAY	*Call
2094		4504<4708	8-WAY TO 4-WAY	*Call
2094		4504<4801	1-WAY TO 4-WAY	*Call
2094		4504<4802	2-WAY TO 4-WAY	*Call
2094		4504<4803	3-WAY TO 4-WAY	*Call
2094		4504<4804	4-WAY TO 4-WAY	*Call
2094		4504<4805	5-WAY TO 4-WAY	*Call
2094		4504<4806	6-WAY TO 4-WAY	*Call
2094		4504<4807	7-WAY TO 4-WAY	*Call
2094		4504<4808	8-WAY TO 4-WAY	*Call
2094		4505<4500	ZERO-WAY TO 5-WAY	*Call
2094		4505<4501	1-WAY TO 5-WAY	*Call
2094		4505<4502	2-WAY TO 5-WAY	*Call
2094		4505<4503	3-WAY TO 5-WAY	*Call
2094		4505<4504	4-WAY TO 5-WAY	*Call
2094		4505<4506	6-WAY TO 5-WAY	*Call
2094		4505<4507	7-WAY TO 5-WAY	*Call
2094		4505<4508	8-WAY TO 5-WAY	*Call
2094		4505<4509	9-WAY TO 5-WAY	*Call
2094		4505<4510	10-WAY TO 5-WAY	*Call
2094		4505<4511	11-WAY TO 5-WAY	*Call
2094		4505<4512	12-WAY TO 5-WAY	*Call
2094		4505<4513	13-WAY TO 5-WAY	*Call
2094		4505<4514	14-WAY TO 5-WAY	*Call
2094		4505<4515	15-WAY TO 5-WAY	*Call
2094		4505<4516	16-WAY TO 5-WAY	*Call
2094		4505<4517	17-WAY TO 5-WAY	*Call
2094		4505<4518	18-WAY TO 5-WAY	*Call
2094		4505<4519	19-WAY TO 5-WAY	*Call
2094		4505<4520	20-WAY TO 5-WAY	*Call
2094		4505<4521	21-WAY TO 5-WAY	*Call
2094		4505<4522	22-WAY TO 5-WAY	*Call
2094		4505<4523	23-WAY TO 5-WAY	*Call
2094		4505<4524	24-WAY TO 5-WAY	*Call
2094		4505<4525	25-WAY TO 5-WAY	*Call
2094		4505<4526	26-WAY TO 5-WAY	*Call
2094		4505<4527	27-WAY TO 5-WAY	*Call
2094		4505<4528	28-WAY TO 5-WAY	*Call
2094		4505<4529	29-WAY TO 5-WAY	*Call
2094		4505<4530	30-WAY TO 5-WAY	*Call
2094		4505<4531	31-WAY TO 5-WAY	*Call
2094		4505<4532	32-WAY TO 5-WAY	*Call
2094		4505<4533	33-WAY TO 5-WAY	*Call
2094		4505<4534	34-WAY TO 5-WAY	*Call
2094		4505<4535	35-WAY TO 5-WAY	*Call
2094		4505<4536	36-WAY TO 5-WAY	*Call
2094		4505<4537	37-WAY TO 5-WAY	*Call
2094		4505<4538	38-WAY TO 5-WAY	*Call
2094		4505<4539	39-WAY TO 5-WAY	*Call
2094		4505<4540	40-WAY TO 5-WAY	*Call
2094		4505<4541	41-WAY TO 5-WAY	*Call
2094		4505<4542	42-WAY TO 5-WAY	*Call
2094		4505<4543	43-WAY TO 5-WAY	*Call
2094		4505<4544	44-WAY TO 5-WAY	*Call
2094		4505<4545	45-WAY TO 5-WAY	*Call
2094		4505<4546	46-WAY TO 5-WAY	*Call
2094		4505<4547	47-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4505<4548	48-WAY TO 5-WAY	*Call
2094		4505<4549	49-WAY TO 5-WAY	*Call
2094		4505<4550	50-WAY TO 5-WAY	*Call
2094		4505<4551	51-WAY TO 5-WAY	*Call
2094		4505<4552	52-WAY TO 5-WAY	*Call
2094		4505<4553	53-WAY TO 5-WAY	*Call
2094		4505<4554	54-WAY TO 5-WAY	*Call
2094		4505<4601	1-WAY TO 5-WAY	*Call
2094		4505<4602	2-WAY TO 5-WAY	*Call
2094		4505<4603	3-WAY TO 5-WAY	*Call
2094		4505<4604	4-WAY TO 5-WAY	*Call
2094		4505<4605	5-WAY TO 5-WAY	*Call
2094		4505<4606	6-WAY TO 5-WAY	*Call
2094		4505<4607	7-WAY TO 5-WAY	*Call
2094		4505<4608	8-WAY TO 5-WAY	*Call
2094		4505<4701	1-WAY TO 5-WAY	*Call
2094		4505<4702	2-WAY TO 5-WAY	*Call
2094		4505<4703	3-WAY TO 5-WAY	*Call
2094		4505<4704	4-WAY TO 5-WAY	*Call
2094		4505<4705	5-WAY TO 5-WAY	*Call
2094		4505<4706	6-WAY TO 5-WAY	*Call
2094		4505<4707	7-WAY TO 5-WAY	*Call
2094		4505<4708	8-WAY TO 5-WAY	*Call
2094		4505<4801	1-WAY TO 5-WAY	*Call
2094		4505<4802	2-WAY TO 5-WAY	*Call
2094		4505<4803	3-WAY TO 5-WAY	*Call
2094		4505<4804	4-WAY TO 5-WAY	*Call
2094		4505<4805	5-WAY TO 5-WAY	*Call
2094		4505<4806	6-WAY TO 5-WAY	*Call
2094		4505<4807	7-WAY TO 5-WAY	*Call
2094		4505<4808	8-WAY TO 5-WAY	*Call
2094		4506<4500	ZERO-WAY TO 6-WAY	*Call
2094		4506<4501	1-WAY TO 6-WAY	*Call
2094		4506<4502	2-WAY TO 6-WAY	*Call
2094		4506<4503	3-WAY TO 6-WAY	*Call
2094		4506<4504	4-WAY TO 6-WAY	*Call
2094		4506<4505	5-WAY TO 6-WAY	*Call
2094		4506<4507	7-WAY TO 6-WAY	*Call
2094		4506<4508	8-WAY TO 6-WAY	*Call
2094		4506<4509	9-WAY TO 6-WAY	*Call
2094		4506<4510	10-WAY TO 6-WAY	*Call
2094		4506<4511	11-WAY TO 6-WAY	*Call
2094		4506<4512	12-WAY TO 6-WAY	*Call
2094		4506<4513	13-WAY TO 6-WAY	*Call
2094		4506<4514	14-WAY TO 6-WAY	*Call
2094		4506<4515	15-WAY TO 6-WAY	*Call
2094		4506<4516	16-WAY TO 6-WAY	*Call
2094		4506<4517	17-WAY TO 6-WAY	*Call
2094		4506<4518	18-WAY TO 6-WAY	*Call
2094		4506<4519	19-WAY TO 6-WAY	*Call
2094		4506<4520	20-WAY TO 6-WAY	*Call
2094		4506<4521	21-WAY TO 6-WAY	*Call
2094		4506<4522	22-WAY TO 6-WAY	*Call
2094		4506<4523	23-WAY TO 6-WAY	*Call
2094		4506<4524	24-WAY TO 6-WAY	*Call
2094		4506<4525	25-WAY TO 6-WAY	*Call
2094		4506<4526	26-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4506<4527	27-WAY TO 6-WAY	*Call
2094		4506<4528	28-WAY TO 6-WAY	*Call
2094		4506<4529	29-WAY TO 6-WAY	*Call
2094		4506<4530	30-WAY TO 6-WAY	*Call
2094		4506<4531	31-WAY TO 6-WAY	*Call
2094		4506<4532	32-WAY TO 6-WAY	*Call
2094		4506<4533	33-WAY TO 6-WAY	*Call
2094		4506<4534	34-WAY TO 6-WAY	*Call
2094		4506<4535	35-WAY TO 6-WAY	*Call
2094		4506<4536	36-WAY TO 6-WAY	*Call
2094		4506<4537	37-WAY TO 6-WAY	*Call
2094		4506<4538	38-WAY TO 6-WAY	*Call
2094		4506<4539	39-WAY TO 6-WAY	*Call
2094		4506<4540	40-WAY TO 6-WAY	*Call
2094		4506<4541	41-WAY TO 6-WAY	*Call
2094		4506<4542	42-WAY TO 6-WAY	*Call
2094		4506<4543	43-WAY TO 6-WAY	*Call
2094		4506<4544	44-WAY TO 6-WAY	*Call
2094		4506<4545	45-WAY TO 6-WAY	*Call
2094		4506<4546	46-WAY TO 6-WAY	*Call
2094		4506<4547	47-WAY TO 6-WAY	*Call
2094		4506<4548	48-WAY TO 6-WAY	*Call
2094		4506<4549	49-WAY TO 6-WAY	*Call
2094		4506<4550	50-WAY TO 6-WAY	*Call
2094		4506<4551	51-WAY TO 6-WAY	*Call
2094		4506<4552	52-WAY TO 6-WAY	*Call
2094		4506<4553	53-WAY TO 6-WAY	*Call
2094		4506<4554	54-WAY TO 6-WAY	*Call
2094		4506<4601	1-WAY TO 6-WAY	*Call
2094		4506<4602	2-WAY TO 6-WAY	*Call
2094		4506<4603	3-WAY TO 6-WAY	*Call
2094		4506<4604	4-WAY TO 6-WAY	*Call
2094		4506<4605	5-WAY TO 6-WAY	*Call
2094		4506<4606	6-WAY TO 6-WAY	*Call
2094		4506<4607	7-WAY TO 6-WAY	*Call
2094		4506<4608	8-WAY TO 6-WAY	*Call
2094		4506<4701	1-WAY TO 6-WAY	*Call
2094		4506<4702	2-WAY TO 6-WAY	*Call
2094		4506<4703	3-WAY TO 6-WAY	*Call
2094		4506<4704	4-WAY TO 6-WAY	*Call
2094		4506<4705	5-WAY TO 6-WAY	*Call
2094		4506<4706	6-WAY TO 6-WAY	*Call
2094		4506<4707	7-WAY TO 6-WAY	*Call
2094		4506<4708	8-WAY TO 6-WAY	*Call
2094		4506<4801	1-WAY TO 6-WAY	*Call
2094		4506<4802	2-WAY TO 6-WAY	*Call
2094		4506<4803	3-WAY TO 6-WAY	*Call
2094		4506<4804	4-WAY TO 6-WAY	*Call
2094		4506<4805	5-WAY TO 6-WAY	*Call
2094		4506<4806	6-WAY TO 6-WAY	*Call
2094		4506<4807	7-WAY TO 6-WAY	*Call
2094		4506<4808	8-WAY TO 6-WAY	*Call
2094		4507<4500	ZERO-WAY TO 7-WAY	*Call
2094		4507<4501	1-WAY TO 7-WAY	*Call
2094		4507<4502	2-WAY TO 7-WAY	*Call
2094		4507<4503	3-WAY TO 7-WAY	*Call
2094		4507<4504	4-WAY TO 7-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4507<4505	5-WAY TO 7-WAY	*Call
2094			4507<4506	6-WAY TO 7-WAY	*Call
2094			4507<4508	8-WAY TO 7-WAY	*Call
2094			4507<4509	9-WAY TO 7-WAY	*Call
2094			4507<4510	10-WAY TO 7-WAY	*Call
2094			4507<4511	11-WAY TO 7-WAY	*Call
2094			4507<4512	12-WAY TO 7-WAY	*Call
2094			4507<4513	13-WAY TO 7-WAY	*Call
2094			4507<4514	14-WAY TO 7-WAY	*Call
2094			4507<4515	15-WAY TO 7-WAY	*Call
2094			4507<4516	16-WAY TO 7-WAY	*Call
2094			4507<4517	17-WAY TO 7-WAY	*Call
2094			4507<4518	18-WAY TO 7-WAY	*Call
2094			4507<4519	19-WAY TO 7-WAY	*Call
2094			4507<4520	20-WAY TO 7-WAY	*Call
2094			4507<4521	21-WAY TO 7-WAY	*Call
2094			4507<4522	22-WAY TO 7-WAY	*Call
2094			4507<4523	23-WAY TO 7-WAY	*Call
2094			4507<4524	24-WAY TO 7-WAY	*Call
2094			4507<4525	25-WAY TO 7-WAY	*Call
2094			4507<4526	26-WAY TO 7-WAY	*Call
2094			4507<4527	27-WAY TO 7-WAY	*Call
2094			4507<4528	28-WAY TO 7-WAY	*Call
2094			4507<4529	29-WAY TO 7-WAY	*Call
2094			4507<4530	30-WAY TO 7-WAY	*Call
2094			4507<4531	31-WAY TO 7-WAY	*Call
2094			4507<4532	32-WAY TO 7-WAY	*Call
2094			4507<4533	33-WAY TO 7-WAY	*Call
2094			4507<4534	34-WAY TO 7-WAY	*Call
2094			4507<4535	35-WAY TO 7-WAY	*Call
2094			4507<4536	36-WAY TO 7-WAY	*Call
2094			4507<4537	37-WAY TO 7-WAY	*Call
2094			4507<4538	38-WAY TO 7-WAY	*Call
2094			4507<4539	39-WAY TO 7-WAY	*Call
2094			4507<4540	40-WAY TO 7-WAY	*Call
2094			4507<4541	41-WAY TO 7-WAY	*Call
2094			4507<4542	42-WAY TO 7-WAY	*Call
2094			4507<4543	43-WAY TO 7-WAY	*Call
2094			4507<4544	44-WAY TO 7-WAY	*Call
2094			4507<4545	45-WAY TO 7-WAY	*Call
2094			4507<4546	46-WAY TO 7-WAY	*Call
2094			4507<4547	47-WAY TO 7-WAY	*Call
2094			4507<4548	48-WAY TO 7-WAY	*Call
2094			4507<4549	49-WAY TO 7-WAY	*Call
2094			4507<4550	50-WAY TO 7-WAY	*Call
2094			4507<4551	51-WAY TO 7-WAY	*Call
2094			4507<4552	52-WAY TO 7-WAY	*Call
2094			4507<4553	53-WAY TO 7-WAY	*Call
2094			4507<4554	54-WAY TO 7-WAY	*Call
2094			4507<4601	1-WAY TO 7-WAY	*Call
2094			4507<4602	2-WAY TO 7-WAY	*Call
2094			4507<4603	3-WAY TO 7-WAY	*Call
2094			4507<4604	4-WAY TO 7-WAY	*Call
2094			4507<4605	5-WAY TO 7-WAY	*Call
2094			4507<4606	6-WAY TO 7-WAY	*Call
2094			4507<4607	7-WAY TO 7-WAY	*Call
2094			4507<4608	8-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4507<4701	1-WAY TO 7-WAY	*Call
2094		4507<4702	2-WAY TO 7-WAY	*Call
2094		4507<4703	3-WAY TO 7-WAY	*Call
2094		4507<4704	4-WAY TO 7-WAY	*Call
2094		4507<4705	5-WAY TO 7-WAY	*Call
2094		4507<4706	6-WAY TO 7-WAY	*Call
2094		4507<4707	7-WAY TO 7-WAY	*Call
2094		4507<4708	8-WAY TO 7-WAY	*Call
2094		4507<4801	1-WAY TO 7-WAY	*Call
2094		4507<4802	2-WAY TO 7-WAY	*Call
2094		4507<4803	3-WAY TO 7-WAY	*Call
2094		4507<4804	4-WAY TO 7-WAY	*Call
2094		4507<4805	5-WAY TO 7-WAY	*Call
2094		4507<4806	6-WAY TO 7-WAY	*Call
2094		4507<4807	7-WAY TO 7-WAY	*Call
2094		4507<4808	8-WAY TO 7-WAY	*Call
2094		4508<4500	ZERO-WAY TO 8-WAY	*Call
2094		4508<4501	1-WAY TO 8-WAY	*Call
2094		4508<4502	2-WAY TO 8-WAY	*Call
2094		4508<4503	3-WAY TO 8-WAY	*Call
2094		4508<4504	4-WAY TO 8-WAY	*Call
2094		4508<4505	5-WAY TO 8-WAY	*Call
2094		4508<4506	6-WAY TO 8-WAY	*Call
2094		4508<4507	7-WAY TO 8-WAY	*Call
2094		4508<4509	9-WAY TO 8-WAY	*Call
2094		4508<4510	10-WAY TO 8-WAY	*Call
2094		4508<4511	11-WAY TO 8-WAY	*Call
2094		4508<4512	12-WAY TO 8-WAY	*Call
2094		4508<4513	13-WAY TO 8-WAY	*Call
2094		4508<4514	14-WAY TO 8-WAY	*Call
2094		4508<4515	15-WAY TO 8-WAY	*Call
2094		4508<4516	16-WAY TO 8-WAY	*Call
2094		4508<4517	17-WAY TO 8-WAY	*Call
2094		4508<4518	18-WAY TO 8-WAY	*Call
2094		4508<4519	19-WAY TO 8-WAY	*Call
2094		4508<4520	20-WAY TO 8-WAY	*Call
2094		4508<4521	21-WAY TO 8-WAY	*Call
2094		4508<4522	22-WAY TO 8-WAY	*Call
2094		4508<4523	23-WAY TO 8-WAY	*Call
2094		4508<4524	24-WAY TO 8-WAY	*Call
2094		4508<4525	25-WAY TO 8-WAY	*Call
2094		4508<4526	26-WAY TO 8-WAY	*Call
2094		4508<4527	27-WAY TO 8-WAY	*Call
2094		4508<4528	28-WAY TO 8-WAY	*Call
2094		4508<4529	29-WAY TO 8-WAY	*Call
2094		4508<4530	30-WAY TO 8-WAY	*Call
2094		4508<4531	31-WAY TO 8-WAY	*Call
2094		4508<4532	32-WAY TO 8-WAY	*Call
2094		4508<4533	33-WAY TO 8-WAY	*Call
2094		4508<4534	34-WAY TO 8-WAY	*Call
2094		4508<4535	35-WAY TO 8-WAY	*Call
2094		4508<4536	36-WAY TO 8-WAY	*Call
2094		4508<4537	37-WAY TO 8-WAY	*Call
2094		4508<4538	38-WAY TO 8-WAY	*Call
2094		4508<4539	39-WAY TO 8-WAY	*Call
2094		4508<4540	40-WAY TO 8-WAY	*Call
2094		4508<4541	41-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4508<4542	42-WAY TO 8-WAY	*Call
2094		4508<4543	43-WAY TO 8-WAY	*Call
2094		4508<4544	44-WAY TO 8-WAY	*Call
2094		4508<4545	45-WAY TO 8-WAY	*Call
2094		4508<4546	46-WAY TO 8-WAY	*Call
2094		4508<4547	47-WAY TO 8-WAY	*Call
2094		4508<4548	48-WAY TO 8-WAY	*Call
2094		4508<4549	49-WAY TO 8-WAY	*Call
2094		4508<4550	50-WAY TO 8-WAY	*Call
2094		4508<4551	51-WAY TO 8-WAY	*Call
2094		4508<4552	52-WAY TO 8-WAY	*Call
2094		4508<4553	53-WAY TO 8-WAY	*Call
2094		4508<4554	54-WAY TO 8-WAY	*Call
2094		4508<4601	1-WAY TO 8-WAY	*Call
2094		4508<4602	2-WAY TO 8-WAY	*Call
2094		4508<4603	3-WAY TO 8-WAY	*Call
2094		4508<4604	4-WAY TO 8-WAY	*Call
2094		4508<4605	5-WAY TO 8-WAY	*Call
2094		4508<4606	6-WAY TO 8-WAY	*Call
2094		4508<4607	7-WAY TO 8-WAY	*Call
2094		4508<4608	8-WAY TO 8-WAY	*Call
2094		4508<4701	1-WAY TO 8-WAY	*Call
2094		4508<4702	2-WAY TO 8-WAY	*Call
2094		4508<4703	3-WAY TO 8-WAY	*Call
2094		4508<4704	4-WAY TO 8-WAY	*Call
2094		4508<4705	5-WAY TO 8-WAY	*Call
2094		4508<4706	6-WAY TO 8-WAY	*Call
2094		4508<4707	7-WAY TO 8-WAY	*Call
2094		4508<4708	8-WAY TO 8-WAY	*Call
2094		4508<4801	1-WAY TO 8-WAY	*Call
2094		4508<4802	2-WAY TO 8-WAY	*Call
2094		4508<4803	3-WAY TO 8-WAY	*Call
2094		4508<4804	4-WAY TO 8-WAY	*Call
2094		4508<4805	5-WAY TO 8-WAY	*Call
2094		4508<4806	6-WAY TO 8-WAY	*Call
2094		4508<4807	7-WAY TO 8-WAY	*Call
2094		4508<4808	8-WAY TO 8-WAY	*Call
2094		4509<4500	ZERO-WAY TO 9-WAY	*Call
2094		4509<4501	1-WAY TO 9-WAY	*Call
2094		4509<4502	2-WAY TO 9-WAY	*Call
2094		4509<4503	3-WAY TO 9-WAY	*Call
2094		4509<4504	4-WAY TO 9-WAY	*Call
2094		4509<4505	5-WAY TO 9-WAY	*Call
2094		4509<4506	6-WAY TO 9-WAY	*Call
2094		4509<4507	7-WAY TO 9-WAY	*Call
2094		4509<4508	8-WAY TO 9-WAY	*Call
2094		4509<4510	10-WAY TO 9-WAY	*Call
2094		4509<4511	11-WAY TO 9-WAY	*Call
2094		4509<4512	12-WAY TO 9-WAY	*Call
2094		4509<4513	13-WAY TO 9-WAY	*Call
2094		4509<4514	14-WAY TO 9-WAY	*Call
2094		4509<4515	15-WAY TO 9-WAY	*Call
2094		4509<4516	16-WAY TO 9-WAY	*Call
2094		4509<4517	17-WAY TO 9-WAY	*Call
2094		4509<4518	18-WAY TO 9-WAY	*Call
2094		4509<4519	19-WAY TO 9-WAY	*Call
2094		4509<4520	20-WAY TO 9-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4509<4521	21-WAY TO 9-WAY	*Call
2094		4509<4522	22-WAY TO 9-WAY	*Call
2094		4509<4523	23-WAY TO 9-WAY	*Call
2094		4509<4524	24-WAY TO 9-WAY	*Call
2094		4509<4525	25-WAY TO 9-WAY	*Call
2094		4509<4526	26-WAY TO 9-WAY	*Call
2094		4509<4527	27-WAY TO 9-WAY	*Call
2094		4509<4528	28-WAY TO 9-WAY	*Call
2094		4509<4529	29-WAY TO 9-WAY	*Call
2094		4509<4530	30-WAY TO 9-WAY	*Call
2094		4509<4531	31-WAY TO 9-WAY	*Call
2094		4509<4532	32-WAY TO 9-WAY	*Call
2094		4509<4533	33-WAY TO 9-WAY	*Call
2094		4509<4534	34-WAY TO 9-WAY	*Call
2094		4509<4535	35-WAY TO 9-WAY	*Call
2094		4509<4536	36-WAY TO 9-WAY	*Call
2094		4509<4537	37-WAY TO 9-WAY	*Call
2094		4509<4538	38-WAY TO 9-WAY	*Call
2094		4509<4539	39-WAY TO 9-WAY	*Call
2094		4509<4540	40-WAY TO 9-WAY	*Call
2094		4509<4541	41-WAY TO 9-WAY	*Call
2094		4509<4542	42-WAY TO 9-WAY	*Call
2094		4509<4543	43-WAY TO 9-WAY	*Call
2094		4509<4544	44-WAY TO 9-WAY	*Call
2094		4509<4545	45-WAY TO 9-WAY	*Call
2094		4509<4546	46-WAY TO 9-WAY	*Call
2094		4509<4547	47-WAY TO 9-WAY	*Call
2094		4509<4548	48-WAY TO 9-WAY	*Call
2094		4509<4549	49-WAY TO 9-WAY	*Call
2094		4509<4550	50-WAY TO 9-WAY	*Call
2094		4509<4551	51-WAY TO 9-WAY	*Call
2094		4509<4552	52-WAY TO 9-WAY	*Call
2094		4509<4553	53-WAY TO 9-WAY	*Call
2094		4509<4554	54-WAY TO 9-WAY	*Call
2094		4509<4601	1-WAY TO 9-WAY	*Call
2094		4509<4602	2-WAY TO 9-WAY	*Call
2094		4509<4603	3-WAY TO 9-WAY	*Call
2094		4509<4604	4-WAY TO 9-WAY	*Call
2094		4509<4605	5-WAY TO 9-WAY	*Call
2094		4509<4606	6-WAY TO 9-WAY	*Call
2094		4509<4607	7-WAY TO 9-WAY	*Call
2094		4509<4608	8-WAY TO 9-WAY	*Call
2094		4509<4701	1-WAY TO 9-WAY	*Call
2094		4509<4702	2-WAY TO 9-WAY	*Call
2094		4509<4703	3-WAY TO 9-WAY	*Call
2094		4509<4704	4-WAY TO 9-WAY	*Call
2094		4509<4705	5-WAY TO 9-WAY	*Call
2094		4509<4706	6-WAY TO 9-WAY	*Call
2094		4509<4707	7-WAY TO 9-WAY	*Call
2094		4509<4708	8-WAY TO 9-WAY	*Call
2094		4509<4801	1-WAY TO 9-WAY	*Call
2094		4509<4802	2-WAY TO 9-WAY	*Call
2094		4509<4803	3-WAY TO 9-WAY	*Call
2094		4509<4804	4-WAY TO 9-WAY	*Call
2094		4509<4805	5-WAY TO 9-WAY	*Call
2094		4509<4806	6-WAY TO 9-WAY	*Call
2094		4509<4807	7-WAY TO 9-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4509<4808	8-WAY TO 9-WAY	*Call
2094		4510<4500	ZERO-WAY TO 10-WAY	*Call
2094		4510<4501	1-WAY TO 10-WAY	*Call
2094		4510<4502	2-WAY TO 10-WAY	*Call
2094		4510<4503	3-WAY TO 10-WAY	*Call
2094		4510<4504	4-WAY TO 10-WAY	*Call
2094		4510<4505	5-WAY TO 10-WAY	*Call
2094		4510<4506	6-WAY TO 10-WAY	*Call
2094		4510<4507	7-WAY TO 10-WAY	*Call
2094		4510<4508	8-WAY TO 10-WAY	*Call
2094		4510<4509	9-WAY TO 10-WAY	*Call
2094		4510<4511	11-WAY TO 10-WAY	*Call
2094		4510<4512	12-WAY TO 10-WAY	*Call
2094		4510<4513	13-WAY TO 10-WAY	*Call
2094		4510<4514	14-WAY TO 10-WAY	*Call
2094		4510<4515	15-WAY TO 10-WAY	*Call
2094		4510<4516	16-WAY TO 10-WAY	*Call
2094		4510<4517	17-WAY TO 10-WAY	*Call
2094		4510<4518	18-WAY TO 10-WAY	*Call
2094		4510<4519	19-WAY TO 10-WAY	*Call
2094		4510<4520	20-WAY TO 10-WAY	*Call
2094		4510<4521	21-WAY TO 10-WAY	*Call
2094		4510<4522	22-WAY TO 10-WAY	*Call
2094		4510<4523	23-WAY TO 10-WAY	*Call
2094		4510<4524	24-WAY TO 10-WAY	*Call
2094		4510<4525	25-WAY TO 10-WAY	*Call
2094		4510<4526	26-WAY TO 10-WAY	*Call
2094		4510<4527	27-WAY TO 10-WAY	*Call
2094		4510<4528	28-WAY TO 10-WAY	*Call
2094		4510<4529	29-WAY TO 10-WAY	*Call
2094		4510<4530	30-WAY TO 10-WAY	*Call
2094		4510<4531	31-WAY TO 10-WAY	*Call
2094		4510<4532	32-WAY TO 10-WAY	*Call
2094		4510<4533	33-WAY TO 10-WAY	*Call
2094		4510<4534	34-WAY TO 10-WAY	*Call
2094		4510<4535	35-WAY TO 10-WAY	*Call
2094		4510<4536	36-WAY TO 10-WAY	*Call
2094		4510<4537	37-WAY TO 10-WAY	*Call
2094		4510<4538	38-WAY TO 10-WAY	*Call
2094		4510<4539	39-WAY TO 10-WAY	*Call
2094		4510<4540	40-WAY TO 10-WAY	*Call
2094		4510<4541	41-WAY TO 10-WAY	*Call
2094		4510<4542	42-WAY TO 10-WAY	*Call
2094		4510<4543	43-WAY TO 10-WAY	*Call
2094		4510<4544	44-WAY TO 10-WAY	*Call
2094		4510<4545	45-WAY TO 10-WAY	*Call
2094		4510<4546	46-WAY TO 10-WAY	*Call
2094		4510<4547	47-WAY TO 10-WAY	*Call
2094		4510<4548	48-WAY TO 10-WAY	*Call
2094		4510<4549	49-WAY TO 10-WAY	*Call
2094		4510<4550	50-WAY TO 10-WAY	*Call
2094		4510<4551	51-WAY TO 10-WAY	*Call
2094		4510<4552	52-WAY TO 10-WAY	*Call
2094		4510<4553	53-WAY TO 10-WAY	*Call
2094		4510<4554	54-WAY TO 10-WAY	*Call
2094		4510<4601	1-WAY TO 10-WAY	*Call
2094		4510<4602	2-WAY TO 10-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4510<4603	3-WAY TO 10-WAY	*Call
2094		4510<4604	4-WAY TO 10-WAY	*Call
2094		4510<4605	5-WAY TO 10-WAY	*Call
2094		4510<4606	6-WAY TO 10-WAY	*Call
2094		4510<4607	7-WAY TO 10-WAY	*Call
2094		4510<4608	8-WAY TO 10-WAY	*Call
2094		4510<4701	1-WAY TO 10-WAY	*Call
2094		4510<4702	2-WAY TO 10-WAY	*Call
2094		4510<4703	3-WAY TO 10-WAY	*Call
2094		4510<4704	4-WAY TO 10-WAY	*Call
2094		4510<4705	5-WAY TO 10-WAY	*Call
2094		4510<4706	6-WAY TO 10-WAY	*Call
2094		4510<4707	7-WAY TO 10-WAY	*Call
2094		4510<4708	8-WAY TO 10-WAY	*Call
2094		4510<4801	1-WAY TO 10-WAY	*Call
2094		4510<4802	2-WAY TO 10-WAY	*Call
2094		4510<4803	3-WAY TO 10-WAY	*Call
2094		4510<4804	4-WAY TO 10-WAY	*Call
2094		4510<4805	5-WAY TO 10-WAY	*Call
2094		4510<4806	6-WAY TO 10-WAY	*Call
2094		4510<4807	7-WAY TO 10-WAY	*Call
2094		4510<4808	8-WAY TO 10-WAY	*Call
2094		4511<4500	ZERO-WAY TO 11-WAY	*Call
2094		4511<4501	1-WAY TO 11-WAY	*Call
2094		4511<4502	2-WAY TO 11-WAY	*Call
2094		4511<4503	3-WAY TO 11-WAY	*Call
2094		4511<4504	4-WAY TO 11-WAY	*Call
2094		4511<4505	5-WAY TO 11-WAY	*Call
2094		4511<4506	6-WAY TO 11-WAY	*Call
2094		4511<4507	7-WAY TO 11-WAY	*Call
2094		4511<4508	8-WAY TO 11-WAY	*Call
2094		4511<4509	9-WAY TO 11-WAY	*Call
2094		4511<4510	10-WAY TO 11-WAY	*Call
2094		4511<4512	12-WAY TO 11-WAY	*Call
2094		4511<4513	13-WAY TO 11-WAY	*Call
2094		4511<4514	14-WAY TO 11-WAY	*Call
2094		4511<4515	15-WAY TO 11-WAY	*Call
2094		4511<4516	16-WAY TO 11-WAY	*Call
2094		4511<4517	17-WAY TO 11-WAY	*Call
2094		4511<4518	18-WAY TO 11-WAY	*Call
2094		4511<4519	19-WAY TO 11-WAY	*Call
2094		4511<4520	20-WAY TO 11-WAY	*Call
2094		4511<4521	21-WAY TO 11-WAY	*Call
2094		4511<4522	22-WAY TO 11-WAY	*Call
2094		4511<4523	23-WAY TO 11-WAY	*Call
2094		4511<4524	24-WAY TO 11-WAY	*Call
2094		4511<4525	25-WAY TO 11-WAY	*Call
2094		4511<4526	26-WAY TO 11-WAY	*Call
2094		4511<4527	27-WAY TO 11-WAY	*Call
2094		4511<4528	28-WAY TO 11-WAY	*Call
2094		4511<4529	29-WAY TO 11-WAY	*Call
2094		4511<4530	30-WAY TO 11-WAY	*Call
2094		4511<4531	31-WAY TO 11-WAY	*Call
2094		4511<4532	32-WAY TO 11-WAY	*Call
2094		4511<4533	33-WAY TO 11-WAY	*Call
2094		4511<4534	34-WAY TO 11-WAY	*Call
2094		4511<4535	35-WAY TO 11-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4511<4536	36-WAY TO 11-WAY	*Call
2094		4511<4537	37-WAY TO 11-WAY	*Call
2094		4511<4538	38-WAY TO 11-WAY	*Call
2094		4511<4539	39-WAY TO 11-WAY	*Call
2094		4511<4540	40-WAY TO 11-WAY	*Call
2094		4511<4541	41-WAY TO 11-WAY	*Call
2094		4511<4542	42-WAY TO 11-WAY	*Call
2094		4511<4543	43-WAY TO 11-WAY	*Call
2094		4511<4544	44-WAY TO 11-WAY	*Call
2094		4511<4545	45-WAY TO 11-WAY	*Call
2094		4511<4546	46-WAY TO 11-WAY	*Call
2094		4511<4547	47-WAY TO 11-WAY	*Call
2094		4511<4548	48-WAY TO 11-WAY	*Call
2094		4511<4549	49-WAY TO 11-WAY	*Call
2094		4511<4550	50-WAY TO 11-WAY	*Call
2094		4511<4551	51-WAY TO 11-WAY	*Call
2094		4511<4552	52-WAY TO 11-WAY	*Call
2094		4511<4553	53-WAY TO 11-WAY	*Call
2094		4511<4554	54-WAY TO 11-WAY	*Call
2094		4511<4601	1-WAY TO 11-WAY	*Call
2094		4511<4602	2-WAY TO 11-WAY	*Call
2094		4511<4603	3-WAY TO 11-WAY	*Call
2094		4511<4604	4-WAY TO 11-WAY	*Call
2094		4511<4605	5-WAY TO 11-WAY	*Call
2094		4511<4606	6-WAY TO 11-WAY	*Call
2094		4511<4607	7-WAY TO 11-WAY	*Call
2094		4511<4608	8-WAY TO 11-WAY	*Call
2094		4511<4701	1-WAY TO 11-WAY	*Call
2094		4511<4702	2-WAY TO 11-WAY	*Call
2094		4511<4703	3-WAY TO 11-WAY	*Call
2094		4511<4704	4-WAY TO 11-WAY	*Call
2094		4511<4705	5-WAY TO 11-WAY	*Call
2094		4511<4706	6-WAY TO 11-WAY	*Call
2094		4511<4707	7-WAY TO 11-WAY	*Call
2094		4511<4708	8-WAY TO 11-WAY	*Call
2094		4511<4801	1-WAY TO 11-WAY	*Call
2094		4511<4802	2-WAY TO 11-WAY	*Call
2094		4511<4803	3-WAY TO 11-WAY	*Call
2094		4511<4804	4-WAY TO 11-WAY	*Call
2094		4511<4805	5-WAY TO 11-WAY	*Call
2094		4511<4806	6-WAY TO 11-WAY	*Call
2094		4511<4807	7-WAY TO 11-WAY	*Call
2094		4511<4808	8-WAY TO 11-WAY	*Call
2094		4512<4500	ZERO-WAY TO 12-WAY	*Call
2094		4512<4501	1-WAY TO 12-WAY	*Call
2094		4512<4502	2-WAY TO 12-WAY	*Call
2094		4512<4503	3-WAY TO 12-WAY	*Call
2094		4512<4504	4-WAY TO 12-WAY	*Call
2094		4512<4505	5-WAY TO 12-WAY	*Call
2094		4512<4506	6-WAY TO 12-WAY	*Call
2094		4512<4507	7-WAY TO 12-WAY	*Call
2094		4512<4508	8-WAY TO 12-WAY	*Call
2094		4512<4509	9-WAY TO 12-WAY	*Call
2094		4512<4510	10-WAY TO 12-WAY	*Call
2094		4512<4511	11-WAY TO 12-WAY	*Call
2094		4512<4513	13-WAY TO 12-WAY	*Call
2094		4512<4514	14-WAY TO 12-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4512<4515	15-WAY TO 12-WAY	*Call
2094		4512<4516	16-WAY TO 16-WAY	*Call
2094		4512<4517	17-WAY TO 12-WAY	*Call
2094		4512<4518	18-WAY TO 18-WAY	*Call
2094		4512<4519	19-WAY TO 12-WAY	*Call
2094		4512<4520	20-WAY TO 20-WAY	*Call
2094		4512<4521	21-WAY TO 21-WAY	*Call
2094		4512<4522	22-WAY TO 22-WAY	*Call
2094		4512<4523	23-WAY TO 23-WAY	*Call
2094		4512<4524	24-WAY TO 12-WAY	*Call
2094		4512<4525	25-WAY TO 12-WAY	*Call
2094		4512<4526	26-WAY TO 12-WAY	*Call
2094		4512<4527	27-WAY TO 12-WAY	*Call
2094		4512<4528	28-WAY TO 12-WAY	*Call
2094		4512<4529	29-WAY TO 12-WAY	*Call
2094		4512<4530	30-WAY TO 12-WAY	*Call
2094		4512<4531	31-WAY TO 12-WAY	*Call
2094		4512<4532	32-WAY TO 12-WAY	*Call
2094		4512<4533	33-WAY TO 12-WAY	*Call
2094		4512<4534	34-WAY TO 12-WAY	*Call
2094		4512<4535	35-WAY TO 12-WAY	*Call
2094		4512<4536	36-WAY TO 12-WAY	*Call
2094		4512<4537	37-WAY TO 12-WAY	*Call
2094		4512<4538	38-WAY TO 12-WAY	*Call
2094		4512<4539	39-WAY TO 12-WAY	*Call
2094		4512<4540	40-WAY TO 12-WAY	*Call
2094		4512<4541	41-WAY TO 12-WAY	*Call
2094		4512<4542	42-WAY TO 12-WAY	*Call
2094		4512<4543	43-WAY TO 12-WAY	*Call
2094		4512<4544	44-WAY TO 12-WAY	*Call
2094		4512<4545	45-WAY TO 12-WAY	*Call
2094		4512<4546	46-WAY TO 12-WAY	*Call
2094		4512<4547	47-WAY TO 12-WAY	*Call
2094		4512<4548	48-WAY TO 12-WAY	*Call
2094		4512<4549	49-WAY TO 12-WAY	*Call
2094		4512<4550	50-WAY TO 12-WAY	*Call
2094		4512<4551	51-WAY TO 12-WAY	*Call
2094		4512<4552	52-WAY TO 12-WAY	*Call
2094		4512<4553	53-WAY TO 12-WAY	*Call
2094		4512<4554	54-WAY TO 12-WAY	*Call
2094		4512<4601	1-WAY TO 12-WAY	*Call
2094		4512<4602	2-WAY TO 12-WAY	*Call
2094		4512<4603	3-WAY TO 12-WAY	*Call
2094		4512<4604	4-WAY TO 12-WAY	*Call
2094		4512<4605	5-WAY TO 12-WAY	*Call
2094		4512<4606	6-WAY TO 12-WAY	*Call
2094		4512<4607	7-WAY TO 12-WAY	*Call
2094		4512<4608	8-WAY TO 12-WAY	*Call
2094		4512<4701	1-WAY TO 12-WAY	*Call
2094		4512<4702	2-WAY TO 12-WAY	*Call
2094		4512<4703	3-WAY TO 12-WAY	*Call
2094		4512<4704	4-WAY TO 12-WAY	*Call
2094		4512<4705	5-WAY TO 12-WAY	*Call
2094		4512<4706	6-WAY TO 12-WAY	*Call
2094		4512<4707	7-WAY TO 12-WAY	*Call
2094		4512<4708	8-WAY TO 12-WAY	*Call
2094		4512<4801	1-WAY TO 12-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4512<4802	2-WAY TO 12-WAY	*Call
2094			4512<4803	3-WAY TO 12-WAY	*Call
2094			4512<4804	4-WAY TO 12-WAY	*Call
2094			4512<4805	5-WAY TO 12-WAY	*Call
2094			4512<4806	6-WAY TO 12-WAY	*Call
2094			4512<4807	7-WAY TO 12-WAY	*Call
2094			4512<4808	8-WAY TO 12-WAY	*Call
2094			4513<4500	ZERO-WAY TO 13-WAY	*Call
2094			4513<4501	1-WAY TO 13-WAY	*Call
2094			4513<4502	2-WAY TO 13-WAY	*Call
2094			4513<4503	3-WAY TO 13-WAY	*Call
2094			4513<4504	4-WAY TO 13-WAY	*Call
2094			4513<4505	5-WAY TO 13-WAY	*Call
2094			4513<4506	6-WAY TO 13-WAY	*Call
2094			4513<4507	7-WAY TO 13-WAY	*Call
2094			4513<4508	8-WAY TO 13-WAY	*Call
2094			4513<4509	9-WAY TO 13-WAY	*Call
2094			4513<4510	10-WAY TO 13-WAY	*Call
2094			4513<4511	11-WAY TO 13-WAY	*Call
2094			4513<4512	12-WAY TO 13-WAY	*Call
2094			4513<4514	14-WAY TO 13-WAY	*Call
2094			4513<4515	15-WAY TO 13-WAY	*Call
2094			4513<4516	16-WAY TO 13-WAY	*Call
2094			4513<4517	17-WAY TO 13-WAY	*Call
2094			4513<4518	18-WAY TO 13-WAY	*Call
2094			4513<4519	19-WAY TO 13-WAY	*Call
2094			4513<4520	20-WAY TO 13-WAY	*Call
2094			4513<4521	21-WAY TO 13-WAY	*Call
2094			4513<4522	22-WAY TO 13-WAY	*Call
2094			4513<4523	23-WAY TO 13-WAY	*Call
2094			4513<4524	24-WAY TO 13-WAY	*Call
2094			4513<4525	25-WAY TO 13-WAY	*Call
2094			4513<4526	26-WAY TO 13-WAY	*Call
2094			4513<4527	27-WAY TO 13-WAY	*Call
2094			4513<4528	28-WAY TO 13-WAY	*Call
2094			4513<4529	29-WAY TO 13-WAY	*Call
2094			4513<4530	30-WAY TO 13-WAY	*Call
2094			4513<4531	31-WAY TO 13-WAY	*Call
2094			4513<4532	32-WAY TO 13-WAY	*Call
2094			4513<4533	33-WAY TO 13-WAY	*Call
2094			4513<4534	34-WAY TO 13-WAY	*Call
2094			4513<4535	35-WAY TO 13-WAY	*Call
2094			4513<4536	36-WAY TO 13-WAY	*Call
2094			4513<4537	37-WAY TO 13-WAY	*Call
2094			4513<4538	38-WAY TO 13-WAY	*Call
2094			4513<4539	39-WAY TO 13-WAY	*Call
2094			4513<4540	40-WAY TO 13-WAY	*Call
2094			4513<4541	41-WAY TO 13-WAY	*Call
2094			4513<4542	42-WAY TO 13-WAY	*Call
2094			4513<4543	43-WAY TO 13-WAY	*Call
2094			4513<4544	44-WAY TO 13-WAY	*Call
2094			4513<4545	45-WAY TO 13-WAY	*Call
2094			4513<4546	46-WAY TO 13-WAY	*Call
2094			4513<4547	47-WAY TO 13-WAY	*Call
2094			4513<4548	48-WAY TO 13-WAY	*Call
2094			4513<4549	49-WAY TO 13-WAY	*Call
2094			4513<4550	50-WAY TO 13-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4513<4551	51-WAY TO 13-WAY	*Call
2094		4513<4552	52-WAY TO 13-WAY	*Call
2094		4513<4553	53-WAY TO 13-WAY	*Call
2094		4513<4554	54-WAY TO 13-WAY	*Call
2094		4513<4601	1-WAY TO 13-WAY	*Call
2094		4513<4602	2-WAY TO 13-WAY	*Call
2094		4513<4603	3-WAY TO 13-WAY	*Call
2094		4513<4604	4-WAY TO 13-WAY	*Call
2094		4513<4605	5-WAY TO 13-WAY	*Call
2094		4513<4606	6-WAY TO 13-WAY	*Call
2094		4513<4607	7-WAY TO 13-WAY	*Call
2094		4513<4608	8-WAY TO 13-WAY	*Call
2094		4513<4701	1-WAY TO 13-WAY	*Call
2094		4513<4702	2-WAY TO 13-WAY	*Call
2094		4513<4703	3-WAY TO 13-WAY	*Call
2094		4513<4704	4-WAY TO 13-WAY	*Call
2094		4513<4705	5-WAY TO 13-WAY	*Call
2094		4513<4706	6-WAY TO 13-WAY	*Call
2094		4513<4707	7-WAY TO 13-WAY	*Call
2094		4513<4708	8-WAY TO 13-WAY	*Call
2094		4513<4801	1-WAY TO 13-WAY	*Call
2094		4513<4802	2-WAY TO 13-WAY	*Call
2094		4513<4803	3-WAY TO 13-WAY	*Call
2094		4513<4804	4-WAY TO 13-WAY	*Call
2094		4513<4805	5-WAY TO 13-WAY	*Call
2094		4513<4806	6-WAY TO 13-WAY	*Call
2094		4513<4807	7-WAY TO 13-WAY	*Call
2094		4513<4808	8-WAY TO 13-WAY	*Call
2094		4514<4500	ZERO-WAY TO 14-WAY	*Call
2094		4514<4501	1-WAY TO 14-WAY	*Call
2094		4514<4502	2-WAY TO 14-WAY	*Call
2094		4514<4503	3-WAY TO 14-WAY	*Call
2094		4514<4504	4-WAY TO 14-WAY	*Call
2094		4514<4505	5-WAY TO 14-WAY	*Call
2094		4514<4506	6-WAY TO 14-WAY	*Call
2094		4514<4507	7-WAY TO 14-WAY	*Call
2094		4514<4508	8-WAY TO 14-WAY	*Call
2094		4514<4509	9-WAY TO 14-WAY	*Call
2094		4514<4510	10-WAY TO 14-WAY	*Call
2094		4514<4511	11-WAY TO 14-WAY	*Call
2094		4514<4512	12-WAY TO 14-WAY	*Call
2094		4514<4513	13-WAY TO 14-WAY	*Call
2094		4514<4515	15-WAY TO 14-WAY	*Call
2094		4514<4516	16-WAY TO 14-WAY	*Call
2094		4514<4517	17-WAY TO 14-WAY	*Call
2094		4514<4518	18-WAY TO 14-WAY	*Call
2094		4514<4519	19-WAY TO 14-WAY	*Call
2094		4514<4520	20-WAY TO 14-WAY	*Call
2094		4514<4521	21-WAY TO 14-WAY	*Call
2094		4514<4522	22-WAY TO 14-WAY	*Call
2094		4514<4523	23-WAY TO 14-WAY	*Call
2094		4514<4524	24-WAY TO 14-WAY	*Call
2094		4514<4525	25-WAY TO 14-WAY	*Call
2094		4514<4526	26-WAY TO 14-WAY	*Call
2094		4514<4527	27-WAY TO 14-WAY	*Call
2094		4514<4528	28-WAY TO 14-WAY	*Call
2094		4514<4529	29-WAY TO 14-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4514<4530	30-WAY TO 14-WAY	*Call
2094		4514<4531	31-WAY TO 14-WAY	*Call
2094		4514<4532	32-WAY TO 14-WAY	*Call
2094		4514<4533	33-WAY TO 14-WAY	*Call
2094		4514<4534	34-WAY TO 14-WAY	*Call
2094		4514<4535	35-WAY TO 14-WAY	*Call
2094		4514<4536	36-WAY TO 14-WAY	*Call
2094		4514<4537	37-WAY TO 14-WAY	*Call
2094		4514<4538	38-WAY TO 14-WAY	*Call
2094		4514<4539	39-WAY TO 14-WAY	*Call
2094		4514<4540	40-WAY TO 14-WAY	*Call
2094		4514<4541	41-WAY TO 14-WAY	*Call
2094		4514<4542	42-WAY TO 14-WAY	*Call
2094		4514<4543	43-WAY TO 14-WAY	*Call
2094		4514<4544	44-WAY TO 14-WAY	*Call
2094		4514<4545	45-WAY TO 14-WAY	*Call
2094		4514<4546	46-WAY TO 14-WAY	*Call
2094		4514<4547	47-WAY TO 14-WAY	*Call
2094		4514<4548	48-WAY TO 14-WAY	*Call
2094		4514<4549	49-WAY TO 14-WAY	*Call
2094		4514<4550	50-WAY TO 14-WAY	*Call
2094		4514<4551	51-WAY TO 14-WAY	*Call
2094		4514<4552	52-WAY TO 14-WAY	*Call
2094		4514<4553	53-WAY TO 14-WAY	*Call
2094		4514<4554	54-WAY TO 14-WAY	*Call
2094		4514<4601	1-WAY TO 14-WAY	*Call
2094		4514<4602	2-WAY TO 14-WAY	*Call
2094		4514<4603	3-WAY TO 14-WAY	*Call
2094		4514<4604	4-WAY TO 14-WAY	*Call
2094		4514<4605	5-WAY TO 14-WAY	*Call
2094		4514<4606	6-WAY TO 14-WAY	*Call
2094		4514<4607	7-WAY TO 14-WAY	*Call
2094		4514<4608	8-WAY TO 14-WAY	*Call
2094		4514<4701	1-WAY TO 14-WAY	*Call
2094		4514<4702	2-WAY TO 14-WAY	*Call
2094		4514<4703	3-WAY TO 14-WAY	*Call
2094		4514<4704	4-WAY TO 14-WAY	*Call
2094		4514<4705	5-WAY TO 14-WAY	*Call
2094		4514<4706	6-WAY TO 14-WAY	*Call
2094		4514<4707	7-WAY TO 14-WAY	*Call
2094		4514<4708	8-WAY TO 14-WAY	*Call
2094		4514<4801	1-WAY TO 14-WAY	*Call
2094		4514<4802	2-WAY TO 14-WAY	*Call
2094		4514<4803	3-WAY TO 14-WAY	*Call
2094		4514<4804	4-WAY TO 14-WAY	*Call
2094		4514<4805	5-WAY TO 14-WAY	*Call
2094		4514<4806	6-WAY TO 14-WAY	*Call
2094		4514<4807	7-WAY TO 14-WAY	*Call
2094		4514<4808	8-WAY TO 14-WAY	*Call
2094		4515<4500	ZERO-WAY TO 15-WAY	*Call
2094		4515<4501	1-WAY TO 15-WAY	*Call
2094		4515<4502	2-WAY TO 15-WAY	*Call
2094		4515<4503	3-WAY TO 15-WAY	*Call
2094		4515<4504	4-WAY TO 15-WAY	*Call
2094		4515<4505	5-WAY TO 15-WAY	*Call
2094		4515<4506	6-WAY TO 15-WAY	*Call
2094		4515<4507	7-WAY TO 15-WAY	*Call

Machine	Model	Feature	Description	GSA Price
Type				
2094		4515<4508	8-WAY TO 15-WAY	*Call
2094		4515<4509	9-WAY TO 15-WAY	*Call
2094		4515<4510	10-WAY TO 15-WAY	*Call
2094		4515<4511	11-WAY TO 15-WAY	*Call
2094		4515<4512	12-WAY TO 15-WAY	*Call
2094		4515<4513	13-WAY TO 15-WAY	*Call
2094		4515<4514	14-WAY TO 15-WAY	*Call
2094		4515<4516	16-WAY TO 15-WAY	*Call
2094		4515<4517	17-WAY TO 15-WAY	*Call
2094		4515<4518	18-WAY TO 15-WAY	*Call
2094		4515<4519	19-WAY TO 15-WAY	*Call
2094		4515<4520	20-WAY TO 15-WAY	*Call
2094		4515<4521	21-WAY TO 15-WAY	*Call
2094		4515<4522	22-WAY TO 15-WAY	*Call
2094		4515<4523	23-WAY TO 15-WAY	*Call
2094		4515<4524	24-WAY TO 15-WAY	*Call
2094		4515<4525	25-WAY TO 15-WAY	*Call
2094		4515<4526	26-WAY TO 15-WAY	*Call
2094		4515<4527	27-WAY TO 15-WAY	*Call
2094		4515<4528	28-WAY TO 15-WAY	*Call
2094		4515<4529	29-WAY TO 15-WAY	*Call
2094		4515<4530	30-WAY TO 15-WAY	*Call
2094		4515<4531	31-WAY TO 15-WAY	*Call
2094		4515<4532	32-WAY TO 15-WAY	*Call
2094		4515<4533	33-WAY TO 15-WAY	*Call
2094		4515<4534	34-WAY TO 15-WAY	*Call
2094		4515<4535	35-WAY TO 15-WAY	*Call
2094		4515<4536	36-WAY TO 15-WAY	*Call
2094		4515<4537	37-WAY TO 15-WAY	*Call
2094		4515<4538	38-WAY TO 15-WAY	*Call
2094		4515<4539	39-WAY TO 15-WAY	*Call
2094		4515<4540	40-WAY TO 15-WAY	*Call
2094		4515<4541	41-WAY TO 15-WAY	*Call
2094		4515<4542	42-WAY TO 15-WAY	*Call
2094		4515<4543	43-WAY TO 15-WAY	*Call
2094		4515<4544	44-WAY TO 15-WAY	*Call
2094		4515<4545	45-WAY TO 15-WAY	*Call
2094		4515<4546	46-WAY TO 15-WAY	*Call
2094		4515<4547	47-WAY TO 15-WAY	*Call
2094		4515<4548	48-WAY TO 15-WAY	*Call
2094		4515<4549	49-WAY TO 15-WAY	*Call
2094		4515<4550	50-WAY TO 15-WAY	*Call
2094		4515<4551	51-WAY TO 15-WAY	*Call
2094		4515<4552	52-WAY TO 15-WAY	*Call
2094		4515<4553	53-WAY TO 15-WAY	*Call
2094		4515<4554	54-WAY TO 15-WAY	*Call
2094		4515<4601	1-WAY TO 15-WAY	*Call
2094		4515<4602	2-WAY TO 15-WAY	*Call
2094		4515<4603	3-WAY TO 15-WAY	*Call
2094		4515<4604	4-WAY TO 15-WAY	*Call
2094		4515<4605	5-WAY TO 15-WAY	*Call
2094		4515<4606	6-WAY TO 15-WAY	*Call
2094		4515<4607	7-WAY TO 15-WAY	*Call
2094		4515<4608	8-WAY TO 15-WAY	*Call
2094		4515<4701	1-WAY TO 15-WAY	*Call
2094		4515<4702	2-WAY TO 15-WAY	*Call
2094		4515<4703	3-WAY TO 15-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4515<4704	4-WAY TO 15-WAY	*Call
2094		4515<4705	5-WAY TO 15-WAY	*Call
2094		4515<4706	6-WAY TO 15-WAY	*Call
2094		4515<4707	7-WAY TO 15-WAY	*Call
2094		4515<4708	8-WAY TO 15-WAY	*Call
2094		4515<4801	1-WAY TO 15-WAY	*Call
2094		4515<4802	2-WAY TO 15-WAY	*Call
2094		4515<4803	3-WAY TO 15-WAY	*Call
2094		4515<4804	4-WAY TO 15-WAY	*Call
2094		4515<4805	5-WAY TO 15-WAY	*Call
2094		4515<4806	6-WAY TO 15-WAY	*Call
2094		4515<4807	7-WAY TO 15-WAY	*Call
2094		4515<4808	8-WAY TO 15-WAY	*Call
2094		4516<4500	ZERO-WAY TO 16-WAY	*Call
2094		4516<4501	1-WAY TO 16-WAY	*Call
2094		4516<4502	2-WAY TO 16-WAY	*Call
2094		4516<4503	3-WAY TO 16-WAY	*Call
2094		4516<4504	4-WAY TO 16-WAY	*Call
2094		4516<4505	5-WAY TO 16-WAY	*Call
2094		4516<4506	6-WAY TO 16-WAY	*Call
2094		4516<4507	7-WAY TO 16-WAY	*Call
2094		4516<4508	8-WAY TO 16-WAY	*Call
2094		4516<4509	9-WAY TO 16-WAY	*Call
2094		4516<4510	10-WAY TO 16-WAY	*Call
2094		4516<4511	11-WAY TO 16-WAY	*Call
2094		4516<4512	12-WAY TO 16-WAY	*Call
2094		4516<4513	13-WAY TO 16-WAY	*Call
2094		4516<4514	14-WAY TO 16-WAY	*Call
2094		4516<4515	15-WAY TO 16-WAY	*Call
2094		4516<4517	17-WAY TO 16-WAY	*Call
2094		4516<4518	18-WAY TO 16-WAY	*Call
2094		4516<4519	19-WAY TO 16-WAY	*Call
2094		4516<4520	20-WAY TO 16-WAY	*Call
2094		4516<4521	21-WAY TO 16-WAY	*Call
2094		4516<4522	22-WAY TO 16-WAY	*Call
2094		4516<4523	23-WAY TO 16-WAY	*Call
2094		4516<4524	24-WAY TO 16-WAY	*Call
2094		4516<4525	25-WAY TO 16-WAY	*Call
2094		4516<4526	26-WAY TO 16-WAY	*Call
2094		4516<4527	27-WAY TO 16-WAY	*Call
2094		4516<4528	28-WAY TO 16-WAY	*Call
2094		4516<4529	29-WAY TO 16-WAY	*Call
2094		4516<4530	30-WAY TO 16-WAY	*Call
2094		4516<4531	31-WAY TO 16-WAY	*Call
2094		4516<4532	32-WAY TO 16-WAY	*Call
2094		4516<4533	33-WAY TO 16-WAY	*Call
2094		4516<4534	34-WAY TO 16-WAY	*Call
2094		4516<4535	35-WAY TO 16-WAY	*Call
2094		4516<4536	36-WAY TO 16-WAY	*Call
2094		4516<4537	37-WAY TO 16-WAY	*Call
2094		4516<4538	38-WAY TO 16-WAY	*Call
2094		4516<4539	39-WAY TO 16-WAY	*Call
2094		4516<4540	40-WAY TO 16-WAY	*Call
2094		4516<4541	41-WAY TO 16-WAY	*Call
2094		4516<4542	42-WAY TO 16-WAY	*Call
2094		4516<4543	43-WAY TO 16-WAY	*Call
2094		4516<4544	44-WAY TO 16-WAY	*Call

Machine	Model	Feature	Description	GSA Price
2094		4516<4545	45-WAY TO 16-WAY	*Call
2094		4516<4546	46-WAY TO 16-WAY	*Call
2094		4516<4547	47-WAY TO 16-WAY	*Call
2094		4516<4548	48-WAY TO 16-WAY	*Call
2094		4516<4549	49-WAY TO 16-WAY	*Call
2094		4516<4550	50-WAY TO 16-WAY	*Call
2094		4516<4551	51-WAY TO 16-WAY	*Call
2094		4516<4552	52-WAY TO 16-WAY	*Call
2094		4516<4553	53-WAY TO 16-WAY	*Call
2094		4516<4554	54-WAY TO 16-WAY	*Call
2094		4516<4601	1-WAY TO 16-WAY	*Call
2094		4516<4602	2-WAY TO 16-WAY	*Call
2094		4516<4603	3-WAY TO 16-WAY	*Call
2094		4516<4604	4-WAY TO 16-WAY	*Call
2094		4516<4605	5-WAY TO 16-WAY	*Call
2094		4516<4606	6-WAY TO 16-WAY	*Call
2094		4516<4607	7-WAY TO 16-WAY	*Call
2094		4516<4608	8-WAY TO 16-WAY	*Call
2094		4516<4701	1-WAY TO 16-WAY	*Call
2094		4516<4702	2-WAY TO 16-WAY	*Call
2094		4516<4703	3-WAY TO 16-WAY	*Call
2094		4516<4704	4-WAY TO 16-WAY	*Call
2094		4516<4705	5-WAY TO 16-WAY	*Call
2094		4516<4706	6-WAY TO 16-WAY	*Call
2094		4516<4707	7-WAY TO 16-WAY	*Call
2094		4516<4708	8-WAY TO 16-WAY	*Call
2094		4516<4801	1-WAY TO 16-WAY	*Call
2094		4516<4802	2-WAY TO 16-WAY	*Call
2094		4516<4803	3-WAY TO 16-WAY	*Call
2094		4516<4804	4-WAY TO 16-WAY	*Call
2094		4516<4805	5-WAY TO 16-WAY	*Call
2094		4516<4806	6-WAY TO 16-WAY	*Call
2094		4516<4807	7-WAY TO 16-WAY	*Call
2094		4516<4808	8-WAY TO 16-WAY	*Call
2094		4517<4500	ZERO-WAY TO 17-WAY	*Call
2094		4517<4501	1-WAY TO 17-WAY	*Call
2094		4517<4502	2-WAY TO 17-WAY	*Call
2094		4517<4503	3-WAY TO 17-WAY	*Call
2094		4517<4504	4-WAY TO 17-WAY	*Call
2094		4517<4505	5-WAY TO 17-WAY	*Call
2094		4517<4506	6-WAY TO 17-WAY	*Call
2094		4517<4507	7-WAY TO 17-WAY	*Call
2094		4517<4508	8-WAY TO 17-WAY	*Call
2094		4517<4509	9-WAY TO 17-WAY	*Call
2094		4517<4510	10-WAY TO 17-WAY	*Call
2094		4517<4511	11-WAY TO 17-WAY	*Call
2094		4517<4512	12-WAY TO 17-WAY	*Call
2094		4517<4513	13-WAY TO 17-WAY	*Call
2094		4517<4514	14-WAY TO 17-WAY	*Call
2094		4517<4515	15-WAY TO 17-WAY	*Call
2094		4517<4516	16-WAY TO 17-WAY	*Call
2094		4517<4518	18-WAY TO 17-WAY	*Call
2094		4517<4519	19-WAY TO 17-WAY	*Call
2094		4517<4520	20-WAY TO 17-WAY	*Call
2094		4517<4521	21-WAY TO 17-WAY	*Call
2094		4517<4522	22-WAY TO 17-WAY	*Call
2094		4517<4523	23-WAY TO 17-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4517<4524	24-WAY TO 17-WAY	*Call
2094		4517<4525	25-WAY TO 17-WAY	*Call
2094		4517<4526	26-WAY TO 17-WAY	*Call
2094		4517<4527	27-WAY TO 17-WAY	*Call
2094		4517<4528	28-WAY TO 17-WAY	*Call
2094		4517<4529	29-WAY TO 17-WAY	*Call
2094		4517<4530	30-WAY TO 17-WAY	*Call
2094		4517<4531	31-WAY TO 17-WAY	*Call
2094		4517<4532	32-WAY TO 17-WAY	*Call
2094		4517<4533	33-WAY TO 17-WAY	*Call
2094		4517<4534	34-WAY TO 17-WAY	*Call
2094		4517<4535	35-WAY TO 17-WAY	*Call
2094		4517<4536	36-WAY TO 17-WAY	*Call
2094		4517<4537	37-WAY TO 17-WAY	*Call
2094		4517<4538	38-WAY TO 17-WAY	*Call
2094		4517<4539	39-WAY TO 17-WAY	*Call
2094		4517<4540	40-WAY TO 17-WAY	*Call
2094		4517<4541	41-WAY TO 17-WAY	*Call
2094		4517<4542	42-WAY TO 17-WAY	*Call
2094		4517<4543	43-WAY TO 17-WAY	*Call
2094		4517<4544	44-WAY TO 17-WAY	*Call
2094		4517<4545	45-WAY TO 17-WAY	*Call
2094		4517<4546	46-WAY TO 17-WAY	*Call
2094		4517<4547	47-WAY TO 17-WAY	*Call
2094		4517<4548	48-WAY TO 17-WAY	*Call
2094		4517<4549	49-WAY TO 17-WAY	*Call
2094		4517<4550	50-WAY TO 17-WAY	*Call
2094		4517<4551	51-WAY TO 17-WAY	*Call
2094		4517<4552	52-WAY TO 17-WAY	*Call
2094		4517<4553	53-WAY TO 17-WAY	*Call
2094		4517<4554	54-WAY TO 17-WAY	*Call
2094		4517<4601	1-WAY TO 17-WAY	*Call
2094		4517<4602	2-WAY TO 17-WAY	*Call
2094		4517<4603	3-WAY TO 17-WAY	*Call
2094		4517<4604	4-WAY TO 17-WAY	*Call
2094		4517<4605	5-WAY TO 17-WAY	*Call
2094		4517<4606	6-WAY TO 17-WAY	*Call
2094		4517<4607	7-WAY TO 17-WAY	*Call
2094		4517<4608	8-WAY TO 17-WAY	*Call
2094		4517<4701	1-WAY TO 17-WAY	*Call
2094		4517<4702	2-WAY TO 17-WAY	*Call
2094		4517<4703	3-WAY TO 17-WAY	*Call
2094		4517<4704	4-WAY TO 17-WAY	*Call
2094		4517<4705	5-WAY TO 17-WAY	*Call
2094		4517<4706	6-WAY TO 17-WAY	*Call
2094		4517<4707	7-WAY TO 17-WAY	*Call
2094		4517<4708	8-WAY TO 17-WAY	*Call
2094		4517<4801	1-WAY TO 17-WAY	*Call
2094		4517<4802	2-WAY TO 17-WAY	*Call
2094		4517<4803	3-WAY TO 17-WAY	*Call
2094		4517<4804	4-WAY TO 17-WAY	*Call
2094		4517<4805	5-WAY TO 17-WAY	*Call
2094		4517<4806	6-WAY TO 17-WAY	*Call
2094		4517<4807	7-WAY TO 17-WAY	*Call
2094		4517<4808	8-WAY TO 17-WAY	*Call
2094		4518<4500	ZERO-WAY TO 18-WAY	*Call
2094		4518<4501	1-WAY TO 18-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4518<4502	2-WAY TO 18-WAY	*Call
2094		4518<4503	3-WAY TO 18-WAY	*Call
2094		4518<4504	4-WAY TO 18-WAY	*Call
2094		4518<4505	5-WAY TO 18-WAY	*Call
2094		4518<4506	6-WAY TO 18-WAY	*Call
2094		4518<4507	7-WAY TO 18-WAY	*Call
2094		4518<4508	8-WAY TO 18-WAY	*Call
2094		4518<4509	9-WAY TO 18-WAY	*Call
2094		4518<4510	10-WAY TO 18-WAY	*Call
2094		4518<4511	11-WAY TO 18-WAY	*Call
2094		4518<4512	12-WAY TO 18-WAY	*Call
2094		4518<4513	13-WAY TO 18-WAY	*Call
2094		4518<4514	14-WAY TO 18-WAY	*Call
2094		4518<4515	15-WAY TO 18-WAY	*Call
2094		4518<4516	16-WAY TO 18-WAY	*Call
2094		4518<4517	17-WAY TO 18-WAY	*Call
2094		4518<4519	19-WAY TO 18-WAY	*Call
2094		4518<4520	20-WAY TO 18-WAY	*Call
2094		4518<4521	21-WAY TO 18-WAY	*Call
2094		4518<4522	22-WAY TO 18-WAY	*Call
2094		4518<4523	23-WAY TO 18-WAY	*Call
2094		4518<4524	24-WAY TO 18-WAY	*Call
2094		4518<4525	25-WAY TO 18-WAY	*Call
2094		4518<4526	26-WAY TO 18-WAY	*Call
2094		4518<4527	27-WAY TO 18-WAY	*Call
2094		4518<4528	28-WAY TO 18-WAY	*Call
2094		4518<4529	29-WAY TO 18-WAY	*Call
2094		4518<4530	30-WAY TO 18-WAY	*Call
2094		4518<4531	31-WAY TO 18-WAY	*Call
2094		4518<4532	32-WAY TO 18-WAY	*Call
2094		4518<4533	33-WAY TO 18-WAY	*Call
2094		4518<4534	34-WAY TO 18-WAY	*Call
2094		4518<4535	35-WAY TO 18-WAY	*Call
2094		4518<4536	36-WAY TO 18-WAY	*Call
2094		4518<4537	37-WAY TO 18-WAY	*Call
2094		4518<4538	38-WAY TO 18-WAY	*Call
2094		4518<4539	39-WAY TO 18-WAY	*Call
2094		4518<4540	40-WAY TO 18-WAY	*Call
2094		4518<4541	41-WAY TO 18-WAY	*Call
2094		4518<4542	42-WAY TO 18-WAY	*Call
2094		4518<4543	43-WAY TO 18-WAY	*Call
2094		4518<4544	44-WAY TO 18-WAY	*Call
2094		4518<4545	45-WAY TO 18-WAY	*Call
2094		4518<4546	46-WAY TO 18-WAY	*Call
2094		4518<4547	47-WAY TO 18-WAY	*Call
2094		4518<4548	48-WAY TO 18-WAY	*Call
2094		4518<4549	49-WAY TO 18-WAY	*Call
2094		4518<4550	50-WAY TO 18-WAY	*Call
2094		4518<4551	51-WAY TO 18-WAY	*Call
2094		4518<4552	52-WAY TO 18-WAY	*Call
2094		4518<4553	53-WAY TO 18-WAY	*Call
2094		4518<4554	54-WAY TO 18-WAY	*Call
2094		4518<4601	1-WAY TO 18-WAY	*Call
2094		4518<4602	2-WAY TO 18-WAY	*Call
2094		4518<4603	3-WAY TO 18-WAY	*Call
2094		4518<4604	4-WAY TO 18-WAY	*Call
2094		4518<4605	5-WAY TO 18-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4518<4606	6-WAY TO 18-WAY	*Call
2094		4518<4607	7-WAY TO 18-WAY	*Call
2094		4518<4608	8-WAY TO 18-WAY	*Call
2094		4518<4701	1-WAY TO 18-WAY	*Call
2094		4518<4702	2-WAY TO 18-WAY	*Call
2094		4518<4703	3-WAY TO 18-WAY	*Call
2094		4518<4704	4-WAY TO 18-WAY	*Call
2094		4518<4705	5-WAY TO 18-WAY	*Call
2094		4518<4706	6-WAY TO 18-WAY	*Call
2094		4518<4707	7-WAY TO 18-WAY	*Call
2094		4518<4708	8-WAY TO 18-WAY	*Call
2094		4518<4801	1-WAY TO 18-WAY	*Call
2094		4518<4802	2-WAY TO 18-WAY	*Call
2094		4518<4803	3-WAY TO 18-WAY	*Call
2094		4518<4804	4-WAY TO 18-WAY	*Call
2094		4518<4805	5-WAY TO 18-WAY	*Call
2094		4518<4806	6-WAY TO 18-WAY	*Call
2094		4518<4807	7-WAY TO 18-WAY	*Call
2094		4518<4808	8-WAY TO 18-WAY	*Call
2094		4519<4500	ZERO-WAY TO 19-WAY	*Call
2094		4519<4501	1-WAY TO 19-WAY	*Call
2094		4519<4502	2-WAY TO 19-WAY	*Call
2094		4519<4503	3-WAY TO 19-WAY	*Call
2094		4519<4504	4-WAY TO 19-WAY	*Call
2094		4519<4505	5-WAY TO 19-WAY	*Call
2094		4519<4506	6-WAY TO 19-WAY	*Call
2094		4519<4507	7-WAY TO 19-WAY	*Call
2094		4519<4508	8-WAY TO 19-WAY	*Call
2094		4519<4509	9-WAY TO 19-WAY	*Call
2094		4519<4510	10-WAY TO 19-WAY	*Call
2094		4519<4511	11-WAY TO 19-WAY	*Call
2094		4519<4512	12-WAY TO 19-WAY	*Call
2094		4519<4513	13-WAY TO 19-WAY	*Call
2094		4519<4514	14-WAY TO 19-WAY	*Call
2094		4519<4515	15-WAY TO 19-WAY	*Call
2094		4519<4516	16-WAY TO 19-WAY	*Call
2094		4519<4517	17-WAY TO 19-WAY	*Call
2094		4519<4518	18-WAY TO 19-WAY	*Call
2094		4519<4520	20-WAY TO 19-WAY	*Call
2094		4519<4521	21-WAY TO 19-WAY	*Call
2094		4519<4522	22-WAY TO 19-WAY	*Call
2094		4519<4523	23-WAY TO 19-WAY	*Call
2094		4519<4524	24-WAY TO 19-WAY	*Call
2094		4519<4525	25-WAY TO 19-WAY	*Call
2094		4519<4526	26-WAY TO 19-WAY	*Call
2094		4519<4527	27-WAY TO 19-WAY	*Call
2094		4519<4528	28-WAY TO 19-WAY	*Call
2094		4519<4529	29-WAY TO 19-WAY	*Call
2094		4519<4530	30-WAY TO 19-WAY	*Call
2094		4519<4531	31-WAY TO 19-WAY	*Call
2094		4519<4532	32-WAY TO 19-WAY	*Call
2094		4519<4533	33-WAY TO 19-WAY	*Call
2094		4519<4534	34-WAY TO 19-WAY	*Call
2094		4519<4535	35-WAY TO 19-WAY	*Call
2094		4519<4536	36-WAY TO 19-WAY	*Call
2094		4519<4537	37-WAY TO 19-WAY	*Call
2094		4519<4538	38-WAY TO 19-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4519<4539	39-WAY TO 19-WAY	*Call
2094		4519<4540	40-WAY TO 19-WAY	*Call
2094		4519<4541	41-WAY TO 19-WAY	*Call
2094		4519<4542	42-WAY TO 19-WAY	*Call
2094		4519<4543	43-WAY TO 19-WAY	*Call
2094		4519<4544	44-WAY TO 19-WAY	*Call
2094		4519<4545	45-WAY TO 19-WAY	*Call
2094		4519<4546	46-WAY TO 19-WAY	*Call
2094		4519<4547	47-WAY TO 19-WAY	*Call
2094		4519<4548	48-WAY TO 19-WAY	*Call
2094		4519<4549	49-WAY TO 19-WAY	*Call
2094		4519<4550	50-WAY TO 19-WAY	*Call
2094		4519<4551	51-WAY TO 19-WAY	*Call
2094		4519<4552	52-WAY TO 19-WAY	*Call
2094		4519<4553	53-WAY TO 19-WAY	*Call
2094		4519<4554	54-WAY TO 19-WAY	*Call
2094		4519<4601	1-WAY TO 19-WAY	*Call
2094		4519<4602	2-WAY TO 19-WAY	*Call
2094		4519<4603	3-WAY TO 19-WAY	*Call
2094		4519<4604	4-WAY TO 19-WAY	*Call
2094		4519<4605	5-WAY TO 19-WAY	*Call
2094		4519<4606	6-WAY TO 19-WAY	*Call
2094		4519<4607	7-WAY TO 19-WAY	*Call
2094		4519<4608	8-WAY TO 19-WAY	*Call
2094		4519<4701	1-WAY TO 19-WAY	*Call
2094		4519<4702	2-WAY TO 19-WAY	*Call
2094		4519<4703	3-WAY TO 19-WAY	*Call
2094		4519<4704	4-WAY TO 19-WAY	*Call
2094		4519<4705	5-WAY TO 19-WAY	*Call
2094		4519<4706	6-WAY TO 19-WAY	*Call
2094		4519<4707	7-WAY TO 19-WAY	*Call
2094		4519<4708	8-WAY TO 19-WAY	*Call
2094		4519<4801	1-WAY TO 19-WAY	*Call
2094		4519<4802	2-WAY TO 19-WAY	*Call
2094		4519<4803	3-WAY TO 19-WAY	*Call
2094		4519<4804	4-WAY TO 19-WAY	*Call
2094		4519<4805	5-WAY TO 19-WAY	*Call
2094		4519<4806	6-WAY TO 19-WAY	*Call
2094		4519<4807	7-WAY TO 19-WAY	*Call
2094		4519<4808	8-WAY TO 19-WAY	*Call
2094		4520<4500	ZERO-WAY TO 20-WAY	*Call
2094		4520<4501	1-WAY TO 20-WAY	*Call
2094		4520<4502	2-WAY TO 20-WAY	*Call
2094		4520<4503	3-WAY TO 20-WAY	*Call
2094		4520<4504	4-WAY TO 20-WAY	*Call
2094		4520<4505	5-WAY TO 20-WAY	*Call
2094		4520<4506	6-WAY TO 20-WAY	*Call
2094		4520<4507	7-WAY TO 20-WAY	*Call
2094		4520<4508	8-WAY TO 20-WAY	*Call
2094		4520<4509	9-WAY TO 20-WAY	*Call
2094		4520<4510	10-WAY TO 20-WAY	*Call
2094		4520<4511	11-WAY TO 20-WAY	*Call
2094		4520<4512	12-WAY TO 20-WAY	*Call
2094		4520<4513	13-WAY TO 20-WAY	*Call
2094		4520<4514	14-WAY TO 20-WAY	*Call
2094		4520<4515	15-WAY TO 20-WAY	*Call
2094		4520<4516	16-WAY TO 20-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4520<4517	17-WAY TO 20-WAY	*Call
2094		4520<4518	18-WAY TO 20-WAY	*Call
2094		4520<4519	19-WAY TO 20-WAY	*Call
2094		4520<4521	21-WAY TO 20-WAY	*Call
2094		4520<4522	22-WAY TO 20-WAY	*Call
2094		4520<4523	23-WAY TO 20-WAY	*Call
2094		4520<4524	24-WAY TO 20-WAY	*Call
2094		4520<4525	25-WAY TO 20-WAY	*Call
2094		4520<4526	26-WAY TO 20-WAY	*Call
2094		4520<4527	27-WAY TO 20-WAY	*Call
2094		4520<4528	28-WAY TO 20-WAY	*Call
2094		4520<4529	29-WAY TO 20-WAY	*Call
2094		4520<4530	30-WAY TO 20-WAY	*Call
2094		4520<4531	31-WAY TO 20-WAY	*Call
2094		4520<4532	32-WAY TO 20-WAY	*Call
2094		4520<4533	33-WAY TO 20-WAY	*Call
2094		4520<4534	34-WAY TO 20-WAY	*Call
2094		4520<4535	35-WAY TO 20-WAY	*Call
2094		4520<4536	36-WAY TO 20-WAY	*Call
2094		4520<4537	37-WAY TO 20-WAY	*Call
2094		4520<4538	38-WAY TO 20-WAY	*Call
2094		4520<4539	39-WAY TO 20-WAY	*Call
2094		4520<4540	40-WAY TO 20-WAY	*Call
2094		4520<4541	41-WAY TO 20-WAY	*Call
2094		4520<4542	42-WAY TO 20-WAY	*Call
2094		4520<4543	43-WAY TO 20-WAY	*Call
2094		4520<4544	44-WAY TO 20-WAY	*Call
2094		4520<4545	45-WAY TO 20-WAY	*Call
2094		4520<4546	46-WAY TO 20-WAY	*Call
2094		4520<4547	47-WAY TO 20-WAY	*Call
2094		4520<4548	48-WAY TO 20-WAY	*Call
2094		4520<4549	49-WAY TO 20-WAY	*Call
2094		4520<4550	50-WAY TO 20-WAY	*Call
2094		4520<4551	51-WAY TO 20-WAY	*Call
2094		4520<4552	52-WAY TO 20-WAY	*Call
2094		4520<4553	53-WAY TO 20-WAY	*Call
2094		4520<4554	54-WAY TO 20-WAY	*Call
2094		4520<4601	1-WAY TO 20-WAY	*Call
2094		4520<4602	2-WAY TO 20-WAY	*Call
2094		4520<4603	3-WAY TO 20-WAY	*Call
2094		4520<4604	4-WAY TO 20-WAY	*Call
2094		4520<4605	5-WAY TO 20-WAY	*Call
2094		4520<4606	6-WAY TO 20-WAY	*Call
2094		4520<4607	7-WAY TO 20-WAY	*Call
2094		4520<4608	8-WAY TO 20-WAY	*Call
2094		4520<4701	1-WAY TO 20-WAY	*Call
2094		4520<4702	2-WAY TO 20-WAY	*Call
2094		4520<4703	3-WAY TO 20-WAY	*Call
2094		4520<4704	4-WAY TO 20-WAY	*Call
2094		4520<4705	5-WAY TO 20-WAY	*Call
2094		4520<4706	6-WAY TO 20-WAY	*Call
2094		4520<4707	7-WAY TO 20-WAY	*Call
2094		4520<4708	8-WAY TO 20-WAY	*Call
2094		4520<4801	1-WAY TO 20-WAY	*Call
2094		4520<4802	2-WAY TO 20-WAY	*Call
2094		4520<4803	3-WAY TO 20-WAY	*Call
2094		4520<4804	4-WAY TO 20-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4520<4805	5-WAY TO 20-WAY	*Call
2094		4520<4806	6-WAY TO 20-WAY	*Call
2094		4520<4807	7-WAY TO 20-WAY	*Call
2094		4520<4808	8-WAY TO 20-WAY	*Call
2094		4521<4500	ZERO-WAY TO 21-WAY	*Call
2094		4521<4501	1-WAY TO 21-WAY	*Call
2094		4521<4502	2-WAY TO 21-WAY	*Call
2094		4521<4503	3-WAY TO 21-WAY	*Call
2094		4521<4504	4-WAY TO 21-WAY	*Call
2094		4521<4505	5-WAY TO 21-WAY	*Call
2094		4521<4506	6-WAY TO 21-WAY	*Call
2094		4521<4507	7-WAY TO 21-WAY	*Call
2094		4521<4508	8-WAY TO 21-WAY	*Call
2094		4521<4509	9-WAY TO 21-WAY	*Call
2094		4521<4510	10-WAY TO 21-WAY	*Call
2094		4521<4511	11-WAY TO 21-WAY	*Call
2094		4521<4512	12-WAY TO 21-WAY	*Call
2094		4521<4513	13-WAY TO 21-WAY	*Call
2094		4521<4514	14-WAY TO 21-WAY	*Call
2094		4521<4515	15-WAY TO 21-WAY	*Call
2094		4521<4516	16-WAY TO 21-WAY	*Call
2094		4521<4517	17-WAY TO 21-WAY	*Call
2094		4521<4518	18-WAY TO 21-WAY	*Call
2094		4521<4519	19-WAY TO 21-WAY	*Call
2094		4521<4520	20-WAY TO 21-WAY	*Call
2094		4521<4522	22-WAY TO 21-WAY	*Call
2094		4521<4523	23-WAY TO 21-WAY	*Call
2094		4521<4524	24-WAY TO 21-WAY	*Call
2094		4521<4525	25-WAY TO 21-WAY	*Call
2094		4521<4526	26-WAY TO 21-WAY	*Call
2094		4521<4527	27-WAY TO 21-WAY	*Call
2094		4521<4528	28-WAY TO 21-WAY	*Call
2094		4521<4529	29-WAY TO 21-WAY	*Call
2094		4521<4530	30-WAY TO 21-WAY	*Call
2094		4521<4531	31-WAY TO 21-WAY	*Call
2094		4521<4532	32-WAY TO 21-WAY	*Call
2094		4521<4533	33-WAY TO 21-WAY	*Call
2094		4521<4534	34-WAY TO 21-WAY	*Call
2094		4521<4535	35-WAY TO 21-WAY	*Call
2094		4521<4536	36-WAY TO 21-WAY	*Call
2094		4521<4537	37-WAY TO 21-WAY	*Call
2094		4521<4538	38-WAY TO 21-WAY	*Call
2094		4521<4539	39-WAY TO 21-WAY	*Call
2094		4521<4540	40-WAY TO 21-WAY	*Call
2094		4521<4541	41-WAY TO 21-WAY	*Call
2094		4521<4542	42-WAY TO 21-WAY	*Call
2094		4521<4543	43-WAY TO 21-WAY	*Call
2094		4521<4544	44-WAY TO 21-WAY	*Call
2094		4521<4545	45-WAY TO 21-WAY	*Call
2094		4521<4546	46-WAY TO 21-WAY	*Call
2094		4521<4547	47-WAY TO 21-WAY	*Call
2094		4521<4548	48-WAY TO 21-WAY	*Call
2094		4521<4549	49-WAY TO 21-WAY	*Call
2094		4521<4550	50-WAY TO 21-WAY	*Call
2094		4521<4551	51-WAY TO 21-WAY	*Call
2094		4521<4552	52-WAY TO 21-WAY	*Call
2094		4521<4553	53-WAY TO 21-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4521<4554	54-WAY TO 21-WAY	*Call
2094		4521<4601	1-WAY TO 21-WAY	*Call
2094		4521<4602	2-WAY TO 21-WAY	*Call
2094		4521<4603	3-WAY TO 21-WAY	*Call
2094		4521<4604	4-WAY TO 21-WAY	*Call
2094		4521<4605	5-WAY TO 21-WAY	*Call
2094		4521<4606	6-WAY TO 21-WAY	*Call
2094		4521<4607	7-WAY TO 21-WAY	*Call
2094		4521<4608	8-WAY TO 21-WAY	*Call
2094		4521<4701	1-WAY TO 21-WAY	*Call
2094		4521<4702	2-WAY TO 21-WAY	*Call
2094		4521<4703	3-WAY TO 21-WAY	*Call
2094		4521<4704	4-WAY TO 21-WAY	*Call
2094		4521<4705	5-WAY TO 21-WAY	*Call
2094		4521<4706	6-WAY TO 21-WAY	*Call
2094		4521<4707	7-WAY TO 21-WAY	*Call
2094		4521<4708	8-WAY TO 21-WAY	*Call
2094		4521<4801	1-WAY TO 21-WAY	*Call
2094		4521<4802	2-WAY TO 21-WAY	*Call
2094		4521<4803	3-WAY TO 21-WAY	*Call
2094		4521<4804	4-WAY TO 21-WAY	*Call
2094		4521<4805	5-WAY TO 21-WAY	*Call
2094		4521<4806	6-WAY TO 21-WAY	*Call
2094		4521<4807	7-WAY TO 21-WAY	*Call
2094		4521<4808	8-WAY TO 21-WAY	*Call
2094		4522<4500	ZERO-WAY TO 22-WAY	*Call
2094		4522<4501	1-WAY TO 22-WAY	*Call
2094		4522<4502	2-WAY TO 22-WAY	*Call
2094		4522<4503	3-WAY TO 22-WAY	*Call
2094		4522<4504	4-WAY TO 22-WAY	*Call
2094		4522<4505	5-WAY TO 22-WAY	*Call
2094		4522<4506	6-WAY TO 22-WAY	*Call
2094		4522<4507	7-WAY TO 22-WAY	*Call
2094		4522<4508	8-WAY TO 22-WAY	*Call
2094		4522<4509	9-WAY TO 22-WAY	*Call
2094		4522<4510	10-WAY TO 22-WAY	*Call
2094		4522<4511	11-WAY TO 22-WAY	*Call
2094		4522<4512	12-WAY TO 22-WAY	*Call
2094		4522<4513	13-WAY TO 22-WAY	*Call
2094		4522<4514	14-WAY TO 22-WAY	*Call
2094		4522<4515	15-WAY TO 22-WAY	*Call
2094		4522<4516	16-WAY TO 22-WAY	*Call
2094		4522<4517	17-WAY TO 22-WAY	*Call
2094		4522<4518	18-WAY TO 22-WAY	*Call
2094		4522<4519	19-WAY TO 22-WAY	*Call
2094		4522<4520	20-WAY TO 22-WAY	*Call
2094		4522<4521	21-WAY TO 22-WAY	*Call
2094		4522<4523	23-WAY TO 22-WAY	*Call
2094		4522<4524	24-WAY TO 22-WAY	*Call
2094		4522<4525	25-WAY TO 22-WAY	*Call
2094		4522<4526	26-WAY TO 22-WAY	*Call
2094		4522<4527	27-WAY TO 22-WAY	*Call
2094		4522<4528	28-WAY TO 22-WAY	*Call
2094		4522<4529	29-WAY TO 22-WAY	*Call
2094		4522<4530	30-WAY TO 22-WAY	*Call
2094		4522<4531	31-WAY TO 22-WAY	*Call
2094		4522<4532	32-WAY TO 22-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4522<4533	33-WAY TO 22-WAY	*Call
2094		4522<4534	34-WAY TO 22-WAY	*Call
2094		4522<4535	35-WAY TO 22-WAY	*Call
2094		4522<4536	36-WAY TO 22-WAY	*Call
2094		4522<4537	37-WAY TO 22-WAY	*Call
2094		4522<4538	38-WAY TO 22-WAY	*Call
2094		4522<4539	39-WAY TO 22-WAY	*Call
2094		4522<4540	40-WAY TO 22-WAY	*Call
2094		4522<4541	41-WAY TO 22-WAY	*Call
2094		4522<4542	42-WAY TO 22-WAY	*Call
2094		4522<4543	43-WAY TO 22-WAY	*Call
2094		4522<4544	44-WAY TO 22-WAY	*Call
2094		4522<4545	45-WAY TO 22-WAY	*Call
2094		4522<4546	46-WAY TO 22-WAY	*Call
2094		4522<4547	47-WAY TO 22-WAY	*Call
2094		4522<4548	48-WAY TO 22-WAY	*Call
2094		4522<4549	49-WAY TO 22-WAY	*Call
2094		4522<4550	50-WAY TO 22-WAY	*Call
2094		4522<4551	51-WAY TO 22-WAY	*Call
2094		4522<4552	52-WAY TO 22-WAY	*Call
2094		4522<4553	53-WAY TO 22-WAY	*Call
2094		4522<4554	54-WAY TO 22-WAY	*Call
2094		4522<4601	1-WAY TO 22-WAY	*Call
2094		4522<4602	2-WAY TO 22-WAY	*Call
2094		4522<4603	3-WAY TO 22-WAY	*Call
2094		4522<4604	4-WAY TO 22-WAY	*Call
2094		4522<4605	5-WAY TO 22-WAY	*Call
2094		4522<4606	6-WAY TO 22-WAY	*Call
2094		4522<4607	7-WAY TO 22-WAY	*Call
2094		4522<4608	8-WAY TO 22-WAY	*Call
2094		4522<4701	1-WAY TO 22-WAY	*Call
2094		4522<4702	2-WAY TO 22-WAY	*Call
2094		4522<4703	3-WAY TO 22-WAY	*Call
2094		4522<4704	4-WAY TO 22-WAY	*Call
2094		4522<4705	5-WAY TO 22-WAY	*Call
2094		4522<4706	6-WAY TO 22-WAY	*Call
2094		4522<4707	7-WAY TO 22-WAY	*Call
2094		4522<4708	8-WAY TO 22-WAY	*Call
2094		4522<4801	1-WAY TO 22-WAY	*Call
2094		4522<4802	2-WAY TO 22-WAY	*Call
2094		4522<4803	3-WAY TO 22-WAY	*Call
2094		4522<4804	4-WAY TO 22-WAY	*Call
2094		4522<4805	5-WAY TO 22-WAY	*Call
2094		4522<4806	6-WAY TO 22-WAY	*Call
2094		4522<4807	7-WAY TO 22-WAY	*Call
2094		4522<4808	8-WAY TO 22-WAY	*Call
2094		4523<4500	ZERO-WAY TO 23-WAY	*Call
2094		4523<4501	1-WAY TO 23-WAY	*Call
2094		4523<4502	2-WAY TO 23-WAY	*Call
2094		4523<4503	3-WAY TO 23-WAY	*Call
2094		4523<4504	4-WAY TO 23-WAY	*Call
2094		4523<4505	5-WAY TO 23-WAY	*Call
2094		4523<4506	6-WAY TO 23-WAY	*Call
2094		4523<4507	7-WAY TO 23-WAY	*Call
2094		4523<4508	8-WAY TO 23-WAY	*Call
2094		4523<4509	9-WAY TO 23-WAY	*Call
2094		4523<4510	10-WAY TO 23-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4523<4511	11-WAY TO 23-WAY	*Call
2094		4523<4512	12-WAY TO 23-WAY	*Call
2094		4523<4513	13-WAY TO 23-WAY	*Call
2094		4523<4514	14-WAY TO 23-WAY	*Call
2094		4523<4515	15-WAY TO 23-WAY	*Call
2094		4523<4516	16-WAY TO 23-WAY	*Call
2094		4523<4517	17-WAY TO 23-WAY	*Call
2094		4523<4518	18-WAY TO 23-WAY	*Call
2094		4523<4519	19-WAY TO 23-WAY	*Call
2094		4523<4520	20-WAY TO 23-WAY	*Call
2094		4523<4521	21-WAY TO 23-WAY	*Call
2094		4523<4522	22-WAY TO 23-WAY	*Call
2094		4523<4524	24-WAY TO 23-WAY	*Call
2094		4523<4525	25-WAY TO 23-WAY	*Call
2094		4523<4526	26-WAY TO 23-WAY	*Call
2094		4523<4527	27-WAY TO 23-WAY	*Call
2094		4523<4528	28-WAY TO 23-WAY	*Call
2094		4523<4529	29-WAY TO 23-WAY	*Call
2094		4523<4530	30-WAY TO 23-WAY	*Call
2094		4523<4531	31-WAY TO 23-WAY	*Call
2094		4523<4532	32-WAY TO 23-WAY	*Call
2094		4523<4533	33-WAY TO 23-WAY	*Call
2094		4523<4534	34-WAY TO 23-WAY	*Call
2094		4523<4535	35-WAY TO 23-WAY	*Call
2094		4523<4536	36-WAY TO 23-WAY	*Call
2094		4523<4537	37-WAY TO 23-WAY	*Call
2094		4523<4538	38-WAY TO 23-WAY	*Call
2094		4523<4539	39-WAY TO 23-WAY	*Call
2094		4523<4540	40-WAY TO 23-WAY	*Call
2094		4523<4541	41-WAY TO 23-WAY	*Call
2094		4523<4542	42-WAY TO 23-WAY	*Call
2094		4523<4543	43-WAY TO 23-WAY	*Call
2094		4523<4544	44-WAY TO 23-WAY	*Call
2094		4523<4545	45-WAY TO 23-WAY	*Call
2094		4523<4546	46-WAY TO 23-WAY	*Call
2094		4523<4547	47-WAY TO 23-WAY	*Call
2094		4523<4548	48-WAY TO 23-WAY	*Call
2094		4523<4549	49-WAY TO 23-WAY	*Call
2094		4523<4550	50-WAY TO 23-WAY	*Call
2094		4523<4551	51-WAY TO 23-WAY	*Call
2094		4523<4552	52-WAY TO 23-WAY	*Call
2094		4523<4553	53-WAY TO 23-WAY	*Call
2094		4523<4554	54-WAY TO 23-WAY	*Call
2094		4523<4601	1-WAY TO 23-WAY	*Call
2094		4523<4602	2-WAY TO 23-WAY	*Call
2094		4523<4603	3-WAY TO 23-WAY	*Call
2094		4523<4604	4-WAY TO 23-WAY	*Call
2094		4523<4605	5-WAY TO 23-WAY	*Call
2094		4523<4606	6-WAY TO 23-WAY	*Call
2094		4523<4607	7-WAY TO 23-WAY	*Call
2094		4523<4608	8-WAY TO 23-WAY	*Call
2094		4523<4701	1-WAY TO 23-WAY	*Call
2094		4523<4702	2-WAY TO 23-WAY	*Call
2094		4523<4703	3-WAY TO 23-WAY	*Call
2094		4523<4704	4-WAY TO 23-WAY	*Call
2094		4523<4705	5-WAY TO 23-WAY	*Call
2094		4523<4706	6-WAY TO 23-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4523<4707	7-WAY TO 23-WAY	*Call
2094		4523<4708	8-WAY TO 23-WAY	*Call
2094		4523<4801	1-WAY TO 23-WAY	*Call
2094		4523<4802	2-WAY TO 23-WAY	*Call
2094		4523<4803	3-WAY TO 23-WAY	*Call
2094		4523<4804	4-WAY TO 23-WAY	*Call
2094		4523<4805	5-WAY TO 23-WAY	*Call
2094		4523<4806	6-WAY TO 23-WAY	*Call
2094		4523<4807	7-WAY TO 23-WAY	*Call
2094		4523<4808	8-WAY TO 23-WAY	*Call
2094		4524<4500	ZERO-WAY TO 24-WAY	*Call
2094		4524<4501	1-WAY TO 24-WAY	*Call
2094		4524<4502	2-WAY TO 24-WAY	*Call
2094		4524<4503	3-WAY TO 24-WAY	*Call
2094		4524<4504	4-WAY TO 24-WAY	*Call
2094		4524<4505	5-WAY TO 24-WAY	*Call
2094		4524<4506	6-WAY TO 24-WAY	*Call
2094		4524<4507	7-WAY TO 24-WAY	*Call
2094		4524<4508	8-WAY TO 24-WAY	*Call
2094		4524<4509	9-WAY TO 24-WAY	*Call
2094		4524<4510	10-WAY TO 24-WAY	*Call
2094		4524<4511	11-WAY TO 24-WAY	*Call
2094		4524<4512	12-WAY TO 24-WAY	*Call
2094		4524<4513	13-WAY TO 24-WAY	*Call
2094		4524<4514	14-WAY TO 24-WAY	*Call
2094		4524<4515	15-WAY TO 24-WAY	*Call
2094		4524<4516	16-WAY TO 24-WAY	*Call
2094		4524<4517	17-WAY TO 24-WAY	*Call
2094		4524<4518	18-WAY TO 24-WAY	*Call
2094		4524<4519	19-WAY TO 24-WAY	*Call
2094		4524<4520	20-WAY TO 24-WAY	*Call
2094		4524<4521	21-WAY TO 24-WAY	*Call
2094		4524<4522	22-WAY TO 24-WAY	*Call
2094		4524<4523	23-WAY TO 24-WAY	*Call
2094		4524<4525	25-WAY TO 24-WAY	*Call
2094		4524<4526	26-WAY TO 24-WAY	*Call
2094		4524<4527	27-WAY TO 24-WAY	*Call
2094		4524<4528	28-WAY TO 24-WAY	*Call
2094		4524<4529	29-WAY TO 24-WAY	*Call
2094		4524<4530	30-WAY TO 24-WAY	*Call
2094		4524<4531	31-WAY TO 24-WAY	*Call
2094		4524<4532	32-WAY TO 24-WAY	*Call
2094		4524<4533	33-WAY TO 24-WAY	*Call
2094		4524<4534	34-WAY TO 24-WAY	*Call
2094		4524<4535	35-WAY TO 24-WAY	*Call
2094		4524<4536	36-WAY TO 24-WAY	*Call
2094		4524<4537	37-WAY TO 24-WAY	*Call
2094		4524<4538	38-WAY TO 24-WAY	*Call
2094		4524<4539	39-WAY TO 24-WAY	*Call
2094		4524<4540	40-WAY TO 24-WAY	*Call
2094		4524<4541	41-WAY TO 24-WAY	*Call
2094		4524<4542	42-WAY TO 24-WAY	*Call
2094		4524<4543	43-WAY TO 24-WAY	*Call
2094		4524<4544	44-WAY TO 24-WAY	*Call
2094		4524<4545	45-WAY TO 24-WAY	*Call
2094		4524<4546	46-WAY TO 24-WAY	*Call
2094		4524<4547	47-WAY TO 24-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4524<4548	48-WAY TO 24-WAY	*Call
2094		4524<4549	49-WAY TO 24-WAY	*Call
2094		4524<4550	50-WAY TO 24-WAY	*Call
2094		4524<4551	51-WAY TO 24-WAY	*Call
2094		4524<4552	52-WAY TO 24-WAY	*Call
2094		4524<4553	53-WAY TO 24-WAY	*Call
2094		4524<4554	54-WAY TO 24-WAY	*Call
2094		4524<4601	1-WAY TO 24-WAY	*Call
2094		4524<4602	2-WAY TO 24-WAY	*Call
2094		4524<4603	3-WAY TO 24-WAY	*Call
2094		4524<4604	4-WAY TO 24-WAY	*Call
2094		4524<4605	5-WAY TO 24-WAY	*Call
2094		4524<4606	6-WAY TO 24-WAY	*Call
2094		4524<4607	7-WAY TO 24-WAY	*Call
2094		4524<4608	8-WAY TO 24-WAY	*Call
2094		4524<4701	1-WAY TO 24-WAY	*Call
2094		4524<4702	2-WAY TO 24-WAY	*Call
2094		4524<4703	3-WAY TO 24-WAY	*Call
2094		4524<4704	4-WAY TO 24-WAY	*Call
2094		4524<4705	5-WAY TO 24-WAY	*Call
2094		4524<4706	6-WAY TO 24-WAY	*Call
2094		4524<4707	7-WAY TO 24-WAY	*Call
2094		4524<4708	8-WAY TO 24-WAY	*Call
2094		4524<4801	1-WAY TO 24-WAY	*Call
2094		4524<4802	2-WAY TO 24-WAY	*Call
2094		4524<4803	3-WAY TO 24-WAY	*Call
2094		4524<4804	4-WAY TO 24-WAY	*Call
2094		4524<4805	5-WAY TO 24-WAY	*Call
2094		4524<4806	6-WAY TO 24-WAY	*Call
2094		4524<4807	7-WAY TO 24-WAY	*Call
2094		4524<4808	8-WAY TO 24-WAY	*Call
2094		4525<4500	ZERO-WAY TO 25-WAY	*Call
2094		4525<4501	1-WAY TO 25-WAY	*Call
2094		4525<4502	2-WAY TO 25-WAY	*Call
2094		4525<4503	3-WAY TO 25-WAY	*Call
2094		4525<4504	4-WAY TO 25-WAY	*Call
2094		4525<4505	5-WAY TO 25-WAY	*Call
2094		4525<4506	6-WAY TO 25-WAY	*Call
2094		4525<4507	7-WAY TO 25-WAY	*Call
2094		4525<4508	8-WAY TO 25-WAY	*Call
2094		4525<4509	9-WAY TO 25-WAY	*Call
2094		4525<4510	10-WAY TO 25-WAY	*Call
2094		4525<4511	11-WAY TO 25-WAY	*Call
2094		4525<4512	12-WAY TO 25-WAY	*Call
2094		4525<4513	13-WAY TO 25-WAY	*Call
2094		4525<4514	14-WAY TO 25-WAY	*Call
2094		4525<4515	15-WAY TO 25-WAY	*Call
2094		4525<4516	16-WAY TO 25-WAY	*Call
2094		4525<4517	17-WAY TO 25-WAY	*Call
2094		4525<4518	18-WAY TO 25-WAY	*Call
2094		4525<4519	19-WAY TO 25-WAY	*Call
2094		4525<4520	20-WAY TO 25-WAY	*Call
2094		4525<4521	21-WAY TO 25-WAY	*Call
2094		4525<4522	22-WAY TO 25-WAY	*Call
2094		4525<4523	23-WAY TO 25-WAY	*Call
2094		4525<4524	24-WAY TO 25-WAY	*Call
2094		4525<4526	26-WAY TO 25-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4525<4527	27-WAY TO 25-WAY	*Call
2094		4525<4528	28-WAY TO 25-WAY	*Call
2094		4525<4529	29-WAY TO 25-WAY	*Call
2094		4525<4530	30-WAY TO 25-WAY	*Call
2094		4525<4531	31-WAY TO 25-WAY	*Call
2094		4525<4532	32-WAY TO 25-WAY	*Call
2094		4525<4533	33-WAY TO 25-WAY	*Call
2094		4525<4534	34-WAY TO 25-WAY	*Call
2094		4525<4535	35-WAY TO 25-WAY	*Call
2094		4525<4536	36-WAY TO 25-WAY	*Call
2094		4525<4537	37-WAY TO 25-WAY	*Call
2094		4525<4538	38-WAY TO 25-WAY	*Call
2094		4525<4539	39-WAY TO 25-WAY	*Call
2094		4525<4540	40-WAY TO 25-WAY	*Call
2094		4525<4541	41-WAY TO 25-WAY	*Call
2094		4525<4542	42-WAY TO 25-WAY	*Call
2094		4525<4543	43-WAY TO 25-WAY	*Call
2094		4525<4544	44-WAY TO 25-WAY	*Call
2094		4525<4545	45-WAY TO 25-WAY	*Call
2094		4525<4546	46-WAY TO 25-WAY	*Call
2094		4525<4547	47-WAY TO 25-WAY	*Call
2094		4525<4548	48-WAY TO 25-WAY	*Call
2094		4525<4549	49-WAY TO 25-WAY	*Call
2094		4525<4550	50-WAY TO 25-WAY	*Call
2094		4525<4551	51-WAY TO 25-WAY	*Call
2094		4525<4552	52-WAY TO 25-WAY	*Call
2094		4525<4553	53-WAY TO 25-WAY	*Call
2094		4525<4554	54-WAY TO 25-WAY	*Call
2094		4525<4601	1-WAY TO 25-WAY	*Call
2094		4525<4602	2-WAY TO 25-WAY	*Call
2094		4525<4603	3-WAY TO 25-WAY	*Call
2094		4525<4604	4-WAY TO 25-WAY	*Call
2094		4525<4605	5-WAY TO 25-WAY	*Call
2094		4525<4606	6-WAY TO 25-WAY	*Call
2094		4525<4607	7-WAY TO 25-WAY	*Call
2094		4525<4608	8-WAY TO 25-WAY	*Call
2094		4525<4701	1-WAY TO 25-WAY	*Call
2094		4525<4702	2-WAY TO 25-WAY	*Call
2094		4525<4703	3-WAY TO 25-WAY	*Call
2094		4525<4704	4-WAY TO 25-WAY	*Call
2094		4525<4705	5-WAY TO 25-WAY	*Call
2094		4525<4706	6-WAY TO 25-WAY	*Call
2094		4525<4707	7-WAY TO 25-WAY	*Call
2094		4525<4708	8-WAY TO 25-WAY	*Call
2094		4525<4801	1-WAY TO 25-WAY	*Call
2094		4525<4802	2-WAY TO 25-WAY	*Call
2094		4525<4803	3-WAY TO 25-WAY	*Call
2094		4525<4804	4-WAY TO 25-WAY	*Call
2094		4525<4805	5-WAY TO 25-WAY	*Call
2094		4525<4806	6-WAY TO 25-WAY	*Call
2094		4525<4807	7-WAY TO 25-WAY	*Call
2094		4525<4808	8-WAY TO 25-WAY	*Call
2094		4526<4500	ZERO-WAY TO 26-WAY	*Call
2094		4526<4501	1-WAY TO 26-WAY	*Call
2094		4526<4502	2-WAY TO 26-WAY	*Call
2094		4526<4503	3-WAY TO 26-WAY	*Call
2094		4526<4504	4-WAY TO 26-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4526<4505	5-WAY TO 26-WAY	*Call
2094		4526<4506	6-WAY TO 26-WAY	*Call
2094		4526<4507	7-WAY TO 26-WAY	*Call
2094		4526<4508	8-WAY TO 26-WAY	*Call
2094		4526<4509	9-WAY TO 26-WAY	*Call
2094		4526<4510	10-WAY TO 26-WAY	*Call
2094		4526<4511	11-WAY TO 26-WAY	*Call
2094		4526<4512	12-WAY TO 26-WAY	*Call
2094		4526<4513	13-WAY TO 26-WAY	*Call
2094		4526<4514	14-WAY TO 26-WAY	*Call
2094		4526<4515	15-WAY TO 26-WAY	*Call
2094		4526<4516	16-WAY TO 26-WAY	*Call
2094		4526<4517	17-WAY TO 26-WAY	*Call
2094		4526<4518	18-WAY TO 26-WAY	*Call
2094		4526<4519	19-WAY TO 26-WAY	*Call
2094		4526<4520	20-WAY TO 26-WAY	*Call
2094		4526<4521	21-WAY TO 26-WAY	*Call
2094		4526<4522	22-WAY TO 26-WAY	*Call
2094		4526<4523	23-WAY TO 26-WAY	*Call
2094		4526<4524	24-WAY TO 26-WAY	*Call
2094		4526<4525	25-WAY TO 26-WAY	*Call
2094		4526<4527	27-WAY TO 26-WAY	*Call
2094		4526<4528	28-WAY TO 26-WAY	*Call
2094		4526<4529	29-WAY TO 26-WAY	*Call
2094		4526<4530	30-WAY TO 26-WAY	*Call
2094		4526<4531	31-WAY TO 26-WAY	*Call
2094		4526<4532	32-WAY TO 26-WAY	*Call
2094		4526<4533	33-WAY TO 26-WAY	*Call
2094		4526<4534	34-WAY TO 26-WAY	*Call
2094		4526<4535	35-WAY TO 26-WAY	*Call
2094		4526<4536	36-WAY TO 26-WAY	*Call
2094		4526<4537	37-WAY TO 26-WAY	*Call
2094		4526<4538	38-WAY TO 26-WAY	*Call
2094		4526<4539	39-WAY TO 26-WAY	*Call
2094		4526<4540	40-WAY TO 26-WAY	*Call
2094		4526<4541	41-WAY TO 26-WAY	*Call
2094		4526<4542	42-WAY TO 26-WAY	*Call
2094		4526<4543	43-WAY TO 26-WAY	*Call
2094		4526<4544	44-WAY TO 26-WAY	*Call
2094		4526<4545	45-WAY TO 26-WAY	*Call
2094		4526<4546	46-WAY TO 26-WAY	*Call
2094		4526<4547	47-WAY TO 26-WAY	*Call
2094		4526<4548	48-WAY TO 26-WAY	*Call
2094		4526<4549	49-WAY TO 26-WAY	*Call
2094		4526<4550	50-WAY TO 26-WAY	*Call
2094		4526<4551	51-WAY TO 26-WAY	*Call
2094		4526<4552	52-WAY TO 26-WAY	*Call
2094		4526<4553	53-WAY TO 26-WAY	*Call
2094		4526<4554	54-WAY TO 26-WAY	*Call
2094		4526<4601	1-WAY TO 26-WAY	*Call
2094		4526<4602	2-WAY TO 26-WAY	*Call
2094		4526<4603	3-WAY TO 26-WAY	*Call
2094		4526<4604	4-WAY TO 26-WAY	*Call
2094		4526<4605	5-WAY TO 26-WAY	*Call
2094		4526<4606	6-WAY TO 26-WAY	*Call
2094		4526<4607	7-WAY TO 26-WAY	*Call
2094		4526<4608	8-WAY TO 26-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4526<4701	1-WAY TO 26-WAY	*Call
2094		4526<4702	2-WAY TO 26-WAY	*Call
2094		4526<4703	3-WAY TO 26-WAY	*Call
2094		4526<4704	4-WAY TO 26-WAY	*Call
2094		4526<4705	5-WAY TO 26-WAY	*Call
2094		4526<4706	6-WAY TO 26-WAY	*Call
2094		4526<4707	7-WAY TO 26-WAY	*Call
2094		4526<4708	8-WAY TO 26-WAY	*Call
2094		4526<4801	1-WAY TO 26-WAY	*Call
2094		4526<4802	2-WAY TO 26-WAY	*Call
2094		4526<4803	3-WAY TO 26-WAY	*Call
2094		4526<4804	4-WAY TO 26-WAY	*Call
2094		4526<4805	5-WAY TO 26-WAY	*Call
2094		4526<4806	6-WAY TO 26-WAY	*Call
2094		4526<4807	7-WAY TO 26-WAY	*Call
2094		4526<4808	8-WAY TO 26-WAY	*Call
2094		4527<4500	ZERO-WAY TO 27-WAY	*Call
2094		4527<4501	1-WAY TO 27-WAY	*Call
2094		4527<4502	2-WAY TO 27-WAY	*Call
2094		4527<4503	3-WAY TO 27-WAY	*Call
2094		4527<4504	4-WAY TO 27-WAY	*Call
2094		4527<4505	5-WAY TO 27-WAY	*Call
2094		4527<4506	6-WAY TO 27-WAY	*Call
2094		4527<4507	7-WAY TO 27-WAY	*Call
2094		4527<4508	8-WAY TO 27-WAY	*Call
2094		4527<4509	9-WAY TO 27-WAY	*Call
2094		4527<4510	10-WAY TO 27-WAY	*Call
2094		4527<4511	11-WAY TO 27-WAY	*Call
2094		4527<4512	12-WAY TO 27-WAY	*Call
2094		4527<4513	13-WAY TO 27-WAY	*Call
2094		4527<4514	14-WAY TO 27-WAY	*Call
2094		4527<4515	15-WAY TO 27-WAY	*Call
2094		4527<4516	16-WAY TO 27-WAY	*Call
2094		4527<4517	17-WAY TO 27-WAY	*Call
2094		4527<4518	18-WAY TO 27-WAY	*Call
2094		4527<4519	19-WAY TO 27-WAY	*Call
2094		4527<4520	20-WAY TO 27-WAY	*Call
2094		4527<4521	21-WAY TO 27-WAY	*Call
2094		4527<4522	22-WAY TO 27-WAY	*Call
2094		4527<4523	23-WAY TO 27-WAY	*Call
2094		4527<4524	24-WAY TO 27-WAY	*Call
2094		4527<4525	25-WAY TO 27-WAY	*Call
2094		4527<4526	26-WAY TO 27-WAY	*Call
2094		4527<4528	28-WAY TO 27-WAY	*Call
2094		4527<4529	29-WAY TO 27-WAY	*Call
2094		4527<4530	30-WAY TO 27-WAY	*Call
2094		4527<4531	31-WAY TO 27-WAY	*Call
2094		4527<4532	32-WAY TO 27-WAY	*Call
2094		4527<4533	33-WAY TO 27-WAY	*Call
2094		4527<4534	34-WAY TO 27-WAY	*Call
2094		4527<4535	35-WAY TO 27-WAY	*Call
2094		4527<4536	36-WAY TO 27-WAY	*Call
2094		4527<4537	37-WAY TO 27-WAY	*Call
2094		4527<4538	38-WAY TO 27-WAY	*Call
2094		4527<4539	39-WAY TO 27-WAY	*Call
2094		4527<4540	40-WAY TO 27-WAY	*Call
2094		4527<4541	41-WAY TO 27-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4527<4542	42-WAY TO 27-WAY	*Call
2094		4527<4543	43-WAY TO 27-WAY	*Call
2094		4527<4544	44-WAY TO 27-WAY	*Call
2094		4527<4545	45-WAY TO 27-WAY	*Call
2094		4527<4546	46-WAY TO 27-WAY	*Call
2094		4527<4547	47-WAY TO 27-WAY	*Call
2094		4527<4548	48-WAY TO 27-WAY	*Call
2094		4527<4549	49-WAY TO 27-WAY	*Call
2094		4527<4550	50-WAY TO 27-WAY	*Call
2094		4527<4551	51-WAY TO 27-WAY	*Call
2094		4527<4552	52-WAY TO 27-WAY	*Call
2094		4527<4553	53-WAY TO 27-WAY	*Call
2094		4527<4554	54-WAY TO 27-WAY	*Call
2094		4527<4601	1-WAY TO 27-WAY	*Call
2094		4527<4602	2-WAY TO 27-WAY	*Call
2094		4527<4603	3-WAY TO 27-WAY	*Call
2094		4527<4604	4-WAY TO 27-WAY	*Call
2094		4527<4605	5-WAY TO 27-WAY	*Call
2094		4527<4606	6-WAY TO 27-WAY	*Call
2094		4527<4607	7-WAY TO 27-WAY	*Call
2094		4527<4608	8-WAY TO 27-WAY	*Call
2094		4527<4701	1-WAY TO 27-WAY	*Call
2094		4527<4702	2-WAY TO 27-WAY	*Call
2094		4527<4703	3-WAY TO 27-WAY	*Call
2094		4527<4704	4-WAY TO 27-WAY	*Call
2094		4527<4705	5-WAY TO 27-WAY	*Call
2094		4527<4706	6-WAY TO 27-WAY	*Call
2094		4527<4707	7-WAY TO 27-WAY	*Call
2094		4527<4708	8-WAY TO 27-WAY	*Call
2094		4527<4801	1-WAY TO 27-WAY	*Call
2094		4527<4802	2-WAY TO 27-WAY	*Call
2094		4527<4803	3-WAY TO 27-WAY	*Call
2094		4527<4804	4-WAY TO 27-WAY	*Call
2094		4527<4805	5-WAY TO 27-WAY	*Call
2094		4527<4806	6-WAY TO 27-WAY	*Call
2094		4527<4807	7-WAY TO 27-WAY	*Call
2094		4527<4808	8-WAY TO 27-WAY	*Call
2094		4528<4500	ZERO-WAY TO 28-WAY	*Call
2094		4528<4501	1-WAY TO 28-WAY	*Call
2094		4528<4502	2-WAY TO 28-WAY	*Call
2094		4528<4503	3-WAY TO 28-WAY	*Call
2094		4528<4504	4-WAY TO 28-WAY	*Call
2094		4528<4505	5-WAY TO 28-WAY	*Call
2094		4528<4506	6-WAY TO 28-WAY	*Call
2094		4528<4507	7-WAY TO 28-WAY	*Call
2094		4528<4508	8-WAY TO 28-WAY	*Call
2094		4528<4509	9-WAY TO 28-WAY	*Call
2094		4528<4510	10-WAY TO 28-WAY	*Call
2094		4528<4511	11-WAY TO 28-WAY	*Call
2094		4528<4512	12-WAY TO 28-WAY	*Call
2094		4528<4513	13-WAY TO 28-WAY	*Call
2094		4528<4514	14-WAY TO 28-WAY	*Call
2094		4528<4515	15-WAY TO 28-WAY	*Call
2094		4528<4516	16-WAY TO 28-WAY	*Call
2094		4528<4517	17-WAY TO 28-WAY	*Call
2094		4528<4518	18-WAY TO 28-WAY	*Call
2094		4528<4519	19-WAY TO 28-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4528<4520	20-WAY TO 28-WAY	*Call
2094		4528<4521	21-WAY TO 28-WAY	*Call
2094		4528<4522	22-WAY TO 28-WAY	*Call
2094		4528<4523	23-WAY TO 28-WAY	*Call
2094		4528<4524	24-WAY TO 28-WAY	*Call
2094		4528<4525	25-WAY TO 28-WAY	*Call
2094		4528<4526	26-WAY TO 28-WAY	*Call
2094		4528<4527	27-WAY TO 28-WAY	*Call
2094		4528<4529	29-WAY TO 28-WAY	*Call
2094		4528<4530	30-WAY TO 28-WAY	*Call
2094		4528<4531	31-WAY TO 28-WAY	*Call
2094		4528<4532	32-WAY TO 28-WAY	*Call
2094		4528<4533	33-WAY TO 28-WAY	*Call
2094		4528<4534	34-WAY TO 28-WAY	*Call
2094		4528<4535	35-WAY TO 28-WAY	*Call
2094		4528<4536	36-WAY TO 28-WAY	*Call
2094		4528<4537	37-WAY TO 28-WAY	*Call
2094		4528<4538	38-WAY TO 28-WAY	*Call
2094		4528<4539	39-WAY TO 28-WAY	*Call
2094		4528<4540	40-WAY TO 28-WAY	*Call
2094		4528<4541	41-WAY TO 28-WAY	*Call
2094		4528<4542	42-WAY TO 28-WAY	*Call
2094		4528<4543	43-WAY TO 28-WAY	*Call
2094		4528<4544	44-WAY TO 28-WAY	*Call
2094		4528<4545	45-WAY TO 28-WAY	*Call
2094		4528<4546	46-WAY TO 28-WAY	*Call
2094		4528<4547	47-WAY TO 28-WAY	*Call
2094		4528<4548	48-WAY TO 28-WAY	*Call
2094		4528<4549	49-WAY TO 28-WAY	*Call
2094		4528<4550	50-WAY TO 28-WAY	*Call
2094		4528<4551	51-WAY TO 28-WAY	*Call
2094		4528<4552	52-WAY TO 28-WAY	*Call
2094		4528<4553	53-WAY TO 28-WAY	*Call
2094		4528<4554	54-WAY TO 28-WAY	*Call
2094		4528<4601	1-WAY TO 28-WAY	*Call
2094		4528<4602	2-WAY TO 28-WAY	*Call
2094		4528<4603	3-WAY TO 28-WAY	*Call
2094		4528<4604	4-WAY TO 28-WAY	*Call
2094		4528<4605	5-WAY TO 28-WAY	*Call
2094		4528<4606	6-WAY TO 28-WAY	*Call
2094		4528<4607	7-WAY TO 28-WAY	*Call
2094		4528<4608	8-WAY TO 28-WAY	*Call
2094		4528<4701	1-WAY TO 28-WAY	*Call
2094		4528<4702	2-WAY TO 28-WAY	*Call
2094		4528<4703	3-WAY TO 28-WAY	*Call
2094		4528<4704	4-WAY TO 28-WAY	*Call
2094		4528<4705	5-WAY TO 28-WAY	*Call
2094		4528<4706	6-WAY TO 28-WAY	*Call
2094		4528<4707	7-WAY TO 28-WAY	*Call
2094		4528<4708	8-WAY TO 28-WAY	*Call
2094		4528<4801	1-WAY TO 28-WAY	*Call
2094		4528<4802	2-WAY TO 28-WAY	*Call
2094		4528<4803	3-WAY TO 28-WAY	*Call
2094		4528<4804	4-WAY TO 28-WAY	*Call
2094		4528<4805	5-WAY TO 28-WAY	*Call
2094		4528<4806	6-WAY TO 28-WAY	*Call
2094		4528<4807	7-WAY TO 28-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4528<4808	8-WAY TO 28-WAY	*Call
2094		4529<4500	ZERO-WAY TO 29-WAY	*Call
2094		4529<4501	1-WAY TO 29-WAY	*Call
2094		4529<4502	2-WAY TO 29-WAY	*Call
2094		4529<4503	3-WAY TO 29-WAY	*Call
2094		4529<4504	4-WAY TO 29-WAY	*Call
2094		4529<4505	5-WAY TO 29-WAY	*Call
2094		4529<4506	6-WAY TO 29-WAY	*Call
2094		4529<4507	7-WAY TO 29-WAY	*Call
2094		4529<4508	8-WAY TO 29-WAY	*Call
2094		4529<4509	9-WAY TO 29-WAY	*Call
2094		4529<4510	10-WAY TO 29-WAY	*Call
2094		4529<4511	11-WAY TO 29-WAY	*Call
2094		4529<4512	12-WAY TO 29-WAY	*Call
2094		4529<4513	13-WAY TO 29-WAY	*Call
2094		4529<4514	14-WAY TO 29-WAY	*Call
2094		4529<4515	15-WAY TO 29-WAY	*Call
2094		4529<4516	16-WAY TO 29-WAY	*Call
2094		4529<4517	17-WAY TO 29-WAY	*Call
2094		4529<4518	18-WAY TO 29-WAY	*Call
2094		4529<4519	19-WAY TO 29-WAY	*Call
2094		4529<4520	20-WAY TO 29-WAY	*Call
2094		4529<4521	21-WAY TO 29-WAY	*Call
2094		4529<4522	22-WAY TO 29-WAY	*Call
2094		4529<4523	23-WAY TO 29-WAY	*Call
2094		4529<4524	24-WAY TO 29-WAY	*Call
2094		4529<4525	25-WAY TO 29-WAY	*Call
2094		4529<4526	26-WAY TO 29-WAY	*Call
2094		4529<4527	27-WAY TO 29-WAY	*Call
2094		4529<4528	28-WAY TO 29-WAY	*Call
2094		4529<4530	30-WAY TO 29-WAY	*Call
2094		4529<4531	31-WAY TO 29-WAY	*Call
2094		4529<4532	32-WAY TO 29-WAY	*Call
2094		4529<4533	33-WAY TO 29-WAY	*Call
2094		4529<4534	34-WAY TO 29-WAY	*Call
2094		4529<4535	35-WAY TO 29-WAY	*Call
2094		4529<4536	36-WAY TO 29-WAY	*Call
2094		4529<4537	37-WAY TO 29-WAY	*Call
2094		4529<4538	38-WAY TO 29-WAY	*Call
2094		4529<4539	39-WAY TO 29-WAY	*Call
2094		4529<4540	40-WAY TO 29-WAY	*Call
2094		4529<4541	41-WAY TO 29-WAY	*Call
2094		4529<4542	42-WAY TO 29-WAY	*Call
2094		4529<4543	43-WAY TO 29-WAY	*Call
2094		4529<4544	44-WAY TO 29-WAY	*Call
2094		4529<4545	45-WAY TO 29-WAY	*Call
2094		4529<4546	46-WAY TO 29-WAY	*Call
2094		4529<4547	47-WAY TO 29-WAY	*Call
2094		4529<4548	48-WAY TO 29-WAY	*Call
2094		4529<4549	49-WAY TO 29-WAY	*Call
2094		4529<4550	50-WAY TO 29-WAY	*Call
2094		4529<4551	51-WAY TO 29-WAY	*Call
2094		4529<4552	52-WAY TO 29-WAY	*Call
2094		4529<4553	53-WAY TO 29-WAY	*Call
2094		4529<4554	54-WAY TO 29-WAY	*Call
2094		4529<4601	1-WAY TO 29-WAY	*Call
2094		4529<4602	2-WAY TO 29-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4529<4603	3-WAY TO 29-WAY	*Call
2094		4529<4604	4-WAY TO 29-WAY	*Call
2094		4529<4605	5-WAY TO 29-WAY	*Call
2094		4529<4606	6-WAY TO 29-WAY	*Call
2094		4529<4607	7-WAY TO 29-WAY	*Call
2094		4529<4608	8-WAY TO 29-WAY	*Call
2094		4529<4701	1-WAY TO 29-WAY	*Call
2094		4529<4702	2-WAY TO 29-WAY	*Call
2094		4529<4703	3-WAY TO 29-WAY	*Call
2094		4529<4704	4-WAY TO 29-WAY	*Call
2094		4529<4705	5-WAY TO 29-WAY	*Call
2094		4529<4706	6-WAY TO 29-WAY	*Call
2094		4529<4707	7-WAY TO 29-WAY	*Call
2094		4529<4708	8-WAY TO 29-WAY	*Call
2094		4529<4801	1-WAY TO 29-WAY	*Call
2094		4529<4802	2-WAY TO 29-WAY	*Call
2094		4529<4803	3-WAY TO 29-WAY	*Call
2094		4529<4804	4-WAY TO 29-WAY	*Call
2094		4529<4805	5-WAY TO 29-WAY	*Call
2094		4529<4806	6-WAY TO 29-WAY	*Call
2094		4529<4807	7-WAY TO 29-WAY	*Call
2094		4529<4808	8-WAY TO 29-WAY	*Call
2094		4530<4500	ZERO-WAY TO 30-WAY	*Call
2094		4530<4501	1-WAY TO 30-WAY	*Call
2094		4530<4502	2-WAY TO 30-WAY	*Call
2094		4530<4503	3-WAY TO 30-WAY	*Call
2094		4530<4504	4-WAY TO 30-WAY	*Call
2094		4530<4505	5-WAY TO 30-WAY	*Call
2094		4530<4506	6-WAY TO 30-WAY	*Call
2094		4530<4507	7-WAY TO 30-WAY	*Call
2094		4530<4508	8-WAY TO 30-WAY	*Call
2094		4530<4509	9-WAY TO 30-WAY	*Call
2094		4530<4510	10-WAY TO 30-WAY	*Call
2094		4530<4511	11-WAY TO 30-WAY	*Call
2094		4530<4512	12-WAY TO 30-WAY	*Call
2094		4530<4513	13-WAY TO 30-WAY	*Call
2094		4530<4514	14-WAY TO 30-WAY	*Call
2094		4530<4515	15-WAY TO 30-WAY	*Call
2094		4530<4516	16-WAY TO 30-WAY	*Call
2094		4530<4517	17-WAY TO 30-WAY	*Call
2094		4530<4518	18-WAY TO 30-WAY	*Call
2094		4530<4519	19-WAY TO 30-WAY	*Call
2094		4530<4520	20-WAY TO 30-WAY	*Call
2094		4530<4521	21-WAY TO 30-WAY	*Call
2094		4530<4522	22-WAY TO 30-WAY	*Call
2094		4530<4523	23-WAY TO 30-WAY	*Call
2094		4530<4524	24-WAY TO 30-WAY	*Call
2094		4530<4525	25-WAY TO 30-WAY	*Call
2094		4530<4526	26-WAY TO 30-WAY	*Call
2094		4530<4527	27-WAY TO 30-WAY	*Call
2094		4530<4528	28-WAY TO 30-WAY	*Call
2094		4530<4529	29-WAY TO 30-WAY	*Call
2094		4530<4531	31-WAY TO 30-WAY	*Call
2094		4530<4532	32-WAY TO 30-WAY	*Call
2094		4530<4533	33-WAY TO 30-WAY	*Call
2094		4530<4534	34-WAY TO 30-WAY	*Call
2094		4530<4535	35-WAY TO 30-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4530<4536	36-WAY TO 30-WAY	*Call
2094		4530<4537	37-WAY TO 30-WAY	*Call
2094		4530<4538	38-WAY TO 30-WAY	*Call
2094		4530<4539	39-WAY TO 30-WAY	*Call
2094		4530<4540	40-WAY TO 30-WAY	*Call
2094		4530<4541	41-WAY TO 30-WAY	*Call
2094		4530<4542	42-WAY TO 30-WAY	*Call
2094		4530<4543	43-WAY TO 30-WAY	*Call
2094		4530<4544	44-WAY TO 30-WAY	*Call
2094		4530<4545	45-WAY TO 30-WAY	*Call
2094		4530<4546	46-WAY TO 30-WAY	*Call
2094		4530<4547	47-WAY TO 30-WAY	*Call
2094		4530<4548	48-WAY TO 30-WAY	*Call
2094		4530<4549	49-WAY TO 30-WAY	*Call
2094		4530<4550	50-WAY TO 30-WAY	*Call
2094		4530<4551	51-WAY TO 30-WAY	*Call
2094		4530<4552	52-WAY TO 30-WAY	*Call
2094		4530<4553	53-WAY TO 30-WAY	*Call
2094		4530<4554	54-WAY TO 30-WAY	*Call
2094		4530<4601	1-WAY TO 30-WAY	*Call
2094		4530<4602	2-WAY TO 30-WAY	*Call
2094		4530<4603	3-WAY TO 30-WAY	*Call
2094		4530<4604	4-WAY TO 30-WAY	*Call
2094		4530<4605	5-WAY TO 30-WAY	*Call
2094		4530<4606	6-WAY TO 30-WAY	*Call
2094		4530<4607	7-WAY TO 30-WAY	*Call
2094		4530<4608	8-WAY TO 30-WAY	*Call
2094		4530<4701	1-WAY TO 30-WAY	*Call
2094		4530<4702	2-WAY TO 30-WAY	*Call
2094		4530<4703	3-WAY TO 30-WAY	*Call
2094		4530<4704	4-WAY TO 30-WAY	*Call
2094		4530<4705	5-WAY TO 30-WAY	*Call
2094		4530<4706	6-WAY TO 30-WAY	*Call
2094		4530<4707	7-WAY TO 30-WAY	*Call
2094		4530<4708	8-WAY TO 30-WAY	*Call
2094		4530<4801	1-WAY TO 30-WAY	*Call
2094		4530<4802	2-WAY TO 30-WAY	*Call
2094		4530<4803	3-WAY TO 30-WAY	*Call
2094		4530<4804	4-WAY TO 30-WAY	*Call
2094		4530<4805	5-WAY TO 30-WAY	*Call
2094		4530<4806	6-WAY TO 30-WAY	*Call
2094		4530<4807	7-WAY TO 30-WAY	*Call
2094		4530<4808	8-WAY TO 30-WAY	*Call
2094		4531<4500	ZERO-WAY TO 31-WAY	*Call
2094		4531<4501	1-WAY TO 31-WAY	*Call
2094		4531<4502	2-WAY TO 31-WAY	*Call
2094		4531<4503	3-WAY TO 31-WAY	*Call
2094		4531<4504	4-WAY TO 31-WAY	*Call
2094		4531<4505	5-WAY TO 31-WAY	*Call
2094		4531<4506	6-WAY TO 31-WAY	*Call
2094		4531<4507	7-WAY TO 31-WAY	*Call
2094		4531<4508	8-WAY TO 31-WAY	*Call
2094		4531<4509	9-WAY TO 31-WAY	*Call
2094		4531<4510	10-WAY TO 31-WAY	*Call
2094		4531<4511	11-WAY TO 31-WAY	*Call
2094		4531<4512	12-WAY TO 31-WAY	*Call
2094		4531<4513	13-WAY TO 31-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4531<4514	14-WAY TO 31-WAY	*Call
2094		4531<4515	15-WAY TO 31-WAY	*Call
2094		4531<4516	16-WAY TO 31-WAY	*Call
2094		4531<4517	17-WAY TO 31-WAY	*Call
2094		4531<4518	18-WAY TO 31-WAY	*Call
2094		4531<4519	19-WAY TO 31-WAY	*Call
2094		4531<4520	20-WAY TO 31-WAY	*Call
2094		4531<4521	21-WAY TO 31-WAY	*Call
2094		4531<4522	22-WAY TO 31-WAY	*Call
2094		4531<4523	23-WAY TO 31-WAY	*Call
2094		4531<4524	24-WAY TO 31-WAY	*Call
2094		4531<4525	25-WAY TO 31-WAY	*Call
2094		4531<4526	26-WAY TO 31-WAY	*Call
2094		4531<4527	27-WAY TO 31-WAY	*Call
2094		4531<4528	28-WAY TO 31-WAY	*Call
2094		4531<4529	29-WAY TO 31-WAY	*Call
2094		4531<4530	30-WAY TO 31-WAY	*Call
2094		4531<4532	32-WAY TO 31-WAY	*Call
2094		4531<4533	33-WAY TO 31-WAY	*Call
2094		4531<4534	34-WAY TO 31-WAY	*Call
2094		4531<4535	35-WAY TO 31-WAY	*Call
2094		4531<4536	36-WAY TO 31-WAY	*Call
2094		4531<4537	37-WAY TO 31-WAY	*Call
2094		4531<4538	38-WAY TO 31-WAY	*Call
2094		4531<4539	39-WAY TO 31-WAY	*Call
2094		4531<4540	40-WAY TO 31-WAY	*Call
2094		4531<4541	41-WAY TO 31-WAY	*Call
2094		4531<4542	42-WAY TO 31-WAY	*Call
2094		4531<4543	43-WAY TO 31-WAY	*Call
2094		4531<4544	44-WAY TO 31-WAY	*Call
2094		4531<4545	45-WAY TO 31-WAY	*Call
2094		4531<4546	46-WAY TO 31-WAY	*Call
2094		4531<4547	47-WAY TO 31-WAY	*Call
2094		4531<4548	48-WAY TO 31-WAY	*Call
2094		4531<4549	49-WAY TO 31-WAY	*Call
2094		4531<4550	50-WAY TO 31-WAY	*Call
2094		4531<4551	51-WAY TO 31-WAY	*Call
2094		4531<4552	52-WAY TO 31-WAY	*Call
2094		4531<4553	53-WAY TO 31-WAY	*Call
2094		4531<4554	54-WAY TO 31-WAY	*Call
2094		4531<4601	1-WAY TO 31-WAY	*Call
2094		4531<4602	2-WAY TO 31-WAY	*Call
2094		4531<4603	3-WAY TO 31-WAY	*Call
2094		4531<4604	4-WAY TO 31-WAY	*Call
2094		4531<4605	5-WAY TO 31-WAY	*Call
2094		4531<4606	6-WAY TO 31-WAY	*Call
2094		4531<4607	7-WAY TO 31-WAY	*Call
2094		4531<4608	8-WAY TO 31-WAY	*Call
2094		4531<4701	1-WAY TO 31-WAY	*Call
2094		4531<4702	2-WAY TO 31-WAY	*Call
2094		4531<4703	3-WAY TO 31-WAY	*Call
2094		4531<4704	4-WAY TO 31-WAY	*Call
2094		4531<4705	5-WAY TO 31-WAY	*Call
2094		4531<4706	6-WAY TO 31-WAY	*Call
2094		4531<4707	7-WAY TO 31-WAY	*Call
2094		4531<4708	8-WAY TO 31-WAY	*Call
2094		4531<4801	1-WAY TO 31-WAY	*Call

Machine	Model	Feature	Description	GSA Price
2094		4531<4802	2-WAY TO 31-WAY	*Call
2094		4531<4803	3-WAY TO 31-WAY	*Call
2094		4531<4804	4-WAY TO 31-WAY	*Call
2094		4531<4805	5-WAY TO 31-WAY	*Call
2094		4531<4806	6-WAY TO 31-WAY	*Call
2094		4531<4807	7-WAY TO 31-WAY	*Call
2094		4531<4808	8-WAY TO 31-WAY	*Call
2094		4532<4500	ZERO-WAY TO 32-WAY	*Call
2094		4532<4501	1-WAY TO 32-WAY	*Call
2094		4532<4502	2-WAY TO 32-WAY	*Call
2094		4532<4503	3-WAY TO 32-WAY	*Call
2094		4532<4504	4-WAY TO 32-WAY	*Call
2094		4532<4505	5-WAY TO 32-WAY	*Call
2094		4532<4506	6-WAY TO 32-WAY	*Call
2094		4532<4507	7-WAY TO 32-WAY	*Call
2094		4532<4508	8-WAY TO 32-WAY	*Call
2094		4532<4509	9-WAY TO 32-WAY	*Call
2094		4532<4510	10-WAY TO 32-WAY	*Call
2094		4532<4511	11-WAY TO 32-WAY	*Call
2094		4532<4512	12-WAY TO 32-WAY	*Call
2094		4532<4513	13-WAY TO 32-WAY	*Call
2094		4532<4514	14-WAY TO 32-WAY	*Call
2094		4532<4515	15-WAY TO 32-WAY	*Call
2094		4532<4516	16-WAY TO 32-WAY	*Call
2094		4532<4517	17-WAY TO 32-WAY	*Call
2094		4532<4518	18-WAY TO 32-WAY	*Call
2094		4532<4519	19-WAY TO 32-WAY	*Call
2094		4532<4520	20-WAY TO 32-WAY	*Call
2094		4532<4521	21-WAY TO 32-WAY	*Call
2094		4532<4522	22-WAY TO 32-WAY	*Call
2094		4532<4523	23-WAY TO 32-WAY	*Call
2094		4532<4524	24-WAY TO 32-WAY	*Call
2094		4532<4525	25-WAY TO 32-WAY	*Call
2094		4532<4526	26-WAY TO 32-WAY	*Call
2094		4532<4527	27-WAY TO 32-WAY	*Call
2094		4532<4528	28-WAY TO 32-WAY	*Call
2094		4532<4529	29-WAY TO 32-WAY	*Call
2094		4532<4530	30-WAY TO 32-WAY	*Call
2094		4532<4531	31-WAY TO 32-WAY	*Call
2094		4532<4533	33-WAY TO 32-WAY	*Call
2094		4532<4534	34-WAY TO 32-WAY	*Call
2094		4532<4535	35-WAY TO 32-WAY	*Call
2094		4532<4536	36-WAY TO 32-WAY	*Call
2094		4532<4537	37-WAY TO 32-WAY	*Call
2094		4532<4538	38-WAY TO 32-WAY	*Call
2094		4532<4539	39-WAY TO 32-WAY	*Call
2094		4532<4540	40-WAY TO 32-WAY	*Call
2094		4532<4541	41-WAY TO 32-WAY	*Call
2094		4532<4542	42-WAY TO 32-WAY	*Call
2094		4532<4543	43-WAY TO 32-WAY	*Call
2094		4532<4544	44-WAY TO 32-WAY	*Call
2094		4532<4545	45-WAY TO 32-WAY	*Call
2094		4532<4546	46-WAY TO 32-WAY	*Call
2094		4532<4547	47-WAY TO 32-WAY	*Call
2094		4532<4548	48-WAY TO 32-WAY	*Call
2094		4532<4549	49-WAY TO 32-WAY	*Call
2094		4532<4550	50-WAY TO 32-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4532<4551	51-WAY TO 32-WAY	*Call
2094		4532<4552	52-WAY TO 32-WAY	*Call
2094		4532<4553	53-WAY TO 32-WAY	*Call
2094		4532<4554	54-WAY TO 32-WAY	*Call
2094		4532<4601	1-WAY TO 32-WAY	*Call
2094		4532<4602	2-WAY TO 32-WAY	*Call
2094		4532<4603	3-WAY TO 32-WAY	*Call
2094		4532<4604	4-WAY TO 32-WAY	*Call
2094		4532<4605	5-WAY TO 32-WAY	*Call
2094		4532<4606	6-WAY TO 32-WAY	*Call
2094		4532<4607	7-WAY TO 32-WAY	*Call
2094		4532<4608	8-WAY TO 32-WAY	*Call
2094		4532<4701	1-WAY TO 32-WAY	*Call
2094		4532<4702	2-WAY TO 32-WAY	*Call
2094		4532<4703	3-WAY TO 32-WAY	*Call
2094		4532<4704	4-WAY TO 32-WAY	*Call
2094		4532<4705	5-WAY TO 32-WAY	*Call
2094		4532<4706	6-WAY TO 32-WAY	*Call
2094		4532<4707	7-WAY TO 32-WAY	*Call
2094		4532<4708	8-WAY TO 32-WAY	*Call
2094		4532<4801	1-WAY TO 32-WAY	*Call
2094		4532<4802	2-WAY TO 32-WAY	*Call
2094		4532<4803	3-WAY TO 32-WAY	*Call
2094		4532<4804	4-WAY TO 32-WAY	*Call
2094		4532<4805	5-WAY TO 32-WAY	*Call
2094		4532<4806	6-WAY TO 32-WAY	*Call
2094		4532<4807	7-WAY TO 32-WAY	*Call
2094		4532<4808	8-WAY TO 32-WAY	*Call
2094		4533<4500	ZERO-WAY TO 33-WAY	*Call
2094		4533<4501	1-WAY TO 33-WAY	*Call
2094		4533<4502	2-WAY TO 33-WAY	*Call
2094		4533<4503	3-WAY TO 33-WAY	*Call
2094		4533<4504	4-WAY TO 33-WAY	*Call
2094		4533<4505	5-WAY TO 33-WAY	*Call
2094		4533<4506	6-WAY TO 33-WAY	*Call
2094		4533<4507	7-WAY TO 33-WAY	*Call
2094		4533<4508	8-WAY TO 33-WAY	*Call
2094		4533<4509	9-WAY TO 33-WAY	*Call
2094		4533<4510	10-WAY TO 33-WAY	*Call
2094		4533<4511	11-WAY TO 33-WAY	*Call
2094		4533<4512	12-WAY TO 33-WAY	*Call
2094		4533<4513	13-WAY TO 33-WAY	*Call
2094		4533<4514	14-WAY TO 33-WAY	*Call
2094		4533<4515	15-WAY TO 33-WAY	*Call
2094		4533<4516	16-WAY TO 33-WAY	*Call
2094		4533<4517	17-WAY TO 33-WAY	*Call
2094		4533<4518	18-WAY TO 33-WAY	*Call
2094		4533<4519	19-WAY TO 33-WAY	*Call
2094		4533<4520	20-WAY TO 33-WAY	*Call
2094		4533<4521	21-WAY TO 33-WAY	*Call
2094		4533<4522	22-WAY TO 33-WAY	*Call
2094		4533<4523	23-WAY TO 33-WAY	*Call
2094		4533<4524	24-WAY TO 33-WAY	*Call
2094		4533<4525	25-WAY TO 33-WAY	*Call
2094		4533<4526	26-WAY TO 33-WAY	*Call
2094		4533<4527	27-WAY TO 33-WAY	*Call
2094		4533<4528	28-WAY TO 33-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4533<4529	29-WAY TO 33-WAY	*Call
2094		4533<4530	30-WAY TO 33-WAY	*Call
2094		4533<4531	31-WAY TO 33-WAY	*Call
2094		4533<4532	32-WAY TO 33-WAY	*Call
2094		4533<4534	34-WAY TO 33-WAY	*Call
2094		4533<4535	35-WAY TO 33-WAY	*Call
2094		4533<4536	36-WAY TO 33-WAY	*Call
2094		4533<4537	37-WAY TO 33-WAY	*Call
2094		4533<4538	38-WAY TO 33-WAY	*Call
2094		4533<4539	39-WAY TO 33-WAY	*Call
2094		4533<4540	40-WAY TO 33-WAY	*Call
2094		4533<4541	41-WAY TO 33-WAY	*Call
2094		4533<4542	42-WAY TO 33-WAY	*Call
2094		4533<4543	43-WAY TO 33-WAY	*Call
2094		4533<4544	44-WAY TO 33-WAY	*Call
2094		4533<4545	45-WAY TO 33-WAY	*Call
2094		4533<4546	46-WAY TO 33-WAY	*Call
2094		4533<4547	47-WAY TO 33-WAY	*Call
2094		4533<4548	48-WAY TO 33-WAY	*Call
2094		4533<4549	49-WAY TO 33-WAY	*Call
2094		4533<4550	50-WAY TO 33-WAY	*Call
2094		4533<4551	51-WAY TO 33-WAY	*Call
2094		4533<4552	52-WAY TO 33-WAY	*Call
2094		4533<4553	53-WAY TO 33-WAY	*Call
2094		4533<4554	54-WAY TO 33-WAY	*Call
2094		4533<4601	1-WAY TO 33-WAY	*Call
2094		4533<4602	2-WAY TO 33-WAY	*Call
2094		4533<4603	3-WAY TO 33-WAY	*Call
2094		4533<4604	4-WAY TO 33-WAY	*Call
2094		4533<4605	5-WAY TO 33-WAY	*Call
2094		4533<4606	6-WAY TO 33-WAY	*Call
2094		4533<4607	7-WAY TO 33-WAY	*Call
2094		4533<4608	8-WAY TO 33-WAY	*Call
2094		4533<4701	1-WAY TO 33-WAY	*Call
2094		4533<4702	2-WAY TO 33-WAY	*Call
2094		4533<4703	3-WAY TO 33-WAY	*Call
2094		4533<4704	4-WAY TO 33-WAY	*Call
2094		4533<4705	5-WAY TO 33-WAY	*Call
2094		4533<4706	6-WAY TO 33-WAY	*Call
2094		4533<4707	7-WAY TO 33-WAY	*Call
2094		4533<4708	8-WAY TO 33-WAY	*Call
2094		4533<4801	1-WAY TO 33-WAY	*Call
2094		4533<4802	2-WAY TO 33-WAY	*Call
2094		4533<4803	3-WAY TO 33-WAY	*Call
2094		4533<4804	4-WAY TO 33-WAY	*Call
2094		4533<4805	5-WAY TO 33-WAY	*Call
2094		4533<4806	6-WAY TO 33-WAY	*Call
2094		4533<4807	7-WAY TO 33-WAY	*Call
2094		4533<4808	8-WAY TO 33-WAY	*Call
2094		4534<4500	ZERO-WAY TO 34-WAY	*Call
2094		4534<4501	1-WAY TO 34-WAY	*Call
2094		4534<4502	2-WAY TO 34-WAY	*Call
2094		4534<4503	3-WAY TO 34-WAY	*Call
2094		4534<4504	4-WAY TO 34-WAY	*Call
2094		4534<4505	5-WAY TO 34-WAY	*Call
2094		4534<4506	6-WAY TO 34-WAY	*Call
2094		4534<4507	7-WAY TO 34-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4534<4508	8-WAY TO 34-WAY	*Call
2094		4534<4509	9-WAY TO 34-WAY	*Call
2094		4534<4510	10-WAY TO 34-WAY	*Call
2094		4534<4511	11-WAY TO 34-WAY	*Call
2094		4534<4512	12-WAY TO 34-WAY	*Call
2094		4534<4513	13-WAY TO 34-WAY	*Call
2094		4534<4514	14-WAY TO 34-WAY	*Call
2094		4534<4515	15-WAY TO 34-WAY	*Call
2094		4534<4516	16-WAY TO 34-WAY	*Call
2094		4534<4517	17-WAY TO 34-WAY	*Call
2094		4534<4518	18-WAY TO 34-WAY	*Call
2094		4534<4519	19-WAY TO 34-WAY	*Call
2094		4534<4520	20-WAY TO 34-WAY	*Call
2094		4534<4521	21-WAY TO 34-WAY	*Call
2094		4534<4522	22-WAY TO 34-WAY	*Call
2094		4534<4523	23-WAY TO 34-WAY	*Call
2094		4534<4524	24-WAY TO 34-WAY	*Call
2094		4534<4525	25-WAY TO 34-WAY	*Call
2094		4534<4526	26-WAY TO 34-WAY	*Call
2094		4534<4527	27-WAY TO 34-WAY	*Call
2094		4534<4528	28-WAY TO 34-WAY	*Call
2094		4534<4529	29-WAY TO 34-WAY	*Call
2094		4534<4530	30-WAY TO 34-WAY	*Call
2094		4534<4531	31-WAY TO 34-WAY	*Call
2094		4534<4532	32-WAY TO 34-WAY	*Call
2094		4534<4533	33-WAY TO 34-WAY	*Call
2094		4534<4535	35-WAY TO 34-WAY	*Call
2094		4534<4536	36-WAY TO 34-WAY	*Call
2094		4534<4537	37-WAY TO 34-WAY	*Call
2094		4534<4538	38-WAY TO 34-WAY	*Call
2094		4534<4539	39-WAY TO 34-WAY	*Call
2094		4534<4540	40-WAY TO 34-WAY	*Call
2094		4534<4541	41-WAY TO 34-WAY	*Call
2094		4534<4542	42-WAY TO 34-WAY	*Call
2094		4534<4543	43-WAY TO 34-WAY	*Call
2094		4534<4544	44-WAY TO 34-WAY	*Call
2094		4534<4545	45-WAY TO 34-WAY	*Call
2094		4534<4546	46-WAY TO 34-WAY	*Call
2094		4534<4547	47-WAY TO 34-WAY	*Call
2094		4534<4548	48-WAY TO 34-WAY	*Call
2094		4534<4549	49-WAY TO 34-WAY	*Call
2094		4534<4550	50-WAY TO 34-WAY	*Call
2094		4534<4551	51-WAY TO 34-WAY	*Call
2094		4534<4552	52-WAY TO 34-WAY	*Call
2094		4534<4553	53-WAY TO 34-WAY	*Call
2094		4534<4554	54-WAY TO 34-WAY	*Call
2094		4534<4601	1-WAY TO 34-WAY	*Call
2094		4534<4602	2-WAY TO 34-WAY	*Call
2094		4534<4603	3-WAY TO 34-WAY	*Call
2094		4534<4604	4-WAY TO 34-WAY	*Call
2094		4534<4605	5-WAY TO 34-WAY	*Call
2094		4534<4606	6-WAY TO 34-WAY	*Call
2094		4534<4607	7-WAY TO 34-WAY	*Call
2094		4534<4608	8-WAY TO 34-WAY	*Call
2094		4534<4701	1-WAY TO 34-WAY	*Call
2094		4534<4702	2-WAY TO 34-WAY	*Call
2094		4534<4703	3-WAY TO 34-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4534<4704	4-WAY TO 34-WAY	*Call
2094		4534<4705	5-WAY TO 34-WAY	*Call
2094		4534<4706	6-WAY TO 34-WAY	*Call
2094		4534<4707	7-WAY TO 34-WAY	*Call
2094		4534<4708	8-WAY TO 34-WAY	*Call
2094		4534<4801	1-WAY TO 34-WAY	*Call
2094		4534<4802	2-WAY TO 34-WAY	*Call
2094		4534<4803	3-WAY TO 34-WAY	*Call
2094		4534<4804	4-WAY TO 34-WAY	*Call
2094		4534<4805	5-WAY TO 34-WAY	*Call
2094		4534<4806	6-WAY TO 34-WAY	*Call
2094		4534<4807	7-WAY TO 34-WAY	*Call
2094		4534<4808	8-WAY TO 34-WAY	*Call
2094		4535<4500	ZERO-WAY TO 35-WAY	*Call
2094		4535<4501	1-WAY TO 35-WAY	*Call
2094		4535<4502	2-WAY TO 35-WAY	*Call
2094		4535<4503	3-WAY TO 35-WAY	*Call
2094		4535<4504	4-WAY TO 35-WAY	*Call
2094		4535<4505	5-WAY TO 35-WAY	*Call
2094		4535<4506	6-WAY TO 35-WAY	*Call
2094		4535<4507	7-WAY TO 35-WAY	*Call
2094		4535<4508	8-WAY TO 35-WAY	*Call
2094		4535<4509	9-WAY TO 35-WAY	*Call
2094		4535<4510	10-WAY TO 35-WAY	*Call
2094		4535<4511	11-WAY TO 35-WAY	*Call
2094		4535<4512	12-WAY TO 35-WAY	*Call
2094		4535<4513	13-WAY TO 35-WAY	*Call
2094		4535<4514	14-WAY TO 35-WAY	*Call
2094		4535<4515	15-WAY TO 35-WAY	*Call
2094		4535<4516	16-WAY TO 35-WAY	*Call
2094		4535<4517	17-WAY TO 35-WAY	*Call
2094		4535<4518	18-WAY TO 35-WAY	*Call
2094		4535<4519	19-WAY TO 35-WAY	*Call
2094		4535<4520	20-WAY TO 35-WAY	*Call
2094		4535<4521	21-WAY TO 35-WAY	*Call
2094		4535<4522	22-WAY TO 35-WAY	*Call
2094		4535<4523	23-WAY TO 35-WAY	*Call
2094		4535<4524	24-WAY TO 35-WAY	*Call
2094		4535<4525	25-WAY TO 35-WAY	*Call
2094		4535<4526	26-WAY TO 35-WAY	*Call
2094		4535<4527	27-WAY TO 35-WAY	*Call
2094		4535<4528	28-WAY TO 35-WAY	*Call
2094		4535<4529	29-WAY TO 35-WAY	*Call
2094		4535<4530	30-WAY TO 35-WAY	*Call
2094		4535<4531	31-WAY TO 35-WAY	*Call
2094		4535<4532	32-WAY TO 35-WAY	*Call
2094		4535<4533	33-WAY TO 35-WAY	*Call
2094		4535<4534	34-WAY TO 35-WAY	*Call
2094		4535<4536	36-WAY TO 35-WAY	*Call
2094		4535<4537	37-WAY TO 35-WAY	*Call
2094		4535<4538	38-WAY TO 35-WAY	*Call
2094		4535<4539	39-WAY TO 35-WAY	*Call
2094		4535<4540	40-WAY TO 35-WAY	*Call
2094		4535<4541	41-WAY TO 35-WAY	*Call
2094		4535<4542	42-WAY TO 35-WAY	*Call
2094		4535<4543	43-WAY TO 35-WAY	*Call
2094		4535<4544	44-WAY TO 35-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4535<4545	45-WAY TO 35-WAY	*Call
2094		4535<4546	46-WAY TO 35-WAY	*Call
2094		4535<4547	47-WAY TO 35-WAY	*Call
2094		4535<4548	48-WAY TO 35-WAY	*Call
2094		4535<4549	49-WAY TO 35-WAY	*Call
2094		4535<4550	50-WAY TO 35-WAY	*Call
2094		4535<4551	51-WAY TO 35-WAY	*Call
2094		4535<4552	52-WAY TO 35-WAY	*Call
2094		4535<4553	53-WAY TO 35-WAY	*Call
2094		4535<4554	54-WAY TO 35-WAY	*Call
2094		4535<4601	1-WAY TO 35-WAY	*Call
2094		4535<4602	2-WAY TO 35-WAY	*Call
2094		4535<4603	3-WAY TO 35-WAY	*Call
2094		4535<4604	4-WAY TO 35-WAY	*Call
2094		4535<4605	5-WAY TO 35-WAY	*Call
2094		4535<4606	6-WAY TO 35-WAY	*Call
2094		4535<4607	7-WAY TO 35-WAY	*Call
2094		4535<4608	8-WAY TO 35-WAY	*Call
2094		4535<4701	1-WAY TO 35-WAY	*Call
2094		4535<4702	2-WAY TO 35-WAY	*Call
2094		4535<4703	3-WAY TO 35-WAY	*Call
2094		4535<4704	4-WAY TO 35-WAY	*Call
2094		4535<4705	5-WAY TO 35-WAY	*Call
2094		4535<4706	6-WAY TO 35-WAY	*Call
2094		4535<4707	7-WAY TO 35-WAY	*Call
2094		4535<4708	8-WAY TO 35-WAY	*Call
2094		4535<4801	1-WAY TO 35-WAY	*Call
2094		4535<4802	2-WAY TO 35-WAY	*Call
2094		4535<4803	3-WAY TO 35-WAY	*Call
2094		4535<4804	4-WAY TO 35-WAY	*Call
2094		4535<4805	5-WAY TO 35-WAY	*Call
2094		4535<4806	6-WAY TO 35-WAY	*Call
2094		4535<4807	7-WAY TO 35-WAY	*Call
2094		4535<4808	8-WAY TO 35-WAY	*Call
2094		4536<4500	ZERO-WAY TO 36-WAY	*Call
2094		4536<4501	1-WAY TO 36-WAY	*Call
2094		4536<4502	2-WAY TO 36-WAY	*Call
2094		4536<4503	3-WAY TO 36-WAY	*Call
2094		4536<4504	4-WAY TO 36-WAY	*Call
2094		4536<4505	5-WAY TO 36-WAY	*Call
2094		4536<4506	6-WAY TO 36-WAY	*Call
2094		4536<4507	7-WAY TO 36-WAY	*Call
2094		4536<4508	8-WAY TO 36-WAY	*Call
2094		4536<4509	9-WAY TO 36-WAY	*Call
2094		4536<4510	10-WAY TO 36-WAY	*Call
2094		4536<4511	11-WAY TO 36-WAY	*Call
2094		4536<4512	12-WAY TO 36-WAY	*Call
2094		4536<4513	13-WAY TO 36-WAY	*Call
2094		4536<4514	14-WAY TO 36-WAY	*Call
2094		4536<4515	15-WAY TO 36-WAY	*Call
2094		4536<4516	16-WAY TO 36-WAY	*Call
2094		4536<4517	17-WAY TO 36-WAY	*Call
2094		4536<4518	18-WAY TO 36-WAY	*Call
2094		4536<4519	19-WAY TO 36-WAY	*Call
2094		4536<4520	20-WAY TO 36-WAY	*Call
2094		4536<4521	21-WAY TO 36-WAY	*Call
2094		4536<4522	22-WAY TO 36-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4536<4523	23-WAY TO 36-WAY	*Call
2094		4536<4524	24-WAY TO 36-WAY	*Call
2094		4536<4525	25-WAY TO 36-WAY	*Call
2094		4536<4526	26-WAY TO 36-WAY	*Call
2094		4536<4527	27-WAY TO 36-WAY	*Call
2094		4536<4528	28-WAY TO 36-WAY	*Call
2094		4536<4529	29-WAY TO 36-WAY	*Call
2094		4536<4530	30-WAY TO 36-WAY	*Call
2094		4536<4531	31-WAY TO 36-WAY	*Call
2094		4536<4532	32-WAY TO 36-WAY	*Call
2094		4536<4533	33-WAY TO 36-WAY	*Call
2094		4536<4534	34-WAY TO 36-WAY	*Call
2094		4536<4535	35-WAY TO 36-WAY	*Call
2094		4536<4537	37-WAY TO 36-WAY	*Call
2094		4536<4538	38-WAY TO 36-WAY	*Call
2094		4536<4539	39-WAY TO 36-WAY	*Call
2094		4536<4540	40-WAY TO 36-WAY	*Call
2094		4536<4541	41-WAY TO 36-WAY	*Call
2094		4536<4542	42-WAY TO 36-WAY	*Call
2094		4536<4543	43-WAY TO 36-WAY	*Call
2094		4536<4544	44-WAY TO 36-WAY	*Call
2094		4536<4545	45-WAY TO 36-WAY	*Call
2094		4536<4546	46-WAY TO 36-WAY	*Call
2094		4536<4547	47-WAY TO 36-WAY	*Call
2094		4536<4548	48-WAY TO 36-WAY	*Call
2094		4536<4549	49-WAY TO 36-WAY	*Call
2094		4536<4550	50-WAY TO 36-WAY	*Call
2094		4536<4551	51-WAY TO 36-WAY	*Call
2094		4536<4552	52-WAY TO 36-WAY	*Call
2094		4536<4553	53-WAY TO 36-WAY	*Call
2094		4536<4554	54-WAY TO 36-WAY	*Call
2094		4536<4601	1-WAY TO 36-WAY	*Call
2094		4536<4602	2-WAY TO 36-WAY	*Call
2094		4536<4603	3-WAY TO 36-WAY	*Call
2094		4536<4604	4-WAY TO 36-WAY	*Call
2094		4536<4605	5-WAY TO 36-WAY	*Call
2094		4536<4606	6-WAY TO 36-WAY	*Call
2094		4536<4607	7-WAY TO 36-WAY	*Call
2094		4536<4608	8-WAY TO 36-WAY	*Call
2094		4536<4701	1-WAY TO 36-WAY	*Call
2094		4536<4702	2-WAY TO 36-WAY	*Call
2094		4536<4703	3-WAY TO 36-WAY	*Call
2094		4536<4704	4-WAY TO 36-WAY	*Call
2094		4536<4705	5-WAY TO 36-WAY	*Call
2094		4536<4706	6-WAY TO 36-WAY	*Call
2094		4536<4707	7-WAY TO 36-WAY	*Call
2094		4536<4708	8-WAY TO 36-WAY	*Call
2094		4536<4801	1-WAY TO 36-WAY	*Call
2094		4536<4802	2-WAY TO 36-WAY	*Call
2094		4536<4803	3-WAY TO 36-WAY	*Call
2094		4536<4804	4-WAY TO 36-WAY	*Call
2094		4536<4805	5-WAY TO 36-WAY	*Call
2094		4536<4806	6-WAY TO 36-WAY	*Call
2094		4536<4807	7-WAY TO 36-WAY	*Call
2094		4536<4808	8-WAY TO 36-WAY	*Call
2094		4537<4500	ZERO-WAY TO 37-WAY	*Call
2094		4537<4501	1-WAY TO 37-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4537<4502	2-WAY TO 37-WAY	*Call
2094		4537<4503	3-WAY TO 37-WAY	*Call
2094		4537<4504	4-WAY TO 37-WAY	*Call
2094		4537<4505	5-WAY TO 37-WAY	*Call
2094		4537<4506	6-WAY TO 37-WAY	*Call
2094		4537<4507	7-WAY TO 37-WAY	*Call
2094		4537<4508	8-WAY TO 37-WAY	*Call
2094		4537<4509	9-WAY TO 37-WAY	*Call
2094		4537<4510	10-WAY TO 37-WAY	*Call
2094		4537<4511	11-WAY TO 37-WAY	*Call
2094		4537<4512	12-WAY TO 37-WAY	*Call
2094		4537<4513	13-WAY TO 37-WAY	*Call
2094		4537<4514	14-WAY TO 37-WAY	*Call
2094		4537<4515	15-WAY TO 37-WAY	*Call
2094		4537<4516	16-WAY TO 37-WAY	*Call
2094		4537<4517	17-WAY TO 37-WAY	*Call
2094		4537<4518	18-WAY TO 37-WAY	*Call
2094		4537<4519	19-WAY TO 37-WAY	*Call
2094		4537<4520	20-WAY TO 37-WAY	*Call
2094		4537<4521	21-WAY TO 37-WAY	*Call
2094		4537<4522	22-WAY TO 37-WAY	*Call
2094		4537<4523	23-WAY TO 37-WAY	*Call
2094		4537<4524	24-WAY TO 37-WAY	*Call
2094		4537<4525	25-WAY TO 37-WAY	*Call
2094		4537<4526	26-WAY TO 37-WAY	*Call
2094		4537<4527	27-WAY TO 37-WAY	*Call
2094		4537<4528	28-WAY TO 37-WAY	*Call
2094		4537<4529	29-WAY TO 37-WAY	*Call
2094		4537<4530	30-WAY TO 37-WAY	*Call
2094		4537<4531	31-WAY TO 37-WAY	*Call
2094		4537<4532	32-WAY TO 37-WAY	*Call
2094		4537<4533	33-WAY TO 37-WAY	*Call
2094		4537<4534	34-WAY TO 37-WAY	*Call
2094		4537<4535	35-WAY TO 37-WAY	*Call
2094		4537<4536	36-WAY TO 37-WAY	*Call
2094		4537<4538	38-WAY TO 37-WAY	*Call
2094		4537<4539	39-WAY TO 37-WAY	*Call
2094		4537<4540	40-WAY TO 37-WAY	*Call
2094		4537<4541	41-WAY TO 37-WAY	*Call
2094		4537<4542	42-WAY TO 37-WAY	*Call
2094		4537<4543	43-WAY TO 37-WAY	*Call
2094		4537<4544	44-WAY TO 37-WAY	*Call
2094		4537<4545	45-WAY TO 37-WAY	*Call
2094		4537<4546	46-WAY TO 37-WAY	*Call
2094		4537<4547	47-WAY TO 37-WAY	*Call
2094		4537<4548	48-WAY TO 37-WAY	*Call
2094		4537<4549	49-WAY TO 37-WAY	*Call
2094		4537<4550	50-WAY TO 37-WAY	*Call
2094		4537<4551	51-WAY TO 37-WAY	*Call
2094		4537<4552	52-WAY TO 37-WAY	*Call
2094		4537<4553	53-WAY TO 37-WAY	*Call
2094		4537<4554	54-WAY TO 37-WAY	*Call
2094		4537<4601	1-WAY TO 37-WAY	*Call
2094		4537<4602	2-WAY TO 37-WAY	*Call
2094		4537<4603	3-WAY TO 37-WAY	*Call
2094		4537<4604	4-WAY TO 37-WAY	*Call
2094		4537<4605	5-WAY TO 37-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4537<4606	6-WAY TO 37-WAY	*Call
2094		4537<4607	7-WAY TO 37-WAY	*Call
2094		4537<4608	8-WAY TO 37-WAY	*Call
2094		4537<4701	1-WAY TO 37-WAY	*Call
2094		4537<4702	2-WAY TO 37-WAY	*Call
2094		4537<4703	3-WAY TO 37-WAY	*Call
2094		4537<4704	4-WAY TO 37-WAY	*Call
2094		4537<4705	5-WAY TO 37-WAY	*Call
2094		4537<4706	6-WAY TO 37-WAY	*Call
2094		4537<4707	7-WAY TO 37-WAY	*Call
2094		4537<4708	8-WAY TO 37-WAY	*Call
2094		4537<4801	1-WAY TO 37-WAY	*Call
2094		4537<4802	2-WAY TO 37-WAY	*Call
2094		4537<4803	3-WAY TO 37-WAY	*Call
2094		4537<4804	4-WAY TO 37-WAY	*Call
2094		4537<4805	5-WAY TO 37-WAY	*Call
2094		4537<4806	6-WAY TO 37-WAY	*Call
2094		4537<4807	7-WAY TO 37-WAY	*Call
2094		4537<4808	8-WAY TO 37-WAY	*Call
2094		4538<4500	ZERO-WAY TO 38-WAY	*Call
2094		4538<4501	1-WAY TO 38-WAY	*Call
2094		4538<4502	2-WAY TO 38-WAY	*Call
2094		4538<4503	3-WAY TO 38-WAY	*Call
2094		4538<4504	4-WAY TO 38-WAY	*Call
2094		4538<4505	5-WAY TO 38-WAY	*Call
2094		4538<4506	6-WAY TO 38-WAY	*Call
2094		4538<4507	7-WAY TO 38-WAY	*Call
2094		4538<4508	8-WAY TO 38-WAY	*Call
2094		4538<4509	9-WAY TO 38-WAY	*Call
2094		4538<4510	10-WAY TO 38-WAY	*Call
2094		4538<4511	11-WAY TO 38-WAY	*Call
2094		4538<4512	12-WAY TO 38-WAY	*Call
2094		4538<4513	13-WAY TO 38-WAY	*Call
2094		4538<4514	14-WAY TO 38-WAY	*Call
2094		4538<4515	15-WAY TO 38-WAY	*Call
2094		4538<4516	16-WAY TO 38-WAY	*Call
2094		4538<4517	17-WAY TO 38-WAY	*Call
2094		4538<4518	18-WAY TO 38-WAY	*Call
2094		4538<4519	19-WAY TO 38-WAY	*Call
2094		4538<4520	20-WAY TO 38-WAY	*Call
2094		4538<4521	21-WAY TO 38-WAY	*Call
2094		4538<4522	22-WAY TO 38-WAY	*Call
2094		4538<4523	23-WAY TO 38-WAY	*Call
2094		4538<4524	24-WAY TO 38-WAY	*Call
2094		4538<4525	25-WAY TO 38-WAY	*Call
2094		4538<4526	26-WAY TO 38-WAY	*Call
2094		4538<4527	27-WAY TO 38-WAY	*Call
2094		4538<4528	28-WAY TO 38-WAY	*Call
2094		4538<4529	29-WAY TO 38-WAY	*Call
2094		4538<4530	30-WAY TO 38-WAY	*Call
2094		4538<4531	31-WAY TO 38-WAY	*Call
2094		4538<4532	32-WAY TO 38-WAY	*Call
2094		4538<4533	33-WAY TO 38-WAY	*Call
2094		4538<4534	34-WAY TO 38-WAY	*Call
2094		4538<4535	35-WAY TO 38-WAY	*Call
2094		4538<4536	36-WAY TO 38-WAY	*Call
2094		4538<4537	37-WAY TO 38-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4538<4539	39-WAY TO 38-WAY	*Call
2094		4538<4540	40-WAY TO 38-WAY	*Call
2094		4538<4541	41-WAY TO 38-WAY	*Call
2094		4538<4542	42-WAY TO 38-WAY	*Call
2094		4538<4543	43-WAY TO 38-WAY	*Call
2094		4538<4544	44-WAY TO 38-WAY	*Call
2094		4538<4545	45-WAY TO 38-WAY	*Call
2094		4538<4546	46-WAY TO 38-WAY	*Call
2094		4538<4547	47-WAY TO 38-WAY	*Call
2094		4538<4548	48-WAY TO 38-WAY	*Call
2094		4538<4549	49-WAY TO 38-WAY	*Call
2094		4538<4550	50-WAY TO 38-WAY	*Call
2094		4538<4551	51-WAY TO 38-WAY	*Call
2094		4538<4552	52-WAY TO 38-WAY	*Call
2094		4538<4553	53-WAY TO 38-WAY	*Call
2094		4538<4554	54-WAY TO 38-WAY	*Call
2094		4538<4601	1-WAY TO 38-WAY	*Call
2094		4538<4602	2-WAY TO 38-WAY	*Call
2094		4538<4603	3-WAY TO 38-WAY	*Call
2094		4538<4604	4-WAY TO 38-WAY	*Call
2094		4538<4605	5-WAY TO 38-WAY	*Call
2094		4538<4606	6-WAY TO 38-WAY	*Call
2094		4538<4607	7-WAY TO 38-WAY	*Call
2094		4538<4608	8-WAY TO 38-WAY	*Call
2094		4538<4701	1-WAY TO 38-WAY	*Call
2094		4538<4702	2-WAY TO 38-WAY	*Call
2094		4538<4703	3-WAY TO 38-WAY	*Call
2094		4538<4704	4-WAY TO 38-WAY	*Call
2094		4538<4705	5-WAY TO 38-WAY	*Call
2094		4538<4706	6-WAY TO 38-WAY	*Call
2094		4538<4707	7-WAY TO 38-WAY	*Call
2094		4538<4708	8-WAY TO 38-WAY	*Call
2094		4538<4801	1-WAY TO 38-WAY	*Call
2094		4538<4802	2-WAY TO 38-WAY	*Call
2094		4538<4803	3-WAY TO 38-WAY	*Call
2094		4538<4804	4-WAY TO 38-WAY	*Call
2094		4538<4805	5-WAY TO 38-WAY	*Call
2094		4538<4806	6-WAY TO 38-WAY	*Call
2094		4538<4807	7-WAY TO 38-WAY	*Call
2094		4538<4808	8-WAY TO 38-WAY	*Call
2094		4539<4500	ZERO-WAY TO 39-WAY	*Call
2094		4539<4501	1-WAY TO 39-WAY	*Call
2094		4539<4502	2-WAY TO 39-WAY	*Call
2094		4539<4503	3-WAY TO 39-WAY	*Call
2094		4539<4504	4-WAY TO 39-WAY	*Call
2094		4539<4505	5-WAY TO 39-WAY	*Call
2094		4539<4506	6-WAY TO 39-WAY	*Call
2094		4539<4507	7-WAY TO 39-WAY	*Call
2094		4539<4508	8-WAY TO 39-WAY	*Call
2094		4539<4509	9-WAY TO 39-WAY	*Call
2094		4539<4510	10-WAY TO 39-WAY	*Call
2094		4539<4511	11-WAY TO 39-WAY	*Call
2094		4539<4512	12-WAY TO 39-WAY	*Call
2094		4539<4513	13-WAY TO 39-WAY	*Call
2094		4539<4514	14-WAY TO 39-WAY	*Call
2094		4539<4515	15-WAY TO 39-WAY	*Call
2094		4539<4516	16-WAY TO 39-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4539<4517	17-WAY TO 39-WAY	*Call
2094		4539<4518	18-WAY TO 39-WAY	*Call
2094		4539<4519	19-WAY TO 39-WAY	*Call
2094		4539<4520	20-WAY TO 39-WAY	*Call
2094		4539<4521	21-WAY TO 39-WAY	*Call
2094		4539<4522	22-WAY TO 39-WAY	*Call
2094		4539<4523	23-WAY TO 39-WAY	*Call
2094		4539<4524	24-WAY TO 39-WAY	*Call
2094		4539<4525	25-WAY TO 39-WAY	*Call
2094		4539<4526	26-WAY TO 39-WAY	*Call
2094		4539<4527	27-WAY TO 39-WAY	*Call
2094		4539<4528	28-WAY TO 39-WAY	*Call
2094		4539<4529	29-WAY TO 39-WAY	*Call
2094		4539<4530	30-WAY TO 39-WAY	*Call
2094		4539<4531	31-WAY TO 39-WAY	*Call
2094		4539<4532	32-WAY TO 39-WAY	*Call
2094		4539<4533	33-WAY TO 39-WAY	*Call
2094		4539<4534	34-WAY TO 39-WAY	*Call
2094		4539<4535	35-WAY TO 39-WAY	*Call
2094		4539<4536	36-WAY TO 39-WAY	*Call
2094		4539<4537	37-WAY TO 39-WAY	*Call
2094		4539<4538	38-WAY TO 39-WAY	*Call
2094		4539<4540	40-WAY TO 39-WAY	*Call
2094		4539<4541	41-WAY TO 39-WAY	*Call
2094		4539<4542	42-WAY TO 39-WAY	*Call
2094		4539<4543	43-WAY TO 39-WAY	*Call
2094		4539<4544	44-WAY TO 39-WAY	*Call
2094		4539<4545	45-WAY TO 39-WAY	*Call
2094		4539<4546	46-WAY TO 39-WAY	*Call
2094		4539<4547	47-WAY TO 39-WAY	*Call
2094		4539<4548	48-WAY TO 39-WAY	*Call
2094		4539<4549	49-WAY TO 39-WAY	*Call
2094		4539<4550	50-WAY TO 39-WAY	*Call
2094		4539<4551	51-WAY TO 39-WAY	*Call
2094		4539<4552	52-WAY TO 39-WAY	*Call
2094		4539<4553	53-WAY TO 39-WAY	*Call
2094		4539<4554	54-WAY TO 39-WAY	*Call
2094		4539<4601	1-WAY TO 39-WAY	*Call
2094		4539<4602	2-WAY TO 39-WAY	*Call
2094		4539<4603	3-WAY TO 39-WAY	*Call
2094		4539<4604	4-WAY TO 39-WAY	*Call
2094		4539<4605	5-WAY TO 39-WAY	*Call
2094		4539<4606	6-WAY TO 39-WAY	*Call
2094		4539<4607	7-WAY TO 39-WAY	*Call
2094		4539<4608	8-WAY TO 39-WAY	*Call
2094		4539<4701	1-WAY TO 39-WAY	*Call
2094		4539<4702	2-WAY TO 39-WAY	*Call
2094		4539<4703	3-WAY TO 39-WAY	*Call
2094		4539<4704	4-WAY TO 39-WAY	*Call
2094		4539<4705	5-WAY TO 39-WAY	*Call
2094		4539<4706	6-WAY TO 39-WAY	*Call
2094		4539<4707	7-WAY TO 39-WAY	*Call
2094		4539<4708	8-WAY TO 39-WAY	*Call
2094		4539<4801	1-WAY TO 39-WAY	*Call
2094		4539<4802	2-WAY TO 39-WAY	*Call
2094		4539<4803	3-WAY TO 39-WAY	*Call
2094		4539<4804	4-WAY TO 39-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4539<4805	5-WAY TO 39-WAY	*Call
2094		4539<4806	6-WAY TO 39-WAY	*Call
2094		4539<4807	7-WAY TO 39-WAY	*Call
2094		4539<4808	8-WAY TO 39-WAY	*Call
2094		4540<4500	ZERO-WAY TO 40-WAY	*Call
2094		4540<4501	1-WAY TO 40-WAY	*Call
2094		4540<4502	2-WAY TO 40-WAY	*Call
2094		4540<4503	3-WAY TO 40-WAY	*Call
2094		4540<4504	4-WAY TO 40-WAY	*Call
2094		4540<4505	5-WAY TO 40-WAY	*Call
2094		4540<4506	6-WAY TO 40-WAY	*Call
2094		4540<4507	7-WAY TO 40-WAY	*Call
2094		4540<4508	8-WAY TO 40-WAY	*Call
2094		4540<4509	9-WAY TO 40-WAY	*Call
2094		4540<4510	10-WAY TO 40-WAY	*Call
2094		4540<4511	11-WAY TO 40-WAY	*Call
2094		4540<4512	12-WAY TO 40-WAY	*Call
2094		4540<4513	13-WAY TO 40-WAY	*Call
2094		4540<4514	14-WAY TO 40-WAY	*Call
2094		4540<4515	15-WAY TO 40-WAY	*Call
2094		4540<4516	16-WAY TO 40-WAY	*Call
2094		4540<4517	17-WAY TO 40-WAY	*Call
2094		4540<4518	18-WAY TO 40-WAY	*Call
2094		4540<4519	19-WAY TO 40-WAY	*Call
2094		4540<4520	20-WAY TO 40-WAY	*Call
2094		4540<4521	21-WAY TO 40-WAY	*Call
2094		4540<4522	22-WAY TO 40-WAY	*Call
2094		4540<4523	23-WAY TO 40-WAY	*Call
2094		4540<4524	24-WAY TO 40-WAY	*Call
2094		4540<4525	25-WAY TO 40-WAY	*Call
2094		4540<4526	26-WAY TO 40-WAY	*Call
2094		4540<4527	27-WAY TO 40-WAY	*Call
2094		4540<4528	28-WAY TO 40-WAY	*Call
2094		4540<4529	29-WAY TO 40-WAY	*Call
2094		4540<4530	30-WAY TO 40-WAY	*Call
2094		4540<4531	31-WAY TO 40-WAY	*Call
2094		4540<4532	32-WAY TO 40-WAY	*Call
2094		4540<4533	33-WAY TO 40-WAY	*Call
2094		4540<4534	34-WAY TO 40-WAY	*Call
2094		4540<4535	35-WAY TO 40-WAY	*Call
2094		4540<4536	36-WAY TO 40-WAY	*Call
2094		4540<4537	37-WAY TO 40-WAY	*Call
2094		4540<4538	38-WAY TO 40-WAY	*Call
2094		4540<4539	39-WAY TO 40-WAY	*Call
2094		4540<4541	41-WAY TO 40-WAY	*Call
2094		4540<4542	42-WAY TO 40-WAY	*Call
2094		4540<4543	43-WAY TO 40-WAY	*Call
2094		4540<4544	44-WAY TO 40-WAY	*Call
2094		4540<4545	45-WAY TO 40-WAY	*Call
2094		4540<4546	46-WAY TO 40-WAY	*Call
2094		4540<4547	47-WAY TO 40-WAY	*Call
2094		4540<4548	48-WAY TO 40-WAY	*Call
2094		4540<4549	49-WAY TO 40-WAY	*Call
2094		4540<4550	50-WAY TO 40-WAY	*Call
2094		4540<4551	51-WAY TO 40-WAY	*Call
2094		4540<4552	52-WAY TO 40-WAY	*Call
2094		4540<4553	53-WAY TO 40-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4540<4554	54-WAY TO 40-WAY	*Call
2094		4540<4601	1-WAY TO 40-WAY	*Call
2094		4540<4602	2-WAY TO 40-WAY	*Call
2094		4540<4603	3-WAY TO 40-WAY	*Call
2094		4540<4604	4-WAY TO 40-WAY	*Call
2094		4540<4605	5-WAY TO 40-WAY	*Call
2094		4540<4606	6-WAY TO 40-WAY	*Call
2094		4540<4607	7-WAY TO 40-WAY	*Call
2094		4540<4608	8-WAY TO 40-WAY	*Call
2094		4540<4701	1-WAY TO 40-WAY	*Call
2094		4540<4702	2-WAY TO 40-WAY	*Call
2094		4540<4703	3-WAY TO 40-WAY	*Call
2094		4540<4704	4-WAY TO 40-WAY	*Call
2094		4540<4705	5-WAY TO 40-WAY	*Call
2094		4540<4706	6-WAY TO 40-WAY	*Call
2094		4540<4707	7-WAY TO 40-WAY	*Call
2094		4540<4708	8-WAY TO 40-WAY	*Call
2094		4540<4801	1-WAY TO 40-WAY	*Call
2094		4540<4802	2-WAY TO 40-WAY	*Call
2094		4540<4803	3-WAY TO 40-WAY	*Call
2094		4540<4804	4-WAY TO 40-WAY	*Call
2094		4540<4805	5-WAY TO 40-WAY	*Call
2094		4540<4806	6-WAY TO 40-WAY	*Call
2094		4540<4807	7-WAY TO 40-WAY	*Call
2094		4540<4808	8-WAY TO 40-WAY	*Call
2094		4541<4500	ZERO-WAY TO 41-WAY	*Call
2094		4541<4501	1-WAY TO 41-WAY	*Call
2094		4541<4502	2-WAY TO 41-WAY	*Call
2094		4541<4503	3-WAY TO 41-WAY	*Call
2094		4541<4504	4-WAY TO 41-WAY	*Call
2094		4541<4505	5-WAY TO 41-WAY	*Call
2094		4541<4506	6-WAY TO 41-WAY	*Call
2094		4541<4507	7-WAY TO 41-WAY	*Call
2094		4541<4508	8-WAY TO 41-WAY	*Call
2094		4541<4509	9-WAY TO 41-WAY	*Call
2094		4541<4510	10-WAY TO 41-WAY	*Call
2094		4541<4511	11-WAY TO 41-WAY	*Call
2094		4541<4512	12-WAY TO 41-WAY	*Call
2094		4541<4513	13-WAY TO 41-WAY	*Call
2094		4541<4514	14-WAY TO 41-WAY	*Call
2094		4541<4515	15-WAY TO 41-WAY	*Call
2094		4541<4516	16-WAY TO 41-WAY	*Call
2094		4541<4517	17-WAY TO 41-WAY	*Call
2094		4541<4518	18-WAY TO 41-WAY	*Call
2094		4541<4519	19-WAY TO 41-WAY	*Call
2094		4541<4520	20-WAY TO 41-WAY	*Call
2094		4541<4521	21-WAY TO 41-WAY	*Call
2094		4541<4522	22-WAY TO 41-WAY	*Call
2094		4541<4523	23-WAY TO 41-WAY	*Call
2094		4541<4524	24-WAY TO 41-WAY	*Call
2094		4541<4525	25-WAY TO 41-WAY	*Call
2094		4541<4526	26-WAY TO 41-WAY	*Call
2094		4541<4527	27-WAY TO 41-WAY	*Call
2094		4541<4528	28-WAY TO 41-WAY	*Call
2094		4541<4529	29-WAY TO 41-WAY	*Call
2094		4541<4530	30-WAY TO 41-WAY	*Call
2094		4541<4531	31-WAY TO 41-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4541<4532	32-WAY TO 41-WAY	*Call
2094		4541<4533	33-WAY TO 41-WAY	*Call
2094		4541<4534	34-WAY TO 41-WAY	*Call
2094		4541<4535	35-WAY TO 41-WAY	*Call
2094		4541<4536	36-WAY TO 41-WAY	*Call
2094		4541<4537	37-WAY TO 41-WAY	*Call
2094		4541<4538	38-WAY TO 41-WAY	*Call
2094		4541<4539	39-WAY TO 41-WAY	*Call
2094		4541<4540	40-WAY TO 41-WAY	*Call
2094		4541<4542	42-WAY TO 41-WAY	*Call
2094		4541<4543	43-WAY TO 41-WAY	*Call
2094		4541<4544	44-WAY TO 41-WAY	*Call
2094		4541<4545	45-WAY TO 41-WAY	*Call
2094		4541<4546	46-WAY TO 41-WAY	*Call
2094		4541<4547	47-WAY TO 41-WAY	*Call
2094		4541<4548	48-WAY TO 41-WAY	*Call
2094		4541<4549	49-WAY TO 41-WAY	*Call
2094		4541<4550	50-WAY TO 41-WAY	*Call
2094		4541<4551	51-WAY TO 41-WAY	*Call
2094		4541<4552	52-WAY TO 41-WAY	*Call
2094		4541<4553	53-WAY TO 41-WAY	*Call
2094		4541<4554	54-WAY TO 41-WAY	*Call
2094		4541<4601	1-WAY TO 41-WAY	*Call
2094		4541<4602	2-WAY TO 41-WAY	*Call
2094		4541<4603	3-WAY TO 41-WAY	*Call
2094		4541<4604	4-WAY TO 41-WAY	*Call
2094		4541<4605	5-WAY TO 41-WAY	*Call
2094		4541<4606	6-WAY TO 41-WAY	*Call
2094		4541<4607	7-WAY TO 41-WAY	*Call
2094		4541<4608	8-WAY TO 41-WAY	*Call
2094		4541<4701	1-WAY TO 41-WAY	*Call
2094		4541<4702	2-WAY TO 41-WAY	*Call
2094		4541<4703	3-WAY TO 41-WAY	*Call
2094		4541<4704	4-WAY TO 41-WAY	*Call
2094		4541<4705	5-WAY TO 41-WAY	*Call
2094		4541<4706	6-WAY TO 41-WAY	*Call
2094		4541<4707	7-WAY TO 41-WAY	*Call
2094		4541<4708	8-WAY TO 41-WAY	*Call
2094		4541<4801	1-WAY TO 41-WAY	*Call
2094		4541<4802	2-WAY TO 41-WAY	*Call
2094		4541<4803	3-WAY TO 41-WAY	*Call
2094		4541<4804	4-WAY TO 41-WAY	*Call
2094		4541<4805	5-WAY TO 41-WAY	*Call
2094		4541<4806	6-WAY TO 41-WAY	*Call
2094		4541<4807	7-WAY TO 41-WAY	*Call
2094		4541<4808	8-WAY TO 41-WAY	*Call
2094		4542<4500	ZERO-WAY TO 42-WAY	*Call
2094		4542<4501	1-WAY TO 42-WAY	*Call
2094		4542<4502	2-WAY TO 42-WAY	*Call
2094		4542<4503	3-WAY TO 42-WAY	*Call
2094		4542<4504	4-WAY TO 42-WAY	*Call
2094		4542<4505	5-WAY TO 42-WAY	*Call
2094		4542<4506	6-WAY TO 42-WAY	*Call
2094		4542<4507	7-WAY TO 42-WAY	*Call
2094		4542<4508	8-WAY TO 42-WAY	*Call
2094		4542<4509	9-WAY TO 42-WAY	*Call
2094		4542<4510	10-WAY TO 42-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4542<4511	11-WAY TO 42-WAY	*Call
2094		4542<4512	12-WAY TO 42-WAY	*Call
2094		4542<4513	13-WAY TO 42-WAY	*Call
2094		4542<4514	14-WAY TO 42-WAY	*Call
2094		4542<4515	15-WAY TO 42-WAY	*Call
2094		4542<4516	16-WAY TO 42-WAY	*Call
2094		4542<4517	17-WAY TO 42-WAY	*Call
2094		4542<4518	18-WAY TO 42-WAY	*Call
2094		4542<4519	19-WAY TO 42-WAY	*Call
2094		4542<4520	20-WAY TO 42-WAY	*Call
2094		4542<4521	21-WAY TO 42-WAY	*Call
2094		4542<4522	22-WAY TO 42-WAY	*Call
2094		4542<4523	23-WAY TO 42-WAY	*Call
2094		4542<4524	24-WAY TO 42-WAY	*Call
2094		4542<4525	25-WAY TO 42-WAY	*Call
2094		4542<4526	26-WAY TO 42-WAY	*Call
2094		4542<4527	27-WAY TO 42-WAY	*Call
2094		4542<4528	28-WAY TO 42-WAY	*Call
2094		4542<4529	29-WAY TO 42-WAY	*Call
2094		4542<4530	30-WAY TO 42-WAY	*Call
2094		4542<4531	31-WAY TO 42-WAY	*Call
2094		4542<4532	32-WAY TO 42-WAY	*Call
2094		4542<4533	33-WAY TO 42-WAY	*Call
2094		4542<4534	34-WAY TO 42-WAY	*Call
2094		4542<4535	35-WAY TO 42-WAY	*Call
2094		4542<4536	36-WAY TO 42-WAY	*Call
2094		4542<4537	37-WAY TO 42-WAY	*Call
2094		4542<4538	38-WAY TO 42-WAY	*Call
2094		4542<4539	39-WAY TO 42-WAY	*Call
2094		4542<4540	40-WAY TO 42-WAY	*Call
2094		4542<4541	41-WAY TO 42-WAY	*Call
2094		4542<4543	43-WAY TO 42-WAY	*Call
2094		4542<4544	44-WAY TO 42-WAY	*Call
2094		4542<4545	45-WAY TO 42-WAY	*Call
2094		4542<4546	46-WAY TO 42-WAY	*Call
2094		4542<4547	47-WAY TO 42-WAY	*Call
2094		4542<4548	48-WAY TO 42-WAY	*Call
2094		4542<4549	49-WAY TO 42-WAY	*Call
2094		4542<4550	50-WAY TO 42-WAY	*Call
2094		4542<4551	51-WAY TO 42-WAY	*Call
2094		4542<4552	52-WAY TO 42-WAY	*Call
2094		4542<4553	53-WAY TO 42-WAY	*Call
2094		4542<4554	54-WAY TO 42-WAY	*Call
2094		4542<4601	1-WAY TO 42-WAY	*Call
2094		4542<4602	2-WAY TO 42-WAY	*Call
2094		4542<4603	3-WAY TO 42-WAY	*Call
2094		4542<4604	4-WAY TO 42-WAY	*Call
2094		4542<4605	5-WAY TO 42-WAY	*Call
2094		4542<4606	6-WAY TO 42-WAY	*Call
2094		4542<4607	7-WAY TO 42-WAY	*Call
2094		4542<4608	8-WAY TO 42-WAY	*Call
2094		4542<4701	1-WAY TO 42-WAY	*Call
2094		4542<4702	2-WAY TO 42-WAY	*Call
2094		4542<4703	3-WAY TO 42-WAY	*Call
2094		4542<4704	4-WAY TO 42-WAY	*Call
2094		4542<4705	5-WAY TO 42-WAY	*Call
2094		4542<4706	6-WAY TO 42-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4542<4707	7-WAY TO 42-WAY	*Call
2094		4542<4708	8-WAY TO 42-WAY	*Call
2094		4542<4801	1-WAY TO 42-WAY	*Call
2094		4542<4802	2-WAY TO 42-WAY	*Call
2094		4542<4803	3-WAY TO 42-WAY	*Call
2094		4542<4804	4-WAY TO 42-WAY	*Call
2094		4542<4805	5-WAY TO 42-WAY	*Call
2094		4542<4806	6-WAY TO 42-WAY	*Call
2094		4542<4807	7-WAY TO 42-WAY	*Call
2094		4542<4808	8-WAY TO 42-WAY	*Call
2094		4543<4500	ZERO-WAY TO 43-WAY	*Call
2094		4543<4501	1-WAY TO 43-WAY	*Call
2094		4543<4502	2-WAY TO 43-WAY	*Call
2094		4543<4503	3-WAY TO 43-WAY	*Call
2094		4543<4504	4-WAY TO 43-WAY	*Call
2094		4543<4505	5-WAY TO 43-WAY	*Call
2094		4543<4506	6-WAY TO 43-WAY	*Call
2094		4543<4507	7-WAY TO 43-WAY	*Call
2094		4543<4508	8-WAY TO 43-WAY	*Call
2094		4543<4509	9-WAY TO 43-WAY	*Call
2094		4543<4510	10-WAY TO 43-WAY	*Call
2094		4543<4511	11-WAY TO 43-WAY	*Call
2094		4543<4512	12-WAY TO 43-WAY	*Call
2094		4543<4513	13-WAY TO 43-WAY	*Call
2094		4543<4514	14-WAY TO 43-WAY	*Call
2094		4543<4515	15-WAY TO 43-WAY	*Call
2094		4543<4516	16-WAY TO 43-WAY	*Call
2094		4543<4517	17-WAY TO 43-WAY	*Call
2094		4543<4518	18-WAY TO 43-WAY	*Call
2094		4543<4519	19-WAY TO 43-WAY	*Call
2094		4543<4520	20-WAY TO 43-WAY	*Call
2094		4543<4521	21-WAY TO 43-WAY	*Call
2094		4543<4522	22-WAY TO 43-WAY	*Call
2094		4543<4523	23-WAY TO 43-WAY	*Call
2094		4543<4524	24-WAY TO 43-WAY	*Call
2094		4543<4525	25-WAY TO 43-WAY	*Call
2094		4543<4526	26-WAY TO 43-WAY	*Call
2094		4543<4527	27-WAY TO 43-WAY	*Call
2094		4543<4528	28-WAY TO 43-WAY	*Call
2094		4543<4529	29-WAY TO 43-WAY	*Call
2094		4543<4530	30-WAY TO 43-WAY	*Call
2094		4543<4531	31-WAY TO 43-WAY	*Call
2094		4543<4532	32-WAY TO 43-WAY	*Call
2094		4543<4533	33-WAY TO 43-WAY	*Call
2094		4543<4534	34-WAY TO 43-WAY	*Call
2094		4543<4535	35-WAY TO 43-WAY	*Call
2094		4543<4536	36-WAY TO 43-WAY	*Call
2094		4543<4537	37-WAY TO 43-WAY	*Call
2094		4543<4538	38-WAY TO 43-WAY	*Call
2094		4543<4539	39-WAY TO 43-WAY	*Call
2094		4543<4540	40-WAY TO 43-WAY	*Call
2094		4543<4541	41-WAY TO 43-WAY	*Call
2094		4543<4542	42-WAY TO 43-WAY	*Call
2094		4543<4544	44-WAY TO 43-WAY	*Call
2094		4543<4545	45-WAY TO 43-WAY	*Call
2094		4543<4546	46-WAY TO 43-WAY	*Call
2094		4543<4547	47-WAY TO 43-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4543<4548	48-WAY TO 43-WAY	*Call
2094		4543<4549	49-WAY TO 43-WAY	*Call
2094		4543<4550	50-WAY TO 43-WAY	*Call
2094		4543<4551	51-WAY TO 43-WAY	*Call
2094		4543<4552	52-WAY TO 43-WAY	*Call
2094		4543<4553	53-WAY TO 43-WAY	*Call
2094		4543<4554	54-WAY TO 43-WAY	*Call
2094		4543<4601	1-WAY TO 43-WAY	*Call
2094		4543<4602	2-WAY TO 43-WAY	*Call
2094		4543<4603	3-WAY TO 43-WAY	*Call
2094		4543<4604	4-WAY TO 43-WAY	*Call
2094		4543<4605	5-WAY TO 43-WAY	*Call
2094		4543<4606	6-WAY TO 43-WAY	*Call
2094		4543<4607	7-WAY TO 43-WAY	*Call
2094		4543<4608	8-WAY TO 43-WAY	*Call
2094		4543<4701	1-WAY TO 43-WAY	*Call
2094		4543<4702	2-WAY TO 43-WAY	*Call
2094		4543<4703	3-WAY TO 43-WAY	*Call
2094		4543<4704	4-WAY TO 43-WAY	*Call
2094		4543<4705	5-WAY TO 43-WAY	*Call
2094		4543<4706	6-WAY TO 43-WAY	*Call
2094		4543<4707	7-WAY TO 43-WAY	*Call
2094		4543<4708	8-WAY TO 43-WAY	*Call
2094		4543<4801	1-WAY TO 43-WAY	*Call
2094		4543<4802	2-WAY TO 43-WAY	*Call
2094		4543<4803	3-WAY TO 43-WAY	*Call
2094		4543<4804	4-WAY TO 43-WAY	*Call
2094		4543<4805	5-WAY TO 43-WAY	*Call
2094		4543<4806	6-WAY TO 43-WAY	*Call
2094		4543<4807	7-WAY TO 43-WAY	*Call
2094		4543<4808	8-WAY TO 43-WAY	*Call
2094		4544<4500	ZERO-WAY TO 44-WAY	*Call
2094		4544<4501	1-WAY TO 44-WAY	*Call
2094		4544<4502	2-WAY TO 44-WAY	*Call
2094		4544<4503	3-WAY TO 44-WAY	*Call
2094		4544<4504	4-WAY TO 44-WAY	*Call
2094		4544<4505	5-WAY TO 44-WAY	*Call
2094		4544<4506	6-WAY TO 44-WAY	*Call
2094		4544<4507	7-WAY TO 44-WAY	*Call
2094		4544<4508	8-WAY TO 44-WAY	*Call
2094		4544<4509	9-WAY TO 44-WAY	*Call
2094		4544<4510	10-WAY TO 44-WAY	*Call
2094		4544<4511	11-WAY TO 44-WAY	*Call
2094		4544<4512	12-WAY TO 44-WAY	*Call
2094		4544<4513	13-WAY TO 44-WAY	*Call
2094		4544<4514	14-WAY TO 44-WAY	*Call
2094		4544<4515	15-WAY TO 44-WAY	*Call
2094		4544<4516	16-WAY TO 44-WAY	*Call
2094		4544<4517	17-WAY TO 44-WAY	*Call
2094		4544<4518	18-WAY TO 44-WAY	*Call
2094		4544<4519	19-WAY TO 44-WAY	*Call
2094		4544<4520	20-WAY TO 44-WAY	*Call
2094		4544<4521	21-WAY TO 44-WAY	*Call
2094		4544<4522	22-WAY TO 44-WAY	*Call
2094		4544<4523	23-WAY TO 44-WAY	*Call
2094		4544<4524	24-WAY TO 44-WAY	*Call
2094		4544<4525	25-WAY TO 44-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4544<4526	26-WAY TO 44-WAY	*Call
2094		4544<4527	27-WAY TO 44-WAY	*Call
2094		4544<4528	28-WAY TO 44-WAY	*Call
2094		4544<4529	29-WAY TO 44-WAY	*Call
2094		4544<4530	30-WAY TO 44-WAY	*Call
2094		4544<4531	31-WAY TO 44-WAY	*Call
2094		4544<4532	32-WAY TO 44-WAY	*Call
2094		4544<4533	33-WAY TO 44-WAY	*Call
2094		4544<4534	34-WAY TO 44-WAY	*Call
2094		4544<4535	35-WAY TO 44-WAY	*Call
2094		4544<4536	36-WAY TO 44-WAY	*Call
2094		4544<4537	37-WAY TO 44-WAY	*Call
2094		4544<4538	38-WAY TO 44-WAY	*Call
2094		4544<4539	39-WAY TO 44-WAY	*Call
2094		4544<4540	40-WAY TO 44-WAY	*Call
2094		4544<4541	41-WAY TO 44-WAY	*Call
2094		4544<4542	42-WAY TO 44-WAY	*Call
2094		4544<4543	43-WAY TO 44-WAY	*Call
2094		4544<4545	45-WAY TO 44-WAY	*Call
2094		4544<4546	46-WAY TO 44-WAY	*Call
2094		4544<4547	47-WAY TO 44-WAY	*Call
2094		4544<4548	48-WAY TO 44-WAY	*Call
2094		4544<4549	49-WAY TO 44-WAY	*Call
2094		4544<4550	50-WAY TO 44-WAY	*Call
2094		4544<4551	51-WAY TO 44-WAY	*Call
2094		4544<4552	52-WAY TO 44-WAY	*Call
2094		4544<4553	53-WAY TO 44-WAY	*Call
2094		4544<4554	54-WAY TO 44-WAY	*Call
2094		4544<4601	1-WAY TO 44-WAY	*Call
2094		4544<4602	2-WAY TO 44-WAY	*Call
2094		4544<4603	3-WAY TO 44-WAY	*Call
2094		4544<4604	4-WAY TO 44-WAY	*Call
2094		4544<4605	5-WAY TO 44-WAY	*Call
2094		4544<4606	6-WAY TO 44-WAY	*Call
2094		4544<4607	7-WAY TO 44-WAY	*Call
2094		4544<4608	8-WAY TO 44-WAY	*Call
2094		4544<4701	1-WAY TO 44-WAY	*Call
2094		4544<4702	2-WAY TO 44-WAY	*Call
2094		4544<4703	3-WAY TO 44-WAY	*Call
2094		4544<4704	4-WAY TO 44-WAY	*Call
2094		4544<4705	5-WAY TO 44-WAY	*Call
2094		4544<4706	6-WAY TO 44-WAY	*Call
2094		4544<4707	7-WAY TO 44-WAY	*Call
2094		4544<4708	8-WAY TO 44-WAY	*Call
2094		4544<4801	1-WAY TO 44-WAY	*Call
2094		4544<4802	2-WAY TO 44-WAY	*Call
2094		4544<4803	3-WAY TO 44-WAY	*Call
2094		4544<4804	4-WAY TO 44-WAY	*Call
2094		4544<4805	5-WAY TO 44-WAY	*Call
2094		4544<4806	6-WAY TO 44-WAY	*Call
2094		4544<4807	7-WAY TO 44-WAY	*Call
2094		4544<4808	8-WAY TO 44-WAY	*Call
2094		4545<4500	ZERO-WAY TO 45-WAY	*Call
2094		4545<4501	1-WAY TO 45-WAY	*Call
2094		4545<4502	2-WAY TO 45-WAY	*Call
2094		4545<4503	3-WAY TO 45-WAY	*Call
2094		4545<4504	4-WAY TO 45-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4545<4505	5-WAY TO 45-WAY	*Call
2094		4545<4506	6-WAY TO 45-WAY	*Call
2094		4545<4507	7-WAY TO 45-WAY	*Call
2094		4545<4508	8-WAY TO 45-WAY	*Call
2094		4545<4509	9-WAY TO 45-WAY	*Call
2094		4545<4510	10-WAY TO 45-WAY	*Call
2094		4545<4511	11-WAY TO 45-WAY	*Call
2094		4545<4512	12-WAY TO 45-WAY	*Call
2094		4545<4513	13-WAY TO 45-WAY	*Call
2094		4545<4514	14-WAY TO 45-WAY	*Call
2094		4545<4515	15-WAY TO 45-WAY	*Call
2094		4545<4516	16-WAY TO 45-WAY	*Call
2094		4545<4517	17-WAY TO 45-WAY	*Call
2094		4545<4518	18-WAY TO 45-WAY	*Call
2094		4545<4519	19-WAY TO 45-WAY	*Call
2094		4545<4520	20-WAY TO 45-WAY	*Call
2094		4545<4521	21-WAY TO 45-WAY	*Call
2094		4545<4522	22-WAY TO 45-WAY	*Call
2094		4545<4523	23-WAY TO 45-WAY	*Call
2094		4545<4524	24-WAY TO 45-WAY	*Call
2094		4545<4525	25-WAY TO 45-WAY	*Call
2094		4545<4526	26-WAY TO 45-WAY	*Call
2094		4545<4527	27-WAY TO 45-WAY	*Call
2094		4545<4528	28-WAY TO 45-WAY	*Call
2094		4545<4529	29-WAY TO 45-WAY	*Call
2094		4545<4530	30-WAY TO 45-WAY	*Call
2094		4545<4531	31-WAY TO 45-WAY	*Call
2094		4545<4532	32-WAY TO 45-WAY	*Call
2094		4545<4533	33-WAY TO 45-WAY	*Call
2094		4545<4534	34-WAY TO 45-WAY	*Call
2094		4545<4535	35-WAY TO 45-WAY	*Call
2094		4545<4536	36-WAY TO 45-WAY	*Call
2094		4545<4537	37-WAY TO 45-WAY	*Call
2094		4545<4538	38-WAY TO 45-WAY	*Call
2094		4545<4539	39-WAY TO 45-WAY	*Call
2094		4545<4540	40-WAY TO 45-WAY	*Call
2094		4545<4541	41-WAY TO 45-WAY	*Call
2094		4545<4542	42-WAY TO 45-WAY	*Call
2094		4545<4543	43-WAY TO 45-WAY	*Call
2094		4545<4544	44-WAY TO 45-WAY	*Call
2094		4545<4546	46-WAY TO 45-WAY	*Call
2094		4545<4547	47-WAY TO 45-WAY	*Call
2094		4545<4548	48-WAY TO 45-WAY	*Call
2094		4545<4549	49-WAY TO 45-WAY	*Call
2094		4545<4550	50-WAY TO 45-WAY	*Call
2094		4545<4551	51-WAY TO 45-WAY	*Call
2094		4545<4552	52-WAY TO 45-WAY	*Call
2094		4545<4553	53-WAY TO 45-WAY	*Call
2094		4545<4554	54-WAY TO 45-WAY	*Call
2094		4545<4601	1-WAY TO 45-WAY	*Call
2094		4545<4602	2-WAY TO 45-WAY	*Call
2094		4545<4603	3-WAY TO 45-WAY	*Call
2094		4545<4604	4-WAY TO 45-WAY	*Call
2094		4545<4605	5-WAY TO 45-WAY	*Call
2094		4545<4606	6-WAY TO 45-WAY	*Call
2094		4545<4607	7-WAY TO 45-WAY	*Call
2094		4545<4608	8-WAY TO 45-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4545<4701	1-WAY TO 45-WAY	*Call
2094		4545<4702	2-WAY TO 45-WAY	*Call
2094		4545<4703	3-WAY TO 45-WAY	*Call
2094		4545<4704	4-WAY TO 45-WAY	*Call
2094		4545<4705	5-WAY TO 45-WAY	*Call
2094		4545<4706	6-WAY TO 45-WAY	*Call
2094		4545<4707	7-WAY TO 45-WAY	*Call
2094		4545<4708	8-WAY TO 45-WAY	*Call
2094		4545<4801	1-WAY TO 45-WAY	*Call
2094		4545<4802	2-WAY TO 45-WAY	*Call
2094		4545<4803	3-WAY TO 45-WAY	*Call
2094		4545<4804	4-WAY TO 45-WAY	*Call
2094		4545<4805	5-WAY TO 45-WAY	*Call
2094		4545<4806	6-WAY TO 45-WAY	*Call
2094		4545<4807	7-WAY TO 45-WAY	*Call
2094		4545<4808	8-WAY TO 45-WAY	*Call
2094		4546<4500	ZERO-WAY TO 46-WAY	*Call
2094		4546<4501	1-WAY TO 46-WAY	*Call
2094		4546<4502	2-WAY TO 46-WAY	*Call
2094		4546<4503	3-WAY TO 46-WAY	*Call
2094		4546<4504	4-WAY TO 46-WAY	*Call
2094		4546<4505	5-WAY TO 46-WAY	*Call
2094		4546<4506	6-WAY TO 46-WAY	*Call
2094		4546<4507	7-WAY TO 46-WAY	*Call
2094		4546<4508	8-WAY TO 46-WAY	*Call
2094		4546<4509	9-WAY TO 46-WAY	*Call
2094		4546<4510	10-WAY TO 46-WAY	*Call
2094		4546<4511	11-WAY TO 46-WAY	*Call
2094		4546<4512	12-WAY TO 46-WAY	*Call
2094		4546<4513	13-WAY TO 46-WAY	*Call
2094		4546<4514	14-WAY TO 46-WAY	*Call
2094		4546<4515	15-WAY TO 46-WAY	*Call
2094		4546<4516	16-WAY TO 46-WAY	*Call
2094		4546<4517	17-WAY TO 46-WAY	*Call
2094		4546<4518	18-WAY TO 46-WAY	*Call
2094		4546<4519	19-WAY TO 46-WAY	*Call
2094		4546<4520	20-WAY TO 46-WAY	*Call
2094		4546<4521	21-WAY TO 46-WAY	*Call
2094		4546<4522	22-WAY TO 46-WAY	*Call
2094		4546<4523	23-WAY TO 46-WAY	*Call
2094		4546<4524	24-WAY TO 46-WAY	*Call
2094		4546<4525	25-WAY TO 46-WAY	*Call
2094		4546<4526	26-WAY TO 46-WAY	*Call
2094		4546<4527	27-WAY TO 46-WAY	*Call
2094		4546<4528	28-WAY TO 46-WAY	*Call
2094		4546<4529	29-WAY TO 46-WAY	*Call
2094		4546<4530	30-WAY TO 46-WAY	*Call
2094		4546<4531	31-WAY TO 46-WAY	*Call
2094		4546<4532	32-WAY TO 46-WAY	*Call
2094		4546<4533	33-WAY TO 46-WAY	*Call
2094		4546<4534	34-WAY TO 46-WAY	*Call
2094		4546<4535	35-WAY TO 46-WAY	*Call
2094		4546<4536	36-WAY TO 46-WAY	*Call
2094		4546<4537	37-WAY TO 46-WAY	*Call
2094		4546<4538	38-WAY TO 46-WAY	*Call
2094		4546<4539	39-WAY TO 46-WAY	*Call
2094		4546<4540	40-WAY TO 46-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4546<4541	41-WAY TO 46-WAY	*Call
2094		4546<4542	42-WAY TO 46-WAY	*Call
2094		4546<4543	43-WAY TO 46-WAY	*Call
2094		4546<4544	44-WAY TO 46-WAY	*Call
2094		4546<4545	45-WAY TO 46-WAY	*Call
2094		4546<4547	47-WAY TO 46-WAY	*Call
2094		4546<4548	48-WAY TO 46-WAY	*Call
2094		4546<4549	49-WAY TO 46-WAY	*Call
2094		4546<4550	50-WAY TO 46-WAY	*Call
2094		4546<4551	51-WAY TO 46-WAY	*Call
2094		4546<4552	52-WAY TO 46-WAY	*Call
2094		4546<4553	53-WAY TO 46-WAY	*Call
2094		4546<4554	54-WAY TO 46-WAY	*Call
2094		4546<4601	1-WAY TO 46-WAY	*Call
2094		4546<4602	2-WAY TO 46-WAY	*Call
2094		4546<4603	3-WAY TO 46-WAY	*Call
2094		4546<4604	4-WAY TO 46-WAY	*Call
2094		4546<4605	5-WAY TO 46-WAY	*Call
2094		4546<4606	6-WAY TO 46-WAY	*Call
2094		4546<4607	7-WAY TO 46-WAY	*Call
2094		4546<4608	8-WAY TO 46-WAY	*Call
2094		4546<4701	1-WAY TO 46-WAY	*Call
2094		4546<4702	2-WAY TO 46-WAY	*Call
2094		4546<4703	3-WAY TO 46-WAY	*Call
2094		4546<4704	4-WAY TO 46-WAY	*Call
2094		4546<4705	5-WAY TO 46-WAY	*Call
2094		4546<4706	6-WAY TO 46-WAY	*Call
2094		4546<4707	7-WAY TO 46-WAY	*Call
2094		4546<4708	8-WAY TO 46-WAY	*Call
2094		4546<4801	1-WAY TO 46-WAY	*Call
2094		4546<4802	2-WAY TO 46-WAY	*Call
2094		4546<4803	3-WAY TO 46-WAY	*Call
2094		4546<4804	4-WAY TO 46-WAY	*Call
2094		4546<4805	5-WAY TO 46-WAY	*Call
2094		4546<4806	6-WAY TO 46-WAY	*Call
2094		4546<4807	7-WAY TO 46-WAY	*Call
2094		4546<4808	8-WAY TO 46-WAY	*Call
2094		4547<4500	ZERO-WAY TO 47-WAY	*Call
2094		4547<4501	1-WAY TO 47-WAY	*Call
2094		4547<4502	2-WAY TO 47-WAY	*Call
2094		4547<4503	3-WAY TO 47-WAY	*Call
2094		4547<4504	4-WAY TO 47-WAY	*Call
2094		4547<4505	5-WAY TO 47-WAY	*Call
2094		4547<4506	6-WAY TO 47-WAY	*Call
2094		4547<4507	7-WAY TO 47-WAY	*Call
2094		4547<4508	8-WAY TO 47-WAY	*Call
2094		4547<4509	9-WAY TO 47-WAY	*Call
2094		4547<4510	10-WAY TO 47-WAY	*Call
2094		4547<4511	11-WAY TO 47-WAY	*Call
2094		4547<4512	12-WAY TO 47-WAY	*Call
2094		4547<4513	13-WAY TO 47-WAY	*Call
2094		4547<4514	14-WAY TO 47-WAY	*Call
2094		4547<4515	15-WAY TO 47-WAY	*Call
2094		4547<4516	16-WAY TO 47-WAY	*Call
2094		4547<4517	17-WAY TO 47-WAY	*Call
2094		4547<4518	18-WAY TO 47-WAY	*Call
2094		4547<4519	19-WAY TO 47-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4547<4520	20-WAY TO 47-WAY	*Call
2094		4547<4521	21-WAY TO 47-WAY	*Call
2094		4547<4522	22-WAY TO 47-WAY	*Call
2094		4547<4523	23-WAY TO 47-WAY	*Call
2094		4547<4524	24-WAY TO 47-WAY	*Call
2094		4547<4525	25-WAY TO 47-WAY	*Call
2094		4547<4526	26-WAY TO 47-WAY	*Call
2094		4547<4527	27-WAY TO 47-WAY	*Call
2094		4547<4528	28-WAY TO 47-WAY	*Call
2094		4547<4529	29-WAY TO 47-WAY	*Call
2094		4547<4530	30-WAY TO 47-WAY	*Call
2094		4547<4531	31-WAY TO 47-WAY	*Call
2094		4547<4532	32-WAY TO 47-WAY	*Call
2094		4547<4533	33-WAY TO 47-WAY	*Call
2094		4547<4534	34-WAY TO 47-WAY	*Call
2094		4547<4535	35-WAY TO 47-WAY	*Call
2094		4547<4536	36-WAY TO 47-WAY	*Call
2094		4547<4537	37-WAY TO 47-WAY	*Call
2094		4547<4538	38-WAY TO 47-WAY	*Call
2094		4547<4539	39-WAY TO 47-WAY	*Call
2094		4547<4540	40-WAY TO 47-WAY	*Call
2094		4547<4541	41-WAY TO 47-WAY	*Call
2094		4547<4542	42-WAY TO 47-WAY	*Call
2094		4547<4543	43-WAY TO 47-WAY	*Call
2094		4547<4544	44-WAY TO 47-WAY	*Call
2094		4547<4545	45-WAY TO 47-WAY	*Call
2094		4547<4546	46-WAY TO 47-WAY	*Call
2094		4547<4548	48-WAY TO 47-WAY	*Call
2094		4547<4549	49-WAY TO 47-WAY	*Call
2094		4547<4550	50-WAY TO 47-WAY	*Call
2094		4547<4551	51-WAY TO 47-WAY	*Call
2094		4547<4552	52-WAY TO 47-WAY	*Call
2094		4547<4553	53-WAY TO 47-WAY	*Call
2094		4547<4554	54-WAY TO 47-WAY	*Call
2094		4547<4601	1-WAY TO 47-WAY	*Call
2094		4547<4602	2-WAY TO 47-WAY	*Call
2094		4547<4603	3-WAY TO 47-WAY	*Call
2094		4547<4604	4-WAY TO 47-WAY	*Call
2094		4547<4605	5-WAY TO 47-WAY	*Call
2094		4547<4606	6-WAY TO 47-WAY	*Call
2094		4547<4607	7-WAY TO 47-WAY	*Call
2094		4547<4608	8-WAY TO 47-WAY	*Call
2094		4547<4701	1-WAY TO 47-WAY	*Call
2094		4547<4702	2-WAY TO 47-WAY	*Call
2094		4547<4703	3-WAY TO 47-WAY	*Call
2094		4547<4704	4-WAY TO 47-WAY	*Call
2094		4547<4705	5-WAY TO 47-WAY	*Call
2094		4547<4706	6-WAY TO 47-WAY	*Call
2094		4547<4707	7-WAY TO 47-WAY	*Call
2094		4547<4708	8-WAY TO 47-WAY	*Call
2094		4547<4801	1-WAY TO 47-WAY	*Call
2094		4547<4802	2-WAY TO 47-WAY	*Call
2094		4547<4803	3-WAY TO 47-WAY	*Call
2094		4547<4804	4-WAY TO 47-WAY	*Call
2094		4547<4805	5-WAY TO 47-WAY	*Call
2094		4547<4806	6-WAY TO 47-WAY	*Call
2094		4547<4807	7-WAY TO 47-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4547<4808	8-WAY TO 47-WAY	*Call
2094		4548<4500	ZERO-WAY TO 48-WAY	*Call
2094		4548<4501	1-WAY TO 48-WAY	*Call
2094		4548<4502	2-WAY TO 48-WAY	*Call
2094		4548<4503	3-WAY TO 48-WAY	*Call
2094		4548<4504	4-WAY TO 48-WAY	*Call
2094		4548<4505	5-WAY TO 48-WAY	*Call
2094		4548<4506	6-WAY TO 48-WAY	*Call
2094		4548<4507	7-WAY TO 48-WAY	*Call
2094		4548<4508	8-WAY TO 48-WAY	*Call
2094		4548<4509	9-WAY TO 48-WAY	*Call
2094		4548<4510	10-WAY TO 48-WAY	*Call
2094		4548<4511	11-WAY TO 48-WAY	*Call
2094		4548<4512	12-WAY TO 48-WAY	*Call
2094		4548<4513	13-WAY TO 48-WAY	*Call
2094		4548<4514	14-WAY TO 48-WAY	*Call
2094		4548<4515	15-WAY TO 48-WAY	*Call
2094		4548<4516	16-WAY TO 48-WAY	*Call
2094		4548<4517	17-WAY TO 48-WAY	*Call
2094		4548<4518	18-WAY TO 48-WAY	*Call
2094		4548<4519	19-WAY TO 48-WAY	*Call
2094		4548<4520	20-WAY TO 48-WAY	*Call
2094		4548<4521	21-WAY TO 48-WAY	*Call
2094		4548<4522	22-WAY TO 48-WAY	*Call
2094		4548<4523	23-WAY TO 48-WAY	*Call
2094		4548<4524	24-WAY TO 48-WAY	*Call
2094		4548<4525	25-WAY TO 48-WAY	*Call
2094		4548<4526	26-WAY TO 48-WAY	*Call
2094		4548<4527	27-WAY TO 48-WAY	*Call
2094		4548<4528	28-WAY TO 48-WAY	*Call
2094		4548<4529	29-WAY TO 48-WAY	*Call
2094		4548<4530	30-WAY TO 48-WAY	*Call
2094		4548<4531	31-WAY TO 48-WAY	*Call
2094		4548<4532	32-WAY TO 48-WAY	*Call
2094		4548<4533	33-WAY TO 48-WAY	*Call
2094		4548<4534	34-WAY TO 48-WAY	*Call
2094		4548<4535	35-WAY TO 48-WAY	*Call
2094		4548<4536	36-WAY TO 48-WAY	*Call
2094		4548<4537	37-WAY TO 48-WAY	*Call
2094		4548<4538	38-WAY TO 48-WAY	*Call
2094		4548<4539	39-WAY TO 48-WAY	*Call
2094		4548<4540	40-WAY TO 48-WAY	*Call
2094		4548<4541	41-WAY TO 48-WAY	*Call
2094		4548<4542	42-WAY TO 48-WAY	*Call
2094		4548<4543	43-WAY TO 48-WAY	*Call
2094		4548<4544	44-WAY TO 48-WAY	*Call
2094		4548<4545	45-WAY TO 48-WAY	*Call
2094		4548<4546	46-WAY TO 48-WAY	*Call
2094		4548<4547	47-WAY TO 48-WAY	*Call
2094		4548<4549	49-WAY TO 48-WAY	*Call
2094		4548<4550	50-WAY TO 48-WAY	*Call
2094		4548<4551	51-WAY TO 48-WAY	*Call
2094		4548<4552	52-WAY TO 48-WAY	*Call
2094		4548<4553	53-WAY TO 48-WAY	*Call
2094		4548<4554	54-WAY TO 48-WAY	*Call
2094		4548<4601	1-WAY TO 48-WAY	*Call
2094		4548<4602	2-WAY TO 48-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4548<4603	3-WAY TO 48-WAY	*Call
2094		4548<4604	4-WAY TO 48-WAY	*Call
2094		4548<4605	5-WAY TO 48-WAY	*Call
2094		4548<4606	6-WAY TO 48-WAY	*Call
2094		4548<4607	7-WAY TO 48-WAY	*Call
2094		4548<4608	8-WAY TO 48-WAY	*Call
2094		4548<4701	1-WAY TO 48-WAY	*Call
2094		4548<4702	2-WAY TO 48-WAY	*Call
2094		4548<4703	3-WAY TO 48-WAY	*Call
2094		4548<4704	4-WAY TO 48-WAY	*Call
2094		4548<4705	5-WAY TO 48-WAY	*Call
2094		4548<4706	6-WAY TO 48-WAY	*Call
2094		4548<4707	7-WAY TO 48-WAY	*Call
2094		4548<4708	8-WAY TO 48-WAY	*Call
2094		4548<4801	1-WAY TO 48-WAY	*Call
2094		4548<4802	2-WAY TO 48-WAY	*Call
2094		4548<4803	3-WAY TO 48-WAY	*Call
2094		4548<4804	4-WAY TO 48-WAY	*Call
2094		4548<4805	5-WAY TO 48-WAY	*Call
2094		4548<4806	6-WAY TO 48-WAY	*Call
2094		4548<4807	7-WAY TO 48-WAY	*Call
2094		4548<4808	8-WAY TO 48-WAY	*Call
2094		4549<4500	ZERO-WAY TO 49-WAY	*Call
2094		4549<4501	1-WAY TO 49-WAY	*Call
2094		4549<4502	2-WAY TO 49-WAY	*Call
2094		4549<4503	3-WAY TO 49-WAY	*Call
2094		4549<4504	4-WAY TO 49-WAY	*Call
2094		4549<4505	5-WAY TO 49-WAY	*Call
2094		4549<4506	6-WAY TO 49-WAY	*Call
2094		4549<4507	7-WAY TO 49-WAY	*Call
2094		4549<4508	8-WAY TO 49-WAY	*Call
2094		4549<4509	9-WAY TO 49-WAY	*Call
2094		4549<4510	10-WAY TO 49-WAY	*Call
2094		4549<4511	11-WAY TO 49-WAY	*Call
2094		4549<4512	12-WAY TO 49-WAY	*Call
2094		4549<4513	13-WAY TO 49-WAY	*Call
2094		4549<4514	14-WAY TO 49-WAY	*Call
2094		4549<4515	15-WAY TO 49-WAY	*Call
2094		4549<4516	16-WAY TO 49-WAY	*Call
2094		4549<4517	17-WAY TO 49-WAY	*Call
2094		4549<4518	18-WAY TO 49-WAY	*Call
2094		4549<4519	19-WAY TO 49-WAY	*Call
2094		4549<4520	20-WAY TO 49-WAY	*Call
2094		4549<4521	21-WAY TO 49-WAY	*Call
2094		4549<4522	22-WAY TO 49-WAY	*Call
2094		4549<4523	23-WAY TO 49-WAY	*Call
2094		4549<4524	24-WAY TO 49-WAY	*Call
2094		4549<4525	25-WAY TO 49-WAY	*Call
2094		4549<4526	26-WAY TO 49-WAY	*Call
2094		4549<4527	27-WAY TO 49-WAY	*Call
2094		4549<4528	28-WAY TO 49-WAY	*Call
2094		4549<4529	29-WAY TO 49-WAY	*Call
2094		4549<4530	30-WAY TO 49-WAY	*Call
2094		4549<4531	31-WAY TO 49-WAY	*Call
2094		4549<4532	32-WAY TO 49-WAY	*Call
2094		4549<4533	33-WAY TO 49-WAY	*Call
2094		4549<4534	34-WAY TO 49-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4549<4535	35-WAY TO 49-WAY	*Call
2094			4549<4536	36-WAY TO 49-WAY	*Call
2094			4549<4537	37-WAY TO 49-WAY	*Call
2094			4549<4538	38-WAY TO 49-WAY	*Call
2094			4549<4539	39-WAY TO 49-WAY	*Call
2094			4549<4540	40-WAY TO 49-WAY	*Call
2094			4549<4541	41-WAY TO 49-WAY	*Call
2094			4549<4542	42-WAY TO 49-WAY	*Call
2094			4549<4543	43-WAY TO 49-WAY	*Call
2094			4549<4544	44-WAY TO 49-WAY	*Call
2094			4549<4545	45-WAY TO 49-WAY	*Call
2094			4549<4546	46-WAY TO 49-WAY	*Call
2094			4549<4547	47-WAY TO 49-WAY	*Call
2094			4549<4548	48-WAY TO 49-WAY	*Call
2094			4549<4550	50-WAY TO 49-WAY	*Call
2094			4549<4551	51-WAY TO 49-WAY	*Call
2094			4549<4552	52-WAY TO 49-WAY	*Call
2094			4549<4553	53-WAY TO 49-WAY	*Call
2094			4549<4554	54-WAY TO 49-WAY	*Call
2094			4549<4601	1-WAY TO 49-WAY	*Call
2094			4549<4602	2-WAY TO 49-WAY	*Call
2094			4549<4603	3-WAY TO 49-WAY	*Call
2094			4549<4604	4-WAY TO 49-WAY	*Call
2094			4549<4605	5-WAY TO 49-WAY	*Call
2094			4549<4606	6-WAY TO 49-WAY	*Call
2094			4549<4607	7-WAY TO 49-WAY	*Call
2094			4549<4608	8-WAY TO 49-WAY	*Call
2094			4549<4701	1-WAY TO 49-WAY	*Call
2094			4549<4702	2-WAY TO 49-WAY	*Call
2094			4549<4703	3-WAY TO 49-WAY	*Call
2094			4549<4704	4-WAY TO 49-WAY	*Call
2094			4549<4705	5-WAY TO 49-WAY	*Call
2094			4549<4706	6-WAY TO 49-WAY	*Call
2094			4549<4707	7-WAY TO 49-WAY	*Call
2094			4549<4708	8-WAY TO 49-WAY	*Call
2094			4549<4801	1-WAY TO 49-WAY	*Call
2094			4549<4802	2-WAY TO 49-WAY	*Call
2094			4549<4803	3-WAY TO 49-WAY	*Call
2094			4549<4804	4-WAY TO 49-WAY	*Call
2094			4549<4805	5-WAY TO 49-WAY	*Call
2094			4549<4806	6-WAY TO 49-WAY	*Call
2094			4549<4807	7-WAY TO 49-WAY	*Call
2094			4549<4808	8-WAY TO 49-WAY	*Call
2094			4550<4500	ZERO-WAY TO 50-WAY	*Call
2094			4550<4501	1-WAY TO 50-WAY	*Call
2094			4550<4502	2-WAY TO 50-WAY	*Call
2094			4550<4503	3-WAY TO 50-WAY	*Call
2094			4550<4504	4-WAY TO 50-WAY	*Call
2094			4550<4505	5-WAY TO 50-WAY	*Call
2094			4550<4506	6-WAY TO 50-WAY	*Call
2094			4550<4507	7-WAY TO 50-WAY	*Call
2094			4550<4508	8-WAY TO 50-WAY	*Call
2094			4550<4509	9-WAY TO 50-WAY	*Call
2094			4550<4510	10-WAY TO 50-WAY	*Call
2094			4550<4511	11-WAY TO 50-WAY	*Call
2094			4550<4512	12-WAY TO 50-WAY	*Call
2094			4550<4513	13-WAY TO 50-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4550<4514	14-WAY TO 50-WAY	*Call
2094		4550<4515	15-WAY TO 50-WAY	*Call
2094		4550<4516	16-WAY TO 50-WAY	*Call
2094		4550<4517	17-WAY TO 50-WAY	*Call
2094		4550<4518	18-WAY TO 50-WAY	*Call
2094		4550<4519	19-WAY TO 50-WAY	*Call
2094		4550<4520	20-WAY TO 50-WAY	*Call
2094		4550<4521	21-WAY TO 50-WAY	*Call
2094		4550<4522	22-WAY TO 50-WAY	*Call
2094		4550<4523	23-WAY TO 50-WAY	*Call
2094		4550<4524	24-WAY TO 50-WAY	*Call
2094		4550<4525	25-WAY TO 50-WAY	*Call
2094		4550<4526	26-WAY TO 50-WAY	*Call
2094		4550<4527	27-WAY TO 50-WAY	*Call
2094		4550<4528	28-WAY TO 50-WAY	*Call
2094		4550<4529	29-WAY TO 50-WAY	*Call
2094		4550<4530	30-WAY TO 50-WAY	*Call
2094		4550<4531	31-WAY TO 50-WAY	*Call
2094		4550<4532	32-WAY TO 50-WAY	*Call
2094		4550<4533	33-WAY TO 50-WAY	*Call
2094		4550<4534	34-WAY TO 50-WAY	*Call
2094		4550<4535	35-WAY TO 50-WAY	*Call
2094		4550<4536	36-WAY TO 50-WAY	*Call
2094		4550<4537	37-WAY TO 50-WAY	*Call
2094		4550<4538	38-WAY TO 50-WAY	*Call
2094		4550<4539	39-WAY TO 50-WAY	*Call
2094		4550<4540	40-WAY TO 50-WAY	*Call
2094		4550<4541	41-WAY TO 50-WAY	*Call
2094		4550<4542	42-WAY TO 50-WAY	*Call
2094		4550<4543	43-WAY TO 50-WAY	*Call
2094		4550<4544	44-WAY TO 50-WAY	*Call
2094		4550<4545	45-WAY TO 50-WAY	*Call
2094		4550<4546	46-WAY TO 50-WAY	*Call
2094		4550<4547	47-WAY TO 50-WAY	*Call
2094		4550<4548	48-WAY TO 50-WAY	*Call
2094		4550<4549	49-WAY TO 50-WAY	*Call
2094		4550<4551	51-WAY TO 50-WAY	*Call
2094		4550<4552	52-WAY TO 50-WAY	*Call
2094		4550<4553	53-WAY TO 50-WAY	*Call
2094		4550<4554	54-WAY TO 50-WAY	*Call
2094		4550<4601	1-WAY TO 50-WAY	*Call
2094		4550<4602	2-WAY TO 50-WAY	*Call
2094		4550<4603	3-WAY TO 50-WAY	*Call
2094		4550<4604	4-WAY TO 50-WAY	*Call
2094		4550<4605	5-WAY TO 50-WAY	*Call
2094		4550<4606	6-WAY TO 50-WAY	*Call
2094		4550<4607	7-WAY TO 50-WAY	*Call
2094		4550<4608	8-WAY TO 50-WAY	*Call
2094		4550<4701	1-WAY TO 50-WAY	*Call
2094		4550<4702	2-WAY TO 50-WAY	*Call
2094		4550<4703	3-WAY TO 50-WAY	*Call
2094		4550<4704	4-WAY TO 50-WAY	*Call
2094		4550<4705	5-WAY TO 50-WAY	*Call
2094		4550<4706	6-WAY TO 50-WAY	*Call
2094		4550<4707	7-WAY TO 50-WAY	*Call
2094		4550<4708	8-WAY TO 50-WAY	*Call
2094		4550<4801	1-WAY TO 50-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4550<4802	2-WAY TO 50-WAY	*Call
2094		4550<4803	3-WAY TO 50-WAY	*Call
2094		4550<4804	4-WAY TO 50-WAY	*Call
2094		4550<4805	5-WAY TO 50-WAY	*Call
2094		4550<4806	6-WAY TO 50-WAY	*Call
2094		4550<4807	7-WAY TO 50-WAY	*Call
2094		4550<4808	8-WAY TO 50-WAY	*Call
2094		4551<4500	ZERO-WAY TO 51-WAY	*Call
2094		4551<4501	1-WAY TO 51-WAY	*Call
2094		4551<4502	2-WAY TO 51-WAY	*Call
2094		4551<4503	3-WAY TO 51-WAY	*Call
2094		4551<4504	4-WAY TO 51-WAY	*Call
2094		4551<4505	5-WAY TO 51-WAY	*Call
2094		4551<4506	6-WAY TO 51-WAY	*Call
2094		4551<4507	7-WAY TO 51-WAY	*Call
2094		4551<4508	8-WAY TO 51-WAY	*Call
2094		4551<4509	9-WAY TO 51-WAY	*Call
2094		4551<4510	10-WAY TO 51-WAY	*Call
2094		4551<4511	11-WAY TO 51-WAY	*Call
2094		4551<4512	12-WAY TO 51-WAY	*Call
2094		4551<4513	13-WAY TO 51-WAY	*Call
2094		4551<4514	14-WAY TO 51-WAY	*Call
2094		4551<4515	15-WAY TO 51-WAY	*Call
2094		4551<4516	16-WAY TO 51-WAY	*Call
2094		4551<4517	17-WAY TO 51-WAY	*Call
2094		4551<4518	18-WAY TO 51-WAY	*Call
2094		4551<4519	19-WAY TO 51-WAY	*Call
2094		4551<4520	20-WAY TO 51-WAY	*Call
2094		4551<4521	21-WAY TO 51-WAY	*Call
2094		4551<4522	22-WAY TO 51-WAY	*Call
2094		4551<4523	23-WAY TO 51-WAY	*Call
2094		4551<4524	24-WAY TO 51-WAY	*Call
2094		4551<4525	25-WAY TO 51-WAY	*Call
2094		4551<4526	26-WAY TO 51-WAY	*Call
2094		4551<4527	27-WAY TO 51-WAY	*Call
2094		4551<4528	28-WAY TO 51-WAY	*Call
2094		4551<4529	29-WAY TO 51-WAY	*Call
2094		4551<4530	30-WAY TO 51-WAY	*Call
2094		4551<4531	31-WAY TO 51-WAY	*Call
2094		4551<4532	32-WAY TO 51-WAY	*Call
2094		4551<4533	33-WAY TO 51-WAY	*Call
2094		4551<4534	34-WAY TO 51-WAY	*Call
2094		4551<4535	35-WAY TO 51-WAY	*Call
2094		4551<4536	36-WAY TO 51-WAY	*Call
2094		4551<4537	37-WAY TO 51-WAY	*Call
2094		4551<4538	38-WAY TO 51-WAY	*Call
2094		4551<4539	39-WAY TO 51-WAY	*Call
2094		4551<4540	40-WAY TO 51-WAY	*Call
2094		4551<4541	41-WAY TO 51-WAY	*Call
2094		4551<4542	42-WAY TO 51-WAY	*Call
2094		4551<4543	43-WAY TO 51-WAY	*Call
2094		4551<4544	44-WAY TO 51-WAY	*Call
2094		4551<4545	45-WAY TO 51-WAY	*Call
2094		4551<4546	46-WAY TO 51-WAY	*Call
2094		4551<4547	47-WAY TO 51-WAY	*Call
2094		4551<4548	48-WAY TO 51-WAY	*Call
2094		4551<4549	49-WAY TO 51-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4551<4550	50-WAY TO 51-WAY	*Call
2094		4551<4552	52-WAY TO 51-WAY	*Call
2094		4551<4553	53-WAY TO 51-WAY	*Call
2094		4551<4554	54-WAY TO 51-WAY	*Call
2094		4551<4601	1-WAY TO 51-WAY	*Call
2094		4551<4602	2-WAY TO 51-WAY	*Call
2094		4551<4603	3-WAY TO 51-WAY	*Call
2094		4551<4604	4-WAY TO 51-WAY	*Call
2094		4551<4605	5-WAY TO 51-WAY	*Call
2094		4551<4606	6-WAY TO 51-WAY	*Call
2094		4551<4607	7-WAY TO 51-WAY	*Call
2094		4551<4608	8-WAY TO 51-WAY	*Call
2094		4551<4701	1-WAY TO 51-WAY	*Call
2094		4551<4702	2-WAY TO 51-WAY	*Call
2094		4551<4703	3-WAY TO 51-WAY	*Call
2094		4551<4704	4-WAY TO 51-WAY	*Call
2094		4551<4705	5-WAY TO 51-WAY	*Call
2094		4551<4706	6-WAY TO 51-WAY	*Call
2094		4551<4707	7-WAY TO 51-WAY	*Call
2094		4551<4708	8-WAY TO 51-WAY	*Call
2094		4551<4801	1-WAY TO 51-WAY	*Call
2094		4551<4802	2-WAY TO 51-WAY	*Call
2094		4551<4803	3-WAY TO 51-WAY	*Call
2094		4551<4804	4-WAY TO 51-WAY	*Call
2094		4551<4805	5-WAY TO 51-WAY	*Call
2094		4551<4806	6-WAY TO 51-WAY	*Call
2094		4551<4807	7-WAY TO 51-WAY	*Call
2094		4551<4808	8-WAY TO 51-WAY	*Call
2094		4552<4500	ZERO-WAY TO 52-WAY	*Call
2094		4552<4501	1-WAY TO 52-WAY	*Call
2094		4552<4502	2-WAY TO 52-WAY	*Call
2094		4552<4503	3-WAY TO 52-WAY	*Call
2094		4552<4504	4-WAY TO 52-WAY	*Call
2094		4552<4505	5-WAY TO 52-WAY	*Call
2094		4552<4506	6-WAY TO 52-WAY	*Call
2094		4552<4507	7-WAY TO 52-WAY	*Call
2094		4552<4508	8-WAY TO 52-WAY	*Call
2094		4552<4509	9-WAY TO 52-WAY	*Call
2094		4552<4510	10-WAY TO 52-WAY	*Call
2094		4552<4511	11-WAY TO 52-WAY	*Call
2094		4552<4512	12-WAY TO 52-WAY	*Call
2094		4552<4513	13-WAY TO 52-WAY	*Call
2094		4552<4514	14-WAY TO 52-WAY	*Call
2094		4552<4515	15-WAY TO 52-WAY	*Call
2094		4552<4516	16-WAY TO 52-WAY	*Call
2094		4552<4517	17-WAY TO 52-WAY	*Call
2094		4552<4518	18-WAY TO 52-WAY	*Call
2094		4552<4519	19-WAY TO 52-WAY	*Call
2094		4552<4520	20-WAY TO 52-WAY	*Call
2094		4552<4521	21-WAY TO 52-WAY	*Call
2094		4552<4522	22-WAY TO 52-WAY	*Call
2094		4552<4523	23-WAY TO 52-WAY	*Call
2094		4552<4524	24-WAY TO 52-WAY	*Call
2094		4552<4525	25-WAY TO 52-WAY	*Call
2094		4552<4526	26-WAY TO 52-WAY	*Call
2094		4552<4527	27-WAY TO 52-WAY	*Call
2094		4552<4528	28-WAY TO 52-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4552<4529	29-WAY TO 52-WAY	*Call
2094		4552<4530	30-WAY TO 52-WAY	*Call
2094		4552<4531	31-WAY TO 52-WAY	*Call
2094		4552<4532	32-WAY TO 52-WAY	*Call
2094		4552<4533	33-WAY TO 52-WAY	*Call
2094		4552<4534	34-WAY TO 52-WAY	*Call
2094		4552<4535	35-WAY TO 52-WAY	*Call
2094		4552<4536	36-WAY TO 52-WAY	*Call
2094		4552<4537	37-WAY TO 52-WAY	*Call
2094		4552<4538	38-WAY TO 52-WAY	*Call
2094		4552<4539	39-WAY TO 52-WAY	*Call
2094		4552<4540	40-WAY TO 52-WAY	*Call
2094		4552<4541	41-WAY TO 52-WAY	*Call
2094		4552<4542	42-WAY TO 52-WAY	*Call
2094		4552<4543	43-WAY TO 52-WAY	*Call
2094		4552<4544	44-WAY TO 52-WAY	*Call
2094		4552<4545	45-WAY TO 52-WAY	*Call
2094		4552<4546	46-WAY TO 52-WAY	*Call
2094		4552<4547	47-WAY TO 52-WAY	*Call
2094		4552<4548	48-WAY TO 52-WAY	*Call
2094		4552<4549	49-WAY TO 52-WAY	*Call
2094		4552<4550	50-WAY TO 52-WAY	*Call
2094		4552<4551	51-WAY TO 52-WAY	*Call
2094		4552<4553	53-WAY TO 52-WAY	*Call
2094		4552<4554	54-WAY TO 52-WAY	*Call
2094		4552<4601	1-WAY TO 52-WAY	*Call
2094		4552<4602	2-WAY TO 52-WAY	*Call
2094		4552<4603	3-WAY TO 52-WAY	*Call
2094		4552<4604	4-WAY TO 52-WAY	*Call
2094		4552<4605	5-WAY TO 52-WAY	*Call
2094		4552<4606	6-WAY TO 52-WAY	*Call
2094		4552<4607	7-WAY TO 52-WAY	*Call
2094		4552<4608	8-WAY TO 52-WAY	*Call
2094		4552<4701	1-WAY TO 52-WAY	*Call
2094		4552<4702	2-WAY TO 52-WAY	*Call
2094		4552<4703	3-WAY TO 52-WAY	*Call
2094		4552<4704	4-WAY TO 52-WAY	*Call
2094		4552<4705	5-WAY TO 52-WAY	*Call
2094		4552<4706	6-WAY TO 52-WAY	*Call
2094		4552<4707	7-WAY TO 52-WAY	*Call
2094		4552<4708	8-WAY TO 52-WAY	*Call
2094		4552<4801	1-WAY TO 52-WAY	*Call
2094		4552<4802	2-WAY TO 52-WAY	*Call
2094		4552<4803	3-WAY TO 52-WAY	*Call
2094		4552<4804	4-WAY TO 52-WAY	*Call
2094		4552<4805	5-WAY TO 52-WAY	*Call
2094		4552<4806	6-WAY TO 52-WAY	*Call
2094		4552<4807	7-WAY TO 52-WAY	*Call
2094		4552<4808	8-WAY TO 52-WAY	*Call
2094		4553<4500	ZERO-WAY TO 53-WAY	*Call
2094		4553<4501	1-WAY TO 53-WAY	*Call
2094		4553<4502	2-WAY TO 53-WAY	*Call
2094		4553<4503	3-WAY TO 53-WAY	*Call
2094		4553<4504	4-WAY TO 53-WAY	*Call
2094		4553<4505	5-WAY TO 53-WAY	*Call
2094		4553<4506	6-WAY TO 53-WAY	*Call
2094		4553<4507	7-WAY TO 53-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4553<4508	8-WAY TO 53-WAY	*Call
2094		4553<4509	9-WAY TO 53-WAY	*Call
2094		4553<4510	10-WAY TO 53-WAY	*Call
2094		4553<4511	11-WAY TO 53-WAY	*Call
2094		4553<4512	12-WAY TO 53-WAY	*Call
2094		4553<4513	13-WAY TO 53-WAY	*Call
2094		4553<4514	14-WAY TO 53-WAY	*Call
2094		4553<4515	15-WAY TO 53-WAY	*Call
2094		4553<4516	16-WAY TO 53-WAY	*Call
2094		4553<4517	17-WAY TO 53-WAY	*Call
2094		4553<4518	18-WAY TO 53-WAY	*Call
2094		4553<4519	19-WAY TO 53-WAY	*Call
2094		4553<4520	20-WAY TO 53-WAY	*Call
2094		4553<4521	21-WAY TO 53-WAY	*Call
2094		4553<4522	22-WAY TO 53-WAY	*Call
2094		4553<4523	23-WAY TO 53-WAY	*Call
2094		4553<4524	24-WAY TO 53-WAY	*Call
2094		4553<4525	25-WAY TO 53-WAY	*Call
2094		4553<4526	26-WAY TO 53-WAY	*Call
2094		4553<4527	27-WAY TO 53-WAY	*Call
2094		4553<4528	28-WAY TO 53-WAY	*Call
2094		4553<4529	29-WAY TO 53-WAY	*Call
2094		4553<4530	30-WAY TO 53-WAY	*Call
2094		4553<4531	31-WAY TO 53-WAY	*Call
2094		4553<4532	32-WAY TO 53-WAY	*Call
2094		4553<4533	33-WAY TO 53-WAY	*Call
2094		4553<4534	34-WAY TO 53-WAY	*Call
2094		4553<4535	35-WAY TO 53-WAY	*Call
2094		4553<4536	36-WAY TO 53-WAY	*Call
2094		4553<4537	37-WAY TO 53-WAY	*Call
2094		4553<4538	38-WAY TO 53-WAY	*Call
2094		4553<4539	39-WAY TO 53-WAY	*Call
2094		4553<4540	40-WAY TO 53-WAY	*Call
2094		4553<4541	41-WAY TO 53-WAY	*Call
2094		4553<4542	42-WAY TO 53-WAY	*Call
2094		4553<4543	43-WAY TO 53-WAY	*Call
2094		4553<4544	44-WAY TO 53-WAY	*Call
2094		4553<4545	45-WAY TO 53-WAY	*Call
2094		4553<4546	46-WAY TO 53-WAY	*Call
2094		4553<4547	47-WAY TO 53-WAY	*Call
2094		4553<4548	48-WAY TO 53-WAY	*Call
2094		4553<4549	49-WAY TO 53-WAY	*Call
2094		4553<4550	50-WAY TO 53-WAY	*Call
2094		4553<4551	51-WAY TO 53-WAY	*Call
2094		4553<4552	52-WAY TO 53-WAY	*Call
2094		4553<4554	54-WAY TO 53-WAY	*Call
2094		4553<4601	1-WAY TO 53-WAY	*Call
2094		4553<4602	2-WAY TO 53-WAY	*Call
2094		4553<4603	3-WAY TO 53-WAY	*Call
2094		4553<4604	4-WAY TO 53-WAY	*Call
2094		4553<4605	5-WAY TO 53-WAY	*Call
2094		4553<4606	6-WAY TO 53-WAY	*Call
2094		4553<4607	7-WAY TO 53-WAY	*Call
2094		4553<4608	8-WAY TO 53-WAY	*Call
2094		4553<4701	1-WAY TO 53-WAY	*Call
2094		4553<4702	2-WAY TO 53-WAY	*Call
2094		4553<4703	3-WAY TO 53-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4553<4704	4-WAY TO 53-WAY	*Call
2094		4553<4705	5-WAY TO 53-WAY	*Call
2094		4553<4706	6-WAY TO 53-WAY	*Call
2094		4553<4707	7-WAY TO 53-WAY	*Call
2094		4553<4708	8-WAY TO 53-WAY	*Call
2094		4553<4801	1-WAY TO 53-WAY	*Call
2094		4553<4802	2-WAY TO 53-WAY	*Call
2094		4553<4803	3-WAY TO 53-WAY	*Call
2094		4553<4804	4-WAY TO 53-WAY	*Call
2094		4553<4805	5-WAY TO 53-WAY	*Call
2094		4553<4806	6-WAY TO 53-WAY	*Call
2094		4553<4807	7-WAY TO 53-WAY	*Call
2094		4553<4808	8-WAY TO 53-WAY	*Call
2094		4554<4500	ZERO-WAY TO 54-WAY	*Call
2094		4554<4501	1-WAY TO 54-WAY	*Call
2094		4554<4502	2-WAY TO 54-WAY	*Call
2094		4554<4503	3-WAY TO 54-WAY	*Call
2094		4554<4504	4-WAY TO 54-WAY	*Call
2094		4554<4505	5-WAY TO 54-WAY	*Call
2094		4554<4506	6-WAY TO 54-WAY	*Call
2094		4554<4507	7-WAY TO 54-WAY	*Call
2094		4554<4508	8-WAY TO 54-WAY	*Call
2094		4554<4509	9-WAY TO 54-WAY	*Call
2094		4554<4510	10-WAY TO 54-WAY	*Call
2094		4554<4511	11-WAY TO 54-WAY	*Call
2094		4554<4512	12-WAY TO 54-WAY	*Call
2094		4554<4513	13-WAY TO 54-WAY	*Call
2094		4554<4514	14-WAY TO 54-WAY	*Call
2094		4554<4515	15-WAY TO 54-WAY	*Call
2094		4554<4516	16-WAY TO 54-WAY	*Call
2094		4554<4517	17-WAY TO 54-WAY	*Call
2094		4554<4518	18-WAY TO 54-WAY	*Call
2094		4554<4519	19-WAY TO 54-WAY	*Call
2094		4554<4520	20-WAY TO 54-WAY	*Call
2094		4554<4521	21-WAY TO 54-WAY	*Call
2094		4554<4522	22-WAY TO 54-WAY	*Call
2094		4554<4523	23-WAY TO 54-WAY	*Call
2094		4554<4524	24-WAY TO 54-WAY	*Call
2094		4554<4525	25-WAY TO 54-WAY	*Call
2094		4554<4526	26-WAY TO 54-WAY	*Call
2094		4554<4527	27-WAY TO 54-WAY	*Call
2094		4554<4528	28-WAY TO 54-WAY	*Call
2094		4554<4529	29-WAY TO 54-WAY	*Call
2094		4554<4530	30-WAY TO 54-WAY	*Call
2094		4554<4531	31-WAY TO 54-WAY	*Call
2094		4554<4532	32-WAY TO 54-WAY	*Call
2094		4554<4533	33-WAY TO 54-WAY	*Call
2094		4554<4534	34-WAY TO 54-WAY	*Call
2094		4554<4535	35-WAY TO 54-WAY	*Call
2094		4554<4536	36-WAY TO 54-WAY	*Call
2094		4554<4537	37-WAY TO 54-WAY	*Call
2094		4554<4538	38-WAY TO 54-WAY	*Call
2094		4554<4539	39-WAY TO 54-WAY	*Call
2094		4554<4540	40-WAY TO 54-WAY	*Call
2094		4554<4541	41-WAY TO 54-WAY	*Call
2094		4554<4542	42-WAY TO 54-WAY	*Call
2094		4554<4543	43-WAY TO 54-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4554<4544	44-WAY TO 54-WAY	*Call
2094		4554<4545	45-WAY TO 54-WAY	*Call
2094		4554<4546	46-WAY TO 54-WAY	*Call
2094		4554<4547	47-WAY TO 54-WAY	*Call
2094		4554<4548	48-WAY TO 54-WAY	*Call
2094		4554<4549	49-WAY TO 54-WAY	*Call
2094		4554<4550	50-WAY TO 54-WAY	*Call
2094		4554<4551	51-WAY TO 54-WAY	*Call
2094		4554<4552	52-WAY TO 54-WAY	*Call
2094		4554<4553	53-WAY TO 54-WAY	*Call
2094		4554<4601	1-WAY TO 54-WAY	*Call
2094		4554<4602	2-WAY TO 54-WAY	*Call
2094		4554<4603	3-WAY TO 54-WAY	*Call
2094		4554<4604	4-WAY TO 54-WAY	*Call
2094		4554<4605	5-WAY TO 54-WAY	*Call
2094		4554<4606	6-WAY TO 54-WAY	*Call
2094		4554<4607	7-WAY TO 54-WAY	*Call
2094		4554<4608	8-WAY TO 54-WAY	*Call
2094		4554<4701	1-WAY TO 54-WAY	*Call
2094		4554<4702	2-WAY TO 54-WAY	*Call
2094		4554<4703	3-WAY TO 54-WAY	*Call
2094		4554<4704	4-WAY TO 54-WAY	*Call
2094		4554<4705	5-WAY TO 54-WAY	*Call
2094		4554<4706	6-WAY TO 54-WAY	*Call
2094		4554<4707	7-WAY TO 54-WAY	*Call
2094		4554<4708	8-WAY TO 54-WAY	*Call
2094		4554<4801	1-WAY TO 54-WAY	*Call
2094		4554<4802	2-WAY TO 54-WAY	*Call
2094		4554<4803	3-WAY TO 54-WAY	*Call
2094		4554<4804	4-WAY TO 54-WAY	*Call
2094		4554<4805	5-WAY TO 54-WAY	*Call
2094		4554<4806	6-WAY TO 54-WAY	*Call
2094		4554<4807	7-WAY TO 54-WAY	*Call
2094		4554<4808	8-WAY TO 54-WAY	*Call
2094		4601<4500	ZERO-WAY TO 1-WAY	*Call
2094		4601<4501	1-WAY TO 1-WAY	*Call
2094		4601<4502	2-WAY TO 1-WAY	*Call
2094		4601<4503	3-WAY TO 1-WAY	*Call
2094		4601<4504	4-WAY TO 1-WAY	*Call
2094		4601<4505	5-WAY TO 1-WAY	*Call
2094		4601<4506	6-WAY TO 1-WAY	*Call
2094		4601<4507	7-WAY TO 1-WAY	*Call
2094		4601<4508	8-WAY TO 1-WAY	*Call
2094		4601<4509	9-WAY TO 1-WAY	*Call
2094		4601<4510	10-WAY TO 1-WAY	*Call
2094		4601<4511	11-WAY TO 1-WAY	*Call
2094		4601<4512	12-WAY TO 1-WAY	*Call
2094		4601<4513	13-WAY TO 1-WAY	*Call
2094		4601<4514	14-WAY TO 1-WAY	*Call
2094		4601<4515	15-WAY TO 1-WAY	*Call
2094		4601<4516	16-WAY TO 1-WAY	*Call
2094		4601<4517	17-WAY TO 1-WAY	*Call
2094		4601<4518	18-WAY TO 1-WAY	*Call
2094		4601<4519	19-WAY TO 1-WAY	*Call
2094		4601<4520	20-WAY TO 1-WAY	*Call
2094		4601<4521	21-WAY TO 1-WAY	*Call
2094		4601<4522	22-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4601<4523	23-WAY TO 1-WAY	*Call
2094		4601<4524	24-WAY TO 1-WAY	*Call
2094		4601<4525	25-WAY TO 1-WAY	*Call
2094		4601<4526	26-WAY TO 1-WAY	*Call
2094		4601<4527	27-WAY TO 1-WAY	*Call
2094		4601<4528	28-WAY TO 1-WAY	*Call
2094		4601<4529	29-WAY TO 1-WAY	*Call
2094		4601<4530	30-WAY TO 1-WAY	*Call
2094		4601<4531	31-WAY TO 1-WAY	*Call
2094		4601<4532	32-WAY TO 1-WAY	*Call
2094		4601<4533	33-WAY TO 1-WAY	*Call
2094		4601<4534	34-WAY TO 1-WAY	*Call
2094		4601<4535	35-WAY TO 1-WAY	*Call
2094		4601<4536	36-WAY TO 1-WAY	*Call
2094		4601<4537	37-WAY TO 1-WAY	*Call
2094		4601<4538	38-WAY TO 1-WAY	*Call
2094		4601<4539	39-WAY TO 1-WAY	*Call
2094		4601<4540	40-WAY TO 1-WAY	*Call
2094		4601<4541	41-WAY TO 1-WAY	*Call
2094		4601<4542	42-WAY TO 1-WAY	*Call
2094		4601<4543	43-WAY TO 1-WAY	*Call
2094		4601<4544	44-WAY TO 1-WAY	*Call
2094		4601<4545	45-WAY TO 1-WAY	*Call
2094		4601<4546	46-WAY TO 1-WAY	*Call
2094		4601<4547	47-WAY TO 1-WAY	*Call
2094		4601<4548	48-WAY TO 1-WAY	*Call
2094		4601<4549	49-WAY TO 1-WAY	*Call
2094		4601<4550	50-WAY TO 1-WAY	*Call
2094		4601<4551	51-WAY TO 1-WAY	*Call
2094		4601<4552	52-WAY TO 1-WAY	*Call
2094		4601<4553	53-WAY TO 1-WAY	*Call
2094		4601<4554	54-WAY TO 1-WAY	*Call
2094		4601<4602	2-WAY TO 1-WAY	*Call
2094		4601<4603	3-WAY TO 1-WAY	*Call
2094		4601<4604	4-WAY TO 1-WAY	*Call
2094		4601<4605	5-WAY TO 1-WAY	*Call
2094		4601<4606	6-WAY TO 1-WAY	*Call
2094		4601<4607	7-WAY TO 1-WAY	*Call
2094		4601<4608	8-WAY TO 1-WAY	*Call
2094		4601<4701	1-WAY TO 1-WAY	*Call
2094		4601<4702	2-WAY TO 1-WAY	*Call
2094		4601<4703	3-WAY TO 1-WAY	*Call
2094		4601<4704	4-WAY TO 1-WAY	*Call
2094		4601<4705	5-WAY TO 1-WAY	*Call
2094		4601<4706	6-WAY TO 1-WAY	*Call
2094		4601<4707	7-WAY TO 1-WAY	*Call
2094		4601<4708	8-WAY TO 1-WAY	*Call
2094		4601<4801	1-WAY TO 1-WAY	*Call
2094		4601<4802	2-WAY TO 1-WAY	*Call
2094		4601<4803	3-WAY TO 1-WAY	*Call
2094		4601<4804	4-WAY TO 1-WAY	*Call
2094		4601<4805	5-WAY TO 1-WAY	*Call
2094		4601<4806	6-WAY TO 1-WAY	*Call
2094		4601<4807	7-WAY TO 1-WAY	*Call
2094		4601<4808	8-WAY TO 1-WAY	*Call
2094		4602<4500	ZERO-WAY TO 2-WAY	*Call
2094		4602<4501	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4602<4502	2-WAY TO 2-WAY	*Call
2094		4602<4503	3-WAY TO 2-WAY	*Call
2094		4602<4504	4-WAY TO 2-WAY	*Call
2094		4602<4505	5-WAY TO 2-WAY	*Call
2094		4602<4506	6-WAY TO 2-WAY	*Call
2094		4602<4507	7-WAY TO 2-WAY	*Call
2094		4602<4508	8-WAY TO 2-WAY	*Call
2094		4602<4509	9-WAY TO 2-WAY	*Call
2094		4602<4510	10-WAY TO 2-WAY	*Call
2094		4602<4511	11-WAY TO 2-WAY	*Call
2094		4602<4512	12-WAY TO 2-WAY	*Call
2094		4602<4513	13-WAY TO 2-WAY	*Call
2094		4602<4514	14-WAY TO 2-WAY	*Call
2094		4602<4515	15-WAY TO 2-WAY	*Call
2094		4602<4516	16-WAY TO 2-WAY	*Call
2094		4602<4517	17-WAY TO 2-WAY	*Call
2094		4602<4518	18-WAY TO 2-WAY	*Call
2094		4602<4519	19-WAY TO 2-WAY	*Call
2094		4602<4520	20-WAY TO 2-WAY	*Call
2094		4602<4521	21-WAY TO 2-WAY	*Call
2094		4602<4522	22-WAY TO 2-WAY	*Call
2094		4602<4523	23-WAY TO 2-WAY	*Call
2094		4602<4524	24-WAY TO 2-WAY	*Call
2094		4602<4525	25-WAY TO 2-WAY	*Call
2094		4602<4526	26-WAY TO 2-WAY	*Call
2094		4602<4527	27-WAY TO 2-WAY	*Call
2094		4602<4528	28-WAY TO 2-WAY	*Call
2094		4602<4529	29-WAY TO 2-WAY	*Call
2094		4602<4530	30-WAY TO 2-WAY	*Call
2094		4602<4531	31-WAY TO 2-WAY	*Call
2094		4602<4532	32-WAY TO 2-WAY	*Call
2094		4602<4533	33-WAY TO 2-WAY	*Call
2094		4602<4534	34-WAY TO 2-WAY	*Call
2094		4602<4535	35-WAY TO 2-WAY	*Call
2094		4602<4536	36-WAY TO 2-WAY	*Call
2094		4602<4537	37-WAY TO 2-WAY	*Call
2094		4602<4538	38-WAY TO 2-WAY	*Call
2094		4602<4539	39-WAY TO 2-WAY	*Call
2094		4602<4540	40-WAY TO 2-WAY	*Call
2094		4602<4541	41-WAY TO 2-WAY	*Call
2094		4602<4542	42-WAY TO 2-WAY	*Call
2094		4602<4543	43-WAY TO 2-WAY	*Call
2094		4602<4544	44-WAY TO 2-WAY	*Call
2094		4602<4545	45-WAY TO 2-WAY	*Call
2094		4602<4546	46-WAY TO 2-WAY	*Call
2094		4602<4547	47-WAY TO 2-WAY	*Call
2094		4602<4548	48-WAY TO 2-WAY	*Call
2094		4602<4549	49-WAY TO 2-WAY	*Call
2094		4602<4550	50-WAY TO 2-WAY	*Call
2094		4602<4551	51-WAY TO 2-WAY	*Call
2094		4602<4552	52-WAY TO 2-WAY	*Call
2094		4602<4553	53-WAY TO 2-WAY	*Call
2094		4602<4554	54-WAY TO 2-WAY	*Call
2094		4602<4601	1-WAY TO 2-WAY	*Call
2094		4602<4603	3-WAY TO 2-WAY	*Call
2094		4602<4604	4-WAY TO 2-WAY	*Call
2094		4602<4605	5-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4602<4606	6-WAY TO 2-WAY	*Call
2094		4602<4607	7-WAY TO 2-WAY	*Call
2094		4602<4608	8-WAY TO 2-WAY	*Call
2094		4602<4701	1-WAY TO 2-WAY	*Call
2094		4602<4702	2-WAY TO 2-WAY	*Call
2094		4602<4703	3-WAY TO 2-WAY	*Call
2094		4602<4704	4-WAY TO 2-WAY	*Call
2094		4602<4705	5-WAY TO 2-WAY	*Call
2094		4602<4706	6-WAY TO 2-WAY	*Call
2094		4602<4707	7-WAY TO 2-WAY	*Call
2094		4602<4708	8-WAY TO 2-WAY	*Call
2094		4602<4801	1-WAY TO 2-WAY	*Call
2094		4602<4802	2-WAY TO 2-WAY	*Call
2094		4602<4803	3-WAY TO 2-WAY	*Call
2094		4602<4804	4-WAY TO 2-WAY	*Call
2094		4602<4805	5-WAY TO 2-WAY	*Call
2094		4602<4806	6-WAY TO 2-WAY	*Call
2094		4602<4807	7-WAY TO 2-WAY	*Call
2094		4602<4808	8-WAY TO 2-WAY	*Call
2094		4603<4500	ZERO-WAY TO 3-WAY	*Call
2094		4603<4501	1-WAY TO 3-WAY	*Call
2094		4603<4502	2-WAY TO 3-WAY	*Call
2094		4603<4503	3-WAY TO 3-WAY	*Call
2094		4603<4504	4-WAY TO 3-WAY	*Call
2094		4603<4505	5-WAY TO 3-WAY	*Call
2094		4603<4506	6-WAY TO 3-WAY	*Call
2094		4603<4507	7-WAY TO 3-WAY	*Call
2094		4603<4508	8-WAY TO 3-WAY	*Call
2094		4603<4509	9-WAY TO 3-WAY	*Call
2094		4603<4510	10-WAY TO 3-WAY	*Call
2094		4603<4511	11-WAY TO 3-WAY	*Call
2094		4603<4512	12-WAY TO 3-WAY	*Call
2094		4603<4513	13-WAY TO 3-WAY	*Call
2094		4603<4514	14-WAY TO 3-WAY	*Call
2094		4603<4515	15-WAY TO 3-WAY	*Call
2094		4603<4516	16-WAY TO 3-WAY	*Call
2094		4603<4517	17-WAY TO 3-WAY	*Call
2094		4603<4518	18-WAY TO 3-WAY	*Call
2094		4603<4519	19-WAY TO 3-WAY	*Call
2094		4603<4520	20-WAY TO 3-WAY	*Call
2094		4603<4521	21-WAY TO 3-WAY	*Call
2094		4603<4522	22-WAY TO 3-WAY	*Call
2094		4603<4523	23-WAY TO 3-WAY	*Call
2094		4603<4524	24-WAY TO 3-WAY	*Call
2094		4603<4525	25-WAY TO 3-WAY	*Call
2094		4603<4526	26-WAY TO 3-WAY	*Call
2094		4603<4527	27-WAY TO 3-WAY	*Call
2094		4603<4528	28-WAY TO 3-WAY	*Call
2094		4603<4529	29-WAY TO 3-WAY	*Call
2094		4603<4530	30-WAY TO 3-WAY	*Call
2094		4603<4531	31-WAY TO 3-WAY	*Call
2094		4603<4532	32-WAY TO 3-WAY	*Call
2094		4603<4533	33-WAY TO 3-WAY	*Call
2094		4603<4534	34-WAY TO 3-WAY	*Call
2094		4603<4535	35-WAY TO 3-WAY	*Call
2094		4603<4536	36-WAY TO 3-WAY	*Call
2094		4603<4537	37-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4603<4538	38-WAY TO 3-WAY	*Call
2094		4603<4539	39-WAY TO 3-WAY	*Call
2094		4603<4540	40-WAY TO 3-WAY	*Call
2094		4603<4541	41-WAY TO 3-WAY	*Call
2094		4603<4542	42-WAY TO 3-WAY	*Call
2094		4603<4543	43-WAY TO 3-WAY	*Call
2094		4603<4544	44-WAY TO 3-WAY	*Call
2094		4603<4545	45-WAY TO 3-WAY	*Call
2094		4603<4546	46-WAY TO 3-WAY	*Call
2094		4603<4547	47-WAY TO 3-WAY	*Call
2094		4603<4548	48-WAY TO 3-WAY	*Call
2094		4603<4549	49-WAY TO 3-WAY	*Call
2094		4603<4550	50-WAY TO 3-WAY	*Call
2094		4603<4551	51-WAY TO 3-WAY	*Call
2094		4603<4552	52-WAY TO 3-WAY	*Call
2094		4603<4553	53-WAY TO 3-WAY	*Call
2094		4603<4554	54-WAY TO 3-WAY	*Call
2094		4603<4601	1-WAY TO 3-WAY	*Call
2094		4603<4602	2-WAY TO 3-WAY	*Call
2094		4603<4604	4-WAY TO 3-WAY	*Call
2094		4603<4605	5-WAY TO 3-WAY	*Call
2094		4603<4606	6-WAY TO 3-WAY	*Call
2094		4603<4607	7-WAY TO 3-WAY	*Call
2094		4603<4608	8-WAY TO 3-WAY	*Call
2094		4603<4701	1-WAY TO 3-WAY	*Call
2094		4603<4702	2-WAY TO 3-WAY	*Call
2094		4603<4703	3-WAY TO 3-WAY	*Call
2094		4603<4704	4-WAY TO 3-WAY	*Call
2094		4603<4705	5-WAY TO 3-WAY	*Call
2094		4603<4706	6-WAY TO 3-WAY	*Call
2094		4603<4707	7-WAY TO 3-WAY	*Call
2094		4603<4708	8-WAY TO 3-WAY	*Call
2094		4603<4801	1-WAY TO 3-WAY	*Call
2094		4603<4802	2-WAY TO 3-WAY	*Call
2094		4603<4803	3-WAY TO 3-WAY	*Call
2094		4603<4804	4-WAY TO 3-WAY	*Call
2094		4603<4805	5-WAY TO 3-WAY	*Call
2094		4603<4806	6-WAY TO 3-WAY	*Call
2094		4603<4807	7-WAY TO 3-WAY	*Call
2094		4603<4808	8-WAY TO 3-WAY	*Call
2094		4604<4500	ZERO-WAY TO 4-WAY	*Call
2094		4604<4501	1-WAY TO 4-WAY	*Call
2094		4604<4502	2-WAY TO 4-WAY	*Call
2094		4604<4503	3-WAY TO 4-WAY	*Call
2094		4604<4504	4-WAY TO 4-WAY	*Call
2094		4604<4505	5-WAY TO 4-WAY	*Call
2094		4604<4506	6-WAY TO 4-WAY	*Call
2094		4604<4507	7-WAY TO 4-WAY	*Call
2094		4604<4508	8-WAY TO 4-WAY	*Call
2094		4604<4509	9-WAY TO 4-WAY	*Call
2094		4604<4510	10-WAY TO 4-WAY	*Call
2094		4604<4511	11-WAY TO 4-WAY	*Call
2094		4604<4512	12-WAY TO 4-WAY	*Call
2094		4604<4513	13-WAY TO 4-WAY	*Call
2094		4604<4514	14-WAY TO 4-WAY	*Call
2094		4604<4515	15-WAY TO 4-WAY	*Call
2094		4604<4516	16-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4604<4517	17-WAY TO 4-WAY	*Call
2094		4604<4518	18-WAY TO 4-WAY	*Call
2094		4604<4519	19-WAY TO 4-WAY	*Call
2094		4604<4520	20-WAY TO 4-WAY	*Call
2094		4604<4521	21-WAY TO 4-WAY	*Call
2094		4604<4522	22-WAY TO 4-WAY	*Call
2094		4604<4523	23-WAY TO 4-WAY	*Call
2094		4604<4524	24-WAY TO 4-WAY	*Call
2094		4604<4525	25-WAY TO 4-WAY	*Call
2094		4604<4526	26-WAY TO 4-WAY	*Call
2094		4604<4527	27-WAY TO 4-WAY	*Call
2094		4604<4528	28-WAY TO 4-WAY	*Call
2094		4604<4529	29-WAY TO 4-WAY	*Call
2094		4604<4530	30-WAY TO 4-WAY	*Call
2094		4604<4531	31-WAY TO 4-WAY	*Call
2094		4604<4532	32-WAY TO 4-WAY	*Call
2094		4604<4533	33-WAY TO 4-WAY	*Call
2094		4604<4534	34-WAY TO 4-WAY	*Call
2094		4604<4535	35-WAY TO 4-WAY	*Call
2094		4604<4536	36-WAY TO 4-WAY	*Call
2094		4604<4537	37-WAY TO 4-WAY	*Call
2094		4604<4538	38-WAY TO 4-WAY	*Call
2094		4604<4539	39-WAY TO 4-WAY	*Call
2094		4604<4540	40-WAY TO 4-WAY	*Call
2094		4604<4541	41-WAY TO 4-WAY	*Call
2094		4604<4542	42-WAY TO 4-WAY	*Call
2094		4604<4543	43-WAY TO 4-WAY	*Call
2094		4604<4544	44-WAY TO 4-WAY	*Call
2094		4604<4545	45-WAY TO 4-WAY	*Call
2094		4604<4546	46-WAY TO 4-WAY	*Call
2094		4604<4547	47-WAY TO 4-WAY	*Call
2094		4604<4548	48-WAY TO 4-WAY	*Call
2094		4604<4549	49-WAY TO 4-WAY	*Call
2094		4604<4550	50-WAY TO 4-WAY	*Call
2094		4604<4551	51-WAY TO 4-WAY	*Call
2094		4604<4552	52-WAY TO 4-WAY	*Call
2094		4604<4553	53-WAY TO 4-WAY	*Call
2094		4604<4554	54-WAY TO 4-WAY	*Call
2094		4604<4601	1-WAY TO 4-WAY	*Call
2094		4604<4602	2-WAY TO 4-WAY	*Call
2094		4604<4603	3-WAY TO 4-WAY	*Call
2094		4604<4605	5-WAY TO 4-WAY	*Call
2094		4604<4606	6-WAY TO 4-WAY	*Call
2094		4604<4607	7-WAY TO 4-WAY	*Call
2094		4604<4608	8-WAY TO 4-WAY	*Call
2094		4604<4701	1-WAY TO 4-WAY	*Call
2094		4604<4702	2-WAY TO 4-WAY	*Call
2094		4604<4703	3-WAY TO 4-WAY	*Call
2094		4604<4704	4-WAY TO 4-WAY	*Call
2094		4604<4705	5-WAY TO 4-WAY	*Call
2094		4604<4706	6-WAY TO 4-WAY	*Call
2094		4604<4707	7-WAY TO 4-WAY	*Call
2094		4604<4708	8-WAY TO 4-WAY	*Call
2094		4604<4801	1-WAY TO 4-WAY	*Call
2094		4604<4802	2-WAY TO 4-WAY	*Call
2094		4604<4803	3-WAY TO 4-WAY	*Call
2094		4604<4804	4-WAY TO 4-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4604<4805	5-WAY TO 4-WAY	*Call
2094			4604<4806	6-WAY TO 4-WAY	*Call
2094			4604<4807	7-WAY TO 4-WAY	*Call
2094			4604<4808	8-WAY TO 4-WAY	*Call
2094			4605<4500	ZERO-WAY TO 5-WAY	*Call
2094			4605<4501	1-WAY TO 5-WAY	*Call
2094			4605<4502	2-WAY TO 5-WAY	*Call
2094			4605<4503	3-WAY TO 5-WAY	*Call
2094			4605<4504	4-WAY TO 5-WAY	*Call
2094			4605<4505	5-WAY TO 5-WAY	*Call
2094			4605<4506	6-WAY TO 5-WAY	*Call
2094			4605<4507	7-WAY TO 5-WAY	*Call
2094			4605<4508	8-WAY TO 5-WAY	*Call
2094			4605<4509	9-WAY TO 5-WAY	*Call
2094			4605<4510	10-WAY TO 5-WAY	*Call
2094			4605<4511	11-WAY TO 5-WAY	*Call
2094			4605<4512	12-WAY TO 5-WAY	*Call
2094			4605<4513	13-WAY TO 5-WAY	*Call
2094			4605<4514	14-WAY TO 5-WAY	*Call
2094			4605<4515	15-WAY TO 5-WAY	*Call
2094			4605<4516	16-WAY TO 5-WAY	*Call
2094			4605<4517	17-WAY TO 5-WAY	*Call
2094			4605<4518	18-WAY TO 5-WAY	*Call
2094			4605<4519	19-WAY TO 5-WAY	*Call
2094			4605<4520	20-WAY TO 5-WAY	*Call
2094			4605<4521	21-WAY TO 5-WAY	*Call
2094			4605<4522	22-WAY TO 5-WAY	*Call
2094			4605<4523	23-WAY TO 5-WAY	*Call
2094			4605<4524	24-WAY TO 5-WAY	*Call
2094			4605<4525	25-WAY TO 5-WAY	*Call
2094			4605<4526	26-WAY TO 5-WAY	*Call
2094			4605<4527	27-WAY TO 5-WAY	*Call
2094			4605<4528	28-WAY TO 5-WAY	*Call
2094			4605<4529	29-WAY TO 5-WAY	*Call
2094			4605<4530	30-WAY TO 5-WAY	*Call
2094			4605<4531	31-WAY TO 5-WAY	*Call
2094			4605<4532	32-WAY TO 5-WAY	*Call
2094			4605<4533	33-WAY TO 5-WAY	*Call
2094			4605<4534	34-WAY TO 5-WAY	*Call
2094			4605<4535	35-WAY TO 5-WAY	*Call
2094			4605<4536	36-WAY TO 5-WAY	*Call
2094			4605<4537	37-WAY TO 5-WAY	*Call
2094			4605<4538	38-WAY TO 5-WAY	*Call
2094			4605<4539	39-WAY TO 5-WAY	*Call
2094			4605<4540	40-WAY TO 5-WAY	*Call
2094			4605<4541	41-WAY TO 5-WAY	*Call
2094			4605<4542	42-WAY TO 5-WAY	*Call
2094			4605<4543	43-WAY TO 5-WAY	*Call
2094			4605<4544	44-WAY TO 5-WAY	*Call
2094			4605<4545	45-WAY TO 5-WAY	*Call
2094			4605<4546	46-WAY TO 5-WAY	*Call
2094			4605<4547	47-WAY TO 5-WAY	*Call
2094			4605<4548	48-WAY TO 5-WAY	*Call
2094			4605<4549	49-WAY TO 5-WAY	*Call
2094			4605<4550	50-WAY TO 5-WAY	*Call
2094			4605<4551	51-WAY TO 5-WAY	*Call
2094			4605<4552	52-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4605<4553	53-WAY TO 5-WAY	*Call
2094		4605<4554	54-WAY TO 5-WAY	*Call
2094		4605<4601	1-WAY TO 5-WAY	*Call
2094		4605<4602	2-WAY TO 5-WAY	*Call
2094		4605<4603	3-WAY TO 5-WAY	*Call
2094		4605<4604	4-WAY TO 5-WAY	*Call
2094		4605<4606	6-WAY TO 5-WAY	*Call
2094		4605<4607	7-WAY TO 5-WAY	*Call
2094		4605<4608	8-WAY TO 5-WAY	*Call
2094		4605<4701	1-WAY TO 5-WAY	*Call
2094		4605<4702	2-WAY TO 5-WAY	*Call
2094		4605<4703	3-WAY TO 5-WAY	*Call
2094		4605<4704	4-WAY TO 5-WAY	*Call
2094		4605<4705	5-WAY TO 5-WAY	*Call
2094		4605<4706	6-WAY TO 5-WAY	*Call
2094		4605<4707	7-WAY TO 5-WAY	*Call
2094		4605<4708	8-WAY TO 5-WAY	*Call
2094		4605<4801	1-WAY TO 5-WAY	*Call
2094		4605<4802	2-WAY TO 5-WAY	*Call
2094		4605<4803	3-WAY TO 5-WAY	*Call
2094		4605<4804	4-WAY TO 5-WAY	*Call
2094		4605<4805	5-WAY TO 5-WAY	*Call
2094		4605<4806	6-WAY TO 5-WAY	*Call
2094		4605<4807	7-WAY TO 5-WAY	*Call
2094		4605<4808	8-WAY TO 5-WAY	*Call
2094		4606<4500	ZERO-WAY TO 6-WAY	*Call
2094		4606<4501	1-WAY TO 6-WAY	*Call
2094		4606<4502	2-WAY TO 6-WAY	*Call
2094		4606<4503	3-WAY TO 6-WAY	*Call
2094		4606<4504	4-WAY TO 6-WAY	*Call
2094		4606<4505	5-WAY TO 6-WAY	*Call
2094		4606<4506	6-WAY TO 6-WAY	*Call
2094		4606<4507	7-WAY TO 6-WAY	*Call
2094		4606<4508	8-WAY TO 6-WAY	*Call
2094		4606<4509	9-WAY TO 6-WAY	*Call
2094		4606<4510	10-WAY TO 6-WAY	*Call
2094		4606<4511	11-WAY TO 6-WAY	*Call
2094		4606<4512	12-WAY TO 6-WAY	*Call
2094		4606<4513	13-WAY TO 6-WAY	*Call
2094		4606<4514	14-WAY TO 6-WAY	*Call
2094		4606<4515	15-WAY TO 6-WAY	*Call
2094		4606<4516	16-WAY TO 6-WAY	*Call
2094		4606<4517	17-WAY TO 6-WAY	*Call
2094		4606<4518	18-WAY TO 6-WAY	*Call
2094		4606<4519	19-WAY TO 6-WAY	*Call
2094		4606<4520	20-WAY TO 6-WAY	*Call
2094		4606<4521	21-WAY TO 6-WAY	*Call
2094		4606<4522	22-WAY TO 6-WAY	*Call
2094		4606<4523	23-WAY TO 6-WAY	*Call
2094		4606<4524	24-WAY TO 6-WAY	*Call
2094		4606<4525	25-WAY TO 6-WAY	*Call
2094		4606<4526	26-WAY TO 6-WAY	*Call
2094		4606<4527	27-WAY TO 6-WAY	*Call
2094		4606<4528	28-WAY TO 6-WAY	*Call
2094		4606<4529	29-WAY TO 6-WAY	*Call
2094		4606<4530	30-WAY TO 6-WAY	*Call
2094		4606<4531	31-WAY TO 6-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4606<4532	32-WAY TO 6-WAY	*Call
2094			4606<4533	33-WAY TO 6-WAY	*Call
2094			4606<4534	34-WAY TO 6-WAY	*Call
2094			4606<4535	35-WAY TO 6-WAY	*Call
2094			4606<4536	36-WAY TO 6-WAY	*Call
2094			4606<4537	37-WAY TO 6-WAY	*Call
2094			4606<4538	38-WAY TO 6-WAY	*Call
2094			4606<4539	39-WAY TO 6-WAY	*Call
2094			4606<4540	40-WAY TO 6-WAY	*Call
2094			4606<4541	41-WAY TO 6-WAY	*Call
2094			4606<4542	42-WAY TO 6-WAY	*Call
2094			4606<4543	43-WAY TO 6-WAY	*Call
2094			4606<4544	44-WAY TO 6-WAY	*Call
2094			4606<4545	45-WAY TO 6-WAY	*Call
2094			4606<4546	46-WAY TO 6-WAY	*Call
2094			4606<4547	47-WAY TO 6-WAY	*Call
2094			4606<4548	48-WAY TO 6-WAY	*Call
2094			4606<4549	49-WAY TO 6-WAY	*Call
2094			4606<4550	50-WAY TO 6-WAY	*Call
2094			4606<4551	51-WAY TO 6-WAY	*Call
2094			4606<4552	52-WAY TO 6-WAY	*Call
2094			4606<4553	53-WAY TO 6-WAY	*Call
2094			4606<4554	54-WAY TO 6-WAY	*Call
2094			4606<4601	1-WAY TO 6-WAY	*Call
2094			4606<4602	2-WAY TO 6-WAY	*Call
2094			4606<4603	3-WAY TO 6-WAY	*Call
2094			4606<4604	4-WAY TO 6-WAY	*Call
2094			4606<4605	5-WAY TO 6-WAY	*Call
2094			4606<4607	7-WAY TO 6-WAY	*Call
2094			4606<4608	8-WAY TO 6-WAY	*Call
2094			4606<4701	1-WAY TO 6-WAY	*Call
2094			4606<4702	2-WAY TO 6-WAY	*Call
2094			4606<4703	3-WAY TO 6-WAY	*Call
2094			4606<4704	4-WAY TO 6-WAY	*Call
2094			4606<4705	5-WAY TO 6-WAY	*Call
2094			4606<4706	6-WAY TO 6-WAY	*Call
2094			4606<4707	7-WAY TO 6-WAY	*Call
2094			4606<4708	8-WAY TO 6-WAY	*Call
2094			4606<4801	1-WAY TO 6-WAY	*Call
2094			4606<4802	2-WAY TO 6-WAY	*Call
2094			4606<4803	3-WAY TO 6-WAY	*Call
2094			4606<4804	4-WAY TO 6-WAY	*Call
2094			4606<4805	5-WAY TO 6-WAY	*Call
2094			4606<4806	6-WAY TO 6-WAY	*Call
2094			4606<4807	7-WAY TO 6-WAY	*Call
2094			4606<4808	8-WAY TO 6-WAY	*Call
2094			4607<4500	ZERO-WAY TO 7-WAY	*Call
2094			4607<4501	1-WAY TO 7-WAY	*Call
2094			4607<4502	2-WAY TO 7-WAY	*Call
2094			4607<4503	3-WAY TO 7-WAY	*Call
2094			4607<4504	4-WAY TO 7-WAY	*Call
2094			4607<4505	5-WAY TO 7-WAY	*Call
2094			4607<4506	6-WAY TO 7-WAY	*Call
2094			4607<4507	7-WAY TO 7-WAY	*Call
2094			4607<4508	8-WAY TO 7-WAY	*Call
2094			4607<4509	9-WAY TO 7-WAY	*Call
2094			4607<4510	10-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4607<4511	11-WAY TO 7-WAY	*Call
2094		4607<4512	12-WAY TO 7-WAY	*Call
2094		4607<4513	13-WAY TO 7-WAY	*Call
2094		4607<4514	14-WAY TO 7-WAY	*Call
2094		4607<4515	15-WAY TO 7-WAY	*Call
2094		4607<4516	16-WAY TO 7-WAY	*Call
2094		4607<4517	17-WAY TO 7-WAY	*Call
2094		4607<4518	18-WAY TO 7-WAY	*Call
2094		4607<4519	19-WAY TO 7-WAY	*Call
2094		4607<4520	20-WAY TO 7-WAY	*Call
2094		4607<4521	21-WAY TO 7-WAY	*Call
2094		4607<4522	22-WAY TO 7-WAY	*Call
2094		4607<4523	23-WAY TO 7-WAY	*Call
2094		4607<4524	24-WAY TO 7-WAY	*Call
2094		4607<4525	25-WAY TO 7-WAY	*Call
2094		4607<4526	26-WAY TO 7-WAY	*Call
2094		4607<4527	27-WAY TO 7-WAY	*Call
2094		4607<4528	28-WAY TO 7-WAY	*Call
2094		4607<4529	29-WAY TO 7-WAY	*Call
2094		4607<4530	30-WAY TO 7-WAY	*Call
2094		4607<4531	31-WAY TO 7-WAY	*Call
2094		4607<4532	32-WAY TO 7-WAY	*Call
2094		4607<4533	33-WAY TO 7-WAY	*Call
2094		4607<4534	34-WAY TO 7-WAY	*Call
2094		4607<4535	35-WAY TO 7-WAY	*Call
2094		4607<4536	36-WAY TO 7-WAY	*Call
2094		4607<4537	37-WAY TO 7-WAY	*Call
2094		4607<4538	38-WAY TO 7-WAY	*Call
2094		4607<4539	39-WAY TO 7-WAY	*Call
2094		4607<4540	40-WAY TO 7-WAY	*Call
2094		4607<4541	41-WAY TO 7-WAY	*Call
2094		4607<4542	42-WAY TO 7-WAY	*Call
2094		4607<4543	43-WAY TO 7-WAY	*Call
2094		4607<4544	44-WAY TO 7-WAY	*Call
2094		4607<4545	45-WAY TO 7-WAY	*Call
2094		4607<4546	46-WAY TO 7-WAY	*Call
2094		4607<4547	47-WAY TO 7-WAY	*Call
2094		4607<4548	48-WAY TO 7-WAY	*Call
2094		4607<4549	49-WAY TO 7-WAY	*Call
2094		4607<4550	50-WAY TO 7-WAY	*Call
2094		4607<4551	51-WAY TO 7-WAY	*Call
2094		4607<4552	52-WAY TO 7-WAY	*Call
2094		4607<4553	53-WAY TO 7-WAY	*Call
2094		4607<4554	54-WAY TO 7-WAY	*Call
2094		4607<4601	1-WAY TO 7-WAY	*Call
2094		4607<4602	2-WAY TO 7-WAY	*Call
2094		4607<4603	3-WAY TO 7-WAY	*Call
2094		4607<4604	4-WAY TO 7-WAY	*Call
2094		4607<4605	5-WAY TO 7-WAY	*Call
2094		4607<4606	6-WAY TO 7-WAY	*Call
2094		4607<4608	8-WAY TO 7-WAY	*Call
2094		4607<4701	1-WAY TO 7-WAY	*Call
2094		4607<4702	2-WAY TO 7-WAY	*Call
2094		4607<4703	3-WAY TO 7-WAY	*Call
2094		4607<4704	4-WAY TO 7-WAY	*Call
2094		4607<4705	5-WAY TO 7-WAY	*Call
2094		4607<4706	6-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4607<4707	7-WAY TO 7-WAY	*Call
2094		4607<4708	8-WAY TO 7-WAY	*Call
2094		4607<4801	1-WAY TO 7-WAY	*Call
2094		4607<4802	2-WAY TO 7-WAY	*Call
2094		4607<4803	3-WAY TO 7-WAY	*Call
2094		4607<4804	4-WAY TO 7-WAY	*Call
2094		4607<4805	5-WAY TO 7-WAY	*Call
2094		4607<4806	6-WAY TO 7-WAY	*Call
2094		4607<4807	7-WAY TO 7-WAY	*Call
2094		4607<4808	8-WAY TO 7-WAY	*Call
2094		4608<4500	ZERO-WAY TO 8-WAY	*Call
2094		4608<4501	1-WAY TO 8-WAY	*Call
2094		4608<4502	2-WAY TO 8-WAY	*Call
2094		4608<4503	3-WAY TO 8-WAY	*Call
2094		4608<4504	4-WAY TO 8-WAY	*Call
2094		4608<4505	5-WAY TO 8-WAY	*Call
2094		4608<4506	6-WAY TO 8-WAY	*Call
2094		4608<4507	7-WAY TO 8-WAY	*Call
2094		4608<4508	8-WAY TO 8-WAY	*Call
2094		4608<4509	9-WAY TO 8-WAY	*Call
2094		4608<4510	10-WAY TO 8-WAY	*Call
2094		4608<4511	11-WAY TO 8-WAY	*Call
2094		4608<4512	12-WAY TO 8-WAY	*Call
2094		4608<4513	13-WAY TO 8-WAY	*Call
2094		4608<4514	14-WAY TO 8-WAY	*Call
2094		4608<4515	15-WAY TO 8-WAY	*Call
2094		4608<4516	16-WAY TO 8-WAY	*Call
2094		4608<4517	17-WAY TO 8-WAY	*Call
2094		4608<4518	18-WAY TO 8-WAY	*Call
2094		4608<4519	19-WAY TO 8-WAY	*Call
2094		4608<4520	20-WAY TO 8-WAY	*Call
2094		4608<4521	21-WAY TO 8-WAY	*Call
2094		4608<4522	22-WAY TO 8-WAY	*Call
2094		4608<4523	23-WAY TO 8-WAY	*Call
2094		4608<4524	24-WAY TO 8-WAY	*Call
2094		4608<4525	25-WAY TO 8-WAY	*Call
2094		4608<4526	26-WAY TO 8-WAY	*Call
2094		4608<4527	27-WAY TO 8-WAY	*Call
2094		4608<4528	28-WAY TO 8-WAY	*Call
2094		4608<4529	29-WAY TO 8-WAY	*Call
2094		4608<4530	30-WAY TO 8-WAY	*Call
2094		4608<4531	31-WAY TO 8-WAY	*Call
2094		4608<4532	32-WAY TO 8-WAY	*Call
2094		4608<4533	33-WAY TO 8-WAY	*Call
2094		4608<4534	34-WAY TO 8-WAY	*Call
2094		4608<4535	35-WAY TO 8-WAY	*Call
2094		4608<4536	36-WAY TO 8-WAY	*Call
2094		4608<4537	37-WAY TO 8-WAY	*Call
2094		4608<4538	38-WAY TO 8-WAY	*Call
2094		4608<4539	39-WAY TO 8-WAY	*Call
2094		4608<4540	40-WAY TO 8-WAY	*Call
2094		4608<4541	41-WAY TO 8-WAY	*Call
2094		4608<4542	42-WAY TO 8-WAY	*Call
2094		4608<4543	43-WAY TO 8-WAY	*Call
2094		4608<4544	44-WAY TO 8-WAY	*Call
2094		4608<4545	45-WAY TO 8-WAY	*Call
2094		4608<4546	46-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4608<4547	47-WAY TO 8-WAY	*Call
2094		4608<4548	48-WAY TO 8-WAY	*Call
2094		4608<4549	49-WAY TO 8-WAY	*Call
2094		4608<4550	50-WAY TO 8-WAY	*Call
2094		4608<4551	51-WAY TO 8-WAY	*Call
2094		4608<4552	52-WAY TO 8-WAY	*Call
2094		4608<4553	53-WAY TO 8-WAY	*Call
2094		4608<4554	54-WAY TO 8-WAY	*Call
2094		4608<4601	1-WAY TO 8-WAY	*Call
2094		4608<4602	2-WAY TO 8-WAY	*Call
2094		4608<4603	3-WAY TO 8-WAY	*Call
2094		4608<4604	4-WAY TO 8-WAY	*Call
2094		4608<4605	5-WAY TO 8-WAY	*Call
2094		4608<4606	6-WAY TO 8-WAY	*Call
2094		4608<4607	7-WAY TO 8-WAY	*Call
2094		4608<4701	1-WAY TO 8-WAY	*Call
2094		4608<4702	2-WAY TO 8-WAY	*Call
2094		4608<4703	3-WAY TO 8-WAY	*Call
2094		4608<4704	4-WAY TO 8-WAY	*Call
2094		4608<4705	5-WAY TO 8-WAY	*Call
2094		4608<4706	6-WAY TO 8-WAY	*Call
2094		4608<4707	7-WAY TO 8-WAY	*Call
2094		4608<4708	8-WAY TO 8-WAY	*Call
2094		4608<4801	1-WAY TO 8-WAY	*Call
2094		4608<4802	2-WAY TO 8-WAY	*Call
2094		4608<4803	3-WAY TO 8-WAY	*Call
2094		4608<4804	4-WAY TO 8-WAY	*Call
2094		4608<4805	5-WAY TO 8-WAY	*Call
2094		4608<4806	6-WAY TO 8-WAY	*Call
2094		4608<4807	7-WAY TO 8-WAY	*Call
2094		4608<4808	8-WAY TO 8-WAY	*Call
2094		4701<4500	ZERO-WAY TO 1-WAY	*Call
2094		4701<4501	1-WAY TO 1-WAY	*Call
2094		4701<4502	2-WAY TO 1-WAY	*Call
2094		4701<4503	3-WAY TO 1-WAY	*Call
2094		4701<4504	4-WAY TO 1-WAY	*Call
2094		4701<4505	5-WAY TO 1-WAY	*Call
2094		4701<4506	6-WAY TO 1-WAY	*Call
2094		4701<4507	7-WAY TO 1-WAY	*Call
2094		4701<4508	8-WAY TO 1-WAY	*Call
2094		4701<4509	9-WAY TO 1-WAY	*Call
2094		4701<4510	10-WAY TO 1-WAY	*Call
2094		4701<4511	11-WAY TO 1-WAY	*Call
2094		4701<4512	12-WAY TO 1-WAY	*Call
2094		4701<4513	13-WAY TO 1-WAY	*Call
2094		4701<4514	14-WAY TO 1-WAY	*Call
2094		4701<4515	15-WAY TO 1-WAY	*Call
2094		4701<4516	16-WAY TO 1-WAY	*Call
2094		4701<4517	17-WAY TO 1-WAY	*Call
2094		4701<4518	18-WAY TO 1-WAY	*Call
2094		4701<4519	19-WAY TO 1-WAY	*Call
2094		4701<4520	20-WAY TO 1-WAY	*Call
2094		4701<4521	21-WAY TO 1-WAY	*Call
2094		4701<4522	22-WAY TO 1-WAY	*Call
2094		4701<4523	23-WAY TO 1-WAY	*Call
2094		4701<4524	24-WAY TO 1-WAY	*Call
2094		4701<4525	25-WAY TO 1-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4701<4526	26-WAY TO 1-WAY	*Call
2094			4701<4527	27-WAY TO 1-WAY	*Call
2094			4701<4528	28-WAY TO 1-WAY	*Call
2094			4701<4529	29-WAY TO 1-WAY	*Call
2094			4701<4530	30-WAY TO 1-WAY	*Call
2094			4701<4531	31-WAY TO 1-WAY	*Call
2094			4701<4532	32-WAY TO 1-WAY	*Call
2094			4701<4533	33-WAY TO 1-WAY	*Call
2094			4701<4534	34-WAY TO 1-WAY	*Call
2094			4701<4535	35-WAY TO 1-WAY	*Call
2094			4701<4536	36-WAY TO 1-WAY	*Call
2094			4701<4537	37-WAY TO 1-WAY	*Call
2094			4701<4538	38-WAY TO 1-WAY	*Call
2094			4701<4539	39-WAY TO 1-WAY	*Call
2094			4701<4540	40-WAY TO 1-WAY	*Call
2094			4701<4541	41-WAY TO 1-WAY	*Call
2094			4701<4542	42-WAY TO 1-WAY	*Call
2094			4701<4543	43-WAY TO 1-WAY	*Call
2094			4701<4544	44-WAY TO 1-WAY	*Call
2094			4701<4545	45-WAY TO 1-WAY	*Call
2094			4701<4546	46-WAY TO 1-WAY	*Call
2094			4701<4547	47-WAY TO 1-WAY	*Call
2094			4701<4548	48-WAY TO 1-WAY	*Call
2094			4701<4549	49-WAY TO 1-WAY	*Call
2094			4701<4550	50-WAY TO 1-WAY	*Call
2094			4701<4551	51-WAY TO 1-WAY	*Call
2094			4701<4552	52-WAY TO 1-WAY	*Call
2094			4701<4553	53-WAY TO 1-WAY	*Call
2094			4701<4554	54-WAY TO 1-WAY	*Call
2094			4701<4601	1-WAY TO 1-WAY	*Call
2094			4701<4602	2-WAY TO 1-WAY	*Call
2094			4701<4603	3-WAY TO 1-WAY	*Call
2094			4701<4604	4-WAY TO 1-WAY	*Call
2094			4701<4605	5-WAY TO 1-WAY	*Call
2094			4701<4606	6-WAY TO 1-WAY	*Call
2094			4701<4607	7-WAY TO 1-WAY	*Call
2094			4701<4608	8-WAY TO 1-WAY	*Call
2094			4701<4702	2-WAY TO 1-WAY	*Call
2094			4701<4703	3-WAY TO 1-WAY	*Call
2094			4701<4704	4-WAY TO 1-WAY	*Call
2094			4701<4705	5-WAY TO 1-WAY	*Call
2094			4701<4706	6-WAY TO 1-WAY	*Call
2094			4701<4707	7-WAY TO 1-WAY	*Call
2094			4701<4708	8-WAY TO 1-WAY	*Call
2094			4701<4801	1-WAY TO 1-WAY	*Call
2094			4701<4802	2-WAY TO 1-WAY	*Call
2094			4701<4803	3-WAY TO 1-WAY	*Call
2094			4701<4804	4-WAY TO 1-WAY	*Call
2094			4701<4805	5-WAY TO 1-WAY	*Call
2094			4701<4806	6-WAY TO 1-WAY	*Call
2094			4701<4807	7-WAY TO 1-WAY	*Call
2094			4701<4808	8-WAY TO 1-WAY	*Call
2094			4702<4500	ZERO-WAY TO 2-WAY	*Call
2094			4702<4501	1-WAY TO 2-WAY	*Call
2094			4702<4502	2-WAY TO 2-WAY	*Call
2094			4702<4503	3-WAY TO 2-WAY	*Call
2094			4702<4504	4-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4702<4505	5-WAY TO 2-WAY	*Call
2094		4702<4506	6-WAY TO 2-WAY	*Call
2094		4702<4507	7-WAY TO 2-WAY	*Call
2094		4702<4508	8-WAY TO 2-WAY	*Call
2094		4702<4509	9-WAY TO 2-WAY	*Call
2094		4702<4510	10-WAY TO 2-WAY	*Call
2094		4702<4511	11-WAY TO 2-WAY	*Call
2094		4702<4512	12-WAY TO 2-WAY	*Call
2094		4702<4513	13-WAY TO 2-WAY	*Call
2094		4702<4514	14-WAY TO 2-WAY	*Call
2094		4702<4515	15-WAY TO 2-WAY	*Call
2094		4702<4516	16-WAY TO 2-WAY	*Call
2094		4702<4517	17-WAY TO 2-WAY	*Call
2094		4702<4518	18-WAY TO 2-WAY	*Call
2094		4702<4519	19-WAY TO 2-WAY	*Call
2094		4702<4520	20-WAY TO 2-WAY	*Call
2094		4702<4521	21-WAY TO 2-WAY	*Call
2094		4702<4522	22-WAY TO 2-WAY	*Call
2094		4702<4523	23-WAY TO 2-WAY	*Call
2094		4702<4524	24-WAY TO 2-WAY	*Call
2094		4702<4525	25-WAY TO 2-WAY	*Call
2094		4702<4526	26-WAY TO 2-WAY	*Call
2094		4702<4527	27-WAY TO 2-WAY	*Call
2094		4702<4528	28-WAY TO 2-WAY	*Call
2094		4702<4529	29-WAY TO 2-WAY	*Call
2094		4702<4530	30-WAY TO 2-WAY	*Call
2094		4702<4531	31-WAY TO 2-WAY	*Call
2094		4702<4532	32-WAY TO 2-WAY	*Call
2094		4702<4533	33-WAY TO 2-WAY	*Call
2094		4702<4534	34-WAY TO 2-WAY	*Call
2094		4702<4535	35-WAY TO 2-WAY	*Call
2094		4702<4536	36-WAY TO 2-WAY	*Call
2094		4702<4537	37-WAY TO 2-WAY	*Call
2094		4702<4538	38-WAY TO 2-WAY	*Call
2094		4702<4539	39-WAY TO 2-WAY	*Call
2094		4702<4540	40-WAY TO 2-WAY	*Call
2094		4702<4541	41-WAY TO 2-WAY	*Call
2094		4702<4542	42-WAY TO 2-WAY	*Call
2094		4702<4543	43-WAY TO 2-WAY	*Call
2094		4702<4544	44-WAY TO 2-WAY	*Call
2094		4702<4545	45-WAY TO 2-WAY	*Call
2094		4702<4546	46-WAY TO 2-WAY	*Call
2094		4702<4547	47-WAY TO 2-WAY	*Call
2094		4702<4548	48-WAY TO 2-WAY	*Call
2094		4702<4549	49-WAY TO 2-WAY	*Call
2094		4702<4550	50-WAY TO 2-WAY	*Call
2094		4702<4551	51-WAY TO 2-WAY	*Call
2094		4702<4552	52-WAY TO 2-WAY	*Call
2094		4702<4553	53-WAY TO 2-WAY	*Call
2094		4702<4554	54-WAY TO 2-WAY	*Call
2094		4702<4601	1-WAY TO 2-WAY	*Call
2094		4702<4602	2-WAY TO 2-WAY	*Call
2094		4702<4603	3-WAY TO 2-WAY	*Call
2094		4702<4604	4-WAY TO 2-WAY	*Call
2094		4702<4605	5-WAY TO 2-WAY	*Call
2094		4702<4606	6-WAY TO 2-WAY	*Call
2094		4702<4607	7-WAY TO 2-WAY	*Call

Machine	Model	Feature	Description	GSA Price
Type				
2094		4702<4608	8-WAY TO 2-WAY	*Call
2094		4702<4701	1-WAY TO 2-WAY	*Call
2094		4702<4703	3-WAY TO 2-WAY	*Call
2094		4702<4704	4-WAY TO 2-WAY	*Call
2094		4702<4705	5-WAY TO 2-WAY	*Call
2094		4702<4706	6-WAY TO 2-WAY	*Call
2094		4702<4707	7-WAY TO 2-WAY	*Call
2094		4702<4708	8-WAY TO 2-WAY	*Call
2094		4702<4801	1-WAY TO 2-WAY	*Call
2094		4702<4802	2-WAY TO 2-WAY	*Call
2094		4702<4803	3-WAY TO 2-WAY	*Call
2094		4702<4804	4-WAY TO 2-WAY	*Call
2094		4702<4805	5-WAY TO 2-WAY	*Call
2094		4702<4806	6-WAY TO 2-WAY	*Call
2094		4702<4807	7-WAY TO 2-WAY	*Call
2094		4702<4808	8-WAY TO 2-WAY	*Call
2094		4703<4500	ZERO-WAY TO 3-WAY	*Call
2094		4703<4501	1-WAY TO 3-WAY	*Call
2094		4703<4502	2-WAY TO 3-WAY	*Call
2094		4703<4503	3-WAY TO 3-WAY	*Call
2094		4703<4504	4-WAY TO 3-WAY	*Call
2094		4703<4505	5-WAY TO 3-WAY	*Call
2094		4703<4506	6-WAY TO 3-WAY	*Call
2094		4703<4507	7-WAY TO 3-WAY	*Call
2094		4703<4508	8-WAY TO 3-WAY	*Call
2094		4703<4509	9-WAY TO 3-WAY	*Call
2094		4703<4510	10-WAY TO 3-WAY	*Call
2094		4703<4511	11-WAY TO 3-WAY	*Call
2094		4703<4512	12-WAY TO 3-WAY	*Call
2094		4703<4513	13-WAY TO 3-WAY	*Call
2094		4703<4514	14-WAY TO 3-WAY	*Call
2094		4703<4515	15-WAY TO 3-WAY	*Call
2094		4703<4516	16-WAY TO 3-WAY	*Call
2094		4703<4517	17-WAY TO 3-WAY	*Call
2094		4703<4518	18-WAY TO 3-WAY	*Call
2094		4703<4519	19-WAY TO 3-WAY	*Call
2094		4703<4520	20-WAY TO 3-WAY	*Call
2094		4703<4521	21-WAY TO 3-WAY	*Call
2094		4703<4522	22-WAY TO 3-WAY	*Call
2094		4703<4523	23-WAY TO 3-WAY	*Call
2094		4703<4524	24-WAY TO 3-WAY	*Call
2094		4703<4525	25-WAY TO 3-WAY	*Call
2094		4703<4526	26-WAY TO 3-WAY	*Call
2094		4703<4527	27-WAY TO 3-WAY	*Call
2094		4703<4528	28-WAY TO 3-WAY	*Call
2094		4703<4529	29-WAY TO 3-WAY	*Call
2094		4703<4530	30-WAY TO 3-WAY	*Call
2094		4703<4531	31-WAY TO 3-WAY	*Call
2094		4703<4532	32-WAY TO 3-WAY	*Call
2094		4703<4533	33-WAY TO 3-WAY	*Call
2094		4703<4534	34-WAY TO 3-WAY	*Call
2094		4703<4535	35-WAY TO 3-WAY	*Call
2094		4703<4536	36-WAY TO 3-WAY	*Call
2094		4703<4537	37-WAY TO 3-WAY	*Call
2094		4703<4538	38-WAY TO 3-WAY	*Call
2094		4703<4539	39-WAY TO 3-WAY	*Call
2094		4703<4540	40-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4703<4541	41-WAY TO 3-WAY	*Call
2094		4703<4542	42-WAY TO 3-WAY	*Call
2094		4703<4543	43-WAY TO 3-WAY	*Call
2094		4703<4544	44-WAY TO 3-WAY	*Call
2094		4703<4545	45-WAY TO 3-WAY	*Call
2094		4703<4546	46-WAY TO 3-WAY	*Call
2094		4703<4547	47-WAY TO 3-WAY	*Call
2094		4703<4548	48-WAY TO 3-WAY	*Call
2094		4703<4549	49-WAY TO 3-WAY	*Call
2094		4703<4550	50-WAY TO 3-WAY	*Call
2094		4703<4551	51-WAY TO 3-WAY	*Call
2094		4703<4552	52-WAY TO 3-WAY	*Call
2094		4703<4553	53-WAY TO 3-WAY	*Call
2094		4703<4554	54-WAY TO 3-WAY	*Call
2094		4703<4601	1-WAY TO 3-WAY	*Call
2094		4703<4602	2-WAY TO 3-WAY	*Call
2094		4703<4603	3-WAY TO 3-WAY	*Call
2094		4703<4604	4-WAY TO 3-WAY	*Call
2094		4703<4605	5-WAY TO 3-WAY	*Call
2094		4703<4606	6-WAY TO 3-WAY	*Call
2094		4703<4607	7-WAY TO 3-WAY	*Call
2094		4703<4608	8-WAY TO 3-WAY	*Call
2094		4703<4701	1-WAY TO 3-WAY	*Call
2094		4703<4702	2-WAY TO 3-WAY	*Call
2094		4703<4704	4-WAY TO 3-WAY	*Call
2094		4703<4705	5-WAY TO 3-WAY	*Call
2094		4703<4706	6-WAY TO 3-WAY	*Call
2094		4703<4707	7-WAY TO 3-WAY	*Call
2094		4703<4708	8-WAY TO 3-WAY	*Call
2094		4703<4801	1-WAY TO 3-WAY	*Call
2094		4703<4802	2-WAY TO 3-WAY	*Call
2094		4703<4803	3-WAY TO 3-WAY	*Call
2094		4703<4804	4-WAY TO 3-WAY	*Call
2094		4703<4805	5-WAY TO 3-WAY	*Call
2094		4703<4806	6-WAY TO 3-WAY	*Call
2094		4703<4807	7-WAY TO 3-WAY	*Call
2094		4703<4808	8-WAY TO 3-WAY	*Call
2094		4704<4500	ZERO-WAY TO 4-WAY	*Call
2094		4704<4501	1-WAY TO 4-WAY	*Call
2094		4704<4502	2-WAY TO 4-WAY	*Call
2094		4704<4503	3-WAY TO 4-WAY	*Call
2094		4704<4504	4-WAY TO 4-WAY	*Call
2094		4704<4505	5-WAY TO 4-WAY	*Call
2094		4704<4506	6-WAY TO 4-WAY	*Call
2094		4704<4507	7-WAY TO 4-WAY	*Call
2094		4704<4508	8-WAY TO 4-WAY	*Call
2094		4704<4509	9-WAY TO 4-WAY	*Call
2094		4704<4510	10-WAY TO 4-WAY	*Call
2094		4704<4511	11-WAY TO 4-WAY	*Call
2094		4704<4512	12-WAY TO 4-WAY	*Call
2094		4704<4513	13-WAY TO 4-WAY	*Call
2094		4704<4514	14-WAY TO 4-WAY	*Call
2094		4704<4515	15-WAY TO 4-WAY	*Call
2094		4704<4516	16-WAY TO 4-WAY	*Call
2094		4704<4517	17-WAY TO 4-WAY	*Call
2094		4704<4518	18-WAY TO 4-WAY	*Call
2094		4704<4519	19-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4704<4520	20-WAY TO 4-WAY	*Call
2094		4704<4521	21-WAY TO 4-WAY	*Call
2094		4704<4522	22-WAY TO 4-WAY	*Call
2094		4704<4523	23-WAY TO 4-WAY	*Call
2094		4704<4524	24-WAY TO 4-WAY	*Call
2094		4704<4525	25-WAY TO 4-WAY	*Call
2094		4704<4526	26-WAY TO 4-WAY	*Call
2094		4704<4527	27-WAY TO 4-WAY	*Call
2094		4704<4528	28-WAY TO 4-WAY	*Call
2094		4704<4529	29-WAY TO 4-WAY	*Call
2094		4704<4530	30-WAY TO 4-WAY	*Call
2094		4704<4531	31-WAY TO 4-WAY	*Call
2094		4704<4532	32-WAY TO 4-WAY	*Call
2094		4704<4533	33-WAY TO 4-WAY	*Call
2094		4704<4534	34-WAY TO 4-WAY	*Call
2094		4704<4535	35-WAY TO 4-WAY	*Call
2094		4704<4536	36-WAY TO 4-WAY	*Call
2094		4704<4537	37-WAY TO 4-WAY	*Call
2094		4704<4538	38-WAY TO 4-WAY	*Call
2094		4704<4539	39-WAY TO 4-WAY	*Call
2094		4704<4540	40-WAY TO 4-WAY	*Call
2094		4704<4541	41-WAY TO 4-WAY	*Call
2094		4704<4542	42-WAY TO 4-WAY	*Call
2094		4704<4543	43-WAY TO 4-WAY	*Call
2094		4704<4544	44-WAY TO 4-WAY	*Call
2094		4704<4545	45-WAY TO 4-WAY	*Call
2094		4704<4546	46-WAY TO 4-WAY	*Call
2094		4704<4547	47-WAY TO 4-WAY	*Call
2094		4704<4548	48-WAY TO 4-WAY	*Call
2094		4704<4549	49-WAY TO 4-WAY	*Call
2094		4704<4550	50-WAY TO 4-WAY	*Call
2094		4704<4551	51-WAY TO 4-WAY	*Call
2094		4704<4552	52-WAY TO 4-WAY	*Call
2094		4704<4553	53-WAY TO 4-WAY	*Call
2094		4704<4554	54-WAY TO 4-WAY	*Call
2094		4704<4601	1-WAY TO 4-WAY	*Call
2094		4704<4602	2-WAY TO 4-WAY	*Call
2094		4704<4603	3-WAY TO 4-WAY	*Call
2094		4704<4604	4-WAY TO 4-WAY	*Call
2094		4704<4605	5-WAY TO 4-WAY	*Call
2094		4704<4606	6-WAY TO 4-WAY	*Call
2094		4704<4607	7-WAY TO 4-WAY	*Call
2094		4704<4608	8-WAY TO 4-WAY	*Call
2094		4704<4701	1-WAY TO 4-WAY	*Call
2094		4704<4702	2-WAY TO 4-WAY	*Call
2094		4704<4703	3-WAY TO 4-WAY	*Call
2094		4704<4705	5-WAY TO 4-WAY	*Call
2094		4704<4706	6-WAY TO 4-WAY	*Call
2094		4704<4707	7-WAY TO 4-WAY	*Call
2094		4704<4708	8-WAY TO 4-WAY	*Call
2094		4704<4801	1-WAY TO 4-WAY	*Call
2094		4704<4802	2-WAY TO 4-WAY	*Call
2094		4704<4803	3-WAY TO 4-WAY	*Call
2094		4704<4804	4-WAY TO 4-WAY	*Call
2094		4704<4805	5-WAY TO 4-WAY	*Call
2094		4704<4806	6-WAY TO 4-WAY	*Call
2094		4704<4807	7-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4704<4808	8-WAY TO 4-WAY	*Call
2094		4705<4500	ZERO-WAY TO 5-WAY	*Call
2094		4705<4501	1-WAY TO 5-WAY	*Call
2094		4705<4502	2-WAY TO 5-WAY	*Call
2094		4705<4503	3-WAY TO 5-WAY	*Call
2094		4705<4504	4-WAY TO 5-WAY	*Call
2094		4705<4505	5-WAY TO 5-WAY	*Call
2094		4705<4506	6-WAY TO 5-WAY	*Call
2094		4705<4507	7-WAY TO 5-WAY	*Call
2094		4705<4508	8-WAY TO 5-WAY	*Call
2094		4705<4509	9-WAY TO 5-WAY	*Call
2094		4705<4510	10-WAY TO 5-WAY	*Call
2094		4705<4511	11-WAY TO 5-WAY	*Call
2094		4705<4512	12-WAY TO 5-WAY	*Call
2094		4705<4513	13-WAY TO 5-WAY	*Call
2094		4705<4514	14-WAY TO 5-WAY	*Call
2094		4705<4515	15-WAY TO 5-WAY	*Call
2094		4705<4516	16-WAY TO 5-WAY	*Call
2094		4705<4517	17-WAY TO 5-WAY	*Call
2094		4705<4518	18-WAY TO 5-WAY	*Call
2094		4705<4519	19-WAY TO 5-WAY	*Call
2094		4705<4520	20-WAY TO 5-WAY	*Call
2094		4705<4521	21-WAY TO 5-WAY	*Call
2094		4705<4522	22-WAY TO 5-WAY	*Call
2094		4705<4523	23-WAY TO 5-WAY	*Call
2094		4705<4524	24-WAY TO 5-WAY	*Call
2094		4705<4525	25-WAY TO 5-WAY	*Call
2094		4705<4526	26-WAY TO 5-WAY	*Call
2094		4705<4527	27-WAY TO 5-WAY	*Call
2094		4705<4528	28-WAY TO 5-WAY	*Call
2094		4705<4529	29-WAY TO 5-WAY	*Call
2094		4705<4530	30-WAY TO 5-WAY	*Call
2094		4705<4531	31-WAY TO 5-WAY	*Call
2094		4705<4532	32-WAY TO 5-WAY	*Call
2094		4705<4533	33-WAY TO 5-WAY	*Call
2094		4705<4534	34-WAY TO 5-WAY	*Call
2094		4705<4535	35-WAY TO 5-WAY	*Call
2094		4705<4536	36-WAY TO 5-WAY	*Call
2094		4705<4537	37-WAY TO 5-WAY	*Call
2094		4705<4538	38-WAY TO 5-WAY	*Call
2094		4705<4539	39-WAY TO 5-WAY	*Call
2094		4705<4540	40-WAY TO 5-WAY	*Call
2094		4705<4541	41-WAY TO 5-WAY	*Call
2094		4705<4542	42-WAY TO 5-WAY	*Call
2094		4705<4543	43-WAY TO 5-WAY	*Call
2094		4705<4544	44-WAY TO 5-WAY	*Call
2094		4705<4545	45-WAY TO 5-WAY	*Call
2094		4705<4546	46-WAY TO 5-WAY	*Call
2094		4705<4547	47-WAY TO 5-WAY	*Call
2094		4705<4548	48-WAY TO 5-WAY	*Call
2094		4705<4549	49-WAY TO 5-WAY	*Call
2094		4705<4550	50-WAY TO 5-WAY	*Call
2094		4705<4551	51-WAY TO 5-WAY	*Call
2094		4705<4552	52-WAY TO 5-WAY	*Call
2094		4705<4553	53-WAY TO 5-WAY	*Call
2094		4705<4554	54-WAY TO 5-WAY	*Call
2094		4705<4601	1-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4705<4602	2-WAY TO 5-WAY	*Call
2094		4705<4603	3-WAY TO 5-WAY	*Call
2094		4705<4604	4-WAY TO 5-WAY	*Call
2094		4705<4605	5-WAY TO 5-WAY	*Call
2094		4705<4606	6-WAY TO 5-WAY	*Call
2094		4705<4607	7-WAY TO 5-WAY	*Call
2094		4705<4608	8-WAY TO 5-WAY	*Call
2094		4705<4701	1-WAY TO 5-WAY	*Call
2094		4705<4702	2-WAY TO 5-WAY	*Call
2094		4705<4703	3-WAY TO 5-WAY	*Call
2094		4705<4704	4-WAY TO 5-WAY	*Call
2094		4705<4706	6-WAY TO 5-WAY	*Call
2094		4705<4707	7-WAY TO 5-WAY	*Call
2094		4705<4708	8-WAY TO 5-WAY	*Call
2094		4705<4801	1-WAY TO 5-WAY	*Call
2094		4705<4802	2-WAY TO 5-WAY	*Call
2094		4705<4803	3-WAY TO 5-WAY	*Call
2094		4705<4804	4-WAY TO 5-WAY	*Call
2094		4705<4805	5-WAY TO 5-WAY	*Call
2094		4705<4806	6-WAY TO 5-WAY	*Call
2094		4705<4807	7-WAY TO 5-WAY	*Call
2094		4705<4808	8-WAY TO 5-WAY	*Call
2094		4706<4500	ZERO-WAY TO 6-WAY	*Call
2094		4706<4501	1-WAY TO 6-WAY	*Call
2094		4706<4502	2-WAY TO 6-WAY	*Call
2094		4706<4503	3-WAY TO 6-WAY	*Call
2094		4706<4504	4-WAY TO 6-WAY	*Call
2094		4706<4505	5-WAY TO 6-WAY	*Call
2094		4706<4506	6-WAY TO 6-WAY	*Call
2094		4706<4507	7-WAY TO 6-WAY	*Call
2094		4706<4508	8-WAY TO 6-WAY	*Call
2094		4706<4509	9-WAY TO 6-WAY	*Call
2094		4706<4510	10-WAY TO 6-WAY	*Call
2094		4706<4511	11-WAY TO 6-WAY	*Call
2094		4706<4512	12-WAY TO 6-WAY	*Call
2094		4706<4513	13-WAY TO 6-WAY	*Call
2094		4706<4514	14-WAY TO 6-WAY	*Call
2094		4706<4515	15-WAY TO 6-WAY	*Call
2094		4706<4516	16-WAY TO 6-WAY	*Call
2094		4706<4517	17-WAY TO 6-WAY	*Call
2094		4706<4518	18-WAY TO 6-WAY	*Call
2094		4706<4519	19-WAY TO 6-WAY	*Call
2094		4706<4520	20-WAY TO 6-WAY	*Call
2094		4706<4521	21-WAY TO 6-WAY	*Call
2094		4706<4522	22-WAY TO 6-WAY	*Call
2094		4706<4523	23-WAY TO 6-WAY	*Call
2094		4706<4524	24-WAY TO 6-WAY	*Call
2094		4706<4525	25-WAY TO 6-WAY	*Call
2094		4706<4526	26-WAY TO 6-WAY	*Call
2094		4706<4527	27-WAY TO 6-WAY	*Call
2094		4706<4528	28-WAY TO 6-WAY	*Call
2094		4706<4529	29-WAY TO 6-WAY	*Call
2094		4706<4530	30-WAY TO 6-WAY	*Call
2094		4706<4531	31-WAY TO 6-WAY	*Call
2094		4706<4532	32-WAY TO 6-WAY	*Call
2094		4706<4533	33-WAY TO 6-WAY	*Call
2094		4706<4534	34-WAY TO 6-WAY	*Call

Machine	Model	Feature	Description	GSA Price
2094		4706<4535	35-WAY TO 6-WAY	*Call
2094		4706<4536	36-WAY TO 6-WAY	*Call
2094		4706<4537	37-WAY TO 6-WAY	*Call
2094		4706<4538	38-WAY TO 6-WAY	*Call
2094		4706<4539	39-WAY TO 6-WAY	*Call
2094		4706<4540	40-WAY TO 6-WAY	*Call
2094		4706<4541	41-WAY TO 6-WAY	*Call
2094		4706<4542	42-WAY TO 6-WAY	*Call
2094		4706<4543	43-WAY TO 6-WAY	*Call
2094		4706<4544	44-WAY TO 6-WAY	*Call
2094		4706<4545	45-WAY TO 6-WAY	*Call
2094		4706<4546	46-WAY TO 6-WAY	*Call
2094		4706<4547	47-WAY TO 6-WAY	*Call
2094		4706<4548	48-WAY TO 6-WAY	*Call
2094		4706<4549	49-WAY TO 6-WAY	*Call
2094		4706<4550	50-WAY TO 6-WAY	*Call
2094		4706<4551	51-WAY TO 6-WAY	*Call
2094		4706<4552	52-WAY TO 6-WAY	*Call
2094		4706<4553	53-WAY TO 6-WAY	*Call
2094		4706<4554	54-WAY TO 6-WAY	*Call
2094		4706<4601	1-WAY TO 6-WAY	*Call
2094		4706<4602	2-WAY TO 6-WAY	*Call
2094		4706<4603	3-WAY TO 6-WAY	*Call
2094		4706<4604	4-WAY TO 6-WAY	*Call
2094		4706<4605	5-WAY TO 6-WAY	*Call
2094		4706<4606	6-WAY TO 6-WAY	*Call
2094		4706<4607	7-WAY TO 6-WAY	*Call
2094		4706<4608	8-WAY TO 6-WAY	*Call
2094		4706<4701	1-WAY TO 6-WAY	*Call
2094		4706<4702	2-WAY TO 6-WAY	*Call
2094		4706<4703	3-WAY TO 6-WAY	*Call
2094		4706<4704	4-WAY TO 6-WAY	*Call
2094		4706<4705	5-WAY TO 6-WAY	*Call
2094		4706<4707	7-WAY TO 6-WAY	*Call
2094		4706<4708	8-WAY TO 6-WAY	*Call
2094		4706<4801	1-WAY TO 6-WAY	*Call
2094		4706<4802	2-WAY TO 6-WAY	*Call
2094		4706<4803	3-WAY TO 6-WAY	*Call
2094		4706<4804	4-WAY TO 6-WAY	*Call
2094		4706<4805	5-WAY TO 6-WAY	*Call
2094		4706<4806	6-WAY TO 6-WAY	*Call
2094		4706<4807	7-WAY TO 6-WAY	*Call
2094		4706<4808	8-WAY TO 6-WAY	*Call
2094		4707<4500	ZERO-WAY TO 7-WAY	*Call
2094		4707<4501	1-WAY TO 7-WAY	*Call
2094		4707<4502	2-WAY TO 7-WAY	*Call
2094		4707<4503	3-WAY TO 7-WAY	*Call
2094		4707<4504	4-WAY TO 7-WAY	*Call
2094		4707<4505	5-WAY TO 7-WAY	*Call
2094		4707<4506	6-WAY TO 7-WAY	*Call
2094		4707<4507	7-WAY TO 7-WAY	*Call
2094		4707<4508	8-WAY TO 7-WAY	*Call
2094		4707<4509	9-WAY TO 7-WAY	*Call
2094		4707<4510	10-WAY TO 7-WAY	*Call
2094		4707<4511	11-WAY TO 7-WAY	*Call
2094		4707<4512	12-WAY TO 7-WAY	*Call
2094		4707<4513	13-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4707<4514	14-WAY TO 7-WAY	*Call
2094		4707<4515	15-WAY TO 7-WAY	*Call
2094		4707<4516	16-WAY TO 7-WAY	*Call
2094		4707<4517	17-WAY TO 7-WAY	*Call
2094		4707<4518	18-WAY TO 7-WAY	*Call
2094		4707<4519	19-WAY TO 7-WAY	*Call
2094		4707<4520	20-WAY TO 7-WAY	*Call
2094		4707<4521	21-WAY TO 7-WAY	*Call
2094		4707<4522	22-WAY TO 7-WAY	*Call
2094		4707<4523	23-WAY TO 7-WAY	*Call
2094		4707<4524	24-WAY TO 7-WAY	*Call
2094		4707<4525	25-WAY TO 7-WAY	*Call
2094		4707<4526	26-WAY TO 7-WAY	*Call
2094		4707<4527	27-WAY TO 7-WAY	*Call
2094		4707<4528	28-WAY TO 7-WAY	*Call
2094		4707<4529	29-WAY TO 7-WAY	*Call
2094		4707<4530	30-WAY TO 7-WAY	*Call
2094		4707<4531	31-WAY TO 7-WAY	*Call
2094		4707<4532	32-WAY TO 7-WAY	*Call
2094		4707<4533	33-WAY TO 7-WAY	*Call
2094		4707<4534	34-WAY TO 7-WAY	*Call
2094		4707<4535	35-WAY TO 7-WAY	*Call
2094		4707<4536	36-WAY TO 7-WAY	*Call
2094		4707<4537	37-WAY TO 7-WAY	*Call
2094		4707<4538	38-WAY TO 7-WAY	*Call
2094		4707<4539	39-WAY TO 7-WAY	*Call
2094		4707<4540	40-WAY TO 7-WAY	*Call
2094		4707<4541	41-WAY TO 7-WAY	*Call
2094		4707<4542	42-WAY TO 7-WAY	*Call
2094		4707<4543	43-WAY TO 7-WAY	*Call
2094		4707<4544	44-WAY TO 7-WAY	*Call
2094		4707<4545	45-WAY TO 7-WAY	*Call
2094		4707<4546	46-WAY TO 7-WAY	*Call
2094		4707<4547	47-WAY TO 7-WAY	*Call
2094		4707<4548	48-WAY TO 7-WAY	*Call
2094		4707<4549	49-WAY TO 7-WAY	*Call
2094		4707<4550	50-WAY TO 7-WAY	*Call
2094		4707<4551	51-WAY TO 7-WAY	*Call
2094		4707<4552	52-WAY TO 7-WAY	*Call
2094		4707<4553	53-WAY TO 7-WAY	*Call
2094		4707<4554	54-WAY TO 7-WAY	*Call
2094		4707<4601	1-WAY TO 7-WAY	*Call
2094		4707<4602	2-WAY TO 7-WAY	*Call
2094		4707<4603	3-WAY TO 7-WAY	*Call
2094		4707<4604	4-WAY TO 7-WAY	*Call
2094		4707<4605	5-WAY TO 7-WAY	*Call
2094		4707<4606	6-WAY TO 7-WAY	*Call
2094		4707<4607	7-WAY TO 7-WAY	*Call
2094		4707<4608	8-WAY TO 7-WAY	*Call
2094		4707<4701	1-WAY TO 7-WAY	*Call
2094		4707<4702	2-WAY TO 7-WAY	*Call
2094		4707<4703	3-WAY TO 7-WAY	*Call
2094		4707<4704	4-WAY TO 7-WAY	*Call
2094		4707<4705	5-WAY TO 7-WAY	*Call
2094		4707<4706	6-WAY TO 7-WAY	*Call
2094		4707<4708	8-WAY TO 7-WAY	*Call
2094		4707<4801	1-WAY TO 7-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2094			4707<4802	2-WAY TO 7-WAY	*Call
2094			4707<4803	3-WAY TO 7-WAY	*Call
2094			4707<4804	4-WAY TO 7-WAY	*Call
2094			4707<4805	5-WAY TO 7-WAY	*Call
2094			4707<4806	6-WAY TO 7-WAY	*Call
2094			4707<4807	7-WAY TO 7-WAY	*Call
2094			4707<4808	8-WAY TO 7-WAY	*Call
2094			4708<4500	ZERO-WAY TO 8-WAY	*Call
2094			4708<4501	1-WAY TO 8-WAY	*Call
2094			4708<4502	2-WAY TO 8-WAY	*Call
2094			4708<4503	3-WAY TO 8-WAY	*Call
2094			4708<4504	4-WAY TO 8-WAY	*Call
2094			4708<4505	5-WAY TO 8-WAY	*Call
2094			4708<4506	6-WAY TO 8-WAY	*Call
2094			4708<4507	7-WAY TO 8-WAY	*Call
2094			4708<4508	8-WAY TO 8-WAY	*Call
2094			4708<4509	9-WAY TO 8-WAY	*Call
2094			4708<4510	10-WAY TO 8-WAY	*Call
2094			4708<4511	11-WAY TO 8-WAY	*Call
2094			4708<4512	12-WAY TO 8-WAY	*Call
2094			4708<4513	13-WAY TO 8-WAY	*Call
2094			4708<4514	14-WAY TO 8-WAY	*Call
2094			4708<4515	15-WAY TO 8-WAY	*Call
2094			4708<4516	16-WAY TO 8-WAY	*Call
2094			4708<4517	17-WAY TO 8-WAY	*Call
2094			4708<4518	18-WAY TO 8-WAY	*Call
2094			4708<4519	19-WAY TO 8-WAY	*Call
2094			4708<4520	20-WAY TO 8-WAY	*Call
2094			4708<4521	21-WAY TO 8-WAY	*Call
2094			4708<4522	22-WAY TO 8-WAY	*Call
2094			4708<4523	23-WAY TO 8-WAY	*Call
2094			4708<4524	24-WAY TO 8-WAY	*Call
2094			4708<4525	25-WAY TO 8-WAY	*Call
2094			4708<4526	26-WAY TO 8-WAY	*Call
2094			4708<4527	27-WAY TO 8-WAY	*Call
2094			4708<4528	28-WAY TO 8-WAY	*Call
2094			4708<4529	29-WAY TO 8-WAY	*Call
2094			4708<4530	30-WAY TO 8-WAY	*Call
2094			4708<4531	31-WAY TO 8-WAY	*Call
2094			4708<4532	32-WAY TO 8-WAY	*Call
2094			4708<4533	33-WAY TO 8-WAY	*Call
2094			4708<4534	34-WAY TO 8-WAY	*Call
2094			4708<4535	35-WAY TO 8-WAY	*Call
2094			4708<4536	36-WAY TO 8-WAY	*Call
2094			4708<4537	37-WAY TO 8-WAY	*Call
2094			4708<4538	38-WAY TO 8-WAY	*Call
2094			4708<4539	39-WAY TO 8-WAY	*Call
2094			4708<4540	40-WAY TO 8-WAY	*Call
2094			4708<4541	41-WAY TO 8-WAY	*Call
2094			4708<4542	42-WAY TO 8-WAY	*Call
2094			4708<4543	43-WAY TO 8-WAY	*Call
2094			4708<4544	44-WAY TO 8-WAY	*Call
2094			4708<4545	45-WAY TO 8-WAY	*Call
2094			4708<4546	46-WAY TO 8-WAY	*Call
2094			4708<4547	47-WAY TO 8-WAY	*Call
2094			4708<4548	48-WAY TO 8-WAY	*Call
2094			4708<4549	49-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4708<4550	50-WAY TO 8-WAY	*Call
2094		4708<4551	51-WAY TO 8-WAY	*Call
2094		4708<4552	52-WAY TO 8-WAY	*Call
2094		4708<4553	53-WAY TO 8-WAY	*Call
2094		4708<4554	54-WAY TO 8-WAY	*Call
2094		4708<4601	1-WAY TO 8-WAY	*Call
2094		4708<4602	2-WAY TO 8-WAY	*Call
2094		4708<4603	3-WAY TO 8-WAY	*Call
2094		4708<4604	4-WAY TO 8-WAY	*Call
2094		4708<4605	5-WAY TO 8-WAY	*Call
2094		4708<4606	6-WAY TO 8-WAY	*Call
2094		4708<4607	7-WAY TO 8-WAY	*Call
2094		4708<4608	8-WAY TO 8-WAY	*Call
2094		4708<4701	1-WAY TO 8-WAY	*Call
2094		4708<4702	2-WAY TO 8-WAY	*Call
2094		4708<4703	3-WAY TO 8-WAY	*Call
2094		4708<4704	4-WAY TO 8-WAY	*Call
2094		4708<4705	5-WAY TO 8-WAY	*Call
2094		4708<4706	6-WAY TO 8-WAY	*Call
2094		4708<4707	7-WAY TO 8-WAY	*Call
2094		4708<4801	1-WAY TO 8-WAY	*Call
2094		4708<4802	2-WAY TO 8-WAY	*Call
2094		4708<4803	3-WAY TO 8-WAY	*Call
2094		4708<4804	4-WAY TO 8-WAY	*Call
2094		4708<4805	5-WAY TO 8-WAY	*Call
2094		4708<4806	6-WAY TO 8-WAY	*Call
2094		4708<4807	7-WAY TO 8-WAY	*Call
2094		4708<4808	8-WAY TO 8-WAY	*Call
2094		4801<4500	ZERO-WAY TO 1-WAY	*Call
2094		4801<4501	1-WAY TO 1-WAY	*Call
2094		4801<4502	2-WAY TO 1-WAY	*Call
2094		4801<4503	3-WAY TO 1-WAY	*Call
2094		4801<4504	4-WAY TO 1-WAY	*Call
2094		4801<4505	5-WAY TO 1-WAY	*Call
2094		4801<4506	6-WAY TO 1-WAY	*Call
2094		4801<4507	7-WAY TO 1-WAY	*Call
2094		4801<4508	8-WAY TO 1-WAY	*Call
2094		4801<4509	9-WAY TO 1-WAY	*Call
2094		4801<4510	10-WAY TO 1-WAY	*Call
2094		4801<4511	11-WAY TO 1-WAY	*Call
2094		4801<4512	12-WAY TO 1-WAY	*Call
2094		4801<4513	13-WAY TO 1-WAY	*Call
2094		4801<4514	14-WAY TO 1-WAY	*Call
2094		4801<4515	15-WAY TO 1-WAY	*Call
2094		4801<4516	16-WAY TO 1-WAY	*Call
2094		4801<4517	17-WAY TO 1-WAY	*Call
2094		4801<4518	18-WAY TO 1-WAY	*Call
2094		4801<4519	19-WAY TO 1-WAY	*Call
2094		4801<4520	20-WAY TO 1-WAY	*Call
2094		4801<4521	21-WAY TO 1-WAY	*Call
2094		4801<4522	22-WAY TO 1-WAY	*Call
2094		4801<4523	23-WAY TO 1-WAY	*Call
2094		4801<4524	24-WAY TO 1-WAY	*Call
2094		4801<4525	25-WAY TO 1-WAY	*Call
2094		4801<4526	26-WAY TO 1-WAY	*Call
2094		4801<4527	27-WAY TO 1-WAY	*Call
2094		4801<4528	28-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4801<4529	29-WAY TO 1-WAY	*Call
2094		4801<4530	30-WAY TO 1-WAY	*Call
2094		4801<4531	31-WAY TO 1-WAY	*Call
2094		4801<4532	32-WAY TO 1-WAY	*Call
2094		4801<4533	33-WAY TO 1-WAY	*Call
2094		4801<4534	34-WAY TO 1-WAY	*Call
2094		4801<4535	35-WAY TO 1-WAY	*Call
2094		4801<4536	36-WAY TO 1-WAY	*Call
2094		4801<4537	37-WAY TO 1-WAY	*Call
2094		4801<4538	38-WAY TO 1-WAY	*Call
2094		4801<4539	39-WAY TO 1-WAY	*Call
2094		4801<4540	40-WAY TO 1-WAY	*Call
2094		4801<4541	41-WAY TO 1-WAY	*Call
2094		4801<4542	42-WAY TO 1-WAY	*Call
2094		4801<4543	43-WAY TO 1-WAY	*Call
2094		4801<4544	44-WAY TO 1-WAY	*Call
2094		4801<4545	45-WAY TO 1-WAY	*Call
2094		4801<4546	46-WAY TO 1-WAY	*Call
2094		4801<4547	47-WAY TO 1-WAY	*Call
2094		4801<4548	48-WAY TO 1-WAY	*Call
2094		4801<4549	49-WAY TO 1-WAY	*Call
2094		4801<4550	50-WAY TO 1-WAY	*Call
2094		4801<4551	51-WAY TO 1-WAY	*Call
2094		4801<4552	52-WAY TO 1-WAY	*Call
2094		4801<4553	53-WAY TO 1-WAY	*Call
2094		4801<4554	54-WAY TO 1-WAY	*Call
2094		4801<4601	1-WAY TO 1-WAY	*Call
2094		4801<4602	2-WAY TO 1-WAY	*Call
2094		4801<4603	3-WAY TO 1-WAY	*Call
2094		4801<4604	4-WAY TO 1-WAY	*Call
2094		4801<4605	5-WAY TO 1-WAY	*Call
2094		4801<4606	6-WAY TO 1-WAY	*Call
2094		4801<4607	7-WAY TO 1-WAY	*Call
2094		4801<4608	8-WAY TO 1-WAY	*Call
2094		4801<4701	1-WAY TO 1-WAY	*Call
2094		4801<4702	2-WAY TO 1-WAY	*Call
2094		4801<4703	3-WAY TO 1-WAY	*Call
2094		4801<4704	4-WAY TO 1-WAY	*Call
2094		4801<4705	5-WAY TO 1-WAY	*Call
2094		4801<4706	6-WAY TO 1-WAY	*Call
2094		4801<4707	7-WAY TO 1-WAY	*Call
2094		4801<4708	8-WAY TO 1-WAY	*Call
2094		4801<4802	2-WAY TO 1-WAY	*Call
2094		4801<4803	3-WAY TO 1-WAY	*Call
2094		4801<4804	4-WAY TO 1-WAY	*Call
2094		4801<4805	5-WAY TO 1-WAY	*Call
2094		4801<4806	6-WAY TO 1-WAY	*Call
2094		4801<4807	7-WAY TO 1-WAY	*Call
2094		4801<4808	8-WAY TO 1-WAY	*Call
2094		4802<4500	ZERO-WAY TO 2-WAY	*Call
2094		4802<4501	1-WAY TO 2-WAY	*Call
2094		4802<4502	2-WAY TO 2-WAY	*Call
2094		4802<4503	3-WAY TO 2-WAY	*Call
2094		4802<4504	4-WAY TO 2-WAY	*Call
2094		4802<4505	5-WAY TO 2-WAY	*Call
2094		4802<4506	6-WAY TO 2-WAY	*Call
2094		4802<4507	7-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4802<4508	8-WAY TO 2-WAY	*Call
2094		4802<4509	9-WAY TO 2-WAY	*Call
2094		4802<4510	10-WAY TO 2-WAY	*Call
2094		4802<4511	11-WAY TO 2-WAY	*Call
2094		4802<4512	12-WAY TO 2-WAY	*Call
2094		4802<4513	13-WAY TO 2-WAY	*Call
2094		4802<4514	14-WAY TO 2-WAY	*Call
2094		4802<4515	15-WAY TO 2-WAY	*Call
2094		4802<4516	16-WAY TO 2-WAY	*Call
2094		4802<4517	17-WAY TO 2-WAY	*Call
2094		4802<4518	18-WAY TO 2-WAY	*Call
2094		4802<4519	19-WAY TO 2-WAY	*Call
2094		4802<4520	20-WAY TO 2-WAY	*Call
2094		4802<4521	21-WAY TO 2-WAY	*Call
2094		4802<4522	22-WAY TO 2-WAY	*Call
2094		4802<4523	23-WAY TO 2-WAY	*Call
2094		4802<4524	24-WAY TO 2-WAY	*Call
2094		4802<4525	25-WAY TO 2-WAY	*Call
2094		4802<4526	26-WAY TO 2-WAY	*Call
2094		4802<4527	27-WAY TO 2-WAY	*Call
2094		4802<4528	28-WAY TO 2-WAY	*Call
2094		4802<4529	29-WAY TO 2-WAY	*Call
2094		4802<4530	30-WAY TO 2-WAY	*Call
2094		4802<4531	31-WAY TO 2-WAY	*Call
2094		4802<4532	32-WAY TO 2-WAY	*Call
2094		4802<4533	33-WAY TO 2-WAY	*Call
2094		4802<4534	34-WAY TO 2-WAY	*Call
2094		4802<4535	35-WAY TO 2-WAY	*Call
2094		4802<4536	36-WAY TO 2-WAY	*Call
2094		4802<4537	37-WAY TO 2-WAY	*Call
2094		4802<4538	38-WAY TO 2-WAY	*Call
2094		4802<4539	39-WAY TO 2-WAY	*Call
2094		4802<4540	40-WAY TO 2-WAY	*Call
2094		4802<4541	41-WAY TO 2-WAY	*Call
2094		4802<4542	42-WAY TO 2-WAY	*Call
2094		4802<4543	43-WAY TO 2-WAY	*Call
2094		4802<4544	44-WAY TO 2-WAY	*Call
2094		4802<4545	45-WAY TO 2-WAY	*Call
2094		4802<4546	46-WAY TO 2-WAY	*Call
2094		4802<4547	47-WAY TO 2-WAY	*Call
2094		4802<4548	48-WAY TO 2-WAY	*Call
2094		4802<4549	49-WAY TO 2-WAY	*Call
2094		4802<4550	50-WAY TO 2-WAY	*Call
2094		4802<4551	51-WAY TO 2-WAY	*Call
2094		4802<4552	52-WAY TO 2-WAY	*Call
2094		4802<4553	53-WAY TO 2-WAY	*Call
2094		4802<4554	54-WAY TO 2-WAY	*Call
2094		4802<4601	1-WAY TO 2-WAY	*Call
2094		4802<4602	2-WAY TO 2-WAY	*Call
2094		4802<4603	3-WAY TO 2-WAY	*Call
2094		4802<4604	4-WAY TO 2-WAY	*Call
2094		4802<4605	5-WAY TO 2-WAY	*Call
2094		4802<4606	6-WAY TO 2-WAY	*Call
2094		4802<4607	7-WAY TO 2-WAY	*Call
2094		4802<4608	8-WAY TO 2-WAY	*Call
2094		4802<4701	1-WAY TO 2-WAY	*Call
2094		4802<4702	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4802<4703	3-WAY TO 2-WAY	*Call
2094		4802<4704	4-WAY TO 2-WAY	*Call
2094		4802<4705	5-WAY TO 2-WAY	*Call
2094		4802<4706	6-WAY TO 2-WAY	*Call
2094		4802<4707	7-WAY TO 2-WAY	*Call
2094		4802<4708	8-WAY TO 2-WAY	*Call
2094		4802<4801	1-WAY TO 2-WAY	*Call
2094		4802<4803	3-WAY TO 2-WAY	*Call
2094		4802<4804	4-WAY TO 2-WAY	*Call
2094		4802<4805	5-WAY TO 2-WAY	*Call
2094		4802<4806	6-WAY TO 2-WAY	*Call
2094		4802<4807	7-WAY TO 2-WAY	*Call
2094		4802<4808	8-WAY TO 2-WAY	*Call
2094		4803<4500	ZERO-WAY TO 3-WAY	*Call
2094		4803<4501	1-WAY TO 3-WAY	*Call
2094		4803<4502	2-WAY TO 3-WAY	*Call
2094		4803<4503	3-WAY TO 3-WAY	*Call
2094		4803<4504	4-WAY TO 3-WAY	*Call
2094		4803<4505	5-WAY TO 3-WAY	*Call
2094		4803<4506	6-WAY TO 3-WAY	*Call
2094		4803<4507	7-WAY TO 3-WAY	*Call
2094		4803<4508	8-WAY TO 3-WAY	*Call
2094		4803<4509	9-WAY TO 3-WAY	*Call
2094		4803<4510	10-WAY TO 3-WAY	*Call
2094		4803<4511	11-WAY TO 3-WAY	*Call
2094		4803<4512	12-WAY TO 3-WAY	*Call
2094		4803<4513	13-WAY TO 3-WAY	*Call
2094		4803<4514	14-WAY TO 3-WAY	*Call
2094		4803<4515	15-WAY TO 3-WAY	*Call
2094		4803<4516	16-WAY TO 3-WAY	*Call
2094		4803<4517	17-WAY TO 3-WAY	*Call
2094		4803<4518	18-WAY TO 3-WAY	*Call
2094		4803<4519	19-WAY TO 3-WAY	*Call
2094		4803<4520	20-WAY TO 3-WAY	*Call
2094		4803<4521	21-WAY TO 3-WAY	*Call
2094		4803<4522	22-WAY TO 3-WAY	*Call
2094		4803<4523	23-WAY TO 3-WAY	*Call
2094		4803<4524	24-WAY TO 3-WAY	*Call
2094		4803<4525	25-WAY TO 3-WAY	*Call
2094		4803<4526	26-WAY TO 3-WAY	*Call
2094		4803<4527	27-WAY TO 3-WAY	*Call
2094		4803<4528	28-WAY TO 3-WAY	*Call
2094		4803<4529	29-WAY TO 3-WAY	*Call
2094		4803<4530	30-WAY TO 3-WAY	*Call
2094		4803<4531	31-WAY TO 3-WAY	*Call
2094		4803<4532	32-WAY TO 3-WAY	*Call
2094		4803<4533	33-WAY TO 3-WAY	*Call
2094		4803<4534	34-WAY TO 3-WAY	*Call
2094		4803<4535	35-WAY TO 3-WAY	*Call
2094		4803<4536	36-WAY TO 3-WAY	*Call
2094		4803<4537	37-WAY TO 3-WAY	*Call
2094		4803<4538	38-WAY TO 3-WAY	*Call
2094		4803<4539	39-WAY TO 3-WAY	*Call
2094		4803<4540	40-WAY TO 3-WAY	*Call
2094		4803<4541	41-WAY TO 3-WAY	*Call
2094		4803<4542	42-WAY TO 3-WAY	*Call
2094		4803<4543	43-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4803<4544	44-WAY TO 3-WAY	*Call
2094		4803<4545	45-WAY TO 3-WAY	*Call
2094		4803<4546	46-WAY TO 3-WAY	*Call
2094		4803<4547	47-WAY TO 3-WAY	*Call
2094		4803<4548	48-WAY TO 3-WAY	*Call
2094		4803<4549	49-WAY TO 3-WAY	*Call
2094		4803<4550	50-WAY TO 3-WAY	*Call
2094		4803<4551	51-WAY TO 3-WAY	*Call
2094		4803<4552	52-WAY TO 3-WAY	*Call
2094		4803<4553	53-WAY TO 3-WAY	*Call
2094		4803<4554	54-WAY TO 3-WAY	*Call
2094		4803<4601	1-WAY TO 3-WAY	*Call
2094		4803<4602	2-WAY TO 3-WAY	*Call
2094		4803<4603	3-WAY TO 3-WAY	*Call
2094		4803<4604	4-WAY TO 3-WAY	*Call
2094		4803<4605	5-WAY TO 3-WAY	*Call
2094		4803<4606	6-WAY TO 3-WAY	*Call
2094		4803<4607	7-WAY TO 3-WAY	*Call
2094		4803<4608	8-WAY TO 3-WAY	*Call
2094		4803<4701	1-WAY TO 3-WAY	*Call
2094		4803<4702	2-WAY TO 3-WAY	*Call
2094		4803<4703	3-WAY TO 3-WAY	*Call
2094		4803<4704	4-WAY TO 3-WAY	*Call
2094		4803<4705	5-WAY TO 3-WAY	*Call
2094		4803<4706	6-WAY TO 3-WAY	*Call
2094		4803<4707	7-WAY TO 3-WAY	*Call
2094		4803<4708	8-WAY TO 3-WAY	*Call
2094		4803<4801	1-WAY TO 3-WAY	*Call
2094		4803<4802	2-WAY TO 3-WAY	*Call
2094		4803<4804	4-WAY TO 3-WAY	*Call
2094		4803<4805	5-WAY TO 3-WAY	*Call
2094		4803<4806	6-WAY TO 3-WAY	*Call
2094		4803<4807	7-WAY TO 3-WAY	*Call
2094		4803<4808	8-WAY TO 3-WAY	*Call
2094		4804<4500	ZERO-WAY TO 4-WAY	*Call
2094		4804<4501	1-WAY TO 4-WAY	*Call
2094		4804<4502	2-WAY TO 4-WAY	*Call
2094		4804<4503	3-WAY TO 4-WAY	*Call
2094		4804<4504	4-WAY TO 4-WAY	*Call
2094		4804<4505	5-WAY TO 4-WAY	*Call
2094		4804<4506	6-WAY TO 4-WAY	*Call
2094		4804<4507	7-WAY TO 4-WAY	*Call
2094		4804<4508	8-WAY TO 4-WAY	*Call
2094		4804<4509	9-WAY TO 4-WAY	*Call
2094		4804<4510	10-WAY TO 4-WAY	*Call
2094		4804<4511	11-WAY TO 4-WAY	*Call
2094		4804<4512	12-WAY TO 4-WAY	*Call
2094		4804<4513	13-WAY TO 4-WAY	*Call
2094		4804<4514	14-WAY TO 4-WAY	*Call
2094		4804<4515	15-WAY TO 4-WAY	*Call
2094		4804<4516	16-WAY TO 4-WAY	*Call
2094		4804<4517	17-WAY TO 4-WAY	*Call
2094		4804<4518	18-WAY TO 4-WAY	*Call
2094		4804<4519	19-WAY TO 4-WAY	*Call
2094		4804<4520	20-WAY TO 4-WAY	*Call
2094		4804<4521	21-WAY TO 4-WAY	*Call
2094		4804<4522	22-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4804<4523	23-WAY TO 4-WAY	*Call
2094		4804<4524	24-WAY TO 4-WAY	*Call
2094		4804<4525	25-WAY TO 4-WAY	*Call
2094		4804<4526	26-WAY TO 4-WAY	*Call
2094		4804<4527	27-WAY TO 4-WAY	*Call
2094		4804<4528	28-WAY TO 4-WAY	*Call
2094		4804<4529	29-WAY TO 4-WAY	*Call
2094		4804<4530	30-WAY TO 4-WAY	*Call
2094		4804<4531	31-WAY TO 4-WAY	*Call
2094		4804<4532	32-WAY TO 4-WAY	*Call
2094		4804<4533	33-WAY TO 4-WAY	*Call
2094		4804<4534	34-WAY TO 4-WAY	*Call
2094		4804<4535	35-WAY TO 4-WAY	*Call
2094		4804<4536	36-WAY TO 4-WAY	*Call
2094		4804<4537	37-WAY TO 4-WAY	*Call
2094		4804<4538	38-WAY TO 4-WAY	*Call
2094		4804<4539	39-WAY TO 4-WAY	*Call
2094		4804<4540	40-WAY TO 4-WAY	*Call
2094		4804<4541	41-WAY TO 4-WAY	*Call
2094		4804<4542	42-WAY TO 4-WAY	*Call
2094		4804<4543	43-WAY TO 4-WAY	*Call
2094		4804<4544	44-WAY TO 4-WAY	*Call
2094		4804<4545	45-WAY TO 4-WAY	*Call
2094		4804<4546	46-WAY TO 4-WAY	*Call
2094		4804<4547	47-WAY TO 4-WAY	*Call
2094		4804<4548	48-WAY TO 4-WAY	*Call
2094		4804<4549	49-WAY TO 4-WAY	*Call
2094		4804<4550	50-WAY TO 4-WAY	*Call
2094		4804<4551	51-WAY TO 4-WAY	*Call
2094		4804<4552	52-WAY TO 4-WAY	*Call
2094		4804<4553	53-WAY TO 4-WAY	*Call
2094		4804<4554	54-WAY TO 4-WAY	*Call
2094		4804<4601	1-WAY TO 4-WAY	*Call
2094		4804<4602	2-WAY TO 4-WAY	*Call
2094		4804<4603	3-WAY TO 4-WAY	*Call
2094		4804<4604	4-WAY TO 4-WAY	*Call
2094		4804<4605	5-WAY TO 4-WAY	*Call
2094		4804<4606	6-WAY TO 4-WAY	*Call
2094		4804<4607	7-WAY TO 4-WAY	*Call
2094		4804<4608	8-WAY TO 4-WAY	*Call
2094		4804<4701	1-WAY TO 4-WAY	*Call
2094		4804<4702	2-WAY TO 4-WAY	*Call
2094		4804<4703	3-WAY TO 4-WAY	*Call
2094		4804<4704	4-WAY TO 4-WAY	*Call
2094		4804<4705	5-WAY TO 4-WAY	*Call
2094		4804<4706	6-WAY TO 4-WAY	*Call
2094		4804<4707	7-WAY TO 4-WAY	*Call
2094		4804<4708	8-WAY TO 4-WAY	*Call
2094		4804<4801	1-WAY TO 4-WAY	*Call
2094		4804<4802	2-WAY TO 4-WAY	*Call
2094		4804<4803	3-WAY TO 4-WAY	*Call
2094		4804<4805	5-WAY TO 4-WAY	*Call
2094		4804<4806	6-WAY TO 4-WAY	*Call
2094		4804<4807	7-WAY TO 4-WAY	*Call
2094		4804<4808	8-WAY TO 4-WAY	*Call
2094		4805<4500	ZERO-WAY TO 5-WAY	*Call
2094		4805<4501	1-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4805<4502	2-WAY TO 5-WAY	*Call
2094		4805<4503	3-WAY TO 5-WAY	*Call
2094		4805<4504	4-WAY TO 5-WAY	*Call
2094		4805<4505	5-WAY TO 5-WAY	*Call
2094		4805<4506	6-WAY TO 5-WAY	*Call
2094		4805<4507	7-WAY TO 5-WAY	*Call
2094		4805<4508	8-WAY TO 5-WAY	*Call
2094		4805<4509	9-WAY TO 5-WAY	*Call
2094		4805<4510	10-WAY TO 5-WAY	*Call
2094		4805<4511	11-WAY TO 5-WAY	*Call
2094		4805<4512	12-WAY TO 5-WAY	*Call
2094		4805<4513	13-WAY TO 5-WAY	*Call
2094		4805<4514	14-WAY TO 5-WAY	*Call
2094		4805<4515	15-WAY TO 5-WAY	*Call
2094		4805<4516	16-WAY TO 5-WAY	*Call
2094		4805<4517	17-WAY TO 5-WAY	*Call
2094		4805<4518	18-WAY TO 5-WAY	*Call
2094		4805<4519	19-WAY TO 5-WAY	*Call
2094		4805<4520	20-WAY TO 5-WAY	*Call
2094		4805<4521	21-WAY TO 5-WAY	*Call
2094		4805<4522	22-WAY TO 5-WAY	*Call
2094		4805<4523	23-WAY TO 5-WAY	*Call
2094		4805<4524	24-WAY TO 5-WAY	*Call
2094		4805<4525	25-WAY TO 5-WAY	*Call
2094		4805<4526	26-WAY TO 5-WAY	*Call
2094		4805<4527	27-WAY TO 5-WAY	*Call
2094		4805<4528	28-WAY TO 5-WAY	*Call
2094		4805<4529	29-WAY TO 5-WAY	*Call
2094		4805<4530	30-WAY TO 5-WAY	*Call
2094		4805<4531	31-WAY TO 5-WAY	*Call
2094		4805<4532	32-WAY TO 5-WAY	*Call
2094		4805<4533	33-WAY TO 5-WAY	*Call
2094		4805<4534	34-WAY TO 5-WAY	*Call
2094		4805<4535	35-WAY TO 5-WAY	*Call
2094		4805<4536	36-WAY TO 5-WAY	*Call
2094		4805<4537	37-WAY TO 5-WAY	*Call
2094		4805<4538	38-WAY TO 5-WAY	*Call
2094		4805<4539	39-WAY TO 5-WAY	*Call
2094		4805<4540	40-WAY TO 5-WAY	*Call
2094		4805<4541	41-WAY TO 5-WAY	*Call
2094		4805<4542	42-WAY TO 5-WAY	*Call
2094		4805<4543	43-WAY TO 5-WAY	*Call
2094		4805<4544	44-WAY TO 5-WAY	*Call
2094		4805<4545	45-WAY TO 5-WAY	*Call
2094		4805<4546	46-WAY TO 5-WAY	*Call
2094		4805<4547	47-WAY TO 5-WAY	*Call
2094		4805<4548	48-WAY TO 5-WAY	*Call
2094		4805<4549	49-WAY TO 5-WAY	*Call
2094		4805<4550	50-WAY TO 5-WAY	*Call
2094		4805<4551	51-WAY TO 5-WAY	*Call
2094		4805<4552	52-WAY TO 5-WAY	*Call
2094		4805<4553	53-WAY TO 5-WAY	*Call
2094		4805<4554	54-WAY TO 5-WAY	*Call
2094		4805<4601	1-WAY TO 5-WAY	*Call
2094		4805<4602	2-WAY TO 5-WAY	*Call
2094		4805<4603	3-WAY TO 5-WAY	*Call
2094		4805<4604	4-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4805<4605	5-WAY TO 5-WAY	*Call
2094		4805<4606	6-WAY TO 5-WAY	*Call
2094		4805<4607	7-WAY TO 5-WAY	*Call
2094		4805<4608	8-WAY TO 5-WAY	*Call
2094		4805<4701	1-WAY TO 5-WAY	*Call
2094		4805<4702	2-WAY TO 5-WAY	*Call
2094		4805<4703	3-WAY TO 5-WAY	*Call
2094		4805<4704	4-WAY TO 5-WAY	*Call
2094		4805<4705	5-WAY TO 5-WAY	*Call
2094		4805<4706	6-WAY TO 5-WAY	*Call
2094		4805<4707	7-WAY TO 5-WAY	*Call
2094		4805<4708	8-WAY TO 5-WAY	*Call
2094		4805<4801	1-WAY TO 5-WAY	*Call
2094		4805<4802	2-WAY TO 5-WAY	*Call
2094		4805<4803	3-WAY TO 5-WAY	*Call
2094		4805<4804	4-WAY TO 5-WAY	*Call
2094		4805<4806	6-WAY TO 5-WAY	*Call
2094		4805<4807	7-WAY TO 5-WAY	*Call
2094		4805<4808	8-WAY TO 5-WAY	*Call
2094		4806<4500	ZERO-WAY TO 6-WAY	*Call
2094		4806<4501	1-WAY TO 6-WAY	*Call
2094		4806<4502	2-WAY TO 6-WAY	*Call
2094		4806<4503	3-WAY TO 6-WAY	*Call
2094		4806<4504	4-WAY TO 6-WAY	*Call
2094		4806<4505	5-WAY TO 6-WAY	*Call
2094		4806<4506	6-WAY TO 6-WAY	*Call
2094		4806<4507	7-WAY TO 6-WAY	*Call
2094		4806<4508	8-WAY TO 6-WAY	*Call
2094		4806<4509	9-WAY TO 6-WAY	*Call
2094		4806<4510	10-WAY TO 6-WAY	*Call
2094		4806<4511	11-WAY TO 6-WAY	*Call
2094		4806<4512	12-WAY TO 6-WAY	*Call
2094		4806<4513	13-WAY TO 6-WAY	*Call
2094		4806<4514	14-WAY TO 6-WAY	*Call
2094		4806<4515	15-WAY TO 6-WAY	*Call
2094		4806<4516	16-WAY TO 6-WAY	*Call
2094		4806<4517	17-WAY TO 6-WAY	*Call
2094		4806<4518	18-WAY TO 6-WAY	*Call
2094		4806<4519	19-WAY TO 6-WAY	*Call
2094		4806<4520	20-WAY TO 6-WAY	*Call
2094		4806<4521	21-WAY TO 6-WAY	*Call
2094		4806<4522	22-WAY TO 6-WAY	*Call
2094		4806<4523	23-WAY TO 6-WAY	*Call
2094		4806<4524	24-WAY TO 6-WAY	*Call
2094		4806<4525	25-WAY TO 6-WAY	*Call
2094		4806<4526	26-WAY TO 6-WAY	*Call
2094		4806<4527	27-WAY TO 6-WAY	*Call
2094		4806<4528	28-WAY TO 6-WAY	*Call
2094		4806<4529	29-WAY TO 6-WAY	*Call
2094		4806<4530	30-WAY TO 6-WAY	*Call
2094		4806<4531	31-WAY TO 6-WAY	*Call
2094		4806<4532	32-WAY TO 6-WAY	*Call
2094		4806<4533	33-WAY TO 6-WAY	*Call
2094		4806<4534	34-WAY TO 6-WAY	*Call
2094		4806<4535	35-WAY TO 6-WAY	*Call
2094		4806<4536	36-WAY TO 6-WAY	*Call
2094		4806<4537	37-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4806<4538	38-WAY TO 6-WAY	*Call
2094		4806<4539	39-WAY TO 6-WAY	*Call
2094		4806<4540	40-WAY TO 6-WAY	*Call
2094		4806<4541	41-WAY TO 6-WAY	*Call
2094		4806<4542	42-WAY TO 6-WAY	*Call
2094		4806<4543	43-WAY TO 6-WAY	*Call
2094		4806<4544	44-WAY TO 6-WAY	*Call
2094		4806<4545	45-WAY TO 6-WAY	*Call
2094		4806<4546	46-WAY TO 6-WAY	*Call
2094		4806<4547	47-WAY TO 6-WAY	*Call
2094		4806<4548	48-WAY TO 6-WAY	*Call
2094		4806<4549	49-WAY TO 6-WAY	*Call
2094		4806<4550	50-WAY TO 6-WAY	*Call
2094		4806<4551	51-WAY TO 6-WAY	*Call
2094		4806<4552	52-WAY TO 6-WAY	*Call
2094		4806<4553	53-WAY TO 6-WAY	*Call
2094		4806<4554	54-WAY TO 6-WAY	*Call
2094		4806<4601	1-WAY TO 6-WAY	*Call
2094		4806<4602	2-WAY TO 6-WAY	*Call
2094		4806<4603	3-WAY TO 6-WAY	*Call
2094		4806<4604	4-WAY TO 6-WAY	*Call
2094		4806<4605	5-WAY TO 6-WAY	*Call
2094		4806<4606	6-WAY TO 6-WAY	*Call
2094		4806<4607	7-WAY TO 6-WAY	*Call
2094		4806<4608	8-WAY TO 6-WAY	*Call
2094		4806<4701	1-WAY TO 6-WAY	*Call
2094		4806<4702	2-WAY TO 6-WAY	*Call
2094		4806<4703	3-WAY TO 6-WAY	*Call
2094		4806<4704	4-WAY TO 6-WAY	*Call
2094		4806<4705	5-WAY TO 6-WAY	*Call
2094		4806<4706	6-WAY TO 6-WAY	*Call
2094		4806<4707	7-WAY TO 6-WAY	*Call
2094		4806<4708	8-WAY TO 6-WAY	*Call
2094		4806<4801	1-WAY TO 6-WAY	*Call
2094		4806<4802	2-WAY TO 6-WAY	*Call
2094		4806<4803	3-WAY TO 6-WAY	*Call
2094		4806<4804	4-WAY TO 6-WAY	*Call
2094		4806<4805	5-WAY TO 6-WAY	*Call
2094		4806<4807	7-WAY TO 6-WAY	*Call
2094		4806<4808	8-WAY TO 6-WAY	*Call
2094		4807<4500	ZERO-WAY TO 7-WAY	*Call
2094		4807<4501	1-WAY TO 7-WAY	*Call
2094		4807<4502	2-WAY TO 7-WAY	*Call
2094		4807<4503	3-WAY TO 7-WAY	*Call
2094		4807<4504	4-WAY TO 7-WAY	*Call
2094		4807<4505	5-WAY TO 7-WAY	*Call
2094		4807<4506	6-WAY TO 7-WAY	*Call
2094		4807<4507	7-WAY TO 7-WAY	*Call
2094		4807<4508	8-WAY TO 7-WAY	*Call
2094		4807<4509	9-WAY TO 7-WAY	*Call
2094		4807<4510	10-WAY TO 7-WAY	*Call
2094		4807<4511	11-WAY TO 7-WAY	*Call
2094		4807<4512	12-WAY TO 7-WAY	*Call
2094		4807<4513	13-WAY TO 7-WAY	*Call
2094		4807<4514	14-WAY TO 7-WAY	*Call
2094		4807<4515	15-WAY TO 7-WAY	*Call
2094		4807<4516	16-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4807<4517	17-WAY TO 7-WAY	*Call
2094		4807<4518	18-WAY TO 7-WAY	*Call
2094		4807<4519	19-WAY TO 7-WAY	*Call
2094		4807<4520	20-WAY TO 7-WAY	*Call
2094		4807<4521	21-WAY TO 7-WAY	*Call
2094		4807<4522	22-WAY TO 7-WAY	*Call
2094		4807<4523	23-WAY TO 7-WAY	*Call
2094		4807<4524	24-WAY TO 7-WAY	*Call
2094		4807<4525	25-WAY TO 7-WAY	*Call
2094		4807<4526	26-WAY TO 7-WAY	*Call
2094		4807<4527	27-WAY TO 7-WAY	*Call
2094		4807<4528	28-WAY TO 7-WAY	*Call
2094		4807<4529	29-WAY TO 7-WAY	*Call
2094		4807<4530	30-WAY TO 7-WAY	*Call
2094		4807<4531	31-WAY TO 7-WAY	*Call
2094		4807<4532	32-WAY TO 7-WAY	*Call
2094		4807<4533	33-WAY TO 7-WAY	*Call
2094		4807<4534	34-WAY TO 7-WAY	*Call
2094		4807<4535	35-WAY TO 7-WAY	*Call
2094		4807<4536	36-WAY TO 7-WAY	*Call
2094		4807<4537	37-WAY TO 7-WAY	*Call
2094		4807<4538	38-WAY TO 7-WAY	*Call
2094		4807<4539	39-WAY TO 7-WAY	*Call
2094		4807<4540	40-WAY TO 7-WAY	*Call
2094		4807<4541	41-WAY TO 7-WAY	*Call
2094		4807<4542	42-WAY TO 7-WAY	*Call
2094		4807<4543	43-WAY TO 7-WAY	*Call
2094		4807<4544	44-WAY TO 7-WAY	*Call
2094		4807<4545	45-WAY TO 7-WAY	*Call
2094		4807<4546	46-WAY TO 7-WAY	*Call
2094		4807<4547	47-WAY TO 7-WAY	*Call
2094		4807<4548	48-WAY TO 7-WAY	*Call
2094		4807<4549	49-WAY TO 7-WAY	*Call
2094		4807<4550	50-WAY TO 7-WAY	*Call
2094		4807<4551	51-WAY TO 7-WAY	*Call
2094		4807<4552	52-WAY TO 7-WAY	*Call
2094		4807<4553	53-WAY TO 7-WAY	*Call
2094		4807<4554	54-WAY TO 7-WAY	*Call
2094		4807<4601	1-WAY TO 7-WAY	*Call
2094		4807<4602	2-WAY TO 7-WAY	*Call
2094		4807<4603	3-WAY TO 7-WAY	*Call
2094		4807<4604	4-WAY TO 7-WAY	*Call
2094		4807<4605	5-WAY TO 7-WAY	*Call
2094		4807<4606	6-WAY TO 7-WAY	*Call
2094		4807<4607	7-WAY TO 7-WAY	*Call
2094		4807<4608	8-WAY TO 7-WAY	*Call
2094		4807<4701	1-WAY TO 7-WAY	*Call
2094		4807<4702	2-WAY TO 7-WAY	*Call
2094		4807<4703	3-WAY TO 7-WAY	*Call
2094		4807<4704	4-WAY TO 7-WAY	*Call
2094		4807<4705	5-WAY TO 7-WAY	*Call
2094		4807<4706	6-WAY TO 7-WAY	*Call
2094		4807<4707	7-WAY TO 7-WAY	*Call
2094		4807<4708	8-WAY TO 7-WAY	*Call
2094		4807<4801	1-WAY TO 7-WAY	*Call
2094		4807<4802	2-WAY TO 7-WAY	*Call
2094		4807<4803	3-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4807<4804	4-WAY TO 7-WAY	*Call
2094		4807<4805	5-WAY TO 7-WAY	*Call
2094		4807<4806	6-WAY TO 7-WAY	*Call
2094		4807<4808	8-WAY TO 7-WAY	*Call
2094		4808<4500	ZERO-WAY TO 8-WAY	*Call
2094		4808<4501	1-WAY TO 8-WAY	*Call
2094		4808<4502	2-WAY TO 8-WAY	*Call
2094		4808<4503	3-WAY TO 8-WAY	*Call
2094		4808<4504	4-WAY TO 8-WAY	*Call
2094		4808<4505	5-WAY TO 8-WAY	*Call
2094		4808<4506	6-WAY TO 8-WAY	*Call
2094		4808<4507	7-WAY TO 8-WAY	*Call
2094		4808<4508	8-WAY TO 8-WAY	*Call
2094		4808<4509	9-WAY TO 8-WAY	*Call
2094		4808<4510	10-WAY TO 8-WAY	*Call
2094		4808<4511	11-WAY TO 8-WAY	*Call
2094		4808<4512	12-WAY TO 8-WAY	*Call
2094		4808<4513	13-WAY TO 8-WAY	*Call
2094		4808<4514	14-WAY TO 8-WAY	*Call
2094		4808<4515	15-WAY TO 8-WAY	*Call
2094		4808<4516	16-WAY TO 8-WAY	*Call
2094		4808<4517	17-WAY TO 8-WAY	*Call
2094		4808<4518	18-WAY TO 8-WAY	*Call
2094		4808<4519	19-WAY TO 8-WAY	*Call
2094		4808<4520	20-WAY TO 8-WAY	*Call
2094		4808<4521	21-WAY TO 8-WAY	*Call
2094		4808<4522	22-WAY TO 8-WAY	*Call
2094		4808<4523	23-WAY TO 8-WAY	*Call
2094		4808<4524	24-WAY TO 8-WAY	*Call
2094		4808<4525	25-WAY TO 8-WAY	*Call
2094		4808<4526	26-WAY TO 8-WAY	*Call
2094		4808<4527	27-WAY TO 8-WAY	*Call
2094		4808<4528	28-WAY TO 8-WAY	*Call
2094		4808<4529	29-WAY TO 8-WAY	*Call
2094		4808<4530	30-WAY TO 8-WAY	*Call
2094		4808<4531	31-WAY TO 8-WAY	*Call
2094		4808<4532	32-WAY TO 8-WAY	*Call
2094		4808<4533	33-WAY TO 8-WAY	*Call
2094		4808<4534	34-WAY TO 8-WAY	*Call
2094		4808<4535	35-WAY TO 8-WAY	*Call
2094		4808<4536	36-WAY TO 8-WAY	*Call
2094		4808<4537	37-WAY TO 8-WAY	*Call
2094		4808<4538	38-WAY TO 8-WAY	*Call
2094		4808<4539	39-WAY TO 8-WAY	*Call
2094		4808<4540	40-WAY TO 8-WAY	*Call
2094		4808<4541	41-WAY TO 8-WAY	*Call
2094		4808<4542	42-WAY TO 8-WAY	*Call
2094		4808<4543	43-WAY TO 8-WAY	*Call
2094		4808<4544	44-WAY TO 8-WAY	*Call
2094		4808<4545	45-WAY TO 8-WAY	*Call
2094		4808<4546	46-WAY TO 8-WAY	*Call
2094		4808<4547	47-WAY TO 8-WAY	*Call
2094		4808<4548	48-WAY TO 8-WAY	*Call
2094		4808<4549	49-WAY TO 8-WAY	*Call
2094		4808<4550	50-WAY TO 8-WAY	*Call
2094		4808<4551	51-WAY TO 8-WAY	*Call
2094		4808<4552	52-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		4808<4553	53-WAY TO 8-WAY	*Call
2094		4808<4554	54-WAY TO 8-WAY	*Call
2094		4808<4601	1-WAY TO 8-WAY	*Call
2094		4808<4602	2-WAY TO 8-WAY	*Call
2094		4808<4603	3-WAY TO 8-WAY	*Call
2094		4808<4604	4-WAY TO 8-WAY	*Call
2094		4808<4605	5-WAY TO 8-WAY	*Call
2094		4808<4606	6-WAY TO 8-WAY	*Call
2094		4808<4607	1-WAY TO 8-WAY	*Call
2094		4808<4608	8-WAY TO 8-WAY	*Call
2094		4808<4701	1-WAY TO 8-WAY	*Call
2094		4808<4702	2-WAY TO 8-WAY	*Call
2094		4808<4703	3-WAY TO 8-WAY	*Call
2094		4808<4704	4-WAY TO 8-WAY	*Call
2094		4808<4705	5-WAY TO 8-WAY	*Call
2094		4808<4706	6-WAY TO 8-WAY	*Call
2094		4808<4707	7-WAY TO 8-WAY	*Call
2094		4808<4708	8-WAY TO 8-WAY	*Call
2094		4808<4801	1-WAY TO 8-WAY	*Call
2094		4808<4802	2-WAY TO 8-WAY	*Call
2094		4808<4803	3-WAY TO 8-WAY	*Call
2094		4808<4804	4-WAY TO 8-WAY	*Call
2094		4808<4805	5-WAY TO 8-WAY	*Call
2094		4808<4806	6-WAY TO 8-WAY	*Call
2094		4808<4807	7-WAY TO 8-WAY	*Call
2094		7612<7611	S08 1 I/O TO S08 2 I/O	*Call
2094		7613<7611	S08 1 I/O TO S08 3 I/O	*Call
2094		7613<7612	S08 2 I/O TO S08 3 I/O	*Call
2094		7621<7611	S08 1 I/O TO S18 1 I/O	*Call
2094		7622<7611	S08 1 I/O TO S18 2 I/O	*Call
2094		7622<7612	S08 2 I/O TO S18 2 I/O	*Call
2094		7622<7621	S18 1 I/O TO S18 2 I/O	*Call
2094		7623<7611	S08 1 I/O TO S18 3 I/O	*Call
2094		7623<7612	S08 2 I/O TO S18 3 I/O	*Call
2094		7623<7613	S08 3 I/O TO S18 3 I/O	*Call
2094		7623<7621	S18 1 I/O TO S18 3 I/O	*Call
2094		7623<7622	S18 2 I/O TO S18 3 I/O	*Call
2094		7631<7611	S08 1 I/O TO S28 1 I/O	*Call
2094		7631<7621	S18 1 I/O TO S28 1 I/O	*Call
2094		7632<7611	S08 1 I/O TO S28 2 I/O	*Call
2094		7632<7612	S08 2 I/O TO S28 2 I/O	*Call
2094		7632<7621	S18 1 I/O TO S28 2 I/O	*Call
2094		7632<7622	S18 2 I/O TO S28 2 I/O	*Call
2094		7632<7631	S28 3 I/O TO S28 2 I/O	*Call
2094		7633<7611	S08 1 I/O TO S28 3 I/O	*Call
2094		7633<7612	S08 2 I/O TO S28 3 I/O	*Call
2094		7633<7613	S08 3 I/O TO S28 3 I/O	*Call
2094		7633<7621	S18 1 I/O TO S28 3 I/O	*Call
2094		7633<7622	S18 2 I/O TO S28 3 I/O	*Call
2094		7633<7623	S18 3 I/O TO S28 3 I/O	*Call
2094		7633<7631	S28 1 I/O TO S28 3 I/O	*Call
2094		7633<7632	S28 2 I/O TO S28 3 I/O	*Call
2094		7641<7611	S08 1 I/O TO S38 1 I/O	*Call
2094		7641<7621	S18 1 I/O TO S38/S54 1 I/O	*Call
2094		7641<7631	S28 1 I/O TO S38/S54 1 I/O	*Call
2094		7642<7611	S08 1 I/O TO S38 2 I/O	*Call
2094		7642<7612	S08 2 I/O TO S38/S54 2 I/O	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		7642<7621	S18 1 I/O TO S38/S54 2 I/O	*Call
2094		7642<7622	S18 2 I/O TO S38/S54 2 I/O	*Call
2094		7642<7631	S28 1 I/O TO S38/S54 2 I/O	*Call
2094		7642<7632	S28 2 I/O TO S38/S54 2 I/O	*Call
2094		7642<7641	S38/S54 1 I/O TO S38/S5 2 I/O	*Call
2094		7643<7611	S08 1 I/O TO S38 3 I/O	*Call
2094		7643<7612	S08 2 I/O TO S38/S54 3 I/O	*Call
2094		7643<7613	S08 3 I/O TO S38/S54 3 I/O	*Call
2094		7643<7621	S18 1 I/O TO S38/S54 3 I/O	*Call
2094		7643<7622	S18 2 I/O TO S38/S54 3 I/O	*Call
2094		7643<7623	S18 3 I/O TO S38/S54 3 I/O	*Call
2094		7643<7631	S28 1 I/O TO S38/S54 3 I/O	*Call
2094		7643<7632	S28 2 I/O TO S38/S54 3 I/O	*Call
2094		7643<7633	S28 3 I/O TO S38/S54 3 I/O	*Call
2094		7643<7641	S38/S54 1 I/O TO S38/S54 3 I/O	*Call
2094		7643<7642	S38/S54 2 I/O TO S38/S54 3 I/O	*Call
2094		7807<7811	IFL TO CP4	*Call
2094		7807<7812	ICF TO CP4	*Call
2094		7807<7814	ZAAP TO CP4	*Call
2094		7807<7815	ZIIP TO CP4	*Call
2094		7807<7831	UNASSIGNED IFL TO CP4	*Call
2094		7808<7811	IFL TO CP5	*Call
2094		7808<7812	ICF TO CP5	*Call
2094		7808<7814	ZAAP TO CP5	*Call
2094		7808<7815	ZIIP TO CP5	*Call
2094		7808<7831	UNASSIGNED IFL TO CP5	*Call
2094		7809<7811	IFL TO CP6	*Call
2094		7809<7812	ICF TO CP6	*Call
2094		7809<7814	ZAAP TO CP6	*Call
2094		7809<7815	ZIIP TO CP6	*Call
2094		7809<7831	UNASSIGNED IFL TO CP6	*Call
2094		7810<7811	IFL TO CP	*Call
2094		7810<7812	ICF TO CP	*Call
2094		7810<7814	ZAAP TO CP7	*Call
2094		7810<7815	ZIIP TO CP7	*Call
2094		7810<7831	UNASSIGNED IFL TO CP7	*Call
2094		7811<7810	CP TO IFL	*Call
2094		7811<7812	ICF TO IFL	*Call
2094		7811<7814	ZAAP TO IFL	*Call
2094		7811<7815	ZIIP TO IFL	*Call
2094		7811<7831	UNASSIGNED IFL TO IFL	*Call
2094		7812<7810	CP TO ICF	*Call
2094		7812<7811	IFL TO ICF	*Call
2094		7812<7814	ZAAP TO ICF	*Call
2094		7812<7815	ZIIP TO ICF	*Call
2094		7814<7811	IFL TO ZAAP	*Call
2094		7814<7812	ICF TO ZAAP	*Call
2094		7814<7815	ZIIP TO ZAAP	*Call
2094		7815<7811	IFL TO ZIIP	*Call
2094		7815<7812	ICF TO ZIIP	*Call
2094		7815<7814	ZAAP TO ZIIP	*Call
2094		7815<7831	UNASSIGNED IFL TO ZIIP	*Call
2094		7820<7821	CBU IFL TO CBU CP	*Call
2094		7820<7822	CBU ICF TO CBU CP	*Call
2094		7820<7824	CBU ZAAP TO CBU CP	*Call
2094		7821<7820	CBU CP TO CBU IFL	*Call
2094		7821<7822	CBU ICF TO CBU IFL	*Call

Machine Type	Model	Feature	Description	GSA Price
2094		7821<7824	CBU ZAAP TO CBU IFL	*Call
2094		7822<7820	CBU CP TO CBU ICF	*Call
2094		7822<7821	CBU IFL TO CBU ICF	*Call
2094		7822<7824	CBU ZAAP TO CBU ICF	*Call
2094		7824<7820	CBU CP TO CBU ZAAP	*Call
2094		7824<7821	CBU IFL TO CBU ZAAP	*Call
2094		7824<7822	CBU ICF TO CBU ZAAP	*Call
2094		7831<7811	IFL TO UNASSIGNED IFL	*Call
2094<2064	S08<109		MODEL CONVERSION	*Call
2094<2064		2701<8051	MEMORY TO MEMORY	*Call
2094<2064		2701<8061	MEMORY TO MEMORY	*Call
2094<2064		2701<8071	MEMORY TO MEMORY	*Call
2094<2064		2701<8081	MEMORY TO MEMORY	*Call
2094<2064		2701<8100	MEMORY TO MEMORY	*Call
2094<2064		2701<8101	MEMORY TO MEMORY	*Call
2094<2064		2701<8120	MEMORY TO MEMORY	*Call
2094<2064		2701<8121	MEMORY TO MEMORY	*Call
2094<2064		2701<8140	MEMORY TO MEMORY	*Call
2094<2064		2701<8141	MEMORY TO MEMORY	*Call
2094<2064		2701<8160	MEMORY TO MEMORY	*Call
2094<2064		2701<8161	MEMORY TO MEMORY	*Call
2094<2064		2702<8051	MEMORY TO MEMORY	*Call
2094<2064		2702<8061	MEMORY TO MEMORY	*Call
2094<2064		2702<8071	MEMORY TO MEMORY	*Call
2094<2064		2702<8081	MEMORY TO MEMORY	*Call
2094<2064		2702<8100	MEMORY TO MEMORY	*Call
2094<2064		2702<8101	MEMORY TO MEMORY	*Call
2094<2064		2702<8120	MEMORY TO MEMORY	*Call
2094<2064		2702<8121	MEMORY TO MEMORY	*Call
2094<2064		2702<8140	MEMORY TO MEMORY	*Call
2094<2064		2702<8141	MEMORY TO MEMORY	*Call
2094<2064		2702<8160	MEMORY TO MEMORY	*Call
2094<2064		2702<8161	MEMORY TO MEMORY	*Call
2094<2064		2702<8180	MEMORY TO MEMORY	*Call
2094<2064		2702<8181	MEMORY TO MEMORY	*Call
2094<2064		2702<8200	MEMORY TO MEMORY	*Call
2094<2064		2702<8201	MEMORY TO MEMORY	*Call
2094<2064		2702<8240	MEMORY TO MEMORY	*Call
2094<2064		2702<8241	MEMORY TO MEMORY	*Call
2094<2064		2702<8280	MEMORY TO MEMORY	*Call
2094<2064		2702<8281	MEMORY TO MEMORY	*Call
2094<2064		2702<8320	MEMORY TO MEMORY	*Call
2094<2064		2702<8321	MEMORY TO MEMORY	*Call
2094<2064		2703<8051	MEMORY TO MEMORY	*Call
2094<2064		2703<8061	MEMORY TO MEMORY	*Call
2094<2064		2703<8071	MEMORY TO MEMORY	*Call
2094<2064		2703<8081	MEMORY TO MEMORY	*Call
2094<2064		2703<8100	MEMORY TO MEMORY	*Call
2094<2064		2703<8101	MEMORY TO MEMORY	*Call
2094<2064		2703<8120	MEMORY TO MEMORY	*Call
2094<2064		2703<8121	MEMORY TO MEMORY	*Call
2094<2064		2703<8140	MEMORY TO MEMORY	*Call
2094<2064		2703<8141	MEMORY TO MEMORY	*Call
2094<2064		2703<8160	MEMORY TO MEMORY	*Call
2094<2064		2703<8161	MEMORY TO MEMORY	*Call
2094<2064		2703<8180	MEMORY TO MEMORY	*Call
2094<2064		2703<8181	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		2823<8121	MEMORY TO MEMORY	*Call
2094<2064		2823<8140	MEMORY TO MEMORY	*Call
2094<2064		2823<8141	MEMORY TO MEMORY	*Call
2094<2064		2823<8160	MEMORY TO MEMORY	*Call
2094<2064		2823<8161	MEMORY TO MEMORY	*Call
2094<2064		2823<8180	MEMORY TO MEMORY	*Call
2094<2064		2823<8181	MEMORY TO MEMORY	*Call
2094<2064		2823<8200	MEMORY TO MEMORY	*Call
2094<2064		2823<8201	MEMORY TO MEMORY	*Call
2094<2064		2823<8240	MEMORY TO MEMORY	*Call
2094<2064		2823<8241	MEMORY TO MEMORY	*Call
2094<2064		2823<8280	MEMORY TO MEMORY	*Call
2094<2064		2823<8281	MEMORY TO MEMORY	*Call
2094<2064		2823<8320	MEMORY TO MEMORY	*Call
2094<2064		2823<8321	MEMORY TO MEMORY	*Call
2094<2064		2823<8400	MEMORY TO MEMORY	*Call
2094<2064		2823<8480	MEMORY TO MEMORY	*Call
2094<2064		2823<8560	MEMORY TO MEMORY	*Call
2094<2064		2823<8640	MEMORY TO MEMORY	*Call
2094<2064		2824<8051	MEMORY TO MEMORY	*Call
2094<2064		2824<8061	MEMORY TO MEMORY	*Call
2094<2064		2824<8071	MEMORY TO MEMORY	*Call
2094<2064		2824<8081	MEMORY TO MEMORY	*Call
2094<2064		2824<8100	MEMORY TO MEMORY	*Call
2094<2064		2824<8101	MEMORY TO MEMORY	*Call
2094<2064		2824<8120	MEMORY TO MEMORY	*Call
2094<2064		2824<8121	MEMORY TO MEMORY	*Call
2094<2064		2824<8140	MEMORY TO MEMORY	*Call
2094<2064		2824<8141	MEMORY TO MEMORY	*Call
2094<2064		2824<8160	MEMORY TO MEMORY	*Call
2094<2064		2824<8161	MEMORY TO MEMORY	*Call
2094<2064		2824<8180	MEMORY TO MEMORY	*Call
2094<2064		2824<8181	MEMORY TO MEMORY	*Call
2094<2064		2824<8200	MEMORY TO MEMORY	*Call
2094<2064		2824<8201	MEMORY TO MEMORY	*Call
2094<2064		2824<8240	MEMORY TO MEMORY	*Call
2094<2064		2824<8241	MEMORY TO MEMORY	*Call
2094<2064		2824<8280	MEMORY TO MEMORY	*Call
2094<2064		2824<8281	MEMORY TO MEMORY	*Call
2094<2064		2824<8320	MEMORY TO MEMORY	*Call
2094<2064		2824<8321	MEMORY TO MEMORY	*Call
2094<2064		2824<8400	MEMORY TO MEMORY	*Call
2094<2064		2824<8480	MEMORY TO MEMORY	*Call
2094<2064		2824<8560	MEMORY TO MEMORY	*Call
2094<2064		2824<8640	MEMORY TO MEMORY	*Call
2094<2064		4500<1051	1-WAY TO ZERO-WAY	*Call
2094<2064		4500<1052	2-WAY TO ZERO-WAY	*Call
2094<2064		4500<1053	3-WAY TO ZERO-WAY	*Call
2094<2064		4500<1054	4-WAY TO ZERO-WAY	*Call
2094<2064		4500<1055	5-WAY TO ZERO-WAY	*Call
2094<2064		4500<1056	6-WAY TO ZERO-WAY	*Call
2094<2064		4500<1057	7-WAY TO ZERO-WAY	*Call
2094<2064		4500<1058	8-WAY TO ZERO-WAY	*Call
2094<2064		4500<1059	9-WAY TO ZERO-WAY	*Call
2094<2064		4500<1061	1-WAY TO ZERO-WAY	*Call
2094<2064		4500<1062	2-WAY TO ZERO-WAY	*Call
2094<2064		4500<1063	3-WAY TO ZERO-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4500<1064	4-WAY TO ZERO-WAY	*Call
2094<2064		4500<1065	5-WAY TO ZERO-WAY	*Call
2094<2064		4500<1066	6-WAY TO ZERO-WAY	*Call
2094<2064		4500<1067	7-WAY TO ZERO-WAY	*Call
2094<2064		4500<1068	8-WAY TO ZERO-WAY	*Call
2094<2064		4500<1069	9-WAY TO ZERO-WAY	*Call
2094<2064		4500<1070	10-WAY TO ZERO-WAY	*Call
2094<2064		4500<1071	11-WAY TO ZERO-WAY	*Call
2094<2064		4500<1072	12-WAY TO ZERO-WAY	*Call
2094<2064		4500<1073	13-WAY TO ZERO-WAY	*Call
2094<2064		4500<1074	14-WAY TO ZERO-WAY	*Call
2094<2064		4500<1075	15-WAY TO ZERO-WAY	*Call
2094<2064		4500<1076	16-WAY TO ZERO-WAY	*Call
2094<2064		4500<2061	1-WAY TO ZERO-WAY	*Call
2094<2064		4500<2062	2-WAY TO ZERO-WAY	*Call
2094<2064		4500<2063	3-WAY TO ZERO-WAY	*Call
2094<2064		4500<2064	4-WAY TO ZERO-WAY	*Call
2094<2064		4500<2065	5-WAY TO ZERO-WAY	*Call
2094<2064		4500<2066	6-WAY TO ZERO-WAY	*Call
2094<2064		4500<2067	7-WAY TO ZERO-WAY	*Call
2094<2064		4500<2068	8-WAY TO ZERO-WAY	*Call
2094<2064		4500<2069	9-WAY TO ZERO-WAY	*Call
2094<2064		4500<2070	10-WAY TO ZERO-WAY	*Call
2094<2064		4500<2071	11-WAY TO ZERO-WAY	*Call
2094<2064		4500<2072	12-WAY TO ZERO-WAY	*Call
2094<2064		4500<2073	13-WAY TO ZERO-WAY	*Call
2094<2064		4500<2074	14-WAY TO ZERO-WAY	*Call
2094<2064		4500<2075	15-WAY TO ZERO-WAY	*Call
2094<2064		4500<2076	16-WAY TO ZERO-WAY	*Call
2094<2064		4501<1051	1-WAY TO 1-WAY	*Call
2094<2064		4501<1052	2-WAY TO 1-WAY	*Call
2094<2064		4501<1053	3-WAY TO 1-WAY	*Call
2094<2064		4501<1054	4-WAY TO 1-WAY	*Call
2094<2064		4501<1055	5-WAY TO 1-WAY	*Call
2094<2064		4501<1056	6-WAY TO 1-WAY	*Call
2094<2064		4501<1057	7-WAY TO 1-WAY	*Call
2094<2064		4501<1058	8-WAY TO 1-WAY	*Call
2094<2064		4501<1059	9-WAY TO 1-WAY	*Call
2094<2064		4501<1061	1-WAY TO 1-WAY	*Call
2094<2064		4501<1062	2-WAY TO 1-WAY	*Call
2094<2064		4501<1063	3-WAY TO 1-WAY	*Call
2094<2064		4501<1064	4-WAY TO 1-WAY	*Call
2094<2064		4501<1065	5-WAY TO 1-WAY	*Call
2094<2064		4501<1066	6-WAY TO 1-WAY	*Call
2094<2064		4501<1067	7-WAY TO 1-WAY	*Call
2094<2064		4501<1068	8-WAY TO 1-WAY	*Call
2094<2064		4501<1069	9-WAY TO 1-WAY	*Call
2094<2064		4501<1070	10-WAY TO 1-WAY	*Call
2094<2064		4501<1071	11-WAY TO 1-WAY	*Call
2094<2064		4501<1072	12-WAY TO 1-WAY	*Call
2094<2064		4501<1073	13-WAY TO 1-WAY	*Call
2094<2064		4501<1074	14-WAY TO 1-WAY	*Call
2094<2064		4501<1075	15-WAY TO 1-WAY	*Call
2094<2064		4501<1076	16-WAY TO 1-WAY	*Call
2094<2064		4501<2061	1-WAY TO 1-WAY	*Call
2094<2064		4501<2062	2-WAY TO 1-WAY	*Call
2094<2064		4501<2063	3-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4501<2064	4-WAY TO 1-WAY	*Call
2094<2064		4501<2065	5-WAY TO 1-WAY	*Call
2094<2064		4501<2066	6-WAY TO 1-WAY	*Call
2094<2064		4501<2067	7-WAY TO 1-WAY	*Call
2094<2064		4501<2068	8-WAY TO 1-WAY	*Call
2094<2064		4501<2069	9-WAY TO 1-WAY	*Call
2094<2064		4501<2070	10-WAY TO 1-WAY	*Call
2094<2064		4501<2071	11-WAY TO 1-WAY	*Call
2094<2064		4501<2072	12-WAY TO 1-WAY	*Call
2094<2064		4501<2073	13-WAY TO 1-WAY	*Call
2094<2064		4501<2074	14-WAY TO 1-WAY	*Call
2094<2064		4501<2075	15-WAY TO 1-WAY	*Call
2094<2064		4501<2076	16-WAY TO 1-WAY	*Call
2094<2064		4502<1051	1-WAY TO 2-WAY	*Call
2094<2064		4502<1052	2-WAY TO 2-WAY	*Call
2094<2064		4502<1053	3-WAY TO 2-WAY	*Call
2094<2064		4502<1054	4-WAY TO 2-WAY	*Call
2094<2064		4502<1055	5-WAY TO 2-WAY	*Call
2094<2064		4502<1056	6-WAY TO 2-WAY	*Call
2094<2064		4502<1057	7-WAY TO 2-WAY	*Call
2094<2064		4502<1058	8-WAY TO 2-WAY	*Call
2094<2064		4502<1059	9-WAY TO 2-WAY	*Call
2094<2064		4502<1061	1-WAY TO 2-WAY	*Call
2094<2064		4502<1062	2-WAY TO 2-WAY	*Call
2094<2064		4502<1063	3-WAY TO 2-WAY	*Call
2094<2064		4502<1064	4-WAY TO 2-WAY	*Call
2094<2064		4502<1065	5-WAY TO 2-WAY	*Call
2094<2064		4502<1066	6-WAY TO 2-WAY	*Call
2094<2064		4502<1067	7-WAY TO 2-WAY	*Call
2094<2064		4502<1068	8-WAY TO 2-WAY	*Call
2094<2064		4502<1069	9-WAY TO 2-WAY	*Call
2094<2064		4502<1070	10-WAY TO 2-WAY	*Call
2094<2064		4502<1071	11-WAY TO 2-WAY	*Call
2094<2064		4502<1072	12-WAY TO 2-WAY	*Call
2094<2064		4502<1073	13-WAY TO 2-WAY	*Call
2094<2064		4502<1074	14-WAY TO 2-WAY	*Call
2094<2064		4502<1075	15-WAY TO 2-WAY	*Call
2094<2064		4502<1076	16-WAY TO 2-WAY	*Call
2094<2064		4502<2061	1-WAY TO 2-WAY	*Call
2094<2064		4502<2062	2-WAY TO 2-WAY	*Call
2094<2064		4502<2063	3-WAY TO 2-WAY	*Call
2094<2064		4502<2064	4-WAY TO 2-WAY	*Call
2094<2064		4502<2065	5-WAY TO 2-WAY	*Call
2094<2064		4502<2066	6-WAY TO 2-WAY	*Call
2094<2064		4502<2067	7-WAY TO 2-WAY	*Call
2094<2064		4502<2068	8-WAY TO 2-WAY	*Call
2094<2064		4502<2069	9-WAY TO 2-WAY	*Call
2094<2064		4502<2070	10-WAY TO 2-WAY	*Call
2094<2064		4502<2071	11-WAY TO 2-WAY	*Call
2094<2064		4502<2072	12-WAY TO 2-WAY	*Call
2094<2064		4502<2073	13-WAY TO 2-WAY	*Call
2094<2064		4502<2074	14-WAY TO 2-WAY	*Call
2094<2064		4502<2075	15-WAY TO 2-WAY	*Call
2094<2064		4502<2076	16-WAY TO 2-WAY	*Call
2094<2064		4503<1051	1-WAY TO 3-WAY	*Call
2094<2064		4503<1052	2-WAY TO 3-WAY	*Call
2094<2064		4503<1053	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4503<1054	4-WAY TO 3-WAY	*Call
2094<2064		4503<1055	5-WAY TO 3-WAY	*Call
2094<2064		4503<1056	6-WAY TO 3-WAY	*Call
2094<2064		4503<1057	7-WAY TO 3-WAY	*Call
2094<2064		4503<1058	8-WAY TO 3-WAY	*Call
2094<2064		4503<1059	9-WAY TO 3-WAY	*Call
2094<2064		4503<1061	1-WAY TO 3-WAY	*Call
2094<2064		4503<1062	2-WAY TO 3-WAY	*Call
2094<2064		4503<1063	3-WAY TO 3-WAY	*Call
2094<2064		4503<1064	4-WAY TO 3-WAY	*Call
2094<2064		4503<1065	5-WAY TO 3-WAY	*Call
2094<2064		4503<1066	6-WAY TO 3-WAY	*Call
2094<2064		4503<1067	7-WAY TO 3-WAY	*Call
2094<2064		4503<1068	8-WAY TO 3-WAY	*Call
2094<2064		4503<1069	9-WAY TO 3-WAY	*Call
2094<2064		4503<1070	10-WAY TO 3-WAY	*Call
2094<2064		4503<1071	11-WAY TO 3-WAY	*Call
2094<2064		4503<1072	12-WAY TO 3-WAY	*Call
2094<2064		4503<1073	13-WAY TO 3-WAY	*Call
2094<2064		4503<1074	14-WAY TO 3-WAY	*Call
2094<2064		4503<1075	15-WAY TO 3-WAY	*Call
2094<2064		4503<1076	16-WAY TO 3-WAY	*Call
2094<2064		4503<2061	1-WAY TO 3-WAY	*Call
2094<2064		4503<2062	2-WAY TO 3-WAY	*Call
2094<2064		4503<2063	3-WAY TO 3-WAY	*Call
2094<2064		4503<2064	4-WAY TO 3-WAY	*Call
2094<2064		4503<2065	5-WAY TO 3-WAY	*Call
2094<2064		4503<2066	6-WAY TO 3-WAY	*Call
2094<2064		4503<2067	7-WAY TO 3-WAY	*Call
2094<2064		4503<2068	8-WAY TO 3-WAY	*Call
2094<2064		4503<2069	9-WAY TO 3-WAY	*Call
2094<2064		4503<2070	10-WAY TO 3-WAY	*Call
2094<2064		4503<2071	11-WAY TO 3-WAY	*Call
2094<2064		4503<2072	12-WAY TO 3-WAY	*Call
2094<2064		4503<2073	13-WAY TO 3-WAY	*Call
2094<2064		4503<2074	14-WAY TO 3-WAY	*Call
2094<2064		4503<2075	15-WAY TO 3-WAY	*Call
2094<2064		4503<2076	16-WAY TO 3-WAY	*Call
2094<2064		4504<1051	1-WAY TO 4-WAY	*Call
2094<2064		4504<1052	2-WAY TO 4-WAY	*Call
2094<2064		4504<1053	3-WAY TO 4-WAY	*Call
2094<2064		4504<1054	4-WAY TO 4-WAY	*Call
2094<2064		4504<1055	5-WAY TO 4-WAY	*Call
2094<2064		4504<1056	6-WAY TO 4-WAY	*Call
2094<2064		4504<1057	7-WAY TO 4-WAY	*Call
2094<2064		4504<1058	8-WAY TO 4-WAY	*Call
2094<2064		4504<1059	9-WAY TO 4-WAY	*Call
2094<2064		4504<1061	1-WAY TO 4-WAY	*Call
2094<2064		4504<1062	2-WAY TO 4-WAY	*Call
2094<2064		4504<1063	3-WAY TO 4-WAY	*Call
2094<2064		4504<1064	4-WAY TO 4-WAY	*Call
2094<2064		4504<1065	5-WAY TO 4-WAY	*Call
2094<2064		4504<1066	6-WAY TO 4-WAY	*Call
2094<2064		4504<1067	7-WAY TO 4-WAY	*Call
2094<2064		4504<1068	8-WAY TO 4-WAY	*Call
2094<2064		4504<1069	9-WAY TO 4-WAY	*Call
2094<2064		4504<1070	10-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4504<1071	11-WAY TO 4-WAY	*Call
2094<2064		4504<1072	12-WAY TO 4-WAY	*Call
2094<2064		4504<1073	13-WAY TO 4-WAY	*Call
2094<2064		4504<1074	14-WAY TO 4-WAY	*Call
2094<2064		4504<1075	15-WAY TO 4-WAY	*Call
2094<2064		4504<1076	16-WAY TO 4-WAY	*Call
2094<2064		4504<2061	1-WAY TO 4-WAY	*Call
2094<2064		4504<2062	2-WAY TO 4-WAY	*Call
2094<2064		4504<2063	3-WAY TO 4-WAY	*Call
2094<2064		4504<2064	4-WAY TO 4-WAY	*Call
2094<2064		4504<2065	5-WAY TO 4-WAY	*Call
2094<2064		4504<2066	6-WAY TO 4-WAY	*Call
2094<2064		4504<2067	7-WAY TO 4-WAY	*Call
2094<2064		4504<2068	8-WAY TO 4-WAY	*Call
2094<2064		4504<2069	9-WAY TO 4-WAY	*Call
2094<2064		4504<2070	10-WAY TO 4-WAY	*Call
2094<2064		4504<2071	11-WAY TO 4-WAY	*Call
2094<2064		4504<2072	12-WAY TO 4-WAY	*Call
2094<2064		4504<2073	13-WAY TO 4-WAY	*Call
2094<2064		4504<2074	14-WAY TO 4-WAY	*Call
2094<2064		4504<2075	15-WAY TO 4-WAY	*Call
2094<2064		4504<2076	16-WAY TO 4-WAY	*Call
2094<2064		4505<1051	1-WAY TO 5-WAY	*Call
2094<2064		4505<1052	2-WAY TO 5-WAY	*Call
2094<2064		4505<1053	3-WAY TO 5-WAY	*Call
2094<2064		4505<1054	4-WAY TO 5-WAY	*Call
2094<2064		4505<1055	5-WAY TO 5-WAY	*Call
2094<2064		4505<1056	6-WAY TO 5-WAY	*Call
2094<2064		4505<1057	7-WAY TO 5-WAY	*Call
2094<2064		4505<1058	8-WAY TO 5-WAY	*Call
2094<2064		4505<1059	9-WAY TO 5-WAY	*Call
2094<2064		4505<1061	1-WAY TO 5-WAY	*Call
2094<2064		4505<1062	2-WAY TO 5-WAY	*Call
2094<2064		4505<1063	3-WAY TO 5-WAY	*Call
2094<2064		4505<1064	4-WAY TO 5-WAY	*Call
2094<2064		4505<1065	5-WAY TO 5-WAY	*Call
2094<2064		4505<1066	6-WAY TO 5-WAY	*Call
2094<2064		4505<1067	7-WAY TO 5-WAY	*Call
2094<2064		4505<1068	8-WAY TO 5-WAY	*Call
2094<2064		4505<1069	9-WAY TO 5-WAY	*Call
2094<2064		4505<1070	10-WAY TO 5-WAY	*Call
2094<2064		4505<1071	11-WAY TO 5-WAY	*Call
2094<2064		4505<1072	12-WAY TO 5-WAY	*Call
2094<2064		4505<1073	13-WAY TO 5-WAY	*Call
2094<2064		4505<1074	14-WAY TO 5-WAY	*Call
2094<2064		4505<1075	15-WAY TO 5-WAY	*Call
2094<2064		4505<1076	16-WAY TO 5-WAY	*Call
2094<2064		4505<2061	1-WAY TO 5-WAY	*Call
2094<2064		4505<2062	2-WAY TO 5-WAY	*Call
2094<2064		4505<2063	3-WAY TO 5-WAY	*Call
2094<2064		4505<2064	4-WAY TO 5-WAY	*Call
2094<2064		4505<2065	5-WAY TO 5-WAY	*Call
2094<2064		4505<2066	6-WAY TO 5-WAY	*Call
2094<2064		4505<2067	7-WAY TO 5-WAY	*Call
2094<2064		4505<2068	8-WAY TO 5-WAY	*Call
2094<2064		4505<2069	9-WAY TO 5-WAY	*Call
2094<2064		4505<2070	10-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4505<2071	11-WAY TO 5-WAY	*Call
2094<2064		4505<2072	12-WAY TO 5-WAY	*Call
2094<2064		4505<2073	13-WAY TO 5-WAY	*Call
2094<2064		4505<2074	14-WAY TO 5-WAY	*Call
2094<2064		4505<2075	15-WAY TO 5-WAY	*Call
2094<2064		4505<2076	16-WAY TO 5-WAY	*Call
2094<2064		4506<1051	1-WAY TO 6-WAY	*Call
2094<2064		4506<1052	2-WAY TO 6-WAY	*Call
2094<2064		4506<1053	3-WAY TO 6-WAY	*Call
2094<2064		4506<1054	4-WAY TO 6-WAY	*Call
2094<2064		4506<1055	5-WAY TO 6-WAY	*Call
2094<2064		4506<1056	6-WAY TO 6-WAY	*Call
2094<2064		4506<1057	7-WAY TO 6-WAY	*Call
2094<2064		4506<1058	8-WAY TO 6-WAY	*Call
2094<2064		4506<1059	9-WAY TO 6-WAY	*Call
2094<2064		4506<1061	1-WAY TO 6-WAY	*Call
2094<2064		4506<1062	2-WAY TO 6-WAY	*Call
2094<2064		4506<1063	3-WAY TO 6-WAY	*Call
2094<2064		4506<1064	4-WAY TO 6-WAY	*Call
2094<2064		4506<1065	5-WAY TO 6-WAY	*Call
2094<2064		4506<1066	6-WAY TO 6-WAY	*Call
2094<2064		4506<1067	7-WAY TO 6-WAY	*Call
2094<2064		4506<1068	8-WAY TO 6-WAY	*Call
2094<2064		4506<1069	9-WAY TO 6-WAY	*Call
2094<2064		4506<1070	10-WAY TO 6-WAY	*Call
2094<2064		4506<1071	11-WAY TO 6-WAY	*Call
2094<2064		4506<1072	12-WAY TO 6-WAY	*Call
2094<2064		4506<1073	13-WAY TO 6-WAY	*Call
2094<2064		4506<1074	14-WAY TO 6-WAY	*Call
2094<2064		4506<1075	15-WAY TO 6-WAY	*Call
2094<2064		4506<1076	16-WAY TO 6-WAY	*Call
2094<2064		4506<2061	1-WAY TO 6-WAY	*Call
2094<2064		4506<2062	2-WAY TO 6-WAY	*Call
2094<2064		4506<2063	3-WAY TO 6-WAY	*Call
2094<2064		4506<2064	4-WAY TO 6-WAY	*Call
2094<2064		4506<2065	5-WAY TO 6-WAY	*Call
2094<2064		4506<2066	6-WAY TO 6-WAY	*Call
2094<2064		4506<2067	7-WAY TO 6-WAY	*Call
2094<2064		4506<2068	8-WAY TO 6-WAY	*Call
2094<2064		4506<2069	9-WAY TO 6-WAY	*Call
2094<2064		4506<2070	10-WAY TO 6-WAY	*Call
2094<2064		4506<2071	11-WAY TO 6-WAY	*Call
2094<2064		4506<2072	12-WAY TO 6-WAY	*Call
2094<2064		4506<2073	13-WAY TO 6-WAY	*Call
2094<2064		4506<2074	14-WAY TO 6-WAY	*Call
2094<2064		4506<2075	15-WAY TO 6-WAY	*Call
2094<2064		4506<2076	16-WAY TO 6-WAY	*Call
2094<2064		4507<1051	1-WAY TO 7-WAY	*Call
2094<2064		4507<1052	2-WAY TO 7-WAY	*Call
2094<2064		4507<1053	3-WAY TO 7-WAY	*Call
2094<2064		4507<1054	4-WAY TO 7-WAY	*Call
2094<2064		4507<1055	5-WAY TO 7-WAY	*Call
2094<2064		4507<1056	6-WAY TO 7-WAY	*Call
2094<2064		4507<1057	7-WAY TO 7-WAY	*Call
2094<2064		4507<1058	8-WAY TO 7-WAY	*Call
2094<2064		4507<1059	9-WAY TO 7-WAY	*Call
2094<2064		4507<1061	1-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4507<1062	2-WAY TO 7-WAY	*Call
2094<2064		4507<1063	3-WAY TO 7-WAY	*Call
2094<2064		4507<1064	4-WAY TO 7-WAY	*Call
2094<2064		4507<1065	5-WAY TO 7-WAY	*Call
2094<2064		4507<1066	6-WAY TO 7-WAY	*Call
2094<2064		4507<1067	7-WAY TO 7-WAY	*Call
2094<2064		4507<1068	8-WAY TO 7-WAY	*Call
2094<2064		4507<1069	9-WAY TO 7-WAY	*Call
2094<2064		4507<1070	10-WAY TO 7-WAY	*Call
2094<2064		4507<1071	11-WAY TO 7-WAY	*Call
2094<2064		4507<1072	12-WAY TO 7-WAY	*Call
2094<2064		4507<1073	13-WAY TO 7-WAY	*Call
2094<2064		4507<1074	14-WAY TO 7-WAY	*Call
2094<2064		4507<1075	15-WAY TO 7-WAY	*Call
2094<2064		4507<1076	16-WAY TO 7-WAY	*Call
2094<2064		4507<2061	1-WAY TO 7-WAY	*Call
2094<2064		4507<2062	2-WAY TO 7-WAY	*Call
2094<2064		4507<2063	3-WAY TO 7-WAY	*Call
2094<2064		4507<2064	4-WAY TO 7-WAY	*Call
2094<2064		4507<2065	5-WAY TO 7-WAY	*Call
2094<2064		4507<2066	6-WAY TO 7-WAY	*Call
2094<2064		4507<2067	7-WAY TO 7-WAY	*Call
2094<2064		4507<2068	8-WAY TO 7-WAY	*Call
2094<2064		4507<2069	9-WAY TO 7-WAY	*Call
2094<2064		4507<2070	10-WAY TO 7-WAY	*Call
2094<2064		4507<2071	11-WAY TO 7-WAY	*Call
2094<2064		4507<2072	12-WAY TO 7-WAY	*Call
2094<2064		4507<2073	13-WAY TO 7-WAY	*Call
2094<2064		4507<2074	14-WAY TO 7-WAY	*Call
2094<2064		4507<2075	15-WAY TO 7-WAY	*Call
2094<2064		4507<2076	16-WAY TO 7-WAY	*Call
2094<2064		4508<1051	1-WAY TO 8-WAY	*Call
2094<2064		4508<1052	2-WAY TO 8-WAY	*Call
2094<2064		4508<1053	3-WAY TO 8-WAY	*Call
2094<2064		4508<1054	4-WAY TO 8-WAY	*Call
2094<2064		4508<1055	5-WAY TO 8-WAY	*Call
2094<2064		4508<1056	6-WAY TO 8-WAY	*Call
2094<2064		4508<1057	7-WAY TO 8-WAY	*Call
2094<2064		4508<1058	8-WAY TO 8-WAY	*Call
2094<2064		4508<1059	9-WAY TO 8-WAY	*Call
2094<2064		4508<1061	1-WAY TO 8-WAY	*Call
2094<2064		4508<1062	2-WAY TO 8-WAY	*Call
2094<2064		4508<1063	3-WAY TO 8-WAY	*Call
2094<2064		4508<1064	4-WAY TO 8-WAY	*Call
2094<2064		4508<1065	5-WAY TO 8-WAY	*Call
2094<2064		4508<1066	6-WAY TO 8-WAY	*Call
2094<2064		4508<1067	7-WAY TO 8-WAY	*Call
2094<2064		4508<1068	8-WAY TO 8-WAY	*Call
2094<2064		4508<1069	9-WAY TO 8-WAY	*Call
2094<2064		4508<1070	10-WAY TO 8-WAY	*Call
2094<2064		4508<1071	11-WAY TO 8-WAY	*Call
2094<2064		4508<1072	12-WAY TO 8-WAY	*Call
2094<2064		4508<1073	13-WAY TO 8-WAY	*Call
2094<2064		4508<1074	14-WAY TO 8-WAY	*Call
2094<2064		4508<1075	15-WAY TO 8-WAY	*Call
2094<2064		4508<1076	16-WAY TO 8-WAY	*Call
2094<2064		4508<2061	1-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4508<2062	2-WAY TO 8-WAY	*Call
2094<2064		4508<2063	3-WAY TO 8-WAY	*Call
2094<2064		4508<2064	4-WAY TO 8-WAY	*Call
2094<2064		4508<2065	5-WAY TO 8-WAY	*Call
2094<2064		4508<2066	6-WAY TO 8-WAY	*Call
2094<2064		4508<2067	7-WAY TO 8-WAY	*Call
2094<2064		4508<2068	8-WAY TO 8-WAY	*Call
2094<2064		4508<2069	9-WAY TO 8-WAY	*Call
2094<2064		4508<2070	10-WAY TO 8-WAY	*Call
2094<2064		4508<2071	11-WAY TO 8-WAY	*Call
2094<2064		4508<2072	12-WAY TO 8-WAY	*Call
2094<2064		4508<2073	13-WAY TO 8-WAY	*Call
2094<2064		4508<2074	14-WAY TO 8-WAY	*Call
2094<2064		4508<2075	15-WAY TO 8-WAY	*Call
2094<2064		4508<2076	16-WAY TO 8-WAY	*Call
2094<2064		4509<1051	1-WAY TO 9-WAY	*Call
2094<2064		4509<1052	2-WAY TO 9-WAY	*Call
2094<2064		4509<1053	3-WAY TO 9-WAY	*Call
2094<2064		4509<1054	4-WAY TO 9-WAY	*Call
2094<2064		4509<1055	5-WAY TO 9-WAY	*Call
2094<2064		4509<1056	6-WAY TO 9-WAY	*Call
2094<2064		4509<1057	7-WAY TO 9-WAY	*Call
2094<2064		4509<1058	8-WAY TO 9-WAY	*Call
2094<2064		4509<1059	9-WAY TO 9-WAY	*Call
2094<2064		4509<1061	1-WAY TO 9-WAY	*Call
2094<2064		4509<1062	2-WAY TO 9-WAY	*Call
2094<2064		4509<1063	3-WAY TO 9-WAY	*Call
2094<2064		4509<1064	4-WAY TO 9-WAY	*Call
2094<2064		4509<1065	5-WAY TO 9-WAY	*Call
2094<2064		4509<1066	6-WAY TO 9-WAY	*Call
2094<2064		4509<1067	7-WAY TO 9-WAY	*Call
2094<2064		4509<1068	8-WAY TO 9-WAY	*Call
2094<2064		4509<1069	9-WAY TO 9-WAY	*Call
2094<2064		4509<1070	10-WAY TO 9-WAY	*Call
2094<2064		4509<1071	11-WAY TO 9-WAY	*Call
2094<2064		4509<1072	12-WAY TO 9-WAY	*Call
2094<2064		4509<1073	13-WAY TO 9-WAY	*Call
2094<2064		4509<1074	14-WAY TO 9-WAY	*Call
2094<2064		4509<1075	15-WAY TO 9-WAY	*Call
2094<2064		4509<1076	16-WAY TO 9-WAY	*Call
2094<2064		4509<2061	1-WAY TO 9-WAY	*Call
2094<2064		4509<2062	2-WAY TO 9-WAY	*Call
2094<2064		4509<2063	3-WAY TO 9-WAY	*Call
2094<2064		4509<2064	4-WAY TO 9-WAY	*Call
2094<2064		4509<2065	5-WAY TO 9-WAY	*Call
2094<2064		4509<2066	6-WAY TO 9-WAY	*Call
2094<2064		4509<2067	7-WAY TO 9-WAY	*Call
2094<2064		4509<2068	8-WAY TO 9-WAY	*Call
2094<2064		4509<2069	9-WAY TO 9-WAY	*Call
2094<2064		4509<2070	10-WAY TO 9-WAY	*Call
2094<2064		4509<2071	11-WAY TO 9-WAY	*Call
2094<2064		4509<2072	12-WAY TO 9-WAY	*Call
2094<2064		4509<2073	13-WAY TO 9-WAY	*Call
2094<2064		4509<2074	14-WAY TO 9-WAY	*Call
2094<2064		4509<2075	15-WAY TO 9-WAY	*Call
2094<2064		4509<2076	16-WAY TO 9-WAY	*Call
2094<2064		4510<1051	1-WAY TO 10-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4510<1052	2-WAY TO 10-WAY	*Call
2094<2064		4510<1053	3-WAY TO 10-WAY	*Call
2094<2064		4510<1054	4-WAY TO 10-WAY	*Call
2094<2064		4510<1055	5-WAY TO 10-WAY	*Call
2094<2064		4510<1056	6-WAY TO 10-WAY	*Call
2094<2064		4510<1057	7-WAY TO 10-WAY	*Call
2094<2064		4510<1058	8-WAY TO 10-WAY	*Call
2094<2064		4510<1059	9-WAY TO 10-WAY	*Call
2094<2064		4510<1061	1-WAY TO 10-WAY	*Call
2094<2064		4510<1062	2-WAY TO 10-WAY	*Call
2094<2064		4510<1063	3-WAY TO 10-WAY	*Call
2094<2064		4510<1064	4-WAY TO 10-WAY	*Call
2094<2064		4510<1065	5-WAY TO 10-WAY	*Call
2094<2064		4510<1066	6-WAY TO 10-WAY	*Call
2094<2064		4510<1067	7-WAY TO 10-WAY	*Call
2094<2064		4510<1068	8-WAY TO 10-WAY	*Call
2094<2064		4510<1069	9-WAY TO 10-WAY	*Call
2094<2064		4510<1070	10-WAY TO 10-WAY	*Call
2094<2064		4510<1071	11-WAY TO 10-WAY	*Call
2094<2064		4510<1072	12-WAY TO 10-WAY	*Call
2094<2064		4510<1073	13-WAY TO 10-WAY	*Call
2094<2064		4510<1074	14-WAY TO 10-WAY	*Call
2094<2064		4510<1075	15-WAY TO 10-WAY	*Call
2094<2064		4510<1076	16-WAY TO 10-WAY	*Call
2094<2064		4510<2061	1-WAY TO 10-WAY	*Call
2094<2064		4510<2062	2-WAY TO 10-WAY	*Call
2094<2064		4510<2063	3-WAY TO 10-WAY	*Call
2094<2064		4510<2064	4-WAY TO 10-WAY	*Call
2094<2064		4510<2065	5-WAY TO 10-WAY	*Call
2094<2064		4510<2066	6-WAY TO 10-WAY	*Call
2094<2064		4510<2067	7-WAY TO 10-WAY	*Call
2094<2064		4510<2068	8-WAY TO 10-WAY	*Call
2094<2064		4510<2069	9-WAY TO 10-WAY	*Call
2094<2064		4510<2070	10-WAY TO 10-WAY	*Call
2094<2064		4510<2071	11-WAY TO 10-WAY	*Call
2094<2064		4510<2072	12-WAY TO 10-WAY	*Call
2094<2064		4510<2073	13-WAY TO 10-WAY	*Call
2094<2064		4510<2074	14-WAY TO 10-WAY	*Call
2094<2064		4510<2075	15-WAY TO 10-WAY	*Call
2094<2064		4510<2076	16-WAY TO 10-WAY	*Call
2094<2064		4511<1051	1-WAY TO 11-WAY	*Call
2094<2064		4511<1052	2-WAY TO 11-WAY	*Call
2094<2064		4511<1053	3-WAY TO 11-WAY	*Call
2094<2064		4511<1054	4-WAY TO 11-WAY	*Call
2094<2064		4511<1055	5-WAY TO 11-WAY	*Call
2094<2064		4511<1056	6-WAY TO 11-WAY	*Call
2094<2064		4511<1057	7-WAY TO 11-WAY	*Call
2094<2064		4511<1058	8-WAY TO 11-WAY	*Call
2094<2064		4511<1059	9-WAY TO 11-WAY	*Call
2094<2064		4511<1061	1-WAY TO 11-WAY	*Call
2094<2064		4511<1062	2-WAY TO 11-WAY	*Call
2094<2064		4511<1063	3-WAY TO 11-WAY	*Call
2094<2064		4511<1064	4-WAY TO 11-WAY	*Call
2094<2064		4511<1065	5-WAY TO 11-WAY	*Call
2094<2064		4511<1066	6-WAY TO 11-WAY	*Call
2094<2064		4511<1067	7-WAY TO 11-WAY	*Call
2094<2064		4511<1068	8-WAY TO 11-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4511<1069	9-WAY TO 11-WAY	*Call
2094<2064		4511<1070	10-WAY TO 11-WAY	*Call
2094<2064		4511<1071	11-WAY TO 11-WAY	*Call
2094<2064		4511<1072	12-WAY TO 11-WAY	*Call
2094<2064		4511<1073	13-WAY TO 11-WAY	*Call
2094<2064		4511<1074	14-WAY TO 11-WAY	*Call
2094<2064		4511<1075	15-WAY TO 11-WAY	*Call
2094<2064		4511<1076	16-WAY TO 11-WAY	*Call
2094<2064		4511<2061	1-WAY TO 11-WAY	*Call
2094<2064		4511<2062	2-WAY TO 11-WAY	*Call
2094<2064		4511<2063	3-WAY TO 11-WAY	*Call
2094<2064		4511<2064	4-WAY TO 11-WAY	*Call
2094<2064		4511<2065	5-WAY TO 11-WAY	*Call
2094<2064		4511<2066	6-WAY TO 11-WAY	*Call
2094<2064		4511<2067	7-WAY TO 11-WAY	*Call
2094<2064		4511<2068	8-WAY TO 11-WAY	*Call
2094<2064		4511<2069	9-WAY TO 11-WAY	*Call
2094<2064		4511<2070	10-WAY TO 11-WAY	*Call
2094<2064		4511<2071	11-WAY TO 11-WAY	*Call
2094<2064		4511<2072	12-WAY TO 11-WAY	*Call
2094<2064		4511<2073	13-WAY TO 11-WAY	*Call
2094<2064		4511<2074	14-WAY TO 11-WAY	*Call
2094<2064		4511<2075	15-WAY TO 11-WAY	*Call
2094<2064		4511<2076	16-WAY TO 11-WAY	*Call
2094<2064		4512<1051	1-WAY TO 12-WAY	*Call
2094<2064		4512<1052	2-WAY TO 12-WAY	*Call
2094<2064		4512<1053	3-WAY TO 12-WAY	*Call
2094<2064		4512<1054	4-WAY TO 12-WAY	*Call
2094<2064		4512<1055	5-WAY TO 12-WAY	*Call
2094<2064		4512<1056	6-WAY TO 12-WAY	*Call
2094<2064		4512<1057	7-WAY TO 12-WAY	*Call
2094<2064		4512<1058	8-WAY TO 12-WAY	*Call
2094<2064		4512<1059	9-WAY TO 12-WAY	*Call
2094<2064		4512<1061	1-WAY TO 12-WAY	*Call
2094<2064		4512<1062	2-WAY TO 12-WAY	*Call
2094<2064		4512<1063	3-WAY TO 12-WAY	*Call
2094<2064		4512<1064	4-WAY TO 12-WAY	*Call
2094<2064		4512<1065	5-WAY TO 12-WAY	*Call
2094<2064		4512<1066	6-WAY TO 12-WAY	*Call
2094<2064		4512<1067	7-WAY TO 12-WAY	*Call
2094<2064		4512<1068	8-WAY TO 12-WAY	*Call
2094<2064		4512<1069	9-WAY TO 12-WAY	*Call
2094<2064		4512<1070	10-WAY TO 12-WAY	*Call
2094<2064		4512<1071	11-WAY TO 12-WAY	*Call
2094<2064		4512<1072	12-WAY TO 12-WAY	*Call
2094<2064		4512<1073	13-WAY TO 12-WAY	*Call
2094<2064		4512<1074	14-WAY TO 12-WAY	*Call
2094<2064		4512<1075	15-WAY TO 12-WAY	*Call
2094<2064		4512<1076	16-WAY TO 12-WAY	*Call
2094<2064		4512<2061	1-WAY TO 12-WAY	*Call
2094<2064		4512<2062	2-WAY TO 12-WAY	*Call
2094<2064		4512<2063	3-WAY TO 12-WAY	*Call
2094<2064		4512<2064	4-WAY TO 12-WAY	*Call
2094<2064		4512<2065	5-WAY TO 12-WAY	*Call
2094<2064		4512<2066	6-WAY TO 12-WAY	*Call
2094<2064		4512<2067	7-WAY TO 12-WAY	*Call
2094<2064		4512<2068	8-WAY TO 12-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4512<2069	9-WAY TO 12-WAY	*Call
2094<2064		4512<2070	10-WAY TO 12-WAY	*Call
2094<2064		4512<2071	11-WAY TO 12-WAY	*Call
2094<2064		4512<2072	12-WAY TO 12-WAY	*Call
2094<2064		4512<2073	13-WAY TO 12-WAY	*Call
2094<2064		4512<2074	14-WAY TO 12-WAY	*Call
2094<2064		4512<2075	15-WAY TO 12-WAY	*Call
2094<2064		4512<2076	16-WAY TO 12-WAY	*Call
2094<2064		4513<1051	1-WAY TO 13-WAY	*Call
2094<2064		4513<1052	2-WAY TO 13-WAY	*Call
2094<2064		4513<1053	3-WAY TO 13-WAY	*Call
2094<2064		4513<1054	4-WAY TO 13-WAY	*Call
2094<2064		4513<1055	5-WAY TO 13-WAY	*Call
2094<2064		4513<1056	6-WAY TO 13-WAY	*Call
2094<2064		4513<1057	7-WAY TO 13-WAY	*Call
2094<2064		4513<1058	8-WAY TO 13-WAY	*Call
2094<2064		4513<1059	9-WAY TO 13-WAY	*Call
2094<2064		4513<1061	1-WAY TO 13-WAY	*Call
2094<2064		4513<1062	2-WAY TO 13-WAY	*Call
2094<2064		4513<1063	3-WAY TO 13-WAY	*Call
2094<2064		4513<1064	4-WAY TO 13-WAY	*Call
2094<2064		4513<1065	5-WAY TO 13-WAY	*Call
2094<2064		4513<1066	6-WAY TO 13-WAY	*Call
2094<2064		4513<1067	7-WAY TO 13-WAY	*Call
2094<2064		4513<1068	8-WAY TO 13-WAY	*Call
2094<2064		4513<1069	9-WAY TO 13-WAY	*Call
2094<2064		4513<1070	10-WAY TO 13-WAY	*Call
2094<2064		4513<1071	11-WAY TO 13-WAY	*Call
2094<2064		4513<1072	12-WAY TO 13-WAY	*Call
2094<2064		4513<1073	13-WAY TO 13-WAY	*Call
2094<2064		4513<1074	14-WAY TO 13-WAY	*Call
2094<2064		4513<1075	15-WAY TO 13-WAY	*Call
2094<2064		4513<1076	16-WAY TO 13-WAY	*Call
2094<2064		4513<2061	1-WAY TO 13-WAY	*Call
2094<2064		4513<2062	2-WAY TO 13-WAY	*Call
2094<2064		4513<2063	3-WAY TO 13-WAY	*Call
2094<2064		4513<2064	4-WAY TO 13-WAY	*Call
2094<2064		4513<2065	5-WAY TO 13-WAY	*Call
2094<2064		4513<2066	6-WAY TO 13-WAY	*Call
2094<2064		4513<2067	7-WAY TO 13-WAY	*Call
2094<2064		4513<2068	8-WAY TO 13-WAY	*Call
2094<2064		4513<2069	9-WAY TO 13-WAY	*Call
2094<2064		4513<2070	10-WAY TO 13-WAY	*Call
2094<2064		4513<2071	11-WAY TO 13-WAY	*Call
2094<2064		4513<2072	12-WAY TO 13-WAY	*Call
2094<2064		4513<2073	13-WAY TO 13-WAY	*Call
2094<2064		4513<2074	14-WAY TO 13-WAY	*Call
2094<2064		4513<2075	15-WAY TO 13-WAY	*Call
2094<2064		4513<2076	16-WAY TO 13-WAY	*Call
2094<2064		4514<1051	1-WAY TO 14-WAY	*Call
2094<2064		4514<1052	2-WAY TO 14-WAY	*Call
2094<2064		4514<1053	3-WAY TO 14-WAY	*Call
2094<2064		4514<1054	4-WAY TO 14-WAY	*Call
2094<2064		4514<1055	5-WAY TO 14-WAY	*Call
2094<2064		4514<1056	6-WAY TO 14-WAY	*Call
2094<2064		4514<1057	7-WAY TO 14-WAY	*Call
2094<2064		4514<1058	8-WAY TO 14-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4514<1059	9-WAY TO 14-WAY	*Call
2094<2064		4514<1061	1-WAY TO 14-WAY	*Call
2094<2064		4514<1062	2-WAY TO 14-WAY	*Call
2094<2064		4514<1063	3-WAY TO 14-WAY	*Call
2094<2064		4514<1064	4-WAY TO 14-WAY	*Call
2094<2064		4514<1065	5-WAY TO 14-WAY	*Call
2094<2064		4514<1066	6-WAY TO 14-WAY	*Call
2094<2064		4514<1067	7-WAY TO 14-WAY	*Call
2094<2064		4514<1068	8-WAY TO 14-WAY	*Call
2094<2064		4514<1069	9-WAY TO 14-WAY	*Call
2094<2064		4514<1070	10-WAY TO 14-WAY	*Call
2094<2064		4514<1071	11-WAY TO 14-WAY	*Call
2094<2064		4514<1072	12-WAY TO 14-WAY	*Call
2094<2064		4514<1073	13-WAY TO 14-WAY	*Call
2094<2064		4514<1074	14-WAY TO 14-WAY	*Call
2094<2064		4514<1075	15-WAY TO 14-WAY	*Call
2094<2064		4514<1076	16-WAY TO 14-WAY	*Call
2094<2064		4514<2061	1-WAY TO 14-WAY	*Call
2094<2064		4514<2062	2-WAY TO 14-WAY	*Call
2094<2064		4514<2063	3-WAY TO 14-WAY	*Call
2094<2064		4514<2064	4-WAY TO 14-WAY	*Call
2094<2064		4514<2065	5-WAY TO 14-WAY	*Call
2094<2064		4514<2066	6-WAY TO 14-WAY	*Call
2094<2064		4514<2067	7-WAY TO 14-WAY	*Call
2094<2064		4514<2068	8-WAY TO 14-WAY	*Call
2094<2064		4514<2069	9-WAY TO 14-WAY	*Call
2094<2064		4514<2070	10-WAY TO 14-WAY	*Call
2094<2064		4514<2071	11-WAY TO 14-WAY	*Call
2094<2064		4514<2072	12-WAY TO 14-WAY	*Call
2094<2064		4514<2073	13-WAY TO 14-WAY	*Call
2094<2064		4514<2074	14-WAY TO 14-WAY	*Call
2094<2064		4514<2075	15-WAY TO 14-WAY	*Call
2094<2064		4514<2076	16-WAY TO 14-WAY	*Call
2094<2064		4515<1051	1-WAY TO 15-WAY	*Call
2094<2064		4515<1052	2-WAY TO 15-WAY	*Call
2094<2064		4515<1053	3-WAY TO 15-WAY	*Call
2094<2064		4515<1054	4-WAY TO 15-WAY	*Call
2094<2064		4515<1055	5-WAY TO 15-WAY	*Call
2094<2064		4515<1056	6-WAY TO 15-WAY	*Call
2094<2064		4515<1057	7-WAY TO 15-WAY	*Call
2094<2064		4515<1058	8-WAY TO 15-WAY	*Call
2094<2064		4515<1059	9-WAY TO 15-WAY	*Call
2094<2064		4515<1061	1-WAY TO 15-WAY	*Call
2094<2064		4515<1062	2-WAY TO 15-WAY	*Call
2094<2064		4515<1063	3-WAY TO 15-WAY	*Call
2094<2064		4515<1064	4-WAY TO 15-WAY	*Call
2094<2064		4515<1065	5-WAY TO 15-WAY	*Call
2094<2064		4515<1066	6-WAY TO 15-WAY	*Call
2094<2064		4515<1067	7-WAY TO 15-WAY	*Call
2094<2064		4515<1068	8-WAY TO 15-WAY	*Call
2094<2064		4515<1069	9-WAY TO 15-WAY	*Call
2094<2064		4515<1070	10-WAY TO 15-WAY	*Call
2094<2064		4515<1071	11-WAY TO 15-WAY	*Call
2094<2064		4515<1072	12-WAY TO 15-WAY	*Call
2094<2064		4515<1073	13-WAY TO 15-WAY	*Call
2094<2064		4515<1074	14-WAY TO 15-WAY	*Call
2094<2064		4515<1075	15-WAY TO 15-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4515<1076	16-WAY TO 15-WAY	*Call
2094<2064		4515<2061	1-WAY TO 15-WAY	*Call
2094<2064		4515<2062	2-WAY TO 15-WAY	*Call
2094<2064		4515<2063	3-WAY TO 15-WAY	*Call
2094<2064		4515<2064	4-WAY TO 15-WAY	*Call
2094<2064		4515<2065	5-WAY TO 15-WAY	*Call
2094<2064		4515<2066	6-WAY TO 15-WAY	*Call
2094<2064		4515<2067	7-WAY TO 15-WAY	*Call
2094<2064		4515<2068	8-WAY TO 15-WAY	*Call
2094<2064		4515<2069	9-WAY TO 15-WAY	*Call
2094<2064		4515<2070	10-WAY TO 15-WAY	*Call
2094<2064		4515<2071	11-WAY TO 15-WAY	*Call
2094<2064		4515<2072	12-WAY TO 15-WAY	*Call
2094<2064		4515<2073	13-WAY TO 15-WAY	*Call
2094<2064		4515<2074	14-WAY TO 15-WAY	*Call
2094<2064		4515<2075	15-WAY TO 15-WAY	*Call
2094<2064		4515<2076	16-WAY TO 15-WAY	*Call
2094<2064		4516<1051	1-WAY TO 16-WAY	*Call
2094<2064		4516<1052	2-WAY TO 16-WAY	*Call
2094<2064		4516<1053	3-WAY TO 16-WAY	*Call
2094<2064		4516<1054	4-WAY TO 16-WAY	*Call
2094<2064		4516<1055	5-WAY TO 16-WAY	*Call
2094<2064		4516<1056	6-WAY TO 16-WAY	*Call
2094<2064		4516<1057	7-WAY TO 16-WAY	*Call
2094<2064		4516<1058	8-WAY TO 16-WAY	*Call
2094<2064		4516<1059	9-WAY TO 16-WAY	*Call
2094<2064		4516<1061	1-WAY TO 16-WAY	*Call
2094<2064		4516<1062	2-WAY TO 16-WAY	*Call
2094<2064		4516<1063	3-WAY TO 16-WAY	*Call
2094<2064		4516<1064	4-WAY TO 16-WAY	*Call
2094<2064		4516<1065	5-WAY TO 16-WAY	*Call
2094<2064		4516<1066	6-WAY TO 16-WAY	*Call
2094<2064		4516<1067	7-WAY TO 16-WAY	*Call
2094<2064		4516<1068	8-WAY TO 16-WAY	*Call
2094<2064		4516<1069	9-WAY TO 16-WAY	*Call
2094<2064		4516<1070	10-WAY TO 16-WAY	*Call
2094<2064		4516<1071	11-WAY TO 16-WAY	*Call
2094<2064		4516<1072	12-WAY TO 16-WAY	*Call
2094<2064		4516<1073	13-WAY TO 16-WAY	*Call
2094<2064		4516<1074	14-WAY TO 16-WAY	*Call
2094<2064		4516<1075	15-WAY TO 16-WAY	*Call
2094<2064		4516<1076	16-WAY TO 16-WAY	*Call
2094<2064		4516<2061	1-WAY TO 16-WAY	*Call
2094<2064		4516<2062	2-WAY TO 16-WAY	*Call
2094<2064		4516<2063	3-WAY TO 16-WAY	*Call
2094<2064		4516<2064	4-WAY TO 16-WAY	*Call
2094<2064		4516<2065	5-WAY TO 16-WAY	*Call
2094<2064		4516<2066	6-WAY TO 16-WAY	*Call
2094<2064		4516<2067	7-WAY TO 16-WAY	*Call
2094<2064		4516<2068	8-WAY TO 16-WAY	*Call
2094<2064		4516<2069	9-WAY TO 16-WAY	*Call
2094<2064		4516<2070	10-WAY TO 16-WAY	*Call
2094<2064		4516<2071	11-WAY TO 16-WAY	*Call
2094<2064		4516<2072	12-WAY TO 16-WAY	*Call
2094<2064		4516<2073	13-WAY TO 16-WAY	*Call
2094<2064		4516<2074	14-WAY TO 16-WAY	*Call
2094<2064		4516<2075	15-WAY TO 16-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4516<2076	16-WAY TO 16-WAY	*Call
2094<2064		4517<1051	1-WAY TO 17-WAY	*Call
2094<2064		4517<1052	2-WAY TO 17-WAY	*Call
2094<2064		4517<1053	3-WAY TO 17-WAY	*Call
2094<2064		4517<1054	4-WAY TO 17-WAY	*Call
2094<2064		4517<1055	5-WAY TO 17-WAY	*Call
2094<2064		4517<1056	6-WAY TO 17-WAY	*Call
2094<2064		4517<1057	7-WAY TO 17-WAY	*Call
2094<2064		4517<1058	8-WAY TO 17-WAY	*Call
2094<2064		4517<1059	9-WAY TO 17-WAY	*Call
2094<2064		4517<1061	1-WAY TO 17-WAY	*Call
2094<2064		4517<1062	2-WAY TO 17-WAY	*Call
2094<2064		4517<1063	3-WAY TO 17-WAY	*Call
2094<2064		4517<1064	4-WAY TO 17-WAY	*Call
2094<2064		4517<1065	5-WAY TO 17-WAY	*Call
2094<2064		4517<1066	6-WAY TO 17-WAY	*Call
2094<2064		4517<1067	7-WAY TO 17-WAY	*Call
2094<2064		4517<1068	8-WAY TO 17-WAY	*Call
2094<2064		4517<1069	9-WAY TO 17-WAY	*Call
2094<2064		4517<1070	10-WAY TO 17-WAY	*Call
2094<2064		4517<1071	11-WAY TO 17-WAY	*Call
2094<2064		4517<1072	12-WAY TO 17-WAY	*Call
2094<2064		4517<1073	13-WAY TO 17-WAY	*Call
2094<2064		4517<1074	14-WAY TO 17-WAY	*Call
2094<2064		4517<1075	15-WAY TO 17-WAY	*Call
2094<2064		4517<1076	16-WAY TO 17-WAY	*Call
2094<2064		4517<2061	1-WAY TO 17-WAY	*Call
2094<2064		4517<2062	2-WAY TO 17-WAY	*Call
2094<2064		4517<2063	3-WAY TO 17-WAY	*Call
2094<2064		4517<2064	4-WAY TO 17-WAY	*Call
2094<2064		4517<2065	5-WAY TO 17-WAY	*Call
2094<2064		4517<2066	6-WAY TO 17-WAY	*Call
2094<2064		4517<2067	7-WAY TO 17-WAY	*Call
2094<2064		4517<2068	8-WAY TO 17-WAY	*Call
2094<2064		4517<2069	9-WAY TO 17-WAY	*Call
2094<2064		4517<2070	10-WAY TO 17-WAY	*Call
2094<2064		4517<2071	11-WAY TO 17-WAY	*Call
2094<2064		4517<2072	12-WAY TO 17-WAY	*Call
2094<2064		4517<2073	13-WAY TO 17-WAY	*Call
2094<2064		4517<2074	14-WAY TO 17-WAY	*Call
2094<2064		4517<2075	15-WAY TO 17-WAY	*Call
2094<2064		4517<2076	16-WAY TO 17-WAY	*Call
2094<2064		4518<1051	1-WAY TO 18-WAY	*Call
2094<2064		4518<1052	2-WAY TO 18-WAY	*Call
2094<2064		4518<1053	3-WAY TO 18-WAY	*Call
2094<2064		4518<1054	4-WAY TO 18-WAY	*Call
2094<2064		4518<1055	5-WAY TO 18-WAY	*Call
2094<2064		4518<1056	6-WAY TO 18-WAY	*Call
2094<2064		4518<1057	7-WAY TO 18-WAY	*Call
2094<2064		4518<1058	8-WAY TO 18-WAY	*Call
2094<2064		4518<1059	9-WAY TO 18-WAY	*Call
2094<2064		4518<1061	1-WAY TO 18-WAY	*Call
2094<2064		4518<1062	2-WAY TO 18-WAY	*Call
2094<2064		4518<1063	3-WAY TO 18-WAY	*Call
2094<2064		4518<1064	4-WAY TO 18-WAY	*Call
2094<2064		4518<1065	5-WAY TO 18-WAY	*Call
2094<2064		4518<1066	6-WAY TO 18-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4518<1067	7-WAY TO 18-WAY	*Call
2094<2064		4518<1068	8-WAY TO 18-WAY	*Call
2094<2064		4518<1069	9-WAY TO 18-WAY	*Call
2094<2064		4518<1070	10-WAY TO 18-WAY	*Call
2094<2064		4518<1071	11-WAY TO 18-WAY	*Call
2094<2064		4518<1072	12-WAY TO 18-WAY	*Call
2094<2064		4518<1073	13-WAY TO 18-WAY	*Call
2094<2064		4518<1074	14-WAY TO 18-WAY	*Call
2094<2064		4518<1075	15-WAY TO 18-WAY	*Call
2094<2064		4518<1076	16-WAY TO 18-WAY	*Call
2094<2064		4518<2061	1-WAY TO 18-WAY	*Call
2094<2064		4518<2062	2-WAY TO 18-WAY	*Call
2094<2064		4518<2063	3-WAY TO 18-WAY	*Call
2094<2064		4518<2064	4-WAY TO 18-WAY	*Call
2094<2064		4518<2065	5-WAY TO 18-WAY	*Call
2094<2064		4518<2066	6-WAY TO 18-WAY	*Call
2094<2064		4518<2067	7-WAY TO 18-WAY	*Call
2094<2064		4518<2068	8-WAY TO 18-WAY	*Call
2094<2064		4518<2069	9-WAY TO 18-WAY	*Call
2094<2064		4518<2070	10-WAY TO 18-WAY	*Call
2094<2064		4518<2071	11-WAY TO 18-WAY	*Call
2094<2064		4518<2072	12-WAY TO 18-WAY	*Call
2094<2064		4518<2073	13-WAY TO 18-WAY	*Call
2094<2064		4518<2074	14-WAY TO 18-WAY	*Call
2094<2064		4518<2075	15-WAY TO 18-WAY	*Call
2094<2064		4518<2076	16-WAY TO 18-WAY	*Call
2094<2064		4519<1051	1-WAY TO 19-WAY	*Call
2094<2064		4519<1052	2-WAY TO 19-WAY	*Call
2094<2064		4519<1053	3-WAY TO 19-WAY	*Call
2094<2064		4519<1054	4-WAY TO 19-WAY	*Call
2094<2064		4519<1055	5-WAY TO 19-WAY	*Call
2094<2064		4519<1056	6-WAY TO 19-WAY	*Call
2094<2064		4519<1057	7-WAY TO 19-WAY	*Call
2094<2064		4519<1058	8-WAY TO 19-WAY	*Call
2094<2064		4519<1059	9-WAY TO 19-WAY	*Call
2094<2064		4519<1061	1-WAY TO 19-WAY	*Call
2094<2064		4519<1062	2-WAY TO 19-WAY	*Call
2094<2064		4519<1063	3-WAY TO 19-WAY	*Call
2094<2064		4519<1064	4-WAY TO 19-WAY	*Call
2094<2064		4519<1065	5-WAY TO 19-WAY	*Call
2094<2064		4519<1066	6-WAY TO 19-WAY	*Call
2094<2064		4519<1067	7-WAY TO 19-WAY	*Call
2094<2064		4519<1068	8-WAY TO 19-WAY	*Call
2094<2064		4519<1069	9-WAY TO 19-WAY	*Call
2094<2064		4519<1070	10-WAY TO 19-WAY	*Call
2094<2064		4519<1071	11-WAY TO 19-WAY	*Call
2094<2064		4519<1072	12-WAY TO 19-WAY	*Call
2094<2064		4519<1073	13-WAY TO 19-WAY	*Call
2094<2064		4519<1074	14-WAY TO 19-WAY	*Call
2094<2064		4519<1075	15-WAY TO 19-WAY	*Call
2094<2064		4519<1076	16-WAY TO 19-WAY	*Call
2094<2064		4519<2061	1-WAY TO 19-WAY	*Call
2094<2064		4519<2062	2-WAY TO 19-WAY	*Call
2094<2064		4519<2063	3-WAY TO 19-WAY	*Call
2094<2064		4519<2064	4-WAY TO 19-WAY	*Call
2094<2064		4519<2065	5-WAY TO 19-WAY	*Call
2094<2064		4519<2066	6-WAY TO 19-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4519<2067	7-WAY TO 19-WAY	*Call
2094<2064		4519<2068	8-WAY TO 19-WAY	*Call
2094<2064		4519<2069	9-WAY TO 19-WAY	*Call
2094<2064		4519<2070	10-WAY TO 19-WAY	*Call
2094<2064		4519<2071	11-WAY TO 19-WAY	*Call
2094<2064		4519<2072	12-WAY TO 19-WAY	*Call
2094<2064		4519<2073	13-WAY TO 19-WAY	*Call
2094<2064		4519<2074	14-WAY TO 19-WAY	*Call
2094<2064		4519<2075	15-WAY TO 19-WAY	*Call
2094<2064		4519<2076	16-WAY TO 19-WAY	*Call
2094<2064		4520<1051	1-WAY TO 20-WAY	*Call
2094<2064		4520<1052	2-WAY TO 20-WAY	*Call
2094<2064		4520<1053	3-WAY TO 20-WAY	*Call
2094<2064		4520<1054	4-WAY TO 20-WAY	*Call
2094<2064		4520<1055	5-WAY TO 20-WAY	*Call
2094<2064		4520<1056	6-WAY TO 20-WAY	*Call
2094<2064		4520<1057	7-WAY TO 20-WAY	*Call
2094<2064		4520<1058	8-WAY TO 20-WAY	*Call
2094<2064		4520<1059	9-WAY TO 20-WAY	*Call
2094<2064		4520<1061	1-WAY TO 20-WAY	*Call
2094<2064		4520<1062	2-WAY TO 20-WAY	*Call
2094<2064		4520<1063	3-WAY TO 20-WAY	*Call
2094<2064		4520<1064	4-WAY TO 20-WAY	*Call
2094<2064		4520<1065	5-WAY TO 20-WAY	*Call
2094<2064		4520<1066	6-WAY TO 20-WAY	*Call
2094<2064		4520<1067	7-WAY TO 20-WAY	*Call
2094<2064		4520<1068	8-WAY TO 20-WAY	*Call
2094<2064		4520<1069	9-WAY TO 20-WAY	*Call
2094<2064		4520<1070	10-WAY TO 20-WAY	*Call
2094<2064		4520<1071	11-WAY TO 20-WAY	*Call
2094<2064		4520<1072	12-WAY TO 20-WAY	*Call
2094<2064		4520<1073	13-WAY TO 20-WAY	*Call
2094<2064		4520<1074	14-WAY TO 20-WAY	*Call
2094<2064		4520<1075	15-WAY TO 20-WAY	*Call
2094<2064		4520<1076	16-WAY TO 20-WAY	*Call
2094<2064		4520<2061	1-WAY TO 20-WAY	*Call
2094<2064		4520<2062	2-WAY TO 20-WAY	*Call
2094<2064		4520<2063	3-WAY TO 20-WAY	*Call
2094<2064		4520<2064	4-WAY TO 20-WAY	*Call
2094<2064		4520<2065	5-WAY TO 20-WAY	*Call
2094<2064		4520<2066	6-WAY TO 20-WAY	*Call
2094<2064		4520<2067	7-WAY TO 20-WAY	*Call
2094<2064		4520<2068	8-WAY TO 20-WAY	*Call
2094<2064		4520<2069	9-WAY TO 20-WAY	*Call
2094<2064		4520<2070	10-WAY TO 20-WAY	*Call
2094<2064		4520<2071	11-WAY TO 20-WAY	*Call
2094<2064		4520<2072	12-WAY TO 20-WAY	*Call
2094<2064		4520<2073	13-WAY TO 20-WAY	*Call
2094<2064		4520<2074	14-WAY TO 20-WAY	*Call
2094<2064		4520<2075	15-WAY TO 20-WAY	*Call
2094<2064		4520<2076	16-WAY TO 20-WAY	*Call
2094<2064		4521<1051	1-WAY TO 21-WAY	*Call
2094<2064		4521<1052	2-WAY TO 21-WAY	*Call
2094<2064		4521<1053	3-WAY TO 21-WAY	*Call
2094<2064		4521<1054	4-WAY TO 21-WAY	*Call
2094<2064		4521<1055	5-WAY TO 21-WAY	*Call
2094<2064		4521<1056	6-WAY TO 21-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4521<1057	7-WAY TO 21-WAY	*Call
2094<2064		4521<1058	8-WAY TO 21-WAY	*Call
2094<2064		4521<1059	9-WAY TO 21-WAY	*Call
2094<2064		4521<1061	1-WAY TO 21-WAY	*Call
2094<2064		4521<1062	2-WAY TO 21-WAY	*Call
2094<2064		4521<1063	3-WAY TO 21-WAY	*Call
2094<2064		4521<1064	4-WAY TO 21-WAY	*Call
2094<2064		4521<1065	5-WAY TO 21-WAY	*Call
2094<2064		4521<1066	6-WAY TO 21-WAY	*Call
2094<2064		4521<1067	7-WAY TO 21-WAY	*Call
2094<2064		4521<1068	8-WAY TO 21-WAY	*Call
2094<2064		4521<1069	9-WAY TO 21-WAY	*Call
2094<2064		4521<1070	10-WAY TO 21-WAY	*Call
2094<2064		4521<1071	11-WAY TO 21-WAY	*Call
2094<2064		4521<1072	12-WAY TO 21-WAY	*Call
2094<2064		4521<1073	13-WAY TO 21-WAY	*Call
2094<2064		4521<1074	14-WAY TO 21-WAY	*Call
2094<2064		4521<1075	15-WAY TO 21-WAY	*Call
2094<2064		4521<1076	16-WAY TO 21-WAY	*Call
2094<2064		4521<2061	1-WAY TO 21-WAY	*Call
2094<2064		4521<2062	2-WAY TO 21-WAY	*Call
2094<2064		4521<2063	3-WAY TO 21-WAY	*Call
2094<2064		4521<2064	4-WAY TO 21-WAY	*Call
2094<2064		4521<2065	5-WAY TO 21-WAY	*Call
2094<2064		4521<2066	6-WAY TO 21-WAY	*Call
2094<2064		4521<2067	7-WAY TO 21-WAY	*Call
2094<2064		4521<2068	8-WAY TO 21-WAY	*Call
2094<2064		4521<2069	9-WAY TO 21-WAY	*Call
2094<2064		4521<2070	10-WAY TO 21-WAY	*Call
2094<2064		4521<2071	11-WAY TO 21-WAY	*Call
2094<2064		4521<2072	12-WAY TO 21-WAY	*Call
2094<2064		4521<2073	13-WAY TO 21-WAY	*Call
2094<2064		4521<2074	14-WAY TO 21-WAY	*Call
2094<2064		4521<2075	15-WAY TO 21-WAY	*Call
2094<2064		4521<2076	16-WAY TO 21-WAY	*Call
2094<2064		4522<1051	1-WAY TO 22-WAY	*Call
2094<2064		4522<1052	2-WAY TO 22-WAY	*Call
2094<2064		4522<1053	3-WAY TO 22-WAY	*Call
2094<2064		4522<1054	4-WAY TO 22-WAY	*Call
2094<2064		4522<1055	5-WAY TO 22-WAY	*Call
2094<2064		4522<1056	6-WAY TO 22-WAY	*Call
2094<2064		4522<1057	7-WAY TO 22-WAY	*Call
2094<2064		4522<1058	8-WAY TO 22-WAY	*Call
2094<2064		4522<1059	9-WAY TO 22-WAY	*Call
2094<2064		4522<1061	1-WAY TO 22-WAY	*Call
2094<2064		4522<1062	2-WAY TO 22-WAY	*Call
2094<2064		4522<1063	3-WAY TO 22-WAY	*Call
2094<2064		4522<1064	4-WAY TO 22-WAY	*Call
2094<2064		4522<1065	5-WAY TO 22-WAY	*Call
2094<2064		4522<1066	6-WAY TO 22-WAY	*Call
2094<2064		4522<1067	7-WAY TO 22-WAY	*Call
2094<2064		4522<1068	8-WAY TO 22-WAY	*Call
2094<2064		4522<1069	9-WAY TO 22-WAY	*Call
2094<2064		4522<1070	10-WAY TO 22-WAY	*Call
2094<2064		4522<1071	11-WAY TO 22-WAY	*Call
2094<2064		4522<1072	12-WAY TO 22-WAY	*Call
2094<2064		4522<1073	13-WAY TO 22-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4522<1074	14-WAY TO 22-WAY	*Call
2094<2064		4522<1075	15-WAY TO 22-WAY	*Call
2094<2064		4522<1076	16-WAY TO 22-WAY	*Call
2094<2064		4522<2061	1-WAY TO 22-WAY	*Call
2094<2064		4522<2062	2-WAY TO 22-WAY	*Call
2094<2064		4522<2063	3-WAY TO 22-WAY	*Call
2094<2064		4522<2064	4-WAY TO 22-WAY	*Call
2094<2064		4522<2065	5-WAY TO 22-WAY	*Call
2094<2064		4522<2066	6-WAY TO 22-WAY	*Call
2094<2064		4522<2067	7-WAY TO 22-WAY	*Call
2094<2064		4522<2068	8-WAY TO 22-WAY	*Call
2094<2064		4522<2069	9-WAY TO 22-WAY	*Call
2094<2064		4522<2070	10-WAY TO 22-WAY	*Call
2094<2064		4522<2071	11-WAY TO 22-WAY	*Call
2094<2064		4522<2072	12-WAY TO 22-WAY	*Call
2094<2064		4522<2073	13-WAY TO 22-WAY	*Call
2094<2064		4522<2074	14-WAY TO 22-WAY	*Call
2094<2064		4522<2075	15-WAY TO 22-WAY	*Call
2094<2064		4522<2076	16-WAY TO 22-WAY	*Call
2094<2064		4523<1051	1-WAY TO 23-WAY	*Call
2094<2064		4523<1052	2-WAY TO 23-WAY	*Call
2094<2064		4523<1053	3-WAY TO 23-WAY	*Call
2094<2064		4523<1054	4-WAY TO 23-WAY	*Call
2094<2064		4523<1055	5-WAY TO 23-WAY	*Call
2094<2064		4523<1056	6-WAY TO 23-WAY	*Call
2094<2064		4523<1057	7-WAY TO 23-WAY	*Call
2094<2064		4523<1058	8-WAY TO 23-WAY	*Call
2094<2064		4523<1059	9-WAY TO 23-WAY	*Call
2094<2064		4523<1061	1-WAY TO 23-WAY	*Call
2094<2064		4523<1062	2-WAY TO 23-WAY	*Call
2094<2064		4523<1063	3-WAY TO 23-WAY	*Call
2094<2064		4523<1064	4-WAY TO 23-WAY	*Call
2094<2064		4523<1065	5-WAY TO 23-WAY	*Call
2094<2064		4523<1066	6-WAY TO 23-WAY	*Call
2094<2064		4523<1067	7-WAY TO 23-WAY	*Call
2094<2064		4523<1068	8-WAY TO 23-WAY	*Call
2094<2064		4523<1069	9-WAY TO 23-WAY	*Call
2094<2064		4523<1070	10-WAY TO 23-WAY	*Call
2094<2064		4523<1071	11-WAY TO 23-WAY	*Call
2094<2064		4523<1072	12-WAY TO 23-WAY	*Call
2094<2064		4523<1073	13-WAY TO 23-WAY	*Call
2094<2064		4523<1074	14-WAY TO 23-WAY	*Call
2094<2064		4523<1075	15-WAY TO 23-WAY	*Call
2094<2064		4523<1076	16-WAY TO 23-WAY	*Call
2094<2064		4523<2061	1-WAY TO 23-WAY	*Call
2094<2064		4523<2062	2-WAY TO 23-WAY	*Call
2094<2064		4523<2063	3-WAY TO 23-WAY	*Call
2094<2064		4523<2064	4-WAY TO 23-WAY	*Call
2094<2064		4523<2065	5-WAY TO 23-WAY	*Call
2094<2064		4523<2066	6-WAY TO 23-WAY	*Call
2094<2064		4523<2067	7-WAY TO 23-WAY	*Call
2094<2064		4523<2068	8-WAY TO 23-WAY	*Call
2094<2064		4523<2069	9-WAY TO 23-WAY	*Call
2094<2064		4523<2070	10-WAY TO 23-WAY	*Call
2094<2064		4523<2071	11-WAY TO 23-WAY	*Call
2094<2064		4523<2072	12-WAY TO 23-WAY	*Call
2094<2064		4523<2073	13-WAY TO 23-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4523<2074	14-WAY TO 23-WAY	*Call
2094<2064		4523<2075	15-WAY TO 23-WAY	*Call
2094<2064		4523<2076	16-WAY TO 23-WAY	*Call
2094<2064		4524<1051	1-WAY TO 24-WAY	*Call
2094<2064		4524<1052	2-WAY TO 24-WAY	*Call
2094<2064		4524<1053	3-WAY TO 24-WAY	*Call
2094<2064		4524<1054	4-WAY TO 24-WAY	*Call
2094<2064		4524<1055	5-WAY TO 24-WAY	*Call
2094<2064		4524<1056	6-WAY TO 24-WAY	*Call
2094<2064		4524<1057	7-WAY TO 24-WAY	*Call
2094<2064		4524<1058	8-WAY TO 24-WAY	*Call
2094<2064		4524<1059	9-WAY TO 24-WAY	*Call
2094<2064		4524<1061	1-WAY TO 24-WAY	*Call
2094<2064		4524<1062	2-WAY TO 24-WAY	*Call
2094<2064		4524<1063	3-WAY TO 24-WAY	*Call
2094<2064		4524<1064	4-WAY TO 24-WAY	*Call
2094<2064		4524<1065	5-WAY TO 24-WAY	*Call
2094<2064		4524<1066	6-WAY TO 24-WAY	*Call
2094<2064		4524<1067	7-WAY TO 24-WAY	*Call
2094<2064		4524<1068	8-WAY TO 24-WAY	*Call
2094<2064		4524<1069	9-WAY TO 24-WAY	*Call
2094<2064		4524<1070	10-WAY TO 24-WAY	*Call
2094<2064		4524<1071	11-WAY TO 24-WAY	*Call
2094<2064		4524<1072	12-WAY TO 24-WAY	*Call
2094<2064		4524<1073	13-WAY TO 24-WAY	*Call
2094<2064		4524<1074	14-WAY TO 24-WAY	*Call
2094<2064		4524<1075	15-WAY TO 24-WAY	*Call
2094<2064		4524<1076	16-WAY TO 24-WAY	*Call
2094<2064		4524<2061	1-WAY TO 24-WAY	*Call
2094<2064		4524<2062	2-WAY TO 24-WAY	*Call
2094<2064		4524<2063	3-WAY TO 24-WAY	*Call
2094<2064		4524<2064	4-WAY TO 24-WAY	*Call
2094<2064		4524<2065	5-WAY TO 24-WAY	*Call
2094<2064		4524<2066	6-WAY TO 24-WAY	*Call
2094<2064		4524<2067	7-WAY TO 24-WAY	*Call
2094<2064		4524<2068	8-WAY TO 24-WAY	*Call
2094<2064		4524<2069	9-WAY TO 24-WAY	*Call
2094<2064		4524<2070	10-WAY TO 24-WAY	*Call
2094<2064		4524<2071	11-WAY TO 24-WAY	*Call
2094<2064		4524<2072	12-WAY TO 24-WAY	*Call
2094<2064		4524<2073	13-WAY TO 24-WAY	*Call
2094<2064		4524<2074	14-WAY TO 24-WAY	*Call
2094<2064		4524<2075	15-WAY TO 24-WAY	*Call
2094<2064		4524<2076	16-WAY TO 24-WAY	*Call
2094<2064		4525<1051	1-WAY TO 25-WAY	*Call
2094<2064		4525<1052	2-WAY TO 25-WAY	*Call
2094<2064		4525<1053	3-WAY TO 25-WAY	*Call
2094<2064		4525<1054	4-WAY TO 25-WAY	*Call
2094<2064		4525<1055	5-WAY TO 25-WAY	*Call
2094<2064		4525<1056	6-WAY TO 25-WAY	*Call
2094<2064		4525<1057	7-WAY TO 25-WAY	*Call
2094<2064		4525<1058	8-WAY TO 25-WAY	*Call
2094<2064		4525<1059	9-WAY TO 25-WAY	*Call
2094<2064		4525<1061	1-WAY TO 25-WAY	*Call
2094<2064		4525<1062	2-WAY TO 25-WAY	*Call
2094<2064		4525<1063	3-WAY TO 25-WAY	*Call
2094<2064		4525<1064	4-WAY TO 25-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4525<1065	5-WAY TO 25-WAY	*Call
2094<2064		4525<1066	6-WAY TO 25-WAY	*Call
2094<2064		4525<1067	7-WAY TO 25-WAY	*Call
2094<2064		4525<1068	8-WAY TO 25-WAY	*Call
2094<2064		4525<1069	9-WAY TO 25-WAY	*Call
2094<2064		4525<1070	10-WAY TO 25-WAY	*Call
2094<2064		4525<1071	11-WAY TO 25-WAY	*Call
2094<2064		4525<1072	12-WAY TO 25-WAY	*Call
2094<2064		4525<1073	13-WAY TO 25-WAY	*Call
2094<2064		4525<1074	14-WAY TO 25-WAY	*Call
2094<2064		4525<1075	15-WAY TO 25-WAY	*Call
2094<2064		4525<1076	16-WAY TO 25-WAY	*Call
2094<2064		4525<2061	1-WAY TO 25-WAY	*Call
2094<2064		4525<2062	2-WAY TO 25-WAY	*Call
2094<2064		4525<2063	3-WAY TO 25-WAY	*Call
2094<2064		4525<2064	4-WAY TO 25-WAY	*Call
2094<2064		4525<2065	5-WAY TO 25-WAY	*Call
2094<2064		4525<2066	6-WAY TO 25-WAY	*Call
2094<2064		4525<2067	7-WAY TO 25-WAY	*Call
2094<2064		4525<2068	8-WAY TO 25-WAY	*Call
2094<2064		4525<2069	9-WAY TO 25-WAY	*Call
2094<2064		4525<2070	10-WAY TO 25-WAY	*Call
2094<2064		4525<2071	11-WAY TO 25-WAY	*Call
2094<2064		4525<2072	12-WAY TO 25-WAY	*Call
2094<2064		4525<2073	13-WAY TO 25-WAY	*Call
2094<2064		4525<2074	14-WAY TO 25-WAY	*Call
2094<2064		4525<2075	15-WAY TO 25-WAY	*Call
2094<2064		4525<2076	16-WAY TO 25-WAY	*Call
2094<2064		4526<1051	1-WAY TO 26-WAY	*Call
2094<2064		4526<1052	2-WAY TO 26-WAY	*Call
2094<2064		4526<1053	3-WAY TO 26-WAY	*Call
2094<2064		4526<1054	4-WAY TO 26-WAY	*Call
2094<2064		4526<1055	5-WAY TO 26-WAY	*Call
2094<2064		4526<1056	6-WAY TO 26-WAY	*Call
2094<2064		4526<1057	7-WAY TO 26-WAY	*Call
2094<2064		4526<1058	8-WAY TO 26-WAY	*Call
2094<2064		4526<1059	9-WAY TO 26-WAY	*Call
2094<2064		4526<1061	1-WAY TO 26-WAY	*Call
2094<2064		4526<1062	2-WAY TO 26-WAY	*Call
2094<2064		4526<1063	3-WAY TO 26-WAY	*Call
2094<2064		4526<1064	4-WAY TO 26-WAY	*Call
2094<2064		4526<1065	5-WAY TO 26-WAY	*Call
2094<2064		4526<1066	6-WAY TO 26-WAY	*Call
2094<2064		4526<1067	7-WAY TO 26-WAY	*Call
2094<2064		4526<1068	8-WAY TO 26-WAY	*Call
2094<2064		4526<1069	9-WAY TO 26-WAY	*Call
2094<2064		4526<1070	10-WAY TO 26-WAY	*Call
2094<2064		4526<1071	11-WAY TO 26-WAY	*Call
2094<2064		4526<1072	12-WAY TO 26-WAY	*Call
2094<2064		4526<1073	13-WAY TO 26-WAY	*Call
2094<2064		4526<1074	14-WAY TO 26-WAY	*Call
2094<2064		4526<1075	15-WAY TO 26-WAY	*Call
2094<2064		4526<1076	16-WAY TO 26-WAY	*Call
2094<2064		4526<2061	1-WAY TO 26-WAY	*Call
2094<2064		4526<2062	2-WAY TO 26-WAY	*Call
2094<2064		4526<2063	3-WAY TO 26-WAY	*Call
2094<2064		4526<2064	4-WAY TO 26-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4526<2065	5-WAY TO 26-WAY	*Call
2094<2064		4526<2066	6-WAY TO 26-WAY	*Call
2094<2064		4526<2067	7-WAY TO 26-WAY	*Call
2094<2064		4526<2068	8-WAY TO 26-WAY	*Call
2094<2064		4526<2069	9-WAY TO 26-WAY	*Call
2094<2064		4526<2070	10-WAY TO 26-WAY	*Call
2094<2064		4526<2071	11-WAY TO 26-WAY	*Call
2094<2064		4526<2072	12-WAY TO 26-WAY	*Call
2094<2064		4526<2073	13-WAY TO 26-WAY	*Call
2094<2064		4526<2074	14-WAY TO 26-WAY	*Call
2094<2064		4526<2075	15-WAY TO 26-WAY	*Call
2094<2064		4526<2076	16-WAY TO 26-WAY	*Call
2094<2064		4527<1051	1-WAY TO 27-WAY	*Call
2094<2064		4527<1052	2-WAY TO 27-WAY	*Call
2094<2064		4527<1053	3-WAY TO 27-WAY	*Call
2094<2064		4527<1054	4-WAY TO 27-WAY	*Call
2094<2064		4527<1055	5-WAY TO 27-WAY	*Call
2094<2064		4527<1056	6-WAY TO 27-WAY	*Call
2094<2064		4527<1057	7-WAY TO 27-WAY	*Call
2094<2064		4527<1058	8-WAY TO 27-WAY	*Call
2094<2064		4527<1059	9-WAY TO 27-WAY	*Call
2094<2064		4527<1061	1-WAY TO 27-WAY	*Call
2094<2064		4527<1062	2-WAY TO 27-WAY	*Call
2094<2064		4527<1063	3-WAY TO 27-WAY	*Call
2094<2064		4527<1064	4-WAY TO 27-WAY	*Call
2094<2064		4527<1065	5-WAY TO 27-WAY	*Call
2094<2064		4527<1066	6-WAY TO 27-WAY	*Call
2094<2064		4527<1067	7-WAY TO 27-WAY	*Call
2094<2064		4527<1068	8-WAY TO 27-WAY	*Call
2094<2064		4527<1069	9-WAY TO 27-WAY	*Call
2094<2064		4527<1070	10-WAY TO 27-WAY	*Call
2094<2064		4527<1071	11-WAY TO 27-WAY	*Call
2094<2064		4527<1072	12-WAY TO 27-WAY	*Call
2094<2064		4527<1073	13-WAY TO 27-WAY	*Call
2094<2064		4527<1074	14-WAY TO 27-WAY	*Call
2094<2064		4527<1075	15-WAY TO 27-WAY	*Call
2094<2064		4527<1076	16-WAY TO 27-WAY	*Call
2094<2064		4527<2061	1-WAY TO 27-WAY	*Call
2094<2064		4527<2062	2-WAY TO 27-WAY	*Call
2094<2064		4527<2063	3-WAY TO 27-WAY	*Call
2094<2064		4527<2064	4-WAY TO 27-WAY	*Call
2094<2064		4527<2065	5-WAY TO 27-WAY	*Call
2094<2064		4527<2066	6-WAY TO 27-WAY	*Call
2094<2064		4527<2067	7-WAY TO 27-WAY	*Call
2094<2064		4527<2068	8-WAY TO 27-WAY	*Call
2094<2064		4527<2069	9-WAY TO 27-WAY	*Call
2094<2064		4527<2070	10-WAY TO 27-WAY	*Call
2094<2064		4527<2071	11-WAY TO 27-WAY	*Call
2094<2064		4527<2072	12-WAY TO 27-WAY	*Call
2094<2064		4527<2073	13-WAY TO 27-WAY	*Call
2094<2064		4527<2074	14-WAY TO 27-WAY	*Call
2094<2064		4527<2075	15-WAY TO 27-WAY	*Call
2094<2064		4527<2076	16-WAY TO 27-WAY	*Call
2094<2064		4528<1051	1-WAY TO 28-WAY	*Call
2094<2064		4528<1052	2-WAY TO 28-WAY	*Call
2094<2064		4528<1053	3-WAY TO 28-WAY	*Call
2094<2064		4528<1054	4-WAY TO 28-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4528<1055	5-WAY TO 28-WAY	*Call
2094<2064		4528<1056	6-WAY TO 28-WAY	*Call
2094<2064		4528<1057	7-WAY TO 28-WAY	*Call
2094<2064		4528<1058	8-WAY TO 28-WAY	*Call
2094<2064		4528<1059	9-WAY TO 28-WAY	*Call
2094<2064		4528<1061	1-WAY TO 28-WAY	*Call
2094<2064		4528<1062	2-WAY TO 28-WAY	*Call
2094<2064		4528<1063	3-WAY TO 28-WAY	*Call
2094<2064		4528<1064	4-WAY TO 28-WAY	*Call
2094<2064		4528<1065	5-WAY TO 28-WAY	*Call
2094<2064		4528<1066	6-WAY TO 28-WAY	*Call
2094<2064		4528<1067	7-WAY TO 28-WAY	*Call
2094<2064		4528<1068	8-WAY TO 28-WAY	*Call
2094<2064		4528<1069	9-WAY TO 28-WAY	*Call
2094<2064		4528<1070	10-WAY TO 28-WAY	*Call
2094<2064		4528<1071	11-WAY TO 28-WAY	*Call
2094<2064		4528<1072	12-WAY TO 28-WAY	*Call
2094<2064		4528<1073	13-WAY TO 28-WAY	*Call
2094<2064		4528<1074	14-WAY TO 28-WAY	*Call
2094<2064		4528<1075	15-WAY TO 28-WAY	*Call
2094<2064		4528<1076	16-WAY TO 28-WAY	*Call
2094<2064		4528<2061	1-WAY TO 28-WAY	*Call
2094<2064		4528<2062	2-WAY TO 28-WAY	*Call
2094<2064		4528<2063	3-WAY TO 28-WAY	*Call
2094<2064		4528<2064	4-WAY TO 28-WAY	*Call
2094<2064		4528<2065	5-WAY TO 28-WAY	*Call
2094<2064		4528<2066	6-WAY TO 28-WAY	*Call
2094<2064		4528<2067	7-WAY TO 28-WAY	*Call
2094<2064		4528<2068	8-WAY TO 28-WAY	*Call
2094<2064		4528<2069	9-WAY TO 28-WAY	*Call
2094<2064		4528<2070	10-WAY TO 28-WAY	*Call
2094<2064		4528<2071	11-WAY TO 28-WAY	*Call
2094<2064		4528<2072	12-WAY TO 28-WAY	*Call
2094<2064		4528<2073	13-WAY TO 28-WAY	*Call
2094<2064		4528<2074	14-WAY TO 28-WAY	*Call
2094<2064		4528<2075	15-WAY TO 28-WAY	*Call
2094<2064		4528<2076	16-WAY TO 28-WAY	*Call
2094<2064		4529<1051	1-WAY TO 29-WAY	*Call
2094<2064		4529<1052	2-WAY TO 29-WAY	*Call
2094<2064		4529<1053	3-WAY TO 29-WAY	*Call
2094<2064		4529<1054	4-WAY TO 29-WAY	*Call
2094<2064		4529<1055	5-WAY TO 29-WAY	*Call
2094<2064		4529<1056	6-WAY TO 29-WAY	*Call
2094<2064		4529<1057	7-WAY TO 29-WAY	*Call
2094<2064		4529<1058	8-WAY TO 29-WAY	*Call
2094<2064		4529<1059	9-WAY TO 29-WAY	*Call
2094<2064		4529<1061	1-WAY TO 29-WAY	*Call
2094<2064		4529<1062	2-WAY TO 29-WAY	*Call
2094<2064		4529<1063	3-WAY TO 29-WAY	*Call
2094<2064		4529<1064	4-WAY TO 29-WAY	*Call
2094<2064		4529<1065	5-WAY TO 29-WAY	*Call
2094<2064		4529<1066	6-WAY TO 29-WAY	*Call
2094<2064		4529<1067	7-WAY TO 29-WAY	*Call
2094<2064		4529<1068	8-WAY TO 29-WAY	*Call
2094<2064		4529<1069	9-WAY TO 29-WAY	*Call
2094<2064		4529<1070	10-WAY TO 29-WAY	*Call
2094<2064		4529<1071	11-WAY TO 29-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4529<1072	12-WAY TO 29-WAY	*Call
2094<2064		4529<1073	13-WAY TO 29-WAY	*Call
2094<2064		4529<1074	14-WAY TO 29-WAY	*Call
2094<2064		4529<1075	15-WAY TO 29-WAY	*Call
2094<2064		4529<1076	16-WAY TO 29-WAY	*Call
2094<2064		4529<2061	1-WAY TO 29-WAY	*Call
2094<2064		4529<2062	2-WAY TO 29-WAY	*Call
2094<2064		4529<2063	3-WAY TO 29-WAY	*Call
2094<2064		4529<2064	4-WAY TO 29-WAY	*Call
2094<2064		4529<2065	5-WAY TO 29-WAY	*Call
2094<2064		4529<2066	6-WAY TO 29-WAY	*Call
2094<2064		4529<2067	7-WAY TO 29-WAY	*Call
2094<2064		4529<2068	8-WAY TO 29-WAY	*Call
2094<2064		4529<2069	9-WAY TO 29-WAY	*Call
2094<2064		4529<2070	10-WAY TO 29-WAY	*Call
2094<2064		4529<2071	11-WAY TO 29-WAY	*Call
2094<2064		4529<2072	12-WAY TO 29-WAY	*Call
2094<2064		4529<2073	13-WAY TO 29-WAY	*Call
2094<2064		4529<2074	14-WAY TO 29-WAY	*Call
2094<2064		4529<2075	15-WAY TO 29-WAY	*Call
2094<2064		4529<2076	16-WAY TO 29-WAY	*Call
2094<2064		4530<1051	1-WAY TO 30-WAY	*Call
2094<2064		4530<1052	2-WAY TO 30-WAY	*Call
2094<2064		4530<1053	3-WAY TO 30-WAY	*Call
2094<2064		4530<1054	4-WAY TO 30-WAY	*Call
2094<2064		4530<1055	5-WAY TO 30-WAY	*Call
2094<2064		4530<1056	6-WAY TO 30-WAY	*Call
2094<2064		4530<1057	7-WAY TO 30-WAY	*Call
2094<2064		4530<1058	8-WAY TO 30-WAY	*Call
2094<2064		4530<1059	9-WAY TO 30-WAY	*Call
2094<2064		4530<1061	1-WAY TO 30-WAY	*Call
2094<2064		4530<1062	2-WAY TO 30-WAY	*Call
2094<2064		4530<1063	3-WAY TO 30-WAY	*Call
2094<2064		4530<1064	4-WAY TO 30-WAY	*Call
2094<2064		4530<1065	5-WAY TO 30-WAY	*Call
2094<2064		4530<1066	6-WAY TO 30-WAY	*Call
2094<2064		4530<1067	7-WAY TO 30-WAY	*Call
2094<2064		4530<1068	8-WAY TO 30-WAY	*Call
2094<2064		4530<1069	9-WAY TO 30-WAY	*Call
2094<2064		4530<1070	10-WAY TO 30-WAY	*Call
2094<2064		4530<1071	11-WAY TO 30-WAY	*Call
2094<2064		4530<1072	12-WAY TO 30-WAY	*Call
2094<2064		4530<1073	13-WAY TO 30-WAY	*Call
2094<2064		4530<1074	14-WAY TO 30-WAY	*Call
2094<2064		4530<1075	15-WAY TO 30-WAY	*Call
2094<2064		4530<1076	16-WAY TO 30-WAY	*Call
2094<2064		4530<2061	1-WAY TO 30-WAY	*Call
2094<2064		4530<2062	2-WAY TO 30-WAY	*Call
2094<2064		4530<2063	3-WAY TO 30-WAY	*Call
2094<2064		4530<2064	4-WAY TO 30-WAY	*Call
2094<2064		4530<2065	5-WAY TO 30-WAY	*Call
2094<2064		4530<2066	6-WAY TO 30-WAY	*Call
2094<2064		4530<2067	7-WAY TO 30-WAY	*Call
2094<2064		4530<2068	8-WAY TO 30-WAY	*Call
2094<2064		4530<2069	9-WAY TO 30-WAY	*Call
2094<2064		4530<2070	10-WAY TO 30-WAY	*Call
2094<2064		4530<2071	11-WAY TO 30-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4530<2072	12-WAY TO 30-WAY	*Call
2094<2064		4530<2073	13-WAY TO 30-WAY	*Call
2094<2064		4530<2074	14-WAY TO 30-WAY	*Call
2094<2064		4530<2075	15-WAY TO 30-WAY	*Call
2094<2064		4530<2076	16-WAY TO 30-WAY	*Call
2094<2064		4531<1051	1-WAY TO 31-WAY	*Call
2094<2064		4531<1052	2-WAY TO 31-WAY	*Call
2094<2064		4531<1053	3-WAY TO 31-WAY	*Call
2094<2064		4531<1054	4-WAY TO 31-WAY	*Call
2094<2064		4531<1055	5-WAY TO 31-WAY	*Call
2094<2064		4531<1056	6-WAY TO 31-WAY	*Call
2094<2064		4531<1057	7-WAY TO 31-WAY	*Call
2094<2064		4531<1058	8-WAY TO 31-WAY	*Call
2094<2064		4531<1059	9-WAY TO 31-WAY	*Call
2094<2064		4531<1061	1-WAY TO 31-WAY	*Call
2094<2064		4531<1062	2-WAY TO 31-WAY	*Call
2094<2064		4531<1063	3-WAY TO 31-WAY	*Call
2094<2064		4531<1064	4-WAY TO 31-WAY	*Call
2094<2064		4531<1065	5-WAY TO 31-WAY	*Call
2094<2064		4531<1066	6-WAY TO 31-WAY	*Call
2094<2064		4531<1067	7-WAY TO 31-WAY	*Call
2094<2064		4531<1068	8-WAY TO 31-WAY	*Call
2094<2064		4531<1069	9-WAY TO 31-WAY	*Call
2094<2064		4531<1070	10-WAY TO 31-WAY	*Call
2094<2064		4531<1071	11-WAY TO 31-WAY	*Call
2094<2064		4531<1072	12-WAY TO 31-WAY	*Call
2094<2064		4531<1073	13-WAY TO 31-WAY	*Call
2094<2064		4531<1074	14-WAY TO 31-WAY	*Call
2094<2064		4531<1075	15-WAY TO 31-WAY	*Call
2094<2064		4531<1076	16-WAY TO 31-WAY	*Call
2094<2064		4531<2061	1-WAY TO 31-WAY	*Call
2094<2064		4531<2062	2-WAY TO 31-WAY	*Call
2094<2064		4531<2063	3-WAY TO 31-WAY	*Call
2094<2064		4531<2064	4-WAY TO 31-WAY	*Call
2094<2064		4531<2065	5-WAY TO 31-WAY	*Call
2094<2064		4531<2066	6-WAY TO 31-WAY	*Call
2094<2064		4531<2067	7-WAY TO 31-WAY	*Call
2094<2064		4531<2068	8-WAY TO 31-WAY	*Call
2094<2064		4531<2069	9-WAY TO 31-WAY	*Call
2094<2064		4531<2070	10-WAY TO 31-WAY	*Call
2094<2064		4531<2071	11-WAY TO 31-WAY	*Call
2094<2064		4531<2072	12-WAY TO 31-WAY	*Call
2094<2064		4531<2073	13-WAY TO 31-WAY	*Call
2094<2064		4531<2074	14-WAY TO 31-WAY	*Call
2094<2064		4531<2075	15-WAY TO 31-WAY	*Call
2094<2064		4531<2076	16-WAY TO 31-WAY	*Call
2094<2064		4532<1051	1-WAY TO 32-WAY	*Call
2094<2064		4532<1052	2-WAY TO 32-WAY	*Call
2094<2064		4532<1053	3-WAY TO 32-WAY	*Call
2094<2064		4532<1054	4-WAY TO 32-WAY	*Call
2094<2064		4532<1055	5-WAY TO 32-WAY	*Call
2094<2064		4532<1056	6-WAY TO 32-WAY	*Call
2094<2064		4532<1057	7-WAY TO 32-WAY	*Call
2094<2064		4532<1058	8-WAY TO 32-WAY	*Call
2094<2064		4532<1059	9-WAY TO 32-WAY	*Call
2094<2064		4532<1061	1-WAY TO 32-WAY	*Call
2094<2064		4532<1062	2-WAY TO 32-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4532<1063	3-WAY TO 32-WAY	*Call
2094<2064		4532<1064	4-WAY TO 32-WAY	*Call
2094<2064		4532<1065	5-WAY TO 32-WAY	*Call
2094<2064		4532<1066	6-WAY TO 32-WAY	*Call
2094<2064		4532<1067	7-WAY TO 32-WAY	*Call
2094<2064		4532<1068	8-WAY TO 32-WAY	*Call
2094<2064		4532<1069	9-WAY TO 32-WAY	*Call
2094<2064		4532<1070	10-WAY TO 32-WAY	*Call
2094<2064		4532<1071	11-WAY TO 32-WAY	*Call
2094<2064		4532<1072	12-WAY TO 32-WAY	*Call
2094<2064		4532<1073	13-WAY TO 32-WAY	*Call
2094<2064		4532<1074	14-WAY TO 32-WAY	*Call
2094<2064		4532<1075	15-WAY TO 32-WAY	*Call
2094<2064		4532<1076	16-WAY TO 32-WAY	*Call
2094<2064		4532<2061	1-WAY TO 32-WAY	*Call
2094<2064		4532<2062	2-WAY TO 32-WAY	*Call
2094<2064		4532<2063	3-WAY TO 32-WAY	*Call
2094<2064		4532<2064	4-WAY TO 32-WAY	*Call
2094<2064		4532<2065	5-WAY TO 32-WAY	*Call
2094<2064		4532<2066	6-WAY TO 32-WAY	*Call
2094<2064		4532<2067	7-WAY TO 32-WAY	*Call
2094<2064		4532<2068	8-WAY TO 32-WAY	*Call
2094<2064		4532<2069	9-WAY TO 32-WAY	*Call
2094<2064		4532<2070	10-WAY TO 32-WAY	*Call
2094<2064		4532<2071	11-WAY TO 32-WAY	*Call
2094<2064		4532<2072	12-WAY TO 32-WAY	*Call
2094<2064		4532<2073	13-WAY TO 32-WAY	*Call
2094<2064		4532<2074	14-WAY TO 32-WAY	*Call
2094<2064		4532<2075	15-WAY TO 32-WAY	*Call
2094<2064		4532<2076	16-WAY TO 32-WAY	*Call
2094<2064		4533<1051	1-WAY TO 33-WAY	*Call
2094<2064		4533<1052	2-WAY TO 33-WAY	*Call
2094<2064		4533<1053	3-WAY TO 33-WAY	*Call
2094<2064		4533<1054	4-WAY TO 33-WAY	*Call
2094<2064		4533<1055	5-WAY TO 33-WAY	*Call
2094<2064		4533<1056	6-WAY TO 33-WAY	*Call
2094<2064		4533<1057	7-WAY TO 33-WAY	*Call
2094<2064		4533<1058	8-WAY TO 33-WAY	*Call
2094<2064		4533<1059	9-WAY TO 33-WAY	*Call
2094<2064		4533<1061	1-WAY TO 33-WAY	*Call
2094<2064		4533<1062	2-WAY TO 33-WAY	*Call
2094<2064		4533<1063	3-WAY TO 33-WAY	*Call
2094<2064		4533<1064	4-WAY TO 33-WAY	*Call
2094<2064		4533<1065	5-WAY TO 33-WAY	*Call
2094<2064		4533<1066	6-WAY TO 33-WAY	*Call
2094<2064		4533<1067	7-WAY TO 33-WAY	*Call
2094<2064		4533<1068	8-WAY TO 33-WAY	*Call
2094<2064		4533<1069	9-WAY TO 33-WAY	*Call
2094<2064		4533<1070	10-WAY TO 33-WAY	*Call
2094<2064		4533<1071	11-WAY TO 33-WAY	*Call
2094<2064		4533<1072	12-WAY TO 33-WAY	*Call
2094<2064		4533<1073	13-WAY TO 33-WAY	*Call
2094<2064		4533<1074	14-WAY TO 33-WAY	*Call
2094<2064		4533<1075	15-WAY TO 33-WAY	*Call
2094<2064		4533<1076	16-WAY TO 33-WAY	*Call
2094<2064		4533<2061	1-WAY TO 33-WAY	*Call
2094<2064		4533<2062	2-WAY TO 33-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4533<2063	3-WAY TO 33-WAY	*Call
2094<2064		4533<2064	4-WAY TO 33-WAY	*Call
2094<2064		4533<2065	5-WAY TO 33-WAY	*Call
2094<2064		4533<2066	6-WAY TO 33-WAY	*Call
2094<2064		4533<2067	7-WAY TO 33-WAY	*Call
2094<2064		4533<2068	8-WAY TO 33-WAY	*Call
2094<2064		4533<2069	9-WAY TO 33-WAY	*Call
2094<2064		4533<2070	10-WAY TO 33-WAY	*Call
2094<2064		4533<2071	11-WAY TO 33-WAY	*Call
2094<2064		4533<2072	12-WAY TO 33-WAY	*Call
2094<2064		4533<2073	13-WAY TO 33-WAY	*Call
2094<2064		4533<2074	14-WAY TO 33-WAY	*Call
2094<2064		4533<2075	15-WAY TO 33-WAY	*Call
2094<2064		4533<2076	16-WAY TO 33-WAY	*Call
2094<2064		4534<1051	1-WAY TO 34-WAY	*Call
2094<2064		4534<1052	2-WAY TO 34-WAY	*Call
2094<2064		4534<1053	3-WAY TO 34-WAY	*Call
2094<2064		4534<1054	4-WAY TO 34-WAY	*Call
2094<2064		4534<1055	5-WAY TO 34-WAY	*Call
2094<2064		4534<1056	6-WAY TO 34-WAY	*Call
2094<2064		4534<1057	7-WAY TO 34-WAY	*Call
2094<2064		4534<1058	8-WAY TO 34-WAY	*Call
2094<2064		4534<1059	9-WAY TO 34-WAY	*Call
2094<2064		4534<1061	1-WAY TO 34-WAY	*Call
2094<2064		4534<1062	2-WAY TO 34-WAY	*Call
2094<2064		4534<1063	3-WAY TO 34-WAY	*Call
2094<2064		4534<1064	4-WAY TO 34-WAY	*Call
2094<2064		4534<1065	5-WAY TO 34-WAY	*Call
2094<2064		4534<1066	6-WAY TO 34-WAY	*Call
2094<2064		4534<1067	7-WAY TO 34-WAY	*Call
2094<2064		4534<1068	8-WAY TO 34-WAY	*Call
2094<2064		4534<1069	9-WAY TO 34-WAY	*Call
2094<2064		4534<1070	10-WAY TO 34-WAY	*Call
2094<2064		4534<1071	11-WAY TO 34-WAY	*Call
2094<2064		4534<1072	12-WAY TO 34-WAY	*Call
2094<2064		4534<1073	13-WAY TO 34-WAY	*Call
2094<2064		4534<1074	14-WAY TO 34-WAY	*Call
2094<2064		4534<1075	15-WAY TO 34-WAY	*Call
2094<2064		4534<1076	16-WAY TO 34-WAY	*Call
2094<2064		4534<2061	1-WAY TO 34-WAY	*Call
2094<2064		4534<2062	2-WAY TO 34-WAY	*Call
2094<2064		4534<2063	3-WAY TO 34-WAY	*Call
2094<2064		4534<2064	4-WAY TO 34-WAY	*Call
2094<2064		4534<2065	5-WAY TO 34-WAY	*Call
2094<2064		4534<2066	6-WAY TO 34-WAY	*Call
2094<2064		4534<2067	7-WAY TO 34-WAY	*Call
2094<2064		4534<2068	8-WAY TO 34-WAY	*Call
2094<2064		4534<2069	9-WAY TO 34-WAY	*Call
2094<2064		4534<2070	10-WAY TO 34-WAY	*Call
2094<2064		4534<2071	11-WAY TO 34-WAY	*Call
2094<2064		4534<2072	12-WAY TO 34-WAY	*Call
2094<2064		4534<2073	13-WAY TO 34-WAY	*Call
2094<2064		4534<2074	14-WAY TO 34-WAY	*Call
2094<2064		4534<2075	15-WAY TO 34-WAY	*Call
2094<2064		4534<2076	16-WAY TO 34-WAY	*Call
2094<2064		4535<1051	1-WAY TO 35-WAY	*Call
2094<2064		4535<1052	2-WAY TO 35-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4535<1053	3-WAY TO 35-WAY	*Call
2094<2064		4535<1054	4-WAY TO 35-WAY	*Call
2094<2064		4535<1055	5-WAY TO 35-WAY	*Call
2094<2064		4535<1056	6-WAY TO 35-WAY	*Call
2094<2064		4535<1057	7-WAY TO 35-WAY	*Call
2094<2064		4535<1058	8-WAY TO 35-WAY	*Call
2094<2064		4535<1059	9-WAY TO 35-WAY	*Call
2094<2064		4535<1061	1-WAY TO 35-WAY	*Call
2094<2064		4535<1062	2-WAY TO 35-WAY	*Call
2094<2064		4535<1063	3-WAY TO 35-WAY	*Call
2094<2064		4535<1064	4-WAY TO 35-WAY	*Call
2094<2064		4535<1065	5-WAY TO 35-WAY	*Call
2094<2064		4535<1066	6-WAY TO 35-WAY	*Call
2094<2064		4535<1067	7-WAY TO 35-WAY	*Call
2094<2064		4535<1068	8-WAY TO 35-WAY	*Call
2094<2064		4535<1069	9-WAY TO 35-WAY	*Call
2094<2064		4535<1070	10-WAY TO 35-WAY	*Call
2094<2064		4535<1071	11-WAY TO 35-WAY	*Call
2094<2064		4535<1072	12-WAY TO 35-WAY	*Call
2094<2064		4535<1073	13-WAY TO 35-WAY	*Call
2094<2064		4535<1074	14-WAY TO 35-WAY	*Call
2094<2064		4535<1075	15-WAY TO 35-WAY	*Call
2094<2064		4535<1076	16-WAY TO 35-WAY	*Call
2094<2064		4535<2061	1-WAY TO 35-WAY	*Call
2094<2064		4535<2062	2-WAY TO 35-WAY	*Call
2094<2064		4535<2063	3-WAY TO 35-WAY	*Call
2094<2064		4535<2064	4-WAY TO 35-WAY	*Call
2094<2064		4535<2065	5-WAY TO 35-WAY	*Call
2094<2064		4535<2066	6-WAY TO 35-WAY	*Call
2094<2064		4535<2067	7-WAY TO 35-WAY	*Call
2094<2064		4535<2068	8-WAY TO 35-WAY	*Call
2094<2064		4535<2069	9-WAY TO 35-WAY	*Call
2094<2064		4535<2070	10-WAY TO 35-WAY	*Call
2094<2064		4535<2071	11-WAY TO 35-WAY	*Call
2094<2064		4535<2072	12-WAY TO 35-WAY	*Call
2094<2064		4535<2073	13-WAY TO 35-WAY	*Call
2094<2064		4535<2074	14-WAY TO 35-WAY	*Call
2094<2064		4535<2075	15-WAY TO 35-WAY	*Call
2094<2064		4535<2076	16-WAY TO 35-WAY	*Call
2094<2064		4536<1051	1-WAY TO 36-WAY	*Call
2094<2064		4536<1052	2-WAY TO 36-WAY	*Call
2094<2064		4536<1053	3-WAY TO 36-WAY	*Call
2094<2064		4536<1054	4-WAY TO 36-WAY	*Call
2094<2064		4536<1055	5-WAY TO 36-WAY	*Call
2094<2064		4536<1056	6-WAY TO 36-WAY	*Call
2094<2064		4536<1057	7-WAY TO 36-WAY	*Call
2094<2064		4536<1058	8-WAY TO 36-WAY	*Call
2094<2064		4536<1059	9-WAY TO 36-WAY	*Call
2094<2064		4536<1061	1-WAY TO 36-WAY	*Call
2094<2064		4536<1062	2-WAY TO 36-WAY	*Call
2094<2064		4536<1063	3-WAY TO 36-WAY	*Call
2094<2064		4536<1064	4-WAY TO 36-WAY	*Call
2094<2064		4536<1065	5-WAY TO 36-WAY	*Call
2094<2064		4536<1066	6-WAY TO 36-WAY	*Call
2094<2064		4536<1067	7-WAY TO 36-WAY	*Call
2094<2064		4536<1068	8-WAY TO 36-WAY	*Call
2094<2064		4536<1069	9-WAY TO 36-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4536<1070	10-WAY TO 36-WAY	*Call
2094<2064		4536<1071	11-WAY TO 36-WAY	*Call
2094<2064		4536<1072	12-WAY TO 36-WAY	*Call
2094<2064		4536<1073	13-WAY TO 36-WAY	*Call
2094<2064		4536<1074	14-WAY TO 36-WAY	*Call
2094<2064		4536<1075	15-WAY TO 36-WAY	*Call
2094<2064		4536<1076	16-WAY TO 36-WAY	*Call
2094<2064		4536<2061	1-WAY TO 36-WAY	*Call
2094<2064		4536<2062	2-WAY TO 36-WAY	*Call
2094<2064		4536<2063	3-WAY TO 36-WAY	*Call
2094<2064		4536<2064	4-WAY TO 36-WAY	*Call
2094<2064		4536<2065	5-WAY TO 36-WAY	*Call
2094<2064		4536<2066	6-WAY TO 36-WAY	*Call
2094<2064		4536<2067	7-WAY TO 36-WAY	*Call
2094<2064		4536<2068	8-WAY TO 36-WAY	*Call
2094<2064		4536<2069	9-WAY TO 36-WAY	*Call
2094<2064		4536<2070	10-WAY TO 36-WAY	*Call
2094<2064		4536<2071	11-WAY TO 36-WAY	*Call
2094<2064		4536<2072	12-WAY TO 36-WAY	*Call
2094<2064		4536<2073	13-WAY TO 36-WAY	*Call
2094<2064		4536<2074	14-WAY TO 36-WAY	*Call
2094<2064		4536<2075	15-WAY TO 36-WAY	*Call
2094<2064		4536<2076	16-WAY TO 36-WAY	*Call
2094<2064		4537<1051	1-WAY TO 37-WAY	*Call
2094<2064		4537<1052	2-WAY TO 37-WAY	*Call
2094<2064		4537<1053	3-WAY TO 37-WAY	*Call
2094<2064		4537<1054	4-WAY TO 37-WAY	*Call
2094<2064		4537<1055	5-WAY TO 37-WAY	*Call
2094<2064		4537<1056	6-WAY TO 37-WAY	*Call
2094<2064		4537<1057	7-WAY TO 37-WAY	*Call
2094<2064		4537<1058	8-WAY TO 37-WAY	*Call
2094<2064		4537<1059	9-WAY TO 37-WAY	*Call
2094<2064		4537<1061	1-WAY TO 37-WAY	*Call
2094<2064		4537<1062	2-WAY TO 37-WAY	*Call
2094<2064		4537<1063	3-WAY TO 37-WAY	*Call
2094<2064		4537<1064	4-WAY TO 37-WAY	*Call
2094<2064		4537<1065	5-WAY TO 37-WAY	*Call
2094<2064		4537<1066	6-WAY TO 37-WAY	*Call
2094<2064		4537<1067	7-WAY TO 37-WAY	*Call
2094<2064		4537<1068	8-WAY TO 37-WAY	*Call
2094<2064		4537<1069	9-WAY TO 37-WAY	*Call
2094<2064		4537<1070	10-WAY TO 37-WAY	*Call
2094<2064		4537<1071	11-WAY TO 37-WAY	*Call
2094<2064		4537<1072	12-WAY TO 37-WAY	*Call
2094<2064		4537<1073	13-WAY TO 37-WAY	*Call
2094<2064		4537<1074	14-WAY TO 37-WAY	*Call
2094<2064		4537<1075	15-WAY TO 37-WAY	*Call
2094<2064		4537<1076	16-WAY TO 37-WAY	*Call
2094<2064		4537<2061	1-WAY TO 37-WAY	*Call
2094<2064		4537<2062	2-WAY TO 37-WAY	*Call
2094<2064		4537<2063	3-WAY TO 37-WAY	*Call
2094<2064		4537<2064	4-WAY TO 37-WAY	*Call
2094<2064		4537<2065	5-WAY TO 37-WAY	*Call
2094<2064		4537<2066	6-WAY TO 37-WAY	*Call
2094<2064		4537<2067	7-WAY TO 37-WAY	*Call
2094<2064		4537<2068	8-WAY TO 37-WAY	*Call
2094<2064		4537<2069	9-WAY TO 37-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4537<2070	10-WAY TO 37-WAY	*Call
2094<2064		4537<2071	11-WAY TO 37-WAY	*Call
2094<2064		4537<2072	12-WAY TO 37-WAY	*Call
2094<2064		4537<2073	13-WAY TO 37-WAY	*Call
2094<2064		4537<2074	14-WAY TO 37-WAY	*Call
2094<2064		4537<2075	15-WAY TO 37-WAY	*Call
2094<2064		4537<2076	16-WAY TO 37-WAY	*Call
2094<2064		4538<1051	1-WAY TO 38-WAY	*Call
2094<2064		4538<1052	2-WAY TO 38-WAY	*Call
2094<2064		4538<1053	3-WAY TO 38-WAY	*Call
2094<2064		4538<1054	4-WAY TO 38-WAY	*Call
2094<2064		4538<1055	5-WAY TO 38-WAY	*Call
2094<2064		4538<1056	6-WAY TO 38-WAY	*Call
2094<2064		4538<1057	7-WAY TO 38-WAY	*Call
2094<2064		4538<1058	8-WAY TO 38-WAY	*Call
2094<2064		4538<1059	9-WAY TO 38-WAY	*Call
2094<2064		4538<1061	1-WAY TO 38-WAY	*Call
2094<2064		4538<1062	2-WAY TO 38-WAY	*Call
2094<2064		4538<1063	3-WAY TO 38-WAY	*Call
2094<2064		4538<1064	4-WAY TO 38-WAY	*Call
2094<2064		4538<1065	5-WAY TO 38-WAY	*Call
2094<2064		4538<1066	6-WAY TO 38-WAY	*Call
2094<2064		4538<1067	7-WAY TO 38-WAY	*Call
2094<2064		4538<1068	8-WAY TO 38-WAY	*Call
2094<2064		4538<1069	9-WAY TO 38-WAY	*Call
2094<2064		4538<1070	10-WAY TO 38-WAY	*Call
2094<2064		4538<1071	11-WAY TO 38-WAY	*Call
2094<2064		4538<1072	12-WAY TO 38-WAY	*Call
2094<2064		4538<1073	13-WAY TO 38-WAY	*Call
2094<2064		4538<1074	14-WAY TO 38-WAY	*Call
2094<2064		4538<1075	15-WAY TO 38-WAY	*Call
2094<2064		4538<1076	16-WAY TO 38-WAY	*Call
2094<2064		4538<2061	1-WAY TO 38-WAY	*Call
2094<2064		4538<2062	2-WAY TO 38-WAY	*Call
2094<2064		4538<2063	3-WAY TO 38-WAY	*Call
2094<2064		4538<2064	4-WAY TO 38-WAY	*Call
2094<2064		4538<2065	5-WAY TO 38-WAY	*Call
2094<2064		4538<2066	6-WAY TO 38-WAY	*Call
2094<2064		4538<2067	7-WAY TO 38-WAY	*Call
2094<2064		4538<2068	8-WAY TO 38-WAY	*Call
2094<2064		4538<2069	9-WAY TO 38-WAY	*Call
2094<2064		4538<2070	10-WAY TO 38-WAY	*Call
2094<2064		4538<2071	11-WAY TO 38-WAY	*Call
2094<2064		4538<2072	12-WAY TO 38-WAY	*Call
2094<2064		4538<2073	13-WAY TO 38-WAY	*Call
2094<2064		4538<2074	14-WAY TO 38-WAY	*Call
2094<2064		4538<2075	15-WAY TO 38-WAY	*Call
2094<2064		4538<2076	16-WAY TO 38-WAY	*Call
2094<2064		4539<1051	1-WAY TO 39-WAY	*Call
2094<2064		4539<1052	2-WAY TO 39-WAY	*Call
2094<2064		4539<1053	3-WAY TO 39-WAY	*Call
2094<2064		4539<1054	4-WAY TO 39-WAY	*Call
2094<2064		4539<1055	5-WAY TO 39-WAY	*Call
2094<2064		4539<1056	6-WAY TO 39-WAY	*Call
2094<2064		4539<1057	7-WAY TO 39-WAY	*Call
2094<2064		4539<1058	8-WAY TO 39-WAY	*Call
2094<2064		4539<1059	9-WAY TO 39-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4539<1061	1-WAY TO 39-WAY	*Call
2094<2064		4539<1062	2-WAY TO 39-WAY	*Call
2094<2064		4539<1063	3-WAY TO 39-WAY	*Call
2094<2064		4539<1064	4-WAY TO 39-WAY	*Call
2094<2064		4539<1065	5-WAY TO 39-WAY	*Call
2094<2064		4539<1066	6-WAY TO 39-WAY	*Call
2094<2064		4539<1067	7-WAY TO 39-WAY	*Call
2094<2064		4539<1068	8-WAY TO 39-WAY	*Call
2094<2064		4539<1069	9-WAY TO 39-WAY	*Call
2094<2064		4539<1070	10-WAY TO 39-WAY	*Call
2094<2064		4539<1071	11-WAY TO 39-WAY	*Call
2094<2064		4539<1072	12-WAY TO 39-WAY	*Call
2094<2064		4539<1073	13-WAY TO 39-WAY	*Call
2094<2064		4539<1074	14-WAY TO 39-WAY	*Call
2094<2064		4539<1075	15-WAY TO 39-WAY	*Call
2094<2064		4539<1076	16-WAY TO 39-WAY	*Call
2094<2064		4539<2061	1-WAY TO 39-WAY	*Call
2094<2064		4539<2062	2-WAY TO 39-WAY	*Call
2094<2064		4539<2063	3-WAY TO 39-WAY	*Call
2094<2064		4539<2064	4-WAY TO 39-WAY	*Call
2094<2064		4539<2065	5-WAY TO 39-WAY	*Call
2094<2064		4539<2066	6-WAY TO 39-WAY	*Call
2094<2064		4539<2067	7-WAY TO 39-WAY	*Call
2094<2064		4539<2068	8-WAY TO 39-WAY	*Call
2094<2064		4539<2069	9-WAY TO 39-WAY	*Call
2094<2064		4539<2070	10-WAY TO 39-WAY	*Call
2094<2064		4539<2071	11-WAY TO 39-WAY	*Call
2094<2064		4539<2072	12-WAY TO 39-WAY	*Call
2094<2064		4539<2073	13-WAY TO 39-WAY	*Call
2094<2064		4539<2074	14-WAY TO 39-WAY	*Call
2094<2064		4539<2075	15-WAY TO 39-WAY	*Call
2094<2064		4539<2076	16-WAY TO 39-WAY	*Call
2094<2064		4540<1051	1-WAY TO 40-WAY	*Call
2094<2064		4540<1052	2-WAY TO 40-WAY	*Call
2094<2064		4540<1053	3-WAY TO 40-WAY	*Call
2094<2064		4540<1054	4-WAY TO 40-WAY	*Call
2094<2064		4540<1055	5-WAY TO 40-WAY	*Call
2094<2064		4540<1056	6-WAY TO 40-WAY	*Call
2094<2064		4540<1057	7-WAY TO 40-WAY	*Call
2094<2064		4540<1058	8-WAY TO 40-WAY	*Call
2094<2064		4540<1059	9-WAY TO 40-WAY	*Call
2094<2064		4540<1061	1-WAY TO 40-WAY	*Call
2094<2064		4540<1062	2-WAY TO 40-WAY	*Call
2094<2064		4540<1063	3-WAY TO 40-WAY	*Call
2094<2064		4540<1064	4-WAY TO 40-WAY	*Call
2094<2064		4540<1065	5-WAY TO 40-WAY	*Call
2094<2064		4540<1066	6-WAY TO 40-WAY	*Call
2094<2064		4540<1067	7-WAY TO 40-WAY	*Call
2094<2064		4540<1068	8-WAY TO 40-WAY	*Call
2094<2064		4540<1069	9-WAY TO 40-WAY	*Call
2094<2064		4540<1070	10-WAY TO 40-WAY	*Call
2094<2064		4540<1071	11-WAY TO 40-WAY	*Call
2094<2064		4540<1072	12-WAY TO 40-WAY	*Call
2094<2064		4540<1073	13-WAY TO 40-WAY	*Call
2094<2064		4540<1074	14-WAY TO 40-WAY	*Call
2094<2064		4540<1075	15-WAY TO 40-WAY	*Call
2094<2064		4540<1076	16-WAY TO 40-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4540<2061	1-WAY TO 40-WAY	*Call
2094<2064		4540<2062	2-WAY TO 40-WAY	*Call
2094<2064		4540<2063	3-WAY TO 40-WAY	*Call
2094<2064		4540<2064	4-WAY TO 40-WAY	*Call
2094<2064		4540<2065	5-WAY TO 40-WAY	*Call
2094<2064		4540<2066	6-WAY TO 40-WAY	*Call
2094<2064		4540<2067	7-WAY TO 40-WAY	*Call
2094<2064		4540<2068	8-WAY TO 40-WAY	*Call
2094<2064		4540<2069	9-WAY TO 40-WAY	*Call
2094<2064		4540<2070	10-WAY TO 40-WAY	*Call
2094<2064		4540<2071	11-WAY TO 40-WAY	*Call
2094<2064		4540<2072	12-WAY TO 40-WAY	*Call
2094<2064		4540<2073	13-WAY TO 40-WAY	*Call
2094<2064		4540<2074	14-WAY TO 40-WAY	*Call
2094<2064		4540<2075	15-WAY TO 40-WAY	*Call
2094<2064		4540<2076	16-WAY TO 40-WAY	*Call
2094<2064		4541<1051	1-WAY TO 41-WAY	*Call
2094<2064		4541<1052	2-WAY TO 41-WAY	*Call
2094<2064		4541<1053	3-WAY TO 41-WAY	*Call
2094<2064		4541<1054	4-WAY TO 41-WAY	*Call
2094<2064		4541<1055	5-WAY TO 41-WAY	*Call
2094<2064		4541<1056	6-WAY TO 41-WAY	*Call
2094<2064		4541<1057	7-WAY TO 41-WAY	*Call
2094<2064		4541<1058	8-WAY TO 41-WAY	*Call
2094<2064		4541<1059	9-WAY TO 41-WAY	*Call
2094<2064		4541<1061	1-WAY TO 41-WAY	*Call
2094<2064		4541<1062	2-WAY TO 41-WAY	*Call
2094<2064		4541<1063	3-WAY TO 41-WAY	*Call
2094<2064		4541<1064	4-WAY TO 41-WAY	*Call
2094<2064		4541<1065	5-WAY TO 41-WAY	*Call
2094<2064		4541<1066	6-WAY TO 41-WAY	*Call
2094<2064		4541<1067	7-WAY TO 41-WAY	*Call
2094<2064		4541<1068	8-WAY TO 41-WAY	*Call
2094<2064		4541<1069	9-WAY TO 41-WAY	*Call
2094<2064		4541<1070	10-WAY TO 41-WAY	*Call
2094<2064		4541<1071	11-WAY TO 41-WAY	*Call
2094<2064		4541<1072	12-WAY TO 41-WAY	*Call
2094<2064		4541<1073	13-WAY TO 41-WAY	*Call
2094<2064		4541<1074	14-WAY TO 41-WAY	*Call
2094<2064		4541<1075	15-WAY TO 41-WAY	*Call
2094<2064		4541<1076	16-WAY TO 41-WAY	*Call
2094<2064		4541<2061	1-WAY TO 41-WAY	*Call
2094<2064		4541<2062	2-WAY TO 41-WAY	*Call
2094<2064		4541<2063	3-WAY TO 41-WAY	*Call
2094<2064		4541<2064	4-WAY TO 41-WAY	*Call
2094<2064		4541<2065	5-WAY TO 41-WAY	*Call
2094<2064		4541<2066	6-WAY TO 41-WAY	*Call
2094<2064		4541<2067	7-WAY TO 41-WAY	*Call
2094<2064		4541<2068	8-WAY TO 41-WAY	*Call
2094<2064		4541<2069	9-WAY TO 41-WAY	*Call
2094<2064		4541<2070	10-WAY TO 41-WAY	*Call
2094<2064		4541<2071	11-WAY TO 41-WAY	*Call
2094<2064		4541<2072	12-WAY TO 41-WAY	*Call
2094<2064		4541<2073	13-WAY TO 41-WAY	*Call
2094<2064		4541<2074	14-WAY TO 41-WAY	*Call
2094<2064		4541<2075	15-WAY TO 41-WAY	*Call
2094<2064		4541<2076	16-WAY TO 41-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4542<1051	1-WAY TO 42-WAY	*Call
2094<2064		4542<1052	2-WAY TO 42-WAY	*Call
2094<2064		4542<1053	3-WAY TO 42-WAY	*Call
2094<2064		4542<1054	4-WAY TO 42-WAY	*Call
2094<2064		4542<1055	5-WAY TO 42-WAY	*Call
2094<2064		4542<1056	6-WAY TO 42-WAY	*Call
2094<2064		4542<1057	7-WAY TO 42-WAY	*Call
2094<2064		4542<1058	8-WAY TO 42-WAY	*Call
2094<2064		4542<1059	9-WAY TO 42-WAY	*Call
2094<2064		4542<1061	1-WAY TO 42-WAY	*Call
2094<2064		4542<1062	2-WAY TO 42-WAY	*Call
2094<2064		4542<1063	3-WAY TO 42-WAY	*Call
2094<2064		4542<1064	4-WAY TO 42-WAY	*Call
2094<2064		4542<1065	5-WAY TO 42-WAY	*Call
2094<2064		4542<1066	6-WAY TO 42-WAY	*Call
2094<2064		4542<1067	7-WAY TO 42-WAY	*Call
2094<2064		4542<1068	8-WAY TO 42-WAY	*Call
2094<2064		4542<1069	9-WAY TO 42-WAY	*Call
2094<2064		4542<1070	10-WAY TO 42-WAY	*Call
2094<2064		4542<1071	11-WAY TO 42-WAY	*Call
2094<2064		4542<1072	12-WAY TO 42-WAY	*Call
2094<2064		4542<1073	13-WAY TO 42-WAY	*Call
2094<2064		4542<1074	14-WAY TO 42-WAY	*Call
2094<2064		4542<1075	15-WAY TO 42-WAY	*Call
2094<2064		4542<1076	16-WAY TO 42-WAY	*Call
2094<2064		4542<2061	1-WAY TO 42-WAY	*Call
2094<2064		4542<2062	2-WAY TO 42-WAY	*Call
2094<2064		4542<2063	3-WAY TO 42-WAY	*Call
2094<2064		4542<2064	4-WAY TO 42-WAY	*Call
2094<2064		4542<2065	5-WAY TO 42-WAY	*Call
2094<2064		4542<2066	6-WAY TO 42-WAY	*Call
2094<2064		4542<2067	7-WAY TO 42-WAY	*Call
2094<2064		4542<2068	8-WAY TO 42-WAY	*Call
2094<2064		4542<2069	9-WAY TO 42-WAY	*Call
2094<2064		4542<2070	10-WAY TO 42-WAY	*Call
2094<2064		4542<2071	11-WAY TO 42-WAY	*Call
2094<2064		4542<2072	12-WAY TO 42-WAY	*Call
2094<2064		4542<2073	13-WAY TO 42-WAY	*Call
2094<2064		4542<2074	14-WAY TO 42-WAY	*Call
2094<2064		4542<2075	15-WAY TO 42-WAY	*Call
2094<2064		4542<2076	16-WAY TO 42-WAY	*Call
2094<2064		4543<1051	1-WAY TO 43-WAY	*Call
2094<2064		4543<1052	2-WAY TO 43-WAY	*Call
2094<2064		4543<1053	3-WAY TO 43-WAY	*Call
2094<2064		4543<1054	4-WAY TO 43-WAY	*Call
2094<2064		4543<1055	5-WAY TO 43-WAY	*Call
2094<2064		4543<1056	6-WAY TO 43-WAY	*Call
2094<2064		4543<1057	7-WAY TO 43-WAY	*Call
2094<2064		4543<1058	8-WAY TO 43-WAY	*Call
2094<2064		4543<1059	9-WAY TO 43-WAY	*Call
2094<2064		4543<1061	1-WAY TO 43-WAY	*Call
2094<2064		4543<1062	2-WAY TO 43-WAY	*Call
2094<2064		4543<1063	3-WAY TO 43-WAY	*Call
2094<2064		4543<1064	4-WAY TO 43-WAY	*Call
2094<2064		4543<1065	5-WAY TO 43-WAY	*Call
2094<2064		4543<1066	6-WAY TO 43-WAY	*Call
2094<2064		4543<1067	7-WAY TO 43-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4543<1068	8-WAY TO 43-WAY	*Call
2094<2064		4543<1069	9-WAY TO 43-WAY	*Call
2094<2064		4543<1070	10-WAY TO 43-WAY	*Call
2094<2064		4543<1071	11-WAY TO 43-WAY	*Call
2094<2064		4543<1072	12-WAY TO 43-WAY	*Call
2094<2064		4543<1073	13-WAY TO 43-WAY	*Call
2094<2064		4543<1074	14-WAY TO 43-WAY	*Call
2094<2064		4543<1075	15-WAY TO 43-WAY	*Call
2094<2064		4543<1076	16-WAY TO 43-WAY	*Call
2094<2064		4543<2061	1-WAY TO 43-WAY	*Call
2094<2064		4543<2062	2-WAY TO 43-WAY	*Call
2094<2064		4543<2063	3-WAY TO 43-WAY	*Call
2094<2064		4543<2064	4-WAY TO 43-WAY	*Call
2094<2064		4543<2065	5-WAY TO 43-WAY	*Call
2094<2064		4543<2066	6-WAY TO 43-WAY	*Call
2094<2064		4543<2067	7-WAY TO 43-WAY	*Call
2094<2064		4543<2068	8-WAY TO 43-WAY	*Call
2094<2064		4543<2069	9-WAY TO 43-WAY	*Call
2094<2064		4543<2070	10-WAY TO 43-WAY	*Call
2094<2064		4543<2071	11-WAY TO 43-WAY	*Call
2094<2064		4543<2072	12-WAY TO 43-WAY	*Call
2094<2064		4543<2073	13-WAY TO 43-WAY	*Call
2094<2064		4543<2074	14-WAY TO 43-WAY	*Call
2094<2064		4543<2075	15-WAY TO 43-WAY	*Call
2094<2064		4543<2076	16-WAY TO 43-WAY	*Call
2094<2064		4544<1051	1-WAY TO 44-WAY	*Call
2094<2064		4544<1052	2-WAY TO 44-WAY	*Call
2094<2064		4544<1053	3-WAY TO 44-WAY	*Call
2094<2064		4544<1054	4-WAY TO 44-WAY	*Call
2094<2064		4544<1055	5-WAY TO 44-WAY	*Call
2094<2064		4544<1056	6-WAY TO 44-WAY	*Call
2094<2064		4544<1057	7-WAY TO 44-WAY	*Call
2094<2064		4544<1058	8-WAY TO 44-WAY	*Call
2094<2064		4544<1059	9-WAY TO 44-WAY	*Call
2094<2064		4544<1061	1-WAY TO 44-WAY	*Call
2094<2064		4544<1062	2-WAY TO 44-WAY	*Call
2094<2064		4544<1063	3-WAY TO 44-WAY	*Call
2094<2064		4544<1064	4-WAY TO 44-WAY	*Call
2094<2064		4544<1065	5-WAY TO 44-WAY	*Call
2094<2064		4544<1066	6-WAY TO 44-WAY	*Call
2094<2064		4544<1067	7-WAY TO 44-WAY	*Call
2094<2064		4544<1068	8-WAY TO 44-WAY	*Call
2094<2064		4544<1069	9-WAY TO 44-WAY	*Call
2094<2064		4544<1070	10-WAY TO 44-WAY	*Call
2094<2064		4544<1071	11-WAY TO 44-WAY	*Call
2094<2064		4544<1072	12-WAY TO 44-WAY	*Call
2094<2064		4544<1073	13-WAY TO 44-WAY	*Call
2094<2064		4544<1074	14-WAY TO 44-WAY	*Call
2094<2064		4544<1075	15-WAY TO 44-WAY	*Call
2094<2064		4544<1076	16-WAY TO 44-WAY	*Call
2094<2064		4544<2061	1-WAY TO 44-WAY	*Call
2094<2064		4544<2062	2-WAY TO 44-WAY	*Call
2094<2064		4544<2063	3-WAY TO 44-WAY	*Call
2094<2064		4544<2064	4-WAY TO 44-WAY	*Call
2094<2064		4544<2065	5-WAY TO 44-WAY	*Call
2094<2064		4544<2066	6-WAY TO 44-WAY	*Call
2094<2064		4544<2067	7-WAY TO 44-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4544<2068	8-WAY TO 44-WAY	*Call
2094<2064		4544<2069	9-WAY TO 44-WAY	*Call
2094<2064		4544<2070	10-WAY TO 44-WAY	*Call
2094<2064		4544<2071	11-WAY TO 44-WAY	*Call
2094<2064		4544<2072	12-WAY TO 44-WAY	*Call
2094<2064		4544<2073	13-WAY TO 44-WAY	*Call
2094<2064		4544<2074	14-WAY TO 44-WAY	*Call
2094<2064		4544<2075	15-WAY TO 44-WAY	*Call
2094<2064		4544<2076	16-WAY TO 44-WAY	*Call
2094<2064		4545<1051	1-WAY TO 45-WAY	*Call
2094<2064		4545<1052	2-WAY TO 45-WAY	*Call
2094<2064		4545<1053	3-WAY TO 45-WAY	*Call
2094<2064		4545<1054	4-WAY TO 45-WAY	*Call
2094<2064		4545<1055	5-WAY TO 45-WAY	*Call
2094<2064		4545<1056	6-WAY TO 45-WAY	*Call
2094<2064		4545<1057	7-WAY TO 45-WAY	*Call
2094<2064		4545<1058	8-WAY TO 45-WAY	*Call
2094<2064		4545<1059	9-WAY TO 45-WAY	*Call
2094<2064		4545<1061	1-WAY TO 45-WAY	*Call
2094<2064		4545<1062	2-WAY TO 45-WAY	*Call
2094<2064		4545<1063	3-WAY TO 45-WAY	*Call
2094<2064		4545<1064	4-WAY TO 45-WAY	*Call
2094<2064		4545<1065	5-WAY TO 45-WAY	*Call
2094<2064		4545<1066	6-WAY TO 45-WAY	*Call
2094<2064		4545<1067	7-WAY TO 45-WAY	*Call
2094<2064		4545<1068	8-WAY TO 45-WAY	*Call
2094<2064		4545<1069	9-WAY TO 45-WAY	*Call
2094<2064		4545<1070	10-WAY TO 45-WAY	*Call
2094<2064		4545<1071	11-WAY TO 45-WAY	*Call
2094<2064		4545<1072	12-WAY TO 45-WAY	*Call
2094<2064		4545<1073	13-WAY TO 45-WAY	*Call
2094<2064		4545<1074	14-WAY TO 45-WAY	*Call
2094<2064		4545<1075	15-WAY TO 45-WAY	*Call
2094<2064		4545<1076	16-WAY TO 45-WAY	*Call
2094<2064		4545<2061	1-WAY TO 45-WAY	*Call
2094<2064		4545<2062	2-WAY TO 45-WAY	*Call
2094<2064		4545<2063	3-WAY TO 45-WAY	*Call
2094<2064		4545<2064	4-WAY TO 45-WAY	*Call
2094<2064		4545<2065	5-WAY TO 45-WAY	*Call
2094<2064		4545<2066	6-WAY TO 45-WAY	*Call
2094<2064		4545<2067	7-WAY TO 45-WAY	*Call
2094<2064		4545<2068	8-WAY TO 45-WAY	*Call
2094<2064		4545<2069	9-WAY TO 45-WAY	*Call
2094<2064		4545<2070	10-WAY TO 45-WAY	*Call
2094<2064		4545<2071	11-WAY TO 45-WAY	*Call
2094<2064		4545<2072	12-WAY TO 45-WAY	*Call
2094<2064		4545<2073	13-WAY TO 45-WAY	*Call
2094<2064		4545<2074	14-WAY TO 45-WAY	*Call
2094<2064		4545<2075	15-WAY TO 45-WAY	*Call
2094<2064		4545<2076	16-WAY TO 45-WAY	*Call
2094<2064		4546<1051	1-WAY TO 46-WAY	*Call
2094<2064		4546<1052	2-WAY TO 46-WAY	*Call
2094<2064		4546<1053	3-WAY TO 46-WAY	*Call
2094<2064		4546<1054	4-WAY TO 46-WAY	*Call
2094<2064		4546<1055	5-WAY TO 46-WAY	*Call
2094<2064		4546<1056	6-WAY TO 46-WAY	*Call
2094<2064		4546<1057	7-WAY TO 46-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4546<1058	8-WAY TO 46-WAY	*Call
2094<2064		4546<1059	9-WAY TO 46-WAY	*Call
2094<2064		4546<1061	1-WAY TO 46-WAY	*Call
2094<2064		4546<1062	2-WAY TO 46-WAY	*Call
2094<2064		4546<1063	3-WAY TO 46-WAY	*Call
2094<2064		4546<1064	4-WAY TO 46-WAY	*Call
2094<2064		4546<1065	5-WAY TO 46-WAY	*Call
2094<2064		4546<1066	6-WAY TO 46-WAY	*Call
2094<2064		4546<1067	7-WAY TO 46-WAY	*Call
2094<2064		4546<1068	8-WAY TO 46-WAY	*Call
2094<2064		4546<1069	9-WAY TO 46-WAY	*Call
2094<2064		4546<1070	10-WAY TO 46-WAY	*Call
2094<2064		4546<1071	11-WAY TO 46-WAY	*Call
2094<2064		4546<1072	12-WAY TO 46-WAY	*Call
2094<2064		4546<1073	13-WAY TO 46-WAY	*Call
2094<2064		4546<1074	14-WAY TO 46-WAY	*Call
2094<2064		4546<1075	15-WAY TO 46-WAY	*Call
2094<2064		4546<1076	16-WAY TO 46-WAY	*Call
2094<2064		4546<2061	1-WAY TO 46-WAY	*Call
2094<2064		4546<2062	2-WAY TO 46-WAY	*Call
2094<2064		4546<2063	3-WAY TO 46-WAY	*Call
2094<2064		4546<2064	4-WAY TO 46-WAY	*Call
2094<2064		4546<2065	5-WAY TO 46-WAY	*Call
2094<2064		4546<2066	6-WAY TO 46-WAY	*Call
2094<2064		4546<2067	7-WAY TO 46-WAY	*Call
2094<2064		4546<2068	8-WAY TO 46-WAY	*Call
2094<2064		4546<2069	9-WAY TO 46-WAY	*Call
2094<2064		4546<2070	10-WAY TO 46-WAY	*Call
2094<2064		4546<2071	11-WAY TO 46-WAY	*Call
2094<2064		4546<2072	12-WAY TO 46-WAY	*Call
2094<2064		4546<2073	13-WAY TO 46-WAY	*Call
2094<2064		4546<2074	14-WAY TO 46-WAY	*Call
2094<2064		4546<2075	15-WAY TO 46-WAY	*Call
2094<2064		4546<2076	16-WAY TO 46-WAY	*Call
2094<2064		4547<1051	1-WAY TO 47-WAY	*Call
2094<2064		4547<1052	2-WAY TO 47-WAY	*Call
2094<2064		4547<1053	3-WAY TO 47-WAY	*Call
2094<2064		4547<1054	4-WAY TO 47-WAY	*Call
2094<2064		4547<1055	5-WAY TO 47-WAY	*Call
2094<2064		4547<1056	6-WAY TO 47-WAY	*Call
2094<2064		4547<1057	7-WAY TO 47-WAY	*Call
2094<2064		4547<1058	8-WAY TO 47-WAY	*Call
2094<2064		4547<1059	9-WAY TO 47-WAY	*Call
2094<2064		4547<1061	1-WAY TO 47-WAY	*Call
2094<2064		4547<1062	2-WAY TO 47-WAY	*Call
2094<2064		4547<1063	3-WAY TO 47-WAY	*Call
2094<2064		4547<1064	4-WAY TO 47-WAY	*Call
2094<2064		4547<1065	5-WAY TO 47-WAY	*Call
2094<2064		4547<1066	6-WAY TO 47-WAY	*Call
2094<2064		4547<1067	7-WAY TO 47-WAY	*Call
2094<2064		4547<1068	8-WAY TO 47-WAY	*Call
2094<2064		4547<1069	9-WAY TO 47-WAY	*Call
2094<2064		4547<1070	10-WAY TO 47-WAY	*Call
2094<2064		4547<1071	11-WAY TO 47-WAY	*Call
2094<2064		4547<1072	12-WAY TO 47-WAY	*Call
2094<2064		4547<1073	13-WAY TO 47-WAY	*Call
2094<2064		4547<1074	14-WAY TO 47-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4547<1075	15-WAY TO 47-WAY	*Call
2094<2064		4547<1076	16-WAY TO 47-WAY	*Call
2094<2064		4547<2061	1-WAY TO 47-WAY	*Call
2094<2064		4547<2062	2-WAY TO 47-WAY	*Call
2094<2064		4547<2063	3-WAY TO 47-WAY	*Call
2094<2064		4547<2064	4-WAY TO 47-WAY	*Call
2094<2064		4547<2065	5-WAY TO 47-WAY	*Call
2094<2064		4547<2066	6-WAY TO 47-WAY	*Call
2094<2064		4547<2067	7-WAY TO 47-WAY	*Call
2094<2064		4547<2068	8-WAY TO 47-WAY	*Call
2094<2064		4547<2069	9-WAY TO 47-WAY	*Call
2094<2064		4547<2070	10-WAY TO 47-WAY	*Call
2094<2064		4547<2071	11-WAY TO 47-WAY	*Call
2094<2064		4547<2072	12-WAY TO 47-WAY	*Call
2094<2064		4547<2073	13-WAY TO 47-WAY	*Call
2094<2064		4547<2074	14-WAY TO 47-WAY	*Call
2094<2064		4547<2075	15-WAY TO 47-WAY	*Call
2094<2064		4547<2076	16-WAY TO 47-WAY	*Call
2094<2064		4548<1051	1-WAY TO 48-WAY	*Call
2094<2064		4548<1052	2-WAY TO 48-WAY	*Call
2094<2064		4548<1053	3-WAY TO 48-WAY	*Call
2094<2064		4548<1054	4-WAY TO 48-WAY	*Call
2094<2064		4548<1055	5-WAY TO 48-WAY	*Call
2094<2064		4548<1056	6-WAY TO 48-WAY	*Call
2094<2064		4548<1057	7-WAY TO 48-WAY	*Call
2094<2064		4548<1058	8-WAY TO 48-WAY	*Call
2094<2064		4548<1059	9-WAY TO 48-WAY	*Call
2094<2064		4548<1061	1-WAY TO 48-WAY	*Call
2094<2064		4548<1062	2-WAY TO 48-WAY	*Call
2094<2064		4548<1063	3-WAY TO 48-WAY	*Call
2094<2064		4548<1064	4-WAY TO 48-WAY	*Call
2094<2064		4548<1065	5-WAY TO 48-WAY	*Call
2094<2064		4548<1066	6-WAY TO 48-WAY	*Call
2094<2064		4548<1067	7-WAY TO 48-WAY	*Call
2094<2064		4548<1068	8-WAY TO 48-WAY	*Call
2094<2064		4548<1069	9-WAY TO 48-WAY	*Call
2094<2064		4548<1070	10-WAY TO 48-WAY	*Call
2094<2064		4548<1071	11-WAY TO 48-WAY	*Call
2094<2064		4548<1072	12-WAY TO 48-WAY	*Call
2094<2064		4548<1073	13-WAY TO 48-WAY	*Call
2094<2064		4548<1074	14-WAY TO 48-WAY	*Call
2094<2064		4548<1075	15-WAY TO 48-WAY	*Call
2094<2064		4548<1076	16-WAY TO 48-WAY	*Call
2094<2064		4548<2061	1-WAY TO 48-WAY	*Call
2094<2064		4548<2062	2-WAY TO 48-WAY	*Call
2094<2064		4548<2063	3-WAY TO 48-WAY	*Call
2094<2064		4548<2064	4-WAY TO 48-WAY	*Call
2094<2064		4548<2065	5-WAY TO 48-WAY	*Call
2094<2064		4548<2066	6-WAY TO 48-WAY	*Call
2094<2064		4548<2067	7-WAY TO 48-WAY	*Call
2094<2064		4548<2068	8-WAY TO 48-WAY	*Call
2094<2064		4548<2069	9-WAY TO 48-WAY	*Call
2094<2064		4548<2070	10-WAY TO 48-WAY	*Call
2094<2064		4548<2071	11-WAY TO 48-WAY	*Call
2094<2064		4548<2072	12-WAY TO 48-WAY	*Call
2094<2064		4548<2073	13-WAY TO 48-WAY	*Call
2094<2064		4548<2074	14-WAY TO 48-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4548<2075	15-WAY TO 48-WAY	*Call
2094<2064		4548<2076	16-WAY TO 48-WAY	*Call
2094<2064		4549<1051	1-WAY TO 49-WAY	*Call
2094<2064		4549<1052	2-WAY TO 49-WAY	*Call
2094<2064		4549<1053	3-WAY TO 49-WAY	*Call
2094<2064		4549<1054	4-WAY TO 49-WAY	*Call
2094<2064		4549<1055	5-WAY TO 49-WAY	*Call
2094<2064		4549<1056	6-WAY TO 49-WAY	*Call
2094<2064		4549<1057	7-WAY TO 49-WAY	*Call
2094<2064		4549<1058	8-WAY TO 49-WAY	*Call
2094<2064		4549<1059	9-WAY TO 49-WAY	*Call
2094<2064		4549<1061	1-WAY TO 49-WAY	*Call
2094<2064		4549<1062	2-WAY TO 49-WAY	*Call
2094<2064		4549<1063	3-WAY TO 49-WAY	*Call
2094<2064		4549<1064	4-WAY TO 49-WAY	*Call
2094<2064		4549<1065	5-WAY TO 49-WAY	*Call
2094<2064		4549<1066	6-WAY TO 49-WAY	*Call
2094<2064		4549<1067	7-WAY TO 49-WAY	*Call
2094<2064		4549<1068	8-WAY TO 49-WAY	*Call
2094<2064		4549<1069	9-WAY TO 49-WAY	*Call
2094<2064		4549<1070	10-WAY TO 49-WAY	*Call
2094<2064		4549<1071	11-WAY TO 49-WAY	*Call
2094<2064		4549<1072	12-WAY TO 49-WAY	*Call
2094<2064		4549<1073	13-WAY TO 49-WAY	*Call
2094<2064		4549<1074	14-WAY TO 49-WAY	*Call
2094<2064		4549<1075	15-WAY TO 49-WAY	*Call
2094<2064		4549<1076	16-WAY TO 49-WAY	*Call
2094<2064		4549<2061	1-WAY TO 49-WAY	*Call
2094<2064		4549<2062	2-WAY TO 49-WAY	*Call
2094<2064		4549<2063	3-WAY TO 49-WAY	*Call
2094<2064		4549<2064	4-WAY TO 49-WAY	*Call
2094<2064		4549<2065	5-WAY TO 49-WAY	*Call
2094<2064		4549<2066	6-WAY TO 49-WAY	*Call
2094<2064		4549<2067	7-WAY TO 49-WAY	*Call
2094<2064		4549<2068	8-WAY TO 49-WAY	*Call
2094<2064		4549<2069	9-WAY TO 49-WAY	*Call
2094<2064		4549<2070	10-WAY TO 49-WAY	*Call
2094<2064		4549<2071	11-WAY TO 49-WAY	*Call
2094<2064		4549<2072	12-WAY TO 49-WAY	*Call
2094<2064		4549<2073	13-WAY TO 49-WAY	*Call
2094<2064		4549<2074	14-WAY TO 49-WAY	*Call
2094<2064		4549<2075	15-WAY TO 49-WAY	*Call
2094<2064		4549<2076	16-WAY TO 49-WAY	*Call
2094<2064		4550<1051	1-WAY TO 50-WAY	*Call
2094<2064		4550<1052	2-WAY TO 50-WAY	*Call
2094<2064		4550<1053	3-WAY TO 50-WAY	*Call
2094<2064		4550<1054	4-WAY TO 50-WAY	*Call
2094<2064		4550<1055	5-WAY TO 50-WAY	*Call
2094<2064		4550<1056	6-WAY TO 50-WAY	*Call
2094<2064		4550<1057	7-WAY TO 50-WAY	*Call
2094<2064		4550<1058	8-WAY TO 50-WAY	*Call
2094<2064		4550<1059	9-WAY TO 50-WAY	*Call
2094<2064		4550<1061	1-WAY TO 50-WAY	*Call
2094<2064		4550<1062	2-WAY TO 50-WAY	*Call
2094<2064		4550<1063	3-WAY TO 50-WAY	*Call
2094<2064		4550<1064	4-WAY TO 50-WAY	*Call
2094<2064		4550<1065	5-WAY TO 50-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4550<1066	6-WAY TO 50-WAY	*Call
2094<2064		4550<1067	7-WAY TO 50-WAY	*Call
2094<2064		4550<1068	8-WAY TO 50-WAY	*Call
2094<2064		4550<1069	9-WAY TO 50-WAY	*Call
2094<2064		4550<1070	10-WAY TO 50-WAY	*Call
2094<2064		4550<1071	11-WAY TO 50-WAY	*Call
2094<2064		4550<1072	12-WAY TO 50-WAY	*Call
2094<2064		4550<1073	13-WAY TO 50-WAY	*Call
2094<2064		4550<1074	14-WAY TO 50-WAY	*Call
2094<2064		4550<1075	15-WAY TO 50-WAY	*Call
2094<2064		4550<1076	16-WAY TO 50-WAY	*Call
2094<2064		4550<2061	1-WAY TO 50-WAY	*Call
2094<2064		4550<2062	2-WAY TO 50-WAY	*Call
2094<2064		4550<2063	3-WAY TO 50-WAY	*Call
2094<2064		4550<2064	4-WAY TO 50-WAY	*Call
2094<2064		4550<2065	5-WAY TO 50-WAY	*Call
2094<2064		4550<2066	6-WAY TO 50-WAY	*Call
2094<2064		4550<2067	7-WAY TO 50-WAY	*Call
2094<2064		4550<2068	8-WAY TO 50-WAY	*Call
2094<2064		4550<2069	9-WAY TO 50-WAY	*Call
2094<2064		4550<2070	10-WAY TO 50-WAY	*Call
2094<2064		4550<2071	11-WAY TO 50-WAY	*Call
2094<2064		4550<2072	12-WAY TO 50-WAY	*Call
2094<2064		4550<2073	13-WAY TO 50-WAY	*Call
2094<2064		4550<2074	14-WAY TO 50-WAY	*Call
2094<2064		4550<2075	15-WAY TO 50-WAY	*Call
2094<2064		4550<2076	16-WAY TO 50-WAY	*Call
2094<2064		4551<1051	1-WAY TO 51-WAY	*Call
2094<2064		4551<1052	2-WAY TO 51-WAY	*Call
2094<2064		4551<1053	3-WAY TO 51-WAY	*Call
2094<2064		4551<1054	4-WAY TO 51-WAY	*Call
2094<2064		4551<1055	5-WAY TO 51-WAY	*Call
2094<2064		4551<1056	6-WAY TO 51-WAY	*Call
2094<2064		4551<1057	7-WAY TO 51-WAY	*Call
2094<2064		4551<1058	8-WAY TO 51-WAY	*Call
2094<2064		4551<1059	9-WAY TO 51-WAY	*Call
2094<2064		4551<1061	1-WAY TO 51-WAY	*Call
2094<2064		4551<1062	2-WAY TO 51-WAY	*Call
2094<2064		4551<1063	3-WAY TO 51-WAY	*Call
2094<2064		4551<1064	4-WAY TO 51-WAY	*Call
2094<2064		4551<1065	5-WAY TO 51-WAY	*Call
2094<2064		4551<1066	6-WAY TO 51-WAY	*Call
2094<2064		4551<1067	7-WAY TO 51-WAY	*Call
2094<2064		4551<1068	8-WAY TO 51-WAY	*Call
2094<2064		4551<1069	9-WAY TO 51-WAY	*Call
2094<2064		4551<1070	10-WAY TO 51-WAY	*Call
2094<2064		4551<1071	11-WAY TO 51-WAY	*Call
2094<2064		4551<1072	12-WAY TO 51-WAY	*Call
2094<2064		4551<1073	13-WAY TO 51-WAY	*Call
2094<2064		4551<1074	14-WAY TO 51-WAY	*Call
2094<2064		4551<1075	15-WAY TO 51-WAY	*Call
2094<2064		4551<1076	16-WAY TO 51-WAY	*Call
2094<2064		4551<2061	1-WAY TO 51-WAY	*Call
2094<2064		4551<2062	2-WAY TO 51-WAY	*Call
2094<2064		4551<2063	3-WAY TO 51-WAY	*Call
2094<2064		4551<2064	4-WAY TO 51-WAY	*Call
2094<2064		4551<2065	5-WAY TO 51-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4551<2066	6-WAY TO 51-WAY	*Call
2094<2064		4551<2067	7-WAY TO 51-WAY	*Call
2094<2064		4551<2068	8-WAY TO 51-WAY	*Call
2094<2064		4551<2069	9-WAY TO 51-WAY	*Call
2094<2064		4551<2070	10-WAY TO 51-WAY	*Call
2094<2064		4551<2071	11-WAY TO 51-WAY	*Call
2094<2064		4551<2072	12-WAY TO 51-WAY	*Call
2094<2064		4551<2073	13-WAY TO 51-WAY	*Call
2094<2064		4551<2074	14-WAY TO 51-WAY	*Call
2094<2064		4551<2075	15-WAY TO 51-WAY	*Call
2094<2064		4551<2076	16-WAY TO 51-WAY	*Call
2094<2064		4552<1051	1-WAY TO 52-WAY	*Call
2094<2064		4552<1052	2-WAY TO 52-WAY	*Call
2094<2064		4552<1053	3-WAY TO 52-WAY	*Call
2094<2064		4552<1054	4-WAY TO 52-WAY	*Call
2094<2064		4552<1055	5-WAY TO 52-WAY	*Call
2094<2064		4552<1056	6-WAY TO 52-WAY	*Call
2094<2064		4552<1057	7-WAY TO 52-WAY	*Call
2094<2064		4552<1058	8-WAY TO 52-WAY	*Call
2094<2064		4552<1059	9-WAY TO 52-WAY	*Call
2094<2064		4552<1061	1-WAY TO 52-WAY	*Call
2094<2064		4552<1062	2-WAY TO 52-WAY	*Call
2094<2064		4552<1063	3-WAY TO 52-WAY	*Call
2094<2064		4552<1064	4-WAY TO 52-WAY	*Call
2094<2064		4552<1065	5-WAY TO 52-WAY	*Call
2094<2064		4552<1066	6-WAY TO 52-WAY	*Call
2094<2064		4552<1067	7-WAY TO 52-WAY	*Call
2094<2064		4552<1068	8-WAY TO 52-WAY	*Call
2094<2064		4552<1069	9-WAY TO 52-WAY	*Call
2094<2064		4552<1070	10-WAY TO 52-WAY	*Call
2094<2064		4552<1071	11-WAY TO 52-WAY	*Call
2094<2064		4552<1072	12-WAY TO 52-WAY	*Call
2094<2064		4552<1073	13-WAY TO 52-WAY	*Call
2094<2064		4552<1074	14-WAY TO 52-WAY	*Call
2094<2064		4552<1075	15-WAY TO 52-WAY	*Call
2094<2064		4552<1076	16-WAY TO 52-WAY	*Call
2094<2064		4552<2061	1-WAY TO 52-WAY	*Call
2094<2064		4552<2062	2-WAY TO 52-WAY	*Call
2094<2064		4552<2063	3-WAY TO 52-WAY	*Call
2094<2064		4552<2064	4-WAY TO 52-WAY	*Call
2094<2064		4552<2065	5-WAY TO 52-WAY	*Call
2094<2064		4552<2066	6-WAY TO 52-WAY	*Call
2094<2064		4552<2067	7-WAY TO 52-WAY	*Call
2094<2064		4552<2068	8-WAY TO 52-WAY	*Call
2094<2064		4552<2069	9-WAY TO 52-WAY	*Call
2094<2064		4552<2070	10-WAY TO 52-WAY	*Call
2094<2064		4552<2071	11-WAY TO 52-WAY	*Call
2094<2064		4552<2072	12-WAY TO 52-WAY	*Call
2094<2064		4552<2073	13-WAY TO 52-WAY	*Call
2094<2064		4552<2074	14-WAY TO 52-WAY	*Call
2094<2064		4552<2075	15-WAY TO 52-WAY	*Call
2094<2064		4552<2076	16-WAY TO 52-WAY	*Call
2094<2064		4553<1051	1-WAY TO 53-WAY	*Call
2094<2064		4553<1052	2-WAY TO 53-WAY	*Call
2094<2064		4553<1053	3-WAY TO 53-WAY	*Call
2094<2064		4553<1054	4-WAY TO 53-WAY	*Call
2094<2064		4553<1055	5-WAY TO 53-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4553<1056	6-WAY TO 53-WAY	*Call
2094<2064		4553<1057	7-WAY TO 53-WAY	*Call
2094<2064		4553<1058	8-WAY TO 53-WAY	*Call
2094<2064		4553<1059	9-WAY TO 53-WAY	*Call
2094<2064		4553<1061	1-WAY TO 53-WAY	*Call
2094<2064		4553<1062	2-WAY TO 53-WAY	*Call
2094<2064		4553<1063	3-WAY TO 53-WAY	*Call
2094<2064		4553<1064	4-WAY TO 53-WAY	*Call
2094<2064		4553<1065	5-WAY TO 53-WAY	*Call
2094<2064		4553<1066	6-WAY TO 53-WAY	*Call
2094<2064		4553<1067	7-WAY TO 53-WAY	*Call
2094<2064		4553<1068	8-WAY TO 53-WAY	*Call
2094<2064		4553<1069	9-WAY TO 53-WAY	*Call
2094<2064		4553<1070	10-WAY TO 53-WAY	*Call
2094<2064		4553<1071	11-WAY TO 53-WAY	*Call
2094<2064		4553<1072	12-WAY TO 53-WAY	*Call
2094<2064		4553<1073	13-WAY TO 53-WAY	*Call
2094<2064		4553<1074	14-WAY TO 53-WAY	*Call
2094<2064		4553<1075	15-WAY TO 53-WAY	*Call
2094<2064		4553<1076	16-WAY TO 53-WAY	*Call
2094<2064		4553<2061	1-WAY TO 53-WAY	*Call
2094<2064		4553<2062	2-WAY TO 53-WAY	*Call
2094<2064		4553<2063	3-WAY TO 53-WAY	*Call
2094<2064		4553<2064	4-WAY TO 53-WAY	*Call
2094<2064		4553<2065	5-WAY TO 53-WAY	*Call
2094<2064		4553<2066	6-WAY TO 53-WAY	*Call
2094<2064		4553<2067	7-WAY TO 53-WAY	*Call
2094<2064		4553<2068	8-WAY TO 53-WAY	*Call
2094<2064		4553<2069	9-WAY TO 53-WAY	*Call
2094<2064		4553<2070	10-WAY TO 53-WAY	*Call
2094<2064		4553<2071	11-WAY TO 53-WAY	*Call
2094<2064		4553<2072	12-WAY TO 53-WAY	*Call
2094<2064		4553<2073	13-WAY TO 53-WAY	*Call
2094<2064		4553<2074	14-WAY TO 53-WAY	*Call
2094<2064		4553<2075	15-WAY TO 53-WAY	*Call
2094<2064		4553<2076	16-WAY TO 53-WAY	*Call
2094<2064		4554<1051	1-WAY TO 54-WAY	*Call
2094<2064		4554<1052	2-WAY TO 54-WAY	*Call
2094<2064		4554<1053	3-WAY TO 54-WAY	*Call
2094<2064		4554<1054	4-WAY TO 54-WAY	*Call
2094<2064		4554<1055	5-WAY TO 54-WAY	*Call
2094<2064		4554<1056	6-WAY TO 54-WAY	*Call
2094<2064		4554<1057	7-WAY TO 54-WAY	*Call
2094<2064		4554<1058	8-WAY TO 54-WAY	*Call
2094<2064		4554<1059	9-WAY TO 54-WAY	*Call
2094<2064		4554<1061	1-WAY TO 54-WAY	*Call
2094<2064		4554<1062	2-WAY TO 54-WAY	*Call
2094<2064		4554<1063	3-WAY TO 54-WAY	*Call
2094<2064		4554<1064	4-WAY TO 54-WAY	*Call
2094<2064		4554<1065	5-WAY TO 54-WAY	*Call
2094<2064		4554<1066	6-WAY TO 54-WAY	*Call
2094<2064		4554<1067	7-WAY TO 54-WAY	*Call
2094<2064		4554<1068	8-WAY TO 54-WAY	*Call
2094<2064		4554<1069	9-WAY TO 54-WAY	*Call
2094<2064		4554<1070	10-WAY TO 54-WAY	*Call
2094<2064		4554<1071	11-WAY TO 54-WAY	*Call
2094<2064		4554<1072	12-WAY TO 54-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4554<1073	13-WAY TO 54-WAY	*Call
2094<2064		4554<1074	14-WAY TO 54-WAY	*Call
2094<2064		4554<1075	15-WAY TO 54-WAY	*Call
2094<2064		4554<1076	16-WAY TO 54-WAY	*Call
2094<2064		4554<2061	1-WAY TO 54-WAY	*Call
2094<2064		4554<2062	2-WAY TO 54-WAY	*Call
2094<2064		4554<2063	3-WAY TO 54-WAY	*Call
2094<2064		4554<2064	4-WAY TO 54-WAY	*Call
2094<2064		4554<2065	5-WAY TO 54-WAY	*Call
2094<2064		4554<2066	6-WAY TO 54-WAY	*Call
2094<2064		4554<2067	7-WAY TO 54-WAY	*Call
2094<2064		4554<2068	8-WAY TO 54-WAY	*Call
2094<2064		4554<2069	9-WAY TO 54-WAY	*Call
2094<2064		4554<2070	10-WAY TO 54-WAY	*Call
2094<2064		4554<2071	11-WAY TO 54-WAY	*Call
2094<2064		4554<2072	12-WAY TO 54-WAY	*Call
2094<2064		4554<2073	13-WAY TO 54-WAY	*Call
2094<2064		4554<2074	14-WAY TO 54-WAY	*Call
2094<2064		4554<2075	15-WAY TO 54-WAY	*Call
2094<2064		4554<2076	16-WAY TO 54-WAY	*Call
2094<2064		4601<1051	1-WAY TO 1-WAY	*Call
2094<2064		4601<1052	2-WAY TO 1-WAY	*Call
2094<2064		4601<1053	3-WAY TO 1-WAY	*Call
2094<2064		4601<1054	4-WAY TO 1-WAY	*Call
2094<2064		4601<1055	5-WAY TO 1-WAY	*Call
2094<2064		4601<1056	6-WAY TO 1-WAY	*Call
2094<2064		4601<1057	7-WAY TO 1-WAY	*Call
2094<2064		4601<1058	8-WAY TO 1-WAY	*Call
2094<2064		4601<1059	9-WAY TO 1-WAY	*Call
2094<2064		4601<1061	1-WAY TO 1-WAY	*Call
2094<2064		4601<1062	2-WAY TO 1-WAY	*Call
2094<2064		4601<1063	3-WAY TO 1-WAY	*Call
2094<2064		4601<1064	4-WAY TO 1-WAY	*Call
2094<2064		4601<1065	5-WAY TO 1-WAY	*Call
2094<2064		4601<1066	6-WAY TO 1-WAY	*Call
2094<2064		4601<1067	7-WAY TO 1-WAY	*Call
2094<2064		4601<1068	8-WAY TO 1-WAY	*Call
2094<2064		4601<1069	9-WAY TO 1-WAY	*Call
2094<2064		4601<1070	10-WAY TO 1-WAY	*Call
2094<2064		4601<1071	11-WAY TO 1-WAY	*Call
2094<2064		4601<1072	12-WAY TO 1-WAY	*Call
2094<2064		4601<1073	13-WAY TO 1-WAY	*Call
2094<2064		4601<1074	14-WAY TO 1-WAY	*Call
2094<2064		4601<1075	15-WAY TO 1-WAY	*Call
2094<2064		4601<1076	16-WAY TO 1-WAY	*Call
2094<2064		4601<2061	1-WAY TO 1-WAY	*Call
2094<2064		4601<2062	2-WAY TO 1-WAY	*Call
2094<2064		4601<2063	3-WAY TO 1-WAY	*Call
2094<2064		4601<2064	4-WAY TO 1-WAY	*Call
2094<2064		4601<2065	5-WAY TO 1-WAY	*Call
2094<2064		4601<2066	6-WAY TO 1-WAY	*Call
2094<2064		4601<2067	7-WAY TO 1-WAY	*Call
2094<2064		4601<2068	8-WAY TO 1-WAY	*Call
2094<2064		4601<2069	9-WAY TO 1-WAY	*Call
2094<2064		4601<2070	10-WAY TO 1-WAY	*Call
2094<2064		4601<2071	11-WAY TO 1-WAY	*Call
2094<2064		4601<2072	12-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4601<2073	13-WAY TO 1-WAY	*Call
2094<2064		4601<2074	14-WAY TO 1-WAY	*Call
2094<2064		4601<2075	15-WAY TO 1-WAY	*Call
2094<2064		4601<2076	16-WAY TO 1-WAY	*Call
2094<2064		4602<1051	1-WAY TO 2-WAY	*Call
2094<2064		4602<1052	2-WAY TO 2-WAY	*Call
2094<2064		4602<1053	3-WAY TO 2-WAY	*Call
2094<2064		4602<1054	4-WAY TO 2-WAY	*Call
2094<2064		4602<1055	5-WAY TO 2-WAY	*Call
2094<2064		4602<1056	6-WAY TO 2-WAY	*Call
2094<2064		4602<1057	7-WAY TO 2-WAY	*Call
2094<2064		4602<1058	8-WAY TO 2-WAY	*Call
2094<2064		4602<1059	9-WAY TO 2-WAY	*Call
2094<2064		4602<1061	1-WAY TO 2-WAY	*Call
2094<2064		4602<1062	2-WAY TO 2-WAY	*Call
2094<2064		4602<1063	3-WAY TO 2-WAY	*Call
2094<2064		4602<1064	4-WAY TO 2-WAY	*Call
2094<2064		4602<1065	5-WAY TO 2-WAY	*Call
2094<2064		4602<1066	6-WAY TO 2-WAY	*Call
2094<2064		4602<1067	7-WAY TO 2-WAY	*Call
2094<2064		4602<1068	8-WAY TO 2-WAY	*Call
2094<2064		4602<1069	9-WAY TO 2-WAY	*Call
2094<2064		4602<1070	10-WAY TO 2-WAY	*Call
2094<2064		4602<1071	11-WAY TO 2-WAY	*Call
2094<2064		4602<1072	12-WAY TO 2-WAY	*Call
2094<2064		4602<1073	13-WAY TO 2-WAY	*Call
2094<2064		4602<1074	14-WAY TO 2-WAY	*Call
2094<2064		4602<1075	15-WAY TO 2-WAY	*Call
2094<2064		4602<1076	16-WAY TO 2-WAY	*Call
2094<2064		4602<2061	1-WAY TO 2-WAY	*Call
2094<2064		4602<2062	2-WAY TO 2-WAY	*Call
2094<2064		4602<2063	3-WAY TO 2-WAY	*Call
2094<2064		4602<2064	4-WAY TO 2-WAY	*Call
2094<2064		4602<2065	5-WAY TO 2-WAY	*Call
2094<2064		4602<2066	6-WAY TO 2-WAY	*Call
2094<2064		4602<2067	7-WAY TO 2-WAY	*Call
2094<2064		4602<2068	8-WAY TO 2-WAY	*Call
2094<2064		4602<2069	9-WAY TO 2-WAY	*Call
2094<2064		4602<2070	10-WAY TO 2-WAY	*Call
2094<2064		4602<2071	11-WAY TO 2-WAY	*Call
2094<2064		4602<2072	12-WAY TO 2-WAY	*Call
2094<2064		4602<2073	13-WAY TO 2-WAY	*Call
2094<2064		4602<2074	14-WAY TO 2-WAY	*Call
2094<2064		4602<2075	15-WAY TO 2-WAY	*Call
2094<2064		4602<2076	16-WAY TO 2-WAY	*Call
2094<2064		4603<1051	1-WAY TO 3-WAY	*Call
2094<2064		4603<1052	2-WAY TO 3-WAY	*Call
2094<2064		4603<1053	3-WAY TO 3-WAY	*Call
2094<2064		4603<1054	4-WAY TO 3-WAY	*Call
2094<2064		4603<1055	5-WAY TO 3-WAY	*Call
2094<2064		4603<1056	6-WAY TO 3-WAY	*Call
2094<2064		4603<1057	7-WAY TO 3-WAY	*Call
2094<2064		4603<1058	8-WAY TO 3-WAY	*Call
2094<2064		4603<1059	9-WAY TO 3-WAY	*Call
2094<2064		4603<1061	1-WAY TO 3-WAY	*Call
2094<2064		4603<1062	2-WAY TO 3-WAY	*Call
2094<2064		4603<1063	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4603<1064	4-WAY TO 3-WAY	*Call
2094<2064		4603<1065	5-WAY TO 3-WAY	*Call
2094<2064		4603<1066	6-WAY TO 3-WAY	*Call
2094<2064		4603<1067	7-WAY TO 3-WAY	*Call
2094<2064		4603<1068	8-WAY TO 3-WAY	*Call
2094<2064		4603<1069	9-WAY TO 3-WAY	*Call
2094<2064		4603<1070	10-WAY TO 3-WAY	*Call
2094<2064		4603<1071	11-WAY TO 3-WAY	*Call
2094<2064		4603<1072	12-WAY TO 3-WAY	*Call
2094<2064		4603<1073	13-WAY TO 3-WAY	*Call
2094<2064		4603<1074	14-WAY TO 3-WAY	*Call
2094<2064		4603<1075	15-WAY TO 3-WAY	*Call
2094<2064		4603<1076	16-WAY TO 3-WAY	*Call
2094<2064		4603<2061	1-WAY TO 3-WAY	*Call
2094<2064		4603<2062	2-WAY TO 3-WAY	*Call
2094<2064		4603<2063	3-WAY TO 3-WAY	*Call
2094<2064		4603<2064	4-WAY TO 3-WAY	*Call
2094<2064		4603<2065	5-WAY TO 3-WAY	*Call
2094<2064		4603<2066	6-WAY TO 3-WAY	*Call
2094<2064		4603<2067	7-WAY TO 3-WAY	*Call
2094<2064		4603<2068	8-WAY TO 3-WAY	*Call
2094<2064		4603<2069	9-WAY TO 3-WAY	*Call
2094<2064		4603<2070	10-WAY TO 3-WAY	*Call
2094<2064		4603<2071	11-WAY TO 3-WAY	*Call
2094<2064		4603<2072	12-WAY TO 3-WAY	*Call
2094<2064		4603<2073	13-WAY TO 3-WAY	*Call
2094<2064		4603<2074	14-WAY TO 3-WAY	*Call
2094<2064		4603<2075	15-WAY TO 3-WAY	*Call
2094<2064		4603<2076	16-WAY TO 3-WAY	*Call
2094<2064		4604<1051	1-WAY TO 4-WAY	*Call
2094<2064		4604<1052	2-WAY TO 4-WAY	*Call
2094<2064		4604<1053	3-WAY TO 4-WAY	*Call
2094<2064		4604<1054	4-WAY TO 4-WAY	*Call
2094<2064		4604<1055	5-WAY TO 4-WAY	*Call
2094<2064		4604<1056	6-WAY TO 4-WAY	*Call
2094<2064		4604<1057	7-WAY TO 4-WAY	*Call
2094<2064		4604<1058	8-WAY TO 4-WAY	*Call
2094<2064		4604<1059	9-WAY TO 4-WAY	*Call
2094<2064		4604<1061	1-WAY TO 4-WAY	*Call
2094<2064		4604<1062	2-WAY TO 4-WAY	*Call
2094<2064		4604<1063	3-WAY TO 4-WAY	*Call
2094<2064		4604<1064	4-WAY TO 4-WAY	*Call
2094<2064		4604<1065	5-WAY TO 4-WAY	*Call
2094<2064		4604<1066	6-WAY TO 4-WAY	*Call
2094<2064		4604<1067	7-WAY TO 4-WAY	*Call
2094<2064		4604<1068	8-WAY TO 4-WAY	*Call
2094<2064		4604<1069	9-WAY TO 4-WAY	*Call
2094<2064		4604<1070	10-WAY TO 4-WAY	*Call
2094<2064		4604<1071	11-WAY TO 4-WAY	*Call
2094<2064		4604<1072	12-WAY TO 4-WAY	*Call
2094<2064		4604<1073	13-WAY TO 4-WAY	*Call
2094<2064		4604<1074	14-WAY TO 4-WAY	*Call
2094<2064		4604<1075	15-WAY TO 4-WAY	*Call
2094<2064		4604<1076	16-WAY TO 4-WAY	*Call
2094<2064		4604<2061	1-WAY TO 4-WAY	*Call
2094<2064		4604<2062	2-WAY TO 4-WAY	*Call
2094<2064		4604<2063	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4604<2064	4-WAY TO 4-WAY	*Call
2094<2064		4604<2065	5-WAY TO 4-WAY	*Call
2094<2064		4604<2066	6-WAY TO 4-WAY	*Call
2094<2064		4604<2067	7-WAY TO 4-WAY	*Call
2094<2064		4604<2068	8-WAY TO 4-WAY	*Call
2094<2064		4604<2069	9-WAY TO 4-WAY	*Call
2094<2064		4604<2070	10-WAY TO 4-WAY	*Call
2094<2064		4604<2071	11-WAY TO 4-WAY	*Call
2094<2064		4604<2072	12-WAY TO 4-WAY	*Call
2094<2064		4604<2073	13-WAY TO 4-WAY	*Call
2094<2064		4604<2074	14-WAY TO 4-WAY	*Call
2094<2064		4604<2075	15-WAY TO 4-WAY	*Call
2094<2064		4604<2076	16-WAY TO 4-WAY	*Call
2094<2064		4605<1051	1-WAY TO 5-WAY	*Call
2094<2064		4605<1052	2-WAY TO 5-WAY	*Call
2094<2064		4605<1053	3-WAY TO 5-WAY	*Call
2094<2064		4605<1054	4-WAY TO 5-WAY	*Call
2094<2064		4605<1055	5-WAY TO 5-WAY	*Call
2094<2064		4605<1056	6-WAY TO 5-WAY	*Call
2094<2064		4605<1057	7-WAY TO 5-WAY	*Call
2094<2064		4605<1058	8-WAY TO 5-WAY	*Call
2094<2064		4605<1059	9-WAY TO 5-WAY	*Call
2094<2064		4605<1061	1-WAY TO 5-WAY	*Call
2094<2064		4605<1062	2-WAY TO 5-WAY	*Call
2094<2064		4605<1063	3-WAY TO 5-WAY	*Call
2094<2064		4605<1064	4-WAY TO 5-WAY	*Call
2094<2064		4605<1065	5-WAY TO 5-WAY	*Call
2094<2064		4605<1066	6-WAY TO 5-WAY	*Call
2094<2064		4605<1067	7-WAY TO 5-WAY	*Call
2094<2064		4605<1068	8-WAY TO 5-WAY	*Call
2094<2064		4605<1069	9-WAY TO 5-WAY	*Call
2094<2064		4605<1070	10-WAY TO 5-WAY	*Call
2094<2064		4605<1071	11-WAY TO 5-WAY	*Call
2094<2064		4605<1072	12-WAY TO 5-WAY	*Call
2094<2064		4605<1073	13-WAY TO 5-WAY	*Call
2094<2064		4605<1074	14-WAY TO 5-WAY	*Call
2094<2064		4605<1075	15-WAY TO 5-WAY	*Call
2094<2064		4605<1076	16-WAY TO 5-WAY	*Call
2094<2064		4605<2061	1-WAY TO 5-WAY	*Call
2094<2064		4605<2062	2-WAY TO 5-WAY	*Call
2094<2064		4605<2063	3-WAY TO 5-WAY	*Call
2094<2064		4605<2064	4-WAY TO 5-WAY	*Call
2094<2064		4605<2065	5-WAY TO 5-WAY	*Call
2094<2064		4605<2066	6-WAY TO 5-WAY	*Call
2094<2064		4605<2067	7-WAY TO 5-WAY	*Call
2094<2064		4605<2068	8-WAY TO 5-WAY	*Call
2094<2064		4605<2069	9-WAY TO 5-WAY	*Call
2094<2064		4605<2070	10-WAY TO 5-WAY	*Call
2094<2064		4605<2071	11-WAY TO 5-WAY	*Call
2094<2064		4605<2072	12-WAY TO 5-WAY	*Call
2094<2064		4605<2073	13-WAY TO 5-WAY	*Call
2094<2064		4605<2074	14-WAY TO 5-WAY	*Call
2094<2064		4605<2075	15-WAY TO 5-WAY	*Call
2094<2064		4605<2076	16-WAY TO 5-WAY	*Call
2094<2064		4606<1051	1-WAY TO 6-WAY	*Call
2094<2064		4606<1052	2-WAY TO 6-WAY	*Call
2094<2064		4606<1053	3-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4606<1054	4-WAY TO 6-WAY	*Call
2094<2064		4606<1055	5-WAY TO 6-WAY	*Call
2094<2064		4606<1056	6-WAY TO 6-WAY	*Call
2094<2064		4606<1057	7-WAY TO 6-WAY	*Call
2094<2064		4606<1058	8-WAY TO 6-WAY	*Call
2094<2064		4606<1059	9-WAY TO 6-WAY	*Call
2094<2064		4606<1061	1-WAY TO 6-WAY	*Call
2094<2064		4606<1062	2-WAY TO 6-WAY	*Call
2094<2064		4606<1063	3-WAY TO 6-WAY	*Call
2094<2064		4606<1064	4-WAY TO 6-WAY	*Call
2094<2064		4606<1065	5-WAY TO 6-WAY	*Call
2094<2064		4606<1066	6-WAY TO 6-WAY	*Call
2094<2064		4606<1067	7-WAY TO 6-WAY	*Call
2094<2064		4606<1068	8-WAY TO 6-WAY	*Call
2094<2064		4606<1069	9-WAY TO 6-WAY	*Call
2094<2064		4606<1070	10-WAY TO 6-WAY	*Call
2094<2064		4606<1071	11-WAY TO 6-WAY	*Call
2094<2064		4606<1072	12-WAY TO 6-WAY	*Call
2094<2064		4606<1073	13-WAY TO 6-WAY	*Call
2094<2064		4606<1074	14-WAY TO 6-WAY	*Call
2094<2064		4606<1075	15-WAY TO 6-WAY	*Call
2094<2064		4606<1076	16-WAY TO 6-WAY	*Call
2094<2064		4606<2061	1-WAY TO 6-WAY	*Call
2094<2064		4606<2062	2-WAY TO 6-WAY	*Call
2094<2064		4606<2063	3-WAY TO 6-WAY	*Call
2094<2064		4606<2064	4-WAY TO 6-WAY	*Call
2094<2064		4606<2065	5-WAY TO 6-WAY	*Call
2094<2064		4606<2066	6-WAY TO 6-WAY	*Call
2094<2064		4606<2067	7-WAY TO 6-WAY	*Call
2094<2064		4606<2068	8-WAY TO 6-WAY	*Call
2094<2064		4606<2069	9-WAY TO 6-WAY	*Call
2094<2064		4606<2070	10-WAY TO 6-WAY	*Call
2094<2064		4606<2071	11-WAY TO 6-WAY	*Call
2094<2064		4606<2072	12-WAY TO 6-WAY	*Call
2094<2064		4606<2073	13-WAY TO 6-WAY	*Call
2094<2064		4606<2074	14-WAY TO 6-WAY	*Call
2094<2064		4606<2075	15-WAY TO 6-WAY	*Call
2094<2064		4606<2076	16-WAY TO 6-WAY	*Call
2094<2064		4607<1051	1-WAY TO 7-WAY	*Call
2094<2064		4607<1052	2-WAY TO 7-WAY	*Call
2094<2064		4607<1053	3-WAY TO 7-WAY	*Call
2094<2064		4607<1054	4-WAY TO 7-WAY	*Call
2094<2064		4607<1055	5-WAY TO 7-WAY	*Call
2094<2064		4607<1056	6-WAY TO 7-WAY	*Call
2094<2064		4607<1057	7-WAY TO 7-WAY	*Call
2094<2064		4607<1058	8-WAY TO 7-WAY	*Call
2094<2064		4607<1059	9-WAY TO 7-WAY	*Call
2094<2064		4607<1061	1-WAY TO 7-WAY	*Call
2094<2064		4607<1062	2-WAY TO 7-WAY	*Call
2094<2064		4607<1063	3-WAY TO 7-WAY	*Call
2094<2064		4607<1064	4-WAY TO 7-WAY	*Call
2094<2064		4607<1065	5-WAY TO 7-WAY	*Call
2094<2064		4607<1066	6-WAY TO 7-WAY	*Call
2094<2064		4607<1067	7-WAY TO 7-WAY	*Call
2094<2064		4607<1068	8-WAY TO 7-WAY	*Call
2094<2064		4607<1069	9-WAY TO 7-WAY	*Call
2094<2064		4607<1070	10-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4607<1071	11-WAY TO 7-WAY	*Call
2094<2064		4607<1072	12-WAY TO 7-WAY	*Call
2094<2064		4607<1073	13-WAY TO 7-WAY	*Call
2094<2064		4607<1074	14-WAY TO 7-WAY	*Call
2094<2064		4607<1075	15-WAY TO 7-WAY	*Call
2094<2064		4607<1076	16-WAY TO 7-WAY	*Call
2094<2064		4607<2061	1-WAY TO 7-WAY	*Call
2094<2064		4607<2062	2-WAY TO 7-WAY	*Call
2094<2064		4607<2063	3-WAY TO 7-WAY	*Call
2094<2064		4607<2064	4-WAY TO 7-WAY	*Call
2094<2064		4607<2065	5-WAY TO 7-WAY	*Call
2094<2064		4607<2066	6-WAY TO 7-WAY	*Call
2094<2064		4607<2067	7-WAY TO 7-WAY	*Call
2094<2064		4607<2068	8-WAY TO 7-WAY	*Call
2094<2064		4607<2069	9-WAY TO 7-WAY	*Call
2094<2064		4607<2070	10-WAY TO 7-WAY	*Call
2094<2064		4607<2071	11-WAY TO 7-WAY	*Call
2094<2064		4607<2072	12-WAY TO 7-WAY	*Call
2094<2064		4607<2073	13-WAY TO 7-WAY	*Call
2094<2064		4607<2074	14-WAY TO 7-WAY	*Call
2094<2064		4607<2075	15-WAY TO 7-WAY	*Call
2094<2064		4607<2076	16-WAY TO 7-WAY	*Call
2094<2064		4608<1051	1-WAY TO 8-WAY	*Call
2094<2064		4608<1052	2-WAY TO 8-WAY	*Call
2094<2064		4608<1053	3-WAY TO 8-WAY	*Call
2094<2064		4608<1054	4-WAY TO 8-WAY	*Call
2094<2064		4608<1055	5-WAY TO 8-WAY	*Call
2094<2064		4608<1056	6-WAY TO 8-WAY	*Call
2094<2064		4608<1057	7-WAY TO 8-WAY	*Call
2094<2064		4608<1058	8-WAY TO 8-WAY	*Call
2094<2064		4608<1059	9-WAY TO 8-WAY	*Call
2094<2064		4608<1061	1-WAY TO 8-WAY	*Call
2094<2064		4608<1062	2-WAY TO 8-WAY	*Call
2094<2064		4608<1063	3-WAY TO 8-WAY	*Call
2094<2064		4608<1064	4-WAY TO 8-WAY	*Call
2094<2064		4608<1065	5-WAY TO 8-WAY	*Call
2094<2064		4608<1066	6-WAY TO 8-WAY	*Call
2094<2064		4608<1067	7-WAY TO 8-WAY	*Call
2094<2064		4608<1068	8-WAY TO 8-WAY	*Call
2094<2064		4608<1069	9-WAY TO 8-WAY	*Call
2094<2064		4608<1070	10-WAY TO 8-WAY	*Call
2094<2064		4608<1071	11-WAY TO 8-WAY	*Call
2094<2064		4608<1072	12-WAY TO 8-WAY	*Call
2094<2064		4608<1073	13-WAY TO 8-WAY	*Call
2094<2064		4608<1074	14-WAY TO 8-WAY	*Call
2094<2064		4608<1075	15-WAY TO 8-WAY	*Call
2094<2064		4608<1076	16-WAY TO 8-WAY	*Call
2094<2064		4608<2061	1-WAY TO 8-WAY	*Call
2094<2064		4608<2062	2-WAY TO 8-WAY	*Call
2094<2064		4608<2063	3-WAY TO 8-WAY	*Call
2094<2064		4608<2064	4-WAY TO 8-WAY	*Call
2094<2064		4608<2065	5-WAY TO 8-WAY	*Call
2094<2064		4608<2066	6-WAY TO 8-WAY	*Call
2094<2064		4608<2067	7-WAY TO 8-WAY	*Call
2094<2064		4608<2068	8-WAY TO 8-WAY	*Call
2094<2064		4608<2069	9-WAY TO 8-WAY	*Call
2094<2064		4608<2070	10-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4608<2071	11-WAY TO 8-WAY	*Call
2094<2064		4608<2072	12-WAY TO 8-WAY	*Call
2094<2064		4608<2073	13-WAY TO 8-WAY	*Call
2094<2064		4608<2074	14-WAY TO 8-WAY	*Call
2094<2064		4608<2075	15-WAY TO 8-WAY	*Call
2094<2064		4608<2076	16-WAY TO 8-WAY	*Call
2094<2064		4701<1051	1-WAY TO 1-WAY	*Call
2094<2064		4701<1052	2-WAY TO 1-WAY	*Call
2094<2064		4701<1053	3-WAY TO 1-WAY	*Call
2094<2064		4701<1054	4-WAY TO 1-WAY	*Call
2094<2064		4701<1055	5-WAY TO 1-WAY	*Call
2094<2064		4701<1056	6-WAY TO 1-WAY	*Call
2094<2064		4701<1057	7-WAY TO 1-WAY	*Call
2094<2064		4701<1058	8-WAY TO 1-WAY	*Call
2094<2064		4701<1059	9-WAY TO 1-WAY	*Call
2094<2064		4701<1061	1-WAY TO 1-WAY	*Call
2094<2064		4701<1062	2-WAY TO 1-WAY	*Call
2094<2064		4701<1063	3-WAY TO 1-WAY	*Call
2094<2064		4701<1064	4-WAY TO 1-WAY	*Call
2094<2064		4701<1065	5-WAY TO 1-WAY	*Call
2094<2064		4701<1066	6-WAY TO 1-WAY	*Call
2094<2064		4701<1067	7-WAY TO 1-WAY	*Call
2094<2064		4701<1068	8-WAY TO 1-WAY	*Call
2094<2064		4701<1069	9-WAY TO 1-WAY	*Call
2094<2064		4701<1070	10-WAY TO 1-WAY	*Call
2094<2064		4701<1071	11-WAY TO 1-WAY	*Call
2094<2064		4701<1072	12-WAY TO 1-WAY	*Call
2094<2064		4701<1073	13-WAY TO 1-WAY	*Call
2094<2064		4701<1074	14-WAY TO 1-WAY	*Call
2094<2064		4701<1075	15-WAY TO 1-WAY	*Call
2094<2064		4701<1076	16-WAY TO 1-WAY	*Call
2094<2064		4701<2061	1-WAY TO 1-WAY	*Call
2094<2064		4701<2062	2-WAY TO 1-WAY	*Call
2094<2064		4701<2063	3-WAY TO 1-WAY	*Call
2094<2064		4701<2064	4-WAY TO 1-WAY	*Call
2094<2064		4701<2065	5-WAY TO 1-WAY	*Call
2094<2064		4701<2066	6-WAY TO 1-WAY	*Call
2094<2064		4701<2067	7-WAY TO 1-WAY	*Call
2094<2064		4701<2068	8-WAY TO 1-WAY	*Call
2094<2064		4701<2069	9-WAY TO 1-WAY	*Call
2094<2064		4701<2070	10-WAY TO 1-WAY	*Call
2094<2064		4701<2071	11-WAY TO 1-WAY	*Call
2094<2064		4701<2072	12-WAY TO 1-WAY	*Call
2094<2064		4701<2073	13-WAY TO 1-WAY	*Call
2094<2064		4701<2074	14-WAY TO 1-WAY	*Call
2094<2064		4701<2075	15-WAY TO 1-WAY	*Call
2094<2064		4701<2076	16-WAY TO 1-WAY	*Call
2094<2064		4702<1051	1-WAY TO 2-WAY	*Call
2094<2064		4702<1052	2-WAY TO 2-WAY	*Call
2094<2064		4702<1053	3-WAY TO 2-WAY	*Call
2094<2064		4702<1054	4-WAY TO 2-WAY	*Call
2094<2064		4702<1055	5-WAY TO 2-WAY	*Call
2094<2064		4702<1056	6-WAY TO 2-WAY	*Call
2094<2064		4702<1057	7-WAY TO 2-WAY	*Call
2094<2064		4702<1058	8-WAY TO 2-WAY	*Call
2094<2064		4702<1059	9-WAY TO 2-WAY	*Call
2094<2064		4702<1061	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4702<1062	2-WAY TO 2-WAY	*Call
2094<2064		4702<1063	3-WAY TO 2-WAY	*Call
2094<2064		4702<1064	4-WAY TO 2-WAY	*Call
2094<2064		4702<1065	5-WAY TO 2-WAY	*Call
2094<2064		4702<1066	6-WAY TO 2-WAY	*Call
2094<2064		4702<1067	7-WAY TO 2-WAY	*Call
2094<2064		4702<1068	8-WAY TO 2-WAY	*Call
2094<2064		4702<1069	9-WAY TO 2-WAY	*Call
2094<2064		4702<1070	10-WAY TO 2-WAY	*Call
2094<2064		4702<1071	11-WAY TO 2-WAY	*Call
2094<2064		4702<1072	12-WAY TO 2-WAY	*Call
2094<2064		4702<1073	13-WAY TO 2-WAY	*Call
2094<2064		4702<1074	14-WAY TO 2-WAY	*Call
2094<2064		4702<1075	15-WAY TO 2-WAY	*Call
2094<2064		4702<1076	16-WAY TO 2-WAY	*Call
2094<2064		4702<2061	1-WAY TO 2-WAY	*Call
2094<2064		4702<2062	2-WAY TO 2-WAY	*Call
2094<2064		4702<2063	3-WAY TO 2-WAY	*Call
2094<2064		4702<2064	4-WAY TO 2-WAY	*Call
2094<2064		4702<2065	5-WAY TO 2-WAY	*Call
2094<2064		4702<2066	6-WAY TO 2-WAY	*Call
2094<2064		4702<2067	7-WAY TO 2-WAY	*Call
2094<2064		4702<2068	8-WAY TO 2-WAY	*Call
2094<2064		4702<2069	9-WAY TO 2-WAY	*Call
2094<2064		4702<2070	10-WAY TO 2-WAY	*Call
2094<2064		4702<2071	11-WAY TO 2-WAY	*Call
2094<2064		4702<2072	12-WAY TO 2-WAY	*Call
2094<2064		4702<2073	13-WAY TO 2-WAY	*Call
2094<2064		4702<2074	14-WAY TO 2-WAY	*Call
2094<2064		4702<2075	15-WAY TO 2-WAY	*Call
2094<2064		4702<2076	16-WAY TO 2-WAY	*Call
2094<2064		4703<1051	1-WAY TO 3-WAY	*Call
2094<2064		4703<1052	2-WAY TO 3-WAY	*Call
2094<2064		4703<1053	3-WAY TO 3-WAY	*Call
2094<2064		4703<1054	4-WAY TO 3-WAY	*Call
2094<2064		4703<1055	5-WAY TO 3-WAY	*Call
2094<2064		4703<1056	6-WAY TO 3-WAY	*Call
2094<2064		4703<1057	7-WAY TO 3-WAY	*Call
2094<2064		4703<1058	8-WAY TO 3-WAY	*Call
2094<2064		4703<1059	9-WAY TO 3-WAY	*Call
2094<2064		4703<1061	1-WAY TO 3-WAY	*Call
2094<2064		4703<1062	2-WAY TO 3-WAY	*Call
2094<2064		4703<1063	3-WAY TO 3-WAY	*Call
2094<2064		4703<1064	4-WAY TO 3-WAY	*Call
2094<2064		4703<1065	5-WAY TO 3-WAY	*Call
2094<2064		4703<1066	6-WAY TO 3-WAY	*Call
2094<2064		4703<1067	7-WAY TO 3-WAY	*Call
2094<2064		4703<1068	8-WAY TO 3-WAY	*Call
2094<2064		4703<1069	9-WAY TO 3-WAY	*Call
2094<2064		4703<1070	10-WAY TO 3-WAY	*Call
2094<2064		4703<1071	11-WAY TO 3-WAY	*Call
2094<2064		4703<1072	12-WAY TO 3-WAY	*Call
2094<2064		4703<1073	13-WAY TO 3-WAY	*Call
2094<2064		4703<1074	14-WAY TO 3-WAY	*Call
2094<2064		4703<1075	15-WAY TO 3-WAY	*Call
2094<2064		4703<1076	16-WAY TO 3-WAY	*Call
2094<2064		4703<2061	1-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4703<2062	2-WAY TO 3-WAY	*Call
2094<2064		4703<2063	3-WAY TO 3-WAY	*Call
2094<2064		4703<2064	4-WAY TO 3-WAY	*Call
2094<2064		4703<2065	5-WAY TO 3-WAY	*Call
2094<2064		4703<2066	6-WAY TO 3-WAY	*Call
2094<2064		4703<2067	7-WAY TO 3-WAY	*Call
2094<2064		4703<2068	8-WAY TO 3-WAY	*Call
2094<2064		4703<2069	9-WAY TO 3-WAY	*Call
2094<2064		4703<2070	10-WAY TO 3-WAY	*Call
2094<2064		4703<2071	11-WAY TO 3-WAY	*Call
2094<2064		4703<2072	12-WAY TO 3-WAY	*Call
2094<2064		4703<2073	13-WAY TO 3-WAY	*Call
2094<2064		4703<2074	14-WAY TO 3-WAY	*Call
2094<2064		4703<2075	15-WAY TO 3-WAY	*Call
2094<2064		4703<2076	16-WAY TO 3-WAY	*Call
2094<2064		4704<1051	1-WAY TO 4-WAY	*Call
2094<2064		4704<1052	2-WAY TO 4-WAY	*Call
2094<2064		4704<1053	3-WAY TO 4-WAY	*Call
2094<2064		4704<1054	4-WAY TO 4-WAY	*Call
2094<2064		4704<1055	5-WAY TO 4-WAY	*Call
2094<2064		4704<1056	6-WAY TO 4-WAY	*Call
2094<2064		4704<1057	7-WAY TO 4-WAY	*Call
2094<2064		4704<1058	8-WAY TO 4-WAY	*Call
2094<2064		4704<1059	9-WAY TO 4-WAY	*Call
2094<2064		4704<1061	1-WAY TO 4-WAY	*Call
2094<2064		4704<1062	2-WAY TO 4-WAY	*Call
2094<2064		4704<1063	3-WAY TO 4-WAY	*Call
2094<2064		4704<1064	4-WAY TO 4-WAY	*Call
2094<2064		4704<1065	5-WAY TO 4-WAY	*Call
2094<2064		4704<1066	6-WAY TO 4-WAY	*Call
2094<2064		4704<1067	7-WAY TO 4-WAY	*Call
2094<2064		4704<1068	8-WAY TO 4-WAY	*Call
2094<2064		4704<1069	9-WAY TO 4-WAY	*Call
2094<2064		4704<1070	10-WAY TO 4-WAY	*Call
2094<2064		4704<1071	11-WAY TO 4-WAY	*Call
2094<2064		4704<1072	12-WAY TO 4-WAY	*Call
2094<2064		4704<1073	13-WAY TO 4-WAY	*Call
2094<2064		4704<1074	14-WAY TO 4-WAY	*Call
2094<2064		4704<1075	15-WAY TO 4-WAY	*Call
2094<2064		4704<1076	16-WAY TO 4-WAY	*Call
2094<2064		4704<2061	1-WAY TO 4-WAY	*Call
2094<2064		4704<2062	2-WAY TO 4-WAY	*Call
2094<2064		4704<2063	3-WAY TO 4-WAY	*Call
2094<2064		4704<2064	4-WAY TO 4-WAY	*Call
2094<2064		4704<2065	5-WAY TO 4-WAY	*Call
2094<2064		4704<2066	6-WAY TO 4-WAY	*Call
2094<2064		4704<2067	7-WAY TO 4-WAY	*Call
2094<2064		4704<2068	8-WAY TO 4-WAY	*Call
2094<2064		4704<2069	9-WAY TO 4-WAY	*Call
2094<2064		4704<2070	10-WAY TO 4-WAY	*Call
2094<2064		4704<2071	11-WAY TO 4-WAY	*Call
2094<2064		4704<2072	12-WAY TO 4-WAY	*Call
2094<2064		4704<2073	13-WAY TO 4-WAY	*Call
2094<2064		4704<2074	14-WAY TO 4-WAY	*Call
2094<2064		4704<2075	15-WAY TO 4-WAY	*Call
2094<2064		4704<2076	16-WAY TO 4-WAY	*Call
2094<2064		4705<1051	1-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4705<1052	2-WAY TO 5-WAY	*Call
2094<2064		4705<1053	3-WAY TO 5-WAY	*Call
2094<2064		4705<1054	4-WAY TO 5-WAY	*Call
2094<2064		4705<1055	5-WAY TO 5-WAY	*Call
2094<2064		4705<1056	6-WAY TO 5-WAY	*Call
2094<2064		4705<1057	7-WAY TO 5-WAY	*Call
2094<2064		4705<1058	8-WAY TO 5-WAY	*Call
2094<2064		4705<1059	9-WAY TO 5-WAY	*Call
2094<2064		4705<1061	1-WAY TO 5-WAY	*Call
2094<2064		4705<1062	2-WAY TO 5-WAY	*Call
2094<2064		4705<1063	3-WAY TO 5-WAY	*Call
2094<2064		4705<1064	4-WAY TO 5-WAY	*Call
2094<2064		4705<1065	5-WAY TO 5-WAY	*Call
2094<2064		4705<1066	6-WAY TO 5-WAY	*Call
2094<2064		4705<1067	7-WAY TO 5-WAY	*Call
2094<2064		4705<1068	8-WAY TO 5-WAY	*Call
2094<2064		4705<1069	9-WAY TO 5-WAY	*Call
2094<2064		4705<1070	10-WAY TO 5-WAY	*Call
2094<2064		4705<1071	11-WAY TO 5-WAY	*Call
2094<2064		4705<1072	12-WAY TO 5-WAY	*Call
2094<2064		4705<1073	13-WAY TO 5-WAY	*Call
2094<2064		4705<1074	14-WAY TO 5-WAY	*Call
2094<2064		4705<1075	15-WAY TO 5-WAY	*Call
2094<2064		4705<1076	16-WAY TO 5-WAY	*Call
2094<2064		4705<2061	1-WAY TO 5-WAY	*Call
2094<2064		4705<2062	2-WAY TO 5-WAY	*Call
2094<2064		4705<2063	3-WAY TO 5-WAY	*Call
2094<2064		4705<2064	4-WAY TO 5-WAY	*Call
2094<2064		4705<2065	5-WAY TO 5-WAY	*Call
2094<2064		4705<2066	6-WAY TO 5-WAY	*Call
2094<2064		4705<2067	7-WAY TO 5-WAY	*Call
2094<2064		4705<2068	8-WAY TO 5-WAY	*Call
2094<2064		4705<2069	9-WAY TO 5-WAY	*Call
2094<2064		4705<2070	10-WAY TO 5-WAY	*Call
2094<2064		4705<2071	11-WAY TO 5-WAY	*Call
2094<2064		4705<2072	12-WAY TO 5-WAY	*Call
2094<2064		4705<2073	13-WAY TO 5-WAY	*Call
2094<2064		4705<2074	14-WAY TO 5-WAY	*Call
2094<2064		4705<2075	15-WAY TO 5-WAY	*Call
2094<2064		4705<2076	16-WAY TO 5-WAY	*Call
2094<2064		4706<1051	1-WAY TO 6-WAY	*Call
2094<2064		4706<1052	2-WAY TO 6-WAY	*Call
2094<2064		4706<1053	3-WAY TO 6-WAY	*Call
2094<2064		4706<1054	4-WAY TO 6-WAY	*Call
2094<2064		4706<1055	5-WAY TO 6-WAY	*Call
2094<2064		4706<1056	6-WAY TO 6-WAY	*Call
2094<2064		4706<1057	7-WAY TO 6-WAY	*Call
2094<2064		4706<1058	8-WAY TO 6-WAY	*Call
2094<2064		4706<1059	9-WAY TO 6-WAY	*Call
2094<2064		4706<1061	1-WAY TO 6-WAY	*Call
2094<2064		4706<1062	2-WAY TO 6-WAY	*Call
2094<2064		4706<1063	3-WAY TO 6-WAY	*Call
2094<2064		4706<1064	4-WAY TO 6-WAY	*Call
2094<2064		4706<1065	5-WAY TO 6-WAY	*Call
2094<2064		4706<1066	6-WAY TO 6-WAY	*Call
2094<2064		4706<1067	7-WAY TO 6-WAY	*Call
2094<2064		4706<1068	8-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4706<1069	9-WAY TO 6-WAY	*Call
2094<2064		4706<1070	10-WAY TO 6-WAY	*Call
2094<2064		4706<1071	11-WAY TO 6-WAY	*Call
2094<2064		4706<1072	12-WAY TO 6-WAY	*Call
2094<2064		4706<1073	13-WAY TO 6-WAY	*Call
2094<2064		4706<1074	14-WAY TO 6-WAY	*Call
2094<2064		4706<1075	15-WAY TO 6-WAY	*Call
2094<2064		4706<1076	16-WAY TO 6-WAY	*Call
2094<2064		4706<2061	1-WAY TO 6-WAY	*Call
2094<2064		4706<2062	2-WAY TO 6-WAY	*Call
2094<2064		4706<2063	3-WAY TO 6-WAY	*Call
2094<2064		4706<2064	4-WAY TO 6-WAY	*Call
2094<2064		4706<2065	5-WAY TO 6-WAY	*Call
2094<2064		4706<2066	6-WAY TO 6-WAY	*Call
2094<2064		4706<2067	7-WAY TO 6-WAY	*Call
2094<2064		4706<2068	8-WAY TO 6-WAY	*Call
2094<2064		4706<2069	9-WAY TO 6-WAY	*Call
2094<2064		4706<2070	10-WAY TO 6-WAY	*Call
2094<2064		4706<2071	11-WAY TO 6-WAY	*Call
2094<2064		4706<2072	12-WAY TO 6-WAY	*Call
2094<2064		4706<2073	13-WAY TO 6-WAY	*Call
2094<2064		4706<2074	14-WAY TO 6-WAY	*Call
2094<2064		4706<2075	15-WAY TO 6-WAY	*Call
2094<2064		4706<2076	16-WAY TO 6-WAY	*Call
2094<2064		4707<1051	1-WAY TO 7-WAY	*Call
2094<2064		4707<1052	2-WAY TO 7-WAY	*Call
2094<2064		4707<1053	3-WAY TO 7-WAY	*Call
2094<2064		4707<1054	4-WAY TO 7-WAY	*Call
2094<2064		4707<1055	5-WAY TO 7-WAY	*Call
2094<2064		4707<1056	6-WAY TO 7-WAY	*Call
2094<2064		4707<1057	7-WAY TO 7-WAY	*Call
2094<2064		4707<1058	8-WAY TO 7-WAY	*Call
2094<2064		4707<1059	9-WAY TO 7-WAY	*Call
2094<2064		4707<1061	1-WAY TO 7-WAY	*Call
2094<2064		4707<1062	2-WAY TO 7-WAY	*Call
2094<2064		4707<1063	3-WAY TO 7-WAY	*Call
2094<2064		4707<1064	4-WAY TO 7-WAY	*Call
2094<2064		4707<1065	5-WAY TO 7-WAY	*Call
2094<2064		4707<1066	6-WAY TO 7-WAY	*Call
2094<2064		4707<1067	7-WAY TO 7-WAY	*Call
2094<2064		4707<1068	8-WAY TO 7-WAY	*Call
2094<2064		4707<1069	9-WAY TO 7-WAY	*Call
2094<2064		4707<1070	10-WAY TO 7-WAY	*Call
2094<2064		4707<1071	11-WAY TO 7-WAY	*Call
2094<2064		4707<1072	12-WAY TO 7-WAY	*Call
2094<2064		4707<1073	13-WAY TO 7-WAY	*Call
2094<2064		4707<1074	14-WAY TO 7-WAY	*Call
2094<2064		4707<1075	15-WAY TO 7-WAY	*Call
2094<2064		4707<1076	16-WAY TO 7-WAY	*Call
2094<2064		4707<2061	1-WAY TO 7-WAY	*Call
2094<2064		4707<2062	2-WAY TO 7-WAY	*Call
2094<2064		4707<2063	3-WAY TO 7-WAY	*Call
2094<2064		4707<2064	4-WAY TO 7-WAY	*Call
2094<2064		4707<2065	5-WAY TO 7-WAY	*Call
2094<2064		4707<2066	6-WAY TO 7-WAY	*Call
2094<2064		4707<2067	7-WAY TO 7-WAY	*Call
2094<2064		4707<2068	8-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4707<2069	9-WAY TO 7-WAY	*Call
2094<2064		4707<2070	10-WAY TO 7-WAY	*Call
2094<2064		4707<2071	11-WAY TO 7-WAY	*Call
2094<2064		4707<2072	12-WAY TO 7-WAY	*Call
2094<2064		4707<2073	13-WAY TO 7-WAY	*Call
2094<2064		4707<2074	14-WAY TO 7-WAY	*Call
2094<2064		4707<2075	15-WAY TO 7-WAY	*Call
2094<2064		4707<2076	16-WAY TO 7-WAY	*Call
2094<2064		4708<1051	1-WAY TO 8-WAY	*Call
2094<2064		4708<1052	2-WAY TO 8-WAY	*Call
2094<2064		4708<1053	3-WAY TO 8-WAY	*Call
2094<2064		4708<1054	4-WAY TO 8-WAY	*Call
2094<2064		4708<1055	5-WAY TO 8-WAY	*Call
2094<2064		4708<1056	6-WAY TO 8-WAY	*Call
2094<2064		4708<1057	7-WAY TO 8-WAY	*Call
2094<2064		4708<1058	8-WAY TO 8-WAY	*Call
2094<2064		4708<1059	9-WAY TO 8-WAY	*Call
2094<2064		4708<1061	1-WAY TO 8-WAY	*Call
2094<2064		4708<1062	2-WAY TO 8-WAY	*Call
2094<2064		4708<1063	3-WAY TO 8-WAY	*Call
2094<2064		4708<1064	4-WAY TO 8-WAY	*Call
2094<2064		4708<1065	5-WAY TO 8-WAY	*Call
2094<2064		4708<1066	6-WAY TO 8-WAY	*Call
2094<2064		4708<1067	7-WAY TO 8-WAY	*Call
2094<2064		4708<1068	8-WAY TO 8-WAY	*Call
2094<2064		4708<1069	9-WAY TO 8-WAY	*Call
2094<2064		4708<1070	10-WAY TO 8-WAY	*Call
2094<2064		4708<1071	11-WAY TO 8-WAY	*Call
2094<2064		4708<1072	12-WAY TO 8-WAY	*Call
2094<2064		4708<1073	13-WAY TO 8-WAY	*Call
2094<2064		4708<1074	14-WAY TO 8-WAY	*Call
2094<2064		4708<1075	15-WAY TO 8-WAY	*Call
2094<2064		4708<1076	16-WAY TO 8-WAY	*Call
2094<2064		4708<2061	1-WAY TO 8-WAY	*Call
2094<2064		4708<2062	2-WAY TO 8-WAY	*Call
2094<2064		4708<2063	3-WAY TO 8-WAY	*Call
2094<2064		4708<2064	4-WAY TO 8-WAY	*Call
2094<2064		4708<2065	5-WAY TO 8-WAY	*Call
2094<2064		4708<2066	6-WAY TO 8-WAY	*Call
2094<2064		4708<2067	7-WAY TO 8-WAY	*Call
2094<2064		4708<2068	8-WAY TO 8-WAY	*Call
2094<2064		4708<2069	9-WAY TO 8-WAY	*Call
2094<2064		4708<2070	10-WAY TO 8-WAY	*Call
2094<2064		4708<2071	11-WAY TO 8-WAY	*Call
2094<2064		4708<2072	12-WAY TO 8-WAY	*Call
2094<2064		4708<2073	13-WAY TO 8-WAY	*Call
2094<2064		4708<2074	14-WAY TO 8-WAY	*Call
2094<2064		4708<2075	15-WAY TO 8-WAY	*Call
2094<2064		4708<2076	16-WAY TO 8-WAY	*Call
2094<2064		4801<1051	1-WAY TO 1-WAY	*Call
2094<2064		4801<1052	2-WAY TO 1-WAY	*Call
2094<2064		4801<1053	3-WAY TO 1-WAY	*Call
2094<2064		4801<1054	4-WAY TO 1-WAY	*Call
2094<2064		4801<1055	5-WAY TO 1-WAY	*Call
2094<2064		4801<1056	6-WAY TO 1-WAY	*Call
2094<2064		4801<1057	7-WAY TO 1-WAY	*Call
2094<2064		4801<1058	8-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4801<1059	9-WAY TO 1-WAY	*Call
2094<2064		4801<1061	1-WAY TO 1-WAY	*Call
2094<2064		4801<1062	2-WAY TO 1-WAY	*Call
2094<2064		4801<1063	3-WAY TO 1-WAY	*Call
2094<2064		4801<1064	4-WAY TO 1-WAY	*Call
2094<2064		4801<1065	5-WAY TO 1-WAY	*Call
2094<2064		4801<1066	6-WAY TO 1-WAY	*Call
2094<2064		4801<1067	7-WAY TO 1-WAY	*Call
2094<2064		4801<1068	8-WAY TO 1-WAY	*Call
2094<2064		4801<1069	9-WAY TO 1-WAY	*Call
2094<2064		4801<1070	10-WAY TO 1-WAY	*Call
2094<2064		4801<1071	11-WAY TO 1-WAY	*Call
2094<2064		4801<1072	12-WAY TO 1-WAY	*Call
2094<2064		4801<1073	13-WAY TO 1-WAY	*Call
2094<2064		4801<1074	14-WAY TO 1-WAY	*Call
2094<2064		4801<1075	15-WAY TO 1-WAY	*Call
2094<2064		4801<1076	16-WAY TO 1-WAY	*Call
2094<2064		4801<2061	1-WAY TO 1-WAY	*Call
2094<2064		4801<2062	2-WAY TO 1-WAY	*Call
2094<2064		4801<2063	3-WAY TO 1-WAY	*Call
2094<2064		4801<2064	4-WAY TO 1-WAY	*Call
2094<2064		4801<2065	5-WAY TO 1-WAY	*Call
2094<2064		4801<2066	6-WAY TO 1-WAY	*Call
2094<2064		4801<2067	7-WAY TO 1-WAY	*Call
2094<2064		4801<2068	8-WAY TO 1-WAY	*Call
2094<2064		4801<2069	9-WAY TO 1-WAY	*Call
2094<2064		4801<2070	10-WAY TO 1-WAY	*Call
2094<2064		4801<2071	11-WAY TO 1-WAY	*Call
2094<2064		4801<2072	12-WAY TO 1-WAY	*Call
2094<2064		4801<2073	13-WAY TO 1-WAY	*Call
2094<2064		4801<2074	14-WAY TO 1-WAY	*Call
2094<2064		4801<2075	15-WAY TO 1-WAY	*Call
2094<2064		4801<2076	16-WAY TO 1-WAY	*Call
2094<2064		4802<1051	1-WAY TO 2-WAY	*Call
2094<2064		4802<1052	2-WAY TO 2-WAY	*Call
2094<2064		4802<1053	3-WAY TO 2-WAY	*Call
2094<2064		4802<1054	4-WAY TO 2-WAY	*Call
2094<2064		4802<1055	5-WAY TO 2-WAY	*Call
2094<2064		4802<1056	6-WAY TO 2-WAY	*Call
2094<2064		4802<1057	7-WAY TO 2-WAY	*Call
2094<2064		4802<1058	8-WAY TO 2-WAY	*Call
2094<2064		4802<1059	9-WAY TO 2-WAY	*Call
2094<2064		4802<1061	1-WAY TO 2-WAY	*Call
2094<2064		4802<1062	2-WAY TO 2-WAY	*Call
2094<2064		4802<1063	3-WAY TO 2-WAY	*Call
2094<2064		4802<1064	4-WAY TO 2-WAY	*Call
2094<2064		4802<1065	5-WAY TO 2-WAY	*Call
2094<2064		4802<1066	6-WAY TO 2-WAY	*Call
2094<2064		4802<1067	7-WAY TO 2-WAY	*Call
2094<2064		4802<1068	8-WAY TO 2-WAY	*Call
2094<2064		4802<1069	9-WAY TO 2-WAY	*Call
2094<2064		4802<1070	10-WAY TO 2-WAY	*Call
2094<2064		4802<1071	11-WAY TO 2-WAY	*Call
2094<2064		4802<1072	12-WAY TO 2-WAY	*Call
2094<2064		4802<1073	13-WAY TO 2-WAY	*Call
2094<2064		4802<1074	14-WAY TO 2-WAY	*Call
2094<2064		4802<1075	15-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4802<1076	16-WAY TO 2-WAY	*Call
2094<2064		4802<2061	1-WAY TO 2-WAY	*Call
2094<2064		4802<2062	2-WAY TO 2-WAY	*Call
2094<2064		4802<2063	3-WAY TO 2-WAY	*Call
2094<2064		4802<2064	4-WAY TO 2-WAY	*Call
2094<2064		4802<2065	5-WAY TO 2-WAY	*Call
2094<2064		4802<2066	6-WAY TO 2-WAY	*Call
2094<2064		4802<2067	7-WAY TO 2-WAY	*Call
2094<2064		4802<2068	8-WAY TO 2-WAY	*Call
2094<2064		4802<2069	9-WAY TO 2-WAY	*Call
2094<2064		4802<2070	10-WAY TO 2-WAY	*Call
2094<2064		4802<2071	11-WAY TO 2-WAY	*Call
2094<2064		4802<2072	12-WAY TO 2-WAY	*Call
2094<2064		4802<2073	13-WAY TO 2-WAY	*Call
2094<2064		4802<2074	14-WAY TO 2-WAY	*Call
2094<2064		4802<2075	15-WAY TO 2-WAY	*Call
2094<2064		4802<2076	16-WAY TO 2-WAY	*Call
2094<2064		4803<1051	1-WAY TO 3-WAY	*Call
2094<2064		4803<1052	2-WAY TO 3-WAY	*Call
2094<2064		4803<1053	3-WAY TO 3-WAY	*Call
2094<2064		4803<1054	4-WAY TO 3-WAY	*Call
2094<2064		4803<1055	5-WAY TO 3-WAY	*Call
2094<2064		4803<1056	6-WAY TO 3-WAY	*Call
2094<2064		4803<1057	7-WAY TO 3-WAY	*Call
2094<2064		4803<1058	8-WAY TO 3-WAY	*Call
2094<2064		4803<1059	9-WAY TO 3-WAY	*Call
2094<2064		4803<1061	1-WAY TO 3-WAY	*Call
2094<2064		4803<1062	2-WAY TO 3-WAY	*Call
2094<2064		4803<1063	3-WAY TO 3-WAY	*Call
2094<2064		4803<1064	4-WAY TO 3-WAY	*Call
2094<2064		4803<1065	5-WAY TO 3-WAY	*Call
2094<2064		4803<1066	6-WAY TO 3-WAY	*Call
2094<2064		4803<1067	7-WAY TO 3-WAY	*Call
2094<2064		4803<1068	8-WAY TO 3-WAY	*Call
2094<2064		4803<1069	9-WAY TO 3-WAY	*Call
2094<2064		4803<1070	10-WAY TO 3-WAY	*Call
2094<2064		4803<1071	11-WAY TO 3-WAY	*Call
2094<2064		4803<1072	12-WAY TO 3-WAY	*Call
2094<2064		4803<1073	13-WAY TO 3-WAY	*Call
2094<2064		4803<1074	14-WAY TO 3-WAY	*Call
2094<2064		4803<1075	15-WAY TO 3-WAY	*Call
2094<2064		4803<1076	16-WAY TO 3-WAY	*Call
2094<2064		4803<2061	1-WAY TO 3-WAY	*Call
2094<2064		4803<2062	2-WAY TO 3-WAY	*Call
2094<2064		4803<2063	3-WAY TO 3-WAY	*Call
2094<2064		4803<2064	4-WAY TO 3-WAY	*Call
2094<2064		4803<2065	5-WAY TO 3-WAY	*Call
2094<2064		4803<2066	6-WAY TO 3-WAY	*Call
2094<2064		4803<2067	7-WAY TO 3-WAY	*Call
2094<2064		4803<2068	8-WAY TO 3-WAY	*Call
2094<2064		4803<2069	9-WAY TO 3-WAY	*Call
2094<2064		4803<2070	10-WAY TO 3-WAY	*Call
2094<2064		4803<2071	11-WAY TO 3-WAY	*Call
2094<2064		4803<2072	12-WAY TO 3-WAY	*Call
2094<2064		4803<2073	13-WAY TO 3-WAY	*Call
2094<2064		4803<2074	14-WAY TO 3-WAY	*Call
2094<2064		4803<2075	15-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4803<2076	16-WAY TO 3-WAY	*Call
2094<2064		4804<1051	1-WAY TO 4-WAY	*Call
2094<2064		4804<1052	2-WAY TO 4-WAY	*Call
2094<2064		4804<1053	3-WAY TO 4-WAY	*Call
2094<2064		4804<1054	4-WAY TO 4-WAY	*Call
2094<2064		4804<1055	5-WAY TO 4-WAY	*Call
2094<2064		4804<1056	6-WAY TO 4-WAY	*Call
2094<2064		4804<1057	7-WAY TO 4-WAY	*Call
2094<2064		4804<1058	8-WAY TO 4-WAY	*Call
2094<2064		4804<1059	9-WAY TO 4-WAY	*Call
2094<2064		4804<1061	1-WAY TO 4-WAY	*Call
2094<2064		4804<1062	2-WAY TO 4-WAY	*Call
2094<2064		4804<1063	3-WAY TO 4-WAY	*Call
2094<2064		4804<1064	4-WAY TO 4-WAY	*Call
2094<2064		4804<1065	5-WAY TO 4-WAY	*Call
2094<2064		4804<1066	6-WAY TO 4-WAY	*Call
2094<2064		4804<1067	7-WAY TO 4-WAY	*Call
2094<2064		4804<1068	8-WAY TO 4-WAY	*Call
2094<2064		4804<1069	9-WAY TO 4-WAY	*Call
2094<2064		4804<1070	10-WAY TO 4-WAY	*Call
2094<2064		4804<1071	11-WAY TO 4-WAY	*Call
2094<2064		4804<1072	12-WAY TO 4-WAY	*Call
2094<2064		4804<1073	13-WAY TO 4-WAY	*Call
2094<2064		4804<1074	14-WAY TO 4-WAY	*Call
2094<2064		4804<1075	15-WAY TO 4-WAY	*Call
2094<2064		4804<1076	16-WAY TO 4-WAY	*Call
2094<2064		4804<2061	1-WAY TO 4-WAY	*Call
2094<2064		4804<2062	2-WAY TO 4-WAY	*Call
2094<2064		4804<2063	3-WAY TO 4-WAY	*Call
2094<2064		4804<2064	4-WAY TO 4-WAY	*Call
2094<2064		4804<2065	5-WAY TO 4-WAY	*Call
2094<2064		4804<2066	6-WAY TO 4-WAY	*Call
2094<2064		4804<2067	7-WAY TO 4-WAY	*Call
2094<2064		4804<2068	8-WAY TO 4-WAY	*Call
2094<2064		4804<2069	9-WAY TO 4-WAY	*Call
2094<2064		4804<2070	10-WAY TO 4-WAY	*Call
2094<2064		4804<2071	11-WAY TO 4-WAY	*Call
2094<2064		4804<2072	12-WAY TO 4-WAY	*Call
2094<2064		4804<2073	13-WAY TO 4-WAY	*Call
2094<2064		4804<2074	14-WAY TO 4-WAY	*Call
2094<2064		4804<2075	15-WAY TO 4-WAY	*Call
2094<2064		4804<2076	16-WAY TO 4-WAY	*Call
2094<2064		4805<1051	1-WAY TO 5-WAY	*Call
2094<2064		4805<1052	2-WAY TO 5-WAY	*Call
2094<2064		4805<1053	3-WAY TO 5-WAY	*Call
2094<2064		4805<1054	4-WAY TO 5-WAY	*Call
2094<2064		4805<1055	5-WAY TO 5-WAY	*Call
2094<2064		4805<1056	6-WAY TO 5-WAY	*Call
2094<2064		4805<1057	7-WAY TO 5-WAY	*Call
2094<2064		4805<1058	8-WAY TO 5-WAY	*Call
2094<2064		4805<1059	9-WAY TO 5-WAY	*Call
2094<2064		4805<1061	1-WAY TO 5-WAY	*Call
2094<2064		4805<1062	2-WAY TO 5-WAY	*Call
2094<2064		4805<1063	3-WAY TO 5-WAY	*Call
2094<2064		4805<1064	4-WAY TO 5-WAY	*Call
2094<2064		4805<1065	5-WAY TO 5-WAY	*Call
2094<2064		4805<1066	6-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4805<1067	7-WAY TO 5-WAY	*Call
2094<2064		4805<1068	8-WAY TO 5-WAY	*Call
2094<2064		4805<1069	9-WAY TO 5-WAY	*Call
2094<2064		4805<1070	10-WAY TO 5-WAY	*Call
2094<2064		4805<1071	11-WAY TO 5-WAY	*Call
2094<2064		4805<1072	12-WAY TO 5-WAY	*Call
2094<2064		4805<1073	13-WAY TO 5-WAY	*Call
2094<2064		4805<1074	14-WAY TO 5-WAY	*Call
2094<2064		4805<1075	15-WAY TO 5-WAY	*Call
2094<2064		4805<1076	16-WAY TO 5-WAY	*Call
2094<2064		4805<2061	1-WAY TO 5-WAY	*Call
2094<2064		4805<2062	2-WAY TO 5-WAY	*Call
2094<2064		4805<2063	3-WAY TO 5-WAY	*Call
2094<2064		4805<2064	4-WAY TO 5-WAY	*Call
2094<2064		4805<2065	5-WAY TO 5-WAY	*Call
2094<2064		4805<2066	6-WAY TO 5-WAY	*Call
2094<2064		4805<2067	7-WAY TO 5-WAY	*Call
2094<2064		4805<2068	8-WAY TO 5-WAY	*Call
2094<2064		4805<2069	9-WAY TO 5-WAY	*Call
2094<2064		4805<2070	10-WAY TO 5-WAY	*Call
2094<2064		4805<2071	11-WAY TO 5-WAY	*Call
2094<2064		4805<2072	12-WAY TO 5-WAY	*Call
2094<2064		4805<2073	13-WAY TO 5-WAY	*Call
2094<2064		4805<2074	14-WAY TO 5-WAY	*Call
2094<2064		4805<2075	15-WAY TO 5-WAY	*Call
2094<2064		4805<2076	16-WAY TO 5-WAY	*Call
2094<2064		4806<1051	1-WAY TO 6-WAY	*Call
2094<2064		4806<1052	2-WAY TO 6-WAY	*Call
2094<2064		4806<1053	3-WAY TO 6-WAY	*Call
2094<2064		4806<1054	4-WAY TO 6-WAY	*Call
2094<2064		4806<1055	5-WAY TO 6-WAY	*Call
2094<2064		4806<1056	6-WAY TO 6-WAY	*Call
2094<2064		4806<1057	7-WAY TO 6-WAY	*Call
2094<2064		4806<1058	8-WAY TO 6-WAY	*Call
2094<2064		4806<1059	9-WAY TO 6-WAY	*Call
2094<2064		4806<1061	1-WAY TO 6-WAY	*Call
2094<2064		4806<1062	2-WAY TO 6-WAY	*Call
2094<2064		4806<1063	3-WAY TO 6-WAY	*Call
2094<2064		4806<1064	4-WAY TO 6-WAY	*Call
2094<2064		4806<1065	5-WAY TO 6-WAY	*Call
2094<2064		4806<1066	6-WAY TO 6-WAY	*Call
2094<2064		4806<1067	7-WAY TO 6-WAY	*Call
2094<2064		4806<1068	8-WAY TO 6-WAY	*Call
2094<2064		4806<1069	9-WAY TO 6-WAY	*Call
2094<2064		4806<1070	10-WAY TO 6-WAY	*Call
2094<2064		4806<1071	11-WAY TO 6-WAY	*Call
2094<2064		4806<1072	12-WAY TO 6-WAY	*Call
2094<2064		4806<1073	13-WAY TO 6-WAY	*Call
2094<2064		4806<1074	14-WAY TO 6-WAY	*Call
2094<2064		4806<1075	15-WAY TO 6-WAY	*Call
2094<2064		4806<1076	16-WAY TO 6-WAY	*Call
2094<2064		4806<2061	1-WAY TO 6-WAY	*Call
2094<2064		4806<2062	2-WAY TO 6-WAY	*Call
2094<2064		4806<2063	3-WAY TO 6-WAY	*Call
2094<2064		4806<2064	4-WAY TO 6-WAY	*Call
2094<2064		4806<2065	5-WAY TO 6-WAY	*Call
2094<2064		4806<2066	6-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4806<2067	7-WAY TO 6-WAY	*Call
2094<2064		4806<2068	8-WAY TO 6-WAY	*Call
2094<2064		4806<2069	9-WAY TO 6-WAY	*Call
2094<2064		4806<2070	10-WAY TO 6-WAY	*Call
2094<2064		4806<2071	11-WAY TO 6-WAY	*Call
2094<2064		4806<2072	12-WAY TO 6-WAY	*Call
2094<2064		4806<2073	13-WAY TO 6-WAY	*Call
2094<2064		4806<2074	14-WAY TO 6-WAY	*Call
2094<2064		4806<2075	15-WAY TO 6-WAY	*Call
2094<2064		4806<2076	16-WAY TO 6-WAY	*Call
2094<2064		4807<1051	1-WAY TO 7-WAY	*Call
2094<2064		4807<1052	2-WAY TO 7-WAY	*Call
2094<2064		4807<1053	3-WAY TO 7-WAY	*Call
2094<2064		4807<1054	4-WAY TO 7-WAY	*Call
2094<2064		4807<1055	5-WAY TO 7-WAY	*Call
2094<2064		4807<1056	6-WAY TO 7-WAY	*Call
2094<2064		4807<1057	7-WAY TO 7-WAY	*Call
2094<2064		4807<1058	8-WAY TO 7-WAY	*Call
2094<2064		4807<1059	9-WAY TO 7-WAY	*Call
2094<2064		4807<1061	1-WAY TO 7-WAY	*Call
2094<2064		4807<1062	2-WAY TO 7-WAY	*Call
2094<2064		4807<1063	3-WAY TO 7-WAY	*Call
2094<2064		4807<1064	4-WAY TO 7-WAY	*Call
2094<2064		4807<1065	5-WAY TO 7-WAY	*Call
2094<2064		4807<1066	6-WAY TO 7-WAY	*Call
2094<2064		4807<1067	7-WAY TO 7-WAY	*Call
2094<2064		4807<1068	8-WAY TO 7-WAY	*Call
2094<2064		4807<1069	9-WAY TO 7-WAY	*Call
2094<2064		4807<1070	10-WAY TO 7-WAY	*Call
2094<2064		4807<1071	11-WAY TO 7-WAY	*Call
2094<2064		4807<1072	12-WAY TO 7-WAY	*Call
2094<2064		4807<1073	13-WAY TO 7-WAY	*Call
2094<2064		4807<1074	14-WAY TO 7-WAY	*Call
2094<2064		4807<1075	15-WAY TO 7-WAY	*Call
2094<2064		4807<1076	16-WAY TO 7-WAY	*Call
2094<2064		4807<2061	1-WAY TO 7-WAY	*Call
2094<2064		4807<2062	2-WAY TO 7-WAY	*Call
2094<2064		4807<2063	3-WAY TO 7-WAY	*Call
2094<2064		4807<2064	4-WAY TO 7-WAY	*Call
2094<2064		4807<2065	5-WAY TO 7-WAY	*Call
2094<2064		4807<2066	6-WAY TO 7-WAY	*Call
2094<2064		4807<2067	7-WAY TO 7-WAY	*Call
2094<2064		4807<2068	8-WAY TO 7-WAY	*Call
2094<2064		4807<2069	9-WAY TO 7-WAY	*Call
2094<2064		4807<2070	10-WAY TO 7-WAY	*Call
2094<2064		4807<2071	11-WAY TO 7-WAY	*Call
2094<2064		4807<2072	12-WAY TO 7-WAY	*Call
2094<2064		4807<2073	13-WAY TO 7-WAY	*Call
2094<2064		4807<2074	14-WAY TO 7-WAY	*Call
2094<2064		4807<2075	15-WAY TO 7-WAY	*Call
2094<2064		4807<2076	16-WAY TO 7-WAY	*Call
2094<2064		4808<1051	1-WAY TO 8-WAY	*Call
2094<2064		4808<1052	2-WAY TO 8-WAY	*Call
2094<2064		4808<1053	3-WAY TO 8-WAY	*Call
2094<2064		4808<1054	4-WAY TO 8-WAY	*Call
2094<2064		4808<1055	5-WAY TO 8-WAY	*Call
2094<2064		4808<1056	6-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2064		4808<1057	7-WAY TO 8-WAY	*Call
2094<2064		4808<1058	8-WAY TO 8-WAY	*Call
2094<2064		4808<1059	9-WAY TO 8-WAY	*Call
2094<2064		4808<1061	1-WAY TO 8-WAY	*Call
2094<2064		4808<1062	2-WAY TO 8-WAY	*Call
2094<2064		4808<1063	3-WAY TO 8-WAY	*Call
2094<2064		4808<1064	4-WAY TO 8-WAY	*Call
2094<2064		4808<1065	5-WAY TO 8-WAY	*Call
2094<2064		4808<1066	6-WAY TO 8-WAY	*Call
2094<2064		4808<1067	7-WAY TO 8-WAY	*Call
2094<2064		4808<1068	8-WAY TO 8-WAY	*Call
2094<2064		4808<1069	9-WAY TO 8-WAY	*Call
2094<2064		4808<1070	10-WAY TO 8-WAY	*Call
2094<2064		4808<1071	11-WAY TO 8-WAY	*Call
2094<2064		4808<1072	12-WAY TO 8-WAY	*Call
2094<2064		4808<1073	13-WAY TO 8-WAY	*Call
2094<2064		4808<1074	14-WAY TO 8-WAY	*Call
2094<2064		4808<1075	15-WAY TO 8-WAY	*Call
2094<2064		4808<1076	16-WAY TO 8-WAY	*Call
2094<2064		4808<2061	1-WAY TO 8-WAY	*Call
2094<2064		4808<2062	2-WAY TO 8-WAY	*Call
2094<2064		4808<2063	3-WAY TO 8-WAY	*Call
2094<2064		4808<2064	4-WAY TO 8-WAY	*Call
2094<2064		4808<2065	5-WAY TO 8-WAY	*Call
2094<2064		4808<2066	6-WAY TO 8-WAY	*Call
2094<2064		4808<2067	7-WAY TO 8-WAY	*Call
2094<2064		4808<2068	8-WAY TO 8-WAY	*Call
2094<2064		4808<2069	9-WAY TO 8-WAY	*Call
2094<2064		4808<2070	10-WAY TO 8-WAY	*Call
2094<2064		4808<2071	11-WAY TO 8-WAY	*Call
2094<2064		4808<2072	12-WAY TO 8-WAY	*Call
2094<2064		4808<2073	13-WAY TO 8-WAY	*Call
2094<2064		4808<2074	14-WAY TO 8-WAY	*Call
2094<2064		4808<2075	15-WAY TO 8-WAY	*Call
2094<2064		4808<2076	16-WAY TO 8-WAY	*Call
2094<2064		7812<1091	ICF TO ICF	*Call
2094<2084		1110<1108	A08 TO S08	*Call
2094<2084		1110<1216	B16 TO S08	*Call
2094<2084		1110<1324	C24 TO S08	*Call
2094<2084		1110<1432	D32 TO S08	*Call
2094<2084		1111<1108	A08 TO S18	*Call
2094<2084		1111<1216	B16 TO S18	*Call
2094<2084		1111<1324	C24 TO S18	*Call
2094<2084		1111<1432	D32 TO S18	*Call
2094<2084		1112<1108	A08 TO S28	*Call
2094<2084		1112<1216	B16 TO S28	*Call
2094<2084		1112<1324	C24 TO S28	*Call
2094<2084		1112<1432	D32 TO S28	*Call
2094<2084		1113<1108	A08 TO S38	*Call
2094<2084		1113<1216	B16 TO S38	*Call
2094<2084		1113<1324	C24 TO S38	*Call
2094<2084		1113<1432	D32 TO S38	*Call
2094<2084		1114<1108	A08 TO S54	*Call
2094<2084		1114<1216	B16 TO S54	*Call
2094<2084		1114<1324	C24 TO S54	*Call
2094<2084		1114<1432	D32 TO S54	*Call
2094<2084		2701<2601	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4500<4402	2-WAY TO ZERO-WAY	*Call
2094<2084		4500<4403	3-WAY TO ZERO-WAY	*Call
2094<2084		4500<4404	4-WAY TO ZERO-WAY	*Call
2094<2084		4500<4405	5-WAY TO ZERO-WAY	*Call
2094<2084		4500<4406	6-WAY TO ZERO-WAY	*Call
2094<2084		4500<4407	7-WAY TO ZERO-WAY	*Call
2094<2084		4500<4408	8-WAY TO ZERO-WAY	*Call
2094<2084		4500<4409	9-WAY TO ZERO-WAY	*Call
2094<2084		4500<4410	10-WAY TO ZERO-WAY	*Call
2094<2084		4500<4411	11-WAY TO ZERO-WAY	*Call
2094<2084		4500<4412	12-WAY TO ZERO-WAY	*Call
2094<2084		4500<4413	13-WAY TO ZERO-WAY	*Call
2094<2084		4500<4414	14-WAY TO ZERO-WAY	*Call
2094<2084		4500<4415	15-WAY TO ZERO-WAY	*Call
2094<2084		4500<4416	16-WAY TO ZERO-WAY	*Call
2094<2084		4500<4417	17-WAY TO ZERO-WAY	*Call
2094<2084		4500<4418	18-WAY TO ZERO-WAY	*Call
2094<2084		4500<4419	19-WAY TO ZERO-WAY	*Call
2094<2084		4500<4420	20-WAY TO ZERO-WAY	*Call
2094<2084		4500<4421	21-WAY TO ZERO-WAY	*Call
2094<2084		4500<4422	22-WAY TO ZERO-WAY	*Call
2094<2084		4500<4423	23-WAY TO ZERO-WAY	*Call
2094<2084		4500<4424	24-WAY TO ZERO-WAY	*Call
2094<2084		4500<4425	25-WAY TO ZERO-WAY	*Call
2094<2084		4500<4426	26-WAY TO ZERO-WAY	*Call
2094<2084		4500<4427	27-WAY TO ZERO-WAY	*Call
2094<2084		4500<4428	28-WAY TO ZERO-WAY	*Call
2094<2084		4500<4429	29-WAY TO ZERO-WAY	*Call
2094<2084		4500<4430	30-WAY TO ZERO-WAY	*Call
2094<2084		4500<4431	31-WAY TO ZERO-WAY	*Call
2094<2084		4500<4432	32-WAY TO ZERO-WAY	*Call
2094<2084		4501<4400	ZERO-WAY TO 1-WAY	*Call
2094<2084		4501<4401	1-WAY TO 1-WAY	*Call
2094<2084		4501<4402	2-WAY TO 1-WAY	*Call
2094<2084		4501<4403	3-WAY TO 1-WAY	*Call
2094<2084		4501<4404	4-WAY TO 1-WAY	*Call
2094<2084		4501<4405	5-WAY TO 1-WAY	*Call
2094<2084		4501<4406	6-WAY TO 1-WAY	*Call
2094<2084		4501<4407	7-WAY TO 1-WAY	*Call
2094<2084		4501<4408	8-WAY TO 1-WAY	*Call
2094<2084		4501<4409	9-WAY TO 1-WAY	*Call
2094<2084		4501<4410	10-WAY TO 1-WAY	*Call
2094<2084		4501<4411	11-WAY TO 1-WAY	*Call
2094<2084		4501<4412	12-WAY TO 1-WAY	*Call
2094<2084		4501<4413	13-WAY TO 1-WAY	*Call
2094<2084		4501<4414	14-WAY TO 1-WAY	*Call
2094<2084		4501<4415	15-WAY TO 1-WAY	*Call
2094<2084		4501<4416	16-WAY TO 1-WAY	*Call
2094<2084		4501<4417	17-WAY TO 1-WAY	*Call
2094<2084		4501<4418	18-WAY TO 1-WAY	*Call
2094<2084		4501<4419	19-WAY TO 1-WAY	*Call
2094<2084		4501<4420	20-WAY TO 1-WAY	*Call
2094<2084		4501<4421	21-WAY TO 1-WAY	*Call
2094<2084		4501<4422	22-WAY TO 1-WAY	*Call
2094<2084		4501<4423	23-WAY TO 1-WAY	*Call
2094<2084		4501<4424	24-WAY TO 1-WAY	*Call
2094<2084		4501<4425	25-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4501<4426	26-WAY TO 1-WAY	*Call
2094<2084		4501<4427	27-WAY TO 1-WAY	*Call
2094<2084		4501<4428	28-WAY TO 1-WAY	*Call
2094<2084		4501<4429	29-WAY TO 1-WAY	*Call
2094<2084		4501<4430	30-WAY TO 1-WAY	*Call
2094<2084		4501<4431	31-WAY TO 1-WAY	*Call
2094<2084		4501<4432	32-WAY TO 1-WAY	*Call
2094<2084		4502<4400	ZERO-WAY TO 2-WAY	*Call
2094<2084		4502<4401	1-WAY TO 2-WAY	*Call
2094<2084		4502<4402	2-WAY TO 2-WAY	*Call
2094<2084		4502<4403	3-WAY TO 2-WAY	*Call
2094<2084		4502<4404	4-WAY TO 2-WAY	*Call
2094<2084		4502<4405	5-WAY TO 2-WAY	*Call
2094<2084		4502<4406	6-WAY TO 2-WAY	*Call
2094<2084		4502<4407	7-WAY TO 2-WAY	*Call
2094<2084		4502<4408	8-WAY TO 2-WAY	*Call
2094<2084		4502<4409	9-WAY TO 2-WAY	*Call
2094<2084		4502<4410	10-WAY TO 2-WAY	*Call
2094<2084		4502<4411	11-WAY TO 2-WAY	*Call
2094<2084		4502<4412	12-WAY TO 2-WAY	*Call
2094<2084		4502<4413	13-WAY TO 2-WAY	*Call
2094<2084		4502<4414	14-WAY TO 2-WAY	*Call
2094<2084		4502<4415	15-WAY TO 2-WAY	*Call
2094<2084		4502<4416	16-WAY TO 2-WAY	*Call
2094<2084		4502<4417	17-WAY TO 2-WAY	*Call
2094<2084		4502<4418	18-WAY TO 2-WAY	*Call
2094<2084		4502<4419	19-WAY TO 2-WAY	*Call
2094<2084		4502<4420	20-WAY TO 2-WAY	*Call
2094<2084		4502<4421	21-WAY TO 2-WAY	*Call
2094<2084		4502<4422	22-WAY TO 2-WAY	*Call
2094<2084		4502<4423	23-WAY TO 2-WAY	*Call
2094<2084		4502<4424	24-WAY TO 2-WAY	*Call
2094<2084		4502<4425	25-WAY TO 2-WAY	*Call
2094<2084		4502<4426	26-WAY TO 2-WAY	*Call
2094<2084		4502<4427	27-WAY TO 2-WAY	*Call
2094<2084		4502<4428	28-WAY TO 2-WAY	*Call
2094<2084		4502<4429	29-WAY TO 2-WAY	*Call
2094<2084		4502<4430	30-WAY TO 2-WAY	*Call
2094<2084		4502<4431	31-WAY TO 2-WAY	*Call
2094<2084		4502<4432	32-WAY TO 2-WAY	*Call
2094<2084		4503<4400	ZERO-WAY TO 3-WAY	*Call
2094<2084		4503<4401	1-WAY TO 3-WAY	*Call
2094<2084		4503<4402	2-WAY TO 3-WAY	*Call
2094<2084		4503<4403	3-WAY TO 3-WAY	*Call
2094<2084		4503<4404	4-WAY TO 3-WAY	*Call
2094<2084		4503<4405	5-WAY TO 3-WAY	*Call
2094<2084		4503<4406	6-WAY TO 3-WAY	*Call
2094<2084		4503<4407	7-WAY TO 3-WAY	*Call
2094<2084		4503<4408	8-WAY TO 3-WAY	*Call
2094<2084		4503<4409	9-WAY TO 3-WAY	*Call
2094<2084		4503<4410	10-WAY TO 3-WAY	*Call
2094<2084		4503<4411	11-WAY TO 3-WAY	*Call
2094<2084		4503<4412	12-WAY TO 3-WAY	*Call
2094<2084		4503<4413	13-WAY TO 3-WAY	*Call
2094<2084		4503<4414	14-WAY TO 3-WAY	*Call
2094<2084		4503<4415	15-WAY TO 3-WAY	*Call
2094<2084		4503<4416	16-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4503<4417	17-WAY TO 3-WAY	*Call
2094<2084		4503<4418	18-WAY TO 3-WAY	*Call
2094<2084		4503<4419	19-WAY TO 3-WAY	*Call
2094<2084		4503<4420	20-WAY TO 3-WAY	*Call
2094<2084		4503<4421	21-WAY TO 3-WAY	*Call
2094<2084		4503<4422	22-WAY TO 3-WAY	*Call
2094<2084		4503<4423	23-WAY TO 3-WAY	*Call
2094<2084		4503<4424	24-WAY TO 3-WAY	*Call
2094<2084		4503<4425	25-WAY TO 3-WAY	*Call
2094<2084		4503<4426	26-WAY TO 3-WAY	*Call
2094<2084		4503<4427	27-WAY TO 3-WAY	*Call
2094<2084		4503<4428	28-WAY TO 3-WAY	*Call
2094<2084		4503<4429	29-WAY TO 3-WAY	*Call
2094<2084		4503<4430	30-WAY TO 3-WAY	*Call
2094<2084		4503<4431	31-WAY TO 3-WAY	*Call
2094<2084		4503<4432	32-WAY TO 3-WAY	*Call
2094<2084		4504<4400	ZERO-WAY TO 4-WAY	*Call
2094<2084		4504<4401	1-WAY TO 4-WAY	*Call
2094<2084		4504<4402	2-WAY TO 4-WAY	*Call
2094<2084		4504<4403	3-WAY TO 4-WAY	*Call
2094<2084		4504<4404	4-WAY TO 4-WAY	*Call
2094<2084		4504<4405	5-WAY TO 4-WAY	*Call
2094<2084		4504<4406	6-WAY TO 4-WAY	*Call
2094<2084		4504<4407	7-WAY TO 4-WAY	*Call
2094<2084		4504<4408	8-WAY TO 5-WAY	*Call
2094<2084		4504<4409	9-WAY TO 4-WAY	*Call
2094<2084		4504<4410	10-WAY TO 4-WAY	*Call
2094<2084		4504<4411	11-WAY TO 4-WAY	*Call
2094<2084		4504<4412	12-WAY TO 4-WAY	*Call
2094<2084		4504<4413	13-WAY TO 4-WAY	*Call
2094<2084		4504<4414	14-WAY TO 4-WAY	*Call
2094<2084		4504<4415	15-WAY TO 4-WAY	*Call
2094<2084		4504<4416	16-WAY TO 4-WAY	*Call
2094<2084		4504<4417	17-WAY TO 4-WAY	*Call
2094<2084		4504<4418	18-WAY TO 4-WAY	*Call
2094<2084		4504<4419	19-WAY TO 4-WAY	*Call
2094<2084		4504<4420	20-WAY TO 4-WAY	*Call
2094<2084		4504<4421	21-WAY TO 4-WAY	*Call
2094<2084		4504<4422	22-WAY TO 4-WAY	*Call
2094<2084		4504<4423	23-WAY TO 4-WAY	*Call
2094<2084		4504<4424	24-WAY TO 4-WAY	*Call
2094<2084		4504<4425	25-WAY TO 4-WAY	*Call
2094<2084		4504<4426	26-WAY TO 4-WAY	*Call
2094<2084		4504<4427	27-WAY TO 4-WAY	*Call
2094<2084		4504<4428	28-WAY TO 4-WAY	*Call
2094<2084		4504<4429	29-WAY TO 4-WAY	*Call
2094<2084		4504<4430	30-WAY TO 4-WAY	*Call
2094<2084		4504<4431	31-WAY TO 4-WAY	*Call
2094<2084		4504<4432	32-WAY TO 4-WAY	*Call
2094<2084		4505<4400	ZERO-WAY TO 5-WAY	*Call
2094<2084		4505<4401	1-WAY TO 5-WAY	*Call
2094<2084		4505<4402	2-WAY TO 5-WAY	*Call
2094<2084		4505<4403	3-WAY TO 5-WAY	*Call
2094<2084		4505<4404	4-WAY TO 5-WAY	*Call
2094<2084		4505<4405	5-WAY TO 5-WAY	*Call
2094<2084		4505<4406	6-WAY TO 5-WAY	*Call
2094<2084		4505<4407	7-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4505<4408	8-WAY TO 6-WAY	*Call
2094<2084		4505<4409	9-WAY TO 5-WAY	*Call
2094<2084		4505<4410	10-WAY TO 5-WAY	*Call
2094<2084		4505<4411	11-WAY TO 5-WAY	*Call
2094<2084		4505<4412	12-WAY TO 5-WAY	*Call
2094<2084		4505<4413	13-WAY TO 5-WAY	*Call
2094<2084		4505<4414	14-WAY TO 5-WAY	*Call
2094<2084		4505<4415	15-WAY TO 5-WAY	*Call
2094<2084		4505<4416	16-WAY TO 5-WAY	*Call
2094<2084		4505<4417	17-WAY TO 5-WAY	*Call
2094<2084		4505<4418	18-WAY TO 5-WAY	*Call
2094<2084		4505<4419	19-WAY TO 5-WAY	*Call
2094<2084		4505<4420	20-WAY TO 5-WAY	*Call
2094<2084		4505<4421	21-WAY TO 5-WAY	*Call
2094<2084		4505<4422	22-WAY TO 5-WAY	*Call
2094<2084		4505<4423	23-WAY TO 5-WAY	*Call
2094<2084		4505<4424	24-WAY TO 5-WAY	*Call
2094<2084		4505<4425	25-WAY TO 5-WAY	*Call
2094<2084		4505<4426	26-WAY TO 5-WAY	*Call
2094<2084		4505<4427	27-WAY TO 5-WAY	*Call
2094<2084		4505<4428	28-WAY TO 5-WAY	*Call
2094<2084		4505<4429	29-WAY TO 5-WAY	*Call
2094<2084		4505<4430	30-WAY TO 5-WAY	*Call
2094<2084		4505<4431	31-WAY TO 5-WAY	*Call
2094<2084		4505<4432	32-WAY TO 5-WAY	*Call
2094<2084		4506<4400	ZERO-WAY TO 6-WAY	*Call
2094<2084		4506<4401	1-WAY TO 6-WAY	*Call
2094<2084		4506<4402	2-WAY TO 6-WAY	*Call
2094<2084		4506<4403	3-WAY TO 6-WAY	*Call
2094<2084		4506<4404	4-WAY TO 6-WAY	*Call
2094<2084		4506<4405	5-WAY TO 6-WAY	*Call
2094<2084		4506<4406	6-WAY TO 6-WAY	*Call
2094<2084		4506<4407	7-WAY TO 6-WAY	*Call
2094<2084		4506<4408	8-WAY TO 7-WAY	*Call
2094<2084		4506<4409	9-WAY TO 6-WAY	*Call
2094<2084		4506<4410	10-WAY TO 6-WAY	*Call
2094<2084		4506<4411	11-WAY TO 6-WAY	*Call
2094<2084		4506<4412	12-WAY TO 6-WAY	*Call
2094<2084		4506<4413	13-WAY TO 6-WAY	*Call
2094<2084		4506<4414	14-WAY TO 6-WAY	*Call
2094<2084		4506<4415	15-WAY TO 6-WAY	*Call
2094<2084		4506<4416	16-WAY TO 6-WAY	*Call
2094<2084		4506<4417	17-WAY TO 6-WAY	*Call
2094<2084		4506<4418	18-WAY TO 6-WAY	*Call
2094<2084		4506<4419	19-WAY TO 6-WAY	*Call
2094<2084		4506<4420	20-WAY TO 6-WAY	*Call
2094<2084		4506<4421	21-WAY TO 6-WAY	*Call
2094<2084		4506<4422	22-WAY TO 6-WAY	*Call
2094<2084		4506<4423	23-WAY TO 6-WAY	*Call
2094<2084		4506<4424	24-WAY TO 6-WAY	*Call
2094<2084		4506<4425	25-WAY TO 6-WAY	*Call
2094<2084		4506<4426	26-WAY TO 6-WAY	*Call
2094<2084		4506<4427	27-WAY TO 6-WAY	*Call
2094<2084		4506<4428	28-WAY TO 6-WAY	*Call
2094<2084		4506<4429	29-WAY TO 6-WAY	*Call
2094<2084		4506<4430	30-WAY TO 6-WAY	*Call
2094<2084		4506<4431	31-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4506<4432	32-WAY TO 6-WAY	*Call
2094<2084		4507<4400	ZERO-WAY TO 7-WAY	*Call
2094<2084		4507<4401	1-WAY TO 7-WAY	*Call
2094<2084		4507<4402	2-WAY TO 7-WAY	*Call
2094<2084		4507<4403	3-WAY TO 7-WAY	*Call
2094<2084		4507<4404	4-WAY TO 7-WAY	*Call
2094<2084		4507<4405	5-WAY TO 7-WAY	*Call
2094<2084		4507<4406	6-WAY TO 7-WAY	*Call
2094<2084		4507<4407	7-WAY TO 7-WAY	*Call
2094<2084		4507<4408	8-WAY TO 8-WAY	*Call
2094<2084		4507<4409	9-WAY TO 7-WAY	*Call
2094<2084		4507<4410	10-WAY TO 7-WAY	*Call
2094<2084		4507<4411	11-WAY TO 7-WAY	*Call
2094<2084		4507<4412	12-WAY TO 7-WAY	*Call
2094<2084		4507<4413	13-WAY TO 7-WAY	*Call
2094<2084		4507<4414	14-WAY TO 7-WAY	*Call
2094<2084		4507<4415	15-WAY TO 7-WAY	*Call
2094<2084		4507<4416	16-WAY TO 7-WAY	*Call
2094<2084		4507<4417	17-WAY TO 7-WAY	*Call
2094<2084		4507<4418	18-WAY TO 7-WAY	*Call
2094<2084		4507<4419	19-WAY TO 7-WAY	*Call
2094<2084		4507<4420	20-WAY TO 7-WAY	*Call
2094<2084		4507<4421	21-WAY TO 7-WAY	*Call
2094<2084		4507<4422	22-WAY TO 7-WAY	*Call
2094<2084		4507<4423	23-WAY TO 7-WAY	*Call
2094<2084		4507<4424	24-WAY TO 7-WAY	*Call
2094<2084		4507<4425	25-WAY TO 7-WAY	*Call
2094<2084		4507<4426	26-WAY TO 7-WAY	*Call
2094<2084		4507<4427	27-WAY TO 7-WAY	*Call
2094<2084		4507<4428	28-WAY TO 7-WAY	*Call
2094<2084		4507<4429	29-WAY TO 7-WAY	*Call
2094<2084		4507<4430	30-WAY TO 7-WAY	*Call
2094<2084		4507<4431	31-WAY TO 7-WAY	*Call
2094<2084		4507<4432	32-WAY TO 7-WAY	*Call
2094<2084		4508<4400	ZERO-WAY TO 8-WAY	*Call
2094<2084		4508<4401	1-WAY TO 8-WAY	*Call
2094<2084		4508<4402	2-WAY TO 8-WAY	*Call
2094<2084		4508<4403	3-WAY TO 8-WAY	*Call
2094<2084		4508<4404	4-WAY TO 8-WAY	*Call
2094<2084		4508<4405	5-WAY TO 8-WAY	*Call
2094<2084		4508<4406	6-WAY TO 8-WAY	*Call
2094<2084		4508<4407	7-WAY TO 8-WAY	*Call
2094<2084		4508<4408	8-WAY TO 9-WAY	*Call
2094<2084		4508<4409	9-WAY TO 8-WAY	*Call
2094<2084		4508<4410	10-WAY TO 8-WAY	*Call
2094<2084		4508<4411	11-WAY TO 8-WAY	*Call
2094<2084		4508<4412	12-WAY TO 8-WAY	*Call
2094<2084		4508<4413	13-WAY TO 8-WAY	*Call
2094<2084		4508<4414	14-WAY TO 8-WAY	*Call
2094<2084		4508<4415	15-WAY TO 8-WAY	*Call
2094<2084		4508<4416	16-WAY TO 8-WAY	*Call
2094<2084		4508<4417	17-WAY TO 8-WAY	*Call
2094<2084		4508<4418	18-WAY TO 8-WAY	*Call
2094<2084		4508<4419	19-WAY TO 8-WAY	*Call
2094<2084		4508<4420	20-WAY TO 8-WAY	*Call
2094<2084		4508<4421	21-WAY TO 8-WAY	*Call
2094<2084		4508<4422	22-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4508<4423	23-WAY TO 8-WAY	*Call
2094<2084		4508<4424	24-WAY TO 8-WAY	*Call
2094<2084		4508<4425	25-WAY TO 8-WAY	*Call
2094<2084		4508<4426	26-WAY TO 8-WAY	*Call
2094<2084		4508<4427	27-WAY TO 8-WAY	*Call
2094<2084		4508<4428	28-WAY TO 8-WAY	*Call
2094<2084		4508<4429	29-WAY TO 8-WAY	*Call
2094<2084		4508<4430	30-WAY TO 8-WAY	*Call
2094<2084		4508<4431	31-WAY TO 8-WAY	*Call
2094<2084		4508<4432	32-WAY TO 8-WAY	*Call
2094<2084		4509<4400	ZERO-WAY TO 9-WAY	*Call
2094<2084		4509<4401	1-WAY TO 9-WAY	*Call
2094<2084		4509<4402	2-WAY TO 9-WAY	*Call
2094<2084		4509<4403	3-WAY TO 9-WAY	*Call
2094<2084		4509<4404	4-WAY TO 9-WAY	*Call
2094<2084		4509<4405	5-WAY TO 9-WAY	*Call
2094<2084		4509<4406	6-WAY TO 9-WAY	*Call
2094<2084		4509<4407	7-WAY TO 9-WAY	*Call
2094<2084		4509<4408	8-WAY TO 9-WAY	*Call
2094<2084		4509<4409	9-WAY TO 9-WAY	*Call
2094<2084		4509<4410	10-WAY TO 9-WAY	*Call
2094<2084		4509<4411	11-WAY TO 9-WAY	*Call
2094<2084		4509<4412	12-WAY TO 9-WAY	*Call
2094<2084		4509<4413	13-WAY TO 9-WAY	*Call
2094<2084		4509<4414	14-WAY TO 9-WAY	*Call
2094<2084		4509<4415	15-WAY TO 9-WAY	*Call
2094<2084		4509<4416	16-WAY TO 9-WAY	*Call
2094<2084		4509<4417	17-WAY TO 9-WAY	*Call
2094<2084		4509<4418	18-WAY TO 9-WAY	*Call
2094<2084		4509<4419	19-WAY TO 9-WAY	*Call
2094<2084		4509<4420	20-WAY TO 9-WAY	*Call
2094<2084		4509<4421	21-WAY TO 9-WAY	*Call
2094<2084		4509<4422	22-WAY TO 9-WAY	*Call
2094<2084		4509<4423	23-WAY TO 9-WAY	*Call
2094<2084		4509<4424	24-WAY TO 9-WAY	*Call
2094<2084		4509<4425	25-WAY TO 9-WAY	*Call
2094<2084		4509<4426	26-WAY TO 9-WAY	*Call
2094<2084		4509<4427	27-WAY TO 9-WAY	*Call
2094<2084		4509<4428	28-WAY TO 9-WAY	*Call
2094<2084		4509<4429	29-WAY TO 9-WAY	*Call
2094<2084		4509<4430	30-WAY TO 9-WAY	*Call
2094<2084		4509<4431	31-WAY TO 9-WAY	*Call
2094<2084		4509<4432	32-WAY TO 9-WAY	*Call
2094<2084		4510<4400	ZERO-WAY TO 10-WAY	*Call
2094<2084		4510<4401	1-WAY TO 10-WAY	*Call
2094<2084		4510<4402	2-WAY TO 10-WAY	*Call
2094<2084		4510<4403	3-WAY TO 10-WAY	*Call
2094<2084		4510<4404	4-WAY TO 10-WAY	*Call
2094<2084		4510<4405	5-WAY TO 10-WAY	*Call
2094<2084		4510<4406	6-WAY TO 10-WAY	*Call
2094<2084		4510<4407	7-WAY TO 10-WAY	*Call
2094<2084		4510<4408	8-WAY TO 10-WAY	*Call
2094<2084		4510<4409	9-WAY TO 10-WAY	*Call
2094<2084		4510<4410	10-WAY TO 10-WAY	*Call
2094<2084		4510<4411	11-WAY TO 10-WAY	*Call
2094<2084		4510<4412	12-WAY TO 10-WAY	*Call
2094<2084		4510<4413	13-WAY TO 10-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4510<4414	14-WAY TO 10-WAY	*Call
2094<2084		4510<4415	15-WAY TO 10-WAY	*Call
2094<2084		4510<4416	16-WAY TO 10-WAY	*Call
2094<2084		4510<4417	17-WAY TO 10-WAY	*Call
2094<2084		4510<4418	18-WAY TO 10-WAY	*Call
2094<2084		4510<4419	19-WAY TO 10-WAY	*Call
2094<2084		4510<4420	20-WAY TO 10-WAY	*Call
2094<2084		4510<4421	21-WAY TO 10-WAY	*Call
2094<2084		4510<4422	22-WAY TO 10-WAY	*Call
2094<2084		4510<4423	23-WAY TO 10-WAY	*Call
2094<2084		4510<4424	24-WAY TO 10-WAY	*Call
2094<2084		4510<4425	25-WAY TO 10-WAY	*Call
2094<2084		4510<4426	26-WAY TO 10-WAY	*Call
2094<2084		4510<4427	27-WAY TO 10-WAY	*Call
2094<2084		4510<4428	28-WAY TO 10-WAY	*Call
2094<2084		4510<4429	29-WAY TO 10-WAY	*Call
2094<2084		4510<4430	30-WAY TO 10-WAY	*Call
2094<2084		4510<4431	31-WAY TO 10-WAY	*Call
2094<2084		4510<4432	32-WAY TO 10-WAY	*Call
2094<2084		4511<4400	ZERO-WAY TO 11-WAY	*Call
2094<2084		4511<4401	1-WAY TO 11-WAY	*Call
2094<2084		4511<4402	2-WAY TO 11-WAY	*Call
2094<2084		4511<4403	3-WAY TO 11-WAY	*Call
2094<2084		4511<4404	4-WAY TO 11-WAY	*Call
2094<2084		4511<4405	5-WAY TO 11-WAY	*Call
2094<2084		4511<4406	6-WAY TO 11-WAY	*Call
2094<2084		4511<4407	7-WAY TO 11-WAY	*Call
2094<2084		4511<4408	8-WAY TO 11-WAY	*Call
2094<2084		4511<4409	9-WAY TO 11-WAY	*Call
2094<2084		4511<4410	10-WAY TO 11-WAY	*Call
2094<2084		4511<4411	11-WAY TO 11-WAY	*Call
2094<2084		4511<4412	12-WAY TO 11-WAY	*Call
2094<2084		4511<4413	13-WAY TO 11-WAY	*Call
2094<2084		4511<4414	14-WAY TO 11-WAY	*Call
2094<2084		4511<4415	15-WAY TO 11-WAY	*Call
2094<2084		4511<4416	16-WAY TO 11-WAY	*Call
2094<2084		4511<4417	17-WAY TO 11-WAY	*Call
2094<2084		4511<4418	18-WAY TO 11-WAY	*Call
2094<2084		4511<4419	19-WAY TO 11-WAY	*Call
2094<2084		4511<4420	20-WAY TO 11-WAY	*Call
2094<2084		4511<4421	21-WAY TO 11-WAY	*Call
2094<2084		4511<4422	22-WAY TO 11-WAY	*Call
2094<2084		4511<4423	23-WAY TO 11-WAY	*Call
2094<2084		4511<4424	24-WAY TO 11-WAY	*Call
2094<2084		4511<4425	25-WAY TO 11-WAY	*Call
2094<2084		4511<4426	26-WAY TO 11-WAY	*Call
2094<2084		4511<4427	27-WAY TO 11-WAY	*Call
2094<2084		4511<4428	28-WAY TO 11-WAY	*Call
2094<2084		4511<4429	29-WAY TO 11-WAY	*Call
2094<2084		4511<4430	30-WAY TO 11-WAY	*Call
2094<2084		4511<4431	31-WAY TO 11-WAY	*Call
2094<2084		4511<4432	32-WAY TO 11-WAY	*Call
2094<2084		4512<4400	ZERO-WAY TO 12-WAY	*Call
2094<2084		4512<4401	1-WAY TO 12-WAY	*Call
2094<2084		4512<4402	2-WAY TO 12-WAY	*Call
2094<2084		4512<4403	3-WAY TO 12-WAY	*Call
2094<2084		4512<4404	4-WAY TO 12-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4512<4405	5-WAY TO 12-WAY	*Call
2094<2084		4512<4406	6-WAY TO 12-WAY	*Call
2094<2084		4512<4407	7-WAY TO 12-WAY	*Call
2094<2084		4512<4408	8-WAY TO 12-WAY	*Call
2094<2084		4512<4409	9-WAY TO 12-WAY	*Call
2094<2084		4512<4410	10-WAY TO 12-WAY	*Call
2094<2084		4512<4411	11-WAY TO 12-WAY	*Call
2094<2084		4512<4412	12-WAY TO 12-WAY	*Call
2094<2084		4512<4413	13-WAY TO 13-WAY	*Call
2094<2084		4512<4414	14-WAY TO 14-WAY	*Call
2094<2084		4512<4415	15-WAY TO 15-WAY	*Call
2094<2084		4512<4416	16-WAY TO 16-WAY	*Call
2094<2084		4512<4417	17-WAY TO 17-WAY	*Call
2094<2084		4512<4418	18-WAY TO 18-WAY	*Call
2094<2084		4512<4419	19-WAY TO 19-WAY	*Call
2094<2084		4512<4420	20-WAY TO 20-WAY	*Call
2094<2084		4512<4421	21-WAY TO 21-WAY	*Call
2094<2084		4512<4422	22-WAY TO 22-WAY	*Call
2094<2084		4512<4423	23-WAY TO 23-WAY	*Call
2094<2084		4512<4424	24-WAY TO 24-WAY	*Call
2094<2084		4512<4425	25-WAY TO 25-WAY	*Call
2094<2084		4512<4426	26-WAY TO 26-WAY	*Call
2094<2084		4512<4427	27-WAY TO 27-WAY	*Call
2094<2084		4512<4428	28-WAY TO 28-WAY	*Call
2094<2084		4512<4429	29-WAY TO 29-WAY	*Call
2094<2084		4512<4430	30-WAY TO 30-WAY	*Call
2094<2084		4512<4431	31-WAY TO 31-WAY	*Call
2094<2084		4512<4432	32-WAY TO 32-WAY	*Call
2094<2084		4513<4400	ZERO-WAY TO 13-WAY	*Call
2094<2084		4513<4401	1-WAY TO 13-WAY	*Call
2094<2084		4513<4402	2-WAY TO 13-WAY	*Call
2094<2084		4513<4403	3-WAY TO 13-WAY	*Call
2094<2084		4513<4404	4-WAY TO 13-WAY	*Call
2094<2084		4513<4405	5-WAY TO 13-WAY	*Call
2094<2084		4513<4406	6-WAY TO 13-WAY	*Call
2094<2084		4513<4407	7-WAY TO 13-WAY	*Call
2094<2084		4513<4408	8-WAY TO 13-WAY	*Call
2094<2084		4513<4409	9-WAY TO 13-WAY	*Call
2094<2084		4513<4410	10-WAY TO 13-WAY	*Call
2094<2084		4513<4411	11-WAY TO 13-WAY	*Call
2094<2084		4513<4412	12-WAY TO 13-WAY	*Call
2094<2084		4513<4413	13-WAY TO 13-WAY	*Call
2094<2084		4513<4414	14-WAY TO 13-WAY	*Call
2094<2084		4513<4415	15-WAY TO 13-WAY	*Call
2094<2084		4513<4416	16-WAY TO 13-WAY	*Call
2094<2084		4513<4417	17-WAY TO 13-WAY	*Call
2094<2084		4513<4418	18-WAY TO 13-WAY	*Call
2094<2084		4513<4419	19-WAY TO 13-WAY	*Call
2094<2084		4513<4420	20-WAY TO 13-WAY	*Call
2094<2084		4513<4421	21-WAY TO 13-WAY	*Call
2094<2084		4513<4422	22-WAY TO 13-WAY	*Call
2094<2084		4513<4423	23-WAY TO 13-WAY	*Call
2094<2084		4513<4424	24-WAY TO 13-WAY	*Call
2094<2084		4513<4425	25-WAY TO 13-WAY	*Call
2094<2084		4513<4426	26-WAY TO 13-WAY	*Call
2094<2084		4513<4427	27-WAY TO 13-WAY	*Call
2094<2084		4513<4428	28-WAY TO 13-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4513<4429	29-WAY TO 13-WAY	*Call
2094<2084		4513<4430	30-WAY TO 13-WAY	*Call
2094<2084		4513<4431	31-WAY TO 13-WAY	*Call
2094<2084		4513<4432	32-WAY TO 13-WAY	*Call
2094<2084		4514<4400	ZERO-WAY TO 14-WAY	*Call
2094<2084		4514<4401	1-WAY TO 14-WAY	*Call
2094<2084		4514<4402	2-WAY TO 14-WAY	*Call
2094<2084		4514<4403	3-WAY TO 14-WAY	*Call
2094<2084		4514<4404	4-WAY TO 14-WAY	*Call
2094<2084		4514<4405	5-WAY TO 14-WAY	*Call
2094<2084		4514<4406	6-WAY TO 14-WAY	*Call
2094<2084		4514<4407	7-WAY TO 14-WAY	*Call
2094<2084		4514<4408	8-WAY TO 14-WAY	*Call
2094<2084		4514<4409	9-WAY TO 14-WAY	*Call
2094<2084		4514<4410	10-WAY TO 14-WAY	*Call
2094<2084		4514<4411	11-WAY TO 14-WAY	*Call
2094<2084		4514<4412	12-WAY TO 14-WAY	*Call
2094<2084		4514<4413	13-WAY TO 14-WAY	*Call
2094<2084		4514<4414	14-WAY TO 14-WAY	*Call
2094<2084		4514<4415	15-WAY TO 14-WAY	*Call
2094<2084		4514<4416	16-WAY TO 14-WAY	*Call
2094<2084		4514<4417	17-WAY TO 14-WAY	*Call
2094<2084		4514<4418	18-WAY TO 14-WAY	*Call
2094<2084		4514<4419	19-WAY TO 14-WAY	*Call
2094<2084		4514<4420	20-WAY TO 14-WAY	*Call
2094<2084		4514<4421	21-WAY TO 14-WAY	*Call
2094<2084		4514<4422	22-WAY TO 14-WAY	*Call
2094<2084		4514<4423	23-WAY TO 14-WAY	*Call
2094<2084		4514<4424	24-WAY TO 14-WAY	*Call
2094<2084		4514<4425	25-WAY TO 14-WAY	*Call
2094<2084		4514<4426	26-WAY TO 14-WAY	*Call
2094<2084		4514<4427	27-WAY TO 14-WAY	*Call
2094<2084		4514<4428	28-WAY TO 14-WAY	*Call
2094<2084		4514<4429	29-WAY TO 14-WAY	*Call
2094<2084		4514<4430	30-WAY TO 14-WAY	*Call
2094<2084		4514<4431	31-WAY TO 14-WAY	*Call
2094<2084		4514<4432	32-WAY TO 14-WAY	*Call
2094<2084		4515<4400	ZERO-WAY TO 15-WAY	*Call
2094<2084		4515<4401	1-WAY TO 15-WAY	*Call
2094<2084		4515<4402	2-WAY TO 15-WAY	*Call
2094<2084		4515<4403	3-WAY TO 15-WAY	*Call
2094<2084		4515<4404	4-WAY TO 15-WAY	*Call
2094<2084		4515<4405	5-WAY TO 15-WAY	*Call
2094<2084		4515<4406	6-WAY TO 15-WAY	*Call
2094<2084		4515<4407	7-WAY TO 15-WAY	*Call
2094<2084		4515<4408	8-WAY TO 15-WAY	*Call
2094<2084		4515<4409	9-WAY TO 15-WAY	*Call
2094<2084		4515<4410	10-WAY TO 15-WAY	*Call
2094<2084		4515<4411	11-WAY TO 15-WAY	*Call
2094<2084		4515<4412	12-WAY TO 15-WAY	*Call
2094<2084		4515<4413	13-WAY TO 15-WAY	*Call
2094<2084		4515<4414	14-WAY TO 15-WAY	*Call
2094<2084		4515<4415	15-WAY TO 15-WAY	*Call
2094<2084		4515<4416	16-WAY TO 15-WAY	*Call
2094<2084		4515<4417	17-WAY TO 15-WAY	*Call
2094<2084		4515<4418	18-WAY TO 15-WAY	*Call
2094<2084		4515<4419	19-WAY TO 15-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4515<4420	20-WAY TO 15-WAY	*Call
2094<2084		4515<4421	21-WAY TO 15-WAY	*Call
2094<2084		4515<4422	22-WAY TO 15-WAY	*Call
2094<2084		4515<4423	23-WAY TO 15-WAY	*Call
2094<2084		4515<4424	24-WAY TO 15-WAY	*Call
2094<2084		4515<4425	25-WAY TO 15-WAY	*Call
2094<2084		4515<4426	26-WAY TO 15-WAY	*Call
2094<2084		4515<4427	27-WAY TO 15-WAY	*Call
2094<2084		4515<4428	28-WAY TO 15-WAY	*Call
2094<2084		4515<4429	29-WAY TO 15-WAY	*Call
2094<2084		4515<4430	30-WAY TO 15-WAY	*Call
2094<2084		4515<4431	31-WAY TO 15-WAY	*Call
2094<2084		4515<4432	32-WAY TO 15-WAY	*Call
2094<2084		4516<4400	ZERO-WAY TO 16-WAY	*Call
2094<2084		4516<4401	1-WAY TO 16-WAY	*Call
2094<2084		4516<4402	2-WAY TO 16-WAY	*Call
2094<2084		4516<4403	3-WAY TO 16-WAY	*Call
2094<2084		4516<4404	4-WAY TO 16-WAY	*Call
2094<2084		4516<4405	5-WAY TO 16-WAY	*Call
2094<2084		4516<4406	6-WAY TO 16-WAY	*Call
2094<2084		4516<4407	7-WAY TO 16-WAY	*Call
2094<2084		4516<4408	8-WAY TO 16-WAY	*Call
2094<2084		4516<4409	9-WAY TO 16-WAY	*Call
2094<2084		4516<4410	10-WAY TO 16-WAY	*Call
2094<2084		4516<4411	11-WAY TO 16-WAY	*Call
2094<2084		4516<4412	12-WAY TO 16-WAY	*Call
2094<2084		4516<4413	13-WAY TO 16-WAY	*Call
2094<2084		4516<4414	14-WAY TO 16-WAY	*Call
2094<2084		4516<4415	15-WAY TO 16-WAY	*Call
2094<2084		4516<4416	16-WAY TO 16-WAY	*Call
2094<2084		4516<4417	17-WAY TO 16-WAY	*Call
2094<2084		4516<4418	18-WAY TO 16-WAY	*Call
2094<2084		4516<4419	19-WAY TO 16-WAY	*Call
2094<2084		4516<4420	20-WAY TO 16-WAY	*Call
2094<2084		4516<4421	21-WAY TO 16-WAY	*Call
2094<2084		4516<4422	22-WAY TO 16-WAY	*Call
2094<2084		4516<4423	23-WAY TO 16-WAY	*Call
2094<2084		4516<4424	24-WAY TO 16-WAY	*Call
2094<2084		4516<4425	25-WAY TO 16-WAY	*Call
2094<2084		4516<4426	26-WAY TO 16-WAY	*Call
2094<2084		4516<4427	27-WAY TO 16-WAY	*Call
2094<2084		4516<4428	28-WAY TO 16-WAY	*Call
2094<2084		4516<4429	29-WAY TO 16-WAY	*Call
2094<2084		4516<4430	30-WAY TO 16-WAY	*Call
2094<2084		4516<4431	31-WAY TO 16-WAY	*Call
2094<2084		4516<4432	32-WAY TO 16-WAY	*Call
2094<2084		4517<4400	ZERO-WAY TO 17-WAY	*Call
2094<2084		4517<4401	1-WAY TO 17-WAY	*Call
2094<2084		4517<4402	2-WAY TO 17-WAY	*Call
2094<2084		4517<4403	3-WAY TO 17-WAY	*Call
2094<2084		4517<4404	4-WAY TO 17-WAY	*Call
2094<2084		4517<4405	5-WAY TO 17-WAY	*Call
2094<2084		4517<4406	6-WAY TO 17-WAY	*Call
2094<2084		4517<4407	7-WAY TO 17-WAY	*Call
2094<2084		4517<4408	8-WAY TO 17-WAY	*Call
2094<2084		4517<4409	9-WAY TO 17-WAY	*Call
2094<2084		4517<4410	10-WAY TO 17-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4517<4411	11-WAY TO 17-WAY	*Call
2094<2084		4517<4412	12-WAY TO 17-WAY	*Call
2094<2084		4517<4413	13-WAY TO 17-WAY	*Call
2094<2084		4517<4414	14-WAY TO 17-WAY	*Call
2094<2084		4517<4415	15-WAY TO 17-WAY	*Call
2094<2084		4517<4416	16-WAY TO 17-WAY	*Call
2094<2084		4517<4417	17-WAY TO 17-WAY	*Call
2094<2084		4517<4418	18-WAY TO 17-WAY	*Call
2094<2084		4517<4419	19-WAY TO 17-WAY	*Call
2094<2084		4517<4420	20-WAY TO 17-WAY	*Call
2094<2084		4517<4421	21-WAY TO 17-WAY	*Call
2094<2084		4517<4422	22-WAY TO 17-WAY	*Call
2094<2084		4517<4423	23-WAY TO 17-WAY	*Call
2094<2084		4517<4424	24-WAY TO 17-WAY	*Call
2094<2084		4517<4425	25-WAY TO 17-WAY	*Call
2094<2084		4517<4426	26-WAY TO 17-WAY	*Call
2094<2084		4517<4427	27-WAY TO 17-WAY	*Call
2094<2084		4517<4428	28-WAY TO 17-WAY	*Call
2094<2084		4517<4429	29-WAY TO 17-WAY	*Call
2094<2084		4517<4430	30-WAY TO 17-WAY	*Call
2094<2084		4517<4431	31-WAY TO 17-WAY	*Call
2094<2084		4517<4432	32-WAY TO 17-WAY	*Call
2094<2084		4518<4400	ZERO-WAY TO 18-WAY	*Call
2094<2084		4518<4401	1-WAY TO 18-WAY	*Call
2094<2084		4518<4402	2-WAY TO 18-WAY	*Call
2094<2084		4518<4403	3-WAY TO 18-WAY	*Call
2094<2084		4518<4404	4-WAY TO 18-WAY	*Call
2094<2084		4518<4405	5-WAY TO 18-WAY	*Call
2094<2084		4518<4406	6-WAY TO 18-WAY	*Call
2094<2084		4518<4407	7-WAY TO 18-WAY	*Call
2094<2084		4518<4408	8-WAY TO 18-WAY	*Call
2094<2084		4518<4409	9-WAY TO 18-WAY	*Call
2094<2084		4518<4410	10-WAY TO 18-WAY	*Call
2094<2084		4518<4411	11-WAY TO 18-WAY	*Call
2094<2084		4518<4412	12-WAY TO 18-WAY	*Call
2094<2084		4518<4413	13-WAY TO 18-WAY	*Call
2094<2084		4518<4414	14-WAY TO 18-WAY	*Call
2094<2084		4518<4415	15-WAY TO 18-WAY	*Call
2094<2084		4518<4416	16-WAY TO 18-WAY	*Call
2094<2084		4518<4417	17-WAY TO 18-WAY	*Call
2094<2084		4518<4418	18-WAY TO 18-WAY	*Call
2094<2084		4518<4419	19-WAY TO 18-WAY	*Call
2094<2084		4518<4420	20-WAY TO 18-WAY	*Call
2094<2084		4518<4421	21-WAY TO 18-WAY	*Call
2094<2084		4518<4422	22-WAY TO 18-WAY	*Call
2094<2084		4518<4423	23-WAY TO 18-WAY	*Call
2094<2084		4518<4424	24-WAY TO 18-WAY	*Call
2094<2084		4518<4425	25-WAY TO 18-WAY	*Call
2094<2084		4518<4426	26-WAY TO 18-WAY	*Call
2094<2084		4518<4427	27-WAY TO 18-WAY	*Call
2094<2084		4518<4428	28-WAY TO 18-WAY	*Call
2094<2084		4518<4429	29-WAY TO 18-WAY	*Call
2094<2084		4518<4430	30-WAY TO 18-WAY	*Call
2094<2084		4518<4431	31-WAY TO 18-WAY	*Call
2094<2084		4518<4432	32-WAY TO 18-WAY	*Call
2094<2084		4519<4400	ZERO-WAY TO 19-WAY	*Call
2094<2084		4519<4401	1-WAY TO 19-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4519<4402	2-WAY TO 19-WAY	*Call
2094<2084		4519<4403	3-WAY TO 19-WAY	*Call
2094<2084		4519<4404	4-WAY TO 19-WAY	*Call
2094<2084		4519<4405	5-WAY TO 19-WAY	*Call
2094<2084		4519<4406	6-WAY TO 19-WAY	*Call
2094<2084		4519<4407	7-WAY TO 19-WAY	*Call
2094<2084		4519<4408	8-WAY TO 19-WAY	*Call
2094<2084		4519<4409	9-WAY TO 19-WAY	*Call
2094<2084		4519<4410	10-WAY TO 19-WAY	*Call
2094<2084		4519<4411	11-WAY TO 19-WAY	*Call
2094<2084		4519<4412	12-WAY TO 19-WAY	*Call
2094<2084		4519<4413	13-WAY TO 19-WAY	*Call
2094<2084		4519<4414	14-WAY TO 19-WAY	*Call
2094<2084		4519<4415	15-WAY TO 19-WAY	*Call
2094<2084		4519<4416	16-WAY TO 19-WAY	*Call
2094<2084		4519<4417	17-WAY TO 19-WAY	*Call
2094<2084		4519<4418	18-WAY TO 19-WAY	*Call
2094<2084		4519<4419	19-WAY TO 19-WAY	*Call
2094<2084		4519<4420	20-WAY TO 19-WAY	*Call
2094<2084		4519<4421	21-WAY TO 19-WAY	*Call
2094<2084		4519<4422	22-WAY TO 19-WAY	*Call
2094<2084		4519<4423	23-WAY TO 19-WAY	*Call
2094<2084		4519<4424	24-WAY TO 19-WAY	*Call
2094<2084		4519<4425	25-WAY TO 19-WAY	*Call
2094<2084		4519<4426	26-WAY TO 19-WAY	*Call
2094<2084		4519<4427	27-WAY TO 19-WAY	*Call
2094<2084		4519<4428	28-WAY TO 19-WAY	*Call
2094<2084		4519<4429	29-WAY TO 19-WAY	*Call
2094<2084		4519<4430	30-WAY TO 19-WAY	*Call
2094<2084		4519<4431	31-WAY TO 19-WAY	*Call
2094<2084		4519<4432	32-WAY TO 19-WAY	*Call
2094<2084		4520<4400	ZERO-WAY TO 20-WAY	*Call
2094<2084		4520<4401	1-WAY TO 20-WAY	*Call
2094<2084		4520<4402	2-WAY TO 20-WAY	*Call
2094<2084		4520<4403	3-WAY TO 20-WAY	*Call
2094<2084		4520<4404	4-WAY TO 20-WAY	*Call
2094<2084		4520<4405	5-WAY TO 20-WAY	*Call
2094<2084		4520<4406	6-WAY TO 20-WAY	*Call
2094<2084		4520<4407	7-WAY TO 20-WAY	*Call
2094<2084		4520<4408	8-WAY TO 20-WAY	*Call
2094<2084		4520<4409	9-WAY TO 20-WAY	*Call
2094<2084		4520<4410	10-WAY TO 20-WAY	*Call
2094<2084		4520<4411	11-WAY TO 20-WAY	*Call
2094<2084		4520<4412	12-WAY TO 20-WAY	*Call
2094<2084		4520<4413	13-WAY TO 20-WAY	*Call
2094<2084		4520<4414	14-WAY TO 20-WAY	*Call
2094<2084		4520<4415	15-WAY TO 20-WAY	*Call
2094<2084		4520<4416	16-WAY TO 20-WAY	*Call
2094<2084		4520<4417	17-WAY TO 20-WAY	*Call
2094<2084		4520<4418	18-WAY TO 20-WAY	*Call
2094<2084		4520<4419	19-WAY TO 20-WAY	*Call
2094<2084		4520<4420	20-WAY TO 20-WAY	*Call
2094<2084		4520<4421	21-WAY TO 20-WAY	*Call
2094<2084		4520<4422	22-WAY TO 20-WAY	*Call
2094<2084		4520<4423	23-WAY TO 20-WAY	*Call
2094<2084		4520<4424	24-WAY TO 20-WAY	*Call
2094<2084		4520<4425	25-WAY TO 20-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4520<4426	26-WAY TO 20-WAY	*Call
2094<2084		4520<4427	27-WAY TO 20-WAY	*Call
2094<2084		4520<4428	28-WAY TO 20-WAY	*Call
2094<2084		4520<4429	29-WAY TO 20-WAY	*Call
2094<2084		4520<4430	30-WAY TO 20-WAY	*Call
2094<2084		4520<4431	31-WAY TO 20-WAY	*Call
2094<2084		4520<4432	32-WAY TO 20-WAY	*Call
2094<2084		4521<4400	ZERO-WAY TO 21-WAY	*Call
2094<2084		4521<4401	1-WAY TO 21-WAY	*Call
2094<2084		4521<4402	2-WAY TO 21-WAY	*Call
2094<2084		4521<4403	3-WAY TO 21-WAY	*Call
2094<2084		4521<4404	4-WAY TO 21-WAY	*Call
2094<2084		4521<4405	5-WAY TO 21-WAY	*Call
2094<2084		4521<4406	6-WAY TO 21-WAY	*Call
2094<2084		4521<4407	7-WAY TO 21-WAY	*Call
2094<2084		4521<4408	8-WAY TO 21-WAY	*Call
2094<2084		4521<4409	9-WAY TO 21-WAY	*Call
2094<2084		4521<4410	10-WAY TO 21-WAY	*Call
2094<2084		4521<4411	11-WAY TO 21-WAY	*Call
2094<2084		4521<4412	12-WAY TO 21-WAY	*Call
2094<2084		4521<4413	13-WAY TO 21-WAY	*Call
2094<2084		4521<4414	14-WAY TO 21-WAY	*Call
2094<2084		4521<4415	15-WAY TO 21-WAY	*Call
2094<2084		4521<4416	16-WAY TO 21-WAY	*Call
2094<2084		4521<4417	17-WAY TO 21-WAY	*Call
2094<2084		4521<4418	18-WAY TO 21-WAY	*Call
2094<2084		4521<4419	19-WAY TO 21-WAY	*Call
2094<2084		4521<4420	20-WAY TO 21-WAY	*Call
2094<2084		4521<4421	21-WAY TO 21-WAY	*Call
2094<2084		4521<4422	22-WAY TO 21-WAY	*Call
2094<2084		4521<4423	23-WAY TO 21-WAY	*Call
2094<2084		4521<4424	24-WAY TO 21-WAY	*Call
2094<2084		4521<4425	25-WAY TO 21-WAY	*Call
2094<2084		4521<4426	26-WAY TO 21-WAY	*Call
2094<2084		4521<4427	27-WAY TO 21-WAY	*Call
2094<2084		4521<4428	28-WAY TO 21-WAY	*Call
2094<2084		4521<4429	29-WAY TO 21-WAY	*Call
2094<2084		4521<4430	30-WAY TO 21-WAY	*Call
2094<2084		4521<4431	31-WAY TO 21-WAY	*Call
2094<2084		4521<4432	32-WAY TO 21-WAY	*Call
2094<2084		4522<4400	ZERO-WAY TO 22-WAY	*Call
2094<2084		4522<4401	1-WAY TO 22-WAY	*Call
2094<2084		4522<4402	2-WAY TO 22-WAY	*Call
2094<2084		4522<4403	3-WAY TO 22-WAY	*Call
2094<2084		4522<4404	4-WAY TO 22-WAY	*Call
2094<2084		4522<4405	5-WAY TO 22-WAY	*Call
2094<2084		4522<4406	6-WAY TO 22-WAY	*Call
2094<2084		4522<4407	7-WAY TO 22-WAY	*Call
2094<2084		4522<4408	8-WAY TO 22-WAY	*Call
2094<2084		4522<4409	9-WAY TO 22-WAY	*Call
2094<2084		4522<4410	10-WAY TO 22-WAY	*Call
2094<2084		4522<4411	11-WAY TO 22-WAY	*Call
2094<2084		4522<4412	12-WAY TO 22-WAY	*Call
2094<2084		4522<4413	13-WAY TO 22-WAY	*Call
2094<2084		4522<4414	14-WAY TO 22-WAY	*Call
2094<2084		4522<4415	15-WAY TO 22-WAY	*Call
2094<2084		4522<4416	16-WAY TO 22-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4522<4417	17-WAY TO 22-WAY	*Call
2094<2084		4522<4418	18-WAY TO 22-WAY	*Call
2094<2084		4522<4419	19-WAY TO 22-WAY	*Call
2094<2084		4522<4420	20-WAY TO 22-WAY	*Call
2094<2084		4522<4421	21-WAY TO 22-WAY	*Call
2094<2084		4522<4422	22-WAY TO 22-WAY	*Call
2094<2084		4522<4423	23-WAY TO 22-WAY	*Call
2094<2084		4522<4424	24-WAY TO 22-WAY	*Call
2094<2084		4522<4425	25-WAY TO 22-WAY	*Call
2094<2084		4522<4426	26-WAY TO 22-WAY	*Call
2094<2084		4522<4427	27-WAY TO 22-WAY	*Call
2094<2084		4522<4428	28-WAY TO 22-WAY	*Call
2094<2084		4522<4429	29-WAY TO 22-WAY	*Call
2094<2084		4522<4430	30-WAY TO 22-WAY	*Call
2094<2084		4522<4431	31-WAY TO 22-WAY	*Call
2094<2084		4522<4432	32-WAY TO 22-WAY	*Call
2094<2084		4523<4400	ZERO-WAY TO 23-WAY	*Call
2094<2084		4523<4401	1-WAY TO 23-WAY	*Call
2094<2084		4523<4402	2-WAY TO 23-WAY	*Call
2094<2084		4523<4403	3-WAY TO 23-WAY	*Call
2094<2084		4523<4404	4-WAY TO 23-WAY	*Call
2094<2084		4523<4405	5-WAY TO 23-WAY	*Call
2094<2084		4523<4406	6-WAY TO 23-WAY	*Call
2094<2084		4523<4407	7-WAY TO 23-WAY	*Call
2094<2084		4523<4408	8-WAY TO 23-WAY	*Call
2094<2084		4523<4409	9-WAY TO 23-WAY	*Call
2094<2084		4523<4410	10-WAY TO 23-WAY	*Call
2094<2084		4523<4411	11-WAY TO 23-WAY	*Call
2094<2084		4523<4412	12-WAY TO 23-WAY	*Call
2094<2084		4523<4413	13-WAY TO 23-WAY	*Call
2094<2084		4523<4414	14-WAY TO 23-WAY	*Call
2094<2084		4523<4415	15-WAY TO 23-WAY	*Call
2094<2084		4523<4416	16-WAY TO 23-WAY	*Call
2094<2084		4523<4417	17-WAY TO 23-WAY	*Call
2094<2084		4523<4418	18-WAY TO 23-WAY	*Call
2094<2084		4523<4419	19-WAY TO 23-WAY	*Call
2094<2084		4523<4420	20-WAY TO 23-WAY	*Call
2094<2084		4523<4421	21-WAY TO 23-WAY	*Call
2094<2084		4523<4422	22-WAY TO 23-WAY	*Call
2094<2084		4523<4423	23-WAY TO 23-WAY	*Call
2094<2084		4523<4424	24-WAY TO 23-WAY	*Call
2094<2084		4523<4425	25-WAY TO 23-WAY	*Call
2094<2084		4523<4426	26-WAY TO 23-WAY	*Call
2094<2084		4523<4427	27-WAY TO 23-WAY	*Call
2094<2084		4523<4428	28-WAY TO 23-WAY	*Call
2094<2084		4523<4429	29-WAY TO 23-WAY	*Call
2094<2084		4523<4430	30-WAY TO 23-WAY	*Call
2094<2084		4523<4431	31-WAY TO 23-WAY	*Call
2094<2084		4523<4432	32-WAY TO 23-WAY	*Call
2094<2084		4524<4400	ZERO-WAY TO 24-WAY	*Call
2094<2084		4524<4401	1-WAY TO 24-WAY	*Call
2094<2084		4524<4402	2-WAY TO 24-WAY	*Call
2094<2084		4524<4403	3-WAY TO 24-WAY	*Call
2094<2084		4524<4404	4-WAY TO 24-WAY	*Call
2094<2084		4524<4405	5-WAY TO 24-WAY	*Call
2094<2084		4524<4406	6-WAY TO 24-WAY	*Call
2094<2084		4524<4407	7-WAY TO 24-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4524<4408	8-WAY TO 24-WAY	*Call
2094<2084		4524<4409	9-WAY TO 24-WAY	*Call
2094<2084		4524<4410	10-WAY TO 24-WAY	*Call
2094<2084		4524<4411	11-WAY TO 24-WAY	*Call
2094<2084		4524<4412	12-WAY TO 24-WAY	*Call
2094<2084		4524<4413	13-WAY TO 24-WAY	*Call
2094<2084		4524<4414	14-WAY TO 24-WAY	*Call
2094<2084		4524<4415	15-WAY TO 24-WAY	*Call
2094<2084		4524<4416	16-WAY TO 24-WAY	*Call
2094<2084		4524<4417	17-WAY TO 24-WAY	*Call
2094<2084		4524<4418	18-WAY TO 24-WAY	*Call
2094<2084		4524<4419	19-WAY TO 24-WAY	*Call
2094<2084		4524<4420	20-WAY TO 24-WAY	*Call
2094<2084		4524<4421	21-WAY TO 24-WAY	*Call
2094<2084		4524<4422	22-WAY TO 24-WAY	*Call
2094<2084		4524<4423	23-WAY TO 24-WAY	*Call
2094<2084		4524<4424	24-WAY TO 24-WAY	*Call
2094<2084		4524<4425	25-WAY TO 24-WAY	*Call
2094<2084		4524<4426	26-WAY TO 24-WAY	*Call
2094<2084		4524<4427	27-WAY TO 24-WAY	*Call
2094<2084		4524<4428	28-WAY TO 24-WAY	*Call
2094<2084		4524<4429	29-WAY TO 24-WAY	*Call
2094<2084		4524<4430	30-WAY TO 24-WAY	*Call
2094<2084		4524<4431	31-WAY TO 24-WAY	*Call
2094<2084		4524<4432	32-WAY TO 24-WAY	*Call
2094<2084		4525<4400	ZERO-WAY TO 25-WAY	*Call
2094<2084		4525<4401	1-WAY TO 25-WAY	*Call
2094<2084		4525<4402	2-WAY TO 25-WAY	*Call
2094<2084		4525<4403	3-WAY TO 25-WAY	*Call
2094<2084		4525<4404	4-WAY TO 25-WAY	*Call
2094<2084		4525<4405	5-WAY TO 25-WAY	*Call
2094<2084		4525<4406	6-WAY TO 25-WAY	*Call
2094<2084		4525<4407	7-WAY TO 25-WAY	*Call
2094<2084		4525<4408	8-WAY TO 25-WAY	*Call
2094<2084		4525<4409	9-WAY TO 25-WAY	*Call
2094<2084		4525<4410	10-WAY TO 25-WAY	*Call
2094<2084		4525<4411	11-WAY TO 25-WAY	*Call
2094<2084		4525<4412	12-WAY TO 25-WAY	*Call
2094<2084		4525<4413	13-WAY TO 25-WAY	*Call
2094<2084		4525<4414	14-WAY TO 25-WAY	*Call
2094<2084		4525<4415	15-WAY TO 25-WAY	*Call
2094<2084		4525<4416	16-WAY TO 25-WAY	*Call
2094<2084		4525<4417	17-WAY TO 25-WAY	*Call
2094<2084		4525<4418	18-WAY TO 25-WAY	*Call
2094<2084		4525<4419	19-WAY TO 25-WAY	*Call
2094<2084		4525<4420	20-WAY TO 25-WAY	*Call
2094<2084		4525<4421	21-WAY TO 25-WAY	*Call
2094<2084		4525<4422	22-WAY TO 25-WAY	*Call
2094<2084		4525<4423	23-WAY TO 25-WAY	*Call
2094<2084		4525<4424	24-WAY TO 25-WAY	*Call
2094<2084		4525<4425	25-WAY TO 25-WAY	*Call
2094<2084		4525<4426	26-WAY TO 25-WAY	*Call
2094<2084		4525<4427	27-WAY TO 25-WAY	*Call
2094<2084		4525<4428	28-WAY TO 25-WAY	*Call
2094<2084		4525<4429	29-WAY TO 25-WAY	*Call
2094<2084		4525<4430	30-WAY TO 25-WAY	*Call
2094<2084		4525<4431	31-WAY TO 25-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4525<4432	32-WAY TO 25-WAY	*Call
2094<2084		4526<4400	ZERO-WAY TO 26-WAY	*Call
2094<2084		4526<4401	1-WAY TO 26-WAY	*Call
2094<2084		4526<4402	2-WAY TO 26-WAY	*Call
2094<2084		4526<4403	3-WAY TO 26-WAY	*Call
2094<2084		4526<4404	4-WAY TO 26-WAY	*Call
2094<2084		4526<4405	5-WAY TO 26-WAY	*Call
2094<2084		4526<4406	6-WAY TO 26-WAY	*Call
2094<2084		4526<4407	7-WAY TO 26-WAY	*Call
2094<2084		4526<4408	8-WAY TO 26-WAY	*Call
2094<2084		4526<4409	9-WAY TO 26-WAY	*Call
2094<2084		4526<4410	10-WAY TO 26-WAY	*Call
2094<2084		4526<4411	11-WAY TO 26-WAY	*Call
2094<2084		4526<4412	12-WAY TO 26-WAY	*Call
2094<2084		4526<4413	13-WAY TO 26-WAY	*Call
2094<2084		4526<4414	14-WAY TO 26-WAY	*Call
2094<2084		4526<4415	15-WAY TO 26-WAY	*Call
2094<2084		4526<4416	16-WAY TO 26-WAY	*Call
2094<2084		4526<4417	17-WAY TO 26-WAY	*Call
2094<2084		4526<4418	18-WAY TO 26-WAY	*Call
2094<2084		4526<4419	19-WAY TO 26-WAY	*Call
2094<2084		4526<4420	20-WAY TO 26-WAY	*Call
2094<2084		4526<4421	21-WAY TO 26-WAY	*Call
2094<2084		4526<4422	22-WAY TO 26-WAY	*Call
2094<2084		4526<4423	23-WAY TO 26-WAY	*Call
2094<2084		4526<4424	24-WAY TO 26-WAY	*Call
2094<2084		4526<4425	25-WAY TO 26-WAY	*Call
2094<2084		4526<4426	26-WAY TO 26-WAY	*Call
2094<2084		4526<4427	27-WAY TO 26-WAY	*Call
2094<2084		4526<4428	28-WAY TO 26-WAY	*Call
2094<2084		4526<4429	29-WAY TO 26-WAY	*Call
2094<2084		4526<4430	30-WAY TO 26-WAY	*Call
2094<2084		4526<4431	31-WAY TO 26-WAY	*Call
2094<2084		4526<4432	32-WAY TO 26-WAY	*Call
2094<2084		4527<4400	ZERO-WAY TO 27-WAY	*Call
2094<2084		4527<4401	1-WAY TO 27-WAY	*Call
2094<2084		4527<4402	2-WAY TO 27-WAY	*Call
2094<2084		4527<4403	3-WAY TO 27-WAY	*Call
2094<2084		4527<4404	4-WAY TO 27-WAY	*Call
2094<2084		4527<4405	5-WAY TO 27-WAY	*Call
2094<2084		4527<4406	6-WAY TO 27-WAY	*Call
2094<2084		4527<4407	7-WAY TO 27-WAY	*Call
2094<2084		4527<4408	8-WAY TO 27-WAY	*Call
2094<2084		4527<4409	9-WAY TO 27-WAY	*Call
2094<2084		4527<4410	10-WAY TO 27-WAY	*Call
2094<2084		4527<4411	11-WAY TO 27-WAY	*Call
2094<2084		4527<4412	12-WAY TO 27-WAY	*Call
2094<2084		4527<4413	13-WAY TO 27-WAY	*Call
2094<2084		4527<4414	14-WAY TO 27-WAY	*Call
2094<2084		4527<4415	15-WAY TO 27-WAY	*Call
2094<2084		4527<4416	16-WAY TO 27-WAY	*Call
2094<2084		4527<4417	17-WAY TO 27-WAY	*Call
2094<2084		4527<4418	18-WAY TO 27-WAY	*Call
2094<2084		4527<4419	19-WAY TO 27-WAY	*Call
2094<2084		4527<4420	20-WAY TO 27-WAY	*Call
2094<2084		4527<4421	21-WAY TO 27-WAY	*Call
2094<2084		4527<4422	22-WAY TO 27-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4527<4423	23-WAY TO 27-WAY	*Call
2094<2084		4527<4424	24-WAY TO 27-WAY	*Call
2094<2084		4527<4425	25-WAY TO 27-WAY	*Call
2094<2084		4527<4426	26-WAY TO 27-WAY	*Call
2094<2084		4527<4427	27-WAY TO 27-WAY	*Call
2094<2084		4527<4428	28-WAY TO 27-WAY	*Call
2094<2084		4527<4429	29-WAY TO 27-WAY	*Call
2094<2084		4527<4430	30-WAY TO 27-WAY	*Call
2094<2084		4527<4431	31-WAY TO 27-WAY	*Call
2094<2084		4527<4432	32-WAY TO 27-WAY	*Call
2094<2084		4528<4400	ZERO-WAY TO 28-WAY	*Call
2094<2084		4528<4401	1-WAY TO 28-WAY	*Call
2094<2084		4528<4402	2-WAY TO 28-WAY	*Call
2094<2084		4528<4403	3-WAY TO 28-WAY	*Call
2094<2084		4528<4404	4-WAY TO 28-WAY	*Call
2094<2084		4528<4405	5-WAY TO 28-WAY	*Call
2094<2084		4528<4406	6-WAY TO 28-WAY	*Call
2094<2084		4528<4407	7-WAY TO 28-WAY	*Call
2094<2084		4528<4408	8-WAY TO 28-WAY	*Call
2094<2084		4528<4409	9-WAY TO 28-WAY	*Call
2094<2084		4528<4410	10-WAY TO 28-WAY	*Call
2094<2084		4528<4411	11-WAY TO 28-WAY	*Call
2094<2084		4528<4412	12-WAY TO 28-WAY	*Call
2094<2084		4528<4413	13-WAY TO 28-WAY	*Call
2094<2084		4528<4414	14-WAY TO 28-WAY	*Call
2094<2084		4528<4415	15-WAY TO 28-WAY	*Call
2094<2084		4528<4416	16-WAY TO 28-WAY	*Call
2094<2084		4528<4417	17-WAY TO 28-WAY	*Call
2094<2084		4528<4418	18-WAY TO 28-WAY	*Call
2094<2084		4528<4419	19-WAY TO 28-WAY	*Call
2094<2084		4528<4420	20-WAY TO 28-WAY	*Call
2094<2084		4528<4421	21-WAY TO 28-WAY	*Call
2094<2084		4528<4422	22-WAY TO 28-WAY	*Call
2094<2084		4528<4423	23-WAY TO 28-WAY	*Call
2094<2084		4528<4424	24-WAY TO 28-WAY	*Call
2094<2084		4528<4425	25-WAY TO 28-WAY	*Call
2094<2084		4528<4426	26-WAY TO 28-WAY	*Call
2094<2084		4528<4427	27-WAY TO 28-WAY	*Call
2094<2084		4528<4428	28-WAY TO 28-WAY	*Call
2094<2084		4528<4429	29-WAY TO 28-WAY	*Call
2094<2084		4528<4430	30-WAY TO 28-WAY	*Call
2094<2084		4528<4431	31-WAY TO 28-WAY	*Call
2094<2084		4528<4432	32-WAY TO 28-WAY	*Call
2094<2084		4529<4400	ZERO-WAY TO 29-WAY	*Call
2094<2084		4529<4401	1-WAY TO 29-WAY	*Call
2094<2084		4529<4402	2-WAY TO 29-WAY	*Call
2094<2084		4529<4403	3-WAY TO 29-WAY	*Call
2094<2084		4529<4404	4-WAY TO 29-WAY	*Call
2094<2084		4529<4405	5-WAY TO 29-WAY	*Call
2094<2084		4529<4406	6-WAY TO 29-WAY	*Call
2094<2084		4529<4407	7-WAY TO 29-WAY	*Call
2094<2084		4529<4408	8-WAY TO 29-WAY	*Call
2094<2084		4529<4409	9-WAY TO 29-WAY	*Call
2094<2084		4529<4410	10-WAY TO 29-WAY	*Call
2094<2084		4529<4411	11-WAY TO 29-WAY	*Call
2094<2084		4529<4412	12-WAY TO 29-WAY	*Call
2094<2084		4529<4413	13-WAY TO 29-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4529<4414	14-WAY TO 29-WAY	*Call
2094<2084		4529<4415	15-WAY TO 29-WAY	*Call
2094<2084		4529<4416	16-WAY TO 29-WAY	*Call
2094<2084		4529<4417	17-WAY TO 29-WAY	*Call
2094<2084		4529<4418	18-WAY TO 29-WAY	*Call
2094<2084		4529<4419	19-WAY TO 29-WAY	*Call
2094<2084		4529<4420	20-WAY TO 29-WAY	*Call
2094<2084		4529<4421	21-WAY TO 29-WAY	*Call
2094<2084		4529<4422	22-WAY TO 29-WAY	*Call
2094<2084		4529<4423	23-WAY TO 29-WAY	*Call
2094<2084		4529<4424	24-WAY TO 29-WAY	*Call
2094<2084		4529<4425	25-WAY TO 29-WAY	*Call
2094<2084		4529<4426	26-WAY TO 29-WAY	*Call
2094<2084		4529<4427	27-WAY TO 29-WAY	*Call
2094<2084		4529<4428	28-WAY TO 29-WAY	*Call
2094<2084		4529<4429	29-WAY TO 29-WAY	*Call
2094<2084		4529<4430	30-WAY TO 29-WAY	*Call
2094<2084		4529<4431	31-WAY TO 29-WAY	*Call
2094<2084		4529<4432	32-WAY TO 29-WAY	*Call
2094<2084		4530<4400	ZERO-WAY TO 30-WAY	*Call
2094<2084		4530<4401	1-WAY TO 30-WAY	*Call
2094<2084		4530<4402	2-WAY TO 30-WAY	*Call
2094<2084		4530<4403	3-WAY TO 30-WAY	*Call
2094<2084		4530<4404	4-WAY TO 30-WAY	*Call
2094<2084		4530<4405	5-WAY TO 30-WAY	*Call
2094<2084		4530<4406	6-WAY TO 30-WAY	*Call
2094<2084		4530<4407	7-WAY TO 30-WAY	*Call
2094<2084		4530<4408	8-WAY TO 30-WAY	*Call
2094<2084		4530<4409	9-WAY TO 30-WAY	*Call
2094<2084		4530<4410	10-WAY TO 30-WAY	*Call
2094<2084		4530<4411	11-WAY TO 30-WAY	*Call
2094<2084		4530<4412	12-WAY TO 30-WAY	*Call
2094<2084		4530<4413	13-WAY TO 30-WAY	*Call
2094<2084		4530<4414	14-WAY TO 30-WAY	*Call
2094<2084		4530<4415	15-WAY TO 30-WAY	*Call
2094<2084		4530<4416	16-WAY TO 30-WAY	*Call
2094<2084		4530<4417	17-WAY TO 30-WAY	*Call
2094<2084		4530<4418	18-WAY TO 30-WAY	*Call
2094<2084		4530<4419	19-WAY TO 30-WAY	*Call
2094<2084		4530<4420	20-WAY TO 30-WAY	*Call
2094<2084		4530<4421	21-WAY TO 30-WAY	*Call
2094<2084		4530<4422	22-WAY TO 30-WAY	*Call
2094<2084		4530<4423	23-WAY TO 30-WAY	*Call
2094<2084		4530<4424	24-WAY TO 30-WAY	*Call
2094<2084		4530<4425	25-WAY TO 30-WAY	*Call
2094<2084		4530<4426	26-WAY TO 30-WAY	*Call
2094<2084		4530<4427	27-WAY TO 30-WAY	*Call
2094<2084		4530<4428	28-WAY TO 30-WAY	*Call
2094<2084		4530<4429	29-WAY TO 30-WAY	*Call
2094<2084		4530<4430	30-WAY TO 30-WAY	*Call
2094<2084		4530<4431	31-WAY TO 30-WAY	*Call
2094<2084		4530<4432	32-WAY TO 30-WAY	*Call
2094<2084		4531<4400	ZERO-WAY TO 31-WAY	*Call
2094<2084		4531<4401	1-WAY TO 31-WAY	*Call
2094<2084		4531<4402	2-WAY TO 31-WAY	*Call
2094<2084		4531<4403	3-WAY TO 31-WAY	*Call
2094<2084		4531<4404	4-WAY TO 31-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4531<4405	5-WAY TO 31-WAY	*Call
2094<2084		4531<4406	6-WAY TO 31-WAY	*Call
2094<2084		4531<4407	7-WAY TO 31-WAY	*Call
2094<2084		4531<4408	8-WAY TO 31-WAY	*Call
2094<2084		4531<4409	9-WAY TO 31-WAY	*Call
2094<2084		4531<4410	10-WAY TO 31-WAY	*Call
2094<2084		4531<4411	11-WAY TO 31-WAY	*Call
2094<2084		4531<4412	12-WAY TO 31-WAY	*Call
2094<2084		4531<4413	13-WAY TO 31-WAY	*Call
2094<2084		4531<4414	14-WAY TO 31-WAY	*Call
2094<2084		4531<4415	15-WAY TO 31-WAY	*Call
2094<2084		4531<4416	16-WAY TO 31-WAY	*Call
2094<2084		4531<4417	17-WAY TO 31-WAY	*Call
2094<2084		4531<4418	18-WAY TO 31-WAY	*Call
2094<2084		4531<4419	19-WAY TO 31-WAY	*Call
2094<2084		4531<4420	20-WAY TO 31-WAY	*Call
2094<2084		4531<4421	21-WAY TO 31-WAY	*Call
2094<2084		4531<4422	22-WAY TO 31-WAY	*Call
2094<2084		4531<4423	23-WAY TO 31-WAY	*Call
2094<2084		4531<4424	24-WAY TO 31-WAY	*Call
2094<2084		4531<4425	25-WAY TO 31-WAY	*Call
2094<2084		4531<4426	26-WAY TO 31-WAY	*Call
2094<2084		4531<4427	27-WAY TO 31-WAY	*Call
2094<2084		4531<4428	28-WAY TO 31-WAY	*Call
2094<2084		4531<4429	29-WAY TO 31-WAY	*Call
2094<2084		4531<4430	30-WAY TO 31-WAY	*Call
2094<2084		4531<4431	31-WAY TO 31-WAY	*Call
2094<2084		4531<4432	32-WAY TO 31-WAY	*Call
2094<2084		4532<4400	ZERO-WAY TO 32-WAY	*Call
2094<2084		4532<4401	1-WAY TO 32-WAY	*Call
2094<2084		4532<4402	2-WAY TO 32-WAY	*Call
2094<2084		4532<4403	3-WAY TO 32-WAY	*Call
2094<2084		4532<4404	4-WAY TO 32-WAY	*Call
2094<2084		4532<4405	5-WAY TO 32-WAY	*Call
2094<2084		4532<4406	6-WAY TO 32-WAY	*Call
2094<2084		4532<4407	7-WAY TO 32-WAY	*Call
2094<2084		4532<4408	8-WAY TO 32-WAY	*Call
2094<2084		4532<4409	9-WAY TO 32-WAY	*Call
2094<2084		4532<4410	10-WAY TO 32-WAY	*Call
2094<2084		4532<4411	11-WAY TO 32-WAY	*Call
2094<2084		4532<4412	12-WAY TO 32-WAY	*Call
2094<2084		4532<4413	13-WAY TO 32-WAY	*Call
2094<2084		4532<4414	14-WAY TO 32-WAY	*Call
2094<2084		4532<4415	15-WAY TO 32-WAY	*Call
2094<2084		4532<4416	16-WAY TO 32-WAY	*Call
2094<2084		4532<4417	17-WAY TO 32-WAY	*Call
2094<2084		4532<4418	18-WAY TO 32-WAY	*Call
2094<2084		4532<4419	19-WAY TO 32-WAY	*Call
2094<2084		4532<4420	20-WAY TO 32-WAY	*Call
2094<2084		4532<4421	21-WAY TO 32-WAY	*Call
2094<2084		4532<4422	22-WAY TO 32-WAY	*Call
2094<2084		4532<4423	23-WAY TO 32-WAY	*Call
2094<2084		4532<4424	24-WAY TO 32-WAY	*Call
2094<2084		4532<4425	25-WAY TO 32-WAY	*Call
2094<2084		4532<4426	26-WAY TO 32-WAY	*Call
2094<2084		4532<4427	27-WAY TO 32-WAY	*Call
2094<2084		4532<4428	28-WAY TO 32-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4532<4429	29-WAY TO 32-WAY	*Call
2094<2084		4532<4430	30-WAY TO 32-WAY	*Call
2094<2084		4532<4431	31-WAY TO 32-WAY	*Call
2094<2084		4532<4432	32-WAY TO 32-WAY	*Call
2094<2084		4533<4400	ZERO-WAY TO 33-WAY	*Call
2094<2084		4533<4401	1-WAY TO 33-WAY	*Call
2094<2084		4533<4402	2-WAY TO 33-WAY	*Call
2094<2084		4533<4403	3-WAY TO 33-WAY	*Call
2094<2084		4533<4404	4-WAY TO 33-WAY	*Call
2094<2084		4533<4405	5-WAY TO 33-WAY	*Call
2094<2084		4533<4406	6-WAY TO 33-WAY	*Call
2094<2084		4533<4407	7-WAY TO 33-WAY	*Call
2094<2084		4533<4408	8-WAY TO 33-WAY	*Call
2094<2084		4533<4409	9-WAY TO 33-WAY	*Call
2094<2084		4533<4410	10-WAY TO 33-WAY	*Call
2094<2084		4533<4411	11-WAY TO 33-WAY	*Call
2094<2084		4533<4412	12-WAY TO 33-WAY	*Call
2094<2084		4533<4413	13-WAY TO 33-WAY	*Call
2094<2084		4533<4414	14-WAY TO 33-WAY	*Call
2094<2084		4533<4415	15-WAY TO 33-WAY	*Call
2094<2084		4533<4416	16-WAY TO 33-WAY	*Call
2094<2084		4533<4417	17-WAY TO 33-WAY	*Call
2094<2084		4533<4418	18-WAY TO 33-WAY	*Call
2094<2084		4533<4419	19-WAY TO 33-WAY	*Call
2094<2084		4533<4420	20-WAY TO 33-WAY	*Call
2094<2084		4533<4421	21-WAY TO 33-WAY	*Call
2094<2084		4533<4422	22-WAY TO 33-WAY	*Call
2094<2084		4533<4423	23-WAY TO 33-WAY	*Call
2094<2084		4533<4424	24-WAY TO 33-WAY	*Call
2094<2084		4533<4425	25-WAY TO 33-WAY	*Call
2094<2084		4533<4426	26-WAY TO 33-WAY	*Call
2094<2084		4533<4427	27-WAY TO 33-WAY	*Call
2094<2084		4533<4428	28-WAY TO 33-WAY	*Call
2094<2084		4533<4429	29-WAY TO 33-WAY	*Call
2094<2084		4533<4430	30-WAY TO 33-WAY	*Call
2094<2084		4533<4431	31-WAY TO 33-WAY	*Call
2094<2084		4533<4432	32-WAY TO 33-WAY	*Call
2094<2084		4534<4400	ZERO-WAY TO 34-WAY	*Call
2094<2084		4534<4401	1-WAY TO 34-WAY	*Call
2094<2084		4534<4402	2-WAY TO 34-WAY	*Call
2094<2084		4534<4403	3-WAY TO 34-WAY	*Call
2094<2084		4534<4404	4-WAY TO 34-WAY	*Call
2094<2084		4534<4405	5-WAY TO 34-WAY	*Call
2094<2084		4534<4406	6-WAY TO 34-WAY	*Call
2094<2084		4534<4407	7-WAY TO 34-WAY	*Call
2094<2084		4534<4408	8-WAY TO 34-WAY	*Call
2094<2084		4534<4409	9-WAY TO 34-WAY	*Call
2094<2084		4534<4410	10-WAY TO 34-WAY	*Call
2094<2084		4534<4411	11-WAY TO 34-WAY	*Call
2094<2084		4534<4412	12-WAY TO 34-WAY	*Call
2094<2084		4534<4413	13-WAY TO 34-WAY	*Call
2094<2084		4534<4414	14-WAY TO 34-WAY	*Call
2094<2084		4534<4415	15-WAY TO 34-WAY	*Call
2094<2084		4534<4416	16-WAY TO 34-WAY	*Call
2094<2084		4534<4417	17-WAY TO 34-WAY	*Call
2094<2084		4534<4418	18-WAY TO 34-WAY	*Call
2094<2084		4534<4419	19-WAY TO 34-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4534<4420	20-WAY TO 34-WAY	*Call
2094<2084		4534<4421	21-WAY TO 34-WAY	*Call
2094<2084		4534<4422	22-WAY TO 34-WAY	*Call
2094<2084		4534<4423	23-WAY TO 34-WAY	*Call
2094<2084		4534<4424	24-WAY TO 34-WAY	*Call
2094<2084		4534<4425	25-WAY TO 34-WAY	*Call
2094<2084		4534<4426	26-WAY TO 34-WAY	*Call
2094<2084		4534<4427	27-WAY TO 34-WAY	*Call
2094<2084		4534<4428	28-WAY TO 34-WAY	*Call
2094<2084		4534<4429	29-WAY TO 34-WAY	*Call
2094<2084		4534<4430	30-WAY TO 34-WAY	*Call
2094<2084		4534<4431	31-WAY TO 34-WAY	*Call
2094<2084		4534<4432	32-WAY TO 34-WAY	*Call
2094<2084		4535<4400	ZERO-WAY TO 35-WAY	*Call
2094<2084		4535<4401	1-WAY TO 35-WAY	*Call
2094<2084		4535<4402	2-WAY TO 35-WAY	*Call
2094<2084		4535<4403	3-WAY TO 35-WAY	*Call
2094<2084		4535<4404	4-WAY TO 35-WAY	*Call
2094<2084		4535<4405	5-WAY TO 35-WAY	*Call
2094<2084		4535<4406	6-WAY TO 35-WAY	*Call
2094<2084		4535<4407	7-WAY TO 35-WAY	*Call
2094<2084		4535<4408	8-WAY TO 35-WAY	*Call
2094<2084		4535<4409	9-WAY TO 35-WAY	*Call
2094<2084		4535<4410	10-WAY TO 35-WAY	*Call
2094<2084		4535<4411	11-WAY TO 35-WAY	*Call
2094<2084		4535<4412	12-WAY TO 35-WAY	*Call
2094<2084		4535<4413	13-WAY TO 35-WAY	*Call
2094<2084		4535<4414	14-WAY TO 35-WAY	*Call
2094<2084		4535<4415	15-WAY TO 35-WAY	*Call
2094<2084		4535<4416	16-WAY TO 35-WAY	*Call
2094<2084		4535<4417	17-WAY TO 35-WAY	*Call
2094<2084		4535<4418	18-WAY TO 35-WAY	*Call
2094<2084		4535<4419	19-WAY TO 35-WAY	*Call
2094<2084		4535<4420	20-WAY TO 35-WAY	*Call
2094<2084		4535<4421	21-WAY TO 35-WAY	*Call
2094<2084		4535<4422	22-WAY TO 35-WAY	*Call
2094<2084		4535<4423	23-WAY TO 35-WAY	*Call
2094<2084		4535<4424	24-WAY TO 35-WAY	*Call
2094<2084		4535<4425	25-WAY TO 35-WAY	*Call
2094<2084		4535<4426	26-WAY TO 35-WAY	*Call
2094<2084		4535<4427	27-WAY TO 35-WAY	*Call
2094<2084		4535<4428	28-WAY TO 35-WAY	*Call
2094<2084		4535<4429	29-WAY TO 35-WAY	*Call
2094<2084		4535<4430	30-WAY TO 35-WAY	*Call
2094<2084		4535<4431	31-WAY TO 35-WAY	*Call
2094<2084		4535<4432	32-WAY TO 35-WAY	*Call
2094<2084		4536<4400	ZERO-WAY TO 36-WAY	*Call
2094<2084		4536<4401	1-WAY TO 36-WAY	*Call
2094<2084		4536<4402	2-WAY TO 36-WAY	*Call
2094<2084		4536<4403	3-WAY TO 36-WAY	*Call
2094<2084		4536<4404	4-WAY TO 36-WAY	*Call
2094<2084		4536<4405	5-WAY TO 36-WAY	*Call
2094<2084		4536<4406	6-WAY TO 36-WAY	*Call
2094<2084		4536<4407	7-WAY TO 36-WAY	*Call
2094<2084		4536<4408	8-WAY TO 36-WAY	*Call
2094<2084		4536<4409	9-WAY TO 36-WAY	*Call
2094<2084		4536<4410	10-WAY TO 36-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4536<4411	11-WAY TO 36-WAY	*Call
2094<2084		4536<4412	12-WAY TO 36-WAY	*Call
2094<2084		4536<4413	13-WAY TO 36-WAY	*Call
2094<2084		4536<4414	14-WAY TO 36-WAY	*Call
2094<2084		4536<4415	15-WAY TO 36-WAY	*Call
2094<2084		4536<4416	16-WAY TO 36-WAY	*Call
2094<2084		4536<4417	17-WAY TO 36-WAY	*Call
2094<2084		4536<4418	18-WAY TO 36-WAY	*Call
2094<2084		4536<4419	19-WAY TO 36-WAY	*Call
2094<2084		4536<4420	20-WAY TO 36-WAY	*Call
2094<2084		4536<4421	21-WAY TO 36-WAY	*Call
2094<2084		4536<4422	22-WAY TO 36-WAY	*Call
2094<2084		4536<4423	23-WAY TO 36-WAY	*Call
2094<2084		4536<4424	24-WAY TO 36-WAY	*Call
2094<2084		4536<4425	25-WAY TO 36-WAY	*Call
2094<2084		4536<4426	26-WAY TO 36-WAY	*Call
2094<2084		4536<4427	27-WAY TO 36-WAY	*Call
2094<2084		4536<4428	28-WAY TO 36-WAY	*Call
2094<2084		4536<4429	29-WAY TO 36-WAY	*Call
2094<2084		4536<4430	30-WAY TO 36-WAY	*Call
2094<2084		4536<4431	31-WAY TO 36-WAY	*Call
2094<2084		4536<4432	32-WAY TO 36-WAY	*Call
2094<2084		4537<4400	ZERO-WAY TO 37-WAY	*Call
2094<2084		4537<4401	1-WAY TO 37-WAY	*Call
2094<2084		4537<4402	2-WAY TO 37-WAY	*Call
2094<2084		4537<4403	3-WAY TO 37-WAY	*Call
2094<2084		4537<4404	4-WAY TO 37-WAY	*Call
2094<2084		4537<4405	5-WAY TO 37-WAY	*Call
2094<2084		4537<4406	6-WAY TO 37-WAY	*Call
2094<2084		4537<4407	7-WAY TO 37-WAY	*Call
2094<2084		4537<4408	8-WAY TO 37-WAY	*Call
2094<2084		4537<4409	9-WAY TO 37-WAY	*Call
2094<2084		4537<4410	10-WAY TO 37-WAY	*Call
2094<2084		4537<4411	11-WAY TO 37-WAY	*Call
2094<2084		4537<4412	12-WAY TO 37-WAY	*Call
2094<2084		4537<4413	13-WAY TO 37-WAY	*Call
2094<2084		4537<4414	14-WAY TO 37-WAY	*Call
2094<2084		4537<4415	15-WAY TO 37-WAY	*Call
2094<2084		4537<4416	16-WAY TO 37-WAY	*Call
2094<2084		4537<4417	17-WAY TO 37-WAY	*Call
2094<2084		4537<4418	18-WAY TO 37-WAY	*Call
2094<2084		4537<4419	19-WAY TO 37-WAY	*Call
2094<2084		4537<4420	20-WAY TO 37-WAY	*Call
2094<2084		4537<4421	21-WAY TO 37-WAY	*Call
2094<2084		4537<4422	22-WAY TO 37-WAY	*Call
2094<2084		4537<4423	23-WAY TO 37-WAY	*Call
2094<2084		4537<4424	24-WAY TO 37-WAY	*Call
2094<2084		4537<4425	25-WAY TO 37-WAY	*Call
2094<2084		4537<4426	26-WAY TO 37-WAY	*Call
2094<2084		4537<4427	27-WAY TO 37-WAY	*Call
2094<2084		4537<4428	28-WAY TO 37-WAY	*Call
2094<2084		4537<4429	29-WAY TO 37-WAY	*Call
2094<2084		4537<4430	30-WAY TO 37-WAY	*Call
2094<2084		4537<4431	31-WAY TO 37-WAY	*Call
2094<2084		4537<4432	32-WAY TO 37-WAY	*Call
2094<2084		4538<4400	ZERO-WAY TO 38-WAY	*Call
2094<2084		4538<4401	1-WAY TO 38-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4538<4402	2-WAY TO 38-WAY	*Call
2094<2084		4538<4403	3-WAY TO 38-WAY	*Call
2094<2084		4538<4404	4-WAY TO 38-WAY	*Call
2094<2084		4538<4405	5-WAY TO 38-WAY	*Call
2094<2084		4538<4406	6-WAY TO 38-WAY	*Call
2094<2084		4538<4407	7-WAY TO 38-WAY	*Call
2094<2084		4538<4408	8-WAY TO 38-WAY	*Call
2094<2084		4538<4409	9-WAY TO 38-WAY	*Call
2094<2084		4538<4410	10-WAY TO 38-WAY	*Call
2094<2084		4538<4411	11-WAY TO 38-WAY	*Call
2094<2084		4538<4412	12-WAY TO 38-WAY	*Call
2094<2084		4538<4413	13-WAY TO 38-WAY	*Call
2094<2084		4538<4414	14-WAY TO 38-WAY	*Call
2094<2084		4538<4415	15-WAY TO 38-WAY	*Call
2094<2084		4538<4416	16-WAY TO 38-WAY	*Call
2094<2084		4538<4417	17-WAY TO 38-WAY	*Call
2094<2084		4538<4418	18-WAY TO 38-WAY	*Call
2094<2084		4538<4419	19-WAY TO 38-WAY	*Call
2094<2084		4538<4420	20-WAY TO 38-WAY	*Call
2094<2084		4538<4421	21-WAY TO 38-WAY	*Call
2094<2084		4538<4422	22-WAY TO 38-WAY	*Call
2094<2084		4538<4423	23-WAY TO 38-WAY	*Call
2094<2084		4538<4424	24-WAY TO 38-WAY	*Call
2094<2084		4538<4425	25-WAY TO 38-WAY	*Call
2094<2084		4538<4426	26-WAY TO 38-WAY	*Call
2094<2084		4538<4427	27-WAY TO 38-WAY	*Call
2094<2084		4538<4428	28-WAY TO 38-WAY	*Call
2094<2084		4538<4429	29-WAY TO 38-WAY	*Call
2094<2084		4538<4430	30-WAY TO 38-WAY	*Call
2094<2084		4538<4431	31-WAY TO 38-WAY	*Call
2094<2084		4538<4432	32-WAY TO 38-WAY	*Call
2094<2084		4539<4400	ZERO-WAY TO 39-WAY	*Call
2094<2084		4539<4401	1-WAY TO 39-WAY	*Call
2094<2084		4539<4402	2-WAY TO 39-WAY	*Call
2094<2084		4539<4403	3-WAY TO 39-WAY	*Call
2094<2084		4539<4404	4-WAY TO 39-WAY	*Call
2094<2084		4539<4405	5-WAY TO 39-WAY	*Call
2094<2084		4539<4406	6-WAY TO 39-WAY	*Call
2094<2084		4539<4407	7-WAY TO 39-WAY	*Call
2094<2084		4539<4408	8-WAY TO 39-WAY	*Call
2094<2084		4539<4409	9-WAY TO 39-WAY	*Call
2094<2084		4539<4410	10-WAY TO 39-WAY	*Call
2094<2084		4539<4411	11-WAY TO 39-WAY	*Call
2094<2084		4539<4412	12-WAY TO 39-WAY	*Call
2094<2084		4539<4413	13-WAY TO 39-WAY	*Call
2094<2084		4539<4414	14-WAY TO 39-WAY	*Call
2094<2084		4539<4415	15-WAY TO 39-WAY	*Call
2094<2084		4539<4416	16-WAY TO 39-WAY	*Call
2094<2084		4539<4417	17-WAY TO 39-WAY	*Call
2094<2084		4539<4418	18-WAY TO 39-WAY	*Call
2094<2084		4539<4419	19-WAY TO 39-WAY	*Call
2094<2084		4539<4420	20-WAY TO 39-WAY	*Call
2094<2084		4539<4421	21-WAY TO 39-WAY	*Call
2094<2084		4539<4422	22-WAY TO 39-WAY	*Call
2094<2084		4539<4423	23-WAY TO 39-WAY	*Call
2094<2084		4539<4424	24-WAY TO 39-WAY	*Call
2094<2084		4539<4425	25-WAY TO 39-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4539<4426	26-WAY TO 39-WAY	*Call
2094<2084		4539<4427	27-WAY TO 39-WAY	*Call
2094<2084		4539<4428	28-WAY TO 39-WAY	*Call
2094<2084		4539<4429	29-WAY TO 39-WAY	*Call
2094<2084		4539<4430	30-WAY TO 39-WAY	*Call
2094<2084		4539<4431	31-WAY TO 39-WAY	*Call
2094<2084		4539<4432	32-WAY TO 39-WAY	*Call
2094<2084		4540<4400	ZERO-WAY TO 40-WAY	*Call
2094<2084		4540<4401	1-WAY TO 40-WAY	*Call
2094<2084		4540<4402	2-WAY TO 40-WAY	*Call
2094<2084		4540<4403	3-WAY TO 40-WAY	*Call
2094<2084		4540<4404	4-WAY TO 40-WAY	*Call
2094<2084		4540<4405	5-WAY TO 40-WAY	*Call
2094<2084		4540<4406	6-WAY TO 40-WAY	*Call
2094<2084		4540<4407	7-WAY TO 40-WAY	*Call
2094<2084		4540<4408	8-WAY TO 40-WAY	*Call
2094<2084		4540<4409	9-WAY TO 40-WAY	*Call
2094<2084		4540<4410	10-WAY TO 40-WAY	*Call
2094<2084		4540<4411	11-WAY TO 40-WAY	*Call
2094<2084		4540<4412	12-WAY TO 40-WAY	*Call
2094<2084		4540<4413	13-WAY TO 40-WAY	*Call
2094<2084		4540<4414	14-WAY TO 40-WAY	*Call
2094<2084		4540<4415	15-WAY TO 40-WAY	*Call
2094<2084		4540<4416	16-WAY TO 40-WAY	*Call
2094<2084		4540<4417	17-WAY TO 40-WAY	*Call
2094<2084		4540<4418	18-WAY TO 40-WAY	*Call
2094<2084		4540<4419	19-WAY TO 40-WAY	*Call
2094<2084		4540<4420	20-WAY TO 40-WAY	*Call
2094<2084		4540<4421	21-WAY TO 40-WAY	*Call
2094<2084		4540<4422	22-WAY TO 40-WAY	*Call
2094<2084		4540<4423	23-WAY TO 40-WAY	*Call
2094<2084		4540<4424	24-WAY TO 40-WAY	*Call
2094<2084		4540<4425	25-WAY TO 40-WAY	*Call
2094<2084		4540<4426	26-WAY TO 40-WAY	*Call
2094<2084		4540<4427	27-WAY TO 40-WAY	*Call
2094<2084		4540<4428	28-WAY TO 40-WAY	*Call
2094<2084		4540<4429	29-WAY TO 40-WAY	*Call
2094<2084		4540<4430	30-WAY TO 40-WAY	*Call
2094<2084		4540<4431	31-WAY TO 40-WAY	*Call
2094<2084		4540<4432	32-WAY TO 40-WAY	*Call
2094<2084		4541<4400	ZERO-WAY TO 41-WAY	*Call
2094<2084		4541<4401	1-WAY TO 41-WAY	*Call
2094<2084		4541<4402	2-WAY TO 41-WAY	*Call
2094<2084		4541<4403	3-WAY TO 41-WAY	*Call
2094<2084		4541<4404	4-WAY TO 41-WAY	*Call
2094<2084		4541<4405	5-WAY TO 41-WAY	*Call
2094<2084		4541<4406	6-WAY TO 41-WAY	*Call
2094<2084		4541<4407	7-WAY TO 41-WAY	*Call
2094<2084		4541<4408	8-WAY TO 41-WAY	*Call
2094<2084		4541<4409	9-WAY TO 41-WAY	*Call
2094<2084		4541<4410	10-WAY TO 41-WAY	*Call
2094<2084		4541<4411	11-WAY TO 41-WAY	*Call
2094<2084		4541<4412	12-WAY TO 41-WAY	*Call
2094<2084		4541<4413	13-WAY TO 41-WAY	*Call
2094<2084		4541<4414	14-WAY TO 41-WAY	*Call
2094<2084		4541<4415	15-WAY TO 41-WAY	*Call
2094<2084		4541<4416	16-WAY TO 41-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4541<4417	17-WAY TO 41-WAY	*Call
2094<2084		4541<4418	18-WAY TO 41-WAY	*Call
2094<2084		4541<4419	19-WAY TO 41-WAY	*Call
2094<2084		4541<4420	20-WAY TO 41-WAY	*Call
2094<2084		4541<4421	21-WAY TO 41-WAY	*Call
2094<2084		4541<4422	22-WAY TO 41-WAY	*Call
2094<2084		4541<4423	23-WAY TO 41-WAY	*Call
2094<2084		4541<4424	24-WAY TO 41-WAY	*Call
2094<2084		4541<4425	25-WAY TO 41-WAY	*Call
2094<2084		4541<4426	26-WAY TO 41-WAY	*Call
2094<2084		4541<4427	27-WAY TO 41-WAY	*Call
2094<2084		4541<4428	28-WAY TO 41-WAY	*Call
2094<2084		4541<4429	29-WAY TO 41-WAY	*Call
2094<2084		4541<4430	30-WAY TO 41-WAY	*Call
2094<2084		4541<4431	31-WAY TO 41-WAY	*Call
2094<2084		4541<4432	32-WAY TO 41-WAY	*Call
2094<2084		4542<4400	ZERO-WAY TO 42-WAY	*Call
2094<2084		4542<4401	1-WAY TO 42-WAY	*Call
2094<2084		4542<4402	2-WAY TO 42-WAY	*Call
2094<2084		4542<4403	3-WAY TO 42-WAY	*Call
2094<2084		4542<4404	4-WAY TO 42-WAY	*Call
2094<2084		4542<4405	5-WAY TO 42-WAY	*Call
2094<2084		4542<4406	6-WAY TO 42-WAY	*Call
2094<2084		4542<4407	7-WAY TO 42-WAY	*Call
2094<2084		4542<4408	8-WAY TO 42-WAY	*Call
2094<2084		4542<4409	9-WAY TO 42-WAY	*Call
2094<2084		4542<4410	10-WAY TO 42-WAY	*Call
2094<2084		4542<4411	11-WAY TO 42-WAY	*Call
2094<2084		4542<4412	12-WAY TO 42-WAY	*Call
2094<2084		4542<4413	13-WAY TO 42-WAY	*Call
2094<2084		4542<4414	14-WAY TO 42-WAY	*Call
2094<2084		4542<4415	15-WAY TO 42-WAY	*Call
2094<2084		4542<4416	16-WAY TO 42-WAY	*Call
2094<2084		4542<4417	17-WAY TO 42-WAY	*Call
2094<2084		4542<4418	18-WAY TO 42-WAY	*Call
2094<2084		4542<4419	19-WAY TO 42-WAY	*Call
2094<2084		4542<4420	20-WAY TO 42-WAY	*Call
2094<2084		4542<4421	21-WAY TO 42-WAY	*Call
2094<2084		4542<4422	22-WAY TO 42-WAY	*Call
2094<2084		4542<4423	23-WAY TO 42-WAY	*Call
2094<2084		4542<4424	24-WAY TO 42-WAY	*Call
2094<2084		4542<4425	25-WAY TO 42-WAY	*Call
2094<2084		4542<4426	26-WAY TO 42-WAY	*Call
2094<2084		4542<4427	27-WAY TO 42-WAY	*Call
2094<2084		4542<4428	28-WAY TO 42-WAY	*Call
2094<2084		4542<4429	29-WAY TO 42-WAY	*Call
2094<2084		4542<4430	30-WAY TO 42-WAY	*Call
2094<2084		4542<4431	31-WAY TO 42-WAY	*Call
2094<2084		4542<4432	32-WAY TO 42-WAY	*Call
2094<2084		4543<4400	ZERO-WAY TO 43-WAY	*Call
2094<2084		4543<4401	1-WAY TO 43-WAY	*Call
2094<2084		4543<4402	2-WAY TO 43-WAY	*Call
2094<2084		4543<4403	3-WAY TO 43-WAY	*Call
2094<2084		4543<4404	4-WAY TO 43-WAY	*Call
2094<2084		4543<4405	5-WAY TO 43-WAY	*Call
2094<2084		4543<4406	6-WAY TO 43-WAY	*Call
2094<2084		4543<4407	7-WAY TO 43-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4543<4408	8-WAY TO 43-WAY	*Call
2094<2084		4543<4409	9-WAY TO 43-WAY	*Call
2094<2084		4543<4410	10-WAY TO 43-WAY	*Call
2094<2084		4543<4411	11-WAY TO 43-WAY	*Call
2094<2084		4543<4412	12-WAY TO 43-WAY	*Call
2094<2084		4543<4413	13-WAY TO 43-WAY	*Call
2094<2084		4543<4414	14-WAY TO 43-WAY	*Call
2094<2084		4543<4415	15-WAY TO 43-WAY	*Call
2094<2084		4543<4416	16-WAY TO 43-WAY	*Call
2094<2084		4543<4417	17-WAY TO 43-WAY	*Call
2094<2084		4543<4418	18-WAY TO 43-WAY	*Call
2094<2084		4543<4419	19-WAY TO 43-WAY	*Call
2094<2084		4543<4420	20-WAY TO 43-WAY	*Call
2094<2084		4543<4421	21-WAY TO 43-WAY	*Call
2094<2084		4543<4422	22-WAY TO 43-WAY	*Call
2094<2084		4543<4423	23-WAY TO 43-WAY	*Call
2094<2084		4543<4424	24-WAY TO 43-WAY	*Call
2094<2084		4543<4425	25-WAY TO 43-WAY	*Call
2094<2084		4543<4426	26-WAY TO 43-WAY	*Call
2094<2084		4543<4427	27-WAY TO 43-WAY	*Call
2094<2084		4543<4428	28-WAY TO 43-WAY	*Call
2094<2084		4543<4429	29-WAY TO 43-WAY	*Call
2094<2084		4543<4430	30-WAY TO 43-WAY	*Call
2094<2084		4543<4431	31-WAY TO 43-WAY	*Call
2094<2084		4543<4432	32-WAY TO 43-WAY	*Call
2094<2084		4544<4400	ZERO-WAY TO 44-WAY	*Call
2094<2084		4544<4401	1-WAY TO 44-WAY	*Call
2094<2084		4544<4402	2-WAY TO 44-WAY	*Call
2094<2084		4544<4403	3-WAY TO 44-WAY	*Call
2094<2084		4544<4404	4-WAY TO 44-WAY	*Call
2094<2084		4544<4405	5-WAY TO 44-WAY	*Call
2094<2084		4544<4406	6-WAY TO 44-WAY	*Call
2094<2084		4544<4407	7-WAY TO 44-WAY	*Call
2094<2084		4544<4408	8-WAY TO 44-WAY	*Call
2094<2084		4544<4409	9-WAY TO 44-WAY	*Call
2094<2084		4544<4410	10-WAY TO 44-WAY	*Call
2094<2084		4544<4411	11-WAY TO 44-WAY	*Call
2094<2084		4544<4412	12-WAY TO 44-WAY	*Call
2094<2084		4544<4413	13-WAY TO 44-WAY	*Call
2094<2084		4544<4414	14-WAY TO 44-WAY	*Call
2094<2084		4544<4415	15-WAY TO 44-WAY	*Call
2094<2084		4544<4416	16-WAY TO 44-WAY	*Call
2094<2084		4544<4417	17-WAY TO 44-WAY	*Call
2094<2084		4544<4418	18-WAY TO 44-WAY	*Call
2094<2084		4544<4419	19-WAY TO 44-WAY	*Call
2094<2084		4544<4420	20-WAY TO 44-WAY	*Call
2094<2084		4544<4421	21-WAY TO 44-WAY	*Call
2094<2084		4544<4422	22-WAY TO 44-WAY	*Call
2094<2084		4544<4423	23-WAY TO 44-WAY	*Call
2094<2084		4544<4424	24-WAY TO 44-WAY	*Call
2094<2084		4544<4425	25-WAY TO 44-WAY	*Call
2094<2084		4544<4426	26-WAY TO 44-WAY	*Call
2094<2084		4544<4427	27-WAY TO 44-WAY	*Call
2094<2084		4544<4428	28-WAY TO 44-WAY	*Call
2094<2084		4544<4429	29-WAY TO 44-WAY	*Call
2094<2084		4544<4430	30-WAY TO 44-WAY	*Call
2094<2084		4544<4431	31-WAY TO 44-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4544<4432	32-WAY TO 44-WAY	*Call
2094<2084		4545<4400	ZERO-WAY TO 45-WAY	*Call
2094<2084		4545<4401	1-WAY TO 45-WAY	*Call
2094<2084		4545<4402	2-WAY TO 45-WAY	*Call
2094<2084		4545<4403	3-WAY TO 45-WAY	*Call
2094<2084		4545<4404	4-WAY TO 45-WAY	*Call
2094<2084		4545<4405	5-WAY TO 45-WAY	*Call
2094<2084		4545<4406	6-WAY TO 45-WAY	*Call
2094<2084		4545<4407	7-WAY TO 45-WAY	*Call
2094<2084		4545<4408	8-WAY TO 45-WAY	*Call
2094<2084		4545<4409	9-WAY TO 45-WAY	*Call
2094<2084		4545<4410	10-WAY TO 45-WAY	*Call
2094<2084		4545<4411	11-WAY TO 45-WAY	*Call
2094<2084		4545<4412	12-WAY TO 45-WAY	*Call
2094<2084		4545<4413	13-WAY TO 45-WAY	*Call
2094<2084		4545<4414	14-WAY TO 45-WAY	*Call
2094<2084		4545<4415	15-WAY TO 45-WAY	*Call
2094<2084		4545<4416	16-WAY TO 45-WAY	*Call
2094<2084		4545<4417	17-WAY TO 45-WAY	*Call
2094<2084		4545<4418	18-WAY TO 45-WAY	*Call
2094<2084		4545<4419	19-WAY TO 45-WAY	*Call
2094<2084		4545<4420	20-WAY TO 45-WAY	*Call
2094<2084		4545<4421	21-WAY TO 45-WAY	*Call
2094<2084		4545<4422	22-WAY TO 45-WAY	*Call
2094<2084		4545<4423	23-WAY TO 45-WAY	*Call
2094<2084		4545<4424	24-WAY TO 45-WAY	*Call
2094<2084		4545<4425	25-WAY TO 45-WAY	*Call
2094<2084		4545<4426	26-WAY TO 45-WAY	*Call
2094<2084		4545<4427	27-WAY TO 45-WAY	*Call
2094<2084		4545<4428	28-WAY TO 45-WAY	*Call
2094<2084		4545<4429	29-WAY TO 45-WAY	*Call
2094<2084		4545<4430	30-WAY TO 45-WAY	*Call
2094<2084		4545<4431	31-WAY TO 45-WAY	*Call
2094<2084		4545<4432	32-WAY TO 45-WAY	*Call
2094<2084		4546<4400	ZERO-WAY TO 46-WAY	*Call
2094<2084		4546<4401	1-WAY TO 46-WAY	*Call
2094<2084		4546<4402	2-WAY TO 46-WAY	*Call
2094<2084		4546<4403	3-WAY TO 46-WAY	*Call
2094<2084		4546<4404	4-WAY TO 46-WAY	*Call
2094<2084		4546<4405	5-WAY TO 46-WAY	*Call
2094<2084		4546<4406	6-WAY TO 46-WAY	*Call
2094<2084		4546<4407	7-WAY TO 46-WAY	*Call
2094<2084		4546<4408	8-WAY TO 46-WAY	*Call
2094<2084		4546<4409	9-WAY TO 46-WAY	*Call
2094<2084		4546<4410	10-WAY TO 46-WAY	*Call
2094<2084		4546<4411	11-WAY TO 46-WAY	*Call
2094<2084		4546<4412	12-WAY TO 46-WAY	*Call
2094<2084		4546<4413	13-WAY TO 46-WAY	*Call
2094<2084		4546<4414	14-WAY TO 46-WAY	*Call
2094<2084		4546<4415	15-WAY TO 46-WAY	*Call
2094<2084		4546<4416	16-WAY TO 46-WAY	*Call
2094<2084		4546<4417	17-WAY TO 46-WAY	*Call
2094<2084		4546<4418	18-WAY TO 46-WAY	*Call
2094<2084		4546<4419	19-WAY TO 46-WAY	*Call
2094<2084		4546<4420	20-WAY TO 46-WAY	*Call
2094<2084		4546<4421	21-WAY TO 46-WAY	*Call
2094<2084		4546<4422	22-WAY TO 46-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4546<4423	23-WAY TO 46-WAY	*Call
2094<2084		4546<4424	24-WAY TO 46-WAY	*Call
2094<2084		4546<4425	25-WAY TO 46-WAY	*Call
2094<2084		4546<4426	26-WAY TO 46-WAY	*Call
2094<2084		4546<4427	27-WAY TO 46-WAY	*Call
2094<2084		4546<4428	28-WAY TO 46-WAY	*Call
2094<2084		4546<4429	29-WAY TO 46-WAY	*Call
2094<2084		4546<4430	30-WAY TO 46-WAY	*Call
2094<2084		4546<4431	31-WAY TO 46-WAY	*Call
2094<2084		4546<4432	32-WAY TO 46-WAY	*Call
2094<2084		4547<4400	ZERO-WAY TO 47-WAY	*Call
2094<2084		4547<4401	1-WAY TO 47-WAY	*Call
2094<2084		4547<4402	2-WAY TO 47-WAY	*Call
2094<2084		4547<4403	3-WAY TO 47-WAY	*Call
2094<2084		4547<4404	4-WAY TO 47-WAY	*Call
2094<2084		4547<4405	5-WAY TO 47-WAY	*Call
2094<2084		4547<4406	6-WAY TO 47-WAY	*Call
2094<2084		4547<4407	7-WAY TO 47-WAY	*Call
2094<2084		4547<4408	8-WAY TO 47-WAY	*Call
2094<2084		4547<4409	9-WAY TO 47-WAY	*Call
2094<2084		4547<4410	10-WAY TO 47-WAY	*Call
2094<2084		4547<4411	11-WAY TO 47-WAY	*Call
2094<2084		4547<4412	12-WAY TO 47-WAY	*Call
2094<2084		4547<4413	13-WAY TO 47-WAY	*Call
2094<2084		4547<4414	14-WAY TO 47-WAY	*Call
2094<2084		4547<4415	15-WAY TO 47-WAY	*Call
2094<2084		4547<4416	16-WAY TO 47-WAY	*Call
2094<2084		4547<4417	17-WAY TO 47-WAY	*Call
2094<2084		4547<4418	18-WAY TO 47-WAY	*Call
2094<2084		4547<4419	19-WAY TO 47-WAY	*Call
2094<2084		4547<4420	20-WAY TO 47-WAY	*Call
2094<2084		4547<4421	21-WAY TO 47-WAY	*Call
2094<2084		4547<4422	22-WAY TO 47-WAY	*Call
2094<2084		4547<4423	23-WAY TO 47-WAY	*Call
2094<2084		4547<4424	24-WAY TO 47-WAY	*Call
2094<2084		4547<4425	25-WAY TO 47-WAY	*Call
2094<2084		4547<4426	26-WAY TO 47-WAY	*Call
2094<2084		4547<4427	27-WAY TO 47-WAY	*Call
2094<2084		4547<4428	28-WAY TO 47-WAY	*Call
2094<2084		4547<4429	29-WAY TO 47-WAY	*Call
2094<2084		4547<4430	30-WAY TO 47-WAY	*Call
2094<2084		4547<4431	31-WAY TO 47-WAY	*Call
2094<2084		4547<4432	32-WAY TO 47-WAY	*Call
2094<2084		4548<4400	ZERO-WAY TO 48-WAY	*Call
2094<2084		4548<4401	1-WAY TO 48-WAY	*Call
2094<2084		4548<4402	2-WAY TO 48-WAY	*Call
2094<2084		4548<4403	3-WAY TO 48-WAY	*Call
2094<2084		4548<4404	4-WAY TO 48-WAY	*Call
2094<2084		4548<4405	5-WAY TO 48-WAY	*Call
2094<2084		4548<4406	6-WAY TO 48-WAY	*Call
2094<2084		4548<4407	7-WAY TO 48-WAY	*Call
2094<2084		4548<4408	8-WAY TO 48-WAY	*Call
2094<2084		4548<4409	9-WAY TO 48-WAY	*Call
2094<2084		4548<4410	10-WAY TO 48-WAY	*Call
2094<2084		4548<4411	11-WAY TO 48-WAY	*Call
2094<2084		4548<4412	12-WAY TO 48-WAY	*Call
2094<2084		4548<4413	13-WAY TO 48-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4548<4414	14-WAY TO 48-WAY	*Call
2094<2084		4548<4415	15-WAY TO 48-WAY	*Call
2094<2084		4548<4416	16-WAY TO 48-WAY	*Call
2094<2084		4548<4417	17-WAY TO 48-WAY	*Call
2094<2084		4548<4418	18-WAY TO 48-WAY	*Call
2094<2084		4548<4419	19-WAY TO 48-WAY	*Call
2094<2084		4548<4420	20-WAY TO 48-WAY	*Call
2094<2084		4548<4421	21-WAY TO 48-WAY	*Call
2094<2084		4548<4422	22-WAY TO 48-WAY	*Call
2094<2084		4548<4423	23-WAY TO 48-WAY	*Call
2094<2084		4548<4424	24-WAY TO 48-WAY	*Call
2094<2084		4548<4425	25-WAY TO 48-WAY	*Call
2094<2084		4548<4426	26-WAY TO 48-WAY	*Call
2094<2084		4548<4427	27-WAY TO 48-WAY	*Call
2094<2084		4548<4428	28-WAY TO 48-WAY	*Call
2094<2084		4548<4429	29-WAY TO 48-WAY	*Call
2094<2084		4548<4430	30-WAY TO 48-WAY	*Call
2094<2084		4548<4431	31-WAY TO 48-WAY	*Call
2094<2084		4548<4432	32-WAY TO 48-WAY	*Call
2094<2084		4549<4400	ZERO-WAY TO 49-WAY	*Call
2094<2084		4549<4401	1-WAY TO 49-WAY	*Call
2094<2084		4549<4402	2-WAY TO 49-WAY	*Call
2094<2084		4549<4403	3-WAY TO 49-WAY	*Call
2094<2084		4549<4404	4-WAY TO 49-WAY	*Call
2094<2084		4549<4405	5-WAY TO 49-WAY	*Call
2094<2084		4549<4406	6-WAY TO 49-WAY	*Call
2094<2084		4549<4407	7-WAY TO 49-WAY	*Call
2094<2084		4549<4408	8-WAY TO 49-WAY	*Call
2094<2084		4549<4409	9-WAY TO 49-WAY	*Call
2094<2084		4549<4410	10-WAY TO 49-WAY	*Call
2094<2084		4549<4411	11-WAY TO 49-WAY	*Call
2094<2084		4549<4412	12-WAY TO 49-WAY	*Call
2094<2084		4549<4413	13-WAY TO 49-WAY	*Call
2094<2084		4549<4414	14-WAY TO 49-WAY	*Call
2094<2084		4549<4415	15-WAY TO 49-WAY	*Call
2094<2084		4549<4416	16-WAY TO 49-WAY	*Call
2094<2084		4549<4417	17-WAY TO 49-WAY	*Call
2094<2084		4549<4418	18-WAY TO 49-WAY	*Call
2094<2084		4549<4419	19-WAY TO 49-WAY	*Call
2094<2084		4549<4420	20-WAY TO 49-WAY	*Call
2094<2084		4549<4421	21-WAY TO 49-WAY	*Call
2094<2084		4549<4422	22-WAY TO 49-WAY	*Call
2094<2084		4549<4423	23-WAY TO 49-WAY	*Call
2094<2084		4549<4424	24-WAY TO 49-WAY	*Call
2094<2084		4549<4425	25-WAY TO 49-WAY	*Call
2094<2084		4549<4426	26-WAY TO 49-WAY	*Call
2094<2084		4549<4427	27-WAY TO 49-WAY	*Call
2094<2084		4549<4428	28-WAY TO 49-WAY	*Call
2094<2084		4549<4429	29-WAY TO 49-WAY	*Call
2094<2084		4549<4430	30-WAY TO 49-WAY	*Call
2094<2084		4549<4431	31-WAY TO 49-WAY	*Call
2094<2084		4549<4432	32-WAY TO 49-WAY	*Call
2094<2084		4550<4400	ZERO-WAY TO 50-WAY	*Call
2094<2084		4550<4401	1-WAY TO 50-WAY	*Call
2094<2084		4550<4402	2-WAY TO 50-WAY	*Call
2094<2084		4550<4403	3-WAY TO 50-WAY	*Call
2094<2084		4550<4404	4-WAY TO 50-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4550<4405	5-WAY TO 50-WAY	*Call
2094<2084		4550<4406	6-WAY TO 50-WAY	*Call
2094<2084		4550<4407	7-WAY TO 50-WAY	*Call
2094<2084		4550<4408	8-WAY TO 50-WAY	*Call
2094<2084		4550<4409	9-WAY TO 50-WAY	*Call
2094<2084		4550<4410	10-WAY TO 50-WAY	*Call
2094<2084		4550<4411	11-WAY TO 50-WAY	*Call
2094<2084		4550<4412	12-WAY TO 50-WAY	*Call
2094<2084		4550<4413	13-WAY TO 50-WAY	*Call
2094<2084		4550<4414	14-WAY TO 50-WAY	*Call
2094<2084		4550<4415	15-WAY TO 50-WAY	*Call
2094<2084		4550<4416	16-WAY TO 50-WAY	*Call
2094<2084		4550<4417	17-WAY TO 50-WAY	*Call
2094<2084		4550<4418	18-WAY TO 50-WAY	*Call
2094<2084		4550<4419	19-WAY TO 50-WAY	*Call
2094<2084		4550<4420	20-WAY TO 50-WAY	*Call
2094<2084		4550<4421	21-WAY TO 50-WAY	*Call
2094<2084		4550<4422	22-WAY TO 50-WAY	*Call
2094<2084		4550<4423	23-WAY TO 50-WAY	*Call
2094<2084		4550<4424	24-WAY TO 50-WAY	*Call
2094<2084		4550<4425	25-WAY TO 50-WAY	*Call
2094<2084		4550<4426	26-WAY TO 50-WAY	*Call
2094<2084		4550<4427	27-WAY TO 50-WAY	*Call
2094<2084		4550<4428	28-WAY TO 50-WAY	*Call
2094<2084		4550<4429	29-WAY TO 50-WAY	*Call
2094<2084		4550<4430	30-WAY TO 50-WAY	*Call
2094<2084		4550<4431	31-WAY TO 50-WAY	*Call
2094<2084		4550<4432	32-WAY TO 50-WAY	*Call
2094<2084		4551<4400	ZERO-WAY TO 51-WAY	*Call
2094<2084		4551<4401	1-WAY TO 51-WAY	*Call
2094<2084		4551<4402	2-WAY TO 52-WAY	*Call
2094<2084		4551<4403	3-WAY TO 53-WAY	*Call
2094<2084		4551<4404	4-WAY TO 51-WAY	*Call
2094<2084		4551<4405	5-WAY TO 51-WAY	*Call
2094<2084		4551<4406	6-WAY TO 51-WAY	*Call
2094<2084		4551<4407	7-WAY TO 51-WAY	*Call
2094<2084		4551<4408	8-WAY TO 51-WAY	*Call
2094<2084		4551<4409	9-WAY TO 51-WAY	*Call
2094<2084		4551<4410	10-WAY TO 51-WAY	*Call
2094<2084		4551<4411	11-WAY TO 51-WAY	*Call
2094<2084		4551<4412	12-WAY TO 51-WAY	*Call
2094<2084		4551<4413	13-WAY TO 51-WAY	*Call
2094<2084		4551<4414	14-WAY TO 51-WAY	*Call
2094<2084		4551<4415	15-WAY TO 51-WAY	*Call
2094<2084		4551<4416	16-WAY TO 51-WAY	*Call
2094<2084		4551<4417	17-WAY TO 51-WAY	*Call
2094<2084		4551<4418	18-WAY TO 51-WAY	*Call
2094<2084		4551<4419	19-WAY TO 51-WAY	*Call
2094<2084		4551<4420	20-WAY TO 51-WAY	*Call
2094<2084		4551<4421	21-WAY TO 51-WAY	*Call
2094<2084		4551<4422	22-WAY TO 51-WAY	*Call
2094<2084		4551<4423	23-WAY TO 51-WAY	*Call
2094<2084		4551<4424	24-WAY TO 51-WAY	*Call
2094<2084		4551<4425	25-WAY TO 51-WAY	*Call
2094<2084		4551<4426	26-WAY TO 51-WAY	*Call
2094<2084		4551<4427	27-WAY TO 51-WAY	*Call
2094<2084		4551<4428	28-WAY TO 51-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4551<4429	29-WAY TO 51-WAY	*Call
2094<2084		4551<4430	30-WAY TO 51-WAY	*Call
2094<2084		4551<4431	31-WAY TO 51-WAY	*Call
2094<2084		4551<4432	32-WAY TO 51-WAY	*Call
2094<2084		4552<4400	ZERO-WAY TO 52-WAY	*Call
2094<2084		4552<4401	1-WAY TO 52-WAY	*Call
2094<2084		4552<4402	2-WAY TO 52-WAY	*Call
2094<2084		4552<4403	3-WAY TO 52-WAY	*Call
2094<2084		4552<4404	4-WAY TO 52-WAY	*Call
2094<2084		4552<4405	5-WAY TO 52-WAY	*Call
2094<2084		4552<4406	6-WAY TO 52-WAY	*Call
2094<2084		4552<4407	7-WAY TO 52-WAY	*Call
2094<2084		4552<4408	8-WAY TO 52-WAY	*Call
2094<2084		4552<4409	9-WAY TO 52-WAY	*Call
2094<2084		4552<4410	10-WAY TO 52-WAY	*Call
2094<2084		4552<4411	11-WAY TO 52-WAY	*Call
2094<2084		4552<4412	12-WAY TO 52-WAY	*Call
2094<2084		4552<4413	13-WAY TO 52-WAY	*Call
2094<2084		4552<4414	14-WAY TO 52-WAY	*Call
2094<2084		4552<4415	15-WAY TO 52-WAY	*Call
2094<2084		4552<4416	16-WAY TO 52-WAY	*Call
2094<2084		4552<4417	17-WAY TO 52-WAY	*Call
2094<2084		4552<4418	18-WAY TO 52-WAY	*Call
2094<2084		4552<4419	19-WAY TO 52-WAY	*Call
2094<2084		4552<4420	20-WAY TO 52-WAY	*Call
2094<2084		4552<4421	21-WAY TO 52-WAY	*Call
2094<2084		4552<4422	22-WAY TO 52-WAY	*Call
2094<2084		4552<4423	23-WAY TO 52-WAY	*Call
2094<2084		4552<4424	24-WAY TO 52-WAY	*Call
2094<2084		4552<4425	25-WAY TO 52-WAY	*Call
2094<2084		4552<4426	26-WAY TO 52-WAY	*Call
2094<2084		4552<4427	27-WAY TO 52-WAY	*Call
2094<2084		4552<4428	28-WAY TO 52-WAY	*Call
2094<2084		4552<4429	29-WAY TO 52-WAY	*Call
2094<2084		4552<4430	30-WAY TO 52-WAY	*Call
2094<2084		4552<4431	31-WAY TO 52-WAY	*Call
2094<2084		4552<4432	32-WAY TO 52-WAY	*Call
2094<2084		4553<4400	ZERO-WAY TO 53-WAY	*Call
2094<2084		4553<4401	1-WAY TO 53-WAY	*Call
2094<2084		4553<4402	2-WAY TO 53-WAY	*Call
2094<2084		4553<4403	3-WAY TO 53-WAY	*Call
2094<2084		4553<4404	4-WAY TO 53-WAY	*Call
2094<2084		4553<4405	5-WAY TO 53-WAY	*Call
2094<2084		4553<4406	6-WAY TO 53-WAY	*Call
2094<2084		4553<4407	7-WAY TO 53-WAY	*Call
2094<2084		4553<4408	8-WAY TO 53-WAY	*Call
2094<2084		4553<4409	9-WAY TO 53-WAY	*Call
2094<2084		4553<4410	10-WAY TO 53-WAY	*Call
2094<2084		4553<4411	11-WAY TO 53-WAY	*Call
2094<2084		4553<4412	12-WAY TO 53-WAY	*Call
2094<2084		4553<4413	13-WAY TO 53-WAY	*Call
2094<2084		4553<4414	14-WAY TO 53-WAY	*Call
2094<2084		4553<4415	15-WAY TO 53-WAY	*Call
2094<2084		4553<4416	16-WAY TO 53-WAY	*Call
2094<2084		4553<4417	17-WAY TO 53-WAY	*Call
2094<2084		4553<4418	18-WAY TO 53-WAY	*Call
2094<2084		4553<4419	19-WAY TO 53-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4553<4420	20-WAY TO 53-WAY	*Call
2094<2084		4553<4421	21-WAY TO 53-WAY	*Call
2094<2084		4553<4422	22-WAY TO 53-WAY	*Call
2094<2084		4553<4423	23-WAY TO 53-WAY	*Call
2094<2084		4553<4424	24-WAY TO 53-WAY	*Call
2094<2084		4553<4425	25-WAY TO 53-WAY	*Call
2094<2084		4553<4426	26-WAY TO 53-WAY	*Call
2094<2084		4553<4427	27-WAY TO 53-WAY	*Call
2094<2084		4553<4428	28-WAY TO 53-WAY	*Call
2094<2084		4553<4429	29-WAY TO 53-WAY	*Call
2094<2084		4553<4430	30-WAY TO 53-WAY	*Call
2094<2084		4553<4431	31-WAY TO 53-WAY	*Call
2094<2084		4553<4432	32-WAY TO 53-WAY	*Call
2094<2084		4554<4400	ZERO-WAY TO 54-WAY	*Call
2094<2084		4554<4401	1-WAY TO 54-WAY	*Call
2094<2084		4554<4402	2-WAY TO 54-WAY	*Call
2094<2084		4554<4403	3-WAY TO 54-WAY	*Call
2094<2084		4554<4404	4-WAY TO 54-WAY	*Call
2094<2084		4554<4405	5-WAY TO 54-WAY	*Call
2094<2084		4554<4406	6-WAY TO 54-WAY	*Call
2094<2084		4554<4407	7-WAY TO 54-WAY	*Call
2094<2084		4554<4408	8-WAY TO 54-WAY	*Call
2094<2084		4554<4409	9-WAY TO 54-WAY	*Call
2094<2084		4554<4410	10-WAY TO 54-WAY	*Call
2094<2084		4554<4411	11-WAY TO 54-WAY	*Call
2094<2084		4554<4412	12-WAY TO 54-WAY	*Call
2094<2084		4554<4413	13-WAY TO 54-WAY	*Call
2094<2084		4554<4414	14-WAY TO 54-WAY	*Call
2094<2084		4554<4415	15-WAY TO 54-WAY	*Call
2094<2084		4554<4416	16-WAY TO 54-WAY	*Call
2094<2084		4554<4417	17-WAY TO 54-WAY	*Call
2094<2084		4554<4418	18-WAY TO 54-WAY	*Call
2094<2084		4554<4419	19-WAY TO 54-WAY	*Call
2094<2084		4554<4420	20-WAY TO 54-WAY	*Call
2094<2084		4554<4421	21-WAY TO 54-WAY	*Call
2094<2084		4554<4422	22-WAY TO 54-WAY	*Call
2094<2084		4554<4423	23-WAY TO 54-WAY	*Call
2094<2084		4554<4424	24-WAY TO 54-WAY	*Call
2094<2084		4554<4425	25-WAY TO 54-WAY	*Call
2094<2084		4554<4426	26-WAY TO 54-WAY	*Call
2094<2084		4554<4427	27-WAY TO 54-WAY	*Call
2094<2084		4554<4428	28-WAY TO 54-WAY	*Call
2094<2084		4554<4429	29-WAY TO 54-WAY	*Call
2094<2084		4554<4430	30-WAY TO 54-WAY	*Call
2094<2084		4554<4431	31-WAY TO 54-WAY	*Call
2094<2084		4554<4432	32-WAY TO 54-WAY	*Call
2094<2084		4601<4400	ZERO-WAY TO 1-WAY	*Call
2094<2084		4601<4401	1-WAY TO 1-WAY	*Call
2094<2084		4601<4402	2-WAY TO 1-WAY	*Call
2094<2084		4601<4403	3-WAY TO 1-WAY	*Call
2094<2084		4601<4404	4-WAY TO 1-WAY	*Call
2094<2084		4601<4405	5-WAY TO 1-WAY	*Call
2094<2084		4601<4406	6-WAY TO 1-WAY	*Call
2094<2084		4601<4407	7-WAY TO 1-WAY	*Call
2094<2084		4601<4408	8-WAY TO 1-WAY	*Call
2094<2084		4601<4409	9-WAY TO 1-WAY	*Call
2094<2084		4601<4410	10-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4601<4411	11-WAY TO 1-WAY	*Call
2094<2084		4601<4412	12-WAY TO 1-WAY	*Call
2094<2084		4601<4413	13-WAY TO 1-WAY	*Call
2094<2084		4601<4414	14-WAY TO 1-WAY	*Call
2094<2084		4601<4415	15-WAY TO 1-WAY	*Call
2094<2084		4601<4416	16-WAY TO 1-WAY	*Call
2094<2084		4601<4417	17-WAY TO 1-WAY	*Call
2094<2084		4601<4418	18-WAY TO 1-WAY	*Call
2094<2084		4601<4419	19-WAY TO 1-WAY	*Call
2094<2084		4601<4420	20-WAY TO 1-WAY	*Call
2094<2084		4601<4421	21-WAY TO 1-WAY	*Call
2094<2084		4601<4422	22-WAY TO 1-WAY	*Call
2094<2084		4601<4423	23-WAY TO 1-WAY	*Call
2094<2084		4601<4424	24-WAY TO 1-WAY	*Call
2094<2084		4601<4425	25-WAY TO 1-WAY	*Call
2094<2084		4601<4426	26-WAY TO 1-WAY	*Call
2094<2084		4601<4427	27-WAY TO 1-WAY	*Call
2094<2084		4601<4428	28-WAY TO 1-WAY	*Call
2094<2084		4601<4429	29-WAY TO 1-WAY	*Call
2094<2084		4601<4430	30-WAY TO 1-WAY	*Call
2094<2084		4601<4431	31-WAY TO 1-WAY	*Call
2094<2084		4601<4432	32-WAY TO 1-WAY	*Call
2094<2084		4602<4400	ZERO-WAY TO 2-WAY	*Call
2094<2084		4602<4401	1-WAY TO 2-WAY	*Call
2094<2084		4602<4402	2-WAY TO 2-WAY	*Call
2094<2084		4602<4403	3-WAY TO 2-WAY	*Call
2094<2084		4602<4404	4-WAY TO 2-WAY	*Call
2094<2084		4602<4405	5-WAY TO 2-WAY	*Call
2094<2084		4602<4406	6-WAY TO 2-WAY	*Call
2094<2084		4602<4407	7-WAY TO 2-WAY	*Call
2094<2084		4602<4408	8-WAY TO 2-WAY	*Call
2094<2084		4602<4409	9-WAY TO 2-WAY	*Call
2094<2084		4602<4410	10-WAY TO 2-WAY	*Call
2094<2084		4602<4411	11-WAY TO 2-WAY	*Call
2094<2084		4602<4412	12-WAY TO 2-WAY	*Call
2094<2084		4602<4413	13-WAY TO 2-WAY	*Call
2094<2084		4602<4414	14-WAY TO 2-WAY	*Call
2094<2084		4602<4415	15-WAY TO 2-WAY	*Call
2094<2084		4602<4416	16-WAY TO 2-WAY	*Call
2094<2084		4602<4417	17-WAY TO 2-WAY	*Call
2094<2084		4602<4418	18-WAY TO 2-WAY	*Call
2094<2084		4602<4419	19-WAY TO 2-WAY	*Call
2094<2084		4602<4420	20-WAY TO 2-WAY	*Call
2094<2084		4602<4421	21-WAY TO 2-WAY	*Call
2094<2084		4602<4422	22-WAY TO 2-WAY	*Call
2094<2084		4602<4423	23-WAY TO 2-WAY	*Call
2094<2084		4602<4424	24-WAY TO 2-WAY	*Call
2094<2084		4602<4425	25-WAY TO 2-WAY	*Call
2094<2084		4602<4426	26-WAY TO 2-WAY	*Call
2094<2084		4602<4427	27-WAY TO 2-WAY	*Call
2094<2084		4602<4428	28-WAY TO 2-WAY	*Call
2094<2084		4602<4429	29-WAY TO 2-WAY	*Call
2094<2084		4602<4430	30-WAY TO 2-WAY	*Call
2094<2084		4602<4431	31-WAY TO 2-WAY	*Call
2094<2084		4602<4432	32-WAY TO 2-WAY	*Call
2094<2084		4603<4400	ZERO-WAY TO 3-WAY	*Call
2094<2084		4603<4401	1-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4603<4402	2-WAY TO 3-WAY	*Call
2094<2084		4603<4403	3-WAY TO 3-WAY	*Call
2094<2084		4603<4404	4-WAY TO 3-WAY	*Call
2094<2084		4603<4405	5-WAY TO 3-WAY	*Call
2094<2084		4603<4406	6-WAY TO 3-WAY	*Call
2094<2084		4603<4407	7-WAY TO 3-WAY	*Call
2094<2084		4603<4408	8-WAY TO 3-WAY	*Call
2094<2084		4603<4409	9-WAY TO 3-WAY	*Call
2094<2084		4603<4410	10-WAY TO 3-WAY	*Call
2094<2084		4603<4411	11-WAY TO 3-WAY	*Call
2094<2084		4603<4412	12-WAY TO 3-WAY	*Call
2094<2084		4603<4413	13-WAY TO 3-WAY	*Call
2094<2084		4603<4414	14-WAY TO 3-WAY	*Call
2094<2084		4603<4415	15-WAY TO 3-WAY	*Call
2094<2084		4603<4416	16-WAY TO 3-WAY	*Call
2094<2084		4603<4417	17-WAY TO 3-WAY	*Call
2094<2084		4603<4418	18-WAY TO 3-WAY	*Call
2094<2084		4603<4419	19-WAY TO 3-WAY	*Call
2094<2084		4603<4420	20-WAY TO 3-WAY	*Call
2094<2084		4603<4421	21-WAY TO 3-WAY	*Call
2094<2084		4603<4422	22-WAY TO 3-WAY	*Call
2094<2084		4603<4423	23-WAY TO 3-WAY	*Call
2094<2084		4603<4424	24-WAY TO 3-WAY	*Call
2094<2084		4603<4425	25-WAY TO 3-WAY	*Call
2094<2084		4603<4426	26-WAY TO 3-WAY	*Call
2094<2084		4603<4427	27-WAY TO 3-WAY	*Call
2094<2084		4603<4428	28-WAY TO 3-WAY	*Call
2094<2084		4603<4429	29-WAY TO 3-WAY	*Call
2094<2084		4603<4430	30-WAY TO 3-WAY	*Call
2094<2084		4603<4431	31-WAY TO 3-WAY	*Call
2094<2084		4603<4432	32-WAY TO 3-WAY	*Call
2094<2084		4604<4400	ZERO-WAY TO 4-WAY	*Call
2094<2084		4604<4401	1-WAY TO 4-WAY	*Call
2094<2084		4604<4402	2-WAY TO 4-WAY	*Call
2094<2084		4604<4403	3-WAY TO 4-WAY	*Call
2094<2084		4604<4404	4-WAY TO 4-WAY	*Call
2094<2084		4604<4405	5-WAY TO 4-WAY	*Call
2094<2084		4604<4406	6-WAY TO 4-WAY	*Call
2094<2084		4604<4407	7-WAY TO 4-WAY	*Call
2094<2084		4604<4408	8-WAY TO 4-WAY	*Call
2094<2084		4604<4409	9-WAY TO 4-WAY	*Call
2094<2084		4604<4410	10-WAY TO 4-WAY	*Call
2094<2084		4604<4411	11-WAY TO 4-WAY	*Call
2094<2084		4604<4412	12-WAY TO 4-WAY	*Call
2094<2084		4604<4413	13-WAY TO 4-WAY	*Call
2094<2084		4604<4414	14-WAY TO 4-WAY	*Call
2094<2084		4604<4415	15-WAY TO 4-WAY	*Call
2094<2084		4604<4416	16-WAY TO 4-WAY	*Call
2094<2084		4604<4417	17-WAY TO 4-WAY	*Call
2094<2084		4604<4418	18-WAY TO 4-WAY	*Call
2094<2084		4604<4419	19-WAY TO 4-WAY	*Call
2094<2084		4604<4420	20-WAY TO 4-WAY	*Call
2094<2084		4604<4421	21-WAY TO 4-WAY	*Call
2094<2084		4604<4422	22-WAY TO 4-WAY	*Call
2094<2084		4604<4423	23-WAY TO 4-WAY	*Call
2094<2084		4604<4424	24-WAY TO 4-WAY	*Call
2094<2084		4604<4425	25-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4604<4426	26-WAY TO 4-WAY	*Call
2094<2084		4604<4427	27-WAY TO 4-WAY	*Call
2094<2084		4604<4428	28-WAY TO 4-WAY	*Call
2094<2084		4604<4429	29-WAY TO 4-WAY	*Call
2094<2084		4604<4430	30-WAY TO 4-WAY	*Call
2094<2084		4604<4431	31-WAY TO 4-WAY	*Call
2094<2084		4604<4432	32-WAY TO 4-WAY	*Call
2094<2084		4605<4400	ZERO-WAY TO 5-WAY	*Call
2094<2084		4605<4401	1-WAY TO 5-WAY	*Call
2094<2084		4605<4402	2-WAY TO 5-WAY	*Call
2094<2084		4605<4403	3-WAY TO 5-WAY	*Call
2094<2084		4605<4404	4-WAY TO 5-WAY	*Call
2094<2084		4605<4405	5-WAY TO 5-WAY	*Call
2094<2084		4605<4406	6-WAY TO 5-WAY	*Call
2094<2084		4605<4407	7-WAY TO 5-WAY	*Call
2094<2084		4605<4408	8-WAY TO 5-WAY	*Call
2094<2084		4605<4409	9-WAY TO 5-WAY	*Call
2094<2084		4605<4410	10-WAY TO 5-WAY	*Call
2094<2084		4605<4411	11-WAY TO 5-WAY	*Call
2094<2084		4605<4412	12-WAY TO 5-WAY	*Call
2094<2084		4605<4413	13-WAY TO 5-WAY	*Call
2094<2084		4605<4414	14-WAY TO 5-WAY	*Call
2094<2084		4605<4415	15-WAY TO 5-WAY	*Call
2094<2084		4605<4416	16-WAY TO 5-WAY	*Call
2094<2084		4605<4417	17-WAY TO 5-WAY	*Call
2094<2084		4605<4418	18-WAY TO 5-WAY	*Call
2094<2084		4605<4419	19-WAY TO 5-WAY	*Call
2094<2084		4605<4420	20-WAY TO 5-WAY	*Call
2094<2084		4605<4421	21-WAY TO 5-WAY	*Call
2094<2084		4605<4422	22-WAY TO 5-WAY	*Call
2094<2084		4605<4423	23-WAY TO 5-WAY	*Call
2094<2084		4605<4424	24-WAY TO 5-WAY	*Call
2094<2084		4605<4425	25-WAY TO 5-WAY	*Call
2094<2084		4605<4426	26-WAY TO 5-WAY	*Call
2094<2084		4605<4427	27-WAY TO 5-WAY	*Call
2094<2084		4605<4428	28-WAY TO 5-WAY	*Call
2094<2084		4605<4429	29-WAY TO 5-WAY	*Call
2094<2084		4605<4430	30-WAY TO 5-WAY	*Call
2094<2084		4605<4431	31-WAY TO 5-WAY	*Call
2094<2084		4605<4432	32-WAY TO 5-WAY	*Call
2094<2084		4606<4400	ZERO-WAY TO 6-WAY	*Call
2094<2084		4606<4401	1-WAY TO 6-WAY	*Call
2094<2084		4606<4402	2-WAY TO 6-WAY	*Call
2094<2084		4606<4403	3-WAY TO 6-WAY	*Call
2094<2084		4606<4404	4-WAY TO 6-WAY	*Call
2094<2084		4606<4405	5-WAY TO 6-WAY	*Call
2094<2084		4606<4406	6-WAY TO 6-WAY	*Call
2094<2084		4606<4407	7-WAY TO 6-WAY	*Call
2094<2084		4606<4408	8-WAY TO 6-WAY	*Call
2094<2084		4606<4409	9-WAY TO 6-WAY	*Call
2094<2084		4606<4410	10-WAY TO 6-WAY	*Call
2094<2084		4606<4411	11-WAY TO 6-WAY	*Call
2094<2084		4606<4412	12-WAY TO 6-WAY	*Call
2094<2084		4606<4413	13-WAY TO 6-WAY	*Call
2094<2084		4606<4414	14-WAY TO 6-WAY	*Call
2094<2084		4606<4415	15-WAY TO 6-WAY	*Call
2094<2084		4606<4416	16-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4606<4417	17-WAY TO 6-WAY	*Call
2094<2084		4606<4418	18-WAY TO 6-WAY	*Call
2094<2084		4606<4419	19-WAY TO 6-WAY	*Call
2094<2084		4606<4420	20-WAY TO 6-WAY	*Call
2094<2084		4606<4421	21-WAY TO 6-WAY	*Call
2094<2084		4606<4422	22-WAY TO 6-WAY	*Call
2094<2084		4606<4423	23-WAY TO 6-WAY	*Call
2094<2084		4606<4424	24-WAY TO 6-WAY	*Call
2094<2084		4606<4425	25-WAY TO 6-WAY	*Call
2094<2084		4606<4426	26-WAY TO 6-WAY	*Call
2094<2084		4606<4427	27-WAY TO 6-WAY	*Call
2094<2084		4606<4428	28-WAY TO 6-WAY	*Call
2094<2084		4606<4429	29-WAY TO 6-WAY	*Call
2094<2084		4606<4430	30-WAY TO 6-WAY	*Call
2094<2084		4606<4431	31-WAY TO 6-WAY	*Call
2094<2084		4606<4432	32-WAY TO 6-WAY	*Call
2094<2084		4607<4400	ZERO-WAY TO 7-WAY	*Call
2094<2084		4607<4401	1-WAY TO 7-WAY	*Call
2094<2084		4607<4402	2-WAY TO 7-WAY	*Call
2094<2084		4607<4403	3-WAY TO 7-WAY	*Call
2094<2084		4607<4404	4-WAY TO 7-WAY	*Call
2094<2084		4607<4405	5-WAY TO 7-WAY	*Call
2094<2084		4607<4406	6-WAY TO 7-WAY	*Call
2094<2084		4607<4407	7-WAY TO 7-WAY	*Call
2094<2084		4607<4408	8-WAY TO 7-WAY	*Call
2094<2084		4607<4409	9-WAY TO 7-WAY	*Call
2094<2084		4607<4410	10-WAY TO 7-WAY	*Call
2094<2084		4607<4411	11-WAY TO 7-WAY	*Call
2094<2084		4607<4412	12-WAY TO 7-WAY	*Call
2094<2084		4607<4413	13-WAY TO 7-WAY	*Call
2094<2084		4607<4414	14-WAY TO 7-WAY	*Call
2094<2084		4607<4415	15-WAY TO 7-WAY	*Call
2094<2084		4607<4416	16-WAY TO 7-WAY	*Call
2094<2084		4607<4417	17-WAY TO 7-WAY	*Call
2094<2084		4607<4418	18-WAY TO 7-WAY	*Call
2094<2084		4607<4419	19-WAY TO 7-WAY	*Call
2094<2084		4607<4420	20-WAY TO 7-WAY	*Call
2094<2084		4607<4421	21-WAY TO 7-WAY	*Call
2094<2084		4607<4422	22-WAY TO 7-WAY	*Call
2094<2084		4607<4423	23-WAY TO 7-WAY	*Call
2094<2084		4607<4424	24-WAY TO 7-WAY	*Call
2094<2084		4607<4425	25-WAY TO 7-WAY	*Call
2094<2084		4607<4426	26-WAY TO 7-WAY	*Call
2094<2084		4607<4427	27-WAY TO 7-WAY	*Call
2094<2084		4607<4428	28-WAY TO 7-WAY	*Call
2094<2084		4607<4429	29-WAY TO 7-WAY	*Call
2094<2084		4607<4430	30-WAY TO 7-WAY	*Call
2094<2084		4607<4431	31-WAY TO 7-WAY	*Call
2094<2084		4607<4432	32-WAY TO 7-WAY	*Call
2094<2084		4608<4400	ZERO-WAY TO 8-WAY	*Call
2094<2084		4608<4401	1-WAY TO 8-WAY	*Call
2094<2084		4608<4402	2-WAY TO 8-WAY	*Call
2094<2084		4608<4403	3-WAY TO 8-WAY	*Call
2094<2084		4608<4404	4-WAY TO 8-WAY	*Call
2094<2084		4608<4405	5-WAY TO 8-WAY	*Call
2094<2084		4608<4406	6-WAY TO 8-WAY	*Call
2094<2084		4608<4407	7-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4608<4408	8-WAY TO 8-WAY	*Call
2094<2084		4608<4409	9-WAY TO 8-WAY	*Call
2094<2084		4608<4410	10-WAY TO 8-WAY	*Call
2094<2084		4608<4411	11-WAY TO 8-WAY	*Call
2094<2084		4608<4412	12-WAY TO 8-WAY	*Call
2094<2084		4608<4413	13-WAY TO 8-WAY	*Call
2094<2084		4608<4414	14-WAY TO 8-WAY	*Call
2094<2084		4608<4415	15-WAY TO 8-WAY	*Call
2094<2084		4608<4416	16-WAY TO 8-WAY	*Call
2094<2084		4608<4417	17-WAY TO 8-WAY	*Call
2094<2084		4608<4418	18-WAY TO 8-WAY	*Call
2094<2084		4608<4419	19-WAY TO 8-WAY	*Call
2094<2084		4608<4420	20-WAY TO 8-WAY	*Call
2094<2084		4608<4421	21-WAY TO 8-WAY	*Call
2094<2084		4608<4422	22-WAY TO 8-WAY	*Call
2094<2084		4608<4423	23-WAY TO 8-WAY	*Call
2094<2084		4608<4424	24-WAY TO 8-WAY	*Call
2094<2084		4608<4425	25-WAY TO 8-WAY	*Call
2094<2084		4608<4426	26-WAY TO 8-WAY	*Call
2094<2084		4608<4427	27-WAY TO 8-WAY	*Call
2094<2084		4608<4428	28-WAY TO 8-WAY	*Call
2094<2084		4608<4429	29-WAY TO 8-WAY	*Call
2094<2084		4608<4430	30-WAY TO 8-WAY	*Call
2094<2084		4608<4431	31-WAY TO 8-WAY	*Call
2094<2084		4608<4432	32-WAY TO 8-WAY	*Call
2094<2084		4701<4400	ZERO-WAY TO 1-WAY	*Call
2094<2084		4701<4401	1-WAY TO 1-WAY	*Call
2094<2084		4701<4402	2-WAY TO 1-WAY	*Call
2094<2084		4701<4403	3-WAY TO 1-WAY	*Call
2094<2084		4701<4404	4-WAY TO 1-WAY	*Call
2094<2084		4701<4405	5-WAY TO 1-WAY	*Call
2094<2084		4701<4406	6-WAY TO 1-WAY	*Call
2094<2084		4701<4407	7-WAY TO 1-WAY	*Call
2094<2084		4701<4408	8-WAY TO 1-WAY	*Call
2094<2084		4701<4409	9-WAY TO 1-WAY	*Call
2094<2084		4701<4410	10-WAY TO 1-WAY	*Call
2094<2084		4701<4411	11-WAY TO 1-WAY	*Call
2094<2084		4701<4412	12-WAY TO 1-WAY	*Call
2094<2084		4701<4413	13-WAY TO 1-WAY	*Call
2094<2084		4701<4414	14-WAY TO 1-WAY	*Call
2094<2084		4701<4415	15-WAY TO 1-WAY	*Call
2094<2084		4701<4416	16-WAY TO 1-WAY	*Call
2094<2084		4701<4417	17-WAY TO 1-WAY	*Call
2094<2084		4701<4418	18-WAY TO 1-WAY	*Call
2094<2084		4701<4419	19-WAY TO 1-WAY	*Call
2094<2084		4701<4420	20-WAY TO 1-WAY	*Call
2094<2084		4701<4421	21-WAY TO 1-WAY	*Call
2094<2084		4701<4422	22-WAY TO 1-WAY	*Call
2094<2084		4701<4423	23-WAY TO 1-WAY	*Call
2094<2084		4701<4424	24-WAY TO 1-WAY	*Call
2094<2084		4701<4425	25-WAY TO 1-WAY	*Call
2094<2084		4701<4426	26-WAY TO 1-WAY	*Call
2094<2084		4701<4427	27-WAY TO 1-WAY	*Call
2094<2084		4701<4428	28-WAY TO 1-WAY	*Call
2094<2084		4701<4429	29-WAY TO 1-WAY	*Call
2094<2084		4701<4430	30-WAY TO 1-WAY	*Call
2094<2084		4701<4431	31-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4701<4432	32-WAY TO 1-WAY	*Call
2094<2084		4702<4400	ZERO-WAY TO 2-WAY	*Call
2094<2084		4702<4401	1-WAY TO 2-WAY	*Call
2094<2084		4702<4402	2-WAY TO 2-WAY	*Call
2094<2084		4702<4403	3-WAY TO 2-WAY	*Call
2094<2084		4702<4404	4-WAY TO 2-WAY	*Call
2094<2084		4702<4405	5-WAY TO 2-WAY	*Call
2094<2084		4702<4406	6-WAY TO 2-WAY	*Call
2094<2084		4702<4407	7-WAY TO 2-WAY	*Call
2094<2084		4702<4408	8-WAY TO 2-WAY	*Call
2094<2084		4702<4409	9-WAY TO 2-WAY	*Call
2094<2084		4702<4410	10-WAY TO 2-WAY	*Call
2094<2084		4702<4411	11-WAY TO 2-WAY	*Call
2094<2084		4702<4412	12-WAY TO 2-WAY	*Call
2094<2084		4702<4413	13-WAY TO 2-WAY	*Call
2094<2084		4702<4414	14-WAY TO 2-WAY	*Call
2094<2084		4702<4415	15-WAY TO 2-WAY	*Call
2094<2084		4702<4416	16-WAY TO 2-WAY	*Call
2094<2084		4702<4417	17-WAY TO 2-WAY	*Call
2094<2084		4702<4418	18-WAY TO 2-WAY	*Call
2094<2084		4702<4419	19-WAY TO 2-WAY	*Call
2094<2084		4702<4420	20-WAY TO 2-WAY	*Call
2094<2084		4702<4421	21-WAY TO 2-WAY	*Call
2094<2084		4702<4422	22-WAY TO 2-WAY	*Call
2094<2084		4702<4423	23-WAY TO 2-WAY	*Call
2094<2084		4702<4424	24-WAY TO 2-WAY	*Call
2094<2084		4702<4425	25-WAY TO 2-WAY	*Call
2094<2084		4702<4426	26-WAY TO 2-WAY	*Call
2094<2084		4702<4427	27-WAY TO 2-WAY	*Call
2094<2084		4702<4428	28-WAY TO 2-WAY	*Call
2094<2084		4702<4429	29-WAY TO 2-WAY	*Call
2094<2084		4702<4430	30-WAY TO 2-WAY	*Call
2094<2084		4702<4431	31-WAY TO 2-WAY	*Call
2094<2084		4702<4432	32-WAY TO 2-WAY	*Call
2094<2084		4703<4400	ZERO-WAY TO 3-WAY	*Call
2094<2084		4703<4401	1-WAY TO 3-WAY	*Call
2094<2084		4703<4402	2-WAY TO 3-WAY	*Call
2094<2084		4703<4403	3-WAY TO 3-WAY	*Call
2094<2084		4703<4404	4-WAY TO 3-WAY	*Call
2094<2084		4703<4405	5-WAY TO 3-WAY	*Call
2094<2084		4703<4406	6-WAY TO 3-WAY	*Call
2094<2084		4703<4407	7-WAY TO 3-WAY	*Call
2094<2084		4703<4408	8-WAY TO 3-WAY	*Call
2094<2084		4703<4409	9-WAY TO 3-WAY	*Call
2094<2084		4703<4410	10-WAY TO 3-WAY	*Call
2094<2084		4703<4411	11-WAY TO 3-WAY	*Call
2094<2084		4703<4412	12-WAY TO 3-WAY	*Call
2094<2084		4703<4413	13-WAY TO 3-WAY	*Call
2094<2084		4703<4414	14-WAY TO 3-WAY	*Call
2094<2084		4703<4415	15-WAY TO 3-WAY	*Call
2094<2084		4703<4416	16-WAY TO 3-WAY	*Call
2094<2084		4703<4417	17-WAY TO 3-WAY	*Call
2094<2084		4703<4418	18-WAY TO 3-WAY	*Call
2094<2084		4703<4419	19-WAY TO 3-WAY	*Call
2094<2084		4703<4420	20-WAY TO 3-WAY	*Call
2094<2084		4703<4421	21-WAY TO 3-WAY	*Call
2094<2084		4703<4422	22-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4703<4423	23-WAY TO 3-WAY	*Call
2094<2084		4703<4424	24-WAY TO 3-WAY	*Call
2094<2084		4703<4425	25-WAY TO 3-WAY	*Call
2094<2084		4703<4426	26-WAY TO 3-WAY	*Call
2094<2084		4703<4427	27-WAY TO 3-WAY	*Call
2094<2084		4703<4428	28-WAY TO 3-WAY	*Call
2094<2084		4703<4429	29-WAY TO 3-WAY	*Call
2094<2084		4703<4430	30-WAY TO 3-WAY	*Call
2094<2084		4703<4431	31-WAY TO 3-WAY	*Call
2094<2084		4703<4432	32-WAY TO 3-WAY	*Call
2094<2084		4704<4400	ZERO-WAY TO 4-WAY	*Call
2094<2084		4704<4401	1-WAY TO 4-WAY	*Call
2094<2084		4704<4402	2-WAY TO 4-WAY	*Call
2094<2084		4704<4403	3-WAY TO 4-WAY	*Call
2094<2084		4704<4404	4-WAY TO 4-WAY	*Call
2094<2084		4704<4405	5-WAY TO 4-WAY	*Call
2094<2084		4704<4406	6-WAY TO 4-WAY	*Call
2094<2084		4704<4407	7-WAY TO 4-WAY	*Call
2094<2084		4704<4408	8-WAY TO 4-WAY	*Call
2094<2084		4704<4409	9-WAY TO 4-WAY	*Call
2094<2084		4704<4410	10-WAY TO 4-WAY	*Call
2094<2084		4704<4411	11-WAY TO 4-WAY	*Call
2094<2084		4704<4412	12-WAY TO 4-WAY	*Call
2094<2084		4704<4413	13-WAY TO 4-WAY	*Call
2094<2084		4704<4414	14-WAY TO 4-WAY	*Call
2094<2084		4704<4415	15-WAY TO 4-WAY	*Call
2094<2084		4704<4416	16-WAY TO 4-WAY	*Call
2094<2084		4704<4417	17-WAY TO 4-WAY	*Call
2094<2084		4704<4418	18-WAY TO 4-WAY	*Call
2094<2084		4704<4419	19-WAY TO 4-WAY	*Call
2094<2084		4704<4420	20-WAY TO 4-WAY	*Call
2094<2084		4704<4421	21-WAY TO 4-WAY	*Call
2094<2084		4704<4422	22-WAY TO 4-WAY	*Call
2094<2084		4704<4423	23-WAY TO 4-WAY	*Call
2094<2084		4704<4424	24-WAY TO 4-WAY	*Call
2094<2084		4704<4425	25-WAY TO 4-WAY	*Call
2094<2084		4704<4426	26-WAY TO 4-WAY	*Call
2094<2084		4704<4427	27-WAY TO 4-WAY	*Call
2094<2084		4704<4428	28-WAY TO 4-WAY	*Call
2094<2084		4704<4429	29-WAY TO 4-WAY	*Call
2094<2084		4704<4430	30-WAY TO 4-WAY	*Call
2094<2084		4704<4431	31-WAY TO 4-WAY	*Call
2094<2084		4704<4432	32-WAY TO 4-WAY	*Call
2094<2084		4705<4400	ZERO-WAY TO 5-WAY	*Call
2094<2084		4705<4401	1-WAY TO 5-WAY	*Call
2094<2084		4705<4402	2-WAY TO 5-WAY	*Call
2094<2084		4705<4403	3-WAY TO 5-WAY	*Call
2094<2084		4705<4404	4-WAY TO 5-WAY	*Call
2094<2084		4705<4405	5-WAY TO 5-WAY	*Call
2094<2084		4705<4406	6-WAY TO 5-WAY	*Call
2094<2084		4705<4407	7-WAY TO 5-WAY	*Call
2094<2084		4705<4408	8-WAY TO 5-WAY	*Call
2094<2084		4705<4409	9-WAY TO 5-WAY	*Call
2094<2084		4705<4410	10-WAY TO 5-WAY	*Call
2094<2084		4705<4411	11-WAY TO 5-WAY	*Call
2094<2084		4705<4412	12-WAY TO 5-WAY	*Call
2094<2084		4705<4413	13-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4705<4414	14-WAY TO 5-WAY	*Call
2094<2084		4705<4415	15-WAY TO 5-WAY	*Call
2094<2084		4705<4416	16-WAY TO 5-WAY	*Call
2094<2084		4705<4417	17-WAY TO 5-WAY	*Call
2094<2084		4705<4418	18-WAY TO 5-WAY	*Call
2094<2084		4705<4419	19-WAY TO 5-WAY	*Call
2094<2084		4705<4420	20-WAY TO 5-WAY	*Call
2094<2084		4705<4421	21-WAY TO 5-WAY	*Call
2094<2084		4705<4422	22-WAY TO 5-WAY	*Call
2094<2084		4705<4423	23-WAY TO 5-WAY	*Call
2094<2084		4705<4424	24-WAY TO 5-WAY	*Call
2094<2084		4705<4425	25-WAY TO 5-WAY	*Call
2094<2084		4705<4426	26-WAY TO 5-WAY	*Call
2094<2084		4705<4427	27-WAY TO 5-WAY	*Call
2094<2084		4705<4428	28-WAY TO 5-WAY	*Call
2094<2084		4705<4429	29-WAY TO 5-WAY	*Call
2094<2084		4705<4430	30-WAY TO 5-WAY	*Call
2094<2084		4705<4431	31-WAY TO 5-WAY	*Call
2094<2084		4705<4432	32-WAY TO 5-WAY	*Call
2094<2084		4706<4400	ZERO-WAY TO 6-WAY	*Call
2094<2084		4706<4401	1-WAY TO 6-WAY	*Call
2094<2084		4706<4402	2-WAY TO 6-WAY	*Call
2094<2084		4706<4403	3-WAY TO 6-WAY	*Call
2094<2084		4706<4404	4-WAY TO 6-WAY	*Call
2094<2084		4706<4405	5-WAY TO 6-WAY	*Call
2094<2084		4706<4406	6-WAY TO 6-WAY	*Call
2094<2084		4706<4407	7-WAY TO 6-WAY	*Call
2094<2084		4706<4408	8-WAY TO 6-WAY	*Call
2094<2084		4706<4409	9-WAY TO 6-WAY	*Call
2094<2084		4706<4410	10-WAY TO 6-WAY	*Call
2094<2084		4706<4411	11-WAY TO 6-WAY	*Call
2094<2084		4706<4412	12-WAY TO 6-WAY	*Call
2094<2084		4706<4413	13-WAY TO 6-WAY	*Call
2094<2084		4706<4414	14-WAY TO 6-WAY	*Call
2094<2084		4706<4415	15-WAY TO 6-WAY	*Call
2094<2084		4706<4416	16-WAY TO 6-WAY	*Call
2094<2084		4706<4417	17-WAY TO 6-WAY	*Call
2094<2084		4706<4418	18-WAY TO 6-WAY	*Call
2094<2084		4706<4419	19-WAY TO 6-WAY	*Call
2094<2084		4706<4420	20-WAY TO 6-WAY	*Call
2094<2084		4706<4421	21-WAY TO 6-WAY	*Call
2094<2084		4706<4422	22-WAY TO 6-WAY	*Call
2094<2084		4706<4423	23-WAY TO 6-WAY	*Call
2094<2084		4706<4424	24-WAY TO 6-WAY	*Call
2094<2084		4706<4425	25-WAY TO 6-WAY	*Call
2094<2084		4706<4426	26-WAY TO 6-WAY	*Call
2094<2084		4706<4427	27-WAY TO 6-WAY	*Call
2094<2084		4706<4428	28-WAY TO 6-WAY	*Call
2094<2084		4706<4429	29-WAY TO 6-WAY	*Call
2094<2084		4706<4430	30-WAY TO 6-WAY	*Call
2094<2084		4706<4431	31-WAY TO 6-WAY	*Call
2094<2084		4706<4432	32-WAY TO 6-WAY	*Call
2094<2084		4707<4400	ZERO-WAY TO 7-WAY	*Call
2094<2084		4707<4401	1-WAY TO 7-WAY	*Call
2094<2084		4707<4402	2-WAY TO 7-WAY	*Call
2094<2084		4707<4403	3-WAY TO 7-WAY	*Call
2094<2084		4707<4404	4-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4707<4405	5-WAY TO 7-WAY	*Call
2094<2084		4707<4406	6-WAY TO 7-WAY	*Call
2094<2084		4707<4407	7-WAY TO 7-WAY	*Call
2094<2084		4707<4408	8-WAY TO 7-WAY	*Call
2094<2084		4707<4409	9-WAY TO 7-WAY	*Call
2094<2084		4707<4410	10-WAY TO 7-WAY	*Call
2094<2084		4707<4411	11-WAY TO 7-WAY	*Call
2094<2084		4707<4412	12-WAY TO 7-WAY	*Call
2094<2084		4707<4413	13-WAY TO 7-WAY	*Call
2094<2084		4707<4414	14-WAY TO 7-WAY	*Call
2094<2084		4707<4415	15-WAY TO 7-WAY	*Call
2094<2084		4707<4416	16-WAY TO 7-WAY	*Call
2094<2084		4707<4417	17-WAY TO 7-WAY	*Call
2094<2084		4707<4418	18-WAY TO 7-WAY	*Call
2094<2084		4707<4419	19-WAY TO 7-WAY	*Call
2094<2084		4707<4420	20-WAY TO 7-WAY	*Call
2094<2084		4707<4421	21-WAY TO 7-WAY	*Call
2094<2084		4707<4422	22-WAY TO 7-WAY	*Call
2094<2084		4707<4423	23-WAY TO 7-WAY	*Call
2094<2084		4707<4424	24-WAY TO 7-WAY	*Call
2094<2084		4707<4425	25-WAY TO 7-WAY	*Call
2094<2084		4707<4426	26-WAY TO 7-WAY	*Call
2094<2084		4707<4427	27-WAY TO 7-WAY	*Call
2094<2084		4707<4428	28-WAY TO 7-WAY	*Call
2094<2084		4707<4429	29-WAY TO 7-WAY	*Call
2094<2084		4707<4430	30-WAY TO 7-WAY	*Call
2094<2084		4707<4431	31-WAY TO 7-WAY	*Call
2094<2084		4707<4432	32-WAY TO 7-WAY	*Call
2094<2084		4708<4400	ZERO-WAY TO 8-WAY	*Call
2094<2084		4708<4401	1-WAY TO 8-WAY	*Call
2094<2084		4708<4402	2-WAY TO 8-WAY	*Call
2094<2084		4708<4403	3-WAY TO 8-WAY	*Call
2094<2084		4708<4404	4-WAY TO 8-WAY	*Call
2094<2084		4708<4405	5-WAY TO 8-WAY	*Call
2094<2084		4708<4406	6-WAY TO 8-WAY	*Call
2094<2084		4708<4407	7-WAY TO 8-WAY	*Call
2094<2084		4708<4408	8-WAY TO 8-WAY	*Call
2094<2084		4708<4409	9-WAY TO 8-WAY	*Call
2094<2084		4708<4410	10-WAY TO 8-WAY	*Call
2094<2084		4708<4411	11-WAY TO 8-WAY	*Call
2094<2084		4708<4412	12-WAY TO 8-WAY	*Call
2094<2084		4708<4413	13-WAY TO 8-WAY	*Call
2094<2084		4708<4414	14-WAY TO 8-WAY	*Call
2094<2084		4708<4415	15-WAY TO 8-WAY	*Call
2094<2084		4708<4416	16-WAY TO 8-WAY	*Call
2094<2084		4708<4417	17-WAY TO 8-WAY	*Call
2094<2084		4708<4418	18-WAY TO 8-WAY	*Call
2094<2084		4708<4419	19-WAY TO 8-WAY	*Call
2094<2084		4708<4420	20-WAY TO 8-WAY	*Call
2094<2084		4708<4421	21-WAY TO 8-WAY	*Call
2094<2084		4708<4422	22-WAY TO 8-WAY	*Call
2094<2084		4708<4423	23-WAY TO 8-WAY	*Call
2094<2084		4708<4424	24-WAY TO 8-WAY	*Call
2094<2084		4708<4425	25-WAY TO 8-WAY	*Call
2094<2084		4708<4426	26-WAY TO 8-WAY	*Call
2094<2084		4708<4427	27-WAY TO 8-WAY	*Call
2094<2084		4708<4428	28-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4708<4429	29-WAY TO 8-WAY	*Call
2094<2084		4708<4430	30-WAY TO 8-WAY	*Call
2094<2084		4708<4431	31-WAY TO 8-WAY	*Call
2094<2084		4708<4432	32-WAY TO 8-WAY	*Call
2094<2084		4801<4400	ZERO-WAY TO 1-WAY	*Call
2094<2084		4801<4401	1-WAY TO 1-WAY	*Call
2094<2084		4801<4402	2-WAY TO 1-WAY	*Call
2094<2084		4801<4403	3-WAY TO 1-WAY	*Call
2094<2084		4801<4404	4-WAY TO 1-WAY	*Call
2094<2084		4801<4405	5-WAY TO 1-WAY	*Call
2094<2084		4801<4406	6-WAY TO 1-WAY	*Call
2094<2084		4801<4407	7-WAY TO 1-WAY	*Call
2094<2084		4801<4408	8-WAY TO 1-WAY	*Call
2094<2084		4801<4409	9-WAY TO 1-WAY	*Call
2094<2084		4801<4410	10-WAY TO 1-WAY	*Call
2094<2084		4801<4411	11-WAY TO 1-WAY	*Call
2094<2084		4801<4412	12-WAY TO 1-WAY	*Call
2094<2084		4801<4413	13-WAY TO 1-WAY	*Call
2094<2084		4801<4414	14-WAY TO 1-WAY	*Call
2094<2084		4801<4415	15-WAY TO 1-WAY	*Call
2094<2084		4801<4416	16-WAY TO 1-WAY	*Call
2094<2084		4801<4417	17-WAY TO 1-WAY	*Call
2094<2084		4801<4418	18-WAY TO 1-WAY	*Call
2094<2084		4801<4419	19-WAY TO 1-WAY	*Call
2094<2084		4801<4420	20-WAY TO 1-WAY	*Call
2094<2084		4801<4421	21-WAY TO 1-WAY	*Call
2094<2084		4801<4422	22-WAY TO 1-WAY	*Call
2094<2084		4801<4423	23-WAY TO 1-WAY	*Call
2094<2084		4801<4424	24-WAY TO 1-WAY	*Call
2094<2084		4801<4425	25-WAY TO 1-WAY	*Call
2094<2084		4801<4426	26-WAY TO 1-WAY	*Call
2094<2084		4801<4427	27-WAY TO 1-WAY	*Call
2094<2084		4801<4428	28-WAY TO 1-WAY	*Call
2094<2084		4801<4429	29-WAY TO 1-WAY	*Call
2094<2084		4801<4430	30-WAY TO 1-WAY	*Call
2094<2084		4801<4431	31-WAY TO 1-WAY	*Call
2094<2084		4801<4432	32-WAY TO 1-WAY	*Call
2094<2084		4802<4400	ZERO-WAY TO 2-WAY	*Call
2094<2084		4802<4401	1-WAY TO 2-WAY	*Call
2094<2084		4802<4402	2-WAY TO 2-WAY	*Call
2094<2084		4802<4403	3-WAY TO 2-WAY	*Call
2094<2084		4802<4404	4-WAY TO 2-WAY	*Call
2094<2084		4802<4405	5-WAY TO 2-WAY	*Call
2094<2084		4802<4406	6-WAY TO 2-WAY	*Call
2094<2084		4802<4407	7-WAY TO 2-WAY	*Call
2094<2084		4802<4408	8-WAY TO 2-WAY	*Call
2094<2084		4802<4409	9-WAY TO 2-WAY	*Call
2094<2084		4802<4410	10-WAY TO 2-WAY	*Call
2094<2084		4802<4411	11-WAY TO 2-WAY	*Call
2094<2084		4802<4412	12-WAY TO 2-WAY	*Call
2094<2084		4802<4413	13-WAY TO 2-WAY	*Call
2094<2084		4802<4414	14-WAY TO 2-WAY	*Call
2094<2084		4802<4415	15-WAY TO 2-WAY	*Call
2094<2084		4802<4416	16-WAY TO 2-WAY	*Call
2094<2084		4802<4417	17-WAY TO 2-WAY	*Call
2094<2084		4802<4418	18-WAY TO 2-WAY	*Call
2094<2084		4802<4419	19-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4802<4420	20-WAY TO 2-WAY	*Call
2094<2084		4802<4421	21-WAY TO 2-WAY	*Call
2094<2084		4802<4422	22-WAY TO 2-WAY	*Call
2094<2084		4802<4423	23-WAY TO 2-WAY	*Call
2094<2084		4802<4424	24-WAY TO 2-WAY	*Call
2094<2084		4802<4425	25-WAY TO 2-WAY	*Call
2094<2084		4802<4426	26-WAY TO 2-WAY	*Call
2094<2084		4802<4427	27-WAY TO 2-WAY	*Call
2094<2084		4802<4428	28-WAY TO 2-WAY	*Call
2094<2084		4802<4429	29-WAY TO 2-WAY	*Call
2094<2084		4802<4430	30-WAY TO 2-WAY	*Call
2094<2084		4802<4431	31-WAY TO 2-WAY	*Call
2094<2084		4802<4432	32-WAY TO 2-WAY	*Call
2094<2084		4803<4400	ZERO-WAY TO 3-WAY	*Call
2094<2084		4803<4401	1-WAY TO 3-WAY	*Call
2094<2084		4803<4402	2-WAY TO 3-WAY	*Call
2094<2084		4803<4403	3-WAY TO 3-WAY	*Call
2094<2084		4803<4404	4-WAY TO 3-WAY	*Call
2094<2084		4803<4405	5-WAY TO 3-WAY	*Call
2094<2084		4803<4406	6-WAY TO 3-WAY	*Call
2094<2084		4803<4407	7-WAY TO 3-WAY	*Call
2094<2084		4803<4408	8-WAY TO 3-WAY	*Call
2094<2084		4803<4409	9-WAY TO 3-WAY	*Call
2094<2084		4803<4410	10-WAY TO 3-WAY	*Call
2094<2084		4803<4411	11-WAY TO 3-WAY	*Call
2094<2084		4803<4412	12-WAY TO 3-WAY	*Call
2094<2084		4803<4413	13-WAY TO 3-WAY	*Call
2094<2084		4803<4414	14-WAY TO 3-WAY	*Call
2094<2084		4803<4415	15-WAY TO 3-WAY	*Call
2094<2084		4803<4416	16-WAY TO 3-WAY	*Call
2094<2084		4803<4417	17-WAY TO 3-WAY	*Call
2094<2084		4803<4418	18-WAY TO 3-WAY	*Call
2094<2084		4803<4419	19-WAY TO 3-WAY	*Call
2094<2084		4803<4420	20-WAY TO 3-WAY	*Call
2094<2084		4803<4421	21-WAY TO 3-WAY	*Call
2094<2084		4803<4422	22-WAY TO 3-WAY	*Call
2094<2084		4803<4423	23-WAY TO 3-WAY	*Call
2094<2084		4803<4424	24-WAY TO 3-WAY	*Call
2094<2084		4803<4425	25-WAY TO 3-WAY	*Call
2094<2084		4803<4426	26-WAY TO 3-WAY	*Call
2094<2084		4803<4427	27-WAY TO 3-WAY	*Call
2094<2084		4803<4428	28-WAY TO 3-WAY	*Call
2094<2084		4803<4429	29-WAY TO 3-WAY	*Call
2094<2084		4803<4430	30-WAY TO 3-WAY	*Call
2094<2084		4803<4431	31-WAY TO 3-WAY	*Call
2094<2084		4803<4432	32-WAY TO 3-WAY	*Call
2094<2084		4804<4400	ZERO-WAY TO 4-WAY	*Call
2094<2084		4804<4401	1-WAY TO 4-WAY	*Call
2094<2084		4804<4402	2-WAY TO 4-WAY	*Call
2094<2084		4804<4403	3-WAY TO 4-WAY	*Call
2094<2084		4804<4404	4-WAY TO 4-WAY	*Call
2094<2084		4804<4405	5-WAY TO 4-WAY	*Call
2094<2084		4804<4406	6-WAY TO 4-WAY	*Call
2094<2084		4804<4407	7-WAY TO 4-WAY	*Call
2094<2084		4804<4408	8-WAY TO 4-WAY	*Call
2094<2084		4804<4409	9-WAY TO 4-WAY	*Call
2094<2084		4804<4410	10-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4804<4411	11-WAY TO 4-WAY	*Call
2094<2084		4804<4412	12-WAY TO 4-WAY	*Call
2094<2084		4804<4413	13-WAY TO 4-WAY	*Call
2094<2084		4804<4414	14-WAY TO 4-WAY	*Call
2094<2084		4804<4415	15-WAY TO 4-WAY	*Call
2094<2084		4804<4416	16-WAY TO 4-WAY	*Call
2094<2084		4804<4417	17-WAY TO 4-WAY	*Call
2094<2084		4804<4418	18-WAY TO 4-WAY	*Call
2094<2084		4804<4419	19-WAY TO 4-WAY	*Call
2094<2084		4804<4420	20-WAY TO 4-WAY	*Call
2094<2084		4804<4421	21-WAY TO 4-WAY	*Call
2094<2084		4804<4422	22-WAY TO 4-WAY	*Call
2094<2084		4804<4423	23-WAY TO 4-WAY	*Call
2094<2084		4804<4424	24-WAY TO 4-WAY	*Call
2094<2084		4804<4425	25-WAY TO 4-WAY	*Call
2094<2084		4804<4426	26-WAY TO 4-WAY	*Call
2094<2084		4804<4427	27-WAY TO 4-WAY	*Call
2094<2084		4804<4428	28-WAY TO 4-WAY	*Call
2094<2084		4804<4429	29-WAY TO 4-WAY	*Call
2094<2084		4804<4430	30-WAY TO 4-WAY	*Call
2094<2084		4804<4431	31-WAY TO 4-WAY	*Call
2094<2084		4804<4432	32-WAY TO 4-WAY	*Call
2094<2084		4805<4400	ZERO-WAY TO 5-WAY	*Call
2094<2084		4805<4401	1-WAY TO 5-WAY	*Call
2094<2084		4805<4402	2-WAY TO 5-WAY	*Call
2094<2084		4805<4403	3-WAY TO 5-WAY	*Call
2094<2084		4805<4404	4-WAY TO 5-WAY	*Call
2094<2084		4805<4405	5-WAY TO 5-WAY	*Call
2094<2084		4805<4406	6-WAY TO 5-WAY	*Call
2094<2084		4805<4407	7-WAY TO 5-WAY	*Call
2094<2084		4805<4408	8-WAY TO 5-WAY	*Call
2094<2084		4805<4409	9-WAY TO 5-WAY	*Call
2094<2084		4805<4410	10-WAY TO 5-WAY	*Call
2094<2084		4805<4411	11-WAY TO 5-WAY	*Call
2094<2084		4805<4412	12-WAY TO 5-WAY	*Call
2094<2084		4805<4413	13-WAY TO 5-WAY	*Call
2094<2084		4805<4414	14-WAY TO 5-WAY	*Call
2094<2084		4805<4415	15-WAY TO 5-WAY	*Call
2094<2084		4805<4416	16-WAY TO 5-WAY	*Call
2094<2084		4805<4417	17-WAY TO 5-WAY	*Call
2094<2084		4805<4418	18-WAY TO 5-WAY	*Call
2094<2084		4805<4419	19-WAY TO 5-WAY	*Call
2094<2084		4805<4420	20-WAY TO 5-WAY	*Call
2094<2084		4805<4421	21-WAY TO 5-WAY	*Call
2094<2084		4805<4422	22-WAY TO 5-WAY	*Call
2094<2084		4805<4423	23-WAY TO 5-WAY	*Call
2094<2084		4805<4424	24-WAY TO 5-WAY	*Call
2094<2084		4805<4425	25-WAY TO 5-WAY	*Call
2094<2084		4805<4426	26-WAY TO 5-WAY	*Call
2094<2084		4805<4427	27-WAY TO 5-WAY	*Call
2094<2084		4805<4428	28-WAY TO 5-WAY	*Call
2094<2084		4805<4429	29-WAY TO 5-WAY	*Call
2094<2084		4805<4430	30-WAY TO 5-WAY	*Call
2094<2084		4805<4431	31-WAY TO 5-WAY	*Call
2094<2084		4805<4432	32-WAY TO 5-WAY	*Call
2094<2084		4806<4400	ZERO-WAY TO 6-WAY	*Call
2094<2084		4806<4401	1-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4806<4402	2-WAY TO 6-WAY	*Call
2094<2084		4806<4403	3-WAY TO 6-WAY	*Call
2094<2084		4806<4404	4-WAY TO 6-WAY	*Call
2094<2084		4806<4405	5-WAY TO 6-WAY	*Call
2094<2084		4806<4406	6-WAY TO 6-WAY	*Call
2094<2084		4806<4407	7-WAY TO 6-WAY	*Call
2094<2084		4806<4408	8-WAY TO 6-WAY	*Call
2094<2084		4806<4409	9-WAY TO 6-WAY	*Call
2094<2084		4806<4410	10-WAY TO 6-WAY	*Call
2094<2084		4806<4411	11-WAY TO 6-WAY	*Call
2094<2084		4806<4412	12-WAY TO 6-WAY	*Call
2094<2084		4806<4413	13-WAY TO 6-WAY	*Call
2094<2084		4806<4414	14-WAY TO 6-WAY	*Call
2094<2084		4806<4415	15-WAY TO 6-WAY	*Call
2094<2084		4806<4416	16-WAY TO 6-WAY	*Call
2094<2084		4806<4417	17-WAY TO 6-WAY	*Call
2094<2084		4806<4418	18-WAY TO 6-WAY	*Call
2094<2084		4806<4419	19-WAY TO 6-WAY	*Call
2094<2084		4806<4420	20-WAY TO 6-WAY	*Call
2094<2084		4806<4421	21-WAY TO 6-WAY	*Call
2094<2084		4806<4422	22-WAY TO 6-WAY	*Call
2094<2084		4806<4423	23-WAY TO 6-WAY	*Call
2094<2084		4806<4424	24-WAY TO 6-WAY	*Call
2094<2084		4806<4425	25-WAY TO 6-WAY	*Call
2094<2084		4806<4426	26-WAY TO 6-WAY	*Call
2094<2084		4806<4427	27-WAY TO 6-WAY	*Call
2094<2084		4806<4428	28-WAY TO 6-WAY	*Call
2094<2084		4806<4429	29-WAY TO 6-WAY	*Call
2094<2084		4806<4430	30-WAY TO 6-WAY	*Call
2094<2084		4806<4431	31-WAY TO 6-WAY	*Call
2094<2084		4806<4432	32-WAY TO 6-WAY	*Call
2094<2084		4807<4400	ZERO-WAY TO 7-WAY	*Call
2094<2084		4807<4401	1-WAY TO 7-WAY	*Call
2094<2084		4807<4402	2-WAY TO 7-WAY	*Call
2094<2084		4807<4403	3-WAY TO 7-WAY	*Call
2094<2084		4807<4404	4-WAY TO 7-WAY	*Call
2094<2084		4807<4405	5-WAY TO 7-WAY	*Call
2094<2084		4807<4406	6-WAY TO 7-WAY	*Call
2094<2084		4807<4407	7-WAY TO 7-WAY	*Call
2094<2084		4807<4408	8-WAY TO 7-WAY	*Call
2094<2084		4807<4409	9-WAY TO 7-WAY	*Call
2094<2084		4807<4410	10-WAY TO 7-WAY	*Call
2094<2084		4807<4411	11-WAY TO 7-WAY	*Call
2094<2084		4807<4412	12-WAY TO 7-WAY	*Call
2094<2084		4807<4413	13-WAY TO 7-WAY	*Call
2094<2084		4807<4414	14-WAY TO 7-WAY	*Call
2094<2084		4807<4415	15-WAY TO 7-WAY	*Call
2094<2084		4807<4416	16-WAY TO 7-WAY	*Call
2094<2084		4807<4417	17-WAY TO 7-WAY	*Call
2094<2084		4807<4418	18-WAY TO 7-WAY	*Call
2094<2084		4807<4419	19-WAY TO 7-WAY	*Call
2094<2084		4807<4420	20-WAY TO 7-WAY	*Call
2094<2084		4807<4421	21-WAY TO 7-WAY	*Call
2094<2084		4807<4422	22-WAY TO 7-WAY	*Call
2094<2084		4807<4423	23-WAY TO 7-WAY	*Call
2094<2084		4807<4424	24-WAY TO 7-WAY	*Call
2094<2084		4807<4425	25-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		4807<4426	26-WAY TO 7-WAY	*Call
2094<2084		4807<4427	27-WAY TO 7-WAY	*Call
2094<2084		4807<4428	28-WAY TO 7-WAY	*Call
2094<2084		4807<4429	29-WAY TO 7-WAY	*Call
2094<2084		4807<4430	30-WAY TO 7-WAY	*Call
2094<2084		4807<4431	31-WAY TO 7-WAY	*Call
2094<2084		4807<4432	32-WAY TO 7-WAY	*Call
2094<2084		4808<4400	ZERO-WAY TO 8-WAY	*Call
2094<2084		4808<4401	1-WAY TO 8-WAY	*Call
2094<2084		4808<4402	2-WAY TO 8-WAY	*Call
2094<2084		4808<4403	3-WAY TO 8-WAY	*Call
2094<2084		4808<4404	4-WAY TO 8-WAY	*Call
2094<2084		4808<4405	5-WAY TO 8-WAY	*Call
2094<2084		4808<4406	6-WAY TO 8-WAY	*Call
2094<2084		4808<4407	7-WAY TO 8-WAY	*Call
2094<2084		4808<4408	8-WAY TO 8-WAY	*Call
2094<2084		4808<4409	9-WAY TO 8-WAY	*Call
2094<2084		4808<4410	10-WAY TO 8-WAY	*Call
2094<2084		4808<4411	11-WAY TO 8-WAY	*Call
2094<2084		4808<4412	12-WAY TO 8-WAY	*Call
2094<2084		4808<4413	13-WAY TO 8-WAY	*Call
2094<2084		4808<4414	14-WAY TO 8-WAY	*Call
2094<2084		4808<4415	15-WAY TO 8-WAY	*Call
2094<2084		4808<4416	16-WAY TO 8-WAY	*Call
2094<2084		4808<4417	17-WAY TO 8-WAY	*Call
2094<2084		4808<4418	18-WAY TO 8-WAY	*Call
2094<2084		4808<4419	19-WAY TO 8-WAY	*Call
2094<2084		4808<4420	20-WAY TO 8-WAY	*Call
2094<2084		4808<4421	21-WAY TO 8-WAY	*Call
2094<2084		4808<4422	22-WAY TO 8-WAY	*Call
2094<2084		4808<4423	23-WAY TO 8-WAY	*Call
2094<2084		4808<4424	24-WAY TO 8-WAY	*Call
2094<2084		4808<4425	25-WAY TO 8-WAY	*Call
2094<2084		4808<4426	26-WAY TO 8-WAY	*Call
2094<2084		4808<4427	27-WAY TO 8-WAY	*Call
2094<2084		4808<4428	28-WAY TO 8-WAY	*Call
2094<2084		4808<4429	29-WAY TO 8-WAY	*Call
2094<2084		4808<4430	30-WAY TO 8-WAY	*Call
2094<2084		4808<4431	31-WAY TO 8-WAY	*Call
2094<2084		4808<4432	32-WAY TO 8-WAY	*Call
2094<2084		7611<7711	A08 1 I/O TO S08 1 I/O	*Call
2094<2084		7611<7721	B16 1 I/O TO S08 1 I/O	*Call
2094<2084		7611<7731	C24 1 I/O TO S08 1 I/O	*Call
2094<2084		7611<7741	D32 1 I/O TO S08 1 I/O	*Call
2094<2084		7612<7711	A08 1 I/O TO S08 2 I/O	*Call
2094<2084		7612<7712	A08 2 I/O TO S08 2 I/O	*Call
2094<2084		7612<7721	B16 1 I/O TO S08 2 I/O	*Call
2094<2084		7612<7722	B16 2 I/O TO S08 2 I/O	*Call
2094<2084		7612<7731	C24 1 I/O TO S08 2 I/O	*Call
2094<2084		7612<7732	C24 2 I/O TO S08 2 I/O	*Call
2094<2084		7612<7741	D32 1 I/O TO S08 2 I/O	*Call
2094<2084		7612<7742	D32 2 I/O TO S08 2 I/O	*Call
2094<2084		7613<7711	A08 1 I/O TO S08 3 I/O	*Call
2094<2084		7613<7712	A08 2 I/O TO S08 3 I/O	*Call
2094<2084		7613<7713	A08 3 I/O TO S08 3 I/O	*Call
2094<2084		7613<7721	B16 1 I/O TO S08 3 I/O	*Call
2094<2084		7613<7722	B16 2 I/O TO S08 3 I/O	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		7613<7723	B16 3 I/O TO S08 3 I/O	*Call
2094<2084		7613<7731	C24 1 I/O TO S08 3 I/O	*Call
2094<2084		7613<7732	C24 2 I/O TO S08 3 I/O	*Call
2094<2084		7613<7733	C24 3 I/O TO S08 3 I/O	*Call
2094<2084		7613<7741	D32 1 I/O TO S08 3 I/O	*Call
2094<2084		7613<7742	D32 2 I/O TO S08 3 I/O	*Call
2094<2084		7613<7743	D32 3 I/O TO S08 3 I/O	*Call
2094<2084		7621<7711	A08 1 I/O TO S18 1 I/O	*Call
2094<2084		7621<7721	B16 1 I/O TO S18 1 I/O	*Call
2094<2084		7621<7731	C24 1 I/O TO S18 1 I/O	*Call
2094<2084		7621<7741	D32 1 I/O TO S18 1 I/O	*Call
2094<2084		7622<7711	A08 1 I/O TO S18 2 I/O	*Call
2094<2084		7622<7712	A08 2 I/O TO S18 2 I/O	*Call
2094<2084		7622<7721	B16 1 I/O TO S18 2 I/O	*Call
2094<2084		7622<7722	B16 2 I/O TO S18 2 I/O	*Call
2094<2084		7622<7731	C24 1 I/O TO S18 2 I/O	*Call
2094<2084		7622<7732	C24 2 I/O TO S18 2 I/O	*Call
2094<2084		7622<7741	D32 1 I/O TO S18 2 I/O	*Call
2094<2084		7622<7742	D32 2 I/O TO S18 1 I/O	*Call
2094<2084		7623<7711	A08 1 I/O TO S18 3 I/O	*Call
2094<2084		7623<7712	A08 2 I/O TO S18 3 I/O	*Call
2094<2084		7623<7713	A08 3 I/O TO S18 3 I/O	*Call
2094<2084		7623<7721	B16 1 I/O TO S18 3 I/O	*Call
2094<2084		7623<7722	B16 2 I/O TO S18 3 I/O	*Call
2094<2084		7623<7723	B16 3 I/O TO S18 3 I/O	*Call
2094<2084		7623<7731	C24 1 I/O TO S18 3 I/O	*Call
2094<2084		7623<7732	C24 2 I/O TO S18 3 I/O	*Call
2094<2084		7623<7733	C24 3 I/O TO S18 3 I/O	*Call
2094<2084		7623<7741	D32 1 I/O TO S18 3 I/O	*Call
2094<2084		7623<7742	D32 2 I/O TO S18 3 I/O	*Call
2094<2084		7623<7743	D32 3 I/O TO S18 3 I/O	*Call
2094<2084		7631<7711	A08 1 I/O TO S28 1 I/O	*Call
2094<2084		7631<7721	B16 1 I/O TO S28 1 I/O	*Call
2094<2084		7631<7731	C24 1 I/O TO S28 1 I/O	*Call
2094<2084		7631<7741	D32 1 I/O TO S28 1 I/O	*Call
2094<2084		7632<7711	A08 1 I/O TO S28 2 I/O	*Call
2094<2084		7632<7712	A08 2 I/O TO S28 2 I/O	*Call
2094<2084		7632<7721	B16 1 I/O TO S28 2 I/O	*Call
2094<2084		7632<7722	B16 2 I/O TO S28 2 I/O	*Call
2094<2084		7632<7731	C24 1 I/O TO S28 2 I/O	*Call
2094<2084		7632<7732	C24 2 I/O TO S28 2 I/O	*Call
2094<2084		7632<7741	D32 1 I/O TO S28 2 I/O	*Call
2094<2084		7632<7742	D32 2 I/O TO S28 2 I/O	*Call
2094<2084		7633<7711	A08 1 I/O TO S28 3 I/O	*Call
2094<2084		7633<7712	A08 2 I/O TO S28 3 I/O	*Call
2094<2084		7633<7713	A08 3 I/O TO S28 3 I/O	*Call
2094<2084		7633<7721	B16 1 I/O TO S28 3 I/O	*Call
2094<2084		7633<7722	B16 2 I/O TO S28 3 I/O	*Call
2094<2084		7633<7723	B16 3 I/O TO S28 3 I/O	*Call
2094<2084		7633<7731	C24 1 I/O TO S28 3 I/O	*Call
2094<2084		7633<7732	C24 2 I/O TO S28 3 I/O	*Call
2094<2084		7633<7733	C24 3 I/O TO S28 3 I/O	*Call
2094<2084		7633<7741	D32 1 I/O TO S28 3 I/O	*Call
2094<2084		7633<7742	D32 2 I/O TO S28 3 I/O	*Call
2094<2084		7633<7743	D32 3 I/O TO S28 3 I/O	*Call
2094<2084		7641<7711	A08 1 I/O TO S38/S54 1 I/O	*Call
2094<2084		7641<7721	B16 1 I/O TO S38/S54 1 I/O	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2084		7641<7731	C24 1 I/O TO S38/S54 1 I/O	*Call
2094<2084		7641<7741	D32 1 I/O TO S38/S54 1 I/O	*Call
2094<2084		7642<7711	A08 1 I/O TO S38/S54 2 I/O	*Call
2094<2084		7642<7712	A08 2 I/O TO S38/S54 2 I/O	*Call
2094<2084		7642<7721	B16 1 I/O TO S38/S54 2 I/O	*Call
2094<2084		7642<7722	B16 2 I/O TO S38/S54 2 I/O	*Call
2094<2084		7642<7731	C24 1 I/O TO S38/S54 2 I/O	*Call
2094<2084		7642<7732	C24 2 I/O TO S38/S54 2 I/O	*Call
2094<2084		7642<7741	D32 1 I/O TO S38/S54 2 I/O	*Call
2094<2084		7642<7742	D32 2 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7711	A08 1 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7712	A08 2 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7713	A08 3 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7721	B16 1 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7722	B16 2 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7723	B16 3 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7731	C24 1 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7732	C24 2 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7733	C24 3 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7741	D32 1 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7742	D32 2 I/O TO S38/S54 3 I/O	*Call
2094<2084		7643<7743	D32 3 I/O TO S38/S54 3 I/O	*Call
2094<2096		0081<0082	HMC TR/EN TO HMC DUAL EN	*Call
2094<2096		1110<1116	MODEL S07 TO MODEL S08	*Call
2094<2096		2701<2901	MEMORY TO MEMORY	*Call
2094<2096		2702<2901	MEMORY TO MEMORY	*Call
2094<2096		2702<2902	MEMORY TO MEMORY	*Call
2094<2096		2702<2903	MEMORY TO MEMORY	*Call
2094<2096		2703<2901	MEMORY TO MEMORY	*Call
2094<2096		2703<2902	MEMORY TO MEMORY	*Call
2094<2096		2703<2903	MEMORY TO MEMORY	*Call
2094<2096		2703<2904	MEMORY TO MEMORY	*Call
2094<2096		2703<2905	MEMORY TO MEMORY	*Call
2094<2096		2704<2901	MEMORY TO MEMORY	*Call
2094<2096		2704<2902	MEMORY TO MEMORY	*Call
2094<2096		2704<2903	MEMORY TO MEMORY	*Call
2094<2096		2704<2904	MEMORY TO MEMORY	*Call
2094<2096		2704<2905	MEMORY TO MEMORY	*Call
2094<2096		2704<2906	MEMORY TO MEMORY	*Call
2094<2096		2704<2907	MEMORY TO MEMORY	*Call
2094<2096		2705<2901	MEMORY TO MEMORY	*Call
2094<2096		2705<2902	MEMORY TO MEMORY	*Call
2094<2096		2705<2903	MEMORY TO MEMORY	*Call
2094<2096		2705<2904	MEMORY TO MEMORY	*Call
2094<2096		2705<2905	MEMORY TO MEMORY	*Call
2094<2096		2705<2906	MEMORY TO MEMORY	*Call
2094<2096		2705<2907	MEMORY TO MEMORY	*Call
2094<2096		2705<2908	MEMORY TO MEMORY	*Call
2094<2096		2706<2901	MEMORY TO MEMORY	*Call
2094<2096		2706<2902	MEMORY TO MEMORY	*Call
2094<2096		2706<2903	MEMORY TO MEMORY	*Call
2094<2096		2706<2904	MEMORY TO MEMORY	*Call
2094<2096		2706<2905	MEMORY TO MEMORY	*Call
2094<2096		2706<2906	MEMORY TO MEMORY	*Call
2094<2096		2706<2907	MEMORY TO MEMORY	*Call
2094<2096		2706<2908	MEMORY TO MEMORY	*Call
2094<2096		2707<2901	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		2707<2902	MEMORY TO MEMORY	*Call
2094<2096		2707<2903	MEMORY TO MEMORY	*Call
2094<2096		2707<2904	MEMORY TO MEMORY	*Call
2094<2096		2707<2905	MEMORY TO MEMORY	*Call
2094<2096		2707<2906	MEMORY TO MEMORY	*Call
2094<2096		2707<2907	MEMORY TO MEMORY	*Call
2094<2096		2707<2908	MEMORY TO MEMORY	*Call
2094<2096		2708<2901	MEMORY TO MEMORY	*Call
2094<2096		2708<2902	MEMORY TO MEMORY	*Call
2094<2096		2708<2903	MEMORY TO MEMORY	*Call
2094<2096		2708<2904	MEMORY TO MEMORY	*Call
2094<2096		2708<2905	MEMORY TO MEMORY	*Call
2094<2096		2708<2906	MEMORY TO MEMORY	*Call
2094<2096		2708<2907	MEMORY TO MEMORY	*Call
2094<2096		2708<2908	MEMORY TO MEMORY	*Call
2094<2096		4500<4900	ZERO-WAY TO ZERO-WAY	*Call
2094<2096		4500<4944	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4947	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4948	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4951	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4952	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4954	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4955	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4956	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4958	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4959	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4960	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4962	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4963	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4964	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4966	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4967	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4968	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4969	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<4970	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4971	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4972	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4973	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<4974	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4975	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4976	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4977	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<4978	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4979	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4980	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4981	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<4982	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4983	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4984	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4985	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<4986	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4987	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4988	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4989	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<4990	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4991	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4992	4-WAY TO ZERO-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4500<4993	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<4994	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4995	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<4996	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<4997	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<4998	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<4999	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<5000	4-WAY TO ZERO-WAY	*Call
2094<2096		4500<5001	1-WAY TO ZERO-WAY	*Call
2094<2096		4500<5002	2-WAY TO ZERO-WAY	*Call
2094<2096		4500<5003	3-WAY TO ZERO-WAY	*Call
2094<2096		4500<5004	4-WAY TO ZERO-WAY	*Call
2094<2096		4501<4900	ZERO-WAY TO 1-WAY	*Call
2094<2096		4501<4944	4-WAY TO 1-WAY	*Call
2094<2096		4501<4947	3-WAY TO 1-WAY	*Call
2094<2096		4501<4948	4-WAY TO 1-WAY	*Call
2094<2096		4501<4951	3-WAY TO 1-WAY	*Call
2094<2096		4501<4952	4-WAY TO 1-WAY	*Call
2094<2096		4501<4954	2-WAY TO 1-WAY	*Call
2094<2096		4501<4955	3-WAY TO 1-WAY	*Call
2094<2096		4501<4956	4-WAY TO 1-WAY	*Call
2094<2096		4501<4958	2-WAY TO 1-WAY	*Call
2094<2096		4501<4959	3-WAY TO 1-WAY	*Call
2094<2096		4501<4960	4-WAY TO 1-WAY	*Call
2094<2096		4501<4962	2-WAY TO 1-WAY	*Call
2094<2096		4501<4963	3-WAY TO 1-WAY	*Call
2094<2096		4501<4964	4-WAY TO 1-WAY	*Call
2094<2096		4501<4966	2-WAY TO 1-WAY	*Call
2094<2096		4501<4967	3-WAY TO 1-WAY	*Call
2094<2096		4501<4968	4-WAY TO 1-WAY	*Call
2094<2096		4501<4969	1-WAY TO 1-WAY	*Call
2094<2096		4501<4970	2-WAY TO 1-WAY	*Call
2094<2096		4501<4971	3-WAY TO 1-WAY	*Call
2094<2096		4501<4972	4-WAY TO 1-WAY	*Call
2094<2096		4501<4973	1-WAY TO 1-WAY	*Call
2094<2096		4501<4974	2-WAY TO 1-WAY	*Call
2094<2096		4501<4975	3-WAY TO 1-WAY	*Call
2094<2096		4501<4976	4-WAY TO 1-WAY	*Call
2094<2096		4501<4977	1-WAY TO 1-WAY	*Call
2094<2096		4501<4978	2-WAY TO 1-WAY	*Call
2094<2096		4501<4979	3-WAY TO 1-WAY	*Call
2094<2096		4501<4980	4-WAY TO 1-WAY	*Call
2094<2096		4501<4981	1-WAY TO 1-WAY	*Call
2094<2096		4501<4982	2-WAY TO 1-WAY	*Call
2094<2096		4501<4983	3-WAY TO 1-WAY	*Call
2094<2096		4501<4984	4-WAY TO 1-WAY	*Call
2094<2096		4501<4985	1-WAY TO 1-WAY	*Call
2094<2096		4501<4986	2-WAY TO 1-WAY	*Call
2094<2096		4501<4987	3-WAY TO 1-WAY	*Call
2094<2096		4501<4988	4-WAY TO 1-WAY	*Call
2094<2096		4501<4989	1-WAY TO 1-WAY	*Call
2094<2096		4501<4990	2-WAY TO 1-WAY	*Call
2094<2096		4501<4991	3-WAY TO 1-WAY	*Call
2094<2096		4501<4992	4-WAY TO 1-WAY	*Call
2094<2096		4501<4993	1-WAY TO 1-WAY	*Call
2094<2096		4501<4994	2-WAY TO 1-WAY	*Call
2094<2096		4501<4995	3-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4501<4996	4-WAY TO 1-WAY	*Call
2094<2096		4501<4997	1-WAY TO 1-WAY	*Call
2094<2096		4501<4998	2-WAY TO 1-WAY	*Call
2094<2096		4501<4999	3-WAY TO 1-WAY	*Call
2094<2096		4501<5000	4-WAY TO 1-WAY	*Call
2094<2096		4501<5001	1-WAY TO 1-WAY	*Call
2094<2096		4501<5002	2-WAY TO 1-WAY	*Call
2094<2096		4501<5003	3-WAY TO 1-WAY	*Call
2094<2096		4501<5004	4-WAY TO 1-WAY	*Call
2094<2096		4502<4900	ZERO-WAY TO 2-WAY	*Call
2094<2096		4502<4944	4-WAY TO 2-WAY	*Call
2094<2096		4502<4947	3-WAY TO 2-WAY	*Call
2094<2096		4502<4948	4-WAY TO 2-WAY	*Call
2094<2096		4502<4951	3-WAY TO 2-WAY	*Call
2094<2096		4502<4952	4-WAY TO 2-WAY	*Call
2094<2096		4502<4954	2-WAY TO 2-WAY	*Call
2094<2096		4502<4955	3-WAY TO 2-WAY	*Call
2094<2096		4502<4956	4-WAY TO 2-WAY	*Call
2094<2096		4502<4958	2-WAY TO 2-WAY	*Call
2094<2096		4502<4959	3-WAY TO 2-WAY	*Call
2094<2096		4502<4960	4-WAY TO 2-WAY	*Call
2094<2096		4502<4962	2-WAY TO 2-WAY	*Call
2094<2096		4502<4963	3-WAY TO 2-WAY	*Call
2094<2096		4502<4964	4-WAY TO 2-WAY	*Call
2094<2096		4502<4966	2-WAY TO 2-WAY	*Call
2094<2096		4502<4967	3-WAY TO 2-WAY	*Call
2094<2096		4502<4968	4-WAY TO 2-WAY	*Call
2094<2096		4502<4969	1-WAY TO 2-WAY	*Call
2094<2096		4502<4970	2-WAY TO 2-WAY	*Call
2094<2096		4502<4971	3-WAY TO 2-WAY	*Call
2094<2096		4502<4972	4-WAY TO 2-WAY	*Call
2094<2096		4502<4973	1-WAY TO 2-WAY	*Call
2094<2096		4502<4974	2-WAY TO 2-WAY	*Call
2094<2096		4502<4975	3-WAY TO 2-WAY	*Call
2094<2096		4502<4976	4-WAY TO 2-WAY	*Call
2094<2096		4502<4977	1-WAY TO 2-WAY	*Call
2094<2096		4502<4978	2-WAY TO 2-WAY	*Call
2094<2096		4502<4979	3-WAY TO 2-WAY	*Call
2094<2096		4502<4980	4-WAY TO 2-WAY	*Call
2094<2096		4502<4981	1-WAY TO 2-WAY	*Call
2094<2096		4502<4982	2-WAY TO 2-WAY	*Call
2094<2096		4502<4983	3-WAY TO 2-WAY	*Call
2094<2096		4502<4984	4-WAY TO 2-WAY	*Call
2094<2096		4502<4985	1-WAY TO 2-WAY	*Call
2094<2096		4502<4986	2-WAY TO 2-WAY	*Call
2094<2096		4502<4987	3-WAY TO 2-WAY	*Call
2094<2096		4502<4988	4-WAY TO 2-WAY	*Call
2094<2096		4502<4989	1-WAY TO 2-WAY	*Call
2094<2096		4502<4990	2-WAY TO 2-WAY	*Call
2094<2096		4502<4991	3-WAY TO 2-WAY	*Call
2094<2096		4502<4992	4-WAY TO 2-WAY	*Call
2094<2096		4502<4993	1-WAY TO 2-WAY	*Call
2094<2096		4502<4994	2-WAY TO 2-WAY	*Call
2094<2096		4502<4995	3-WAY TO 2-WAY	*Call
2094<2096		4502<4996	4-WAY TO 2-WAY	*Call
2094<2096		4502<4997	1-WAY TO 2-WAY	*Call
2094<2096		4502<4998	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4502<4999	3-WAY TO 2-WAY	*Call
2094<2096		4502<5000	4-WAY TO 2-WAY	*Call
2094<2096		4502<5001	1-WAY TO 2-WAY	*Call
2094<2096		4502<5002	2-WAY TO 2-WAY	*Call
2094<2096		4502<5003	3-WAY TO 2-WAY	*Call
2094<2096		4502<5004	4-WAY TO 2-WAY	*Call
2094<2096		4503<4900	ZERO-WAY TO 3-WAY	*Call
2094<2096		4503<4944	4-WAY TO 3-WAY	*Call
2094<2096		4503<4947	3-WAY TO 3-WAY	*Call
2094<2096		4503<4948	4-WAY TO 3-WAY	*Call
2094<2096		4503<4951	3-WAY TO 3-WAY	*Call
2094<2096		4503<4952	4-WAY TO 3-WAY	*Call
2094<2096		4503<4954	2-WAY TO 3-WAY	*Call
2094<2096		4503<4955	3-WAY TO 3-WAY	*Call
2094<2096		4503<4956	4-WAY TO 3-WAY	*Call
2094<2096		4503<4958	2-WAY TO 3-WAY	*Call
2094<2096		4503<4959	3-WAY TO 3-WAY	*Call
2094<2096		4503<4960	4-WAY TO 3-WAY	*Call
2094<2096		4503<4962	2-WAY TO 3-WAY	*Call
2094<2096		4503<4963	3-WAY TO 3-WAY	*Call
2094<2096		4503<4964	4-WAY TO 3-WAY	*Call
2094<2096		4503<4966	2-WAY TO 3-WAY	*Call
2094<2096		4503<4967	3-WAY TO 3-WAY	*Call
2094<2096		4503<4968	4-WAY TO 3-WAY	*Call
2094<2096		4503<4969	1-WAY TO 3-WAY	*Call
2094<2096		4503<4970	2-WAY TO 3-WAY	*Call
2094<2096		4503<4971	3-WAY TO 3-WAY	*Call
2094<2096		4503<4972	4-WAY TO 3-WAY	*Call
2094<2096		4503<4973	1-WAY TO 3-WAY	*Call
2094<2096		4503<4974	2-WAY TO 3-WAY	*Call
2094<2096		4503<4975	3-WAY TO 3-WAY	*Call
2094<2096		4503<4976	4-WAY TO 3-WAY	*Call
2094<2096		4503<4977	1-WAY TO 3-WAY	*Call
2094<2096		4503<4978	2-WAY TO 3-WAY	*Call
2094<2096		4503<4979	3-WAY TO 3-WAY	*Call
2094<2096		4503<4980	4-WAY TO 3-WAY	*Call
2094<2096		4503<4981	1-WAY TO 3-WAY	*Call
2094<2096		4503<4982	2-WAY TO 3-WAY	*Call
2094<2096		4503<4983	3-WAY TO 3-WAY	*Call
2094<2096		4503<4984	4-WAY TO 3-WAY	*Call
2094<2096		4503<4985	1-WAY TO 3-WAY	*Call
2094<2096		4503<4986	2-WAY TO 3-WAY	*Call
2094<2096		4503<4987	3-WAY TO 3-WAY	*Call
2094<2096		4503<4988	4-WAY TO 3-WAY	*Call
2094<2096		4503<4989	1-WAY TO 3-WAY	*Call
2094<2096		4503<4990	2-WAY TO 3-WAY	*Call
2094<2096		4503<4991	3-WAY TO 3-WAY	*Call
2094<2096		4503<4992	4-WAY TO 3-WAY	*Call
2094<2096		4503<4993	1-WAY TO 3-WAY	*Call
2094<2096		4503<4994	2-WAY TO 3-WAY	*Call
2094<2096		4503<4995	3-WAY TO 3-WAY	*Call
2094<2096		4503<4996	4-WAY TO 3-WAY	*Call
2094<2096		4503<4997	1-WAY TO 3-WAY	*Call
2094<2096		4503<4998	2-WAY TO 3-WAY	*Call
2094<2096		4503<4999	3-WAY TO 3-WAY	*Call
2094<2096		4503<5000	4-WAY TO 3-WAY	*Call
2094<2096		4503<5001	1-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4503<5002	2-WAY TO 3-WAY	*Call
2094<2096		4503<5003	3-WAY TO 3-WAY	*Call
2094<2096		4503<5004	4-WAY TO 3-WAY	*Call
2094<2096		4504<4900	ZERO-WAY TO 4-WAY	*Call
2094<2096		4504<4944	4-WAY TO 4-WAY	*Call
2094<2096		4504<4947	3-WAY TO 4-WAY	*Call
2094<2096		4504<4948	4-WAY TO 4-WAY	*Call
2094<2096		4504<4951	3-WAY TO 4-WAY	*Call
2094<2096		4504<4952	4-WAY TO 4-WAY	*Call
2094<2096		4504<4954	2-WAY TO 4-WAY	*Call
2094<2096		4504<4955	3-WAY TO 4-WAY	*Call
2094<2096		4504<4956	4-WAY TO 4-WAY	*Call
2094<2096		4504<4958	2-WAY TO 4-WAY	*Call
2094<2096		4504<4959	3-WAY TO 4-WAY	*Call
2094<2096		4504<4960	4-WAY TO 4-WAY	*Call
2094<2096		4504<4962	2-WAY TO 4-WAY	*Call
2094<2096		4504<4963	3-WAY TO 4-WAY	*Call
2094<2096		4504<4964	4-WAY TO 4-WAY	*Call
2094<2096		4504<4966	2-WAY TO 4-WAY	*Call
2094<2096		4504<4967	3-WAY TO 4-WAY	*Call
2094<2096		4504<4968	4-WAY TO 4-WAY	*Call
2094<2096		4504<4969	1-WAY TO 4-WAY	*Call
2094<2096		4504<4970	2-WAY TO 4-WAY	*Call
2094<2096		4504<4971	3-WAY TO 4-WAY	*Call
2094<2096		4504<4972	4-WAY TO 4-WAY	*Call
2094<2096		4504<4973	1-WAY TO 4-WAY	*Call
2094<2096		4504<4974	2-WAY TO 4-WAY	*Call
2094<2096		4504<4975	3-WAY TO 4-WAY	*Call
2094<2096		4504<4976	4-WAY TO 4-WAY	*Call
2094<2096		4504<4977	1-WAY TO 4-WAY	*Call
2094<2096		4504<4978	2-WAY TO 4-WAY	*Call
2094<2096		4504<4979	3-WAY TO 4-WAY	*Call
2094<2096		4504<4980	4-WAY TO 4-WAY	*Call
2094<2096		4504<4981	1-WAY TO 4-WAY	*Call
2094<2096		4504<4982	2-WAY TO 4-WAY	*Call
2094<2096		4504<4983	3-WAY TO 4-WAY	*Call
2094<2096		4504<4984	4-WAY TO 4-WAY	*Call
2094<2096		4504<4985	1-WAY TO 4-WAY	*Call
2094<2096		4504<4986	2-WAY TO 4-WAY	*Call
2094<2096		4504<4987	3-WAY TO 4-WAY	*Call
2094<2096		4504<4988	4-WAY TO 4-WAY	*Call
2094<2096		4504<4989	1-WAY TO 4-WAY	*Call
2094<2096		4504<4990	2-WAY TO 4-WAY	*Call
2094<2096		4504<4991	3-WAY TO 4-WAY	*Call
2094<2096		4504<4992	4-WAY TO 4-WAY	*Call
2094<2096		4504<4993	1-WAY TO 4-WAY	*Call
2094<2096		4504<4994	2-WAY TO 4-WAY	*Call
2094<2096		4504<4995	3-WAY TO 4-WAY	*Call
2094<2096		4504<4996	4-WAY TO 4-WAY	*Call
2094<2096		4504<4997	1-WAY TO 4-WAY	*Call
2094<2096		4504<4998	2-WAY TO 4-WAY	*Call
2094<2096		4504<4999	3-WAY TO 4-WAY	*Call
2094<2096		4504<5000	4-WAY TO 4-WAY	*Call
2094<2096		4504<5001	1-WAY TO 4-WAY	*Call
2094<2096		4504<5002	2-WAY TO 4-WAY	*Call
2094<2096		4504<5003	3-WAY TO 4-WAY	*Call
2094<2096		4504<5004	4-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4505<4900	ZERO-WAY TO 5-WAY	*Call
2094<2096		4505<4944	4-WAY TO 5-WAY	*Call
2094<2096		4505<4947	3-WAY TO 5-WAY	*Call
2094<2096		4505<4948	4-WAY TO 5-WAY	*Call
2094<2096		4505<4951	3-WAY TO 5-WAY	*Call
2094<2096		4505<4952	4-WAY TO 5-WAY	*Call
2094<2096		4505<4954	2-WAY TO 5-WAY	*Call
2094<2096		4505<4955	3-WAY TO 5-WAY	*Call
2094<2096		4505<4956	4-WAY TO 5-WAY	*Call
2094<2096		4505<4958	2-WAY TO 5-WAY	*Call
2094<2096		4505<4959	3-WAY TO 5-WAY	*Call
2094<2096		4505<4960	4-WAY TO 5-WAY	*Call
2094<2096		4505<4962	2-WAY TO 5-WAY	*Call
2094<2096		4505<4963	3-WAY TO 5-WAY	*Call
2094<2096		4505<4964	4-WAY TO 5-WAY	*Call
2094<2096		4505<4966	2-WAY TO 5-WAY	*Call
2094<2096		4505<4967	3-WAY TO 5-WAY	*Call
2094<2096		4505<4968	4-WAY TO 5-WAY	*Call
2094<2096		4505<4969	1-WAY TO 5-WAY	*Call
2094<2096		4505<4970	2-WAY TO 5-WAY	*Call
2094<2096		4505<4971	3-WAY TO 5-WAY	*Call
2094<2096		4505<4972	4-WAY TO 5-WAY	*Call
2094<2096		4505<4973	1-WAY TO 5-WAY	*Call
2094<2096		4505<4974	2-WAY TO 5-WAY	*Call
2094<2096		4505<4975	3-WAY TO 5-WAY	*Call
2094<2096		4505<4976	4-WAY TO 5-WAY	*Call
2094<2096		4505<4977	1-WAY TO 5-WAY	*Call
2094<2096		4505<4978	2-WAY TO 5-WAY	*Call
2094<2096		4505<4979	3-WAY TO 5-WAY	*Call
2094<2096		4505<4980	4-WAY TO 5-WAY	*Call
2094<2096		4505<4981	1-WAY TO 5-WAY	*Call
2094<2096		4505<4982	2-WAY TO 5-WAY	*Call
2094<2096		4505<4983	3-WAY TO 5-WAY	*Call
2094<2096		4505<4984	4-WAY TO 5-WAY	*Call
2094<2096		4505<4985	1-WAY TO 5-WAY	*Call
2094<2096		4505<4986	2-WAY TO 5-WAY	*Call
2094<2096		4505<4987	3-WAY TO 5-WAY	*Call
2094<2096		4505<4988	4-WAY TO 5-WAY	*Call
2094<2096		4505<4989	1-WAY TO 5-WAY	*Call
2094<2096		4505<4990	2-WAY TO 5-WAY	*Call
2094<2096		4505<4991	3-WAY TO 5-WAY	*Call
2094<2096		4505<4992	4-WAY TO 5-WAY	*Call
2094<2096		4505<4993	1-WAY TO 5-WAY	*Call
2094<2096		4505<4994	2-WAY TO 5-WAY	*Call
2094<2096		4505<4995	3-WAY TO 5-WAY	*Call
2094<2096		4505<4996	4-WAY TO 5-WAY	*Call
2094<2096		4505<4997	1-WAY TO 5-WAY	*Call
2094<2096		4505<4998	2-WAY TO 5-WAY	*Call
2094<2096		4505<4999	3-WAY TO 5-WAY	*Call
2094<2096		4505<5000	4-WAY TO 5-WAY	*Call
2094<2096		4505<5001	1-WAY TO 5-WAY	*Call
2094<2096		4505<5002	2-WAY TO 5-WAY	*Call
2094<2096		4505<5003	3-WAY TO 5-WAY	*Call
2094<2096		4505<5004	4-WAY TO 5-WAY	*Call
2094<2096		4506<4900	ZERO-WAY TO 6-WAY	*Call
2094<2096		4506<4944	4-WAY TO 6-WAY	*Call
2094<2096		4506<4947	3-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4506<4948	4-WAY TO 6-WAY	*Call
2094<2096		4506<4951	3-WAY TO 6-WAY	*Call
2094<2096		4506<4952	4-WAY TO 6-WAY	*Call
2094<2096		4506<4954	2-WAY TO 6-WAY	*Call
2094<2096		4506<4955	3-WAY TO 6-WAY	*Call
2094<2096		4506<4956	4-WAY TO 6-WAY	*Call
2094<2096		4506<4958	2-WAY TO 6-WAY	*Call
2094<2096		4506<4959	3-WAY TO 6-WAY	*Call
2094<2096		4506<4960	4-WAY TO 6-WAY	*Call
2094<2096		4506<4962	2-WAY TO 6-WAY	*Call
2094<2096		4506<4963	3-WAY TO 6-WAY	*Call
2094<2096		4506<4964	4-WAY TO 6-WAY	*Call
2094<2096		4506<4966	2-WAY TO 6-WAY	*Call
2094<2096		4506<4967	3-WAY TO 6-WAY	*Call
2094<2096		4506<4968	4-WAY TO 6-WAY	*Call
2094<2096		4506<4969	1-WAY TO 6-WAY	*Call
2094<2096		4506<4970	2-WAY TO 6-WAY	*Call
2094<2096		4506<4971	3-WAY TO 6-WAY	*Call
2094<2096		4506<4972	4-WAY TO 6-WAY	*Call
2094<2096		4506<4973	1-WAY TO 6-WAY	*Call
2094<2096		4506<4974	2-WAY TO 6-WAY	*Call
2094<2096		4506<4975	3-WAY TO 6-WAY	*Call
2094<2096		4506<4976	4-WAY TO 6-WAY	*Call
2094<2096		4506<4977	1-WAY TO 6-WAY	*Call
2094<2096		4506<4978	2-WAY TO 6-WAY	*Call
2094<2096		4506<4979	3-WAY TO 6-WAY	*Call
2094<2096		4506<4980	4-WAY TO 6-WAY	*Call
2094<2096		4506<4981	1-WAY TO 6-WAY	*Call
2094<2096		4506<4982	2-WAY TO 6-WAY	*Call
2094<2096		4506<4983	3-WAY TO 6-WAY	*Call
2094<2096		4506<4984	4-WAY TO 6-WAY	*Call
2094<2096		4506<4985	1-WAY TO 6-WAY	*Call
2094<2096		4506<4986	2-WAY TO 6-WAY	*Call
2094<2096		4506<4987	3-WAY TO 6-WAY	*Call
2094<2096		4506<4988	4-WAY TO 6-WAY	*Call
2094<2096		4506<4989	1-WAY TO 6-WAY	*Call
2094<2096		4506<4990	2-WAY TO 6-WAY	*Call
2094<2096		4506<4991	3-WAY TO 6-WAY	*Call
2094<2096		4506<4992	4-WAY TO 6-WAY	*Call
2094<2096		4506<4993	1-WAY TO 6-WAY	*Call
2094<2096		4506<4994	2-WAY TO 6-WAY	*Call
2094<2096		4506<4995	3-WAY TO 6-WAY	*Call
2094<2096		4506<4996	4-WAY TO 6-WAY	*Call
2094<2096		4506<4997	1-WAY TO 6-WAY	*Call
2094<2096		4506<4998	2-WAY TO 6-WAY	*Call
2094<2096		4506<4999	3-WAY TO 6-WAY	*Call
2094<2096		4506<5000	4-WAY TO 6-WAY	*Call
2094<2096		4506<5001	1-WAY TO 6-WAY	*Call
2094<2096		4506<5002	2-WAY TO 6-WAY	*Call
2094<2096		4506<5003	3-WAY TO 6-WAY	*Call
2094<2096		4506<5004	4-WAY TO 6-WAY	*Call
2094<2096		4507<4900	ZERO-WAY TO 7-WAY	*Call
2094<2096		4507<4944	4-WAY TO 7-WAY	*Call
2094<2096		4507<4947	3-WAY TO 7-WAY	*Call
2094<2096		4507<4948	4-WAY TO 7-WAY	*Call
2094<2096		4507<4951	3-WAY TO 7-WAY	*Call
2094<2096		4507<4952	4-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4507<4954	2-WAY TO 7-WAY	*Call
2094<2096		4507<4955	3-WAY TO 7-WAY	*Call
2094<2096		4507<4956	4-WAY TO 7-WAY	*Call
2094<2096		4507<4958	2-WAY TO 7-WAY	*Call
2094<2096		4507<4959	3-WAY TO 7-WAY	*Call
2094<2096		4507<4960	4-WAY TO 7-WAY	*Call
2094<2096		4507<4962	2-WAY TO 7-WAY	*Call
2094<2096		4507<4963	3-WAY TO 7-WAY	*Call
2094<2096		4507<4964	4-WAY TO 7-WAY	*Call
2094<2096		4507<4966	2-WAY TO 7-WAY	*Call
2094<2096		4507<4967	3-WAY TO 7-WAY	*Call
2094<2096		4507<4968	4-WAY TO 7-WAY	*Call
2094<2096		4507<4969	1-WAY TO 7-WAY	*Call
2094<2096		4507<4970	2-WAY TO 7-WAY	*Call
2094<2096		4507<4971	3-WAY TO 7-WAY	*Call
2094<2096		4507<4972	4-WAY TO 7-WAY	*Call
2094<2096		4507<4973	1-WAY TO 7-WAY	*Call
2094<2096		4507<4974	2-WAY TO 7-WAY	*Call
2094<2096		4507<4975	3-WAY TO 7-WAY	*Call
2094<2096		4507<4976	4-WAY TO 7-WAY	*Call
2094<2096		4507<4977	1-WAY TO 7-WAY	*Call
2094<2096		4507<4978	2-WAY TO 7-WAY	*Call
2094<2096		4507<4979	3-WAY TO 7-WAY	*Call
2094<2096		4507<4980	4-WAY TO 7-WAY	*Call
2094<2096		4507<4981	1-WAY TO 7-WAY	*Call
2094<2096		4507<4982	2-WAY TO 7-WAY	*Call
2094<2096		4507<4983	3-WAY TO 7-WAY	*Call
2094<2096		4507<4984	4-WAY TO 7-WAY	*Call
2094<2096		4507<4985	1-WAY TO 7-WAY	*Call
2094<2096		4507<4986	2-WAY TO 7-WAY	*Call
2094<2096		4507<4987	3-WAY TO 7-WAY	*Call
2094<2096		4507<4988	4-WAY TO 7-WAY	*Call
2094<2096		4507<4989	1-WAY TO 7-WAY	*Call
2094<2096		4507<4990	2-WAY TO 7-WAY	*Call
2094<2096		4507<4991	3-WAY TO 7-WAY	*Call
2094<2096		4507<4992	4-WAY TO 7-WAY	*Call
2094<2096		4507<4993	1-WAY TO 7-WAY	*Call
2094<2096		4507<4994	2-WAY TO 7-WAY	*Call
2094<2096		4507<4995	3-WAY TO 7-WAY	*Call
2094<2096		4507<4996	4-WAY TO 7-WAY	*Call
2094<2096		4507<4997	1-WAY TO 7-WAY	*Call
2094<2096		4507<4998	2-WAY TO 7-WAY	*Call
2094<2096		4507<4999	3-WAY TO 7-WAY	*Call
2094<2096		4507<5000	4-WAY TO 7-WAY	*Call
2094<2096		4507<5001	1-WAY TO 7-WAY	*Call
2094<2096		4507<5002	2-WAY TO 7-WAY	*Call
2094<2096		4507<5003	3-WAY TO 7-WAY	*Call
2094<2096		4507<5004	4-WAY TO 7-WAY	*Call
2094<2096		4508<4900	ZERO-WAY TO 8-WAY	*Call
2094<2096		4508<4944	4-WAY TO 8-WAY	*Call
2094<2096		4508<4947	3-WAY TO 8-WAY	*Call
2094<2096		4508<4948	4-WAY TO 8-WAY	*Call
2094<2096		4508<4951	3-WAY TO 8-WAY	*Call
2094<2096		4508<4952	4-WAY TO 8-WAY	*Call
2094<2096		4508<4954	2-WAY TO 8-WAY	*Call
2094<2096		4508<4955	3-WAY TO 8-WAY	*Call
2094<2096		4508<4956	4-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4508<4958	2-WAY TO 8-WAY	*Call
2094<2096		4508<4959	3-WAY TO 8-WAY	*Call
2094<2096		4508<4960	4-WAY TO 8-WAY	*Call
2094<2096		4508<4962	2-WAY TO 8-WAY	*Call
2094<2096		4508<4963	3-WAY TO 8-WAY	*Call
2094<2096		4508<4964	4-WAY TO 8-WAY	*Call
2094<2096		4508<4966	2-WAY TO 8-WAY	*Call
2094<2096		4508<4967	3-WAY TO 8-WAY	*Call
2094<2096		4508<4968	4-WAY TO 8-WAY	*Call
2094<2096		4508<4969	1-WAY TO 8-WAY	*Call
2094<2096		4508<4970	2-WAY TO 8-WAY	*Call
2094<2096		4508<4971	3-WAY TO 8-WAY	*Call
2094<2096		4508<4972	4-WAY TO 8-WAY	*Call
2094<2096		4508<4973	1-WAY TO 8-WAY	*Call
2094<2096		4508<4974	2-WAY TO 8-WAY	*Call
2094<2096		4508<4975	3-WAY TO 8-WAY	*Call
2094<2096		4508<4976	4-WAY TO 8-WAY	*Call
2094<2096		4508<4977	1-WAY TO 8-WAY	*Call
2094<2096		4508<4978	2-WAY TO 8-WAY	*Call
2094<2096		4508<4979	3-WAY TO 8-WAY	*Call
2094<2096		4508<4980	4-WAY TO 8-WAY	*Call
2094<2096		4508<4981	1-WAY TO 8-WAY	*Call
2094<2096		4508<4982	2-WAY TO 8-WAY	*Call
2094<2096		4508<4983	3-WAY TO 8-WAY	*Call
2094<2096		4508<4984	4-WAY TO 8-WAY	*Call
2094<2096		4508<4985	1-WAY TO 8-WAY	*Call
2094<2096		4508<4986	2-WAY TO 8-WAY	*Call
2094<2096		4508<4987	3-WAY TO 8-WAY	*Call
2094<2096		4508<4988	4-WAY TO 8-WAY	*Call
2094<2096		4508<4989	1-WAY TO 8-WAY	*Call
2094<2096		4508<4990	2-WAY TO 8-WAY	*Call
2094<2096		4508<4991	3-WAY TO 8-WAY	*Call
2094<2096		4508<4992	4-WAY TO 8-WAY	*Call
2094<2096		4508<4993	1-WAY TO 8-WAY	*Call
2094<2096		4508<4994	2-WAY TO 8-WAY	*Call
2094<2096		4508<4995	3-WAY TO 8-WAY	*Call
2094<2096		4508<4996	4-WAY TO 8-WAY	*Call
2094<2096		4508<4997	1-WAY TO 8-WAY	*Call
2094<2096		4508<4998	2-WAY TO 8-WAY	*Call
2094<2096		4508<4999	3-WAY TO 8-WAY	*Call
2094<2096		4508<5000	4-WAY TO 8-WAY	*Call
2094<2096		4508<5001	1-WAY TO 8-WAY	*Call
2094<2096		4508<5002	2-WAY TO 8-WAY	*Call
2094<2096		4508<5003	3-WAY TO 8-WAY	*Call
2094<2096		4508<5004	4-WAY TO 8-WAY	*Call
2094<2096		4601<4900	ZERO-WAY TO 1-WAY	*Call
2094<2096		4601<4944	4-WAY TO 1-WAY	*Call
2094<2096		4601<4947	3-WAY TO 1-WAY	*Call
2094<2096		4601<4948	4-WAY TO 1-WAY	*Call
2094<2096		4601<4951	3-WAY TO 1-WAY	*Call
2094<2096		4601<4952	4-WAY TO 1-WAY	*Call
2094<2096		4601<4954	2-WAY TO 1-WAY	*Call
2094<2096		4601<4955	3-WAY TO 1-WAY	*Call
2094<2096		4601<4956	4-WAY TO 1-WAY	*Call
2094<2096		4601<4958	2-WAY TO 1-WAY	*Call
2094<2096		4601<4959	3-WAY TO 1-WAY	*Call
2094<2096		4601<4960	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4601<4962	2-WAY TO 1-WAY	*Call
2094<2096		4601<4963	3-WAY TO 1-WAY	*Call
2094<2096		4601<4964	4-WAY TO 1-WAY	*Call
2094<2096		4601<4966	2-WAY TO 1-WAY	*Call
2094<2096		4601<4967	3-WAY TO 1-WAY	*Call
2094<2096		4601<4968	4-WAY TO 1-WAY	*Call
2094<2096		4601<4969	1-WAY TO 1-WAY	*Call
2094<2096		4601<4970	2-WAY TO 1-WAY	*Call
2094<2096		4601<4971	3-WAY TO 1-WAY	*Call
2094<2096		4601<4972	4-WAY TO 1-WAY	*Call
2094<2096		4601<4973	1-WAY TO 1-WAY	*Call
2094<2096		4601<4974	2-WAY TO 1-WAY	*Call
2094<2096		4601<4975	3-WAY TO 1-WAY	*Call
2094<2096		4601<4976	4-WAY TO 1-WAY	*Call
2094<2096		4601<4977	1-WAY TO 1-WAY	*Call
2094<2096		4601<4978	2-WAY TO 1-WAY	*Call
2094<2096		4601<4979	3-WAY TO 1-WAY	*Call
2094<2096		4601<4980	4-WAY TO 1-WAY	*Call
2094<2096		4601<4981	1-WAY TO 1-WAY	*Call
2094<2096		4601<4982	2-WAY TO 1-WAY	*Call
2094<2096		4601<4983	3-WAY TO 1-WAY	*Call
2094<2096		4601<4984	4-WAY TO 1-WAY	*Call
2094<2096		4601<4985	1-WAY TO 1-WAY	*Call
2094<2096		4601<4986	2-WAY TO 1-WAY	*Call
2094<2096		4601<4987	3-WAY TO 1-WAY	*Call
2094<2096		4601<4988	4-WAY TO 1-WAY	*Call
2094<2096		4601<4989	1-WAY TO 1-WAY	*Call
2094<2096		4601<4990	2-WAY TO 1-WAY	*Call
2094<2096		4601<4991	3-WAY TO 1-WAY	*Call
2094<2096		4601<4992	4-WAY TO 1-WAY	*Call
2094<2096		4601<4993	1-WAY TO 1-WAY	*Call
2094<2096		4601<4994	2-WAY TO 1-WAY	*Call
2094<2096		4601<4995	3-WAY TO 1-WAY	*Call
2094<2096		4601<4996	4-WAY TO 1-WAY	*Call
2094<2096		4601<4997	1-WAY TO 1-WAY	*Call
2094<2096		4601<4998	2-WAY TO 1-WAY	*Call
2094<2096		4601<4999	3-WAY TO 1-WAY	*Call
2094<2096		4601<5000	4-WAY TO 1-WAY	*Call
2094<2096		4601<5001	1-WAY TO 1-WAY	*Call
2094<2096		4601<5002	2-WAY TO 1-WAY	*Call
2094<2096		4601<5003	3-WAY TO 1-WAY	*Call
2094<2096		4601<5004	4-WAY TO 1-WAY	*Call
2094<2096		4602<4900	ZERO-WAY TO 2-WAY	*Call
2094<2096		4602<4944	4-WAY TO 2-WAY	*Call
2094<2096		4602<4947	3-WAY TO 2-WAY	*Call
2094<2096		4602<4948	4-WAY TO 2-WAY	*Call
2094<2096		4602<4951	3-WAY TO 2-WAY	*Call
2094<2096		4602<4952	4-WAY TO 2-WAY	*Call
2094<2096		4602<4954	2-WAY TO 2-WAY	*Call
2094<2096		4602<4955	3-WAY TO 2-WAY	*Call
2094<2096		4602<4956	4-WAY TO 2-WAY	*Call
2094<2096		4602<4958	2-WAY TO 2-WAY	*Call
2094<2096		4602<4959	3-WAY TO 2-WAY	*Call
2094<2096		4602<4960	4-WAY TO 2-WAY	*Call
2094<2096		4602<4962	2-WAY TO 2-WAY	*Call
2094<2096		4602<4963	3-WAY TO 2-WAY	*Call
2094<2096		4602<4964	4-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4602<4966	2-WAY TO 2-WAY	*Call
2094<2096		4602<4967	3-WAY TO 2-WAY	*Call
2094<2096		4602<4968	4-WAY TO 2-WAY	*Call
2094<2096		4602<4969	1-WAY TO 2-WAY	*Call
2094<2096		4602<4970	2-WAY TO 2-WAY	*Call
2094<2096		4602<4971	3-WAY TO 2-WAY	*Call
2094<2096		4602<4972	4-WAY TO 2-WAY	*Call
2094<2096		4602<4973	1-WAY TO 2-WAY	*Call
2094<2096		4602<4974	2-WAY TO 2-WAY	*Call
2094<2096		4602<4975	3-WAY TO 2-WAY	*Call
2094<2096		4602<4976	4-WAY TO 2-WAY	*Call
2094<2096		4602<4977	1-WAY TO 2-WAY	*Call
2094<2096		4602<4978	2-WAY TO 2-WAY	*Call
2094<2096		4602<4979	3-WAY TO 2-WAY	*Call
2094<2096		4602<4980	4-WAY TO 2-WAY	*Call
2094<2096		4602<4981	1-WAY TO 2-WAY	*Call
2094<2096		4602<4982	2-WAY TO 2-WAY	*Call
2094<2096		4602<4983	3-WAY TO 2-WAY	*Call
2094<2096		4602<4984	4-WAY TO 2-WAY	*Call
2094<2096		4602<4985	1-WAY TO 2-WAY	*Call
2094<2096		4602<4986	2-WAY TO 2-WAY	*Call
2094<2096		4602<4987	3-WAY TO 2-WAY	*Call
2094<2096		4602<4988	4-WAY TO 2-WAY	*Call
2094<2096		4602<4989	1-WAY TO 2-WAY	*Call
2094<2096		4602<4990	2-WAY TO 2-WAY	*Call
2094<2096		4602<4991	3-WAY TO 2-WAY	*Call
2094<2096		4602<4992	4-WAY TO 2-WAY	*Call
2094<2096		4602<4993	1-WAY TO 2-WAY	*Call
2094<2096		4602<4994	2-WAY TO 2-WAY	*Call
2094<2096		4602<4995	3-WAY TO 2-WAY	*Call
2094<2096		4602<4996	4-WAY TO 2-WAY	*Call
2094<2096		4602<4997	1-WAY TO 2-WAY	*Call
2094<2096		4602<4998	2-WAY TO 2-WAY	*Call
2094<2096		4602<4999	3-WAY TO 2-WAY	*Call
2094<2096		4602<5000	4-WAY TO 2-WAY	*Call
2094<2096		4602<5001	1-WAY TO 2-WAY	*Call
2094<2096		4602<5002	2-WAY TO 2-WAY	*Call
2094<2096		4602<5003	3-WAY TO 2-WAY	*Call
2094<2096		4602<5004	4-WAY TO 2-WAY	*Call
2094<2096		4603<4900	ZERO-WAY TO 3-WAY	*Call
2094<2096		4603<4944	4-WAY TO 3-WAY	*Call
2094<2096		4603<4947	3-WAY TO 3-WAY	*Call
2094<2096		4603<4948	4-WAY TO 3-WAY	*Call
2094<2096		4603<4951	3-WAY TO 3-WAY	*Call
2094<2096		4603<4952	4-WAY TO 3-WAY	*Call
2094<2096		4603<4954	2-WAY TO 3-WAY	*Call
2094<2096		4603<4955	3-WAY TO 3-WAY	*Call
2094<2096		4603<4956	4-WAY TO 3-WAY	*Call
2094<2096		4603<4958	2-WAY TO 3-WAY	*Call
2094<2096		4603<4959	3-WAY TO 3-WAY	*Call
2094<2096		4603<4960	4-WAY TO 3-WAY	*Call
2094<2096		4603<4962	2-WAY TO 3-WAY	*Call
2094<2096		4603<4963	3-WAY TO 3-WAY	*Call
2094<2096		4603<4964	4-WAY TO 3-WAY	*Call
2094<2096		4603<4966	2-WAY TO 3-WAY	*Call
2094<2096		4603<4967	3-WAY TO 3-WAY	*Call
2094<2096		4603<4968	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4603<4969	1-WAY TO 3-WAY	*Call
2094<2096		4603<4970	2-WAY TO 3-WAY	*Call
2094<2096		4603<4971	3-WAY TO 3-WAY	*Call
2094<2096		4603<4972	4-WAY TO 3-WAY	*Call
2094<2096		4603<4973	1-WAY TO 3-WAY	*Call
2094<2096		4603<4974	2-WAY TO 3-WAY	*Call
2094<2096		4603<4975	3-WAY TO 3-WAY	*Call
2094<2096		4603<4976	4-WAY TO 3-WAY	*Call
2094<2096		4603<4977	1-WAY TO 3-WAY	*Call
2094<2096		4603<4978	2-WAY TO 3-WAY	*Call
2094<2096		4603<4979	3-WAY TO 3-WAY	*Call
2094<2096		4603<4980	4-WAY TO 3-WAY	*Call
2094<2096		4603<4981	1-WAY TO 3-WAY	*Call
2094<2096		4603<4982	2-WAY TO 3-WAY	*Call
2094<2096		4603<4983	3-WAY TO 3-WAY	*Call
2094<2096		4603<4984	4-WAY TO 3-WAY	*Call
2094<2096		4603<4985	1-WAY TO 3-WAY	*Call
2094<2096		4603<4986	2-WAY TO 3-WAY	*Call
2094<2096		4603<4987	3-WAY TO 3-WAY	*Call
2094<2096		4603<4988	4-WAY TO 3-WAY	*Call
2094<2096		4603<4989	1-WAY TO 3-WAY	*Call
2094<2096		4603<4990	2-WAY TO 3-WAY	*Call
2094<2096		4603<4991	3-WAY TO 3-WAY	*Call
2094<2096		4603<4992	4-WAY TO 3-WAY	*Call
2094<2096		4603<4993	1-WAY TO 3-WAY	*Call
2094<2096		4603<4994	2-WAY TO 3-WAY	*Call
2094<2096		4603<4995	3-WAY TO 3-WAY	*Call
2094<2096		4603<4996	4-WAY TO 3-WAY	*Call
2094<2096		4603<4997	1-WAY TO 3-WAY	*Call
2094<2096		4603<4998	2-WAY TO 3-WAY	*Call
2094<2096		4603<4999	3-WAY TO 3-WAY	*Call
2094<2096		4603<5000	4-WAY TO 3-WAY	*Call
2094<2096		4603<5001	1-WAY TO 3-WAY	*Call
2094<2096		4603<5002	2-WAY TO 3-WAY	*Call
2094<2096		4603<5003	3-WAY TO 3-WAY	*Call
2094<2096		4603<5004	4-WAY TO 3-WAY	*Call
2094<2096		4604<4900	ZERO-WAY TO 4-WAY	*Call
2094<2096		4604<4944	4-WAY TO 4-WAY	*Call
2094<2096		4604<4947	3-WAY TO 4-WAY	*Call
2094<2096		4604<4948	4-WAY TO 4-WAY	*Call
2094<2096		4604<4951	3-WAY TO 4-WAY	*Call
2094<2096		4604<4952	4-WAY TO 4-WAY	*Call
2094<2096		4604<4954	2-WAY TO 4-WAY	*Call
2094<2096		4604<4955	3-WAY TO 4-WAY	*Call
2094<2096		4604<4956	4-WAY TO 4-WAY	*Call
2094<2096		4604<4958	2-WAY TO 4-WAY	*Call
2094<2096		4604<4959	3-WAY TO 4-WAY	*Call
2094<2096		4604<4960	4-WAY TO 4-WAY	*Call
2094<2096		4604<4962	2-WAY TO 4-WAY	*Call
2094<2096		4604<4963	3-WAY TO 4-WAY	*Call
2094<2096		4604<4964	4-WAY TO 4-WAY	*Call
2094<2096		4604<4966	2-WAY TO 4-WAY	*Call
2094<2096		4604<4967	3-WAY TO 4-WAY	*Call
2094<2096		4604<4968	4-WAY TO 4-WAY	*Call
2094<2096		4604<4969	1-WAY TO 4-WAY	*Call
2094<2096		4604<4970	2-WAY TO 4-WAY	*Call
2094<2096		4604<4971	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4604<4972	4-WAY TO 4-WAY	*Call
2094<2096		4604<4973	1-WAY TO 4-WAY	*Call
2094<2096		4604<4974	2-WAY TO 4-WAY	*Call
2094<2096		4604<4975	3-WAY TO 4-WAY	*Call
2094<2096		4604<4976	4-WAY TO 4-WAY	*Call
2094<2096		4604<4977	1-WAY TO 4-WAY	*Call
2094<2096		4604<4978	2-WAY TO 4-WAY	*Call
2094<2096		4604<4979	3-WAY TO 4-WAY	*Call
2094<2096		4604<4980	4-WAY TO 4-WAY	*Call
2094<2096		4604<4981	1-WAY TO 4-WAY	*Call
2094<2096		4604<4982	2-WAY TO 4-WAY	*Call
2094<2096		4604<4983	3-WAY TO 4-WAY	*Call
2094<2096		4604<4984	4-WAY TO 4-WAY	*Call
2094<2096		4604<4985	1-WAY TO 4-WAY	*Call
2094<2096		4604<4986	2-WAY TO 4-WAY	*Call
2094<2096		4604<4987	3-WAY TO 4-WAY	*Call
2094<2096		4604<4988	4-WAY TO 4-WAY	*Call
2094<2096		4604<4989	1-WAY TO 4-WAY	*Call
2094<2096		4604<4990	2-WAY TO 4-WAY	*Call
2094<2096		4604<4991	3-WAY TO 4-WAY	*Call
2094<2096		4604<4992	4-WAY TO 4-WAY	*Call
2094<2096		4604<4993	1-WAY TO 4-WAY	*Call
2094<2096		4604<4994	2-WAY TO 4-WAY	*Call
2094<2096		4604<4995	3-WAY TO 4-WAY	*Call
2094<2096		4604<4996	4-WAY TO 4-WAY	*Call
2094<2096		4604<4997	1-WAY TO 4-WAY	*Call
2094<2096		4604<4998	2-WAY TO 4-WAY	*Call
2094<2096		4604<4999	3-WAY TO 4-WAY	*Call
2094<2096		4604<5000	4-WAY TO 4-WAY	*Call
2094<2096		4604<5001	1-WAY TO 4-WAY	*Call
2094<2096		4604<5002	2-WAY TO 4-WAY	*Call
2094<2096		4604<5003	3-WAY TO 4-WAY	*Call
2094<2096		4604<5004	4-WAY TO 4-WAY	*Call
2094<2096		4605<4900	ZERO-WAY TO 5-WAY	*Call
2094<2096		4605<4944	4-WAY TO 5-WAY	*Call
2094<2096		4605<4947	3-WAY TO 5-WAY	*Call
2094<2096		4605<4948	4-WAY TO 5-WAY	*Call
2094<2096		4605<4951	3-WAY TO 5-WAY	*Call
2094<2096		4605<4952	4-WAY TO 5-WAY	*Call
2094<2096		4605<4954	2-WAY TO 5-WAY	*Call
2094<2096		4605<4955	3-WAY TO 5-WAY	*Call
2094<2096		4605<4956	4-WAY TO 5-WAY	*Call
2094<2096		4605<4958	2-WAY TO 5-WAY	*Call
2094<2096		4605<4959	3-WAY TO 5-WAY	*Call
2094<2096		4605<4960	4-WAY TO 5-WAY	*Call
2094<2096		4605<4962	2-WAY TO 5-WAY	*Call
2094<2096		4605<4963	3-WAY TO 5-WAY	*Call
2094<2096		4605<4964	4-WAY TO 5-WAY	*Call
2094<2096		4605<4966	2-WAY TO 5-WAY	*Call
2094<2096		4605<4967	3-WAY TO 5-WAY	*Call
2094<2096		4605<4968	4-WAY TO 5-WAY	*Call
2094<2096		4605<4969	1-WAY TO 5-WAY	*Call
2094<2096		4605<4970	2-WAY TO 5-WAY	*Call
2094<2096		4605<4971	3-WAY TO 5-WAY	*Call
2094<2096		4605<4972	4-WAY TO 5-WAY	*Call
2094<2096		4605<4973	1-WAY TO 5-WAY	*Call
2094<2096		4605<4974	2-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4605<4975	3-WAY TO 5-WAY	*Call
2094<2096		4605<4976	4-WAY TO 5-WAY	*Call
2094<2096		4605<4977	1-WAY TO 5-WAY	*Call
2094<2096		4605<4978	2-WAY TO 5-WAY	*Call
2094<2096		4605<4979	3-WAY TO 5-WAY	*Call
2094<2096		4605<4980	4-WAY TO 5-WAY	*Call
2094<2096		4605<4981	1-WAY TO 5-WAY	*Call
2094<2096		4605<4982	2-WAY TO 5-WAY	*Call
2094<2096		4605<4983	3-WAY TO 5-WAY	*Call
2094<2096		4605<4984	4-WAY TO 5-WAY	*Call
2094<2096		4605<4985	1-WAY TO 5-WAY	*Call
2094<2096		4605<4986	2-WAY TO 5-WAY	*Call
2094<2096		4605<4987	3-WAY TO 5-WAY	*Call
2094<2096		4605<4988	4-WAY TO 5-WAY	*Call
2094<2096		4605<4989	1-WAY TO 5-WAY	*Call
2094<2096		4605<4990	2-WAY TO 5-WAY	*Call
2094<2096		4605<4991	3-WAY TO 5-WAY	*Call
2094<2096		4605<4992	4-WAY TO 5-WAY	*Call
2094<2096		4605<4993	1-WAY TO 5-WAY	*Call
2094<2096		4605<4994	2-WAY TO 5-WAY	*Call
2094<2096		4605<4995	3-WAY TO 5-WAY	*Call
2094<2096		4605<4996	4-WAY TO 5-WAY	*Call
2094<2096		4605<4997	1-WAY TO 5-WAY	*Call
2094<2096		4605<4998	2-WAY TO 5-WAY	*Call
2094<2096		4605<4999	3-WAY TO 5-WAY	*Call
2094<2096		4605<5000	4-WAY TO 5-WAY	*Call
2094<2096		4605<5001	1-WAY TO 5-WAY	*Call
2094<2096		4605<5002	2-WAY TO 5-WAY	*Call
2094<2096		4605<5003	3-WAY TO 5-WAY	*Call
2094<2096		4605<5004	4-WAY TO 5-WAY	*Call
2094<2096		4606<4900	ZERO-WAY TO 6-WAY	*Call
2094<2096		4606<4944	4-WAY TO 6-WAY	*Call
2094<2096		4606<4947	3-WAY TO 6-WAY	*Call
2094<2096		4606<4948	4-WAY TO 6-WAY	*Call
2094<2096		4606<4951	3-WAY TO 6-WAY	*Call
2094<2096		4606<4952	4-WAY TO 6-WAY	*Call
2094<2096		4606<4954	2-WAY TO 6-WAY	*Call
2094<2096		4606<4955	3-WAY TO 6-WAY	*Call
2094<2096		4606<4956	4-WAY TO 6-WAY	*Call
2094<2096		4606<4958	2-WAY TO 6-WAY	*Call
2094<2096		4606<4959	3-WAY TO 6-WAY	*Call
2094<2096		4606<4960	4-WAY TO 6-WAY	*Call
2094<2096		4606<4962	2-WAY TO 6-WAY	*Call
2094<2096		4606<4963	3-WAY TO 6-WAY	*Call
2094<2096		4606<4964	4-WAY TO 6-WAY	*Call
2094<2096		4606<4966	2-WAY TO 6-WAY	*Call
2094<2096		4606<4967	3-WAY TO 6-WAY	*Call
2094<2096		4606<4968	4-WAY TO 6-WAY	*Call
2094<2096		4606<4969	1-WAY TO 6-WAY	*Call
2094<2096		4606<4970	2-WAY TO 6-WAY	*Call
2094<2096		4606<4971	3-WAY TO 6-WAY	*Call
2094<2096		4606<4972	4-WAY TO 6-WAY	*Call
2094<2096		4606<4973	1-WAY TO 6-WAY	*Call
2094<2096		4606<4974	2-WAY TO 6-WAY	*Call
2094<2096		4606<4975	3-WAY TO 6-WAY	*Call
2094<2096		4606<4976	4-WAY TO 6-WAY	*Call
2094<2096		4606<4977	1-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4606<4978	2-WAY TO 6-WAY	*Call
2094<2096		4606<4979	3-WAY TO 6-WAY	*Call
2094<2096		4606<4980	4-WAY TO 6-WAY	*Call
2094<2096		4606<4981	1-WAY TO 6-WAY	*Call
2094<2096		4606<4982	2-WAY TO 6-WAY	*Call
2094<2096		4606<4983	3-WAY TO 6-WAY	*Call
2094<2096		4606<4984	4-WAY TO 6-WAY	*Call
2094<2096		4606<4985	1-WAY TO 6-WAY	*Call
2094<2096		4606<4986	2-WAY TO 6-WAY	*Call
2094<2096		4606<4987	3-WAY TO 6-WAY	*Call
2094<2096		4606<4988	4-WAY TO 6-WAY	*Call
2094<2096		4606<4989	1-WAY TO 6-WAY	*Call
2094<2096		4606<4990	2-WAY TO 6-WAY	*Call
2094<2096		4606<4991	3-WAY TO 6-WAY	*Call
2094<2096		4606<4992	4-WAY TO 6-WAY	*Call
2094<2096		4606<4993	1-WAY TO 6-WAY	*Call
2094<2096		4606<4994	2-WAY TO 6-WAY	*Call
2094<2096		4606<4995	3-WAY TO 6-WAY	*Call
2094<2096		4606<4996	4-WAY TO 6-WAY	*Call
2094<2096		4606<4997	1-WAY TO 6-WAY	*Call
2094<2096		4606<4998	2-WAY TO 6-WAY	*Call
2094<2096		4606<4999	3-WAY TO 6-WAY	*Call
2094<2096		4606<5000	4-WAY TO 6-WAY	*Call
2094<2096		4606<5001	1-WAY TO 6-WAY	*Call
2094<2096		4606<5002	2-WAY TO 6-WAY	*Call
2094<2096		4606<5003	3-WAY TO 6-WAY	*Call
2094<2096		4606<5004	4-WAY TO 6-WAY	*Call
2094<2096		4607<4900	ZERO-WAY TO 7-WAY	*Call
2094<2096		4607<4944	4-WAY TO 7-WAY	*Call
2094<2096		4607<4947	3-WAY TO 7-WAY	*Call
2094<2096		4607<4948	4-WAY TO 7-WAY	*Call
2094<2096		4607<4951	3-WAY TO 7-WAY	*Call
2094<2096		4607<4952	4-WAY TO 7-WAY	*Call
2094<2096		4607<4954	2-WAY TO 7-WAY	*Call
2094<2096		4607<4955	3-WAY TO 7-WAY	*Call
2094<2096		4607<4956	4-WAY TO 7-WAY	*Call
2094<2096		4607<4958	2-WAY TO 7-WAY	*Call
2094<2096		4607<4959	3-WAY TO 7-WAY	*Call
2094<2096		4607<4960	4-WAY TO 7-WAY	*Call
2094<2096		4607<4962	2-WAY TO 7-WAY	*Call
2094<2096		4607<4963	3-WAY TO 7-WAY	*Call
2094<2096		4607<4964	4-WAY TO 7-WAY	*Call
2094<2096		4607<4966	2-WAY TO 7-WAY	*Call
2094<2096		4607<4967	3-WAY TO 7-WAY	*Call
2094<2096		4607<4968	4-WAY TO 7-WAY	*Call
2094<2096		4607<4969	1-WAY TO 7-WAY	*Call
2094<2096		4607<4970	2-WAY TO 7-WAY	*Call
2094<2096		4607<4971	3-WAY TO 7-WAY	*Call
2094<2096		4607<4972	4-WAY TO 7-WAY	*Call
2094<2096		4607<4973	1-WAY TO 7-WAY	*Call
2094<2096		4607<4974	2-WAY TO 7-WAY	*Call
2094<2096		4607<4975	3-WAY TO 7-WAY	*Call
2094<2096		4607<4976	4-WAY TO 7-WAY	*Call
2094<2096		4607<4977	1-WAY TO 7-WAY	*Call
2094<2096		4607<4978	2-WAY TO 7-WAY	*Call
2094<2096		4607<4979	3-WAY TO 7-WAY	*Call
2094<2096		4607<4980	4-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4607<4981	1-WAY TO 7-WAY	*Call
2094<2096		4607<4982	2-WAY TO 7-WAY	*Call
2094<2096		4607<4983	3-WAY TO 7-WAY	*Call
2094<2096		4607<4984	4-WAY TO 7-WAY	*Call
2094<2096		4607<4985	1-WAY TO 7-WAY	*Call
2094<2096		4607<4986	2-WAY TO 7-WAY	*Call
2094<2096		4607<4987	3-WAY TO 7-WAY	*Call
2094<2096		4607<4988	4-WAY TO 7-WAY	*Call
2094<2096		4607<4989	1-WAY TO 7-WAY	*Call
2094<2096		4607<4990	2-WAY TO 7-WAY	*Call
2094<2096		4607<4991	3-WAY TO 7-WAY	*Call
2094<2096		4607<4992	4-WAY TO 7-WAY	*Call
2094<2096		4607<4993	1-WAY TO 7-WAY	*Call
2094<2096		4607<4994	2-WAY TO 7-WAY	*Call
2094<2096		4607<4995	3-WAY TO 7-WAY	*Call
2094<2096		4607<4996	4-WAY TO 7-WAY	*Call
2094<2096		4607<4997	1-WAY TO 7-WAY	*Call
2094<2096		4607<4998	2-WAY TO 7-WAY	*Call
2094<2096		4607<4999	3-WAY TO 7-WAY	*Call
2094<2096		4607<5000	4-WAY TO 7-WAY	*Call
2094<2096		4607<5001	1-WAY TO 7-WAY	*Call
2094<2096		4607<5002	2-WAY TO 7-WAY	*Call
2094<2096		4607<5003	3-WAY TO 7-WAY	*Call
2094<2096		4607<5004	4-WAY TO 7-WAY	*Call
2094<2096		4608<4900	ZERO-WAY TO 8-WAY	*Call
2094<2096		4608<4944	4-WAY TO 8-WAY	*Call
2094<2096		4608<4947	3-WAY TO 8-WAY	*Call
2094<2096		4608<4948	4-WAY TO 8-WAY	*Call
2094<2096		4608<4951	3-WAY TO 8-WAY	*Call
2094<2096		4608<4952	4-WAY TO 8-WAY	*Call
2094<2096		4608<4954	2-WAY TO 8-WAY	*Call
2094<2096		4608<4955	3-WAY TO 8-WAY	*Call
2094<2096		4608<4956	4-WAY TO 8-WAY	*Call
2094<2096		4608<4958	2-WAY TO 8-WAY	*Call
2094<2096		4608<4959	3-WAY TO 8-WAY	*Call
2094<2096		4608<4960	4-WAY TO 8-WAY	*Call
2094<2096		4608<4962	2-WAY TO 8-WAY	*Call
2094<2096		4608<4963	3-WAY TO 8-WAY	*Call
2094<2096		4608<4964	4-WAY TO 8-WAY	*Call
2094<2096		4608<4966	2-WAY TO 8-WAY	*Call
2094<2096		4608<4967	3-WAY TO 8-WAY	*Call
2094<2096		4608<4968	4-WAY TO 8-WAY	*Call
2094<2096		4608<4969	1-WAY TO 8-WAY	*Call
2094<2096		4608<4970	2-WAY TO 8-WAY	*Call
2094<2096		4608<4971	3-WAY TO 8-WAY	*Call
2094<2096		4608<4972	4-WAY TO 8-WAY	*Call
2094<2096		4608<4973	1-WAY TO 8-WAY	*Call
2094<2096		4608<4974	2-WAY TO 8-WAY	*Call
2094<2096		4608<4975	3-WAY TO 8-WAY	*Call
2094<2096		4608<4976	4-WAY TO 8-WAY	*Call
2094<2096		4608<4977	1-WAY TO 8-WAY	*Call
2094<2096		4608<4978	2-WAY TO 8-WAY	*Call
2094<2096		4608<4979	3-WAY TO 8-WAY	*Call
2094<2096		4608<4980	4-WAY TO 8-WAY	*Call
2094<2096		4608<4981	1-WAY TO 8-WAY	*Call
2094<2096		4608<4982	2-WAY TO 8-WAY	*Call
2094<2096		4608<4983	3-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4608<4984	4-WAY TO 8-WAY	*Call
2094<2096		4608<4985	1-WAY TO 8-WAY	*Call
2094<2096		4608<4986	2-WAY TO 8-WAY	*Call
2094<2096		4608<4987	3-WAY TO 8-WAY	*Call
2094<2096		4608<4988	4-WAY TO 8-WAY	*Call
2094<2096		4608<4989	1-WAY TO 8-WAY	*Call
2094<2096		4608<4990	2-WAY TO 8-WAY	*Call
2094<2096		4608<4991	3-WAY TO 8-WAY	*Call
2094<2096		4608<4992	4-WAY TO 8-WAY	*Call
2094<2096		4608<4993	1-WAY TO 8-WAY	*Call
2094<2096		4608<4994	2-WAY TO 8-WAY	*Call
2094<2096		4608<4995	3-WAY TO 8-WAY	*Call
2094<2096		4608<4996	4-WAY TO 8-WAY	*Call
2094<2096		4608<4997	1-WAY TO 8-WAY	*Call
2094<2096		4608<4998	2-WAY TO 8-WAY	*Call
2094<2096		4608<4999	3-WAY TO 8-WAY	*Call
2094<2096		4608<5000	4-WAY TO 8-WAY	*Call
2094<2096		4608<5001	1-WAY TO 8-WAY	*Call
2094<2096		4608<5002	2-WAY TO 8-WAY	*Call
2094<2096		4608<5003	3-WAY TO 8-WAY	*Call
2094<2096		4608<5004	4-WAY TO 8-WAY	*Call
2094<2096		4701<4900	ZERO-WAY TO 1-WAY	*Call
2094<2096		4701<4944	4-WAY TO 1-WAY	*Call
2094<2096		4701<4947	3-WAY TO 1-WAY	*Call
2094<2096		4701<4948	4-WAY TO 1-WAY	*Call
2094<2096		4701<4951	3-WAY TO 1-WAY	*Call
2094<2096		4701<4952	4-WAY TO 1-WAY	*Call
2094<2096		4701<4954	2-WAY TO 1-WAY	*Call
2094<2096		4701<4955	3-WAY TO 1-WAY	*Call
2094<2096		4701<4956	4-WAY TO 1-WAY	*Call
2094<2096		4701<4958	2-WAY TO 1-WAY	*Call
2094<2096		4701<4959	3-WAY TO 1-WAY	*Call
2094<2096		4701<4960	4-WAY TO 1-WAY	*Call
2094<2096		4701<4962	2-WAY TO 1-WAY	*Call
2094<2096		4701<4963	3-WAY TO 1-WAY	*Call
2094<2096		4701<4964	4-WAY TO 1-WAY	*Call
2094<2096		4701<4966	2-WAY TO 1-WAY	*Call
2094<2096		4701<4967	3-WAY TO 1-WAY	*Call
2094<2096		4701<4968	4-WAY TO 1-WAY	*Call
2094<2096		4701<4969	1-WAY TO 1-WAY	*Call
2094<2096		4701<4970	2-WAY TO 1-WAY	*Call
2094<2096		4701<4971	3-WAY TO 1-WAY	*Call
2094<2096		4701<4972	4-WAY TO 1-WAY	*Call
2094<2096		4701<4973	1-WAY TO 1-WAY	*Call
2094<2096		4701<4974	2-WAY TO 1-WAY	*Call
2094<2096		4701<4975	3-WAY TO 1-WAY	*Call
2094<2096		4701<4976	4-WAY TO 1-WAY	*Call
2094<2096		4701<4977	1-WAY TO 1-WAY	*Call
2094<2096		4701<4978	2-WAY TO 1-WAY	*Call
2094<2096		4701<4979	3-WAY TO 1-WAY	*Call
2094<2096		4701<4980	4-WAY TO 1-WAY	*Call
2094<2096		4701<4981	1-WAY TO 1-WAY	*Call
2094<2096		4701<4982	2-WAY TO 1-WAY	*Call
2094<2096		4701<4983	3-WAY TO 1-WAY	*Call
2094<2096		4701<4984	4-WAY TO 1-WAY	*Call
2094<2096		4701<4985	1-WAY TO 1-WAY	*Call
2094<2096		4701<4986	2-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4701<4987	3-WAY TO 1-WAY	*Call
2094<2096		4701<4988	4-WAY TO 1-WAY	*Call
2094<2096		4701<4989	1-WAY TO 1-WAY	*Call
2094<2096		4701<4990	2-WAY TO 1-WAY	*Call
2094<2096		4701<4991	3-WAY TO 1-WAY	*Call
2094<2096		4701<4992	4-WAY TO 1-WAY	*Call
2094<2096		4701<4993	1-WAY TO 1-WAY	*Call
2094<2096		4701<4994	2-WAY TO 1-WAY	*Call
2094<2096		4701<4995	3-WAY TO 1-WAY	*Call
2094<2096		4701<4996	4-WAY TO 1-WAY	*Call
2094<2096		4701<4997	1-WAY TO 1-WAY	*Call
2094<2096		4701<4998	2-WAY TO 1-WAY	*Call
2094<2096		4701<4999	3-WAY TO 1-WAY	*Call
2094<2096		4701<5000	4-WAY TO 1-WAY	*Call
2094<2096		4701<5001	1-WAY TO 1-WAY	*Call
2094<2096		4701<5002	2-WAY TO 1-WAY	*Call
2094<2096		4701<5003	3-WAY TO 1-WAY	*Call
2094<2096		4701<5004	4-WAY TO 1-WAY	*Call
2094<2096		4702<4900	ZERO-WAY TO 2-WAY	*Call
2094<2096		4702<4944	4-WAY TO 2-WAY	*Call
2094<2096		4702<4947	3-WAY TO 2-WAY	*Call
2094<2096		4702<4948	4-WAY TO 2-WAY	*Call
2094<2096		4702<4951	3-WAY TO 2-WAY	*Call
2094<2096		4702<4952	4-WAY TO 2-WAY	*Call
2094<2096		4702<4954	2-WAY TO 2-WAY	*Call
2094<2096		4702<4955	3-WAY TO 2-WAY	*Call
2094<2096		4702<4956	4-WAY TO 2-WAY	*Call
2094<2096		4702<4958	2-WAY TO 2-WAY	*Call
2094<2096		4702<4959	3-WAY TO 2-WAY	*Call
2094<2096		4702<4960	4-WAY TO 2-WAY	*Call
2094<2096		4702<4962	2-WAY TO 2-WAY	*Call
2094<2096		4702<4963	3-WAY TO 2-WAY	*Call
2094<2096		4702<4964	4-WAY TO 2-WAY	*Call
2094<2096		4702<4966	2-WAY TO 2-WAY	*Call
2094<2096		4702<4967	3-WAY TO 2-WAY	*Call
2094<2096		4702<4968	4-WAY TO 2-WAY	*Call
2094<2096		4702<4969	1-WAY TO 2-WAY	*Call
2094<2096		4702<4970	2-WAY TO 2-WAY	*Call
2094<2096		4702<4971	3-WAY TO 2-WAY	*Call
2094<2096		4702<4972	4-WAY TO 2-WAY	*Call
2094<2096		4702<4973	1-WAY TO 2-WAY	*Call
2094<2096		4702<4974	2-WAY TO 2-WAY	*Call
2094<2096		4702<4975	3-WAY TO 2-WAY	*Call
2094<2096		4702<4976	4-WAY TO 2-WAY	*Call
2094<2096		4702<4977	1-WAY TO 2-WAY	*Call
2094<2096		4702<4978	2-WAY TO 2-WAY	*Call
2094<2096		4702<4979	3-WAY TO 2-WAY	*Call
2094<2096		4702<4980	4-WAY TO 2-WAY	*Call
2094<2096		4702<4981	1-WAY TO 2-WAY	*Call
2094<2096		4702<4982	2-WAY TO 2-WAY	*Call
2094<2096		4702<4983	3-WAY TO 2-WAY	*Call
2094<2096		4702<4984	4-WAY TO 2-WAY	*Call
2094<2096		4702<4985	1-WAY TO 2-WAY	*Call
2094<2096		4702<4986	2-WAY TO 2-WAY	*Call
2094<2096		4702<4987	3-WAY TO 2-WAY	*Call
2094<2096		4702<4988	4-WAY TO 2-WAY	*Call
2094<2096		4702<4989	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4702<4990	2-WAY TO 2-WAY	*Call
2094<2096		4702<4991	3-WAY TO 2-WAY	*Call
2094<2096		4702<4992	4-WAY TO 2-WAY	*Call
2094<2096		4702<4993	1-WAY TO 2-WAY	*Call
2094<2096		4702<4994	2-WAY TO 2-WAY	*Call
2094<2096		4702<4995	3-WAY TO 2-WAY	*Call
2094<2096		4702<4996	4-WAY TO 2-WAY	*Call
2094<2096		4702<4997	1-WAY TO 2-WAY	*Call
2094<2096		4702<4998	2-WAY TO 2-WAY	*Call
2094<2096		4702<4999	3-WAY TO 2-WAY	*Call
2094<2096		4702<5000	4-WAY TO 2-WAY	*Call
2094<2096		4702<5001	1-WAY TO 2-WAY	*Call
2094<2096		4702<5002	2-WAY TO 2-WAY	*Call
2094<2096		4702<5003	3-WAY TO 2-WAY	*Call
2094<2096		4702<5004	4-WAY TO 2-WAY	*Call
2094<2096		4703<4900	ZERO-WAY TO 3-WAY	*Call
2094<2096		4703<4944	4-WAY TO 3-WAY	*Call
2094<2096		4703<4947	3-WAY TO 3-WAY	*Call
2094<2096		4703<4948	4-WAY TO 3-WAY	*Call
2094<2096		4703<4951	3-WAY TO 3-WAY	*Call
2094<2096		4703<4952	4-WAY TO 3-WAY	*Call
2094<2096		4703<4954	2-WAY TO 3-WAY	*Call
2094<2096		4703<4955	3-WAY TO 3-WAY	*Call
2094<2096		4703<4956	4-WAY TO 3-WAY	*Call
2094<2096		4703<4958	2-WAY TO 3-WAY	*Call
2094<2096		4703<4959	3-WAY TO 3-WAY	*Call
2094<2096		4703<4960	4-WAY TO 3-WAY	*Call
2094<2096		4703<4962	2-WAY TO 3-WAY	*Call
2094<2096		4703<4963	3-WAY TO 3-WAY	*Call
2094<2096		4703<4964	4-WAY TO 3-WAY	*Call
2094<2096		4703<4966	2-WAY TO 3-WAY	*Call
2094<2096		4703<4967	3-WAY TO 3-WAY	*Call
2094<2096		4703<4968	4-WAY TO 3-WAY	*Call
2094<2096		4703<4969	1-WAY TO 3-WAY	*Call
2094<2096		4703<4970	2-WAY TO 3-WAY	*Call
2094<2096		4703<4971	3-WAY TO 3-WAY	*Call
2094<2096		4703<4972	4-WAY TO 3-WAY	*Call
2094<2096		4703<4973	1-WAY TO 3-WAY	*Call
2094<2096		4703<4974	2-WAY TO 3-WAY	*Call
2094<2096		4703<4975	3-WAY TO 3-WAY	*Call
2094<2096		4703<4976	4-WAY TO 3-WAY	*Call
2094<2096		4703<4977	1-WAY TO 3-WAY	*Call
2094<2096		4703<4978	2-WAY TO 3-WAY	*Call
2094<2096		4703<4979	3-WAY TO 3-WAY	*Call
2094<2096		4703<4980	4-WAY TO 3-WAY	*Call
2094<2096		4703<4981	1-WAY TO 3-WAY	*Call
2094<2096		4703<4982	2-WAY TO 3-WAY	*Call
2094<2096		4703<4983	3-WAY TO 3-WAY	*Call
2094<2096		4703<4984	4-WAY TO 3-WAY	*Call
2094<2096		4703<4985	1-WAY TO 3-WAY	*Call
2094<2096		4703<4986	2-WAY TO 3-WAY	*Call
2094<2096		4703<4987	3-WAY TO 3-WAY	*Call
2094<2096		4703<4988	4-WAY TO 3-WAY	*Call
2094<2096		4703<4989	1-WAY TO 3-WAY	*Call
2094<2096		4703<4990	2-WAY TO 3-WAY	*Call
2094<2096		4703<4991	3-WAY TO 3-WAY	*Call
2094<2096		4703<4992	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4703<4993	1-WAY TO 3-WAY	*Call
2094<2096		4703<4994	2-WAY TO 3-WAY	*Call
2094<2096		4703<4995	3-WAY TO 3-WAY	*Call
2094<2096		4703<4996	4-WAY TO 3-WAY	*Call
2094<2096		4703<4997	1-WAY TO 3-WAY	*Call
2094<2096		4703<4998	2-WAY TO 3-WAY	*Call
2094<2096		4703<4999	3-WAY TO 3-WAY	*Call
2094<2096		4703<5000	4-WAY TO 3-WAY	*Call
2094<2096		4703<5001	1-WAY TO 3-WAY	*Call
2094<2096		4703<5002	2-WAY TO 3-WAY	*Call
2094<2096		4703<5003	3-WAY TO 3-WAY	*Call
2094<2096		4703<5004	4-WAY TO 3-WAY	*Call
2094<2096		4704<4900	ZERO-WAY TO 4-WAY	*Call
2094<2096		4704<4944	4-WAY TO 4-WAY	*Call
2094<2096		4704<4947	3-WAY TO 4-WAY	*Call
2094<2096		4704<4948	4-WAY TO 4-WAY	*Call
2094<2096		4704<4951	3-WAY TO 4-WAY	*Call
2094<2096		4704<4952	4-WAY TO 4-WAY	*Call
2094<2096		4704<4954	2-WAY TO 4-WAY	*Call
2094<2096		4704<4955	3-WAY TO 4-WAY	*Call
2094<2096		4704<4956	4-WAY TO 4-WAY	*Call
2094<2096		4704<4958	2-WAY TO 4-WAY	*Call
2094<2096		4704<4959	3-WAY TO 4-WAY	*Call
2094<2096		4704<4960	4-WAY TO 4-WAY	*Call
2094<2096		4704<4962	2-WAY TO 4-WAY	*Call
2094<2096		4704<4963	3-WAY TO 4-WAY	*Call
2094<2096		4704<4964	4-WAY TO 4-WAY	*Call
2094<2096		4704<4966	2-WAY TO 4-WAY	*Call
2094<2096		4704<4967	3-WAY TO 4-WAY	*Call
2094<2096		4704<4968	4-WAY TO 4-WAY	*Call
2094<2096		4704<4969	1-WAY TO 4-WAY	*Call
2094<2096		4704<4970	2-WAY TO 4-WAY	*Call
2094<2096		4704<4971	3-WAY TO 4-WAY	*Call
2094<2096		4704<4972	4-WAY TO 4-WAY	*Call
2094<2096		4704<4973	1-WAY TO 4-WAY	*Call
2094<2096		4704<4974	2-WAY TO 4-WAY	*Call
2094<2096		4704<4975	3-WAY TO 4-WAY	*Call
2094<2096		4704<4976	4-WAY TO 4-WAY	*Call
2094<2096		4704<4977	1-WAY TO 4-WAY	*Call
2094<2096		4704<4978	2-WAY TO 4-WAY	*Call
2094<2096		4704<4979	3-WAY TO 4-WAY	*Call
2094<2096		4704<4980	4-WAY TO 4-WAY	*Call
2094<2096		4704<4981	1-WAY TO 4-WAY	*Call
2094<2096		4704<4982	2-WAY TO 4-WAY	*Call
2094<2096		4704<4983	3-WAY TO 4-WAY	*Call
2094<2096		4704<4984	4-WAY TO 4-WAY	*Call
2094<2096		4704<4985	1-WAY TO 4-WAY	*Call
2094<2096		4704<4986	2-WAY TO 4-WAY	*Call
2094<2096		4704<4987	3-WAY TO 4-WAY	*Call
2094<2096		4704<4988	4-WAY TO 4-WAY	*Call
2094<2096		4704<4989	1-WAY TO 4-WAY	*Call
2094<2096		4704<4990	2-WAY TO 4-WAY	*Call
2094<2096		4704<4991	3-WAY TO 4-WAY	*Call
2094<2096		4704<4992	4-WAY TO 4-WAY	*Call
2094<2096		4704<4993	1-WAY TO 4-WAY	*Call
2094<2096		4704<4994	2-WAY TO 4-WAY	*Call
2094<2096		4704<4995	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4704<4996	4-WAY TO 4-WAY	*Call
2094<2096		4704<4997	1-WAY TO 4-WAY	*Call
2094<2096		4704<4998	2-WAY TO 4-WAY	*Call
2094<2096		4704<4999	3-WAY TO 4-WAY	*Call
2094<2096		4704<5000	4-WAY TO 4-WAY	*Call
2094<2096		4704<5001	1-WAY TO 4-WAY	*Call
2094<2096		4704<5002	2-WAY TO 4-WAY	*Call
2094<2096		4704<5003	3-WAY TO 4-WAY	*Call
2094<2096		4704<5004	4-WAY TO 4-WAY	*Call
2094<2096		4705<4900	ZERO-WAY TO 5-WAY	*Call
2094<2096		4705<4944	4-WAY TO 5-WAY	*Call
2094<2096		4705<4947	3-WAY TO 5-WAY	*Call
2094<2096		4705<4948	4-WAY TO 5-WAY	*Call
2094<2096		4705<4951	3-WAY TO 5-WAY	*Call
2094<2096		4705<4952	4-WAY TO 5-WAY	*Call
2094<2096		4705<4954	2-WAY TO 5-WAY	*Call
2094<2096		4705<4955	3-WAY TO 5-WAY	*Call
2094<2096		4705<4956	4-WAY TO 5-WAY	*Call
2094<2096		4705<4958	2-WAY TO 5-WAY	*Call
2094<2096		4705<4959	3-WAY TO 5-WAY	*Call
2094<2096		4705<4960	4-WAY TO 5-WAY	*Call
2094<2096		4705<4962	2-WAY TO 5-WAY	*Call
2094<2096		4705<4963	3-WAY TO 5-WAY	*Call
2094<2096		4705<4964	4-WAY TO 5-WAY	*Call
2094<2096		4705<4966	2-WAY TO 5-WAY	*Call
2094<2096		4705<4967	3-WAY TO 5-WAY	*Call
2094<2096		4705<4968	4-WAY TO 5-WAY	*Call
2094<2096		4705<4969	1-WAY TO 5-WAY	*Call
2094<2096		4705<4970	2-WAY TO 5-WAY	*Call
2094<2096		4705<4971	3-WAY TO 5-WAY	*Call
2094<2096		4705<4972	4-WAY TO 5-WAY	*Call
2094<2096		4705<4973	1-WAY TO 5-WAY	*Call
2094<2096		4705<4974	2-WAY TO 5-WAY	*Call
2094<2096		4705<4975	3-WAY TO 5-WAY	*Call
2094<2096		4705<4976	4-WAY TO 5-WAY	*Call
2094<2096		4705<4977	1-WAY TO 5-WAY	*Call
2094<2096		4705<4978	2-WAY TO 5-WAY	*Call
2094<2096		4705<4979	3-WAY TO 5-WAY	*Call
2094<2096		4705<4980	4-WAY TO 5-WAY	*Call
2094<2096		4705<4981	1-WAY TO 5-WAY	*Call
2094<2096		4705<4982	2-WAY TO 5-WAY	*Call
2094<2096		4705<4983	3-WAY TO 5-WAY	*Call
2094<2096		4705<4984	4-WAY TO 5-WAY	*Call
2094<2096		4705<4985	1-WAY TO 5-WAY	*Call
2094<2096		4705<4986	2-WAY TO 5-WAY	*Call
2094<2096		4705<4987	3-WAY TO 5-WAY	*Call
2094<2096		4705<4988	4-WAY TO 5-WAY	*Call
2094<2096		4705<4989	1-WAY TO 5-WAY	*Call
2094<2096		4705<4990	2-WAY TO 5-WAY	*Call
2094<2096		4705<4991	3-WAY TO 5-WAY	*Call
2094<2096		4705<4992	4-WAY TO 5-WAY	*Call
2094<2096		4705<4993	1-WAY TO 5-WAY	*Call
2094<2096		4705<4994	2-WAY TO 5-WAY	*Call
2094<2096		4705<4995	3-WAY TO 5-WAY	*Call
2094<2096		4705<4996	4-WAY TO 5-WAY	*Call
2094<2096		4705<4997	1-WAY TO 5-WAY	*Call
2094<2096		4705<4998	2-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4705<4999	3-WAY TO 5-WAY	*Call
2094<2096		4705<5000	4-WAY TO 5-WAY	*Call
2094<2096		4705<5001	1-WAY TO 5-WAY	*Call
2094<2096		4705<5002	2-WAY TO 5-WAY	*Call
2094<2096		4705<5003	3-WAY TO 5-WAY	*Call
2094<2096		4705<5004	4-WAY TO 5-WAY	*Call
2094<2096		4706<4900	ZERO-WAY TO 6-WAY	*Call
2094<2096		4706<4944	4-WAY TO 6-WAY	*Call
2094<2096		4706<4947	3-WAY TO 6-WAY	*Call
2094<2096		4706<4948	4-WAY TO 6-WAY	*Call
2094<2096		4706<4951	3-WAY TO 6-WAY	*Call
2094<2096		4706<4952	4-WAY TO 6-WAY	*Call
2094<2096		4706<4954	2-WAY TO 6-WAY	*Call
2094<2096		4706<4955	3-WAY TO 6-WAY	*Call
2094<2096		4706<4956	4-WAY TO 6-WAY	*Call
2094<2096		4706<4958	2-WAY TO 6-WAY	*Call
2094<2096		4706<4959	3-WAY TO 6-WAY	*Call
2094<2096		4706<4960	4-WAY TO 6-WAY	*Call
2094<2096		4706<4962	2-WAY TO 6-WAY	*Call
2094<2096		4706<4963	3-WAY TO 6-WAY	*Call
2094<2096		4706<4964	4-WAY TO 6-WAY	*Call
2094<2096		4706<4966	2-WAY TO 6-WAY	*Call
2094<2096		4706<4967	3-WAY TO 6-WAY	*Call
2094<2096		4706<4968	4-WAY TO 6-WAY	*Call
2094<2096		4706<4969	1-WAY TO 6-WAY	*Call
2094<2096		4706<4970	2-WAY TO 6-WAY	*Call
2094<2096		4706<4971	3-WAY TO 6-WAY	*Call
2094<2096		4706<4972	4-WAY TO 6-WAY	*Call
2094<2096		4706<4973	1-WAY TO 6-WAY	*Call
2094<2096		4706<4974	2-WAY TO 6-WAY	*Call
2094<2096		4706<4975	3-WAY TO 6-WAY	*Call
2094<2096		4706<4976	4-WAY TO 6-WAY	*Call
2094<2096		4706<4977	1-WAY TO 6-WAY	*Call
2094<2096		4706<4978	2-WAY TO 6-WAY	*Call
2094<2096		4706<4979	3-WAY TO 6-WAY	*Call
2094<2096		4706<4980	4-WAY TO 6-WAY	*Call
2094<2096		4706<4981	1-WAY TO 6-WAY	*Call
2094<2096		4706<4982	2-WAY TO 6-WAY	*Call
2094<2096		4706<4983	3-WAY TO 6-WAY	*Call
2094<2096		4706<4984	4-WAY TO 6-WAY	*Call
2094<2096		4706<4985	1-WAY TO 6-WAY	*Call
2094<2096		4706<4986	2-WAY TO 6-WAY	*Call
2094<2096		4706<4987	3-WAY TO 6-WAY	*Call
2094<2096		4706<4988	4-WAY TO 6-WAY	*Call
2094<2096		4706<4989	1-WAY TO 6-WAY	*Call
2094<2096		4706<4990	2-WAY TO 6-WAY	*Call
2094<2096		4706<4991	3-WAY TO 6-WAY	*Call
2094<2096		4706<4992	4-WAY TO 6-WAY	*Call
2094<2096		4706<4993	1-WAY TO 6-WAY	*Call
2094<2096		4706<4994	2-WAY TO 6-WAY	*Call
2094<2096		4706<4995	3-WAY TO 6-WAY	*Call
2094<2096		4706<4996	4-WAY TO 6-WAY	*Call
2094<2096		4706<4997	1-WAY TO 6-WAY	*Call
2094<2096		4706<4998	2-WAY TO 6-WAY	*Call
2094<2096		4706<4999	3-WAY TO 6-WAY	*Call
2094<2096		4706<5000	4-WAY TO 6-WAY	*Call
2094<2096		4706<5001	1-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4706<5002	2-WAY TO 6-WAY	*Call
2094<2096		4706<5003	3-WAY TO 6-WAY	*Call
2094<2096		4706<5004	4-WAY TO 6-WAY	*Call
2094<2096		4707<4900	ZERO-WAY TO 7-WAY	*Call
2094<2096		4707<4944	4-WAY TO 7-WAY	*Call
2094<2096		4707<4947	3-WAY TO 7-WAY	*Call
2094<2096		4707<4948	4-WAY TO 7-WAY	*Call
2094<2096		4707<4951	3-WAY TO 7-WAY	*Call
2094<2096		4707<4952	4-WAY TO 7-WAY	*Call
2094<2096		4707<4954	2-WAY TO 7-WAY	*Call
2094<2096		4707<4955	3-WAY TO 7-WAY	*Call
2094<2096		4707<4956	4-WAY TO 7-WAY	*Call
2094<2096		4707<4958	2-WAY TO 7-WAY	*Call
2094<2096		4707<4959	3-WAY TO 7-WAY	*Call
2094<2096		4707<4960	4-WAY TO 7-WAY	*Call
2094<2096		4707<4962	2-WAY TO 7-WAY	*Call
2094<2096		4707<4963	3-WAY TO 7-WAY	*Call
2094<2096		4707<4964	4-WAY TO 7-WAY	*Call
2094<2096		4707<4966	2-WAY TO 7-WAY	*Call
2094<2096		4707<4967	3-WAY TO 7-WAY	*Call
2094<2096		4707<4968	4-WAY TO 7-WAY	*Call
2094<2096		4707<4969	1-WAY TO 7-WAY	*Call
2094<2096		4707<4970	2-WAY TO 7-WAY	*Call
2094<2096		4707<4971	3-WAY TO 7-WAY	*Call
2094<2096		4707<4972	4-WAY TO 7-WAY	*Call
2094<2096		4707<4973	1-WAY TO 7-WAY	*Call
2094<2096		4707<4974	2-WAY TO 7-WAY	*Call
2094<2096		4707<4975	3-WAY TO 7-WAY	*Call
2094<2096		4707<4976	4-WAY TO 7-WAY	*Call
2094<2096		4707<4977	1-WAY TO 7-WAY	*Call
2094<2096		4707<4978	2-WAY TO 7-WAY	*Call
2094<2096		4707<4979	3-WAY TO 7-WAY	*Call
2094<2096		4707<4980	4-WAY TO 7-WAY	*Call
2094<2096		4707<4981	1-WAY TO 7-WAY	*Call
2094<2096		4707<4982	2-WAY TO 7-WAY	*Call
2094<2096		4707<4983	3-WAY TO 7-WAY	*Call
2094<2096		4707<4984	4-WAY TO 7-WAY	*Call
2094<2096		4707<4985	1-WAY TO 7-WAY	*Call
2094<2096		4707<4986	2-WAY TO 7-WAY	*Call
2094<2096		4707<4987	3-WAY TO 7-WAY	*Call
2094<2096		4707<4988	4-WAY TO 7-WAY	*Call
2094<2096		4707<4989	1-WAY TO 7-WAY	*Call
2094<2096		4707<4990	2-WAY TO 7-WAY	*Call
2094<2096		4707<4991	3-WAY TO 7-WAY	*Call
2094<2096		4707<4992	4-WAY TO 7-WAY	*Call
2094<2096		4707<4993	1-WAY TO 7-WAY	*Call
2094<2096		4707<4994	2-WAY TO 7-WAY	*Call
2094<2096		4707<4995	3-WAY TO 7-WAY	*Call
2094<2096		4707<4996	4-WAY TO 7-WAY	*Call
2094<2096		4707<4997	1-WAY TO 7-WAY	*Call
2094<2096		4707<4998	2-WAY TO 7-WAY	*Call
2094<2096		4707<4999	3-WAY TO 7-WAY	*Call
2094<2096		4707<5000	4-WAY TO 7-WAY	*Call
2094<2096		4707<5001	1-WAY TO 7-WAY	*Call
2094<2096		4707<5002	2-WAY TO 7-WAY	*Call
2094<2096		4707<5003	3-WAY TO 7-WAY	*Call
2094<2096		4707<5004	4-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4708<4900	ZERO-WAY TO 8-WAY	*Call
2094<2096		4708<4944	4-WAY TO 8-WAY	*Call
2094<2096		4708<4947	3-WAY TO 8-WAY	*Call
2094<2096		4708<4948	4-WAY TO 8-WAY	*Call
2094<2096		4708<4951	3-WAY TO 8-WAY	*Call
2094<2096		4708<4952	4-WAY TO 8-WAY	*Call
2094<2096		4708<4954	2-WAY TO 8-WAY	*Call
2094<2096		4708<4955	3-WAY TO 8-WAY	*Call
2094<2096		4708<4956	4-WAY TO 8-WAY	*Call
2094<2096		4708<4958	2-WAY TO 8-WAY	*Call
2094<2096		4708<4959	3-WAY TO 8-WAY	*Call
2094<2096		4708<4960	4-WAY TO 8-WAY	*Call
2094<2096		4708<4962	2-WAY TO 8-WAY	*Call
2094<2096		4708<4963	3-WAY TO 8-WAY	*Call
2094<2096		4708<4964	4-WAY TO 8-WAY	*Call
2094<2096		4708<4966	2-WAY TO 8-WAY	*Call
2094<2096		4708<4967	3-WAY TO 8-WAY	*Call
2094<2096		4708<4968	4-WAY TO 8-WAY	*Call
2094<2096		4708<4969	1-WAY TO 8-WAY	*Call
2094<2096		4708<4970	2-WAY TO 8-WAY	*Call
2094<2096		4708<4971	3-WAY TO 8-WAY	*Call
2094<2096		4708<4972	4-WAY TO 8-WAY	*Call
2094<2096		4708<4973	1-WAY TO 8-WAY	*Call
2094<2096		4708<4974	2-WAY TO 8-WAY	*Call
2094<2096		4708<4975	3-WAY TO 8-WAY	*Call
2094<2096		4708<4976	4-WAY TO 8-WAY	*Call
2094<2096		4708<4977	1-WAY TO 8-WAY	*Call
2094<2096		4708<4978	2-WAY TO 8-WAY	*Call
2094<2096		4708<4979	3-WAY TO 8-WAY	*Call
2094<2096		4708<4980	4-WAY TO 8-WAY	*Call
2094<2096		4708<4981	1-WAY TO 8-WAY	*Call
2094<2096		4708<4982	2-WAY TO 8-WAY	*Call
2094<2096		4708<4983	3-WAY TO 8-WAY	*Call
2094<2096		4708<4984	4-WAY TO 8-WAY	*Call
2094<2096		4708<4985	1-WAY TO 8-WAY	*Call
2094<2096		4708<4986	2-WAY TO 8-WAY	*Call
2094<2096		4708<4987	3-WAY TO 8-WAY	*Call
2094<2096		4708<4988	4-WAY TO 8-WAY	*Call
2094<2096		4708<4989	1-WAY TO 8-WAY	*Call
2094<2096		4708<4990	2-WAY TO 8-WAY	*Call
2094<2096		4708<4991	3-WAY TO 8-WAY	*Call
2094<2096		4708<4992	4-WAY TO 8-WAY	*Call
2094<2096		4708<4993	1-WAY TO 8-WAY	*Call
2094<2096		4708<4994	2-WAY TO 8-WAY	*Call
2094<2096		4708<4995	3-WAY TO 8-WAY	*Call
2094<2096		4708<4996	4-WAY TO 8-WAY	*Call
2094<2096		4708<4997	1-WAY TO 8-WAY	*Call
2094<2096		4708<4998	2-WAY TO 8-WAY	*Call
2094<2096		4708<4999	3-WAY TO 8-WAY	*Call
2094<2096		4708<5000	4-WAY TO 8-WAY	*Call
2094<2096		4708<5001	1-WAY TO 8-WAY	*Call
2094<2096		4708<5002	2-WAY TO 8-WAY	*Call
2094<2096		4708<5003	3-WAY TO 8-WAY	*Call
2094<2096		4708<5004	4-WAY TO 8-WAY	*Call
2094<2096		4801<4900	ZERO-WAY TO 1-WAY	*Call
2094<2096		4801<4944	4-WAY TO 1-WAY	*Call
2094<2096		4801<4947	3-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4801<4948	4-WAY TO 1-WAY	*Call
2094<2096		4801<4951	3-WAY TO 1-WAY	*Call
2094<2096		4801<4952	4-WAY TO 1-WAY	*Call
2094<2096		4801<4954	2-WAY TO 1-WAY	*Call
2094<2096		4801<4955	3-WAY TO 1-WAY	*Call
2094<2096		4801<4956	4-WAY TO 1-WAY	*Call
2094<2096		4801<4958	2-WAY TO 1-WAY	*Call
2094<2096		4801<4959	3-WAY TO 1-WAY	*Call
2094<2096		4801<4960	4-WAY TO 1-WAY	*Call
2094<2096		4801<4962	2-WAY TO 1-WAY	*Call
2094<2096		4801<4963	3-WAY TO 1-WAY	*Call
2094<2096		4801<4964	4-WAY TO 1-WAY	*Call
2094<2096		4801<4966	2-WAY TO 1-WAY	*Call
2094<2096		4801<4967	3-WAY TO 1-WAY	*Call
2094<2096		4801<4968	4-WAY TO 1-WAY	*Call
2094<2096		4801<4969	1-WAY TO 1-WAY	*Call
2094<2096		4801<4970	2-WAY TO 1-WAY	*Call
2094<2096		4801<4971	3-WAY TO 1-WAY	*Call
2094<2096		4801<4972	4-WAY TO 1-WAY	*Call
2094<2096		4801<4973	1-WAY TO 1-WAY	*Call
2094<2096		4801<4974	2-WAY TO 1-WAY	*Call
2094<2096		4801<4975	3-WAY TO 1-WAY	*Call
2094<2096		4801<4976	4-WAY TO 1-WAY	*Call
2094<2096		4801<4977	1-WAY TO 1-WAY	*Call
2094<2096		4801<4978	2-WAY TO 1-WAY	*Call
2094<2096		4801<4979	3-WAY TO 1-WAY	*Call
2094<2096		4801<4980	4-WAY TO 1-WAY	*Call
2094<2096		4801<4981	1-WAY TO 1-WAY	*Call
2094<2096		4801<4982	2-WAY TO 1-WAY	*Call
2094<2096		4801<4983	3-WAY TO 1-WAY	*Call
2094<2096		4801<4984	4-WAY TO 1-WAY	*Call
2094<2096		4801<4985	1-WAY TO 1-WAY	*Call
2094<2096		4801<4986	2-WAY TO 1-WAY	*Call
2094<2096		4801<4987	3-WAY TO 1-WAY	*Call
2094<2096		4801<4988	4-WAY TO 1-WAY	*Call
2094<2096		4801<4989	1-WAY TO 1-WAY	*Call
2094<2096		4801<4990	2-WAY TO 1-WAY	*Call
2094<2096		4801<4991	3-WAY TO 1-WAY	*Call
2094<2096		4801<4992	4-WAY TO 1-WAY	*Call
2094<2096		4801<4993	1-WAY TO 1-WAY	*Call
2094<2096		4801<4994	2-WAY TO 1-WAY	*Call
2094<2096		4801<4995	3-WAY TO 1-WAY	*Call
2094<2096		4801<4996	4-WAY TO 1-WAY	*Call
2094<2096		4801<4997	1-WAY TO 1-WAY	*Call
2094<2096		4801<4998	2-WAY TO 1-WAY	*Call
2094<2096		4801<4999	3-WAY TO 1-WAY	*Call
2094<2096		4801<5000	4-WAY TO 1-WAY	*Call
2094<2096		4801<5001	1-WAY TO 1-WAY	*Call
2094<2096		4801<5002	2-WAY TO 1-WAY	*Call
2094<2096		4801<5003	3-WAY TO 1-WAY	*Call
2094<2096		4801<5004	4-WAY TO 1-WAY	*Call
2094<2096		4802<4900	ZERO-WAY TO 2-WAY	*Call
2094<2096		4802<4944	4-WAY TO 2-WAY	*Call
2094<2096		4802<4947	3-WAY TO 2-WAY	*Call
2094<2096		4802<4948	4-WAY TO 2-WAY	*Call
2094<2096		4802<4951	3-WAY TO 2-WAY	*Call
2094<2096		4802<4952	4-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4802<4954	2-WAY TO 2-WAY	*Call
2094<2096		4802<4955	3-WAY TO 2-WAY	*Call
2094<2096		4802<4956	4-WAY TO 2-WAY	*Call
2094<2096		4802<4958	2-WAY TO 2-WAY	*Call
2094<2096		4802<4959	3-WAY TO 2-WAY	*Call
2094<2096		4802<4960	4-WAY TO 2-WAY	*Call
2094<2096		4802<4962	2-WAY TO 2-WAY	*Call
2094<2096		4802<4963	3-WAY TO 2-WAY	*Call
2094<2096		4802<4964	4-WAY TO 2-WAY	*Call
2094<2096		4802<4966	2-WAY TO 2-WAY	*Call
2094<2096		4802<4967	3-WAY TO 2-WAY	*Call
2094<2096		4802<4968	4-WAY TO 2-WAY	*Call
2094<2096		4802<4969	1-WAY TO 2-WAY	*Call
2094<2096		4802<4970	2-WAY TO 2-WAY	*Call
2094<2096		4802<4971	3-WAY TO 2-WAY	*Call
2094<2096		4802<4972	4-WAY TO 2-WAY	*Call
2094<2096		4802<4973	1-WAY TO 2-WAY	*Call
2094<2096		4802<4974	2-WAY TO 2-WAY	*Call
2094<2096		4802<4975	3-WAY TO 2-WAY	*Call
2094<2096		4802<4976	4-WAY TO 2-WAY	*Call
2094<2096		4802<4977	1-WAY TO 2-WAY	*Call
2094<2096		4802<4978	2-WAY TO 2-WAY	*Call
2094<2096		4802<4979	3-WAY TO 2-WAY	*Call
2094<2096		4802<4980	4-WAY TO 2-WAY	*Call
2094<2096		4802<4981	1-WAY TO 2-WAY	*Call
2094<2096		4802<4982	2-WAY TO 2-WAY	*Call
2094<2096		4802<4983	3-WAY TO 2-WAY	*Call
2094<2096		4802<4984	4-WAY TO 2-WAY	*Call
2094<2096		4802<4985	1-WAY TO 2-WAY	*Call
2094<2096		4802<4986	2-WAY TO 2-WAY	*Call
2094<2096		4802<4987	3-WAY TO 2-WAY	*Call
2094<2096		4802<4988	4-WAY TO 2-WAY	*Call
2094<2096		4802<4989	1-WAY TO 2-WAY	*Call
2094<2096		4802<4990	2-WAY TO 2-WAY	*Call
2094<2096		4802<4991	3-WAY TO 2-WAY	*Call
2094<2096		4802<4992	4-WAY TO 2-WAY	*Call
2094<2096		4802<4993	1-WAY TO 2-WAY	*Call
2094<2096		4802<4994	2-WAY TO 2-WAY	*Call
2094<2096		4802<4995	3-WAY TO 2-WAY	*Call
2094<2096		4802<4996	4-WAY TO 2-WAY	*Call
2094<2096		4802<4997	1-WAY TO 2-WAY	*Call
2094<2096		4802<4998	2-WAY TO 2-WAY	*Call
2094<2096		4802<4999	3-WAY TO 2-WAY	*Call
2094<2096		4802<5000	4-WAY TO 2-WAY	*Call
2094<2096		4802<5001	1-WAY TO 2-WAY	*Call
2094<2096		4802<5002	2-WAY TO 2-WAY	*Call
2094<2096		4802<5003	3-WAY TO 2-WAY	*Call
2094<2096		4802<5004	4-WAY TO 2-WAY	*Call
2094<2096		4803<4900	ZERO-WAY TO 3-WAY	*Call
2094<2096		4803<4944	4-WAY TO 3-WAY	*Call
2094<2096		4803<4947	3-WAY TO 3-WAY	*Call
2094<2096		4803<4948	4-WAY TO 3-WAY	*Call
2094<2096		4803<4951	3-WAY TO 3-WAY	*Call
2094<2096		4803<4952	4-WAY TO 3-WAY	*Call
2094<2096		4803<4954	2-WAY TO 3-WAY	*Call
2094<2096		4803<4955	3-WAY TO 3-WAY	*Call
2094<2096		4803<4956	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4803<4958	2-WAY TO 3-WAY	*Call
2094<2096		4803<4959	3-WAY TO 3-WAY	*Call
2094<2096		4803<4960	4-WAY TO 3-WAY	*Call
2094<2096		4803<4962	2-WAY TO 3-WAY	*Call
2094<2096		4803<4963	3-WAY TO 3-WAY	*Call
2094<2096		4803<4964	4-WAY TO 3-WAY	*Call
2094<2096		4803<4966	2-WAY TO 3-WAY	*Call
2094<2096		4803<4967	3-WAY TO 3-WAY	*Call
2094<2096		4803<4968	4-WAY TO 3-WAY	*Call
2094<2096		4803<4969	1-WAY TO 3-WAY	*Call
2094<2096		4803<4970	2-WAY TO 3-WAY	*Call
2094<2096		4803<4971	3-WAY TO 3-WAY	*Call
2094<2096		4803<4972	4-WAY TO 3-WAY	*Call
2094<2096		4803<4973	1-WAY TO 3-WAY	*Call
2094<2096		4803<4974	2-WAY TO 3-WAY	*Call
2094<2096		4803<4975	3-WAY TO 3-WAY	*Call
2094<2096		4803<4976	4-WAY TO 3-WAY	*Call
2094<2096		4803<4977	1-WAY TO 3-WAY	*Call
2094<2096		4803<4978	2-WAY TO 3-WAY	*Call
2094<2096		4803<4979	3-WAY TO 3-WAY	*Call
2094<2096		4803<4980	4-WAY TO 3-WAY	*Call
2094<2096		4803<4981	1-WAY TO 3-WAY	*Call
2094<2096		4803<4982	2-WAY TO 3-WAY	*Call
2094<2096		4803<4983	3-WAY TO 3-WAY	*Call
2094<2096		4803<4984	4-WAY TO 3-WAY	*Call
2094<2096		4803<4985	1-WAY TO 3-WAY	*Call
2094<2096		4803<4986	2-WAY TO 3-WAY	*Call
2094<2096		4803<4987	3-WAY TO 3-WAY	*Call
2094<2096		4803<4988	4-WAY TO 3-WAY	*Call
2094<2096		4803<4989	1-WAY TO 3-WAY	*Call
2094<2096		4803<4990	2-WAY TO 3-WAY	*Call
2094<2096		4803<4991	3-WAY TO 3-WAY	*Call
2094<2096		4803<4992	4-WAY TO 3-WAY	*Call
2094<2096		4803<4993	1-WAY TO 3-WAY	*Call
2094<2096		4803<4994	2-WAY TO 3-WAY	*Call
2094<2096		4803<4995	3-WAY TO 3-WAY	*Call
2094<2096		4803<4996	4-WAY TO 3-WAY	*Call
2094<2096		4803<4997	1-WAY TO 3-WAY	*Call
2094<2096		4803<4998	2-WAY TO 3-WAY	*Call
2094<2096		4803<4999	3-WAY TO 3-WAY	*Call
2094<2096		4803<5000	4-WAY TO 3-WAY	*Call
2094<2096		4803<5001	1-WAY TO 3-WAY	*Call
2094<2096		4803<5002	2-WAY TO 3-WAY	*Call
2094<2096		4803<5003	3-WAY TO 3-WAY	*Call
2094<2096		4803<5004	4-WAY TO 3-WAY	*Call
2094<2096		4804<4900	ZERO-WAY TO 4-WAY	*Call
2094<2096		4804<4944	4-WAY TO 4-WAY	*Call
2094<2096		4804<4947	3-WAY TO 4-WAY	*Call
2094<2096		4804<4948	4-WAY TO 4-WAY	*Call
2094<2096		4804<4951	3-WAY TO 4-WAY	*Call
2094<2096		4804<4952	4-WAY TO 4-WAY	*Call
2094<2096		4804<4954	2-WAY TO 4-WAY	*Call
2094<2096		4804<4955	3-WAY TO 4-WAY	*Call
2094<2096		4804<4956	4-WAY TO 4-WAY	*Call
2094<2096		4804<4958	2-WAY TO 4-WAY	*Call
2094<2096		4804<4959	3-WAY TO 4-WAY	*Call
2094<2096		4804<4960	4-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4804<4962	2-WAY TO 4-WAY	*Call
2094<2096		4804<4963	3-WAY TO 4-WAY	*Call
2094<2096		4804<4964	4-WAY TO 4-WAY	*Call
2094<2096		4804<4966	2-WAY TO 4-WAY	*Call
2094<2096		4804<4967	3-WAY TO 4-WAY	*Call
2094<2096		4804<4968	4-WAY TO 4-WAY	*Call
2094<2096		4804<4969	1-WAY TO 4-WAY	*Call
2094<2096		4804<4970	2-WAY TO 4-WAY	*Call
2094<2096		4804<4971	3-WAY TO 4-WAY	*Call
2094<2096		4804<4972	4-WAY TO 4-WAY	*Call
2094<2096		4804<4973	1-WAY TO 4-WAY	*Call
2094<2096		4804<4974	2-WAY TO 4-WAY	*Call
2094<2096		4804<4975	3-WAY TO 4-WAY	*Call
2094<2096		4804<4976	4-WAY TO 4-WAY	*Call
2094<2096		4804<4977	1-WAY TO 4-WAY	*Call
2094<2096		4804<4978	2-WAY TO 4-WAY	*Call
2094<2096		4804<4979	3-WAY TO 4-WAY	*Call
2094<2096		4804<4980	4-WAY TO 4-WAY	*Call
2094<2096		4804<4981	1-WAY TO 4-WAY	*Call
2094<2096		4804<4982	2-WAY TO 4-WAY	*Call
2094<2096		4804<4983	3-WAY TO 4-WAY	*Call
2094<2096		4804<4984	4-WAY TO 4-WAY	*Call
2094<2096		4804<4985	1-WAY TO 4-WAY	*Call
2094<2096		4804<4986	2-WAY TO 4-WAY	*Call
2094<2096		4804<4987	3-WAY TO 4-WAY	*Call
2094<2096		4804<4988	4-WAY TO 4-WAY	*Call
2094<2096		4804<4989	1-WAY TO 4-WAY	*Call
2094<2096		4804<4990	2-WAY TO 4-WAY	*Call
2094<2096		4804<4991	3-WAY TO 4-WAY	*Call
2094<2096		4804<4992	4-WAY TO 4-WAY	*Call
2094<2096		4804<4993	1-WAY TO 4-WAY	*Call
2094<2096		4804<4994	2-WAY TO 4-WAY	*Call
2094<2096		4804<4995	3-WAY TO 4-WAY	*Call
2094<2096		4804<4996	4-WAY TO 4-WAY	*Call
2094<2096		4804<4997	1-WAY TO 4-WAY	*Call
2094<2096		4804<4998	2-WAY TO 4-WAY	*Call
2094<2096		4804<4999	3-WAY TO 4-WAY	*Call
2094<2096		4804<5000	4-WAY TO 4-WAY	*Call
2094<2096		4804<5001	1-WAY TO 4-WAY	*Call
2094<2096		4804<5002	2-WAY TO 4-WAY	*Call
2094<2096		4804<5003	3-WAY TO 4-WAY	*Call
2094<2096		4804<5004	4-WAY TO 4-WAY	*Call
2094<2096		4805<4900	ZERO-WAY TO 5-WAY	*Call
2094<2096		4805<4944	4-WAY TO 5-WAY	*Call
2094<2096		4805<4947	3-WAY TO 5-WAY	*Call
2094<2096		4805<4948	4-WAY TO 5-WAY	*Call
2094<2096		4805<4951	3-WAY TO 5-WAY	*Call
2094<2096		4805<4952	4-WAY TO 5-WAY	*Call
2094<2096		4805<4954	2-WAY TO 5-WAY	*Call
2094<2096		4805<4955	3-WAY TO 5-WAY	*Call
2094<2096		4805<4956	4-WAY TO 5-WAY	*Call
2094<2096		4805<4958	2-WAY TO 5-WAY	*Call
2094<2096		4805<4959	3-WAY TO 5-WAY	*Call
2094<2096		4805<4960	4-WAY TO 5-WAY	*Call
2094<2096		4805<4962	2-WAY TO 5-WAY	*Call
2094<2096		4805<4963	3-WAY TO 5-WAY	*Call
2094<2096		4805<4964	4-WAY TO 5-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4805<4966	2-WAY TO 5-WAY	*Call
2094<2096		4805<4967	3-WAY TO 5-WAY	*Call
2094<2096		4805<4968	4-WAY TO 5-WAY	*Call
2094<2096		4805<4969	1-WAY TO 5-WAY	*Call
2094<2096		4805<4970	2-WAY TO 5-WAY	*Call
2094<2096		4805<4971	3-WAY TO 5-WAY	*Call
2094<2096		4805<4972	4-WAY TO 5-WAY	*Call
2094<2096		4805<4973	1-WAY TO 5-WAY	*Call
2094<2096		4805<4974	2-WAY TO 5-WAY	*Call
2094<2096		4805<4975	3-WAY TO 5-WAY	*Call
2094<2096		4805<4976	4-WAY TO 5-WAY	*Call
2094<2096		4805<4977	1-WAY TO 5-WAY	*Call
2094<2096		4805<4978	2-WAY TO 5-WAY	*Call
2094<2096		4805<4979	3-WAY TO 5-WAY	*Call
2094<2096		4805<4980	4-WAY TO 5-WAY	*Call
2094<2096		4805<4981	1-WAY TO 5-WAY	*Call
2094<2096		4805<4982	2-WAY TO 5-WAY	*Call
2094<2096		4805<4983	3-WAY TO 5-WAY	*Call
2094<2096		4805<4984	4-WAY TO 5-WAY	*Call
2094<2096		4805<4985	1-WAY TO 5-WAY	*Call
2094<2096		4805<4986	2-WAY TO 5-WAY	*Call
2094<2096		4805<4987	3-WAY TO 5-WAY	*Call
2094<2096		4805<4988	4-WAY TO 5-WAY	*Call
2094<2096		4805<4989	1-WAY TO 5-WAY	*Call
2094<2096		4805<4990	2-WAY TO 5-WAY	*Call
2094<2096		4805<4991	3-WAY TO 5-WAY	*Call
2094<2096		4805<4992	4-WAY TO 5-WAY	*Call
2094<2096		4805<4993	1-WAY TO 5-WAY	*Call
2094<2096		4805<4994	2-WAY TO 5-WAY	*Call
2094<2096		4805<4995	3-WAY TO 5-WAY	*Call
2094<2096		4805<4996	4-WAY TO 5-WAY	*Call
2094<2096		4805<4997	1-WAY TO 5-WAY	*Call
2094<2096		4805<4998	2-WAY TO 5-WAY	*Call
2094<2096		4805<4999	3-WAY TO 5-WAY	*Call
2094<2096		4805<5000	4-WAY TO 5-WAY	*Call
2094<2096		4805<5001	1-WAY TO 5-WAY	*Call
2094<2096		4805<5002	2-WAY TO 5-WAY	*Call
2094<2096		4805<5003	3-WAY TO 5-WAY	*Call
2094<2096		4805<5004	4-WAY TO 5-WAY	*Call
2094<2096		4806<4900	ZERO-WAY TO 6-WAY	*Call
2094<2096		4806<4944	4-WAY TO 6-WAY	*Call
2094<2096		4806<4947	3-WAY TO 6-WAY	*Call
2094<2096		4806<4948	4-WAY TO 6-WAY	*Call
2094<2096		4806<4951	3-WAY TO 6-WAY	*Call
2094<2096		4806<4952	4-WAY TO 6-WAY	*Call
2094<2096		4806<4954	2-WAY TO 6-WAY	*Call
2094<2096		4806<4955	3-WAY TO 6-WAY	*Call
2094<2096		4806<4956	4-WAY TO 6-WAY	*Call
2094<2096		4806<4958	2-WAY TO 6-WAY	*Call
2094<2096		4806<4959	3-WAY TO 6-WAY	*Call
2094<2096		4806<4960	4-WAY TO 6-WAY	*Call
2094<2096		4806<4962	2-WAY TO 6-WAY	*Call
2094<2096		4806<4963	3-WAY TO 6-WAY	*Call
2094<2096		4806<4964	4-WAY TO 6-WAY	*Call
2094<2096		4806<4966	2-WAY TO 6-WAY	*Call
2094<2096		4806<4967	3-WAY TO 6-WAY	*Call
2094<2096		4806<4968	4-WAY TO 6-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4806<4969	1-WAY TO 6-WAY	*Call
2094<2096		4806<4970	2-WAY TO 6-WAY	*Call
2094<2096		4806<4971	3-WAY TO 6-WAY	*Call
2094<2096		4806<4972	4-WAY TO 6-WAY	*Call
2094<2096		4806<4973	1-WAY TO 6-WAY	*Call
2094<2096		4806<4974	2-WAY TO 6-WAY	*Call
2094<2096		4806<4975	3-WAY TO 6-WAY	*Call
2094<2096		4806<4976	4-WAY TO 6-WAY	*Call
2094<2096		4806<4977	1-WAY TO 6-WAY	*Call
2094<2096		4806<4978	2-WAY TO 6-WAY	*Call
2094<2096		4806<4979	3-WAY TO 6-WAY	*Call
2094<2096		4806<4980	4-WAY TO 6-WAY	*Call
2094<2096		4806<4981	1-WAY TO 6-WAY	*Call
2094<2096		4806<4982	2-WAY TO 6-WAY	*Call
2094<2096		4806<4983	3-WAY TO 6-WAY	*Call
2094<2096		4806<4984	4-WAY TO 6-WAY	*Call
2094<2096		4806<4985	1-WAY TO 6-WAY	*Call
2094<2096		4806<4986	2-WAY TO 6-WAY	*Call
2094<2096		4806<4987	3-WAY TO 6-WAY	*Call
2094<2096		4806<4988	4-WAY TO 6-WAY	*Call
2094<2096		4806<4989	1-WAY TO 6-WAY	*Call
2094<2096		4806<4990	2-WAY TO 6-WAY	*Call
2094<2096		4806<4991	3-WAY TO 6-WAY	*Call
2094<2096		4806<4992	4-WAY TO 6-WAY	*Call
2094<2096		4806<4993	1-WAY TO 6-WAY	*Call
2094<2096		4806<4994	2-WAY TO 6-WAY	*Call
2094<2096		4806<4995	3-WAY TO 6-WAY	*Call
2094<2096		4806<4996	4-WAY TO 6-WAY	*Call
2094<2096		4806<4997	1-WAY TO 6-WAY	*Call
2094<2096		4806<4998	2-WAY TO 6-WAY	*Call
2094<2096		4806<4999	3-WAY TO 6-WAY	*Call
2094<2096		4806<5000	4-WAY TO 6-WAY	*Call
2094<2096		4806<5001	1-WAY TO 6-WAY	*Call
2094<2096		4806<5002	2-WAY TO 6-WAY	*Call
2094<2096		4806<5003	3-WAY TO 6-WAY	*Call
2094<2096		4806<5004	4-WAY TO 6-WAY	*Call
2094<2096		4807<4900	ZERO-WAY TO 7-WAY	*Call
2094<2096		4807<4944	4-WAY TO 7-WAY	*Call
2094<2096		4807<4947	3-WAY TO 7-WAY	*Call
2094<2096		4807<4948	4-WAY TO 7-WAY	*Call
2094<2096		4807<4951	3-WAY TO 7-WAY	*Call
2094<2096		4807<4952	4-WAY TO 7-WAY	*Call
2094<2096		4807<4954	2-WAY TO 7-WAY	*Call
2094<2096		4807<4955	3-WAY TO 7-WAY	*Call
2094<2096		4807<4956	4-WAY TO 7-WAY	*Call
2094<2096		4807<4958	2-WAY TO 7-WAY	*Call
2094<2096		4807<4959	3-WAY TO 7-WAY	*Call
2094<2096		4807<4960	4-WAY TO 7-WAY	*Call
2094<2096		4807<4962	2-WAY TO 7-WAY	*Call
2094<2096		4807<4963	3-WAY TO 7-WAY	*Call
2094<2096		4807<4964	4-WAY TO 7-WAY	*Call
2094<2096		4807<4966	2-WAY TO 7-WAY	*Call
2094<2096		4807<4967	3-WAY TO 7-WAY	*Call
2094<2096		4807<4968	4-WAY TO 7-WAY	*Call
2094<2096		4807<4969	1-WAY TO 7-WAY	*Call
2094<2096		4807<4970	2-WAY TO 7-WAY	*Call
2094<2096		4807<4971	3-WAY TO 7-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4807<4972	4-WAY TO 7-WAY	*Call
2094<2096		4807<4973	1-WAY TO 7-WAY	*Call
2094<2096		4807<4974	2-WAY TO 7-WAY	*Call
2094<2096		4807<4975	3-WAY TO 7-WAY	*Call
2094<2096		4807<4976	4-WAY TO 7-WAY	*Call
2094<2096		4807<4977	1-WAY TO 7-WAY	*Call
2094<2096		4807<4978	2-WAY TO 7-WAY	*Call
2094<2096		4807<4979	3-WAY TO 7-WAY	*Call
2094<2096		4807<4980	4-WAY TO 7-WAY	*Call
2094<2096		4807<4981	1-WAY TO 7-WAY	*Call
2094<2096		4807<4982	2-WAY TO 7-WAY	*Call
2094<2096		4807<4983	3-WAY TO 7-WAY	*Call
2094<2096		4807<4984	4-WAY TO 7-WAY	*Call
2094<2096		4807<4985	1-WAY TO 7-WAY	*Call
2094<2096		4807<4986	2-WAY TO 7-WAY	*Call
2094<2096		4807<4987	3-WAY TO 7-WAY	*Call
2094<2096		4807<4988	4-WAY TO 7-WAY	*Call
2094<2096		4807<4989	1-WAY TO 7-WAY	*Call
2094<2096		4807<4990	2-WAY TO 7-WAY	*Call
2094<2096		4807<4991	3-WAY TO 7-WAY	*Call
2094<2096		4807<4992	4-WAY TO 7-WAY	*Call
2094<2096		4807<4993	1-WAY TO 7-WAY	*Call
2094<2096		4807<4994	2-WAY TO 7-WAY	*Call
2094<2096		4807<4995	3-WAY TO 7-WAY	*Call
2094<2096		4807<4996	4-WAY TO 7-WAY	*Call
2094<2096		4807<4997	1-WAY TO 7-WAY	*Call
2094<2096		4807<4998	2-WAY TO 7-WAY	*Call
2094<2096		4807<4999	3-WAY TO 7-WAY	*Call
2094<2096		4807<5000	4-WAY TO 7-WAY	*Call
2094<2096		4807<5001	1-WAY TO 7-WAY	*Call
2094<2096		4807<5002	2-WAY TO 7-WAY	*Call
2094<2096		4807<5003	3-WAY TO 7-WAY	*Call
2094<2096		4807<5004	4-WAY TO 7-WAY	*Call
2094<2096		4808<4900	ZERO-WAY TO 8-WAY	*Call
2094<2096		4808<4944	4-WAY TO 8-WAY	*Call
2094<2096		4808<4947	3-WAY TO 8-WAY	*Call
2094<2096		4808<4948	4-WAY TO 8-WAY	*Call
2094<2096		4808<4951	3-WAY TO 8-WAY	*Call
2094<2096		4808<4952	4-WAY TO 8-WAY	*Call
2094<2096		4808<4954	2-WAY TO 8-WAY	*Call
2094<2096		4808<4955	3-WAY TO 8-WAY	*Call
2094<2096		4808<4956	4-WAY TO 8-WAY	*Call
2094<2096		4808<4958	2-WAY TO 8-WAY	*Call
2094<2096		4808<4959	3-WAY TO 8-WAY	*Call
2094<2096		4808<4960	4-WAY TO 8-WAY	*Call
2094<2096		4808<4962	2-WAY TO 8-WAY	*Call
2094<2096		4808<4963	3-WAY TO 8-WAY	*Call
2094<2096		4808<4964	4-WAY TO 8-WAY	*Call
2094<2096		4808<4966	2-WAY TO 8-WAY	*Call
2094<2096		4808<4967	3-WAY TO 8-WAY	*Call
2094<2096		4808<4968	4-WAY TO 8-WAY	*Call
2094<2096		4808<4969	1-WAY TO 8-WAY	*Call
2094<2096		4808<4970	2-WAY TO 8-WAY	*Call
2094<2096		4808<4971	3-WAY TO 8-WAY	*Call
2094<2096		4808<4972	4-WAY TO 8-WAY	*Call
2094<2096		4808<4973	1-WAY TO 8-WAY	*Call
2094<2096		4808<4974	2-WAY TO 8-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2094<2096		4808<4975	3-WAY TO 8-WAY	*Call
2094<2096		4808<4976	4-WAY TO 8-WAY	*Call
2094<2096		4808<4977	1-WAY TO 8-WAY	*Call
2094<2096		4808<4978	2-WAY TO 8-WAY	*Call
2094<2096		4808<4979	3-WAY TO 8-WAY	*Call
2094<2096		4808<4980	4-WAY TO 8-WAY	*Call
2094<2096		4808<4981	1-WAY TO 8-WAY	*Call
2094<2096		4808<4982	2-WAY TO 8-WAY	*Call
2094<2096		4808<4983	3-WAY TO 8-WAY	*Call
2094<2096		4808<4984	4-WAY TO 8-WAY	*Call
2094<2096		4808<4985	1-WAY TO 8-WAY	*Call
2094<2096		4808<4986	2-WAY TO 8-WAY	*Call
2094<2096		4808<4987	3-WAY TO 8-WAY	*Call
2094<2096		4808<4988	4-WAY TO 8-WAY	*Call
2094<2096		4808<4989	1-WAY TO 8-WAY	*Call
2094<2096		4808<4990	2-WAY TO 8-WAY	*Call
2094<2096		4808<4991	3-WAY TO 8-WAY	*Call
2094<2096		4808<4992	4-WAY TO 8-WAY	*Call
2094<2096		4808<4993	1-WAY TO 8-WAY	*Call
2094<2096		4808<4994	2-WAY TO 8-WAY	*Call
2094<2096		4808<4995	3-WAY TO 8-WAY	*Call
2094<2096		4808<4996	4-WAY TO 8-WAY	*Call
2094<2096		4808<4997	1-WAY TO 8-WAY	*Call
2094<2096		4808<4998	2-WAY TO 8-WAY	*Call
2094<2096		4808<4999	3-WAY TO 8-WAY	*Call
2094<2096		4808<5000	4-WAY TO 8-WAY	*Call
2094<2096		4808<5001	1-WAY TO 8-WAY	*Call
2094<2096		4808<5002	2-WAY TO 8-WAY	*Call
2094<2096		4808<5003	3-WAY TO 8-WAY	*Call
2094<2096		4808<5004	4-WAY TO 8-WAY	*Call
2094<2096		7812<7867	ICF TO ICF	*Call
2094<2096		7813<7838	ADD L SAP TO ADD L SAP	*Call
2096		0077<0078	HMC TR/EN TO HMC DUAL EN	*Call
2096		0079<0080	HMC TR/EN TO HMC DUAL EN	*Call
2096		2902<2901	MEMORY TO MEMORY	*Call
2096		2903<2901	MEMORY TO MEMORY	*Call
2096		2903<2902	MEMORY TO MEMORY	*Call
2096		2904<2901	MEMORY TO MEMORY	*Call
2096		2904<2902	MEMORY TO MEMORY	*Call
2096		2904<2903	MEMORY TO MEMORY	*Call
2096		2905<2901	MEMORY TO MEMORY	*Call
2096		2905<2902	MEMORY TO MEMORY	*Call
2096		2905<2903	MEMORY TO MEMORY	*Call
2096		2905<2904	MEMORY TO MEMORY	*Call
2096		2906<2901	MEMORY TO MEMORY	*Call
2096		2906<2902	MEMORY TO MEMORY	*Call
2096		2906<2903	MEMORY TO MEMORY	*Call
2096		2906<2904	MEMORY TO MEMORY	*Call
2096		2906<2905	MEMORY TO MEMORY	*Call
2096		2907<2901	MEMORY TO MEMORY	*Call
2096		2907<2902	MEMORY TO MEMORY	*Call
2096		2907<2903	MEMORY TO MEMORY	*Call
2096		2907<2904	MEMORY TO MEMORY	*Call
2096		2907<2905	MEMORY TO MEMORY	*Call
2096		2907<2906	MEMORY TO MEMORY	*Call
2096		2908<2901	MEMORY TO MEMORY	*Call
2096		2908<2902	MEMORY TO MEMORY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		2908<2903	MEMORY TO MEMORY	*Call
2096		2908<2904	MEMORY TO MEMORY	*Call
2096		2908<2905	MEMORY TO MEMORY	*Call
2096		2908<2906	MEMORY TO MEMORY	*Call
2096		2908<2907	MEMORY TO MEMORY	*Call
2096		3324<3323	FICON TO FICON	*Call
2096		4900<4901	1-WAY TO ZERO-WAY	*Call
2096		4900<4902	2-WAY TO ZERO-WAY	*Call
2096		4900<4903	3-WAY TO ZERO-WAY	*Call
2096		4900<4905	1-WAY TO ZERO-WAY	*Call
2096		4900<4906	2-WAY TO ZERO-WAY	*Call
2096		4900<4907	3-WAY TO ZERO-WAY	*Call
2096		4900<4909	1-WAY TO ZERO-WAY	*Call
2096		4900<4910	2-WAY TO ZERO-WAY	*Call
2096		4900<4911	3-WAY TO ZERO-WAY	*Call
2096		4900<4913	1-WAY TO ZERO-WAY	*Call
2096		4900<4914	2-WAY TO ZERO-WAY	*Call
2096		4900<4915	3-WAY TO ZERO-WAY	*Call
2096		4900<4917	1-WAY TO ZERO-WAY	*Call
2096		4900<4918	2-WAY TO ZERO-WAY	*Call
2096		4900<4921	1-WAY TO ZERO-WAY	*Call
2096		4900<4922	2-WAY TO ZERO-WAY	*Call
2096		4900<4925	1-WAY TO ZERO-WAY	*Call
2096		4900<4929	1-WAY TO ZERO-WAY	*Call
2096		4900<4933	1-WAY TO ZERO-WAY	*Call
2096		4900<4944	4-WAY TO ZERO-WAY	*Call
2096		4900<4947	3-WAY TO ZERO-WAY	*Call
2096		4900<4948	4-WAY TO ZERO-WAY	*Call
2096		4900<4951	3-WAY TO ZERO-WAY	*Call
2096		4900<4952	4-WAY TO ZERO-WAY	*Call
2096		4900<4954	2-WAY TO ZERO-WAY	*Call
2096		4900<4955	3-WAY TO ZERO-WAY	*Call
2096		4900<4956	4-WAY TO ZERO-WAY	*Call
2096		4900<4958	2-WAY TO ZERO-WAY	*Call
2096		4900<4959	3-WAY TO ZERO-WAY	*Call
2096		4900<4960	4-WAY TO ZERO-WAY	*Call
2096		4900<4962	2-WAY TO ZERO-WAY	*Call
2096		4900<4963	3-WAY TO ZERO-WAY	*Call
2096		4900<4964	4-WAY TO ZERO-WAY	*Call
2096		4900<4966	2-WAY TO ZERO-WAY	*Call
2096		4900<4967	3-WAY TO ZERO-WAY	*Call
2096		4900<4968	4-WAY TO ZERO-WAY	*Call
2096		4900<4969	1-WAY TO ZERO-WAY	*Call
2096		4900<4970	2-WAY TO ZERO-WAY	*Call
2096		4900<4971	3-WAY TO ZERO-WAY	*Call
2096		4900<4972	4-WAY TO ZERO-WAY	*Call
2096		4900<4973	1-WAY TO ZERO-WAY	*Call
2096		4900<4974	2-WAY TO ZERO-WAY	*Call
2096		4900<4975	3-WAY TO ZERO-WAY	*Call
2096		4900<4976	4-WAY TO ZERO-WAY	*Call
2096		4900<4977	3-WAY TO ZERO-WAY	*Call
2096		4900<4978	2-WAY TO ZERO-WAY	*Call
2096		4900<4979	3-WAY TO ZERO-WAY	*Call
2096		4900<4980	4-WAY TO ZERO-WAY	*Call
2096		4900<4981	1-WAY TO ZERO-WAY	*Call
2096		4900<4982	2-WAY TO ZERO-WAY	*Call
2096		4900<4983	3-WAY TO ZERO-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4900<4984	4-WAY TO ZERO-WAY	*Call
2096		4900<4985	1-WAY TO ZERO-WAY	*Call
2096		4900<4986	2-WAY TO ZERO-WAY	*Call
2096		4900<4987	3-WAY TO ZERO-WAY	*Call
2096		4900<4988	4-WAY TO ZERO-WAY	*Call
2096		4900<4989	1-WAY TO ZERO-WAY	*Call
2096		4900<4990	2-WAY TO ZERO-WAY	*Call
2096		4900<4991	3-WAY TO ZERO-WAY	*Call
2096		4900<4992	4-WAY TO ZERO-WAY	*Call
2096		4900<4993	1-WAY TO ZERO-WAY	*Call
2096		4900<4994	2-WAY TO ZERO-WAY	*Call
2096		4900<4995	3-WAY TO ZERO-WAY	*Call
2096		4900<4996	4-WAY TO ZERO-WAY	*Call
2096		4900<4997	1-WAY TO ZERO-WAY	*Call
2096		4900<4998	2-WAY TO ZERO-WAY	*Call
2096		4900<4999	3-WAY TO ZERO-WAY	*Call
2096		4900<5000	4-WAY TO ZERO-WAY	*Call
2096		4900<5001	1-WAY TO ZERO-WAY	*Call
2096		4900<5002	2-WAY TO ZERO-WAY	*Call
2096		4900<5003	3-WAY TO ZERO-WAY	*Call
2096		4900<5004	4-WAY TO ZERO-WAY	*Call
2096		4901<4902	2-WAY TO 1-WAY	*Call
2096		4901<4903	3-WAY TO 1-WAY	*Call
2096		4901<4905	1-WAY TO 1-WAY	*Call
2096		4901<4906	2-WAY TO 1-WAY	*Call
2096		4901<4907	3-WAY TO 1-WAY	*Call
2096		4901<4909	1-WAY TO 1-WAY	*Call
2096		4901<4910	2-WAY TO 1-WAY	*Call
2096		4901<4911	3-WAY TO 1-WAY	*Call
2096		4901<4913	1-WAY TO 1-WAY	*Call
2096		4901<4914	2-WAY TO 1-WAY	*Call
2096		4901<4915	3-WAY TO 1-WAY	*Call
2096		4901<4917	1-WAY TO 1-WAY	*Call
2096		4901<4918	2-WAY TO 1-WAY	*Call
2096		4901<4921	1-WAY TO 1-WAY	*Call
2096		4901<4922	2-WAY TO 1-WAY	*Call
2096		4901<4925	1-WAY TO 1-WAY	*Call
2096		4901<4929	1-WAY TO 1-WAY	*Call
2096		4901<4933	1-WAY TO 1-WAY	*Call
2096		4901<4937	1-WAY TO 1-WAY	*Call
2096		4902<4901	1-WAY TO 2-WAY	*Call
2096		4902<4903	3-WAY TO 2-WAY	*Call
2096		4902<4905	1-WAY TO 2-WAY	*Call
2096		4902<4906	2-WAY TO 2-WAY	*Call
2096		4902<4907	3-WAY TO 2-WAY	*Call
2096		4902<4909	1-WAY TO 2-WAY	*Call
2096		4902<4910	2-WAY TO 2-WAY	*Call
2096		4902<4911	3-WAY TO 2-WAY	*Call
2096		4902<4913	1-WAY TO 2-WAY	*Call
2096		4902<4914	2-WAY TO 2-WAY	*Call
2096		4902<4915	3-WAY TO 2-WAY	*Call
2096		4902<4917	1-WAY TO 2-WAY	*Call
2096		4902<4918	2-WAY TO 2-WAY	*Call
2096		4902<4921	1-WAY TO 2-WAY	*Call
2096		4902<4922	2-WAY TO 2-WAY	*Call
2096		4902<4925	1-WAY TO 2-WAY	*Call
2096		4902<4929	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4902<4933	1-WAY TO 2-WAY	*Call
2096		4902<4937	1-WAY TO 2-WAY	*Call
2096		4903<4901	1-WAY TO 3-WAY	*Call
2096		4903<4902	2-WAY TO 3-WAY	*Call
2096		4903<4905	1-WAY TO 3-WAY	*Call
2096		4903<4907	3-WAY TO 3-WAY	*Call
2096		4903<4909	1-WAY TO 3-WAY	*Call
2096		4903<4910	2-WAY TO 3-WAY	*Call
2096		4903<4911	3-WAY TO 3-WAY	*Call
2096		4903<4913	1-WAY TO 3-WAY	*Call
2096		4903<4914	2-WAY TO 3-WAY	*Call
2096		4903<4915	3-WAY TO 3-WAY	*Call
2096		4903<4917	1-WAY TO 3-WAY	*Call
2096		4903<4918	2-WAY TO 3-WAY	*Call
2096		4903<4921	1-WAY TO 3-WAY	*Call
2096		4903<4922	2-WAY TO 3-WAY	*Call
2096		4903<4925	1-WAY TO 3-WAY	*Call
2096		4903<4929	1-WAY TO 3-WAY	*Call
2096		4903<4933	1-WAY TO 3-WAY	*Call
2096		4903<4937	1-WAY TO 3-WAY	*Call
2096		4905<4901	1-WAY TO 1-WAY	*Call
2096		4905<4902	2-WAY TO 1-WAY	*Call
2096		4905<4903	3-WAY TO 1-WAY	*Call
2096		4905<4906	2-WAY TO 1-WAY	*Call
2096		4905<4907	3-WAY TO 1-WAY	*Call
2096		4905<4909	1-WAY TO 1-WAY	*Call
2096		4905<4910	2-WAY TO 1-WAY	*Call
2096		4905<4911	3-WAY TO 1-WAY	*Call
2096		4905<4913	1-WAY TO 1-WAY	*Call
2096		4905<4914	2-WAY TO 1-WAY	*Call
2096		4905<4915	3-WAY TO 1-WAY	*Call
2096		4905<4917	1-WAY TO 1-WAY	*Call
2096		4905<4918	2-WAY TO 1-WAY	*Call
2096		4905<4921	1-WAY TO 1-WAY	*Call
2096		4905<4922	2-WAY TO 1-WAY	*Call
2096		4905<4925	1-WAY TO 1-WAY	*Call
2096		4905<4929	1-WAY TO 1-WAY	*Call
2096		4905<4933	1-WAY TO 1-WAY	*Call
2096		4905<4937	1-WAY TO 1-WAY	*Call
2096		4906<4901	1-WAY TO 2-WAY	*Call
2096		4906<4902	2-WAY TO 2-WAY	*Call
2096		4906<4905	1-WAY TO 2-WAY	*Call
2096		4906<4907	3-WAY TO 2-WAY	*Call
2096		4906<4909	1-WAY TO 2-WAY	*Call
2096		4906<4910	2-WAY TO 2-WAY	*Call
2096		4906<4911	3-WAY TO 2-WAY	*Call
2096		4906<4913	1-WAY TO 2-WAY	*Call
2096		4906<4914	2-WAY TO 2-WAY	*Call
2096		4906<4915	3-WAY TO 2-WAY	*Call
2096		4906<4917	1-WAY TO 2-WAY	*Call
2096		4906<4918	2-WAY TO 2-WAY	*Call
2096		4906<4921	1-WAY TO 2-WAY	*Call
2096		4906<4922	2-WAY TO 2-WAY	*Call
2096		4906<4925	1-WAY TO 2-WAY	*Call
2096		4906<4929	1-WAY TO 2-WAY	*Call
2096		4906<4933	1-WAY TO 2-WAY	*Call
2096		4906<4937	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4907<4901	1-WAY TO 3-WAY	*Call
2096		4907<4902	2-WAY TO 3-WAY	*Call
2096		4907<4903	3-WAY TO 3-WAY	*Call
2096		4907<4905	1-WAY TO 3-WAY	*Call
2096		4907<4906	2-WAY TO 3-WAY	*Call
2096		4907<4909	1-WAY TO 3-WAY	*Call
2096		4907<4910	2-WAY TO 3-WAY	*Call
2096		4907<4911	3-WAY TO 3-WAY	*Call
2096		4907<4913	1-WAY TO 3-WAY	*Call
2096		4907<4914	2-WAY TO 3-WAY	*Call
2096		4907<4915	3-WAY TO 3-WAY	*Call
2096		4907<4917	1-WAY TO 3-WAY	*Call
2096		4907<4918	2-WAY TO 3-WAY	*Call
2096		4907<4921	1-WAY TO 3-WAY	*Call
2096		4907<4922	2-WAY TO 3-WAY	*Call
2096		4907<4925	1-WAY TO 3-WAY	*Call
2096		4907<4929	1-WAY TO 3-WAY	*Call
2096		4907<4933	1-WAY TO 3-WAY	*Call
2096		4907<4937	1-WAY TO 3-WAY	*Call
2096		4909<4901	1-WAY TO 1-WAY	*Call
2096		4909<4902	2-WAY TO 1-WAY	*Call
2096		4909<4903	3-WAY TO 1-WAY	*Call
2096		4909<4905	1-WAY TO 1-WAY	*Call
2096		4909<4906	2-WAY TO 1-WAY	*Call
2096		4909<4907	3-WAY TO 1-WAY	*Call
2096		4909<4910	2-WAY TO 1-WAY	*Call
2096		4909<4911	3-WAY TO 1-WAY	*Call
2096		4909<4913	1-WAY TO 1-WAY	*Call
2096		4909<4914	2-WAY TO 1-WAY	*Call
2096		4909<4915	3-WAY TO 1-WAY	*Call
2096		4909<4917	1-WAY TO 1-WAY	*Call
2096		4909<4918	2-WAY TO 1-WAY	*Call
2096		4909<4921	1-WAY TO 1-WAY	*Call
2096		4909<4922	2-WAY TO 1-WAY	*Call
2096		4909<4925	1-WAY TO 1-WAY	*Call
2096		4909<4929	1-WAY TO 1-WAY	*Call
2096		4909<4933	1-WAY TO 1-WAY	*Call
2096		4909<4937	1-WAY TO 1-WAY	*Call
2096		4910<4901	1-WAY TO 2-WAY	*Call
2096		4910<4902	2-WAY TO 2-WAY	*Call
2096		4910<4903	3-WAY TO 2-WAY	*Call
2096		4910<4905	1-WAY TO 2-WAY	*Call
2096		4910<4906	2-WAY TO 2-WAY	*Call
2096		4910<4907	3-WAY TO 2-WAY	*Call
2096		4910<4909	1-WAY TO 2-WAY	*Call
2096		4910<4911	3-WAY TO 2-WAY	*Call
2096		4910<4913	1-WAY TO 2-WAY	*Call
2096		4910<4914	2-WAY TO 2-WAY	*Call
2096		4910<4915	3-WAY TO 2-WAY	*Call
2096		4910<4917	1-WAY TO 2-WAY	*Call
2096		4910<4918	2-WAY TO 2-WAY	*Call
2096		4910<4921	1-WAY TO 2-WAY	*Call
2096		4910<4922	2-WAY TO 2-WAY	*Call
2096		4910<4925	1-WAY TO 2-WAY	*Call
2096		4910<4929	1-WAY TO 2-WAY	*Call
2096		4910<4933	1-WAY TO 2-WAY	*Call
2096		4910<4937	1-WAY TO 2-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4911<4901	1-WAY TO 3-WAY	*Call
2096			4911<4902	2-WAY TO 3-WAY	*Call
2096			4911<4903	3-WAY TO 3-WAY	*Call
2096			4911<4905	1-WAY TO 3-WAY	*Call
2096			4911<4906	2-WAY TO 3-WAY	*Call
2096			4911<4907	3-WAY TO 3-WAY	*Call
2096			4911<4909	1-WAY TO 3-WAY	*Call
2096			4911<4910	2-WAY TO 3-WAY	*Call
2096			4911<4913	1-WAY TO 3-WAY	*Call
2096			4911<4914	2-WAY TO 3-WAY	*Call
2096			4911<4915	3-WAY TO 3-WAY	*Call
2096			4911<4917	1-WAY TO 3-WAY	*Call
2096			4911<4918	2-WAY TO 3-WAY	*Call
2096			4911<4921	1-WAY TO 3-WAY	*Call
2096			4911<4922	2-WAY TO 3-WAY	*Call
2096			4911<4925	1-WAY TO 3-WAY	*Call
2096			4911<4929	1-WAY TO 3-WAY	*Call
2096			4911<4933	1-WAY TO 3-WAY	*Call
2096			4911<4937	1-WAY TO 3-WAY	*Call
2096			4913<4901	1-WAY TO 1-WAY	*Call
2096			4913<4902	2-WAY TO 1-WAY	*Call
2096			4913<4903	3-WAY TO 1-WAY	*Call
2096			4913<4905	1-WAY TO 1-WAY	*Call
2096			4913<4906	2-WAY TO 1-WAY	*Call
2096			4913<4907	3-WAY TO 1-WAY	*Call
2096			4913<4909	1-WAY TO 1-WAY	*Call
2096			4913<4910	2-WAY TO 1-WAY	*Call
2096			4913<4911	3-WAY TO 1-WAY	*Call
2096			4913<4914	2-WAY TO 1-WAY	*Call
2096			4913<4915	3-WAY TO 1-WAY	*Call
2096			4913<4917	1-WAY TO 1-WAY	*Call
2096			4913<4918	2-WAY TO 1-WAY	*Call
2096			4913<4921	1-WAY TO 1-WAY	*Call
2096			4913<4922	2-WAY TO 1-WAY	*Call
2096			4913<4925	1-WAY TO 1-WAY	*Call
2096			4913<4929	1-WAY TO 1-WAY	*Call
2096			4913<4933	1-WAY TO 1-WAY	*Call
2096			4913<4937	1-WAY TO 1-WAY	*Call
2096			4914<4901	1-WAY TO 2-WAY	*Call
2096			4914<4902	2-WAY TO 2-WAY	*Call
2096			4914<4903	3-WAY TO 2-WAY	*Call
2096			4914<4905	1-WAY TO 2-WAY	*Call
2096			4914<4906	2-WAY TO 2-WAY	*Call
2096			4914<4907	3-WAY TO 2-WAY	*Call
2096			4914<4909	1-WAY TO 2-WAY	*Call
2096			4914<4910	2-WAY TO 2-WAY	*Call
2096			4914<4911	3-WAY TO 2-WAY	*Call
2096			4914<4913	1-WAY TO 2-WAY	*Call
2096			4914<4915	3-WAY TO 2-WAY	*Call
2096			4914<4917	1-WAY TO 2-WAY	*Call
2096			4914<4918	2-WAY TO 2-WAY	*Call
2096			4914<4921	1-WAY TO 2-WAY	*Call
2096			4914<4922	2-WAY TO 2-WAY	*Call
2096			4914<4925	1-WAY TO 2-WAY	*Call
2096			4914<4929	1-WAY TO 2-WAY	*Call
2096			4914<4933	1-WAY TO 2-WAY	*Call
2096			4914<4937	1-WAY TO 2-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4915<4901	1-WAY TO 3-WAY	*Call
2096			4915<4902	2-WAY TO 3-WAY	*Call
2096			4915<4903	3-WAY TO 3-WAY	*Call
2096			4915<4905	1-WAY TO 3-WAY	*Call
2096			4915<4906	2-WAY TO 3-WAY	*Call
2096			4915<4907	3-WAY TO 3-WAY	*Call
2096			4915<4909	1-WAY TO 3-WAY	*Call
2096			4915<4910	2-WAY TO 3-WAY	*Call
2096			4915<4911	3-WAY TO 3-WAY	*Call
2096			4915<4913	1-WAY TO 3-WAY	*Call
2096			4915<4914	2-WAY TO 3-WAY	*Call
2096			4915<4917	1-WAY TO 3-WAY	*Call
2096			4915<4918	2-WAY TO 3-WAY	*Call
2096			4915<4921	1-WAY TO 3-WAY	*Call
2096			4915<4922	2-WAY TO 3-WAY	*Call
2096			4915<4925	1-WAY TO 3-WAY	*Call
2096			4915<4929	1-WAY TO 3-WAY	*Call
2096			4915<4933	1-WAY TO 3-WAY	*Call
2096			4915<4937	1-WAY TO 3-WAY	*Call
2096			4917<4901	1-WAY TO 1-WAY	*Call
2096			4917<4902	2-WAY TO 1-WAY	*Call
2096			4917<4903	3-WAY TO 1-WAY	*Call
2096			4917<4905	1-WAY TO 1-WAY	*Call
2096			4917<4906	2-WAY TO 1-WAY	*Call
2096			4917<4907	3-WAY TO 1-WAY	*Call
2096			4917<4909	1-WAY TO 1-WAY	*Call
2096			4917<4910	2-WAY TO 1-WAY	*Call
2096			4917<4911	3-WAY TO 1-WAY	*Call
2096			4917<4913	1-WAY TO 1-WAY	*Call
2096			4917<4914	2-WAY TO 1-WAY	*Call
2096			4917<4915	3-WAY TO 1-WAY	*Call
2096			4917<4918	2-WAY TO 1-WAY	*Call
2096			4917<4921	1-WAY TO 1-WAY	*Call
2096			4917<4922	2-WAY TO 1-WAY	*Call
2096			4917<4925	1-WAY TO 1-WAY	*Call
2096			4917<4929	1-WAY TO 1-WAY	*Call
2096			4917<4933	1-WAY TO 1-WAY	*Call
2096			4917<4937	1-WAY TO 1-WAY	*Call
2096			4918<4901	1-WAY TO 2-WAY	*Call
2096			4918<4902	2-WAY TO 2-WAY	*Call
2096			4918<4903	3-WAY TO 2-WAY	*Call
2096			4918<4905	1-WAY TO 2-WAY	*Call
2096			4918<4906	2-WAY TO 2-WAY	*Call
2096			4918<4907	3-WAY TO 2-WAY	*Call
2096			4918<4909	1-WAY TO 2-WAY	*Call
2096			4918<4910	2-WAY TO 2-WAY	*Call
2096			4918<4911	3-WAY TO 2-WAY	*Call
2096			4918<4913	1-WAY TO 2-WAY	*Call
2096			4918<4914	2-WAY TO 2-WAY	*Call
2096			4918<4915	3-WAY TO 2-WAY	*Call
2096			4918<4917	1-WAY TO 2-WAY	*Call
2096			4918<4921	1-WAY TO 2-WAY	*Call
2096			4918<4922	2-WAY TO 2-WAY	*Call
2096			4918<4925	1-WAY TO 2-WAY	*Call
2096			4918<4929	1-WAY TO 2-WAY	*Call
2096			4918<4933	1-WAY TO 2-WAY	*Call
2096			4918<4937	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4921<4901	1-WAY TO 1-WAY	*Call
2096		4921<4902	2-WAY TO 1-WAY	*Call
2096		4921<4903	3-WAY TO 1-WAY	*Call
2096		4921<4905	1-WAY TO 1-WAY	*Call
2096		4921<4906	2-WAY TO 1-WAY	*Call
2096		4921<4907	3-WAY TO 1-WAY	*Call
2096		4921<4909	1-WAY TO 1-WAY	*Call
2096		4921<4910	2-WAY TO 1-WAY	*Call
2096		4921<4911	3-WAY TO 1-WAY	*Call
2096		4921<4913	1-WAY TO 1-WAY	*Call
2096		4921<4914	2-WAY TO 1-WAY	*Call
2096		4921<4915	3-WAY TO 1-WAY	*Call
2096		4921<4917	1-WAY TO 1-WAY	*Call
2096		4921<4918	2-WAY TO 1-WAY	*Call
2096		4921<4922	2-WAY TO 1-WAY	*Call
2096		4921<4925	1-WAY TO 1-WAY	*Call
2096		4921<4929	1-WAY TO 1-WAY	*Call
2096		4921<4933	1-WAY TO 1-WAY	*Call
2096		4921<4937	1-WAY TO 1-WAY	*Call
2096		4922<4901	1-WAY TO 2-WAY	*Call
2096		4922<4902	2-WAY TO 2-WAY	*Call
2096		4922<4903	3-WAY TO 2-WAY	*Call
2096		4922<4905	1-WAY TO 2-WAY	*Call
2096		4922<4906	2-WAY TO 2-WAY	*Call
2096		4922<4907	3-WAY TO 2-WAY	*Call
2096		4922<4909	1-WAY TO 2-WAY	*Call
2096		4922<4910	2-WAY TO 2-WAY	*Call
2096		4922<4911	3-WAY TO 2-WAY	*Call
2096		4922<4913	1-WAY TO 2-WAY	*Call
2096		4922<4914	2-WAY TO 2-WAY	*Call
2096		4922<4915	3-WAY TO 2-WAY	*Call
2096		4922<4917	1-WAY TO 2-WAY	*Call
2096		4922<4918	2-WAY TO 2-WAY	*Call
2096		4922<4921	1-WAY TO 2-WAY	*Call
2096		4922<4925	1-WAY TO 2-WAY	*Call
2096		4922<4929	1-WAY TO 2-WAY	*Call
2096		4922<4933	1-WAY TO 2-WAY	*Call
2096		4922<4937	1-WAY TO 2-WAY	*Call
2096		4925<4901	1-WAY TO 1-WAY	*Call
2096		4925<4902	2-WAY TO 1-WAY	*Call
2096		4925<4903	3-WAY TO 1-WAY	*Call
2096		4925<4905	1-WAY TO 1-WAY	*Call
2096		4925<4906	2-WAY TO 1-WAY	*Call
2096		4925<4907	3-WAY TO 1-WAY	*Call
2096		4925<4909	1-WAY TO 1-WAY	*Call
2096		4925<4910	2-WAY TO 1-WAY	*Call
2096		4925<4911	3-WAY TO 1-WAY	*Call
2096		4925<4913	1-WAY TO 1-WAY	*Call
2096		4925<4914	2-WAY TO 1-WAY	*Call
2096		4925<4915	3-WAY TO 1-WAY	*Call
2096		4925<4917	1-WAY TO 1-WAY	*Call
2096		4925<4918	2-WAY TO 1-WAY	*Call
2096		4925<4921	1-WAY TO 1-WAY	*Call
2096		4925<4922	2-WAY TO 1-WAY	*Call
2096		4925<4929	1-WAY TO 1-WAY	*Call
2096		4925<4933	1-WAY TO 1-WAY	*Call
2096		4925<4937	1-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4929<4901	1-WAY TO 1-WAY	*Call
2096		4929<4902	2-WAY TO 1-WAY	*Call
2096		4929<4903	3-WAY TO 1-WAY	*Call
2096		4929<4905	1-WAY TO 1-WAY	*Call
2096		4929<4906	2-WAY TO 1-WAY	*Call
2096		4929<4907	3-WAY TO 1-WAY	*Call
2096		4929<4909	1-WAY TO 1-WAY	*Call
2096		4929<4910	2-WAY TO 1-WAY	*Call
2096		4929<4911	3-WAY TO 1-WAY	*Call
2096		4929<4913	1-WAY TO 1-WAY	*Call
2096		4929<4914	2-WAY TO 1-WAY	*Call
2096		4929<4915	3-WAY TO 1-WAY	*Call
2096		4929<4917	1-WAY TO 1-WAY	*Call
2096		4929<4918	2-WAY TO 1-WAY	*Call
2096		4929<4921	1-WAY TO 1-WAY	*Call
2096		4929<4922	2-WAY TO 1-WAY	*Call
2096		4929<4925	1-WAY TO 1-WAY	*Call
2096		4929<4933	1-WAY TO 1-WAY	*Call
2096		4929<4937	1-WAY TO 1-WAY	*Call
2096		4933<4901	1-WAY TO 1-WAY	*Call
2096		4933<4902	2-WAY TO 1-WAY	*Call
2096		4933<4903	3-WAY TO 1-WAY	*Call
2096		4933<4905	1-WAY TO 1-WAY	*Call
2096		4933<4906	2-WAY TO 1-WAY	*Call
2096		4933<4907	3-WAY TO 1-WAY	*Call
2096		4933<4909	1-WAY TO 1-WAY	*Call
2096		4933<4910	2-WAY TO 1-WAY	*Call
2096		4933<4911	3-WAY TO 1-WAY	*Call
2096		4933<4913	1-WAY TO 1-WAY	*Call
2096		4933<4914	2-WAY TO 1-WAY	*Call
2096		4933<4915	3-WAY TO 1-WAY	*Call
2096		4933<4917	1-WAY TO 1-WAY	*Call
2096		4933<4918	2-WAY TO 1-WAY	*Call
2096		4933<4921	1-WAY TO 1-WAY	*Call
2096		4933<4922	2-WAY TO 1-WAY	*Call
2096		4933<4925	1-WAY TO 1-WAY	*Call
2096		4933<4929	1-WAY TO 1-WAY	*Call
2096		4933<4937	1-WAY TO 1-WAY	*Call
2096		4937<4901	1-WAY TO 1-WAY	*Call
2096		4937<4902	2-WAY TO 1-WAY	*Call
2096		4937<4903	3-WAY TO 1-WAY	*Call
2096		4937<4905	1-WAY TO 1-WAY	*Call
2096		4937<4906	2-WAY TO 1-WAY	*Call
2096		4937<4907	3-WAY TO 1-WAY	*Call
2096		4937<4909	1-WAY TO 1-WAY	*Call
2096		4937<4910	2-WAY TO 1-WAY	*Call
2096		4937<4911	3-WAY TO 1-WAY	*Call
2096		4937<4913	1-WAY TO 1-WAY	*Call
2096		4937<4914	2-WAY TO 1-WAY	*Call
2096		4937<4915	3-WAY TO 1-WAY	*Call
2096		4937<4917	1-WAY TO 1-WAY	*Call
2096		4937<4918	2-WAY TO 1-WAY	*Call
2096		4937<4921	1-WAY TO 1-WAY	*Call
2096		4937<4922	2-WAY TO 1-WAY	*Call
2096		4937<4925	1-WAY TO 1-WAY	*Call
2096		4937<4929	1-WAY TO 1-WAY	*Call
2096		4937<4933	1-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4944<4900	ZERO-WAY TO 4-WAY	*Call
2096		4944<4901	1-WAY TO 4-WAY	*Call
2096		4944<4902	2-WAY TO 4-WAY	*Call
2096		4944<4903	3-WAY TO 4-WAY	*Call
2096		4944<4905	1-WAY TO 4-WAY	*Call
2096		4944<4906	2-WAY TO 4-WAY	*Call
2096		4944<4907	3-WAY TO 4-WAY	*Call
2096		4944<4909	1-WAY TO 4-WAY	*Call
2096		4944<4910	2-WAY TO 4-WAY	*Call
2096		4944<4911	3-WAY TO 4-WAY	*Call
2096		4944<4913	1-WAY TO 4-WAY	*Call
2096		4944<4914	2-WAY TO 4-WAY	*Call
2096		4944<4915	3-WAY TO 4-WAY	*Call
2096		4944<4917	1-WAY TO 4-WAY	*Call
2096		4944<4918	2-WAY TO 4-WAY	*Call
2096		4944<4921	1-WAY TO 4-WAY	*Call
2096		4944<4922	2-WAY TO 4-WAY	*Call
2096		4944<4925	1-WAY TO 4-WAY	*Call
2096		4944<4929	1-WAY TO 4-WAY	*Call
2096		4944<4933	1-WAY TO 4-WAY	*Call
2096		4944<4937	1-WAY TO 4-WAY	*Call
2096		4944<4947	3-WAY TO 4-WAY	*Call
2096		4944<4948	4-WAY TO 4-WAY	*Call
2096		4944<4951	3-WAY TO 4-WAY	*Call
2096		4944<4952	4-WAY TO 4-WAY	*Call
2096		4944<4954	2-WAY TO 4-WAY	*Call
2096		4944<4955	3-WAY TO 4-WAY	*Call
2096		4944<4956	4-WAY TO 4-WAY	*Call
2096		4944<4958	2-WAY TO 4-WAY	*Call
2096		4944<4959	3-WAY TO 4-WAY	*Call
2096		4944<4962	2-WAY TO 4-WAY	*Call
2096		4944<4963	3-WAY TO 4-WAY	*Call
2096		4944<4964	4-WAY TO 4-WAY	*Call
2096		4944<4966	2-WAY TO 4-WAY	*Call
2096		4944<4967	3-WAY TO 4-WAY	*Call
2096		4944<4968	4-WAY TO 4-WAY	*Call
2096		4944<4969	1-WAY TO 4-WAY	*Call
2096		4944<4970	2-WAY TO 4-WAY	*Call
2096		4944<4971	3-WAY TO 4-WAY	*Call
2096		4944<4972	4-WAY TO 4-WAY	*Call
2096		4944<4973	1-WAY TO 4-WAY	*Call
2096		4944<4974	2-WAY TO 4-WAY	*Call
2096		4944<4975	3-WAY TO 4-WAY	*Call
2096		4944<4976	4-WAY TO 4-WAY	*Call
2096		4944<4977	3-WAY TO 4-WAY	*Call
2096		4944<4978	2-WAY TO 4-WAY	*Call
2096		4944<4979	3-WAY TO 4-WAY	*Call
2096		4944<4980	4-WAY TO 4-WAY	*Call
2096		4944<4981	1-WAY TO 4-WAY	*Call
2096		4944<4982	2-WAY TO 4-WAY	*Call
2096		4944<4983	3-WAY TO 4-WAY	*Call
2096		4944<4984	4-WAY TO 4-WAY	*Call
2096		4944<4985	1-WAY TO 4-WAY	*Call
2096		4944<4986	2-WAY TO 4-WAY	*Call
2096		4944<4987	3-WAY TO 4-WAY	*Call
2096		4944<4988	4-WAY TO 4-WAY	*Call
2096		4944<4989	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4944<4990	2-WAY TO 4-WAY	*Call
2096		4944<4991	3-WAY TO 4-WAY	*Call
2096		4944<4992	4-WAY TO 4-WAY	*Call
2096		4944<4993	1-WAY TO 4-WAY	*Call
2096		4944<4994	2-WAY TO 4-WAY	*Call
2096		4944<4995	3-WAY TO 4-WAY	*Call
2096		4944<4996	4-WAY TO 4-WAY	*Call
2096		4944<4997	1-WAY TO 4-WAY	*Call
2096		4944<4998	2-WAY TO 4-WAY	*Call
2096		4944<4999	3-WAY TO 4-WAY	*Call
2096		4944<5000	4-WAY TO 4-WAY	*Call
2096		4944<5001	1-WAY TO 4-WAY	*Call
2096		4944<5002	2-WAY TO 4-WAY	*Call
2096		4944<5003	3-WAY TO 4-WAY	*Call
2096		4944<5004	4-WAY TO 4-WAY	*Call
2096		4947<4900	ZERO-WAY TO 3-WAY	*Call
2096		4947<4901	1-WAY TO 3-WAY	*Call
2096		4947<4902	2-WAY TO 3-WAY	*Call
2096		4947<4903	3-WAY TO 3-WAY	*Call
2096		4947<4905	1-WAY TO 3-WAY	*Call
2096		4947<4906	2-WAY TO 3-WAY	*Call
2096		4947<4907	3-WAY TO 3-WAY	*Call
2096		4947<4909	1-WAY TO 3-WAY	*Call
2096		4947<4910	2-WAY TO 3-WAY	*Call
2096		4947<4911	3-WAY TO 3-WAY	*Call
2096		4947<4913	1-WAY TO 3-WAY	*Call
2096		4947<4914	2-WAY TO 3-WAY	*Call
2096		4947<4915	3-WAY TO 3-WAY	*Call
2096		4947<4917	1-WAY TO 3-WAY	*Call
2096		4947<4918	2-WAY TO 3-WAY	*Call
2096		4947<4921	1-WAY TO 3-WAY	*Call
2096		4947<4922	2-WAY TO 3-WAY	*Call
2096		4947<4925	1-WAY TO 3-WAY	*Call
2096		4947<4929	1-WAY TO 3-WAY	*Call
2096		4947<4933	1-WAY TO 3-WAY	*Call
2096		4947<4937	1-WAY TO 3-WAY	*Call
2096		4947<4944	4-WAY TO 3-WAY	*Call
2096		4947<4948	4-WAY TO 3-WAY	*Call
2096		4947<4951	3-WAY TO 3-WAY	*Call
2096		4947<4952	4-WAY TO 3-WAY	*Call
2096		4947<4954	2-WAY TO 3-WAY	*Call
2096		4947<4955	3-WAY TO 3-WAY	*Call
2096		4947<4956	4-WAY TO 3-WAY	*Call
2096		4947<4958	2-WAY TO 3-WAY	*Call
2096		4947<4959	3-WAY TO 3-WAY	*Call
2096		4947<4960	4-WAY TO 3-WAY	*Call
2096		4947<4962	2-WAY TO 3-WAY	*Call
2096		4947<4963	3-WAY TO 3-WAY	*Call
2096		4947<4964	4-WAY TO 3-WAY	*Call
2096		4947<4966	2-WAY TO 3-WAY	*Call
2096		4947<4967	3-WAY TO 3-WAY	*Call
2096		4947<4968	4-WAY TO 3-WAY	*Call
2096		4947<4969	1-WAY TO 3-WAY	*Call
2096		4947<4970	2-WAY TO 3-WAY	*Call
2096		4947<4971	3-WAY TO 3-WAY	*Call
2096		4947<4972	4-WAY TO 3-WAY	*Call
2096		4947<4973	1-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4947<4974	2-WAY TO 3-WAY	*Call
2096		4947<4975	3-WAY TO 3-WAY	*Call
2096		4947<4976	4-WAY TO 3-WAY	*Call
2096		4947<4977	3-WAY TO 3-WAY	*Call
2096		4947<4978	2-WAY TO 3-WAY	*Call
2096		4947<4979	3-WAY TO 3-WAY	*Call
2096		4947<4980	4-WAY TO 3-WAY	*Call
2096		4947<4981	1-WAY TO 3-WAY	*Call
2096		4947<4982	2-WAY TO 3-WAY	*Call
2096		4947<4983	3-WAY TO 3-WAY	*Call
2096		4947<4984	4-WAY TO 3-WAY	*Call
2096		4947<4985	1-WAY TO 3-WAY	*Call
2096		4947<4986	2-WAY TO 3-WAY	*Call
2096		4947<4987	3-WAY TO 3-WAY	*Call
2096		4947<4988	4-WAY TO 3-WAY	*Call
2096		4947<4989	1-WAY TO 3-WAY	*Call
2096		4947<4990	2-WAY TO 3-WAY	*Call
2096		4947<4991	3-WAY TO 3-WAY	*Call
2096		4947<4992	4-WAY TO 3-WAY	*Call
2096		4947<4993	1-WAY TO 3-WAY	*Call
2096		4947<4994	2-WAY TO 3-WAY	*Call
2096		4947<4995	3-WAY TO 3-WAY	*Call
2096		4947<4996	4-WAY TO 3-WAY	*Call
2096		4947<4997	1-WAY TO 3-WAY	*Call
2096		4947<4998	2-WAY TO 3-WAY	*Call
2096		4947<4999	3-WAY TO 3-WAY	*Call
2096		4947<5000	4-WAY TO 3-WAY	*Call
2096		4947<5001	1-WAY TO 3-WAY	*Call
2096		4947<5002	2-WAY TO 3-WAY	*Call
2096		4947<5003	3-WAY TO 3-WAY	*Call
2096		4947<5004	4-WAY TO 3-WAY	*Call
2096		4948<4900	ZERO-WAY TO 4-WAY	*Call
2096		4948<4901	1-WAY TO 4-WAY	*Call
2096		4948<4902	2-WAY TO 4-WAY	*Call
2096		4948<4903	3-WAY TO 4-WAY	*Call
2096		4948<4905	1-WAY TO 4-WAY	*Call
2096		4948<4906	2-WAY TO 4-WAY	*Call
2096		4948<4907	3-WAY TO 4-WAY	*Call
2096		4948<4909	1-WAY TO 4-WAY	*Call
2096		4948<4910	2-WAY TO 4-WAY	*Call
2096		4948<4911	3-WAY TO 4-WAY	*Call
2096		4948<4913	1-WAY TO 4-WAY	*Call
2096		4948<4914	2-WAY TO 4-WAY	*Call
2096		4948<4915	3-WAY TO 4-WAY	*Call
2096		4948<4917	1-WAY TO 4-WAY	*Call
2096		4948<4918	2-WAY TO 4-WAY	*Call
2096		4948<4921	1-WAY TO 4-WAY	*Call
2096		4948<4922	2-WAY TO 4-WAY	*Call
2096		4948<4925	1-WAY TO 4-WAY	*Call
2096		4948<4929	1-WAY TO 4-WAY	*Call
2096		4948<4933	1-WAY TO 4-WAY	*Call
2096		4948<4937	1-WAY TO 4-WAY	*Call
2096		4948<4944	4-WAY TO 4-WAY	*Call
2096		4948<4947	3-WAY TO 4-WAY	*Call
2096		4948<4951	3-WAY TO 4-WAY	*Call
2096		4948<4952	4-WAY TO 4-WAY	*Call
2096		4948<4954	2-WAY TO 4-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4948<4955	3-WAY TO 4-WAY	*Call
2096			4948<4956	4-WAY TO 4-WAY	*Call
2096			4948<4958	2-WAY TO 4-WAY	*Call
2096			4948<4959	3-WAY TO 4-WAY	*Call
2096			4948<4960	4-WAY TO 4-WAY	*Call
2096			4948<4962	2-WAY TO 4-WAY	*Call
2096			4948<4963	3-WAY TO 4-WAY	*Call
2096			4948<4964	4-WAY TO 4-WAY	*Call
2096			4948<4966	2-WAY TO 4-WAY	*Call
2096			4948<4967	3-WAY TO 4-WAY	*Call
2096			4948<4968	4-WAY TO 4-WAY	*Call
2096			4948<4969	1-WAY TO 4-WAY	*Call
2096			4948<4970	2-WAY TO 4-WAY	*Call
2096			4948<4971	3-WAY TO 4-WAY	*Call
2096			4948<4972	4-WAY TO 4-WAY	*Call
2096			4948<4973	1-WAY TO 4-WAY	*Call
2096			4948<4974	2-WAY TO 4-WAY	*Call
2096			4948<4975	3-WAY TO 4-WAY	*Call
2096			4948<4976	4-WAY TO 4-WAY	*Call
2096			4948<4977	3-WAY TO 4-WAY	*Call
2096			4948<4978	2-WAY TO 4-WAY	*Call
2096			4948<4979	3-WAY TO 4-WAY	*Call
2096			4948<4980	4-WAY TO 4-WAY	*Call
2096			4948<4981	1-WAY TO 4-WAY	*Call
2096			4948<4982	2-WAY TO 4-WAY	*Call
2096			4948<4983	3-WAY TO 4-WAY	*Call
2096			4948<4984	4-WAY TO 4-WAY	*Call
2096			4948<4985	1-WAY TO 4-WAY	*Call
2096			4948<4986	2-WAY TO 4-WAY	*Call
2096			4948<4987	3-WAY TO 4-WAY	*Call
2096			4948<4988	4-WAY TO 4-WAY	*Call
2096			4948<4989	1-WAY TO 4-WAY	*Call
2096			4948<4990	2-WAY TO 4-WAY	*Call
2096			4948<4991	3-WAY TO 4-WAY	*Call
2096			4948<4992	4-WAY TO 4-WAY	*Call
2096			4948<4993	1-WAY TO 4-WAY	*Call
2096			4948<4994	2-WAY TO 4-WAY	*Call
2096			4948<4995	3-WAY TO 4-WAY	*Call
2096			4948<4996	4-WAY TO 4-WAY	*Call
2096			4948<4997	1-WAY TO 4-WAY	*Call
2096			4948<4998	2-WAY TO 4-WAY	*Call
2096			4948<4999	3-WAY TO 4-WAY	*Call
2096			4948<5000	4-WAY TO 4-WAY	*Call
2096			4948<5001	1-WAY TO 4-WAY	*Call
2096			4948<5002	2-WAY TO 4-WAY	*Call
2096			4948<5003	3-WAY TO 4-WAY	*Call
2096			4948<5004	4-WAY TO 4-WAY	*Call
2096			4951<4900	ZERO-WAY TO 3-WAY	*Call
2096			4951<4901	1-WAY TO 3-WAY	*Call
2096			4951<4902	2-WAY TO 3-WAY	*Call
2096			4951<4903	3-WAY TO 3-WAY	*Call
2096			4951<4905	1-WAY TO 3-WAY	*Call
2096			4951<4906	2-WAY TO 3-WAY	*Call
2096			4951<4907	3-WAY TO 3-WAY	*Call
2096			4951<4909	1-WAY TO 3-WAY	*Call
2096			4951<4910	2-WAY TO 3-WAY	*Call
2096			4951<4911	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4951<4913	1-WAY TO 3-WAY	*Call
2096		4951<4914	2-WAY TO 3-WAY	*Call
2096		4951<4915	3-WAY TO 3-WAY	*Call
2096		4951<4917	1-WAY TO 3-WAY	*Call
2096		4951<4918	2-WAY TO 3-WAY	*Call
2096		4951<4921	1-WAY TO 3-WAY	*Call
2096		4951<4922	2-WAY TO 3-WAY	*Call
2096		4951<4925	1-WAY TO 3-WAY	*Call
2096		4951<4929	1-WAY TO 3-WAY	*Call
2096		4951<4933	1-WAY TO 3-WAY	*Call
2096		4951<4937	1-WAY TO 3-WAY	*Call
2096		4951<4944	4-WAY TO 3-WAY	*Call
2096		4951<4947	3-WAY TO 3-WAY	*Call
2096		4951<4948	4-WAY TO 3-WAY	*Call
2096		4951<4952	4-WAY TO 3-WAY	*Call
2096		4951<4954	2-WAY TO 3-WAY	*Call
2096		4951<4955	3-WAY TO 3-WAY	*Call
2096		4951<4956	4-WAY TO 3-WAY	*Call
2096		4951<4958	2-WAY TO 3-WAY	*Call
2096		4951<4959	3-WAY TO 3-WAY	*Call
2096		4951<4960	4-WAY TO 3-WAY	*Call
2096		4951<4962	2-WAY TO 3-WAY	*Call
2096		4951<4963	3-WAY TO 3-WAY	*Call
2096		4951<4964	4-WAY TO 3-WAY	*Call
2096		4951<4966	2-WAY TO 3-WAY	*Call
2096		4951<4967	3-WAY TO 3-WAY	*Call
2096		4951<4968	4-WAY TO 3-WAY	*Call
2096		4951<4969	1-WAY TO 3-WAY	*Call
2096		4951<4970	2-WAY TO 3-WAY	*Call
2096		4951<4971	3-WAY TO 3-WAY	*Call
2096		4951<4972	4-WAY TO 3-WAY	*Call
2096		4951<4973	1-WAY TO 3-WAY	*Call
2096		4951<4974	2-WAY TO 3-WAY	*Call
2096		4951<4975	3-WAY TO 3-WAY	*Call
2096		4951<4976	4-WAY TO 3-WAY	*Call
2096		4951<4977	3-WAY TO 3-WAY	*Call
2096		4951<4978	2-WAY TO 3-WAY	*Call
2096		4951<4979	3-WAY TO 3-WAY	*Call
2096		4951<4980	4-WAY TO 3-WAY	*Call
2096		4951<4981	1-WAY TO 3-WAY	*Call
2096		4951<4982	2-WAY TO 3-WAY	*Call
2096		4951<4983	3-WAY TO 3-WAY	*Call
2096		4951<4984	4-WAY TO 3-WAY	*Call
2096		4951<4985	1-WAY TO 3-WAY	*Call
2096		4951<4986	2-WAY TO 3-WAY	*Call
2096		4951<4987	3-WAY TO 3-WAY	*Call
2096		4951<4988	4-WAY TO 3-WAY	*Call
2096		4951<4989	1-WAY TO 3-WAY	*Call
2096		4951<4990	2-WAY TO 3-WAY	*Call
2096		4951<4991	3-WAY TO 3-WAY	*Call
2096		4951<4992	4-WAY TO 3-WAY	*Call
2096		4951<4993	1-WAY TO 3-WAY	*Call
2096		4951<4994	2-WAY TO 3-WAY	*Call
2096		4951<4995	3-WAY TO 3-WAY	*Call
2096		4951<4996	4-WAY TO 3-WAY	*Call
2096		4951<4997	1-WAY TO 3-WAY	*Call
2096		4951<4998	2-WAY TO 3-WAY	*Call

Machine	Model	Feature	Description	GSA Price
2096		4951<4999	3-WAY TO 3-WAY	*Call
2096		4951<5000	4-WAY TO 3-WAY	*Call
2096		4951<5001	1-WAY TO 3-WAY	*Call
2096		4951<5002	2-WAY TO 3-WAY	*Call
2096		4951<5003	3-WAY TO 3-WAY	*Call
2096		4951<5004	4-WAY TO 3-WAY	*Call
2096		4952<4900	ZERO-WAY TO 4-WAY	*Call
2096		4952<4901	1-WAY TO 4-WAY	*Call
2096		4952<4902	2-WAY TO 4-WAY	*Call
2096		4952<4903	3-WAY TO 4-WAY	*Call
2096		4952<4905	1-WAY TO 4-WAY	*Call
2096		4952<4906	2-WAY TO 4-WAY	*Call
2096		4952<4907	3-WAY TO 4-WAY	*Call
2096		4952<4909	1-WAY TO 4-WAY	*Call
2096		4952<4910	2-WAY TO 4-WAY	*Call
2096		4952<4911	3-WAY TO 4-WAY	*Call
2096		4952<4913	1-WAY TO 4-WAY	*Call
2096		4952<4914	2-WAY TO 4-WAY	*Call
2096		4952<4915	3-WAY TO 4-WAY	*Call
2096		4952<4917	1-WAY TO 4-WAY	*Call
2096		4952<4918	2-WAY TO 4-WAY	*Call
2096		4952<4921	1-WAY TO 4-WAY	*Call
2096		4952<4922	2-WAY TO 4-WAY	*Call
2096		4952<4925	1-WAY TO 4-WAY	*Call
2096		4952<4929	1-WAY TO 4-WAY	*Call
2096		4952<4933	1-WAY TO 4-WAY	*Call
2096		4952<4937	1-WAY TO 4-WAY	*Call
2096		4952<4944	4-WAY TO 4-WAY	*Call
2096		4952<4947	3-WAY TO 4-WAY	*Call
2096		4952<4948	4-WAY TO 4-WAY	*Call
2096		4952<4951	3-WAY TO 4-WAY	*Call
2096		4952<4954	2-WAY TO 4-WAY	*Call
2096		4952<4955	3-WAY TO 4-WAY	*Call
2096		4952<4956	4-WAY TO 4-WAY	*Call
2096		4952<4958	2-WAY TO 4-WAY	*Call
2096		4952<4959	3-WAY TO 4-WAY	*Call
2096		4952<4960	4-WAY TO 4-WAY	*Call
2096		4952<4962	2-WAY TO 4-WAY	*Call
2096		4952<4963	3-WAY TO 4-WAY	*Call
2096		4952<4964	4-WAY TO 4-WAY	*Call
2096		4952<4966	2-WAY TO 4-WAY	*Call
2096		4952<4967	3-WAY TO 4-WAY	*Call
2096		4952<4968	4-WAY TO 4-WAY	*Call
2096		4952<4969	1-WAY TO 4-WAY	*Call
2096		4952<4970	2-WAY TO 4-WAY	*Call
2096		4952<4971	3-WAY TO 4-WAY	*Call
2096		4952<4972	4-WAY TO 4-WAY	*Call
2096		4952<4973	1-WAY TO 4-WAY	*Call
2096		4952<4974	2-WAY TO 4-WAY	*Call
2096		4952<4975	3-WAY TO 4-WAY	*Call
2096		4952<4976	4-WAY TO 4-WAY	*Call
2096		4952<4977	3-WAY TO 4-WAY	*Call
2096		4952<4978	2-WAY TO 4-WAY	*Call
2096		4952<4979	3-WAY TO 4-WAY	*Call
2096		4952<4980	4-WAY TO 4-WAY	*Call
2096		4952<4981	1-WAY TO 4-WAY	*Call
2096		4952<4982	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4952<4983	3-WAY TO 4-WAY	*Call
2096		4952<4984	4-WAY TO 4-WAY	*Call
2096		4952<4985	1-WAY TO 4-WAY	*Call
2096		4952<4986	2-WAY TO 4-WAY	*Call
2096		4952<4987	3-WAY TO 4-WAY	*Call
2096		4952<4988	4-WAY TO 4-WAY	*Call
2096		4952<4989	1-WAY TO 4-WAY	*Call
2096		4952<4990	2-WAY TO 4-WAY	*Call
2096		4952<4991	3-WAY TO 4-WAY	*Call
2096		4952<4992	4-WAY TO 4-WAY	*Call
2096		4952<4993	1-WAY TO 4-WAY	*Call
2096		4952<4994	2-WAY TO 4-WAY	*Call
2096		4952<4995	3-WAY TO 4-WAY	*Call
2096		4952<4996	4-WAY TO 4-WAY	*Call
2096		4952<4997	1-WAY TO 4-WAY	*Call
2096		4952<4998	2-WAY TO 4-WAY	*Call
2096		4952<4999	3-WAY TO 4-WAY	*Call
2096		4952<5000	4-WAY TO 4-WAY	*Call
2096		4952<5001	1-WAY TO 4-WAY	*Call
2096		4952<5002	2-WAY TO 4-WAY	*Call
2096		4952<5003	3-WAY TO 4-WAY	*Call
2096		4952<5004	4-WAY TO 4-WAY	*Call
2096		4954<4900	ZERO-WAY TO 2-WAY	*Call
2096		4954<4901	1-WAY TO 2-WAY	*Call
2096		4954<4902	2-WAY TO 2-WAY	*Call
2096		4954<4903	3-WAY TO 2-WAY	*Call
2096		4954<4905	1-WAY TO 2-WAY	*Call
2096		4954<4906	2-WAY TO 2-WAY	*Call
2096		4954<4907	3-WAY TO 2-WAY	*Call
2096		4954<4909	1-WAY TO 2-WAY	*Call
2096		4954<4910	2-WAY TO 2-WAY	*Call
2096		4954<4911	3-WAY TO 2-WAY	*Call
2096		4954<4913	1-WAY TO 2-WAY	*Call
2096		4954<4914	2-WAY TO 2-WAY	*Call
2096		4954<4915	3-WAY TO 2-WAY	*Call
2096		4954<4917	1-WAY TO 2-WAY	*Call
2096		4954<4918	2-WAY TO 2-WAY	*Call
2096		4954<4921	1-WAY TO 2-WAY	*Call
2096		4954<4922	2-WAY TO 2-WAY	*Call
2096		4954<4925	1-WAY TO 2-WAY	*Call
2096		4954<4929	1-WAY TO 2-WAY	*Call
2096		4954<4933	1-WAY TO 2-WAY	*Call
2096		4954<4937	1-WAY TO 2-WAY	*Call
2096		4954<4944	4-WAY TO 2-WAY	*Call
2096		4954<4947	3-WAY TO 2-WAY	*Call
2096		4954<4948	4-WAY TO 2-WAY	*Call
2096		4954<4951	3-WAY TO 2-WAY	*Call
2096		4954<4952	4-WAY TO 2-WAY	*Call
2096		4954<4955	3-WAY TO 2-WAY	*Call
2096		4954<4956	4-WAY TO 2-WAY	*Call
2096		4954<4958	2-WAY TO 2-WAY	*Call
2096		4954<4959	3-WAY TO 2-WAY	*Call
2096		4954<4960	4-WAY TO 2-WAY	*Call
2096		4954<4962	2-WAY TO 2-WAY	*Call
2096		4954<4963	3-WAY TO 2-WAY	*Call
2096		4954<4964	4-WAY TO 2-WAY	*Call
2096		4954<4966	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4954<4967	3-WAY TO 2-WAY	*Call
2096		4954<4968	4-WAY TO 2-WAY	*Call
2096		4954<4969	1-WAY TO 2-WAY	*Call
2096		4954<4970	2-WAY TO 2-WAY	*Call
2096		4954<4971	3-WAY TO 2-WAY	*Call
2096		4954<4972	4-WAY TO 2-WAY	*Call
2096		4954<4973	1-WAY TO 2-WAY	*Call
2096		4954<4974	2-WAY TO 2-WAY	*Call
2096		4954<4975	3-WAY TO 2-WAY	*Call
2096		4954<4976	4-WAY TO 2-WAY	*Call
2096		4954<4977	3-WAY TO 2-WAY	*Call
2096		4954<4978	2-WAY TO 2-WAY	*Call
2096		4954<4979	3-WAY TO 2-WAY	*Call
2096		4954<4980	4-WAY TO 2-WAY	*Call
2096		4954<4981	1-WAY TO 2-WAY	*Call
2096		4954<4982	2-WAY TO 2-WAY	*Call
2096		4954<4983	3-WAY TO 2-WAY	*Call
2096		4954<4984	4-WAY TO 2-WAY	*Call
2096		4954<4985	1-WAY TO 2-WAY	*Call
2096		4954<4986	2-WAY TO 2-WAY	*Call
2096		4954<4987	3-WAY TO 2-WAY	*Call
2096		4954<4988	4-WAY TO 2-WAY	*Call
2096		4954<4989	1-WAY TO 2-WAY	*Call
2096		4954<4990	2-WAY TO 2-WAY	*Call
2096		4954<4991	3-WAY TO 2-WAY	*Call
2096		4954<4992	4-WAY TO 2-WAY	*Call
2096		4954<4993	1-WAY TO 2-WAY	*Call
2096		4954<4994	2-WAY TO 2-WAY	*Call
2096		4954<4995	3-WAY TO 2-WAY	*Call
2096		4954<4996	4-WAY TO 2-WAY	*Call
2096		4954<4997	1-WAY TO 2-WAY	*Call
2096		4954<4998	2-WAY TO 2-WAY	*Call
2096		4954<4999	3-WAY TO 2-WAY	*Call
2096		4954<5000	4-WAY TO 2-WAY	*Call
2096		4954<5001	1-WAY TO 2-WAY	*Call
2096		4954<5002	2-WAY TO 2-WAY	*Call
2096		4954<5003	3-WAY TO 2-WAY	*Call
2096		4954<5004	4-WAY TO 2-WAY	*Call
2096		4955<4900	ZERO-WAY TO 3-WAY	*Call
2096		4955<4901	1-WAY TO 3-WAY	*Call
2096		4955<4902	2-WAY TO 3-WAY	*Call
2096		4955<4903	3-WAY TO 3-WAY	*Call
2096		4955<4905	1-WAY TO 3-WAY	*Call
2096		4955<4906	2-WAY TO 3-WAY	*Call
2096		4955<4907	3-WAY TO 3-WAY	*Call
2096		4955<4909	1-WAY TO 3-WAY	*Call
2096		4955<4910	2-WAY TO 3-WAY	*Call
2096		4955<4911	3-WAY TO 3-WAY	*Call
2096		4955<4913	1-WAY TO 3-WAY	*Call
2096		4955<4914	2-WAY TO 3-WAY	*Call
2096		4955<4915	3-WAY TO 3-WAY	*Call
2096		4955<4917	1-WAY TO 3-WAY	*Call
2096		4955<4918	2-WAY TO 3-WAY	*Call
2096		4955<4921	1-WAY TO 3-WAY	*Call
2096		4955<4922	2-WAY TO 3-WAY	*Call
2096		4955<4925	1-WAY TO 3-WAY	*Call
2096		4955<4929	1-WAY TO 3-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4955<4933	1-WAY TO 3-WAY	*Call
2096			4955<4937	1-WAY TO 3-WAY	*Call
2096			4955<4944	4-WAY TO 3-WAY	*Call
2096			4955<4947	3-WAY TO 3-WAY	*Call
2096			4955<4948	4-WAY TO 3-WAY	*Call
2096			4955<4951	3-WAY TO 3-WAY	*Call
2096			4955<4952	4-WAY TO 3-WAY	*Call
2096			4955<4954	2-WAY TO 3-WAY	*Call
2096			4955<4956	4-WAY TO 3-WAY	*Call
2096			4955<4958	2-WAY TO 3-WAY	*Call
2096			4955<4959	3-WAY TO 3-WAY	*Call
2096			4955<4960	4-WAY TO 3-WAY	*Call
2096			4955<4962	2-WAY TO 3-WAY	*Call
2096			4955<4963	3-WAY TO 3-WAY	*Call
2096			4955<4964	4-WAY TO 3-WAY	*Call
2096			4955<4966	2-WAY TO 3-WAY	*Call
2096			4955<4967	3-WAY TO 3-WAY	*Call
2096			4955<4968	4-WAY TO 3-WAY	*Call
2096			4955<4969	1-WAY TO 3-WAY	*Call
2096			4955<4970	2-WAY TO 3-WAY	*Call
2096			4955<4971	3-WAY TO 3-WAY	*Call
2096			4955<4972	4-WAY TO 3-WAY	*Call
2096			4955<4973	1-WAY TO 3-WAY	*Call
2096			4955<4974	2-WAY TO 3-WAY	*Call
2096			4955<4975	3-WAY TO 3-WAY	*Call
2096			4955<4976	4-WAY TO 3-WAY	*Call
2096			4955<4977	3-WAY TO 3-WAY	*Call
2096			4955<4978	2-WAY TO 3-WAY	*Call
2096			4955<4979	3-WAY TO 3-WAY	*Call
2096			4955<4980	4-WAY TO 3-WAY	*Call
2096			4955<4981	1-WAY TO 3-WAY	*Call
2096			4955<4982	2-WAY TO 3-WAY	*Call
2096			4955<4983	3-WAY TO 3-WAY	*Call
2096			4955<4984	4-WAY TO 3-WAY	*Call
2096			4955<4985	1-WAY TO 3-WAY	*Call
2096			4955<4986	2-WAY TO 3-WAY	*Call
2096			4955<4987	3-WAY TO 3-WAY	*Call
2096			4955<4988	4-WAY TO 3-WAY	*Call
2096			4955<4989	1-WAY TO 3-WAY	*Call
2096			4955<4990	2-WAY TO 3-WAY	*Call
2096			4955<4991	3-WAY TO 3-WAY	*Call
2096			4955<4992	4-WAY TO 3-WAY	*Call
2096			4955<4993	1-WAY TO 3-WAY	*Call
2096			4955<4994	2-WAY TO 3-WAY	*Call
2096			4955<4995	3-WAY TO 3-WAY	*Call
2096			4955<4996	4-WAY TO 3-WAY	*Call
2096			4955<4997	1-WAY TO 3-WAY	*Call
2096			4955<4998	2-WAY TO 3-WAY	*Call
2096			4955<4999	3-WAY TO 3-WAY	*Call
2096			4955<5000	4-WAY TO 3-WAY	*Call
2096			4955<5001	1-WAY TO 3-WAY	*Call
2096			4955<5002	2-WAY TO 3-WAY	*Call
2096			4955<5003	3-WAY TO 3-WAY	*Call
2096			4955<5004	4-WAY TO 3-WAY	*Call
2096			4956<4900	ZERO-WAY TO 4-WAY	*Call
2096			4956<4901	1-WAY TO 4-WAY	*Call
2096			4956<4902	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4956<4903	3-WAY TO 4-WAY	*Call
2096		4956<4905	1-WAY TO 4-WAY	*Call
2096		4956<4906	2-WAY TO 4-WAY	*Call
2096		4956<4907	3-WAY TO 4-WAY	*Call
2096		4956<4909	1-WAY TO 4-WAY	*Call
2096		4956<4910	2-WAY TO 4-WAY	*Call
2096		4956<4911	3-WAY TO 4-WAY	*Call
2096		4956<4913	1-WAY TO 4-WAY	*Call
2096		4956<4914	2-WAY TO 4-WAY	*Call
2096		4956<4915	3-WAY TO 4-WAY	*Call
2096		4956<4917	1-WAY TO 4-WAY	*Call
2096		4956<4918	2-WAY TO 4-WAY	*Call
2096		4956<4921	1-WAY TO 4-WAY	*Call
2096		4956<4922	2-WAY TO 4-WAY	*Call
2096		4956<4925	1-WAY TO 4-WAY	*Call
2096		4956<4929	1-WAY TO 4-WAY	*Call
2096		4956<4933	1-WAY TO 4-WAY	*Call
2096		4956<4937	1-WAY TO 4-WAY	*Call
2096		4956<4944	4-WAY TO 4-WAY	*Call
2096		4956<4947	3-WAY TO 4-WAY	*Call
2096		4956<4948	4-WAY TO 4-WAY	*Call
2096		4956<4951	3-WAY TO 4-WAY	*Call
2096		4956<4952	4-WAY TO 4-WAY	*Call
2096		4956<4954	2-WAY TO 4-WAY	*Call
2096		4956<4955	3-WAY TO 4-WAY	*Call
2096		4956<4958	2-WAY TO 4-WAY	*Call
2096		4956<4959	3-WAY TO 4-WAY	*Call
2096		4956<4960	4-WAY TO 4-WAY	*Call
2096		4956<4962	2-WAY TO 4-WAY	*Call
2096		4956<4963	3-WAY TO 4-WAY	*Call
2096		4956<4964	4-WAY TO 4-WAY	*Call
2096		4956<4966	2-WAY TO 4-WAY	*Call
2096		4956<4967	3-WAY TO 4-WAY	*Call
2096		4956<4968	4-WAY TO 4-WAY	*Call
2096		4956<4969	1-WAY TO 4-WAY	*Call
2096		4956<4970	2-WAY TO 4-WAY	*Call
2096		4956<4971	3-WAY TO 4-WAY	*Call
2096		4956<4972	4-WAY TO 4-WAY	*Call
2096		4956<4973	1-WAY TO 4-WAY	*Call
2096		4956<4974	2-WAY TO 4-WAY	*Call
2096		4956<4975	3-WAY TO 4-WAY	*Call
2096		4956<4976	4-WAY TO 4-WAY	*Call
2096		4956<4977	3-WAY TO 4-WAY	*Call
2096		4956<4978	2-WAY TO 4-WAY	*Call
2096		4956<4979	3-WAY TO 4-WAY	*Call
2096		4956<4980	4-WAY TO 4-WAY	*Call
2096		4956<4981	1-WAY TO 4-WAY	*Call
2096		4956<4982	2-WAY TO 4-WAY	*Call
2096		4956<4983	3-WAY TO 4-WAY	*Call
2096		4956<4984	4-WAY TO 4-WAY	*Call
2096		4956<4985	1-WAY TO 4-WAY	*Call
2096		4956<4986	2-WAY TO 4-WAY	*Call
2096		4956<4987	3-WAY TO 4-WAY	*Call
2096		4956<4988	4-WAY TO 4-WAY	*Call
2096		4956<4989	1-WAY TO 4-WAY	*Call
2096		4956<4990	2-WAY TO 4-WAY	*Call
2096		4956<4991	3-WAY TO 4-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4956<4992	4-WAY TO 4-WAY	*Call
2096			4956<4993	1-WAY TO 4-WAY	*Call
2096			4956<4994	2-WAY TO 4-WAY	*Call
2096			4956<4995	3-WAY TO 4-WAY	*Call
2096			4956<4996	4-WAY TO 4-WAY	*Call
2096			4956<4997	1-WAY TO 4-WAY	*Call
2096			4956<4998	2-WAY TO 4-WAY	*Call
2096			4956<4999	3-WAY TO 4-WAY	*Call
2096			4956<5000	4-WAY TO 4-WAY	*Call
2096			4956<5001	1-WAY TO 4-WAY	*Call
2096			4956<5002	2-WAY TO 4-WAY	*Call
2096			4956<5003	3-WAY TO 4-WAY	*Call
2096			4956<5004	4-WAY TO 4-WAY	*Call
2096			4958<4900	ZERO-WAY TO 2-WAY	*Call
2096			4958<4901	1-WAY TO 2-WAY	*Call
2096			4958<4902	2-WAY TO 2-WAY	*Call
2096			4958<4903	3-WAY TO 2-WAY	*Call
2096			4958<4905	1-WAY TO 2-WAY	*Call
2096			4958<4906	2-WAY TO 2-WAY	*Call
2096			4958<4907	3-WAY TO 2-WAY	*Call
2096			4958<4909	1-WAY TO 2-WAY	*Call
2096			4958<4910	2-WAY TO 2-WAY	*Call
2096			4958<4911	3-WAY TO 2-WAY	*Call
2096			4958<4913	1-WAY TO 2-WAY	*Call
2096			4958<4914	2-WAY TO 2-WAY	*Call
2096			4958<4915	3-WAY TO 2-WAY	*Call
2096			4958<4917	1-WAY TO 2-WAY	*Call
2096			4958<4918	2-WAY TO 2-WAY	*Call
2096			4958<4921	1-WAY TO 2-WAY	*Call
2096			4958<4922	2-WAY TO 2-WAY	*Call
2096			4958<4925	1-WAY TO 2-WAY	*Call
2096			4958<4929	1-WAY TO 2-WAY	*Call
2096			4958<4933	1-WAY TO 2-WAY	*Call
2096			4958<4937	1-WAY TO 2-WAY	*Call
2096			4958<4944	4-WAY TO 2-WAY	*Call
2096			4958<4947	3-WAY TO 2-WAY	*Call
2096			4958<4948	4-WAY TO 2-WAY	*Call
2096			4958<4951	3-WAY TO 2-WAY	*Call
2096			4958<4952	4-WAY TO 2-WAY	*Call
2096			4958<4954	2-WAY TO 2-WAY	*Call
2096			4958<4955	3-WAY TO 2-WAY	*Call
2096			4958<4956	4-WAY TO 2-WAY	*Call
2096			4958<4959	3-WAY TO 2-WAY	*Call
2096			4958<4960	4-WAY TO 2-WAY	*Call
2096			4958<4962	2-WAY TO 2-WAY	*Call
2096			4958<4963	3-WAY TO 2-WAY	*Call
2096			4958<4964	4-WAY TO 2-WAY	*Call
2096			4958<4966	2-WAY TO 2-WAY	*Call
2096			4958<4967	3-WAY TO 2-WAY	*Call
2096			4958<4968	4-WAY TO 2-WAY	*Call
2096			4958<4969	1-WAY TO 2-WAY	*Call
2096			4958<4970	2-WAY TO 2-WAY	*Call
2096			4958<4971	3-WAY TO 2-WAY	*Call
2096			4958<4972	4-WAY TO 2-WAY	*Call
2096			4958<4973	1-WAY TO 2-WAY	*Call
2096			4958<4974	2-WAY TO 2-WAY	*Call
2096			4958<4975	3-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4958<4976	4-WAY TO 2-WAY	*Call
2096		4958<4977	3-WAY TO 2-WAY	*Call
2096		4958<4978	2-WAY TO 2-WAY	*Call
2096		4958<4979	3-WAY TO 2-WAY	*Call
2096		4958<4980	4-WAY TO 2-WAY	*Call
2096		4958<4981	1-WAY TO 2-WAY	*Call
2096		4958<4982	2-WAY TO 2-WAY	*Call
2096		4958<4983	3-WAY TO 2-WAY	*Call
2096		4958<4984	4-WAY TO 2-WAY	*Call
2096		4958<4985	1-WAY TO 2-WAY	*Call
2096		4958<4986	2-WAY TO 2-WAY	*Call
2096		4958<4987	3-WAY TO 2-WAY	*Call
2096		4958<4988	4-WAY TO 2-WAY	*Call
2096		4958<4989	1-WAY TO 2-WAY	*Call
2096		4958<4990	2-WAY TO 2-WAY	*Call
2096		4958<4991	3-WAY TO 2-WAY	*Call
2096		4958<4992	4-WAY TO 2-WAY	*Call
2096		4958<4993	1-WAY TO 2-WAY	*Call
2096		4958<4994	2-WAY TO 2-WAY	*Call
2096		4958<4995	3-WAY TO 2-WAY	*Call
2096		4958<4996	4-WAY TO 2-WAY	*Call
2096		4958<4997	1-WAY TO 2-WAY	*Call
2096		4958<4998	2-WAY TO 2-WAY	*Call
2096		4958<4999	3-WAY TO 2-WAY	*Call
2096		4958<5000	4-WAY TO 2-WAY	*Call
2096		4958<5001	1-WAY TO 2-WAY	*Call
2096		4958<5002	2-WAY TO 2-WAY	*Call
2096		4958<5003	3-WAY TO 2-WAY	*Call
2096		4958<5004	4-WAY TO 2-WAY	*Call
2096		4959<4900	ZERO-WAY TO 3-WAY	*Call
2096		4959<4901	1-WAY TO 3-WAY	*Call
2096		4959<4902	2-WAY TO 3-WAY	*Call
2096		4959<4903	3-WAY TO 3-WAY	*Call
2096		4959<4905	1-WAY TO 3-WAY	*Call
2096		4959<4906	2-WAY TO 3-WAY	*Call
2096		4959<4907	3-WAY TO 3-WAY	*Call
2096		4959<4909	1-WAY TO 3-WAY	*Call
2096		4959<4910	2-WAY TO 3-WAY	*Call
2096		4959<4911	3-WAY TO 3-WAY	*Call
2096		4959<4913	1-WAY TO 3-WAY	*Call
2096		4959<4914	2-WAY TO 3-WAY	*Call
2096		4959<4915	3-WAY TO 3-WAY	*Call
2096		4959<4917	1-WAY TO 3-WAY	*Call
2096		4959<4918	2-WAY TO 3-WAY	*Call
2096		4959<4921	1-WAY TO 3-WAY	*Call
2096		4959<4922	2-WAY TO 3-WAY	*Call
2096		4959<4925	1-WAY TO 3-WAY	*Call
2096		4959<4929	1-WAY TO 3-WAY	*Call
2096		4959<4933	1-WAY TO 3-WAY	*Call
2096		4959<4937	1-WAY TO 3-WAY	*Call
2096		4959<4944	4-WAY TO 3-WAY	*Call
2096		4959<4947	3-WAY TO 3-WAY	*Call
2096		4959<4948	4-WAY TO 3-WAY	*Call
2096		4959<4951	3-WAY TO 3-WAY	*Call
2096		4959<4952	4-WAY TO 3-WAY	*Call
2096		4959<4954	2-WAY TO 3-WAY	*Call
2096		4959<4955	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4959<4956	4-WAY TO 3-WAY	*Call
2096		4959<4958	2-WAY TO 3-WAY	*Call
2096		4959<4960	4-WAY TO 3-WAY	*Call
2096		4959<4962	2-WAY TO 3-WAY	*Call
2096		4959<4963	3-WAY TO 3-WAY	*Call
2096		4959<4964	4-WAY TO 3-WAY	*Call
2096		4959<4966	2-WAY TO 3-WAY	*Call
2096		4959<4967	3-WAY TO 3-WAY	*Call
2096		4959<4968	4-WAY TO 3-WAY	*Call
2096		4959<4969	1-WAY TO 3-WAY	*Call
2096		4959<4970	2-WAY TO 3-WAY	*Call
2096		4959<4971	3-WAY TO 3-WAY	*Call
2096		4959<4972	4-WAY TO 3-WAY	*Call
2096		4959<4973	1-WAY TO 3-WAY	*Call
2096		4959<4974	2-WAY TO 3-WAY	*Call
2096		4959<4975	3-WAY TO 3-WAY	*Call
2096		4959<4976	4-WAY TO 3-WAY	*Call
2096		4959<4977	3-WAY TO 3-WAY	*Call
2096		4959<4978	2-WAY TO 3-WAY	*Call
2096		4959<4979	3-WAY TO 3-WAY	*Call
2096		4959<4980	4-WAY TO 3-WAY	*Call
2096		4959<4981	1-WAY TO 3-WAY	*Call
2096		4959<4982	2-WAY TO 3-WAY	*Call
2096		4959<4983	3-WAY TO 3-WAY	*Call
2096		4959<4984	4-WAY TO 3-WAY	*Call
2096		4959<4985	1-WAY TO 3-WAY	*Call
2096		4959<4986	2-WAY TO 3-WAY	*Call
2096		4959<4987	3-WAY TO 3-WAY	*Call
2096		4959<4988	4-WAY TO 3-WAY	*Call
2096		4959<4989	1-WAY TO 3-WAY	*Call
2096		4959<4990	2-WAY TO 3-WAY	*Call
2096		4959<4991	3-WAY TO 3-WAY	*Call
2096		4959<4992	4-WAY TO 3-WAY	*Call
2096		4959<4993	1-WAY TO 3-WAY	*Call
2096		4959<4994	2-WAY TO 3-WAY	*Call
2096		4959<4995	3-WAY TO 3-WAY	*Call
2096		4959<4996	4-WAY TO 3-WAY	*Call
2096		4959<4997	1-WAY TO 3-WAY	*Call
2096		4959<4998	2-WAY TO 3-WAY	*Call
2096		4959<4999	3-WAY TO 3-WAY	*Call
2096		4959<5000	4-WAY TO 3-WAY	*Call
2096		4959<5001	1-WAY TO 3-WAY	*Call
2096		4959<5002	2-WAY TO 3-WAY	*Call
2096		4959<5003	3-WAY TO 3-WAY	*Call
2096		4959<5004	4-WAY TO 3-WAY	*Call
2096		4960<4900	ZERO-WAY TO 4-WAY	*Call
2096		4960<4901	1-WAY TO 4-WAY	*Call
2096		4960<4902	2-WAY TO 4-WAY	*Call
2096		4960<4903	3-WAY TO 4-WAY	*Call
2096		4960<4905	1-WAY TO 4-WAY	*Call
2096		4960<4906	2-WAY TO 4-WAY	*Call
2096		4960<4907	3-WAY TO 4-WAY	*Call
2096		4960<4909	1-WAY TO 4-WAY	*Call
2096		4960<4910	2-WAY TO 4-WAY	*Call
2096		4960<4911	3-WAY TO 4-WAY	*Call
2096		4960<4913	1-WAY TO 4-WAY	*Call
2096		4960<4914	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4960<4915	3-WAY TO 4-WAY	*Call
2096		4960<4917	1-WAY TO 4-WAY	*Call
2096		4960<4918	2-WAY TO 4-WAY	*Call
2096		4960<4921	1-WAY TO 4-WAY	*Call
2096		4960<4922	2-WAY TO 4-WAY	*Call
2096		4960<4925	1-WAY TO 4-WAY	*Call
2096		4960<4929	1-WAY TO 4-WAY	*Call
2096		4960<4933	1-WAY TO 4-WAY	*Call
2096		4960<4937	1-WAY TO 4-WAY	*Call
2096		4960<4944	4-WAY TO 4-WAY	*Call
2096		4960<4947	3-WAY TO 4-WAY	*Call
2096		4960<4948	4-WAY TO 4-WAY	*Call
2096		4960<4951	3-WAY TO 4-WAY	*Call
2096		4960<4952	4-WAY TO 4-WAY	*Call
2096		4960<4954	2-WAY TO 4-WAY	*Call
2096		4960<4955	3-WAY TO 4-WAY	*Call
2096		4960<4956	4-WAY TO 4-WAY	*Call
2096		4960<4958	2-WAY TO 4-WAY	*Call
2096		4960<4959	3-WAY TO 4-WAY	*Call
2096		4960<4962	2-WAY TO 4-WAY	*Call
2096		4960<4963	3-WAY TO 4-WAY	*Call
2096		4960<4964	4-WAY TO 4-WAY	*Call
2096		4960<4966	2-WAY TO 4-WAY	*Call
2096		4960<4967	3-WAY TO 4-WAY	*Call
2096		4960<4968	4-WAY TO 4-WAY	*Call
2096		4960<4969	1-WAY TO 4-WAY	*Call
2096		4960<4970	2-WAY TO 4-WAY	*Call
2096		4960<4971	3-WAY TO 4-WAY	*Call
2096		4960<4972	4-WAY TO 4-WAY	*Call
2096		4960<4973	1-WAY TO 4-WAY	*Call
2096		4960<4974	2-WAY TO 4-WAY	*Call
2096		4960<4975	3-WAY TO 4-WAY	*Call
2096		4960<4976	4-WAY TO 4-WAY	*Call
2096		4960<4977	3-WAY TO 4-WAY	*Call
2096		4960<4978	2-WAY TO 4-WAY	*Call
2096		4960<4979	3-WAY TO 4-WAY	*Call
2096		4960<4980	4-WAY TO 4-WAY	*Call
2096		4960<4981	1-WAY TO 4-WAY	*Call
2096		4960<4982	2-WAY TO 4-WAY	*Call
2096		4960<4983	3-WAY TO 4-WAY	*Call
2096		4960<4984	4-WAY TO 4-WAY	*Call
2096		4960<4985	1-WAY TO 4-WAY	*Call
2096		4960<4986	2-WAY TO 4-WAY	*Call
2096		4960<4987	3-WAY TO 4-WAY	*Call
2096		4960<4988	4-WAY TO 4-WAY	*Call
2096		4960<4989	1-WAY TO 4-WAY	*Call
2096		4960<4990	2-WAY TO 4-WAY	*Call
2096		4960<4991	3-WAY TO 4-WAY	*Call
2096		4960<4992	4-WAY TO 4-WAY	*Call
2096		4960<4993	1-WAY TO 4-WAY	*Call
2096		4960<4994	2-WAY TO 4-WAY	*Call
2096		4960<4995	3-WAY TO 4-WAY	*Call
2096		4960<4996	4-WAY TO 4-WAY	*Call
2096		4960<4997	1-WAY TO 4-WAY	*Call
2096		4960<4998	2-WAY TO 4-WAY	*Call
2096		4960<4999	3-WAY TO 4-WAY	*Call
2096		4960<5000	4-WAY TO 4-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4960<5001	1-WAY TO 4-WAY	*Call
2096			4960<5002	2-WAY TO 4-WAY	*Call
2096			4960<5003	3-WAY TO 4-WAY	*Call
2096			4960<5004	4-WAY TO 4-WAY	*Call
2096			4962<4900	ZERO-WAY TO 2-WAY	*Call
2096			4962<4901	1-WAY TO 2-WAY	*Call
2096			4962<4902	2-WAY TO 2-WAY	*Call
2096			4962<4903	3-WAY TO 2-WAY	*Call
2096			4962<4905	1-WAY TO 2-WAY	*Call
2096			4962<4906	2-WAY TO 2-WAY	*Call
2096			4962<4907	3-WAY TO 2-WAY	*Call
2096			4962<4909	1-WAY TO 2-WAY	*Call
2096			4962<4910	2-WAY TO 2-WAY	*Call
2096			4962<4911	3-WAY TO 2-WAY	*Call
2096			4962<4913	1-WAY TO 2-WAY	*Call
2096			4962<4914	2-WAY TO 2-WAY	*Call
2096			4962<4915	3-WAY TO 2-WAY	*Call
2096			4962<4917	1-WAY TO 2-WAY	*Call
2096			4962<4918	2-WAY TO 2-WAY	*Call
2096			4962<4921	1-WAY TO 2-WAY	*Call
2096			4962<4922	2-WAY TO 2-WAY	*Call
2096			4962<4925	1-WAY TO 2-WAY	*Call
2096			4962<4929	1-WAY TO 2-WAY	*Call
2096			4962<4933	1-WAY TO 2-WAY	*Call
2096			4962<4937	1-WAY TO 2-WAY	*Call
2096			4962<4944	4-WAY TO 2-WAY	*Call
2096			4962<4947	3-WAY TO 2-WAY	*Call
2096			4962<4948	4-WAY TO 2-WAY	*Call
2096			4962<4951	3-WAY TO 2-WAY	*Call
2096			4962<4952	4-WAY TO 2-WAY	*Call
2096			4962<4954	2-WAY TO 2-WAY	*Call
2096			4962<4955	3-WAY TO 2-WAY	*Call
2096			4962<4956	4-WAY TO 2-WAY	*Call
2096			4962<4958	2-WAY TO 2-WAY	*Call
2096			4962<4959	3-WAY TO 2-WAY	*Call
2096			4962<4960	4-WAY TO 2-WAY	*Call
2096			4962<4963	3-WAY TO 2-WAY	*Call
2096			4962<4964	4-WAY TO 2-WAY	*Call
2096			4962<4966	2-WAY TO 2-WAY	*Call
2096			4962<4967	3-WAY TO 2-WAY	*Call
2096			4962<4968	4-WAY TO 2-WAY	*Call
2096			4962<4969	1-WAY TO 2-WAY	*Call
2096			4962<4970	2-WAY TO 2-WAY	*Call
2096			4962<4971	3-WAY TO 2-WAY	*Call
2096			4962<4972	4-WAY TO 2-WAY	*Call
2096			4962<4973	1-WAY TO 2-WAY	*Call
2096			4962<4974	2-WAY TO 2-WAY	*Call
2096			4962<4975	3-WAY TO 2-WAY	*Call
2096			4962<4976	4-WAY TO 2-WAY	*Call
2096			4962<4977	3-WAY TO 2-WAY	*Call
2096			4962<4978	2-WAY TO 2-WAY	*Call
2096			4962<4979	3-WAY TO 2-WAY	*Call
2096			4962<4980	4-WAY TO 2-WAY	*Call
2096			4962<4981	1-WAY TO 2-WAY	*Call
2096			4962<4982	2-WAY TO 2-WAY	*Call
2096			4962<4983	3-WAY TO 2-WAY	*Call
2096			4962<4984	4-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4962<4985	1-WAY TO 2-WAY	*Call
2096		4962<4986	2-WAY TO 2-WAY	*Call
2096		4962<4987	3-WAY TO 2-WAY	*Call
2096		4962<4988	4-WAY TO 2-WAY	*Call
2096		4962<4989	1-WAY TO 2-WAY	*Call
2096		4962<4990	2-WAY TO 2-WAY	*Call
2096		4962<4991	3-WAY TO 2-WAY	*Call
2096		4962<4992	4-WAY TO 2-WAY	*Call
2096		4962<4993	1-WAY TO 2-WAY	*Call
2096		4962<4994	2-WAY TO 2-WAY	*Call
2096		4962<4995	3-WAY TO 2-WAY	*Call
2096		4962<4996	4-WAY TO 2-WAY	*Call
2096		4962<4997	1-WAY TO 2-WAY	*Call
2096		4962<4998	2-WAY TO 2-WAY	*Call
2096		4962<4999	3-WAY TO 2-WAY	*Call
2096		4962<5000	4-WAY TO 2-WAY	*Call
2096		4962<5001	1-WAY TO 2-WAY	*Call
2096		4962<5002	2-WAY TO 2-WAY	*Call
2096		4962<5003	3-WAY TO 2-WAY	*Call
2096		4962<5004	4-WAY TO 2-WAY	*Call
2096		4963<4900	ZERO-WAY TO 3-WAY	*Call
2096		4963<4901	1-WAY TO 3-WAY	*Call
2096		4963<4902	2-WAY TO 3-WAY	*Call
2096		4963<4903	3-WAY TO 3-WAY	*Call
2096		4963<4905	1-WAY TO 3-WAY	*Call
2096		4963<4906	2-WAY TO 3-WAY	*Call
2096		4963<4907	3-WAY TO 3-WAY	*Call
2096		4963<4909	1-WAY TO 3-WAY	*Call
2096		4963<4910	2-WAY TO 3-WAY	*Call
2096		4963<4911	3-WAY TO 3-WAY	*Call
2096		4963<4913	1-WAY TO 3-WAY	*Call
2096		4963<4914	2-WAY TO 3-WAY	*Call
2096		4963<4915	3-WAY TO 3-WAY	*Call
2096		4963<4917	1-WAY TO 3-WAY	*Call
2096		4963<4918	2-WAY TO 3-WAY	*Call
2096		4963<4921	1-WAY TO 3-WAY	*Call
2096		4963<4922	2-WAY TO 3-WAY	*Call
2096		4963<4925	1-WAY TO 3-WAY	*Call
2096		4963<4929	1-WAY TO 3-WAY	*Call
2096		4963<4933	1-WAY TO 3-WAY	*Call
2096		4963<4937	1-WAY TO 3-WAY	*Call
2096		4963<4944	4-WAY TO 3-WAY	*Call
2096		4963<4947	3-WAY TO 3-WAY	*Call
2096		4963<4948	4-WAY TO 3-WAY	*Call
2096		4963<4951	3-WAY TO 3-WAY	*Call
2096		4963<4952	4-WAY TO 3-WAY	*Call
2096		4963<4954	2-WAY TO 3-WAY	*Call
2096		4963<4955	3-WAY TO 3-WAY	*Call
2096		4963<4956	4-WAY TO 3-WAY	*Call
2096		4963<4958	2-WAY TO 3-WAY	*Call
2096		4963<4959	3-WAY TO 3-WAY	*Call
2096		4963<4960	4-WAY TO 3-WAY	*Call
2096		4963<4962	2-WAY TO 3-WAY	*Call
2096		4963<4964	4-WAY TO 3-WAY	*Call
2096		4963<4966	2-WAY TO 3-WAY	*Call
2096		4963<4967	3-WAY TO 3-WAY	*Call
2096		4963<4968	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4963<4969	1-WAY TO 3-WAY	*Call
2096		4963<4970	2-WAY TO 3-WAY	*Call
2096		4963<4971	3-WAY TO 3-WAY	*Call
2096		4963<4972	4-WAY TO 3-WAY	*Call
2096		4963<4973	1-WAY TO 3-WAY	*Call
2096		4963<4974	2-WAY TO 3-WAY	*Call
2096		4963<4975	3-WAY TO 3-WAY	*Call
2096		4963<4976	4-WAY TO 3-WAY	*Call
2096		4963<4977	3-WAY TO 3-WAY	*Call
2096		4963<4978	2-WAY TO 3-WAY	*Call
2096		4963<4979	3-WAY TO 3-WAY	*Call
2096		4963<4980	4-WAY TO 3-WAY	*Call
2096		4963<4981	1-WAY TO 3-WAY	*Call
2096		4963<4982	2-WAY TO 3-WAY	*Call
2096		4963<4983	3-WAY TO 3-WAY	*Call
2096		4963<4984	4-WAY TO 3-WAY	*Call
2096		4963<4985	1-WAY TO 3-WAY	*Call
2096		4963<4986	2-WAY TO 3-WAY	*Call
2096		4963<4987	3-WAY TO 3-WAY	*Call
2096		4963<4988	4-WAY TO 3-WAY	*Call
2096		4963<4989	1-WAY TO 3-WAY	*Call
2096		4963<4990	2-WAY TO 3-WAY	*Call
2096		4963<4991	3-WAY TO 3-WAY	*Call
2096		4963<4992	4-WAY TO 3-WAY	*Call
2096		4963<4993	1-WAY TO 3-WAY	*Call
2096		4963<4994	2-WAY TO 3-WAY	*Call
2096		4963<4995	3-WAY TO 3-WAY	*Call
2096		4963<4996	4-WAY TO 3-WAY	*Call
2096		4963<4997	1-WAY TO 3-WAY	*Call
2096		4963<4998	2-WAY TO 3-WAY	*Call
2096		4963<4999	3-WAY TO 3-WAY	*Call
2096		4963<5000	4-WAY TO 3-WAY	*Call
2096		4963<5001	1-WAY TO 3-WAY	*Call
2096		4963<5002	2-WAY TO 3-WAY	*Call
2096		4963<5003	3-WAY TO 3-WAY	*Call
2096		4963<5004	4-WAY TO 3-WAY	*Call
2096		4964<4900	ZERO-WAY TO 4-WAY	*Call
2096		4964<4901	1-WAY TO 4-WAY	*Call
2096		4964<4902	2-WAY TO 4-WAY	*Call
2096		4964<4903	3-WAY TO 4-WAY	*Call
2096		4964<4905	1-WAY TO 4-WAY	*Call
2096		4964<4906	2-WAY TO 4-WAY	*Call
2096		4964<4907	3-WAY TO 4-WAY	*Call
2096		4964<4909	1-WAY TO 4-WAY	*Call
2096		4964<4910	2-WAY TO 4-WAY	*Call
2096		4964<4911	3-WAY TO 4-WAY	*Call
2096		4964<4913	1-WAY TO 4-WAY	*Call
2096		4964<4914	2-WAY TO 4-WAY	*Call
2096		4964<4915	3-WAY TO 4-WAY	*Call
2096		4964<4917	1-WAY TO 4-WAY	*Call
2096		4964<4918	2-WAY TO 4-WAY	*Call
2096		4964<4921	1-WAY TO 4-WAY	*Call
2096		4964<4922	2-WAY TO 4-WAY	*Call
2096		4964<4925	1-WAY TO 4-WAY	*Call
2096		4964<4929	1-WAY TO 4-WAY	*Call
2096		4964<4933	1-WAY TO 4-WAY	*Call
2096		4964<4937	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4964<4944	4-WAY TO 4-WAY	*Call
2096		4964<4947	3-WAY TO 4-WAY	*Call
2096		4964<4948	4-WAY TO 4-WAY	*Call
2096		4964<4951	3-WAY TO 4-WAY	*Call
2096		4964<4952	4-WAY TO 4-WAY	*Call
2096		4964<4954	2-WAY TO 4-WAY	*Call
2096		4964<4955	3-WAY TO 4-WAY	*Call
2096		4964<4956	4-WAY TO 4-WAY	*Call
2096		4964<4958	2-WAY TO 4-WAY	*Call
2096		4964<4959	3-WAY TO 4-WAY	*Call
2096		4964<4960	4-WAY TO 4-WAY	*Call
2096		4964<4962	2-WAY TO 4-WAY	*Call
2096		4964<4963	3-WAY TO 4-WAY	*Call
2096		4964<4966	2-WAY TO 4-WAY	*Call
2096		4964<4967	3-WAY TO 4-WAY	*Call
2096		4964<4968	4-WAY TO 4-WAY	*Call
2096		4964<4969	1-WAY TO 4-WAY	*Call
2096		4964<4970	2-WAY TO 4-WAY	*Call
2096		4964<4971	3-WAY TO 4-WAY	*Call
2096		4964<4972	4-WAY TO 4-WAY	*Call
2096		4964<4973	1-WAY TO 4-WAY	*Call
2096		4964<4974	2-WAY TO 4-WAY	*Call
2096		4964<4975	3-WAY TO 4-WAY	*Call
2096		4964<4976	4-WAY TO 4-WAY	*Call
2096		4964<4977	3-WAY TO 4-WAY	*Call
2096		4964<4978	2-WAY TO 4-WAY	*Call
2096		4964<4979	3-WAY TO 4-WAY	*Call
2096		4964<4980	4-WAY TO 4-WAY	*Call
2096		4964<4981	1-WAY TO 4-WAY	*Call
2096		4964<4982	2-WAY TO 4-WAY	*Call
2096		4964<4983	3-WAY TO 4-WAY	*Call
2096		4964<4984	4-WAY TO 4-WAY	*Call
2096		4964<4985	1-WAY TO 4-WAY	*Call
2096		4964<4986	2-WAY TO 4-WAY	*Call
2096		4964<4987	3-WAY TO 4-WAY	*Call
2096		4964<4988	4-WAY TO 4-WAY	*Call
2096		4964<4989	1-WAY TO 4-WAY	*Call
2096		4964<4990	2-WAY TO 4-WAY	*Call
2096		4964<4991	3-WAY TO 4-WAY	*Call
2096		4964<4992	4-WAY TO 4-WAY	*Call
2096		4964<4993	1-WAY TO 4-WAY	*Call
2096		4964<4994	2-WAY TO 4-WAY	*Call
2096		4964<4995	3-WAY TO 4-WAY	*Call
2096		4964<4996	4-WAY TO 4-WAY	*Call
2096		4964<4997	1-WAY TO 4-WAY	*Call
2096		4964<4998	2-WAY TO 4-WAY	*Call
2096		4964<4999	3-WAY TO 4-WAY	*Call
2096		4964<5000	4-WAY TO 4-WAY	*Call
2096		4964<5001	1-WAY TO 4-WAY	*Call
2096		4964<5002	2-WAY TO 4-WAY	*Call
2096		4964<5003	3-WAY TO 4-WAY	*Call
2096		4964<5004	4-WAY TO 4-WAY	*Call
2096		4966<4900	ZERO-WAY TO 2-WAY	*Call
2096		4966<4901	1-WAY TO 2-WAY	*Call
2096		4966<4902	2-WAY TO 2-WAY	*Call
2096		4966<4903	3-WAY TO 2-WAY	*Call
2096		4966<4905	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4966<4906	2-WAY TO 2-WAY	*Call
2096		4966<4907	3-WAY TO 2-WAY	*Call
2096		4966<4909	1-WAY TO 2-WAY	*Call
2096		4966<4910	2-WAY TO 2-WAY	*Call
2096		4966<4911	3-WAY TO 2-WAY	*Call
2096		4966<4913	1-WAY TO 2-WAY	*Call
2096		4966<4914	2-WAY TO 2-WAY	*Call
2096		4966<4915	3-WAY TO 2-WAY	*Call
2096		4966<4917	1-WAY TO 2-WAY	*Call
2096		4966<4918	2-WAY TO 2-WAY	*Call
2096		4966<4921	1-WAY TO 2-WAY	*Call
2096		4966<4922	2-WAY TO 2-WAY	*Call
2096		4966<4925	1-WAY TO 2-WAY	*Call
2096		4966<4929	1-WAY TO 2-WAY	*Call
2096		4966<4933	1-WAY TO 2-WAY	*Call
2096		4966<4937	1-WAY TO 2-WAY	*Call
2096		4966<4944	4-WAY TO 2-WAY	*Call
2096		4966<4947	3-WAY TO 2-WAY	*Call
2096		4966<4948	4-WAY TO 2-WAY	*Call
2096		4966<4951	3-WAY TO 2-WAY	*Call
2096		4966<4952	4-WAY TO 2-WAY	*Call
2096		4966<4954	2-WAY TO 2-WAY	*Call
2096		4966<4955	3-WAY TO 2-WAY	*Call
2096		4966<4956	4-WAY TO 2-WAY	*Call
2096		4966<4958	2-WAY TO 2-WAY	*Call
2096		4966<4959	3-WAY TO 2-WAY	*Call
2096		4966<4960	4-WAY TO 2-WAY	*Call
2096		4966<4962	2-WAY TO 2-WAY	*Call
2096		4966<4963	3-WAY TO 2-WAY	*Call
2096		4966<4964	4-WAY TO 2-WAY	*Call
2096		4966<4967	3-WAY TO 2-WAY	*Call
2096		4966<4968	4-WAY TO 2-WAY	*Call
2096		4966<4969	1-WAY TO 2-WAY	*Call
2096		4966<4970	2-WAY TO 2-WAY	*Call
2096		4966<4971	3-WAY TO 2-WAY	*Call
2096		4966<4972	4-WAY TO 2-WAY	*Call
2096		4966<4973	1-WAY TO 2-WAY	*Call
2096		4966<4974	2-WAY TO 2-WAY	*Call
2096		4966<4975	3-WAY TO 2-WAY	*Call
2096		4966<4976	4-WAY TO 2-WAY	*Call
2096		4966<4977	3-WAY TO 2-WAY	*Call
2096		4966<4978	2-WAY TO 2-WAY	*Call
2096		4966<4979	3-WAY TO 2-WAY	*Call
2096		4966<4980	4-WAY TO 2-WAY	*Call
2096		4966<4981	1-WAY TO 2-WAY	*Call
2096		4966<4982	2-WAY TO 2-WAY	*Call
2096		4966<4983	3-WAY TO 2-WAY	*Call
2096		4966<4984	4-WAY TO 2-WAY	*Call
2096		4966<4985	1-WAY TO 2-WAY	*Call
2096		4966<4986	2-WAY TO 2-WAY	*Call
2096		4966<4987	3-WAY TO 2-WAY	*Call
2096		4966<4988	4-WAY TO 2-WAY	*Call
2096		4966<4989	1-WAY TO 2-WAY	*Call
2096		4966<4990	2-WAY TO 2-WAY	*Call
2096		4966<4991	3-WAY TO 2-WAY	*Call
2096		4966<4992	4-WAY TO 2-WAY	*Call
2096		4966<4993	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4966<4994	2-WAY TO 2-WAY	*Call
2096		4966<4995	3-WAY TO 2-WAY	*Call
2096		4966<4996	4-WAY TO 2-WAY	*Call
2096		4966<4997	1-WAY TO 2-WAY	*Call
2096		4966<4998	2-WAY TO 2-WAY	*Call
2096		4966<4999	3-WAY TO 2-WAY	*Call
2096		4966<5000	4-WAY TO 2-WAY	*Call
2096		4966<5001	1-WAY TO 2-WAY	*Call
2096		4966<5002	2-WAY TO 2-WAY	*Call
2096		4966<5003	3-WAY TO 2-WAY	*Call
2096		4966<5004	4-WAY TO 2-WAY	*Call
2096		4967<4900	ZERO-WAY TO 3-WAY	*Call
2096		4967<4901	1-WAY TO 3-WAY	*Call
2096		4967<4902	2-WAY TO 3-WAY	*Call
2096		4967<4903	3-WAY TO 3-WAY	*Call
2096		4967<4905	1-WAY TO 3-WAY	*Call
2096		4967<4906	2-WAY TO 3-WAY	*Call
2096		4967<4907	3-WAY TO 3-WAY	*Call
2096		4967<4909	1-WAY TO 3-WAY	*Call
2096		4967<4910	2-WAY TO 3-WAY	*Call
2096		4967<4911	3-WAY TO 3-WAY	*Call
2096		4967<4913	1-WAY TO 3-WAY	*Call
2096		4967<4914	2-WAY TO 3-WAY	*Call
2096		4967<4915	3-WAY TO 3-WAY	*Call
2096		4967<4917	1-WAY TO 3-WAY	*Call
2096		4967<4918	2-WAY TO 3-WAY	*Call
2096		4967<4921	1-WAY TO 3-WAY	*Call
2096		4967<4922	2-WAY TO 3-WAY	*Call
2096		4967<4925	1-WAY TO 3-WAY	*Call
2096		4967<4929	1-WAY TO 3-WAY	*Call
2096		4967<4933	1-WAY TO 3-WAY	*Call
2096		4967<4937	1-WAY TO 3-WAY	*Call
2096		4967<4944	4-WAY TO 3-WAY	*Call
2096		4967<4947	3-WAY TO 3-WAY	*Call
2096		4967<4948	4-WAY TO 3-WAY	*Call
2096		4967<4951	3-WAY TO 3-WAY	*Call
2096		4967<4952	4-WAY TO 3-WAY	*Call
2096		4967<4954	2-WAY TO 3-WAY	*Call
2096		4967<4955	3-WAY TO 3-WAY	*Call
2096		4967<4956	4-WAY TO 3-WAY	*Call
2096		4967<4958	2-WAY TO 3-WAY	*Call
2096		4967<4959	3-WAY TO 3-WAY	*Call
2096		4967<4960	4-WAY TO 3-WAY	*Call
2096		4967<4962	2-WAY TO 3-WAY	*Call
2096		4967<4963	3-WAY TO 3-WAY	*Call
2096		4967<4964	4-WAY TO 3-WAY	*Call
2096		4967<4966	2-WAY TO 3-WAY	*Call
2096		4967<4968	4-WAY TO 3-WAY	*Call
2096		4967<4969	1-WAY TO 3-WAY	*Call
2096		4967<4970	2-WAY TO 3-WAY	*Call
2096		4967<4971	3-WAY TO 3-WAY	*Call
2096		4967<4972	4-WAY TO 3-WAY	*Call
2096		4967<4973	1-WAY TO 3-WAY	*Call
2096		4967<4974	2-WAY TO 3-WAY	*Call
2096		4967<4975	3-WAY TO 3-WAY	*Call
2096		4967<4976	4-WAY TO 3-WAY	*Call
2096		4967<4977	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4967<4978	2-WAY TO 3-WAY	*Call
2096		4967<4979	3-WAY TO 3-WAY	*Call
2096		4967<4980	4-WAY TO 3-WAY	*Call
2096		4967<4981	1-WAY TO 3-WAY	*Call
2096		4967<4982	2-WAY TO 3-WAY	*Call
2096		4967<4983	3-WAY TO 3-WAY	*Call
2096		4967<4984	4-WAY TO 3-WAY	*Call
2096		4967<4985	1-WAY TO 3-WAY	*Call
2096		4967<4986	2-WAY TO 3-WAY	*Call
2096		4967<4987	3-WAY TO 3-WAY	*Call
2096		4967<4988	4-WAY TO 3-WAY	*Call
2096		4967<4989	1-WAY TO 3-WAY	*Call
2096		4967<4990	2-WAY TO 3-WAY	*Call
2096		4967<4991	3-WAY TO 3-WAY	*Call
2096		4967<4992	4-WAY TO 3-WAY	*Call
2096		4967<4993	1-WAY TO 3-WAY	*Call
2096		4967<4994	2-WAY TO 3-WAY	*Call
2096		4967<4995	3-WAY TO 3-WAY	*Call
2096		4967<4996	4-WAY TO 3-WAY	*Call
2096		4967<4997	1-WAY TO 3-WAY	*Call
2096		4967<4998	2-WAY TO 3-WAY	*Call
2096		4967<4999	3-WAY TO 3-WAY	*Call
2096		4967<5000	4-WAY TO 3-WAY	*Call
2096		4967<5001	1-WAY TO 3-WAY	*Call
2096		4967<5002	2-WAY TO 3-WAY	*Call
2096		4967<5003	3-WAY TO 3-WAY	*Call
2096		4967<5004	4-WAY TO 3-WAY	*Call
2096		4968<4900	ZERO-WAY TO 4-WAY	*Call
2096		4968<4901	1-WAY TO 4-WAY	*Call
2096		4968<4902	2-WAY TO 4-WAY	*Call
2096		4968<4903	3-WAY TO 4-WAY	*Call
2096		4968<4905	1-WAY TO 4-WAY	*Call
2096		4968<4906	2-WAY TO 4-WAY	*Call
2096		4968<4907	3-WAY TO 4-WAY	*Call
2096		4968<4909	1-WAY TO 4-WAY	*Call
2096		4968<4910	2-WAY TO 4-WAY	*Call
2096		4968<4911	3-WAY TO 4-WAY	*Call
2096		4968<4913	1-WAY TO 4-WAY	*Call
2096		4968<4914	2-WAY TO 4-WAY	*Call
2096		4968<4915	3-WAY TO 4-WAY	*Call
2096		4968<4917	1-WAY TO 4-WAY	*Call
2096		4968<4918	2-WAY TO 4-WAY	*Call
2096		4968<4921	1-WAY TO 4-WAY	*Call
2096		4968<4922	2-WAY TO 4-WAY	*Call
2096		4968<4925	1-WAY TO 4-WAY	*Call
2096		4968<4929	1-WAY TO 4-WAY	*Call
2096		4968<4933	1-WAY TO 4-WAY	*Call
2096		4968<4937	1-WAY TO 4-WAY	*Call
2096		4968<4944	4-WAY TO 4-WAY	*Call
2096		4968<4947	3-WAY TO 4-WAY	*Call
2096		4968<4948	4-WAY TO 4-WAY	*Call
2096		4968<4951	3-WAY TO 4-WAY	*Call
2096		4968<4952	4-WAY TO 4-WAY	*Call
2096		4968<4954	2-WAY TO 4-WAY	*Call
2096		4968<4955	3-WAY TO 4-WAY	*Call
2096		4968<4956	4-WAY TO 4-WAY	*Call
2096		4968<4958	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4968<4959	3-WAY TO 4-WAY	*Call
2096		4968<4960	4-WAY TO 4-WAY	*Call
2096		4968<4962	2-WAY TO 4-WAY	*Call
2096		4968<4963	3-WAY TO 4-WAY	*Call
2096		4968<4964	4-WAY TO 4-WAY	*Call
2096		4968<4966	2-WAY TO 4-WAY	*Call
2096		4968<4967	3-WAY TO 4-WAY	*Call
2096		4968<4969	1-WAY TO 4-WAY	*Call
2096		4968<4970	2-WAY TO 4-WAY	*Call
2096		4968<4971	3-WAY TO 4-WAY	*Call
2096		4968<4972	4-WAY TO 4-WAY	*Call
2096		4968<4973	1-WAY TO 4-WAY	*Call
2096		4968<4974	2-WAY TO 4-WAY	*Call
2096		4968<4975	3-WAY TO 4-WAY	*Call
2096		4968<4976	4-WAY TO 4-WAY	*Call
2096		4968<4977	3-WAY TO 4-WAY	*Call
2096		4968<4978	2-WAY TO 4-WAY	*Call
2096		4968<4979	3-WAY TO 4-WAY	*Call
2096		4968<4980	4-WAY TO 4-WAY	*Call
2096		4968<4981	1-WAY TO 4-WAY	*Call
2096		4968<4982	2-WAY TO 4-WAY	*Call
2096		4968<4983	3-WAY TO 4-WAY	*Call
2096		4968<4984	4-WAY TO 4-WAY	*Call
2096		4968<4985	1-WAY TO 4-WAY	*Call
2096		4968<4986	2-WAY TO 4-WAY	*Call
2096		4968<4987	3-WAY TO 4-WAY	*Call
2096		4968<4988	4-WAY TO 4-WAY	*Call
2096		4968<4989	1-WAY TO 4-WAY	*Call
2096		4968<4990	2-WAY TO 4-WAY	*Call
2096		4968<4991	3-WAY TO 4-WAY	*Call
2096		4968<4992	4-WAY TO 4-WAY	*Call
2096		4968<4993	1-WAY TO 4-WAY	*Call
2096		4968<4994	2-WAY TO 4-WAY	*Call
2096		4968<4995	3-WAY TO 4-WAY	*Call
2096		4968<4996	4-WAY TO 4-WAY	*Call
2096		4968<4997	1-WAY TO 4-WAY	*Call
2096		4968<4998	2-WAY TO 4-WAY	*Call
2096		4968<4999	3-WAY TO 4-WAY	*Call
2096		4968<5000	4-WAY TO 4-WAY	*Call
2096		4968<5001	1-WAY TO 4-WAY	*Call
2096		4968<5002	2-WAY TO 4-WAY	*Call
2096		4968<5003	3-WAY TO 4-WAY	*Call
2096		4968<5004	4-WAY TO 4-WAY	*Call
2096		4969<4900	ZERO-WAY TO 1-WAY	*Call
2096		4969<4901	1-WAY TO 1-WAY	*Call
2096		4969<4902	2-WAY TO 1-WAY	*Call
2096		4969<4903	3-WAY TO 1-WAY	*Call
2096		4969<4905	1-WAY TO 1-WAY	*Call
2096		4969<4906	2-WAY TO 1-WAY	*Call
2096		4969<4907	3-WAY TO 1-WAY	*Call
2096		4969<4909	1-WAY TO 1-WAY	*Call
2096		4969<4910	2-WAY TO 1-WAY	*Call
2096		4969<4911	3-WAY TO 1-WAY	*Call
2096		4969<4913	1-WAY TO 1-WAY	*Call
2096		4969<4914	2-WAY TO 1-WAY	*Call
2096		4969<4915	3-WAY TO 1-WAY	*Call
2096		4969<4917	1-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4969<4918	2-WAY TO 1-WAY	*Call
2096		4969<4921	1-WAY TO 1-WAY	*Call
2096		4969<4922	2-WAY TO 1-WAY	*Call
2096		4969<4925	1-WAY TO 1-WAY	*Call
2096		4969<4929	1-WAY TO 1-WAY	*Call
2096		4969<4933	1-WAY TO 1-WAY	*Call
2096		4969<4937	1-WAY TO 1-WAY	*Call
2096		4969<4944	4-WAY TO 1-WAY	*Call
2096		4969<4947	3-WAY TO 1-WAY	*Call
2096		4969<4948	4-WAY TO 1-WAY	*Call
2096		4969<4951	3-WAY TO 1-WAY	*Call
2096		4969<4952	4-WAY TO 1-WAY	*Call
2096		4969<4954	2-WAY TO 1-WAY	*Call
2096		4969<4955	3-WAY TO 1-WAY	*Call
2096		4969<4956	4-WAY TO 1-WAY	*Call
2096		4969<4958	2-WAY TO 1-WAY	*Call
2096		4969<4959	3-WAY TO 1-WAY	*Call
2096		4969<4960	4-WAY TO 1-WAY	*Call
2096		4969<4962	2-WAY TO 1-WAY	*Call
2096		4969<4963	3-WAY TO 1-WAY	*Call
2096		4969<4964	4-WAY TO 1-WAY	*Call
2096		4969<4966	2-WAY TO 1-WAY	*Call
2096		4969<4967	3-WAY TO 1-WAY	*Call
2096		4969<4968	4-WAY TO 1-WAY	*Call
2096		4969<4970	2-WAY TO 1-WAY	*Call
2096		4969<4971	3-WAY TO 1-WAY	*Call
2096		4969<4972	4-WAY TO 1-WAY	*Call
2096		4969<4973	1-WAY TO 1-WAY	*Call
2096		4969<4974	2-WAY TO 1-WAY	*Call
2096		4969<4975	3-WAY TO 1-WAY	*Call
2096		4969<4976	4-WAY TO 1-WAY	*Call
2096		4969<4977	3-WAY TO 1-WAY	*Call
2096		4969<4978	2-WAY TO 1-WAY	*Call
2096		4969<4979	3-WAY TO 1-WAY	*Call
2096		4969<4980	4-WAY TO 1-WAY	*Call
2096		4969<4981	1-WAY TO 1-WAY	*Call
2096		4969<4982	2-WAY TO 1-WAY	*Call
2096		4969<4983	3-WAY TO 1-WAY	*Call
2096		4969<4984	4-WAY TO 1-WAY	*Call
2096		4969<4985	1-WAY TO 1-WAY	*Call
2096		4969<4986	2-WAY TO 1-WAY	*Call
2096		4969<4987	3-WAY TO 1-WAY	*Call
2096		4969<4988	4-WAY TO 1-WAY	*Call
2096		4969<4989	1-WAY TO 1-WAY	*Call
2096		4969<4990	2-WAY TO 1-WAY	*Call
2096		4969<4991	3-WAY TO 1-WAY	*Call
2096		4969<4992	4-WAY TO 1-WAY	*Call
2096		4969<4993	1-WAY TO 1-WAY	*Call
2096		4969<4994	2-WAY TO 1-WAY	*Call
2096		4969<4995	3-WAY TO 1-WAY	*Call
2096		4969<4996	4-WAY TO 1-WAY	*Call
2096		4969<4997	1-WAY TO 1-WAY	*Call
2096		4969<4998	2-WAY TO 1-WAY	*Call
2096		4969<4999	3-WAY TO 1-WAY	*Call
2096		4969<5000	4-WAY TO 1-WAY	*Call
2096		4969<5001	1-WAY TO 1-WAY	*Call
2096		4969<5002	2-WAY TO 1-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4969<5003	3-WAY TO 1-WAY	*Call
2096			4969<5004	4-WAY TO 1-WAY	*Call
2096			4970<4900	ZERO-WAY TO 2-WAY	*Call
2096			4970<4901	1-WAY TO 2-WAY	*Call
2096			4970<4902	2-WAY TO 2-WAY	*Call
2096			4970<4903	3-WAY TO 2-WAY	*Call
2096			4970<4905	1-WAY TO 2-WAY	*Call
2096			4970<4906	2-WAY TO 2-WAY	*Call
2096			4970<4907	3-WAY TO 2-WAY	*Call
2096			4970<4909	1-WAY TO 2-WAY	*Call
2096			4970<4910	2-WAY TO 2-WAY	*Call
2096			4970<4911	3-WAY TO 2-WAY	*Call
2096			4970<4913	1-WAY TO 2-WAY	*Call
2096			4970<4914	2-WAY TO 2-WAY	*Call
2096			4970<4915	3-WAY TO 2-WAY	*Call
2096			4970<4917	1-WAY TO 2-WAY	*Call
2096			4970<4918	2-WAY TO 2-WAY	*Call
2096			4970<4921	1-WAY TO 2-WAY	*Call
2096			4970<4922	2-WAY TO 2-WAY	*Call
2096			4970<4925	1-WAY TO 2-WAY	*Call
2096			4970<4929	1-WAY TO 2-WAY	*Call
2096			4970<4933	1-WAY TO 2-WAY	*Call
2096			4970<4937	1-WAY TO 2-WAY	*Call
2096			4970<4944	4-WAY TO 2-WAY	*Call
2096			4970<4947	3-WAY TO 2-WAY	*Call
2096			4970<4948	4-WAY TO 2-WAY	*Call
2096			4970<4951	3-WAY TO 2-WAY	*Call
2096			4970<4952	4-WAY TO 2-WAY	*Call
2096			4970<4954	2-WAY TO 2-WAY	*Call
2096			4970<4955	3-WAY TO 2-WAY	*Call
2096			4970<4956	4-WAY TO 2-WAY	*Call
2096			4970<4958	2-WAY TO 2-WAY	*Call
2096			4970<4959	3-WAY TO 2-WAY	*Call
2096			4970<4960	4-WAY TO 2-WAY	*Call
2096			4970<4962	2-WAY TO 2-WAY	*Call
2096			4970<4963	3-WAY TO 2-WAY	*Call
2096			4970<4964	4-WAY TO 2-WAY	*Call
2096			4970<4966	2-WAY TO 2-WAY	*Call
2096			4970<4967	3-WAY TO 2-WAY	*Call
2096			4970<4968	4-WAY TO 2-WAY	*Call
2096			4970<4969	1-WAY TO 2-WAY	*Call
2096			4970<4971	3-WAY TO 2-WAY	*Call
2096			4970<4972	4-WAY TO 2-WAY	*Call
2096			4970<4973	1-WAY TO 2-WAY	*Call
2096			4970<4974	2-WAY TO 2-WAY	*Call
2096			4970<4975	3-WAY TO 2-WAY	*Call
2096			4970<4976	4-WAY TO 2-WAY	*Call
2096			4970<4977	3-WAY TO 2-WAY	*Call
2096			4970<4978	2-WAY TO 2-WAY	*Call
2096			4970<4979	3-WAY TO 2-WAY	*Call
2096			4970<4980	4-WAY TO 2-WAY	*Call
2096			4970<4981	1-WAY TO 2-WAY	*Call
2096			4970<4982	2-WAY TO 2-WAY	*Call
2096			4970<4983	3-WAY TO 2-WAY	*Call
2096			4970<4984	4-WAY TO 2-WAY	*Call
2096			4970<4985	1-WAY TO 2-WAY	*Call
2096			4970<4986	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4970<4987	3-WAY TO 2-WAY	*Call
2096		4970<4988	4-WAY TO 2-WAY	*Call
2096		4970<4989	1-WAY TO 2-WAY	*Call
2096		4970<4990	2-WAY TO 2-WAY	*Call
2096		4970<4991	3-WAY TO 2-WAY	*Call
2096		4970<4992	4-WAY TO 2-WAY	*Call
2096		4970<4993	1-WAY TO 2-WAY	*Call
2096		4970<4994	2-WAY TO 2-WAY	*Call
2096		4970<4995	3-WAY TO 2-WAY	*Call
2096		4970<4996	4-WAY TO 2-WAY	*Call
2096		4970<4997	1-WAY TO 2-WAY	*Call
2096		4970<4998	2-WAY TO 2-WAY	*Call
2096		4970<4999	3-WAY TO 2-WAY	*Call
2096		4970<5000	4-WAY TO 2-WAY	*Call
2096		4970<5001	1-WAY TO 2-WAY	*Call
2096		4970<5002	2-WAY TO 2-WAY	*Call
2096		4970<5003	3-WAY TO 2-WAY	*Call
2096		4970<5004	4-WAY TO 2-WAY	*Call
2096		4971<4900	ZERO-WAY TO 3-WAY	*Call
2096		4971<4901	1-WAY TO 3-WAY	*Call
2096		4971<4902	2-WAY TO 3-WAY	*Call
2096		4971<4903	3-WAY TO 3-WAY	*Call
2096		4971<4905	1-WAY TO 3-WAY	*Call
2096		4971<4906	2-WAY TO 3-WAY	*Call
2096		4971<4907	3-WAY TO 3-WAY	*Call
2096		4971<4909	1-WAY TO 3-WAY	*Call
2096		4971<4910	2-WAY TO 3-WAY	*Call
2096		4971<4911	3-WAY TO 3-WAY	*Call
2096		4971<4913	1-WAY TO 3-WAY	*Call
2096		4971<4914	2-WAY TO 3-WAY	*Call
2096		4971<4915	3-WAY TO 3-WAY	*Call
2096		4971<4917	1-WAY TO 3-WAY	*Call
2096		4971<4918	2-WAY TO 3-WAY	*Call
2096		4971<4921	1-WAY TO 3-WAY	*Call
2096		4971<4922	2-WAY TO 3-WAY	*Call
2096		4971<4925	1-WAY TO 3-WAY	*Call
2096		4971<4929	1-WAY TO 3-WAY	*Call
2096		4971<4933	1-WAY TO 3-WAY	*Call
2096		4971<4937	1-WAY TO 3-WAY	*Call
2096		4971<4944	4-WAY TO 3-WAY	*Call
2096		4971<4947	3-WAY TO 3-WAY	*Call
2096		4971<4948	4-WAY TO 3-WAY	*Call
2096		4971<4951	3-WAY TO 3-WAY	*Call
2096		4971<4952	4-WAY TO 3-WAY	*Call
2096		4971<4954	2-WAY TO 3-WAY	*Call
2096		4971<4955	3-WAY TO 3-WAY	*Call
2096		4971<4956	4-WAY TO 3-WAY	*Call
2096		4971<4958	2-WAY TO 3-WAY	*Call
2096		4971<4959	3-WAY TO 3-WAY	*Call
2096		4971<4960	4-WAY TO 3-WAY	*Call
2096		4971<4962	2-WAY TO 3-WAY	*Call
2096		4971<4963	3-WAY TO 3-WAY	*Call
2096		4971<4964	4-WAY TO 3-WAY	*Call
2096		4971<4966	2-WAY TO 3-WAY	*Call
2096		4971<4967	3-WAY TO 3-WAY	*Call
2096		4971<4968	4-WAY TO 3-WAY	*Call
2096		4971<4969	1-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4971<4970	2-WAY TO 3-WAY	*Call
2096		4971<4972	4-WAY TO 3-WAY	*Call
2096		4971<4973	1-WAY TO 3-WAY	*Call
2096		4971<4974	2-WAY TO 3-WAY	*Call
2096		4971<4975	3-WAY TO 3-WAY	*Call
2096		4971<4976	4-WAY TO 3-WAY	*Call
2096		4971<4977	3-WAY TO 3-WAY	*Call
2096		4971<4978	2-WAY TO 3-WAY	*Call
2096		4971<4979	3-WAY TO 3-WAY	*Call
2096		4971<4980	4-WAY TO 3-WAY	*Call
2096		4971<4981	1-WAY TO 3-WAY	*Call
2096		4971<4982	2-WAY TO 3-WAY	*Call
2096		4971<4983	3-WAY TO 3-WAY	*Call
2096		4971<4984	4-WAY TO 3-WAY	*Call
2096		4971<4985	1-WAY TO 3-WAY	*Call
2096		4971<4986	2-WAY TO 3-WAY	*Call
2096		4971<4987	3-WAY TO 3-WAY	*Call
2096		4971<4988	4-WAY TO 3-WAY	*Call
2096		4971<4989	1-WAY TO 3-WAY	*Call
2096		4971<4990	2-WAY TO 3-WAY	*Call
2096		4971<4991	3-WAY TO 3-WAY	*Call
2096		4971<4992	4-WAY TO 3-WAY	*Call
2096		4971<4993	1-WAY TO 3-WAY	*Call
2096		4971<4994	2-WAY TO 3-WAY	*Call
2096		4971<4995	3-WAY TO 3-WAY	*Call
2096		4971<4996	4-WAY TO 3-WAY	*Call
2096		4971<4997	1-WAY TO 3-WAY	*Call
2096		4971<4998	2-WAY TO 3-WAY	*Call
2096		4971<4999	3-WAY TO 3-WAY	*Call
2096		4971<5000	4-WAY TO 3-WAY	*Call
2096		4971<5001	1-WAY TO 3-WAY	*Call
2096		4971<5002	2-WAY TO 3-WAY	*Call
2096		4971<5003	3-WAY TO 3-WAY	*Call
2096		4971<5004	4-WAY TO 3-WAY	*Call
2096		4972<4900	ZERO-WAY TO 4-WAY	*Call
2096		4972<4901	1-WAY TO 4-WAY	*Call
2096		4972<4902	2-WAY TO 4-WAY	*Call
2096		4972<4903	3-WAY TO 4-WAY	*Call
2096		4972<4905	1-WAY TO 4-WAY	*Call
2096		4972<4906	2-WAY TO 4-WAY	*Call
2096		4972<4907	3-WAY TO 4-WAY	*Call
2096		4972<4909	1-WAY TO 4-WAY	*Call
2096		4972<4910	2-WAY TO 4-WAY	*Call
2096		4972<4911	3-WAY TO 4-WAY	*Call
2096		4972<4913	1-WAY TO 4-WAY	*Call
2096		4972<4914	2-WAY TO 4-WAY	*Call
2096		4972<4915	3-WAY TO 4-WAY	*Call
2096		4972<4917	1-WAY TO 4-WAY	*Call
2096		4972<4918	2-WAY TO 4-WAY	*Call
2096		4972<4921	1-WAY TO 4-WAY	*Call
2096		4972<4922	2-WAY TO 4-WAY	*Call
2096		4972<4925	1-WAY TO 4-WAY	*Call
2096		4972<4929	1-WAY TO 4-WAY	*Call
2096		4972<4933	1-WAY TO 4-WAY	*Call
2096		4972<4937	1-WAY TO 4-WAY	*Call
2096		4972<4944	4-WAY TO 4-WAY	*Call
2096		4972<4947	3-WAY TO 4-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4972<4948	4-WAY TO 4-WAY	*Call
2096			4972<4951	3-WAY TO 4-WAY	*Call
2096			4972<4952	4-WAY TO 4-WAY	*Call
2096			4972<4954	2-WAY TO 4-WAY	*Call
2096			4972<4955	3-WAY TO 4-WAY	*Call
2096			4972<4956	4-WAY TO 4-WAY	*Call
2096			4972<4958	2-WAY TO 4-WAY	*Call
2096			4972<4959	3-WAY TO 4-WAY	*Call
2096			4972<4960	4-WAY TO 4-WAY	*Call
2096			4972<4962	2-WAY TO 4-WAY	*Call
2096			4972<4963	3-WAY TO 4-WAY	*Call
2096			4972<4964	4-WAY TO 4-WAY	*Call
2096			4972<4966	2-WAY TO 4-WAY	*Call
2096			4972<4967	3-WAY TO 4-WAY	*Call
2096			4972<4968	4-WAY TO 4-WAY	*Call
2096			4972<4969	1-WAY TO 4-WAY	*Call
2096			4972<4970	2-WAY TO 4-WAY	*Call
2096			4972<4971	3-WAY TO 4-WAY	*Call
2096			4972<4973	1-WAY TO 4-WAY	*Call
2096			4972<4974	2-WAY TO 4-WAY	*Call
2096			4972<4975	3-WAY TO 4-WAY	*Call
2096			4972<4976	4-WAY TO 4-WAY	*Call
2096			4972<4977	3-WAY TO 4-WAY	*Call
2096			4972<4978	2-WAY TO 4-WAY	*Call
2096			4972<4979	3-WAY TO 4-WAY	*Call
2096			4972<4980	4-WAY TO 4-WAY	*Call
2096			4972<4981	1-WAY TO 4-WAY	*Call
2096			4972<4982	2-WAY TO 4-WAY	*Call
2096			4972<4983	3-WAY TO 4-WAY	*Call
2096			4972<4984	4-WAY TO 4-WAY	*Call
2096			4972<4985	1-WAY TO 4-WAY	*Call
2096			4972<4986	2-WAY TO 4-WAY	*Call
2096			4972<4987	3-WAY TO 4-WAY	*Call
2096			4972<4988	4-WAY TO 4-WAY	*Call
2096			4972<4989	1-WAY TO 4-WAY	*Call
2096			4972<4990	2-WAY TO 4-WAY	*Call
2096			4972<4991	3-WAY TO 4-WAY	*Call
2096			4972<4992	4-WAY TO 4-WAY	*Call
2096			4972<4993	1-WAY TO 4-WAY	*Call
2096			4972<4994	2-WAY TO 4-WAY	*Call
2096			4972<4995	3-WAY TO 4-WAY	*Call
2096			4972<4996	4-WAY TO 4-WAY	*Call
2096			4972<4997	1-WAY TO 4-WAY	*Call
2096			4972<4998	2-WAY TO 4-WAY	*Call
2096			4972<4999	3-WAY TO 4-WAY	*Call
2096			4972<5000	4-WAY TO 4-WAY	*Call
2096			4972<5001	1-WAY TO 4-WAY	*Call
2096			4972<5002	2-WAY TO 4-WAY	*Call
2096			4972<5003	3-WAY TO 4-WAY	*Call
2096			4972<5004	4-WAY TO 4-WAY	*Call
2096			4973<4900	ZERO-WAY TO 1-WAY	*Call
2096			4973<4901	1-WAY TO 1-WAY	*Call
2096			4973<4902	2-WAY TO 1-WAY	*Call
2096			4973<4903	3-WAY TO 1-WAY	*Call
2096			4973<4905	1-WAY TO 1-WAY	*Call
2096			4973<4906	2-WAY TO 1-WAY	*Call
2096			4973<4907	3-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4973<4909	1-WAY TO 1-WAY	*Call
2096		4973<4910	2-WAY TO 1-WAY	*Call
2096		4973<4911	3-WAY TO 1-WAY	*Call
2096		4973<4913	1-WAY TO 1-WAY	*Call
2096		4973<4914	2-WAY TO 1-WAY	*Call
2096		4973<4915	3-WAY TO 1-WAY	*Call
2096		4973<4917	1-WAY TO 1-WAY	*Call
2096		4973<4918	2-WAY TO 1-WAY	*Call
2096		4973<4921	1-WAY TO 1-WAY	*Call
2096		4973<4922	2-WAY TO 1-WAY	*Call
2096		4973<4925	1-WAY TO 1-WAY	*Call
2096		4973<4929	1-WAY TO 1-WAY	*Call
2096		4973<4933	1-WAY TO 1-WAY	*Call
2096		4973<4937	1-WAY TO 1-WAY	*Call
2096		4973<4944	4-WAY TO 1-WAY	*Call
2096		4973<4947	3-WAY TO 1-WAY	*Call
2096		4973<4948	4-WAY TO 1-WAY	*Call
2096		4973<4951	3-WAY TO 1-WAY	*Call
2096		4973<4952	4-WAY TO 1-WAY	*Call
2096		4973<4954	2-WAY TO 1-WAY	*Call
2096		4973<4955	3-WAY TO 1-WAY	*Call
2096		4973<4956	4-WAY TO 1-WAY	*Call
2096		4973<4958	2-WAY TO 1-WAY	*Call
2096		4973<4959	3-WAY TO 1-WAY	*Call
2096		4973<4960	4-WAY TO 1-WAY	*Call
2096		4973<4962	2-WAY TO 1-WAY	*Call
2096		4973<4963	3-WAY TO 1-WAY	*Call
2096		4973<4964	4-WAY TO 1-WAY	*Call
2096		4973<4966	2-WAY TO 1-WAY	*Call
2096		4973<4967	3-WAY TO 1-WAY	*Call
2096		4973<4968	4-WAY TO 1-WAY	*Call
2096		4973<4969	1-WAY TO 1-WAY	*Call
2096		4973<4970	2-WAY TO 1-WAY	*Call
2096		4973<4971	3-WAY TO 1-WAY	*Call
2096		4973<4972	4-WAY TO 1-WAY	*Call
2096		4973<4974	2-WAY TO 1-WAY	*Call
2096		4973<4975	3-WAY TO 1-WAY	*Call
2096		4973<4976	4-WAY TO 1-WAY	*Call
2096		4973<4977	3-WAY TO 1-WAY	*Call
2096		4973<4978	2-WAY TO 1-WAY	*Call
2096		4973<4979	3-WAY TO 1-WAY	*Call
2096		4973<4980	4-WAY TO 1-WAY	*Call
2096		4973<4981	1-WAY TO 1-WAY	*Call
2096		4973<4982	2-WAY TO 1-WAY	*Call
2096		4973<4983	3-WAY TO 1-WAY	*Call
2096		4973<4984	4-WAY TO 1-WAY	*Call
2096		4973<4985	1-WAY TO 1-WAY	*Call
2096		4973<4986	2-WAY TO 1-WAY	*Call
2096		4973<4987	3-WAY TO 1-WAY	*Call
2096		4973<4988	4-WAY TO 1-WAY	*Call
2096		4973<4989	1-WAY TO 1-WAY	*Call
2096		4973<4990	2-WAY TO 1-WAY	*Call
2096		4973<4991	3-WAY TO 1-WAY	*Call
2096		4973<4992	4-WAY TO 1-WAY	*Call
2096		4973<4993	1-WAY TO 1-WAY	*Call
2096		4973<4994	2-WAY TO 1-WAY	*Call
2096		4973<4995	3-WAY TO 1-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4973<4996	4-WAY TO 1-WAY	*Call
2096			4973<4997	1-WAY TO 1-WAY	*Call
2096			4973<4998	2-WAY TO 1-WAY	*Call
2096			4973<4999	3-WAY TO 1-WAY	*Call
2096			4973<5000	4-WAY TO 1-WAY	*Call
2096			4973<5001	1-WAY TO 1-WAY	*Call
2096			4973<5002	2-WAY TO 1-WAY	*Call
2096			4973<5003	3-WAY TO 1-WAY	*Call
2096			4973<5004	4-WAY TO 1-WAY	*Call
2096			4974<4900	ZERO-WAY TO 2-WAY	*Call
2096			4974<4901	1-WAY TO 2-WAY	*Call
2096			4974<4902	2-WAY TO 2-WAY	*Call
2096			4974<4903	3-WAY TO 2-WAY	*Call
2096			4974<4905	1-WAY TO 2-WAY	*Call
2096			4974<4906	2-WAY TO 2-WAY	*Call
2096			4974<4907	3-WAY TO 2-WAY	*Call
2096			4974<4909	1-WAY TO 2-WAY	*Call
2096			4974<4910	2-WAY TO 2-WAY	*Call
2096			4974<4911	3-WAY TO 2-WAY	*Call
2096			4974<4913	1-WAY TO 2-WAY	*Call
2096			4974<4914	2-WAY TO 2-WAY	*Call
2096			4974<4915	3-WAY TO 2-WAY	*Call
2096			4974<4917	1-WAY TO 2-WAY	*Call
2096			4974<4918	2-WAY TO 2-WAY	*Call
2096			4974<4921	1-WAY TO 2-WAY	*Call
2096			4974<4922	2-WAY TO 2-WAY	*Call
2096			4974<4925	1-WAY TO 2-WAY	*Call
2096			4974<4929	1-WAY TO 2-WAY	*Call
2096			4974<4933	1-WAY TO 2-WAY	*Call
2096			4974<4937	1-WAY TO 2-WAY	*Call
2096			4974<4944	4-WAY TO 2-WAY	*Call
2096			4974<4947	3-WAY TO 2-WAY	*Call
2096			4974<4948	4-WAY TO 2-WAY	*Call
2096			4974<4951	3-WAY TO 2-WAY	*Call
2096			4974<4952	4-WAY TO 2-WAY	*Call
2096			4974<4954	2-WAY TO 2-WAY	*Call
2096			4974<4955	3-WAY TO 2-WAY	*Call
2096			4974<4956	4-WAY TO 2-WAY	*Call
2096			4974<4958	2-WAY TO 2-WAY	*Call
2096			4974<4959	3-WAY TO 2-WAY	*Call
2096			4974<4960	4-WAY TO 2-WAY	*Call
2096			4974<4962	2-WAY TO 2-WAY	*Call
2096			4974<4963	3-WAY TO 2-WAY	*Call
2096			4974<4964	4-WAY TO 2-WAY	*Call
2096			4974<4966	2-WAY TO 2-WAY	*Call
2096			4974<4967	3-WAY TO 2-WAY	*Call
2096			4974<4968	4-WAY TO 2-WAY	*Call
2096			4974<4969	1-WAY TO 2-WAY	*Call
2096			4974<4970	2-WAY TO 2-WAY	*Call
2096			4974<4971	3-WAY TO 2-WAY	*Call
2096			4974<4972	4-WAY TO 2-WAY	*Call
2096			4974<4973	1-WAY TO 2-WAY	*Call
2096			4974<4975	3-WAY TO 2-WAY	*Call
2096			4974<4976	4-WAY TO 2-WAY	*Call
2096			4974<4977	3-WAY TO 2-WAY	*Call
2096			4974<4978	2-WAY TO 2-WAY	*Call
2096			4974<4979	3-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4974<4980	4-WAY TO 2-WAY	*Call
2096		4974<4981	1-WAY TO 2-WAY	*Call
2096		4974<4982	2-WAY TO 2-WAY	*Call
2096		4974<4983	3-WAY TO 2-WAY	*Call
2096		4974<4984	4-WAY TO 2-WAY	*Call
2096		4974<4985	1-WAY TO 2-WAY	*Call
2096		4974<4986	2-WAY TO 2-WAY	*Call
2096		4974<4987	3-WAY TO 2-WAY	*Call
2096		4974<4988	4-WAY TO 2-WAY	*Call
2096		4974<4989	1-WAY TO 2-WAY	*Call
2096		4974<4990	2-WAY TO 2-WAY	*Call
2096		4974<4991	3-WAY TO 2-WAY	*Call
2096		4974<4992	4-WAY TO 2-WAY	*Call
2096		4974<4993	1-WAY TO 2-WAY	*Call
2096		4974<4994	2-WAY TO 2-WAY	*Call
2096		4974<4995	3-WAY TO 2-WAY	*Call
2096		4974<4996	4-WAY TO 2-WAY	*Call
2096		4974<4997	1-WAY TO 2-WAY	*Call
2096		4974<4998	2-WAY TO 2-WAY	*Call
2096		4974<4999	3-WAY TO 2-WAY	*Call
2096		4974<5000	4-WAY TO 2-WAY	*Call
2096		4974<5001	1-WAY TO 2-WAY	*Call
2096		4974<5002	2-WAY TO 2-WAY	*Call
2096		4974<5003	3-WAY TO 2-WAY	*Call
2096		4974<5004	4-WAY TO 2-WAY	*Call
2096		4975<4900	ZERO-WAY TO 3-WAY	*Call
2096		4975<4901	1-WAY TO 3-WAY	*Call
2096		4975<4902	2-WAY TO 3-WAY	*Call
2096		4975<4903	3-WAY TO 3-WAY	*Call
2096		4975<4905	1-WAY TO 3-WAY	*Call
2096		4975<4906	2-WAY TO 3-WAY	*Call
2096		4975<4907	3-WAY TO 3-WAY	*Call
2096		4975<4909	1-WAY TO 3-WAY	*Call
2096		4975<4910	2-WAY TO 3-WAY	*Call
2096		4975<4911	3-WAY TO 3-WAY	*Call
2096		4975<4913	1-WAY TO 3-WAY	*Call
2096		4975<4914	2-WAY TO 3-WAY	*Call
2096		4975<4915	3-WAY TO 3-WAY	*Call
2096		4975<4917	1-WAY TO 3-WAY	*Call
2096		4975<4918	2-WAY TO 3-WAY	*Call
2096		4975<4921	1-WAY TO 3-WAY	*Call
2096		4975<4922	2-WAY TO 3-WAY	*Call
2096		4975<4925	1-WAY TO 3-WAY	*Call
2096		4975<4929	1-WAY TO 3-WAY	*Call
2096		4975<4933	1-WAY TO 3-WAY	*Call
2096		4975<4937	1-WAY TO 3-WAY	*Call
2096		4975<4944	4-WAY TO 3-WAY	*Call
2096		4975<4947	3-WAY TO 3-WAY	*Call
2096		4975<4948	4-WAY TO 3-WAY	*Call
2096		4975<4951	3-WAY TO 3-WAY	*Call
2096		4975<4952	4-WAY TO 3-WAY	*Call
2096		4975<4954	2-WAY TO 3-WAY	*Call
2096		4975<4955	3-WAY TO 3-WAY	*Call
2096		4975<4956	4-WAY TO 3-WAY	*Call
2096		4975<4958	2-WAY TO 3-WAY	*Call
2096		4975<4959	3-WAY TO 3-WAY	*Call
2096		4975<4960	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4975<4962	2-WAY TO 3-WAY	*Call
2096		4975<4963	3-WAY TO 3-WAY	*Call
2096		4975<4964	4-WAY TO 3-WAY	*Call
2096		4975<4966	2-WAY TO 3-WAY	*Call
2096		4975<4967	3-WAY TO 3-WAY	*Call
2096		4975<4968	4-WAY TO 3-WAY	*Call
2096		4975<4969	1-WAY TO 3-WAY	*Call
2096		4975<4970	2-WAY TO 3-WAY	*Call
2096		4975<4971	3-WAY TO 3-WAY	*Call
2096		4975<4972	4-WAY TO 3-WAY	*Call
2096		4975<4973	1-WAY TO 3-WAY	*Call
2096		4975<4974	2-WAY TO 3-WAY	*Call
2096		4975<4976	4-WAY TO 3-WAY	*Call
2096		4975<4977	3-WAY TO 3-WAY	*Call
2096		4975<4978	2-WAY TO 3-WAY	*Call
2096		4975<4979	3-WAY TO 3-WAY	*Call
2096		4975<4980	4-WAY TO 3-WAY	*Call
2096		4975<4981	1-WAY TO 3-WAY	*Call
2096		4975<4982	2-WAY TO 3-WAY	*Call
2096		4975<4983	3-WAY TO 3-WAY	*Call
2096		4975<4984	4-WAY TO 3-WAY	*Call
2096		4975<4985	1-WAY TO 3-WAY	*Call
2096		4975<4986	2-WAY TO 3-WAY	*Call
2096		4975<4987	3-WAY TO 3-WAY	*Call
2096		4975<4988	4-WAY TO 3-WAY	*Call
2096		4975<4989	1-WAY TO 3-WAY	*Call
2096		4975<4990	2-WAY TO 3-WAY	*Call
2096		4975<4991	3-WAY TO 3-WAY	*Call
2096		4975<4992	4-WAY TO 3-WAY	*Call
2096		4975<4993	1-WAY TO 3-WAY	*Call
2096		4975<4994	2-WAY TO 3-WAY	*Call
2096		4975<4995	3-WAY TO 3-WAY	*Call
2096		4975<4996	4-WAY TO 3-WAY	*Call
2096		4975<4997	1-WAY TO 3-WAY	*Call
2096		4975<4998	2-WAY TO 3-WAY	*Call
2096		4975<4999	3-WAY TO 3-WAY	*Call
2096		4975<5000	4-WAY TO 3-WAY	*Call
2096		4975<5001	1-WAY TO 3-WAY	*Call
2096		4975<5002	2-WAY TO 3-WAY	*Call
2096		4975<5003	3-WAY TO 3-WAY	*Call
2096		4975<5004	4-WAY TO 3-WAY	*Call
2096		4976<4900	ZERO-WAY TO 4-WAY	*Call
2096		4976<4901	1-WAY TO 4-WAY	*Call
2096		4976<4902	2-WAY TO 4-WAY	*Call
2096		4976<4903	3-WAY TO 4-WAY	*Call
2096		4976<4905	1-WAY TO 4-WAY	*Call
2096		4976<4906	2-WAY TO 4-WAY	*Call
2096		4976<4907	3-WAY TO 4-WAY	*Call
2096		4976<4909	1-WAY TO 4-WAY	*Call
2096		4976<4910	2-WAY TO 4-WAY	*Call
2096		4976<4911	3-WAY TO 4-WAY	*Call
2096		4976<4913	1-WAY TO 4-WAY	*Call
2096		4976<4914	2-WAY TO 4-WAY	*Call
2096		4976<4915	3-WAY TO 4-WAY	*Call
2096		4976<4917	1-WAY TO 4-WAY	*Call
2096		4976<4918	2-WAY TO 4-WAY	*Call
2096		4976<4921	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4976<4922	2-WAY TO 4-WAY	*Call
2096		4976<4925	1-WAY TO 4-WAY	*Call
2096		4976<4929	1-WAY TO 4-WAY	*Call
2096		4976<4933	1-WAY TO 4-WAY	*Call
2096		4976<4937	1-WAY TO 4-WAY	*Call
2096		4976<4944	4-WAY TO 4-WAY	*Call
2096		4976<4947	3-WAY TO 4-WAY	*Call
2096		4976<4948	4-WAY TO 4-WAY	*Call
2096		4976<4951	3-WAY TO 4-WAY	*Call
2096		4976<4952	4-WAY TO 4-WAY	*Call
2096		4976<4954	2-WAY TO 4-WAY	*Call
2096		4976<4955	3-WAY TO 4-WAY	*Call
2096		4976<4956	4-WAY TO 4-WAY	*Call
2096		4976<4958	2-WAY TO 4-WAY	*Call
2096		4976<4959	3-WAY TO 4-WAY	*Call
2096		4976<4960	4-WAY TO 4-WAY	*Call
2096		4976<4962	2-WAY TO 4-WAY	*Call
2096		4976<4963	3-WAY TO 4-WAY	*Call
2096		4976<4964	4-WAY TO 4-WAY	*Call
2096		4976<4966	2-WAY TO 4-WAY	*Call
2096		4976<4967	3-WAY TO 4-WAY	*Call
2096		4976<4968	4-WAY TO 4-WAY	*Call
2096		4976<4969	1-WAY TO 4-WAY	*Call
2096		4976<4970	2-WAY TO 4-WAY	*Call
2096		4976<4971	3-WAY TO 4-WAY	*Call
2096		4976<4972	4-WAY TO 4-WAY	*Call
2096		4976<4973	1-WAY TO 4-WAY	*Call
2096		4976<4974	2-WAY TO 4-WAY	*Call
2096		4976<4975	3-WAY TO 4-WAY	*Call
2096		4976<4977	3-WAY TO 4-WAY	*Call
2096		4976<4978	2-WAY TO 4-WAY	*Call
2096		4976<4979	3-WAY TO 4-WAY	*Call
2096		4976<4980	4-WAY TO 4-WAY	*Call
2096		4976<4981	1-WAY TO 4-WAY	*Call
2096		4976<4982	2-WAY TO 4-WAY	*Call
2096		4976<4983	3-WAY TO 4-WAY	*Call
2096		4976<4984	4-WAY TO 4-WAY	*Call
2096		4976<4985	1-WAY TO 4-WAY	*Call
2096		4976<4986	2-WAY TO 4-WAY	*Call
2096		4976<4987	3-WAY TO 4-WAY	*Call
2096		4976<4988	4-WAY TO 4-WAY	*Call
2096		4976<4989	1-WAY TO 4-WAY	*Call
2096		4976<4990	2-WAY TO 4-WAY	*Call
2096		4976<4991	3-WAY TO 4-WAY	*Call
2096		4976<4992	4-WAY TO 4-WAY	*Call
2096		4976<4993	1-WAY TO 4-WAY	*Call
2096		4976<4994	2-WAY TO 4-WAY	*Call
2096		4976<4995	3-WAY TO 4-WAY	*Call
2096		4976<4996	4-WAY TO 4-WAY	*Call
2096		4976<4997	1-WAY TO 4-WAY	*Call
2096		4976<4998	2-WAY TO 4-WAY	*Call
2096		4976<4999	3-WAY TO 4-WAY	*Call
2096		4976<5000	4-WAY TO 4-WAY	*Call
2096		4976<5001	1-WAY TO 4-WAY	*Call
2096		4976<5002	2-WAY TO 4-WAY	*Call
2096		4976<5003	3-WAY TO 4-WAY	*Call
2096		4976<5004	4-WAY TO 4-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4977<4900	ZERO-WAY TO 1-WAY	*Call
2096			4977<4901	1-WAY TO 1-WAY	*Call
2096			4977<4902	2-WAY TO 1-WAY	*Call
2096			4977<4903	3-WAY TO 1-WAY	*Call
2096			4977<4905	1-WAY TO 1-WAY	*Call
2096			4977<4906	2-WAY TO 1-WAY	*Call
2096			4977<4907	3-WAY TO 1-WAY	*Call
2096			4977<4909	1-WAY TO 1-WAY	*Call
2096			4977<4910	2-WAY TO 1-WAY	*Call
2096			4977<4911	3-WAY TO 1-WAY	*Call
2096			4977<4913	1-WAY TO 1-WAY	*Call
2096			4977<4914	2-WAY TO 1-WAY	*Call
2096			4977<4915	3-WAY TO 1-WAY	*Call
2096			4977<4917	1-WAY TO 1-WAY	*Call
2096			4977<4918	2-WAY TO 1-WAY	*Call
2096			4977<4921	1-WAY TO 1-WAY	*Call
2096			4977<4922	2-WAY TO 1-WAY	*Call
2096			4977<4925	1-WAY TO 1-WAY	*Call
2096			4977<4929	1-WAY TO 1-WAY	*Call
2096			4977<4933	1-WAY TO 1-WAY	*Call
2096			4977<4937	1-WAY TO 1-WAY	*Call
2096			4977<4944	4-WAY TO 1-WAY	*Call
2096			4977<4947	3-WAY TO 1-WAY	*Call
2096			4977<4948	4-WAY TO 1-WAY	*Call
2096			4977<4951	3-WAY TO 1-WAY	*Call
2096			4977<4952	4-WAY TO 1-WAY	*Call
2096			4977<4954	2-WAY TO 1-WAY	*Call
2096			4977<4955	3-WAY TO 1-WAY	*Call
2096			4977<4956	4-WAY TO 1-WAY	*Call
2096			4977<4958	2-WAY TO 1-WAY	*Call
2096			4977<4959	3-WAY TO 1-WAY	*Call
2096			4977<4960	4-WAY TO 1-WAY	*Call
2096			4977<4962	2-WAY TO 1-WAY	*Call
2096			4977<4963	3-WAY TO 1-WAY	*Call
2096			4977<4964	4-WAY TO 1-WAY	*Call
2096			4977<4966	2-WAY TO 1-WAY	*Call
2096			4977<4967	3-WAY TO 1-WAY	*Call
2096			4977<4968	4-WAY TO 1-WAY	*Call
2096			4977<4969	1-WAY TO 1-WAY	*Call
2096			4977<4970	2-WAY TO 1-WAY	*Call
2096			4977<4971	3-WAY TO 1-WAY	*Call
2096			4977<4972	4-WAY TO 1-WAY	*Call
2096			4977<4973	1-WAY TO 1-WAY	*Call
2096			4977<4974	2-WAY TO 1-WAY	*Call
2096			4977<4975	3-WAY TO 1-WAY	*Call
2096			4977<4976	4-WAY TO 1-WAY	*Call
2096			4977<4978	2-WAY TO 1-WAY	*Call
2096			4977<4979	3-WAY TO 1-WAY	*Call
2096			4977<4980	4-WAY TO 1-WAY	*Call
2096			4977<4981	1-WAY TO 1-WAY	*Call
2096			4977<4982	2-WAY TO 1-WAY	*Call
2096			4977<4983	3-WAY TO 1-WAY	*Call
2096			4977<4984	4-WAY TO 1-WAY	*Call
2096			4977<4985	1-WAY TO 1-WAY	*Call
2096			4977<4986	2-WAY TO 1-WAY	*Call
2096			4977<4987	3-WAY TO 1-WAY	*Call
2096			4977<4988	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4977<4989	1-WAY TO 1-WAY	*Call
2096		4977<4990	2-WAY TO 1-WAY	*Call
2096		4977<4991	3-WAY TO 1-WAY	*Call
2096		4977<4992	4-WAY TO 1-WAY	*Call
2096		4977<4993	1-WAY TO 1-WAY	*Call
2096		4977<4994	2-WAY TO 1-WAY	*Call
2096		4977<4995	3-WAY TO 1-WAY	*Call
2096		4977<4996	4-WAY TO 1-WAY	*Call
2096		4977<4997	1-WAY TO 1-WAY	*Call
2096		4977<4998	2-WAY TO 1-WAY	*Call
2096		4977<4999	3-WAY TO 1-WAY	*Call
2096		4977<5000	4-WAY TO 1-WAY	*Call
2096		4977<5001	1-WAY TO 1-WAY	*Call
2096		4977<5002	2-WAY TO 1-WAY	*Call
2096		4977<5003	3-WAY TO 1-WAY	*Call
2096		4977<5004	4-WAY TO 1-WAY	*Call
2096		4978<4900	ZERO-WAY TO 2-WAY	*Call
2096		4978<4901	1-WAY TO 2-WAY	*Call
2096		4978<4902	2-WAY TO 2-WAY	*Call
2096		4978<4903	3-WAY TO 2-WAY	*Call
2096		4978<4905	1-WAY TO 2-WAY	*Call
2096		4978<4906	2-WAY TO 2-WAY	*Call
2096		4978<4907	3-WAY TO 2-WAY	*Call
2096		4978<4909	1-WAY TO 2-WAY	*Call
2096		4978<4910	2-WAY TO 2-WAY	*Call
2096		4978<4911	3-WAY TO 2-WAY	*Call
2096		4978<4913	1-WAY TO 2-WAY	*Call
2096		4978<4914	2-WAY TO 2-WAY	*Call
2096		4978<4915	3-WAY TO 2-WAY	*Call
2096		4978<4917	1-WAY TO 2-WAY	*Call
2096		4978<4918	2-WAY TO 2-WAY	*Call
2096		4978<4921	1-WAY TO 2-WAY	*Call
2096		4978<4922	2-WAY TO 2-WAY	*Call
2096		4978<4925	1-WAY TO 2-WAY	*Call
2096		4978<4929	1-WAY TO 2-WAY	*Call
2096		4978<4933	1-WAY TO 2-WAY	*Call
2096		4978<4937	1-WAY TO 2-WAY	*Call
2096		4978<4944	4-WAY TO 2-WAY	*Call
2096		4978<4947	3-WAY TO 2-WAY	*Call
2096		4978<4948	4-WAY TO 2-WAY	*Call
2096		4978<4951	3-WAY TO 2-WAY	*Call
2096		4978<4952	4-WAY TO 2-WAY	*Call
2096		4978<4954	2-WAY TO 2-WAY	*Call
2096		4978<4955	3-WAY TO 2-WAY	*Call
2096		4978<4956	4-WAY TO 2-WAY	*Call
2096		4978<4958	2-WAY TO 2-WAY	*Call
2096		4978<4959	3-WAY TO 2-WAY	*Call
2096		4978<4960	4-WAY TO 2-WAY	*Call
2096		4978<4962	2-WAY TO 2-WAY	*Call
2096		4978<4963	3-WAY TO 2-WAY	*Call
2096		4978<4964	4-WAY TO 2-WAY	*Call
2096		4978<4966	2-WAY TO 2-WAY	*Call
2096		4978<4967	3-WAY TO 2-WAY	*Call
2096		4978<4968	4-WAY TO 2-WAY	*Call
2096		4978<4969	1-WAY TO 2-WAY	*Call
2096		4978<4970	2-WAY TO 2-WAY	*Call
2096		4978<4971	3-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4978<4972	4-WAY TO 2-WAY	*Call
2096		4978<4973	1-WAY TO 2-WAY	*Call
2096		4978<4974	2-WAY TO 2-WAY	*Call
2096		4978<4975	3-WAY TO 2-WAY	*Call
2096		4978<4976	4-WAY TO 2-WAY	*Call
2096		4978<4977	3-WAY TO 2-WAY	*Call
2096		4978<4979	3-WAY TO 2-WAY	*Call
2096		4978<4980	4-WAY TO 2-WAY	*Call
2096		4978<4981	1-WAY TO 2-WAY	*Call
2096		4978<4982	2-WAY TO 2-WAY	*Call
2096		4978<4983	3-WAY TO 2-WAY	*Call
2096		4978<4984	4-WAY TO 2-WAY	*Call
2096		4978<4985	1-WAY TO 2-WAY	*Call
2096		4978<4986	2-WAY TO 2-WAY	*Call
2096		4978<4987	3-WAY TO 2-WAY	*Call
2096		4978<4988	4-WAY TO 2-WAY	*Call
2096		4978<4989	1-WAY TO 2-WAY	*Call
2096		4978<4990	2-WAY TO 2-WAY	*Call
2096		4978<4991	3-WAY TO 2-WAY	*Call
2096		4978<4992	4-WAY TO 2-WAY	*Call
2096		4978<4993	1-WAY TO 2-WAY	*Call
2096		4978<4994	2-WAY TO 2-WAY	*Call
2096		4978<4995	3-WAY TO 2-WAY	*Call
2096		4978<4996	4-WAY TO 2-WAY	*Call
2096		4978<4997	1-WAY TO 2-WAY	*Call
2096		4978<4998	2-WAY TO 2-WAY	*Call
2096		4978<4999	3-WAY TO 2-WAY	*Call
2096		4978<5000	4-WAY TO 2-WAY	*Call
2096		4978<5001	1-WAY TO 2-WAY	*Call
2096		4978<5002	2-WAY TO 2-WAY	*Call
2096		4978<5003	3-WAY TO 2-WAY	*Call
2096		4978<5004	4-WAY TO 2-WAY	*Call
2096		4979<4900	ZERO-WAY TO 3-WAY	*Call
2096		4979<4901	1-WAY TO 3-WAY	*Call
2096		4979<4902	2-WAY TO 3-WAY	*Call
2096		4979<4903	3-WAY TO 3-WAY	*Call
2096		4979<4905	1-WAY TO 3-WAY	*Call
2096		4979<4906	2-WAY TO 3-WAY	*Call
2096		4979<4907	3-WAY TO 3-WAY	*Call
2096		4979<4909	1-WAY TO 3-WAY	*Call
2096		4979<4910	2-WAY TO 3-WAY	*Call
2096		4979<4911	3-WAY TO 3-WAY	*Call
2096		4979<4913	1-WAY TO 3-WAY	*Call
2096		4979<4914	2-WAY TO 3-WAY	*Call
2096		4979<4915	3-WAY TO 3-WAY	*Call
2096		4979<4917	1-WAY TO 3-WAY	*Call
2096		4979<4918	2-WAY TO 3-WAY	*Call
2096		4979<4921	1-WAY TO 3-WAY	*Call
2096		4979<4922	2-WAY TO 3-WAY	*Call
2096		4979<4925	1-WAY TO 3-WAY	*Call
2096		4979<4929	1-WAY TO 3-WAY	*Call
2096		4979<4933	1-WAY TO 3-WAY	*Call
2096		4979<4937	1-WAY TO 3-WAY	*Call
2096		4979<4944	4-WAY TO 3-WAY	*Call
2096		4979<4947	3-WAY TO 3-WAY	*Call
2096		4979<4948	4-WAY TO 3-WAY	*Call
2096		4979<4951	3-WAY TO 3-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4979<4952	4-WAY TO 3-WAY	*Call
2096			4979<4954	2-WAY TO 3-WAY	*Call
2096			4979<4955	3-WAY TO 3-WAY	*Call
2096			4979<4956	4-WAY TO 3-WAY	*Call
2096			4979<4958	2-WAY TO 3-WAY	*Call
2096			4979<4959	3-WAY TO 3-WAY	*Call
2096			4979<4960	4-WAY TO 3-WAY	*Call
2096			4979<4962	2-WAY TO 3-WAY	*Call
2096			4979<4963	3-WAY TO 3-WAY	*Call
2096			4979<4964	4-WAY TO 3-WAY	*Call
2096			4979<4966	2-WAY TO 3-WAY	*Call
2096			4979<4967	3-WAY TO 3-WAY	*Call
2096			4979<4968	4-WAY TO 3-WAY	*Call
2096			4979<4969	1-WAY TO 3-WAY	*Call
2096			4979<4970	2-WAY TO 3-WAY	*Call
2096			4979<4971	3-WAY TO 3-WAY	*Call
2096			4979<4972	4-WAY TO 3-WAY	*Call
2096			4979<4973	1-WAY TO 3-WAY	*Call
2096			4979<4974	2-WAY TO 3-WAY	*Call
2096			4979<4975	3-WAY TO 3-WAY	*Call
2096			4979<4976	4-WAY TO 3-WAY	*Call
2096			4979<4977	3-WAY TO 3-WAY	*Call
2096			4979<4978	2-WAY TO 3-WAY	*Call
2096			4979<4980	4-WAY TO 3-WAY	*Call
2096			4979<4981	1-WAY TO 3-WAY	*Call
2096			4979<4982	2-WAY TO 3-WAY	*Call
2096			4979<4983	3-WAY TO 3-WAY	*Call
2096			4979<4984	4-WAY TO 3-WAY	*Call
2096			4979<4985	1-WAY TO 3-WAY	*Call
2096			4979<4986	2-WAY TO 3-WAY	*Call
2096			4979<4987	3-WAY TO 3-WAY	*Call
2096			4979<4988	4-WAY TO 3-WAY	*Call
2096			4979<4989	1-WAY TO 3-WAY	*Call
2096			4979<4990	2-WAY TO 3-WAY	*Call
2096			4979<4991	3-WAY TO 3-WAY	*Call
2096			4979<4992	4-WAY TO 3-WAY	*Call
2096			4979<4993	1-WAY TO 3-WAY	*Call
2096			4979<4994	2-WAY TO 3-WAY	*Call
2096			4979<4995	3-WAY TO 3-WAY	*Call
2096			4979<4996	4-WAY TO 3-WAY	*Call
2096			4979<4997	1-WAY TO 3-WAY	*Call
2096			4979<4998	2-WAY TO 3-WAY	*Call
2096			4979<4999	3-WAY TO 3-WAY	*Call
2096			4979<5000	4-WAY TO 3-WAY	*Call
2096			4979<5001	1-WAY TO 3-WAY	*Call
2096			4979<5002	2-WAY TO 3-WAY	*Call
2096			4979<5003	3-WAY TO 3-WAY	*Call
2096			4979<5004	4-WAY TO 3-WAY	*Call
2096			4980<4900	ZERO-WAY TO 4-WAY	*Call
2096			4980<4901	1-WAY TO 4-WAY	*Call
2096			4980<4902	2-WAY TO 4-WAY	*Call
2096			4980<4903	3-WAY TO 4-WAY	*Call
2096			4980<4905	1-WAY TO 4-WAY	*Call
2096			4980<4906	2-WAY TO 4-WAY	*Call
2096			4980<4907	3-WAY TO 4-WAY	*Call
2096			4980<4909	1-WAY TO 4-WAY	*Call
2096			4980<4910	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4980<4911	3-WAY TO 4-WAY	*Call
2096		4980<4913	1-WAY TO 4-WAY	*Call
2096		4980<4914	2-WAY TO 4-WAY	*Call
2096		4980<4915	3-WAY TO 4-WAY	*Call
2096		4980<4917	1-WAY TO 4-WAY	*Call
2096		4980<4918	2-WAY TO 4-WAY	*Call
2096		4980<4921	1-WAY TO 4-WAY	*Call
2096		4980<4922	2-WAY TO 4-WAY	*Call
2096		4980<4925	1-WAY TO 4-WAY	*Call
2096		4980<4929	1-WAY TO 4-WAY	*Call
2096		4980<4933	1-WAY TO 4-WAY	*Call
2096		4980<4937	1-WAY TO 4-WAY	*Call
2096		4980<4944	4-WAY TO 4-WAY	*Call
2096		4980<4947	3-WAY TO 4-WAY	*Call
2096		4980<4948	4-WAY TO 4-WAY	*Call
2096		4980<4951	3-WAY TO 4-WAY	*Call
2096		4980<4952	4-WAY TO 4-WAY	*Call
2096		4980<4954	2-WAY TO 4-WAY	*Call
2096		4980<4955	3-WAY TO 4-WAY	*Call
2096		4980<4956	4-WAY TO 4-WAY	*Call
2096		4980<4958	2-WAY TO 4-WAY	*Call
2096		4980<4959	3-WAY TO 4-WAY	*Call
2096		4980<4960	4-WAY TO 4-WAY	*Call
2096		4980<4962	2-WAY TO 4-WAY	*Call
2096		4980<4963	3-WAY TO 4-WAY	*Call
2096		4980<4964	4-WAY TO 4-WAY	*Call
2096		4980<4966	2-WAY TO 4-WAY	*Call
2096		4980<4967	3-WAY TO 4-WAY	*Call
2096		4980<4968	4-WAY TO 4-WAY	*Call
2096		4980<4969	1-WAY TO 4-WAY	*Call
2096		4980<4970	2-WAY TO 4-WAY	*Call
2096		4980<4971	3-WAY TO 4-WAY	*Call
2096		4980<4972	4-WAY TO 4-WAY	*Call
2096		4980<4973	1-WAY TO 4-WAY	*Call
2096		4980<4974	2-WAY TO 4-WAY	*Call
2096		4980<4975	3-WAY TO 4-WAY	*Call
2096		4980<4976	4-WAY TO 4-WAY	*Call
2096		4980<4977	3-WAY TO 4-WAY	*Call
2096		4980<4978	2-WAY TO 4-WAY	*Call
2096		4980<4979	3-WAY TO 4-WAY	*Call
2096		4980<4981	1-WAY TO 4-WAY	*Call
2096		4980<4982	2-WAY TO 4-WAY	*Call
2096		4980<4983	3-WAY TO 4-WAY	*Call
2096		4980<4984	4-WAY TO 4-WAY	*Call
2096		4980<4985	1-WAY TO 4-WAY	*Call
2096		4980<4986	2-WAY TO 4-WAY	*Call
2096		4980<4987	3-WAY TO 4-WAY	*Call
2096		4980<4988	4-WAY TO 4-WAY	*Call
2096		4980<4989	1-WAY TO 4-WAY	*Call
2096		4980<4990	2-WAY TO 4-WAY	*Call
2096		4980<4991	3-WAY TO 4-WAY	*Call
2096		4980<4992	4-WAY TO 4-WAY	*Call
2096		4980<4993	1-WAY TO 4-WAY	*Call
2096		4980<4994	2-WAY TO 4-WAY	*Call
2096		4980<4995	3-WAY TO 4-WAY	*Call
2096		4980<4996	4-WAY TO 4-WAY	*Call
2096		4980<4997	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4980<4998	2-WAY TO 4-WAY	*Call
2096		4980<4999	3-WAY TO 4-WAY	*Call
2096		4980<5000	4-WAY TO 4-WAY	*Call
2096		4980<5001	1-WAY TO 4-WAY	*Call
2096		4980<5002	2-WAY TO 4-WAY	*Call
2096		4980<5003	3-WAY TO 4-WAY	*Call
2096		4980<5004	4-WAY TO 4-WAY	*Call
2096		4981<4900	ZERO-WAY TO 1-WAY	*Call
2096		4981<4901	1-WAY TO 1-WAY	*Call
2096		4981<4902	2-WAY TO 1-WAY	*Call
2096		4981<4903	3-WAY TO 1-WAY	*Call
2096		4981<4905	1-WAY TO 1-WAY	*Call
2096		4981<4906	2-WAY TO 1-WAY	*Call
2096		4981<4907	3-WAY TO 1-WAY	*Call
2096		4981<4909	1-WAY TO 1-WAY	*Call
2096		4981<4910	2-WAY TO 1-WAY	*Call
2096		4981<4911	3-WAY TO 1-WAY	*Call
2096		4981<4913	1-WAY TO 1-WAY	*Call
2096		4981<4914	2-WAY TO 1-WAY	*Call
2096		4981<4915	3-WAY TO 1-WAY	*Call
2096		4981<4917	1-WAY TO 1-WAY	*Call
2096		4981<4918	2-WAY TO 1-WAY	*Call
2096		4981<4921	1-WAY TO 1-WAY	*Call
2096		4981<4922	2-WAY TO 1-WAY	*Call
2096		4981<4925	1-WAY TO 1-WAY	*Call
2096		4981<4929	1-WAY TO 1-WAY	*Call
2096		4981<4933	1-WAY TO 1-WAY	*Call
2096		4981<4937	1-WAY TO 1-WAY	*Call
2096		4981<4944	4-WAY TO 1-WAY	*Call
2096		4981<4947	3-WAY TO 1-WAY	*Call
2096		4981<4948	4-WAY TO 1-WAY	*Call
2096		4981<4951	3-WAY TO 1-WAY	*Call
2096		4981<4952	4-WAY TO 1-WAY	*Call
2096		4981<4954	2-WAY TO 1-WAY	*Call
2096		4981<4955	3-WAY TO 1-WAY	*Call
2096		4981<4956	4-WAY TO 1-WAY	*Call
2096		4981<4958	2-WAY TO 1-WAY	*Call
2096		4981<4959	3-WAY TO 1-WAY	*Call
2096		4981<4960	4-WAY TO 1-WAY	*Call
2096		4981<4962	2-WAY TO 1-WAY	*Call
2096		4981<4963	3-WAY TO 1-WAY	*Call
2096		4981<4964	4-WAY TO 1-WAY	*Call
2096		4981<4966	2-WAY TO 1-WAY	*Call
2096		4981<4967	3-WAY TO 1-WAY	*Call
2096		4981<4968	4-WAY TO 1-WAY	*Call
2096		4981<4969	1-WAY TO 1-WAY	*Call
2096		4981<4970	2-WAY TO 1-WAY	*Call
2096		4981<4971	3-WAY TO 1-WAY	*Call
2096		4981<4972	4-WAY TO 1-WAY	*Call
2096		4981<4973	1-WAY TO 1-WAY	*Call
2096		4981<4974	2-WAY TO 1-WAY	*Call
2096		4981<4975	3-WAY TO 1-WAY	*Call
2096		4981<4976	4-WAY TO 1-WAY	*Call
2096		4981<4977	3-WAY TO 1-WAY	*Call
2096		4981<4978	2-WAY TO 1-WAY	*Call
2096		4981<4979	3-WAY TO 1-WAY	*Call
2096		4981<4980	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4981<4982	2-WAY TO 1-WAY	*Call
2096		4981<4983	3-WAY TO 1-WAY	*Call
2096		4981<4984	4-WAY TO 1-WAY	*Call
2096		4981<4985	1-WAY TO 1-WAY	*Call
2096		4981<4986	2-WAY TO 1-WAY	*Call
2096		4981<4987	3-WAY TO 1-WAY	*Call
2096		4981<4988	4-WAY TO 1-WAY	*Call
2096		4981<4989	1-WAY TO 1-WAY	*Call
2096		4981<4990	2-WAY TO 1-WAY	*Call
2096		4981<4991	3-WAY TO 1-WAY	*Call
2096		4981<4992	4-WAY TO 1-WAY	*Call
2096		4981<4993	1-WAY TO 1-WAY	*Call
2096		4981<4994	2-WAY TO 1-WAY	*Call
2096		4981<4995	3-WAY TO 1-WAY	*Call
2096		4981<4996	4-WAY TO 1-WAY	*Call
2096		4981<4997	1-WAY TO 1-WAY	*Call
2096		4981<4998	2-WAY TO 1-WAY	*Call
2096		4981<4999	3-WAY TO 1-WAY	*Call
2096		4981<5000	4-WAY TO 1-WAY	*Call
2096		4981<5001	1-WAY TO 1-WAY	*Call
2096		4981<5002	2-WAY TO 1-WAY	*Call
2096		4981<5003	3-WAY TO 1-WAY	*Call
2096		4981<5004	4-WAY TO 1-WAY	*Call
2096		4982<4900	ZERO-WAY TO 2-WAY	*Call
2096		4982<4901	1-WAY TO 2-WAY	*Call
2096		4982<4902	2-WAY TO 2-WAY	*Call
2096		4982<4903	3-WAY TO 2-WAY	*Call
2096		4982<4905	1-WAY TO 2-WAY	*Call
2096		4982<4906	2-WAY TO 2-WAY	*Call
2096		4982<4907	3-WAY TO 2-WAY	*Call
2096		4982<4909	1-WAY TO 2-WAY	*Call
2096		4982<4910	2-WAY TO 2-WAY	*Call
2096		4982<4911	3-WAY TO 2-WAY	*Call
2096		4982<4913	1-WAY TO 2-WAY	*Call
2096		4982<4914	2-WAY TO 2-WAY	*Call
2096		4982<4915	3-WAY TO 2-WAY	*Call
2096		4982<4917	1-WAY TO 2-WAY	*Call
2096		4982<4918	2-WAY TO 2-WAY	*Call
2096		4982<4921	1-WAY TO 2-WAY	*Call
2096		4982<4922	2-WAY TO 2-WAY	*Call
2096		4982<4925	1-WAY TO 2-WAY	*Call
2096		4982<4929	1-WAY TO 2-WAY	*Call
2096		4982<4933	1-WAY TO 2-WAY	*Call
2096		4982<4937	1-WAY TO 2-WAY	*Call
2096		4982<4944	4-WAY TO 2-WAY	*Call
2096		4982<4947	3-WAY TO 2-WAY	*Call
2096		4982<4948	4-WAY TO 2-WAY	*Call
2096		4982<4951	3-WAY TO 2-WAY	*Call
2096		4982<4952	4-WAY TO 2-WAY	*Call
2096		4982<4954	2-WAY TO 2-WAY	*Call
2096		4982<4955	3-WAY TO 2-WAY	*Call
2096		4982<4956	4-WAY TO 2-WAY	*Call
2096		4982<4958	2-WAY TO 2-WAY	*Call
2096		4982<4959	3-WAY TO 2-WAY	*Call
2096		4982<4960	4-WAY TO 2-WAY	*Call
2096		4982<4962	2-WAY TO 2-WAY	*Call
2096		4982<4963	3-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4982<4964	4-WAY TO 2-WAY	*Call
2096		4982<4966	2-WAY TO 2-WAY	*Call
2096		4982<4967	3-WAY TO 2-WAY	*Call
2096		4982<4968	4-WAY TO 2-WAY	*Call
2096		4982<4969	1-WAY TO 2-WAY	*Call
2096		4982<4970	2-WAY TO 2-WAY	*Call
2096		4982<4971	3-WAY TO 2-WAY	*Call
2096		4982<4972	4-WAY TO 2-WAY	*Call
2096		4982<4973	1-WAY TO 2-WAY	*Call
2096		4982<4974	2-WAY TO 2-WAY	*Call
2096		4982<4975	3-WAY TO 2-WAY	*Call
2096		4982<4976	4-WAY TO 2-WAY	*Call
2096		4982<4977	3-WAY TO 2-WAY	*Call
2096		4982<4978	2-WAY TO 2-WAY	*Call
2096		4982<4979	3-WAY TO 2-WAY	*Call
2096		4982<4980	4-WAY TO 2-WAY	*Call
2096		4982<4981	1-WAY TO 2-WAY	*Call
2096		4982<4983	3-WAY TO 2-WAY	*Call
2096		4982<4984	4-WAY TO 2-WAY	*Call
2096		4982<4985	1-WAY TO 2-WAY	*Call
2096		4982<4986	2-WAY TO 2-WAY	*Call
2096		4982<4987	3-WAY TO 2-WAY	*Call
2096		4982<4988	4-WAY TO 2-WAY	*Call
2096		4982<4989	1-WAY TO 2-WAY	*Call
2096		4982<4990	2-WAY TO 2-WAY	*Call
2096		4982<4991	3-WAY TO 2-WAY	*Call
2096		4982<4992	4-WAY TO 2-WAY	*Call
2096		4982<4993	1-WAY TO 2-WAY	*Call
2096		4982<4994	2-WAY TO 2-WAY	*Call
2096		4982<4995	3-WAY TO 2-WAY	*Call
2096		4982<4996	4-WAY TO 2-WAY	*Call
2096		4982<4997	1-WAY TO 2-WAY	*Call
2096		4982<4998	2-WAY TO 2-WAY	*Call
2096		4982<4999	3-WAY TO 2-WAY	*Call
2096		4982<5000	4-WAY TO 2-WAY	*Call
2096		4982<5001	1-WAY TO 2-WAY	*Call
2096		4982<5002	2-WAY TO 2-WAY	*Call
2096		4982<5003	3-WAY TO 2-WAY	*Call
2096		4982<5004	4-WAY TO 2-WAY	*Call
2096		4983<4900	ZERO-WAY TO 3-WAY	*Call
2096		4983<4901	1-WAY TO 3-WAY	*Call
2096		4983<4902	2-WAY TO 3-WAY	*Call
2096		4983<4903	3-WAY TO 3-WAY	*Call
2096		4983<4905	1-WAY TO 3-WAY	*Call
2096		4983<4906	2-WAY TO 3-WAY	*Call
2096		4983<4907	3-WAY TO 3-WAY	*Call
2096		4983<4909	1-WAY TO 3-WAY	*Call
2096		4983<4910	2-WAY TO 3-WAY	*Call
2096		4983<4911	3-WAY TO 3-WAY	*Call
2096		4983<4913	1-WAY TO 3-WAY	*Call
2096		4983<4914	2-WAY TO 3-WAY	*Call
2096		4983<4915	3-WAY TO 3-WAY	*Call
2096		4983<4917	1-WAY TO 3-WAY	*Call
2096		4983<4918	2-WAY TO 3-WAY	*Call
2096		4983<4921	1-WAY TO 3-WAY	*Call
2096		4983<4922	2-WAY TO 3-WAY	*Call
2096		4983<4925	1-WAY TO 3-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4983<4929	1-WAY TO 3-WAY	*Call
2096			4983<4933	1-WAY TO 3-WAY	*Call
2096			4983<4937	1-WAY TO 3-WAY	*Call
2096			4983<4944	4-WAY TO 3-WAY	*Call
2096			4983<4947	3-WAY TO 3-WAY	*Call
2096			4983<4948	4-WAY TO 3-WAY	*Call
2096			4983<4951	3-WAY TO 3-WAY	*Call
2096			4983<4952	4-WAY TO 3-WAY	*Call
2096			4983<4954	2-WAY TO 3-WAY	*Call
2096			4983<4955	3-WAY TO 3-WAY	*Call
2096			4983<4956	4-WAY TO 3-WAY	*Call
2096			4983<4958	2-WAY TO 3-WAY	*Call
2096			4983<4959	3-WAY TO 3-WAY	*Call
2096			4983<4960	4-WAY TO 3-WAY	*Call
2096			4983<4962	2-WAY TO 3-WAY	*Call
2096			4983<4963	3-WAY TO 3-WAY	*Call
2096			4983<4964	4-WAY TO 3-WAY	*Call
2096			4983<4966	2-WAY TO 3-WAY	*Call
2096			4983<4967	3-WAY TO 3-WAY	*Call
2096			4983<4968	4-WAY TO 3-WAY	*Call
2096			4983<4969	1-WAY TO 3-WAY	*Call
2096			4983<4970	2-WAY TO 3-WAY	*Call
2096			4983<4971	3-WAY TO 3-WAY	*Call
2096			4983<4972	4-WAY TO 3-WAY	*Call
2096			4983<4973	1-WAY TO 3-WAY	*Call
2096			4983<4974	2-WAY TO 3-WAY	*Call
2096			4983<4975	3-WAY TO 3-WAY	*Call
2096			4983<4976	4-WAY TO 3-WAY	*Call
2096			4983<4977	3-WAY TO 3-WAY	*Call
2096			4983<4978	2-WAY TO 3-WAY	*Call
2096			4983<4979	3-WAY TO 3-WAY	*Call
2096			4983<4980	4-WAY TO 3-WAY	*Call
2096			4983<4981	1-WAY TO 3-WAY	*Call
2096			4983<4982	2-WAY TO 3-WAY	*Call
2096			4983<4984	4-WAY TO 3-WAY	*Call
2096			4983<4985	1-WAY TO 3-WAY	*Call
2096			4983<4986	2-WAY TO 3-WAY	*Call
2096			4983<4987	3-WAY TO 3-WAY	*Call
2096			4983<4988	4-WAY TO 3-WAY	*Call
2096			4983<4989	1-WAY TO 3-WAY	*Call
2096			4983<4990	2-WAY TO 3-WAY	*Call
2096			4983<4991	3-WAY TO 3-WAY	*Call
2096			4983<4992	4-WAY TO 3-WAY	*Call
2096			4983<4993	1-WAY TO 3-WAY	*Call
2096			4983<4994	2-WAY TO 3-WAY	*Call
2096			4983<4995	3-WAY TO 3-WAY	*Call
2096			4983<4996	4-WAY TO 3-WAY	*Call
2096			4983<4997	1-WAY TO 3-WAY	*Call
2096			4983<4998	2-WAY TO 3-WAY	*Call
2096			4983<4999	3-WAY TO 3-WAY	*Call
2096			4983<5000	4-WAY TO 3-WAY	*Call
2096			4983<5001	1-WAY TO 3-WAY	*Call
2096			4983<5002	2-WAY TO 3-WAY	*Call
2096			4983<5003	3-WAY TO 3-WAY	*Call
2096			4983<5004	4-WAY TO 3-WAY	*Call
2096			4984<4900	ZERO-WAY TO 4-WAY	*Call
2096			4984<4901	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4984<4902	2-WAY TO 4-WAY	*Call
2096		4984<4903	3-WAY TO 4-WAY	*Call
2096		4984<4905	1-WAY TO 4-WAY	*Call
2096		4984<4906	2-WAY TO 4-WAY	*Call
2096		4984<4907	3-WAY TO 4-WAY	*Call
2096		4984<4909	1-WAY TO 4-WAY	*Call
2096		4984<4910	2-WAY TO 4-WAY	*Call
2096		4984<4911	3-WAY TO 4-WAY	*Call
2096		4984<4913	1-WAY TO 4-WAY	*Call
2096		4984<4914	2-WAY TO 4-WAY	*Call
2096		4984<4915	3-WAY TO 4-WAY	*Call
2096		4984<4917	1-WAY TO 4-WAY	*Call
2096		4984<4918	2-WAY TO 4-WAY	*Call
2096		4984<4921	1-WAY TO 4-WAY	*Call
2096		4984<4922	2-WAY TO 4-WAY	*Call
2096		4984<4925	1-WAY TO 4-WAY	*Call
2096		4984<4929	1-WAY TO 4-WAY	*Call
2096		4984<4933	1-WAY TO 4-WAY	*Call
2096		4984<4937	1-WAY TO 4-WAY	*Call
2096		4984<4944	4-WAY TO 4-WAY	*Call
2096		4984<4947	3-WAY TO 4-WAY	*Call
2096		4984<4948	4-WAY TO 4-WAY	*Call
2096		4984<4951	3-WAY TO 4-WAY	*Call
2096		4984<4952	4-WAY TO 4-WAY	*Call
2096		4984<4954	2-WAY TO 4-WAY	*Call
2096		4984<4955	3-WAY TO 4-WAY	*Call
2096		4984<4956	4-WAY TO 4-WAY	*Call
2096		4984<4958	2-WAY TO 4-WAY	*Call
2096		4984<4959	3-WAY TO 4-WAY	*Call
2096		4984<4960	4-WAY TO 4-WAY	*Call
2096		4984<4962	2-WAY TO 4-WAY	*Call
2096		4984<4963	3-WAY TO 4-WAY	*Call
2096		4984<4964	4-WAY TO 4-WAY	*Call
2096		4984<4966	2-WAY TO 4-WAY	*Call
2096		4984<4967	3-WAY TO 4-WAY	*Call
2096		4984<4968	4-WAY TO 4-WAY	*Call
2096		4984<4969	1-WAY TO 4-WAY	*Call
2096		4984<4970	2-WAY TO 4-WAY	*Call
2096		4984<4971	3-WAY TO 4-WAY	*Call
2096		4984<4972	4-WAY TO 4-WAY	*Call
2096		4984<4973	1-WAY TO 4-WAY	*Call
2096		4984<4974	2-WAY TO 4-WAY	*Call
2096		4984<4975	3-WAY TO 4-WAY	*Call
2096		4984<4976	4-WAY TO 4-WAY	*Call
2096		4984<4977	3-WAY TO 4-WAY	*Call
2096		4984<4978	2-WAY TO 4-WAY	*Call
2096		4984<4979	3-WAY TO 4-WAY	*Call
2096		4984<4980	4-WAY TO 4-WAY	*Call
2096		4984<4981	1-WAY TO 4-WAY	*Call
2096		4984<4982	2-WAY TO 4-WAY	*Call
2096		4984<4983	3-WAY TO 4-WAY	*Call
2096		4984<4985	1-WAY TO 4-WAY	*Call
2096		4984<4986	2-WAY TO 4-WAY	*Call
2096		4984<4987	3-WAY TO 4-WAY	*Call
2096		4984<4988	4-WAY TO 4-WAY	*Call
2096		4984<4989	1-WAY TO 4-WAY	*Call
2096		4984<4990	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4984<4991	3-WAY TO 4-WAY	*Call
2096		4984<4992	4-WAY TO 4-WAY	*Call
2096		4984<4993	1-WAY TO 4-WAY	*Call
2096		4984<4994	2-WAY TO 4-WAY	*Call
2096		4984<4995	3-WAY TO 4-WAY	*Call
2096		4984<4996	4-WAY TO 4-WAY	*Call
2096		4984<4997	1-WAY TO 4-WAY	*Call
2096		4984<4998	2-WAY TO 4-WAY	*Call
2096		4984<4999	3-WAY TO 4-WAY	*Call
2096		4984<5000	4-WAY TO 4-WAY	*Call
2096		4984<5001	1-WAY TO 4-WAY	*Call
2096		4984<5002	2-WAY TO 4-WAY	*Call
2096		4984<5003	3-WAY TO 4-WAY	*Call
2096		4984<5004	4-WAY TO 4-WAY	*Call
2096		4985<4900	ZERO-WAY TO 1-WAY	*Call
2096		4985<4901	1-WAY TO 1-WAY	*Call
2096		4985<4902	2-WAY TO 1-WAY	*Call
2096		4985<4903	3-WAY TO 1-WAY	*Call
2096		4985<4905	1-WAY TO 1-WAY	*Call
2096		4985<4906	2-WAY TO 1-WAY	*Call
2096		4985<4907	3-WAY TO 1-WAY	*Call
2096		4985<4909	1-WAY TO 1-WAY	*Call
2096		4985<4910	2-WAY TO 1-WAY	*Call
2096		4985<4911	3-WAY TO 1-WAY	*Call
2096		4985<4913	1-WAY TO 1-WAY	*Call
2096		4985<4914	2-WAY TO 1-WAY	*Call
2096		4985<4915	3-WAY TO 1-WAY	*Call
2096		4985<4917	1-WAY TO 1-WAY	*Call
2096		4985<4918	2-WAY TO 1-WAY	*Call
2096		4985<4921	1-WAY TO 1-WAY	*Call
2096		4985<4922	2-WAY TO 1-WAY	*Call
2096		4985<4925	1-WAY TO 1-WAY	*Call
2096		4985<4929	1-WAY TO 1-WAY	*Call
2096		4985<4933	1-WAY TO 1-WAY	*Call
2096		4985<4937	1-WAY TO 1-WAY	*Call
2096		4985<4944	4-WAY TO 1-WAY	*Call
2096		4985<4947	3-WAY TO 1-WAY	*Call
2096		4985<4948	4-WAY TO 1-WAY	*Call
2096		4985<4951	3-WAY TO 1-WAY	*Call
2096		4985<4952	4-WAY TO 1-WAY	*Call
2096		4985<4954	2-WAY TO 1-WAY	*Call
2096		4985<4955	3-WAY TO 1-WAY	*Call
2096		4985<4956	4-WAY TO 1-WAY	*Call
2096		4985<4958	2-WAY TO 1-WAY	*Call
2096		4985<4959	3-WAY TO 1-WAY	*Call
2096		4985<4960	4-WAY TO 1-WAY	*Call
2096		4985<4962	2-WAY TO 1-WAY	*Call
2096		4985<4963	3-WAY TO 1-WAY	*Call
2096		4985<4964	4-WAY TO 1-WAY	*Call
2096		4985<4966	2-WAY TO 1-WAY	*Call
2096		4985<4967	3-WAY TO 1-WAY	*Call
2096		4985<4968	4-WAY TO 1-WAY	*Call
2096		4985<4969	1-WAY TO 1-WAY	*Call
2096		4985<4970	2-WAY TO 1-WAY	*Call
2096		4985<4971	3-WAY TO 1-WAY	*Call
2096		4985<4972	4-WAY TO 1-WAY	*Call
2096		4985<4973	1-WAY TO 1-WAY	*Call

Machine	Type	Model	Feature	Description	GSA Price
2096			4985<4974	2-WAY TO 1-WAY	*Call
2096			4985<4975	3-WAY TO 1-WAY	*Call
2096			4985<4976	4-WAY TO 1-WAY	*Call
2096			4985<4977	3-WAY TO 1-WAY	*Call
2096			4985<4978	2-WAY TO 1-WAY	*Call
2096			4985<4979	3-WAY TO 1-WAY	*Call
2096			4985<4980	4-WAY TO 1-WAY	*Call
2096			4985<4981	1-WAY TO 1-WAY	*Call
2096			4985<4982	2-WAY TO 1-WAY	*Call
2096			4985<4983	3-WAY TO 1-WAY	*Call
2096			4985<4984	4-WAY TO 1-WAY	*Call
2096			4985<4986	2-WAY TO 1-WAY	*Call
2096			4985<4987	3-WAY TO 1-WAY	*Call
2096			4985<4988	4-WAY TO 1-WAY	*Call
2096			4985<4989	1-WAY TO 1-WAY	*Call
2096			4985<4990	2-WAY TO 1-WAY	*Call
2096			4985<4991	3-WAY TO 1-WAY	*Call
2096			4985<4992	4-WAY TO 1-WAY	*Call
2096			4985<4993	1-WAY TO 1-WAY	*Call
2096			4985<4994	2-WAY TO 1-WAY	*Call
2096			4985<4995	3-WAY TO 1-WAY	*Call
2096			4985<4996	4-WAY TO 1-WAY	*Call
2096			4985<4997	1-WAY TO 1-WAY	*Call
2096			4985<4998	2-WAY TO 1-WAY	*Call
2096			4985<4999	3-WAY TO 1-WAY	*Call
2096			4985<5000	4-WAY TO 1-WAY	*Call
2096			4985<5001	1-WAY TO 1-WAY	*Call
2096			4985<5002	2-WAY TO 1-WAY	*Call
2096			4985<5003	3-WAY TO 1-WAY	*Call
2096			4985<5004	4-WAY TO 1-WAY	*Call
2096			4986<4900	ZERO-WAY TO 2-WAY	*Call
2096			4986<4901	1-WAY TO 2-WAY	*Call
2096			4986<4902	2-WAY TO 2-WAY	*Call
2096			4986<4903	3-WAY TO 2-WAY	*Call
2096			4986<4905	1-WAY TO 2-WAY	*Call
2096			4986<4906	2-WAY TO 2-WAY	*Call
2096			4986<4907	3-WAY TO 2-WAY	*Call
2096			4986<4909	1-WAY TO 2-WAY	*Call
2096			4986<4910	2-WAY TO 2-WAY	*Call
2096			4986<4911	3-WAY TO 2-WAY	*Call
2096			4986<4913	1-WAY TO 2-WAY	*Call
2096			4986<4914	2-WAY TO 2-WAY	*Call
2096			4986<4915	3-WAY TO 2-WAY	*Call
2096			4986<4917	1-WAY TO 2-WAY	*Call
2096			4986<4918	2-WAY TO 2-WAY	*Call
2096			4986<4921	1-WAY TO 2-WAY	*Call
2096			4986<4922	2-WAY TO 2-WAY	*Call
2096			4986<4925	1-WAY TO 2-WAY	*Call
2096			4986<4929	1-WAY TO 2-WAY	*Call
2096			4986<4933	1-WAY TO 2-WAY	*Call
2096			4986<4937	1-WAY TO 2-WAY	*Call
2096			4986<4944	4-WAY TO 2-WAY	*Call
2096			4986<4947	3-WAY TO 2-WAY	*Call
2096			4986<4948	4-WAY TO 2-WAY	*Call
2096			4986<4951	3-WAY TO 2-WAY	*Call
2096			4986<4952	4-WAY TO 2-WAY	*Call
2096			4986<4954	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4986<4955	3-WAY TO 2-WAY	*Call
2096		4986<4956	4-WAY TO 2-WAY	*Call
2096		4986<4958	2-WAY TO 2-WAY	*Call
2096		4986<4959	3-WAY TO 2-WAY	*Call
2096		4986<4960	4-WAY TO 2-WAY	*Call
2096		4986<4962	2-WAY TO 2-WAY	*Call
2096		4986<4963	3-WAY TO 2-WAY	*Call
2096		4986<4964	4-WAY TO 2-WAY	*Call
2096		4986<4966	2-WAY TO 2-WAY	*Call
2096		4986<4967	3-WAY TO 2-WAY	*Call
2096		4986<4968	4-WAY TO 2-WAY	*Call
2096		4986<4969	1-WAY TO 2-WAY	*Call
2096		4986<4970	2-WAY TO 2-WAY	*Call
2096		4986<4971	3-WAY TO 2-WAY	*Call
2096		4986<4972	4-WAY TO 2-WAY	*Call
2096		4986<4973	1-WAY TO 2-WAY	*Call
2096		4986<4974	2-WAY TO 2-WAY	*Call
2096		4986<4975	3-WAY TO 2-WAY	*Call
2096		4986<4976	4-WAY TO 2-WAY	*Call
2096		4986<4977	3-WAY TO 2-WAY	*Call
2096		4986<4978	2-WAY TO 2-WAY	*Call
2096		4986<4979	3-WAY TO 2-WAY	*Call
2096		4986<4980	4-WAY TO 2-WAY	*Call
2096		4986<4981	1-WAY TO 2-WAY	*Call
2096		4986<4982	2-WAY TO 2-WAY	*Call
2096		4986<4983	3-WAY TO 2-WAY	*Call
2096		4986<4984	4-WAY TO 2-WAY	*Call
2096		4986<4985	1-WAY TO 2-WAY	*Call
2096		4986<4987	3-WAY TO 2-WAY	*Call
2096		4986<4988	4-WAY TO 2-WAY	*Call
2096		4986<4989	1-WAY TO 2-WAY	*Call
2096		4986<4990	2-WAY TO 2-WAY	*Call
2096		4986<4991	3-WAY TO 2-WAY	*Call
2096		4986<4992	4-WAY TO 2-WAY	*Call
2096		4986<4993	1-WAY TO 2-WAY	*Call
2096		4986<4994	2-WAY TO 2-WAY	*Call
2096		4986<4995	3-WAY TO 2-WAY	*Call
2096		4986<4996	4-WAY TO 2-WAY	*Call
2096		4986<4997	1-WAY TO 2-WAY	*Call
2096		4986<4998	2-WAY TO 2-WAY	*Call
2096		4986<4999	3-WAY TO 2-WAY	*Call
2096		4986<5000	4-WAY TO 2-WAY	*Call
2096		4986<5001	1-WAY TO 2-WAY	*Call
2096		4986<5002	2-WAY TO 2-WAY	*Call
2096		4986<5003	3-WAY TO 2-WAY	*Call
2096		4986<5004	4-WAY TO 2-WAY	*Call
2096		4987<4900	ZERO-WAY TO 3-WAY	*Call
2096		4987<4901	1-WAY TO 3-WAY	*Call
2096		4987<4902	2-WAY TO 3-WAY	*Call
2096		4987<4903	3-WAY TO 3-WAY	*Call
2096		4987<4905	1-WAY TO 3-WAY	*Call
2096		4987<4906	2-WAY TO 3-WAY	*Call
2096		4987<4907	3-WAY TO 3-WAY	*Call
2096		4987<4909	1-WAY TO 3-WAY	*Call
2096		4987<4910	2-WAY TO 3-WAY	*Call
2096		4987<4911	3-WAY TO 3-WAY	*Call
2096		4987<4913	1-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4987<4914	2-WAY TO 3-WAY	*Call
2096		4987<4915	3-WAY TO 3-WAY	*Call
2096		4987<4917	1-WAY TO 3-WAY	*Call
2096		4987<4918	2-WAY TO 3-WAY	*Call
2096		4987<4921	1-WAY TO 3-WAY	*Call
2096		4987<4922	2-WAY TO 3-WAY	*Call
2096		4987<4925	1-WAY TO 3-WAY	*Call
2096		4987<4929	1-WAY TO 3-WAY	*Call
2096		4987<4933	1-WAY TO 3-WAY	*Call
2096		4987<4937	1-WAY TO 3-WAY	*Call
2096		4987<4944	4-WAY TO 3-WAY	*Call
2096		4987<4947	3-WAY TO 3-WAY	*Call
2096		4987<4948	4-WAY TO 3-WAY	*Call
2096		4987<4951	3-WAY TO 3-WAY	*Call
2096		4987<4952	4-WAY TO 3-WAY	*Call
2096		4987<4954	2-WAY TO 3-WAY	*Call
2096		4987<4955	3-WAY TO 3-WAY	*Call
2096		4987<4956	4-WAY TO 3-WAY	*Call
2096		4987<4958	2-WAY TO 3-WAY	*Call
2096		4987<4959	3-WAY TO 3-WAY	*Call
2096		4987<4960	4-WAY TO 3-WAY	*Call
2096		4987<4962	2-WAY TO 3-WAY	*Call
2096		4987<4963	3-WAY TO 3-WAY	*Call
2096		4987<4964	4-WAY TO 3-WAY	*Call
2096		4987<4966	2-WAY TO 3-WAY	*Call
2096		4987<4967	3-WAY TO 3-WAY	*Call
2096		4987<4968	4-WAY TO 3-WAY	*Call
2096		4987<4969	1-WAY TO 3-WAY	*Call
2096		4987<4970	2-WAY TO 3-WAY	*Call
2096		4987<4971	3-WAY TO 3-WAY	*Call
2096		4987<4972	4-WAY TO 3-WAY	*Call
2096		4987<4973	1-WAY TO 3-WAY	*Call
2096		4987<4974	2-WAY TO 3-WAY	*Call
2096		4987<4975	3-WAY TO 3-WAY	*Call
2096		4987<4976	4-WAY TO 3-WAY	*Call
2096		4987<4977	3-WAY TO 3-WAY	*Call
2096		4987<4978	2-WAY TO 3-WAY	*Call
2096		4987<4979	3-WAY TO 3-WAY	*Call
2096		4987<4980	4-WAY TO 3-WAY	*Call
2096		4987<4981	1-WAY TO 3-WAY	*Call
2096		4987<4982	2-WAY TO 3-WAY	*Call
2096		4987<4983	3-WAY TO 3-WAY	*Call
2096		4987<4984	4-WAY TO 3-WAY	*Call
2096		4987<4985	1-WAY TO 3-WAY	*Call
2096		4987<4986	2-WAY TO 3-WAY	*Call
2096		4987<4988	4-WAY TO 3-WAY	*Call
2096		4987<4989	1-WAY TO 3-WAY	*Call
2096		4987<4990	2-WAY TO 3-WAY	*Call
2096		4987<4991	3-WAY TO 3-WAY	*Call
2096		4987<4992	4-WAY TO 3-WAY	*Call
2096		4987<4993	1-WAY TO 3-WAY	*Call
2096		4987<4994	2-WAY TO 3-WAY	*Call
2096		4987<4995	3-WAY TO 3-WAY	*Call
2096		4987<4996	4-WAY TO 3-WAY	*Call
2096		4987<4997	1-WAY TO 3-WAY	*Call
2096		4987<4998	2-WAY TO 3-WAY	*Call
2096		4987<4999	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4987<5000	4-WAY TO 3-WAY	*Call
2096		4987<5001	1-WAY TO 3-WAY	*Call
2096		4987<5002	2-WAY TO 3-WAY	*Call
2096		4987<5003	3-WAY TO 3-WAY	*Call
2096		4987<5004	4-WAY TO 3-WAY	*Call
2096		4988<4900	ZERO-WAY TO 4-WAY	*Call
2096		4988<4901	1-WAY TO 4-WAY	*Call
2096		4988<4902	2-WAY TO 4-WAY	*Call
2096		4988<4903	3-WAY TO 4-WAY	*Call
2096		4988<4905	1-WAY TO 4-WAY	*Call
2096		4988<4906	2-WAY TO 4-WAY	*Call
2096		4988<4907	3-WAY TO 4-WAY	*Call
2096		4988<4909	1-WAY TO 4-WAY	*Call
2096		4988<4910	2-WAY TO 4-WAY	*Call
2096		4988<4911	3-WAY TO 4-WAY	*Call
2096		4988<4913	1-WAY TO 4-WAY	*Call
2096		4988<4914	2-WAY TO 4-WAY	*Call
2096		4988<4915	3-WAY TO 4-WAY	*Call
2096		4988<4917	1-WAY TO 4-WAY	*Call
2096		4988<4918	2-WAY TO 4-WAY	*Call
2096		4988<4921	1-WAY TO 4-WAY	*Call
2096		4988<4922	2-WAY TO 4-WAY	*Call
2096		4988<4925	1-WAY TO 4-WAY	*Call
2096		4988<4929	1-WAY TO 4-WAY	*Call
2096		4988<4933	1-WAY TO 4-WAY	*Call
2096		4988<4937	1-WAY TO 4-WAY	*Call
2096		4988<4944	4-WAY TO 4-WAY	*Call
2096		4988<4947	3-WAY TO 4-WAY	*Call
2096		4988<4948	4-WAY TO 4-WAY	*Call
2096		4988<4951	3-WAY TO 4-WAY	*Call
2096		4988<4952	4-WAY TO 4-WAY	*Call
2096		4988<4954	2-WAY TO 4-WAY	*Call
2096		4988<4955	3-WAY TO 4-WAY	*Call
2096		4988<4956	4-WAY TO 4-WAY	*Call
2096		4988<4958	2-WAY TO 4-WAY	*Call
2096		4988<4959	3-WAY TO 4-WAY	*Call
2096		4988<4960	4-WAY TO 4-WAY	*Call
2096		4988<4962	2-WAY TO 4-WAY	*Call
2096		4988<4963	3-WAY TO 4-WAY	*Call
2096		4988<4964	4-WAY TO 4-WAY	*Call
2096		4988<4966	2-WAY TO 4-WAY	*Call
2096		4988<4967	3-WAY TO 4-WAY	*Call
2096		4988<4968	4-WAY TO 4-WAY	*Call
2096		4988<4969	1-WAY TO 4-WAY	*Call
2096		4988<4970	2-WAY TO 4-WAY	*Call
2096		4988<4971	3-WAY TO 4-WAY	*Call
2096		4988<4972	4-WAY TO 4-WAY	*Call
2096		4988<4973	1-WAY TO 4-WAY	*Call
2096		4988<4974	2-WAY TO 4-WAY	*Call
2096		4988<4975	3-WAY TO 4-WAY	*Call
2096		4988<4976	4-WAY TO 4-WAY	*Call
2096		4988<4977	3-WAY TO 4-WAY	*Call
2096		4988<4978	2-WAY TO 4-WAY	*Call
2096		4988<4979	3-WAY TO 4-WAY	*Call
2096		4988<4980	4-WAY TO 4-WAY	*Call
2096		4988<4981	1-WAY TO 4-WAY	*Call
2096		4988<4982	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4988<4983	3-WAY TO 4-WAY	*Call
2096		4988<4984	4-WAY TO 4-WAY	*Call
2096		4988<4985	1-WAY TO 4-WAY	*Call
2096		4988<4986	2-WAY TO 4-WAY	*Call
2096		4988<4987	3-WAY TO 4-WAY	*Call
2096		4988<4989	1-WAY TO 4-WAY	*Call
2096		4988<4990	2-WAY TO 4-WAY	*Call
2096		4988<4991	3-WAY TO 4-WAY	*Call
2096		4988<4992	4-WAY TO 4-WAY	*Call
2096		4988<4993	1-WAY TO 4-WAY	*Call
2096		4988<4994	2-WAY TO 4-WAY	*Call
2096		4988<4995	3-WAY TO 4-WAY	*Call
2096		4988<4996	4-WAY TO 4-WAY	*Call
2096		4988<4997	1-WAY TO 4-WAY	*Call
2096		4988<4998	2-WAY TO 4-WAY	*Call
2096		4988<4999	3-WAY TO 4-WAY	*Call
2096		4988<5000	4-WAY TO 4-WAY	*Call
2096		4988<5001	1-WAY TO 4-WAY	*Call
2096		4988<5002	2-WAY TO 4-WAY	*Call
2096		4988<5003	3-WAY TO 4-WAY	*Call
2096		4988<5004	4-WAY TO 4-WAY	*Call
2096		4989<4900	ZERO-WAY TO 1-WAY	*Call
2096		4989<4901	1-WAY TO 1-WAY	*Call
2096		4989<4902	2-WAY TO 1-WAY	*Call
2096		4989<4903	3-WAY TO 1-WAY	*Call
2096		4989<4905	1-WAY TO 1-WAY	*Call
2096		4989<4906	2-WAY TO 1-WAY	*Call
2096		4989<4907	3-WAY TO 1-WAY	*Call
2096		4989<4909	1-WAY TO 1-WAY	*Call
2096		4989<4910	2-WAY TO 1-WAY	*Call
2096		4989<4911	3-WAY TO 1-WAY	*Call
2096		4989<4913	1-WAY TO 1-WAY	*Call
2096		4989<4914	2-WAY TO 1-WAY	*Call
2096		4989<4915	3-WAY TO 1-WAY	*Call
2096		4989<4917	1-WAY TO 1-WAY	*Call
2096		4989<4918	2-WAY TO 1-WAY	*Call
2096		4989<4921	1-WAY TO 1-WAY	*Call
2096		4989<4922	2-WAY TO 1-WAY	*Call
2096		4989<4925	1-WAY TO 1-WAY	*Call
2096		4989<4929	1-WAY TO 1-WAY	*Call
2096		4989<4933	1-WAY TO 1-WAY	*Call
2096		4989<4937	1-WAY TO 1-WAY	*Call
2096		4989<4944	4-WAY TO 1-WAY	*Call
2096		4989<4947	3-WAY TO 1-WAY	*Call
2096		4989<4948	4-WAY TO 1-WAY	*Call
2096		4989<4951	3-WAY TO 1-WAY	*Call
2096		4989<4952	4-WAY TO 1-WAY	*Call
2096		4989<4954	2-WAY TO 1-WAY	*Call
2096		4989<4955	3-WAY TO 1-WAY	*Call
2096		4989<4956	4-WAY TO 1-WAY	*Call
2096		4989<4958	2-WAY TO 1-WAY	*Call
2096		4989<4959	3-WAY TO 1-WAY	*Call
2096		4989<4960	4-WAY TO 1-WAY	*Call
2096		4989<4962	2-WAY TO 1-WAY	*Call
2096		4989<4963	3-WAY TO 1-WAY	*Call
2096		4989<4964	4-WAY TO 1-WAY	*Call
2096		4989<4966	2-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4989<4967	3-WAY TO 1-WAY	*Call
2096		4989<4968	4-WAY TO 1-WAY	*Call
2096		4989<4969	1-WAY TO 1-WAY	*Call
2096		4989<4970	2-WAY TO 1-WAY	*Call
2096		4989<4971	3-WAY TO 1-WAY	*Call
2096		4989<4972	4-WAY TO 1-WAY	*Call
2096		4989<4973	1-WAY TO 1-WAY	*Call
2096		4989<4974	2-WAY TO 1-WAY	*Call
2096		4989<4975	3-WAY TO 1-WAY	*Call
2096		4989<4976	4-WAY TO 1-WAY	*Call
2096		4989<4977	3-WAY TO 1-WAY	*Call
2096		4989<4978	2-WAY TO 1-WAY	*Call
2096		4989<4979	3-WAY TO 1-WAY	*Call
2096		4989<4980	4-WAY TO 1-WAY	*Call
2096		4989<4981	1-WAY TO 1-WAY	*Call
2096		4989<4982	2-WAY TO 1-WAY	*Call
2096		4989<4983	3-WAY TO 1-WAY	*Call
2096		4989<4984	4-WAY TO 1-WAY	*Call
2096		4989<4985	1-WAY TO 1-WAY	*Call
2096		4989<4986	2-WAY TO 1-WAY	*Call
2096		4989<4987	3-WAY TO 1-WAY	*Call
2096		4989<4988	4-WAY TO 1-WAY	*Call
2096		4989<4990	2-WAY TO 1-WAY	*Call
2096		4989<4991	3-WAY TO 1-WAY	*Call
2096		4989<4992	4-WAY TO 1-WAY	*Call
2096		4989<4993	1-WAY TO 1-WAY	*Call
2096		4989<4994	2-WAY TO 1-WAY	*Call
2096		4989<4995	3-WAY TO 1-WAY	*Call
2096		4989<4996	4-WAY TO 1-WAY	*Call
2096		4989<4997	1-WAY TO 1-WAY	*Call
2096		4989<4998	2-WAY TO 1-WAY	*Call
2096		4989<4999	3-WAY TO 1-WAY	*Call
2096		4989<5000	4-WAY TO 1-WAY	*Call
2096		4989<5001	1-WAY TO 1-WAY	*Call
2096		4989<5002	2-WAY TO 1-WAY	*Call
2096		4989<5003	3-WAY TO 1-WAY	*Call
2096		4989<5004	4-WAY TO 1-WAY	*Call
2096		4990<4900	ZERO-WAY TO 2-WAY	*Call
2096		4990<4901	1-WAY TO 2-WAY	*Call
2096		4990<4902	2-WAY TO 2-WAY	*Call
2096		4990<4903	3-WAY TO 2-WAY	*Call
2096		4990<4905	1-WAY TO 2-WAY	*Call
2096		4990<4906	2-WAY TO 2-WAY	*Call
2096		4990<4907	3-WAY TO 2-WAY	*Call
2096		4990<4909	1-WAY TO 2-WAY	*Call
2096		4990<4910	2-WAY TO 2-WAY	*Call
2096		4990<4911	3-WAY TO 2-WAY	*Call
2096		4990<4913	1-WAY TO 2-WAY	*Call
2096		4990<4914	2-WAY TO 2-WAY	*Call
2096		4990<4915	3-WAY TO 2-WAY	*Call
2096		4990<4917	1-WAY TO 2-WAY	*Call
2096		4990<4918	2-WAY TO 2-WAY	*Call
2096		4990<4921	1-WAY TO 2-WAY	*Call
2096		4990<4922	2-WAY TO 2-WAY	*Call
2096		4990<4925	1-WAY TO 2-WAY	*Call
2096		4990<4929	1-WAY TO 2-WAY	*Call
2096		4990<4933	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4990<4937	1-WAY TO 2-WAY	*Call
2096		4990<4944	4-WAY TO 2-WAY	*Call
2096		4990<4947	3-WAY TO 2-WAY	*Call
2096		4990<4948	4-WAY TO 2-WAY	*Call
2096		4990<4951	3-WAY TO 2-WAY	*Call
2096		4990<4952	4-WAY TO 2-WAY	*Call
2096		4990<4954	2-WAY TO 2-WAY	*Call
2096		4990<4955	3-WAY TO 2-WAY	*Call
2096		4990<4956	4-WAY TO 2-WAY	*Call
2096		4990<4958	2-WAY TO 2-WAY	*Call
2096		4990<4959	3-WAY TO 2-WAY	*Call
2096		4990<4960	4-WAY TO 2-WAY	*Call
2096		4990<4962	2-WAY TO 2-WAY	*Call
2096		4990<4963	3-WAY TO 2-WAY	*Call
2096		4990<4964	4-WAY TO 2-WAY	*Call
2096		4990<4966	2-WAY TO 2-WAY	*Call
2096		4990<4967	3-WAY TO 2-WAY	*Call
2096		4990<4968	4-WAY TO 2-WAY	*Call
2096		4990<4969	1-WAY TO 2-WAY	*Call
2096		4990<4970	2-WAY TO 2-WAY	*Call
2096		4990<4971	3-WAY TO 2-WAY	*Call
2096		4990<4972	4-WAY TO 2-WAY	*Call
2096		4990<4973	1-WAY TO 2-WAY	*Call
2096		4990<4974	2-WAY TO 2-WAY	*Call
2096		4990<4975	3-WAY TO 2-WAY	*Call
2096		4990<4976	4-WAY TO 2-WAY	*Call
2096		4990<4977	3-WAY TO 2-WAY	*Call
2096		4990<4978	2-WAY TO 2-WAY	*Call
2096		4990<4979	3-WAY TO 2-WAY	*Call
2096		4990<4980	4-WAY TO 2-WAY	*Call
2096		4990<4981	1-WAY TO 2-WAY	*Call
2096		4990<4982	2-WAY TO 2-WAY	*Call
2096		4990<4983	3-WAY TO 2-WAY	*Call
2096		4990<4984	4-WAY TO 2-WAY	*Call
2096		4990<4985	1-WAY TO 2-WAY	*Call
2096		4990<4986	2-WAY TO 2-WAY	*Call
2096		4990<4987	3-WAY TO 2-WAY	*Call
2096		4990<4988	4-WAY TO 2-WAY	*Call
2096		4990<4989	1-WAY TO 2-WAY	*Call
2096		4990<4991	3-WAY TO 2-WAY	*Call
2096		4990<4992	4-WAY TO 2-WAY	*Call
2096		4990<4993	1-WAY TO 2-WAY	*Call
2096		4990<4994	2-WAY TO 2-WAY	*Call
2096		4990<4995	3-WAY TO 2-WAY	*Call
2096		4990<4996	4-WAY TO 2-WAY	*Call
2096		4990<4997	1-WAY TO 2-WAY	*Call
2096		4990<4998	2-WAY TO 2-WAY	*Call
2096		4990<4999	3-WAY TO 2-WAY	*Call
2096		4990<5000	4-WAY TO 2-WAY	*Call
2096		4990<5001	1-WAY TO 2-WAY	*Call
2096		4990<5002	2-WAY TO 2-WAY	*Call
2096		4990<5003	3-WAY TO 2-WAY	*Call
2096		4990<5004	4-WAY TO 2-WAY	*Call
2096		4991<4900	ZERO-WAY TO 3-WAY	*Call
2096		4991<4901	1-WAY TO 3-WAY	*Call
2096		4991<4902	2-WAY TO 3-WAY	*Call
2096		4991<4903	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4991<4905	1-WAY TO 3-WAY	*Call
2096		4991<4906	2-WAY TO 3-WAY	*Call
2096		4991<4907	3-WAY TO 3-WAY	*Call
2096		4991<4909	1-WAY TO 3-WAY	*Call
2096		4991<4910	2-WAY TO 3-WAY	*Call
2096		4991<4911	3-WAY TO 3-WAY	*Call
2096		4991<4913	1-WAY TO 3-WAY	*Call
2096		4991<4914	2-WAY TO 3-WAY	*Call
2096		4991<4915	3-WAY TO 3-WAY	*Call
2096		4991<4917	1-WAY TO 3-WAY	*Call
2096		4991<4918	2-WAY TO 3-WAY	*Call
2096		4991<4921	1-WAY TO 3-WAY	*Call
2096		4991<4922	2-WAY TO 3-WAY	*Call
2096		4991<4925	1-WAY TO 3-WAY	*Call
2096		4991<4929	1-WAY TO 3-WAY	*Call
2096		4991<4933	1-WAY TO 3-WAY	*Call
2096		4991<4937	1-WAY TO 3-WAY	*Call
2096		4991<4944	4-WAY TO 3-WAY	*Call
2096		4991<4947	3-WAY TO 3-WAY	*Call
2096		4991<4948	4-WAY TO 3-WAY	*Call
2096		4991<4951	3-WAY TO 3-WAY	*Call
2096		4991<4952	4-WAY TO 3-WAY	*Call
2096		4991<4954	2-WAY TO 3-WAY	*Call
2096		4991<4955	3-WAY TO 3-WAY	*Call
2096		4991<4956	4-WAY TO 3-WAY	*Call
2096		4991<4958	2-WAY TO 3-WAY	*Call
2096		4991<4959	3-WAY TO 3-WAY	*Call
2096		4991<4960	4-WAY TO 3-WAY	*Call
2096		4991<4962	2-WAY TO 3-WAY	*Call
2096		4991<4963	3-WAY TO 3-WAY	*Call
2096		4991<4964	4-WAY TO 3-WAY	*Call
2096		4991<4966	2-WAY TO 3-WAY	*Call
2096		4991<4967	3-WAY TO 3-WAY	*Call
2096		4991<4968	4-WAY TO 3-WAY	*Call
2096		4991<4969	1-WAY TO 3-WAY	*Call
2096		4991<4970	2-WAY TO 3-WAY	*Call
2096		4991<4971	3-WAY TO 3-WAY	*Call
2096		4991<4972	4-WAY TO 3-WAY	*Call
2096		4991<4973	1-WAY TO 3-WAY	*Call
2096		4991<4974	2-WAY TO 3-WAY	*Call
2096		4991<4975	3-WAY TO 3-WAY	*Call
2096		4991<4976	4-WAY TO 3-WAY	*Call
2096		4991<4977	3-WAY TO 3-WAY	*Call
2096		4991<4978	2-WAY TO 3-WAY	*Call
2096		4991<4979	3-WAY TO 3-WAY	*Call
2096		4991<4980	4-WAY TO 3-WAY	*Call
2096		4991<4981	1-WAY TO 3-WAY	*Call
2096		4991<4982	2-WAY TO 3-WAY	*Call
2096		4991<4983	3-WAY TO 3-WAY	*Call
2096		4991<4984	4-WAY TO 3-WAY	*Call
2096		4991<4985	1-WAY TO 3-WAY	*Call
2096		4991<4986	2-WAY TO 3-WAY	*Call
2096		4991<4987	3-WAY TO 3-WAY	*Call
2096		4991<4988	4-WAY TO 3-WAY	*Call
2096		4991<4989	1-WAY TO 3-WAY	*Call
2096		4991<4990	2-WAY TO 3-WAY	*Call
2096		4991<4992	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4991<4993	1-WAY TO 3-WAY	*Call
2096		4991<4994	2-WAY TO 3-WAY	*Call
2096		4991<4995	3-WAY TO 3-WAY	*Call
2096		4991<4996	4-WAY TO 3-WAY	*Call
2096		4991<4997	1-WAY TO 3-WAY	*Call
2096		4991<4998	2-WAY TO 3-WAY	*Call
2096		4991<4999	3-WAY TO 3-WAY	*Call
2096		4991<5000	4-WAY TO 3-WAY	*Call
2096		4991<5001	1-WAY TO 3-WAY	*Call
2096		4991<5002	2-WAY TO 3-WAY	*Call
2096		4991<5003	3-WAY TO 3-WAY	*Call
2096		4991<5004	4-WAY TO 3-WAY	*Call
2096		4992<4900	ZERO-WAY TO 4-WAY	*Call
2096		4992<4901	1-WAY TO 4-WAY	*Call
2096		4992<4902	2-WAY TO 4-WAY	*Call
2096		4992<4903	3-WAY TO 4-WAY	*Call
2096		4992<4905	1-WAY TO 4-WAY	*Call
2096		4992<4906	2-WAY TO 4-WAY	*Call
2096		4992<4907	3-WAY TO 4-WAY	*Call
2096		4992<4909	1-WAY TO 4-WAY	*Call
2096		4992<4910	2-WAY TO 4-WAY	*Call
2096		4992<4911	3-WAY TO 4-WAY	*Call
2096		4992<4913	1-WAY TO 4-WAY	*Call
2096		4992<4914	2-WAY TO 4-WAY	*Call
2096		4992<4915	3-WAY TO 4-WAY	*Call
2096		4992<4917	1-WAY TO 4-WAY	*Call
2096		4992<4918	2-WAY TO 4-WAY	*Call
2096		4992<4921	1-WAY TO 4-WAY	*Call
2096		4992<4922	2-WAY TO 4-WAY	*Call
2096		4992<4925	1-WAY TO 4-WAY	*Call
2096		4992<4929	1-WAY TO 4-WAY	*Call
2096		4992<4933	1-WAY TO 4-WAY	*Call
2096		4992<4937	1-WAY TO 4-WAY	*Call
2096		4992<4944	4-WAY TO 4-WAY	*Call
2096		4992<4947	3-WAY TO 4-WAY	*Call
2096		4992<4948	4-WAY TO 4-WAY	*Call
2096		4992<4951	3-WAY TO 4-WAY	*Call
2096		4992<4952	4-WAY TO 4-WAY	*Call
2096		4992<4954	2-WAY TO 4-WAY	*Call
2096		4992<4955	3-WAY TO 4-WAY	*Call
2096		4992<4956	4-WAY TO 4-WAY	*Call
2096		4992<4958	2-WAY TO 4-WAY	*Call
2096		4992<4959	3-WAY TO 4-WAY	*Call
2096		4992<4960	4-WAY TO 4-WAY	*Call
2096		4992<4962	2-WAY TO 4-WAY	*Call
2096		4992<4963	3-WAY TO 4-WAY	*Call
2096		4992<4964	4-WAY TO 4-WAY	*Call
2096		4992<4966	2-WAY TO 4-WAY	*Call
2096		4992<4967	3-WAY TO 4-WAY	*Call
2096		4992<4968	4-WAY TO 4-WAY	*Call
2096		4992<4969	1-WAY TO 4-WAY	*Call
2096		4992<4970	2-WAY TO 4-WAY	*Call
2096		4992<4971	3-WAY TO 4-WAY	*Call
2096		4992<4972	4-WAY TO 4-WAY	*Call
2096		4992<4973	1-WAY TO 4-WAY	*Call
2096		4992<4974	2-WAY TO 4-WAY	*Call
2096		4992<4975	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4992<4976	4-WAY TO 4-WAY	*Call
2096		4992<4977	3-WAY TO 4-WAY	*Call
2096		4992<4978	2-WAY TO 4-WAY	*Call
2096		4992<4979	3-WAY TO 4-WAY	*Call
2096		4992<4980	4-WAY TO 4-WAY	*Call
2096		4992<4981	1-WAY TO 4-WAY	*Call
2096		4992<4982	2-WAY TO 4-WAY	*Call
2096		4992<4983	3-WAY TO 4-WAY	*Call
2096		4992<4984	4-WAY TO 4-WAY	*Call
2096		4992<4985	1-WAY TO 4-WAY	*Call
2096		4992<4986	2-WAY TO 4-WAY	*Call
2096		4992<4987	3-WAY TO 4-WAY	*Call
2096		4992<4988	4-WAY TO 4-WAY	*Call
2096		4992<4989	1-WAY TO 4-WAY	*Call
2096		4992<4990	2-WAY TO 4-WAY	*Call
2096		4992<4991	3-WAY TO 4-WAY	*Call
2096		4992<4993	1-WAY TO 4-WAY	*Call
2096		4992<4994	2-WAY TO 4-WAY	*Call
2096		4992<4995	3-WAY TO 4-WAY	*Call
2096		4992<4996	4-WAY TO 4-WAY	*Call
2096		4992<4997	1-WAY TO 4-WAY	*Call
2096		4992<4998	2-WAY TO 4-WAY	*Call
2096		4992<4999	3-WAY TO 4-WAY	*Call
2096		4992<5000	4-WAY TO 4-WAY	*Call
2096		4992<5001	1-WAY TO 4-WAY	*Call
2096		4992<5002	2-WAY TO 4-WAY	*Call
2096		4992<5003	3-WAY TO 4-WAY	*Call
2096		4992<5004	4-WAY TO 4-WAY	*Call
2096		4993<4900	ZERO-WAY TO 1-WAY	*Call
2096		4993<4901	1-WAY TO 1-WAY	*Call
2096		4993<4902	2-WAY TO 1-WAY	*Call
2096		4993<4903	3-WAY TO 1-WAY	*Call
2096		4993<4905	1-WAY TO 1-WAY	*Call
2096		4993<4906	2-WAY TO 1-WAY	*Call
2096		4993<4907	3-WAY TO 1-WAY	*Call
2096		4993<4909	1-WAY TO 1-WAY	*Call
2096		4993<4910	2-WAY TO 1-WAY	*Call
2096		4993<4911	3-WAY TO 1-WAY	*Call
2096		4993<4913	1-WAY TO 1-WAY	*Call
2096		4993<4914	2-WAY TO 1-WAY	*Call
2096		4993<4915	3-WAY TO 1-WAY	*Call
2096		4993<4917	1-WAY TO 1-WAY	*Call
2096		4993<4918	2-WAY TO 1-WAY	*Call
2096		4993<4921	1-WAY TO 1-WAY	*Call
2096		4993<4922	2-WAY TO 1-WAY	*Call
2096		4993<4925	1-WAY TO 1-WAY	*Call
2096		4993<4929	1-WAY TO 1-WAY	*Call
2096		4993<4933	1-WAY TO 1-WAY	*Call
2096		4993<4937	1-WAY TO 1-WAY	*Call
2096		4993<4944	4-WAY TO 1-WAY	*Call
2096		4993<4947	3-WAY TO 1-WAY	*Call
2096		4993<4948	4-WAY TO 1-WAY	*Call
2096		4993<4951	3-WAY TO 1-WAY	*Call
2096		4993<4952	4-WAY TO 1-WAY	*Call
2096		4993<4954	2-WAY TO 1-WAY	*Call
2096		4993<4955	3-WAY TO 1-WAY	*Call
2096		4993<4956	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4993<4958	2-WAY TO 1-WAY	*Call
2096		4993<4959	3-WAY TO 1-WAY	*Call
2096		4993<4960	4-WAY TO 1-WAY	*Call
2096		4993<4962	2-WAY TO 1-WAY	*Call
2096		4993<4963	3-WAY TO 1-WAY	*Call
2096		4993<4964	4-WAY TO 1-WAY	*Call
2096		4993<4966	2-WAY TO 1-WAY	*Call
2096		4993<4967	3-WAY TO 1-WAY	*Call
2096		4993<4968	4-WAY TO 1-WAY	*Call
2096		4993<4969	1-WAY TO 1-WAY	*Call
2096		4993<4970	2-WAY TO 1-WAY	*Call
2096		4993<4971	3-WAY TO 1-WAY	*Call
2096		4993<4972	4-WAY TO 1-WAY	*Call
2096		4993<4973	1-WAY TO 1-WAY	*Call
2096		4993<4974	2-WAY TO 1-WAY	*Call
2096		4993<4975	3-WAY TO 1-WAY	*Call
2096		4993<4976	4-WAY TO 1-WAY	*Call
2096		4993<4977	3-WAY TO 1-WAY	*Call
2096		4993<4978	2-WAY TO 1-WAY	*Call
2096		4993<4979	3-WAY TO 1-WAY	*Call
2096		4993<4980	4-WAY TO 1-WAY	*Call
2096		4993<4981	1-WAY TO 1-WAY	*Call
2096		4993<4982	2-WAY TO 1-WAY	*Call
2096		4993<4983	3-WAY TO 1-WAY	*Call
2096		4993<4984	4-WAY TO 1-WAY	*Call
2096		4993<4985	1-WAY TO 1-WAY	*Call
2096		4993<4986	2-WAY TO 1-WAY	*Call
2096		4993<4987	3-WAY TO 1-WAY	*Call
2096		4993<4988	4-WAY TO 1-WAY	*Call
2096		4993<4989	1-WAY TO 1-WAY	*Call
2096		4993<4990	2-WAY TO 1-WAY	*Call
2096		4993<4991	3-WAY TO 1-WAY	*Call
2096		4993<4992	4-WAY TO 1-WAY	*Call
2096		4993<4994	2-WAY TO 1-WAY	*Call
2096		4993<4995	3-WAY TO 1-WAY	*Call
2096		4993<4996	4-WAY TO 1-WAY	*Call
2096		4993<4997	1-WAY TO 1-WAY	*Call
2096		4993<4998	2-WAY TO 1-WAY	*Call
2096		4993<4999	3-WAY TO 1-WAY	*Call
2096		4993<5000	4-WAY TO 1-WAY	*Call
2096		4993<5001	1-WAY TO 1-WAY	*Call
2096		4993<5002	2-WAY TO 1-WAY	*Call
2096		4993<5003	3-WAY TO 1-WAY	*Call
2096		4993<5004	4-WAY TO 1-WAY	*Call
2096		4994<4900	ZERO-WAY TO 2-WAY	*Call
2096		4994<4901	1-WAY TO 2-WAY	*Call
2096		4994<4902	2-WAY TO 2-WAY	*Call
2096		4994<4903	3-WAY TO 2-WAY	*Call
2096		4994<4905	1-WAY TO 2-WAY	*Call
2096		4994<4906	2-WAY TO 2-WAY	*Call
2096		4994<4907	3-WAY TO 2-WAY	*Call
2096		4994<4909	1-WAY TO 2-WAY	*Call
2096		4994<4910	2-WAY TO 2-WAY	*Call
2096		4994<4911	3-WAY TO 2-WAY	*Call
2096		4994<4913	1-WAY TO 2-WAY	*Call
2096		4994<4914	2-WAY TO 2-WAY	*Call
2096		4994<4915	3-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4994<4917	1-WAY TO 2-WAY	*Call
2096		4994<4918	2-WAY TO 2-WAY	*Call
2096		4994<4921	1-WAY TO 2-WAY	*Call
2096		4994<4922	2-WAY TO 2-WAY	*Call
2096		4994<4925	1-WAY TO 2-WAY	*Call
2096		4994<4929	1-WAY TO 2-WAY	*Call
2096		4994<4933	1-WAY TO 2-WAY	*Call
2096		4994<4937	1-WAY TO 2-WAY	*Call
2096		4994<4944	4-WAY TO 2-WAY	*Call
2096		4994<4947	3-WAY TO 2-WAY	*Call
2096		4994<4948	4-WAY TO 2-WAY	*Call
2096		4994<4951	3-WAY TO 2-WAY	*Call
2096		4994<4952	4-WAY TO 2-WAY	*Call
2096		4994<4954	2-WAY TO 2-WAY	*Call
2096		4994<4955	3-WAY TO 2-WAY	*Call
2096		4994<4956	4-WAY TO 2-WAY	*Call
2096		4994<4958	2-WAY TO 2-WAY	*Call
2096		4994<4959	3-WAY TO 2-WAY	*Call
2096		4994<4960	4-WAY TO 2-WAY	*Call
2096		4994<4962	2-WAY TO 2-WAY	*Call
2096		4994<4963	3-WAY TO 2-WAY	*Call
2096		4994<4964	4-WAY TO 2-WAY	*Call
2096		4994<4966	2-WAY TO 2-WAY	*Call
2096		4994<4967	3-WAY TO 2-WAY	*Call
2096		4994<4968	4-WAY TO 2-WAY	*Call
2096		4994<4969	1-WAY TO 2-WAY	*Call
2096		4994<4970	2-WAY TO 2-WAY	*Call
2096		4994<4971	3-WAY TO 2-WAY	*Call
2096		4994<4972	4-WAY TO 2-WAY	*Call
2096		4994<4973	1-WAY TO 2-WAY	*Call
2096		4994<4974	2-WAY TO 2-WAY	*Call
2096		4994<4975	3-WAY TO 2-WAY	*Call
2096		4994<4976	4-WAY TO 2-WAY	*Call
2096		4994<4977	3-WAY TO 2-WAY	*Call
2096		4994<4978	2-WAY TO 2-WAY	*Call
2096		4994<4979	3-WAY TO 2-WAY	*Call
2096		4994<4980	4-WAY TO 2-WAY	*Call
2096		4994<4981	1-WAY TO 2-WAY	*Call
2096		4994<4982	2-WAY TO 2-WAY	*Call
2096		4994<4983	3-WAY TO 2-WAY	*Call
2096		4994<4984	4-WAY TO 2-WAY	*Call
2096		4994<4985	1-WAY TO 2-WAY	*Call
2096		4994<4986	2-WAY TO 2-WAY	*Call
2096		4994<4987	3-WAY TO 2-WAY	*Call
2096		4994<4988	4-WAY TO 2-WAY	*Call
2096		4994<4989	1-WAY TO 2-WAY	*Call
2096		4994<4990	2-WAY TO 2-WAY	*Call
2096		4994<4991	3-WAY TO 2-WAY	*Call
2096		4994<4992	4-WAY TO 2-WAY	*Call
2096		4994<4993	1-WAY TO 2-WAY	*Call
2096		4994<4995	3-WAY TO 2-WAY	*Call
2096		4994<4996	4-WAY TO 2-WAY	*Call
2096		4994<4997	1-WAY TO 2-WAY	*Call
2096		4994<4998	2-WAY TO 2-WAY	*Call
2096		4994<4999	3-WAY TO 2-WAY	*Call
2096		4994<5000	4-WAY TO 2-WAY	*Call
2096		4994<5001	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4994<5002	2-WAY TO 2-WAY	*Call
2096		4994<5003	3-WAY TO 2-WAY	*Call
2096		4994<5004	4-WAY TO 2-WAY	*Call
2096		4995<4900	ZERO-WAY TO 3-WAY	*Call
2096		4995<4901	1-WAY TO 3-WAY	*Call
2096		4995<4902	2-WAY TO 3-WAY	*Call
2096		4995<4903	3-WAY TO 3-WAY	*Call
2096		4995<4905	1-WAY TO 3-WAY	*Call
2096		4995<4906	2-WAY TO 3-WAY	*Call
2096		4995<4907	3-WAY TO 3-WAY	*Call
2096		4995<4909	1-WAY TO 3-WAY	*Call
2096		4995<4910	2-WAY TO 3-WAY	*Call
2096		4995<4911	3-WAY TO 3-WAY	*Call
2096		4995<4913	1-WAY TO 3-WAY	*Call
2096		4995<4914	2-WAY TO 3-WAY	*Call
2096		4995<4915	3-WAY TO 3-WAY	*Call
2096		4995<4917	1-WAY TO 3-WAY	*Call
2096		4995<4918	2-WAY TO 3-WAY	*Call
2096		4995<4921	1-WAY TO 3-WAY	*Call
2096		4995<4922	2-WAY TO 3-WAY	*Call
2096		4995<4925	1-WAY TO 3-WAY	*Call
2096		4995<4929	1-WAY TO 3-WAY	*Call
2096		4995<4933	1-WAY TO 3-WAY	*Call
2096		4995<4937	1-WAY TO 3-WAY	*Call
2096		4995<4944	4-WAY TO 3-WAY	*Call
2096		4995<4947	3-WAY TO 3-WAY	*Call
2096		4995<4948	4-WAY TO 3-WAY	*Call
2096		4995<4951	3-WAY TO 3-WAY	*Call
2096		4995<4952	4-WAY TO 3-WAY	*Call
2096		4995<4954	2-WAY TO 3-WAY	*Call
2096		4995<4955	3-WAY TO 3-WAY	*Call
2096		4995<4956	4-WAY TO 3-WAY	*Call
2096		4995<4958	2-WAY TO 3-WAY	*Call
2096		4995<4959	3-WAY TO 3-WAY	*Call
2096		4995<4960	4-WAY TO 3-WAY	*Call
2096		4995<4962	2-WAY TO 3-WAY	*Call
2096		4995<4963	3-WAY TO 3-WAY	*Call
2096		4995<4964	4-WAY TO 3-WAY	*Call
2096		4995<4966	2-WAY TO 3-WAY	*Call
2096		4995<4967	3-WAY TO 3-WAY	*Call
2096		4995<4968	4-WAY TO 3-WAY	*Call
2096		4995<4969	1-WAY TO 3-WAY	*Call
2096		4995<4970	2-WAY TO 3-WAY	*Call
2096		4995<4971	3-WAY TO 3-WAY	*Call
2096		4995<4972	4-WAY TO 3-WAY	*Call
2096		4995<4973	1-WAY TO 3-WAY	*Call
2096		4995<4974	2-WAY TO 3-WAY	*Call
2096		4995<4975	3-WAY TO 3-WAY	*Call
2096		4995<4976	4-WAY TO 3-WAY	*Call
2096		4995<4977	3-WAY TO 3-WAY	*Call
2096		4995<4978	2-WAY TO 3-WAY	*Call
2096		4995<4979	3-WAY TO 3-WAY	*Call
2096		4995<4980	4-WAY TO 3-WAY	*Call
2096		4995<4981	1-WAY TO 3-WAY	*Call
2096		4995<4982	2-WAY TO 3-WAY	*Call
2096		4995<4983	3-WAY TO 3-WAY	*Call
2096		4995<4984	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4995<4985	1-WAY TO 3-WAY	*Call
2096		4995<4986	2-WAY TO 3-WAY	*Call
2096		4995<4987	3-WAY TO 3-WAY	*Call
2096		4995<4988	4-WAY TO 3-WAY	*Call
2096		4995<4989	1-WAY TO 3-WAY	*Call
2096		4995<4990	2-WAY TO 3-WAY	*Call
2096		4995<4991	3-WAY TO 3-WAY	*Call
2096		4995<4992	4-WAY TO 3-WAY	*Call
2096		4995<4993	1-WAY TO 3-WAY	*Call
2096		4995<4994	2-WAY TO 3-WAY	*Call
2096		4995<4996	4-WAY TO 3-WAY	*Call
2096		4995<4997	1-WAY TO 3-WAY	*Call
2096		4995<4998	2-WAY TO 3-WAY	*Call
2096		4995<4999	3-WAY TO 3-WAY	*Call
2096		4995<5000	4-WAY TO 3-WAY	*Call
2096		4995<5001	1-WAY TO 3-WAY	*Call
2096		4995<5002	2-WAY TO 3-WAY	*Call
2096		4995<5003	3-WAY TO 3-WAY	*Call
2096		4995<5004	4-WAY TO 3-WAY	*Call
2096		4996<4900	ZERO-WAY TO 4-WAY	*Call
2096		4996<4901	1-WAY TO 4-WAY	*Call
2096		4996<4902	2-WAY TO 4-WAY	*Call
2096		4996<4903	3-WAY TO 4-WAY	*Call
2096		4996<4905	1-WAY TO 4-WAY	*Call
2096		4996<4906	2-WAY TO 4-WAY	*Call
2096		4996<4907	3-WAY TO 4-WAY	*Call
2096		4996<4909	1-WAY TO 4-WAY	*Call
2096		4996<4910	2-WAY TO 4-WAY	*Call
2096		4996<4911	3-WAY TO 4-WAY	*Call
2096		4996<4913	1-WAY TO 4-WAY	*Call
2096		4996<4914	2-WAY TO 4-WAY	*Call
2096		4996<4915	3-WAY TO 4-WAY	*Call
2096		4996<4917	1-WAY TO 4-WAY	*Call
2096		4996<4918	2-WAY TO 4-WAY	*Call
2096		4996<4921	1-WAY TO 4-WAY	*Call
2096		4996<4922	2-WAY TO 4-WAY	*Call
2096		4996<4925	1-WAY TO 4-WAY	*Call
2096		4996<4929	1-WAY TO 4-WAY	*Call
2096		4996<4933	1-WAY TO 4-WAY	*Call
2096		4996<4937	1-WAY TO 4-WAY	*Call
2096		4996<4944	4-WAY TO 4-WAY	*Call
2096		4996<4947	3-WAY TO 4-WAY	*Call
2096		4996<4948	4-WAY TO 4-WAY	*Call
2096		4996<4951	3-WAY TO 4-WAY	*Call
2096		4996<4952	4-WAY TO 4-WAY	*Call
2096		4996<4954	2-WAY TO 4-WAY	*Call
2096		4996<4955	3-WAY TO 4-WAY	*Call
2096		4996<4956	4-WAY TO 4-WAY	*Call
2096		4996<4958	2-WAY TO 4-WAY	*Call
2096		4996<4959	3-WAY TO 4-WAY	*Call
2096		4996<4960	4-WAY TO 4-WAY	*Call
2096		4996<4962	2-WAY TO 4-WAY	*Call
2096		4996<4963	3-WAY TO 4-WAY	*Call
2096		4996<4964	4-WAY TO 4-WAY	*Call
2096		4996<4966	2-WAY TO 4-WAY	*Call
2096		4996<4967	3-WAY TO 4-WAY	*Call
2096		4996<4968	4-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4996<4969	1-WAY TO 4-WAY	*Call
2096		4996<4970	2-WAY TO 4-WAY	*Call
2096		4996<4971	3-WAY TO 4-WAY	*Call
2096		4996<4972	4-WAY TO 4-WAY	*Call
2096		4996<4973	1-WAY TO 4-WAY	*Call
2096		4996<4974	2-WAY TO 4-WAY	*Call
2096		4996<4975	3-WAY TO 4-WAY	*Call
2096		4996<4976	4-WAY TO 4-WAY	*Call
2096		4996<4977	3-WAY TO 4-WAY	*Call
2096		4996<4978	2-WAY TO 4-WAY	*Call
2096		4996<4979	3-WAY TO 4-WAY	*Call
2096		4996<4980	4-WAY TO 4-WAY	*Call
2096		4996<4981	1-WAY TO 4-WAY	*Call
2096		4996<4982	2-WAY TO 4-WAY	*Call
2096		4996<4983	3-WAY TO 4-WAY	*Call
2096		4996<4984	4-WAY TO 4-WAY	*Call
2096		4996<4985	1-WAY TO 4-WAY	*Call
2096		4996<4986	2-WAY TO 4-WAY	*Call
2096		4996<4987	3-WAY TO 4-WAY	*Call
2096		4996<4988	4-WAY TO 4-WAY	*Call
2096		4996<4989	1-WAY TO 4-WAY	*Call
2096		4996<4990	2-WAY TO 4-WAY	*Call
2096		4996<4991	3-WAY TO 4-WAY	*Call
2096		4996<4992	4-WAY TO 4-WAY	*Call
2096		4996<4993	1-WAY TO 4-WAY	*Call
2096		4996<4994	2-WAY TO 4-WAY	*Call
2096		4996<4995	3-WAY TO 4-WAY	*Call
2096		4996<4997	1-WAY TO 4-WAY	*Call
2096		4996<4998	2-WAY TO 4-WAY	*Call
2096		4996<4999	3-WAY TO 4-WAY	*Call
2096		4996<5000	4-WAY TO 4-WAY	*Call
2096		4996<5001	1-WAY TO 4-WAY	*Call
2096		4996<5002	2-WAY TO 4-WAY	*Call
2096		4996<5003	3-WAY TO 4-WAY	*Call
2096		4996<5004	4-WAY TO 4-WAY	*Call
2096		4997<4900	ZERO-WAY TO 1-WAY	*Call
2096		4997<4901	1-WAY TO 1-WAY	*Call
2096		4997<4902	2-WAY TO 1-WAY	*Call
2096		4997<4903	3-WAY TO 1-WAY	*Call
2096		4997<4905	1-WAY TO 1-WAY	*Call
2096		4997<4906	2-WAY TO 1-WAY	*Call
2096		4997<4907	3-WAY TO 1-WAY	*Call
2096		4997<4909	1-WAY TO 1-WAY	*Call
2096		4997<4910	2-WAY TO 1-WAY	*Call
2096		4997<4911	3-WAY TO 1-WAY	*Call
2096		4997<4913	1-WAY TO 1-WAY	*Call
2096		4997<4914	2-WAY TO 1-WAY	*Call
2096		4997<4915	3-WAY TO 1-WAY	*Call
2096		4997<4917	1-WAY TO 1-WAY	*Call
2096		4997<4918	2-WAY TO 1-WAY	*Call
2096		4997<4921	1-WAY TO 1-WAY	*Call
2096		4997<4922	2-WAY TO 1-WAY	*Call
2096		4997<4925	1-WAY TO 1-WAY	*Call
2096		4997<4929	1-WAY TO 1-WAY	*Call
2096		4997<4933	1-WAY TO 1-WAY	*Call
2096		4997<4937	1-WAY TO 1-WAY	*Call
2096		4997<4944	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4997<4947	3-WAY TO 1-WAY	*Call
2096		4997<4948	4-WAY TO 1-WAY	*Call
2096		4997<4951	3-WAY TO 1-WAY	*Call
2096		4997<4952	4-WAY TO 1-WAY	*Call
2096		4997<4954	2-WAY TO 1-WAY	*Call
2096		4997<4955	3-WAY TO 1-WAY	*Call
2096		4997<4956	4-WAY TO 1-WAY	*Call
2096		4997<4958	2-WAY TO 1-WAY	*Call
2096		4997<4959	3-WAY TO 1-WAY	*Call
2096		4997<4960	4-WAY TO 1-WAY	*Call
2096		4997<4962	2-WAY TO 1-WAY	*Call
2096		4997<4963	3-WAY TO 1-WAY	*Call
2096		4997<4964	4-WAY TO 1-WAY	*Call
2096		4997<4966	2-WAY TO 1-WAY	*Call
2096		4997<4967	3-WAY TO 1-WAY	*Call
2096		4997<4968	4-WAY TO 1-WAY	*Call
2096		4997<4969	1-WAY TO 1-WAY	*Call
2096		4997<4970	2-WAY TO 1-WAY	*Call
2096		4997<4971	3-WAY TO 1-WAY	*Call
2096		4997<4972	4-WAY TO 1-WAY	*Call
2096		4997<4973	1-WAY TO 1-WAY	*Call
2096		4997<4974	2-WAY TO 1-WAY	*Call
2096		4997<4975	3-WAY TO 1-WAY	*Call
2096		4997<4976	4-WAY TO 1-WAY	*Call
2096		4997<4977	3-WAY TO 1-WAY	*Call
2096		4997<4978	2-WAY TO 1-WAY	*Call
2096		4997<4979	3-WAY TO 1-WAY	*Call
2096		4997<4980	4-WAY TO 1-WAY	*Call
2096		4997<4981	1-WAY TO 1-WAY	*Call
2096		4997<4982	2-WAY TO 1-WAY	*Call
2096		4997<4983	3-WAY TO 1-WAY	*Call
2096		4997<4984	4-WAY TO 1-WAY	*Call
2096		4997<4985	1-WAY TO 1-WAY	*Call
2096		4997<4986	2-WAY TO 1-WAY	*Call
2096		4997<4987	3-WAY TO 1-WAY	*Call
2096		4997<4988	4-WAY TO 1-WAY	*Call
2096		4997<4989	1-WAY TO 1-WAY	*Call
2096		4997<4990	2-WAY TO 1-WAY	*Call
2096		4997<4991	3-WAY TO 1-WAY	*Call
2096		4997<4992	4-WAY TO 1-WAY	*Call
2096		4997<4993	1-WAY TO 1-WAY	*Call
2096		4997<4994	2-WAY TO 1-WAY	*Call
2096		4997<4995	3-WAY TO 1-WAY	*Call
2096		4997<4996	4-WAY TO 1-WAY	*Call
2096		4997<4998	2-WAY TO 1-WAY	*Call
2096		4997<4999	3-WAY TO 1-WAY	*Call
2096		4997<5000	4-WAY TO 1-WAY	*Call
2096		4997<5001	1-WAY TO 1-WAY	*Call
2096		4997<5002	2-WAY TO 1-WAY	*Call
2096		4997<5003	3-WAY TO 1-WAY	*Call
2096		4997<5004	4-WAY TO 1-WAY	*Call
2096		4998<4900	ZERO-WAY TO 2-WAY	*Call
2096		4998<4901	1-WAY TO 2-WAY	*Call
2096		4998<4902	2-WAY TO 2-WAY	*Call
2096		4998<4903	3-WAY TO 2-WAY	*Call
2096		4998<4905	1-WAY TO 2-WAY	*Call
2096		4998<4906	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4998<4907	3-WAY TO 2-WAY	*Call
2096		4998<4909	1-WAY TO 2-WAY	*Call
2096		4998<4910	2-WAY TO 2-WAY	*Call
2096		4998<4911	3-WAY TO 2-WAY	*Call
2096		4998<4913	1-WAY TO 2-WAY	*Call
2096		4998<4914	2-WAY TO 2-WAY	*Call
2096		4998<4915	3-WAY TO 2-WAY	*Call
2096		4998<4917	1-WAY TO 2-WAY	*Call
2096		4998<4918	2-WAY TO 2-WAY	*Call
2096		4998<4921	1-WAY TO 2-WAY	*Call
2096		4998<4922	2-WAY TO 2-WAY	*Call
2096		4998<4925	1-WAY TO 2-WAY	*Call
2096		4998<4929	1-WAY TO 2-WAY	*Call
2096		4998<4933	1-WAY TO 2-WAY	*Call
2096		4998<4937	1-WAY TO 2-WAY	*Call
2096		4998<4944	4-WAY TO 2-WAY	*Call
2096		4998<4947	3-WAY TO 2-WAY	*Call
2096		4998<4948	4-WAY TO 2-WAY	*Call
2096		4998<4951	3-WAY TO 2-WAY	*Call
2096		4998<4952	4-WAY TO 2-WAY	*Call
2096		4998<4954	2-WAY TO 2-WAY	*Call
2096		4998<4955	3-WAY TO 2-WAY	*Call
2096		4998<4956	4-WAY TO 2-WAY	*Call
2096		4998<4958	2-WAY TO 2-WAY	*Call
2096		4998<4959	3-WAY TO 2-WAY	*Call
2096		4998<4960	4-WAY TO 2-WAY	*Call
2096		4998<4962	2-WAY TO 2-WAY	*Call
2096		4998<4963	3-WAY TO 2-WAY	*Call
2096		4998<4964	4-WAY TO 2-WAY	*Call
2096		4998<4966	2-WAY TO 2-WAY	*Call
2096		4998<4967	3-WAY TO 2-WAY	*Call
2096		4998<4968	4-WAY TO 2-WAY	*Call
2096		4998<4969	1-WAY TO 2-WAY	*Call
2096		4998<4970	2-WAY TO 2-WAY	*Call
2096		4998<4971	3-WAY TO 2-WAY	*Call
2096		4998<4972	4-WAY TO 2-WAY	*Call
2096		4998<4973	1-WAY TO 2-WAY	*Call
2096		4998<4974	2-WAY TO 2-WAY	*Call
2096		4998<4975	3-WAY TO 2-WAY	*Call
2096		4998<4976	4-WAY TO 2-WAY	*Call
2096		4998<4977	3-WAY TO 2-WAY	*Call
2096		4998<4978	2-WAY TO 2-WAY	*Call
2096		4998<4979	3-WAY TO 2-WAY	*Call
2096		4998<4980	4-WAY TO 2-WAY	*Call
2096		4998<4981	1-WAY TO 2-WAY	*Call
2096		4998<4982	2-WAY TO 2-WAY	*Call
2096		4998<4983	3-WAY TO 2-WAY	*Call
2096		4998<4984	4-WAY TO 2-WAY	*Call
2096		4998<4985	1-WAY TO 2-WAY	*Call
2096		4998<4986	2-WAY TO 2-WAY	*Call
2096		4998<4987	3-WAY TO 2-WAY	*Call
2096		4998<4988	4-WAY TO 2-WAY	*Call
2096		4998<4989	1-WAY TO 2-WAY	*Call
2096		4998<4990	2-WAY TO 2-WAY	*Call
2096		4998<4991	3-WAY TO 2-WAY	*Call
2096		4998<4992	4-WAY TO 2-WAY	*Call
2096		4998<4993	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4998<4994	2-WAY TO 2-WAY	*Call
2096		4998<4995	3-WAY TO 2-WAY	*Call
2096		4998<4996	4-WAY TO 2-WAY	*Call
2096		4998<4997	1-WAY TO 2-WAY	*Call
2096		4998<4999	3-WAY TO 2-WAY	*Call
2096		4998<5000	4-WAY TO 2-WAY	*Call
2096		4998<5001	1-WAY TO 2-WAY	*Call
2096		4998<5002	2-WAY TO 2-WAY	*Call
2096		4998<5003	3-WAY TO 2-WAY	*Call
2096		4998<5004	4-WAY TO 2-WAY	*Call
2096		4999<4900	ZERO-WAY TO 3-WAY	*Call
2096		4999<4901	1-WAY TO 3-WAY	*Call
2096		4999<4902	2-WAY TO 3-WAY	*Call
2096		4999<4903	3-WAY TO 3-WAY	*Call
2096		4999<4905	1-WAY TO 3-WAY	*Call
2096		4999<4906	2-WAY TO 3-WAY	*Call
2096		4999<4907	3-WAY TO 3-WAY	*Call
2096		4999<4909	1-WAY TO 3-WAY	*Call
2096		4999<4910	2-WAY TO 3-WAY	*Call
2096		4999<4911	3-WAY TO 3-WAY	*Call
2096		4999<4913	1-WAY TO 3-WAY	*Call
2096		4999<4914	2-WAY TO 3-WAY	*Call
2096		4999<4915	3-WAY TO 3-WAY	*Call
2096		4999<4917	1-WAY TO 3-WAY	*Call
2096		4999<4918	2-WAY TO 3-WAY	*Call
2096		4999<4921	1-WAY TO 3-WAY	*Call
2096		4999<4922	2-WAY TO 3-WAY	*Call
2096		4999<4925	1-WAY TO 3-WAY	*Call
2096		4999<4929	1-WAY TO 3-WAY	*Call
2096		4999<4933	1-WAY TO 3-WAY	*Call
2096		4999<4937	1-WAY TO 3-WAY	*Call
2096		4999<4944	4-WAY TO 3-WAY	*Call
2096		4999<4947	3-WAY TO 3-WAY	*Call
2096		4999<4948	4-WAY TO 3-WAY	*Call
2096		4999<4951	3-WAY TO 3-WAY	*Call
2096		4999<4952	4-WAY TO 3-WAY	*Call
2096		4999<4954	2-WAY TO 3-WAY	*Call
2096		4999<4955	3-WAY TO 3-WAY	*Call
2096		4999<4956	4-WAY TO 3-WAY	*Call
2096		4999<4958	2-WAY TO 3-WAY	*Call
2096		4999<4959	3-WAY TO 3-WAY	*Call
2096		4999<4960	4-WAY TO 3-WAY	*Call
2096		4999<4962	2-WAY TO 3-WAY	*Call
2096		4999<4963	3-WAY TO 3-WAY	*Call
2096		4999<4964	4-WAY TO 3-WAY	*Call
2096		4999<4966	2-WAY TO 3-WAY	*Call
2096		4999<4967	3-WAY TO 3-WAY	*Call
2096		4999<4968	4-WAY TO 3-WAY	*Call
2096		4999<4969	1-WAY TO 3-WAY	*Call
2096		4999<4970	2-WAY TO 3-WAY	*Call
2096		4999<4971	3-WAY TO 3-WAY	*Call
2096		4999<4972	4-WAY TO 3-WAY	*Call
2096		4999<4973	1-WAY TO 3-WAY	*Call
2096		4999<4974	2-WAY TO 3-WAY	*Call
2096		4999<4975	3-WAY TO 3-WAY	*Call
2096		4999<4976	4-WAY TO 3-WAY	*Call
2096		4999<4977	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		4999<4978	2-WAY TO 3-WAY	*Call
2096		4999<4979	3-WAY TO 3-WAY	*Call
2096		4999<4980	4-WAY TO 3-WAY	*Call
2096		4999<4981	1-WAY TO 3-WAY	*Call
2096		4999<4982	2-WAY TO 3-WAY	*Call
2096		4999<4983	3-WAY TO 3-WAY	*Call
2096		4999<4984	4-WAY TO 3-WAY	*Call
2096		4999<4985	1-WAY TO 3-WAY	*Call
2096		4999<4986	2-WAY TO 3-WAY	*Call
2096		4999<4987	3-WAY TO 3-WAY	*Call
2096		4999<4988	4-WAY TO 3-WAY	*Call
2096		4999<4989	1-WAY TO 3-WAY	*Call
2096		4999<4990	2-WAY TO 3-WAY	*Call
2096		4999<4991	3-WAY TO 3-WAY	*Call
2096		4999<4992	4-WAY TO 3-WAY	*Call
2096		4999<4993	1-WAY TO 3-WAY	*Call
2096		4999<4994	2-WAY TO 3-WAY	*Call
2096		4999<4995	3-WAY TO 3-WAY	*Call
2096		4999<4996	4-WAY TO 3-WAY	*Call
2096		4999<4997	1-WAY TO 3-WAY	*Call
2096		4999<4998	2-WAY TO 3-WAY	*Call
2096		4999<5000	4-WAY TO 3-WAY	*Call
2096		4999<5001	1-WAY TO 3-WAY	*Call
2096		4999<5002	2-WAY TO 3-WAY	*Call
2096		4999<5003	3-WAY TO 3-WAY	*Call
2096		4999<5004	4-WAY TO 3-WAY	*Call
2096		5000<4900	ZERO-WAY TO 4-WAY	*Call
2096		5000<4901	1-WAY TO 4-WAY	*Call
2096		5000<4902	2-WAY TO 4-WAY	*Call
2096		5000<4903	3-WAY TO 4-WAY	*Call
2096		5000<4905	1-WAY TO 4-WAY	*Call
2096		5000<4906	2-WAY TO 4-WAY	*Call
2096		5000<4907	3-WAY TO 4-WAY	*Call
2096		5000<4909	1-WAY TO 4-WAY	*Call
2096		5000<4910	2-WAY TO 4-WAY	*Call
2096		5000<4911	3-WAY TO 4-WAY	*Call
2096		5000<4913	1-WAY TO 4-WAY	*Call
2096		5000<4914	2-WAY TO 4-WAY	*Call
2096		5000<4915	3-WAY TO 4-WAY	*Call
2096		5000<4917	1-WAY TO 4-WAY	*Call
2096		5000<4918	2-WAY TO 4-WAY	*Call
2096		5000<4921	1-WAY TO 4-WAY	*Call
2096		5000<4922	2-WAY TO 4-WAY	*Call
2096		5000<4925	1-WAY TO 4-WAY	*Call
2096		5000<4929	1-WAY TO 4-WAY	*Call
2096		5000<4933	1-WAY TO 4-WAY	*Call
2096		5000<4937	1-WAY TO 4-WAY	*Call
2096		5000<4944	4-WAY TO 4-WAY	*Call
2096		5000<4947	3-WAY TO 4-WAY	*Call
2096		5000<4948	4-WAY TO 4-WAY	*Call
2096		5000<4951	3-WAY TO 4-WAY	*Call
2096		5000<4952	4-WAY TO 4-WAY	*Call
2096		5000<4954	2-WAY TO 4-WAY	*Call
2096		5000<4955	3-WAY TO 4-WAY	*Call
2096		5000<4956	4-WAY TO 4-WAY	*Call
2096		5000<4958	2-WAY TO 4-WAY	*Call
2096		5000<4959	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		5000<4960	4-WAY TO 4-WAY	*Call
2096		5000<4962	2-WAY TO 4-WAY	*Call
2096		5000<4963	3-WAY TO 4-WAY	*Call
2096		5000<4964	4-WAY TO 4-WAY	*Call
2096		5000<4966	2-WAY TO 4-WAY	*Call
2096		5000<4967	3-WAY TO 4-WAY	*Call
2096		5000<4968	4-WAY TO 4-WAY	*Call
2096		5000<4969	1-WAY TO 4-WAY	*Call
2096		5000<4970	2-WAY TO 4-WAY	*Call
2096		5000<4971	3-WAY TO 4-WAY	*Call
2096		5000<4972	4-WAY TO 4-WAY	*Call
2096		5000<4973	1-WAY TO 4-WAY	*Call
2096		5000<4974	2-WAY TO 4-WAY	*Call
2096		5000<4975	3-WAY TO 4-WAY	*Call
2096		5000<4976	4-WAY TO 4-WAY	*Call
2096		5000<4977	3-WAY TO 4-WAY	*Call
2096		5000<4978	2-WAY TO 4-WAY	*Call
2096		5000<4979	3-WAY TO 4-WAY	*Call
2096		5000<4980	4-WAY TO 4-WAY	*Call
2096		5000<4981	1-WAY TO 4-WAY	*Call
2096		5000<4982	2-WAY TO 4-WAY	*Call
2096		5000<4983	3-WAY TO 4-WAY	*Call
2096		5000<4984	4-WAY TO 4-WAY	*Call
2096		5000<4985	1-WAY TO 4-WAY	*Call
2096		5000<4986	2-WAY TO 4-WAY	*Call
2096		5000<4987	3-WAY TO 4-WAY	*Call
2096		5000<4988	4-WAY TO 4-WAY	*Call
2096		5000<4989	1-WAY TO 4-WAY	*Call
2096		5000<4990	2-WAY TO 4-WAY	*Call
2096		5000<4991	3-WAY TO 4-WAY	*Call
2096		5000<4992	4-WAY TO 4-WAY	*Call
2096		5000<4993	1-WAY TO 4-WAY	*Call
2096		5000<4994	2-WAY TO 4-WAY	*Call
2096		5000<4995	3-WAY TO 4-WAY	*Call
2096		5000<4996	4-WAY TO 4-WAY	*Call
2096		5000<4997	1-WAY TO 4-WAY	*Call
2096		5000<4998	2-WAY TO 4-WAY	*Call
2096		5000<4999	3-WAY TO 4-WAY	*Call
2096		5000<5001	1-WAY TO 4-WAY	*Call
2096		5000<5002	2-WAY TO 4-WAY	*Call
2096		5000<5003	3-WAY TO 4-WAY	*Call
2096		5000<5004	4-WAY TO 4-WAY	*Call
2096		5001<4900	ZERO-WAY TO 1-WAY	*Call
2096		5001<4901	1-WAY TO 1-WAY	*Call
2096		5001<4902	2-WAY TO 1-WAY	*Call
2096		5001<4903	3-WAY TO 1-WAY	*Call
2096		5001<4905	1-WAY TO 1-WAY	*Call
2096		5001<4906	2-WAY TO 1-WAY	*Call
2096		5001<4907	3-WAY TO 1-WAY	*Call
2096		5001<4909	1-WAY TO 1-WAY	*Call
2096		5001<4910	2-WAY TO 1-WAY	*Call
2096		5001<4911	3-WAY TO 1-WAY	*Call
2096		5001<4913	1-WAY TO 1-WAY	*Call
2096		5001<4914	2-WAY TO 1-WAY	*Call
2096		5001<4915	3-WAY TO 1-WAY	*Call
2096		5001<4917	1-WAY TO 1-WAY	*Call
2096		5001<4918	2-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		5001<4921	1-WAY TO 1-WAY	*Call
2096		5001<4922	2-WAY TO 1-WAY	*Call
2096		5001<4925	1-WAY TO 1-WAY	*Call
2096		5001<4929	1-WAY TO 1-WAY	*Call
2096		5001<4933	1-WAY TO 1-WAY	*Call
2096		5001<4937	1-WAY TO 1-WAY	*Call
2096		5001<4944	4-WAY TO 1-WAY	*Call
2096		5001<4947	3-WAY TO 1-WAY	*Call
2096		5001<4948	4-WAY TO 1-WAY	*Call
2096		5001<4951	3-WAY TO 1-WAY	*Call
2096		5001<4952	4-WAY TO 1-WAY	*Call
2096		5001<4954	2-WAY TO 1-WAY	*Call
2096		5001<4955	3-WAY TO 1-WAY	*Call
2096		5001<4956	4-WAY TO 1-WAY	*Call
2096		5001<4958	2-WAY TO 1-WAY	*Call
2096		5001<4959	3-WAY TO 1-WAY	*Call
2096		5001<4960	4-WAY TO 1-WAY	*Call
2096		5001<4962	2-WAY TO 1-WAY	*Call
2096		5001<4963	3-WAY TO 1-WAY	*Call
2096		5001<4964	4-WAY TO 1-WAY	*Call
2096		5001<4966	2-WAY TO 1-WAY	*Call
2096		5001<4967	3-WAY TO 1-WAY	*Call
2096		5001<4968	4-WAY TO 1-WAY	*Call
2096		5001<4969	1-WAY TO 1-WAY	*Call
2096		5001<4970	2-WAY TO 1-WAY	*Call
2096		5001<4971	3-WAY TO 1-WAY	*Call
2096		5001<4972	4-WAY TO 1-WAY	*Call
2096		5001<4973	1-WAY TO 1-WAY	*Call
2096		5001<4974	2-WAY TO 1-WAY	*Call
2096		5001<4975	3-WAY TO 1-WAY	*Call
2096		5001<4976	4-WAY TO 1-WAY	*Call
2096		5001<4977	3-WAY TO 1-WAY	*Call
2096		5001<4978	2-WAY TO 1-WAY	*Call
2096		5001<4979	3-WAY TO 1-WAY	*Call
2096		5001<4980	4-WAY TO 1-WAY	*Call
2096		5001<4981	1-WAY TO 1-WAY	*Call
2096		5001<4982	2-WAY TO 1-WAY	*Call
2096		5001<4983	3-WAY TO 1-WAY	*Call
2096		5001<4984	4-WAY TO 1-WAY	*Call
2096		5001<4985	1-WAY TO 1-WAY	*Call
2096		5001<4986	2-WAY TO 1-WAY	*Call
2096		5001<4987	3-WAY TO 1-WAY	*Call
2096		5001<4988	4-WAY TO 1-WAY	*Call
2096		5001<4989	1-WAY TO 1-WAY	*Call
2096		5001<4990	2-WAY TO 1-WAY	*Call
2096		5001<4991	3-WAY TO 1-WAY	*Call
2096		5001<4992	4-WAY TO 1-WAY	*Call
2096		5001<4993	1-WAY TO 1-WAY	*Call
2096		5001<4994	2-WAY TO 1-WAY	*Call
2096		5001<4995	3-WAY TO 1-WAY	*Call
2096		5001<4996	4-WAY TO 1-WAY	*Call
2096		5001<4997	1-WAY TO 1-WAY	*Call
2096		5001<4998	2-WAY TO 1-WAY	*Call
2096		5001<4999	3-WAY TO 1-WAY	*Call
2096		5001<5000	4-WAY TO 1-WAY	*Call
2096		5001<5002	2-WAY TO 1-WAY	*Call
2096		5001<5003	3-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		5001<5004	4-WAY TO 1-WAY	*Call
2096		5002<4900	ZERO-WAY TO 2-WAY	*Call
2096		5002<4901	1-WAY TO 2-WAY	*Call
2096		5002<4902	2-WAY TO 2-WAY	*Call
2096		5002<4903	3-WAY TO 2-WAY	*Call
2096		5002<4905	1-WAY TO 2-WAY	*Call
2096		5002<4906	2-WAY TO 2-WAY	*Call
2096		5002<4907	3-WAY TO 2-WAY	*Call
2096		5002<4909	1-WAY TO 2-WAY	*Call
2096		5002<4910	2-WAY TO 2-WAY	*Call
2096		5002<4911	3-WAY TO 2-WAY	*Call
2096		5002<4913	1-WAY TO 2-WAY	*Call
2096		5002<4914	2-WAY TO 2-WAY	*Call
2096		5002<4915	3-WAY TO 2-WAY	*Call
2096		5002<4917	1-WAY TO 2-WAY	*Call
2096		5002<4918	2-WAY TO 2-WAY	*Call
2096		5002<4921	1-WAY TO 2-WAY	*Call
2096		5002<4922	2-WAY TO 2-WAY	*Call
2096		5002<4925	1-WAY TO 2-WAY	*Call
2096		5002<4929	1-WAY TO 2-WAY	*Call
2096		5002<4933	1-WAY TO 2-WAY	*Call
2096		5002<4937	1-WAY TO 2-WAY	*Call
2096		5002<4944	4-WAY TO 2-WAY	*Call
2096		5002<4947	3-WAY TO 2-WAY	*Call
2096		5002<4948	4-WAY TO 2-WAY	*Call
2096		5002<4951	3-WAY TO 2-WAY	*Call
2096		5002<4952	4-WAY TO 2-WAY	*Call
2096		5002<4954	2-WAY TO 2-WAY	*Call
2096		5002<4955	3-WAY TO 2-WAY	*Call
2096		5002<4956	4-WAY TO 2-WAY	*Call
2096		5002<4958	2-WAY TO 2-WAY	*Call
2096		5002<4959	3-WAY TO 2-WAY	*Call
2096		5002<4960	4-WAY TO 2-WAY	*Call
2096		5002<4962	2-WAY TO 2-WAY	*Call
2096		5002<4963	3-WAY TO 2-WAY	*Call
2096		5002<4964	4-WAY TO 2-WAY	*Call
2096		5002<4966	2-WAY TO 2-WAY	*Call
2096		5002<4967	3-WAY TO 2-WAY	*Call
2096		5002<4968	4-WAY TO 2-WAY	*Call
2096		5002<4969	1-WAY TO 2-WAY	*Call
2096		5002<4970	2-WAY TO 2-WAY	*Call
2096		5002<4971	3-WAY TO 2-WAY	*Call
2096		5002<4972	4-WAY TO 2-WAY	*Call
2096		5002<4973	1-WAY TO 2-WAY	*Call
2096		5002<4974	2-WAY TO 2-WAY	*Call
2096		5002<4975	3-WAY TO 2-WAY	*Call
2096		5002<4976	4-WAY TO 2-WAY	*Call
2096		5002<4977	3-WAY TO 2-WAY	*Call
2096		5002<4978	2-WAY TO 2-WAY	*Call
2096		5002<4979	3-WAY TO 2-WAY	*Call
2096		5002<4980	4-WAY TO 2-WAY	*Call
2096		5002<4981	1-WAY TO 2-WAY	*Call
2096		5002<4982	2-WAY TO 2-WAY	*Call
2096		5002<4983	3-WAY TO 2-WAY	*Call
2096		5002<4984	4-WAY TO 2-WAY	*Call
2096		5002<4985	1-WAY TO 2-WAY	*Call
2096		5002<4986	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		5002<4987	3-WAY TO 2-WAY	*Call
2096		5002<4988	4-WAY TO 2-WAY	*Call
2096		5002<4989	1-WAY TO 2-WAY	*Call
2096		5002<4990	2-WAY TO 2-WAY	*Call
2096		5002<4991	3-WAY TO 2-WAY	*Call
2096		5002<4992	4-WAY TO 2-WAY	*Call
2096		5002<4993	1-WAY TO 2-WAY	*Call
2096		5002<4994	2-WAY TO 2-WAY	*Call
2096		5002<4995	3-WAY TO 2-WAY	*Call
2096		5002<4996	4-WAY TO 2-WAY	*Call
2096		5002<4997	1-WAY TO 2-WAY	*Call
2096		5002<4998	2-WAY TO 2-WAY	*Call
2096		5002<4999	3-WAY TO 2-WAY	*Call
2096		5002<5000	4-WAY TO 2-WAY	*Call
2096		5002<5001	1-WAY TO 2-WAY	*Call
2096		5002<5003	3-WAY TO 2-WAY	*Call
2096		5002<5004	4-WAY TO 2-WAY	*Call
2096		5003<4900	ZERO-WAY TO 3-WAY	*Call
2096		5003<4901	1-WAY TO 3-WAY	*Call
2096		5003<4902	2-WAY TO 3-WAY	*Call
2096		5003<4903	3-WAY TO 3-WAY	*Call
2096		5003<4905	1-WAY TO 3-WAY	*Call
2096		5003<4906	2-WAY TO 3-WAY	*Call
2096		5003<4907	3-WAY TO 3-WAY	*Call
2096		5003<4909	1-WAY TO 3-WAY	*Call
2096		5003<4910	2-WAY TO 3-WAY	*Call
2096		5003<4911	3-WAY TO 3-WAY	*Call
2096		5003<4913	1-WAY TO 3-WAY	*Call
2096		5003<4914	2-WAY TO 3-WAY	*Call
2096		5003<4915	3-WAY TO 3-WAY	*Call
2096		5003<4917	1-WAY TO 3-WAY	*Call
2096		5003<4918	2-WAY TO 3-WAY	*Call
2096		5003<4921	1-WAY TO 3-WAY	*Call
2096		5003<4922	2-WAY TO 3-WAY	*Call
2096		5003<4925	1-WAY TO 3-WAY	*Call
2096		5003<4929	1-WAY TO 3-WAY	*Call
2096		5003<4933	1-WAY TO 3-WAY	*Call
2096		5003<4937	1-WAY TO 3-WAY	*Call
2096		5003<4944	4-WAY TO 3-WAY	*Call
2096		5003<4947	3-WAY TO 3-WAY	*Call
2096		5003<4948	4-WAY TO 3-WAY	*Call
2096		5003<4951	3-WAY TO 3-WAY	*Call
2096		5003<4952	4-WAY TO 3-WAY	*Call
2096		5003<4954	2-WAY TO 3-WAY	*Call
2096		5003<4955	3-WAY TO 3-WAY	*Call
2096		5003<4956	4-WAY TO 3-WAY	*Call
2096		5003<4958	2-WAY TO 3-WAY	*Call
2096		5003<4959	3-WAY TO 3-WAY	*Call
2096		5003<4960	4-WAY TO 3-WAY	*Call
2096		5003<4962	2-WAY TO 3-WAY	*Call
2096		5003<4963	3-WAY TO 3-WAY	*Call
2096		5003<4964	4-WAY TO 3-WAY	*Call
2096		5003<4966	2-WAY TO 3-WAY	*Call
2096		5003<4967	3-WAY TO 3-WAY	*Call
2096		5003<4968	4-WAY TO 3-WAY	*Call
2096		5003<4969	1-WAY TO 3-WAY	*Call
2096		5003<4970	2-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		5003<4971	3-WAY TO 3-WAY	*Call
2096		5003<4972	4-WAY TO 3-WAY	*Call
2096		5003<4973	1-WAY TO 3-WAY	*Call
2096		5003<4974	2-WAY TO 3-WAY	*Call
2096		5003<4975	3-WAY TO 3-WAY	*Call
2096		5003<4976	4-WAY TO 3-WAY	*Call
2096		5003<4977	3-WAY TO 3-WAY	*Call
2096		5003<4978	2-WAY TO 3-WAY	*Call
2096		5003<4979	3-WAY TO 3-WAY	*Call
2096		5003<4980	4-WAY TO 3-WAY	*Call
2096		5003<4981	1-WAY TO 3-WAY	*Call
2096		5003<4982	2-WAY TO 3-WAY	*Call
2096		5003<4983	3-WAY TO 3-WAY	*Call
2096		5003<4984	4-WAY TO 3-WAY	*Call
2096		5003<4985	1-WAY TO 3-WAY	*Call
2096		5003<4986	2-WAY TO 3-WAY	*Call
2096		5003<4987	3-WAY TO 3-WAY	*Call
2096		5003<4988	4-WAY TO 3-WAY	*Call
2096		5003<4989	1-WAY TO 3-WAY	*Call
2096		5003<4990	2-WAY TO 3-WAY	*Call
2096		5003<4991	3-WAY TO 3-WAY	*Call
2096		5003<4992	4-WAY TO 3-WAY	*Call
2096		5003<4993	1-WAY TO 3-WAY	*Call
2096		5003<4994	2-WAY TO 3-WAY	*Call
2096		5003<4995	3-WAY TO 3-WAY	*Call
2096		5003<4996	4-WAY TO 3-WAY	*Call
2096		5003<4997	1-WAY TO 3-WAY	*Call
2096		5003<4998	2-WAY TO 3-WAY	*Call
2096		5003<4999	3-WAY TO 3-WAY	*Call
2096		5003<5000	4-WAY TO 3-WAY	*Call
2096		5003<5001	1-WAY TO 3-WAY	*Call
2096		5003<5002	2-WAY TO 3-WAY	*Call
2096		5003<5004	4-WAY TO 3-WAY	*Call
2096		5004<4900	ZERO-WAY TO 4-WAY	*Call
2096		5004<4901	1-WAY TO 4-WAY	*Call
2096		5004<4902	2-WAY TO 4-WAY	*Call
2096		5004<4903	3-WAY TO 4-WAY	*Call
2096		5004<4905	1-WAY TO 4-WAY	*Call
2096		5004<4906	2-WAY TO 4-WAY	*Call
2096		5004<4907	3-WAY TO 4-WAY	*Call
2096		5004<4909	1-WAY TO 4-WAY	*Call
2096		5004<4910	2-WAY TO 4-WAY	*Call
2096		5004<4911	3-WAY TO 4-WAY	*Call
2096		5004<4913	1-WAY TO 4-WAY	*Call
2096		5004<4914	2-WAY TO 4-WAY	*Call
2096		5004<4915	3-WAY TO 4-WAY	*Call
2096		5004<4917	1-WAY TO 4-WAY	*Call
2096		5004<4918	2-WAY TO 4-WAY	*Call
2096		5004<4921	1-WAY TO 4-WAY	*Call
2096		5004<4922	2-WAY TO 4-WAY	*Call
2096		5004<4925	1-WAY TO 4-WAY	*Call
2096		5004<4929	1-WAY TO 4-WAY	*Call
2096		5004<4933	1-WAY TO 4-WAY	*Call
2096		5004<4937	1-WAY TO 4-WAY	*Call
2096		5004<4944	4-WAY TO 4-WAY	*Call
2096		5004<4947	3-WAY TO 4-WAY	*Call
2096		5004<4948	4-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		5004<4951	3-WAY TO 4-WAY	*Call
2096		5004<4952	4-WAY TO 4-WAY	*Call
2096		5004<4954	2-WAY TO 4-WAY	*Call
2096		5004<4955	3-WAY TO 4-WAY	*Call
2096		5004<4956	4-WAY TO 4-WAY	*Call
2096		5004<4958	2-WAY TO 4-WAY	*Call
2096		5004<4959	3-WAY TO 4-WAY	*Call
2096		5004<4960	4-WAY TO 4-WAY	*Call
2096		5004<4962	2-WAY TO 4-WAY	*Call
2096		5004<4963	3-WAY TO 4-WAY	*Call
2096		5004<4964	4-WAY TO 4-WAY	*Call
2096		5004<4966	2-WAY TO 4-WAY	*Call
2096		5004<4967	3-WAY TO 4-WAY	*Call
2096		5004<4968	4-WAY TO 4-WAY	*Call
2096		5004<4969	1-WAY TO 4-WAY	*Call
2096		5004<4970	2-WAY TO 4-WAY	*Call
2096		5004<4971	3-WAY TO 4-WAY	*Call
2096		5004<4972	4-WAY TO 4-WAY	*Call
2096		5004<4973	1-WAY TO 4-WAY	*Call
2096		5004<4974	2-WAY TO 4-WAY	*Call
2096		5004<4975	3-WAY TO 4-WAY	*Call
2096		5004<4976	4-WAY TO 4-WAY	*Call
2096		5004<4977	3-WAY TO 4-WAY	*Call
2096		5004<4978	2-WAY TO 4-WAY	*Call
2096		5004<4979	3-WAY TO 4-WAY	*Call
2096		5004<4980	4-WAY TO 4-WAY	*Call
2096		5004<4981	1-WAY TO 4-WAY	*Call
2096		5004<4982	2-WAY TO 4-WAY	*Call
2096		5004<4983	3-WAY TO 4-WAY	*Call
2096		5004<4984	4-WAY TO 4-WAY	*Call
2096		5004<4985	1-WAY TO 4-WAY	*Call
2096		5004<4986	2-WAY TO 4-WAY	*Call
2096		5004<4987	3-WAY TO 4-WAY	*Call
2096		5004<4988	4-WAY TO 4-WAY	*Call
2096		5004<4989	1-WAY TO 4-WAY	*Call
2096		5004<4990	2-WAY TO 4-WAY	*Call
2096		5004<4991	3-WAY TO 4-WAY	*Call
2096		5004<4992	4-WAY TO 4-WAY	*Call
2096		5004<4993	1-WAY TO 4-WAY	*Call
2096		5004<4994	2-WAY TO 4-WAY	*Call
2096		5004<4995	3-WAY TO 4-WAY	*Call
2096		5004<4996	4-WAY TO 4-WAY	*Call
2096		5004<4997	1-WAY TO 4-WAY	*Call
2096		5004<4998	2-WAY TO 4-WAY	*Call
2096		5004<4999	3-WAY TO 4-WAY	*Call
2096		5004<5000	4-WAY TO 4-WAY	*Call
2096		5004<5001	1-WAY TO 4-WAY	*Call
2096		5004<5002	2-WAY TO 4-WAY	*Call
2096		5004<5003	3-WAY TO 4-WAY	*Call
2096		7839<7866	IFL TO UNASSIGNED IFL	*Call
2096		7840<7839	UNASSIGNED IFL TO CP	*Call
2096		7840<7866	IFL TO CP	*Call
2096		7840<7867	ICF TO CP	*Call
2096		7840<7868	ZIIP TO CP	*Call
2096		7840<7869	ZAAP TO CP	*Call
2096		7841<7839	UNASSIGNED IFL TO CP	*Call
2096		7841<7866	IFL TO CP	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		7841<7867	ICF TO CP	*Call
2096		7841<7868	ZIIP TO CP	*Call
2096		7841<7869	ZAAP TO CP	*Call
2096		7842<7839	UNASSIGNED IFL TO CP	*Call
2096		7842<7866	IFL TO CP	*Call
2096		7842<7867	ICF TO CP	*Call
2096		7842<7868	ZIIP TO CP	*Call
2096		7842<7869	ZAAP TO CP	*Call
2096		7843<7839	UNASSIGNED IFL TO CP	*Call
2096		7843<7866	IFL TO CP	*Call
2096		7843<7867	ICF TO CP	*Call
2096		7843<7868	ZIIP TO CP	*Call
2096		7843<7869	ZAAP TO CP	*Call
2096		7844<7839	UNASSIGNED IFL TO CP	*Call
2096		7844<7866	IFL TO CP	*Call
2096		7844<7867	ICF TO CP	*Call
2096		7844<7868	ZIIP TO CP	*Call
2096		7844<7869	ZAAP TO CP	*Call
2096		7845<7839	UNASSIGNED IFL TO CP	*Call
2096		7845<7866	IFL TO CP	*Call
2096		7845<7867	ICF TO CP	*Call
2096		7845<7868	ZIIP TO CP	*Call
2096		7845<7869	ZAAP TO CP	*Call
2096		7850<7839	UNASSIGNED IFL TO CP	*Call
2096		7850<7866	IFL TO CP	*Call
2096		7850<7867	ICF TO CP	*Call
2096		7850<7868	ZIIP TO CP	*Call
2096		7850<7869	ZAAP TO CP	*Call
2096		7851<7839	UNASSIGNED IFL TO CP	*Call
2096		7851<7866	IFL TO CP	*Call
2096		7851<7867	ICF TO CP	*Call
2096		7851<7868	ZIIP TO CP	*Call
2096		7851<7869	ZAAP TO CP	*Call
2096		7852<7839	UNASSIGNED IFL TO CP	*Call
2096		7852<7866	IFL TO CP	*Call
2096		7852<7867	ICF TO CP	*Call
2096		7852<7868	ZIIP TO CP	*Call
2096		7852<7869	ZAAP TO CP	*Call
2096		7853<7839	UNASSIGNED IFL TO CP	*Call
2096		7853<7866	IFL TO CP	*Call
2096		7853<7867	ICF TO CP	*Call
2096		7853<7868	ZIIP TO CP	*Call
2096		7853<7869	ZAAP TO CP	*Call
2096		7854<7839	UNASSIGNED IFL TO CP	*Call
2096		7854<7866	IFL TO CP	*Call
2096		7854<7867	ICF TO CP	*Call
2096		7854<7868	ZIIP TO CP	*Call
2096		7854<7869	ZAAP TO CP	*Call
2096		7855<7839	UNASSIGNED IFL TO CP	*Call
2096		7855<7866	IFL TO CP	*Call
2096		7855<7867	ICF TO CP	*Call
2096		7855<7868	ZIIP TO CP	*Call
2096		7855<7869	ZAAP TO CP	*Call
2096		7856<7839	UNASSIGNED IFL TO CP	*Call
2096		7856<7866	IFL TO CP	*Call
2096		7856<7867	ICF TO CP	*Call
2096		7856<7868	ZIIP TO CP	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		7856<7869	ZAAP TO CP	*Call
2096		7857<7839	UNASSIGNED IFL TO CP	*Call
2096		7857<7866	IFL TO CP	*Call
2096		7857<7867	ICF TO CP	*Call
2096		7857<7868	ZIIP TO CP	*Call
2096		7857<7869	ZAAP TO CP	*Call
2096		7858<7839	UNASSIGNED IFL TO CP	*Call
2096		7858<7866	IFL TO CP	*Call
2096		7858<7867	ICF TO CP	*Call
2096		7858<7868	ZIIP TO CP	*Call
2096		7858<7869	ZAAP TO CP	*Call
2096		7859<7839	UNASSIGNED IFL TO CP	*Call
2096		7859<7866	IFL TO CP	*Call
2096		7859<7867	ICF TO CP	*Call
2096		7859<7868	ZIIP TO CP	*Call
2096		7859<7869	ZAAP TO CP	*Call
2096		7860<7839	UNASSIGNED IFL TO CP	*Call
2096		7860<7866	IFL TO CP	*Call
2096		7860<7867	ICF TO CP	*Call
2096		7860<7868	ZIIP TO CP	*Call
2096		7860<7869	ZAAP TO CP	*Call
2096		7861<7839	UNASSIGNED IFL TO CP	*Call
2096		7861<7866	IFL TO CP	*Call
2096		7861<7867	ICF TO CP	*Call
2096		7861<7868	ZIIP TO CP	*Call
2096		7861<7869	ZAAP TO CP	*Call
2096		7862<7839	UNASSIGNED IFL TO CP	*Call
2096		7862<7866	IFL TO CP	*Call
2096		7862<7867	ICF TO CP	*Call
2096		7862<7868	ZIIP TO CP	*Call
2096		7862<7869	ZAAP TO CP	*Call
2096		7863<7839	UNASSIGNED IFL TO CP	*Call
2096		7863<7866	IFL TO CP	*Call
2096		7863<7867	ICF TO CP	*Call
2096		7863<7868	ZIIP TO CP	*Call
2096		7863<7869	ZAAP TO CP	*Call
2096		7864<7839	UNASSIGNED IFL TO CP	*Call
2096		7864<7866	IFL TO CP	*Call
2096		7864<7867	ICF TO CP	*Call
2096		7864<7868	ZIIP TO CP	*Call
2096		7864<7869	ZAAP TO CP	*Call
2096		7865<7839	UNASSIGNED IFL TO CP	*Call
2096		7865<7866	IFL TO CP	*Call
2096		7865<7867	ICF TO CP	*Call
2096		7865<7868	ZIIP TO CP	*Call
2096		7865<7869	ZAAP TO CP	*Call
2096		7866<7839	UNASSIGNED IFL TO IFL	*Call
2096		7866<7867	ICF TO IFL	*Call
2096		7866<7868	ZIIP TO IFL	*Call
2096		7866<7869	ZAAP TO IFL	*Call
2096		7867<7839	UNASSIGNED IFL TO ICF	*Call
2096		7867<7866	IFL TO ICF	*Call
2096		7867<7868	ZIIP TO ICF	*Call
2096		7867<7869	ZAAP TO ICF	*Call
2096		7868<7839	UNASSIGNED IFL TO ZIIP	*Call
2096		7868<7866	IFL TO ZIIP	*Call
2096		7868<7867	ICF TO ZIIP	*Call

Machine Type	Model	Feature	Description	GSA Price
2096		7868<7869	ZAAP TO ZIIP	*Call
2096		7869<7839	UNASSIGNED IFL TO ZAAP	*Call
2096		7869<7866	IFL TO ZAAP	*Call
2096		7869<7867	ICF TO ZAAP	*Call
2096		7869<7868	ZIIP TO ZAAP	*Call
2096<2066		0077<0078	HMC TR/EN TO HMC DUAL EN	*Call
2096<2066		0079<0080	HMC TR/EN TO HMC DUAL EN	*Call
2096<2066		2903<1208	MEMORY TO MEMORY	*Call
2096<2066		2904<1208	MEMORY TO MEMORY	*Call
2096<2066		2905<1208	MEMORY TO MEMORY	*Call
2096<2066		2906<1208	MEMORY TO MEMORY	*Call
2096<2066		2907<1208	MEMORY TO MEMORY	*Call
2096<2066		2908<1208	MEMORY TO MEMORY	*Call
2096<2066		4900<4607	4-WAY TO ZERO-WAY	*Call
2096<2066		4901<4607	4-WAY TO 1-WAY	*Call
2096<2066		4902<4607	4-WAY TO 2-WAY	*Call
2096<2066		4903<4607	4-WAY TO 3-WAY	*Call
2096<2066		4905<4607	4-WAY TO 1-WAY	*Call
2096<2066		4906<4607	4-WAY TO 2-WAY	*Call
2096<2066		4907<4607	4-WAY TO 3-WAY	*Call
2096<2066		4909<4607	4-WAY TO 1-WAY	*Call
2096<2066		4910<4607	4-WAY TO 2-WAY	*Call
2096<2066		4911<4607	4-WAY TO 3-WAY	*Call
2096<2066		4913<4607	4-WAY TO 1-WAY	*Call
2096<2066		4914<4607	4-WAY TO 2-WAY	*Call
2096<2066		4915<4607	4-WAY TO 3-WAY	*Call
2096<2066		4917<4607	4-WAY TO 1-WAY	*Call
2096<2066		4918<4607	4-WAY TO 2-WAY	*Call
2096<2066		4921<4607	4-WAY TO 1-WAY	*Call
2096<2066		4922<4607	4-WAY TO 2-WAY	*Call
2096<2066		4925<4607	4-WAY TO 1-WAY	*Call
2096<2066		4929<4607	4-WAY TO 1-WAY	*Call
2096<2066		4933<4607	4-WAY TO 1-WAY	*Call
2096<2066		4937<4607	4-WAY TO 1-WAY	*Call
2096<2066		4944<4607	4-WAY TO 4-WAY	*Call
2096<2066		4947<4607	4-WAY TO 3-WAY	*Call
2096<2066		4948<4607	4-WAY TO 4-WAY	*Call
2096<2066		4951<4607	4-WAY TO 3-WAY	*Call
2096<2066		4952<4607	4-WAY TO 4-WAY	*Call
2096<2066		4954<4607	4-WAY TO 2-WAY	*Call
2096<2066		4955<4607	4-WAY TO 3-WAY	*Call
2096<2066		4956<4607	4-WAY TO 4-WAY	*Call
2096<2066		4958<4607	4-WAY TO 2-WAY	*Call
2096<2066		4959<4607	4-WAY TO 3-WAY	*Call
2096<2066		4960<4607	4-WAY TO 4-WAY	*Call
2096<2066		4962<4607	4-WAY TO 2-WAY	*Call
2096<2066		4963<4607	4-WAY TO 3-WAY	*Call
2096<2066		4964<4607	4-WAY TO 4-WAY	*Call
2096<2066		4966<4607	4-WAY TO 2-WAY	*Call
2096<2066		4967<4607	4-WAY TO 3-WAY	*Call
2096<2066		4968<4607	4-WAY TO 4-WAY	*Call
2096<2066		4969<4607	4-WAY TO 1-WAY	*Call
2096<2066		4970<4607	4-WAY TO 2-WAY	*Call
2096<2066		4971<4607	4-WAY TO 3-WAY	*Call
2096<2066		4972<4607	4-WAY TO 4-WAY	*Call
2096<2066		4973<4607	4-WAY TO 1-WAY	*Call
2096<2066		4974<4607	4-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2066		4975<4607	4-WAY TO 3-WAY	*Call
2096<2066		4976<4607	4-WAY TO 4-WAY	*Call
2096<2066		4977<4607	4-WAY TO 1-WAY	*Call
2096<2066		4978<4607	4-WAY TO 2-WAY	*Call
2096<2066		4979<4607	4-WAY TO 3-WAY	*Call
2096<2066		4980<4607	4-WAY TO 4-WAY	*Call
2096<2066		4981<4607	4-WAY TO 1-WAY	*Call
2096<2066		4982<4607	4-WAY TO 2-WAY	*Call
2096<2066		4983<4607	4-WAY TO 3-WAY	*Call
2096<2066		4984<4607	4-WAY TO 4-WAY	*Call
2096<2066		4985<4607	4-WAY TO 1-WAY	*Call
2096<2066		4986<4607	4-WAY TO 2-WAY	*Call
2096<2066		4987<4607	4-WAY TO 3-WAY	*Call
2096<2066		4988<4607	4-WAY TO 4-WAY	*Call
2096<2066		4989<4607	4-WAY TO 1-WAY	*Call
2096<2066		4990<4607	4-WAY TO 2-WAY	*Call
2096<2066		4991<4607	4-WAY TO 3-WAY	*Call
2096<2066		4992<4607	4-WAY TO 4-WAY	*Call
2096<2066		4993<4607	4-WAY TO 1-WAY	*Call
2096<2066		4994<4607	4-WAY TO 2-WAY	*Call
2096<2066		4995<4607	4-WAY TO 3-WAY	*Call
2096<2066		4996<4607	4-WAY TO 4-WAY	*Call
2096<2066		4997<4607	4-WAY TO 1-WAY	*Call
2096<2066		4998<4607	4-WAY TO 2-WAY	*Call
2096<2066		4999<4607	4-WAY TO 3-WAY	*Call
2096<2066		5000<4607	4-WAY TO 4-WAY	*Call
2096<2066		5001<4607	4-WAY TO 1-WAY	*Call
2096<2066		5002<4607	4-WAY TO 2-WAY	*Call
2096<2066		5003<4607	4-WAY TO 3-WAY	*Call
2096<2066		5004<4607	4-WAY TO 4-WAY	*Call
2096<2086		0077<0078	HMC TR/EN TO HMC DUAL EN	*Call
2096<2086		2902<3102	MEMORY TO MEMORY	*Call
2096<2086		2903<3102	MEMORY TO MEMORY	*Call
2096<2086		2903<3104	MEMORY TO MEMORY	*Call
2096<2086		2904<3102	MEMORY TO MEMORY	*Call
2096<2086		2904<3104	MEMORY TO MEMORY	*Call
2096<2086		2904<3106	MEMORY TO MEMORY	*Call
2096<2086		2905<3102	MEMORY TO MEMORY	*Call
2096<2086		2905<3104	MEMORY TO MEMORY	*Call
2096<2086		2905<3106	MEMORY TO MEMORY	*Call
2096<2086		2905<3108	MEMORY TO MEMORY	*Call
2096<2086		2906<3102	MEMORY TO MEMORY	*Call
2096<2086		2906<3104	MEMORY TO MEMORY	*Call
2096<2086		2906<3106	MEMORY TO MEMORY	*Call
2096<2086		2906<3108	MEMORY TO MEMORY	*Call
2096<2086		2907<3102	MEMORY TO MEMORY	*Call
2096<2086		2907<3104	MEMORY TO MEMORY	*Call
2096<2086		2907<3106	MEMORY TO MEMORY	*Call
2096<2086		2907<3108	MEMORY TO MEMORY	*Call
2096<2086		2908<3102	MEMORY TO MEMORY	*Call
2096<2086		2908<3104	MEMORY TO MEMORY	*Call
2096<2086		2908<3106	MEMORY TO MEMORY	*Call
2096<2086		2908<3108	MEMORY TO MEMORY	*Call
2096<2086		4900<6070	ZERO-WAY TO ZERO-WAY	*Call
2096<2086		4900<6110	1-WAY TO ZERO-WAY	*Call
2096<2086		4900<6120	1-WAY TO ZERO-WAY	*Call
2096<2086		4900<6130	1-WAY TO ZERO-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4900<6140	1-WAY TO ZERO-WAY	*Call
2096<2086		4900<6150	1-WAY TO ZERO-WAY	*Call
2096<2086		4900<6160	1-WAY TO ZERO-WAY	*Call
2096<2086		4900<6170	1-WAY TO ZERO-WAY	*Call
2096<2086		4900<6210	2-WAY TO ZERO-WAY	*Call
2096<2086		4900<6220	2-WAY TO ZERO-WAY	*Call
2096<2086		4900<6230	2-WAY TO ZERO-WAY	*Call
2096<2086		4900<6240	2-WAY TO ZERO-WAY	*Call
2096<2086		4900<6250	2-WAY TO ZERO-WAY	*Call
2096<2086		4900<6260	2-WAY TO ZERO-WAY	*Call
2096<2086		4900<6270	2-WAY TO ZERO-WAY	*Call
2096<2086		4900<6310	3-WAY TO ZERO-WAY	*Call
2096<2086		4900<6320	3-WAY TO ZERO-WAY	*Call
2096<2086		4900<6330	3-WAY TO ZERO-WAY	*Call
2096<2086		4900<6340	3-WAY TO ZERO-WAY	*Call
2096<2086		4900<6350	3-WAY TO ZERO-WAY	*Call
2096<2086		4900<6360	3-WAY TO ZERO-WAY	*Call
2096<2086		4900<6370	3-WAY TO ZERO-WAY	*Call
2096<2086		4900<6410	4-WAY TO ZERO-WAY	*Call
2096<2086		4900<6420	4-WAY TO ZERO-WAY	*Call
2096<2086		4900<6430	4-WAY TO ZERO-WAY	*Call
2096<2086		4900<6440	4-WAY TO ZERO-WAY	*Call
2096<2086		4900<6450	4-WAY TO ZERO-WAY	*Call
2096<2086		4900<6460	4-WAY TO ZERO-WAY	*Call
2096<2086		4900<6470	4-WAY TO ZERO-WAY	*Call
2096<2086		4901<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4901<6110	1-WAY TO 1-WAY	*Call
2096<2086		4901<6120	1-WAY TO 1-WAY	*Call
2096<2086		4901<6130	1-WAY TO 1-WAY	*Call
2096<2086		4901<6140	1-WAY TO 1-WAY	*Call
2096<2086		4901<6150	1-WAY TO 1-WAY	*Call
2096<2086		4901<6160	1-WAY TO 1-WAY	*Call
2096<2086		4901<6170	1-WAY TO 1-WAY	*Call
2096<2086		4901<6210	2-WAY TO 1-WAY	*Call
2096<2086		4901<6220	2-WAY TO 1-WAY	*Call
2096<2086		4901<6230	2-WAY TO 1-WAY	*Call
2096<2086		4901<6240	2-WAY TO 1-WAY	*Call
2096<2086		4901<6250	2-WAY TO 1-WAY	*Call
2096<2086		4901<6260	2-WAY TO 1-WAY	*Call
2096<2086		4901<6270	2-WAY TO 1-WAY	*Call
2096<2086		4901<6310	3-WAY TO 1-WAY	*Call
2096<2086		4901<6320	3-WAY TO 1-WAY	*Call
2096<2086		4901<6330	3-WAY TO 1-WAY	*Call
2096<2086		4901<6340	3-WAY TO 1-WAY	*Call
2096<2086		4901<6350	3-WAY TO 1-WAY	*Call
2096<2086		4901<6360	3-WAY TO 1-WAY	*Call
2096<2086		4901<6370	3-WAY TO 1-WAY	*Call
2096<2086		4901<6410	4-WAY TO 1-WAY	*Call
2096<2086		4901<6420	4-WAY TO 1-WAY	*Call
2096<2086		4901<6430	4-WAY TO 1-WAY	*Call
2096<2086		4901<6440	4-WAY TO 1-WAY	*Call
2096<2086		4901<6450	4-WAY TO 1-WAY	*Call
2096<2086		4901<6460	4-WAY TO 1-WAY	*Call
2096<2086		4901<6470	4-WAY TO 1-WAY	*Call
2096<2086		4902<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4902<6110	1-WAY TO 2-WAY	*Call
2096<2086		4902<6120	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4902<6130	1-WAY TO 2-WAY	*Call
2096<2086		4902<6140	1-WAY TO 2-WAY	*Call
2096<2086		4902<6150	1-WAY TO 2-WAY	*Call
2096<2086		4902<6160	1-WAY TO 2-WAY	*Call
2096<2086		4902<6170	1-WAY TO 2-WAY	*Call
2096<2086		4902<6210	2-WAY TO 2-WAY	*Call
2096<2086		4902<6220	2-WAY TO 2-WAY	*Call
2096<2086		4902<6230	2-WAY TO 2-WAY	*Call
2096<2086		4902<6240	2-WAY TO 2-WAY	*Call
2096<2086		4902<6250	2-WAY TO 2-WAY	*Call
2096<2086		4902<6260	2-WAY TO 2-WAY	*Call
2096<2086		4902<6270	2-WAY TO 2-WAY	*Call
2096<2086		4902<6310	3-WAY TO 2-WAY	*Call
2096<2086		4902<6320	3-WAY TO 2-WAY	*Call
2096<2086		4902<6330	3-WAY TO 2-WAY	*Call
2096<2086		4902<6340	3-WAY TO 2-WAY	*Call
2096<2086		4902<6350	3-WAY TO 2-WAY	*Call
2096<2086		4902<6360	3-WAY TO 2-WAY	*Call
2096<2086		4902<6370	3-WAY TO 2-WAY	*Call
2096<2086		4902<6410	4-WAY TO 2-WAY	*Call
2096<2086		4902<6420	4-WAY TO 2-WAY	*Call
2096<2086		4902<6430	4-WAY TO 2-WAY	*Call
2096<2086		4902<6440	4-WAY TO 2-WAY	*Call
2096<2086		4902<6450	4-WAY TO 2-WAY	*Call
2096<2086		4902<6460	4-WAY TO 2-WAY	*Call
2096<2086		4902<6470	4-WAY TO 2-WAY	*Call
2096<2086		4903<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4903<6110	1-WAY TO 3-WAY	*Call
2096<2086		4903<6120	1-WAY TO 3-WAY	*Call
2096<2086		4903<6130	1-WAY TO 3-WAY	*Call
2096<2086		4903<6140	1-WAY TO 3-WAY	*Call
2096<2086		4903<6150	1-WAY TO 3-WAY	*Call
2096<2086		4903<6160	1-WAY TO 3-WAY	*Call
2096<2086		4903<6170	1-WAY TO 3-WAY	*Call
2096<2086		4903<6210	2-WAY TO 3-WAY	*Call
2096<2086		4903<6220	2-WAY TO 3-WAY	*Call
2096<2086		4903<6230	2-WAY TO 3-WAY	*Call
2096<2086		4903<6240	2-WAY TO 3-WAY	*Call
2096<2086		4903<6250	2-WAY TO 3-WAY	*Call
2096<2086		4903<6260	2-WAY TO 3-WAY	*Call
2096<2086		4903<6270	2-WAY TO 3-WAY	*Call
2096<2086		4903<6310	3-WAY TO 3-WAY	*Call
2096<2086		4903<6320	3-WAY TO 3-WAY	*Call
2096<2086		4903<6330	3-WAY TO 3-WAY	*Call
2096<2086		4903<6340	3-WAY TO 3-WAY	*Call
2096<2086		4903<6350	3-WAY TO 3-WAY	*Call
2096<2086		4903<6360	3-WAY TO 3-WAY	*Call
2096<2086		4903<6370	3-WAY TO 3-WAY	*Call
2096<2086		4903<6410	4-WAY TO 3-WAY	*Call
2096<2086		4903<6420	4-WAY TO 3-WAY	*Call
2096<2086		4903<6430	4-WAY TO 3-WAY	*Call
2096<2086		4903<6440	4-WAY TO 3-WAY	*Call
2096<2086		4903<6450	4-WAY TO 3-WAY	*Call
2096<2086		4903<6460	4-WAY TO 3-WAY	*Call
2096<2086		4903<6470	4-WAY TO 3-WAY	*Call
2096<2086		4905<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4905<6110	1-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4905<6120	1-WAY TO 1-WAY	*Call
2096<2086		4905<6130	1-WAY TO 1-WAY	*Call
2096<2086		4905<6140	1-WAY TO 1-WAY	*Call
2096<2086		4905<6150	1-WAY TO 1-WAY	*Call
2096<2086		4905<6160	1-WAY TO 1-WAY	*Call
2096<2086		4905<6170	1-WAY TO 1-WAY	*Call
2096<2086		4905<6210	2-WAY TO 1-WAY	*Call
2096<2086		4905<6220	2-WAY TO 1-WAY	*Call
2096<2086		4905<6230	2-WAY TO 1-WAY	*Call
2096<2086		4905<6240	2-WAY TO 1-WAY	*Call
2096<2086		4905<6250	2-WAY TO 1-WAY	*Call
2096<2086		4905<6260	2-WAY TO 1-WAY	*Call
2096<2086		4905<6270	2-WAY TO 1-WAY	*Call
2096<2086		4905<6310	3-WAY TO 1-WAY	*Call
2096<2086		4905<6320	3-WAY TO 1-WAY	*Call
2096<2086		4905<6330	3-WAY TO 1-WAY	*Call
2096<2086		4905<6340	3-WAY TO 1-WAY	*Call
2096<2086		4905<6350	3-WAY TO 1-WAY	*Call
2096<2086		4905<6360	3-WAY TO 1-WAY	*Call
2096<2086		4905<6370	3-WAY TO 1-WAY	*Call
2096<2086		4905<6410	4-WAY TO 1-WAY	*Call
2096<2086		4905<6420	4-WAY TO 1-WAY	*Call
2096<2086		4905<6430	4-WAY TO 1-WAY	*Call
2096<2086		4905<6440	4-WAY TO 1-WAY	*Call
2096<2086		4905<6450	4-WAY TO 1-WAY	*Call
2096<2086		4905<6460	4-WAY TO 1-WAY	*Call
2096<2086		4905<6470	4-WAY TO 1-WAY	*Call
2096<2086		4906<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4906<6110	1-WAY TO 2-WAY	*Call
2096<2086		4906<6120	1-WAY TO 2-WAY	*Call
2096<2086		4906<6130	1-WAY TO 2-WAY	*Call
2096<2086		4906<6140	1-WAY TO 2-WAY	*Call
2096<2086		4906<6150	1-WAY TO 2-WAY	*Call
2096<2086		4906<6160	1-WAY TO 2-WAY	*Call
2096<2086		4906<6170	1-WAY TO 2-WAY	*Call
2096<2086		4906<6210	2-WAY TO 2-WAY	*Call
2096<2086		4906<6220	2-WAY TO 2-WAY	*Call
2096<2086		4906<6230	2-WAY TO 2-WAY	*Call
2096<2086		4906<6240	2-WAY TO 2-WAY	*Call
2096<2086		4906<6250	2-WAY TO 2-WAY	*Call
2096<2086		4906<6260	2-WAY TO 2-WAY	*Call
2096<2086		4906<6270	2-WAY TO 2-WAY	*Call
2096<2086		4906<6310	3-WAY TO 2-WAY	*Call
2096<2086		4906<6320	3-WAY TO 2-WAY	*Call
2096<2086		4906<6330	3-WAY TO 2-WAY	*Call
2096<2086		4906<6340	3-WAY TO 2-WAY	*Call
2096<2086		4906<6350	3-WAY TO 2-WAY	*Call
2096<2086		4906<6360	3-WAY TO 2-WAY	*Call
2096<2086		4906<6370	3-WAY TO 2-WAY	*Call
2096<2086		4906<6410	4-WAY TO 2-WAY	*Call
2096<2086		4906<6420	4-WAY TO 2-WAY	*Call
2096<2086		4906<6430	4-WAY TO 2-WAY	*Call
2096<2086		4906<6440	4-WAY TO 2-WAY	*Call
2096<2086		4906<6450	4-WAY TO 2-WAY	*Call
2096<2086		4906<6460	4-WAY TO 2-WAY	*Call
2096<2086		4906<6470	4-WAY TO 2-WAY	*Call
2096<2086		4907<6070	ZERO-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4907<6110	1-WAY TO 3-WAY	*Call
2096<2086		4907<6120	1-WAY TO 3-WAY	*Call
2096<2086		4907<6130	1-WAY TO 3-WAY	*Call
2096<2086		4907<6140	1-WAY TO 3-WAY	*Call
2096<2086		4907<6150	1-WAY TO 3-WAY	*Call
2096<2086		4907<6160	1-WAY TO 3-WAY	*Call
2096<2086		4907<6170	1-WAY TO 3-WAY	*Call
2096<2086		4907<6210	2-WAY TO 3-WAY	*Call
2096<2086		4907<6220	2-WAY TO 3-WAY	*Call
2096<2086		4907<6230	2-WAY TO 3-WAY	*Call
2096<2086		4907<6240	2-WAY TO 3-WAY	*Call
2096<2086		4907<6250	2-WAY TO 3-WAY	*Call
2096<2086		4907<6260	2-WAY TO 3-WAY	*Call
2096<2086		4907<6270	2-WAY TO 3-WAY	*Call
2096<2086		4907<6310	3-WAY TO 3-WAY	*Call
2096<2086		4907<6320	3-WAY TO 3-WAY	*Call
2096<2086		4907<6330	3-WAY TO 3-WAY	*Call
2096<2086		4907<6340	3-WAY TO 3-WAY	*Call
2096<2086		4907<6350	3-WAY TO 3-WAY	*Call
2096<2086		4907<6360	3-WAY TO 3-WAY	*Call
2096<2086		4907<6370	3-WAY TO 3-WAY	*Call
2096<2086		4907<6410	4-WAY TO 3-WAY	*Call
2096<2086		4907<6420	4-WAY TO 3-WAY	*Call
2096<2086		4907<6430	4-WAY TO 3-WAY	*Call
2096<2086		4907<6440	4-WAY TO 3-WAY	*Call
2096<2086		4907<6450	4-WAY TO 3-WAY	*Call
2096<2086		4907<6460	4-WAY TO 3-WAY	*Call
2096<2086		4907<6470	4-WAY TO 3-WAY	*Call
2096<2086		4909<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4909<6110	1-WAY TO 1-WAY	*Call
2096<2086		4909<6120	1-WAY TO 1-WAY	*Call
2096<2086		4909<6130	1-WAY TO 1-WAY	*Call
2096<2086		4909<6140	1-WAY TO 1-WAY	*Call
2096<2086		4909<6150	1-WAY TO 1-WAY	*Call
2096<2086		4909<6160	1-WAY TO 1-WAY	*Call
2096<2086		4909<6170	1-WAY TO 1-WAY	*Call
2096<2086		4909<6210	2-WAY TO 1-WAY	*Call
2096<2086		4909<6220	2-WAY TO 1-WAY	*Call
2096<2086		4909<6230	2-WAY TO 1-WAY	*Call
2096<2086		4909<6240	2-WAY TO 1-WAY	*Call
2096<2086		4909<6250	2-WAY TO 1-WAY	*Call
2096<2086		4909<6260	2-WAY TO 1-WAY	*Call
2096<2086		4909<6270	2-WAY TO 1-WAY	*Call
2096<2086		4909<6310	3-WAY TO 1-WAY	*Call
2096<2086		4909<6320	3-WAY TO 1-WAY	*Call
2096<2086		4909<6330	3-WAY TO 1-WAY	*Call
2096<2086		4909<6340	3-WAY TO 1-WAY	*Call
2096<2086		4909<6350	3-WAY TO 1-WAY	*Call
2096<2086		4909<6360	3-WAY TO 1-WAY	*Call
2096<2086		4909<6370	3-WAY TO 1-WAY	*Call
2096<2086		4909<6410	4-WAY TO 1-WAY	*Call
2096<2086		4909<6420	4-WAY TO 1-WAY	*Call
2096<2086		4909<6430	4-WAY TO 1-WAY	*Call
2096<2086		4909<6440	4-WAY TO 1-WAY	*Call
2096<2086		4909<6450	4-WAY TO 1-WAY	*Call
2096<2086		4909<6460	4-WAY TO 1-WAY	*Call
2096<2086		4909<6470	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4910<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4910<6110	1-WAY TO 2-WAY	*Call
2096<2086		4910<6120	1-WAY TO 2-WAY	*Call
2096<2086		4910<6130	1-WAY TO 2-WAY	*Call
2096<2086		4910<6140	1-WAY TO 2-WAY	*Call
2096<2086		4910<6150	1-WAY TO 2-WAY	*Call
2096<2086		4910<6160	1-WAY TO 2-WAY	*Call
2096<2086		4910<6170	1-WAY TO 2-WAY	*Call
2096<2086		4910<6210	2-WAY TO 2-WAY	*Call
2096<2086		4910<6220	2-WAY TO 2-WAY	*Call
2096<2086		4910<6230	2-WAY TO 2-WAY	*Call
2096<2086		4910<6240	2-WAY TO 2-WAY	*Call
2096<2086		4910<6250	2-WAY TO 2-WAY	*Call
2096<2086		4910<6260	2-WAY TO 2-WAY	*Call
2096<2086		4910<6270	2-WAY TO 2-WAY	*Call
2096<2086		4910<6310	3-WAY TO 2-WAY	*Call
2096<2086		4910<6320	3-WAY TO 2-WAY	*Call
2096<2086		4910<6330	3-WAY TO 2-WAY	*Call
2096<2086		4910<6340	3-WAY TO 2-WAY	*Call
2096<2086		4910<6350	3-WAY TO 2-WAY	*Call
2096<2086		4910<6360	3-WAY TO 2-WAY	*Call
2096<2086		4910<6370	3-WAY TO 2-WAY	*Call
2096<2086		4910<6410	4-WAY TO 2-WAY	*Call
2096<2086		4910<6420	4-WAY TO 2-WAY	*Call
2096<2086		4910<6430	4-WAY TO 2-WAY	*Call
2096<2086		4910<6440	4-WAY TO 2-WAY	*Call
2096<2086		4910<6450	4-WAY TO 2-WAY	*Call
2096<2086		4910<6460	4-WAY TO 2-WAY	*Call
2096<2086		4910<6470	4-WAY TO 2-WAY	*Call
2096<2086		4911<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4911<6110	1-WAY TO 3-WAY	*Call
2096<2086		4911<6120	1-WAY TO 3-WAY	*Call
2096<2086		4911<6130	1-WAY TO 3-WAY	*Call
2096<2086		4911<6140	1-WAY TO 3-WAY	*Call
2096<2086		4911<6150	1-WAY TO 3-WAY	*Call
2096<2086		4911<6160	1-WAY TO 3-WAY	*Call
2096<2086		4911<6170	1-WAY TO 3-WAY	*Call
2096<2086		4911<6210	2-WAY TO 3-WAY	*Call
2096<2086		4911<6220	2-WAY TO 3-WAY	*Call
2096<2086		4911<6230	2-WAY TO 3-WAY	*Call
2096<2086		4911<6240	2-WAY TO 3-WAY	*Call
2096<2086		4911<6250	2-WAY TO 3-WAY	*Call
2096<2086		4911<6260	2-WAY TO 3-WAY	*Call
2096<2086		4911<6270	2-WAY TO 3-WAY	*Call
2096<2086		4911<6310	3-WAY TO 3-WAY	*Call
2096<2086		4911<6320	3-WAY TO 3-WAY	*Call
2096<2086		4911<6330	3-WAY TO 3-WAY	*Call
2096<2086		4911<6340	3-WAY TO 3-WAY	*Call
2096<2086		4911<6350	3-WAY TO 3-WAY	*Call
2096<2086		4911<6360	3-WAY TO 3-WAY	*Call
2096<2086		4911<6370	3-WAY TO 3-WAY	*Call
2096<2086		4911<6410	4-WAY TO 3-WAY	*Call
2096<2086		4911<6420	4-WAY TO 3-WAY	*Call
2096<2086		4911<6430	4-WAY TO 3-WAY	*Call
2096<2086		4911<6440	4-WAY TO 3-WAY	*Call
2096<2086		4911<6450	4-WAY TO 3-WAY	*Call
2096<2086		4911<6460	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4911<6470	4-WAY TO 3-WAY	*Call
2096<2086		4913<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4913<6110	1-WAY TO 1-WAY	*Call
2096<2086		4913<6120	1-WAY TO 1-WAY	*Call
2096<2086		4913<6130	1-WAY TO 1-WAY	*Call
2096<2086		4913<6140	1-WAY TO 1-WAY	*Call
2096<2086		4913<6150	1-WAY TO 1-WAY	*Call
2096<2086		4913<6160	1-WAY TO 1-WAY	*Call
2096<2086		4913<6170	1-WAY TO 1-WAY	*Call
2096<2086		4913<6210	2-WAY TO 1-WAY	*Call
2096<2086		4913<6220	2-WAY TO 1-WAY	*Call
2096<2086		4913<6230	2-WAY TO 1-WAY	*Call
2096<2086		4913<6240	2-WAY TO 1-WAY	*Call
2096<2086		4913<6250	2-WAY TO 1-WAY	*Call
2096<2086		4913<6260	2-WAY TO 1-WAY	*Call
2096<2086		4913<6270	2-WAY TO 1-WAY	*Call
2096<2086		4913<6310	3-WAY TO 1-WAY	*Call
2096<2086		4913<6320	3-WAY TO 1-WAY	*Call
2096<2086		4913<6330	3-WAY TO 1-WAY	*Call
2096<2086		4913<6340	3-WAY TO 1-WAY	*Call
2096<2086		4913<6350	3-WAY TO 1-WAY	*Call
2096<2086		4913<6360	3-WAY TO 1-WAY	*Call
2096<2086		4913<6370	3-WAY TO 1-WAY	*Call
2096<2086		4913<6410	4-WAY TO 1-WAY	*Call
2096<2086		4913<6420	4-WAY TO 1-WAY	*Call
2096<2086		4913<6430	4-WAY TO 1-WAY	*Call
2096<2086		4913<6440	4-WAY TO 1-WAY	*Call
2096<2086		4913<6450	4-WAY TO 1-WAY	*Call
2096<2086		4913<6460	4-WAY TO 1-WAY	*Call
2096<2086		4913<6470	4-WAY TO 1-WAY	*Call
2096<2086		4914<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4914<6110	1-WAY TO 2-WAY	*Call
2096<2086		4914<6120	1-WAY TO 2-WAY	*Call
2096<2086		4914<6130	1-WAY TO 2-WAY	*Call
2096<2086		4914<6140	1-WAY TO 2-WAY	*Call
2096<2086		4914<6150	1-WAY TO 2-WAY	*Call
2096<2086		4914<6160	1-WAY TO 2-WAY	*Call
2096<2086		4914<6170	1-WAY TO 2-WAY	*Call
2096<2086		4914<6210	2-WAY TO 2-WAY	*Call
2096<2086		4914<6220	2-WAY TO 2-WAY	*Call
2096<2086		4914<6230	2-WAY TO 2-WAY	*Call
2096<2086		4914<6240	2-WAY TO 2-WAY	*Call
2096<2086		4914<6250	2-WAY TO 2-WAY	*Call
2096<2086		4914<6260	2-WAY TO 2-WAY	*Call
2096<2086		4914<6270	2-WAY TO 2-WAY	*Call
2096<2086		4914<6310	3-WAY TO 2-WAY	*Call
2096<2086		4914<6320	3-WAY TO 2-WAY	*Call
2096<2086		4914<6330	3-WAY TO 2-WAY	*Call
2096<2086		4914<6340	3-WAY TO 2-WAY	*Call
2096<2086		4914<6350	3-WAY TO 2-WAY	*Call
2096<2086		4914<6360	3-WAY TO 2-WAY	*Call
2096<2086		4914<6370	3-WAY TO 2-WAY	*Call
2096<2086		4914<6410	4-WAY TO 2-WAY	*Call
2096<2086		4914<6420	4-WAY TO 2-WAY	*Call
2096<2086		4914<6430	4-WAY TO 2-WAY	*Call
2096<2086		4914<6440	4-WAY TO 2-WAY	*Call
2096<2086		4914<6450	4-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4914<6460	4-WAY TO 2-WAY	*Call
2096<2086		4914<6470	4-WAY TO 2-WAY	*Call
2096<2086		4915<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4915<6110	1-WAY TO 3-WAY	*Call
2096<2086		4915<6120	1-WAY TO 3-WAY	*Call
2096<2086		4915<6130	1-WAY TO 3-WAY	*Call
2096<2086		4915<6140	1-WAY TO 3-WAY	*Call
2096<2086		4915<6150	1-WAY TO 3-WAY	*Call
2096<2086		4915<6160	1-WAY TO 3-WAY	*Call
2096<2086		4915<6170	1-WAY TO 3-WAY	*Call
2096<2086		4915<6210	2-WAY TO 3-WAY	*Call
2096<2086		4915<6220	2-WAY TO 3-WAY	*Call
2096<2086		4915<6230	2-WAY TO 3-WAY	*Call
2096<2086		4915<6240	2-WAY TO 3-WAY	*Call
2096<2086		4915<6250	2-WAY TO 3-WAY	*Call
2096<2086		4915<6260	2-WAY TO 3-WAY	*Call
2096<2086		4915<6270	2-WAY TO 3-WAY	*Call
2096<2086		4915<6310	3-WAY TO 3-WAY	*Call
2096<2086		4915<6320	3-WAY TO 3-WAY	*Call
2096<2086		4915<6330	3-WAY TO 3-WAY	*Call
2096<2086		4915<6340	3-WAY TO 3-WAY	*Call
2096<2086		4915<6350	3-WAY TO 3-WAY	*Call
2096<2086		4915<6360	3-WAY TO 3-WAY	*Call
2096<2086		4915<6370	3-WAY TO 3-WAY	*Call
2096<2086		4915<6410	4-WAY TO 3-WAY	*Call
2096<2086		4915<6420	4-WAY TO 3-WAY	*Call
2096<2086		4915<6430	4-WAY TO 3-WAY	*Call
2096<2086		4915<6440	4-WAY TO 3-WAY	*Call
2096<2086		4915<6450	4-WAY TO 3-WAY	*Call
2096<2086		4915<6460	4-WAY TO 3-WAY	*Call
2096<2086		4915<6470	4-WAY TO 3-WAY	*Call
2096<2086		4917<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4917<6110	1-WAY TO 1-WAY	*Call
2096<2086		4917<6120	1-WAY TO 1-WAY	*Call
2096<2086		4917<6130	1-WAY TO 1-WAY	*Call
2096<2086		4917<6140	1-WAY TO 1-WAY	*Call
2096<2086		4917<6150	1-WAY TO 1-WAY	*Call
2096<2086		4917<6160	1-WAY TO 1-WAY	*Call
2096<2086		4917<6170	1-WAY TO 1-WAY	*Call
2096<2086		4917<6210	2-WAY TO 1-WAY	*Call
2096<2086		4917<6220	2-WAY TO 1-WAY	*Call
2096<2086		4917<6230	2-WAY TO 1-WAY	*Call
2096<2086		4917<6240	2-WAY TO 1-WAY	*Call
2096<2086		4917<6250	2-WAY TO 1-WAY	*Call
2096<2086		4917<6260	2-WAY TO 1-WAY	*Call
2096<2086		4917<6270	2-WAY TO 1-WAY	*Call
2096<2086		4917<6310	3-WAY TO 1-WAY	*Call
2096<2086		4917<6320	3-WAY TO 1-WAY	*Call
2096<2086		4917<6330	3-WAY TO 1-WAY	*Call
2096<2086		4917<6340	3-WAY TO 1-WAY	*Call
2096<2086		4917<6350	3-WAY TO 1-WAY	*Call
2096<2086		4917<6360	3-WAY TO 1-WAY	*Call
2096<2086		4917<6370	3-WAY TO 1-WAY	*Call
2096<2086		4917<6410	4-WAY TO 1-WAY	*Call
2096<2086		4917<6420	4-WAY TO 1-WAY	*Call
2096<2086		4917<6430	4-WAY TO 1-WAY	*Call
2096<2086		4917<6440	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4917<6450	4-WAY TO 1-WAY	*Call
2096<2086		4917<6460	4-WAY TO 1-WAY	*Call
2096<2086		4917<6470	4-WAY TO 1-WAY	*Call
2096<2086		4918<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4918<6110	1-WAY TO 2-WAY	*Call
2096<2086		4918<6120	1-WAY TO 2-WAY	*Call
2096<2086		4918<6130	1-WAY TO 2-WAY	*Call
2096<2086		4918<6140	1-WAY TO 2-WAY	*Call
2096<2086		4918<6150	1-WAY TO 2-WAY	*Call
2096<2086		4918<6160	1-WAY TO 2-WAY	*Call
2096<2086		4918<6170	1-WAY TO 2-WAY	*Call
2096<2086		4918<6210	2-WAY TO 2-WAY	*Call
2096<2086		4918<6220	2-WAY TO 2-WAY	*Call
2096<2086		4918<6230	2-WAY TO 2-WAY	*Call
2096<2086		4918<6240	2-WAY TO 2-WAY	*Call
2096<2086		4918<6250	2-WAY TO 2-WAY	*Call
2096<2086		4918<6260	2-WAY TO 2-WAY	*Call
2096<2086		4918<6270	2-WAY TO 2-WAY	*Call
2096<2086		4918<6310	3-WAY TO 2-WAY	*Call
2096<2086		4918<6320	3-WAY TO 2-WAY	*Call
2096<2086		4918<6330	3-WAY TO 2-WAY	*Call
2096<2086		4918<6340	3-WAY TO 2-WAY	*Call
2096<2086		4918<6350	3-WAY TO 2-WAY	*Call
2096<2086		4918<6360	3-WAY TO 2-WAY	*Call
2096<2086		4918<6370	3-WAY TO 2-WAY	*Call
2096<2086		4918<6410	4-WAY TO 2-WAY	*Call
2096<2086		4918<6420	4-WAY TO 2-WAY	*Call
2096<2086		4918<6430	4-WAY TO 2-WAY	*Call
2096<2086		4918<6440	4-WAY TO 2-WAY	*Call
2096<2086		4918<6450	4-WAY TO 2-WAY	*Call
2096<2086		4918<6460	4-WAY TO 2-WAY	*Call
2096<2086		4918<6470	4-WAY TO 2-WAY	*Call
2096<2086		4921<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4921<6110	1-WAY TO 1-WAY	*Call
2096<2086		4921<6120	1-WAY TO 1-WAY	*Call
2096<2086		4921<6130	1-WAY TO 1-WAY	*Call
2096<2086		4921<6140	1-WAY TO 1-WAY	*Call
2096<2086		4921<6150	1-WAY TO 1-WAY	*Call
2096<2086		4921<6160	1-WAY TO 1-WAY	*Call
2096<2086		4921<6170	1-WAY TO 1-WAY	*Call
2096<2086		4921<6210	2-WAY TO 1-WAY	*Call
2096<2086		4921<6220	2-WAY TO 1-WAY	*Call
2096<2086		4921<6230	2-WAY TO 1-WAY	*Call
2096<2086		4921<6240	2-WAY TO 1-WAY	*Call
2096<2086		4921<6250	2-WAY TO 1-WAY	*Call
2096<2086		4921<6260	2-WAY TO 1-WAY	*Call
2096<2086		4921<6270	2-WAY TO 1-WAY	*Call
2096<2086		4921<6310	3-WAY TO 1-WAY	*Call
2096<2086		4921<6320	3-WAY TO 1-WAY	*Call
2096<2086		4921<6330	3-WAY TO 1-WAY	*Call
2096<2086		4921<6340	3-WAY TO 1-WAY	*Call
2096<2086		4921<6350	3-WAY TO 1-WAY	*Call
2096<2086		4921<6360	3-WAY TO 1-WAY	*Call
2096<2086		4921<6370	3-WAY TO 1-WAY	*Call
2096<2086		4921<6410	4-WAY TO 1-WAY	*Call
2096<2086		4921<6420	4-WAY TO 1-WAY	*Call
2096<2086		4921<6430	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4921<6440	4-WAY TO 1-WAY	*Call
2096<2086		4921<6450	4-WAY TO 1-WAY	*Call
2096<2086		4921<6460	4-WAY TO 1-WAY	*Call
2096<2086		4921<6470	4-WAY TO 1-WAY	*Call
2096<2086		4922<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4922<6110	1-WAY TO 2-WAY	*Call
2096<2086		4922<6120	1-WAY TO 2-WAY	*Call
2096<2086		4922<6130	1-WAY TO 2-WAY	*Call
2096<2086		4922<6140	1-WAY TO 2-WAY	*Call
2096<2086		4922<6150	1-WAY TO 2-WAY	*Call
2096<2086		4922<6160	1-WAY TO 2-WAY	*Call
2096<2086		4922<6170	1-WAY TO 2-WAY	*Call
2096<2086		4922<6210	2-WAY TO 2-WAY	*Call
2096<2086		4922<6220	2-WAY TO 2-WAY	*Call
2096<2086		4922<6230	2-WAY TO 2-WAY	*Call
2096<2086		4922<6240	2-WAY TO 2-WAY	*Call
2096<2086		4922<6250	2-WAY TO 2-WAY	*Call
2096<2086		4922<6260	2-WAY TO 2-WAY	*Call
2096<2086		4922<6270	2-WAY TO 2-WAY	*Call
2096<2086		4922<6310	3-WAY TO 2-WAY	*Call
2096<2086		4922<6320	3-WAY TO 2-WAY	*Call
2096<2086		4922<6330	3-WAY TO 2-WAY	*Call
2096<2086		4922<6340	3-WAY TO 2-WAY	*Call
2096<2086		4922<6350	3-WAY TO 2-WAY	*Call
2096<2086		4922<6360	3-WAY TO 2-WAY	*Call
2096<2086		4922<6370	3-WAY TO 2-WAY	*Call
2096<2086		4922<6410	4-WAY TO 2-WAY	*Call
2096<2086		4922<6420	4-WAY TO 2-WAY	*Call
2096<2086		4922<6430	4-WAY TO 2-WAY	*Call
2096<2086		4922<6440	4-WAY TO 2-WAY	*Call
2096<2086		4922<6450	4-WAY TO 2-WAY	*Call
2096<2086		4922<6460	4-WAY TO 2-WAY	*Call
2096<2086		4922<6470	4-WAY TO 2-WAY	*Call
2096<2086		4925<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4925<6110	1-WAY TO 1-WAY	*Call
2096<2086		4925<6120	1-WAY TO 1-WAY	*Call
2096<2086		4925<6130	1-WAY TO 1-WAY	*Call
2096<2086		4925<6140	1-WAY TO 1-WAY	*Call
2096<2086		4925<6150	1-WAY TO 1-WAY	*Call
2096<2086		4925<6160	1-WAY TO 1-WAY	*Call
2096<2086		4925<6170	1-WAY TO 1-WAY	*Call
2096<2086		4925<6210	2-WAY TO 1-WAY	*Call
2096<2086		4925<6220	2-WAY TO 1-WAY	*Call
2096<2086		4925<6230	2-WAY TO 1-WAY	*Call
2096<2086		4925<6240	2-WAY TO 1-WAY	*Call
2096<2086		4925<6250	2-WAY TO 1-WAY	*Call
2096<2086		4925<6260	2-WAY TO 1-WAY	*Call
2096<2086		4925<6270	2-WAY TO 1-WAY	*Call
2096<2086		4925<6310	3-WAY TO 1-WAY	*Call
2096<2086		4925<6320	3-WAY TO 1-WAY	*Call
2096<2086		4925<6330	3-WAY TO 1-WAY	*Call
2096<2086		4925<6340	3-WAY TO 1-WAY	*Call
2096<2086		4925<6350	3-WAY TO 1-WAY	*Call
2096<2086		4925<6360	3-WAY TO 1-WAY	*Call
2096<2086		4925<6370	3-WAY TO 1-WAY	*Call
2096<2086		4925<6410	4-WAY TO 1-WAY	*Call
2096<2086		4925<6420	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4925<6430	4-WAY TO 1-WAY	*Call
2096<2086		4925<6440	4-WAY TO 1-WAY	*Call
2096<2086		4925<6450	4-WAY TO 1-WAY	*Call
2096<2086		4925<6460	4-WAY TO 1-WAY	*Call
2096<2086		4925<6470	4-WAY TO 1-WAY	*Call
2096<2086		4929<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4929<6110	1-WAY TO 1-WAY	*Call
2096<2086		4929<6120	1-WAY TO 1-WAY	*Call
2096<2086		4929<6130	1-WAY TO 1-WAY	*Call
2096<2086		4929<6140	1-WAY TO 1-WAY	*Call
2096<2086		4929<6150	1-WAY TO 1-WAY	*Call
2096<2086		4929<6160	1-WAY TO 1-WAY	*Call
2096<2086		4929<6170	1-WAY TO 1-WAY	*Call
2096<2086		4929<6210	2-WAY TO 1-WAY	*Call
2096<2086		4929<6220	2-WAY TO 1-WAY	*Call
2096<2086		4929<6230	2-WAY TO 1-WAY	*Call
2096<2086		4929<6240	2-WAY TO 1-WAY	*Call
2096<2086		4929<6250	2-WAY TO 1-WAY	*Call
2096<2086		4929<6260	2-WAY TO 1-WAY	*Call
2096<2086		4929<6270	2-WAY TO 1-WAY	*Call
2096<2086		4929<6310	3-WAY TO 1-WAY	*Call
2096<2086		4929<6320	3-WAY TO 1-WAY	*Call
2096<2086		4929<6330	3-WAY TO 1-WAY	*Call
2096<2086		4929<6340	3-WAY TO 1-WAY	*Call
2096<2086		4929<6350	3-WAY TO 1-WAY	*Call
2096<2086		4929<6360	3-WAY TO 1-WAY	*Call
2096<2086		4929<6370	3-WAY TO 1-WAY	*Call
2096<2086		4929<6410	4-WAY TO 1-WAY	*Call
2096<2086		4929<6420	4-WAY TO 1-WAY	*Call
2096<2086		4929<6430	4-WAY TO 1-WAY	*Call
2096<2086		4929<6440	4-WAY TO 1-WAY	*Call
2096<2086		4929<6450	4-WAY TO 1-WAY	*Call
2096<2086		4929<6460	4-WAY TO 1-WAY	*Call
2096<2086		4929<6470	4-WAY TO 1-WAY	*Call
2096<2086		4933<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4933<6110	1-WAY TO 1-WAY	*Call
2096<2086		4933<6120	1-WAY TO 1-WAY	*Call
2096<2086		4933<6130	1-WAY TO 1-WAY	*Call
2096<2086		4933<6140	1-WAY TO 1-WAY	*Call
2096<2086		4933<6150	1-WAY TO 1-WAY	*Call
2096<2086		4933<6160	1-WAY TO 1-WAY	*Call
2096<2086		4933<6170	1-WAY TO 1-WAY	*Call
2096<2086		4933<6210	2-WAY TO 1-WAY	*Call
2096<2086		4933<6220	2-WAY TO 1-WAY	*Call
2096<2086		4933<6230	2-WAY TO 1-WAY	*Call
2096<2086		4933<6240	2-WAY TO 1-WAY	*Call
2096<2086		4933<6250	2-WAY TO 1-WAY	*Call
2096<2086		4933<6260	2-WAY TO 1-WAY	*Call
2096<2086		4933<6270	2-WAY TO 1-WAY	*Call
2096<2086		4933<6310	3-WAY TO 1-WAY	*Call
2096<2086		4933<6320	3-WAY TO 1-WAY	*Call
2096<2086		4933<6330	3-WAY TO 1-WAY	*Call
2096<2086		4933<6340	3-WAY TO 1-WAY	*Call
2096<2086		4933<6350	3-WAY TO 1-WAY	*Call
2096<2086		4933<6360	3-WAY TO 1-WAY	*Call
2096<2086		4933<6370	3-WAY TO 1-WAY	*Call
2096<2086		4933<6410	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4933<6420	4-WAY TO 1-WAY	*Call
2096<2086		4933<6430	4-WAY TO 1-WAY	*Call
2096<2086		4933<6440	4-WAY TO 1-WAY	*Call
2096<2086		4933<6450	4-WAY TO 1-WAY	*Call
2096<2086		4933<6460	4-WAY TO 1-WAY	*Call
2096<2086		4933<6470	4-WAY TO 1-WAY	*Call
2096<2086		4937<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4937<6110	1-WAY TO 1-WAY	*Call
2096<2086		4937<6120	1-WAY TO 1-WAY	*Call
2096<2086		4937<6130	1-WAY TO 1-WAY	*Call
2096<2086		4937<6140	1-WAY TO 1-WAY	*Call
2096<2086		4937<6150	1-WAY TO 1-WAY	*Call
2096<2086		4937<6160	1-WAY TO 1-WAY	*Call
2096<2086		4937<6170	1-WAY TO 1-WAY	*Call
2096<2086		4937<6210	2-WAY TO 1-WAY	*Call
2096<2086		4937<6220	2-WAY TO 1-WAY	*Call
2096<2086		4937<6230	2-WAY TO 1-WAY	*Call
2096<2086		4937<6240	2-WAY TO 1-WAY	*Call
2096<2086		4937<6250	2-WAY TO 1-WAY	*Call
2096<2086		4937<6260	2-WAY TO 1-WAY	*Call
2096<2086		4937<6270	2-WAY TO 1-WAY	*Call
2096<2086		4937<6310	3-WAY TO 1-WAY	*Call
2096<2086		4937<6320	3-WAY TO 1-WAY	*Call
2096<2086		4937<6330	3-WAY TO 1-WAY	*Call
2096<2086		4937<6340	3-WAY TO 1-WAY	*Call
2096<2086		4937<6350	3-WAY TO 1-WAY	*Call
2096<2086		4937<6360	3-WAY TO 1-WAY	*Call
2096<2086		4937<6370	3-WAY TO 1-WAY	*Call
2096<2086		4937<6410	4-WAY TO 1-WAY	*Call
2096<2086		4937<6420	4-WAY TO 1-WAY	*Call
2096<2086		4937<6430	4-WAY TO 1-WAY	*Call
2096<2086		4937<6440	4-WAY TO 1-WAY	*Call
2096<2086		4937<6450	4-WAY TO 1-WAY	*Call
2096<2086		4937<6460	4-WAY TO 1-WAY	*Call
2096<2086		4937<6470	4-WAY TO 1-WAY	*Call
2096<2086		4944<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4944<6110	1-WAY TO 4-WAY	*Call
2096<2086		4944<6120	1-WAY TO 4-WAY	*Call
2096<2086		4944<6130	1-WAY TO 4-WAY	*Call
2096<2086		4944<6140	1-WAY TO 4-WAY	*Call
2096<2086		4944<6150	1-WAY TO 4-WAY	*Call
2096<2086		4944<6160	1-WAY TO 4-WAY	*Call
2096<2086		4944<6170	1-WAY TO 4-WAY	*Call
2096<2086		4944<6210	2-WAY TO 4-WAY	*Call
2096<2086		4944<6220	2-WAY TO 4-WAY	*Call
2096<2086		4944<6230	2-WAY TO 4-WAY	*Call
2096<2086		4944<6240	2-WAY TO 4-WAY	*Call
2096<2086		4944<6250	2-WAY TO 4-WAY	*Call
2096<2086		4944<6260	2-WAY TO 4-WAY	*Call
2096<2086		4944<6270	2-WAY TO 4-WAY	*Call
2096<2086		4944<6310	3-WAY TO 4-WAY	*Call
2096<2086		4944<6320	3-WAY TO 4-WAY	*Call
2096<2086		4944<6330	3-WAY TO 4-WAY	*Call
2096<2086		4944<6340	3-WAY TO 4-WAY	*Call
2096<2086		4944<6350	3-WAY TO 4-WAY	*Call
2096<2086		4944<6360	3-WAY TO 4-WAY	*Call
2096<2086		4944<6370	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4944<6410	4-WAY TO 4-WAY	*Call
2096<2086		4944<6420	4-WAY TO 4-WAY	*Call
2096<2086		4944<6430	4-WAY TO 4-WAY	*Call
2096<2086		4944<6440	4-WAY TO 4-WAY	*Call
2096<2086		4944<6450	4-WAY TO 4-WAY	*Call
2096<2086		4944<6460	4-WAY TO 4-WAY	*Call
2096<2086		4944<6470	4-WAY TO 4-WAY	*Call
2096<2086		4947<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4947<6110	1-WAY TO 3-WAY	*Call
2096<2086		4947<6120	1-WAY TO 3-WAY	*Call
2096<2086		4947<6130	1-WAY TO 3-WAY	*Call
2096<2086		4947<6140	1-WAY TO 3-WAY	*Call
2096<2086		4947<6150	1-WAY TO 3-WAY	*Call
2096<2086		4947<6160	1-WAY TO 3-WAY	*Call
2096<2086		4947<6170	1-WAY TO 3-WAY	*Call
2096<2086		4947<6210	2-WAY TO 3-WAY	*Call
2096<2086		4947<6220	2-WAY TO 3-WAY	*Call
2096<2086		4947<6230	2-WAY TO 3-WAY	*Call
2096<2086		4947<6240	2-WAY TO 3-WAY	*Call
2096<2086		4947<6250	2-WAY TO 3-WAY	*Call
2096<2086		4947<6260	2-WAY TO 3-WAY	*Call
2096<2086		4947<6270	2-WAY TO 3-WAY	*Call
2096<2086		4947<6310	3-WAY TO 3-WAY	*Call
2096<2086		4947<6320	3-WAY TO 3-WAY	*Call
2096<2086		4947<6330	3-WAY TO 3-WAY	*Call
2096<2086		4947<6340	3-WAY TO 3-WAY	*Call
2096<2086		4947<6350	3-WAY TO 3-WAY	*Call
2096<2086		4947<6360	3-WAY TO 3-WAY	*Call
2096<2086		4947<6370	3-WAY TO 3-WAY	*Call
2096<2086		4947<6410	4-WAY TO 3-WAY	*Call
2096<2086		4947<6420	4-WAY TO 3-WAY	*Call
2096<2086		4947<6430	4-WAY TO 3-WAY	*Call
2096<2086		4947<6440	4-WAY TO 3-WAY	*Call
2096<2086		4947<6450	4-WAY TO 3-WAY	*Call
2096<2086		4947<6460	4-WAY TO 3-WAY	*Call
2096<2086		4947<6470	4-WAY TO 3-WAY	*Call
2096<2086		4948<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4948<6110	1-WAY TO 4-WAY	*Call
2096<2086		4948<6120	1-WAY TO 4-WAY	*Call
2096<2086		4948<6130	1-WAY TO 4-WAY	*Call
2096<2086		4948<6140	1-WAY TO 4-WAY	*Call
2096<2086		4948<6150	1-WAY TO 4-WAY	*Call
2096<2086		4948<6160	1-WAY TO 4-WAY	*Call
2096<2086		4948<6170	1-WAY TO 4-WAY	*Call
2096<2086		4948<6210	2-WAY TO 4-WAY	*Call
2096<2086		4948<6220	2-WAY TO 4-WAY	*Call
2096<2086		4948<6230	2-WAY TO 4-WAY	*Call
2096<2086		4948<6240	2-WAY TO 4-WAY	*Call
2096<2086		4948<6250	2-WAY TO 4-WAY	*Call
2096<2086		4948<6260	2-WAY TO 4-WAY	*Call
2096<2086		4948<6270	2-WAY TO 4-WAY	*Call
2096<2086		4948<6310	3-WAY TO 4-WAY	*Call
2096<2086		4948<6320	3-WAY TO 4-WAY	*Call
2096<2086		4948<6330	3-WAY TO 4-WAY	*Call
2096<2086		4948<6340	3-WAY TO 4-WAY	*Call
2096<2086		4948<6350	3-WAY TO 4-WAY	*Call
2096<2086		4948<6360	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4948<6370	3-WAY TO 4-WAY	*Call
2096<2086		4948<6410	4-WAY TO 4-WAY	*Call
2096<2086		4948<6420	4-WAY TO 4-WAY	*Call
2096<2086		4948<6430	4-WAY TO 4-WAY	*Call
2096<2086		4948<6440	4-WAY TO 4-WAY	*Call
2096<2086		4948<6450	4-WAY TO 4-WAY	*Call
2096<2086		4948<6460	4-WAY TO 4-WAY	*Call
2096<2086		4948<6470	4-WAY TO 4-WAY	*Call
2096<2086		4951<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4951<6110	1-WAY TO 3-WAY	*Call
2096<2086		4951<6120	1-WAY TO 3-WAY	*Call
2096<2086		4951<6130	1-WAY TO 3-WAY	*Call
2096<2086		4951<6140	1-WAY TO 3-WAY	*Call
2096<2086		4951<6150	1-WAY TO 3-WAY	*Call
2096<2086		4951<6160	1-WAY TO 3-WAY	*Call
2096<2086		4951<6170	1-WAY TO 3-WAY	*Call
2096<2086		4951<6210	2-WAY TO 3-WAY	*Call
2096<2086		4951<6220	2-WAY TO 3-WAY	*Call
2096<2086		4951<6230	2-WAY TO 3-WAY	*Call
2096<2086		4951<6240	2-WAY TO 3-WAY	*Call
2096<2086		4951<6250	2-WAY TO 3-WAY	*Call
2096<2086		4951<6260	2-WAY TO 3-WAY	*Call
2096<2086		4951<6270	2-WAY TO 3-WAY	*Call
2096<2086		4951<6310	3-WAY TO 3-WAY	*Call
2096<2086		4951<6320	3-WAY TO 3-WAY	*Call
2096<2086		4951<6330	3-WAY TO 3-WAY	*Call
2096<2086		4951<6340	3-WAY TO 3-WAY	*Call
2096<2086		4951<6350	3-WAY TO 3-WAY	*Call
2096<2086		4951<6360	3-WAY TO 3-WAY	*Call
2096<2086		4951<6370	3-WAY TO 3-WAY	*Call
2096<2086		4951<6410	4-WAY TO 3-WAY	*Call
2096<2086		4951<6420	4-WAY TO 3-WAY	*Call
2096<2086		4951<6430	4-WAY TO 3-WAY	*Call
2096<2086		4951<6440	4-WAY TO 3-WAY	*Call
2096<2086		4951<6450	4-WAY TO 3-WAY	*Call
2096<2086		4951<6460	4-WAY TO 3-WAY	*Call
2096<2086		4951<6470	4-WAY TO 3-WAY	*Call
2096<2086		4952<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4952<6110	1-WAY TO 4-WAY	*Call
2096<2086		4952<6120	1-WAY TO 4-WAY	*Call
2096<2086		4952<6130	1-WAY TO 4-WAY	*Call
2096<2086		4952<6140	1-WAY TO 4-WAY	*Call
2096<2086		4952<6150	1-WAY TO 4-WAY	*Call
2096<2086		4952<6160	1-WAY TO 4-WAY	*Call
2096<2086		4952<6170	1-WAY TO 4-WAY	*Call
2096<2086		4952<6210	2-WAY TO 4-WAY	*Call
2096<2086		4952<6220	2-WAY TO 4-WAY	*Call
2096<2086		4952<6230	2-WAY TO 4-WAY	*Call
2096<2086		4952<6240	2-WAY TO 4-WAY	*Call
2096<2086		4952<6250	2-WAY TO 4-WAY	*Call
2096<2086		4952<6260	2-WAY TO 4-WAY	*Call
2096<2086		4952<6270	2-WAY TO 4-WAY	*Call
2096<2086		4952<6310	3-WAY TO 4-WAY	*Call
2096<2086		4952<6320	3-WAY TO 4-WAY	*Call
2096<2086		4952<6330	3-WAY TO 4-WAY	*Call
2096<2086		4952<6340	3-WAY TO 4-WAY	*Call
2096<2086		4952<6350	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4952<6360	3-WAY TO 4-WAY	*Call
2096<2086		4952<6370	3-WAY TO 4-WAY	*Call
2096<2086		4952<6410	4-WAY TO 4-WAY	*Call
2096<2086		4952<6420	4-WAY TO 4-WAY	*Call
2096<2086		4952<6430	4-WAY TO 4-WAY	*Call
2096<2086		4952<6440	4-WAY TO 4-WAY	*Call
2096<2086		4952<6450	4-WAY TO 4-WAY	*Call
2096<2086		4952<6460	4-WAY TO 4-WAY	*Call
2096<2086		4952<6470	4-WAY TO 4-WAY	*Call
2096<2086		4954<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4954<6110	1-WAY TO 2-WAY	*Call
2096<2086		4954<6120	1-WAY TO 2-WAY	*Call
2096<2086		4954<6130	1-WAY TO 2-WAY	*Call
2096<2086		4954<6140	1-WAY TO 2-WAY	*Call
2096<2086		4954<6150	1-WAY TO 2-WAY	*Call
2096<2086		4954<6160	1-WAY TO 2-WAY	*Call
2096<2086		4954<6170	1-WAY TO 2-WAY	*Call
2096<2086		4954<6210	2-WAY TO 2-WAY	*Call
2096<2086		4954<6220	2-WAY TO 2-WAY	*Call
2096<2086		4954<6230	2-WAY TO 2-WAY	*Call
2096<2086		4954<6240	2-WAY TO 2-WAY	*Call
2096<2086		4954<6250	2-WAY TO 2-WAY	*Call
2096<2086		4954<6260	2-WAY TO 2-WAY	*Call
2096<2086		4954<6270	2-WAY TO 2-WAY	*Call
2096<2086		4954<6310	3-WAY TO 2-WAY	*Call
2096<2086		4954<6320	3-WAY TO 2-WAY	*Call
2096<2086		4954<6330	3-WAY TO 2-WAY	*Call
2096<2086		4954<6340	3-WAY TO 2-WAY	*Call
2096<2086		4954<6350	3-WAY TO 2-WAY	*Call
2096<2086		4954<6360	3-WAY TO 2-WAY	*Call
2096<2086		4954<6370	3-WAY TO 2-WAY	*Call
2096<2086		4954<6410	4-WAY TO 2-WAY	*Call
2096<2086		4954<6420	4-WAY TO 2-WAY	*Call
2096<2086		4954<6430	4-WAY TO 2-WAY	*Call
2096<2086		4954<6440	4-WAY TO 2-WAY	*Call
2096<2086		4954<6450	4-WAY TO 2-WAY	*Call
2096<2086		4954<6460	4-WAY TO 2-WAY	*Call
2096<2086		4954<6470	4-WAY TO 2-WAY	*Call
2096<2086		4955<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4955<6110	1-WAY TO 3-WAY	*Call
2096<2086		4955<6120	1-WAY TO 3-WAY	*Call
2096<2086		4955<6130	1-WAY TO 3-WAY	*Call
2096<2086		4955<6140	1-WAY TO 3-WAY	*Call
2096<2086		4955<6150	1-WAY TO 3-WAY	*Call
2096<2086		4955<6160	1-WAY TO 3-WAY	*Call
2096<2086		4955<6170	1-WAY TO 3-WAY	*Call
2096<2086		4955<6210	2-WAY TO 3-WAY	*Call
2096<2086		4955<6220	2-WAY TO 3-WAY	*Call
2096<2086		4955<6230	2-WAY TO 3-WAY	*Call
2096<2086		4955<6240	2-WAY TO 3-WAY	*Call
2096<2086		4955<6250	2-WAY TO 3-WAY	*Call
2096<2086		4955<6260	2-WAY TO 3-WAY	*Call
2096<2086		4955<6270	2-WAY TO 3-WAY	*Call
2096<2086		4955<6310	3-WAY TO 3-WAY	*Call
2096<2086		4955<6320	3-WAY TO 3-WAY	*Call
2096<2086		4955<6330	3-WAY TO 3-WAY	*Call
2096<2086		4955<6340	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4955<6350	3-WAY TO 3-WAY	*Call
2096<2086		4955<6360	3-WAY TO 3-WAY	*Call
2096<2086		4955<6370	3-WAY TO 3-WAY	*Call
2096<2086		4955<6410	4-WAY TO 3-WAY	*Call
2096<2086		4955<6420	4-WAY TO 3-WAY	*Call
2096<2086		4955<6430	4-WAY TO 3-WAY	*Call
2096<2086		4955<6440	4-WAY TO 3-WAY	*Call
2096<2086		4955<6450	4-WAY TO 3-WAY	*Call
2096<2086		4955<6460	4-WAY TO 3-WAY	*Call
2096<2086		4955<6470	4-WAY TO 3-WAY	*Call
2096<2086		4956<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4956<6110	1-WAY TO 4-WAY	*Call
2096<2086		4956<6120	1-WAY TO 4-WAY	*Call
2096<2086		4956<6130	1-WAY TO 4-WAY	*Call
2096<2086		4956<6140	1-WAY TO 4-WAY	*Call
2096<2086		4956<6150	1-WAY TO 4-WAY	*Call
2096<2086		4956<6160	1-WAY TO 4-WAY	*Call
2096<2086		4956<6170	1-WAY TO 4-WAY	*Call
2096<2086		4956<6210	2-WAY TO 4-WAY	*Call
2096<2086		4956<6220	2-WAY TO 4-WAY	*Call
2096<2086		4956<6230	2-WAY TO 4-WAY	*Call
2096<2086		4956<6240	2-WAY TO 4-WAY	*Call
2096<2086		4956<6250	2-WAY TO 4-WAY	*Call
2096<2086		4956<6260	2-WAY TO 4-WAY	*Call
2096<2086		4956<6270	2-WAY TO 4-WAY	*Call
2096<2086		4956<6310	3-WAY TO 4-WAY	*Call
2096<2086		4956<6320	3-WAY TO 4-WAY	*Call
2096<2086		4956<6330	3-WAY TO 4-WAY	*Call
2096<2086		4956<6340	3-WAY TO 4-WAY	*Call
2096<2086		4956<6350	3-WAY TO 4-WAY	*Call
2096<2086		4956<6360	3-WAY TO 4-WAY	*Call
2096<2086		4956<6370	3-WAY TO 4-WAY	*Call
2096<2086		4956<6410	4-WAY TO 4-WAY	*Call
2096<2086		4956<6420	4-WAY TO 4-WAY	*Call
2096<2086		4956<6430	4-WAY TO 4-WAY	*Call
2096<2086		4956<6440	4-WAY TO 4-WAY	*Call
2096<2086		4956<6450	4-WAY TO 4-WAY	*Call
2096<2086		4956<6460	4-WAY TO 4-WAY	*Call
2096<2086		4956<6470	4-WAY TO 4-WAY	*Call
2096<2086		4958<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4958<6110	1-WAY TO 2-WAY	*Call
2096<2086		4958<6120	1-WAY TO 2-WAY	*Call
2096<2086		4958<6130	1-WAY TO 2-WAY	*Call
2096<2086		4958<6140	1-WAY TO 2-WAY	*Call
2096<2086		4958<6150	1-WAY TO 2-WAY	*Call
2096<2086		4958<6160	1-WAY TO 2-WAY	*Call
2096<2086		4958<6170	1-WAY TO 2-WAY	*Call
2096<2086		4958<6210	2-WAY TO 2-WAY	*Call
2096<2086		4958<6220	2-WAY TO 2-WAY	*Call
2096<2086		4958<6230	2-WAY TO 2-WAY	*Call
2096<2086		4958<6240	2-WAY TO 2-WAY	*Call
2096<2086		4958<6250	2-WAY TO 2-WAY	*Call
2096<2086		4958<6260	2-WAY TO 2-WAY	*Call
2096<2086		4958<6270	2-WAY TO 2-WAY	*Call
2096<2086		4958<6310	3-WAY TO 2-WAY	*Call
2096<2086		4958<6320	3-WAY TO 2-WAY	*Call
2096<2086		4958<6330	3-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4958<6340	3-WAY TO 2-WAY	*Call
2096<2086		4958<6350	3-WAY TO 2-WAY	*Call
2096<2086		4958<6360	3-WAY TO 2-WAY	*Call
2096<2086		4958<6370	3-WAY TO 2-WAY	*Call
2096<2086		4958<6410	4-WAY TO 2-WAY	*Call
2096<2086		4958<6420	4-WAY TO 2-WAY	*Call
2096<2086		4958<6430	4-WAY TO 2-WAY	*Call
2096<2086		4958<6440	4-WAY TO 2-WAY	*Call
2096<2086		4958<6450	4-WAY TO 2-WAY	*Call
2096<2086		4958<6460	4-WAY TO 2-WAY	*Call
2096<2086		4958<6470	4-WAY TO 2-WAY	*Call
2096<2086		4959<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4959<6110	1-WAY TO 3-WAY	*Call
2096<2086		4959<6120	1-WAY TO 3-WAY	*Call
2096<2086		4959<6130	1-WAY TO 3-WAY	*Call
2096<2086		4959<6140	1-WAY TO 3-WAY	*Call
2096<2086		4959<6150	1-WAY TO 3-WAY	*Call
2096<2086		4959<6160	1-WAY TO 3-WAY	*Call
2096<2086		4959<6170	1-WAY TO 3-WAY	*Call
2096<2086		4959<6210	2-WAY TO 3-WAY	*Call
2096<2086		4959<6220	2-WAY TO 3-WAY	*Call
2096<2086		4959<6230	2-WAY TO 3-WAY	*Call
2096<2086		4959<6240	2-WAY TO 3-WAY	*Call
2096<2086		4959<6250	2-WAY TO 3-WAY	*Call
2096<2086		4959<6260	2-WAY TO 3-WAY	*Call
2096<2086		4959<6270	2-WAY TO 3-WAY	*Call
2096<2086		4959<6310	3-WAY TO 3-WAY	*Call
2096<2086		4959<6320	3-WAY TO 3-WAY	*Call
2096<2086		4959<6330	3-WAY TO 3-WAY	*Call
2096<2086		4959<6340	3-WAY TO 3-WAY	*Call
2096<2086		4959<6350	3-WAY TO 3-WAY	*Call
2096<2086		4959<6360	3-WAY TO 3-WAY	*Call
2096<2086		4959<6370	3-WAY TO 3-WAY	*Call
2096<2086		4959<6410	4-WAY TO 3-WAY	*Call
2096<2086		4959<6420	4-WAY TO 3-WAY	*Call
2096<2086		4959<6430	4-WAY TO 3-WAY	*Call
2096<2086		4959<6440	4-WAY TO 3-WAY	*Call
2096<2086		4959<6450	4-WAY TO 3-WAY	*Call
2096<2086		4959<6460	4-WAY TO 3-WAY	*Call
2096<2086		4959<6470	4-WAY TO 3-WAY	*Call
2096<2086		4960<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4960<6110	1-WAY TO 4-WAY	*Call
2096<2086		4960<6120	1-WAY TO 4-WAY	*Call
2096<2086		4960<6130	1-WAY TO 4-WAY	*Call
2096<2086		4960<6140	1-WAY TO 4-WAY	*Call
2096<2086		4960<6150	1-WAY TO 4-WAY	*Call
2096<2086		4960<6160	1-WAY TO 4-WAY	*Call
2096<2086		4960<6170	1-WAY TO 4-WAY	*Call
2096<2086		4960<6210	2-WAY TO 4-WAY	*Call
2096<2086		4960<6220	2-WAY TO 4-WAY	*Call
2096<2086		4960<6230	2-WAY TO 4-WAY	*Call
2096<2086		4960<6240	2-WAY TO 4-WAY	*Call
2096<2086		4960<6250	2-WAY TO 4-WAY	*Call
2096<2086		4960<6260	2-WAY TO 4-WAY	*Call
2096<2086		4960<6270	2-WAY TO 4-WAY	*Call
2096<2086		4960<6310	3-WAY TO 4-WAY	*Call
2096<2086		4960<6320	3-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4960<6330	3-WAY TO 4-WAY	*Call
2096<2086		4960<6340	3-WAY TO 4-WAY	*Call
2096<2086		4960<6350	3-WAY TO 4-WAY	*Call
2096<2086		4960<6360	3-WAY TO 4-WAY	*Call
2096<2086		4960<6370	3-WAY TO 4-WAY	*Call
2096<2086		4960<6410	4-WAY TO 4-WAY	*Call
2096<2086		4960<6420	4-WAY TO 4-WAY	*Call
2096<2086		4960<6430	4-WAY TO 4-WAY	*Call
2096<2086		4960<6440	4-WAY TO 4-WAY	*Call
2096<2086		4960<6450	4-WAY TO 4-WAY	*Call
2096<2086		4960<6460	4-WAY TO 4-WAY	*Call
2096<2086		4960<6470	4-WAY TO 4-WAY	*Call
2096<2086		4962<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4962<6110	1-WAY TO 2-WAY	*Call
2096<2086		4962<6120	1-WAY TO 2-WAY	*Call
2096<2086		4962<6130	1-WAY TO 2-WAY	*Call
2096<2086		4962<6140	1-WAY TO 2-WAY	*Call
2096<2086		4962<6150	1-WAY TO 2-WAY	*Call
2096<2086		4962<6160	1-WAY TO 2-WAY	*Call
2096<2086		4962<6170	1-WAY TO 2-WAY	*Call
2096<2086		4962<6210	2-WAY TO 2-WAY	*Call
2096<2086		4962<6220	2-WAY TO 2-WAY	*Call
2096<2086		4962<6230	2-WAY TO 2-WAY	*Call
2096<2086		4962<6240	2-WAY TO 2-WAY	*Call
2096<2086		4962<6250	2-WAY TO 2-WAY	*Call
2096<2086		4962<6260	2-WAY TO 2-WAY	*Call
2096<2086		4962<6270	2-WAY TO 2-WAY	*Call
2096<2086		4962<6310	3-WAY TO 2-WAY	*Call
2096<2086		4962<6320	3-WAY TO 2-WAY	*Call
2096<2086		4962<6330	3-WAY TO 2-WAY	*Call
2096<2086		4962<6340	3-WAY TO 2-WAY	*Call
2096<2086		4962<6350	3-WAY TO 2-WAY	*Call
2096<2086		4962<6360	3-WAY TO 2-WAY	*Call
2096<2086		4962<6370	3-WAY TO 2-WAY	*Call
2096<2086		4962<6410	4-WAY TO 2-WAY	*Call
2096<2086		4962<6420	4-WAY TO 2-WAY	*Call
2096<2086		4962<6430	4-WAY TO 2-WAY	*Call
2096<2086		4962<6440	4-WAY TO 2-WAY	*Call
2096<2086		4962<6450	4-WAY TO 2-WAY	*Call
2096<2086		4962<6460	4-WAY TO 2-WAY	*Call
2096<2086		4962<6470	4-WAY TO 2-WAY	*Call
2096<2086		4963<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4963<6110	1-WAY TO 3-WAY	*Call
2096<2086		4963<6120	1-WAY TO 3-WAY	*Call
2096<2086		4963<6130	1-WAY TO 3-WAY	*Call
2096<2086		4963<6140	1-WAY TO 3-WAY	*Call
2096<2086		4963<6150	1-WAY TO 3-WAY	*Call
2096<2086		4963<6160	1-WAY TO 3-WAY	*Call
2096<2086		4963<6170	1-WAY TO 3-WAY	*Call
2096<2086		4963<6210	2-WAY TO 3-WAY	*Call
2096<2086		4963<6220	2-WAY TO 3-WAY	*Call
2096<2086		4963<6230	2-WAY TO 3-WAY	*Call
2096<2086		4963<6240	2-WAY TO 3-WAY	*Call
2096<2086		4963<6250	2-WAY TO 3-WAY	*Call
2096<2086		4963<6260	2-WAY TO 3-WAY	*Call
2096<2086		4963<6270	2-WAY TO 3-WAY	*Call
2096<2086		4963<6310	3-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4963<6320	3-WAY TO 3-WAY	*Call
2096<2086		4963<6330	3-WAY TO 3-WAY	*Call
2096<2086		4963<6340	3-WAY TO 3-WAY	*Call
2096<2086		4963<6350	3-WAY TO 3-WAY	*Call
2096<2086		4963<6360	3-WAY TO 3-WAY	*Call
2096<2086		4963<6370	3-WAY TO 3-WAY	*Call
2096<2086		4963<6410	4-WAY TO 3-WAY	*Call
2096<2086		4963<6420	4-WAY TO 3-WAY	*Call
2096<2086		4963<6430	4-WAY TO 3-WAY	*Call
2096<2086		4963<6440	4-WAY TO 3-WAY	*Call
2096<2086		4963<6450	4-WAY TO 3-WAY	*Call
2096<2086		4963<6460	4-WAY TO 3-WAY	*Call
2096<2086		4963<6470	4-WAY TO 3-WAY	*Call
2096<2086		4964<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4964<6110	1-WAY TO 4-WAY	*Call
2096<2086		4964<6120	1-WAY TO 4-WAY	*Call
2096<2086		4964<6130	1-WAY TO 4-WAY	*Call
2096<2086		4964<6140	1-WAY TO 4-WAY	*Call
2096<2086		4964<6150	1-WAY TO 4-WAY	*Call
2096<2086		4964<6160	1-WAY TO 4-WAY	*Call
2096<2086		4964<6170	1-WAY TO 4-WAY	*Call
2096<2086		4964<6210	2-WAY TO 4-WAY	*Call
2096<2086		4964<6220	2-WAY TO 4-WAY	*Call
2096<2086		4964<6230	2-WAY TO 4-WAY	*Call
2096<2086		4964<6240	2-WAY TO 4-WAY	*Call
2096<2086		4964<6250	2-WAY TO 4-WAY	*Call
2096<2086		4964<6260	2-WAY TO 4-WAY	*Call
2096<2086		4964<6270	2-WAY TO 4-WAY	*Call
2096<2086		4964<6310	3-WAY TO 4-WAY	*Call
2096<2086		4964<6320	3-WAY TO 4-WAY	*Call
2096<2086		4964<6330	3-WAY TO 4-WAY	*Call
2096<2086		4964<6340	3-WAY TO 4-WAY	*Call
2096<2086		4964<6350	3-WAY TO 4-WAY	*Call
2096<2086		4964<6360	3-WAY TO 4-WAY	*Call
2096<2086		4964<6370	3-WAY TO 4-WAY	*Call
2096<2086		4964<6410	4-WAY TO 4-WAY	*Call
2096<2086		4964<6420	4-WAY TO 4-WAY	*Call
2096<2086		4964<6430	4-WAY TO 4-WAY	*Call
2096<2086		4964<6440	4-WAY TO 4-WAY	*Call
2096<2086		4964<6450	4-WAY TO 4-WAY	*Call
2096<2086		4964<6460	4-WAY TO 4-WAY	*Call
2096<2086		4964<6470	4-WAY TO 4-WAY	*Call
2096<2086		4966<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4966<6110	1-WAY TO 2-WAY	*Call
2096<2086		4966<6120	1-WAY TO 2-WAY	*Call
2096<2086		4966<6130	1-WAY TO 2-WAY	*Call
2096<2086		4966<6140	1-WAY TO 2-WAY	*Call
2096<2086		4966<6150	1-WAY TO 2-WAY	*Call
2096<2086		4966<6160	1-WAY TO 2-WAY	*Call
2096<2086		4966<6170	1-WAY TO 2-WAY	*Call
2096<2086		4966<6210	2-WAY TO 2-WAY	*Call
2096<2086		4966<6220	2-WAY TO 2-WAY	*Call
2096<2086		4966<6230	2-WAY TO 2-WAY	*Call
2096<2086		4966<6240	2-WAY TO 2-WAY	*Call
2096<2086		4966<6250	2-WAY TO 2-WAY	*Call
2096<2086		4966<6260	2-WAY TO 2-WAY	*Call
2096<2086		4966<6270	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4966<6310	3-WAY TO 2-WAY	*Call
2096<2086		4966<6320	3-WAY TO 2-WAY	*Call
2096<2086		4966<6330	3-WAY TO 2-WAY	*Call
2096<2086		4966<6340	3-WAY TO 2-WAY	*Call
2096<2086		4966<6350	3-WAY TO 2-WAY	*Call
2096<2086		4966<6360	3-WAY TO 2-WAY	*Call
2096<2086		4966<6370	3-WAY TO 2-WAY	*Call
2096<2086		4966<6410	4-WAY TO 2-WAY	*Call
2096<2086		4966<6420	4-WAY TO 2-WAY	*Call
2096<2086		4966<6430	4-WAY TO 2-WAY	*Call
2096<2086		4966<6440	4-WAY TO 2-WAY	*Call
2096<2086		4966<6450	4-WAY TO 2-WAY	*Call
2096<2086		4966<6460	4-WAY TO 2-WAY	*Call
2096<2086		4966<6470	4-WAY TO 2-WAY	*Call
2096<2086		4967<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4967<6110	1-WAY TO 3-WAY	*Call
2096<2086		4967<6120	1-WAY TO 3-WAY	*Call
2096<2086		4967<6130	1-WAY TO 3-WAY	*Call
2096<2086		4967<6140	1-WAY TO 3-WAY	*Call
2096<2086		4967<6150	1-WAY TO 3-WAY	*Call
2096<2086		4967<6160	1-WAY TO 3-WAY	*Call
2096<2086		4967<6170	1-WAY TO 3-WAY	*Call
2096<2086		4967<6210	2-WAY TO 3-WAY	*Call
2096<2086		4967<6220	2-WAY TO 3-WAY	*Call
2096<2086		4967<6230	2-WAY TO 3-WAY	*Call
2096<2086		4967<6240	2-WAY TO 3-WAY	*Call
2096<2086		4967<6250	2-WAY TO 3-WAY	*Call
2096<2086		4967<6260	2-WAY TO 3-WAY	*Call
2096<2086		4967<6270	2-WAY TO 3-WAY	*Call
2096<2086		4967<6310	3-WAY TO 3-WAY	*Call
2096<2086		4967<6320	3-WAY TO 3-WAY	*Call
2096<2086		4967<6330	3-WAY TO 3-WAY	*Call
2096<2086		4967<6340	3-WAY TO 3-WAY	*Call
2096<2086		4967<6350	3-WAY TO 3-WAY	*Call
2096<2086		4967<6360	3-WAY TO 3-WAY	*Call
2096<2086		4967<6370	3-WAY TO 3-WAY	*Call
2096<2086		4967<6410	4-WAY TO 3-WAY	*Call
2096<2086		4967<6420	4-WAY TO 3-WAY	*Call
2096<2086		4967<6430	4-WAY TO 3-WAY	*Call
2096<2086		4967<6440	4-WAY TO 3-WAY	*Call
2096<2086		4967<6450	4-WAY TO 3-WAY	*Call
2096<2086		4967<6460	4-WAY TO 3-WAY	*Call
2096<2086		4967<6470	4-WAY TO 3-WAY	*Call
2096<2086		4968<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4968<6110	1-WAY TO 4-WAY	*Call
2096<2086		4968<6120	1-WAY TO 4-WAY	*Call
2096<2086		4968<6130	1-WAY TO 4-WAY	*Call
2096<2086		4968<6140	1-WAY TO 4-WAY	*Call
2096<2086		4968<6150	1-WAY TO 4-WAY	*Call
2096<2086		4968<6160	1-WAY TO 4-WAY	*Call
2096<2086		4968<6170	1-WAY TO 4-WAY	*Call
2096<2086		4968<6210	2-WAY TO 4-WAY	*Call
2096<2086		4968<6220	2-WAY TO 4-WAY	*Call
2096<2086		4968<6230	2-WAY TO 4-WAY	*Call
2096<2086		4968<6240	2-WAY TO 4-WAY	*Call
2096<2086		4968<6250	2-WAY TO 4-WAY	*Call
2096<2086		4968<6260	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4968<6270	2-WAY TO 4-WAY	*Call
2096<2086		4968<6310	3-WAY TO 4-WAY	*Call
2096<2086		4968<6320	3-WAY TO 4-WAY	*Call
2096<2086		4968<6330	3-WAY TO 4-WAY	*Call
2096<2086		4968<6340	3-WAY TO 4-WAY	*Call
2096<2086		4968<6350	3-WAY TO 4-WAY	*Call
2096<2086		4968<6360	3-WAY TO 4-WAY	*Call
2096<2086		4968<6370	3-WAY TO 4-WAY	*Call
2096<2086		4968<6410	4-WAY TO 4-WAY	*Call
2096<2086		4968<6420	4-WAY TO 4-WAY	*Call
2096<2086		4968<6430	4-WAY TO 4-WAY	*Call
2096<2086		4968<6440	4-WAY TO 4-WAY	*Call
2096<2086		4968<6450	4-WAY TO 4-WAY	*Call
2096<2086		4968<6460	4-WAY TO 4-WAY	*Call
2096<2086		4968<6470	4-WAY TO 4-WAY	*Call
2096<2086		4969<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4969<6110	1-WAY TO 1-WAY	*Call
2096<2086		4969<6120	1-WAY TO 1-WAY	*Call
2096<2086		4969<6130	1-WAY TO 1-WAY	*Call
2096<2086		4969<6140	1-WAY TO 1-WAY	*Call
2096<2086		4969<6150	1-WAY TO 1-WAY	*Call
2096<2086		4969<6160	1-WAY TO 1-WAY	*Call
2096<2086		4969<6170	1-WAY TO 1-WAY	*Call
2096<2086		4969<6210	2-WAY TO 1-WAY	*Call
2096<2086		4969<6220	2-WAY TO 1-WAY	*Call
2096<2086		4969<6230	2-WAY TO 1-WAY	*Call
2096<2086		4969<6240	2-WAY TO 1-WAY	*Call
2096<2086		4969<6250	2-WAY TO 1-WAY	*Call
2096<2086		4969<6260	2-WAY TO 1-WAY	*Call
2096<2086		4969<6270	2-WAY TO 1-WAY	*Call
2096<2086		4969<6310	3-WAY TO 1-WAY	*Call
2096<2086		4969<6320	3-WAY TO 1-WAY	*Call
2096<2086		4969<6330	3-WAY TO 1-WAY	*Call
2096<2086		4969<6340	3-WAY TO 1-WAY	*Call
2096<2086		4969<6350	3-WAY TO 1-WAY	*Call
2096<2086		4969<6360	3-WAY TO 1-WAY	*Call
2096<2086		4969<6370	3-WAY TO 1-WAY	*Call
2096<2086		4969<6410	4-WAY TO 1-WAY	*Call
2096<2086		4969<6420	4-WAY TO 1-WAY	*Call
2096<2086		4969<6430	4-WAY TO 1-WAY	*Call
2096<2086		4969<6440	4-WAY TO 1-WAY	*Call
2096<2086		4969<6450	4-WAY TO 1-WAY	*Call
2096<2086		4969<6460	4-WAY TO 1-WAY	*Call
2096<2086		4969<6470	4-WAY TO 1-WAY	*Call
2096<2086		4970<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4970<6110	1-WAY TO 2-WAY	*Call
2096<2086		4970<6120	1-WAY TO 2-WAY	*Call
2096<2086		4970<6130	1-WAY TO 2-WAY	*Call
2096<2086		4970<6140	1-WAY TO 2-WAY	*Call
2096<2086		4970<6150	1-WAY TO 2-WAY	*Call
2096<2086		4970<6160	1-WAY TO 2-WAY	*Call
2096<2086		4970<6170	1-WAY TO 2-WAY	*Call
2096<2086		4970<6210	2-WAY TO 2-WAY	*Call
2096<2086		4970<6220	2-WAY TO 2-WAY	*Call
2096<2086		4970<6230	2-WAY TO 2-WAY	*Call
2096<2086		4970<6240	2-WAY TO 2-WAY	*Call
2096<2086		4970<6250	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4970<6260	2-WAY TO 2-WAY	*Call
2096<2086		4970<6270	2-WAY TO 2-WAY	*Call
2096<2086		4970<6310	3-WAY TO 2-WAY	*Call
2096<2086		4970<6320	3-WAY TO 2-WAY	*Call
2096<2086		4970<6330	3-WAY TO 2-WAY	*Call
2096<2086		4970<6340	3-WAY TO 2-WAY	*Call
2096<2086		4970<6350	3-WAY TO 2-WAY	*Call
2096<2086		4970<6360	3-WAY TO 2-WAY	*Call
2096<2086		4970<6370	3-WAY TO 2-WAY	*Call
2096<2086		4970<6410	4-WAY TO 2-WAY	*Call
2096<2086		4970<6420	4-WAY TO 2-WAY	*Call
2096<2086		4970<6430	4-WAY TO 2-WAY	*Call
2096<2086		4970<6440	4-WAY TO 2-WAY	*Call
2096<2086		4970<6450	4-WAY TO 2-WAY	*Call
2096<2086		4970<6460	4-WAY TO 2-WAY	*Call
2096<2086		4970<6470	4-WAY TO 2-WAY	*Call
2096<2086		4971<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4971<6110	1-WAY TO 3-WAY	*Call
2096<2086		4971<6120	1-WAY TO 3-WAY	*Call
2096<2086		4971<6130	1-WAY TO 3-WAY	*Call
2096<2086		4971<6140	1-WAY TO 3-WAY	*Call
2096<2086		4971<6150	1-WAY TO 3-WAY	*Call
2096<2086		4971<6160	1-WAY TO 3-WAY	*Call
2096<2086		4971<6170	1-WAY TO 3-WAY	*Call
2096<2086		4971<6210	2-WAY TO 3-WAY	*Call
2096<2086		4971<6220	2-WAY TO 3-WAY	*Call
2096<2086		4971<6230	2-WAY TO 3-WAY	*Call
2096<2086		4971<6240	2-WAY TO 3-WAY	*Call
2096<2086		4971<6250	2-WAY TO 3-WAY	*Call
2096<2086		4971<6260	2-WAY TO 3-WAY	*Call
2096<2086		4971<6270	2-WAY TO 3-WAY	*Call
2096<2086		4971<6310	3-WAY TO 3-WAY	*Call
2096<2086		4971<6320	3-WAY TO 3-WAY	*Call
2096<2086		4971<6330	3-WAY TO 3-WAY	*Call
2096<2086		4971<6340	3-WAY TO 3-WAY	*Call
2096<2086		4971<6350	3-WAY TO 3-WAY	*Call
2096<2086		4971<6360	3-WAY TO 3-WAY	*Call
2096<2086		4971<6370	3-WAY TO 3-WAY	*Call
2096<2086		4971<6410	4-WAY TO 3-WAY	*Call
2096<2086		4971<6420	4-WAY TO 3-WAY	*Call
2096<2086		4971<6430	4-WAY TO 3-WAY	*Call
2096<2086		4971<6440	4-WAY TO 3-WAY	*Call
2096<2086		4971<6450	4-WAY TO 3-WAY	*Call
2096<2086		4971<6460	4-WAY TO 3-WAY	*Call
2096<2086		4971<6470	4-WAY TO 3-WAY	*Call
2096<2086		4972<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4972<6110	1-WAY TO 4-WAY	*Call
2096<2086		4972<6120	1-WAY TO 4-WAY	*Call
2096<2086		4972<6130	1-WAY TO 4-WAY	*Call
2096<2086		4972<6140	1-WAY TO 4-WAY	*Call
2096<2086		4972<6150	1-WAY TO 4-WAY	*Call
2096<2086		4972<6160	1-WAY TO 4-WAY	*Call
2096<2086		4972<6170	1-WAY TO 4-WAY	*Call
2096<2086		4972<6210	2-WAY TO 4-WAY	*Call
2096<2086		4972<6220	2-WAY TO 4-WAY	*Call
2096<2086		4972<6230	2-WAY TO 4-WAY	*Call
2096<2086		4972<6240	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4972<6250	2-WAY TO 4-WAY	*Call
2096<2086		4972<6260	2-WAY TO 4-WAY	*Call
2096<2086		4972<6270	2-WAY TO 4-WAY	*Call
2096<2086		4972<6310	3-WAY TO 4-WAY	*Call
2096<2086		4972<6320	3-WAY TO 4-WAY	*Call
2096<2086		4972<6330	3-WAY TO 4-WAY	*Call
2096<2086		4972<6340	3-WAY TO 4-WAY	*Call
2096<2086		4972<6350	3-WAY TO 4-WAY	*Call
2096<2086		4972<6360	3-WAY TO 4-WAY	*Call
2096<2086		4972<6370	3-WAY TO 4-WAY	*Call
2096<2086		4972<6410	4-WAY TO 4-WAY	*Call
2096<2086		4972<6420	4-WAY TO 4-WAY	*Call
2096<2086		4972<6430	4-WAY TO 4-WAY	*Call
2096<2086		4972<6440	4-WAY TO 4-WAY	*Call
2096<2086		4972<6450	4-WAY TO 4-WAY	*Call
2096<2086		4972<6460	4-WAY TO 4-WAY	*Call
2096<2086		4972<6470	4-WAY TO 4-WAY	*Call
2096<2086		4973<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4973<6110	1-WAY TO 1-WAY	*Call
2096<2086		4973<6120	1-WAY TO 1-WAY	*Call
2096<2086		4973<6130	1-WAY TO 1-WAY	*Call
2096<2086		4973<6140	1-WAY TO 1-WAY	*Call
2096<2086		4973<6150	1-WAY TO 1-WAY	*Call
2096<2086		4973<6160	1-WAY TO 1-WAY	*Call
2096<2086		4973<6170	1-WAY TO 1-WAY	*Call
2096<2086		4973<6210	2-WAY TO 1-WAY	*Call
2096<2086		4973<6220	2-WAY TO 1-WAY	*Call
2096<2086		4973<6230	2-WAY TO 1-WAY	*Call
2096<2086		4973<6240	2-WAY TO 1-WAY	*Call
2096<2086		4973<6250	2-WAY TO 1-WAY	*Call
2096<2086		4973<6260	2-WAY TO 1-WAY	*Call
2096<2086		4973<6270	2-WAY TO 1-WAY	*Call
2096<2086		4973<6310	3-WAY TO 1-WAY	*Call
2096<2086		4973<6320	3-WAY TO 1-WAY	*Call
2096<2086		4973<6330	3-WAY TO 1-WAY	*Call
2096<2086		4973<6340	3-WAY TO 1-WAY	*Call
2096<2086		4973<6350	3-WAY TO 1-WAY	*Call
2096<2086		4973<6360	3-WAY TO 1-WAY	*Call
2096<2086		4973<6370	3-WAY TO 1-WAY	*Call
2096<2086		4973<6410	4-WAY TO 1-WAY	*Call
2096<2086		4973<6420	4-WAY TO 1-WAY	*Call
2096<2086		4973<6430	4-WAY TO 1-WAY	*Call
2096<2086		4973<6440	4-WAY TO 1-WAY	*Call
2096<2086		4973<6450	4-WAY TO 1-WAY	*Call
2096<2086		4973<6460	4-WAY TO 1-WAY	*Call
2096<2086		4973<6470	4-WAY TO 1-WAY	*Call
2096<2086		4974<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4974<6110	1-WAY TO 2-WAY	*Call
2096<2086		4974<6120	1-WAY TO 2-WAY	*Call
2096<2086		4974<6130	1-WAY TO 2-WAY	*Call
2096<2086		4974<6140	1-WAY TO 2-WAY	*Call
2096<2086		4974<6150	1-WAY TO 2-WAY	*Call
2096<2086		4974<6160	1-WAY TO 2-WAY	*Call
2096<2086		4974<6170	1-WAY TO 2-WAY	*Call
2096<2086		4974<6210	2-WAY TO 2-WAY	*Call
2096<2086		4974<6220	2-WAY TO 2-WAY	*Call
2096<2086		4974<6230	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4974<6240	2-WAY TO 2-WAY	*Call
2096<2086		4974<6250	2-WAY TO 2-WAY	*Call
2096<2086		4974<6260	2-WAY TO 2-WAY	*Call
2096<2086		4974<6270	2-WAY TO 2-WAY	*Call
2096<2086		4974<6310	3-WAY TO 2-WAY	*Call
2096<2086		4974<6320	3-WAY TO 2-WAY	*Call
2096<2086		4974<6330	3-WAY TO 2-WAY	*Call
2096<2086		4974<6340	3-WAY TO 2-WAY	*Call
2096<2086		4974<6350	3-WAY TO 2-WAY	*Call
2096<2086		4974<6360	3-WAY TO 2-WAY	*Call
2096<2086		4974<6370	3-WAY TO 2-WAY	*Call
2096<2086		4974<6410	4-WAY TO 2-WAY	*Call
2096<2086		4974<6420	4-WAY TO 2-WAY	*Call
2096<2086		4974<6430	4-WAY TO 2-WAY	*Call
2096<2086		4974<6440	4-WAY TO 2-WAY	*Call
2096<2086		4974<6450	4-WAY TO 2-WAY	*Call
2096<2086		4974<6460	4-WAY TO 2-WAY	*Call
2096<2086		4974<6470	4-WAY TO 2-WAY	*Call
2096<2086		4975<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4975<6110	1-WAY TO 3-WAY	*Call
2096<2086		4975<6120	1-WAY TO 3-WAY	*Call
2096<2086		4975<6130	1-WAY TO 3-WAY	*Call
2096<2086		4975<6140	1-WAY TO 3-WAY	*Call
2096<2086		4975<6150	1-WAY TO 3-WAY	*Call
2096<2086		4975<6160	1-WAY TO 3-WAY	*Call
2096<2086		4975<6170	1-WAY TO 3-WAY	*Call
2096<2086		4975<6210	2-WAY TO 3-WAY	*Call
2096<2086		4975<6220	2-WAY TO 3-WAY	*Call
2096<2086		4975<6230	2-WAY TO 3-WAY	*Call
2096<2086		4975<6240	2-WAY TO 3-WAY	*Call
2096<2086		4975<6250	2-WAY TO 3-WAY	*Call
2096<2086		4975<6260	2-WAY TO 3-WAY	*Call
2096<2086		4975<6270	2-WAY TO 3-WAY	*Call
2096<2086		4975<6310	3-WAY TO 3-WAY	*Call
2096<2086		4975<6320	3-WAY TO 3-WAY	*Call
2096<2086		4975<6330	3-WAY TO 3-WAY	*Call
2096<2086		4975<6340	3-WAY TO 3-WAY	*Call
2096<2086		4975<6350	3-WAY TO 3-WAY	*Call
2096<2086		4975<6360	3-WAY TO 3-WAY	*Call
2096<2086		4975<6370	3-WAY TO 3-WAY	*Call
2096<2086		4975<6410	4-WAY TO 3-WAY	*Call
2096<2086		4975<6420	4-WAY TO 3-WAY	*Call
2096<2086		4975<6430	4-WAY TO 3-WAY	*Call
2096<2086		4975<6440	4-WAY TO 3-WAY	*Call
2096<2086		4975<6450	4-WAY TO 3-WAY	*Call
2096<2086		4975<6460	4-WAY TO 3-WAY	*Call
2096<2086		4975<6470	4-WAY TO 3-WAY	*Call
2096<2086		4976<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4976<6110	1-WAY TO 4-WAY	*Call
2096<2086		4976<6120	1-WAY TO 4-WAY	*Call
2096<2086		4976<6130	1-WAY TO 4-WAY	*Call
2096<2086		4976<6140	1-WAY TO 4-WAY	*Call
2096<2086		4976<6150	1-WAY TO 4-WAY	*Call
2096<2086		4976<6160	1-WAY TO 4-WAY	*Call
2096<2086		4976<6170	1-WAY TO 4-WAY	*Call
2096<2086		4976<6210	2-WAY TO 4-WAY	*Call
2096<2086		4976<6220	2-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4976<6230	2-WAY TO 4-WAY	*Call
2096<2086		4976<6240	2-WAY TO 4-WAY	*Call
2096<2086		4976<6250	2-WAY TO 4-WAY	*Call
2096<2086		4976<6260	2-WAY TO 4-WAY	*Call
2096<2086		4976<6270	2-WAY TO 4-WAY	*Call
2096<2086		4976<6310	3-WAY TO 4-WAY	*Call
2096<2086		4976<6320	3-WAY TO 4-WAY	*Call
2096<2086		4976<6330	3-WAY TO 4-WAY	*Call
2096<2086		4976<6340	3-WAY TO 4-WAY	*Call
2096<2086		4976<6350	3-WAY TO 4-WAY	*Call
2096<2086		4976<6360	3-WAY TO 4-WAY	*Call
2096<2086		4976<6370	3-WAY TO 4-WAY	*Call
2096<2086		4976<6410	4-WAY TO 4-WAY	*Call
2096<2086		4976<6420	4-WAY TO 4-WAY	*Call
2096<2086		4976<6430	4-WAY TO 4-WAY	*Call
2096<2086		4976<6440	4-WAY TO 4-WAY	*Call
2096<2086		4976<6450	4-WAY TO 4-WAY	*Call
2096<2086		4976<6460	4-WAY TO 4-WAY	*Call
2096<2086		4976<6470	4-WAY TO 4-WAY	*Call
2096<2086		4977<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4977<6110	1-WAY TO 1-WAY	*Call
2096<2086		4977<6120	1-WAY TO 1-WAY	*Call
2096<2086		4977<6130	1-WAY TO 1-WAY	*Call
2096<2086		4977<6140	1-WAY TO 1-WAY	*Call
2096<2086		4977<6150	1-WAY TO 1-WAY	*Call
2096<2086		4977<6160	1-WAY TO 1-WAY	*Call
2096<2086		4977<6170	1-WAY TO 1-WAY	*Call
2096<2086		4977<6210	2-WAY TO 1-WAY	*Call
2096<2086		4977<6220	2-WAY TO 1-WAY	*Call
2096<2086		4977<6230	2-WAY TO 1-WAY	*Call
2096<2086		4977<6240	2-WAY TO 1-WAY	*Call
2096<2086		4977<6250	2-WAY TO 1-WAY	*Call
2096<2086		4977<6260	2-WAY TO 1-WAY	*Call
2096<2086		4977<6270	2-WAY TO 1-WAY	*Call
2096<2086		4977<6310	3-WAY TO 1-WAY	*Call
2096<2086		4977<6320	3-WAY TO 1-WAY	*Call
2096<2086		4977<6330	3-WAY TO 1-WAY	*Call
2096<2086		4977<6340	3-WAY TO 1-WAY	*Call
2096<2086		4977<6350	3-WAY TO 1-WAY	*Call
2096<2086		4977<6360	3-WAY TO 1-WAY	*Call
2096<2086		4977<6370	3-WAY TO 1-WAY	*Call
2096<2086		4977<6410	4-WAY TO 1-WAY	*Call
2096<2086		4977<6420	4-WAY TO 1-WAY	*Call
2096<2086		4977<6430	4-WAY TO 1-WAY	*Call
2096<2086		4977<6440	4-WAY TO 1-WAY	*Call
2096<2086		4977<6450	4-WAY TO 1-WAY	*Call
2096<2086		4977<6460	4-WAY TO 1-WAY	*Call
2096<2086		4977<6470	4-WAY TO 1-WAY	*Call
2096<2086		4978<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4978<6110	1-WAY TO 2-WAY	*Call
2096<2086		4978<6120	1-WAY TO 2-WAY	*Call
2096<2086		4978<6130	1-WAY TO 2-WAY	*Call
2096<2086		4978<6140	1-WAY TO 2-WAY	*Call
2096<2086		4978<6150	1-WAY TO 2-WAY	*Call
2096<2086		4978<6160	1-WAY TO 2-WAY	*Call
2096<2086		4978<6170	1-WAY TO 2-WAY	*Call
2096<2086		4978<6210	2-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4978<6220	2-WAY TO 2-WAY	*Call
2096<2086		4978<6230	2-WAY TO 2-WAY	*Call
2096<2086		4978<6240	2-WAY TO 2-WAY	*Call
2096<2086		4978<6250	2-WAY TO 2-WAY	*Call
2096<2086		4978<6260	2-WAY TO 2-WAY	*Call
2096<2086		4978<6270	2-WAY TO 2-WAY	*Call
2096<2086		4978<6310	3-WAY TO 2-WAY	*Call
2096<2086		4978<6320	3-WAY TO 2-WAY	*Call
2096<2086		4978<6330	3-WAY TO 2-WAY	*Call
2096<2086		4978<6340	3-WAY TO 2-WAY	*Call
2096<2086		4978<6350	3-WAY TO 2-WAY	*Call
2096<2086		4978<6360	3-WAY TO 2-WAY	*Call
2096<2086		4978<6370	3-WAY TO 2-WAY	*Call
2096<2086		4978<6410	4-WAY TO 2-WAY	*Call
2096<2086		4978<6420	4-WAY TO 2-WAY	*Call
2096<2086		4978<6430	4-WAY TO 2-WAY	*Call
2096<2086		4978<6440	4-WAY TO 2-WAY	*Call
2096<2086		4978<6450	4-WAY TO 2-WAY	*Call
2096<2086		4978<6460	4-WAY TO 2-WAY	*Call
2096<2086		4978<6470	4-WAY TO 2-WAY	*Call
2096<2086		4979<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4979<6110	1-WAY TO 3-WAY	*Call
2096<2086		4979<6120	1-WAY TO 3-WAY	*Call
2096<2086		4979<6130	1-WAY TO 3-WAY	*Call
2096<2086		4979<6140	1-WAY TO 3-WAY	*Call
2096<2086		4979<6150	1-WAY TO 3-WAY	*Call
2096<2086		4979<6160	1-WAY TO 3-WAY	*Call
2096<2086		4979<6170	1-WAY TO 3-WAY	*Call
2096<2086		4979<6210	2-WAY TO 3-WAY	*Call
2096<2086		4979<6220	2-WAY TO 3-WAY	*Call
2096<2086		4979<6230	2-WAY TO 3-WAY	*Call
2096<2086		4979<6240	2-WAY TO 3-WAY	*Call
2096<2086		4979<6250	2-WAY TO 3-WAY	*Call
2096<2086		4979<6260	2-WAY TO 3-WAY	*Call
2096<2086		4979<6270	2-WAY TO 3-WAY	*Call
2096<2086		4979<6310	3-WAY TO 3-WAY	*Call
2096<2086		4979<6320	3-WAY TO 3-WAY	*Call
2096<2086		4979<6330	3-WAY TO 3-WAY	*Call
2096<2086		4979<6340	3-WAY TO 3-WAY	*Call
2096<2086		4979<6350	3-WAY TO 3-WAY	*Call
2096<2086		4979<6360	3-WAY TO 3-WAY	*Call
2096<2086		4979<6370	3-WAY TO 3-WAY	*Call
2096<2086		4979<6410	4-WAY TO 3-WAY	*Call
2096<2086		4979<6420	4-WAY TO 3-WAY	*Call
2096<2086		4979<6430	4-WAY TO 3-WAY	*Call
2096<2086		4979<6440	4-WAY TO 3-WAY	*Call
2096<2086		4979<6450	4-WAY TO 3-WAY	*Call
2096<2086		4979<6460	4-WAY TO 3-WAY	*Call
2096<2086		4979<6470	4-WAY TO 3-WAY	*Call
2096<2086		4980<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4980<6110	1-WAY TO 4-WAY	*Call
2096<2086		4980<6120	1-WAY TO 4-WAY	*Call
2096<2086		4980<6130	1-WAY TO 4-WAY	*Call
2096<2086		4980<6140	1-WAY TO 4-WAY	*Call
2096<2086		4980<6150	1-WAY TO 4-WAY	*Call
2096<2086		4980<6160	1-WAY TO 4-WAY	*Call
2096<2086		4980<6170	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4980<6210	2-WAY TO 4-WAY	*Call
2096<2086		4980<6220	2-WAY TO 4-WAY	*Call
2096<2086		4980<6230	2-WAY TO 4-WAY	*Call
2096<2086		4980<6240	2-WAY TO 4-WAY	*Call
2096<2086		4980<6250	2-WAY TO 4-WAY	*Call
2096<2086		4980<6260	2-WAY TO 4-WAY	*Call
2096<2086		4980<6270	2-WAY TO 4-WAY	*Call
2096<2086		4980<6310	3-WAY TO 4-WAY	*Call
2096<2086		4980<6320	3-WAY TO 4-WAY	*Call
2096<2086		4980<6330	3-WAY TO 4-WAY	*Call
2096<2086		4980<6340	3-WAY TO 4-WAY	*Call
2096<2086		4980<6350	3-WAY TO 4-WAY	*Call
2096<2086		4980<6360	3-WAY TO 4-WAY	*Call
2096<2086		4980<6370	3-WAY TO 4-WAY	*Call
2096<2086		4980<6410	4-WAY TO 4-WAY	*Call
2096<2086		4980<6420	4-WAY TO 4-WAY	*Call
2096<2086		4980<6430	4-WAY TO 4-WAY	*Call
2096<2086		4980<6440	4-WAY TO 4-WAY	*Call
2096<2086		4980<6450	4-WAY TO 4-WAY	*Call
2096<2086		4980<6460	4-WAY TO 4-WAY	*Call
2096<2086		4980<6470	4-WAY TO 4-WAY	*Call
2096<2086		4981<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4981<6110	1-WAY TO 1-WAY	*Call
2096<2086		4981<6120	1-WAY TO 1-WAY	*Call
2096<2086		4981<6130	1-WAY TO 1-WAY	*Call
2096<2086		4981<6140	1-WAY TO 1-WAY	*Call
2096<2086		4981<6150	1-WAY TO 1-WAY	*Call
2096<2086		4981<6160	1-WAY TO 1-WAY	*Call
2096<2086		4981<6170	1-WAY TO 1-WAY	*Call
2096<2086		4981<6210	2-WAY TO 1-WAY	*Call
2096<2086		4981<6220	2-WAY TO 1-WAY	*Call
2096<2086		4981<6230	2-WAY TO 1-WAY	*Call
2096<2086		4981<6240	2-WAY TO 1-WAY	*Call
2096<2086		4981<6250	2-WAY TO 1-WAY	*Call
2096<2086		4981<6260	2-WAY TO 1-WAY	*Call
2096<2086		4981<6270	2-WAY TO 1-WAY	*Call
2096<2086		4981<6310	3-WAY TO 1-WAY	*Call
2096<2086		4981<6320	3-WAY TO 1-WAY	*Call
2096<2086		4981<6330	3-WAY TO 1-WAY	*Call
2096<2086		4981<6340	3-WAY TO 1-WAY	*Call
2096<2086		4981<6350	3-WAY TO 1-WAY	*Call
2096<2086		4981<6360	3-WAY TO 1-WAY	*Call
2096<2086		4981<6370	3-WAY TO 1-WAY	*Call
2096<2086		4981<6410	4-WAY TO 1-WAY	*Call
2096<2086		4981<6420	4-WAY TO 1-WAY	*Call
2096<2086		4981<6430	4-WAY TO 1-WAY	*Call
2096<2086		4981<6440	4-WAY TO 1-WAY	*Call
2096<2086		4981<6450	4-WAY TO 1-WAY	*Call
2096<2086		4981<6460	4-WAY TO 1-WAY	*Call
2096<2086		4981<6470	4-WAY TO 1-WAY	*Call
2096<2086		4982<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4982<6110	1-WAY TO 2-WAY	*Call
2096<2086		4982<6120	1-WAY TO 2-WAY	*Call
2096<2086		4982<6130	1-WAY TO 2-WAY	*Call
2096<2086		4982<6140	1-WAY TO 2-WAY	*Call
2096<2086		4982<6150	1-WAY TO 2-WAY	*Call
2096<2086		4982<6160	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4982<6170	1-WAY TO 2-WAY	*Call
2096<2086		4982<6210	2-WAY TO 2-WAY	*Call
2096<2086		4982<6220	2-WAY TO 2-WAY	*Call
2096<2086		4982<6230	2-WAY TO 2-WAY	*Call
2096<2086		4982<6240	2-WAY TO 2-WAY	*Call
2096<2086		4982<6250	2-WAY TO 2-WAY	*Call
2096<2086		4982<6260	2-WAY TO 2-WAY	*Call
2096<2086		4982<6270	2-WAY TO 2-WAY	*Call
2096<2086		4982<6310	3-WAY TO 2-WAY	*Call
2096<2086		4982<6320	3-WAY TO 2-WAY	*Call
2096<2086		4982<6330	3-WAY TO 2-WAY	*Call
2096<2086		4982<6340	3-WAY TO 2-WAY	*Call
2096<2086		4982<6350	3-WAY TO 2-WAY	*Call
2096<2086		4982<6360	3-WAY TO 2-WAY	*Call
2096<2086		4982<6370	3-WAY TO 2-WAY	*Call
2096<2086		4982<6410	4-WAY TO 2-WAY	*Call
2096<2086		4982<6420	4-WAY TO 2-WAY	*Call
2096<2086		4982<6430	4-WAY TO 2-WAY	*Call
2096<2086		4982<6440	4-WAY TO 2-WAY	*Call
2096<2086		4982<6450	4-WAY TO 2-WAY	*Call
2096<2086		4982<6460	4-WAY TO 2-WAY	*Call
2096<2086		4982<6470	4-WAY TO 2-WAY	*Call
2096<2086		4983<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4983<6110	1-WAY TO 3-WAY	*Call
2096<2086		4983<6120	1-WAY TO 3-WAY	*Call
2096<2086		4983<6130	1-WAY TO 3-WAY	*Call
2096<2086		4983<6140	1-WAY TO 3-WAY	*Call
2096<2086		4983<6150	1-WAY TO 3-WAY	*Call
2096<2086		4983<6160	1-WAY TO 3-WAY	*Call
2096<2086		4983<6170	1-WAY TO 3-WAY	*Call
2096<2086		4983<6210	2-WAY TO 3-WAY	*Call
2096<2086		4983<6220	2-WAY TO 3-WAY	*Call
2096<2086		4983<6230	2-WAY TO 3-WAY	*Call
2096<2086		4983<6240	2-WAY TO 3-WAY	*Call
2096<2086		4983<6250	2-WAY TO 3-WAY	*Call
2096<2086		4983<6260	2-WAY TO 3-WAY	*Call
2096<2086		4983<6270	2-WAY TO 3-WAY	*Call
2096<2086		4983<6310	3-WAY TO 3-WAY	*Call
2096<2086		4983<6320	3-WAY TO 3-WAY	*Call
2096<2086		4983<6330	3-WAY TO 3-WAY	*Call
2096<2086		4983<6340	3-WAY TO 3-WAY	*Call
2096<2086		4983<6350	3-WAY TO 3-WAY	*Call
2096<2086		4983<6360	3-WAY TO 3-WAY	*Call
2096<2086		4983<6370	3-WAY TO 3-WAY	*Call
2096<2086		4983<6410	4-WAY TO 3-WAY	*Call
2096<2086		4983<6420	4-WAY TO 3-WAY	*Call
2096<2086		4983<6430	4-WAY TO 3-WAY	*Call
2096<2086		4983<6440	4-WAY TO 3-WAY	*Call
2096<2086		4983<6450	4-WAY TO 3-WAY	*Call
2096<2086		4983<6460	4-WAY TO 3-WAY	*Call
2096<2086		4983<6470	4-WAY TO 3-WAY	*Call
2096<2086		4984<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4984<6110	1-WAY TO 4-WAY	*Call
2096<2086		4984<6120	1-WAY TO 4-WAY	*Call
2096<2086		4984<6130	1-WAY TO 4-WAY	*Call
2096<2086		4984<6140	1-WAY TO 4-WAY	*Call
2096<2086		4984<6150	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4984<6160	1-WAY TO 4-WAY	*Call
2096<2086		4984<6170	1-WAY TO 4-WAY	*Call
2096<2086		4984<6210	2-WAY TO 4-WAY	*Call
2096<2086		4984<6220	2-WAY TO 4-WAY	*Call
2096<2086		4984<6230	2-WAY TO 4-WAY	*Call
2096<2086		4984<6240	2-WAY TO 4-WAY	*Call
2096<2086		4984<6250	2-WAY TO 4-WAY	*Call
2096<2086		4984<6260	2-WAY TO 4-WAY	*Call
2096<2086		4984<6270	2-WAY TO 4-WAY	*Call
2096<2086		4984<6310	3-WAY TO 4-WAY	*Call
2096<2086		4984<6320	3-WAY TO 4-WAY	*Call
2096<2086		4984<6330	3-WAY TO 4-WAY	*Call
2096<2086		4984<6340	3-WAY TO 4-WAY	*Call
2096<2086		4984<6350	3-WAY TO 4-WAY	*Call
2096<2086		4984<6360	3-WAY TO 4-WAY	*Call
2096<2086		4984<6370	3-WAY TO 4-WAY	*Call
2096<2086		4984<6410	4-WAY TO 4-WAY	*Call
2096<2086		4984<6420	4-WAY TO 4-WAY	*Call
2096<2086		4984<6430	4-WAY TO 4-WAY	*Call
2096<2086		4984<6440	4-WAY TO 4-WAY	*Call
2096<2086		4984<6450	4-WAY TO 4-WAY	*Call
2096<2086		4984<6460	4-WAY TO 4-WAY	*Call
2096<2086		4984<6470	4-WAY TO 4-WAY	*Call
2096<2086		4985<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4985<6110	1-WAY TO 1-WAY	*Call
2096<2086		4985<6120	1-WAY TO 1-WAY	*Call
2096<2086		4985<6130	1-WAY TO 1-WAY	*Call
2096<2086		4985<6140	1-WAY TO 1-WAY	*Call
2096<2086		4985<6150	1-WAY TO 1-WAY	*Call
2096<2086		4985<6160	1-WAY TO 1-WAY	*Call
2096<2086		4985<6170	1-WAY TO 1-WAY	*Call
2096<2086		4985<6210	2-WAY TO 1-WAY	*Call
2096<2086		4985<6220	2-WAY TO 1-WAY	*Call
2096<2086		4985<6230	2-WAY TO 1-WAY	*Call
2096<2086		4985<6240	2-WAY TO 1-WAY	*Call
2096<2086		4985<6250	2-WAY TO 1-WAY	*Call
2096<2086		4985<6260	2-WAY TO 1-WAY	*Call
2096<2086		4985<6270	2-WAY TO 1-WAY	*Call
2096<2086		4985<6310	3-WAY TO 1-WAY	*Call
2096<2086		4985<6320	3-WAY TO 1-WAY	*Call
2096<2086		4985<6330	3-WAY TO 1-WAY	*Call
2096<2086		4985<6340	3-WAY TO 1-WAY	*Call
2096<2086		4985<6350	3-WAY TO 1-WAY	*Call
2096<2086		4985<6360	3-WAY TO 1-WAY	*Call
2096<2086		4985<6370	3-WAY TO 1-WAY	*Call
2096<2086		4985<6410	4-WAY TO 1-WAY	*Call
2096<2086		4985<6420	4-WAY TO 1-WAY	*Call
2096<2086		4985<6430	4-WAY TO 1-WAY	*Call
2096<2086		4985<6440	4-WAY TO 1-WAY	*Call
2096<2086		4985<6450	4-WAY TO 1-WAY	*Call
2096<2086		4985<6460	4-WAY TO 1-WAY	*Call
2096<2086		4985<6470	4-WAY TO 1-WAY	*Call
2096<2086		4986<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4986<6110	1-WAY TO 2-WAY	*Call
2096<2086		4986<6120	1-WAY TO 2-WAY	*Call
2096<2086		4986<6130	1-WAY TO 2-WAY	*Call
2096<2086		4986<6140	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4986<6150	1-WAY TO 2-WAY	*Call
2096<2086		4986<6160	1-WAY TO 2-WAY	*Call
2096<2086		4986<6170	1-WAY TO 2-WAY	*Call
2096<2086		4986<6210	2-WAY TO 2-WAY	*Call
2096<2086		4986<6220	2-WAY TO 2-WAY	*Call
2096<2086		4986<6230	2-WAY TO 2-WAY	*Call
2096<2086		4986<6240	2-WAY TO 2-WAY	*Call
2096<2086		4986<6250	2-WAY TO 2-WAY	*Call
2096<2086		4986<6260	2-WAY TO 2-WAY	*Call
2096<2086		4986<6270	2-WAY TO 2-WAY	*Call
2096<2086		4986<6310	3-WAY TO 2-WAY	*Call
2096<2086		4986<6320	3-WAY TO 2-WAY	*Call
2096<2086		4986<6330	3-WAY TO 2-WAY	*Call
2096<2086		4986<6340	3-WAY TO 2-WAY	*Call
2096<2086		4986<6350	3-WAY TO 2-WAY	*Call
2096<2086		4986<6360	3-WAY TO 2-WAY	*Call
2096<2086		4986<6370	3-WAY TO 2-WAY	*Call
2096<2086		4986<6410	4-WAY TO 2-WAY	*Call
2096<2086		4986<6420	4-WAY TO 2-WAY	*Call
2096<2086		4986<6430	4-WAY TO 2-WAY	*Call
2096<2086		4986<6440	4-WAY TO 2-WAY	*Call
2096<2086		4986<6450	4-WAY TO 2-WAY	*Call
2096<2086		4986<6460	4-WAY TO 2-WAY	*Call
2096<2086		4986<6470	4-WAY TO 2-WAY	*Call
2096<2086		4987<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4987<6110	1-WAY TO 3-WAY	*Call
2096<2086		4987<6120	1-WAY TO 3-WAY	*Call
2096<2086		4987<6130	1-WAY TO 3-WAY	*Call
2096<2086		4987<6140	1-WAY TO 3-WAY	*Call
2096<2086		4987<6150	1-WAY TO 3-WAY	*Call
2096<2086		4987<6160	1-WAY TO 3-WAY	*Call
2096<2086		4987<6170	1-WAY TO 3-WAY	*Call
2096<2086		4987<6210	2-WAY TO 3-WAY	*Call
2096<2086		4987<6220	2-WAY TO 3-WAY	*Call
2096<2086		4987<6230	2-WAY TO 3-WAY	*Call
2096<2086		4987<6240	2-WAY TO 3-WAY	*Call
2096<2086		4987<6250	2-WAY TO 3-WAY	*Call
2096<2086		4987<6260	2-WAY TO 3-WAY	*Call
2096<2086		4987<6270	2-WAY TO 3-WAY	*Call
2096<2086		4987<6310	3-WAY TO 3-WAY	*Call
2096<2086		4987<6320	3-WAY TO 3-WAY	*Call
2096<2086		4987<6330	3-WAY TO 3-WAY	*Call
2096<2086		4987<6340	3-WAY TO 3-WAY	*Call
2096<2086		4987<6350	3-WAY TO 3-WAY	*Call
2096<2086		4987<6360	3-WAY TO 3-WAY	*Call
2096<2086		4987<6370	3-WAY TO 3-WAY	*Call
2096<2086		4987<6410	4-WAY TO 3-WAY	*Call
2096<2086		4987<6420	4-WAY TO 3-WAY	*Call
2096<2086		4987<6430	4-WAY TO 3-WAY	*Call
2096<2086		4987<6440	4-WAY TO 3-WAY	*Call
2096<2086		4987<6450	4-WAY TO 3-WAY	*Call
2096<2086		4987<6460	4-WAY TO 3-WAY	*Call
2096<2086		4987<6470	4-WAY TO 3-WAY	*Call
2096<2086		4988<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4988<6110	1-WAY TO 4-WAY	*Call
2096<2086		4988<6120	1-WAY TO 4-WAY	*Call
2096<2086		4988<6130	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4988<6140	1-WAY TO 4-WAY	*Call
2096<2086		4988<6150	1-WAY TO 4-WAY	*Call
2096<2086		4988<6160	1-WAY TO 4-WAY	*Call
2096<2086		4988<6170	1-WAY TO 4-WAY	*Call
2096<2086		4988<6210	2-WAY TO 4-WAY	*Call
2096<2086		4988<6220	2-WAY TO 4-WAY	*Call
2096<2086		4988<6230	2-WAY TO 4-WAY	*Call
2096<2086		4988<6240	2-WAY TO 4-WAY	*Call
2096<2086		4988<6250	2-WAY TO 4-WAY	*Call
2096<2086		4988<6260	2-WAY TO 4-WAY	*Call
2096<2086		4988<6270	2-WAY TO 4-WAY	*Call
2096<2086		4988<6310	3-WAY TO 4-WAY	*Call
2096<2086		4988<6320	3-WAY TO 4-WAY	*Call
2096<2086		4988<6330	3-WAY TO 4-WAY	*Call
2096<2086		4988<6340	3-WAY TO 4-WAY	*Call
2096<2086		4988<6350	3-WAY TO 4-WAY	*Call
2096<2086		4988<6360	3-WAY TO 4-WAY	*Call
2096<2086		4988<6370	3-WAY TO 4-WAY	*Call
2096<2086		4988<6410	4-WAY TO 4-WAY	*Call
2096<2086		4988<6420	4-WAY TO 4-WAY	*Call
2096<2086		4988<6430	4-WAY TO 4-WAY	*Call
2096<2086		4988<6440	4-WAY TO 4-WAY	*Call
2096<2086		4988<6450	4-WAY TO 4-WAY	*Call
2096<2086		4988<6460	4-WAY TO 4-WAY	*Call
2096<2086		4988<6470	4-WAY TO 4-WAY	*Call
2096<2086		4989<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4989<6110	1-WAY TO 1-WAY	*Call
2096<2086		4989<6120	1-WAY TO 1-WAY	*Call
2096<2086		4989<6130	1-WAY TO 1-WAY	*Call
2096<2086		4989<6140	1-WAY TO 1-WAY	*Call
2096<2086		4989<6150	1-WAY TO 1-WAY	*Call
2096<2086		4989<6160	1-WAY TO 1-WAY	*Call
2096<2086		4989<6170	1-WAY TO 1-WAY	*Call
2096<2086		4989<6210	2-WAY TO 1-WAY	*Call
2096<2086		4989<6220	2-WAY TO 1-WAY	*Call
2096<2086		4989<6230	2-WAY TO 1-WAY	*Call
2096<2086		4989<6240	2-WAY TO 1-WAY	*Call
2096<2086		4989<6250	2-WAY TO 1-WAY	*Call
2096<2086		4989<6260	2-WAY TO 1-WAY	*Call
2096<2086		4989<6270	2-WAY TO 1-WAY	*Call
2096<2086		4989<6310	3-WAY TO 1-WAY	*Call
2096<2086		4989<6320	3-WAY TO 1-WAY	*Call
2096<2086		4989<6330	3-WAY TO 1-WAY	*Call
2096<2086		4989<6340	3-WAY TO 1-WAY	*Call
2096<2086		4989<6350	3-WAY TO 1-WAY	*Call
2096<2086		4989<6360	3-WAY TO 1-WAY	*Call
2096<2086		4989<6370	3-WAY TO 1-WAY	*Call
2096<2086		4989<6410	4-WAY TO 1-WAY	*Call
2096<2086		4989<6420	4-WAY TO 1-WAY	*Call
2096<2086		4989<6430	4-WAY TO 1-WAY	*Call
2096<2086		4989<6440	4-WAY TO 1-WAY	*Call
2096<2086		4989<6450	4-WAY TO 1-WAY	*Call
2096<2086		4989<6460	4-WAY TO 1-WAY	*Call
2096<2086		4989<6470	4-WAY TO 1-WAY	*Call
2096<2086		4990<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4990<6110	1-WAY TO 2-WAY	*Call
2096<2086		4990<6120	1-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4990<6130	1-WAY TO 2-WAY	*Call
2096<2086		4990<6140	1-WAY TO 2-WAY	*Call
2096<2086		4990<6150	1-WAY TO 2-WAY	*Call
2096<2086		4990<6160	1-WAY TO 2-WAY	*Call
2096<2086		4990<6170	1-WAY TO 2-WAY	*Call
2096<2086		4990<6210	2-WAY TO 2-WAY	*Call
2096<2086		4990<6220	2-WAY TO 2-WAY	*Call
2096<2086		4990<6230	2-WAY TO 2-WAY	*Call
2096<2086		4990<6240	2-WAY TO 2-WAY	*Call
2096<2086		4990<6250	2-WAY TO 2-WAY	*Call
2096<2086		4990<6260	2-WAY TO 2-WAY	*Call
2096<2086		4990<6270	2-WAY TO 2-WAY	*Call
2096<2086		4990<6310	3-WAY TO 2-WAY	*Call
2096<2086		4990<6320	3-WAY TO 2-WAY	*Call
2096<2086		4990<6330	3-WAY TO 2-WAY	*Call
2096<2086		4990<6340	3-WAY TO 2-WAY	*Call
2096<2086		4990<6350	3-WAY TO 2-WAY	*Call
2096<2086		4990<6360	3-WAY TO 2-WAY	*Call
2096<2086		4990<6370	3-WAY TO 2-WAY	*Call
2096<2086		4990<6410	4-WAY TO 2-WAY	*Call
2096<2086		4990<6420	4-WAY TO 2-WAY	*Call
2096<2086		4990<6430	4-WAY TO 2-WAY	*Call
2096<2086		4990<6440	4-WAY TO 2-WAY	*Call
2096<2086		4990<6450	4-WAY TO 2-WAY	*Call
2096<2086		4990<6460	4-WAY TO 2-WAY	*Call
2096<2086		4990<6470	4-WAY TO 2-WAY	*Call
2096<2086		4991<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4991<6110	1-WAY TO 3-WAY	*Call
2096<2086		4991<6120	1-WAY TO 3-WAY	*Call
2096<2086		4991<6130	1-WAY TO 3-WAY	*Call
2096<2086		4991<6140	1-WAY TO 3-WAY	*Call
2096<2086		4991<6150	1-WAY TO 3-WAY	*Call
2096<2086		4991<6160	1-WAY TO 3-WAY	*Call
2096<2086		4991<6170	1-WAY TO 3-WAY	*Call
2096<2086		4991<6210	2-WAY TO 3-WAY	*Call
2096<2086		4991<6220	2-WAY TO 3-WAY	*Call
2096<2086		4991<6230	2-WAY TO 3-WAY	*Call
2096<2086		4991<6240	2-WAY TO 3-WAY	*Call
2096<2086		4991<6250	2-WAY TO 3-WAY	*Call
2096<2086		4991<6260	2-WAY TO 3-WAY	*Call
2096<2086		4991<6270	2-WAY TO 3-WAY	*Call
2096<2086		4991<6310	3-WAY TO 3-WAY	*Call
2096<2086		4991<6320	3-WAY TO 3-WAY	*Call
2096<2086		4991<6330	3-WAY TO 3-WAY	*Call
2096<2086		4991<6340	3-WAY TO 3-WAY	*Call
2096<2086		4991<6350	3-WAY TO 3-WAY	*Call
2096<2086		4991<6360	3-WAY TO 3-WAY	*Call
2096<2086		4991<6370	3-WAY TO 3-WAY	*Call
2096<2086		4991<6410	4-WAY TO 3-WAY	*Call
2096<2086		4991<6420	4-WAY TO 3-WAY	*Call
2096<2086		4991<6430	4-WAY TO 3-WAY	*Call
2096<2086		4991<6440	4-WAY TO 3-WAY	*Call
2096<2086		4991<6450	4-WAY TO 3-WAY	*Call
2096<2086		4991<6460	4-WAY TO 3-WAY	*Call
2096<2086		4991<6470	4-WAY TO 3-WAY	*Call
2096<2086		4992<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4992<6110	1-WAY TO 4-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4992<6120	1-WAY TO 4-WAY	*Call
2096<2086		4992<6130	1-WAY TO 4-WAY	*Call
2096<2086		4992<6140	1-WAY TO 4-WAY	*Call
2096<2086		4992<6150	1-WAY TO 4-WAY	*Call
2096<2086		4992<6160	1-WAY TO 4-WAY	*Call
2096<2086		4992<6170	1-WAY TO 4-WAY	*Call
2096<2086		4992<6210	2-WAY TO 4-WAY	*Call
2096<2086		4992<6220	2-WAY TO 4-WAY	*Call
2096<2086		4992<6230	2-WAY TO 4-WAY	*Call
2096<2086		4992<6240	2-WAY TO 4-WAY	*Call
2096<2086		4992<6250	2-WAY TO 4-WAY	*Call
2096<2086		4992<6260	2-WAY TO 4-WAY	*Call
2096<2086		4992<6270	2-WAY TO 4-WAY	*Call
2096<2086		4992<6310	3-WAY TO 4-WAY	*Call
2096<2086		4992<6320	3-WAY TO 4-WAY	*Call
2096<2086		4992<6330	3-WAY TO 4-WAY	*Call
2096<2086		4992<6340	3-WAY TO 4-WAY	*Call
2096<2086		4992<6350	3-WAY TO 4-WAY	*Call
2096<2086		4992<6360	3-WAY TO 4-WAY	*Call
2096<2086		4992<6370	3-WAY TO 4-WAY	*Call
2096<2086		4992<6410	4-WAY TO 4-WAY	*Call
2096<2086		4992<6420	4-WAY TO 4-WAY	*Call
2096<2086		4992<6430	4-WAY TO 4-WAY	*Call
2096<2086		4992<6440	4-WAY TO 4-WAY	*Call
2096<2086		4992<6450	4-WAY TO 4-WAY	*Call
2096<2086		4992<6460	4-WAY TO 4-WAY	*Call
2096<2086		4992<6470	4-WAY TO 4-WAY	*Call
2096<2086		4993<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4993<6110	1-WAY TO 1-WAY	*Call
2096<2086		4993<6120	1-WAY TO 1-WAY	*Call
2096<2086		4993<6130	1-WAY TO 1-WAY	*Call
2096<2086		4993<6140	1-WAY TO 1-WAY	*Call
2096<2086		4993<6150	1-WAY TO 1-WAY	*Call
2096<2086		4993<6160	1-WAY TO 1-WAY	*Call
2096<2086		4993<6170	1-WAY TO 1-WAY	*Call
2096<2086		4993<6210	2-WAY TO 1-WAY	*Call
2096<2086		4993<6220	2-WAY TO 1-WAY	*Call
2096<2086		4993<6230	2-WAY TO 1-WAY	*Call
2096<2086		4993<6240	2-WAY TO 1-WAY	*Call
2096<2086		4993<6250	2-WAY TO 1-WAY	*Call
2096<2086		4993<6260	2-WAY TO 1-WAY	*Call
2096<2086		4993<6270	2-WAY TO 1-WAY	*Call
2096<2086		4993<6310	3-WAY TO 1-WAY	*Call
2096<2086		4993<6320	3-WAY TO 1-WAY	*Call
2096<2086		4993<6330	3-WAY TO 1-WAY	*Call
2096<2086		4993<6340	3-WAY TO 1-WAY	*Call
2096<2086		4993<6350	3-WAY TO 1-WAY	*Call
2096<2086		4993<6360	3-WAY TO 1-WAY	*Call
2096<2086		4993<6370	3-WAY TO 1-WAY	*Call
2096<2086		4993<6410	4-WAY TO 1-WAY	*Call
2096<2086		4993<6420	4-WAY TO 1-WAY	*Call
2096<2086		4993<6430	4-WAY TO 1-WAY	*Call
2096<2086		4993<6440	4-WAY TO 1-WAY	*Call
2096<2086		4993<6450	4-WAY TO 1-WAY	*Call
2096<2086		4993<6460	4-WAY TO 1-WAY	*Call
2096<2086		4993<6470	4-WAY TO 1-WAY	*Call
2096<2086		4994<6070	ZERO-WAY TO 2-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4996<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		4996<6110	1-WAY TO 4-WAY	*Call
2096<2086		4996<6120	1-WAY TO 4-WAY	*Call
2096<2086		4996<6130	1-WAY TO 4-WAY	*Call
2096<2086		4996<6140	1-WAY TO 4-WAY	*Call
2096<2086		4996<6150	1-WAY TO 4-WAY	*Call
2096<2086		4996<6160	1-WAY TO 4-WAY	*Call
2096<2086		4996<6170	1-WAY TO 4-WAY	*Call
2096<2086		4996<6210	2-WAY TO 4-WAY	*Call
2096<2086		4996<6220	2-WAY TO 4-WAY	*Call
2096<2086		4996<6230	2-WAY TO 4-WAY	*Call
2096<2086		4996<6240	2-WAY TO 4-WAY	*Call
2096<2086		4996<6250	2-WAY TO 4-WAY	*Call
2096<2086		4996<6260	2-WAY TO 4-WAY	*Call
2096<2086		4996<6270	2-WAY TO 4-WAY	*Call
2096<2086		4996<6310	3-WAY TO 4-WAY	*Call
2096<2086		4996<6320	3-WAY TO 4-WAY	*Call
2096<2086		4996<6330	3-WAY TO 4-WAY	*Call
2096<2086		4996<6340	3-WAY TO 4-WAY	*Call
2096<2086		4996<6350	3-WAY TO 4-WAY	*Call
2096<2086		4996<6360	3-WAY TO 4-WAY	*Call
2096<2086		4996<6370	3-WAY TO 4-WAY	*Call
2096<2086		4996<6410	4-WAY TO 4-WAY	*Call
2096<2086		4996<6420	4-WAY TO 4-WAY	*Call
2096<2086		4996<6430	4-WAY TO 4-WAY	*Call
2096<2086		4996<6440	4-WAY TO 4-WAY	*Call
2096<2086		4996<6450	4-WAY TO 4-WAY	*Call
2096<2086		4996<6460	4-WAY TO 4-WAY	*Call
2096<2086		4996<6470	4-WAY TO 4-WAY	*Call
2096<2086		4997<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		4997<6110	1-WAY TO 1-WAY	*Call
2096<2086		4997<6120	1-WAY TO 1-WAY	*Call
2096<2086		4997<6130	1-WAY TO 1-WAY	*Call
2096<2086		4997<6140	1-WAY TO 1-WAY	*Call
2096<2086		4997<6150	1-WAY TO 1-WAY	*Call
2096<2086		4997<6160	1-WAY TO 1-WAY	*Call
2096<2086		4997<6170	1-WAY TO 1-WAY	*Call
2096<2086		4997<6210	2-WAY TO 1-WAY	*Call
2096<2086		4997<6220	2-WAY TO 1-WAY	*Call
2096<2086		4997<6230	2-WAY TO 1-WAY	*Call
2096<2086		4997<6240	2-WAY TO 1-WAY	*Call
2096<2086		4997<6250	2-WAY TO 1-WAY	*Call
2096<2086		4997<6260	2-WAY TO 1-WAY	*Call
2096<2086		4997<6270	2-WAY TO 1-WAY	*Call
2096<2086		4997<6310	3-WAY TO 1-WAY	*Call
2096<2086		4997<6320	3-WAY TO 1-WAY	*Call
2096<2086		4997<6330	3-WAY TO 1-WAY	*Call
2096<2086		4997<6340	3-WAY TO 1-WAY	*Call
2096<2086		4997<6350	3-WAY TO 1-WAY	*Call
2096<2086		4997<6360	3-WAY TO 1-WAY	*Call
2096<2086		4997<6370	3-WAY TO 1-WAY	*Call
2096<2086		4997<6410	4-WAY TO 1-WAY	*Call
2096<2086		4997<6420	4-WAY TO 1-WAY	*Call
2096<2086		4997<6430	4-WAY TO 1-WAY	*Call
2096<2086		4997<6440	4-WAY TO 1-WAY	*Call
2096<2086		4997<6450	4-WAY TO 1-WAY	*Call
2096<2086		4997<6460	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4997<6470	4-WAY TO 1-WAY	*Call
2096<2086		4998<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		4998<6110	1-WAY TO 2-WAY	*Call
2096<2086		4998<6120	1-WAY TO 2-WAY	*Call
2096<2086		4998<6130	1-WAY TO 2-WAY	*Call
2096<2086		4998<6140	1-WAY TO 2-WAY	*Call
2096<2086		4998<6150	1-WAY TO 2-WAY	*Call
2096<2086		4998<6160	1-WAY TO 2-WAY	*Call
2096<2086		4998<6170	1-WAY TO 2-WAY	*Call
2096<2086		4998<6210	2-WAY TO 2-WAY	*Call
2096<2086		4998<6220	2-WAY TO 2-WAY	*Call
2096<2086		4998<6230	2-WAY TO 2-WAY	*Call
2096<2086		4998<6240	2-WAY TO 2-WAY	*Call
2096<2086		4998<6250	2-WAY TO 2-WAY	*Call
2096<2086		4998<6260	2-WAY TO 2-WAY	*Call
2096<2086		4998<6270	2-WAY TO 2-WAY	*Call
2096<2086		4998<6310	3-WAY TO 2-WAY	*Call
2096<2086		4998<6320	3-WAY TO 2-WAY	*Call
2096<2086		4998<6330	3-WAY TO 2-WAY	*Call
2096<2086		4998<6340	3-WAY TO 2-WAY	*Call
2096<2086		4998<6350	3-WAY TO 2-WAY	*Call
2096<2086		4998<6360	3-WAY TO 2-WAY	*Call
2096<2086		4998<6370	3-WAY TO 2-WAY	*Call
2096<2086		4998<6410	4-WAY TO 2-WAY	*Call
2096<2086		4998<6420	4-WAY TO 2-WAY	*Call
2096<2086		4998<6430	4-WAY TO 2-WAY	*Call
2096<2086		4998<6440	4-WAY TO 2-WAY	*Call
2096<2086		4998<6450	4-WAY TO 2-WAY	*Call
2096<2086		4998<6460	4-WAY TO 2-WAY	*Call
2096<2086		4998<6470	4-WAY TO 2-WAY	*Call
2096<2086		4999<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		4999<6110	1-WAY TO 3-WAY	*Call
2096<2086		4999<6120	1-WAY TO 3-WAY	*Call
2096<2086		4999<6130	1-WAY TO 3-WAY	*Call
2096<2086		4999<6140	1-WAY TO 3-WAY	*Call
2096<2086		4999<6150	1-WAY TO 3-WAY	*Call
2096<2086		4999<6160	1-WAY TO 3-WAY	*Call
2096<2086		4999<6170	1-WAY TO 3-WAY	*Call
2096<2086		4999<6210	2-WAY TO 3-WAY	*Call
2096<2086		4999<6220	2-WAY TO 3-WAY	*Call
2096<2086		4999<6230	2-WAY TO 3-WAY	*Call
2096<2086		4999<6240	2-WAY TO 3-WAY	*Call
2096<2086		4999<6250	2-WAY TO 3-WAY	*Call
2096<2086		4999<6260	2-WAY TO 3-WAY	*Call
2096<2086		4999<6270	2-WAY TO 3-WAY	*Call
2096<2086		4999<6310	3-WAY TO 3-WAY	*Call
2096<2086		4999<6320	3-WAY TO 3-WAY	*Call
2096<2086		4999<6330	3-WAY TO 3-WAY	*Call
2096<2086		4999<6340	3-WAY TO 3-WAY	*Call
2096<2086		4999<6350	3-WAY TO 3-WAY	*Call
2096<2086		4999<6360	3-WAY TO 3-WAY	*Call
2096<2086		4999<6370	3-WAY TO 3-WAY	*Call
2096<2086		4999<6410	4-WAY TO 3-WAY	*Call
2096<2086		4999<6420	4-WAY TO 3-WAY	*Call
2096<2086		4999<6430	4-WAY TO 3-WAY	*Call
2096<2086		4999<6440	4-WAY TO 3-WAY	*Call
2096<2086		4999<6450	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		4999<6460	4-WAY TO 3-WAY	*Call
2096<2086		4999<6470	4-WAY TO 3-WAY	*Call
2096<2086		5000<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		5000<6110	1-WAY TO 4-WAY	*Call
2096<2086		5000<6120	1-WAY TO 4-WAY	*Call
2096<2086		5000<6130	1-WAY TO 4-WAY	*Call
2096<2086		5000<6140	1-WAY TO 4-WAY	*Call
2096<2086		5000<6150	1-WAY TO 4-WAY	*Call
2096<2086		5000<6160	1-WAY TO 4-WAY	*Call
2096<2086		5000<6170	1-WAY TO 4-WAY	*Call
2096<2086		5000<6210	2-WAY TO 4-WAY	*Call
2096<2086		5000<6220	2-WAY TO 4-WAY	*Call
2096<2086		5000<6230	2-WAY TO 4-WAY	*Call
2096<2086		5000<6240	2-WAY TO 4-WAY	*Call
2096<2086		5000<6250	2-WAY TO 4-WAY	*Call
2096<2086		5000<6260	2-WAY TO 4-WAY	*Call
2096<2086		5000<6270	2-WAY TO 4-WAY	*Call
2096<2086		5000<6310	3-WAY TO 4-WAY	*Call
2096<2086		5000<6320	3-WAY TO 4-WAY	*Call
2096<2086		5000<6330	3-WAY TO 4-WAY	*Call
2096<2086		5000<6340	3-WAY TO 4-WAY	*Call
2096<2086		5000<6350	3-WAY TO 4-WAY	*Call
2096<2086		5000<6360	3-WAY TO 4-WAY	*Call
2096<2086		5000<6370	3-WAY TO 4-WAY	*Call
2096<2086		5000<6410	4-WAY TO 4-WAY	*Call
2096<2086		5000<6420	4-WAY TO 4-WAY	*Call
2096<2086		5000<6430	4-WAY TO 4-WAY	*Call
2096<2086		5000<6440	4-WAY TO 4-WAY	*Call
2096<2086		5000<6450	4-WAY TO 4-WAY	*Call
2096<2086		5000<6460	4-WAY TO 4-WAY	*Call
2096<2086		5000<6470	4-WAY TO 4-WAY	*Call
2096<2086		5001<6070	ZERO-WAY TO 1-WAY	*Call
2096<2086		5001<6110	1-WAY TO 1-WAY	*Call
2096<2086		5001<6120	1-WAY TO 1-WAY	*Call
2096<2086		5001<6130	1-WAY TO 1-WAY	*Call
2096<2086		5001<6140	1-WAY TO 1-WAY	*Call
2096<2086		5001<6150	1-WAY TO 1-WAY	*Call
2096<2086		5001<6160	1-WAY TO 1-WAY	*Call
2096<2086		5001<6170	1-WAY TO 1-WAY	*Call
2096<2086		5001<6210	2-WAY TO 1-WAY	*Call
2096<2086		5001<6220	2-WAY TO 1-WAY	*Call
2096<2086		5001<6230	2-WAY TO 1-WAY	*Call
2096<2086		5001<6240	2-WAY TO 1-WAY	*Call
2096<2086		5001<6250	2-WAY TO 1-WAY	*Call
2096<2086		5001<6260	2-WAY TO 1-WAY	*Call
2096<2086		5001<6270	2-WAY TO 1-WAY	*Call
2096<2086		5001<6310	3-WAY TO 1-WAY	*Call
2096<2086		5001<6320	3-WAY TO 1-WAY	*Call
2096<2086		5001<6330	3-WAY TO 1-WAY	*Call
2096<2086		5001<6340	3-WAY TO 1-WAY	*Call
2096<2086		5001<6350	3-WAY TO 1-WAY	*Call
2096<2086		5001<6360	3-WAY TO 1-WAY	*Call
2096<2086		5001<6370	3-WAY TO 1-WAY	*Call
2096<2086		5001<6410	4-WAY TO 1-WAY	*Call
2096<2086		5001<6420	4-WAY TO 1-WAY	*Call
2096<2086		5001<6430	4-WAY TO 1-WAY	*Call
2096<2086		5001<6440	4-WAY TO 1-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		5001<6450	4-WAY TO 1-WAY	*Call
2096<2086		5001<6460	4-WAY TO 1-WAY	*Call
2096<2086		5001<6470	4-WAY TO 1-WAY	*Call
2096<2086		5002<6070	ZERO-WAY TO 2-WAY	*Call
2096<2086		5002<6110	1-WAY TO 2-WAY	*Call
2096<2086		5002<6120	1-WAY TO 2-WAY	*Call
2096<2086		5002<6130	1-WAY TO 2-WAY	*Call
2096<2086		5002<6140	1-WAY TO 2-WAY	*Call
2096<2086		5002<6150	1-WAY TO 2-WAY	*Call
2096<2086		5002<6160	1-WAY TO 2-WAY	*Call
2096<2086		5002<6170	1-WAY TO 2-WAY	*Call
2096<2086		5002<6210	2-WAY TO 2-WAY	*Call
2096<2086		5002<6220	2-WAY TO 2-WAY	*Call
2096<2086		5002<6230	2-WAY TO 2-WAY	*Call
2096<2086		5002<6240	2-WAY TO 2-WAY	*Call
2096<2086		5002<6250	2-WAY TO 2-WAY	*Call
2096<2086		5002<6260	2-WAY TO 2-WAY	*Call
2096<2086		5002<6270	2-WAY TO 2-WAY	*Call
2096<2086		5002<6310	3-WAY TO 2-WAY	*Call
2096<2086		5002<6320	3-WAY TO 2-WAY	*Call
2096<2086		5002<6330	3-WAY TO 2-WAY	*Call
2096<2086		5002<6340	3-WAY TO 2-WAY	*Call
2096<2086		5002<6350	3-WAY TO 2-WAY	*Call
2096<2086		5002<6360	3-WAY TO 2-WAY	*Call
2096<2086		5002<6370	3-WAY TO 2-WAY	*Call
2096<2086		5002<6410	4-WAY TO 2-WAY	*Call
2096<2086		5002<6420	4-WAY TO 2-WAY	*Call
2096<2086		5002<6430	4-WAY TO 2-WAY	*Call
2096<2086		5002<6440	4-WAY TO 2-WAY	*Call
2096<2086		5002<6450	4-WAY TO 2-WAY	*Call
2096<2086		5002<6460	4-WAY TO 2-WAY	*Call
2096<2086		5002<6470	4-WAY TO 2-WAY	*Call
2096<2086		5003<6070	ZERO-WAY TO 3-WAY	*Call
2096<2086		5003<6110	1-WAY TO 3-WAY	*Call
2096<2086		5003<6120	1-WAY TO 3-WAY	*Call
2096<2086		5003<6130	1-WAY TO 3-WAY	*Call
2096<2086		5003<6140	1-WAY TO 3-WAY	*Call
2096<2086		5003<6150	1-WAY TO 3-WAY	*Call
2096<2086		5003<6160	1-WAY TO 3-WAY	*Call
2096<2086		5003<6170	1-WAY TO 3-WAY	*Call
2096<2086		5003<6210	2-WAY TO 3-WAY	*Call
2096<2086		5003<6220	2-WAY TO 3-WAY	*Call
2096<2086		5003<6230	2-WAY TO 3-WAY	*Call
2096<2086		5003<6240	2-WAY TO 3-WAY	*Call
2096<2086		5003<6250	2-WAY TO 3-WAY	*Call
2096<2086		5003<6260	2-WAY TO 3-WAY	*Call
2096<2086		5003<6270	2-WAY TO 3-WAY	*Call
2096<2086		5003<6310	3-WAY TO 3-WAY	*Call
2096<2086		5003<6320	3-WAY TO 3-WAY	*Call
2096<2086		5003<6330	3-WAY TO 3-WAY	*Call
2096<2086		5003<6340	3-WAY TO 3-WAY	*Call
2096<2086		5003<6350	3-WAY TO 3-WAY	*Call
2096<2086		5003<6360	3-WAY TO 3-WAY	*Call
2096<2086		5003<6370	3-WAY TO 3-WAY	*Call
2096<2086		5003<6410	4-WAY TO 3-WAY	*Call
2096<2086		5003<6420	4-WAY TO 3-WAY	*Call
2096<2086		5003<6430	4-WAY TO 3-WAY	*Call

Machine Type	Model	Feature	Description	GSA Price
2096<2086		5003<6440	4-WAY TO 3-WAY	*Call
2096<2086		5003<6450	4-WAY TO 3-WAY	*Call
2096<2086		5003<6460	4-WAY TO 3-WAY	*Call
2096<2086		5003<6470	4-WAY TO 3-WAY	*Call
2096<2086		5004<6070	ZERO-WAY TO 4-WAY	*Call
2096<2086		5004<6110	1-WAY TO 4-WAY	*Call
2096<2086		5004<6120	1-WAY TO 4-WAY	*Call
2096<2086		5004<6130	1-WAY TO 4-WAY	*Call
2096<2086		5004<6140	1-WAY TO 4-WAY	*Call
2096<2086		5004<6150	1-WAY TO 4-WAY	*Call
2096<2086		5004<6160	1-WAY TO 4-WAY	*Call
2096<2086		5004<6170	1-WAY TO 4-WAY	*Call
2096<2086		5004<6210	2-WAY TO 4-WAY	*Call
2096<2086		5004<6220	2-WAY TO 4-WAY	*Call
2096<2086		5004<6230	2-WAY TO 4-WAY	*Call
2096<2086		5004<6240	2-WAY TO 4-WAY	*Call
2096<2086		5004<6250	2-WAY TO 4-WAY	*Call
2096<2086		5004<6260	2-WAY TO 4-WAY	*Call
2096<2086		5004<6270	2-WAY TO 4-WAY	*Call
2096<2086		5004<6310	3-WAY TO 4-WAY	*Call
2096<2086		5004<6320	3-WAY TO 4-WAY	*Call
2096<2086		5004<6330	3-WAY TO 4-WAY	*Call
2096<2086		5004<6340	3-WAY TO 4-WAY	*Call
2096<2086		5004<6350	3-WAY TO 4-WAY	*Call
2096<2086		5004<6360	3-WAY TO 4-WAY	*Call
2096<2086		5004<6370	3-WAY TO 4-WAY	*Call
2096<2086		5004<6410	4-WAY TO 4-WAY	*Call
2096<2086		5004<6420	4-WAY TO 4-WAY	*Call
2096<2086		5004<6430	4-WAY TO 4-WAY	*Call
2096<2086		5004<6440	4-WAY TO 4-WAY	*Call
2096<2086		5004<6450	4-WAY TO 4-WAY	*Call
2096<2086		5004<6460	4-WAY TO 4-WAY	*Call
2096<2086		5004<6470	4-WAY TO 4-WAY	*Call
2097		1118<1117	E12 TO E26	*Call
2097		1119<1117	E12 TO E40	*Call
2097		1119<1118	E26 TO E40	*Call
2097		1120<1117	E12 TO E56	*Call
2097		1120<1118	E26 TO E56	*Call
2097		1120<1119	E40 TO E56	*Call
2097		1121<1117	E12 TO E64	*Call
2097		1121<1118	E26 TO E64	*Call
2097		1121<1119	E40 TO E64	*Call
2097		1121<1120	E56 TO E64	*Call
2097		2202<2201	16 GB STD TO 32 GB STD	*Call
2097		2203<2201	16 GB STD TO 48 GB STD	*Call
2097		2203<2202	32 GB STD TO 48 GB STD	*Call
2097		2204<2201	16 GB STD TO 64 GB STD	*Call
2097		2204<2202	32 GB STD TO 64 GB STD	*Call
2097		2204<2203	48 GB STD TO 64 GB STD	*Call
2097		2205<2201	16 GB STD TO 80 GB STD	*Call
2097		2205<2202	32 GB STD TO 80 GB STD	*Call
2097		2205<2203	48 GB STD TO 80 GB STD	*Call
2097		2205<2204	64 GB STD TO 80 GB STD	*Call
2097		2206<2201	16 GB STD TO 96 GB STD	*Call
2097		2206<2202	32 GB STD TO 96 GB STD	*Call
2097		2206<2203	48 GB STD TO 96 GB STD	*Call
2097		2206<2204	64 GB STD TO 96 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2206<2205	80 GB STD TO 96 GB STD	*Call
2097		2207<2201	16 GB STD TO 112 GB STD	*Call
2097		2207<2202	32 GB STD TO 112 GB STD	*Call
2097		2207<2203	48 GB STD TO 112 GB STD	*Call
2097		2207<2204	64 GB STD TO 112 GB STD	*Call
2097		2207<2205	80 GB STD TO 112 GB STD	*Call
2097		2207<2206	96 GB STD TO 112 GB STD	*Call
2097		2208<2201	16 GB STD TO 128 GB STD	*Call
2097		2208<2202	32 GB STD TO 128 GB STD	*Call
2097		2208<2203	48 GB STD TO 128 GB STD	*Call
2097		2208<2204	64 GB STD TO 128 GB STD	*Call
2097		2208<2205	80 GB STD TO 128 GB STD	*Call
2097		2208<2206	96 GB STD TO 128 GB STD	*Call
2097		2208<2207	112 GB STD TO 128 GB STD	*Call
2097		2209<2201	16 GB STD TO 144 GB STD	*Call
2097		2209<2202	32 GB STD TO 144 GB STD	*Call
2097		2209<2203	48 GB STD TO 144 GB STD	*Call
2097		2209<2204	64 GB STD TO 144 GB STD	*Call
2097		2209<2205	80 GB STD TO 144 GB STD	*Call
2097		2209<2206	96 GB STD TO 144 GB STD	*Call
2097		2209<2207	112 GB STD TO 144 GB STD	*Call
2097		2209<2208	128 GB STD TO 144 GB STD	*Call
2097		2211<2201	16 GB STD TO 176 GB STD	*Call
2097		2211<2202	32 GB STD TO 176 GB STD	*Call
2097		2211<2203	48 GB STD TO 176 GB STD	*Call
2097		2211<2204	64 GB STD TO 176 GB STD	*Call
2097		2211<2205	80 GB STD TO 176 GB STD	*Call
2097		2211<2206	96 GB STD TO 176 GB STD	*Call
2097		2211<2207	112 GB STD TO 176 GB STD	*Call
2097		2211<2208	128 GB STD TO 176 GB STD	*Call
2097		2211<2209	144 GB STD TO 176 GB STD	*Call
2097		2211<2243	160 GB STD TO 176 GB STD	*Call
2097		2212<2201	16 GB STD TO 192 GB STD	*Call
2097		2212<2202	32 GB STD TO 192 GB STD	*Call
2097		2212<2203	48 GB STD TO 192 GB STD	*Call
2097		2212<2204	64 GB STD TO 192 GB STD	*Call
2097		2212<2205	80 GB STD TO 192 GB STD	*Call
2097		2212<2206	96 GB STD TO 192 GB STD	*Call
2097		2212<2207	112 GB STD TO 192 GB STD	*Call
2097		2212<2208	128 GB STD TO 192 GB STD	*Call
2097		2212<2209	144 GB STD TO 192 GB STD	*Call
2097		2212<2211	176 GB STD TO 192 GB STD	*Call
2097		2212<2243	160 GB STD TO 192 GB STD	*Call
2097		2213<2201	16 GB STD TO 208 GB STD	*Call
2097		2213<2202	32 GB STD TO 208 GB STD	*Call
2097		2213<2203	48 GB STD TO 208 GB STD	*Call
2097		2213<2204	64 GB STD TO 208 GB STD	*Call
2097		2213<2205	80 GB STD TO 208 GB STD	*Call
2097		2213<2206	96 GB STD TO 208 GB STD	*Call
2097		2213<2207	112 GB STD TO 208 GB STD	*Call
2097		2213<2208	128 GB STD TO 208 GB STD	*Call
2097		2213<2209	144 GB STD TO 208 GB STD	*Call
2097		2213<2211	176 GB STD TO 208 GB STD	*Call
2097		2213<2212	192 GB STD TO 208 GB STD	*Call
2097		2213<2243	160 GB STD TO 208 GB STD	*Call
2097		2214<2201	16 GB STD TO 224 GB STD	*Call
2097		2214<2202	32 GB STD TO 224 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2214<2203	48 GB STD TO 224 GB STD	*Call
2097		2214<2204	64 GB STD TO 224 GB STD	*Call
2097		2214<2205	80 GB STD TO 224 GB STD	*Call
2097		2214<2206	96 GB STD TO 224 GB STD	*Call
2097		2214<2207	112 GB STD TO 224 GB STD	*Call
2097		2214<2208	128 GB STD TO 224 GB STD	*Call
2097		2214<2209	144 GB STD TO 224 GB STD	*Call
2097		2214<2211	176 GB STD TO 224 GB STD	*Call
2097		2214<2212	192 GB STD TO 224 GB STD	*Call
2097		2214<2213	208 GB STD TO 224 GB STD	*Call
2097		2214<2243	160 GB STD TO 224 GB STD	*Call
2097		2215<2201	16 GB STD TO 240 GB STD	*Call
2097		2215<2202	32 GB STD TO 240 GB STD	*Call
2097		2215<2203	48 GB STD TO 240 GB STD	*Call
2097		2215<2204	64 GB STD TO 240 GB STD	*Call
2097		2215<2205	80 GB STD TO 240 GB STD	*Call
2097		2215<2206	96 GB STD TO 240 GB STD	*Call
2097		2215<2207	112 GB STD TO 240 GB STD	*Call
2097		2215<2208	128 GB STD TO 240 GB STD	*Call
2097		2215<2209	144 GB STD TO 240 GB STD	*Call
2097		2215<2211	176 GB STD TO 240 GB STD	*Call
2097		2215<2212	192 GB STD TO 240 GB STD	*Call
2097		2215<2213	208 GB STD TO 240 GB STD	*Call
2097		2215<2214	224 GB STD TO 240 GB STD	*Call
2097		2215<2243	160 GB STD TO 240 GB STD	*Call
2097		2216<2201	16 GB STD TO 256 GB STD	*Call
2097		2216<2202	32 GB STD TO 256 GB STD	*Call
2097		2216<2203	48 GB STD TO 256 GB STD	*Call
2097		2216<2204	64 GB STD TO 256 GB STD	*Call
2097		2216<2205	80 GB STD TO 256 GB STD	*Call
2097		2216<2206	96 GB STD TO 256 GB STD	*Call
2097		2216<2207	112 GB STD TO 256 GB STD	*Call
2097		2216<2208	128 GB STD TO 256 GB STD	*Call
2097		2216<2209	144 GB STD TO 256 GB STD	*Call
2097		2216<2211	176 GB STD TO 256 GB STD	*Call
2097		2216<2212	192 GB STD TO 256 GB STD	*Call
2097		2216<2213	208 GB STD TO 256 GB STD	*Call
2097		2216<2214	224 GB STD TO 256 GB STD	*Call
2097		2216<2215	240 GB STD TO 256 GB STD	*Call
2097		2216<2243	160 GB STD TO 256 GB STD	*Call
2097		2217<2201	16 GB STD TO 288 GB STD	*Call
2097		2217<2202	32 GB STD TO 288 GB STD	*Call
2097		2217<2203	48 GB STD TO 288 GB STD	*Call
2097		2217<2204	64 GB STD TO 288 GB STD	*Call
2097		2217<2205	80 GB STD TO 288 GB STD	*Call
2097		2217<2206	96 GB STD TO 288 GB STD	*Call
2097		2217<2207	112 GB STD TO 288 GB STD	*Call
2097		2217<2208	128 GB STD TO 288 GB STD	*Call
2097		2217<2209	144 GB STD TO 288 GB STD	*Call
2097		2217<2211	176 GB STD TO 288 GB STD	*Call
2097		2217<2212	192 GB STD TO 288 GB STD	*Call
2097		2217<2213	208 GB STD TO 288 GB STD	*Call
2097		2217<2214	224 GB STD TO 288 GB STD	*Call
2097		2217<2215	240 GB STD TO 288 GB STD	*Call
2097		2217<2216	256 GB STD TO 288 GB STD	*Call
2097		2217<2243	160 GB STD TO 288 GB STD	*Call
2097		2218<2201	16 GB STD TO 320 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2218<2202	32 GB STD TO 320 GB STD	*Call
2097		2218<2203	48 GB STD TO 320 GB STD	*Call
2097		2218<2204	64 GB STD TO 320 GB STD	*Call
2097		2218<2205	80 GB STD TO 320 GB STD	*Call
2097		2218<2206	96 GB STD TO 320 GB STD	*Call
2097		2218<2207	112 GB STD TO 320 GB STD	*Call
2097		2218<2208	128 GB STD TO 320 GB STD	*Call
2097		2218<2209	144 GB STD TO 320 GB STD	*Call
2097		2218<2211	176 GB STD TO 320 GB STD	*Call
2097		2218<2212	192 GB STD TO 320 GB STD	*Call
2097		2218<2213	208 GB STD TO 320 GB STD	*Call
2097		2218<2214	224 GB STD TO 320 GB STD	*Call
2097		2218<2215	240 GB STD TO 320 GB STD	*Call
2097		2218<2216	256 GB STD TO 320 GB STD	*Call
2097		2218<2217	288 GB STD TO 320 GB STD	*Call
2097		2218<2243	160 GB STD TO 320 GB STD	*Call
2097		2219<2201	16 GB STD TO 352 GB STD	*Call
2097		2219<2202	32 GB STD TO 352 GB STD	*Call
2097		2219<2203	48 GB STD TO 352 GB STD	*Call
2097		2219<2204	64 GB STD TO 352 GB STD	*Call
2097		2219<2205	80 GB STD TO 352 GB STD	*Call
2097		2219<2206	96 GB STD TO 352 GB STD	*Call
2097		2219<2207	112 GB STD TO 352 GB STD	*Call
2097		2219<2208	128 GB STD TO 352 GB STD	*Call
2097		2219<2209	144 GB STD TO 352 GB STD	*Call
2097		2219<2211	176 GB STD TO 352 GB STD	*Call
2097		2219<2212	192 GB STD TO 352 GB STD	*Call
2097		2219<2213	208 GB STD TO 352 GB STD	*Call
2097		2219<2214	224 GB STD TO 352 GB STD	*Call
2097		2219<2215	240 GB STD TO 352 GB STD	*Call
2097		2219<2216	256 GB STD TO 352 GB STD	*Call
2097		2219<2217	288 GB STD TO 352 GB STD	*Call
2097		2219<2218	320 GB STD TO 352 GB STD	*Call
2097		2219<2243	160 GB STD TO 352 GB STD	*Call
2097		2220<2201	16 GB STD TO 384 GB STD	*Call
2097		2220<2202	32 GB STD TO 384 GB STD	*Call
2097		2220<2203	48 GB STD TO 384 GB STD	*Call
2097		2220<2204	64 GB STD TO 384 GB STD	*Call
2097		2220<2205	80 GB STD TO 384 GB STD	*Call
2097		2220<2206	96 GB STD TO 384 GB STD	*Call
2097		2220<2207	112 GB STD TO 384 GB STD	*Call
2097		2220<2208	128 GB STD TO 384 GB STD	*Call
2097		2220<2209	144 GB STD TO 384 GB STD	*Call
2097		2220<2211	176 GB STD TO 384 GB STD	*Call
2097		2220<2212	192 GB STD TO 384 GB STD	*Call
2097		2220<2213	208 GB STD TO 384 GB STD	*Call
2097		2220<2214	224 GB STD TO 384 GB STD	*Call
2097		2220<2215	240 GB STD TO 384 GB STD	*Call
2097		2220<2216	256 GB STD TO 384 GB STD	*Call
2097		2220<2217	288 GB STD TO 384 GB STD	*Call
2097		2220<2218	320 GB STD TO 384 GB STD	*Call
2097		2220<2219	352 GB STD TO 384 GB STD	*Call
2097		2220<2243	160 GB STD TO 384 GB STD	*Call
2097		2221<2201	16 GB STD TO 416 GB STD	*Call
2097		2221<2202	32 GB STD TO 416 GB STD	*Call
2097		2221<2203	48 GB STD TO 416 GB STD	*Call
2097		2221<2204	64 GB STD TO 416 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2221<2205	80 GB STD TO 416 GB STD	*Call
2097		2221<2206	96 GB STD TO 416 GB STD	*Call
2097		2221<2207	112 GB STD TO 416 GB STD	*Call
2097		2221<2208	128 GB STD TO 416 GB STD	*Call
2097		2221<2209	144 GB STD TO 416 GB STD	*Call
2097		2221<2211	176 GB STD TO 416 GB STD	*Call
2097		2221<2212	192 GB STD TO 416 GB STD	*Call
2097		2221<2213	208 GB STD TO 416 GB STD	*Call
2097		2221<2214	224 GB STD TO 416 GB STD	*Call
2097		2221<2215	240 GB STD TO 416 GB STD	*Call
2097		2221<2216	256 GB STD TO 416 GB STD	*Call
2097		2221<2217	288 GB STD TO 416 GB STD	*Call
2097		2221<2218	320 GB STD TO 416 GB STD	*Call
2097		2221<2219	352 GB STD TO 416 GB STD	*Call
2097		2221<2220	384 GB STD TO 416 GB STD	*Call
2097		2221<2243	160 GB STD TO 416 GB STD	*Call
2097		2222<2201	16 GB STD TO 448 GB STD	*Call
2097		2222<2202	32 GB STD TO 448 GB STD	*Call
2097		2222<2203	48 GB STD TO 448 GB STD	*Call
2097		2222<2204	64 GB STD TO 448 GB STD	*Call
2097		2222<2205	80 GB STD TO 448 GB STD	*Call
2097		2222<2206	96 GB STD TO 448 GB STD	*Call
2097		2222<2207	112 GB STD TO 448 GB STD	*Call
2097		2222<2208	128 GB STD TO 448 GB STD	*Call
2097		2222<2209	144 GB STD TO 448 GB STD	*Call
2097		2222<2211	176 GB STD TO 448 GB STD	*Call
2097		2222<2212	192 GB STD TO 448 GB STD	*Call
2097		2222<2213	208 GB STD TO 448 GB STD	*Call
2097		2222<2214	224 GB STD TO 448 GB STD	*Call
2097		2222<2215	240 GB STD TO 448 GB STD	*Call
2097		2222<2216	256 GB STD TO 448 GB STD	*Call
2097		2222<2217	288 GB STD TO 448 GB STD	*Call
2097		2222<2218	320 GB STD TO 448 GB STD	*Call
2097		2222<2219	352 GB STD TO 448 GB STD	*Call
2097		2222<2220	384 GB STD TO 448 GB STD	*Call
2097		2222<2221	416 GB STD TO 448 GB STD	*Call
2097		2222<2243	160 GB STD TO 448 GB STD	*Call
2097		2223<2201	16 GB STD TO 480 GB STD	*Call
2097		2223<2202	32 GB STD TO 480 GB STD	*Call
2097		2223<2203	48 GB STD TO 480 GB STD	*Call
2097		2223<2204	64 GB STD TO 480 GB STD	*Call
2097		2223<2205	80 GB STD TO 480 GB STD	*Call
2097		2223<2206	96 GB STD TO 480 GB STD	*Call
2097		2223<2207	112 GB STD TO 480 GB STD	*Call
2097		2223<2208	128 GB STD TO 480 GB STD	*Call
2097		2223<2209	144 GB STD TO 480 GB STD	*Call
2097		2223<2211	176 GB STD TO 480 GB STD	*Call
2097		2223<2212	192 GB STD TO 480 GB STD	*Call
2097		2223<2213	208 GB STD TO 480 GB STD	*Call
2097		2223<2214	224 GB STD TO 480 GB STD	*Call
2097		2223<2215	240 GB STD TO 480 GB STD	*Call
2097		2223<2216	256 GB STD TO 480 GB STD	*Call
2097		2223<2217	288 GB STD TO 480 GB STD	*Call
2097		2223<2218	320 GB STD TO 480 GB STD	*Call
2097		2223<2219	352 GB STD TO 480 GB STD	*Call
2097		2223<2220	384 GB STD TO 480 GB STD	*Call
2097		2223<2221	416 GB STD TO 480 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2223<2222	448 GB STD TO 480 GB STD	*Call
2097		2223<2243	160 GB STD TO 480 GB STD	*Call
2097		2224<2201	16 GB STD TO 512 GB STD	*Call
2097		2224<2202	32 GB STD TO 512 GB STD	*Call
2097		2224<2203	48 GB STD TO 512 GB STD	*Call
2097		2224<2204	64 GB STD TO 512 GB STD	*Call
2097		2224<2205	80 GB STD TO 512 GB STD	*Call
2097		2224<2206	96 GB STD TO 512 GB STD	*Call
2097		2224<2207	112 GB STD TO 512 GB STD	*Call
2097		2224<2208	128 GB STD TO 512 GB STD	*Call
2097		2224<2209	144 GB STD TO 512 GB STD	*Call
2097		2224<2211	176 GB STD TO 512 GB STD	*Call
2097		2224<2212	192 GB STD TO 512 GB STD	*Call
2097		2224<2213	208 GB STD TO 512 GB STD	*Call
2097		2224<2214	224 GB STD TO 512 GB STD	*Call
2097		2224<2215	240 GB STD TO 512 GB STD	*Call
2097		2224<2216	256 GB STD TO 512 GB STD	*Call
2097		2224<2217	288 GB STD TO 512 GB STD	*Call
2097		2224<2218	320 GB STD TO 512 GB STD	*Call
2097		2224<2219	352 GB STD TO 512 GB STD	*Call
2097		2224<2220	384 GB STD TO 512 GB STD	*Call
2097		2224<2221	416 GB STD TO 512 GB STD	*Call
2097		2224<2222	448 GB STD TO 512 GB STD	*Call
2097		2224<2223	480 GB STD TO 512 GB STD	*Call
2097		2224<2243	160 GB STD TO 512 GB STD	*Call
2097		2225<2201	16 GB STD TO 560 GB STD	*Call
2097		2225<2202	32 GB STD TO 560 GB STD	*Call
2097		2225<2203	48 GB STD TO 560 GB STD	*Call
2097		2225<2204	64 GB STD TO 560 GB STD	*Call
2097		2225<2205	80 GB STD TO 560 GB STD	*Call
2097		2225<2206	96 GB STD TO 560 GB STD	*Call
2097		2225<2207	112 GB STD TO 560 GB STD	*Call
2097		2225<2208	128 GB STD TO 560 GB STD	*Call
2097		2225<2209	144 GB STD TO 560 GB STD	*Call
2097		2225<2211	176 GB STD TO 560 GB STD	*Call
2097		2225<2212	192 GB STD TO 560 GB STD	*Call
2097		2225<2213	208 GB STD TO 560 GB STD	*Call
2097		2225<2214	224 GB STD TO 560 GB STD	*Call
2097		2225<2215	240 GB STD TO 560 GB STD	*Call
2097		2225<2216	256 GB STD TO 560 GB STD	*Call
2097		2225<2217	288 GB STD TO 560 GB STD	*Call
2097		2225<2218	320 GB STD TO 560 GB STD	*Call
2097		2225<2219	352 GB STD TO 560 GB STD	*Call
2097		2225<2220	384 GB STD TO 560 GB STD	*Call
2097		2225<2221	416 GB STD TO 560 GB STD	*Call
2097		2225<2222	448 GB STD TO 560 GB STD	*Call
2097		2225<2223	480 GB STD TO 560 GB STD	*Call
2097		2225<2224	512 GB STD TO 560 GB STD	*Call
2097		2225<2243	160 GB STD TO 560 GB STD	*Call
2097		2226<2201	16 GB STD TO 608 GB STD	*Call
2097		2226<2202	32 GB STD TO 608 GB STD	*Call
2097		2226<2203	48 GB STD TO 608 GB STD	*Call
2097		2226<2204	64 GB STD TO 608 GB STD	*Call
2097		2226<2205	80 GB STD TO 608 GB STD	*Call
2097		2226<2206	96 GB STD TO 608 GB STD	*Call
2097		2226<2207	112 GB STD TO 608 GB STD	*Call
2097		2226<2208	128 GB STD TO 608 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2226<2209	144 GB STD TO 608 GB STD	*Call
2097		2226<2211	176 GB STD TO 608 GB STD	*Call
2097		2226<2212	192 GB STD TO 608 GB STD	*Call
2097		2226<2213	208 GB STD TO 608 GB STD	*Call
2097		2226<2214	224 GB STD TO 608 GB STD	*Call
2097		2226<2215	240 GB STD TO 608 GB STD	*Call
2097		2226<2216	256 GB STD TO 608 GB STD	*Call
2097		2226<2217	288 GB STD TO 608 GB STD	*Call
2097		2226<2218	320 GB STD TO 608 GB STD	*Call
2097		2226<2219	352 GB STD TO 608 GB STD	*Call
2097		2226<2220	384 GB STD TO 608 GB STD	*Call
2097		2226<2221	416 GB STD TO 608 GB STD	*Call
2097		2226<2222	448 GB STD TO 608 GB STD	*Call
2097		2226<2223	480 GB STD TO 608 GB STD	*Call
2097		2226<2224	512 GB STD TO 608 GB STD	*Call
2097		2226<2225	560 GB STD TO 608 GB STD	*Call
2097		2226<2243	160 GB STD TO 608 GB STD	*Call
2097		2227<2201	16 GB STD TO 656 GB STD	*Call
2097		2227<2202	32 GB STD TO 656 GB STD	*Call
2097		2227<2203	48 GB STD TO 656 GB STD	*Call
2097		2227<2204	64 GB STD TO 656 GB STD	*Call
2097		2227<2205	80 GB STD TO 656 GB STD	*Call
2097		2227<2206	96 GB STD TO 656 GB STD	*Call
2097		2227<2207	112 GB STD TO 656 GB STD	*Call
2097		2227<2208	128 GB STD TO 656 GB STD	*Call
2097		2227<2209	144 GB STD TO 656 GB STD	*Call
2097		2227<2211	176 GB STD TO 656 GB STD	*Call
2097		2227<2212	192 GB STD TO 656 GB STD	*Call
2097		2227<2213	208 GB STD TO 656 GB STD	*Call
2097		2227<2214	224 GB STD TO 656 GB STD	*Call
2097		2227<2215	240 GB STD TO 656 GB STD	*Call
2097		2227<2216	256 GB STD TO 656 GB STD	*Call
2097		2227<2217	288 GB STD TO 656 GB STD	*Call
2097		2227<2218	320 GB STD TO 656 GB STD	*Call
2097		2227<2219	352 GB STD TO 656 GB STD	*Call
2097		2227<2220	384 GB STD TO 656 GB STD	*Call
2097		2227<2221	416 GB STD TO 656 GB STD	*Call
2097		2227<2222	448 GB STD TO 656 GB STD	*Call
2097		2227<2223	480 GB STD TO 656 GB STD	*Call
2097		2227<2224	512 GB STD TO 656 GB STD	*Call
2097		2227<2225	560 GB STD TO 656 GB STD	*Call
2097		2227<2226	608 GB STD TO 656 GB STD	*Call
2097		2227<2243	160 GB STD TO 656 GB STD	*Call
2097		2228<2201	16 GB STD TO 704 GB STD	*Call
2097		2228<2202	32 GB STD TO 704 GB STD	*Call
2097		2228<2203	48 GB STD TO 704 GB STD	*Call
2097		2228<2204	64 GB STD TO 704 GB STD	*Call
2097		2228<2205	80 GB STD TO 704 GB STD	*Call
2097		2228<2206	96 GB STD TO 704 GB STD	*Call
2097		2228<2207	112 GB STD TO 704 GB STD	*Call
2097		2228<2208	128 GB STD TO 704 GB STD	*Call
2097		2228<2209	144 GB STD TO 704 GB STD	*Call
2097		2228<2211	176 GB STD TO 704 GB STD	*Call
2097		2228<2212	192 GB STD TO 704 GB STD	*Call
2097		2228<2213	208 GB STD TO 704 GB STD	*Call
2097		2228<2214	224 GB STD TO 704 GB STD	*Call
2097		2228<2215	240 GB STD TO 704 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2228<2216	256 GB STD TO 704 GB STD	*Call
2097		2228<2217	288 GB STD TO 704 GB STD	*Call
2097		2228<2218	320 GB STD TO 704 GB STD	*Call
2097		2228<2219	352 GB STD TO 704 GB STD	*Call
2097		2228<2220	384 GB STD TO 704 GB STD	*Call
2097		2228<2221	416 GB STD TO 704 GB STD	*Call
2097		2228<2222	448 GB STD TO 704 GB STD	*Call
2097		2228<2223	480 GB STD TO 704 GB STD	*Call
2097		2228<2224	512 GB STD TO 704 GB STD	*Call
2097		2228<2225	560 GB STD TO 704 GB STD	*Call
2097		2228<2226	608 GB STD TO 704 GB STD	*Call
2097		2228<2227	656 GB STD TO 704 GB STD	*Call
2097		2228<2243	160 GB STD TO 704 GB STD	*Call
2097		2229<2201	16 GB STD TO 752 GB STD	*Call
2097		2229<2202	32 GB STD TO 752 GB STD	*Call
2097		2229<2203	48 GB STD TO 752 GB STD	*Call
2097		2229<2204	64 GB STD TO 752 GB STD	*Call
2097		2229<2205	80 GB STD TO 752 GB STD	*Call
2097		2229<2206	96 GB STD TO 752 GB STD	*Call
2097		2229<2207	112 GB STD TO 752 GB STD	*Call
2097		2229<2208	128 GB STD TO 752 GB STD	*Call
2097		2229<2209	144 GB STD TO 752 GB STD	*Call
2097		2229<2211	176 GB STD TO 752 GB STD	*Call
2097		2229<2212	192 GB STD TO 752 GB STD	*Call
2097		2229<2213	208 GB STD TO 752 GB STD	*Call
2097		2229<2214	224 GB STD TO 752 GB STD	*Call
2097		2229<2215	240 GB STD TO 752 GB STD	*Call
2097		2229<2216	256 GB STD TO 752 GB STD	*Call
2097		2229<2217	288 GB STD TO 752 GB STD	*Call
2097		2229<2218	320 GB STD TO 752 GB STD	*Call
2097		2229<2219	352 GB STD TO 752 GB STD	*Call
2097		2229<2220	384 GB STD TO 752 GB STD	*Call
2097		2229<2221	416 GB STD TO 752 GB STD	*Call
2097		2229<2222	448 GB STD TO 752 GB STD	*Call
2097		2229<2223	480 GB STD TO 752 GB STD	*Call
2097		2229<2224	512 GB STD TO 752 GB STD	*Call
2097		2229<2225	560 GB STD TO 752 GB STD	*Call
2097		2229<2226	608 GB STD TO 752 GB STD	*Call
2097		2229<2227	656 GB STD TO 752 GB STD	*Call
2097		2229<2228	704 GB STD TO 752 GB STD	*Call
2097		2229<2243	160 GB STD TO 752 GB STD	*Call
2097		2230<2201	16 GB STD TO 800 GB STD	*Call
2097		2230<2202	32 GB STD TO 800 GB STD	*Call
2097		2230<2203	48 GB STD TO 800 GB STD	*Call
2097		2230<2204	64 GB STD TO 800 GB STD	*Call
2097		2230<2205	80 GB STD TO 800 GB STD	*Call
2097		2230<2206	96 GB STD TO 800 GB STD	*Call
2097		2230<2207	112 GB STD TO 800 GB STD	*Call
2097		2230<2208	128 GB STD TO 800 GB STD	*Call
2097		2230<2209	144 GB STD TO 800 GB STD	*Call
2097		2230<2211	176 GB STD TO 800 GB STD	*Call
2097		2230<2212	192 GB STD TO 800 GB STD	*Call
2097		2230<2213	208 GB STD TO 800 GB STD	*Call
2097		2230<2214	224 GB STD TO 800 GB STD	*Call
2097		2230<2215	240 GB STD TO 800 GB STD	*Call
2097		2230<2216	256 GB STD TO 800 GB STD	*Call
2097		2230<2217	288 GB STD TO 800 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2230<2218	320 GB STD TO 800 GB STD	*Call
2097		2230<2219	352 GB STD TO 800 GB STD	*Call
2097		2230<2220	384 GB STD TO 800 GB STD	*Call
2097		2230<2221	416 GB STD TO 800 GB STD	*Call
2097		2230<2222	448 GB STD TO 800 GB STD	*Call
2097		2230<2223	480 GB STD TO 800 GB STD	*Call
2097		2230<2224	512 GB STD TO 800 GB STD	*Call
2097		2230<2225	560 GB STD TO 800 GB STD	*Call
2097		2230<2226	608 GB STD TO 800 GB STD	*Call
2097		2230<2227	656 GB STD TO 800 GB STD	*Call
2097		2230<2228	704 GB STD TO 800 GB STD	*Call
2097		2230<2229	752 GB STD TO 800 GB STD	*Call
2097		2230<2243	160 GB STD TO 800 GB STD	*Call
2097		2231<2201	16 GB STD TO 848 GB STD	*Call
2097		2231<2202	32 GB STD TO 848 GB STD	*Call
2097		2231<2203	48 GB STD TO 848 GB STD	*Call
2097		2231<2204	64 GB STD TO 848 GB STD	*Call
2097		2231<2205	80 GB STD TO 848 GB STD	*Call
2097		2231<2206	96 GB STD TO 848 GB STD	*Call
2097		2231<2207	112 GB STD TO 848 GB STD	*Call
2097		2231<2208	128 GB STD TO 848 GB STD	*Call
2097		2231<2209	144 GB STD TO 848 GB STD	*Call
2097		2231<2211	176 GB STD TO 848 GB STD	*Call
2097		2231<2212	192 GB STD TO 848 GB STD	*Call
2097		2231<2213	208 GB STD TO 848 GB STD	*Call
2097		2231<2214	224 GB STD TO 848 GB STD	*Call
2097		2231<2215	240 GB STD TO 848 GB STD	*Call
2097		2231<2216	256 GB STD TO 848 GB STD	*Call
2097		2231<2217	288 GB STD TO 848 GB STD	*Call
2097		2231<2218	320 GB STD TO 848 GB STD	*Call
2097		2231<2219	352 GB STD TO 848 GB STD	*Call
2097		2231<2220	384 GB STD TO 848 GB STD	*Call
2097		2231<2221	416 GB STD TO 848 GB STD	*Call
2097		2231<2222	448 GB STD TO 848 GB STD	*Call
2097		2231<2223	480 GB STD TO 848 GB STD	*Call
2097		2231<2224	512 GB STD TO 848 GB STD	*Call
2097		2231<2225	560 GB STD TO 848 GB STD	*Call
2097		2231<2226	608 GB STD TO 848 GB STD	*Call
2097		2231<2227	656 GB STD TO 848 GB STD	*Call
2097		2231<2228	704 GB STD TO 848 GB STD	*Call
2097		2231<2229	752 GB STD TO 848 GB STD	*Call
2097		2231<2230	800 GB STD TO 848 GB STD	*Call
2097		2231<2243	160 GB STD TO 848 GB STD	*Call
2097		2232<2201	16 GB STD TO 896 GB STD	*Call
2097		2232<2202	32 GB STD TO 896 GB STD	*Call
2097		2232<2203	48 GB STD TO 896 GB STD	*Call
2097		2232<2204	64 GB STD TO 896 GB STD	*Call
2097		2232<2205	80 GB STD TO 896 GB STD	*Call
2097		2232<2206	96 GB STD TO 896 GB STD	*Call
2097		2232<2207	112 GB STD TO 896 GB STD	*Call
2097		2232<2208	128 GB STD TO 896 GB STD	*Call
2097		2232<2209	144 GB STD TO 896 GB STD	*Call
2097		2232<2211	176 GB STD TO 896 GB STD	*Call
2097		2232<2212	192 GB STD TO 896 GB STD	*Call
2097		2232<2213	208 GB STD TO 896 GB STD	*Call
2097		2232<2214	224 GB STD TO 896 GB STD	*Call
2097		2232<2215	240 GB STD TO 896 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2232<2216	256 GB STD TO 896 GB STD	*Call
2097		2232<2217	288 GB STD TO 896 GB STD	*Call
2097		2232<2218	320 GB STD TO 896 GB STD	*Call
2097		2232<2219	352 GB STD TO 896 GB STD	*Call
2097		2232<2220	384 GB STD TO 896 GB STD	*Call
2097		2232<2221	416 GB STD TO 896 GB STD	*Call
2097		2232<2222	448 GB STD TO 896 GB STD	*Call
2097		2232<2223	480 GB STD TO 896 GB STD	*Call
2097		2232<2224	512 GB STD TO 896 GB STD	*Call
2097		2232<2225	560 GB STD TO 896 GB STD	*Call
2097		2232<2226	608 GB STD TO 896 GB STD	*Call
2097		2232<2227	656 GB STD TO 896 GB STD	*Call
2097		2232<2228	704 GB STD TO 896 GB STD	*Call
2097		2232<2229	752 GB STD TO 896 GB STD	*Call
2097		2232<2230	800 GB STD TO 896 GB STD	*Call
2097		2232<2231	848 GB STD TO 896 GB STD	*Call
2097		2232<2243	160 GB STD TO 896 GB STD	*Call
2097		2233<2201	16 GB STD TO 944 GB STD	*Call
2097		2233<2202	32 GB STD TO 944 GB STD	*Call
2097		2233<2203	48 GB STD TO 944 GB STD	*Call
2097		2233<2204	64 GB STD TO 944 GB STD	*Call
2097		2233<2205	80 GB STD TO 944 GB STD	*Call
2097		2233<2206	96 GB STD TO 944 GB STD	*Call
2097		2233<2207	112 GB STD TO 944 GB STD	*Call
2097		2233<2208	128 GB STD TO 944 GB STD	*Call
2097		2233<2209	144 GB STD TO 944 GB STD	*Call
2097		2233<2211	176 GB STD TO 944 GB STD	*Call
2097		2233<2212	192 GB STD TO 944 GB STD	*Call
2097		2233<2213	208 GB STD TO 944 GB STD	*Call
2097		2233<2214	224 GB STD TO 944 GB STD	*Call
2097		2233<2215	240 GB STD TO 944 GB STD	*Call
2097		2233<2216	256 GB STD TO 944 GB STD	*Call
2097		2233<2217	288 GB STD TO 944 GB STD	*Call
2097		2233<2218	320 GB STD TO 944 GB STD	*Call
2097		2233<2219	352 GB STD TO 944 GB STD	*Call
2097		2233<2220	384 GB STD TO 944 GB STD	*Call
2097		2233<2221	416 GB STD TO 944 GB STD	*Call
2097		2233<2222	448 GB STD TO 944 GB STD	*Call
2097		2233<2223	480 GB STD TO 944 GB STD	*Call
2097		2233<2224	512 GB STD TO 944 GB STD	*Call
2097		2233<2225	560 GB STD TO 944 GB STD	*Call
2097		2233<2226	608 GB STD TO 944 GB STD	*Call
2097		2233<2227	656 GB STD TO 944 GB STD	*Call
2097		2233<2228	704 GB STD TO 944 GB STD	*Call
2097		2233<2229	752 GB STD TO 944 GB STD	*Call
2097		2233<2230	800 GB STD TO 944 GB STD	*Call
2097		2233<2231	848 GB STD TO 944 GB STD	*Call
2097		2233<2232	896 GB STD TO 944 GB STD	*Call
2097		2233<2243	160 GB STD TO 944 GB STD	*Call
2097		2234<2201	16 GB STD TO 1008 GB STD	*Call
2097		2234<2202	32 GB STD TO 1008 GB STD	*Call
2097		2234<2203	48 GB STD TO 1008 GB STD	*Call
2097		2234<2204	64 GB STD TO 1008 GB STD	*Call
2097		2234<2205	80 GB STD TO 1008 GB STD	*Call
2097		2234<2206	96 GB STD TO 1008 GB STD	*Call
2097		2234<2207	112 GB STD TO 1008 GB STD	*Call
2097		2234<2208	128 GB STD TO 1008 GB STD	*Call

Machine	Type	Model	Feature	Description	GSA Price
2097			2234<2209	144 GB STD TO 1008 GB STD	*Call
2097			2234<2211	176 GB STD TO 1008 GB STD	*Call
2097			2234<2212	192 GB STD TO 1008 GB STD	*Call
2097			2234<2213	208 GB STD TO 1008 GB STD	*Call
2097			2234<2214	224 GB STD TO 1008 GB STD	*Call
2097			2234<2215	240 GB STD TO 1008 GB STD	*Call
2097			2234<2216	256 GB STD TO 1008 GB STD	*Call
2097			2234<2217	288 GB STD TO 1008 GB STD	*Call
2097			2234<2218	320 GB STD TO 1008 GB STD	*Call
2097			2234<2219	352 GB STD TO 1008 GB STD	*Call
2097			2234<2220	384 GB STD TO 1008 GB STD	*Call
2097			2234<2221	416 GB STD TO 1008 GB STD	*Call
2097			2234<2222	448 GB STD TO 1008 GB STD	*Call
2097			2234<2223	480 GB STD TO 1008 GB STD	*Call
2097			2234<2224	512 GB STD TO 1008 GB STD	*Call
2097			2234<2225	560 GB STD TO 1008 GB STD	*Call
2097			2234<2226	608 GB STD TO 1008 GB STD	*Call
2097			2234<2227	656 GB STD TO 1008 GB STD	*Call
2097			2234<2228	704 GB STD TO 1008 GB STD	*Call
2097			2234<2229	752 GB STD TO 1008 GB STD	*Call
2097			2234<2230	800 GB STD TO 1008 GB STD	*Call
2097			2234<2231	848 GB STD TO 1008 GB STD	*Call
2097			2234<2232	896 GB STD TO 1008 GB STD	*Call
2097			2234<2233	944 GB STD TO 1008 GB STD	*Call
2097			2234<2243	160 GB STD TO 1008 GB STD	*Call
2097			2235<2201	16 GB STD TO 1072 GB STD	*Call
2097			2235<2202	32 GB STD TO 1072 GB STD	*Call
2097			2235<2203	48 GB STD TO 1072 GB STD	*Call
2097			2235<2204	64 GB STD TO 1072 GB STD	*Call
2097			2235<2205	80 GB STD TO 1072 GB STD	*Call
2097			2235<2206	96 GB STD TO 1072 GB STD	*Call
2097			2235<2207	112 GB STD TO 1072 GB STD	*Call
2097			2235<2208	128 GB STD TO 1072 GB STD	*Call
2097			2235<2209	144 GB STD TO 1072 GB STD	*Call
2097			2235<2211	176 GB STD TO 1072 GB STD	*Call
2097			2235<2212	192 GB STD TO 1072 GB STD	*Call
2097			2235<2213	208 GB STD TO 1072 GB STD	*Call
2097			2235<2214	224 GB STD TO 1072 GB STD	*Call
2097			2235<2215	240 GB STD TO 1072 GB STD	*Call
2097			2235<2216	256 GB STD TO 1072 GB STD	*Call
2097			2235<2217	288 GB STD TO 1072 GB STD	*Call
2097			2235<2218	320 GB STD TO 1072 GB STD	*Call
2097			2235<2219	352 GB STD TO 1072 GB STD	*Call
2097			2235<2220	384 GB STD TO 1072 GB STD	*Call
2097			2235<2221	416 GB STD TO 1072 GB STD	*Call
2097			2235<2222	448 GB STD TO 1072 GB STD	*Call
2097			2235<2223	480 GB STD TO 1072 GB STD	*Call
2097			2235<2224	512 GB STD TO 1072 GB STD	*Call
2097			2235<2225	560 GB STD TO 1072 GB STD	*Call
2097			2235<2226	608 GB STD TO 1072 GB STD	*Call
2097			2235<2227	656 GB STD TO 1072 GB STD	*Call
2097			2235<2228	704 GB STD TO 1072 GB STD	*Call
2097			2235<2229	752 GB STD TO 1072 GB STD	*Call
2097			2235<2230	800 GB STD TO 1072 GB STD	*Call
2097			2235<2231	848 GB STD TO 1072 GB STD	*Call
2097			2235<2232	896 GB STD TO 1072 GB STD	*Call
2097			2235<2233	944 GB STD TO 1072 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2235<2234	1008 GB STD TO 1072 GB STD	*Call
2097		2235<2243	160 GB STD TO 1072 GB STD	*Call
2097		2236<2201	16 GB STD TO 1136 GB STD	*Call
2097		2236<2202	32 GB STD TO 1136 GB STD	*Call
2097		2236<2203	48 GB STD TO 1136 GB STD	*Call
2097		2236<2204	64 GB STD TO 1136 GB STD	*Call
2097		2236<2205	80 GB STD TO 1136 GB STD	*Call
2097		2236<2206	96 GB STD TO 1136 GB STD	*Call
2097		2236<2207	112 GB STD TO 1136 GB STD	*Call
2097		2236<2208	128 GB STD TO 1136 GB STD	*Call
2097		2236<2209	144 GB STD TO 1136 GB STD	*Call
2097		2236<2211	176 GB STD TO 1136 GB STD	*Call
2097		2236<2212	192 GB STD TO 1136 GB STD	*Call
2097		2236<2213	208 GB STD TO 1136 GB STD	*Call
2097		2236<2214	224 GB STD TO 1136 GB STD	*Call
2097		2236<2215	240 GB STD TO 1136 GB STD	*Call
2097		2236<2216	256 GB STD TO 1136 GB STD	*Call
2097		2236<2217	288 GB STD TO 1136 GB STD	*Call
2097		2236<2218	320 GB STD TO 1136 GB STD	*Call
2097		2236<2219	352 GB STD TO 1136 GB STD	*Call
2097		2236<2220	384 GB STD TO 1136 GB STD	*Call
2097		2236<2221	416 GB STD TO 1136 GB STD	*Call
2097		2236<2222	448 GB STD TO 1136 GB STD	*Call
2097		2236<2223	480 GB STD TO 1136 GB STD	*Call
2097		2236<2224	512 GB STD TO 1136 GB STD	*Call
2097		2236<2225	560 GB STD TO 1136 GB STD	*Call
2097		2236<2226	608 GB STD TO 1136 GB STD	*Call
2097		2236<2227	656 GB STD TO 1136 GB STD	*Call
2097		2236<2228	704 GB STD TO 1136 GB STD	*Call
2097		2236<2229	752 GB STD TO 1136 GB STD	*Call
2097		2236<2230	800 GB STD TO 1136 GB STD	*Call
2097		2236<2231	848 GB STD TO 1136 GB STD	*Call
2097		2236<2232	896 GB STD TO 1136 GB STD	*Call
2097		2236<2233	944 GB STD TO 1136 GB STD	*Call
2097		2236<2234	1008 GB STD TO 1136 GB STD	*Call
2097		2236<2235	1072 GB STD TO 1136 GB STD	*Call
2097		2236<2243	160 GB STD TO 1136 GB STD	*Call
2097		2237<2201	16 GB STD TO 1200 GB STD	*Call
2097		2237<2202	32 GB STD TO 1200 GB STD	*Call
2097		2237<2203	48 GB STD TO 1200 GB STD	*Call
2097		2237<2204	64 GB STD TO 1200 GB STD	*Call
2097		2237<2205	80 GB STD TO 1200 GB STD	*Call
2097		2237<2206	96 GB STD TO 1200 GB STD	*Call
2097		2237<2207	112 GB STD TO 1200 GB STD	*Call
2097		2237<2208	128 GB STD TO 1200 GB STD	*Call
2097		2237<2209	144 GB STD TO 1200 GB STD	*Call
2097		2237<2211	176 GB STD TO 1200 GB STD	*Call
2097		2237<2212	192 GB STD TO 1200 GB STD	*Call
2097		2237<2213	208 GB STD TO 1200 GB STD	*Call
2097		2237<2214	224 GB STD TO 1200 GB STD	*Call
2097		2237<2215	240 GB STD TO 1200 GB STD	*Call
2097		2237<2216	256 GB STD TO 1200 GB STD	*Call
2097		2237<2217	288 GB STD TO 1200 GB STD	*Call
2097		2237<2218	320 GB STD TO 1200 GB STD	*Call
2097		2237<2219	352 GB STD TO 1200 GB STD	*Call
2097		2237<2220	384 GB STD TO 1200 GB STD	*Call
2097		2237<2221	416 GB STD TO 1200 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2237<2222	448 GB STD TO 1200 GB STD	*Call
2097		2237<2223	480 GB STD TO 1200 GB STD	*Call
2097		2237<2224	512 GB STD TO 1200 GB STD	*Call
2097		2237<2225	560 GB STD TO 1200 GB STD	*Call
2097		2237<2226	608 GB STD TO 1200 GB STD	*Call
2097		2237<2227	656 GB STD TO 1200 GB STD	*Call
2097		2237<2228	704 GB STD TO 1200 GB STD	*Call
2097		2237<2229	752 GB STD TO 1200 GB STD	*Call
2097		2237<2230	800 GB STD TO 1200 GB STD	*Call
2097		2237<2231	848 GB STD TO 1200 GB STD	*Call
2097		2237<2232	896 GB STD TO 1200 GB STD	*Call
2097		2237<2233	944 GB STD TO 1200 GB STD	*Call
2097		2237<2234	1008 GB STD TO 1200 GB STD	*Call
2097		2237<2235	1072 GB STD TO 1200 GB STD	*Call
2097		2237<2236	1136 GB STD TO 1200 GB STD	*Call
2097		2237<2243	160 GB STD TO 1200 GB STD	*Call
2097		2238<2201	16 GB STD TO 1264 GB STD	*Call
2097		2238<2202	32 GB STD TO 1264 GB STD	*Call
2097		2238<2203	48 GB STD TO 1264 GB STD	*Call
2097		2238<2204	64 GB STD TO 1264 GB STD	*Call
2097		2238<2205	80 GB STD TO 1264 GB STD	*Call
2097		2238<2206	96 GB STD TO 1264 GB STD	*Call
2097		2238<2207	112 GB STD TO 1264 GB STD	*Call
2097		2238<2208	128 GB STD TO 1264 GB STD	*Call
2097		2238<2209	144 GB STD TO 1264 GB STD	*Call
2097		2238<2211	176 GB STD TO 1264 GB STD	*Call
2097		2238<2212	192 GB STD TO 1264 GB STD	*Call
2097		2238<2213	208 GB STD TO 1264 GB STD	*Call
2097		2238<2214	224 GB STD TO 1264 GB STD	*Call
2097		2238<2215	240 GB STD TO 1264 GB STD	*Call
2097		2238<2216	256 GB STD TO 1264 GB STD	*Call
2097		2238<2217	288 GB STD TO 1264 GB STD	*Call
2097		2238<2218	320 GB STD TO 1264 GB STD	*Call
2097		2238<2219	352 GB STD TO 1264 GB STD	*Call
2097		2238<2220	384 GB STD TO 1264 GB STD	*Call
2097		2238<2221	416 GB STD TO 1264 GB STD	*Call
2097		2238<2222	448 GB STD TO 1264 GB STD	*Call
2097		2238<2223	480 GB STD TO 1264 GB STD	*Call
2097		2238<2224	512 GB STD TO 1264 GB STD	*Call
2097		2238<2225	560 GB STD TO 1264 GB STD	*Call
2097		2238<2226	608 GB STD TO 1264 GB STD	*Call
2097		2238<2227	656 GB STD TO 1264 GB STD	*Call
2097		2238<2228	704 GB STD TO 1264 GB STD	*Call
2097		2238<2229	752 GB STD TO 1264 GB STD	*Call
2097		2238<2230	800 GB STD TO 1264 GB STD	*Call
2097		2238<2231	848 GB STD TO 1264 GB STD	*Call
2097		2238<2232	896 GB STD TO 1264 GB STD	*Call
2097		2238<2233	944 GB STD TO 1264 GB STD	*Call
2097		2238<2234	1008 GB STD TO 1264 GB STD	*Call
2097		2238<2235	1072 GB STD TO 1264 GB STD	*Call
2097		2238<2236	1136 GB STD TO 1264 GB STD	*Call
2097		2238<2237	1200 GB STD TO 1264 GB STD	*Call
2097		2238<2243	160 GB STD TO 1264 GB STD	*Call
2097		2239<2201	16 GB STD TO 1328 GB STD	*Call
2097		2239<2202	32 GB STD TO 1328 GB STD	*Call
2097		2239<2203	48 GB STD TO 1328 GB STD	*Call
2097		2239<2204	64 GB STD TO 1328 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2239<2205	80 GB STD TO 1328 GB STD	*Call
2097		2239<2206	96 GB STD TO 1328 GB STD	*Call
2097		2239<2207	112 GB STD TO 1328 GB STD	*Call
2097		2239<2208	128 GB STD TO 1328 GB STD	*Call
2097		2239<2209	144 GB STD TO 1328 GB STD	*Call
2097		2239<2211	176 GB STD TO 1328 GB STD	*Call
2097		2239<2212	192 GB STD TO 1328 GB STD	*Call
2097		2239<2213	208 GB STD TO 1328 GB STD	*Call
2097		2239<2214	224 GB STD TO 1328 GB STD	*Call
2097		2239<2215	240 GB STD TO 1328 GB STD	*Call
2097		2239<2216	256 GB STD TO 1328 GB STD	*Call
2097		2239<2217	288 GB STD TO 1328 GB STD	*Call
2097		2239<2218	320 GB STD TO 1328 GB STD	*Call
2097		2239<2219	352 GB STD TO 1328 GB STD	*Call
2097		2239<2220	384 GB STD TO 1328 GB STD	*Call
2097		2239<2221	416 GB STD TO 1328 GB STD	*Call
2097		2239<2222	448 GB STD TO 1328 GB STD	*Call
2097		2239<2223	480 GB STD TO 1328 GB STD	*Call
2097		2239<2224	512 GB STD TO 1328 GB STD	*Call
2097		2239<2225	560 GB STD TO 1328 GB STD	*Call
2097		2239<2226	608 GB STD TO 1328 GB STD	*Call
2097		2239<2227	656 GB STD TO 1328 GB STD	*Call
2097		2239<2228	704 GB STD TO 1328 GB STD	*Call
2097		2239<2229	752 GB STD TO 1328 GB STD	*Call
2097		2239<2230	800 GB STD TO 1328 GB STD	*Call
2097		2239<2231	848 GB STD TO 1328 GB STD	*Call
2097		2239<2232	896 GB STD TO 1328 GB STD	*Call
2097		2239<2233	944 GB STD TO 1328 GB STD	*Call
2097		2239<2234	1008 GB STD TO 1328 GB STD	*Call
2097		2239<2235	1072 GB STD TO 1328 GB STD	*Call
2097		2239<2236	1136 GB STD TO 1328 GB STD	*Call
2097		2239<2237	1200 GB STD TO 1328 GB STD	*Call
2097		2239<2238	1264 GB STD TO 1328 GB STD	*Call
2097		2239<2243	160 GB STD TO 1328 GB STD	*Call
2097		2240<2201	16 GB STD TO 1392 GB STD	*Call
2097		2240<2202	32 GB STD TO 1392 GB STD	*Call
2097		2240<2203	48 GB STD TO 1392 GB STD	*Call
2097		2240<2204	64 GB STD TO 1392 GB STD	*Call
2097		2240<2205	80 GB STD TO 1392 GB STD	*Call
2097		2240<2206	96 GB STD TO 1392 GB STD	*Call
2097		2240<2207	112 GB STD TO 1392 GB STD	*Call
2097		2240<2208	128 GB STD TO 1392 GB STD	*Call
2097		2240<2209	144 GB STD TO 1392 GB STD	*Call
2097		2240<2211	176 GB STD TO 1392 GB STD	*Call
2097		2240<2212	192 GB STD TO 1392 GB STD	*Call
2097		2240<2213	208 GB STD TO 1392 GB STD	*Call
2097		2240<2214	224 GB STD TO 1392 GB STD	*Call
2097		2240<2215	240 GB STD TO 1392 GB STD	*Call
2097		2240<2216	256 GB STD TO 1392 GB STD	*Call
2097		2240<2217	288 GB STD TO 1392 GB STD	*Call
2097		2240<2218	320 GB STD TO 1392 GB STD	*Call
2097		2240<2219	352 GB STD TO 1392 GB STD	*Call
2097		2240<2220	384 GB STD TO 1392 GB STD	*Call
2097		2240<2221	416 GB STD TO 1392 GB STD	*Call
2097		2240<2222	448 GB STD TO 1392 GB STD	*Call
2097		2240<2223	480 GB STD TO 1392 GB STD	*Call
2097		2240<2224	512 GB STD TO 1392 GB STD	*Call

Machine	Type	Model	Feature	Description	GSA Price
2097			2240<2225	560 GB STD TO 1392 GB STD	*Call
2097			2240<2226	608 GB STD TO 1392 GB STD	*Call
2097			2240<2227	656 GB STD TO 1392 GB STD	*Call
2097			2240<2228	704 GB STD TO 1392 GB STD	*Call
2097			2240<2229	752 GB STD TO 1392 GB STD	*Call
2097			2240<2230	800 GB STD TO 1392 GB STD	*Call
2097			2240<2231	848 GB STD TO 1392 GB STD	*Call
2097			2240<2232	896 GB STD TO 1392 GB STD	*Call
2097			2240<2233	944 GB STD TO 1392 GB STD	*Call
2097			2240<2234	1008 GB STD TO 1392 GB STD	*Call
2097			2240<2235	1072 GB STD TO 1392 GB STD	*Call
2097			2240<2236	1136 GB STD TO 1392 GB STD	*Call
2097			2240<2237	1200 GB STD TO 1392 GB STD	*Call
2097			2240<2238	1264 GB STD TO 1392 GB STD	*Call
2097			2240<2239	1328 GB STD TO 1392 GB STD	*Call
2097			2240<2243	160 GB STD TO 1392 GB STD	*Call
2097			2241<2201	16 GB STD TO 1456 GB STD	*Call
2097			2241<2202	32 GB STD TO 1456 GB STD	*Call
2097			2241<2203	48 GB STD TO 1456 GB STD	*Call
2097			2241<2204	64 GB STD TO 1456 GB STD	*Call
2097			2241<2205	80 GB STD TO 1456 GB STD	*Call
2097			2241<2206	96 GB STD TO 1456 GB STD	*Call
2097			2241<2207	112 GB STD TO 1456 GB STD	*Call
2097			2241<2208	128 GB STD TO 1456 GB STD	*Call
2097			2241<2209	144 GB STD TO 1456 GB STD	*Call
2097			2241<2211	176 GB STD TO 1456 GB STD	*Call
2097			2241<2212	192 GB STD TO 1456 GB STD	*Call
2097			2241<2213	208 GB STD TO 1456 GB STD	*Call
2097			2241<2214	224 GB STD TO 1456 GB STD	*Call
2097			2241<2215	240 GB STD TO 1456 GB STD	*Call
2097			2241<2216	256 GB STD TO 1456 GB STD	*Call
2097			2241<2217	288 GB STD TO 1456 GB STD	*Call
2097			2241<2218	320 GB STD TO 1456 GB STD	*Call
2097			2241<2219	352 GB STD TO 1456 GB STD	*Call
2097			2241<2220	384 GB STD TO 1456 GB STD	*Call
2097			2241<2221	416 GB STD TO 1456 GB STD	*Call
2097			2241<2222	448 GB STD TO 1456 GB STD	*Call
2097			2241<2223	480 GB STD TO 1456 GB STD	*Call
2097			2241<2224	512 GB STD TO 1456 GB STD	*Call
2097			2241<2225	560 GB STD TO 1456 GB STD	*Call
2097			2241<2226	608 GB STD TO 1456 GB STD	*Call
2097			2241<2227	656 GB STD TO 1456 GB STD	*Call
2097			2241<2228	704 GB STD TO 1456 GB STD	*Call
2097			2241<2229	752 GB STD TO 1456 GB STD	*Call
2097			2241<2230	800 GB STD TO 1456 GB STD	*Call
2097			2241<2231	848 GB STD TO 1456 GB STD	*Call
2097			2241<2232	896 GB STD TO 1456 GB STD	*Call
2097			2241<2233	944 GB STD TO 1456 GB STD	*Call
2097			2241<2234	1008 GB STD TO 1456 GB STD	*Call
2097			2241<2235	1072 GB STD TO 1456 GB STD	*Call
2097			2241<2236	1136 GB STD TO 1456 GB STD	*Call
2097			2241<2237	1200 GB STD TO 1456 GB STD	*Call
2097			2241<2238	1264 GB STD TO 1456 GB STD	*Call
2097			2241<2239	1328 GB STD TO 1456 GB STD	*Call
2097			2241<2240	1392 GB STD TO 1456 GB STD	*Call
2097			2241<2243	160 GB STD TO 1456 GB STD	*Call
2097			2242<2201	16 GB STD TO 1520 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		2242<2202	32 GB STD TO 1520 GB STD	*Call
2097		2242<2203	48 GB STD TO 1520 GB STD	*Call
2097		2242<2204	64 GB STD TO 1520 GB STD	*Call
2097		2242<2205	80 GB STD TO 1520 GB STD	*Call
2097		2242<2206	96 GB STD TO 1520 GB STD	*Call
2097		2242<2207	112 GB STD TO 1520 GB STD	*Call
2097		2242<2208	128 GB STD TO 1520 GB STD	*Call
2097		2242<2209	144 GB STD TO 1520 GB STD	*Call
2097		2242<2211	176 GB STD TO 1520 GB STD	*Call
2097		2242<2212	192 GB STD TO 1520 GB STD	*Call
2097		2242<2213	208 GB STD TO 1520 GB STD	*Call
2097		2242<2214	224 GB STD TO 1520 GB STD	*Call
2097		2242<2215	240 GB STD TO 1520 GB STD	*Call
2097		2242<2216	256 GB STD TO 1520 GB STD	*Call
2097		2242<2217	288 GB STD TO 1520 GB STD	*Call
2097		2242<2218	320 GB STD TO 1520 GB STD	*Call
2097		2242<2219	352 GB STD TO 1520 GB STD	*Call
2097		2242<2220	384 GB STD TO 1520 GB STD	*Call
2097		2242<2221	416 GB STD TO 1520 GB STD	*Call
2097		2242<2222	448 GB STD TO 1520 GB STD	*Call
2097		2242<2223	480 GB STD TO 1520 GB STD	*Call
2097		2242<2224	512 GB STD TO 1520 GB STD	*Call
2097		2242<2225	560 GB STD TO 1520 GB STD	*Call
2097		2242<2226	608 GB STD TO 1520 GB STD	*Call
2097		2242<2227	656 GB STD TO 1520 GB STD	*Call
2097		2242<2228	704 GB STD TO 1520 GB STD	*Call
2097		2242<2229	752 GB STD TO 1520 GB STD	*Call
2097		2242<2230	800 GB STD TO 1520 GB STD	*Call
2097		2242<2231	848 GB STD TO 1520 GB STD	*Call
2097		2242<2232	896 GB STD TO 1520 GB STD	*Call
2097		2242<2233	944 GB STD TO 1520 GB STD	*Call
2097		2242<2234	1008 GB STD TO 1520 GB STD	*Call
2097		2242<2235	1072 GB STD TO 1520 GB STD	*Call
2097		2242<2236	1136 GB STD TO 1520 GB STD	*Call
2097		2242<2237	1200 GB STD TO 1520 GB STD	*Call
2097		2242<2238	1264 GB STD TO 1520 GB STD	*Call
2097		2242<2239	1328 GB STD TO 1520 GB STD	*Call
2097		2242<2240	1392 GB STD TO 1520 GB STD	*Call
2097		2242<2241	1456 GB STD TO 1520 GB STD	*Call
2097		2242<2243	160 GB STD TO 1520 GB STD	*Call
2097		2243<2201	16 GB STD TO 160 GB STD	*Call
2097		2243<2202	32 GB STD TO 160 GB STD	*Call
2097		2243<2203	48 GB STD TO 160 GB STD	*Call
2097		2243<2204	64 GB STD TO 160 GB STD	*Call
2097		2243<2205	80 GB STD TO 160 GB STD	*Call
2097		2243<2206	96 GB STD TO 160 GB STD	*Call
2097		2243<2207	112 GB STD TO 160 GB STD	*Call
2097		2243<2208	128 GB STD TO 160 GB STD	*Call
2097		2243<2209	144 GB STD TO 160 GB STD	*Call
2097		4312<4311	1BOOK 1I/O TO 1BOOK 2I/O	*Call
2097		4313<4311	1BOOK 1I/O TO 1BOOK 3I/O	*Call
2097		4313<4312	1BOOK 2I/O TO 1BOOK 3I/O	*Call
2097		4321<4311	1BOOK 1I/O TO 2BOOK 1I/O	*Call
2097		4322<4311	1BOOK 1I/O TO 2BOOK 2I/O	*Call
2097		4322<4312	1BOOK 2I/O TO 2BOOK 2I/O	*Call
2097		4322<4321	2BOOK 1I/O TO 2BOOK 2I/O	*Call
2097		4323<4311	1BOOK 1I/O TO 2BOOK 3I/O	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		4323<4312	1BOOK 2I/O TO 2BOOK 3I/O	*Call
2097		4323<4313	1BOOK 3I/O TO 2BOOK 3I/O	*Call
2097		4323<4321	2BOOK 1I/O TO 2BOOK 3I/O	*Call
2097		4323<4322	2BOOK 2I/O TO 2BOOK 3I/O	*Call
2097		4331<4311	1BOOK 1I/O TO 3BOOK 1I/O	*Call
2097		4331<4321	2BOOK 1I/O TO 3BOOK 1I/O	*Call
2097		4332<4311	1BOOK 1I/O TO 3BOOK 2I/O	*Call
2097		4332<4312	1BOOK 2I/O TO 3BOOK 2I/O	*Call
2097		4332<4321	2BOOK 1I/O TO 3BOOK 2I/O	*Call
2097		4332<4322	2BOOK 2I/O TO 3BOOK 2I/O	*Call
2097		4332<4331	3BOOK 1I/O TO 3BOOK 2I/O	*Call
2097		4333<4311	1BOOK 1I/O TO 3BOOK 3I/O	*Call
2097		4333<4312	1BOOK 2I/O TO 3BOOK 3I/O	*Call
2097		4333<4313	1BOOK 3I/O TO 3BOOK 3I/O	*Call
2097		4333<4321	2BOOK 1I/O TO 3BOOK 3I/O	*Call
2097		4333<4322	2BOOK 2I/O TO 3BOOK 3I/O	*Call
2097		4333<4323	2BOOK 3I/O TO 3BOOK 3I/O	*Call
2097		4333<4331	3BOOK 1I/O TO 3BOOK 3I/O	*Call
2097		4333<4332	3BOOK 2I/O TO 3BOOK 3I/O	*Call
2097		4341<4311	1BOOK 1I/O TO 4BOOK 1I/O	*Call
2097		4341<4321	2BOOK 1I/O TO 4BOOK 1I/O	*Call
2097		4341<4331	3BOOK 1I/O TO 4BOOK 1I/O	*Call
2097		4342<4311	1BOOK 1I/O TO 4BOOK 2I/O	*Call
2097		4342<4312	1BOOK 2I/O TO 4BOOK 2I/O	*Call
2097		4342<4321	2BOOK 1I/O TO 4BOOK 2I/O	*Call
2097		4342<4322	2BOOK 2I/O TO 4BOOK 2I/O	*Call
2097		4342<4331	3BOOK 1I/O TO 4BOOK 2I/O	*Call
2097		4342<4332	3BOOK 2I/O TO 4BOOK 2I/O	*Call
2097		4342<4341	4BOOK 1I/O TO 4BOOK 2I/O	*Call
2097		4343<4311	1BOOK 1I/O TO 4BOOK 3I/O	*Call
2097		4343<4312	1BOOK 2I/O TO 4BOOK 3I/O	*Call
2097		4343<4313	1BOOK 3I/O TO 4BOOK 3I/O	*Call
2097		4343<4321	2BOOK 1I/O TO 4BOOK 3I/O	*Call
2097		4343<4322	2BOOK 2I/O TO 4BOOK 3I/O	*Call
2097		4343<4323	2BOOK 3I/O TO 4BOOK 3I/O	*Call
2097		4343<4331	3BOOK 1I/O TO 4BOOK 3I/O	*Call
2097		4343<4332	3BOOK 2I/O TO 4BOOK 3I/O	*Call
2097		4343<4333	3BOOK 3I/O TO 4BOOK 3I/O	*Call
2097		4343<4341	4BOOK 1I/O TO 4BOOK 3I/O	*Call
2097		4343<4342	4BOOK 2I/O TO 4BOOK 3I/O	*Call
2097		6539<6540	2-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6541	3-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6542	4-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6543	5-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6544	6-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6545	7-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6546	8-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6547	9-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6548	10-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6549	11-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6550	12-WAY CP4 TO 1-WAY CP4	*Call
2097		6539<6551	1-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6552	2-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6553	3-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6554	4-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6555	5-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6556	6-WAY CP5 TO 1-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6539<6557	7-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6558	8-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6559	9-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6560	10-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6561	11-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6562	12-WAY CP5 TO 1-WAY CP4	*Call
2097		6539<6601	1-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6602	2-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6603	3-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6604	4-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6605	5-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6606	6-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6607	7-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6608	8-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6609	9-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6610	10-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6611	11-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6612	12-WAY CP6 TO 1-WAY CP4	*Call
2097		6539<6700	0-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6701	1-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6702	2-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6703	3-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6704	4-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6705	5-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6706	6-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6707	7-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6708	8-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6709	9-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6710	10-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6711	11-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6712	12-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6713	13-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6714	14-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6715	15-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6716	16-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6717	17-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6718	18-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6719	19-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6720	20-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6721	21-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6722	22-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6723	23-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6724	24-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6725	25-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6726	26-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6727	27-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6728	28-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6729	29-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6730	30-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6731	31-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6732	32-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6733	33-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6734	34-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6735	35-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6736	36-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6737	37-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6738	38-WAY CP7 TO 1-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6539<6739	39-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6740	40-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6741	41-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6742	42-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6743	43-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6744	44-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6745	45-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6746	46-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6747	47-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6748	48-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6749	49-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6750	50-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6751	51-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6752	52-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6753	53-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6754	54-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6755	55-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6756	56-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6757	57-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6758	58-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6759	59-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6760	60-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6761	61-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6762	62-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6763	63-WAY CP7 TO 1-WAY CP4	*Call
2097		6539<6764	64-WAY CP7 TO 1-WAY CP4	*Call
2097		6540<6539	1-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6541	3-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6542	4-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6543	5-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6544	6-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6545	7-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6546	8-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6547	9-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6548	10-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6549	11-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6550	12-WAY CP4 TO 2-WAY CP4	*Call
2097		6540<6551	1-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6552	2-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6553	3-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6554	4-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6555	5-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6556	6-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6557	7-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6558	8-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6559	9-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6560	10-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6561	11-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6562	12-WAY CP5 TO 2-WAY CP4	*Call
2097		6540<6601	1-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6602	2-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6603	3-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6604	4-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6605	5-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6606	6-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6607	7-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6608	8-WAY CP6 TO 2-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6540<6609	9-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6610	10-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6611	11-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6612	12-WAY CP6 TO 2-WAY CP4	*Call
2097		6540<6700	0-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6701	1-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6702	2-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6703	3-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6704	4-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6705	5-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6706	6-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6707	7-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6708	8-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6709	9-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6710	10-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6711	11-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6712	12-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6713	13-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6714	14-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6715	15-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6716	16-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6717	17-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6718	18-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6719	19-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6720	20-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6721	21-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6722	22-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6723	23-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6724	24-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6725	25-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6726	26-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6727	27-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6728	28-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6729	29-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6730	30-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6731	31-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6732	32-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6733	33-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6734	34-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6735	35-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6736	36-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6737	37-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6738	38-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6739	39-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6740	40-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6741	41-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6742	42-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6743	43-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6744	44-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6745	45-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6746	46-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6747	47-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6748	48-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6749	49-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6750	50-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6751	51-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6752	52-WAY CP7 TO 2-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6540<6753	53-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6754	54-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6755	55-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6756	56-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6757	57-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6758	58-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6759	59-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6760	60-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6761	61-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6762	62-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6763	63-WAY CP7 TO 2-WAY CP4	*Call
2097		6540<6764	64-WAY CP7 TO 2-WAY CP4	*Call
2097		6541<6539	1-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6540	2-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6542	4-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6543	5-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6544	6-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6545	7-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6546	8-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6547	9-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6548	10-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6549	11-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6550	12-WAY CP4 TO 3-WAY CP4	*Call
2097		6541<6551	1-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6552	2-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6553	3-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6554	4-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6555	5-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6556	6-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6557	7-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6558	8-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6559	9-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6560	10-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6561	11-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6562	12-WAY CP5 TO 3-WAY CP4	*Call
2097		6541<6601	1-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6602	2-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6603	3-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6604	4-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6605	5-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6606	6-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6607	7-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6608	8-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6609	9-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6610	10-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6611	11-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6612	12-WAY CP6 TO 3-WAY CP4	*Call
2097		6541<6700	0-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6701	1-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6702	2-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6703	3-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6704	4-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6705	5-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6706	6-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6707	7-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6708	8-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6709	9-WAY CP7 TO 3-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6541<6710	10-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6711	11-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6712	12-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6713	13-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6714	14-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6715	15-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6716	16-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6717	17-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6718	18-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6719	19-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6720	20-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6721	21-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6722	22-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6723	23-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6724	24-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6725	25-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6726	26-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6727	27-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6728	28-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6729	29-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6730	30-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6731	31-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6732	32-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6733	33-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6734	34-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6735	35-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6736	36-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6737	37-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6738	38-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6739	39-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6740	40-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6741	41-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6742	42-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6743	43-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6744	44-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6745	45-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6746	46-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6747	47-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6748	48-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6749	49-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6750	50-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6751	51-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6752	52-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6753	53-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6754	54-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6755	55-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6756	56-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6757	57-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6758	58-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6759	59-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6760	60-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6761	61-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6762	62-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6763	63-WAY CP7 TO 3-WAY CP4	*Call
2097		6541<6764	64-WAY CP7 TO 3-WAY CP4	*Call
2097		6542<6539	1-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6540	2-WAY CP4 TO 4-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6542<6541	3-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6543	5-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6544	6-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6545	7-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6546	8-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6547	9-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6548	10-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6549	11-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6550	12-WAY CP4 TO 4-WAY CP4	*Call
2097		6542<6551	1-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6552	2-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6553	3-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6554	4-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6555	5-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6556	6-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6557	7-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6558	8-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6559	9-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6560	10-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6561	11-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6562	12-WAY CP5 TO 4-WAY CP4	*Call
2097		6542<6601	1-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6602	2-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6603	3-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6604	4-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6605	5-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6606	6-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6607	7-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6608	8-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6609	9-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6610	10-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6611	11-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6612	12-WAY CP6 TO 4-WAY CP4	*Call
2097		6542<6700	0-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6701	1-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6702	2-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6703	3-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6704	4-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6705	5-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6706	6-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6707	7-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6708	8-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6709	9-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6710	10-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6711	11-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6712	12-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6713	13-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6714	14-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6715	15-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6716	16-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6717	17-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6718	18-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6719	19-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6720	20-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6721	21-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6722	22-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6723	23-WAY CP7 TO 4-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6542<6724	24-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6725	25-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6726	26-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6727	27-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6728	28-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6729	29-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6730	30-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6731	31-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6732	32-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6733	33-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6734	34-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6735	35-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6736	36-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6737	37-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6738	38-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6739	39-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6740	40-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6741	41-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6742	42-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6743	43-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6744	44-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6745	45-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6746	46-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6747	47-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6748	48-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6749	49-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6750	50-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6751	51-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6752	52-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6753	53-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6754	54-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6755	55-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6756	56-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6757	57-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6758	58-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6759	59-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6760	60-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6761	61-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6762	62-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6763	63-WAY CP7 TO 4-WAY CP4	*Call
2097		6542<6764	64-WAY CP7 TO 4-WAY CP4	*Call
2097		6543<6539	1-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6540	2-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6541	3-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6542	4-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6544	6-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6545	7-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6546	8-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6547	9-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6548	10-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6549	11-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6550	12-WAY CP4 TO 5-WAY CP4	*Call
2097		6543<6551	1-WAY CP5 TO 5-WAY CP4	*Call
2097		6543<6552	2-WAY CP5 TO 5-WAY CP4	*Call
2097		6543<6553	3-WAY CP5 TO 5-WAY CP4	*Call
2097		6543<6554	4-WAY CP5 TO 5-WAY CP4	*Call
2097		6543<6555	5-WAY CP5 TO 5-WAY CP4	*Call

Machine	Type	Model	Feature	Description	GSA Price
2097			6543<6556	6-WAY CP5 TO 5-WAY CP4	*Call
2097			6543<6557	7-WAY CP5 TO 5-WAY CP4	*Call
2097			6543<6558	8-WAY CP5 TO 5-WAY CP4	*Call
2097			6543<6559	9-WAY CP5 TO 5-WAY CP4	*Call
2097			6543<6560	10-WAY CP5 TO 5-WAY CP4	*Call
2097			6543<6561	11-WAY CP5 TO 5-WAY CP4	*Call
2097			6543<6562	12-WAY CP5 TO 5-WAY CP4	*Call
2097			6543<6601	1-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6602	2-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6603	3-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6604	4-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6605	5-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6606	6-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6607	7-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6608	8-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6609	9-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6610	10-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6611	11-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6612	12-WAY CP6 TO 5-WAY CP4	*Call
2097			6543<6700	0-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6701	1-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6702	2-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6703	3-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6704	4-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6705	5-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6706	6-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6707	7-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6708	8-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6709	9-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6710	10-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6711	11-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6712	12-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6713	13-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6714	14-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6715	15-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6716	16-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6717	17-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6718	18-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6719	19-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6720	20-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6721	21-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6722	22-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6723	23-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6724	24-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6725	25-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6726	26-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6727	27-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6728	28-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6729	29-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6730	30-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6731	31-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6732	32-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6733	33-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6734	34-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6735	35-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6736	36-WAY CP7 TO 5-WAY CP4	*Call
2097			6543<6737	37-WAY CP7 TO 5-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6543<6738	38-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6739	39-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6740	40-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6741	41-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6742	42-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6743	43-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6744	44-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6745	45-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6746	46-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6747	47-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6748	48-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6749	49-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6750	50-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6751	51-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6752	52-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6753	53-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6754	54-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6755	55-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6756	56-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6757	57-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6758	58-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6759	59-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6760	60-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6761	61-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6762	62-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6763	63-WAY CP7 TO 5-WAY CP4	*Call
2097		6543<6764	64-WAY CP7 TO 5-WAY CP4	*Call
2097		6544<6539	1-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6540	2-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6541	3-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6542	4-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6543	5-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6545	7-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6546	8-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6547	9-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6548	10-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6549	11-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6550	12-WAY CP4 TO 6-WAY CP4	*Call
2097		6544<6551	1-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6552	2-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6553	3-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6554	4-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6555	5-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6556	6-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6557	7-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6558	8-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6559	9-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6560	10-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6561	11-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6562	12-WAY CP5 TO 6-WAY CP4	*Call
2097		6544<6601	1-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6602	2-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6603	3-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6604	4-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6605	5-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6606	6-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6607	7-WAY CP6 TO 6-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6544<6608	8-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6609	9-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6610	10-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6611	11-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6612	12-WAY CP6 TO 6-WAY CP4	*Call
2097		6544<6700	0-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6701	1-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6702	2-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6703	3-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6704	4-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6705	5-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6706	6-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6707	7-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6708	8-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6709	9-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6710	10-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6711	11-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6712	12-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6713	13-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6714	14-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6715	15-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6716	16-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6717	17-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6718	18-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6719	19-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6720	20-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6721	21-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6722	22-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6723	23-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6724	24-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6725	25-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6726	26-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6727	27-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6728	28-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6729	29-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6730	30-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6731	31-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6732	32-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6733	33-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6734	34-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6735	35-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6736	36-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6737	37-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6738	38-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6739	39-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6740	40-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6741	41-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6742	42-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6743	43-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6744	44-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6745	45-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6746	46-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6747	47-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6748	48-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6749	49-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6750	50-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6751	51-WAY CP7 TO 6-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6544<6752	52-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6753	53-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6754	54-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6755	55-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6756	56-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6757	57-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6758	58-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6759	59-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6760	60-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6761	61-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6762	62-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6763	63-WAY CP7 TO 6-WAY CP4	*Call
2097		6544<6764	64-WAY CP7 TO 6-WAY CP4	*Call
2097		6545<6539	1-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6540	2-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6541	3-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6542	4-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6543	5-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6544	6-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6546	8-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6547	9-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6548	10-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6549	11-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6550	12-WAY CP4 TO 7-WAY CP4	*Call
2097		6545<6551	1-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6552	2-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6553	3-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6554	4-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6555	5-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6556	6-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6557	7-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6558	8-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6559	9-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6560	10-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6561	11-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6562	12-WAY CP5 TO 7-WAY CP4	*Call
2097		6545<6601	1-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6602	2-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6603	3-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6604	4-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6605	5-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6606	6-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6607	7-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6608	8-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6609	9-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6610	10-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6611	11-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6612	12-WAY CP6 TO 7-WAY CP4	*Call
2097		6545<6700	0-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6701	1-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6702	2-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6703	3-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6704	4-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6705	5-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6706	6-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6707	7-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6708	8-WAY CP7 TO 7-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6545<6709	9-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6710	10-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6711	11-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6712	12-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6713	13-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6714	14-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6715	15-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6716	16-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6717	17-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6718	18-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6719	19-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6720	20-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6721	21-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6722	22-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6723	23-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6724	24-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6725	25-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6726	26-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6727	27-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6728	28-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6729	29-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6730	30-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6731	31-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6732	32-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6733	33-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6734	34-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6735	35-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6736	36-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6737	37-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6738	38-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6739	39-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6740	40-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6741	41-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6742	42-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6743	43-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6744	44-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6745	45-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6746	46-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6747	47-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6748	48-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6749	49-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6750	50-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6751	51-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6752	52-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6753	53-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6754	54-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6755	55-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6756	56-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6757	57-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6758	58-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6759	59-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6760	60-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6761	61-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6762	62-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6763	63-WAY CP7 TO 7-WAY CP4	*Call
2097		6545<6764	64-WAY CP7 TO 7-WAY CP4	*Call
2097		6546<6539	1-WAY CP4 TO 8-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6546<6540	2-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6541	3-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6542	4-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6543	5-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6544	6-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6545	7-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6547	9-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6548	10-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6549	11-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6550	12-WAY CP4 TO 8-WAY CP4	*Call
2097		6546<6551	1-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6552	2-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6553	3-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6554	4-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6555	5-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6556	6-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6557	7-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6558	8-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6559	9-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6560	10-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6561	11-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6562	12-WAY CP5 TO 8-WAY CP4	*Call
2097		6546<6601	1-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6602	2-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6603	3-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6604	4-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6605	5-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6606	6-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6607	7-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6608	8-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6609	9-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6610	10-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6611	11-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6612	12-WAY CP6 TO 8-WAY CP4	*Call
2097		6546<6700	0-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6701	1-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6702	2-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6703	3-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6704	4-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6705	5-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6706	6-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6707	7-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6708	8-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6709	9-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6710	10-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6711	11-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6712	12-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6713	13-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6714	14-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6715	15-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6716	16-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6717	17-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6718	18-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6719	19-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6720	20-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6721	21-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6722	22-WAY CP7 TO 8-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6546<6723	23-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6724	24-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6725	25-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6726	26-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6727	27-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6728	28-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6729	29-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6730	30-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6731	31-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6732	32-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6733	33-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6734	34-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6735	35-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6736	36-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6737	37-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6738	38-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6739	39-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6740	40-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6741	41-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6742	42-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6743	43-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6744	44-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6745	45-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6746	46-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6747	47-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6748	48-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6749	49-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6750	50-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6751	51-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6752	52-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6753	53-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6754	54-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6755	55-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6756	56-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6757	57-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6758	58-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6759	59-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6760	60-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6761	61-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6762	62-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6763	63-WAY CP7 TO 8-WAY CP4	*Call
2097		6546<6764	64-WAY CP7 TO 8-WAY CP4	*Call
2097		6547<6539	1-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6540	2-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6541	3-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6542	4-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6543	5-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6544	6-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6545	7-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6546	8-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6548	10-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6549	11-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6550	12-WAY CP4 TO 9-WAY CP4	*Call
2097		6547<6551	1-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6552	2-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6553	3-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6554	4-WAY CP5 TO 9-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6547<6555	5-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6556	6-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6557	7-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6558	8-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6559	9-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6560	10-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6561	11-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6562	12-WAY CP5 TO 9-WAY CP4	*Call
2097		6547<6601	1-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6602	2-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6603	3-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6604	4-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6605	5-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6606	6-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6607	7-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6608	8-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6609	9-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6610	10-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6611	11-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6612	12-WAY CP6 TO 9-WAY CP4	*Call
2097		6547<6700	0-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6701	1-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6702	2-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6703	3-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6704	4-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6705	5-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6706	6-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6707	7-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6708	8-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6709	9-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6710	10-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6711	11-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6712	12-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6713	13-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6714	14-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6715	15-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6716	16-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6717	17-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6718	18-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6719	19-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6720	20-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6721	21-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6722	22-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6723	23-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6724	24-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6725	25-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6726	26-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6727	27-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6728	28-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6729	29-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6730	30-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6731	31-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6732	32-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6733	33-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6734	34-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6735	35-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6736	36-WAY CP7 TO 9-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6547<6737	37-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6738	38-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6739	39-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6740	40-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6741	41-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6742	42-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6743	43-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6744	44-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6745	45-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6746	46-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6747	47-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6748	48-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6749	49-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6750	50-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6751	51-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6752	52-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6753	53-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6754	54-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6755	55-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6756	56-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6757	57-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6758	58-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6759	59-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6760	60-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6761	61-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6762	62-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6763	63-WAY CP7 TO 9-WAY CP4	*Call
2097		6547<6764	64-WAY CP7 TO 9-WAY CP4	*Call
2097		6548<6539	1-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6540	2-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6541	3-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6542	4-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6543	5-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6544	6-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6545	7-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6546	8-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6547	9-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6549	11-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6550	12-WAY CP4 TO 10-WAY CP4	*Call
2097		6548<6551	1-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6552	2-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6553	3-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6554	4-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6555	5-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6556	6-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6557	7-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6558	8-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6559	9-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6560	10-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6561	11-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6562	12-WAY CP5 TO 10-WAY CP4	*Call
2097		6548<6601	1-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6602	2-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6603	3-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6604	4-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6605	5-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6606	6-WAY CP6 TO 10-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6548<6607	7-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6608	8-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6609	9-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6610	10-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6611	11-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6612	12-WAY CP6 TO 10-WAY CP4	*Call
2097		6548<6700	0-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6701	1-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6702	2-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6703	3-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6704	4-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6705	5-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6706	6-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6707	7-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6708	8-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6709	9-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6710	10-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6711	11-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6712	12-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6713	13-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6714	14-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6715	15-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6716	16-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6717	17-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6718	18-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6719	19-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6720	20-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6721	21-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6722	22-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6723	23-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6724	24-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6725	25-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6726	26-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6727	27-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6728	28-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6729	29-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6730	30-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6731	31-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6732	32-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6733	33-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6734	34-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6735	35-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6736	36-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6737	37-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6738	38-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6739	39-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6740	40-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6741	41-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6742	42-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6743	43-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6744	44-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6745	45-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6746	46-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6747	47-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6748	48-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6749	49-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6750	50-WAY CP7 TO 10-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6548<6751	51-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6752	52-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6753	53-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6754	54-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6755	55-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6756	56-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6757	57-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6758	58-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6759	59-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6760	60-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6761	61-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6762	62-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6763	63-WAY CP7 TO 10-WAY CP4	*Call
2097		6548<6764	64-WAY CP7 TO 10-WAY CP4	*Call
2097		6549<6539	1-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6540	2-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6541	3-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6542	4-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6543	5-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6544	6-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6545	7-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6546	8-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6547	9-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6548	10-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6550	12-WAY CP4 TO 11-WAY CP4	*Call
2097		6549<6551	1-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6552	2-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6553	3-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6554	4-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6555	5-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6556	6-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6557	7-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6558	8-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6559	9-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6560	10-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6561	11-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6562	12-WAY CP5 TO 11-WAY CP4	*Call
2097		6549<6601	1-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6602	2-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6603	3-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6604	4-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6605	5-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6606	6-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6607	7-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6608	8-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6609	9-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6610	10-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6611	11-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6612	12-WAY CP6 TO 11-WAY CP4	*Call
2097		6549<6700	0-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6701	1-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6702	2-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6703	3-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6704	4-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6705	5-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6706	6-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6707	7-WAY CP7 TO 11-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6549<6708	8-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6709	9-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6710	10-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6711	11-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6712	12-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6713	13-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6714	14-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6715	15-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6716	16-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6717	17-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6718	18-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6719	19-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6720	20-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6721	21-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6722	22-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6723	23-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6724	24-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6725	25-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6726	26-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6727	27-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6728	28-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6729	29-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6730	30-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6731	31-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6732	32-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6733	33-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6734	34-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6735	35-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6736	36-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6737	37-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6738	38-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6739	39-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6740	40-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6741	41-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6742	42-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6743	43-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6744	44-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6745	45-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6746	46-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6747	47-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6748	48-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6749	49-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6750	50-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6751	51-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6752	52-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6753	53-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6754	54-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6755	55-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6756	56-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6757	57-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6758	58-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6759	59-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6760	60-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6761	61-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6762	62-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6763	63-WAY CP7 TO 11-WAY CP4	*Call
2097		6549<6764	64-WAY CP7 TO 11-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6550<6539	1-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6540	2-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6541	3-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6542	4-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6543	5-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6544	6-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6545	7-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6546	8-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6547	9-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6548	10-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6549	11-WAY CP4 TO 12-WAY CP4	*Call
2097		6550<6551	1-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6552	2-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6553	3-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6554	4-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6555	5-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6556	6-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6557	7-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6558	8-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6559	9-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6560	10-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6561	11-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6562	12-WAY CP5 TO 12-WAY CP4	*Call
2097		6550<6601	1-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6602	2-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6603	3-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6604	4-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6605	5-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6606	6-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6607	7-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6608	8-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6609	9-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6610	10-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6611	11-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6612	12-WAY CP6 TO 12-WAY CP4	*Call
2097		6550<6700	0-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6701	1-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6702	2-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6703	3-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6704	4-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6705	5-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6706	6-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6707	7-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6708	8-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6709	9-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6710	10-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6711	11-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6712	12-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6713	13-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6714	14-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6715	15-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6716	16-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6717	17-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6718	18-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6719	19-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6720	20-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6721	21-WAY CP7 TO 12-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6550<6722	22-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6723	23-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6724	24-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6725	25-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6726	26-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6727	27-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6728	28-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6729	29-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6730	30-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6731	31-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6732	32-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6733	33-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6734	34-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6735	35-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6736	36-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6737	37-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6738	38-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6739	39-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6740	40-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6741	41-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6742	42-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6743	43-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6744	44-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6745	45-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6746	46-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6747	47-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6748	48-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6749	49-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6750	50-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6751	51-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6752	52-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6753	53-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6754	54-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6755	55-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6756	56-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6757	57-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6758	58-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6759	59-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6760	60-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6761	61-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6762	62-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6763	63-WAY CP7 TO 12-WAY CP4	*Call
2097		6550<6764	64-WAY CP7 TO 12-WAY CP4	*Call
2097		6551<6539	1-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6540	2-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6541	3-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6542	4-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6543	5-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6544	6-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6545	7-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6546	8-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6547	9-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6548	10-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6549	11-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6550	12-WAY CP4 TO 1-WAY CP5	*Call
2097		6551<6552	2-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6553	3-WAY CP5 TO 1-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6551<6554	4-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6555	5-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6556	6-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6557	7-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6558	8-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6559	9-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6560	10-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6561	11-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6562	12-WAY CP5 TO 1-WAY CP5	*Call
2097		6551<6601	1-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6602	2-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6603	3-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6604	4-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6605	5-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6606	6-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6607	7-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6608	8-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6609	9-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6610	10-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6611	11-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6612	12-WAY CP6 TO 1-WAY CP5	*Call
2097		6551<6700	0-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6701	1-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6702	2-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6703	3-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6704	4-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6705	5-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6706	6-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6707	7-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6708	8-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6709	9-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6710	10-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6711	11-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6712	12-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6713	13-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6714	14-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6715	15-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6716	16-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6717	17-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6718	18-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6719	19-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6720	20-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6721	21-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6722	22-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6723	23-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6724	24-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6725	25-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6726	26-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6727	27-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6728	28-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6729	29-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6730	30-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6731	31-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6732	32-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6733	33-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6734	34-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6735	35-WAY CP7 TO 1-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6551<6736	36-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6737	37-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6738	38-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6739	39-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6740	40-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6741	41-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6742	42-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6743	43-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6744	44-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6745	45-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6746	46-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6747	47-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6748	48-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6749	49-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6750	50-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6751	51-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6752	52-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6753	53-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6754	54-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6755	55-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6756	56-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6757	57-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6758	58-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6759	59-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6760	60-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6761	61-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6762	62-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6763	63-WAY CP7 TO 1-WAY CP5	*Call
2097		6551<6764	64-WAY CP7 TO 1-WAY CP5	*Call
2097		6552<6539	1-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6540	2-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6541	3-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6542	4-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6543	5-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6544	6-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6545	7-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6546	8-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6547	9-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6548	10-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6549	11-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6550	12-WAY CP4 TO 2-WAY CP5	*Call
2097		6552<6551	1-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6553	3-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6554	4-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6555	5-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6556	6-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6557	7-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6558	8-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6559	9-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6560	10-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6561	11-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6562	12-WAY CP5 TO 2-WAY CP5	*Call
2097		6552<6601	1-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6602	2-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6603	3-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6604	4-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6605	5-WAY CP6 TO 2-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6552<6606	6-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6607	7-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6608	8-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6609	9-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6610	10-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6611	11-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6612	12-WAY CP6 TO 2-WAY CP5	*Call
2097		6552<6700	0-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6701	1-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6702	2-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6703	3-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6704	4-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6705	5-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6706	6-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6707	7-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6708	8-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6709	9-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6710	10-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6711	11-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6712	12-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6713	13-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6714	14-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6715	15-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6716	16-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6717	17-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6718	18-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6719	19-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6720	20-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6721	21-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6722	22-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6723	23-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6724	24-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6725	25-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6726	26-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6727	27-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6728	28-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6729	29-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6730	30-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6731	31-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6732	32-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6733	33-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6734	34-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6735	35-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6736	36-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6737	37-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6738	38-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6739	39-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6740	40-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6741	41-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6742	42-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6743	43-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6744	44-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6745	45-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6746	46-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6747	47-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6748	48-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6749	49-WAY CP7 TO 2-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6552<6750	50-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6751	51-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6752	52-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6753	53-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6754	54-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6755	55-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6756	56-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6757	57-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6758	58-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6759	59-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6760	60-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6761	61-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6762	62-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6763	63-WAY CP7 TO 2-WAY CP5	*Call
2097		6552<6764	64-WAY CP7 TO 2-WAY CP5	*Call
2097		6553<6539	1-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6540	2-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6541	3-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6542	4-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6543	5-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6544	6-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6545	7-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6546	8-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6547	9-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6548	10-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6549	11-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6550	12-WAY CP4 TO 3-WAY CP5	*Call
2097		6553<6551	1-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6552	2-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6554	4-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6555	5-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6556	6-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6557	7-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6558	8-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6559	9-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6560	10-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6561	11-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6562	12-WAY CP5 TO 3-WAY CP5	*Call
2097		6553<6601	1-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6602	2-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6603	3-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6604	4-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6605	5-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6606	6-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6607	7-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6608	8-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6609	9-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6610	10-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6611	11-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6612	12-WAY CP6 TO 3-WAY CP5	*Call
2097		6553<6700	0-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6701	1-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6702	2-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6703	3-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6704	4-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6705	5-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6706	6-WAY CP7 TO 3-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6553<6707	7-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6708	8-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6709	9-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6710	10-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6711	11-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6712	12-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6713	13-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6714	14-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6715	15-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6716	16-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6717	17-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6718	18-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6719	19-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6720	20-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6721	21-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6722	22-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6723	23-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6724	24-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6725	25-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6726	26-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6727	27-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6728	28-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6729	29-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6730	30-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6731	31-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6732	32-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6733	33-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6734	34-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6735	35-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6736	36-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6737	37-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6738	38-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6739	39-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6740	40-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6741	41-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6742	42-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6743	43-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6744	44-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6745	45-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6746	46-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6747	47-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6748	48-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6749	49-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6750	50-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6751	51-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6752	52-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6753	53-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6754	54-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6755	55-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6756	56-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6757	57-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6758	58-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6759	59-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6760	60-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6761	61-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6762	62-WAY CP7 TO 3-WAY CP5	*Call
2097		6553<6763	63-WAY CP7 TO 3-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6553<6764	64-WAY CP7 TO 3-WAY CP5	*Call
2097		6554<6539	1-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6540	2-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6541	3-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6542	4-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6543	5-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6544	6-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6545	7-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6546	8-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6547	9-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6548	10-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6549	11-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6550	12-WAY CP4 TO 4-WAY CP5	*Call
2097		6554<6551	1-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6552	2-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6553	3-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6555	5-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6556	6-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6557	7-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6558	8-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6559	9-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6560	10-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6561	11-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6562	12-WAY CP5 TO 4-WAY CP5	*Call
2097		6554<6601	1-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6602	2-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6603	3-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6604	4-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6605	5-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6606	6-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6607	7-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6608	8-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6609	9-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6610	10-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6611	11-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6612	12-WAY CP6 TO 4-WAY CP5	*Call
2097		6554<6700	0-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6701	1-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6702	2-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6703	3-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6704	4-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6705	5-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6706	6-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6707	7-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6708	8-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6709	9-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6710	10-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6711	11-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6712	12-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6713	13-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6714	14-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6715	15-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6716	16-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6717	17-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6718	18-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6719	19-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6720	20-WAY CP7 TO 4-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6554<6721	21-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6722	22-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6723	23-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6724	24-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6725	25-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6726	26-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6727	27-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6728	28-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6729	29-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6730	30-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6731	31-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6732	32-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6733	33-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6734	34-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6735	35-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6736	36-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6737	37-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6738	38-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6739	39-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6740	40-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6741	41-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6742	42-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6743	43-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6744	44-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6745	45-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6746	46-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6747	47-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6748	48-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6749	49-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6750	50-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6751	51-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6752	52-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6753	53-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6754	54-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6755	55-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6756	56-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6757	57-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6758	58-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6759	59-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6760	60-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6761	61-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6762	62-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6763	63-WAY CP7 TO 4-WAY CP5	*Call
2097		6554<6764	64-WAY CP7 TO 4-WAY CP5	*Call
2097		6555<6539	1-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6540	2-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6541	3-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6542	4-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6543	5-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6544	6-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6545	7-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6546	8-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6547	9-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6548	10-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6549	11-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6550	12-WAY CP4 TO 5-WAY CP5	*Call
2097		6555<6551	1-WAY CP5 TO 5-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6555<6552	2-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6553	3-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6554	4-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6556	6-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6557	7-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6558	8-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6559	9-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6560	10-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6561	11-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6562	12-WAY CP5 TO 5-WAY CP5	*Call
2097		6555<6601	1-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6602	2-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6603	3-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6604	4-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6605	5-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6606	6-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6607	7-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6608	8-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6609	9-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6610	10-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6611	11-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6612	12-WAY CP6 TO 5-WAY CP5	*Call
2097		6555<6700	0-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6701	1-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6702	2-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6703	3-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6704	4-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6705	5-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6706	6-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6707	7-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6708	8-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6709	9-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6710	10-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6711	11-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6712	12-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6713	13-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6714	14-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6715	15-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6716	16-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6717	17-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6718	18-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6719	19-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6720	20-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6721	21-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6722	22-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6723	23-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6724	24-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6725	25-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6726	26-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6727	27-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6728	28-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6729	29-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6730	30-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6731	31-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6732	32-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6733	33-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6734	34-WAY CP7 TO 5-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6555<6735	35-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6736	36-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6737	37-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6738	38-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6739	39-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6740	40-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6741	41-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6742	42-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6743	43-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6744	44-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6745	45-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6746	46-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6747	47-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6748	48-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6749	49-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6750	50-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6751	51-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6752	52-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6753	53-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6754	54-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6755	55-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6756	56-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6757	57-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6758	58-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6759	59-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6760	60-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6761	61-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6762	62-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6763	63-WAY CP7 TO 5-WAY CP5	*Call
2097		6555<6764	64-WAY CP7 TO 5-WAY CP5	*Call
2097		6556<6539	1-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6540	2-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6541	3-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6542	4-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6543	5-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6544	6-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6545	7-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6546	8-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6547	9-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6548	10-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6549	11-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6550	12-WAY CP4 TO 6-WAY CP5	*Call
2097		6556<6551	1-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6552	2-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6553	3-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6554	4-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6555	5-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6557	7-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6558	8-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6559	9-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6560	10-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6561	11-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6562	12-WAY CP5 TO 6-WAY CP5	*Call
2097		6556<6601	1-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6602	2-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6603	3-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6604	4-WAY CP6 TO 6-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6556<6605	5-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6606	6-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6607	7-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6608	8-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6609	9-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6610	10-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6611	11-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6612	12-WAY CP6 TO 6-WAY CP5	*Call
2097		6556<6700	0-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6701	1-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6702	2-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6703	3-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6704	4-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6705	5-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6706	6-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6707	7-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6708	8-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6709	9-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6710	10-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6711	11-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6712	12-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6713	13-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6714	14-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6715	15-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6716	16-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6717	17-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6718	18-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6719	19-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6720	20-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6721	21-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6722	22-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6723	23-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6724	24-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6725	25-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6726	26-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6727	27-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6728	28-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6729	29-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6730	30-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6731	31-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6732	32-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6733	33-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6734	34-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6735	35-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6736	36-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6737	37-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6738	38-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6739	39-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6740	40-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6741	41-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6742	42-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6743	43-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6744	44-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6745	45-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6746	46-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6747	47-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6748	48-WAY CP7 TO 6-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6556<6749	49-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6750	50-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6751	51-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6752	52-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6753	53-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6754	54-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6755	55-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6756	56-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6757	57-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6758	58-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6759	59-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6760	60-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6761	61-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6762	62-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6763	63-WAY CP7 TO 6-WAY CP5	*Call
2097		6556<6764	64-WAY CP7 TO 6-WAY CP5	*Call
2097		6557<6539	1-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6540	2-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6541	3-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6542	4-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6543	5-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6544	6-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6545	7-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6546	8-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6547	9-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6548	10-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6549	11-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6550	12-WAY CP4 TO 7-WAY CP5	*Call
2097		6557<6551	1-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6552	2-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6553	3-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6554	4-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6555	5-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6556	6-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6558	8-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6559	9-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6560	10-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6561	11-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6562	12-WAY CP5 TO 7-WAY CP5	*Call
2097		6557<6601	1-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6602	2-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6603	3-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6604	4-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6605	5-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6606	6-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6607	7-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6608	8-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6609	9-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6610	10-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6611	11-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6612	12-WAY CP6 TO 7-WAY CP5	*Call
2097		6557<6700	0-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6701	1-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6702	2-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6703	3-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6704	4-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6705	5-WAY CP7 TO 7-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6557<6706	6-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6707	7-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6708	8-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6709	9-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6710	10-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6711	11-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6712	12-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6713	13-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6714	14-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6715	15-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6716	16-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6717	17-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6718	18-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6719	19-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6720	20-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6721	21-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6722	22-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6723	23-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6724	24-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6725	25-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6726	26-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6727	27-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6728	28-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6729	29-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6730	30-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6731	31-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6732	32-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6733	33-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6734	34-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6735	35-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6736	36-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6737	37-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6738	38-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6739	39-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6740	40-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6741	41-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6742	42-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6743	43-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6744	44-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6745	45-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6746	46-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6747	47-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6748	48-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6749	49-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6750	50-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6751	51-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6752	52-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6753	53-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6754	54-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6755	55-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6756	56-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6757	57-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6758	58-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6759	59-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6760	60-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6761	61-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6762	62-WAY CP7 TO 7-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6557<6763	63-WAY CP7 TO 7-WAY CP5	*Call
2097		6557<6764	64-WAY CP7 TO 7-WAY CP5	*Call
2097		6558<6539	1-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6540	2-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6541	3-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6542	4-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6543	5-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6544	6-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6545	7-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6546	8-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6547	9-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6548	10-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6549	11-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6550	12-WAY CP4 TO 8-WAY CP5	*Call
2097		6558<6551	1-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6552	2-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6553	3-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6554	4-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6555	5-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6556	6-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6557	7-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6559	9-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6560	10-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6561	11-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6562	12-WAY CP5 TO 8-WAY CP5	*Call
2097		6558<6601	1-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6602	2-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6603	3-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6604	4-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6605	5-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6606	6-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6607	7-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6608	8-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6609	9-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6610	10-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6611	11-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6612	12-WAY CP6 TO 8-WAY CP5	*Call
2097		6558<6700	0-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6701	1-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6702	2-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6703	3-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6704	4-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6705	5-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6706	6-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6707	7-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6708	8-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6709	9-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6710	10-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6711	11-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6712	12-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6713	13-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6714	14-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6715	15-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6716	16-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6717	17-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6718	18-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6719	19-WAY CP7 TO 8-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6558<6720	20-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6721	21-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6722	22-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6723	23-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6724	24-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6725	25-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6726	26-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6727	27-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6728	28-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6729	29-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6730	30-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6731	31-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6732	32-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6733	33-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6734	34-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6735	35-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6736	36-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6737	37-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6738	38-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6739	39-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6740	40-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6741	41-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6742	42-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6743	43-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6744	44-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6745	45-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6746	46-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6747	47-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6748	48-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6749	49-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6750	50-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6751	51-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6752	52-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6753	53-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6754	54-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6755	55-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6756	56-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6757	57-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6758	58-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6759	59-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6760	60-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6761	61-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6762	62-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6763	63-WAY CP7 TO 8-WAY CP5	*Call
2097		6558<6764	64-WAY CP7 TO 8-WAY CP5	*Call
2097		6559<6539	1-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6540	2-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6541	3-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6542	4-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6543	5-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6544	6-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6545	7-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6546	8-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6547	9-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6548	10-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6549	11-WAY CP4 TO 9-WAY CP5	*Call
2097		6559<6550	12-WAY CP4 TO 9-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6559<6551	1-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6552	2-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6553	3-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6554	4-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6555	5-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6556	6-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6557	7-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6558	8-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6560	10-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6561	11-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6562	12-WAY CP5 TO 9-WAY CP5	*Call
2097		6559<6601	1-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6602	2-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6603	3-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6604	4-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6605	5-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6606	6-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6607	7-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6608	8-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6609	9-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6610	10-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6611	11-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6612	12-WAY CP6 TO 9-WAY CP5	*Call
2097		6559<6700	0-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6701	1-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6702	2-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6703	3-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6704	4-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6705	5-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6706	6-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6707	7-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6708	8-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6709	9-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6710	10-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6711	11-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6712	12-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6713	13-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6714	14-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6715	15-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6716	16-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6717	17-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6718	18-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6719	19-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6720	20-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6721	21-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6722	22-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6723	23-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6724	24-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6725	25-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6726	26-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6727	27-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6728	28-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6729	29-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6730	30-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6731	31-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6732	32-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6733	33-WAY CP7 TO 9-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6559<6734	34-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6735	35-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6736	36-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6737	37-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6738	38-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6739	39-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6740	40-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6741	41-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6742	42-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6743	43-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6744	44-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6745	45-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6746	46-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6747	47-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6748	48-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6749	49-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6750	50-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6751	51-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6752	52-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6753	53-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6754	54-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6755	55-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6756	56-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6757	57-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6758	58-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6759	59-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6760	60-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6761	61-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6762	62-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6763	63-WAY CP7 TO 9-WAY CP5	*Call
2097		6559<6764	64-WAY CP7 TO 9-WAY CP5	*Call
2097		6560<6539	1-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6540	2-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6541	3-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6542	4-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6543	5-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6544	6-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6545	7-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6546	8-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6547	9-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6548	10-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6549	11-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6550	12-WAY CP4 TO 10-WAY CP5	*Call
2097		6560<6551	1-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6552	2-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6553	3-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6554	4-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6555	5-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6556	6-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6557	7-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6558	8-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6559	9-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6561	11-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6562	12-WAY CP5 TO 10-WAY CP5	*Call
2097		6560<6601	1-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6602	2-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6603	3-WAY CP6 TO 10-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6560<6604	4-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6605	5-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6606	6-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6607	7-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6608	8-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6609	9-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6610	10-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6611	11-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6612	12-WAY CP6 TO 10-WAY CP5	*Call
2097		6560<6700	0-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6701	1-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6702	2-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6703	3-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6704	4-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6705	5-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6706	6-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6707	7-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6708	8-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6709	9-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6710	10-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6711	11-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6712	12-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6713	13-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6714	14-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6715	15-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6716	16-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6717	17-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6718	18-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6719	19-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6720	20-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6721	21-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6722	22-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6723	23-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6724	24-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6725	25-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6726	26-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6727	27-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6728	28-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6729	29-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6730	30-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6731	31-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6732	32-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6733	33-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6734	34-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6735	35-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6736	36-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6737	37-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6738	38-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6739	39-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6740	40-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6741	41-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6742	42-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6743	43-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6744	44-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6745	45-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6746	46-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6747	47-WAY CP7 TO 10-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6560<6748	48-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6749	49-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6750	50-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6751	51-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6752	52-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6753	53-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6754	54-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6755	55-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6756	56-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6757	57-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6758	58-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6759	59-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6760	60-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6761	61-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6762	62-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6763	63-WAY CP7 TO 10-WAY CP5	*Call
2097		6560<6764	64-WAY CP7 TO 10-WAY CP5	*Call
2097		6561<6539	1-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6540	2-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6541	3-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6542	4-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6543	5-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6544	6-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6545	7-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6546	8-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6547	9-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6548	10-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6549	11-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6550	12-WAY CP4 TO 11-WAY CP5	*Call
2097		6561<6551	1-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6552	2-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6553	3-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6554	4-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6555	5-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6556	6-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6557	7-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6558	8-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6559	9-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6560	10-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6562	12-WAY CP5 TO 11-WAY CP5	*Call
2097		6561<6601	1-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6602	2-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6603	3-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6604	4-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6605	5-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6606	6-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6607	7-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6608	8-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6609	9-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6610	10-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6611	11-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6612	12-WAY CP6 TO 11-WAY CP5	*Call
2097		6561<6700	0-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6701	1-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6702	2-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6703	3-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6704	4-WAY CP7 TO 11-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6561<6705	5-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6706	6-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6707	7-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6708	8-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6709	9-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6710	10-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6711	11-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6712	12-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6713	13-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6714	14-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6715	15-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6716	16-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6717	17-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6718	18-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6719	19-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6720	20-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6721	21-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6722	22-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6723	23-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6724	24-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6725	25-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6726	26-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6727	27-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6728	28-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6729	29-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6730	30-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6731	31-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6732	32-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6733	33-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6734	34-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6735	35-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6736	36-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6737	37-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6738	38-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6739	39-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6740	40-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6741	41-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6742	42-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6743	43-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6744	44-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6745	45-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6746	46-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6747	47-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6748	48-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6749	49-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6750	50-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6751	51-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6752	52-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6753	53-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6754	54-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6755	55-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6756	56-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6757	57-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6758	58-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6759	59-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6760	60-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6761	61-WAY CP7 TO 11-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6561<6762	62-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6763	63-WAY CP7 TO 11-WAY CP5	*Call
2097		6561<6764	64-WAY CP7 TO 11-WAY CP5	*Call
2097		6562<6539	1-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6540	2-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6541	3-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6542	4-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6543	5-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6544	6-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6545	7-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6546	8-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6547	9-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6548	10-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6549	11-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6550	12-WAY CP4 TO 12-WAY CP5	*Call
2097		6562<6551	1-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6552	2-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6553	3-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6554	4-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6555	5-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6556	6-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6557	7-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6558	8-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6559	9-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6560	10-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6561	11-WAY CP5 TO 12-WAY CP5	*Call
2097		6562<6601	1-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6602	2-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6603	3-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6604	4-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6605	5-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6606	6-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6607	7-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6608	8-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6609	9-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6610	10-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6611	11-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6612	12-WAY CP6 TO 12-WAY CP5	*Call
2097		6562<6700	0-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6701	1-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6702	2-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6703	3-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6704	4-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6705	5-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6706	6-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6707	7-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6708	8-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6709	9-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6710	10-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6711	11-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6712	12-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6713	13-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6714	14-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6715	15-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6716	16-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6717	17-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6718	18-WAY CP7 TO 12-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6562<6719	19-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6720	20-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6721	21-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6722	22-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6723	23-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6724	24-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6725	25-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6726	26-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6727	27-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6728	28-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6729	29-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6730	30-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6731	31-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6732	32-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6733	33-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6734	34-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6735	35-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6736	36-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6737	37-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6738	38-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6739	39-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6740	40-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6741	41-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6742	42-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6743	43-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6744	44-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6745	45-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6746	46-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6747	47-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6748	48-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6749	49-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6750	50-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6751	51-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6752	52-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6753	53-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6754	54-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6755	55-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6756	56-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6757	57-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6758	58-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6759	59-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6760	60-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6761	61-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6762	62-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6763	63-WAY CP7 TO 12-WAY CP5	*Call
2097		6562<6764	64-WAY CP7 TO 12-WAY CP5	*Call
2097		6601<6539	1-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6540	2-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6541	3-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6542	4-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6543	5-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6544	6-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6545	7-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6546	8-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6547	9-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6548	10-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6549	11-WAY CP4 TO 1-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6601<6550	12-WAY CP4 TO 1-WAY CP6	*Call
2097		6601<6551	1-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6552	2-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6553	3-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6554	4-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6555	5-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6556	6-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6557	7-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6558	8-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6559	9-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6560	10-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6561	11-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6562	12-WAY CP5 TO 1-WAY CP6	*Call
2097		6601<6602	2-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6603	3-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6604	4-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6605	5-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6606	6-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6607	7-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6608	8-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6609	9-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6610	10-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6611	11-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6612	12-WAY CP6 TO 1-WAY CP6	*Call
2097		6601<6700	0-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6701	1-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6702	2-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6703	3-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6704	4-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6705	5-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6706	6-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6707	7-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6708	8-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6709	9-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6710	10-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6711	11-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6712	12-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6713	13-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6714	14-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6715	15-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6716	16-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6717	17-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6718	18-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6719	19-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6720	20-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6721	21-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6722	22-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6723	23-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6724	24-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6725	25-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6726	26-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6727	27-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6728	28-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6729	29-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6730	30-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6731	31-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6732	32-WAY CP7 TO 1-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6601<6733	33-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6734	34-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6735	35-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6736	36-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6737	37-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6738	38-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6739	39-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6740	40-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6741	41-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6742	42-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6743	43-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6744	44-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6745	45-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6746	46-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6747	47-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6748	48-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6749	49-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6750	50-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6751	51-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6752	52-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6753	53-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6754	54-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6755	55-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6756	56-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6757	57-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6758	58-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6759	59-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6760	60-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6761	61-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6762	62-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6763	63-WAY CP7 TO 1-WAY CP6	*Call
2097		6601<6764	64-WAY CP7 TO 1-WAY CP6	*Call
2097		6602<6539	1-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6540	2-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6541	3-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6542	4-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6543	5-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6544	6-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6545	7-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6546	8-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6547	9-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6548	10-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6549	11-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6550	12-WAY CP4 TO 2-WAY CP6	*Call
2097		6602<6551	1-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6552	2-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6553	3-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6554	4-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6555	5-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6556	6-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6557	7-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6558	8-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6559	9-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6560	10-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6561	11-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6562	12-WAY CP5 TO 2-WAY CP6	*Call
2097		6602<6601	1-WAY CP6 TO 2-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6602<6603	3-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6604	4-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6605	5-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6606	6-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6607	7-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6608	8-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6609	9-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6610	10-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6611	11-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6612	12-WAY CP6 TO 2-WAY CP6	*Call
2097		6602<6700	0-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6701	1-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6702	2-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6703	3-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6704	4-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6705	5-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6706	6-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6707	7-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6708	8-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6709	9-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6710	10-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6711	11-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6712	12-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6713	13-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6714	14-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6715	15-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6716	16-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6717	17-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6718	18-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6719	19-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6720	20-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6721	21-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6722	22-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6723	23-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6724	24-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6725	25-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6726	26-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6727	27-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6728	28-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6729	29-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6730	30-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6731	31-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6732	32-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6733	33-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6734	34-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6735	35-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6736	36-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6737	37-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6738	38-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6739	39-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6740	40-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6741	41-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6742	42-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6743	43-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6744	44-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6745	45-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6746	46-WAY CP7 TO 2-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6602<6747	47-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6748	48-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6749	49-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6750	50-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6751	51-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6752	52-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6753	53-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6754	54-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6755	55-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6756	56-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6757	57-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6758	58-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6759	59-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6760	60-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6761	61-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6762	62-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6763	63-WAY CP7 TO 2-WAY CP6	*Call
2097		6602<6764	64-WAY CP7 TO 2-WAY CP6	*Call
2097		6603<6539	1-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6540	2-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6541	3-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6542	4-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6543	5-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6544	6-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6545	7-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6546	8-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6547	9-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6548	10-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6549	11-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6550	12-WAY CP4 TO 3-WAY CP6	*Call
2097		6603<6551	1-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6552	2-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6553	3-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6554	4-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6555	5-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6556	6-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6557	7-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6558	8-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6559	9-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6560	10-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6561	11-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6562	12-WAY CP5 TO 3-WAY CP6	*Call
2097		6603<6601	1-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6602	2-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6604	4-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6605	5-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6606	6-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6607	7-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6608	8-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6609	9-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6610	10-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6611	11-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6612	12-WAY CP6 TO 3-WAY CP6	*Call
2097		6603<6700	0-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6701	1-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6702	2-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6703	3-WAY CP7 TO 3-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6603<6704	4-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6705	5-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6706	6-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6707	7-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6708	8-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6709	9-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6710	10-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6711	11-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6712	12-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6713	13-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6714	14-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6715	15-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6716	16-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6717	17-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6718	18-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6719	19-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6720	20-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6721	21-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6722	22-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6723	23-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6724	24-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6725	25-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6726	26-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6727	27-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6728	28-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6729	29-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6730	30-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6731	31-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6732	32-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6733	33-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6734	34-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6735	35-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6736	36-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6737	37-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6738	38-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6739	39-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6740	40-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6741	41-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6742	42-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6743	43-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6744	44-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6745	45-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6746	46-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6747	47-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6748	48-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6749	49-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6750	50-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6751	51-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6752	52-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6753	53-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6754	54-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6755	55-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6756	56-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6757	57-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6758	58-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6759	59-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6760	60-WAY CP7 TO 3-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6603<6761	61-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6762	62-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6763	63-WAY CP7 TO 3-WAY CP6	*Call
2097		6603<6764	64-WAY CP7 TO 3-WAY CP6	*Call
2097		6604<6539	1-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6540	2-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6541	3-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6542	4-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6543	5-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6544	6-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6545	7-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6546	8-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6547	9-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6548	10-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6549	11-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6550	12-WAY CP4 TO 4-WAY CP6	*Call
2097		6604<6551	1-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6552	2-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6553	3-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6554	4-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6555	5-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6556	6-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6557	7-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6558	8-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6559	9-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6560	10-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6561	11-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6562	12-WAY CP5 TO 4-WAY CP6	*Call
2097		6604<6601	1-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6602	2-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6603	3-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6605	5-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6606	6-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6607	7-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6608	8-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6609	9-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6610	10-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6611	11-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6612	12-WAY CP6 TO 4-WAY CP6	*Call
2097		6604<6700	0-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6701	1-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6702	2-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6703	3-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6704	4-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6705	5-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6706	6-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6707	7-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6708	8-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6709	9-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6710	10-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6711	11-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6712	12-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6713	13-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6714	14-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6715	15-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6716	16-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6717	17-WAY CP7 TO 4-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6604<6718	18-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6719	19-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6720	20-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6721	21-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6722	22-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6723	23-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6724	24-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6725	25-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6726	26-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6727	27-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6728	28-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6729	29-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6730	30-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6731	31-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6732	32-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6733	33-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6734	34-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6735	35-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6736	36-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6737	37-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6738	38-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6739	39-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6740	40-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6741	41-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6742	42-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6743	43-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6744	44-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6745	45-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6746	46-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6747	47-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6748	48-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6749	49-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6750	50-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6751	51-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6752	52-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6753	53-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6754	54-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6755	55-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6756	56-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6757	57-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6758	58-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6759	59-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6760	60-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6761	61-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6762	62-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6763	63-WAY CP7 TO 4-WAY CP6	*Call
2097		6604<6764	64-WAY CP7 TO 4-WAY CP6	*Call
2097		6605<6539	1-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6540	2-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6541	3-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6542	4-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6543	5-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6544	6-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6545	7-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6546	8-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6547	9-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6548	10-WAY CP4 TO 5-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6605<6549	11-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6550	12-WAY CP4 TO 5-WAY CP6	*Call
2097		6605<6551	1-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6552	2-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6553	3-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6554	4-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6555	5-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6556	6-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6557	7-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6558	8-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6559	9-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6560	10-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6561	11-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6562	12-WAY CP5 TO 5-WAY CP6	*Call
2097		6605<6601	1-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6602	2-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6603	3-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6604	4-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6606	6-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6607	7-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6608	8-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6609	9-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6610	10-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6611	11-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6612	12-WAY CP6 TO 5-WAY CP6	*Call
2097		6605<6700	0-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6701	1-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6702	2-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6703	3-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6704	4-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6705	5-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6706	6-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6707	7-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6708	8-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6709	9-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6710	10-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6711	11-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6712	12-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6713	13-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6714	14-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6715	15-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6716	16-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6717	17-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6718	18-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6719	19-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6720	20-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6721	21-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6722	22-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6723	23-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6724	24-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6725	25-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6726	26-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6727	27-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6728	28-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6729	29-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6730	30-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6731	31-WAY CP7 TO 5-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6605<6732	32-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6733	33-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6734	34-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6735	35-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6736	36-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6737	37-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6738	38-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6739	39-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6740	40-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6741	41-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6742	42-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6743	43-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6744	44-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6745	45-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6746	46-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6747	47-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6748	48-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6749	49-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6750	50-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6751	51-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6752	52-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6753	53-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6754	54-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6755	55-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6756	56-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6757	57-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6758	58-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6759	59-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6760	60-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6761	61-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6762	62-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6763	63-WAY CP7 TO 5-WAY CP6	*Call
2097		6605<6764	64-WAY CP7 TO 5-WAY CP6	*Call
2097		6606<6539	1-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6540	2-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6541	3-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6542	4-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6543	5-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6544	6-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6545	7-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6546	8-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6547	9-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6548	10-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6549	11-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6550	12-WAY CP4 TO 6-WAY CP6	*Call
2097		6606<6551	1-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6552	2-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6553	3-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6554	4-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6555	5-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6556	6-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6557	7-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6558	8-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6559	9-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6560	10-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6561	11-WAY CP5 TO 6-WAY CP6	*Call
2097		6606<6562	12-WAY CP5 TO 6-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6606<6601	1-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6602	2-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6603	3-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6604	4-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6605	5-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6607	7-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6608	8-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6609	9-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6610	10-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6611	11-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6612	12-WAY CP6 TO 6-WAY CP6	*Call
2097		6606<6700	0-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6701	1-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6702	2-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6703	3-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6704	4-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6705	5-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6706	6-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6707	7-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6708	8-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6709	9-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6710	10-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6711	11-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6712	12-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6713	13-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6714	14-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6715	15-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6716	16-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6717	17-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6718	18-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6719	19-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6720	20-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6721	21-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6722	22-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6723	23-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6724	24-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6725	25-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6726	26-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6727	27-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6728	28-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6729	29-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6730	30-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6731	31-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6732	32-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6733	33-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6734	34-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6735	35-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6736	36-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6737	37-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6738	38-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6739	39-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6740	40-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6741	41-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6742	42-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6743	43-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6744	44-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6745	45-WAY CP7 TO 6-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6606<6746	46-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6747	47-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6748	48-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6749	49-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6750	50-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6751	51-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6752	52-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6753	53-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6754	54-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6755	55-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6756	56-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6757	57-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6758	58-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6759	59-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6760	60-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6761	61-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6762	62-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6763	63-WAY CP7 TO 6-WAY CP6	*Call
2097		6606<6764	64-WAY CP7 TO 6-WAY CP6	*Call
2097		6607<6539	1-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6540	2-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6541	3-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6542	4-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6543	5-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6544	6-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6545	7-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6546	8-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6547	9-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6548	10-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6549	11-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6550	12-WAY CP4 TO 7-WAY CP6	*Call
2097		6607<6551	1-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6552	2-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6553	3-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6554	4-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6555	5-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6556	6-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6557	7-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6558	8-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6559	9-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6560	10-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6561	11-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6562	12-WAY CP5 TO 7-WAY CP6	*Call
2097		6607<6601	1-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6602	2-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6603	3-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6604	4-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6605	5-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6606	6-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6608	8-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6609	9-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6610	10-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6611	11-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6612	12-WAY CP6 TO 7-WAY CP6	*Call
2097		6607<6700	0-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6701	1-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6702	2-WAY CP7 TO 7-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6607<6703	3-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6704	4-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6705	5-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6706	6-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6707	7-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6708	8-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6709	9-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6710	10-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6711	11-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6712	12-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6713	13-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6714	14-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6715	15-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6716	16-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6717	17-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6718	18-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6719	19-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6720	20-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6721	21-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6722	22-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6723	23-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6724	24-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6725	25-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6726	26-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6727	27-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6728	28-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6729	29-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6730	30-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6731	31-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6732	32-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6733	33-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6734	34-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6735	35-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6736	36-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6737	37-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6738	38-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6739	39-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6740	40-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6741	41-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6742	42-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6743	43-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6744	44-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6745	45-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6746	46-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6747	47-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6748	48-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6749	49-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6750	50-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6751	51-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6752	52-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6753	53-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6754	54-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6755	55-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6756	56-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6757	57-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6758	58-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6759	59-WAY CP7 TO 7-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6607<6760	60-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6761	61-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6762	62-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6763	63-WAY CP7 TO 7-WAY CP6	*Call
2097		6607<6764	64-WAY CP7 TO 7-WAY CP6	*Call
2097		6608<6539	1-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6540	2-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6541	3-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6542	4-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6543	5-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6544	6-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6545	7-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6546	8-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6547	9-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6548	10-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6549	11-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6550	12-WAY CP4 TO 8-WAY CP6	*Call
2097		6608<6551	1-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6552	2-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6553	3-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6554	4-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6555	5-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6556	6-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6557	7-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6558	8-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6559	9-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6560	10-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6561	11-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6562	12-WAY CP5 TO 8-WAY CP6	*Call
2097		6608<6601	1-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6602	2-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6603	3-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6604	4-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6605	5-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6606	6-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6607	7-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6609	9-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6610	10-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6611	11-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6612	12-WAY CP6 TO 8-WAY CP6	*Call
2097		6608<6700	0-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6701	1-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6702	2-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6703	3-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6704	4-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6705	5-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6706	6-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6707	7-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6708	8-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6709	9-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6710	10-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6711	11-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6712	12-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6713	13-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6714	14-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6715	15-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6716	16-WAY CP7 TO 8-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6608<6717	17-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6718	18-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6719	19-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6720	20-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6721	21-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6722	22-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6723	23-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6724	24-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6725	25-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6726	26-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6727	27-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6728	28-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6729	29-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6730	30-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6731	31-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6732	32-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6733	33-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6734	34-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6735	35-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6736	36-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6737	37-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6738	38-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6739	39-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6740	40-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6741	41-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6742	42-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6743	43-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6744	44-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6745	45-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6746	46-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6747	47-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6748	48-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6749	49-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6750	50-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6751	51-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6752	52-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6753	53-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6754	54-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6755	55-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6756	56-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6757	57-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6758	58-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6759	59-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6760	60-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6761	61-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6762	62-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6763	63-WAY CP7 TO 8-WAY CP6	*Call
2097		6608<6764	64-WAY CP7 TO 8-WAY CP6	*Call
2097		6609<6539	1-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6540	2-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6541	3-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6542	4-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6543	5-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6544	6-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6545	7-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6546	8-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6547	9-WAY CP4 TO 9-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6609<6548	10-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6549	11-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6550	12-WAY CP4 TO 9-WAY CP6	*Call
2097		6609<6551	1-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6552	2-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6553	3-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6554	4-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6555	5-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6556	6-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6557	7-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6558	8-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6559	9-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6560	10-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6561	11-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6562	12-WAY CP5 TO 9-WAY CP6	*Call
2097		6609<6601	1-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6602	2-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6603	3-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6604	4-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6605	5-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6606	6-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6607	7-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6608	8-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6610	10-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6611	11-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6612	12-WAY CP6 TO 9-WAY CP6	*Call
2097		6609<6700	0-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6701	1-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6702	2-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6703	3-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6704	4-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6705	5-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6706	6-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6707	7-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6708	8-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6709	9-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6710	10-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6711	11-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6712	12-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6713	13-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6714	14-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6715	15-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6716	16-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6717	17-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6718	18-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6719	19-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6720	20-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6721	21-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6722	22-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6723	23-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6724	24-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6725	25-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6726	26-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6727	27-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6728	28-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6729	29-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6730	30-WAY CP7 TO 9-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6609<6731	31-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6732	32-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6733	33-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6734	34-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6735	35-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6736	36-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6737	37-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6738	38-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6739	39-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6740	40-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6741	41-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6742	42-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6743	43-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6744	44-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6745	45-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6746	46-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6747	47-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6748	48-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6749	49-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6750	50-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6751	51-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6752	52-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6753	53-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6754	54-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6755	55-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6756	56-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6757	57-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6758	58-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6759	59-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6760	60-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6761	61-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6762	62-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6763	63-WAY CP7 TO 9-WAY CP6	*Call
2097		6609<6764	64-WAY CP7 TO 9-WAY CP6	*Call
2097		6610<6539	1-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6540	2-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6541	3-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6542	4-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6543	5-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6544	6-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6545	7-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6546	8-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6547	9-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6548	10-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6549	11-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6550	12-WAY CP4 TO 10-WAY CP6	*Call
2097		6610<6551	1-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6552	2-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6553	3-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6554	4-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6555	5-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6556	6-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6557	7-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6558	8-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6559	9-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6560	10-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6561	11-WAY CP5 TO 10-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6610<6562	12-WAY CP5 TO 10-WAY CP6	*Call
2097		6610<6601	1-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6602	2-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6603	3-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6604	4-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6605	5-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6606	6-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6607	7-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6608	8-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6609	9-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6611	11-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6612	12-WAY CP6 TO 10-WAY CP6	*Call
2097		6610<6700	0-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6701	1-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6702	2-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6703	3-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6704	4-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6705	5-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6706	6-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6707	7-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6708	8-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6709	9-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6710	10-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6711	11-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6712	12-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6713	13-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6714	14-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6715	15-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6716	16-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6717	17-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6718	18-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6719	19-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6720	20-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6721	21-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6722	22-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6723	23-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6724	24-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6725	25-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6726	26-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6727	27-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6728	28-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6729	29-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6730	30-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6731	31-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6732	32-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6733	33-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6734	34-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6735	35-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6736	36-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6737	37-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6738	38-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6739	39-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6740	40-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6741	41-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6742	42-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6743	43-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6744	44-WAY CP7 TO 10-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6610<6745	45-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6746	46-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6747	47-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6748	48-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6749	49-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6750	50-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6751	51-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6752	52-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6753	53-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6754	54-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6755	55-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6756	56-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6757	57-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6758	58-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6759	59-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6760	60-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6761	61-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6762	62-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6763	63-WAY CP7 TO 10-WAY CP6	*Call
2097		6610<6764	64-WAY CP7 TO 10-WAY CP6	*Call
2097		6611<6539	1-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6540	2-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6541	3-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6542	4-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6543	5-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6544	6-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6545	7-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6546	8-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6547	9-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6548	10-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6549	11-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6550	12-WAY CP4 TO 11-WAY CP6	*Call
2097		6611<6551	1-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6552	2-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6553	3-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6554	4-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6555	5-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6556	6-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6557	7-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6558	8-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6559	9-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6560	10-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6561	11-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6562	12-WAY CP5 TO 11-WAY CP6	*Call
2097		6611<6601	1-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6602	2-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6603	3-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6604	4-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6605	5-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6606	6-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6607	7-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6608	8-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6609	9-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6610	10-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6612	12-WAY CP6 TO 11-WAY CP6	*Call
2097		6611<6700	0-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6701	1-WAY CP7 TO 11-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6611<6702	2-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6703	3-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6704	4-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6705	5-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6706	6-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6707	7-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6708	8-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6709	9-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6710	10-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6711	11-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6712	12-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6713	13-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6714	14-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6715	15-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6716	16-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6717	17-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6718	18-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6719	19-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6720	20-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6721	21-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6722	22-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6723	23-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6724	24-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6725	25-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6726	26-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6727	27-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6728	28-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6729	29-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6730	30-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6731	31-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6732	32-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6733	33-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6734	34-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6735	35-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6736	36-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6737	37-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6738	38-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6739	39-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6740	40-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6741	41-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6742	42-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6743	43-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6744	44-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6745	45-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6746	46-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6747	47-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6748	48-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6749	49-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6750	50-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6751	51-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6752	52-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6753	53-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6754	54-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6755	55-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6756	56-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6757	57-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6758	58-WAY CP7 TO 11-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6611<6759	59-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6760	60-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6761	61-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6762	62-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6763	63-WAY CP7 TO 11-WAY CP6	*Call
2097		6611<6764	64-WAY CP7 TO 11-WAY CP6	*Call
2097		6612<6539	1-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6540	2-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6541	3-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6542	4-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6543	5-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6544	6-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6545	7-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6546	8-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6547	9-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6548	10-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6549	11-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6550	12-WAY CP4 TO 12-WAY CP6	*Call
2097		6612<6551	1-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6552	2-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6553	3-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6554	4-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6555	5-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6556	6-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6557	7-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6558	8-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6559	9-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6560	10-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6561	11-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6562	12-WAY CP5 TO 12-WAY CP6	*Call
2097		6612<6601	1-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6602	2-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6603	3-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6604	4-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6605	5-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6606	6-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6607	7-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6608	8-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6609	9-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6610	10-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6611	11-WAY CP6 TO 12-WAY CP6	*Call
2097		6612<6700	0-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6701	1-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6702	2-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6703	3-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6704	4-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6705	5-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6706	6-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6707	7-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6708	8-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6709	9-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6710	10-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6711	11-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6712	12-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6713	13-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6714	14-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6715	15-WAY CP7 TO 12-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6612<6716	16-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6717	17-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6718	18-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6719	19-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6720	20-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6721	21-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6722	22-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6723	23-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6724	24-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6725	25-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6726	26-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6727	27-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6728	28-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6729	29-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6730	30-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6731	31-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6732	32-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6733	33-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6734	34-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6735	35-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6736	36-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6737	37-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6738	38-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6739	39-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6740	40-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6741	41-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6742	42-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6743	43-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6744	44-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6745	45-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6746	46-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6747	47-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6748	48-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6749	49-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6750	50-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6751	51-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6752	52-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6753	53-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6754	54-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6755	55-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6756	56-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6757	57-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6758	58-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6759	59-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6760	60-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6761	61-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6762	62-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6763	63-WAY CP7 TO 12-WAY CP6	*Call
2097		6612<6764	64-WAY CP7 TO 12-WAY CP6	*Call
2097		6700<6539	1-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6540	2-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6541	3-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6542	4-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6543	5-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6544	6-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6545	7-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6546	8-WAY CP4 TO 0-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6700<6547	9-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6548	10-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6549	11-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6550	12-WAY CP4 TO 0-WAY CP7	*Call
2097		6700<6551	1-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6552	2-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6553	3-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6554	4-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6555	5-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6556	6-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6557	7-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6558	8-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6559	9-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6560	10-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6561	11-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6562	12-WAY CP5 TO 0-WAY CP7	*Call
2097		6700<6601	1-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6602	2-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6603	3-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6604	4-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6605	5-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6606	6-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6607	7-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6608	8-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6609	9-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6610	10-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6611	11-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6612	12-WAY CP6 TO 0-WAY CP7	*Call
2097		6700<6701	1-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6702	2-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6703	3-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6704	4-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6705	5-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6706	6-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6707	7-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6708	8-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6709	9-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6710	10-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6711	11-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6712	12-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6713	13-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6714	14-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6715	15-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6716	16-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6717	17-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6718	18-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6719	19-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6720	20-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6721	21-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6722	22-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6723	23-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6724	24-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6725	25-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6726	26-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6727	27-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6728	28-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6729	29-WAY CP7 TO 0-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6700<6730	30-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6731	31-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6732	32-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6733	33-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6734	34-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6735	35-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6736	36-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6737	37-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6738	38-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6739	39-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6740	40-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6741	41-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6742	42-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6743	43-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6744	44-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6745	45-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6746	46-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6747	47-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6748	48-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6749	49-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6750	50-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6751	51-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6752	52-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6753	53-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6754	54-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6755	55-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6756	56-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6757	57-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6758	58-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6759	59-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6760	60-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6761	61-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6762	62-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6763	63-WAY CP7 TO 0-WAY CP7	*Call
2097		6700<6764	64-WAY CP7 TO 0-WAY CP7	*Call
2097		6701<6539	1-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6540	2-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6541	3-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6542	4-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6543	5-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6544	6-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6545	7-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6546	8-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6547	9-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6548	10-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6549	11-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6550	12-WAY CP4 TO 1-WAY CP7	*Call
2097		6701<6551	1-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6552	2-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6553	3-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6554	4-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6555	5-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6556	6-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6557	7-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6558	8-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6559	9-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6560	10-WAY CP5 TO 1-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6701<6561	11-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6562	12-WAY CP5 TO 1-WAY CP7	*Call
2097		6701<6601	1-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6602	2-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6603	3-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6604	4-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6605	5-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6606	6-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6607	7-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6608	8-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6609	9-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6610	10-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6611	11-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6612	12-WAY CP6 TO 1-WAY CP7	*Call
2097		6701<6700	0-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6702	2-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6703	3-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6704	4-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6705	5-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6706	6-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6707	7-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6708	8-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6709	9-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6710	10-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6711	11-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6712	12-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6713	13-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6714	14-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6715	15-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6716	16-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6717	17-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6718	18-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6719	19-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6720	20-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6721	21-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6722	22-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6723	23-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6724	24-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6725	25-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6726	26-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6727	27-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6728	28-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6729	29-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6730	30-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6731	31-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6732	32-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6733	33-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6734	34-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6735	35-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6736	36-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6737	37-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6738	38-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6739	39-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6740	40-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6741	41-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6742	42-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6743	43-WAY CP7 TO 1-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6701<6744	44-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6745	45-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6746	46-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6747	47-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6748	48-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6749	49-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6750	50-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6751	51-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6752	52-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6753	53-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6754	54-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6755	55-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6756	56-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6757	57-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6758	58-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6759	59-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6760	60-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6761	61-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6762	62-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6763	63-WAY CP7 TO 1-WAY CP7	*Call
2097		6701<6764	64-WAY CP7 TO 1-WAY CP7	*Call
2097		6702<6539	1-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6540	2-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6541	3-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6542	4-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6543	5-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6544	6-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6545	7-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6546	8-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6547	9-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6548	10-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6549	11-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6550	12-WAY CP4 TO 2-WAY CP7	*Call
2097		6702<6551	1-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6552	2-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6553	3-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6554	4-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6555	5-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6556	6-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6557	7-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6558	8-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6559	9-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6560	10-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6561	11-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6562	12-WAY CP5 TO 2-WAY CP7	*Call
2097		6702<6601	1-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6602	2-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6603	3-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6604	4-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6605	5-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6606	6-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6607	7-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6608	8-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6609	9-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6610	10-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6611	11-WAY CP6 TO 2-WAY CP7	*Call
2097		6702<6612	12-WAY CP6 TO 2-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6702<6700	0-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6701	1-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6703	3-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6704	4-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6705	5-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6706	6-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6707	7-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6708	8-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6709	9-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6710	10-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6711	11-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6712	12-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6713	13-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6714	14-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6715	15-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6716	16-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6717	17-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6718	18-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6719	19-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6720	20-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6721	21-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6722	22-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6723	23-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6724	24-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6725	25-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6726	26-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6727	27-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6728	28-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6729	29-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6730	30-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6731	31-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6732	32-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6733	33-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6734	34-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6735	35-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6736	36-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6737	37-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6738	38-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6739	39-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6740	40-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6741	41-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6742	42-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6743	43-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6744	44-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6745	45-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6746	46-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6747	47-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6748	48-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6749	49-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6750	50-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6751	51-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6752	52-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6753	53-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6754	54-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6755	55-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6756	56-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6757	57-WAY CP7 TO 2-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6702<6758	58-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6759	59-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6760	60-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6761	61-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6762	62-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6763	63-WAY CP7 TO 2-WAY CP7	*Call
2097		6702<6764	64-WAY CP7 TO 2-WAY CP7	*Call
2097		6703<6539	1-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6540	2-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6541	3-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6542	4-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6543	5-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6544	6-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6545	7-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6546	8-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6547	9-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6548	10-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6549	11-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6550	12-WAY CP4 TO 3-WAY CP7	*Call
2097		6703<6551	1-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6552	2-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6553	3-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6554	4-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6555	5-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6556	6-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6557	7-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6558	8-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6559	9-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6560	10-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6561	11-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6562	12-WAY CP5 TO 3-WAY CP7	*Call
2097		6703<6601	1-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6602	2-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6603	3-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6604	4-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6605	5-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6606	6-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6607	7-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6608	8-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6609	9-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6610	10-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6611	11-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6612	12-WAY CP6 TO 3-WAY CP7	*Call
2097		6703<6700	0-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6701	1-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6702	2-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6704	4-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6705	5-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6706	6-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6707	7-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6708	8-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6709	9-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6710	10-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6711	11-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6712	12-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6713	13-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6714	14-WAY CP7 TO 3-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6703<6715	15-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6716	16-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6717	17-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6718	18-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6719	19-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6720	20-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6721	21-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6722	22-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6723	23-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6724	24-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6725	25-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6726	26-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6727	27-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6728	28-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6729	29-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6730	30-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6731	31-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6732	32-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6733	33-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6734	34-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6735	35-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6736	36-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6737	37-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6738	38-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6739	39-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6740	40-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6741	41-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6742	42-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6743	43-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6744	44-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6745	45-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6746	46-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6747	47-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6748	48-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6749	49-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6750	50-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6751	51-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6752	52-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6753	53-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6754	54-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6755	55-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6756	56-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6757	57-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6758	58-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6759	59-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6760	60-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6761	61-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6762	62-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6763	63-WAY CP7 TO 3-WAY CP7	*Call
2097		6703<6764	64-WAY CP7 TO 3-WAY CP7	*Call
2097		6704<6539	1-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6540	2-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6541	3-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6542	4-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6543	5-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6544	6-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6545	7-WAY CP4 TO 4-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6704<6546	8-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6547	9-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6548	10-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6549	11-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6550	12-WAY CP4 TO 4-WAY CP7	*Call
2097		6704<6551	1-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6552	2-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6553	3-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6554	4-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6555	5-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6556	6-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6557	7-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6558	8-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6559	9-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6560	10-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6561	11-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6562	12-WAY CP5 TO 4-WAY CP7	*Call
2097		6704<6601	1-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6602	2-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6603	3-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6604	4-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6605	5-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6606	6-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6607	7-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6608	8-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6609	9-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6610	10-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6611	11-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6612	12-WAY CP6 TO 4-WAY CP7	*Call
2097		6704<6700	0-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6701	1-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6702	2-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6703	3-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6705	5-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6706	6-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6707	7-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6708	8-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6709	9-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6710	10-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6711	11-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6712	12-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6713	13-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6714	14-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6715	15-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6716	16-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6717	17-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6718	18-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6719	19-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6720	20-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6721	21-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6722	22-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6723	23-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6724	24-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6725	25-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6726	26-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6727	27-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6728	28-WAY CP7 TO 4-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6704<6729	29-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6730	30-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6731	31-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6732	32-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6733	33-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6734	34-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6735	35-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6736	36-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6737	37-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6738	38-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6739	39-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6740	40-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6741	41-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6742	42-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6743	43-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6744	44-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6745	45-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6746	46-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6747	47-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6748	48-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6749	49-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6750	50-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6751	51-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6752	52-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6753	53-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6754	54-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6755	55-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6756	56-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6757	57-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6758	58-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6759	59-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6760	60-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6761	61-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6762	62-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6763	63-WAY CP7 TO 4-WAY CP7	*Call
2097		6704<6764	64-WAY CP7 TO 4-WAY CP7	*Call
2097		6705<6539	1-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6540	2-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6541	3-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6542	4-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6543	5-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6544	6-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6545	7-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6546	8-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6547	9-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6548	10-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6549	11-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6550	12-WAY CP4 TO 5-WAY CP7	*Call
2097		6705<6551	1-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6552	2-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6553	3-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6554	4-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6555	5-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6556	6-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6557	7-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6558	8-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6559	9-WAY CP5 TO 5-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6705<6560	10-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6561	11-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6562	12-WAY CP5 TO 5-WAY CP7	*Call
2097		6705<6601	1-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6602	2-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6603	3-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6604	4-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6605	5-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6606	6-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6607	7-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6608	8-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6609	9-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6610	10-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6611	11-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6612	12-WAY CP6 TO 5-WAY CP7	*Call
2097		6705<6700	0-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6701	1-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6702	2-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6703	3-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6704	4-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6706	6-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6707	7-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6708	8-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6709	9-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6710	10-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6711	11-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6712	12-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6713	13-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6714	14-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6715	15-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6716	16-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6717	17-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6718	18-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6719	19-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6720	20-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6721	21-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6722	22-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6723	23-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6724	24-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6725	25-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6726	26-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6727	27-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6728	28-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6729	29-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6730	30-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6731	31-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6732	32-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6733	33-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6734	34-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6735	35-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6736	36-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6737	37-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6738	38-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6739	39-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6740	40-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6741	41-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6742	42-WAY CP7 TO 5-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6705<6743	43-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6744	44-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6745	45-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6746	46-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6747	47-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6748	48-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6749	49-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6750	50-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6751	51-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6752	52-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6753	53-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6754	54-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6755	55-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6756	56-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6757	57-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6758	58-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6759	59-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6760	60-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6761	61-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6762	62-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6763	63-WAY CP7 TO 5-WAY CP7	*Call
2097		6705<6764	64-WAY CP7 TO 5-WAY CP7	*Call
2097		6706<6539	1-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6540	2-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6541	3-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6542	4-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6543	5-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6544	6-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6545	7-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6546	8-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6547	9-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6548	10-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6549	11-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6550	12-WAY CP4 TO 6-WAY CP7	*Call
2097		6706<6551	1-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6552	2-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6553	3-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6554	4-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6555	5-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6556	6-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6557	7-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6558	8-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6559	9-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6560	10-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6561	11-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6562	12-WAY CP5 TO 6-WAY CP7	*Call
2097		6706<6601	1-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6602	2-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6603	3-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6604	4-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6605	5-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6606	6-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6607	7-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6608	8-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6609	9-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6610	10-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6611	11-WAY CP6 TO 6-WAY CP7	*Call

Machine	Model	Feature	Description	GSA Price
Type				
2097		6706<6612	12-WAY CP6 TO 6-WAY CP7	*Call
2097		6706<6700	0-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6701	1-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6702	2-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6703	3-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6704	4-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6705	5-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6707	7-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6708	8-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6709	9-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6710	10-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6711	11-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6712	12-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6713	13-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6714	14-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6715	15-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6716	16-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6717	17-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6718	18-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6719	19-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6720	20-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6721	21-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6722	22-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6723	23-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6724	24-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6725	25-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6726	26-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6727	27-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6728	28-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6729	29-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6730	30-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6731	31-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6732	32-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6733	33-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6734	34-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6735	35-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6736	36-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6737	37-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6738	38-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6739	39-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6740	40-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6741	41-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6742	42-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6743	43-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6744	44-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6745	45-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6746	46-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6747	47-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6748	48-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6749	49-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6750	50-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6751	51-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6752	52-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6753	53-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6754	54-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6755	55-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6756	56-WAY CP7 TO 6-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6706<6757	57-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6758	58-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6759	59-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6760	60-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6761	61-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6762	62-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6763	63-WAY CP7 TO 6-WAY CP7	*Call
2097		6706<6764	64-WAY CP7 TO 6-WAY CP7	*Call
2097		6707<6539	1-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6540	2-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6541	3-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6542	4-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6543	5-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6544	6-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6545	7-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6546	8-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6547	9-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6548	10-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6549	11-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6550	12-WAY CP4 TO 7-WAY CP7	*Call
2097		6707<6551	1-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6552	2-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6553	3-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6554	4-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6555	5-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6556	6-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6557	7-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6558	8-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6559	9-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6560	10-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6561	11-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6562	12-WAY CP5 TO 7-WAY CP7	*Call
2097		6707<6601	1-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6602	2-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6603	3-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6604	4-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6605	5-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6606	6-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6607	7-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6608	8-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6609	9-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6610	10-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6611	11-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6612	12-WAY CP6 TO 7-WAY CP7	*Call
2097		6707<6700	0-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6701	1-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6702	2-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6703	3-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6704	4-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6705	5-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6706	6-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6708	8-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6709	9-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6710	10-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6711	11-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6712	12-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6713	13-WAY CP7 TO 7-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6707<6714	14-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6715	15-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6716	16-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6717	17-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6718	18-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6719	19-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6720	20-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6721	21-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6722	22-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6723	23-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6724	24-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6725	25-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6726	26-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6727	27-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6728	28-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6729	29-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6730	30-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6731	31-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6732	32-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6733	33-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6734	34-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6735	35-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6736	36-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6737	37-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6738	38-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6739	39-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6740	40-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6741	41-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6742	42-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6743	43-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6744	44-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6745	45-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6746	46-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6747	47-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6748	48-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6749	49-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6750	50-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6751	51-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6752	52-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6753	53-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6754	54-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6755	55-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6756	56-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6757	57-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6758	58-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6759	59-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6760	60-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6761	61-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6762	62-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6763	63-WAY CP7 TO 7-WAY CP7	*Call
2097		6707<6764	64-WAY CP7 TO 7-WAY CP7	*Call
2097		6708<6539	1-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6540	2-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6541	3-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6542	4-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6543	5-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6544	6-WAY CP4 TO 8-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6708<6545	7-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6546	8-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6547	9-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6548	10-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6549	11-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6550	12-WAY CP4 TO 8-WAY CP7	*Call
2097		6708<6551	1-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6552	2-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6553	3-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6554	4-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6555	5-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6556	6-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6557	7-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6558	8-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6559	9-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6560	10-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6561	11-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6562	12-WAY CP5 TO 8-WAY CP7	*Call
2097		6708<6601	1-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6602	2-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6603	3-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6604	4-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6605	5-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6606	6-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6607	7-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6608	8-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6609	9-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6610	10-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6611	11-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6612	12-WAY CP6 TO 8-WAY CP7	*Call
2097		6708<6700	0-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6701	1-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6702	2-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6703	3-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6704	4-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6705	5-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6706	6-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6707	7-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6709	9-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6710	10-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6711	11-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6712	12-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6713	13-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6714	14-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6715	15-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6716	16-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6717	17-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6718	18-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6719	19-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6720	20-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6721	21-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6722	22-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6723	23-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6724	24-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6725	25-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6726	26-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6727	27-WAY CP7 TO 8-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6708<6728	28-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6729	29-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6730	30-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6731	31-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6732	32-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6733	33-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6734	34-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6735	35-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6736	36-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6737	37-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6738	38-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6739	39-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6740	40-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6741	41-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6742	42-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6743	43-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6744	44-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6745	45-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6746	46-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6747	47-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6748	48-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6749	49-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6750	50-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6751	51-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6752	52-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6753	53-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6754	54-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6755	55-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6756	56-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6757	57-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6758	58-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6759	59-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6760	60-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6761	61-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6762	62-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6763	63-WAY CP7 TO 8-WAY CP7	*Call
2097		6708<6764	64-WAY CP7 TO 8-WAY CP7	*Call
2097		6709<6539	1-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6540	2-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6541	3-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6542	4-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6543	5-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6544	6-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6545	7-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6546	8-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6547	9-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6548	10-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6549	11-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6550	12-WAY CP4 TO 9-WAY CP7	*Call
2097		6709<6551	1-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6552	2-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6553	3-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6554	4-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6555	5-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6556	6-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6557	7-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6558	8-WAY CP5 TO 9-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6709<6559	9-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6560	10-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6561	11-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6562	12-WAY CP5 TO 9-WAY CP7	*Call
2097		6709<6601	1-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6602	2-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6603	3-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6604	4-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6605	5-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6606	6-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6607	7-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6608	8-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6609	9-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6610	10-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6611	11-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6612	12-WAY CP6 TO 9-WAY CP7	*Call
2097		6709<6700	0-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6701	1-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6702	2-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6703	3-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6704	4-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6705	5-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6706	6-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6707	7-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6708	8-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6710	10-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6711	11-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6712	12-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6713	13-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6714	14-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6715	15-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6716	16-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6717	17-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6718	18-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6719	19-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6720	20-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6721	21-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6722	22-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6723	23-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6724	24-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6725	25-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6726	26-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6727	27-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6728	28-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6729	29-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6730	30-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6731	31-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6732	32-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6733	33-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6734	34-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6735	35-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6736	36-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6737	37-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6738	38-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6739	39-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6740	40-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6741	41-WAY CP7 TO 9-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6709<6742	42-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6743	43-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6744	44-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6745	45-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6746	46-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6747	47-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6748	48-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6749	49-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6750	50-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6751	51-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6752	52-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6753	53-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6754	54-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6755	55-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6756	56-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6757	57-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6758	58-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6759	59-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6760	60-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6761	61-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6762	62-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6763	63-WAY CP7 TO 9-WAY CP7	*Call
2097		6709<6764	64-WAY CP7 TO 9-WAY CP7	*Call
2097		6710<6539	1-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6540	2-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6541	3-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6542	4-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6543	5-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6544	6-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6545	7-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6546	8-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6547	9-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6548	10-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6549	11-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6550	12-WAY CP4 TO 10-WAY CP7	*Call
2097		6710<6551	1-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6552	2-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6553	3-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6554	4-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6555	5-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6556	6-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6557	7-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6558	8-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6559	9-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6560	10-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6561	11-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6562	12-WAY CP5 TO 10-WAY CP7	*Call
2097		6710<6601	1-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6602	2-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6603	3-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6604	4-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6605	5-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6606	6-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6607	7-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6608	8-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6609	9-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6610	10-WAY CP6 TO 10-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6710<6611	11-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6612	12-WAY CP6 TO 10-WAY CP7	*Call
2097		6710<6700	0-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6701	1-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6702	2-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6703	3-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6704	4-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6705	5-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6706	6-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6707	7-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6708	8-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6709	9-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6711	11-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6712	12-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6713	13-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6714	14-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6715	15-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6716	16-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6717	17-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6718	18-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6719	19-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6720	20-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6721	21-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6722	22-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6723	23-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6724	24-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6725	25-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6726	26-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6727	27-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6728	28-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6729	29-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6730	30-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6731	31-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6732	32-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6733	33-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6734	34-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6735	35-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6736	36-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6737	37-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6738	38-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6739	39-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6740	40-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6741	41-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6742	42-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6743	43-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6744	44-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6745	45-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6746	46-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6747	47-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6748	48-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6749	49-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6750	50-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6751	51-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6752	52-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6753	53-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6754	54-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6755	55-WAY CP7 TO 10-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6710<6756	56-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6757	57-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6758	58-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6759	59-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6760	60-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6761	61-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6762	62-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6763	63-WAY CP7 TO 10-WAY CP7	*Call
2097		6710<6764	64-WAY CP7 TO 10-WAY CP7	*Call
2097		6711<6539	1-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6540	2-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6541	3-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6542	4-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6543	5-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6544	6-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6545	7-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6546	8-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6547	9-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6548	10-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6549	11-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6550	12-WAY CP4 TO 11-WAY CP7	*Call
2097		6711<6551	1-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6552	2-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6553	3-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6554	4-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6555	5-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6556	6-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6557	7-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6558	8-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6559	9-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6560	10-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6561	11-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6562	12-WAY CP5 TO 11-WAY CP7	*Call
2097		6711<6601	1-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6602	2-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6603	3-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6604	4-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6605	5-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6606	6-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6607	7-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6608	8-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6609	9-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6610	10-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6611	11-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6612	12-WAY CP6 TO 11-WAY CP7	*Call
2097		6711<6700	0-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6701	1-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6702	2-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6703	3-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6704	4-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6705	5-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6706	6-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6707	7-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6708	8-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6709	9-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6710	10-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6712	12-WAY CP7 TO 11-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6711<6713	13-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6714	14-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6715	15-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6716	16-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6717	17-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6718	18-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6719	19-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6720	20-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6721	21-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6722	22-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6723	23-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6724	24-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6725	25-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6726	26-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6727	27-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6728	28-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6729	29-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6730	30-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6731	31-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6732	32-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6733	33-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6734	34-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6735	35-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6736	36-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6737	37-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6738	38-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6739	39-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6740	40-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6741	41-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6742	42-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6743	43-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6744	44-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6745	45-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6746	46-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6747	47-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6748	48-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6749	49-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6750	50-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6751	51-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6752	52-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6753	53-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6754	54-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6755	55-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6756	56-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6757	57-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6758	58-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6759	59-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6760	60-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6761	61-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6762	62-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6763	63-WAY CP7 TO 11-WAY CP7	*Call
2097		6711<6764	64-WAY CP7 TO 11-WAY CP7	*Call
2097		6712<6539	1-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6540	2-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6541	3-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6542	4-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6543	5-WAY CP4 TO 12-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6712<6544	6-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6545	7-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6546	8-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6547	9-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6548	10-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6549	11-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6550	12-WAY CP4 TO 12-WAY CP7	*Call
2097		6712<6551	1-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6552	2-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6553	3-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6554	4-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6555	5-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6556	6-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6557	7-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6558	8-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6559	9-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6560	10-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6561	11-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6562	12-WAY CP5 TO 12-WAY CP7	*Call
2097		6712<6601	1-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6602	2-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6603	3-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6604	4-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6605	5-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6606	6-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6607	7-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6608	8-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6609	9-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6610	10-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6611	11-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6612	12-WAY CP6 TO 12-WAY CP7	*Call
2097		6712<6700	0-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6701	1-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6702	2-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6703	3-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6704	4-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6705	5-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6706	6-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6707	7-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6708	8-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6709	9-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6710	10-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6711	11-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6713	13-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6714	14-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6715	15-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6716	16-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6717	17-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6718	18-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6719	19-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6720	20-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6721	21-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6722	22-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6723	23-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6724	24-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6725	25-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6726	26-WAY CP7 TO 12-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6712<6727	27-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6728	28-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6729	29-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6730	30-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6731	31-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6732	32-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6733	33-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6734	34-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6735	35-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6736	36-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6737	37-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6738	38-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6739	39-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6740	40-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6741	41-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6742	42-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6743	43-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6744	44-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6745	45-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6746	46-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6747	47-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6748	48-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6749	49-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6750	50-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6751	51-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6752	52-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6753	53-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6754	54-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6755	55-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6756	56-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6757	57-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6758	58-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6759	59-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6760	60-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6761	61-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6762	62-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6763	63-WAY CP7 TO 12-WAY CP7	*Call
2097		6712<6764	64-WAY CP7 TO 12-WAY CP7	*Call
2097		6713<6539	1-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6540	2-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6541	3-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6542	4-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6543	5-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6544	6-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6545	7-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6546	8-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6547	9-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6548	10-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6549	11-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6550	12-WAY CP4 TO 13-WAY CP7	*Call
2097		6713<6551	1-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6552	2-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6553	3-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6554	4-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6555	5-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6556	6-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6557	7-WAY CP5 TO 13-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6713<6558	8-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6559	9-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6560	10-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6561	11-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6562	12-WAY CP5 TO 13-WAY CP7	*Call
2097		6713<6601	1-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6602	2-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6603	3-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6604	4-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6605	5-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6606	6-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6607	7-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6608	8-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6609	9-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6610	10-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6611	11-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6612	12-WAY CP6 TO 13-WAY CP7	*Call
2097		6713<6700	0-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6701	1-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6702	2-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6703	3-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6704	4-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6705	5-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6706	6-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6707	7-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6708	8-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6709	9-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6710	10-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6711	11-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6712	12-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6714	14-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6715	15-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6716	16-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6717	17-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6718	18-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6719	19-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6720	20-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6721	21-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6722	22-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6723	23-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6724	24-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6725	25-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6726	26-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6727	27-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6728	28-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6729	29-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6730	30-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6731	31-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6732	32-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6733	33-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6734	34-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6735	35-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6736	36-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6737	37-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6738	38-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6739	39-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6740	40-WAY CP7 TO 13-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6713<6741	41-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6742	42-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6743	43-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6744	44-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6745	45-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6746	46-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6747	47-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6748	48-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6749	49-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6750	50-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6751	51-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6752	52-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6753	53-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6754	54-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6755	55-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6756	56-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6757	57-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6758	58-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6759	59-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6760	60-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6761	61-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6762	62-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6763	63-WAY CP7 TO 13-WAY CP7	*Call
2097		6713<6764	64-WAY CP7 TO 13-WAY CP7	*Call
2097		6714<6539	1-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6540	2-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6541	3-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6542	4-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6543	5-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6544	6-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6545	7-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6546	8-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6547	9-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6548	10-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6549	11-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6550	12-WAY CP4 TO 14-WAY CP7	*Call
2097		6714<6551	1-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6552	2-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6553	3-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6554	4-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6555	5-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6556	6-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6557	7-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6558	8-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6559	9-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6560	10-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6561	11-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6562	12-WAY CP5 TO 14-WAY CP7	*Call
2097		6714<6601	1-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6602	2-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6603	3-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6604	4-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6605	5-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6606	6-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6607	7-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6608	8-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6609	9-WAY CP6 TO 14-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6714<6610	10-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6611	11-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6612	12-WAY CP6 TO 14-WAY CP7	*Call
2097		6714<6700	0-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6701	1-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6702	2-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6703	3-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6704	4-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6705	5-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6706	6-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6707	7-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6708	8-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6709	9-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6710	10-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6711	11-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6712	12-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6713	13-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6715	15-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6716	16-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6717	17-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6718	18-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6719	19-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6720	20-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6721	21-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6722	22-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6723	23-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6724	24-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6725	25-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6726	26-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6727	27-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6728	28-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6729	29-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6730	30-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6731	31-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6732	32-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6733	33-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6734	34-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6735	35-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6736	36-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6737	37-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6738	38-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6739	39-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6740	40-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6741	41-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6742	42-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6743	43-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6744	44-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6745	45-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6746	46-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6747	47-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6748	48-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6749	49-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6750	50-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6751	51-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6752	52-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6753	53-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6754	54-WAY CP7 TO 14-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6714<6755	55-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6756	56-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6757	57-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6758	58-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6759	59-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6760	60-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6761	61-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6762	62-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6763	63-WAY CP7 TO 14-WAY CP7	*Call
2097		6714<6764	64-WAY CP7 TO 14-WAY CP7	*Call
2097		6715<6539	1-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6540	2-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6541	3-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6542	4-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6543	5-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6544	6-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6545	7-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6546	8-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6547	9-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6548	10-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6549	11-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6550	12-WAY CP4 TO 15-WAY CP7	*Call
2097		6715<6551	1-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6552	2-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6553	3-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6554	4-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6555	5-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6556	6-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6557	7-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6558	8-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6559	9-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6560	10-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6561	11-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6562	12-WAY CP5 TO 15-WAY CP7	*Call
2097		6715<6601	1-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6602	2-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6603	3-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6604	4-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6605	5-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6606	6-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6607	7-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6608	8-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6609	9-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6610	10-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6611	11-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6612	12-WAY CP6 TO 15-WAY CP7	*Call
2097		6715<6700	0-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6701	1-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6702	2-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6703	3-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6704	4-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6705	5-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6706	6-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6707	7-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6708	8-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6709	9-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6710	10-WAY CP7 TO 15-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6715<6711	11-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6712	12-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6713	13-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6714	14-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6716	16-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6717	17-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6718	18-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6719	19-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6720	20-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6721	21-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6722	22-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6723	23-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6724	24-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6725	25-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6726	26-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6727	27-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6728	28-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6729	29-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6730	30-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6731	31-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6732	32-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6733	33-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6734	34-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6735	35-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6736	36-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6737	37-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6738	38-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6739	39-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6740	40-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6741	41-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6742	42-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6743	43-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6744	44-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6745	45-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6746	46-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6747	47-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6748	48-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6749	49-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6750	50-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6751	51-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6752	52-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6753	53-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6754	54-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6755	55-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6756	56-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6757	57-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6758	58-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6759	59-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6760	60-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6761	61-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6762	62-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6763	63-WAY CP7 TO 15-WAY CP7	*Call
2097		6715<6764	64-WAY CP7 TO 15-WAY CP7	*Call
2097		6716<6539	1-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6540	2-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6541	3-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6542	4-WAY CP4 TO 16-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6716<6543	5-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6544	6-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6545	7-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6546	8-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6547	9-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6548	10-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6549	11-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6550	12-WAY CP4 TO 16-WAY CP7	*Call
2097		6716<6551	1-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6552	2-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6553	3-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6554	4-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6555	5-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6556	6-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6557	7-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6558	8-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6559	9-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6560	10-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6561	11-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6562	12-WAY CP5 TO 16-WAY CP7	*Call
2097		6716<6601	1-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6602	2-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6603	3-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6604	4-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6605	5-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6606	6-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6607	7-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6608	8-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6609	9-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6610	10-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6611	11-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6612	12-WAY CP6 TO 16-WAY CP7	*Call
2097		6716<6700	0-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6701	1-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6702	2-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6703	3-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6704	4-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6705	5-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6706	6-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6707	7-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6708	8-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6709	9-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6710	10-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6711	11-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6712	12-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6713	13-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6714	14-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6715	15-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6717	17-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6718	18-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6719	19-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6720	20-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6721	21-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6722	22-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6723	23-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6724	24-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6725	25-WAY CP7 TO 16-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6716<6726	26-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6727	27-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6728	28-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6729	29-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6730	30-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6731	31-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6732	32-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6733	33-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6734	34-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6735	35-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6736	36-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6737	37-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6738	38-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6739	39-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6740	40-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6741	41-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6742	42-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6743	43-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6744	44-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6745	45-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6746	46-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6747	47-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6748	48-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6749	49-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6750	50-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6751	51-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6752	52-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6753	53-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6754	54-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6755	55-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6756	56-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6757	57-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6758	58-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6759	59-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6760	60-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6761	61-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6762	62-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6763	63-WAY CP7 TO 16-WAY CP7	*Call
2097		6716<6764	64-WAY CP7 TO 16-WAY CP7	*Call
2097		6717<6539	1-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6540	2-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6541	3-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6542	4-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6543	5-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6544	6-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6545	7-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6546	8-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6547	9-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6548	10-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6549	11-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6550	12-WAY CP4 TO 17-WAY CP7	*Call
2097		6717<6551	1-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6552	2-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6553	3-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6554	4-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6555	5-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6556	6-WAY CP5 TO 17-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6717<6557	7-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6558	8-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6559	9-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6560	10-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6561	11-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6562	12-WAY CP5 TO 17-WAY CP7	*Call
2097		6717<6601	1-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6602	2-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6603	3-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6604	4-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6605	5-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6606	6-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6607	7-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6608	8-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6609	9-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6610	10-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6611	11-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6612	12-WAY CP6 TO 17-WAY CP7	*Call
2097		6717<6700	0-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6701	1-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6702	2-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6703	3-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6704	4-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6705	5-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6706	6-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6707	7-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6708	8-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6709	9-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6710	10-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6711	11-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6712	12-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6713	13-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6714	14-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6715	15-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6716	16-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6718	18-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6719	19-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6720	20-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6721	21-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6722	22-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6723	23-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6724	24-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6725	25-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6726	26-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6727	27-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6728	28-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6729	29-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6730	30-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6731	31-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6732	32-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6733	33-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6734	34-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6735	35-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6736	36-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6737	37-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6738	38-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6739	39-WAY CP7 TO 17-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6717<6740	40-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6741	41-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6742	42-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6743	43-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6744	44-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6745	45-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6746	46-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6747	47-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6748	48-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6749	49-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6750	50-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6751	51-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6752	52-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6753	53-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6754	54-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6755	55-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6756	56-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6757	57-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6758	58-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6759	59-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6760	60-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6761	61-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6762	62-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6763	63-WAY CP7 TO 17-WAY CP7	*Call
2097		6717<6764	64-WAY CP7 TO 17-WAY CP7	*Call
2097		6718<6539	1-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6540	2-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6541	3-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6542	4-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6543	5-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6544	6-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6545	7-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6546	8-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6547	9-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6548	10-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6549	11-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6550	12-WAY CP4 TO 18-WAY CP7	*Call
2097		6718<6551	1-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6552	2-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6553	3-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6554	4-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6555	5-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6556	6-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6557	7-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6558	8-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6559	9-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6560	10-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6561	11-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6562	12-WAY CP5 TO 18-WAY CP7	*Call
2097		6718<6601	1-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6602	2-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6603	3-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6604	4-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6605	5-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6606	6-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6607	7-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6608	8-WAY CP6 TO 18-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6718<6609	9-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6610	10-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6611	11-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6612	12-WAY CP6 TO 18-WAY CP7	*Call
2097		6718<6700	0-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6701	1-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6702	2-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6703	3-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6704	4-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6705	5-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6706	6-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6707	7-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6708	8-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6709	9-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6710	10-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6711	11-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6712	12-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6713	13-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6714	14-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6715	15-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6716	16-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6717	17-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6719	19-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6720	20-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6721	21-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6722	22-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6723	23-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6724	24-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6725	25-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6726	26-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6727	27-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6728	28-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6729	29-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6730	30-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6731	31-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6732	32-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6733	33-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6734	34-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6735	35-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6736	36-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6737	37-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6738	38-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6739	39-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6740	40-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6741	41-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6742	42-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6743	43-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6744	44-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6745	45-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6746	46-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6747	47-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6748	48-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6749	49-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6750	50-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6751	51-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6752	52-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6753	53-WAY CP7 TO 18-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6718<6754	54-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6755	55-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6756	56-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6757	57-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6758	58-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6759	59-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6760	60-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6761	61-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6762	62-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6763	63-WAY CP7 TO 18-WAY CP7	*Call
2097		6718<6764	64-WAY CP7 TO 18-WAY CP7	*Call
2097		6719<6539	1-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6540	2-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6541	3-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6542	4-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6543	5-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6544	6-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6545	7-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6546	8-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6547	9-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6548	10-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6549	11-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6550	12-WAY CP4 TO 19-WAY CP7	*Call
2097		6719<6551	1-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6552	2-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6553	3-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6554	4-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6555	5-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6556	6-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6557	7-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6558	8-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6559	9-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6560	10-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6561	11-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6562	12-WAY CP5 TO 19-WAY CP7	*Call
2097		6719<6601	1-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6602	2-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6603	3-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6604	4-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6605	5-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6606	6-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6607	7-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6608	8-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6609	9-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6610	10-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6611	11-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6612	12-WAY CP6 TO 19-WAY CP7	*Call
2097		6719<6700	0-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6701	1-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6702	2-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6703	3-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6704	4-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6705	5-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6706	6-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6707	7-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6708	8-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6709	9-WAY CP7 TO 19-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6719<6710	10-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6711	11-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6712	12-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6713	13-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6714	14-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6715	15-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6716	16-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6717	17-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6718	18-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6720	20-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6721	21-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6722	22-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6723	23-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6724	24-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6725	25-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6726	26-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6727	27-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6728	28-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6729	29-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6730	30-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6731	31-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6732	32-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6733	33-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6734	34-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6735	35-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6736	36-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6737	37-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6738	38-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6739	39-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6740	40-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6741	41-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6742	42-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6743	43-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6744	44-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6745	45-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6746	46-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6747	47-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6748	48-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6749	49-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6750	50-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6751	51-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6752	52-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6753	53-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6754	54-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6755	55-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6756	56-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6757	57-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6758	58-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6759	59-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6760	60-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6761	61-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6762	62-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6763	63-WAY CP7 TO 19-WAY CP7	*Call
2097		6719<6764	64-WAY CP7 TO 19-WAY CP7	*Call
2097		6720<6539	1-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6540	2-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6541	3-WAY CP4 TO 20-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6720<6542	4-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6543	5-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6544	6-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6545	7-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6546	8-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6547	9-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6548	10-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6549	11-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6550	12-WAY CP4 TO 20-WAY CP7	*Call
2097		6720<6551	1-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6552	2-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6553	3-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6554	4-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6555	5-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6556	6-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6557	7-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6558	8-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6559	9-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6560	10-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6561	11-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6562	12-WAY CP5 TO 20-WAY CP7	*Call
2097		6720<6601	1-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6602	2-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6603	3-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6604	4-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6605	5-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6606	6-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6607	7-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6608	8-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6609	9-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6610	10-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6611	11-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6612	12-WAY CP6 TO 20-WAY CP7	*Call
2097		6720<6700	0-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6701	1-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6702	2-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6703	3-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6704	4-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6705	5-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6706	6-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6707	7-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6708	8-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6709	9-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6710	10-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6711	11-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6712	12-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6713	13-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6714	14-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6715	15-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6716	16-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6717	17-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6718	18-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6719	19-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6721	21-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6722	22-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6723	23-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6724	24-WAY CP7 TO 20-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6720<6725	25-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6726	26-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6727	27-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6728	28-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6729	29-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6730	30-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6731	31-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6732	32-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6733	33-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6734	34-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6735	35-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6736	36-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6737	37-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6738	38-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6739	39-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6740	40-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6741	41-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6742	42-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6743	43-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6744	44-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6745	45-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6746	46-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6747	47-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6748	48-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6749	49-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6750	50-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6751	51-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6752	52-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6753	53-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6754	54-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6755	55-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6756	56-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6757	57-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6758	58-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6759	59-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6760	60-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6761	61-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6762	62-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6763	63-WAY CP7 TO 20-WAY CP7	*Call
2097		6720<6764	64-WAY CP7 TO 20-WAY CP7	*Call
2097		6721<6539	1-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6540	2-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6541	3-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6542	4-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6543	5-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6544	6-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6545	7-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6546	8-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6547	9-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6548	10-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6549	11-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6550	12-WAY CP4 TO 21-WAY CP7	*Call
2097		6721<6551	1-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6552	2-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6553	3-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6554	4-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6555	5-WAY CP5 TO 21-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6721<6556	6-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6557	7-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6558	8-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6559	9-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6560	10-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6561	11-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6562	12-WAY CP5 TO 21-WAY CP7	*Call
2097		6721<6601	1-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6602	2-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6603	3-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6604	4-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6605	5-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6606	6-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6607	7-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6608	8-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6609	9-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6610	10-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6611	11-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6612	12-WAY CP6 TO 21-WAY CP7	*Call
2097		6721<6700	0-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6701	1-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6702	2-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6703	3-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6704	4-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6705	5-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6706	6-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6707	7-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6708	8-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6709	9-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6710	10-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6711	11-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6712	12-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6713	13-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6714	14-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6715	15-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6716	16-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6717	17-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6718	18-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6719	19-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6720	20-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6722	22-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6723	23-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6724	24-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6725	25-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6726	26-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6727	27-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6728	28-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6729	29-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6730	30-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6731	31-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6732	32-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6733	33-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6734	34-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6735	35-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6736	36-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6737	37-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6738	38-WAY CP7 TO 21-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6721<6739	39-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6740	40-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6741	41-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6742	42-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6743	43-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6744	44-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6745	45-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6746	46-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6747	47-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6748	48-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6749	49-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6750	50-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6751	51-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6752	52-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6753	53-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6754	54-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6755	55-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6756	56-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6757	57-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6758	58-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6759	59-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6760	60-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6761	61-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6762	62-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6763	63-WAY CP7 TO 21-WAY CP7	*Call
2097		6721<6764	64-WAY CP7 TO 21-WAY CP7	*Call
2097		6722<6539	1-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6540	2-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6541	3-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6542	4-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6543	5-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6544	6-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6545	7-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6546	8-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6547	9-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6548	10-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6549	11-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6550	12-WAY CP4 TO 22-WAY CP7	*Call
2097		6722<6551	1-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6552	2-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6553	3-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6554	4-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6555	5-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6556	6-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6557	7-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6558	8-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6559	9-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6560	10-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6561	11-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6562	12-WAY CP5 TO 22-WAY CP7	*Call
2097		6722<6601	1-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6602	2-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6603	3-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6604	4-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6605	5-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6606	6-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6607	7-WAY CP6 TO 22-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6722<6608	8-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6609	9-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6610	10-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6611	11-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6612	12-WAY CP6 TO 22-WAY CP7	*Call
2097		6722<6700	0-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6701	1-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6702	2-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6703	3-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6704	4-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6705	5-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6706	6-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6707	7-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6708	8-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6709	9-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6710	10-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6711	11-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6712	12-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6713	13-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6714	14-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6715	15-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6716	16-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6717	17-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6718	18-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6719	19-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6720	20-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6721	21-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6723	23-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6724	24-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6725	25-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6726	26-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6727	27-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6728	28-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6729	29-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6730	30-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6731	31-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6732	32-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6733	33-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6734	34-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6735	35-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6736	36-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6737	37-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6738	38-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6739	39-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6740	40-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6741	41-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6742	42-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6743	43-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6744	44-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6745	45-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6746	46-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6747	47-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6748	48-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6749	49-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6750	50-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6751	51-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6752	52-WAY CP7 TO 22-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6722<6753	53-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6754	54-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6755	55-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6756	56-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6757	57-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6758	58-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6759	59-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6760	60-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6761	61-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6762	62-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6763	63-WAY CP7 TO 22-WAY CP7	*Call
2097		6722<6764	64-WAY CP7 TO 22-WAY CP7	*Call
2097		6723<6539	1-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6540	2-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6541	3-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6542	4-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6543	5-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6544	6-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6545	7-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6546	8-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6547	9-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6548	10-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6549	11-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6550	12-WAY CP4 TO 23-WAY CP7	*Call
2097		6723<6551	1-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6552	2-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6553	3-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6554	4-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6555	5-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6556	6-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6557	7-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6558	8-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6559	9-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6560	10-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6561	11-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6562	12-WAY CP5 TO 23-WAY CP7	*Call
2097		6723<6601	1-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6602	2-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6603	3-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6604	4-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6605	5-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6606	6-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6607	7-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6608	8-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6609	9-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6610	10-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6611	11-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6612	12-WAY CP6 TO 23-WAY CP7	*Call
2097		6723<6700	0-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6701	1-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6702	2-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6703	3-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6704	4-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6705	5-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6706	6-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6707	7-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6708	8-WAY CP7 TO 23-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6723<6709	9-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6710	10-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6711	11-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6712	12-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6713	13-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6714	14-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6715	15-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6716	16-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6717	17-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6718	18-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6719	19-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6720	20-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6721	21-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6722	22-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6724	24-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6725	25-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6726	26-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6727	27-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6728	28-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6729	29-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6730	30-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6731	31-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6732	32-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6733	33-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6734	34-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6735	35-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6736	36-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6737	37-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6738	38-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6739	39-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6740	40-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6741	41-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6742	42-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6743	43-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6744	44-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6745	45-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6746	46-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6747	47-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6748	48-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6749	49-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6750	50-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6751	51-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6752	52-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6753	53-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6754	54-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6755	55-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6756	56-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6757	57-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6758	58-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6759	59-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6760	60-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6761	61-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6762	62-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6763	63-WAY CP7 TO 23-WAY CP7	*Call
2097		6723<6764	64-WAY CP7 TO 23-WAY CP7	*Call
2097		6724<6539	1-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6540	2-WAY CP4 TO 24-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6724<6541	3-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6542	4-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6543	5-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6544	6-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6545	7-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6546	8-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6547	9-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6548	10-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6549	11-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6550	12-WAY CP4 TO 24-WAY CP7	*Call
2097		6724<6551	1-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6552	2-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6553	3-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6554	4-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6555	5-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6556	6-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6557	7-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6558	8-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6559	9-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6560	10-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6561	11-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6562	12-WAY CP5 TO 24-WAY CP7	*Call
2097		6724<6601	1-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6602	2-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6603	3-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6604	4-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6605	5-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6606	6-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6607	7-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6608	8-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6609	9-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6610	10-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6611	11-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6612	12-WAY CP6 TO 24-WAY CP7	*Call
2097		6724<6700	0-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6701	1-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6702	2-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6703	3-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6704	4-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6705	5-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6706	6-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6707	7-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6708	8-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6709	9-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6710	10-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6711	11-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6712	12-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6713	13-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6714	14-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6715	15-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6716	16-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6717	17-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6718	18-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6719	19-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6720	20-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6721	21-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6722	22-WAY CP7 TO 24-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6724<6723	23-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6725	25-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6726	26-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6727	27-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6728	28-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6729	29-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6730	30-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6731	31-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6732	32-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6733	33-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6734	34-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6735	35-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6736	36-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6737	37-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6738	38-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6739	39-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6740	40-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6741	41-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6742	42-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6743	43-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6744	44-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6745	45-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6746	46-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6747	47-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6748	48-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6749	49-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6750	50-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6751	51-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6752	52-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6753	53-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6754	54-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6755	55-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6756	56-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6757	57-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6758	58-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6759	59-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6760	60-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6761	61-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6762	62-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6763	63-WAY CP7 TO 24-WAY CP7	*Call
2097		6724<6764	64-WAY CP7 TO 24-WAY CP7	*Call
2097		6725<6539	1-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6540	2-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6541	3-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6542	4-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6543	5-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6544	6-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6545	7-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6546	8-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6547	9-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6548	10-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6549	11-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6550	12-WAY CP4 TO 25-WAY CP7	*Call
2097		6725<6551	1-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6552	2-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6553	3-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6554	4-WAY CP5 TO 25-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6725<6555	5-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6556	6-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6557	7-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6558	8-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6559	9-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6560	10-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6561	11-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6562	12-WAY CP5 TO 25-WAY CP7	*Call
2097		6725<6601	1-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6602	2-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6603	3-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6604	4-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6605	5-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6606	6-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6607	7-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6608	8-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6609	9-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6610	10-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6611	11-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6612	12-WAY CP6 TO 25-WAY CP7	*Call
2097		6725<6700	0-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6701	1-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6702	2-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6703	3-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6704	4-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6705	5-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6706	6-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6707	7-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6708	8-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6709	9-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6710	10-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6711	11-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6712	12-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6713	13-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6714	14-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6715	15-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6716	16-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6717	17-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6718	18-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6719	19-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6720	20-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6721	21-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6722	22-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6723	23-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6724	24-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6726	26-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6727	27-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6728	28-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6729	29-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6730	30-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6731	31-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6732	32-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6733	33-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6734	34-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6735	35-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6736	36-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6737	37-WAY CP7 TO 25-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6725<6738	38-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6739	39-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6740	40-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6741	41-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6742	42-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6743	43-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6744	44-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6745	45-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6746	46-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6747	47-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6748	48-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6749	49-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6750	50-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6751	51-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6752	52-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6753	53-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6754	54-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6755	55-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6756	56-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6757	57-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6758	58-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6759	59-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6760	60-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6761	61-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6762	62-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6763	63-WAY CP7 TO 25-WAY CP7	*Call
2097		6725<6764	64-WAY CP7 TO 25-WAY CP7	*Call
2097		6726<6539	1-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6540	2-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6541	3-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6542	4-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6543	5-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6544	6-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6545	7-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6546	8-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6547	9-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6548	10-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6549	11-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6550	12-WAY CP4 TO 26-WAY CP7	*Call
2097		6726<6551	1-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6552	2-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6553	3-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6554	4-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6555	5-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6556	6-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6557	7-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6558	8-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6559	9-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6560	10-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6561	11-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6562	12-WAY CP5 TO 26-WAY CP7	*Call
2097		6726<6601	1-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6602	2-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6603	3-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6604	4-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6605	5-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6606	6-WAY CP6 TO 26-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6726<6607	7-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6608	8-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6609	9-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6610	10-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6611	11-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6612	12-WAY CP6 TO 26-WAY CP7	*Call
2097		6726<6700	0-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6701	1-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6702	2-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6703	3-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6704	4-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6705	5-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6706	6-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6707	7-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6708	8-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6709	9-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6710	10-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6711	11-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6712	12-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6713	13-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6714	14-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6715	15-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6716	16-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6717	17-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6718	18-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6719	19-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6720	20-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6721	21-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6722	22-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6723	23-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6724	24-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6725	25-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6727	27-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6728	28-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6729	29-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6730	30-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6731	31-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6732	32-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6733	33-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6734	34-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6735	35-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6736	36-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6737	37-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6738	38-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6739	39-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6740	40-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6741	41-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6742	42-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6743	43-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6744	44-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6745	45-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6746	46-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6747	47-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6748	48-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6749	49-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6750	50-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6751	51-WAY CP7 TO 26-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6726<6752	52-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6753	53-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6754	54-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6755	55-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6756	56-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6757	57-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6758	58-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6759	59-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6760	60-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6761	61-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6762	62-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6763	63-WAY CP7 TO 26-WAY CP7	*Call
2097		6726<6764	64-WAY CP7 TO 26-WAY CP7	*Call
2097		6727<6539	1-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6540	2-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6541	3-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6542	4-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6543	5-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6544	6-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6545	7-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6546	8-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6547	9-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6548	10-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6549	11-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6550	12-WAY CP4 TO 27-WAY CP7	*Call
2097		6727<6551	1-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6552	2-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6553	3-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6554	4-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6555	5-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6556	6-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6557	7-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6558	8-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6559	9-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6560	10-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6561	11-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6562	12-WAY CP5 TO 27-WAY CP7	*Call
2097		6727<6601	1-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6602	2-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6603	3-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6604	4-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6605	5-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6606	6-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6607	7-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6608	8-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6609	9-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6610	10-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6611	11-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6612	12-WAY CP6 TO 27-WAY CP7	*Call
2097		6727<6700	0-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6701	1-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6702	2-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6703	3-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6704	4-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6705	5-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6706	6-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6707	7-WAY CP7 TO 27-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6727<6708	8-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6709	9-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6710	10-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6711	11-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6712	12-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6713	13-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6714	14-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6715	15-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6716	16-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6717	17-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6718	18-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6719	19-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6720	20-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6721	21-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6722	22-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6723	23-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6724	24-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6725	25-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6726	26-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6728	28-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6729	29-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6730	30-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6731	31-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6732	32-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6733	33-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6734	34-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6735	35-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6736	36-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6737	37-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6738	38-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6739	39-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6740	40-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6741	41-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6742	42-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6743	43-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6744	44-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6745	45-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6746	46-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6747	47-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6748	48-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6749	49-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6750	50-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6751	51-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6752	52-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6753	53-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6754	54-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6755	55-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6756	56-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6757	57-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6758	58-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6759	59-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6760	60-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6761	61-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6762	62-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6763	63-WAY CP7 TO 27-WAY CP7	*Call
2097		6727<6764	64-WAY CP7 TO 27-WAY CP7	*Call
2097		6728<6539	1-WAY CP4 TO 28-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6728<6540	2-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6541	3-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6542	4-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6543	5-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6544	6-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6545	7-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6546	8-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6547	9-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6548	10-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6549	11-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6550	12-WAY CP4 TO 28-WAY CP7	*Call
2097		6728<6551	1-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6552	2-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6553	3-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6554	4-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6555	5-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6556	6-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6557	7-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6558	8-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6559	9-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6560	10-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6561	11-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6562	12-WAY CP5 TO 28-WAY CP7	*Call
2097		6728<6601	1-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6602	2-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6603	3-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6604	4-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6605	5-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6606	6-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6607	7-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6608	8-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6609	9-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6610	10-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6611	11-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6612	12-WAY CP6 TO 28-WAY CP7	*Call
2097		6728<6700	0-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6701	1-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6702	2-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6703	3-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6704	4-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6705	5-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6706	6-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6707	7-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6708	8-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6709	9-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6710	10-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6711	11-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6712	12-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6713	13-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6714	14-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6715	15-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6716	16-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6717	17-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6718	18-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6719	19-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6720	20-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6721	21-WAY CP7 TO 28-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6728<6722	22-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6723	23-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6724	24-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6725	25-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6726	26-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6727	27-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6729	29-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6730	30-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6731	31-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6732	32-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6733	33-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6734	34-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6735	35-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6736	36-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6737	37-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6738	38-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6739	39-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6740	40-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6741	41-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6742	42-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6743	43-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6744	44-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6745	45-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6746	46-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6747	47-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6748	48-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6749	49-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6750	50-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6751	51-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6752	52-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6753	53-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6754	54-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6755	55-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6756	56-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6757	57-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6758	58-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6759	59-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6760	60-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6761	61-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6762	62-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6763	63-WAY CP7 TO 28-WAY CP7	*Call
2097		6728<6764	64-WAY CP7 TO 28-WAY CP7	*Call
2097		6729<6539	1-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6540	2-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6541	3-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6542	4-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6543	5-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6544	6-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6545	7-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6546	8-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6547	9-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6548	10-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6549	11-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6550	12-WAY CP4 TO 29-WAY CP7	*Call
2097		6729<6551	1-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6552	2-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6553	3-WAY CP5 TO 29-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6729<6554	4-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6555	5-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6556	6-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6557	7-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6558	8-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6559	9-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6560	10-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6561	11-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6562	12-WAY CP5 TO 29-WAY CP7	*Call
2097		6729<6601	1-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6602	2-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6603	3-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6604	4-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6605	5-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6606	6-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6607	7-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6608	8-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6609	9-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6610	10-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6611	11-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6612	12-WAY CP6 TO 29-WAY CP7	*Call
2097		6729<6700	0-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6701	1-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6702	2-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6703	3-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6704	4-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6705	5-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6706	6-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6707	7-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6708	8-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6709	9-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6710	10-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6711	11-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6712	12-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6713	13-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6714	14-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6715	15-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6716	16-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6717	17-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6718	18-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6719	19-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6720	20-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6721	21-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6722	22-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6723	23-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6724	24-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6725	25-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6726	26-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6727	27-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6728	28-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6730	30-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6731	31-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6732	32-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6733	33-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6734	34-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6735	35-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6736	36-WAY CP7 TO 29-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6729<6737	37-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6738	38-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6739	39-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6740	40-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6741	41-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6742	42-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6743	43-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6744	44-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6745	45-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6746	46-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6747	47-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6748	48-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6749	49-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6750	50-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6751	51-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6752	52-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6753	53-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6754	54-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6755	55-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6756	56-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6757	57-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6758	58-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6759	59-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6760	60-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6761	61-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6762	62-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6763	63-WAY CP7 TO 29-WAY CP7	*Call
2097		6729<6764	64-WAY CP7 TO 29-WAY CP7	*Call
2097		6730<6539	1-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6540	2-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6541	3-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6542	4-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6543	5-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6544	6-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6545	7-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6546	8-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6547	9-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6548	10-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6549	11-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6550	12-WAY CP4 TO 30-WAY CP7	*Call
2097		6730<6551	1-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6552	2-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6553	3-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6554	4-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6555	5-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6556	6-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6557	7-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6558	8-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6559	9-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6560	10-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6561	11-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6562	12-WAY CP5 TO 30-WAY CP7	*Call
2097		6730<6601	1-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6602	2-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6603	3-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6604	4-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6605	5-WAY CP6 TO 30-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6730<6606	6-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6607	7-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6608	8-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6609	9-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6610	10-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6611	11-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6612	12-WAY CP6 TO 30-WAY CP7	*Call
2097		6730<6700	0-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6701	1-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6702	2-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6703	3-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6704	4-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6705	5-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6706	6-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6707	7-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6708	8-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6709	9-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6710	10-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6711	11-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6712	12-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6713	13-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6714	14-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6715	15-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6716	16-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6717	17-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6718	18-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6719	19-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6720	20-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6721	21-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6722	22-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6723	23-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6724	24-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6725	25-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6726	26-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6727	27-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6728	28-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6729	29-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6731	31-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6732	32-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6733	33-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6734	34-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6735	35-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6736	36-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6737	37-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6738	38-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6739	39-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6740	40-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6741	41-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6742	42-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6743	43-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6744	44-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6745	45-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6746	46-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6747	47-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6748	48-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6749	49-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6750	50-WAY CP7 TO 30-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6730<6751	51-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6752	52-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6753	53-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6754	54-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6755	55-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6756	56-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6757	57-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6758	58-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6759	59-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6760	60-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6761	61-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6762	62-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6763	63-WAY CP7 TO 30-WAY CP7	*Call
2097		6730<6764	64-WAY CP7 TO 30-WAY CP7	*Call
2097		6731<6539	1-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6540	2-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6541	3-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6542	4-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6543	5-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6544	6-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6545	7-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6546	8-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6547	9-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6548	10-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6549	11-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6550	12-WAY CP4 TO 31-WAY CP7	*Call
2097		6731<6551	1-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6552	2-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6553	3-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6554	4-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6555	5-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6556	6-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6557	7-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6558	8-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6559	9-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6560	10-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6561	11-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6562	12-WAY CP5 TO 31-WAY CP7	*Call
2097		6731<6601	1-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6602	2-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6603	3-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6604	4-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6605	5-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6606	6-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6607	7-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6608	8-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6609	9-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6610	10-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6611	11-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6612	12-WAY CP6 TO 31-WAY CP7	*Call
2097		6731<6700	0-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6701	1-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6702	2-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6703	3-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6704	4-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6705	5-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6706	6-WAY CP7 TO 31-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6731<6707	7-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6708	8-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6709	9-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6710	10-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6711	11-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6712	12-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6713	13-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6714	14-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6715	15-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6716	16-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6717	17-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6718	18-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6719	19-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6720	20-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6721	21-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6722	22-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6723	23-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6724	24-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6725	25-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6726	26-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6727	27-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6728	28-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6729	29-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6730	30-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6732	32-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6733	33-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6734	34-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6735	35-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6736	36-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6737	37-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6738	38-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6739	39-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6740	40-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6741	41-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6742	42-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6743	43-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6744	44-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6745	45-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6746	46-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6747	47-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6748	48-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6749	49-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6750	50-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6751	51-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6752	52-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6753	53-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6754	54-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6755	55-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6756	56-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6757	57-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6758	58-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6759	59-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6760	60-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6761	61-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6762	62-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6763	63-WAY CP7 TO 31-WAY CP7	*Call
2097		6731<6764	64-WAY CP7 TO 31-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6732<6539	1-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6540	2-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6541	3-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6542	4-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6543	5-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6544	6-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6545	7-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6546	8-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6547	9-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6548	10-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6549	11-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6550	12-WAY CP4 TO 32-WAY CP7	*Call
2097		6732<6551	1-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6552	2-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6553	3-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6554	4-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6555	5-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6556	6-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6557	7-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6558	8-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6559	9-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6560	10-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6561	11-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6562	12-WAY CP5 TO 32-WAY CP7	*Call
2097		6732<6601	1-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6602	2-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6603	3-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6604	4-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6605	5-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6606	6-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6607	7-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6608	8-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6609	9-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6610	10-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6611	11-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6612	12-WAY CP6 TO 32-WAY CP7	*Call
2097		6732<6700	0-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6701	1-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6702	2-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6703	3-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6704	4-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6705	5-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6706	6-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6707	7-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6708	8-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6709	9-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6710	10-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6711	11-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6712	12-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6713	13-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6714	14-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6715	15-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6716	16-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6717	17-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6718	18-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6719	19-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6720	20-WAY CP7 TO 32-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6732<6721	21-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6722	22-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6723	23-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6724	24-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6725	25-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6726	26-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6727	27-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6728	28-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6729	29-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6730	30-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6731	31-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6733	33-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6734	34-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6735	35-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6736	36-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6737	37-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6738	38-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6739	39-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6740	40-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6741	41-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6742	42-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6743	43-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6744	44-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6745	45-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6746	46-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6747	47-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6748	48-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6749	49-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6750	50-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6751	51-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6752	52-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6753	53-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6754	54-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6755	55-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6756	56-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6757	57-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6758	58-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6759	59-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6760	60-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6761	61-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6762	62-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6763	63-WAY CP7 TO 32-WAY CP7	*Call
2097		6732<6764	64-WAY CP7 TO 32-WAY CP7	*Call
2097		6733<6539	1-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6540	2-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6541	3-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6542	4-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6543	5-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6544	6-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6545	7-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6546	8-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6547	9-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6548	10-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6549	11-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6550	12-WAY CP4 TO 33-WAY CP7	*Call
2097		6733<6551	1-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6552	2-WAY CP5 TO 33-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6733<6553	3-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6554	4-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6555	5-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6556	6-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6557	7-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6558	8-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6559	9-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6560	10-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6561	11-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6562	12-WAY CP5 TO 33-WAY CP7	*Call
2097		6733<6601	1-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6602	2-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6603	3-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6604	4-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6605	5-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6606	6-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6607	7-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6608	8-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6609	9-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6610	10-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6611	11-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6612	12-WAY CP6 TO 33-WAY CP7	*Call
2097		6733<6700	0-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6701	1-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6702	2-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6703	3-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6704	4-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6705	5-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6706	6-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6707	7-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6708	8-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6709	9-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6710	10-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6711	11-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6712	12-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6713	13-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6714	14-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6715	15-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6716	16-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6717	17-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6718	18-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6719	19-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6720	20-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6721	21-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6722	22-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6723	23-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6724	24-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6725	25-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6726	26-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6727	27-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6728	28-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6729	29-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6730	30-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6731	31-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6732	32-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6734	34-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6735	35-WAY CP7 TO 33-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6733<6736	36-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6737	37-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6738	38-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6739	39-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6740	40-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6741	41-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6742	42-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6743	43-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6744	44-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6745	45-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6746	46-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6747	47-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6748	48-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6749	49-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6750	50-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6751	51-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6752	52-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6753	53-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6754	54-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6755	55-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6756	56-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6757	57-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6758	58-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6759	59-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6760	60-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6761	61-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6762	62-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6763	63-WAY CP7 TO 33-WAY CP7	*Call
2097		6733<6764	64-WAY CP7 TO 33-WAY CP7	*Call
2097		6734<6539	1-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6540	2-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6541	3-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6542	4-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6543	5-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6544	6-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6545	7-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6546	8-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6547	9-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6548	10-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6549	11-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6550	12-WAY CP4 TO 34-WAY CP7	*Call
2097		6734<6551	1-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6552	2-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6553	3-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6554	4-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6555	5-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6556	6-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6557	7-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6558	8-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6559	9-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6560	10-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6561	11-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6562	12-WAY CP5 TO 34-WAY CP7	*Call
2097		6734<6601	1-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6602	2-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6603	3-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6604	4-WAY CP6 TO 34-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6734<6605	5-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6606	6-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6607	7-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6608	8-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6609	9-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6610	10-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6611	11-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6612	12-WAY CP6 TO 34-WAY CP7	*Call
2097		6734<6700	0-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6701	1-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6702	2-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6703	3-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6704	4-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6705	5-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6706	6-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6707	7-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6708	8-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6709	9-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6710	10-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6711	11-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6712	12-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6713	13-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6714	14-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6715	15-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6716	16-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6717	17-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6718	18-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6719	19-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6720	20-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6721	21-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6722	22-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6723	23-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6724	24-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6725	25-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6726	26-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6727	27-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6728	28-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6729	29-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6730	30-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6731	31-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6732	32-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6733	33-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6735	35-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6736	36-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6737	37-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6738	38-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6739	39-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6740	40-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6741	41-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6742	42-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6743	43-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6744	44-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6745	45-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6746	46-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6747	47-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6748	48-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6749	49-WAY CP7 TO 34-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6734<6750	50-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6751	51-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6752	52-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6753	53-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6754	54-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6755	55-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6756	56-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6757	57-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6758	58-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6759	59-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6760	60-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6761	61-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6762	62-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6763	63-WAY CP7 TO 34-WAY CP7	*Call
2097		6734<6764	64-WAY CP7 TO 34-WAY CP7	*Call
2097		6735<6539	1-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6540	2-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6541	3-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6542	4-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6543	5-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6544	6-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6545	7-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6546	8-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6547	9-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6548	10-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6549	11-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6550	12-WAY CP4 TO 35-WAY CP7	*Call
2097		6735<6551	1-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6552	2-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6553	3-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6554	4-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6555	5-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6556	6-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6557	7-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6558	8-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6559	9-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6560	10-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6561	11-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6562	12-WAY CP5 TO 35-WAY CP7	*Call
2097		6735<6601	1-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6602	2-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6603	3-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6604	4-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6605	5-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6606	6-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6607	7-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6608	8-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6609	9-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6610	10-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6611	11-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6612	12-WAY CP6 TO 35-WAY CP7	*Call
2097		6735<6700	0-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6701	1-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6702	2-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6703	3-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6704	4-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6705	5-WAY CP7 TO 35-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6735<6706	6-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6707	7-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6708	8-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6709	9-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6710	10-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6711	11-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6712	12-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6713	13-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6714	14-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6715	15-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6716	16-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6717	17-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6718	18-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6719	19-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6720	20-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6721	21-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6722	22-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6723	23-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6724	24-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6725	25-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6726	26-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6727	27-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6728	28-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6729	29-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6730	30-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6731	31-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6732	32-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6733	33-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6734	34-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6736	36-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6737	37-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6738	38-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6739	39-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6740	40-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6741	41-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6742	42-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6743	43-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6744	44-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6745	45-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6746	46-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6747	47-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6748	48-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6749	49-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6750	50-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6751	51-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6752	52-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6753	53-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6754	54-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6755	55-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6756	56-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6757	57-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6758	58-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6759	59-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6760	60-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6761	61-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6762	62-WAY CP7 TO 35-WAY CP7	*Call
2097		6735<6763	63-WAY CP7 TO 35-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6735<6764	64-WAY CP7 TO 35-WAY CP7	*Call
2097		6736<6539	1-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6540	2-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6541	3-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6542	4-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6543	5-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6544	6-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6545	7-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6546	8-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6547	9-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6548	10-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6549	11-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6550	12-WAY CP4 TO 36-WAY CP7	*Call
2097		6736<6551	1-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6552	2-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6553	3-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6554	4-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6555	5-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6556	6-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6557	7-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6558	8-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6559	9-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6560	10-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6561	11-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6562	12-WAY CP5 TO 36-WAY CP7	*Call
2097		6736<6601	1-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6602	2-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6603	3-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6604	4-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6605	5-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6606	6-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6607	7-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6608	8-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6609	9-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6610	10-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6611	11-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6612	12-WAY CP6 TO 36-WAY CP7	*Call
2097		6736<6700	0-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6701	1-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6702	2-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6703	3-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6704	4-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6705	5-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6706	6-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6707	7-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6708	8-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6709	9-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6710	10-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6711	11-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6712	12-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6713	13-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6714	14-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6715	15-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6716	16-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6717	17-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6718	18-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6719	19-WAY CP7 TO 36-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6736<6720	20-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6721	21-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6722	22-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6723	23-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6724	24-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6725	25-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6726	26-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6727	27-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6728	28-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6729	29-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6730	30-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6731	31-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6732	32-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6733	33-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6734	34-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6735	35-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6737	37-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6738	38-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6739	39-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6740	40-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6741	41-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6742	42-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6743	43-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6744	44-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6745	45-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6746	46-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6747	47-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6748	48-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6749	49-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6750	50-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6751	51-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6752	52-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6753	53-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6754	54-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6755	55-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6756	56-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6757	57-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6758	58-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6759	59-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6760	60-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6761	61-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6762	62-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6763	63-WAY CP7 TO 36-WAY CP7	*Call
2097		6736<6764	64-WAY CP7 TO 36-WAY CP7	*Call
2097		6737<6539	1-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6540	2-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6541	3-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6542	4-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6543	5-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6544	6-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6545	7-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6546	8-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6547	9-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6548	10-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6549	11-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6550	12-WAY CP4 TO 37-WAY CP7	*Call
2097		6737<6551	1-WAY CP5 TO 37-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6737<6552	2-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6553	3-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6554	4-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6555	5-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6556	6-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6557	7-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6558	8-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6559	9-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6560	10-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6561	11-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6562	12-WAY CP5 TO 37-WAY CP7	*Call
2097		6737<6601	1-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6602	2-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6603	3-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6604	4-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6605	5-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6606	6-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6607	7-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6608	8-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6609	9-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6610	10-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6611	11-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6612	12-WAY CP6 TO 37-WAY CP7	*Call
2097		6737<6700	0-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6701	1-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6702	2-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6703	3-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6704	4-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6705	5-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6706	6-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6707	7-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6708	8-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6709	9-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6710	10-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6711	11-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6712	12-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6713	13-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6714	14-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6715	15-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6716	16-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6717	17-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6718	18-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6719	19-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6720	20-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6721	21-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6722	22-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6723	23-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6724	24-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6725	25-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6726	26-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6727	27-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6728	28-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6729	29-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6730	30-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6731	31-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6732	32-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6733	33-WAY CP7 TO 37-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6737<6734	34-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6735	35-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6736	36-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6738	38-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6739	39-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6740	40-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6741	41-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6742	42-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6743	43-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6744	44-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6745	45-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6746	46-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6747	47-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6748	48-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6749	49-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6750	50-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6751	51-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6752	52-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6753	53-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6754	54-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6755	55-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6756	56-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6757	57-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6758	58-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6759	59-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6760	60-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6761	61-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6762	62-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6763	63-WAY CP7 TO 37-WAY CP7	*Call
2097		6737<6764	64-WAY CP7 TO 37-WAY CP7	*Call
2097		6738<6539	1-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6540	2-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6541	3-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6542	4-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6543	5-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6544	6-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6545	7-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6546	8-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6547	9-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6548	10-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6549	11-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6550	12-WAY CP4 TO 38-WAY CP7	*Call
2097		6738<6551	1-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6552	2-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6553	3-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6554	4-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6555	5-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6556	6-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6557	7-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6558	8-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6559	9-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6560	10-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6561	11-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6562	12-WAY CP5 TO 38-WAY CP7	*Call
2097		6738<6601	1-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6602	2-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6603	3-WAY CP6 TO 38-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6738<6604	4-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6605	5-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6606	6-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6607	7-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6608	8-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6609	9-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6610	10-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6611	11-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6612	12-WAY CP6 TO 38-WAY CP7	*Call
2097		6738<6700	0-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6701	1-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6702	2-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6703	3-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6704	4-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6705	5-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6706	6-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6707	7-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6708	8-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6709	9-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6710	10-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6711	11-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6712	12-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6713	13-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6714	14-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6715	15-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6716	16-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6717	17-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6718	18-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6719	19-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6720	20-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6721	21-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6722	22-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6723	23-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6724	24-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6725	25-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6726	26-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6727	27-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6728	28-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6729	29-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6730	30-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6731	31-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6732	32-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6733	33-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6734	34-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6735	35-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6736	36-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6737	37-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6739	39-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6740	40-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6741	41-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6742	42-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6743	43-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6744	44-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6745	45-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6746	46-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6747	47-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6748	48-WAY CP7 TO 38-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6738<6749	49-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6750	50-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6751	51-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6752	52-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6753	53-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6754	54-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6755	55-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6756	56-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6757	57-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6758	58-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6759	59-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6760	60-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6761	61-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6762	62-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6763	63-WAY CP7 TO 38-WAY CP7	*Call
2097		6738<6764	64-WAY CP7 TO 38-WAY CP7	*Call
2097		6739<6539	1-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6540	2-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6541	3-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6542	4-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6543	5-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6544	6-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6545	7-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6546	8-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6547	9-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6548	10-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6549	11-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6550	12-WAY CP4 TO 39-WAY CP7	*Call
2097		6739<6551	1-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6552	2-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6553	3-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6554	4-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6555	5-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6556	6-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6557	7-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6558	8-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6559	9-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6560	10-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6561	11-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6562	12-WAY CP5 TO 39-WAY CP7	*Call
2097		6739<6601	1-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6602	2-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6603	3-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6604	4-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6605	5-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6606	6-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6607	7-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6608	8-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6609	9-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6610	10-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6611	11-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6612	12-WAY CP6 TO 39-WAY CP7	*Call
2097		6739<6700	0-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6701	1-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6702	2-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6703	3-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6704	4-WAY CP7 TO 39-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6739<6705	5-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6706	6-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6707	7-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6708	8-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6709	9-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6710	10-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6711	11-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6712	12-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6713	13-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6714	14-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6715	15-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6716	16-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6717	17-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6718	18-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6719	19-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6720	20-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6721	21-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6722	22-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6723	23-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6724	24-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6725	25-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6726	26-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6727	27-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6728	28-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6729	29-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6730	30-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6731	31-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6732	32-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6733	33-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6734	34-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6735	35-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6736	36-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6737	37-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6738	38-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6740	40-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6741	41-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6742	42-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6743	43-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6744	44-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6745	45-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6746	46-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6747	47-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6748	48-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6749	49-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6750	50-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6751	51-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6752	52-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6753	53-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6754	54-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6755	55-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6756	56-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6757	57-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6758	58-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6759	59-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6760	60-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6761	61-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6762	62-WAY CP7 TO 39-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6739<6763	63-WAY CP7 TO 39-WAY CP7	*Call
2097		6739<6764	64-WAY CP7 TO 39-WAY CP7	*Call
2097		6740<6539	1-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6540	2-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6541	3-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6542	4-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6543	5-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6544	6-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6545	7-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6546	8-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6547	9-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6548	10-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6549	11-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6550	12-WAY CP4 TO 40-WAY CP7	*Call
2097		6740<6551	1-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6552	2-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6553	3-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6554	4-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6555	5-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6556	6-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6557	7-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6558	8-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6559	9-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6560	10-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6561	11-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6562	12-WAY CP5 TO 40-WAY CP7	*Call
2097		6740<6601	1-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6602	2-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6603	3-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6604	4-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6605	5-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6606	6-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6607	7-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6608	8-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6609	9-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6610	10-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6611	11-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6612	12-WAY CP6 TO 40-WAY CP7	*Call
2097		6740<6700	0-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6701	1-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6702	2-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6703	3-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6704	4-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6705	5-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6706	6-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6707	7-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6708	8-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6709	9-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6710	10-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6711	11-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6712	12-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6713	13-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6714	14-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6715	15-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6716	16-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6717	17-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6718	18-WAY CP7 TO 40-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6740<6719	19-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6720	20-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6721	21-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6722	22-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6723	23-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6724	24-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6725	25-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6726	26-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6727	27-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6728	28-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6729	29-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6730	30-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6731	31-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6732	32-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6733	33-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6734	34-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6735	35-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6736	36-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6737	37-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6738	38-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6739	39-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6741	41-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6742	42-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6743	43-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6744	44-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6745	45-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6746	46-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6747	47-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6748	48-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6749	49-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6750	50-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6751	51-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6752	52-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6753	53-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6754	54-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6755	55-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6756	56-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6757	57-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6758	58-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6759	59-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6760	60-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6761	61-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6762	62-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6763	63-WAY CP7 TO 40-WAY CP7	*Call
2097		6740<6764	64-WAY CP7 TO 40-WAY CP7	*Call
2097		6741<6539	1-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6540	2-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6541	3-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6542	4-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6543	5-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6544	6-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6545	7-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6546	8-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6547	9-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6548	10-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6549	11-WAY CP4 TO 41-WAY CP7	*Call
2097		6741<6550	12-WAY CP4 TO 41-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6741<6551	1-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6552	2-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6553	3-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6554	4-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6555	5-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6556	6-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6557	7-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6558	8-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6559	9-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6560	10-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6561	11-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6562	12-WAY CP5 TO 41-WAY CP7	*Call
2097		6741<6601	1-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6602	2-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6603	3-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6604	4-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6605	5-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6606	6-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6607	7-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6608	8-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6609	9-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6610	10-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6611	11-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6612	12-WAY CP6 TO 41-WAY CP7	*Call
2097		6741<6700	0-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6701	1-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6702	2-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6703	3-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6704	4-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6705	5-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6706	6-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6707	7-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6708	8-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6709	9-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6710	10-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6711	11-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6712	12-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6713	13-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6714	14-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6715	15-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6716	16-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6717	17-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6718	18-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6719	19-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6720	20-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6721	21-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6722	22-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6723	23-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6724	24-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6725	25-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6726	26-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6727	27-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6728	28-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6729	29-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6730	30-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6731	31-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6732	32-WAY CP7 TO 41-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6741<6733	33-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6734	34-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6735	35-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6736	36-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6737	37-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6738	38-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6739	39-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6740	40-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6742	42-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6743	43-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6744	44-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6745	45-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6746	46-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6747	47-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6748	48-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6749	49-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6750	50-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6751	51-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6752	52-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6753	53-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6754	54-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6755	55-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6756	56-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6757	57-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6758	58-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6759	59-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6760	60-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6761	61-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6762	62-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6763	63-WAY CP7 TO 41-WAY CP7	*Call
2097		6741<6764	64-WAY CP7 TO 41-WAY CP7	*Call
2097		6742<6539	1-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6540	2-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6541	3-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6542	4-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6543	5-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6544	6-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6545	7-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6546	8-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6547	9-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6548	10-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6549	11-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6550	12-WAY CP4 TO 42-WAY CP7	*Call
2097		6742<6551	1-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6552	2-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6553	3-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6554	4-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6555	5-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6556	6-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6557	7-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6558	8-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6559	9-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6560	10-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6561	11-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6562	12-WAY CP5 TO 42-WAY CP7	*Call
2097		6742<6601	1-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6602	2-WAY CP6 TO 42-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6742<6603	3-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6604	4-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6605	5-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6606	6-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6607	7-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6608	8-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6609	9-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6610	10-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6611	11-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6612	12-WAY CP6 TO 42-WAY CP7	*Call
2097		6742<6700	0-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6701	1-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6702	2-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6703	3-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6704	4-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6705	5-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6706	6-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6707	7-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6708	8-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6709	9-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6710	10-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6711	11-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6712	12-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6713	13-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6714	14-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6715	15-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6716	16-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6717	17-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6718	18-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6719	19-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6720	20-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6721	21-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6722	22-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6723	23-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6724	24-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6725	25-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6726	26-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6727	27-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6728	28-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6729	29-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6730	30-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6731	31-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6732	32-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6733	33-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6734	34-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6735	35-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6736	36-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6737	37-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6738	38-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6739	39-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6740	40-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6741	41-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6743	43-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6744	44-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6745	45-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6746	46-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6747	47-WAY CP7 TO 42-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6742<6748	48-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6749	49-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6750	50-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6751	51-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6752	52-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6753	53-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6754	54-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6755	55-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6756	56-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6757	57-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6758	58-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6759	59-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6760	60-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6761	61-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6762	62-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6763	63-WAY CP7 TO 42-WAY CP7	*Call
2097		6742<6764	64-WAY CP7 TO 42-WAY CP7	*Call
2097		6743<6539	1-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6540	2-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6541	3-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6542	4-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6543	5-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6544	6-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6545	7-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6546	8-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6547	9-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6548	10-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6549	11-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6550	12-WAY CP4 TO 43-WAY CP7	*Call
2097		6743<6551	1-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6552	2-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6553	3-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6554	4-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6555	5-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6556	6-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6557	7-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6558	8-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6559	9-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6560	10-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6561	11-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6562	12-WAY CP5 TO 43-WAY CP7	*Call
2097		6743<6601	1-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6602	2-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6603	3-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6604	4-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6605	5-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6606	6-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6607	7-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6608	8-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6609	9-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6610	10-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6611	11-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6612	12-WAY CP6 TO 43-WAY CP7	*Call
2097		6743<6700	0-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6701	1-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6702	2-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6703	3-WAY CP7 TO 43-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6743<6704	4-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6705	5-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6706	6-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6707	7-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6708	8-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6709	9-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6710	10-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6711	11-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6712	12-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6713	13-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6714	14-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6715	15-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6716	16-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6717	17-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6718	18-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6719	19-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6720	20-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6721	21-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6722	22-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6723	23-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6724	24-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6725	25-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6726	26-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6727	27-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6728	28-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6729	29-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6730	30-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6731	31-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6732	32-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6733	33-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6734	34-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6735	35-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6736	36-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6737	37-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6738	38-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6739	39-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6740	40-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6741	41-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6742	42-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6744	44-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6745	45-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6746	46-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6747	47-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6748	48-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6749	49-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6750	50-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6751	51-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6752	52-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6753	53-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6754	54-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6755	55-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6756	56-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6757	57-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6758	58-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6759	59-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6760	60-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6761	61-WAY CP7 TO 43-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6743<6762	62-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6763	63-WAY CP7 TO 43-WAY CP7	*Call
2097		6743<6764	64-WAY CP7 TO 43-WAY CP7	*Call
2097		6744<6539	1-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6540	2-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6541	3-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6542	4-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6543	5-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6544	6-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6545	7-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6546	8-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6547	9-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6548	10-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6549	11-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6550	12-WAY CP4 TO 44-WAY CP7	*Call
2097		6744<6551	1-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6552	2-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6553	3-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6554	4-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6555	5-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6556	6-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6557	7-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6558	8-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6559	9-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6560	10-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6561	11-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6562	12-WAY CP5 TO 44-WAY CP7	*Call
2097		6744<6601	1-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6602	2-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6603	3-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6604	4-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6605	5-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6606	6-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6607	7-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6608	8-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6609	9-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6610	10-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6611	11-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6612	12-WAY CP6 TO 44-WAY CP7	*Call
2097		6744<6700	0-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6701	1-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6702	2-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6703	3-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6704	4-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6705	5-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6706	6-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6707	7-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6708	8-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6709	9-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6710	10-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6711	11-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6712	12-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6713	13-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6714	14-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6715	15-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6716	16-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6717	17-WAY CP7 TO 44-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6744<6718	18-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6719	19-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6720	20-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6721	21-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6722	22-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6723	23-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6724	24-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6725	25-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6726	26-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6727	27-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6728	28-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6729	29-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6730	30-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6731	31-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6732	32-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6733	33-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6734	34-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6735	35-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6736	36-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6737	37-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6738	38-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6739	39-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6740	40-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6741	41-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6742	42-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6743	43-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6745	45-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6746	46-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6747	47-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6748	48-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6749	49-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6750	50-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6751	51-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6752	52-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6753	53-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6754	54-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6755	55-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6756	56-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6757	57-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6758	58-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6759	59-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6760	60-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6761	61-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6762	62-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6763	63-WAY CP7 TO 44-WAY CP7	*Call
2097		6744<6764	64-WAY CP7 TO 44-WAY CP7	*Call
2097		6745<6539	1-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6540	2-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6541	3-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6542	4-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6543	5-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6544	6-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6545	7-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6546	8-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6547	9-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6548	10-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6549	11-WAY CP4 TO 45-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6745<6550	12-WAY CP4 TO 45-WAY CP7	*Call
2097		6745<6551	1-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6552	2-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6553	3-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6554	4-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6555	5-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6556	6-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6557	7-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6558	8-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6559	9-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6560	10-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6561	11-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6562	12-WAY CP5 TO 45-WAY CP7	*Call
2097		6745<6601	1-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6602	2-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6603	3-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6604	4-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6605	5-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6606	6-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6607	7-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6608	8-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6609	9-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6610	10-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6611	11-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6612	12-WAY CP6 TO 45-WAY CP7	*Call
2097		6745<6700	0-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6701	1-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6702	2-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6703	3-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6704	4-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6705	5-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6706	6-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6707	7-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6708	8-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6709	9-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6710	10-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6711	11-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6712	12-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6713	13-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6714	14-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6715	15-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6716	16-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6717	17-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6718	18-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6719	19-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6720	20-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6721	21-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6722	22-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6723	23-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6724	24-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6725	25-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6726	26-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6727	27-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6728	28-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6729	29-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6730	30-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6731	31-WAY CP7 TO 45-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6745<6732	32-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6733	33-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6734	34-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6735	35-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6736	36-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6737	37-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6738	38-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6739	39-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6740	40-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6741	41-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6742	42-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6743	43-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6744	44-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6746	46-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6747	47-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6748	48-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6749	49-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6750	50-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6751	51-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6752	52-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6753	53-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6754	54-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6755	55-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6756	56-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6757	57-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6758	58-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6759	59-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6760	60-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6761	61-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6762	62-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6763	63-WAY CP7 TO 45-WAY CP7	*Call
2097		6745<6764	64-WAY CP7 TO 45-WAY CP7	*Call
2097		6746<6539	1-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6540	2-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6541	3-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6542	4-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6543	5-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6544	6-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6545	7-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6546	8-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6547	9-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6548	10-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6549	11-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6550	12-WAY CP4 TO 46-WAY CP7	*Call
2097		6746<6551	1-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6552	2-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6553	3-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6554	4-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6555	5-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6556	6-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6557	7-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6558	8-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6559	9-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6560	10-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6561	11-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6562	12-WAY CP5 TO 46-WAY CP7	*Call
2097		6746<6601	1-WAY CP6 TO 46-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6746<6602	2-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6603	3-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6604	4-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6605	5-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6606	6-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6607	7-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6608	8-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6609	9-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6610	10-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6611	11-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6612	12-WAY CP6 TO 46-WAY CP7	*Call
2097		6746<6700	0-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6701	1-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6702	2-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6703	3-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6704	4-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6705	5-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6706	6-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6707	7-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6708	8-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6709	9-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6710	10-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6711	11-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6712	12-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6713	13-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6714	14-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6715	15-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6716	16-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6717	17-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6718	18-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6719	19-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6720	20-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6721	21-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6722	22-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6723	23-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6724	24-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6725	25-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6726	26-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6727	27-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6728	28-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6729	29-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6730	30-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6731	31-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6732	32-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6733	33-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6734	34-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6735	35-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6736	36-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6737	37-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6738	38-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6739	39-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6740	40-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6741	41-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6742	42-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6743	43-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6744	44-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6745	45-WAY CP7 TO 46-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6746<6747	47-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6748	48-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6749	49-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6750	50-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6751	51-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6752	52-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6753	53-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6754	54-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6755	55-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6756	56-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6757	57-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6758	58-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6759	59-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6760	60-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6761	61-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6762	62-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6763	63-WAY CP7 TO 46-WAY CP7	*Call
2097		6746<6764	64-WAY CP7 TO 46-WAY CP7	*Call
2097		6747<6539	1-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6540	2-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6541	3-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6542	4-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6543	5-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6544	6-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6545	7-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6546	8-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6547	9-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6548	10-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6549	11-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6550	12-WAY CP4 TO 47-WAY CP7	*Call
2097		6747<6551	1-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6552	2-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6553	3-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6554	4-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6555	5-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6556	6-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6557	7-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6558	8-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6559	9-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6560	10-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6561	11-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6562	12-WAY CP5 TO 47-WAY CP7	*Call
2097		6747<6601	1-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6602	2-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6603	3-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6604	4-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6605	5-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6606	6-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6607	7-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6608	8-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6609	9-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6610	10-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6611	11-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6612	12-WAY CP6 TO 47-WAY CP7	*Call
2097		6747<6700	0-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6701	1-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6702	2-WAY CP7 TO 47-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6747<6703	3-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6704	4-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6705	5-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6706	6-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6707	7-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6708	8-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6709	9-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6710	10-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6711	11-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6712	12-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6713	13-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6714	14-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6715	15-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6716	16-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6717	17-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6718	18-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6719	19-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6720	20-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6721	21-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6722	22-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6723	23-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6724	24-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6725	25-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6726	26-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6727	27-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6728	28-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6729	29-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6730	30-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6731	31-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6732	32-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6733	33-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6734	34-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6735	35-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6736	36-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6737	37-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6738	38-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6739	39-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6740	40-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6741	41-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6742	42-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6743	43-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6744	44-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6745	45-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6746	46-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6748	48-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6749	49-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6750	50-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6751	51-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6752	52-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6753	53-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6754	54-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6755	55-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6756	56-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6757	57-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6758	58-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6759	59-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6760	60-WAY CP7 TO 47-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6747<6761	61-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6762	62-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6763	63-WAY CP7 TO 47-WAY CP7	*Call
2097		6747<6764	64-WAY CP7 TO 47-WAY CP7	*Call
2097		6748<6539	1-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6540	2-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6541	3-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6542	4-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6543	5-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6544	6-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6545	7-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6546	8-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6547	9-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6548	10-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6549	11-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6550	12-WAY CP4 TO 48-WAY CP7	*Call
2097		6748<6551	1-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6552	2-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6553	3-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6554	4-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6555	5-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6556	6-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6557	7-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6558	8-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6559	9-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6560	10-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6561	11-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6562	12-WAY CP5 TO 48-WAY CP7	*Call
2097		6748<6601	1-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6602	2-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6603	3-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6604	4-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6605	5-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6606	6-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6607	7-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6608	8-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6609	9-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6610	10-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6611	11-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6612	12-WAY CP6 TO 48-WAY CP7	*Call
2097		6748<6700	0-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6701	1-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6702	2-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6703	3-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6704	4-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6705	5-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6706	6-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6707	7-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6708	8-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6709	9-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6710	10-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6711	11-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6712	12-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6713	13-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6714	14-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6715	15-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6716	16-WAY CP7 TO 48-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6748<6717	17-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6718	18-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6719	19-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6720	20-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6721	21-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6722	22-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6723	23-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6724	24-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6725	25-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6726	26-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6727	27-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6728	28-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6729	29-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6730	30-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6731	31-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6732	32-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6733	33-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6734	34-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6735	35-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6736	36-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6737	37-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6738	38-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6739	39-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6740	40-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6741	41-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6742	42-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6743	43-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6744	44-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6745	45-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6746	46-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6747	47-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6749	49-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6750	50-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6751	51-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6752	52-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6753	53-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6754	54-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6755	55-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6756	56-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6757	57-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6758	58-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6759	59-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6760	60-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6761	61-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6762	62-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6763	63-WAY CP7 TO 48-WAY CP7	*Call
2097		6748<6764	64-WAY CP7 TO 48-WAY CP7	*Call
2097		6749<6539	1-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6540	2-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6541	3-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6542	4-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6543	5-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6544	6-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6545	7-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6546	8-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6547	9-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6548	10-WAY CP4 TO 49-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6749<6549	11-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6550	12-WAY CP4 TO 49-WAY CP7	*Call
2097		6749<6551	1-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6552	2-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6553	3-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6554	4-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6555	5-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6556	6-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6557	7-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6558	8-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6559	9-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6560	10-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6561	11-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6562	12-WAY CP5 TO 49-WAY CP7	*Call
2097		6749<6601	1-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6602	2-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6603	3-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6604	4-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6605	5-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6606	6-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6607	7-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6608	8-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6609	9-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6610	10-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6611	11-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6612	12-WAY CP6 TO 49-WAY CP7	*Call
2097		6749<6700	0-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6701	1-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6702	2-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6703	3-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6704	4-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6705	5-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6706	6-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6707	7-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6708	8-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6709	9-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6710	10-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6711	11-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6712	12-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6713	13-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6714	14-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6715	15-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6716	16-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6717	17-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6718	18-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6719	19-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6720	20-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6721	21-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6722	22-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6723	23-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6724	24-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6725	25-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6726	26-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6727	27-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6728	28-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6729	29-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6730	30-WAY CP7 TO 49-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6749<6731	31-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6732	32-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6733	33-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6734	34-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6735	35-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6736	36-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6737	37-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6738	38-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6739	39-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6740	40-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6741	41-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6742	42-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6743	43-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6744	44-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6745	45-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6746	46-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6747	47-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6748	48-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6750	50-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6751	51-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6752	52-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6753	53-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6754	54-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6755	55-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6756	56-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6757	57-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6758	58-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6759	59-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6760	60-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6761	61-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6762	62-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6763	63-WAY CP7 TO 49-WAY CP7	*Call
2097		6749<6764	64-WAY CP7 TO 49-WAY CP7	*Call
2097		6750<6539	1-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6540	2-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6541	3-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6542	4-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6543	5-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6544	6-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6545	7-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6546	8-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6547	9-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6548	10-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6549	11-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6550	12-WAY CP4 TO 50-WAY CP7	*Call
2097		6750<6551	1-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6552	2-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6553	3-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6554	4-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6555	5-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6556	6-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6557	7-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6558	8-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6559	9-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6560	10-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6561	11-WAY CP5 TO 50-WAY CP7	*Call
2097		6750<6562	12-WAY CP5 TO 50-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6750<6601	1-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6602	2-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6603	3-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6604	4-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6605	5-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6606	6-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6607	7-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6608	8-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6609	9-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6610	10-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6611	11-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6612	12-WAY CP6 TO 50-WAY CP7	*Call
2097		6750<6700	0-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6701	1-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6702	2-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6703	3-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6704	4-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6705	5-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6706	6-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6707	7-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6708	8-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6709	9-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6710	10-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6711	11-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6712	12-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6713	13-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6714	14-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6715	15-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6716	16-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6717	17-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6718	18-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6719	19-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6720	20-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6721	21-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6722	22-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6723	23-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6724	24-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6725	25-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6726	26-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6727	27-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6728	28-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6729	29-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6730	30-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6731	31-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6732	32-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6733	33-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6734	34-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6735	35-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6736	36-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6737	37-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6738	38-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6739	39-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6740	40-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6741	41-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6742	42-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6743	43-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6744	44-WAY CP7 TO 50-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6750<6745	45-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6746	46-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6747	47-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6748	48-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6749	49-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6751	51-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6752	52-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6753	53-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6754	54-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6755	55-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6756	56-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6757	57-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6758	58-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6759	59-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6760	60-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6761	61-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6762	62-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6763	63-WAY CP7 TO 50-WAY CP7	*Call
2097		6750<6764	64-WAY CP7 TO 50-WAY CP7	*Call
2097		6751<6539	1-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6540	2-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6541	3-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6542	4-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6543	5-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6544	6-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6545	7-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6546	8-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6547	9-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6548	10-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6549	11-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6550	12-WAY CP4 TO 51-WAY CP7	*Call
2097		6751<6551	1-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6552	2-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6553	3-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6554	4-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6555	5-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6556	6-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6557	7-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6558	8-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6559	9-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6560	10-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6561	11-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6562	12-WAY CP5 TO 51-WAY CP7	*Call
2097		6751<6601	1-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6602	2-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6603	3-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6604	4-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6605	5-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6606	6-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6607	7-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6608	8-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6609	9-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6610	10-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6611	11-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6612	12-WAY CP6 TO 51-WAY CP7	*Call
2097		6751<6700	0-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6701	1-WAY CP7 TO 51-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6751<6702	2-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6703	3-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6704	4-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6705	5-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6706	6-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6707	7-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6708	8-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6709	9-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6710	10-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6711	11-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6712	12-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6713	13-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6714	14-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6715	15-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6716	16-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6717	17-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6718	18-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6719	19-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6720	20-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6721	21-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6722	22-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6723	23-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6724	24-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6725	25-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6726	26-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6727	27-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6728	28-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6729	29-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6730	30-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6731	31-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6732	32-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6733	33-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6734	34-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6735	35-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6736	36-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6737	37-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6738	38-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6739	39-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6740	40-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6741	41-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6742	42-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6743	43-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6744	44-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6745	45-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6746	46-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6747	47-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6748	48-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6749	49-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6750	50-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6752	52-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6753	53-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6754	54-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6755	55-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6756	56-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6757	57-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6758	58-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6759	59-WAY CP7 TO 51-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6751<6760	60-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6761	61-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6762	62-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6763	63-WAY CP7 TO 51-WAY CP7	*Call
2097		6751<6764	64-WAY CP7 TO 51-WAY CP7	*Call
2097		6752<6539	1-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6540	2-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6541	3-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6542	4-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6543	5-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6544	6-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6545	7-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6546	8-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6547	9-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6548	10-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6549	11-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6550	12-WAY CP4 TO 52-WAY CP7	*Call
2097		6752<6551	1-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6552	2-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6553	3-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6554	4-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6555	5-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6556	6-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6557	7-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6558	8-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6559	9-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6560	10-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6561	11-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6562	12-WAY CP5 TO 52-WAY CP7	*Call
2097		6752<6601	1-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6602	2-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6603	3-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6604	4-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6605	5-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6606	6-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6607	7-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6608	8-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6609	9-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6610	10-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6611	11-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6612	12-WAY CP6 TO 52-WAY CP7	*Call
2097		6752<6700	0-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6701	1-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6702	2-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6703	3-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6704	4-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6705	5-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6706	6-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6707	7-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6708	8-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6709	9-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6710	10-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6711	11-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6712	12-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6713	13-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6714	14-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6715	15-WAY CP7 TO 52-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6752<6716	16-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6717	17-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6718	18-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6719	19-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6720	20-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6721	21-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6722	22-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6723	23-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6724	24-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6725	25-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6726	26-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6727	27-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6728	28-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6729	29-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6730	30-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6731	31-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6732	32-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6733	33-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6734	34-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6735	35-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6736	36-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6737	37-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6738	38-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6739	39-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6740	40-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6741	41-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6742	42-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6743	43-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6744	44-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6745	45-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6746	46-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6747	47-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6748	48-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6749	49-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6750	50-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6751	51-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6753	53-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6754	54-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6755	55-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6756	56-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6757	57-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6758	58-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6759	59-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6760	60-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6761	61-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6762	62-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6763	63-WAY CP7 TO 52-WAY CP7	*Call
2097		6752<6764	64-WAY CP7 TO 52-WAY CP7	*Call
2097		6753<6539	1-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6540	2-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6541	3-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6542	4-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6543	5-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6544	6-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6545	7-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6546	8-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6547	9-WAY CP4 TO 53-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6753<6548	10-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6549	11-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6550	12-WAY CP4 TO 53-WAY CP7	*Call
2097		6753<6551	1-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6552	2-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6553	3-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6554	4-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6555	5-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6556	6-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6557	7-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6558	8-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6559	9-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6560	10-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6561	11-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6562	12-WAY CP5 TO 53-WAY CP7	*Call
2097		6753<6601	1-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6602	2-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6603	3-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6604	4-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6605	5-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6606	6-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6607	7-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6608	8-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6609	9-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6610	10-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6611	11-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6612	12-WAY CP6 TO 53-WAY CP7	*Call
2097		6753<6700	0-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6701	1-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6702	2-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6703	3-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6704	4-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6705	5-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6706	6-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6707	7-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6708	8-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6709	9-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6710	10-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6711	11-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6712	12-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6713	13-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6714	14-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6715	15-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6716	16-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6717	17-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6718	18-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6719	19-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6720	20-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6721	21-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6722	22-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6723	23-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6724	24-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6725	25-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6726	26-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6727	27-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6728	28-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6729	29-WAY CP7 TO 53-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6753<6730	30-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6731	31-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6732	32-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6733	33-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6734	34-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6735	35-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6736	36-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6737	37-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6738	38-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6739	39-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6740	40-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6741	41-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6742	42-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6743	43-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6744	44-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6745	45-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6746	46-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6747	47-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6748	48-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6749	49-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6750	50-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6751	51-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6752	52-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6754	54-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6755	55-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6756	56-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6757	57-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6758	58-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6759	59-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6760	60-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6761	61-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6762	62-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6763	63-WAY CP7 TO 53-WAY CP7	*Call
2097		6753<6764	64-WAY CP7 TO 53-WAY CP7	*Call
2097		6754<6539	1-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6540	2-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6541	3-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6542	4-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6543	5-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6544	6-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6545	7-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6546	8-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6547	9-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6548	10-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6549	11-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6550	12-WAY CP4 TO 54-WAY CP7	*Call
2097		6754<6551	1-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6552	2-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6553	3-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6554	4-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6555	5-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6556	6-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6557	7-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6558	8-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6559	9-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6560	10-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6561	11-WAY CP5 TO 54-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6754<6562	12-WAY CP5 TO 54-WAY CP7	*Call
2097		6754<6601	1-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6602	2-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6603	3-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6604	4-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6605	5-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6606	6-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6607	7-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6608	8-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6609	9-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6610	10-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6611	11-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6612	12-WAY CP6 TO 54-WAY CP7	*Call
2097		6754<6700	0-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6701	1-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6702	2-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6703	3-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6704	4-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6705	5-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6706	6-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6707	7-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6708	8-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6709	9-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6710	10-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6711	11-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6712	12-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6713	13-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6714	14-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6715	15-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6716	16-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6717	17-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6718	18-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6719	19-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6720	20-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6721	21-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6722	22-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6723	23-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6724	24-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6725	25-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6726	26-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6727	27-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6728	28-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6729	29-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6730	30-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6731	31-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6732	32-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6733	33-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6734	34-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6735	35-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6736	36-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6737	37-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6738	38-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6739	39-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6740	40-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6741	41-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6742	42-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6743	43-WAY CP7 TO 54-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6754<6744	44-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6745	45-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6746	46-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6747	47-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6748	48-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6749	49-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6750	50-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6751	51-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6752	52-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6753	53-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6755	55-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6756	56-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6757	57-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6758	58-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6759	59-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6760	60-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6761	61-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6762	62-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6763	63-WAY CP7 TO 54-WAY CP7	*Call
2097		6754<6764	64-WAY CP7 TO 54-WAY CP7	*Call
2097		6755<6539	1-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6540	2-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6541	3-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6542	4-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6543	5-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6544	6-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6545	7-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6546	8-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6547	9-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6548	10-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6549	11-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6550	12-WAY CP4 TO 55-WAY CP7	*Call
2097		6755<6551	1-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6552	2-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6553	3-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6554	4-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6555	5-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6556	6-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6557	7-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6558	8-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6559	9-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6560	10-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6561	11-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6562	12-WAY CP5 TO 55-WAY CP7	*Call
2097		6755<6601	1-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6602	2-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6603	3-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6604	4-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6605	5-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6606	6-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6607	7-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6608	8-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6609	9-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6610	10-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6611	11-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6612	12-WAY CP6 TO 55-WAY CP7	*Call
2097		6755<6700	0-WAY CP7 TO 55-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6755<6701	1-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6702	2-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6703	3-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6704	4-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6705	5-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6706	6-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6707	7-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6708	8-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6709	9-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6710	10-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6711	11-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6712	12-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6713	13-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6714	14-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6715	15-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6716	16-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6717	17-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6718	18-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6719	19-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6720	20-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6721	21-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6722	22-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6723	23-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6724	24-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6725	25-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6726	26-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6727	27-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6728	28-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6729	29-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6730	30-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6731	31-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6732	32-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6733	33-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6734	34-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6735	35-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6736	36-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6737	37-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6738	38-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6739	39-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6740	40-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6741	41-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6742	42-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6743	43-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6744	44-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6745	45-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6746	46-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6747	47-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6748	48-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6749	49-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6750	50-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6751	51-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6752	52-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6753	53-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6754	54-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6756	56-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6757	57-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6758	58-WAY CP7 TO 55-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6755<6759	59-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6760	60-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6761	61-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6762	62-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6763	63-WAY CP7 TO 55-WAY CP7	*Call
2097		6755<6764	64-WAY CP7 TO 55-WAY CP7	*Call
2097		6756<6539	1-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6540	2-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6541	3-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6542	4-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6543	5-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6544	6-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6545	7-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6546	8-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6547	9-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6548	10-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6549	11-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6550	12-WAY CP4 TO 56-WAY CP7	*Call
2097		6756<6551	1-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6552	2-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6553	3-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6554	4-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6555	5-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6556	6-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6557	7-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6558	8-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6559	9-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6560	10-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6561	11-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6562	12-WAY CP5 TO 56-WAY CP7	*Call
2097		6756<6601	1-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6602	2-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6603	3-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6604	4-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6605	5-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6606	6-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6607	7-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6608	8-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6609	9-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6610	10-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6611	11-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6612	12-WAY CP6 TO 56-WAY CP7	*Call
2097		6756<6700	0-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6701	1-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6702	2-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6703	3-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6704	4-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6705	5-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6706	6-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6707	7-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6708	8-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6709	9-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6710	10-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6711	11-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6712	12-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6713	13-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6714	14-WAY CP7 TO 56-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6756<6715	15-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6716	16-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6717	17-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6718	18-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6719	19-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6720	20-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6721	21-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6722	22-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6723	23-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6724	24-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6725	25-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6726	26-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6727	27-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6728	28-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6729	29-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6730	30-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6731	31-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6732	32-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6733	33-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6734	34-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6735	35-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6736	36-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6737	37-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6738	38-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6739	39-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6740	40-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6741	41-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6742	42-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6743	43-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6744	44-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6745	45-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6746	46-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6747	47-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6748	48-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6749	49-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6750	50-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6751	51-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6752	52-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6753	53-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6754	54-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6755	55-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6757	57-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6758	58-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6759	59-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6760	60-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6761	61-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6762	62-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6763	63-WAY CP7 TO 56-WAY CP7	*Call
2097		6756<6764	64-WAY CP7 TO 56-WAY CP7	*Call
2097		6757<6539	1-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6540	2-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6541	3-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6542	4-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6543	5-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6544	6-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6545	7-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6546	8-WAY CP4 TO 57-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6757<6547	9-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6548	10-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6549	11-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6550	12-WAY CP4 TO 57-WAY CP7	*Call
2097		6757<6551	1-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6552	2-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6553	3-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6554	4-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6555	5-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6556	6-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6557	7-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6558	8-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6559	9-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6560	10-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6561	11-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6562	12-WAY CP5 TO 57-WAY CP7	*Call
2097		6757<6601	1-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6602	2-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6603	3-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6604	4-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6605	5-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6606	6-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6607	7-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6608	8-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6609	9-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6610	10-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6611	11-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6612	12-WAY CP6 TO 57-WAY CP7	*Call
2097		6757<6700	0-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6701	1-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6702	2-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6703	3-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6704	4-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6705	5-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6706	6-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6707	7-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6708	8-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6709	9-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6710	10-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6711	11-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6712	12-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6713	13-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6714	14-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6715	15-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6716	16-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6717	17-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6718	18-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6719	19-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6720	20-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6721	21-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6722	22-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6723	23-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6724	24-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6725	25-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6726	26-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6727	27-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6728	28-WAY CP7 TO 57-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6757<6729	29-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6730	30-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6731	31-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6732	32-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6733	33-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6734	34-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6735	35-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6736	36-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6737	37-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6738	38-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6739	39-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6740	40-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6741	41-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6742	42-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6743	43-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6744	44-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6745	45-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6746	46-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6747	47-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6748	48-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6749	49-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6750	50-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6751	51-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6752	52-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6753	53-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6754	54-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6755	55-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6756	56-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6758	58-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6759	59-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6760	60-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6761	61-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6762	62-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6763	63-WAY CP7 TO 57-WAY CP7	*Call
2097		6757<6764	64-WAY CP7 TO 57-WAY CP7	*Call
2097		6758<6539	1-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6540	2-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6541	3-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6542	4-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6543	5-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6544	6-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6545	7-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6546	8-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6547	9-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6548	10-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6549	11-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6550	12-WAY CP4 TO 58-WAY CP7	*Call
2097		6758<6551	1-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6552	2-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6553	3-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6554	4-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6555	5-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6556	6-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6557	7-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6558	8-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6559	9-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6560	10-WAY CP5 TO 58-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6758<6561	11-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6562	12-WAY CP5 TO 58-WAY CP7	*Call
2097		6758<6601	1-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6602	2-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6603	3-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6604	4-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6605	5-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6606	6-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6607	7-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6608	8-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6609	9-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6610	10-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6611	11-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6612	12-WAY CP6 TO 58-WAY CP7	*Call
2097		6758<6700	0-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6701	1-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6702	2-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6703	3-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6704	4-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6705	5-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6706	6-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6707	7-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6708	8-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6709	9-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6710	10-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6711	11-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6712	12-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6713	13-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6714	14-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6715	15-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6716	16-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6717	17-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6718	18-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6719	19-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6720	20-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6721	21-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6722	22-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6723	23-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6724	24-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6725	25-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6726	26-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6727	27-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6728	28-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6729	29-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6730	30-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6731	31-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6732	32-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6733	33-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6734	34-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6735	35-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6736	36-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6737	37-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6738	38-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6739	39-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6740	40-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6741	41-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6742	42-WAY CP7 TO 58-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6758<6743	43-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6744	44-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6745	45-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6746	46-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6747	47-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6748	48-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6749	49-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6750	50-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6751	51-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6752	52-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6753	53-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6754	54-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6755	55-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6756	56-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6757	57-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6759	59-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6760	60-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6761	61-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6762	62-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6763	63-WAY CP7 TO 58-WAY CP7	*Call
2097		6758<6764	64-WAY CP7 TO 58-WAY CP7	*Call
2097		6759<6539	1-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6540	2-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6541	3-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6542	4-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6543	5-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6544	6-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6545	7-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6546	8-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6547	9-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6548	10-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6549	11-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6550	12-WAY CP4 TO 59-WAY CP7	*Call
2097		6759<6551	1-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6552	2-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6553	3-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6554	4-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6555	5-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6556	6-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6557	7-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6558	8-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6559	9-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6560	10-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6561	11-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6562	12-WAY CP5 TO 59-WAY CP7	*Call
2097		6759<6601	1-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6602	2-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6603	3-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6604	4-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6605	5-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6606	6-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6607	7-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6608	8-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6609	9-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6610	10-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6611	11-WAY CP6 TO 59-WAY CP7	*Call
2097		6759<6612	12-WAY CP6 TO 59-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6759<6700	0-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6701	1-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6702	2-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6703	3-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6704	4-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6705	5-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6706	6-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6707	7-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6708	8-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6709	9-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6710	10-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6711	11-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6712	12-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6713	13-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6714	14-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6715	15-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6716	16-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6717	17-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6718	18-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6719	19-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6720	20-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6721	21-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6722	22-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6723	23-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6724	24-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6725	25-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6726	26-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6727	27-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6728	28-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6729	29-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6730	30-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6731	31-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6732	32-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6733	33-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6734	34-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6735	35-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6736	36-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6737	37-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6738	38-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6739	39-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6740	40-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6741	41-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6742	42-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6743	43-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6744	44-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6745	45-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6746	46-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6747	47-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6748	48-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6749	49-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6750	50-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6751	51-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6752	52-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6753	53-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6754	54-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6755	55-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6756	56-WAY CP7 TO 59-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6759<6757	57-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6758	58-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6760	60-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6761	61-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6762	62-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6763	63-WAY CP7 TO 59-WAY CP7	*Call
2097		6759<6764	64-WAY CP7 TO 59-WAY CP7	*Call
2097		6760<6539	1-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6540	2-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6541	3-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6542	4-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6543	5-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6544	6-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6545	7-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6546	8-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6547	9-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6548	10-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6549	11-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6550	12-WAY CP4 TO 60-WAY CP7	*Call
2097		6760<6551	1-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6552	2-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6553	3-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6554	4-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6555	5-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6556	6-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6557	7-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6558	8-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6559	9-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6560	10-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6561	11-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6562	12-WAY CP5 TO 60-WAY CP7	*Call
2097		6760<6601	1-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6602	2-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6603	3-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6604	4-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6605	5-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6606	6-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6607	7-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6608	8-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6609	9-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6610	10-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6611	11-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6612	12-WAY CP6 TO 60-WAY CP7	*Call
2097		6760<6700	0-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6701	1-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6702	2-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6703	3-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6704	4-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6705	5-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6706	6-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6707	7-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6708	8-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6709	9-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6710	10-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6711	11-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6712	12-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6713	13-WAY CP7 TO 60-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6760<6714	14-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6715	15-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6716	16-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6717	17-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6718	18-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6719	19-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6720	20-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6721	21-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6722	22-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6723	23-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6724	24-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6725	25-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6726	26-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6727	27-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6728	28-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6729	29-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6730	30-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6731	31-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6732	32-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6733	33-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6734	34-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6735	35-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6736	36-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6737	37-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6738	38-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6739	39-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6740	40-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6741	41-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6742	42-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6743	43-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6744	44-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6745	45-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6746	46-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6747	47-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6748	48-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6749	49-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6750	50-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6751	51-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6752	52-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6753	53-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6754	54-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6755	55-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6756	56-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6757	57-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6758	58-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6759	59-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6761	61-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6762	62-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6763	63-WAY CP7 TO 60-WAY CP7	*Call
2097		6760<6764	64-WAY CP7 TO 60-WAY CP7	*Call
2097		6761<6539	1-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6540	2-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6541	3-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6542	4-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6543	5-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6544	6-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6545	7-WAY CP4 TO 61-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6761<6546	8-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6547	9-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6548	10-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6549	11-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6550	12-WAY CP4 TO 61-WAY CP7	*Call
2097		6761<6551	1-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6552	2-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6553	3-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6554	4-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6555	5-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6556	6-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6557	7-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6558	8-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6559	9-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6560	10-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6561	11-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6562	12-WAY CP5 TO 61-WAY CP7	*Call
2097		6761<6601	1-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6602	2-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6603	3-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6604	4-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6605	5-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6606	6-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6607	7-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6608	8-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6609	9-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6610	10-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6611	11-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6612	12-WAY CP6 TO 61-WAY CP7	*Call
2097		6761<6700	0-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6701	1-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6702	2-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6703	3-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6704	4-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6705	5-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6706	6-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6707	7-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6708	8-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6709	9-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6710	10-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6711	11-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6712	12-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6713	13-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6714	14-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6715	15-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6716	16-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6717	17-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6718	18-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6719	19-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6720	20-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6721	21-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6722	22-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6723	23-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6724	24-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6725	25-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6726	26-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6727	27-WAY CP7 TO 61-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6761<6728	28-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6729	29-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6730	30-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6731	31-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6732	32-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6733	33-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6734	34-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6735	35-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6736	36-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6737	37-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6738	38-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6739	39-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6740	40-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6741	41-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6742	42-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6743	43-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6744	44-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6745	45-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6746	46-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6747	47-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6748	48-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6749	49-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6750	50-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6751	51-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6752	52-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6753	53-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6754	54-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6755	55-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6756	56-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6757	57-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6758	58-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6759	59-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6760	60-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6762	62-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6763	63-WAY CP7 TO 61-WAY CP7	*Call
2097		6761<6764	64-WAY CP7 TO 61-WAY CP7	*Call
2097		6762<6539	1-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6540	2-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6541	3-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6542	4-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6543	5-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6544	6-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6545	7-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6546	8-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6547	9-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6548	10-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6549	11-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6550	12-WAY CP4 TO 62-WAY CP7	*Call
2097		6762<6551	1-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6552	2-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6553	3-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6554	4-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6555	5-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6556	6-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6557	7-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6558	8-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6559	9-WAY CP5 TO 62-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6762<6560	10-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6561	11-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6562	12-WAY CP5 TO 62-WAY CP7	*Call
2097		6762<6601	1-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6602	2-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6603	3-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6604	4-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6605	5-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6606	6-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6607	7-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6608	8-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6609	9-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6610	10-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6611	11-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6612	12-WAY CP6 TO 62-WAY CP7	*Call
2097		6762<6700	0-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6701	1-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6702	2-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6703	3-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6704	4-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6705	5-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6706	6-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6707	7-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6708	8-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6709	9-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6710	10-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6711	11-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6712	12-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6713	13-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6714	14-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6715	15-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6716	16-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6717	17-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6718	18-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6719	19-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6720	20-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6721	21-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6722	22-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6723	23-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6724	24-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6725	25-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6726	26-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6727	27-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6728	28-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6729	29-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6730	30-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6731	31-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6732	32-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6733	33-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6734	34-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6735	35-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6736	36-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6737	37-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6738	38-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6739	39-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6740	40-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6741	41-WAY CP7 TO 62-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6762<6742	42-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6743	43-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6744	44-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6745	45-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6746	46-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6747	47-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6748	48-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6749	49-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6750	50-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6751	51-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6752	52-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6753	53-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6754	54-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6755	55-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6756	56-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6757	57-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6758	58-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6759	59-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6760	60-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6761	61-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6763	63-WAY CP7 TO 62-WAY CP7	*Call
2097		6762<6764	64-WAY CP7 TO 62-WAY CP7	*Call
2097		6763<6539	1-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6540	2-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6541	3-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6542	4-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6543	5-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6544	6-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6545	7-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6546	8-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6547	9-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6548	10-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6549	11-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6550	12-WAY CP4 TO 63-WAY CP7	*Call
2097		6763<6551	1-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6552	2-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6553	3-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6554	4-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6555	5-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6556	6-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6557	7-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6558	8-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6559	9-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6560	10-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6561	11-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6562	12-WAY CP5 TO 63-WAY CP7	*Call
2097		6763<6601	1-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6602	2-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6603	3-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6604	4-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6605	5-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6606	6-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6607	7-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6608	8-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6609	9-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6610	10-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6611	11-WAY CP6 TO 63-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6763<6612	12-WAY CP6 TO 63-WAY CP7	*Call
2097		6763<6700	0-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6701	1-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6702	2-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6703	3-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6704	4-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6705	5-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6706	6-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6707	7-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6708	8-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6709	9-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6710	10-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6711	11-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6712	12-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6713	13-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6714	14-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6715	15-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6716	16-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6717	17-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6718	18-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6719	19-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6720	20-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6721	21-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6722	22-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6723	23-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6724	24-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6725	25-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6726	26-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6727	27-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6728	28-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6729	29-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6730	30-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6731	31-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6732	32-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6733	33-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6734	34-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6735	35-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6736	36-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6737	37-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6738	38-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6739	39-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6740	40-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6741	41-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6742	42-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6743	43-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6744	44-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6745	45-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6746	46-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6747	47-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6748	48-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6749	49-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6750	50-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6751	51-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6752	52-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6753	53-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6754	54-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6755	55-WAY CP7 TO 63-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6763<6756	56-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6757	57-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6758	58-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6759	59-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6760	60-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6761	61-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6762	62-WAY CP7 TO 63-WAY CP7	*Call
2097		6763<6764	64-WAY CP7 TO 63-WAY CP7	*Call
2097		6764<6539	1-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6540	2-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6541	3-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6542	4-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6543	5-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6544	6-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6545	7-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6546	8-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6547	9-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6548	10-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6549	11-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6550	12-WAY CP4 TO 64-WAY CP7	*Call
2097		6764<6551	1-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6552	2-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6553	3-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6554	4-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6555	5-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6556	6-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6557	7-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6558	8-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6559	9-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6560	10-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6561	11-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6562	12-WAY CP5 TO 64-WAY CP7	*Call
2097		6764<6601	1-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6602	2-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6603	3-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6604	4-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6605	5-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6606	6-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6607	7-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6608	8-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6609	9-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6610	10-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6611	11-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6612	12-WAY CP6 TO 64-WAY CP7	*Call
2097		6764<6700	0-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6701	1-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6702	2-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6703	3-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6704	4-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6705	5-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6706	6-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6707	7-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6708	8-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6709	9-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6710	10-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6711	11-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6712	12-WAY CP7 TO 64-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6764<6713	13-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6714	14-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6715	15-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6716	16-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6717	17-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6718	18-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6719	19-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6720	20-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6721	21-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6722	22-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6723	23-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6724	24-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6725	25-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6726	26-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6727	27-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6728	28-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6729	29-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6730	30-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6731	31-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6732	32-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6733	33-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6734	34-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6735	35-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6736	36-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6737	37-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6738	38-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6739	39-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6740	40-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6741	41-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6742	42-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6743	43-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6744	44-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6745	45-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6746	46-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6747	47-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6748	48-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6749	49-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6750	50-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6751	51-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6752	52-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6753	53-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6754	54-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6755	55-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6756	56-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6757	57-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6758	58-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6759	59-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6760	60-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6761	61-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6762	62-WAY CP7 TO 64-WAY CP7	*Call
2097		6764<6763	63-WAY CP7 TO 64-WAY CP7	*Call
2097		6807<6811	IFL TO CP4	*Call
2097		6807<6812	ICF TO CP4	*Call
2097		6807<6814	ZAAP TO CP4	*Call
2097		6807<6815	ZIIP TO CP4	*Call
2097		6807<6816	UNASSIGNED IFL TO CP4	*Call
2097		6808<6811	IFL TO CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097		6808<6812	ICF TO CP5	*Call
2097		6808<6814	ZAAP TO CP5	*Call
2097		6808<6815	ZIIP TO CP5	*Call
2097		6808<6816	UNASSIGNED IFL TO CP5	*Call
2097		6809<6811	IFL TO CP6	*Call
2097		6809<6812	ICF TO CP6	*Call
2097		6809<6814	ZAAP TO CP6	*Call
2097		6809<6815	ZIIP TO CP6	*Call
2097		6809<6816	UNASSIGNED IFL TO CP6	*Call
2097		6810<6811	IFL TO CP7	*Call
2097		6810<6812	ICF TO CP7	*Call
2097		6810<6814	ZAAP TO CP7	*Call
2097		6810<6815	ZIIP TO CP7	*Call
2097		6810<6816	UNASSIGNED IFL TO CP7	*Call
2097		6811<6812	ICF TO IFL	*Call
2097		6811<6814	ZAAP TO IFL	*Call
2097		6811<6815	ZIIP TO IFL	*Call
2097		6812<6811	IFL TO ICF	*Call
2097		6812<6814	ZAAP TO ICF	*Call
2097		6812<6815	ZIIP TO ICF	*Call
2097		6812<6816	UNASSIGNED IFL TO ICF	*Call
2097		6814<6811	IFL TO ZAAP	*Call
2097		6814<6812	ICF TO ZAAP	*Call
2097		6814<6815	ZIIP TO ZAAP	*Call
2097		6814<6816	UNASSIGNED IFL TO ZAAP	*Call
2097		6815<6811	IFL TO ZIIP	*Call
2097		6815<6812	ICF TO ZIIP	*Call
2097		6815<6814	ZAAP TO ZIIP	*Call
2097		6815<6816	UNASSIGNED IFL TO ZIIP	*Call
2097		6816<6811	IFL TO UNASSIGNED IFL	*Call
2097<2084		0079<0080	HMC TR/EN TO HMC DUAL EN	*Call
2097<2084		0081<0082	HMC TR/EN TO HMC DUAL EN	*Call
2097<2084		0084<0085	HMC TR/EN TO HMC DUAL EN	*Call
2097<2084		1117<1108	A08 TO E12	*Call
2097<2084		1117<1216	B16 TO E12	*Call
2097<2084		1117<1324	C24 TO E12	*Call
2097<2084		1117<1432	D32 TO E12	*Call
2097<2084		1118<1108	A08 TO E26	*Call
2097<2084		1118<1216	B16 TO E26	*Call
2097<2084		1118<1324	C24 TO E26	*Call
2097<2084		1118<1432	D32 TO E26	*Call
2097<2084		1119<1108	A08 TO E40	*Call
2097<2084		1119<1216	B16 TO E40	*Call
2097<2084		1119<1324	C24 TO E40	*Call
2097<2084		1119<1432	D32 TO E40	*Call
2097<2084		1120<1108	A08 TO E56	*Call
2097<2084		1120<1216	B16 TO E56	*Call
2097<2084		1120<1324	C24 TO E56	*Call
2097<2084		1120<1432	D32 TO E56	*Call
2097<2084		1121<1108	A08 TO E64	*Call
2097<2084		1121<1216	B16 TO E64	*Call
2097<2084		1121<1324	C24 TO E64	*Call
2097<2084		1121<1432	D32 TO E64	*Call
2097<2084		2201<2601	8 GB STD TO 16 GB STD	*Call
2097<2084		2202<2601	8 GB STD TO 32 GB STD	*Call
2097<2084		2202<2602	16 GB STD TO 32 GB STD	*Call
2097<2084		2202<2603	24 GB STD TO 32 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2203<2601	8 GB STD TO 48 GB STD	*Call
2097<2084		2203<2602	16 GB STD TO 48 GB STD	*Call
2097<2084		2203<2603	24 GB STD TO 48 GB STD	*Call
2097<2084		2203<2604	32 GB STD TO 48 GB STD	*Call
2097<2084		2203<2605	40 GB STD TO 48 GB STD	*Call
2097<2084		2204<2601	8 GB STD TO 64 GB STD	*Call
2097<2084		2204<2602	16 GB STD TO 64 GB STD	*Call
2097<2084		2204<2603	24 GB STD TO 64 GB STD	*Call
2097<2084		2204<2604	32 GB STD TO 64 GB STD	*Call
2097<2084		2204<2605	40 GB STD TO 64 GB STD	*Call
2097<2084		2204<2606	48 GB STD TO 64 GB STD	*Call
2097<2084		2204<2607	56 GB STD TO 64 GB STD	*Call
2097<2084		2205<2601	8 GB STD TO 80 GB STD	*Call
2097<2084		2205<2602	16 GB STD TO 80 GB STD	*Call
2097<2084		2205<2603	24 GB STD TO 80 GB STD	*Call
2097<2084		2205<2604	32 GB STD TO 80 GB STD	*Call
2097<2084		2205<2605	40 GB STD TO 80 GB STD	*Call
2097<2084		2205<2606	48 GB STD TO 80 GB STD	*Call
2097<2084		2205<2607	56 GB STD TO 80 GB STD	*Call
2097<2084		2205<2608	64 GB STD TO 80 GB STD	*Call
2097<2084		2205<2609	72 GB STD TO 80 GB STD	*Call
2097<2084		2206<2601	8 GB STD TO 96 GB STD	*Call
2097<2084		2206<2602	16 GB STD TO 96 GB STD	*Call
2097<2084		2206<2603	24 GB STD TO 96 GB STD	*Call
2097<2084		2206<2604	32 GB STD TO 96 GB STD	*Call
2097<2084		2206<2605	40 GB STD TO 96 GB STD	*Call
2097<2084		2206<2606	48 GB STD TO 96 GB STD	*Call
2097<2084		2206<2607	56 GB STD TO 96 GB STD	*Call
2097<2084		2206<2608	64 GB STD TO 96 GB STD	*Call
2097<2084		2206<2609	72 GB STD TO 96 GB STD	*Call
2097<2084		2206<2610	80 GB STD TO 96 GB STD	*Call
2097<2084		2206<2611	88 GB STD TO 96 GB STD	*Call
2097<2084		2207<2601	8 GB STD TO 112 GB STD	*Call
2097<2084		2207<2602	16 GB STD TO 112 GB STD	*Call
2097<2084		2207<2603	24 GB STD TO 112 GB STD	*Call
2097<2084		2207<2604	32 GB STD TO 112 GB STD	*Call
2097<2084		2207<2605	40 GB STD TO 112 GB STD	*Call
2097<2084		2207<2606	48 GB STD TO 112 GB STD	*Call
2097<2084		2207<2607	56 GB STD TO 112 GB STD	*Call
2097<2084		2207<2608	64 GB STD TO 112 GB STD	*Call
2097<2084		2207<2609	72 GB STD TO 112 GB STD	*Call
2097<2084		2207<2610	80 GB STD TO 112 GB STD	*Call
2097<2084		2207<2611	88 GB STD TO 112 GB STD	*Call
2097<2084		2207<2612	96 GB STD TO 112 GB STD	*Call
2097<2084		2207<2613	104 GB STD TO 112 GB STD	*Call
2097<2084		2208<2601	8 GB STD TO 128 GB STD	*Call
2097<2084		2208<2602	16 GB STD TO 128 GB STD	*Call
2097<2084		2208<2603	24 GB STD TO 128 GB STD	*Call
2097<2084		2208<2604	32 GB STD TO 128 GB STD	*Call
2097<2084		2208<2605	40 GB STD TO 128 GB STD	*Call
2097<2084		2208<2606	48 GB STD TO 128 GB STD	*Call
2097<2084		2208<2607	56 GB STD TO 128 GB STD	*Call
2097<2084		2208<2608	64 GB STD TO 128 GB STD	*Call
2097<2084		2208<2609	72 GB STD TO 128 GB STD	*Call
2097<2084		2208<2610	80 GB STD TO 128 GB STD	*Call
2097<2084		2208<2611	88 GB STD TO 128 GB STD	*Call
2097<2084		2208<2612	96 GB STD TO 128 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2208<2613	104 GB STD TO 128 GB STD	*Call
2097<2084		2208<2614	112 GB STD TO 128 GB STD	*Call
2097<2084		2208<2615	120 GB STD TO 128 GB STD	*Call
2097<2084		2209<2601	8 GB STD TO 144 GB STD	*Call
2097<2084		2209<2602	16 GB STD TO 144 GB STD	*Call
2097<2084		2209<2603	24 GB STD TO 144 GB STD	*Call
2097<2084		2209<2604	32 GB STD TO 144 GB STD	*Call
2097<2084		2209<2605	40 GB STD TO 144 GB STD	*Call
2097<2084		2209<2606	48 GB STD TO 144 GB STD	*Call
2097<2084		2209<2607	56 GB STD TO 144 GB STD	*Call
2097<2084		2209<2608	64 GB STD TO 144 GB STD	*Call
2097<2084		2209<2609	72 GB STD TO 144 GB STD	*Call
2097<2084		2209<2610	80 GB STD TO 144 GB STD	*Call
2097<2084		2209<2611	88 GB STD TO 144 GB STD	*Call
2097<2084		2209<2612	96 GB STD TO 144 GB STD	*Call
2097<2084		2209<2613	104 GB STD TO 144 GB STD	*Call
2097<2084		2209<2614	112 GB STD TO 144 GB STD	*Call
2097<2084		2209<2615	120 GB STD TO 144 GB STD	*Call
2097<2084		2209<2616	128 GB STD TO 144 GB STD	*Call
2097<2084		2209<2617	136 GB STD TO 144 GB STD	*Call
2097<2084		2211<2601	8 GB STD TO 176 GB STD	*Call
2097<2084		2211<2602	16 GB STD TO 176 GB STD	*Call
2097<2084		2211<2603	24 GB STD TO 176 GB STD	*Call
2097<2084		2211<2604	32 GB STD TO 176 GB STD	*Call
2097<2084		2211<2605	40 GB STD TO 176 GB STD	*Call
2097<2084		2211<2606	48 GB STD TO 176 GB STD	*Call
2097<2084		2211<2607	56 GB STD TO 176 GB STD	*Call
2097<2084		2211<2608	64 GB STD TO 176 GB STD	*Call
2097<2084		2211<2609	72 GB STD TO 176 GB STD	*Call
2097<2084		2211<2610	80 GB STD TO 176 GB STD	*Call
2097<2084		2211<2611	88 GB STD TO 176 GB STD	*Call
2097<2084		2211<2612	96 GB STD TO 176 GB STD	*Call
2097<2084		2211<2613	104 GB STD TO 176 GB STD	*Call
2097<2084		2211<2614	112 GB STD TO 176 GB STD	*Call
2097<2084		2211<2615	120 GB STD TO 176 GB STD	*Call
2097<2084		2211<2616	128 GB STD TO 176 GB STD	*Call
2097<2084		2211<2617	136 GB STD TO 176 GB STD	*Call
2097<2084		2211<2618	144 GB STD TO 176 GB STD	*Call
2097<2084		2211<2619	152 GB STD TO 176 GB STD	*Call
2097<2084		2211<2620	160 GB STD TO 176 GB STD	*Call
2097<2084		2211<2621	168 GB STD TO 176 GB STD	*Call
2097<2084		2212<2601	8 GB STD TO 192 GB STD	*Call
2097<2084		2212<2602	16 GB STD TO 192 GB STD	*Call
2097<2084		2212<2603	24 GB STD TO 192 GB STD	*Call
2097<2084		2212<2604	32 GB STD TO 192 GB STD	*Call
2097<2084		2212<2605	40 GB STD TO 192 GB STD	*Call
2097<2084		2212<2606	48 GB STD TO 192 GB STD	*Call
2097<2084		2212<2607	56 GB STD TO 192 GB STD	*Call
2097<2084		2212<2608	64 GB STD TO 192 GB STD	*Call
2097<2084		2212<2609	72 GB STD TO 192 GB STD	*Call
2097<2084		2212<2610	80 GB STD TO 192 GB STD	*Call
2097<2084		2212<2611	88 GB STD TO 192 GB STD	*Call
2097<2084		2212<2612	96 GB STD TO 192 GB STD	*Call
2097<2084		2212<2613	104 GB STD TO 192 GB STD	*Call
2097<2084		2212<2614	112 GB STD TO 192 GB STD	*Call
2097<2084		2212<2615	120 GB STD TO 192 GB STD	*Call
2097<2084		2212<2616	128 GB STD TO 192 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2212<2617	136 GB STD TO 192 GB STD	*Call
2097<2084		2212<2618	144 GB STD TO 192 GB STD	*Call
2097<2084		2212<2619	152 GB STD TO 192 GB STD	*Call
2097<2084		2212<2620	160 GB STD TO 192 GB STD	*Call
2097<2084		2212<2621	168 GB STD TO 192 GB STD	*Call
2097<2084		2212<2622	176 GB STD TO 192 GB STD	*Call
2097<2084		2212<2623	184 GB STD TO 192 GB STD	*Call
2097<2084		2213<2601	8 GB STD TO 208 GB STD	*Call
2097<2084		2213<2602	16 GB STD TO 208 GB STD	*Call
2097<2084		2213<2603	24 GB STD TO 208 GB STD	*Call
2097<2084		2213<2604	32 GB STD TO 208 GB STD	*Call
2097<2084		2213<2605	40 GB STD TO 208 GB STD	*Call
2097<2084		2213<2606	48 GB STD TO 208 GB STD	*Call
2097<2084		2213<2607	56 GB STD TO 208 GB STD	*Call
2097<2084		2213<2608	64 GB STD TO 208 GB STD	*Call
2097<2084		2213<2609	72 GB STD TO 208 GB STD	*Call
2097<2084		2213<2610	80 GB STD TO 208 GB STD	*Call
2097<2084		2213<2611	88 GB STD TO 208 GB STD	*Call
2097<2084		2213<2612	96 GB STD TO 208 GB STD	*Call
2097<2084		2213<2613	104 GB STD TO 208 GB STD	*Call
2097<2084		2213<2614	112 GB STD TO 208 GB STD	*Call
2097<2084		2213<2615	120 GB STD TO 208 GB STD	*Call
2097<2084		2213<2616	128 GB STD TO 208 GB STD	*Call
2097<2084		2213<2617	136 GB STD TO 208 GB STD	*Call
2097<2084		2213<2618	144 GB STD TO 208 GB STD	*Call
2097<2084		2213<2619	152 GB STD TO 208 GB STD	*Call
2097<2084		2213<2620	160 GB STD TO 208 GB STD	*Call
2097<2084		2213<2621	168 GB STD TO 208 GB STD	*Call
2097<2084		2213<2622	176 GB STD TO 208 GB STD	*Call
2097<2084		2213<2623	184 GB STD TO 208 GB STD	*Call
2097<2084		2213<2624	192 GB STD TO 208 GB STD	*Call
2097<2084		2213<2625	200 GB STD TO 208 GB STD	*Call
2097<2084		2214<2601	8 GB STD TO 224 GB STD	*Call
2097<2084		2214<2602	16 GB STD TO 224 GB STD	*Call
2097<2084		2214<2603	24 GB STD TO 224 GB STD	*Call
2097<2084		2214<2604	32 GB STD TO 224 GB STD	*Call
2097<2084		2214<2605	40 GB STD TO 224 GB STD	*Call
2097<2084		2214<2606	48 GB STD TO 224 GB STD	*Call
2097<2084		2214<2607	56 GB STD TO 224 GB STD	*Call
2097<2084		2214<2608	64 GB STD TO 224 GB STD	*Call
2097<2084		2214<2609	72 GB STD TO 224 GB STD	*Call
2097<2084		2214<2610	80 GB STD TO 224 GB STD	*Call
2097<2084		2214<2611	88 GB STD TO 224 GB STD	*Call
2097<2084		2214<2612	96 GB STD TO 224 GB STD	*Call
2097<2084		2214<2613	104 GB STD TO 224 GB STD	*Call
2097<2084		2214<2614	112 GB STD TO 224 GB STD	*Call
2097<2084		2214<2615	120 GB STD TO 224 GB STD	*Call
2097<2084		2214<2616	128 GB STD TO 224 GB STD	*Call
2097<2084		2214<2617	136 GB STD TO 224 GB STD	*Call
2097<2084		2214<2618	144 GB STD TO 224 GB STD	*Call
2097<2084		2214<2619	152 GB STD TO 224 GB STD	*Call
2097<2084		2214<2620	160 GB STD TO 224 GB STD	*Call
2097<2084		2214<2621	168 GB STD TO 224 GB STD	*Call
2097<2084		2214<2622	176 GB STD TO 224 GB STD	*Call
2097<2084		2214<2623	184 GB STD TO 224 GB STD	*Call
2097<2084		2214<2624	192 GB STD TO 224 GB STD	*Call
2097<2084		2214<2625	200 GB STD TO 224 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2214<2626	208 GB STD TO 224 GB STD	*Call
2097<2084		2214<2627	216 GB STD TO 224 GB STD	*Call
2097<2084		2215<2601	8 GB STD TO 240 GB STD	*Call
2097<2084		2215<2602	16 GB STD TO 240 GB STD	*Call
2097<2084		2215<2603	24 GB STD TO 240 GB STD	*Call
2097<2084		2215<2604	32 GB STD TO 240 GB STD	*Call
2097<2084		2215<2605	40 GB STD TO 240 GB STD	*Call
2097<2084		2215<2606	48 GB STD TO 240 GB STD	*Call
2097<2084		2215<2607	56 GB STD TO 240 GB STD	*Call
2097<2084		2215<2608	64 GB STD TO 240 GB STD	*Call
2097<2084		2215<2609	72 GB STD TO 240 GB STD	*Call
2097<2084		2215<2610	80 GB STD TO 240 GB STD	*Call
2097<2084		2215<2611	88 GB STD TO 240 GB STD	*Call
2097<2084		2215<2612	96 GB STD TO 240 GB STD	*Call
2097<2084		2215<2613	104 GB STD TO 240 GB STD	*Call
2097<2084		2215<2614	112 GB STD TO 240 GB STD	*Call
2097<2084		2215<2615	120 GB STD TO 240 GB STD	*Call
2097<2084		2215<2616	128 GB STD TO 240 GB STD	*Call
2097<2084		2215<2617	136 GB STD TO 240 GB STD	*Call
2097<2084		2215<2618	144 GB STD TO 240 GB STD	*Call
2097<2084		2215<2619	152 GB STD TO 240 GB STD	*Call
2097<2084		2215<2620	160 GB STD TO 240 GB STD	*Call
2097<2084		2215<2621	168 GB STD TO 240 GB STD	*Call
2097<2084		2215<2622	176 GB STD TO 240 GB STD	*Call
2097<2084		2215<2623	184 GB STD TO 240 GB STD	*Call
2097<2084		2215<2624	192 GB STD TO 240 GB STD	*Call
2097<2084		2215<2625	200 GB STD TO 240 GB STD	*Call
2097<2084		2215<2626	208 GB STD TO 240 GB STD	*Call
2097<2084		2215<2627	216 GB STD TO 240 GB STD	*Call
2097<2084		2215<2628	224 GB STD TO 240 GB STD	*Call
2097<2084		2215<2629	232 GB STD TO 240 GB STD	*Call
2097<2084		2216<2601	8 GB STD TO 256 GB STD	*Call
2097<2084		2216<2602	16 GB STD TO 256 GB STD	*Call
2097<2084		2216<2603	24 GB STD TO 256 GB STD	*Call
2097<2084		2216<2604	32 GB STD TO 256 GB STD	*Call
2097<2084		2216<2605	40 GB STD TO 256 GB STD	*Call
2097<2084		2216<2606	48 GB STD TO 256 GB STD	*Call
2097<2084		2216<2607	56 GB STD TO 256 GB STD	*Call
2097<2084		2216<2608	64 GB STD TO 256 GB STD	*Call
2097<2084		2216<2609	72 GB STD TO 256 GB STD	*Call
2097<2084		2216<2610	80 GB STD TO 256 GB STD	*Call
2097<2084		2216<2611	88 GB STD TO 256 GB STD	*Call
2097<2084		2216<2612	96 GB STD TO 256 GB STD	*Call
2097<2084		2216<2613	104 GB STD TO 256 GB STD	*Call
2097<2084		2216<2614	112 GB STD TO 256 GB STD	*Call
2097<2084		2216<2615	120 GB STD TO 256 GB STD	*Call
2097<2084		2216<2616	128 GB STD TO 256 GB STD	*Call
2097<2084		2216<2617	136 GB STD TO 256 GB STD	*Call
2097<2084		2216<2618	144 GB STD TO 256 GB STD	*Call
2097<2084		2216<2619	152 GB STD TO 256 GB STD	*Call
2097<2084		2216<2620	160 GB STD TO 256 GB STD	*Call
2097<2084		2216<2621	168 GB STD TO 256 GB STD	*Call
2097<2084		2216<2622	176 GB STD TO 256 GB STD	*Call
2097<2084		2216<2623	184 GB STD TO 256 GB STD	*Call
2097<2084		2216<2624	192 GB STD TO 256 GB STD	*Call
2097<2084		2216<2625	200 GB STD TO 256 GB STD	*Call
2097<2084		2216<2626	208 GB STD TO 256 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2216<2627	216 GB STD TO 256 GB STD	*Call
2097<2084		2216<2628	224 GB STD TO 256 GB STD	*Call
2097<2084		2216<2629	232 GB STD TO 256 GB STD	*Call
2097<2084		2216<2630	240 GB STD TO 256 GB STD	*Call
2097<2084		2216<2631	248 GB STD TO 256 GB STD	*Call
2097<2084		2217<2601	8 GB STD TO 288 GB STD	*Call
2097<2084		2217<2602	16 GB STD TO 288 GB STD	*Call
2097<2084		2217<2603	24 GB STD TO 288 GB STD	*Call
2097<2084		2217<2604	32 GB STD TO 288 GB STD	*Call
2097<2084		2217<2605	40 GB STD TO 288 GB STD	*Call
2097<2084		2217<2606	48 GB STD TO 288 GB STD	*Call
2097<2084		2217<2607	56 GB STD TO 288 GB STD	*Call
2097<2084		2217<2608	64 GB STD TO 288 GB STD	*Call
2097<2084		2217<2609	72 GB STD TO 288 GB STD	*Call
2097<2084		2217<2610	80 GB STD TO 288 GB STD	*Call
2097<2084		2217<2611	88 GB STD TO 288 GB STD	*Call
2097<2084		2217<2612	96 GB STD TO 288 GB STD	*Call
2097<2084		2217<2613	104 GB STD TO 288 GB STD	*Call
2097<2084		2217<2614	112 GB STD TO 288 GB STD	*Call
2097<2084		2217<2615	120 GB STD TO 288 GB STD	*Call
2097<2084		2217<2616	128 GB STD TO 288 GB STD	*Call
2097<2084		2217<2617	136 GB STD TO 288 GB STD	*Call
2097<2084		2217<2618	144 GB STD TO 288 GB STD	*Call
2097<2084		2217<2619	152 GB STD TO 288 GB STD	*Call
2097<2084		2217<2620	160 GB STD TO 288 GB STD	*Call
2097<2084		2217<2621	168 GB STD TO 288 GB STD	*Call
2097<2084		2217<2622	176 GB STD TO 288 GB STD	*Call
2097<2084		2217<2623	184 GB STD TO 288 GB STD	*Call
2097<2084		2217<2624	192 GB STD TO 288 GB STD	*Call
2097<2084		2217<2625	200 GB STD TO 288 GB STD	*Call
2097<2084		2217<2626	208 GB STD TO 288 GB STD	*Call
2097<2084		2217<2627	216 GB STD TO 288 GB STD	*Call
2097<2084		2217<2628	224 GB STD TO 288 GB STD	*Call
2097<2084		2217<2629	232 GB STD TO 288 GB STD	*Call
2097<2084		2217<2630	240 GB STD TO 288 GB STD	*Call
2097<2084		2217<2631	248 GB STD TO 288 GB STD	*Call
2097<2084		2217<2632	256 GB STD TO 288 GB STD	*Call
2097<2084		2218<2601	8 GB STD TO 320 GB STD	*Call
2097<2084		2218<2602	16 GB STD TO 320 GB STD	*Call
2097<2084		2218<2603	24 GB STD TO 320 GB STD	*Call
2097<2084		2218<2604	32 GB STD TO 320 GB STD	*Call
2097<2084		2218<2605	40 GB STD TO 320 GB STD	*Call
2097<2084		2218<2606	48 GB STD TO 320 GB STD	*Call
2097<2084		2218<2607	56 GB STD TO 320 GB STD	*Call
2097<2084		2218<2608	64 GB STD TO 320 GB STD	*Call
2097<2084		2218<2609	72 GB STD TO 320 GB STD	*Call
2097<2084		2218<2610	80 GB STD TO 320 GB STD	*Call
2097<2084		2218<2611	88 GB STD TO 320 GB STD	*Call
2097<2084		2218<2612	96 GB STD TO 320 GB STD	*Call
2097<2084		2218<2613	104 GB STD TO 320 GB STD	*Call
2097<2084		2218<2614	112 GB STD TO 320 GB STD	*Call
2097<2084		2218<2615	120 GB STD TO 320 GB STD	*Call
2097<2084		2218<2616	128 GB STD TO 320 GB STD	*Call
2097<2084		2218<2617	136 GB STD TO 320 GB STD	*Call
2097<2084		2218<2618	144 GB STD TO 320 GB STD	*Call
2097<2084		2218<2619	152 GB STD TO 320 GB STD	*Call
2097<2084		2218<2620	160 GB STD TO 320 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2218<2621	168 GB STD TO 320 GB STD	*Call
2097<2084		2218<2622	176 GB STD TO 320 GB STD	*Call
2097<2084		2218<2623	184 GB STD TO 320 GB STD	*Call
2097<2084		2218<2624	192 GB STD TO 320 GB STD	*Call
2097<2084		2218<2625	200 GB STD TO 320 GB STD	*Call
2097<2084		2218<2626	208 GB STD TO 320 GB STD	*Call
2097<2084		2218<2627	216 GB STD TO 320 GB STD	*Call
2097<2084		2218<2628	224 GB STD TO 320 GB STD	*Call
2097<2084		2218<2629	232 GB STD TO 320 GB STD	*Call
2097<2084		2218<2630	240 GB STD TO 320 GB STD	*Call
2097<2084		2218<2631	248 GB STD TO 320 GB STD	*Call
2097<2084		2218<2632	256 GB STD TO 320 GB STD	*Call
2097<2084		2219<2601	8 GB STD TO 352 GB STD	*Call
2097<2084		2219<2602	16 GB STD TO 352 GB STD	*Call
2097<2084		2219<2603	24 GB STD TO 352 GB STD	*Call
2097<2084		2219<2604	32 GB STD TO 352 GB STD	*Call
2097<2084		2219<2605	40 GB STD TO 352 GB STD	*Call
2097<2084		2219<2606	48 GB STD TO 352 GB STD	*Call
2097<2084		2219<2607	56 GB STD TO 352 GB STD	*Call
2097<2084		2219<2608	64 GB STD TO 352 GB STD	*Call
2097<2084		2219<2609	72 GB STD TO 352 GB STD	*Call
2097<2084		2219<2610	80 GB STD TO 352 GB STD	*Call
2097<2084		2219<2611	88 GB STD TO 352 GB STD	*Call
2097<2084		2219<2612	96 GB STD TO 352 GB STD	*Call
2097<2084		2219<2613	104 GB STD TO 352 GB STD	*Call
2097<2084		2219<2614	112 GB STD TO 352 GB STD	*Call
2097<2084		2219<2615	120 GB STD TO 352 GB STD	*Call
2097<2084		2219<2616	128 GB STD TO 352 GB STD	*Call
2097<2084		2219<2617	136 GB STD TO 352 GB STD	*Call
2097<2084		2219<2618	144 GB STD TO 352 GB STD	*Call
2097<2084		2219<2619	152 GB STD TO 352 GB STD	*Call
2097<2084		2219<2620	160 GB STD TO 352 GB STD	*Call
2097<2084		2219<2621	168 GB STD TO 352 GB STD	*Call
2097<2084		2219<2622	176 GB STD TO 352 GB STD	*Call
2097<2084		2219<2623	184 GB STD TO 352 GB STD	*Call
2097<2084		2219<2624	192 GB STD TO 352 GB STD	*Call
2097<2084		2219<2625	200 GB STD TO 352 GB STD	*Call
2097<2084		2219<2626	208 GB STD TO 352 GB STD	*Call
2097<2084		2219<2627	216 GB STD TO 352 GB STD	*Call
2097<2084		2219<2628	224 GB STD TO 352 GB STD	*Call
2097<2084		2219<2629	232 GB STD TO 352 GB STD	*Call
2097<2084		2219<2630	240 GB STD TO 352 GB STD	*Call
2097<2084		2219<2631	248 GB STD TO 352 GB STD	*Call
2097<2084		2219<2632	256 GB STD TO 352 GB STD	*Call
2097<2084		2220<2601	8 GB STD TO 384 GB STD	*Call
2097<2084		2220<2602	16 GB STD TO 384 GB STD	*Call
2097<2084		2220<2603	24 GB STD TO 384 GB STD	*Call
2097<2084		2220<2604	32 GB STD TO 384 GB STD	*Call
2097<2084		2220<2605	40 GB STD TO 384 GB STD	*Call
2097<2084		2220<2606	48 GB STD TO 384 GB STD	*Call
2097<2084		2220<2607	56 GB STD TO 384 GB STD	*Call
2097<2084		2220<2608	64 GB STD TO 384 GB STD	*Call
2097<2084		2220<2609	72 GB STD TO 384 GB STD	*Call
2097<2084		2220<2610	80 GB STD TO 384 GB STD	*Call
2097<2084		2220<2611	88 GB STD TO 384 GB STD	*Call
2097<2084		2220<2612	96 GB STD TO 384 GB STD	*Call
2097<2084		2220<2613	104 GB STD TO 384 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2220<2614	112 GB STD TO 384 GB STD	*Call
2097<2084		2220<2615	120 GB STD TO 384 GB STD	*Call
2097<2084		2220<2616	128 GB STD TO 384 GB STD	*Call
2097<2084		2220<2617	136 GB STD TO 384 GB STD	*Call
2097<2084		2220<2618	144 GB STD TO 384 GB STD	*Call
2097<2084		2220<2619	152 GB STD TO 384 GB STD	*Call
2097<2084		2220<2620	160 GB STD TO 384 GB STD	*Call
2097<2084		2220<2621	168 GB STD TO 384 GB STD	*Call
2097<2084		2220<2622	176 GB STD TO 384 GB STD	*Call
2097<2084		2220<2623	184 GB STD TO 384 GB STD	*Call
2097<2084		2220<2624	192 GB STD TO 384 GB STD	*Call
2097<2084		2220<2625	200 GB STD TO 384 GB STD	*Call
2097<2084		2220<2626	208 GB STD TO 384 GB STD	*Call
2097<2084		2220<2627	216 GB STD TO 384 GB STD	*Call
2097<2084		2220<2628	224 GB STD TO 384 GB STD	*Call
2097<2084		2220<2629	232 GB STD TO 384 GB STD	*Call
2097<2084		2220<2630	240 GB STD TO 384 GB STD	*Call
2097<2084		2220<2631	248 GB STD TO 384 GB STD	*Call
2097<2084		2220<2632	256 GB STD TO 384 GB STD	*Call
2097<2084		2221<2601	8 GB STD TO 416 GB STD	*Call
2097<2084		2221<2602	16 GB STD TO 416 GB STD	*Call
2097<2084		2221<2603	24 GB STD TO 416 GB STD	*Call
2097<2084		2221<2604	32 GB STD TO 416 GB STD	*Call
2097<2084		2221<2605	40 GB STD TO 416 GB STD	*Call
2097<2084		2221<2606	48 GB STD TO 416 GB STD	*Call
2097<2084		2221<2607	56 GB STD TO 416 GB STD	*Call
2097<2084		2221<2608	64 GB STD TO 416 GB STD	*Call
2097<2084		2221<2609	72 GB STD TO 416 GB STD	*Call
2097<2084		2221<2610	80 GB STD TO 416 GB STD	*Call
2097<2084		2221<2611	88 GB STD TO 416 GB STD	*Call
2097<2084		2221<2612	96 GB STD TO 416 GB STD	*Call
2097<2084		2221<2613	104 GB STD TO 416 GB STD	*Call
2097<2084		2221<2614	112 GB STD TO 416 GB STD	*Call
2097<2084		2221<2615	120 GB STD TO 416 GB STD	*Call
2097<2084		2221<2616	128 GB STD TO 416 GB STD	*Call
2097<2084		2221<2617	136 GB STD TO 416 GB STD	*Call
2097<2084		2221<2618	144 GB STD TO 416 GB STD	*Call
2097<2084		2221<2619	152 GB STD TO 416 GB STD	*Call
2097<2084		2221<2620	160 GB STD TO 416 GB STD	*Call
2097<2084		2221<2621	168 GB STD TO 416 GB STD	*Call
2097<2084		2221<2622	176 GB STD TO 416 GB STD	*Call
2097<2084		2221<2623	184 GB STD TO 416 GB STD	*Call
2097<2084		2221<2624	192 GB STD TO 416 GB STD	*Call
2097<2084		2221<2625	200 GB STD TO 416 GB STD	*Call
2097<2084		2221<2626	208 GB STD TO 416 GB STD	*Call
2097<2084		2221<2627	216 GB STD TO 416 GB STD	*Call
2097<2084		2221<2628	224 GB STD TO 416 GB STD	*Call
2097<2084		2221<2629	232 GB STD TO 416 GB STD	*Call
2097<2084		2221<2630	240 GB STD TO 416 GB STD	*Call
2097<2084		2221<2631	248 GB STD TO 416 GB STD	*Call
2097<2084		2221<2632	256 GB STD TO 416 GB STD	*Call
2097<2084		2222<2601	8 GB STD TO 448 GB STD	*Call
2097<2084		2222<2602	16 GB STD TO 448 GB STD	*Call
2097<2084		2222<2603	24 GB STD TO 448 GB STD	*Call
2097<2084		2222<2604	32 GB STD TO 448 GB STD	*Call
2097<2084		2222<2605	40 GB STD TO 448 GB STD	*Call
2097<2084		2222<2606	48 GB STD TO 448 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2222<2607	56 GB STD TO 448 GB STD	*Call
2097<2084		2222<2608	64 GB STD TO 448 GB STD	*Call
2097<2084		2222<2609	72 GB STD TO 448 GB STD	*Call
2097<2084		2222<2610	80 GB STD TO 448 GB STD	*Call
2097<2084		2222<2611	88 GB STD TO 448 GB STD	*Call
2097<2084		2222<2612	96 GB STD TO 448 GB STD	*Call
2097<2084		2222<2613	104 GB STD TO 448 GB STD	*Call
2097<2084		2222<2614	112 GB STD TO 448 GB STD	*Call
2097<2084		2222<2615	120 GB STD TO 448 GB STD	*Call
2097<2084		2222<2616	128 GB STD TO 448 GB STD	*Call
2097<2084		2222<2617	136 GB STD TO 448 GB STD	*Call
2097<2084		2222<2618	144 GB STD TO 448 GB STD	*Call
2097<2084		2222<2619	152 GB STD TO 448 GB STD	*Call
2097<2084		2222<2620	160 GB STD TO 448 GB STD	*Call
2097<2084		2222<2621	168 GB STD TO 448 GB STD	*Call
2097<2084		2222<2622	176 GB STD TO 448 GB STD	*Call
2097<2084		2222<2623	184 GB STD TO 448 GB STD	*Call
2097<2084		2222<2624	192 GB STD TO 448 GB STD	*Call
2097<2084		2222<2625	200 GB STD TO 448 GB STD	*Call
2097<2084		2222<2626	208 GB STD TO 448 GB STD	*Call
2097<2084		2222<2627	216 GB STD TO 448 GB STD	*Call
2097<2084		2222<2628	224 GB STD TO 448 GB STD	*Call
2097<2084		2222<2629	232 GB STD TO 448 GB STD	*Call
2097<2084		2222<2630	240 GB STD TO 448 GB STD	*Call
2097<2084		2222<2631	248 GB STD TO 448 GB STD	*Call
2097<2084		2222<2632	256 GB STD TO 448 GB STD	*Call
2097<2084		2223<2601	8 GB STD TO 480 GB STD	*Call
2097<2084		2223<2602	16 GB STD TO 480 GB STD	*Call
2097<2084		2223<2603	24 GB STD TO 480 GB STD	*Call
2097<2084		2223<2604	32 GB STD TO 480 GB STD	*Call
2097<2084		2223<2605	40 GB STD TO 480 GB STD	*Call
2097<2084		2223<2606	48 GB STD TO 480 GB STD	*Call
2097<2084		2223<2607	56 GB STD TO 480 GB STD	*Call
2097<2084		2223<2608	64 GB STD TO 480 GB STD	*Call
2097<2084		2223<2609	72 GB STD TO 480 GB STD	*Call
2097<2084		2223<2610	80 GB STD TO 480 GB STD	*Call
2097<2084		2223<2611	88 GB STD TO 480 GB STD	*Call
2097<2084		2223<2612	96 GB STD TO 480 GB STD	*Call
2097<2084		2223<2613	104 GB STD TO 480 GB STD	*Call
2097<2084		2223<2614	112 GB STD TO 480 GB STD	*Call
2097<2084		2223<2615	120 GB STD TO 480 GB STD	*Call
2097<2084		2223<2616	128 GB STD TO 480 GB STD	*Call
2097<2084		2223<2617	136 GB STD TO 480 GB STD	*Call
2097<2084		2223<2618	144 GB STD TO 480 GB STD	*Call
2097<2084		2223<2619	152 GB STD TO 480 GB STD	*Call
2097<2084		2223<2620	160 GB STD TO 480 GB STD	*Call
2097<2084		2223<2621	168 GB STD TO 480 GB STD	*Call
2097<2084		2223<2622	176 GB STD TO 480 GB STD	*Call
2097<2084		2223<2623	184 GB STD TO 480 GB STD	*Call
2097<2084		2223<2624	192 GB STD TO 480 GB STD	*Call
2097<2084		2223<2625	200 GB STD TO 480 GB STD	*Call
2097<2084		2223<2626	208 GB STD TO 480 GB STD	*Call
2097<2084		2223<2627	216 GB STD TO 480 GB STD	*Call
2097<2084		2223<2628	224 GB STD TO 480 GB STD	*Call
2097<2084		2223<2629	232 GB STD TO 480 GB STD	*Call
2097<2084		2223<2630	240 GB STD TO 480 GB STD	*Call
2097<2084		2223<2631	248 GB STD TO 480 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2223<2632	256 GB STD TO 480 GB STD	*Call
2097<2084		2224<2601	8 GB STD TO 512 GB STD	*Call
2097<2084		2224<2602	16 GB STD TO 512 GB STD	*Call
2097<2084		2224<2603	24 GB STD TO 512 GB STD	*Call
2097<2084		2224<2604	32 GB STD TO 512 GB STD	*Call
2097<2084		2224<2605	40 GB STD TO 512 GB STD	*Call
2097<2084		2224<2606	48 GB STD TO 512 GB STD	*Call
2097<2084		2224<2607	56 GB STD TO 512 GB STD	*Call
2097<2084		2224<2608	64 GB STD TO 512 GB STD	*Call
2097<2084		2224<2609	72 GB STD TO 512 GB STD	*Call
2097<2084		2224<2610	80 GB STD TO 512 GB STD	*Call
2097<2084		2224<2611	88 GB STD TO 512 GB STD	*Call
2097<2084		2224<2612	96 GB STD TO 512 GB STD	*Call
2097<2084		2224<2613	104 GB STD TO 512 GB STD	*Call
2097<2084		2224<2614	112 GB STD TO 512 GB STD	*Call
2097<2084		2224<2615	120 GB STD TO 512 GB STD	*Call
2097<2084		2224<2616	128 GB STD TO 512 GB STD	*Call
2097<2084		2224<2617	136 GB STD TO 512 GB STD	*Call
2097<2084		2224<2618	144 GB STD TO 512 GB STD	*Call
2097<2084		2224<2619	152 GB STD TO 512 GB STD	*Call
2097<2084		2224<2620	160 GB STD TO 512 GB STD	*Call
2097<2084		2224<2621	168 GB STD TO 512 GB STD	*Call
2097<2084		2224<2622	176 GB STD TO 512 GB STD	*Call
2097<2084		2224<2623	184 GB STD TO 512 GB STD	*Call
2097<2084		2224<2624	192 GB STD TO 512 GB STD	*Call
2097<2084		2224<2625	200 GB STD TO 512 GB STD	*Call
2097<2084		2224<2626	208 GB STD TO 512 GB STD	*Call
2097<2084		2224<2627	216 GB STD TO 512 GB STD	*Call
2097<2084		2224<2628	224 GB STD TO 512 GB STD	*Call
2097<2084		2224<2629	232 GB STD TO 512 GB STD	*Call
2097<2084		2224<2630	240 GB STD TO 512 GB STD	*Call
2097<2084		2224<2631	248 GB STD TO 512 GB STD	*Call
2097<2084		2224<2632	256 GB STD TO 512 GB STD	*Call
2097<2084		2225<2601	8 GB STD TO 560 GB STD	*Call
2097<2084		2225<2602	16 GB STD TO 560 GB STD	*Call
2097<2084		2225<2603	24 GB STD TO 560 GB STD	*Call
2097<2084		2225<2604	32 GB STD TO 560 GB STD	*Call
2097<2084		2225<2605	40 GB STD TO 560 GB STD	*Call
2097<2084		2225<2606	48 GB STD TO 560 GB STD	*Call
2097<2084		2225<2607	56 GB STD TO 560 GB STD	*Call
2097<2084		2225<2608	64 GB STD TO 560 GB STD	*Call
2097<2084		2225<2609	72 GB STD TO 560 GB STD	*Call
2097<2084		2225<2610	80 GB STD TO 560 GB STD	*Call
2097<2084		2225<2611	88 GB STD TO 560 GB STD	*Call
2097<2084		2225<2612	96 GB STD TO 560 GB STD	*Call
2097<2084		2225<2613	104 GB STD TO 560 GB STD	*Call
2097<2084		2225<2614	112 GB STD TO 560 GB STD	*Call
2097<2084		2225<2615	120 GB STD TO 560 GB STD	*Call
2097<2084		2225<2616	128 GB STD TO 560 GB STD	*Call
2097<2084		2225<2617	136 GB STD TO 560 GB STD	*Call
2097<2084		2225<2618	144 GB STD TO 560 GB STD	*Call
2097<2084		2225<2619	152 GB STD TO 560 GB STD	*Call
2097<2084		2225<2620	160 GB STD TO 560 GB STD	*Call
2097<2084		2225<2621	168 GB STD TO 560 GB STD	*Call
2097<2084		2225<2622	176 GB STD TO 560 GB STD	*Call
2097<2084		2225<2623	184 GB STD TO 560 GB STD	*Call
2097<2084		2225<2624	192 GB STD TO 560 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2225<2625	200 GB STD TO 560 GB STD	*Call
2097<2084		2225<2626	208 GB STD TO 560 GB STD	*Call
2097<2084		2225<2627	216 GB STD TO 560 GB STD	*Call
2097<2084		2225<2628	224 GB STD TO 560 GB STD	*Call
2097<2084		2225<2629	232 GB STD TO 560 GB STD	*Call
2097<2084		2225<2630	240 GB STD TO 560 GB STD	*Call
2097<2084		2225<2631	248 GB STD TO 560 GB STD	*Call
2097<2084		2225<2632	256 GB STD TO 560 GB STD	*Call
2097<2084		2226<2601	8 GB STD TO 608 GB STD	*Call
2097<2084		2226<2602	16 GB STD TO 608 GB STD	*Call
2097<2084		2226<2603	24 GB STD TO 608 GB STD	*Call
2097<2084		2226<2604	32 GB STD TO 608 GB STD	*Call
2097<2084		2226<2605	40 GB STD TO 608 GB STD	*Call
2097<2084		2226<2606	48 GB STD TO 608 GB STD	*Call
2097<2084		2226<2607	56 GB STD TO 608 GB STD	*Call
2097<2084		2226<2608	64 GB STD TO 608 GB STD	*Call
2097<2084		2226<2609	72 GB STD TO 608 GB STD	*Call
2097<2084		2226<2610	80 GB STD TO 608 GB STD	*Call
2097<2084		2226<2611	88 GB STD TO 608 GB STD	*Call
2097<2084		2226<2612	96 GB STD TO 608 GB STD	*Call
2097<2084		2226<2613	104 GB STD TO 608 GB STD	*Call
2097<2084		2226<2614	112 GB STD TO 608 GB STD	*Call
2097<2084		2226<2615	120 GB STD TO 608 GB STD	*Call
2097<2084		2226<2616	128 GB STD TO 608 GB STD	*Call
2097<2084		2226<2617	136 GB STD TO 608 GB STD	*Call
2097<2084		2226<2618	144 GB STD TO 608 GB STD	*Call
2097<2084		2226<2619	152 GB STD TO 608 GB STD	*Call
2097<2084		2226<2620	160 GB STD TO 608 GB STD	*Call
2097<2084		2226<2621	168 GB STD TO 608 GB STD	*Call
2097<2084		2226<2622	176 GB STD TO 608 GB STD	*Call
2097<2084		2226<2623	184 GB STD TO 608 GB STD	*Call
2097<2084		2226<2624	192 GB STD TO 608 GB STD	*Call
2097<2084		2226<2625	200 GB STD TO 608 GB STD	*Call
2097<2084		2226<2626	208 GB STD TO 608 GB STD	*Call
2097<2084		2226<2627	216 GB STD TO 608 GB STD	*Call
2097<2084		2226<2628	224 GB STD TO 608 GB STD	*Call
2097<2084		2226<2629	232 GB STD TO 608 GB STD	*Call
2097<2084		2226<2630	240 GB STD TO 608 GB STD	*Call
2097<2084		2226<2631	248 GB STD TO 608 GB STD	*Call
2097<2084		2226<2632	256 GB STD TO 608 GB STD	*Call
2097<2084		2227<2601	8 GB STD TO 656 GB STD	*Call
2097<2084		2227<2602	16 GB STD TO 656 GB STD	*Call
2097<2084		2227<2603	24 GB STD TO 656 GB STD	*Call
2097<2084		2227<2604	32 GB STD TO 656 GB STD	*Call
2097<2084		2227<2605	40 GB STD TO 656 GB STD	*Call
2097<2084		2227<2606	48 GB STD TO 656 GB STD	*Call
2097<2084		2227<2607	56 GB STD TO 656 GB STD	*Call
2097<2084		2227<2608	64 GB STD TO 656 GB STD	*Call
2097<2084		2227<2609	72 GB STD TO 656 GB STD	*Call
2097<2084		2227<2610	80 GB STD TO 656 GB STD	*Call
2097<2084		2227<2611	88 GB STD TO 656 GB STD	*Call
2097<2084		2227<2612	96 GB STD TO 656 GB STD	*Call
2097<2084		2227<2613	104 GB STD TO 656 GB STD	*Call
2097<2084		2227<2614	112 GB STD TO 656 GB STD	*Call
2097<2084		2227<2615	120 GB STD TO 656 GB STD	*Call
2097<2084		2227<2616	128 GB STD TO 656 GB STD	*Call
2097<2084		2227<2617	136 GB STD TO 656 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2227<2618	144 GB STD TO 656 GB STD	*Call
2097<2084		2227<2619	152 GB STD TO 656 GB STD	*Call
2097<2084		2227<2620	160 GB STD TO 656 GB STD	*Call
2097<2084		2227<2621	168 GB STD TO 656 GB STD	*Call
2097<2084		2227<2622	176 GB STD TO 656 GB STD	*Call
2097<2084		2227<2623	184 GB STD TO 656 GB STD	*Call
2097<2084		2227<2624	192 GB STD TO 656 GB STD	*Call
2097<2084		2227<2625	200 GB STD TO 656 GB STD	*Call
2097<2084		2227<2626	208 GB STD TO 656 GB STD	*Call
2097<2084		2227<2627	216 GB STD TO 656 GB STD	*Call
2097<2084		2227<2628	224 GB STD TO 656 GB STD	*Call
2097<2084		2227<2629	232 GB STD TO 656 GB STD	*Call
2097<2084		2227<2630	240 GB STD TO 656 GB STD	*Call
2097<2084		2227<2631	248 GB STD TO 656 GB STD	*Call
2097<2084		2227<2632	256 GB STD TO 656 GB STD	*Call
2097<2084		2228<2601	8 GB STD TO 704 GB STD	*Call
2097<2084		2228<2602	16 GB STD TO 704 GB STD	*Call
2097<2084		2228<2603	24 GB STD TO 704 GB STD	*Call
2097<2084		2228<2604	32 GB STD TO 704 GB STD	*Call
2097<2084		2228<2605	40 GB STD TO 704 GB STD	*Call
2097<2084		2228<2606	48 GB STD TO 704 GB STD	*Call
2097<2084		2228<2607	56 GB STD TO 704 GB STD	*Call
2097<2084		2228<2608	64 GB STD TO 704 GB STD	*Call
2097<2084		2228<2609	72 GB STD TO 704 GB STD	*Call
2097<2084		2228<2610	80 GB STD TO 704 GB STD	*Call
2097<2084		2228<2611	88 GB STD TO 704 GB STD	*Call
2097<2084		2228<2612	96 GB STD TO 704 GB STD	*Call
2097<2084		2228<2613	104 GB STD TO 704 GB STD	*Call
2097<2084		2228<2614	112 GB STD TO 704 GB STD	*Call
2097<2084		2228<2615	120 GB STD TO 704 GB STD	*Call
2097<2084		2228<2616	128 GB STD TO 704 GB STD	*Call
2097<2084		2228<2617	136 GB STD TO 704 GB STD	*Call
2097<2084		2228<2618	144 GB STD TO 704 GB STD	*Call
2097<2084		2228<2619	152 GB STD TO 704 GB STD	*Call
2097<2084		2228<2620	160 GB STD TO 704 GB STD	*Call
2097<2084		2228<2621	168 GB STD TO 704 GB STD	*Call
2097<2084		2228<2622	176 GB STD TO 704 GB STD	*Call
2097<2084		2228<2623	184 GB STD TO 704 GB STD	*Call
2097<2084		2228<2624	192 GB STD TO 704 GB STD	*Call
2097<2084		2228<2625	200 GB STD TO 704 GB STD	*Call
2097<2084		2228<2626	208 GB STD TO 704 GB STD	*Call
2097<2084		2228<2627	216 GB STD TO 704 GB STD	*Call
2097<2084		2228<2628	224 GB STD TO 704 GB STD	*Call
2097<2084		2228<2629	232 GB STD TO 704 GB STD	*Call
2097<2084		2228<2630	240 GB STD TO 704 GB STD	*Call
2097<2084		2228<2631	248 GB STD TO 704 GB STD	*Call
2097<2084		2228<2632	256 GB STD TO 704 GB STD	*Call
2097<2084		2229<2601	8 GB STD TO 752 GB STD	*Call
2097<2084		2229<2602	16 GB STD TO 752 GB STD	*Call
2097<2084		2229<2603	24 GB STD TO 752 GB STD	*Call
2097<2084		2229<2604	32 GB STD TO 752 GB STD	*Call
2097<2084		2229<2605	40 GB STD TO 752 GB STD	*Call
2097<2084		2229<2606	48 GB STD TO 752 GB STD	*Call
2097<2084		2229<2607	56 GB STD TO 752 GB STD	*Call
2097<2084		2229<2608	64 GB STD TO 752 GB STD	*Call
2097<2084		2229<2609	72 GB STD TO 752 GB STD	*Call
2097<2084		2229<2610	80 GB STD TO 752 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2229<2611	88 GB STD TO 752 GB STD	*Call
2097<2084		2229<2612	96 GB STD TO 752 GB STD	*Call
2097<2084		2229<2613	104 GB STD TO 752 GB STD	*Call
2097<2084		2229<2614	112 GB STD TO 752 GB STD	*Call
2097<2084		2229<2615	120 GB STD TO 752 GB STD	*Call
2097<2084		2229<2616	128 GB STD TO 752 GB STD	*Call
2097<2084		2229<2617	136 GB STD TO 752 GB STD	*Call
2097<2084		2229<2618	144 GB STD TO 752 GB STD	*Call
2097<2084		2229<2619	152 GB STD TO 752 GB STD	*Call
2097<2084		2229<2620	160 GB STD TO 752 GB STD	*Call
2097<2084		2229<2621	168 GB STD TO 752 GB STD	*Call
2097<2084		2229<2622	176 GB STD TO 752 GB STD	*Call
2097<2084		2229<2623	184 GB STD TO 752 GB STD	*Call
2097<2084		2229<2624	192 GB STD TO 752 GB STD	*Call
2097<2084		2229<2625	200 GB STD TO 752 GB STD	*Call
2097<2084		2229<2626	208 GB STD TO 752 GB STD	*Call
2097<2084		2229<2627	216 GB STD TO 752 GB STD	*Call
2097<2084		2229<2628	224 GB STD TO 752 GB STD	*Call
2097<2084		2229<2629	232 GB STD TO 752 GB STD	*Call
2097<2084		2229<2630	240 GB STD TO 752 GB STD	*Call
2097<2084		2229<2631	248 GB STD TO 752 GB STD	*Call
2097<2084		2229<2632	256 GB STD TO 752 GB STD	*Call
2097<2084		2230<2601	8 GB STD TO 800 GB STD	*Call
2097<2084		2230<2602	16 GB STD TO 800 GB STD	*Call
2097<2084		2230<2603	24 GB STD TO 800 GB STD	*Call
2097<2084		2230<2604	32 GB STD TO 800 GB STD	*Call
2097<2084		2230<2605	40 GB STD TO 800 GB STD	*Call
2097<2084		2230<2606	48 GB STD TO 800 GB STD	*Call
2097<2084		2230<2607	56 GB STD TO 800 GB STD	*Call
2097<2084		2230<2608	64 GB STD TO 800 GB STD	*Call
2097<2084		2230<2609	72 GB STD TO 800 GB STD	*Call
2097<2084		2230<2610	80 GB STD TO 800 GB STD	*Call
2097<2084		2230<2611	88 GB STD TO 800 GB STD	*Call
2097<2084		2230<2612	96 GB STD TO 800 GB STD	*Call
2097<2084		2230<2613	104 GB STD TO 800 GB STD	*Call
2097<2084		2230<2614	112 GB STD TO 800 GB STD	*Call
2097<2084		2230<2615	120 GB STD TO 800 GB STD	*Call
2097<2084		2230<2616	128 GB STD TO 800 GB STD	*Call
2097<2084		2230<2617	136 GB STD TO 800 GB STD	*Call
2097<2084		2230<2618	144 GB STD TO 800 GB STD	*Call
2097<2084		2230<2619	152 GB STD TO 800 GB STD	*Call
2097<2084		2230<2620	160 GB STD TO 800 GB STD	*Call
2097<2084		2230<2621	168 GB STD TO 800 GB STD	*Call
2097<2084		2230<2622	176 GB STD TO 800 GB STD	*Call
2097<2084		2230<2623	184 GB STD TO 800 GB STD	*Call
2097<2084		2230<2624	192 GB STD TO 800 GB STD	*Call
2097<2084		2230<2625	200 GB STD TO 800 GB STD	*Call
2097<2084		2230<2626	208 GB STD TO 800 GB STD	*Call
2097<2084		2230<2627	216 GB STD TO 800 GB STD	*Call
2097<2084		2230<2628	224 GB STD TO 800 GB STD	*Call
2097<2084		2230<2629	232 GB STD TO 800 GB STD	*Call
2097<2084		2230<2630	240 GB STD TO 800 GB STD	*Call
2097<2084		2230<2631	248 GB STD TO 800 GB STD	*Call
2097<2084		2230<2632	256 GB STD TO 800 GB STD	*Call
2097<2084		2231<2601	8 GB STD TO 848 GB STD	*Call
2097<2084		2231<2602	16 GB STD TO 848 GB STD	*Call
2097<2084		2231<2603	24 GB STD TO 848 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2231<2604	32 GB STD TO 848 GB STD	*Call
2097<2084		2231<2605	40 GB STD TO 848 GB STD	*Call
2097<2084		2231<2606	48 GB STD TO 848 GB STD	*Call
2097<2084		2231<2607	56 GB STD TO 848 GB STD	*Call
2097<2084		2231<2608	64 GB STD TO 848 GB STD	*Call
2097<2084		2231<2609	72 GB STD TO 848 GB STD	*Call
2097<2084		2231<2610	80 GB STD TO 848 GB STD	*Call
2097<2084		2231<2611	88 GB STD TO 848 GB STD	*Call
2097<2084		2231<2612	96 GB STD TO 848 GB STD	*Call
2097<2084		2231<2613	104 GB STD TO 848 GB STD	*Call
2097<2084		2231<2614	112 GB STD TO 848 GB STD	*Call
2097<2084		2231<2615	120 GB STD TO 848 GB STD	*Call
2097<2084		2231<2616	128 GB STD TO 848 GB STD	*Call
2097<2084		2231<2617	136 GB STD TO 848 GB STD	*Call
2097<2084		2231<2618	144 GB STD TO 848 GB STD	*Call
2097<2084		2231<2619	152 GB STD TO 848 GB STD	*Call
2097<2084		2231<2620	160 GB STD TO 848 GB STD	*Call
2097<2084		2231<2621	168 GB STD TO 848 GB STD	*Call
2097<2084		2231<2622	176 GB STD TO 848 GB STD	*Call
2097<2084		2231<2623	184 GB STD TO 848 GB STD	*Call
2097<2084		2231<2624	192 GB STD TO 848 GB STD	*Call
2097<2084		2231<2625	200 GB STD TO 848 GB STD	*Call
2097<2084		2231<2626	208 GB STD TO 848 GB STD	*Call
2097<2084		2231<2627	216 GB STD TO 848 GB STD	*Call
2097<2084		2231<2628	224 GB STD TO 848 GB STD	*Call
2097<2084		2231<2629	232 GB STD TO 848 GB STD	*Call
2097<2084		2231<2630	240 GB STD TO 848 GB STD	*Call
2097<2084		2231<2631	248 GB STD TO 848 GB STD	*Call
2097<2084		2231<2632	256 GB STD TO 848 GB STD	*Call
2097<2084		2232<2601	8 GB STD TO 896 GB STD	*Call
2097<2084		2232<2602	16 GB STD TO 896 GB STD	*Call
2097<2084		2232<2603	24 GB STD TO 896 GB STD	*Call
2097<2084		2232<2604	32 GB STD TO 896 GB STD	*Call
2097<2084		2232<2605	40 GB STD TO 896 GB STD	*Call
2097<2084		2232<2606	48 GB STD TO 896 GB STD	*Call
2097<2084		2232<2607	56 GB STD TO 896 GB STD	*Call
2097<2084		2232<2608	64 GB STD TO 896 GB STD	*Call
2097<2084		2232<2609	72 GB STD TO 896 GB STD	*Call
2097<2084		2232<2610	80 GB STD TO 896 GB STD	*Call
2097<2084		2232<2611	88 GB STD TO 896 GB STD	*Call
2097<2084		2232<2612	96 GB STD TO 896 GB STD	*Call
2097<2084		2232<2613	104 GB STD TO 896 GB STD	*Call
2097<2084		2232<2614	112 GB STD TO 896 GB STD	*Call
2097<2084		2232<2615	120 GB STD TO 896 GB STD	*Call
2097<2084		2232<2616	128 GB STD TO 896 GB STD	*Call
2097<2084		2232<2617	136 GB STD TO 896 GB STD	*Call
2097<2084		2232<2618	144 GB STD TO 896 GB STD	*Call
2097<2084		2232<2619	152 GB STD TO 896 GB STD	*Call
2097<2084		2232<2620	160 GB STD TO 896 GB STD	*Call
2097<2084		2232<2621	168 GB STD TO 896 GB STD	*Call
2097<2084		2232<2622	176 GB STD TO 896 GB STD	*Call
2097<2084		2232<2623	184 GB STD TO 896 GB STD	*Call
2097<2084		2232<2624	192 GB STD TO 896 GB STD	*Call
2097<2084		2232<2625	200 GB STD TO 896 GB STD	*Call
2097<2084		2232<2626	208 GB STD TO 896 GB STD	*Call
2097<2084		2232<2627	216 GB STD TO 896 GB STD	*Call
2097<2084		2232<2628	224 GB STD TO 896 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2232<2629	232 GB STD TO 896 GB STD	*Call
2097<2084		2232<2630	240 GB STD TO 896 GB STD	*Call
2097<2084		2232<2631	248 GB STD TO 896 GB STD	*Call
2097<2084		2232<2632	256 GB STD TO 896 GB STD	*Call
2097<2084		2233<2601	8 GB STD TO 944 GB STD	*Call
2097<2084		2233<2602	16 GB STD TO 944 GB STD	*Call
2097<2084		2233<2603	24 GB STD TO 944 GB STD	*Call
2097<2084		2233<2604	32 GB STD TO 944 GB STD	*Call
2097<2084		2233<2605	40 GB STD TO 944 GB STD	*Call
2097<2084		2233<2606	48 GB STD TO 944 GB STD	*Call
2097<2084		2233<2607	56 GB STD TO 944 GB STD	*Call
2097<2084		2233<2608	64 GB STD TO 944 GB STD	*Call
2097<2084		2233<2609	72 GB STD TO 944 GB STD	*Call
2097<2084		2233<2610	80 GB STD TO 944 GB STD	*Call
2097<2084		2233<2611	88 GB STD TO 944 GB STD	*Call
2097<2084		2233<2612	96 GB STD TO 944 GB STD	*Call
2097<2084		2233<2613	104 GB STD TO 944 GB STD	*Call
2097<2084		2233<2614	112 GB STD TO 944 GB STD	*Call
2097<2084		2233<2615	120 GB STD TO 944 GB STD	*Call
2097<2084		2233<2616	128 GB STD TO 944 GB STD	*Call
2097<2084		2233<2617	136 GB STD TO 944 GB STD	*Call
2097<2084		2233<2618	144 GB STD TO 944 GB STD	*Call
2097<2084		2233<2619	152 GB STD TO 944 GB STD	*Call
2097<2084		2233<2620	160 GB STD TO 944 GB STD	*Call
2097<2084		2233<2621	168 GB STD TO 944 GB STD	*Call
2097<2084		2233<2622	176 GB STD TO 944 GB STD	*Call
2097<2084		2233<2623	184 GB STD TO 944 GB STD	*Call
2097<2084		2233<2624	192 GB STD TO 944 GB STD	*Call
2097<2084		2233<2625	200 GB STD TO 944 GB STD	*Call
2097<2084		2233<2626	208 GB STD TO 944 GB STD	*Call
2097<2084		2233<2627	216 GB STD TO 944 GB STD	*Call
2097<2084		2233<2628	224 GB STD TO 944 GB STD	*Call
2097<2084		2233<2629	232 GB STD TO 944 GB STD	*Call
2097<2084		2233<2630	240 GB STD TO 944 GB STD	*Call
2097<2084		2233<2631	248 GB STD TO 944 GB STD	*Call
2097<2084		2233<2632	256 GB STD TO 944 GB STD	*Call
2097<2084		2234<2601	8 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2602	16 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2603	24 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2604	32 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2605	40 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2606	48 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2607	56 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2608	64 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2609	72 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2610	80 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2611	88 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2612	96 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2613	104 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2614	112 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2615	120 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2616	128 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2617	136 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2618	144 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2619	152 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2620	160 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2621	168 GB STD TO 1008 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2234<2622	176 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2623	184 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2624	192 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2625	200 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2626	208 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2627	216 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2628	224 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2629	232 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2630	240 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2631	248 GB STD TO 1008 GB STD	*Call
2097<2084		2234<2632	256 GB STD TO 1008 GB STD	*Call
2097<2084		2235<2601	8 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2602	16 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2603	24 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2604	32 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2605	40 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2606	48 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2607	56 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2608	64 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2609	72 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2610	80 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2611	88 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2612	96 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2613	104 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2614	112 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2615	120 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2616	128 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2617	136 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2618	144 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2619	152 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2620	160 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2621	168 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2622	176 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2623	184 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2624	192 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2625	200 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2626	208 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2627	216 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2628	224 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2629	232 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2630	240 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2631	248 GB STD TO 1072 GB STD	*Call
2097<2084		2235<2632	256 GB STD TO 1072 GB STD	*Call
2097<2084		2236<2601	8 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2602	16 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2603	24 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2604	32 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2605	40 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2606	48 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2607	56 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2608	64 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2609	72 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2610	80 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2611	88 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2612	96 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2613	104 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2614	112 GB STD TO 1136 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2236<2615	120 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2616	128 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2617	136 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2618	144 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2619	152 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2620	160 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2621	168 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2622	176 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2623	184 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2624	192 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2625	200 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2626	208 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2627	216 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2628	224 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2629	232 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2630	240 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2631	248 GB STD TO 1136 GB STD	*Call
2097<2084		2236<2632	256 GB STD TO 1136 GB STD	*Call
2097<2084		2237<2601	8 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2602	16 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2603	24 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2604	32 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2605	40 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2606	48 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2607	56 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2608	64 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2609	72 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2610	80 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2611	88 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2612	96 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2613	104 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2614	112 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2615	120 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2616	128 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2617	136 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2618	144 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2619	152 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2620	160 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2621	168 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2622	176 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2623	184 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2624	192 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2625	200 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2626	208 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2627	216 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2628	224 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2629	232 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2630	240 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2631	248 GB STD TO 1200 GB STD	*Call
2097<2084		2237<2632	256 GB STD TO 1200 GB STD	*Call
2097<2084		2238<2601	8 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2602	16 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2603	24 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2604	32 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2605	40 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2606	48 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2607	56 GB STD TO 1264 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2238<2608	64 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2609	72 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2610	80 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2611	88 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2612	96 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2613	104 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2614	112 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2615	120 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2616	128 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2617	136 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2618	144 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2619	152 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2620	160 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2621	168 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2622	176 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2623	184 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2624	192 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2625	200 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2626	208 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2627	216 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2628	224 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2629	232 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2630	240 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2631	248 GB STD TO 1264 GB STD	*Call
2097<2084		2238<2632	256 GB STD TO 1264 GB STD	*Call
2097<2084		2239<2601	8 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2602	16 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2603	24 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2604	32 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2605	40 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2606	48 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2607	56 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2608	64 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2609	72 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2610	80 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2611	88 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2612	96 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2613	104 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2614	112 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2615	120 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2616	128 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2617	136 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2618	144 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2619	152 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2620	160 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2621	168 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2622	176 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2623	184 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2624	192 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2625	200 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2626	208 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2627	216 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2628	224 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2629	232 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2630	240 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2631	248 GB STD TO 1328 GB STD	*Call
2097<2084		2239<2632	256 GB STD TO 1328 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2240<2601	8 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2602	16 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2603	24 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2604	32 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2605	40 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2606	48 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2607	56 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2608	64 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2609	72 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2610	80 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2611	88 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2612	96 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2613	104 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2614	112 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2615	120 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2616	128 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2617	136 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2618	144 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2619	152 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2620	160 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2621	168 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2622	176 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2623	184 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2624	192 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2625	200 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2626	208 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2627	216 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2628	224 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2629	232 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2630	240 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2631	248 GB STD TO 1392 GB STD	*Call
2097<2084		2240<2632	256 GB STD TO 1392 GB STD	*Call
2097<2084		2241<2601	8 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2602	16 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2603	24 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2604	32 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2605	40 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2606	48 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2607	56 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2608	64 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2609	72 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2610	80 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2611	88 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2612	96 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2613	104 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2614	112 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2615	120 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2616	128 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2617	136 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2618	144 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2619	152 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2620	160 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2621	168 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2622	176 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2623	184 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2624	192 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2625	200 GB STD TO 1456 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2241<2626	208 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2627	216 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2628	224 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2629	232 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2630	240 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2631	248 GB STD TO 1456 GB STD	*Call
2097<2084		2241<2632	256 GB STD TO 1456 GB STD	*Call
2097<2084		2242<2601	8 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2602	16 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2603	24 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2604	32 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2605	40 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2606	48 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2607	56 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2608	64 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2609	72 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2610	80 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2611	88 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2612	96 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2613	104 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2614	112 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2615	120 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2616	128 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2617	136 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2618	144 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2619	152 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2620	160 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2621	168 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2622	176 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2623	184 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2624	192 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2625	200 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2626	208 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2627	216 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2628	224 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2629	232 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2630	240 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2631	248 GB STD TO 1520 GB STD	*Call
2097<2084		2242<2632	256 GB STD TO 1520 GB STD	*Call
2097<2084		2243<2601	8 GB STD TO 160 GB STD	*Call
2097<2084		2243<2602	16 GB STD TO 160 GB STD	*Call
2097<2084		2243<2603	24 GB STD TO 160 GB STD	*Call
2097<2084		2243<2604	32 GB STD TO 160 GB STD	*Call
2097<2084		2243<2605	40 GB STD TO 160 GB STD	*Call
2097<2084		2243<2606	48 GB STD TO 160 GB STD	*Call
2097<2084		2243<2607	56 GB STD TO 160 GB STD	*Call
2097<2084		2243<2608	64 GB STD TO 160 GB STD	*Call
2097<2084		2243<2609	72 GB STD TO 160 GB STD	*Call
2097<2084		2243<2610	80 GB STD TO 160 GB STD	*Call
2097<2084		2243<2611	88 GB STD TO 160 GB STD	*Call
2097<2084		2243<2612	96 GB STD TO 160 GB STD	*Call
2097<2084		2243<2613	104 GB STD TO 160 GB STD	*Call
2097<2084		2243<2614	112 GB STD TO 160 GB STD	*Call
2097<2084		2243<2615	120 GB STD TO 160 GB STD	*Call
2097<2084		2243<2616	128 GB STD TO 160 GB STD	*Call
2097<2084		2243<2617	136 GB STD TO 160 GB STD	*Call
2097<2084		2243<2618	144 GB STD TO 160 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		2243<2619	152 GB STD TO 160 GB STD	*Call
2097<2084		4311<7711	A08 1I/O TO 1BOOK 1I/O	*Call
2097<2084		4311<7721	B16 1I/O TO 1BOOK 1I/O	*Call
2097<2084		4311<7731	C24 1I/O TO 1BOOK 1I/O	*Call
2097<2084		4311<7741	D32 1I/O TO 1BOOK 1I/O	*Call
2097<2084		4312<7711	A08 1I/O TO 1BOOK 2I/O	*Call
2097<2084		4312<7712	A08 2I/O TO 1BOOK 2I/O	*Call
2097<2084		4312<7721	B16 1I/O TO 1BOOK 2I/O	*Call
2097<2084		4312<7722	B16 2I/O TO 1BOOK 2I/O	*Call
2097<2084		4312<7731	C24 1I/O TO 1BOOK 2I/O	*Call
2097<2084		4312<7732	C24 2I/O TO 1BOOK 2I/O	*Call
2097<2084		4312<7741	D32 1I/O TO 1BOOK 2I/O	*Call
2097<2084		4312<7742	D32 2I/O TO 1BOOK 2I/O	*Call
2097<2084		4313<7711	A08 1I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7712	A08 2I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7713	A08 3I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7721	B16 1I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7722	B16 2I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7723	B16 3I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7731	C24 1I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7732	C24 2I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7733	C24 3I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7741	D32 1I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7742	D32 2I/O TO 1BOOK 3I/O	*Call
2097<2084		4313<7743	D32 3I/O TO 1BOOK 3I/O	*Call
2097<2084		4321<7711	A08 1I/O TO 2BOOK 1I/O	*Call
2097<2084		4321<7721	B16 1I/O TO 2BOOK 1I/O	*Call
2097<2084		4321<7731	C24 1I/O TO 2BOOK 1I/O	*Call
2097<2084		4321<7741	D32 1I/O TO 2BOOK 1I/O	*Call
2097<2084		4322<7711	A08 1I/O TO 2BOOK 2I/O	*Call
2097<2084		4322<7712	A08 2I/O TO 2BOOK 2I/O	*Call
2097<2084		4322<7721	B16 1I/O TO 2BOOK 2I/O	*Call
2097<2084		4322<7722	B16 2I/O TO 2BOOK 2I/O	*Call
2097<2084		4322<7731	C24 1I/O TO 2BOOK 2I/O	*Call
2097<2084		4322<7732	C24 2I/O TO 2BOOK 2I/O	*Call
2097<2084		4322<7741	D32 1I/O TO 2BOOK 2I/O	*Call
2097<2084		4322<7742	D32 2I/O TO 2BOOK 2I/O	*Call
2097<2084		4323<7711	A08 1I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7712	A08 2I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7713	A08 3I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7721	B16 1I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7722	B16 2I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7723	B16 3I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7731	C24 1I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7732	C24 2I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7733	C24 3I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7741	D32 1I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7742	D32 2I/O TO 2BOOK 3I/O	*Call
2097<2084		4323<7743	D32 3I/O TO 2BOOK 3I/O	*Call
2097<2084		4331<7711	A08 1I/O TO 3BOOK 1I/O	*Call
2097<2084		4331<7721	B16 1I/O TO 3BOOK 1I/O	*Call
2097<2084		4331<7731	C24 1I/O TO 3BOOK 1I/O	*Call
2097<2084		4331<7741	D32 1I/O TO 3BOOK 1I/O	*Call
2097<2084		4332<7711	A08 1I/O TO 3BOOK 2I/O	*Call
2097<2084		4332<7712	A08 2I/O TO 3BOOK 2I/O	*Call
2097<2084		4332<7721	B16 1I/O TO 3BOOK 2I/O	*Call
2097<2084		4332<7722	B16 2I/O TO 3BOOK 2I/O	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		4332<7731	C24 1I/O TO 3BOOK 2I/O	*Call
2097<2084		4332<7732	C24 2I/O TO 3BOOK 2I/O	*Call
2097<2084		4332<7741	D32 1I/O TO 3BOOK 2I/O	*Call
2097<2084		4332<7742	D32 2I/O TO 3BOOK 2I/O	*Call
2097<2084		4333<7711	A08 1I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7712	A08 2I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7713	A08 3I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7721	B16 1I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7722	B16 2I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7723	B16 3I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7731	C24 1I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7732	C24 2I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7733	C24 3I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7741	D32 1I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7742	D32 2I/O TO 3BOOK 3I/O	*Call
2097<2084		4333<7743	D32 3I/O TO 3BOOK 3I/O	*Call
2097<2084		4341<7711	A08 1I/O TO 4BOOK 1I/O	*Call
2097<2084		4341<7721	B16 1I/O TO 4BOOK 1I/O	*Call
2097<2084		4341<7731	C24 1I/O TO 4BOOK 1I/O	*Call
2097<2084		4341<7741	D32 1I/O TO 4BOOK 1I/O	*Call
2097<2084		4342<7711	A08 1I/O TO 4BOOK 2I/O	*Call
2097<2084		4342<7712	A08 2I/O TO 4BOOK 2I/O	*Call
2097<2084		4342<7721	B16 1I/O TO 4BOOK 2I/O	*Call
2097<2084		4342<7722	B16 2I/O TO 4BOOK 2I/O	*Call
2097<2084		4342<7731	C24 1I/O TO 4BOOK 2I/O	*Call
2097<2084		4342<7732	C24 2I/O TO 4BOOK 2I/O	*Call
2097<2084		4342<7741	D32 1I/O TO 4BOOK 2I/O	*Call
2097<2084		4342<7742	D32 2I/O TO 4BOOK 2I/O	*Call
2097<2084		4343<7711	A08 1I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7712	A08 2I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7713	A08 3I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7721	B16 1I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7722	B16 2I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7723	B16 3I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7731	C24 1I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7732	C24 2I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7733	C24 3I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7741	D32 1I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7742	D32 2I/O TO 4BOOK 3I/O	*Call
2097<2084		4343<7743	D32 3I/O TO 4BOOK 3I/O	*Call
2097<2084		6539<4400	0-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4401	1-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4402	2-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4403	3-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4404	4-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4405	5-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4406	6-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4407	7-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4408	8-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4409	9-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4410	10-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4411	11-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4412	12-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4413	13-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4414	14-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4415	15-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4416	16-WAY TO 1-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6539<4417	17-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4418	18-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4419	19-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4420	20-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4421	21-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4422	22-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4423	23-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4424	24-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4425	25-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4426	26-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4427	27-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4428	28-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4429	29-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4430	30-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4431	31-WAY TO 1-WAY CP4	*Call
2097<2084		6539<4432	32-WAY TO 1-WAY CP4	*Call
2097<2084		6540<4400	0-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4401	1-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4402	2-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4403	3-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4404	4-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4405	5-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4406	6-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4407	7-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4408	8-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4409	9-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4410	10-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4411	11-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4412	12-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4413	13-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4414	14-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4415	15-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4416	16-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4417	17-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4418	18-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4419	19-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4420	20-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4421	21-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4422	22-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4423	23-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4424	24-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4425	25-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4426	26-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4427	27-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4428	28-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4429	29-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4430	30-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4431	31-WAY TO 2-WAY CP4	*Call
2097<2084		6540<4432	32-WAY TO 2-WAY CP4	*Call
2097<2084		6541<4400	0-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4401	1-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4402	2-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4403	3-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4404	4-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4405	5-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4406	6-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4407	7-WAY TO 3-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6541<4408	8-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4409	9-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4410	10-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4411	11-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4412	12-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4413	13-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4414	14-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4415	15-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4416	16-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4417	17-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4418	18-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4419	19-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4420	20-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4421	21-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4422	22-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4423	23-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4424	24-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4425	25-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4426	26-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4427	27-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4428	28-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4429	29-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4430	30-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4431	31-WAY TO 3-WAY CP4	*Call
2097<2084		6541<4432	32-WAY TO 3-WAY CP4	*Call
2097<2084		6542<4400	0-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4401	1-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4402	2-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4403	3-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4404	4-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4405	5-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4406	6-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4407	7-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4408	8-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4409	9-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4410	10-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4411	11-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4412	12-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4413	13-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4414	14-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4415	15-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4416	16-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4417	17-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4418	18-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4419	19-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4420	20-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4421	21-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4422	22-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4423	23-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4424	24-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4425	25-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4426	26-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4427	27-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4428	28-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4429	29-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4430	30-WAY TO 4-WAY CP4	*Call
2097<2084		6542<4431	31-WAY TO 4-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6542<4432	32-WAY TO 4-WAY CP4	*Call
2097<2084		6543<4400	0-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4401	1-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4402	2-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4403	3-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4404	4-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4405	5-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4406	6-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4407	7-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4408	8-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4409	9-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4410	10-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4411	11-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4412	12-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4413	13-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4414	14-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4415	15-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4416	16-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4417	17-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4418	18-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4419	19-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4420	20-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4421	21-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4422	22-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4423	23-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4424	24-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4425	25-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4426	26-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4427	27-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4428	28-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4429	29-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4430	30-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4431	31-WAY TO 5-WAY CP4	*Call
2097<2084		6543<4432	32-WAY TO 5-WAY CP4	*Call
2097<2084		6544<4400	0-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4401	1-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4402	2-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4403	3-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4404	4-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4405	5-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4406	6-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4407	7-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4408	8-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4409	9-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4410	10-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4411	11-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4412	12-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4413	13-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4414	14-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4415	15-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4416	16-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4417	17-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4418	18-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4419	19-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4420	20-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4421	21-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4422	22-WAY TO 6-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6544<4423	23-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4424	24-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4425	25-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4426	26-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4427	27-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4428	28-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4429	29-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4430	30-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4431	31-WAY TO 6-WAY CP4	*Call
2097<2084		6544<4432	32-WAY TO 6-WAY CP4	*Call
2097<2084		6545<4400	0-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4401	1-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4402	2-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4403	3-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4404	4-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4405	5-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4406	6-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4407	7-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4408	8-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4409	9-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4410	10-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4411	11-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4412	12-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4413	13-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4414	14-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4415	15-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4416	16-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4417	17-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4418	18-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4419	19-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4420	20-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4421	21-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4422	22-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4423	23-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4424	24-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4425	25-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4426	26-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4427	27-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4428	28-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4429	29-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4430	30-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4431	31-WAY TO 7-WAY CP4	*Call
2097<2084		6545<4432	32-WAY TO 7-WAY CP4	*Call
2097<2084		6546<4400	0-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4401	1-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4402	2-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4403	3-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4404	4-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4405	5-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4406	6-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4407	7-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4408	8-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4409	9-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4410	10-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4411	11-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4412	12-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4413	13-WAY TO 8-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6546<4414	14-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4415	15-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4416	16-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4417	17-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4418	18-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4419	19-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4420	20-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4421	21-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4422	22-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4423	23-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4424	24-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4425	25-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4426	26-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4427	27-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4428	28-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4429	29-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4430	30-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4431	31-WAY TO 8-WAY CP4	*Call
2097<2084		6546<4432	32-WAY TO 8-WAY CP4	*Call
2097<2084		6547<4400	0-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4401	1-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4402	2-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4403	3-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4404	4-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4405	5-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4406	6-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4407	7-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4408	8-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4409	9-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4410	10-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4411	11-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4412	12-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4413	13-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4414	14-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4415	15-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4416	16-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4417	17-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4418	18-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4419	19-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4420	20-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4421	21-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4422	22-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4423	23-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4424	24-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4425	25-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4426	26-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4427	27-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4428	28-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4429	29-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4430	30-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4431	31-WAY TO 9-WAY CP4	*Call
2097<2084		6547<4432	32-WAY TO 9-WAY CP4	*Call
2097<2084		6548<4400	0-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4401	1-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4402	2-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4403	3-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4404	4-WAY TO 10-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6548<4405	5-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4406	6-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4407	7-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4408	8-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4409	9-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4410	10-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4411	11-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4412	12-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4413	13-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4414	14-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4415	15-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4416	16-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4417	17-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4418	18-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4419	19-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4420	20-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4421	21-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4422	22-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4423	23-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4424	24-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4425	25-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4426	26-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4427	27-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4428	28-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4429	29-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4430	30-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4431	31-WAY TO 10-WAY CP4	*Call
2097<2084		6548<4432	32-WAY TO 10-WAY CP4	*Call
2097<2084		6549<4400	0-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4401	1-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4402	2-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4403	3-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4404	4-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4405	5-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4406	6-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4407	7-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4408	8-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4409	9-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4410	10-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4411	11-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4412	12-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4413	13-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4414	14-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4415	15-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4416	16-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4417	17-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4418	18-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4419	19-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4420	20-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4421	21-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4422	22-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4423	23-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4424	24-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4425	25-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4426	26-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4427	27-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4428	28-WAY TO 11-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6549<4429	29-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4430	30-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4431	31-WAY TO 11-WAY CP4	*Call
2097<2084		6549<4432	32-WAY TO 11-WAY CP4	*Call
2097<2084		6550<4400	0-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4401	1-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4402	2-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4403	3-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4404	4-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4405	5-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4406	6-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4407	7-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4408	8-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4409	9-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4410	10-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4411	11-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4412	12-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4413	13-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4414	14-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4415	15-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4416	16-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4417	17-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4418	18-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4419	19-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4420	20-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4421	21-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4422	22-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4423	23-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4424	24-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4425	25-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4426	26-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4427	27-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4428	28-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4429	29-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4430	30-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4431	31-WAY TO 12-WAY CP4	*Call
2097<2084		6550<4432	32-WAY TO 12-WAY CP4	*Call
2097<2084		6551<4400	0-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4401	1-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4402	2-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4403	3-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4404	4-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4405	5-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4406	6-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4407	7-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4408	8-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4409	9-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4410	10-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4411	11-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4412	12-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4413	13-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4414	14-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4415	15-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4416	16-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4417	17-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4418	18-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4419	19-WAY TO 1-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6551<4420	20-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4421	21-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4422	22-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4423	23-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4424	24-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4425	25-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4426	26-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4427	27-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4428	28-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4429	29-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4430	30-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4431	31-WAY TO 1-WAY CP5	*Call
2097<2084		6551<4432	32-WAY TO 1-WAY CP5	*Call
2097<2084		6552<4400	0-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4401	1-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4402	2-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4403	3-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4404	4-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4405	5-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4406	6-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4407	7-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4408	8-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4409	9-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4410	10-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4411	11-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4412	12-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4413	13-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4414	14-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4415	15-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4416	16-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4417	17-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4418	18-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4419	19-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4420	20-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4421	21-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4422	22-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4423	23-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4424	24-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4425	25-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4426	26-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4427	27-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4428	28-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4429	29-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4430	30-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4431	31-WAY TO 2-WAY CP5	*Call
2097<2084		6552<4432	32-WAY TO 2-WAY CP5	*Call
2097<2084		6553<4400	0-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4401	1-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4402	2-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4403	3-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4404	4-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4405	5-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4406	6-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4407	7-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4408	8-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4409	9-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4410	10-WAY TO 3-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6553<4411	11-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4412	12-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4413	13-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4414	14-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4415	15-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4416	16-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4417	17-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4418	18-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4419	19-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4420	20-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4421	21-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4422	22-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4423	23-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4424	24-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4425	25-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4426	26-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4427	27-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4428	28-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4429	29-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4430	30-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4431	31-WAY TO 3-WAY CP5	*Call
2097<2084		6553<4432	32-WAY TO 3-WAY CP5	*Call
2097<2084		6554<4400	0-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4401	1-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4402	2-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4403	3-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4404	4-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4405	5-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4406	6-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4407	7-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4408	8-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4409	9-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4410	10-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4411	11-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4412	12-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4413	13-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4414	14-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4415	15-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4416	16-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4417	17-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4418	18-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4419	19-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4420	20-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4421	21-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4422	22-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4423	23-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4424	24-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4425	25-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4426	26-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4427	27-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4428	28-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4429	29-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4430	30-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4431	31-WAY TO 4-WAY CP5	*Call
2097<2084		6554<4432	32-WAY TO 4-WAY CP5	*Call
2097<2084		6555<4400	0-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4401	1-WAY TO 5-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6555<4402	2-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4403	3-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4404	4-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4405	5-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4406	6-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4407	7-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4408	8-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4409	9-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4410	10-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4411	11-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4412	12-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4413	13-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4414	14-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4415	15-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4416	16-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4417	17-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4418	18-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4419	19-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4420	20-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4421	21-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4422	22-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4423	23-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4424	24-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4425	25-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4426	26-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4427	27-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4428	28-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4429	29-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4430	30-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4431	31-WAY TO 5-WAY CP5	*Call
2097<2084		6555<4432	32-WAY TO 5-WAY CP5	*Call
2097<2084		6556<4400	0-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4401	1-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4402	2-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4403	3-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4404	4-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4405	5-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4406	6-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4407	7-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4408	8-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4409	9-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4410	10-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4411	11-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4412	12-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4413	13-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4414	14-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4415	15-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4416	16-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4417	17-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4418	18-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4419	19-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4420	20-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4421	21-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4422	22-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4423	23-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4424	24-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4425	25-WAY TO 6-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6556<4426	26-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4427	27-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4428	28-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4429	29-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4430	30-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4431	31-WAY TO 6-WAY CP5	*Call
2097<2084		6556<4432	32-WAY TO 6-WAY CP5	*Call
2097<2084		6557<4400	0-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4401	1-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4402	2-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4403	3-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4404	4-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4405	5-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4406	6-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4407	7-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4408	8-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4409	9-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4410	10-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4411	11-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4412	12-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4413	13-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4414	14-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4415	15-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4416	16-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4417	17-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4418	18-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4419	19-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4420	20-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4421	21-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4422	22-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4423	23-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4424	24-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4425	25-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4426	26-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4427	27-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4428	28-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4429	29-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4430	30-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4431	31-WAY TO 7-WAY CP5	*Call
2097<2084		6557<4432	32-WAY TO 7-WAY CP5	*Call
2097<2084		6558<4400	0-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4401	1-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4402	2-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4403	3-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4404	4-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4405	5-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4406	6-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4407	7-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4408	8-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4409	9-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4410	10-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4411	11-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4412	12-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4413	13-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4414	14-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4415	15-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4416	16-WAY TO 8-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6558<4417	17-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4418	18-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4419	19-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4420	20-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4421	21-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4422	22-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4423	23-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4424	24-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4425	25-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4426	26-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4427	27-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4428	28-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4429	29-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4430	30-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4431	31-WAY TO 8-WAY CP5	*Call
2097<2084		6558<4432	32-WAY TO 8-WAY CP5	*Call
2097<2084		6559<4400	0-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4401	1-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4402	2-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4403	3-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4404	4-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4405	5-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4406	6-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4407	7-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4408	8-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4409	9-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4410	10-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4411	11-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4412	12-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4413	13-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4414	14-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4415	15-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4416	16-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4417	17-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4418	18-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4419	19-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4420	20-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4421	21-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4422	22-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4423	23-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4424	24-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4425	25-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4426	26-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4427	27-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4428	28-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4429	29-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4430	30-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4431	31-WAY TO 9-WAY CP5	*Call
2097<2084		6559<4432	32-WAY TO 9-WAY CP5	*Call
2097<2084		6560<4400	0-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4401	1-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4402	2-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4403	3-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4404	4-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4405	5-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4406	6-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4407	7-WAY TO 10-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6560<4408	8-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4409	9-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4410	10-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4411	11-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4412	12-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4413	13-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4414	14-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4415	15-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4416	16-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4417	17-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4418	18-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4419	19-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4420	20-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4421	21-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4422	22-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4423	23-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4424	24-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4425	25-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4426	26-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4427	27-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4428	28-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4429	29-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4430	30-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4431	31-WAY TO 10-WAY CP5	*Call
2097<2084		6560<4432	32-WAY TO 10-WAY CP5	*Call
2097<2084		6561<4400	0-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4401	1-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4402	2-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4403	3-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4404	4-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4405	5-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4406	6-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4407	7-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4408	8-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4409	9-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4410	10-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4411	11-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4412	12-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4413	13-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4414	14-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4415	15-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4416	16-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4417	17-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4418	18-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4419	19-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4420	20-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4421	21-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4422	22-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4423	23-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4424	24-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4425	25-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4426	26-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4427	27-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4428	28-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4429	29-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4430	30-WAY TO 11-WAY CP5	*Call
2097<2084		6561<4431	31-WAY TO 11-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6561<4432	32-WAY TO 11-WAY CP5	*Call
2097<2084		6562<4400	0-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4401	1-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4402	2-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4403	3-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4404	4-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4405	5-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4406	6-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4407	7-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4408	8-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4409	9-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4410	10-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4411	11-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4412	12-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4413	13-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4414	14-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4415	15-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4416	16-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4417	17-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4418	18-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4419	19-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4420	20-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4421	21-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4422	22-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4423	23-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4424	24-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4425	25-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4426	26-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4427	27-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4428	28-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4429	29-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4430	30-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4431	31-WAY TO 12-WAY CP5	*Call
2097<2084		6562<4432	32-WAY TO 12-WAY CP5	*Call
2097<2084		6601<4400	0-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4401	1-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4402	2-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4403	3-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4404	4-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4405	5-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4406	6-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4407	7-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4408	8-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4409	9-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4410	10-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4411	11-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4412	12-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4413	13-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4414	14-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4415	15-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4416	16-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4417	17-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4418	18-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4419	19-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4420	20-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4421	21-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4422	22-WAY TO 1-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6601<4423	23-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4424	24-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4425	25-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4426	26-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4427	27-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4428	28-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4429	29-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4430	30-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4431	31-WAY TO 1-WAY CP6	*Call
2097<2084		6601<4432	32-WAY TO 1-WAY CP6	*Call
2097<2084		6602<4400	0-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4401	1-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4402	2-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4403	3-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4404	4-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4405	5-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4406	6-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4407	7-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4408	8-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4409	9-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4410	10-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4411	11-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4412	12-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4413	13-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4414	14-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4415	15-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4416	16-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4417	17-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4418	18-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4419	19-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4420	20-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4421	21-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4422	22-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4423	23-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4424	24-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4425	25-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4426	26-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4427	27-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4428	28-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4429	29-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4430	30-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4431	31-WAY TO 2-WAY CP6	*Call
2097<2084		6602<4432	32-WAY TO 2-WAY CP6	*Call
2097<2084		6603<4400	0-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4401	1-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4402	2-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4403	3-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4404	4-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4405	5-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4406	6-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4407	7-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4408	8-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4409	9-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4410	10-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4411	11-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4412	12-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4413	13-WAY TO 3-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6603<4414	14-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4415	15-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4416	16-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4417	17-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4418	18-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4419	19-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4420	20-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4421	21-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4422	22-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4423	23-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4424	24-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4425	25-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4426	26-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4427	27-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4428	28-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4429	29-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4430	30-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4431	31-WAY TO 3-WAY CP6	*Call
2097<2084		6603<4432	32-WAY TO 3-WAY CP6	*Call
2097<2084		6604<4400	0-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4401	1-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4402	2-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4403	3-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4404	4-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4405	5-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4406	6-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4407	7-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4408	8-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4409	9-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4410	10-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4411	11-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4412	12-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4413	13-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4414	14-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4415	15-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4416	16-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4417	17-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4418	18-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4419	19-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4420	20-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4421	21-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4422	22-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4423	23-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4424	24-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4425	25-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4426	26-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4427	27-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4428	28-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4429	29-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4430	30-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4431	31-WAY TO 4-WAY CP6	*Call
2097<2084		6604<4432	32-WAY TO 4-WAY CP6	*Call
2097<2084		6605<4400	0-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4401	1-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4402	2-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4403	3-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4404	4-WAY TO 5-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6605<4405	5-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4406	6-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4407	7-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4408	8-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4409	9-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4410	10-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4411	11-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4412	12-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4413	13-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4414	14-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4415	15-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4416	16-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4417	17-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4418	18-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4419	19-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4420	20-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4421	21-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4422	22-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4423	23-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4424	24-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4425	25-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4426	26-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4427	27-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4428	28-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4429	29-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4430	30-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4431	31-WAY TO 5-WAY CP6	*Call
2097<2084		6605<4432	32-WAY TO 5-WAY CP6	*Call
2097<2084		6606<4400	0-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4401	1-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4402	2-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4403	3-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4404	4-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4405	5-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4406	6-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4407	7-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4408	8-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4409	9-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4410	10-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4411	11-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4412	12-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4413	13-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4414	14-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4415	15-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4416	16-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4417	17-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4418	18-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4419	19-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4420	20-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4421	21-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4422	22-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4423	23-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4424	24-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4425	25-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4426	26-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4427	27-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4428	28-WAY TO 6-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6606<4429	29-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4430	30-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4431	31-WAY TO 6-WAY CP6	*Call
2097<2084		6606<4432	32-WAY TO 6-WAY CP6	*Call
2097<2084		6607<4400	0-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4401	1-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4402	2-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4403	3-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4404	4-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4405	5-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4406	6-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4407	7-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4408	8-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4409	9-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4410	10-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4411	11-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4412	12-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4413	13-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4414	14-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4415	15-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4416	16-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4417	17-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4418	18-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4419	19-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4420	20-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4421	21-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4422	22-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4423	23-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4424	24-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4425	25-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4426	26-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4427	27-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4428	28-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4429	29-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4430	30-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4431	31-WAY TO 7-WAY CP6	*Call
2097<2084		6607<4432	32-WAY TO 7-WAY CP6	*Call
2097<2084		6608<4400	0-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4401	1-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4402	2-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4403	3-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4404	4-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4405	5-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4406	6-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4407	7-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4408	8-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4409	9-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4410	10-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4411	11-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4412	12-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4413	13-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4414	14-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4415	15-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4416	16-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4417	17-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4418	18-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4419	19-WAY TO 8-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6608<4420	20-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4421	21-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4422	22-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4423	23-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4424	24-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4425	25-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4426	26-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4427	27-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4428	28-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4429	29-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4430	30-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4431	31-WAY TO 8-WAY CP6	*Call
2097<2084		6608<4432	32-WAY TO 8-WAY CP6	*Call
2097<2084		6609<4400	0-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4401	1-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4402	2-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4403	3-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4404	4-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4405	5-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4406	6-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4407	7-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4408	8-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4409	9-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4410	10-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4411	11-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4412	12-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4413	13-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4414	14-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4415	15-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4416	16-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4417	17-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4418	18-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4419	19-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4420	20-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4421	21-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4422	22-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4423	23-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4424	24-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4425	25-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4426	26-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4427	27-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4428	28-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4429	29-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4430	30-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4431	31-WAY TO 9-WAY CP6	*Call
2097<2084		6609<4432	32-WAY TO 9-WAY CP6	*Call
2097<2084		6610<4400	0-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4401	1-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4402	2-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4403	3-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4404	4-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4405	5-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4406	6-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4407	7-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4408	8-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4409	9-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4410	10-WAY TO 10-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6610<4411	11-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4412	12-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4413	13-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4414	14-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4415	15-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4416	16-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4417	17-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4418	18-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4419	19-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4420	20-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4421	21-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4422	22-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4423	23-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4424	24-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4425	25-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4426	26-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4427	27-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4428	28-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4429	29-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4430	30-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4431	31-WAY TO 10-WAY CP6	*Call
2097<2084		6610<4432	32-WAY TO 10-WAY CP6	*Call
2097<2084		6611<4400	0-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4401	1-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4402	2-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4403	3-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4404	4-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4405	5-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4406	6-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4407	7-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4408	8-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4409	9-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4410	10-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4411	11-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4412	12-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4413	13-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4414	14-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4415	15-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4416	16-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4417	17-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4418	18-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4419	19-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4420	20-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4421	21-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4422	22-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4423	23-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4424	24-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4425	25-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4426	26-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4427	27-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4428	28-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4429	29-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4430	30-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4431	31-WAY TO 11-WAY CP6	*Call
2097<2084		6611<4432	32-WAY TO 11-WAY CP6	*Call
2097<2084		6612<4400	0-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4401	1-WAY TO 12-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6612<4402	2-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4403	3-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4404	4-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4405	5-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4406	6-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4407	7-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4408	8-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4409	9-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4410	10-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4411	11-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4412	12-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4413	13-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4414	14-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4415	15-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4416	16-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4417	17-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4418	18-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4419	19-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4420	20-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4421	21-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4422	22-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4423	23-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4424	24-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4425	25-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4426	26-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4427	27-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4428	28-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4429	29-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4430	30-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4431	31-WAY TO 12-WAY CP6	*Call
2097<2084		6612<4432	32-WAY TO 12-WAY CP6	*Call
2097<2084		6700<4400	0-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4401	1-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4402	2-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4403	3-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4404	4-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4405	5-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4406	6-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4407	7-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4408	8-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4409	9-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4410	10-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4411	11-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4412	12-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4413	13-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4414	14-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4415	15-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4416	16-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4417	17-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4418	18-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4419	19-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4420	20-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4421	21-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4422	22-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4423	23-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4424	24-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4425	25-WAY TO 0-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6700<4426	26-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4427	27-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4428	28-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4429	29-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4430	30-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4431	31-WAY TO 0-WAY CP7	*Call
2097<2084		6700<4432	32-WAY TO 0-WAY CP7	*Call
2097<2084		6701<4400	0-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4401	1-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4402	2-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4403	3-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4404	4-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4405	5-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4406	6-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4407	7-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4408	8-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4409	9-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4410	10-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4411	11-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4412	12-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4413	13-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4414	14-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4415	15-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4416	16-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4417	17-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4418	18-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4419	19-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4420	20-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4421	21-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4422	22-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4423	23-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4424	24-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4425	25-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4426	26-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4427	27-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4428	28-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4429	29-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4430	30-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4431	31-WAY TO 1-WAY CP7	*Call
2097<2084		6701<4432	32-WAY TO 1-WAY CP7	*Call
2097<2084		6702<4400	0-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4401	1-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4402	2-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4403	3-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4404	4-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4405	5-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4406	6-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4407	7-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4408	8-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4409	9-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4410	10-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4411	11-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4412	12-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4413	13-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4414	14-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4415	15-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4416	16-WAY TO 2-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6702<4417	17-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4418	18-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4419	19-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4420	20-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4421	21-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4422	22-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4423	23-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4424	24-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4425	25-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4426	26-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4427	27-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4428	28-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4429	29-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4430	30-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4431	31-WAY TO 2-WAY CP7	*Call
2097<2084		6702<4432	32-WAY TO 2-WAY CP7	*Call
2097<2084		6703<4400	0-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4401	1-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4402	2-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4403	3-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4404	4-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4405	5-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4406	6-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4407	7-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4408	8-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4409	9-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4410	10-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4411	11-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4412	12-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4413	13-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4414	14-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4415	15-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4416	16-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4417	17-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4418	18-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4419	19-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4420	20-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4421	21-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4422	22-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4423	23-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4424	24-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4425	25-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4426	26-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4427	27-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4428	28-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4429	29-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4430	30-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4431	31-WAY TO 3-WAY CP7	*Call
2097<2084		6703<4432	32-WAY TO 3-WAY CP7	*Call
2097<2084		6704<4400	0-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4401	1-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4402	2-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4403	3-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4404	4-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4405	5-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4406	6-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4407	7-WAY TO 4-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6704<4408	8-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4409	9-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4410	10-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4411	11-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4412	12-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4413	13-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4414	14-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4415	15-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4416	16-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4417	17-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4418	18-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4419	19-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4420	20-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4421	21-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4422	22-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4423	23-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4424	24-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4425	25-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4426	26-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4427	27-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4428	28-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4429	29-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4430	30-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4431	31-WAY TO 4-WAY CP7	*Call
2097<2084		6704<4432	32-WAY TO 4-WAY CP7	*Call
2097<2084		6705<4400	0-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4401	1-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4402	2-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4403	3-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4404	4-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4405	5-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4406	6-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4407	7-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4408	8-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4409	9-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4410	10-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4411	11-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4412	12-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4413	13-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4414	14-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4415	15-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4416	16-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4417	17-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4418	18-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4419	19-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4420	20-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4421	21-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4422	22-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4423	23-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4424	24-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4425	25-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4426	26-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4427	27-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4428	28-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4429	29-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4430	30-WAY TO 5-WAY CP7	*Call
2097<2084		6705<4431	31-WAY TO 5-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6705<4432	32-WAY TO 5-WAY CP7	*Call
2097<2084		6706<4400	0-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4401	1-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4402	2-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4403	3-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4404	4-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4405	5-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4406	6-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4407	7-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4408	8-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4409	9-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4410	10-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4411	11-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4412	12-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4413	13-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4414	14-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4415	15-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4416	16-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4417	17-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4418	18-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4419	19-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4420	20-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4421	21-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4422	22-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4423	23-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4424	24-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4425	25-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4426	26-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4427	27-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4428	28-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4429	29-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4430	30-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4431	31-WAY TO 6-WAY CP7	*Call
2097<2084		6706<4432	32-WAY TO 6-WAY CP7	*Call
2097<2084		6707<4400	0-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4401	1-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4402	2-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4403	3-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4404	4-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4405	5-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4406	6-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4407	7-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4408	8-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4409	9-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4410	10-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4411	11-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4412	12-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4413	13-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4414	14-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4415	15-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4416	16-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4417	17-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4418	18-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4419	19-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4420	20-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4421	21-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4422	22-WAY TO 7-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6707<4423	23-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4424	24-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4425	25-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4426	26-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4427	27-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4428	28-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4429	29-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4430	30-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4431	31-WAY TO 7-WAY CP7	*Call
2097<2084		6707<4432	32-WAY TO 7-WAY CP7	*Call
2097<2084		6708<4400	0-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4401	1-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4402	2-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4403	3-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4404	4-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4405	5-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4406	6-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4407	7-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4408	8-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4409	9-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4410	10-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4411	11-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4412	12-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4413	13-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4414	14-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4415	15-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4416	16-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4417	17-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4418	18-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4419	19-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4420	20-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4421	21-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4422	22-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4423	23-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4424	24-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4425	25-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4426	26-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4427	27-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4428	28-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4429	29-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4430	30-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4431	31-WAY TO 8-WAY CP7	*Call
2097<2084		6708<4432	32-WAY TO 8-WAY CP7	*Call
2097<2084		6709<4400	0-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4401	1-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4402	2-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4403	3-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4404	4-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4405	5-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4406	6-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4407	7-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4408	8-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4409	9-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4410	10-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4411	11-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4412	12-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4413	13-WAY TO 9-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6709<4414	14-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4415	15-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4416	16-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4417	17-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4418	18-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4419	19-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4420	20-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4421	21-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4422	22-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4423	23-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4424	24-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4425	25-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4426	26-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4427	27-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4428	28-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4429	29-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4430	30-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4431	31-WAY TO 9-WAY CP7	*Call
2097<2084		6709<4432	32-WAY TO 9-WAY CP7	*Call
2097<2084		6710<4400	0-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4401	1-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4402	2-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4403	3-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4404	4-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4405	5-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4406	6-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4407	7-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4408	8-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4409	9-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4410	10-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4411	11-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4412	12-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4413	13-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4414	14-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4415	15-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4416	16-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4417	17-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4418	18-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4419	19-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4420	20-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4421	21-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4422	22-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4423	23-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4424	24-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4425	25-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4426	26-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4427	27-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4428	28-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4429	29-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4430	30-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4431	31-WAY TO 10-WAY CP7	*Call
2097<2084		6710<4432	32-WAY TO 10-WAY CP7	*Call
2097<2084		6711<4400	0-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4401	1-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4402	2-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4403	3-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4404	4-WAY TO 11-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6711<4405	5-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4406	6-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4407	7-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4408	8-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4409	9-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4410	10-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4411	11-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4412	12-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4413	13-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4414	14-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4415	15-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4416	16-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4417	17-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4418	18-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4419	19-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4420	20-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4421	21-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4422	22-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4423	23-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4424	24-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4425	25-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4426	26-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4427	27-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4428	28-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4429	29-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4430	30-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4431	31-WAY TO 11-WAY CP7	*Call
2097<2084		6711<4432	32-WAY TO 11-WAY CP7	*Call
2097<2084		6712<4400	0-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4401	1-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4402	2-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4403	3-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4404	4-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4405	5-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4406	6-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4407	7-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4408	8-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4409	9-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4410	10-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4411	11-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4412	12-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4413	13-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4414	14-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4415	15-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4416	16-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4417	17-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4418	18-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4419	19-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4420	20-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4421	21-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4422	22-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4423	23-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4424	24-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4425	25-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4426	26-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4427	27-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4428	28-WAY TO 12-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6712<4429	29-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4430	30-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4431	31-WAY TO 12-WAY CP7	*Call
2097<2084		6712<4432	32-WAY TO 12-WAY CP7	*Call
2097<2084		6713<4400	0-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4401	1-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4402	2-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4403	3-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4404	4-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4405	5-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4406	6-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4407	7-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4408	8-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4409	9-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4410	10-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4411	11-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4412	12-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4413	13-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4414	14-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4415	15-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4416	16-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4417	17-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4418	18-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4419	19-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4420	20-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4421	21-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4422	22-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4423	23-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4424	24-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4425	25-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4426	26-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4427	27-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4428	28-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4429	29-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4430	30-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4431	31-WAY TO 13-WAY CP7	*Call
2097<2084		6713<4432	32-WAY TO 13-WAY CP7	*Call
2097<2084		6714<4400	0-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4401	1-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4402	2-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4403	3-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4404	4-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4405	5-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4406	6-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4407	7-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4408	8-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4409	9-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4410	10-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4411	11-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4412	12-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4413	13-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4414	14-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4415	15-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4416	16-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4417	17-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4418	18-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4419	19-WAY TO 14-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6714<4420	20-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4421	21-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4422	22-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4423	23-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4424	24-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4425	25-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4426	26-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4427	27-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4428	28-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4429	29-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4430	30-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4431	31-WAY TO 14-WAY CP7	*Call
2097<2084		6714<4432	32-WAY TO 14-WAY CP7	*Call
2097<2084		6715<4400	0-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4401	1-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4402	2-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4403	3-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4404	4-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4405	5-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4406	6-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4407	7-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4408	8-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4409	9-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4410	10-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4411	11-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4412	12-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4413	13-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4414	14-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4415	15-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4416	16-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4417	17-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4418	18-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4419	19-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4420	20-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4421	21-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4422	22-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4423	23-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4424	24-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4425	25-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4426	26-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4427	27-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4428	28-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4429	29-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4430	30-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4431	31-WAY TO 15-WAY CP7	*Call
2097<2084		6715<4432	32-WAY TO 15-WAY CP7	*Call
2097<2084		6716<4400	0-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4401	1-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4402	2-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4403	3-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4404	4-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4405	5-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4406	6-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4407	7-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4408	8-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4409	9-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4410	10-WAY TO 16-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6716<4411	11-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4412	12-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4413	13-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4414	14-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4415	15-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4416	16-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4417	17-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4418	18-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4419	19-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4420	20-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4421	21-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4422	22-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4423	23-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4424	24-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4425	25-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4426	26-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4427	27-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4428	28-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4429	29-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4430	30-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4431	31-WAY TO 16-WAY CP7	*Call
2097<2084		6716<4432	32-WAY TO 16-WAY CP7	*Call
2097<2084		6717<4400	0-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4401	1-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4402	2-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4403	3-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4404	4-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4405	5-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4406	6-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4407	7-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4408	8-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4409	9-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4410	10-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4411	11-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4412	12-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4413	13-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4414	14-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4415	15-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4416	16-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4417	17-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4418	18-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4419	19-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4420	20-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4421	21-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4422	22-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4423	23-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4424	24-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4425	25-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4426	26-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4427	27-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4428	28-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4429	29-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4430	30-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4431	31-WAY TO 17-WAY CP7	*Call
2097<2084		6717<4432	32-WAY TO 17-WAY CP7	*Call
2097<2084		6718<4400	0-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4401	1-WAY TO 18-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6718<4402	2-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4403	3-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4404	4-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4405	5-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4406	6-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4407	7-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4408	8-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4409	9-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4410	10-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4411	11-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4412	12-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4413	13-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4414	14-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4415	15-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4416	16-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4417	17-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4418	18-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4419	19-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4420	20-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4421	21-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4422	22-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4423	23-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4424	24-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4425	25-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4426	26-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4427	27-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4428	28-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4429	29-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4430	30-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4431	31-WAY TO 18-WAY CP7	*Call
2097<2084		6718<4432	32-WAY TO 18-WAY CP7	*Call
2097<2084		6719<4400	0-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4401	1-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4402	2-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4403	3-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4404	4-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4405	5-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4406	6-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4407	7-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4408	8-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4409	9-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4410	10-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4411	11-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4412	12-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4413	13-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4414	14-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4415	15-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4416	16-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4417	17-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4418	18-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4419	19-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4420	20-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4421	21-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4422	22-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4423	23-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4424	24-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4425	25-WAY TO 19-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6719<4426	26-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4427	27-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4428	28-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4429	29-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4430	30-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4431	31-WAY TO 19-WAY CP7	*Call
2097<2084		6719<4432	32-WAY TO 19-WAY CP7	*Call
2097<2084		6720<4400	0-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4401	1-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4402	2-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4403	3-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4404	4-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4405	5-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4406	6-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4407	7-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4408	8-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4409	9-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4410	10-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4411	11-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4412	12-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4413	13-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4414	14-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4415	15-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4416	16-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4417	17-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4418	18-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4419	19-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4420	20-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4421	21-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4422	22-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4423	23-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4424	24-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4425	25-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4426	26-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4427	27-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4428	28-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4429	29-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4430	30-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4431	31-WAY TO 20-WAY CP7	*Call
2097<2084		6720<4432	32-WAY TO 20-WAY CP7	*Call
2097<2084		6721<4400	0-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4401	1-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4402	2-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4403	3-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4404	4-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4405	5-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4406	6-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4407	7-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4408	8-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4409	9-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4410	10-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4411	11-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4412	12-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4413	13-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4414	14-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4415	15-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4416	16-WAY TO 21-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6721<4417	17-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4418	18-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4419	19-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4420	20-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4421	21-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4422	22-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4423	23-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4424	24-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4425	25-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4426	26-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4427	27-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4428	28-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4429	29-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4430	30-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4431	31-WAY TO 21-WAY CP7	*Call
2097<2084		6721<4432	32-WAY TO 21-WAY CP7	*Call
2097<2084		6722<4400	0-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4401	1-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4402	2-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4403	3-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4404	4-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4405	5-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4406	6-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4407	7-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4408	8-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4409	9-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4410	10-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4411	11-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4412	12-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4413	13-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4414	14-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4415	15-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4416	16-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4417	17-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4418	18-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4419	19-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4420	20-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4421	21-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4422	22-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4423	23-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4424	24-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4425	25-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4426	26-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4427	27-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4428	28-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4429	29-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4430	30-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4431	31-WAY TO 22-WAY CP7	*Call
2097<2084		6722<4432	32-WAY TO 22-WAY CP7	*Call
2097<2084		6723<4400	0-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4401	1-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4402	2-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4403	3-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4404	4-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4405	5-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4406	6-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4407	7-WAY TO 23-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6723<4408	8-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4409	9-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4410	10-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4411	11-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4412	12-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4413	13-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4414	14-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4415	15-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4416	16-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4417	17-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4418	18-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4419	19-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4420	20-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4421	21-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4422	22-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4423	23-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4424	24-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4425	25-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4426	26-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4427	27-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4428	28-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4429	29-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4430	30-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4431	31-WAY TO 23-WAY CP7	*Call
2097<2084		6723<4432	32-WAY TO 23-WAY CP7	*Call
2097<2084		6724<4400	0-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4401	1-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4402	2-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4403	3-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4404	4-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4405	5-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4406	6-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4407	7-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4408	8-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4409	9-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4410	10-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4411	11-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4412	12-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4413	13-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4414	14-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4415	15-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4416	16-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4417	17-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4418	18-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4419	19-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4420	20-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4421	21-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4422	22-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4423	23-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4424	24-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4425	25-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4426	26-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4427	27-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4428	28-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4429	29-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4430	30-WAY TO 24-WAY CP7	*Call
2097<2084		6724<4431	31-WAY TO 24-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6724<4432	32-WAY TO 24-WAY CP7	*Call
2097<2084		6725<4400	0-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4401	1-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4402	2-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4403	3-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4404	4-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4405	5-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4406	6-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4407	7-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4408	8-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4409	9-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4410	10-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4411	11-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4412	12-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4413	13-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4414	14-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4415	15-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4416	16-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4417	17-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4418	18-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4419	19-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4420	20-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4421	21-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4422	22-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4423	23-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4424	24-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4425	25-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4426	26-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4427	27-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4428	28-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4429	29-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4430	30-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4431	31-WAY TO 25-WAY CP7	*Call
2097<2084		6725<4432	32-WAY TO 25-WAY CP7	*Call
2097<2084		6726<4400	0-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4401	1-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4402	2-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4403	3-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4404	4-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4405	5-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4406	6-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4407	7-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4408	8-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4409	9-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4410	10-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4411	11-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4412	12-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4413	13-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4414	14-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4415	15-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4416	16-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4417	17-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4418	18-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4419	19-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4420	20-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4421	21-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4422	22-WAY TO 26-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6726<4423	23-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4424	24-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4425	25-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4426	26-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4427	27-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4428	28-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4429	29-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4430	30-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4431	31-WAY TO 26-WAY CP7	*Call
2097<2084		6726<4432	32-WAY TO 26-WAY CP7	*Call
2097<2084		6727<4400	0-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4401	1-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4402	2-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4403	3-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4404	4-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4405	5-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4406	6-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4407	7-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4408	8-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4409	9-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4410	10-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4411	11-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4412	12-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4413	13-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4414	14-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4415	15-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4416	16-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4417	17-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4418	18-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4419	19-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4420	20-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4421	21-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4422	22-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4423	23-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4424	24-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4425	25-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4426	26-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4427	27-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4428	28-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4429	29-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4430	30-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4431	31-WAY TO 27-WAY CP7	*Call
2097<2084		6727<4432	32-WAY TO 27-WAY CP7	*Call
2097<2084		6728<4400	0-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4401	1-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4402	2-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4403	3-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4404	4-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4405	5-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4406	6-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4407	7-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4408	8-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4409	9-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4410	10-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4411	11-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4412	12-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4413	13-WAY TO 28-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6728<4414	14-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4415	15-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4416	16-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4417	17-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4418	18-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4419	19-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4420	20-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4421	21-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4422	22-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4423	23-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4424	24-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4425	25-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4426	26-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4427	27-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4428	28-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4429	29-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4430	30-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4431	31-WAY TO 28-WAY CP7	*Call
2097<2084		6728<4432	32-WAY TO 28-WAY CP7	*Call
2097<2084		6729<4400	0-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4401	1-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4402	2-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4403	3-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4404	4-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4405	5-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4406	6-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4407	7-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4408	8-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4409	9-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4410	10-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4411	11-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4412	12-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4413	13-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4414	14-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4415	15-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4416	16-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4417	17-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4418	18-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4419	19-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4420	20-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4421	21-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4422	22-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4423	23-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4424	24-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4425	25-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4426	26-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4427	27-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4428	28-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4429	29-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4430	30-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4431	31-WAY TO 29-WAY CP7	*Call
2097<2084		6729<4432	32-WAY TO 29-WAY CP7	*Call
2097<2084		6730<4400	0-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4401	1-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4402	2-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4403	3-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4404	4-WAY TO 30-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6730<4405	5-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4406	6-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4407	7-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4408	8-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4409	9-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4410	10-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4411	11-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4412	12-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4413	13-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4414	14-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4415	15-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4416	16-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4417	17-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4418	18-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4419	19-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4420	20-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4421	21-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4422	22-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4423	23-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4424	24-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4425	25-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4426	26-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4427	27-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4428	28-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4429	29-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4430	30-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4431	31-WAY TO 30-WAY CP7	*Call
2097<2084		6730<4432	32-WAY TO 30-WAY CP7	*Call
2097<2084		6731<4400	0-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4401	1-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4402	2-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4403	3-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4404	4-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4405	5-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4406	6-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4407	7-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4408	8-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4409	9-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4410	10-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4411	11-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4412	12-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4413	13-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4414	14-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4415	15-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4416	16-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4417	17-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4418	18-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4419	19-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4420	20-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4421	21-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4422	22-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4423	23-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4424	24-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4425	25-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4426	26-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4427	27-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4428	28-WAY TO 31-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6731<4429	29-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4430	30-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4431	31-WAY TO 31-WAY CP7	*Call
2097<2084		6731<4432	32-WAY TO 31-WAY CP7	*Call
2097<2084		6732<4400	0-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4401	1-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4402	2-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4403	3-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4404	4-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4405	5-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4406	6-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4407	7-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4408	8-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4409	9-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4410	10-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4411	11-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4412	12-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4413	13-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4414	14-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4415	15-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4416	16-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4417	17-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4418	18-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4419	19-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4420	20-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4421	21-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4422	22-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4423	23-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4424	24-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4425	25-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4426	26-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4427	27-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4428	28-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4429	29-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4430	30-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4431	31-WAY TO 32-WAY CP7	*Call
2097<2084		6732<4432	32-WAY TO 32-WAY CP7	*Call
2097<2084		6733<4400	0-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4401	1-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4402	2-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4403	3-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4404	4-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4405	5-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4406	6-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4407	7-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4408	8-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4409	9-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4410	10-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4411	11-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4412	12-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4413	13-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4414	14-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4415	15-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4416	16-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4417	17-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4418	18-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4419	19-WAY TO 33-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6733<4420	20-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4421	21-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4422	22-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4423	23-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4424	24-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4425	25-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4426	26-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4427	27-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4428	28-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4429	29-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4430	30-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4431	31-WAY TO 33-WAY CP7	*Call
2097<2084		6733<4432	32-WAY TO 33-WAY CP7	*Call
2097<2084		6734<4400	0-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4401	1-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4402	2-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4403	3-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4404	4-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4405	5-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4406	6-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4407	7-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4408	8-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4409	9-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4410	10-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4411	11-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4412	12-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4413	13-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4414	14-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4415	15-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4416	16-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4417	17-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4418	18-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4419	19-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4420	20-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4421	21-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4422	22-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4423	23-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4424	24-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4425	25-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4426	26-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4427	27-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4428	28-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4429	29-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4430	30-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4431	31-WAY TO 34-WAY CP7	*Call
2097<2084		6734<4432	32-WAY TO 34-WAY CP7	*Call
2097<2084		6735<4400	0-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4401	1-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4402	2-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4403	3-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4404	4-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4405	5-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4406	6-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4407	7-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4408	8-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4409	9-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4410	10-WAY TO 35-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6735<4411	11-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4412	12-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4413	13-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4414	14-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4415	15-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4416	16-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4417	17-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4418	18-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4419	19-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4420	20-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4421	21-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4422	22-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4423	23-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4424	24-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4425	25-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4426	26-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4427	27-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4428	28-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4429	29-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4430	30-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4431	31-WAY TO 35-WAY CP7	*Call
2097<2084		6735<4432	32-WAY TO 35-WAY CP7	*Call
2097<2084		6736<4400	0-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4401	1-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4402	2-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4403	3-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4404	4-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4405	5-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4406	6-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4407	7-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4408	8-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4409	9-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4410	10-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4411	11-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4412	12-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4413	13-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4414	14-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4415	15-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4416	16-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4417	17-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4418	18-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4419	19-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4420	20-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4421	21-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4422	22-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4423	23-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4424	24-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4425	25-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4426	26-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4427	27-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4428	28-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4429	29-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4430	30-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4431	31-WAY TO 36-WAY CP7	*Call
2097<2084		6736<4432	32-WAY TO 36-WAY CP7	*Call
2097<2084		6737<4400	0-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4401	1-WAY TO 37-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6737<4402	2-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4403	3-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4404	4-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4405	5-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4406	6-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4407	7-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4408	8-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4409	9-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4410	10-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4411	11-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4412	12-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4413	13-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4414	14-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4415	15-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4416	16-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4417	17-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4418	18-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4419	19-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4420	20-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4421	21-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4422	22-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4423	23-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4424	24-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4425	25-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4426	26-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4427	27-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4428	28-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4429	29-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4430	30-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4431	31-WAY TO 37-WAY CP7	*Call
2097<2084		6737<4432	32-WAY TO 37-WAY CP7	*Call
2097<2084		6738<4400	0-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4401	1-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4402	2-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4403	3-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4404	4-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4405	5-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4406	6-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4407	7-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4408	8-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4409	9-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4410	10-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4411	11-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4412	12-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4413	13-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4414	14-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4415	15-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4416	16-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4417	17-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4418	18-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4419	19-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4420	20-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4421	21-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4422	22-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4423	23-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4424	24-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4425	25-WAY TO 38-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6738<4426	26-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4427	27-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4428	28-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4429	29-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4430	30-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4431	31-WAY TO 38-WAY CP7	*Call
2097<2084		6738<4432	32-WAY TO 38-WAY CP7	*Call
2097<2084		6739<4400	0-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4401	1-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4402	2-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4403	3-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4404	4-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4405	5-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4406	6-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4407	7-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4408	8-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4409	9-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4410	10-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4411	11-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4412	12-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4413	13-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4414	14-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4415	15-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4416	16-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4417	17-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4418	18-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4419	19-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4420	20-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4421	21-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4422	22-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4423	23-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4424	24-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4425	25-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4426	26-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4427	27-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4428	28-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4429	29-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4430	30-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4431	31-WAY TO 39-WAY CP7	*Call
2097<2084		6739<4432	32-WAY TO 39-WAY CP7	*Call
2097<2084		6740<4400	0-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4401	1-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4402	2-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4403	3-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4404	4-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4405	5-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4406	6-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4407	7-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4408	8-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4409	9-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4410	10-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4411	11-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4412	12-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4413	13-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4414	14-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4415	15-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4416	16-WAY TO 40-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6740<4417	17-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4418	18-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4419	19-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4420	20-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4421	21-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4422	22-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4423	23-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4424	24-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4425	25-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4426	26-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4427	27-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4428	28-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4429	29-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4430	30-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4431	31-WAY TO 40-WAY CP7	*Call
2097<2084		6740<4432	32-WAY TO 40-WAY CP7	*Call
2097<2084		6741<4400	0-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4401	1-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4402	2-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4403	3-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4404	4-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4405	5-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4406	6-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4407	7-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4408	8-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4409	9-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4410	10-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4411	11-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4412	12-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4413	13-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4414	14-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4415	15-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4416	16-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4417	17-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4418	18-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4419	19-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4420	20-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4421	21-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4422	22-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4423	23-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4424	24-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4425	25-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4426	26-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4427	27-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4428	28-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4429	29-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4430	30-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4431	31-WAY TO 41-WAY CP7	*Call
2097<2084		6741<4432	32-WAY TO 41-WAY CP7	*Call
2097<2084		6742<4400	0-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4401	1-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4402	2-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4403	3-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4404	4-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4405	5-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4406	6-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4407	7-WAY TO 42-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6742<4408	8-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4409	9-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4410	10-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4411	11-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4412	12-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4413	13-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4414	14-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4415	15-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4416	16-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4417	17-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4418	18-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4419	19-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4420	20-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4421	21-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4422	22-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4423	23-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4424	24-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4425	25-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4426	26-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4427	27-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4428	28-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4429	29-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4430	30-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4431	31-WAY TO 42-WAY CP7	*Call
2097<2084		6742<4432	32-WAY TO 42-WAY CP7	*Call
2097<2084		6743<4400	0-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4401	1-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4402	2-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4403	3-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4404	4-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4405	5-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4406	6-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4407	7-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4408	8-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4409	9-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4410	10-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4411	11-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4412	12-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4413	13-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4414	14-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4415	15-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4416	16-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4417	17-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4418	18-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4419	19-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4420	20-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4421	21-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4422	22-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4423	23-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4424	24-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4425	25-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4426	26-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4427	27-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4428	28-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4429	29-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4430	30-WAY TO 43-WAY CP7	*Call
2097<2084		6743<4431	31-WAY TO 43-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6743<4432	32-WAY TO 43-WAY CP7	*Call
2097<2084		6744<4400	0-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4401	1-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4402	2-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4403	3-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4404	4-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4405	5-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4406	6-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4407	7-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4408	8-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4409	9-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4410	10-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4411	11-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4412	12-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4413	13-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4414	14-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4415	15-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4416	16-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4417	17-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4418	18-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4419	19-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4420	20-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4421	21-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4422	22-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4423	23-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4424	24-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4425	25-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4426	26-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4427	27-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4428	28-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4429	29-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4430	30-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4431	31-WAY TO 44-WAY CP7	*Call
2097<2084		6744<4432	32-WAY TO 44-WAY CP7	*Call
2097<2084		6745<4400	0-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4401	1-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4402	2-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4403	3-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4404	4-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4405	5-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4406	6-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4407	7-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4408	8-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4409	9-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4410	10-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4411	11-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4412	12-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4413	13-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4414	14-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4415	15-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4416	16-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4417	17-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4418	18-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4419	19-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4420	20-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4421	21-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4422	22-WAY TO 45-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6745<4423	23-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4424	24-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4425	25-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4426	26-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4427	27-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4428	28-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4429	29-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4430	30-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4431	31-WAY TO 45-WAY CP7	*Call
2097<2084		6745<4432	32-WAY TO 45-WAY CP7	*Call
2097<2084		6746<4400	0-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4401	1-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4402	2-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4403	3-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4404	4-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4405	5-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4406	6-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4407	7-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4408	8-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4409	9-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4410	10-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4411	11-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4412	12-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4413	13-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4414	14-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4415	15-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4416	16-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4417	17-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4418	18-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4419	19-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4420	20-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4421	21-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4422	22-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4423	23-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4424	24-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4425	25-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4426	26-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4427	27-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4428	28-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4429	29-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4430	30-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4431	31-WAY TO 46-WAY CP7	*Call
2097<2084		6746<4432	32-WAY TO 46-WAY CP7	*Call
2097<2084		6747<4400	0-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4401	1-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4402	2-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4403	3-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4404	4-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4405	5-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4406	6-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4407	7-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4408	8-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4409	9-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4410	10-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4411	11-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4412	12-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4413	13-WAY TO 47-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6747<4414	14-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4415	15-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4416	16-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4417	17-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4418	18-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4419	19-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4420	20-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4421	21-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4422	22-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4423	23-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4424	24-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4425	25-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4426	26-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4427	27-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4428	28-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4429	29-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4430	30-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4431	31-WAY TO 47-WAY CP7	*Call
2097<2084		6747<4432	32-WAY TO 47-WAY CP7	*Call
2097<2084		6748<4400	0-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4401	1-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4402	2-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4403	3-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4404	4-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4405	5-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4406	6-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4407	7-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4408	8-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4409	9-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4410	10-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4411	11-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4412	12-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4413	13-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4414	14-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4415	15-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4416	16-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4417	17-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4418	18-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4419	19-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4420	20-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4421	21-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4422	22-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4423	23-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4424	24-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4425	25-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4426	26-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4427	27-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4428	28-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4429	29-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4430	30-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4431	31-WAY TO 48-WAY CP7	*Call
2097<2084		6748<4432	32-WAY TO 48-WAY CP7	*Call
2097<2084		6749<4400	0-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4401	1-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4402	2-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4403	3-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4404	4-WAY TO 49-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6749<4405	5-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4406	6-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4407	7-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4408	8-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4409	9-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4410	10-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4411	11-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4412	12-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4413	13-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4414	14-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4415	15-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4416	16-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4417	17-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4418	18-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4419	19-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4420	20-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4421	21-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4422	22-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4423	23-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4424	24-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4425	25-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4426	26-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4427	27-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4428	28-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4429	29-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4430	30-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4431	31-WAY TO 49-WAY CP7	*Call
2097<2084		6749<4432	32-WAY TO 49-WAY CP7	*Call
2097<2084		6750<4400	0-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4401	1-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4402	2-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4403	3-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4404	4-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4405	5-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4406	6-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4407	7-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4408	8-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4409	9-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4410	10-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4411	11-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4412	12-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4413	13-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4414	14-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4415	15-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4416	16-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4417	17-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4418	18-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4419	19-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4420	20-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4421	21-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4422	22-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4423	23-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4424	24-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4425	25-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4426	26-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4427	27-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4428	28-WAY TO 50-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6750<4429	29-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4430	30-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4431	31-WAY TO 50-WAY CP7	*Call
2097<2084		6750<4432	32-WAY TO 50-WAY CP7	*Call
2097<2084		6751<4400	0-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4401	1-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4402	2-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4403	3-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4404	4-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4405	5-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4406	6-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4407	7-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4408	8-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4409	9-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4410	10-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4411	11-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4412	12-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4413	13-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4414	14-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4415	15-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4416	16-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4417	17-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4418	18-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4419	19-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4420	20-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4421	21-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4422	22-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4423	23-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4424	24-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4425	25-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4426	26-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4427	27-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4428	28-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4429	29-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4430	30-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4431	31-WAY TO 51-WAY CP7	*Call
2097<2084		6751<4432	32-WAY TO 51-WAY CP7	*Call
2097<2084		6752<4400	0-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4401	1-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4402	2-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4403	3-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4404	4-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4405	5-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4406	6-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4407	7-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4408	8-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4409	9-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4410	10-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4411	11-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4412	12-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4413	13-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4414	14-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4415	15-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4416	16-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4417	17-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4418	18-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4419	19-WAY TO 52-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6752<4420	20-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4421	21-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4422	22-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4423	23-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4424	24-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4425	25-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4426	26-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4427	27-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4428	28-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4429	29-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4430	30-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4431	31-WAY TO 52-WAY CP7	*Call
2097<2084		6752<4432	32-WAY TO 52-WAY CP7	*Call
2097<2084		6753<4400	0-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4401	1-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4402	2-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4403	3-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4404	4-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4405	5-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4406	6-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4407	7-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4408	8-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4409	9-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4410	10-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4411	11-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4412	12-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4413	13-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4414	14-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4415	15-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4416	16-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4417	17-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4418	18-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4419	19-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4420	20-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4421	21-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4422	22-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4423	23-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4424	24-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4425	25-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4426	26-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4427	27-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4428	28-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4429	29-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4430	30-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4431	31-WAY TO 53-WAY CP7	*Call
2097<2084		6753<4432	32-WAY TO 53-WAY CP7	*Call
2097<2084		6754<4400	0-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4401	1-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4402	2-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4403	3-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4404	4-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4405	5-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4406	6-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4407	7-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4408	8-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4409	9-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4410	10-WAY TO 54-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6754<4411	11-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4412	12-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4413	13-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4414	14-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4415	15-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4416	16-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4417	17-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4418	18-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4419	19-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4420	20-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4421	21-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4422	22-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4423	23-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4424	24-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4425	25-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4426	26-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4427	27-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4428	28-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4429	29-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4430	30-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4431	31-WAY TO 54-WAY CP7	*Call
2097<2084		6754<4432	32-WAY TO 54-WAY CP7	*Call
2097<2084		6755<4400	0-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4401	1-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4402	2-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4403	3-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4404	4-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4405	5-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4406	6-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4407	7-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4408	8-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4409	9-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4410	10-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4411	11-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4412	12-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4413	13-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4414	14-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4415	15-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4416	16-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4417	17-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4418	18-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4419	19-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4420	20-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4421	21-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4422	22-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4423	23-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4424	24-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4425	25-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4426	26-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4427	27-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4428	28-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4429	29-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4430	30-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4431	31-WAY TO 55-WAY CP7	*Call
2097<2084		6755<4432	32-WAY TO 55-WAY CP7	*Call
2097<2084		6756<4400	0-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4401	1-WAY TO 56-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6756<4402	2-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4403	3-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4404	4-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4405	5-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4406	6-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4407	7-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4408	8-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4409	9-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4410	10-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4411	11-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4412	12-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4413	13-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4414	14-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4415	15-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4416	16-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4417	17-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4418	18-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4419	19-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4420	20-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4421	21-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4422	22-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4423	23-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4424	24-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4425	25-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4426	26-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4427	27-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4428	28-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4429	29-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4430	30-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4431	31-WAY TO 56-WAY CP7	*Call
2097<2084		6756<4432	32-WAY TO 56-WAY CP7	*Call
2097<2084		6757<4400	0-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4401	1-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4402	2-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4403	3-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4404	4-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4405	5-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4406	6-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4407	7-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4408	8-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4409	9-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4410	10-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4411	11-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4412	12-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4413	13-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4414	14-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4415	15-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4416	16-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4417	17-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4418	18-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4419	19-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4420	20-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4421	21-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4422	22-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4423	23-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4424	24-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4425	25-WAY TO 57-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6757<4426	26-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4427	27-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4428	28-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4429	29-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4430	30-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4431	31-WAY TO 57-WAY CP7	*Call
2097<2084		6757<4432	32-WAY TO 57-WAY CP7	*Call
2097<2084		6758<4400	0-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4401	1-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4402	2-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4403	3-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4404	4-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4405	5-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4406	6-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4407	7-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4408	8-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4409	9-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4410	10-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4411	11-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4412	12-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4413	13-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4414	14-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4415	15-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4416	16-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4417	17-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4418	18-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4419	19-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4420	20-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4421	21-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4422	22-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4423	23-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4424	24-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4425	25-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4426	26-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4427	27-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4428	28-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4429	29-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4430	30-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4431	31-WAY TO 58-WAY CP7	*Call
2097<2084		6758<4432	32-WAY TO 58-WAY CP7	*Call
2097<2084		6759<4400	0-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4401	1-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4402	2-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4403	3-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4404	4-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4405	5-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4406	6-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4407	7-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4408	8-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4409	9-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4410	10-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4411	11-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4412	12-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4413	13-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4414	14-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4415	15-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4416	16-WAY TO 59-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6759<4417	17-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4418	18-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4419	19-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4420	20-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4421	21-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4422	22-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4423	23-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4424	24-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4425	25-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4426	26-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4427	27-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4428	28-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4429	29-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4430	30-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4431	31-WAY TO 59-WAY CP7	*Call
2097<2084		6759<4432	32-WAY TO 59-WAY CP7	*Call
2097<2084		6760<4400	0-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4401	1-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4402	2-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4403	3-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4404	4-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4405	5-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4406	6-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4407	7-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4408	8-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4409	9-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4410	10-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4411	11-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4412	12-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4413	13-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4414	14-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4415	15-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4416	16-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4417	17-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4418	18-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4419	19-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4420	20-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4421	21-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4422	22-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4423	23-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4424	24-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4425	25-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4426	26-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4427	27-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4428	28-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4429	29-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4430	30-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4431	31-WAY TO 60-WAY CP7	*Call
2097<2084		6760<4432	32-WAY TO 60-WAY CP7	*Call
2097<2084		6761<4400	0-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4401	1-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4402	2-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4403	3-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4404	4-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4405	5-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4406	6-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4407	7-WAY TO 61-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6761<4408	8-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4409	9-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4410	10-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4411	11-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4412	12-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4413	13-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4414	14-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4415	15-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4416	16-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4417	17-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4418	18-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4419	19-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4420	20-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4421	21-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4422	22-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4423	23-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4424	24-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4425	25-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4426	26-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4427	27-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4428	28-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4429	29-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4430	30-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4431	31-WAY TO 61-WAY CP7	*Call
2097<2084		6761<4432	32-WAY TO 61-WAY CP7	*Call
2097<2084		6762<4400	0-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4401	1-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4402	2-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4403	3-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4404	4-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4405	5-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4406	6-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4407	7-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4408	8-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4409	9-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4410	10-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4411	11-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4412	12-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4413	13-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4414	14-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4415	15-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4416	16-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4417	17-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4418	18-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4419	19-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4420	20-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4421	21-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4422	22-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4423	23-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4424	24-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4425	25-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4426	26-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4427	27-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4428	28-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4429	29-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4430	30-WAY TO 62-WAY CP7	*Call
2097<2084		6762<4431	31-WAY TO 62-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6762<4432	32-WAY TO 62-WAY CP7	*Call
2097<2084		6763<4400	0-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4401	1-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4402	2-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4403	3-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4404	4-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4405	5-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4406	6-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4407	7-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4408	8-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4409	9-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4410	10-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4411	11-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4412	12-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4413	13-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4414	14-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4415	15-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4416	16-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4417	17-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4418	18-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4419	19-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4420	20-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4421	21-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4422	22-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4423	23-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4424	24-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4425	25-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4426	26-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4427	27-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4428	28-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4429	29-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4430	30-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4431	31-WAY TO 63-WAY CP7	*Call
2097<2084		6763<4432	32-WAY TO 63-WAY CP7	*Call
2097<2084		6764<4400	0-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4401	1-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4402	2-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4403	3-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4404	4-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4405	5-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4406	6-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4407	7-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4408	8-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4409	9-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4410	10-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4411	11-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4412	12-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4413	13-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4414	14-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4415	15-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4416	16-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4417	17-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4418	18-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4419	19-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4420	20-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4421	21-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4422	22-WAY TO 64-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2084		6764<4423	23-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4424	24-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4425	25-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4426	26-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4427	27-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4428	28-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4429	29-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4430	30-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4431	31-WAY TO 64-WAY CP7	*Call
2097<2084		6764<4432	32-WAY TO 64-WAY CP7	*Call
2097<2084		6807<0516	IFL TO CP4	*Call
2097<2084		6807<0517	UIFL TO CP4	*Call
2097<2084		6807<0518	ICF TO CP4	*Call
2097<2084		6807<0520	ZAAP TO CP4	*Call
2097<2084		6808<0516	IFL TO CP5	*Call
2097<2084		6808<0517	UIFL TO CP5	*Call
2097<2084		6808<0518	ICF TO CP5	*Call
2097<2084		6808<0520	ZAAP TO CP5	*Call
2097<2084		6809<0516	IFL TO CP6	*Call
2097<2084		6809<0517	UIFL TO CP6	*Call
2097<2084		6809<0518	ICF TO CP6	*Call
2097<2084		6809<0520	ZAAP TO CP6	*Call
2097<2084		6810<0516	IFL TO CP7	*Call
2097<2084		6810<0517	UIFL TO CP7	*Call
2097<2084		6810<0518	ICF TO CP7	*Call
2097<2084		6810<0520	ZAAP TO CP7	*Call
2097<2084		6811<0518	ICF TO IFL	*Call
2097<2084		6811<0520	ZAAP TO IFL	*Call
2097<2084		6812<0516	IFL TO ICF	*Call
2097<2084		6812<0517	UIFL TO ICF	*Call
2097<2084		6812<0520	ZAAP TO ICF	*Call
2097<2084		6814<0516	IFL TO ZAAP	*Call
2097<2084		6814<0517	UIFL TO ZAAP	*Call
2097<2084		6814<0518	ICF TO ZAAP	*Call
2097<2084		6815<0516	IFL TO ZIIP	*Call
2097<2084		6815<0517	UIFL TO ZIIP	*Call
2097<2084		6815<0518	ICF TO ZIIP	*Call
2097<2084		6815<0520	ZAAP TO ZIIP	*Call
2097<2094		0079<0080	HMC TR/EN TO HMC DUAL EN	*Call
2097<2094		0081<0082	HMC TR/EN TO HMC DUAL EN	*Call
2097<2094		0084<0085	HMC TR/EN TO HMC DUAL EN	*Call
2097<2094		1117<1110	S08 TO E12	*Call
2097<2094		1117<1111	S18 TO E12	*Call
2097<2094		1117<1112	S28 TO E12	*Call
2097<2094		1117<1113	S38 TO E12	*Call
2097<2094		1117<1114	S54 TO E12	*Call
2097<2094		1118<1110	S08 TO E26	*Call
2097<2094		1118<1111	S18 TO E26	*Call
2097<2094		1118<1112	S28 TO E26	*Call
2097<2094		1118<1113	S38 TO E26	*Call
2097<2094		1118<1114	S54 TO E26	*Call
2097<2094		1119<1110	S08 TO E40	*Call
2097<2094		1119<1111	S18 TO E40	*Call
2097<2094		1119<1112	S28 TO E40	*Call
2097<2094		1119<1113	S38 TO E40	*Call
2097<2094		1119<1114	S54 TO E40	*Call
2097<2094		1120<1110	S08 TO E56	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		1120<1111	S18 TO E56	*Call
2097<2094		1120<1112	S28 TO E56	*Call
2097<2094		1120<1113	S38 TO E56	*Call
2097<2094		1120<1114	S54 TO E56	*Call
2097<2094		1121<1110	S08 TO E64	*Call
2097<2094		1121<1111	S18 TO E64	*Call
2097<2094		1121<1112	S28 TO E64	*Call
2097<2094		1121<1113	S38 TO E64	*Call
2097<2094		1121<1114	S54 TO E64	*Call
2097<2094		2202<2701	16 GB STD TO 32 GB STD	*Call
2097<2094		2203<2701	16 GB STD TO 48 GB STD	*Call
2097<2094		2203<2702	32 GB STD TO 48 GB STD	*Call
2097<2094		2204<2701	16 GB STD TO 64 GB STD	*Call
2097<2094		2204<2702	32 GB STD TO 64 GB STD	*Call
2097<2094		2204<2703	48 GB STD TO 64 GB STD	*Call
2097<2094		2205<2701	16 GB STD TO 80 GB STD	*Call
2097<2094		2205<2702	32 GB STD TO 80 GB STD	*Call
2097<2094		2205<2703	48 GB STD TO 80 GB STD	*Call
2097<2094		2205<2704	64 GB STD TO 80 GB STD	*Call
2097<2094		2206<2701	16 GB STD TO 96 GB STD	*Call
2097<2094		2206<2702	32 GB STD TO 96 GB STD	*Call
2097<2094		2206<2703	48 GB STD TO 96 GB STD	*Call
2097<2094		2206<2704	64 GB STD TO 96 GB STD	*Call
2097<2094		2206<2705	80 GB STD TO 96 GB STD	*Call
2097<2094		2207<2701	16 GB STD TO 112 GB STD	*Call
2097<2094		2207<2702	32 GB STD TO 112 GB STD	*Call
2097<2094		2207<2703	48 GB STD TO 112 GB STD	*Call
2097<2094		2207<2704	64 GB STD TO 112 GB STD	*Call
2097<2094		2207<2705	80 GB STD TO 112 GB STD	*Call
2097<2094		2207<2706	96 GB STD TO 112 GB STD	*Call
2097<2094		2208<2701	16 GB STD TO 128 GB STD	*Call
2097<2094		2208<2702	32 GB STD TO 128 GB STD	*Call
2097<2094		2208<2703	48 GB STD TO 128 GB STD	*Call
2097<2094		2208<2704	64 GB STD TO 128 GB STD	*Call
2097<2094		2208<2705	80 GB STD TO 128 GB STD	*Call
2097<2094		2208<2706	96 GB STD TO 128 GB STD	*Call
2097<2094		2208<2707	112 GB STD TO 128 GB STD	*Call
2097<2094		2209<2701	16 GB STD TO 144 GB STD	*Call
2097<2094		2209<2702	32 GB STD TO 144 GB STD	*Call
2097<2094		2209<2703	48 GB STD TO 144 GB STD	*Call
2097<2094		2209<2704	64 GB STD TO 144 GB STD	*Call
2097<2094		2209<2705	80 GB STD TO 144 GB STD	*Call
2097<2094		2209<2706	96 GB STD TO 144 GB STD	*Call
2097<2094		2209<2707	112 GB STD TO 144 GB STD	*Call
2097<2094		2209<2708	128 GB STD TO 144 GB STD	*Call
2097<2094		2211<2701	16 GB STD TO 176 GB STD	*Call
2097<2094		2211<2702	32 GB STD TO 176 GB STD	*Call
2097<2094		2211<2703	48 GB STD TO 176 GB STD	*Call
2097<2094		2211<2704	64 GB STD TO 176 GB STD	*Call
2097<2094		2211<2705	80 GB STD TO 176 GB STD	*Call
2097<2094		2211<2706	96 GB STD TO 176 GB STD	*Call
2097<2094		2211<2707	112 GB STD TO 176 GB STD	*Call
2097<2094		2211<2708	128 GB STD TO 176 GB STD	*Call
2097<2094		2211<2709	144 GB STD TO 176 GB STD	*Call
2097<2094		2211<2710	160 GB STD TO 176 GB STD	*Call
2097<2094		2212<2701	16 GB STD TO 192 GB STD	*Call
2097<2094		2212<2702	32 GB STD TO 192 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2216<2710	160 GB STD TO 256 GB STD	*Call
2097<2094		2216<2711	176 GB STD TO 256 GB STD	*Call
2097<2094		2216<2712	192 GB STD TO 256 GB STD	*Call
2097<2094		2216<2713	208 GB STD TO 256 GB STD	*Call
2097<2094		2216<2714	224 GB STD TO 256 GB STD	*Call
2097<2094		2216<2715	240 GB STD TO 256 GB STD	*Call
2097<2094		2217<2701	16 GB STD TO 288 GB STD	*Call
2097<2094		2217<2702	32 GB STD TO 288 GB STD	*Call
2097<2094		2217<2703	48 GB STD TO 288 GB STD	*Call
2097<2094		2217<2704	64 GB STD TO 288 GB STD	*Call
2097<2094		2217<2705	80 GB STD TO 288 GB STD	*Call
2097<2094		2217<2706	96 GB STD TO 288 GB STD	*Call
2097<2094		2217<2707	112 GB STD TO 288 GB STD	*Call
2097<2094		2217<2708	128 GB STD TO 288 GB STD	*Call
2097<2094		2217<2709	144 GB STD TO 288 GB STD	*Call
2097<2094		2217<2710	160 GB STD TO 288 GB STD	*Call
2097<2094		2217<2711	176 GB STD TO 288 GB STD	*Call
2097<2094		2217<2712	192 GB STD TO 288 GB STD	*Call
2097<2094		2217<2713	208 GB STD TO 288 GB STD	*Call
2097<2094		2217<2714	224 GB STD TO 288 GB STD	*Call
2097<2094		2217<2715	240 GB STD TO 288 GB STD	*Call
2097<2094		2217<2716	256 GB STD TO 288 GB STD	*Call
2097<2094		2217<2717	272 GB STD TO 288 GB STD	*Call
2097<2094		2218<2701	16 GB STD TO 320 GB STD	*Call
2097<2094		2218<2702	32 GB STD TO 320 GB STD	*Call
2097<2094		2218<2703	48 GB STD TO 320 GB STD	*Call
2097<2094		2218<2704	64 GB STD TO 320 GB STD	*Call
2097<2094		2218<2705	80 GB STD TO 320 GB STD	*Call
2097<2094		2218<2706	96 GB STD TO 320 GB STD	*Call
2097<2094		2218<2707	112 GB STD TO 320 GB STD	*Call
2097<2094		2218<2708	128 GB STD TO 320 GB STD	*Call
2097<2094		2218<2709	144 GB STD TO 320 GB STD	*Call
2097<2094		2218<2710	160 GB STD TO 320 GB STD	*Call
2097<2094		2218<2711	176 GB STD TO 320 GB STD	*Call
2097<2094		2218<2712	192 GB STD TO 320 GB STD	*Call
2097<2094		2218<2713	208 GB STD TO 320 GB STD	*Call
2097<2094		2218<2714	224 GB STD TO 320 GB STD	*Call
2097<2094		2218<2715	240 GB STD TO 320 GB STD	*Call
2097<2094		2218<2716	256 GB STD TO 320 GB STD	*Call
2097<2094		2218<2717	272 GB STD TO 320 GB STD	*Call
2097<2094		2218<2718	288 GB STD TO 320 GB STD	*Call
2097<2094		2218<2719	304 GB STD TO 320 GB STD	*Call
2097<2094		2219<2701	16 GB STD TO 352 GB STD	*Call
2097<2094		2219<2702	32 GB STD TO 352 GB STD	*Call
2097<2094		2219<2703	48 GB STD TO 352 GB STD	*Call
2097<2094		2219<2704	64 GB STD TO 352 GB STD	*Call
2097<2094		2219<2705	80 GB STD TO 352 GB STD	*Call
2097<2094		2219<2706	96 GB STD TO 352 GB STD	*Call
2097<2094		2219<2707	112 GB STD TO 352 GB STD	*Call
2097<2094		2219<2708	128 GB STD TO 352 GB STD	*Call
2097<2094		2219<2709	144 GB STD TO 352 GB STD	*Call
2097<2094		2219<2710	160 GB STD TO 352 GB STD	*Call
2097<2094		2219<2711	176 GB STD TO 352 GB STD	*Call
2097<2094		2219<2712	192 GB STD TO 352 GB STD	*Call
2097<2094		2219<2713	208 GB STD TO 352 GB STD	*Call
2097<2094		2219<2714	224 GB STD TO 352 GB STD	*Call
2097<2094		2219<2715	240 GB STD TO 352 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2219<2716	256 GB STD TO 352 GB STD	*Call
2097<2094		2219<2717	272 GB STD TO 352 GB STD	*Call
2097<2094		2219<2718	288 GB STD TO 352 GB STD	*Call
2097<2094		2219<2719	304 GB STD TO 352 GB STD	*Call
2097<2094		2219<2720	320 GB STD TO 352 GB STD	*Call
2097<2094		2219<2721	336 GB STD TO 352 GB STD	*Call
2097<2094		2220<2701	16 GB STD TO 384 GB STD	*Call
2097<2094		2220<2702	32 GB STD TO 384 GB STD	*Call
2097<2094		2220<2703	48 GB STD TO 384 GB STD	*Call
2097<2094		2220<2704	64 GB STD TO 384 GB STD	*Call
2097<2094		2220<2705	80 GB STD TO 384 GB STD	*Call
2097<2094		2220<2706	96 GB STD TO 384 GB STD	*Call
2097<2094		2220<2707	112 GB STD TO 384 GB STD	*Call
2097<2094		2220<2708	128 GB STD TO 384 GB STD	*Call
2097<2094		2220<2709	144 GB STD TO 384 GB STD	*Call
2097<2094		2220<2710	160 GB STD TO 384 GB STD	*Call
2097<2094		2220<2711	176 GB STD TO 384 GB STD	*Call
2097<2094		2220<2712	192 GB STD TO 384 GB STD	*Call
2097<2094		2220<2713	208 GB STD TO 384 GB STD	*Call
2097<2094		2220<2714	224 GB STD TO 384 GB STD	*Call
2097<2094		2220<2715	240 GB STD TO 384 GB STD	*Call
2097<2094		2220<2716	256 GB STD TO 384 GB STD	*Call
2097<2094		2220<2717	272 GB STD TO 384 GB STD	*Call
2097<2094		2220<2718	288 GB STD TO 384 GB STD	*Call
2097<2094		2220<2719	304 GB STD TO 384 GB STD	*Call
2097<2094		2220<2720	320 GB STD TO 384 GB STD	*Call
2097<2094		2220<2721	336 GB STD TO 384 GB STD	*Call
2097<2094		2220<2722	352 GB STD TO 384 GB STD	*Call
2097<2094		2220<2723	368 GB STD TO 384 GB STD	*Call
2097<2094		2221<2701	16 GB STD TO 416 GB STD	*Call
2097<2094		2221<2702	32 GB STD TO 416 GB STD	*Call
2097<2094		2221<2703	48 GB STD TO 416 GB STD	*Call
2097<2094		2221<2704	64 GB STD TO 416 GB STD	*Call
2097<2094		2221<2705	80 GB STD TO 416 GB STD	*Call
2097<2094		2221<2706	96 GB STD TO 416 GB STD	*Call
2097<2094		2221<2707	112 GB STD TO 416 GB STD	*Call
2097<2094		2221<2708	128 GB STD TO 416 GB STD	*Call
2097<2094		2221<2709	144 GB STD TO 416 GB STD	*Call
2097<2094		2221<2710	160 GB STD TO 416 GB STD	*Call
2097<2094		2221<2711	176 GB STD TO 416 GB STD	*Call
2097<2094		2221<2712	192 GB STD TO 416 GB STD	*Call
2097<2094		2221<2713	208 GB STD TO 416 GB STD	*Call
2097<2094		2221<2714	224 GB STD TO 416 GB STD	*Call
2097<2094		2221<2715	240 GB STD TO 416 GB STD	*Call
2097<2094		2221<2716	256 GB STD TO 416 GB STD	*Call
2097<2094		2221<2717	272 GB STD TO 416 GB STD	*Call
2097<2094		2221<2718	288 GB STD TO 416 GB STD	*Call
2097<2094		2221<2719	304 GB STD TO 416 GB STD	*Call
2097<2094		2221<2720	320 GB STD TO 416 GB STD	*Call
2097<2094		2221<2721	336 GB STD TO 416 GB STD	*Call
2097<2094		2221<2722	352 GB STD TO 416 GB STD	*Call
2097<2094		2221<2723	368 GB STD TO 416 GB STD	*Call
2097<2094		2221<2724	384 GB STD TO 416 GB STD	*Call
2097<2094		2221<2725	400 GB STD TO 416 GB STD	*Call
2097<2094		2222<2701	16 GB STD TO 448 GB STD	*Call
2097<2094		2222<2702	32 GB STD TO 448 GB STD	*Call
2097<2094		2222<2703	48 GB STD TO 448 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2222<2704	64 GB STD TO 448 GB STD	*Call
2097<2094		2222<2705	80 GB STD TO 448 GB STD	*Call
2097<2094		2222<2706	96 GB STD TO 448 GB STD	*Call
2097<2094		2222<2707	112 GB STD TO 448 GB STD	*Call
2097<2094		2222<2708	128 GB STD TO 448 GB STD	*Call
2097<2094		2222<2709	144 GB STD TO 448 GB STD	*Call
2097<2094		2222<2710	160 GB STD TO 448 GB STD	*Call
2097<2094		2222<2711	176 GB STD TO 448 GB STD	*Call
2097<2094		2222<2712	192 GB STD TO 448 GB STD	*Call
2097<2094		2222<2713	208 GB STD TO 448 GB STD	*Call
2097<2094		2222<2714	224 GB STD TO 448 GB STD	*Call
2097<2094		2222<2715	240 GB STD TO 448 GB STD	*Call
2097<2094		2222<2716	256 GB STD TO 448 GB STD	*Call
2097<2094		2222<2717	272 GB STD TO 448 GB STD	*Call
2097<2094		2222<2718	288 GB STD TO 448 GB STD	*Call
2097<2094		2222<2719	304 GB STD TO 448 GB STD	*Call
2097<2094		2222<2720	320 GB STD TO 448 GB STD	*Call
2097<2094		2222<2721	336 GB STD TO 448 GB STD	*Call
2097<2094		2222<2722	352 GB STD TO 448 GB STD	*Call
2097<2094		2222<2723	368 GB STD TO 448 GB STD	*Call
2097<2094		2222<2724	384 GB STD TO 448 GB STD	*Call
2097<2094		2222<2725	400 GB STD TO 448 GB STD	*Call
2097<2094		2222<2726	416 GB STD TO 448 GB STD	*Call
2097<2094		2222<2727	432 GB STD TO 448 GB STD	*Call
2097<2094		2223<2701	16 GB STD TO 480 GB STD	*Call
2097<2094		2223<2702	32 GB STD TO 480 GB STD	*Call
2097<2094		2223<2703	48 GB STD TO 480 GB STD	*Call
2097<2094		2223<2704	64 GB STD TO 480 GB STD	*Call
2097<2094		2223<2705	80 GB STD TO 480 GB STD	*Call
2097<2094		2223<2706	96 GB STD TO 480 GB STD	*Call
2097<2094		2223<2707	112 GB STD TO 480 GB STD	*Call
2097<2094		2223<2708	128 GB STD TO 480 GB STD	*Call
2097<2094		2223<2709	144 GB STD TO 480 GB STD	*Call
2097<2094		2223<2710	160 GB STD TO 480 GB STD	*Call
2097<2094		2223<2711	176 GB STD TO 480 GB STD	*Call
2097<2094		2223<2712	192 GB STD TO 480 GB STD	*Call
2097<2094		2223<2713	208 GB STD TO 480 GB STD	*Call
2097<2094		2223<2714	224 GB STD TO 480 GB STD	*Call
2097<2094		2223<2715	240 GB STD TO 480 GB STD	*Call
2097<2094		2223<2716	256 GB STD TO 480 GB STD	*Call
2097<2094		2223<2717	272 GB STD TO 480 GB STD	*Call
2097<2094		2223<2718	288 GB STD TO 480 GB STD	*Call
2097<2094		2223<2719	304 GB STD TO 480 GB STD	*Call
2097<2094		2223<2720	320 GB STD TO 480 GB STD	*Call
2097<2094		2223<2721	336 GB STD TO 480 GB STD	*Call
2097<2094		2223<2722	352 GB STD TO 480 GB STD	*Call
2097<2094		2223<2723	368 GB STD TO 480 GB STD	*Call
2097<2094		2223<2724	384 GB STD TO 480 GB STD	*Call
2097<2094		2223<2725	400 GB STD TO 480 GB STD	*Call
2097<2094		2223<2726	416 GB STD TO 480 GB STD	*Call
2097<2094		2223<2727	432 GB STD TO 480 GB STD	*Call
2097<2094		2223<2728	448 GB STD TO 480 GB STD	*Call
2097<2094		2223<2729	464 GB STD TO 480 GB STD	*Call
2097<2094		2224<2701	16 GB STD TO 512 GB STD	*Call
2097<2094		2224<2702	32 GB STD TO 512 GB STD	*Call
2097<2094		2224<2703	48 GB STD TO 512 GB STD	*Call
2097<2094		2224<2704	64 GB STD TO 512 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2224<2705	80 GB STD TO 512 GB STD	*Call
2097<2094		2224<2706	96 GB STD TO 512 GB STD	*Call
2097<2094		2224<2707	112 GB STD TO 512 GB STD	*Call
2097<2094		2224<2708	128 GB STD TO 512 GB STD	*Call
2097<2094		2224<2709	144 GB STD TO 512 GB STD	*Call
2097<2094		2224<2710	160 GB STD TO 512 GB STD	*Call
2097<2094		2224<2711	176 GB STD TO 512 GB STD	*Call
2097<2094		2224<2712	192 GB STD TO 512 GB STD	*Call
2097<2094		2224<2713	208 GB STD TO 512 GB STD	*Call
2097<2094		2224<2714	224 GB STD TO 512 GB STD	*Call
2097<2094		2224<2715	240 GB STD TO 512 GB STD	*Call
2097<2094		2224<2716	256 GB STD TO 512 GB STD	*Call
2097<2094		2224<2717	272 GB STD TO 512 GB STD	*Call
2097<2094		2224<2718	288 GB STD TO 512 GB STD	*Call
2097<2094		2224<2719	304 GB STD TO 512 GB STD	*Call
2097<2094		2224<2720	320 GB STD TO 512 GB STD	*Call
2097<2094		2224<2721	336 GB STD TO 512 GB STD	*Call
2097<2094		2224<2722	352 GB STD TO 512 GB STD	*Call
2097<2094		2224<2723	368 GB STD TO 512 GB STD	*Call
2097<2094		2224<2724	384 GB STD TO 512 GB STD	*Call
2097<2094		2224<2725	400 GB STD TO 512 GB STD	*Call
2097<2094		2224<2726	416 GB STD TO 512 GB STD	*Call
2097<2094		2224<2727	432 GB STD TO 512 GB STD	*Call
2097<2094		2224<2728	448 GB STD TO 512 GB STD	*Call
2097<2094		2224<2729	464 GB STD TO 512 GB STD	*Call
2097<2094		2224<2730	480 GB STD TO 512 GB STD	*Call
2097<2094		2224<2731	496 GB STD TO 512 GB STD	*Call
2097<2094		2225<2701	16 GB STD TO 560 GB STD	*Call
2097<2094		2225<2702	32 GB STD TO 560 GB STD	*Call
2097<2094		2225<2703	48 GB STD TO 560 GB STD	*Call
2097<2094		2225<2704	64 GB STD TO 560 GB STD	*Call
2097<2094		2225<2705	80 GB STD TO 560 GB STD	*Call
2097<2094		2225<2706	96 GB STD TO 560 GB STD	*Call
2097<2094		2225<2707	112 GB STD TO 560 GB STD	*Call
2097<2094		2225<2708	128 GB STD TO 560 GB STD	*Call
2097<2094		2225<2709	144 GB STD TO 560 GB STD	*Call
2097<2094		2225<2710	160 GB STD TO 560 GB STD	*Call
2097<2094		2225<2711	176 GB STD TO 560 GB STD	*Call
2097<2094		2225<2712	192 GB STD TO 560 GB STD	*Call
2097<2094		2225<2713	208 GB STD TO 560 GB STD	*Call
2097<2094		2225<2714	224 GB STD TO 560 GB STD	*Call
2097<2094		2225<2715	240 GB STD TO 560 GB STD	*Call
2097<2094		2225<2716	256 GB STD TO 560 GB STD	*Call
2097<2094		2225<2717	272 GB STD TO 560 GB STD	*Call
2097<2094		2225<2718	288 GB STD TO 560 GB STD	*Call
2097<2094		2225<2719	304 GB STD TO 560 GB STD	*Call
2097<2094		2225<2720	320 GB STD TO 560 GB STD	*Call
2097<2094		2225<2721	336 GB STD TO 560 GB STD	*Call
2097<2094		2225<2722	352 GB STD TO 560 GB STD	*Call
2097<2094		2225<2723	368 GB STD TO 560 GB STD	*Call
2097<2094		2225<2724	384 GB STD TO 560 GB STD	*Call
2097<2094		2225<2725	400 GB STD TO 560 GB STD	*Call
2097<2094		2225<2726	416 GB STD TO 560 GB STD	*Call
2097<2094		2225<2727	432 GB STD TO 560 GB STD	*Call
2097<2094		2225<2728	448 GB STD TO 560 GB STD	*Call
2097<2094		2225<2729	464 GB STD TO 560 GB STD	*Call
2097<2094		2225<2730	480 GB STD TO 560 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2225<2731	496 GB STD TO 560 GB STD	*Call
2097<2094		2225<2732	512 GB STD TO 560 GB STD	*Call
2097<2094		2226<2701	16 GB STD TO 608 GB STD	*Call
2097<2094		2226<2702	32 GB STD TO 608 GB STD	*Call
2097<2094		2226<2703	48 GB STD TO 608 GB STD	*Call
2097<2094		2226<2704	64 GB STD TO 608 GB STD	*Call
2097<2094		2226<2705	80 GB STD TO 608 GB STD	*Call
2097<2094		2226<2706	96 GB STD TO 608 GB STD	*Call
2097<2094		2226<2707	112 GB STD TO 608 GB STD	*Call
2097<2094		2226<2708	128 GB STD TO 608 GB STD	*Call
2097<2094		2226<2709	144 GB STD TO 608 GB STD	*Call
2097<2094		2226<2710	160 GB STD TO 608 GB STD	*Call
2097<2094		2226<2711	176 GB STD TO 608 GB STD	*Call
2097<2094		2226<2712	192 GB STD TO 608 GB STD	*Call
2097<2094		2226<2713	208 GB STD TO 608 GB STD	*Call
2097<2094		2226<2714	224 GB STD TO 608 GB STD	*Call
2097<2094		2226<2715	240 GB STD TO 608 GB STD	*Call
2097<2094		2226<2716	256 GB STD TO 608 GB STD	*Call
2097<2094		2226<2717	272 GB STD TO 608 GB STD	*Call
2097<2094		2226<2718	288 GB STD TO 608 GB STD	*Call
2097<2094		2226<2719	304 GB STD TO 608 GB STD	*Call
2097<2094		2226<2720	320 GB STD TO 608 GB STD	*Call
2097<2094		2226<2721	336 GB STD TO 608 GB STD	*Call
2097<2094		2226<2722	352 GB STD TO 608 GB STD	*Call
2097<2094		2226<2723	368 GB STD TO 608 GB STD	*Call
2097<2094		2226<2724	384 GB STD TO 608 GB STD	*Call
2097<2094		2226<2725	400 GB STD TO 608 GB STD	*Call
2097<2094		2226<2726	416 GB STD TO 608 GB STD	*Call
2097<2094		2226<2727	432 GB STD TO 608 GB STD	*Call
2097<2094		2226<2728	448 GB STD TO 608 GB STD	*Call
2097<2094		2226<2729	464 GB STD TO 608 GB STD	*Call
2097<2094		2226<2730	480 GB STD TO 608 GB STD	*Call
2097<2094		2226<2731	496 GB STD TO 608 GB STD	*Call
2097<2094		2226<2732	512 GB STD TO 608 GB STD	*Call
2097<2094		2227<2701	16 GB STD TO 656 GB STD	*Call
2097<2094		2227<2702	32 GB STD TO 656 GB STD	*Call
2097<2094		2227<2703	48 GB STD TO 656 GB STD	*Call
2097<2094		2227<2704	64 GB STD TO 656 GB STD	*Call
2097<2094		2227<2705	80 GB STD TO 656 GB STD	*Call
2097<2094		2227<2706	96 GB STD TO 656 GB STD	*Call
2097<2094		2227<2707	112 GB STD TO 656 GB STD	*Call
2097<2094		2227<2708	128 GB STD TO 656 GB STD	*Call
2097<2094		2227<2709	144 GB STD TO 656 GB STD	*Call
2097<2094		2227<2710	160 GB STD TO 656 GB STD	*Call
2097<2094		2227<2711	176 GB STD TO 656 GB STD	*Call
2097<2094		2227<2712	192 GB STD TO 656 GB STD	*Call
2097<2094		2227<2713	208 GB STD TO 656 GB STD	*Call
2097<2094		2227<2714	224 GB STD TO 656 GB STD	*Call
2097<2094		2227<2715	240 GB STD TO 656 GB STD	*Call
2097<2094		2227<2716	256 GB STD TO 656 GB STD	*Call
2097<2094		2227<2717	272 GB STD TO 656 GB STD	*Call
2097<2094		2227<2718	288 GB STD TO 656 GB STD	*Call
2097<2094		2227<2719	304 GB STD TO 656 GB STD	*Call
2097<2094		2227<2720	320 GB STD TO 656 GB STD	*Call
2097<2094		2227<2721	336 GB STD TO 656 GB STD	*Call
2097<2094		2227<2722	352 GB STD TO 656 GB STD	*Call
2097<2094		2227<2723	368 GB STD TO 656 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2227<2724	384 GB STD TO 656 GB STD	*Call
2097<2094		2227<2725	400 GB STD TO 656 GB STD	*Call
2097<2094		2227<2726	416 GB STD TO 656 GB STD	*Call
2097<2094		2227<2727	432 GB STD TO 656 GB STD	*Call
2097<2094		2227<2728	448 GB STD TO 656 GB STD	*Call
2097<2094		2227<2729	464 GB STD TO 656 GB STD	*Call
2097<2094		2227<2730	480 GB STD TO 656 GB STD	*Call
2097<2094		2227<2731	496 GB STD TO 656 GB STD	*Call
2097<2094		2227<2732	512 GB STD TO 656 GB STD	*Call
2097<2094		2228<2701	16 GB STD TO 704 GB STD	*Call
2097<2094		2228<2702	32 GB STD TO 704 GB STD	*Call
2097<2094		2228<2703	48 GB STD TO 704 GB STD	*Call
2097<2094		2228<2704	64 GB STD TO 704 GB STD	*Call
2097<2094		2228<2705	80 GB STD TO 704 GB STD	*Call
2097<2094		2228<2706	96 GB STD TO 704 GB STD	*Call
2097<2094		2228<2707	112 GB STD TO 704 GB STD	*Call
2097<2094		2228<2708	128 GB STD TO 704 GB STD	*Call
2097<2094		2228<2709	144 GB STD TO 704 GB STD	*Call
2097<2094		2228<2710	160 GB STD TO 704 GB STD	*Call
2097<2094		2228<2711	176 GB STD TO 704 GB STD	*Call
2097<2094		2228<2712	192 GB STD TO 704 GB STD	*Call
2097<2094		2228<2713	208 GB STD TO 704 GB STD	*Call
2097<2094		2228<2714	224 GB STD TO 704 GB STD	*Call
2097<2094		2228<2715	240 GB STD TO 704 GB STD	*Call
2097<2094		2228<2716	256 GB STD TO 704 GB STD	*Call
2097<2094		2228<2717	272 GB STD TO 704 GB STD	*Call
2097<2094		2228<2718	288 GB STD TO 704 GB STD	*Call
2097<2094		2228<2719	304 GB STD TO 704 GB STD	*Call
2097<2094		2228<2720	320 GB STD TO 704 GB STD	*Call
2097<2094		2228<2721	336 GB STD TO 704 GB STD	*Call
2097<2094		2228<2722	352 GB STD TO 704 GB STD	*Call
2097<2094		2228<2723	368 GB STD TO 704 GB STD	*Call
2097<2094		2228<2724	384 GB STD TO 704 GB STD	*Call
2097<2094		2228<2725	400 GB STD TO 704 GB STD	*Call
2097<2094		2228<2726	416 GB STD TO 704 GB STD	*Call
2097<2094		2228<2727	432 GB STD TO 704 GB STD	*Call
2097<2094		2228<2728	448 GB STD TO 704 GB STD	*Call
2097<2094		2228<2729	464 GB STD TO 704 GB STD	*Call
2097<2094		2228<2730	480 GB STD TO 704 GB STD	*Call
2097<2094		2228<2731	496 GB STD TO 704 GB STD	*Call
2097<2094		2228<2732	512 GB STD TO 704 GB STD	*Call
2097<2094		2229<2701	16 GB STD TO 752 GB STD	*Call
2097<2094		2229<2702	32 GB STD TO 752 GB STD	*Call
2097<2094		2229<2703	48 GB STD TO 752 GB STD	*Call
2097<2094		2229<2704	64 GB STD TO 752 GB STD	*Call
2097<2094		2229<2705	80 GB STD TO 752 GB STD	*Call
2097<2094		2229<2706	96 GB STD TO 752 GB STD	*Call
2097<2094		2229<2707	112 GB STD TO 752 GB STD	*Call
2097<2094		2229<2708	128 GB STD TO 752 GB STD	*Call
2097<2094		2229<2709	144 GB STD TO 752 GB STD	*Call
2097<2094		2229<2710	160 GB STD TO 752 GB STD	*Call
2097<2094		2229<2711	176 GB STD TO 752 GB STD	*Call
2097<2094		2229<2712	192 GB STD TO 752 GB STD	*Call
2097<2094		2229<2713	208 GB STD TO 752 GB STD	*Call
2097<2094		2229<2714	224 GB STD TO 752 GB STD	*Call
2097<2094		2229<2715	240 GB STD TO 752 GB STD	*Call
2097<2094		2229<2716	256 GB STD TO 752 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2229<2717	272 GB STD TO 752 GB STD	*Call
2097<2094		2229<2718	288 GB STD TO 752 GB STD	*Call
2097<2094		2229<2719	304 GB STD TO 752 GB STD	*Call
2097<2094		2229<2720	320 GB STD TO 752 GB STD	*Call
2097<2094		2229<2721	336 GB STD TO 752 GB STD	*Call
2097<2094		2229<2722	352 GB STD TO 752 GB STD	*Call
2097<2094		2229<2723	368 GB STD TO 752 GB STD	*Call
2097<2094		2229<2724	384 GB STD TO 752 GB STD	*Call
2097<2094		2229<2725	400 GB STD TO 752 GB STD	*Call
2097<2094		2229<2726	416 GB STD TO 752 GB STD	*Call
2097<2094		2229<2727	432 GB STD TO 752 GB STD	*Call
2097<2094		2229<2728	448 GB STD TO 752 GB STD	*Call
2097<2094		2229<2729	464 GB STD TO 752 GB STD	*Call
2097<2094		2229<2730	480 GB STD TO 752 GB STD	*Call
2097<2094		2229<2731	496 GB STD TO 752 GB STD	*Call
2097<2094		2229<2732	512 GB STD TO 752 GB STD	*Call
2097<2094		2230<2701	16 GB STD TO 800 GB STD	*Call
2097<2094		2230<2702	32 GB STD TO 800 GB STD	*Call
2097<2094		2230<2703	48 GB STD TO 800 GB STD	*Call
2097<2094		2230<2704	64 GB STD TO 800 GB STD	*Call
2097<2094		2230<2705	80 GB STD TO 800 GB STD	*Call
2097<2094		2230<2706	96 GB STD TO 800 GB STD	*Call
2097<2094		2230<2707	112 GB STD TO 800 GB STD	*Call
2097<2094		2230<2708	128 GB STD TO 800 GB STD	*Call
2097<2094		2230<2709	144 GB STD TO 800 GB STD	*Call
2097<2094		2230<2710	160 GB STD TO 800 GB STD	*Call
2097<2094		2230<2711	176 GB STD TO 800 GB STD	*Call
2097<2094		2230<2712	192 GB STD TO 800 GB STD	*Call
2097<2094		2230<2713	208 GB STD TO 800 GB STD	*Call
2097<2094		2230<2714	224 GB STD TO 800 GB STD	*Call
2097<2094		2230<2715	240 GB STD TO 800 GB STD	*Call
2097<2094		2230<2716	256 GB STD TO 800 GB STD	*Call
2097<2094		2230<2717	272 GB STD TO 800 GB STD	*Call
2097<2094		2230<2718	288 GB STD TO 800 GB STD	*Call
2097<2094		2230<2719	304 GB STD TO 800 GB STD	*Call
2097<2094		2230<2720	320 GB STD TO 800 GB STD	*Call
2097<2094		2230<2721	336 GB STD TO 800 GB STD	*Call
2097<2094		2230<2722	352 GB STD TO 800 GB STD	*Call
2097<2094		2230<2723	368 GB STD TO 800 GB STD	*Call
2097<2094		2230<2724	384 GB STD TO 800 GB STD	*Call
2097<2094		2230<2725	400 GB STD TO 800 GB STD	*Call
2097<2094		2230<2726	416 GB STD TO 800 GB STD	*Call
2097<2094		2230<2727	432 GB STD TO 800 GB STD	*Call
2097<2094		2230<2728	448 GB STD TO 800 GB STD	*Call
2097<2094		2230<2729	464 GB STD TO 800 GB STD	*Call
2097<2094		2230<2730	480 GB STD TO 800 GB STD	*Call
2097<2094		2230<2731	496 GB STD TO 800 GB STD	*Call
2097<2094		2230<2732	512 GB STD TO 800 GB STD	*Call
2097<2094		2231<2701	16 GB STD TO 848 GB STD	*Call
2097<2094		2231<2702	32 GB STD TO 848 GB STD	*Call
2097<2094		2231<2703	48 GB STD TO 848 GB STD	*Call
2097<2094		2231<2704	64 GB STD TO 848 GB STD	*Call
2097<2094		2231<2705	80 GB STD TO 848 GB STD	*Call
2097<2094		2231<2706	96 GB STD TO 848 GB STD	*Call
2097<2094		2231<2707	112 GB STD TO 848 GB STD	*Call
2097<2094		2231<2708	128 GB STD TO 848 GB STD	*Call
2097<2094		2231<2709	144 GB STD TO 848 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2231<2710	160 GB STD TO 848 GB STD	*Call
2097<2094		2231<2711	176 GB STD TO 848 GB STD	*Call
2097<2094		2231<2712	192 GB STD TO 848 GB STD	*Call
2097<2094		2231<2713	208 GB STD TO 848 GB STD	*Call
2097<2094		2231<2714	224 GB STD TO 848 GB STD	*Call
2097<2094		2231<2715	240 GB STD TO 848 GB STD	*Call
2097<2094		2231<2716	256 GB STD TO 848 GB STD	*Call
2097<2094		2231<2717	272 GB STD TO 848 GB STD	*Call
2097<2094		2231<2718	288 GB STD TO 848 GB STD	*Call
2097<2094		2231<2719	304 GB STD TO 848 GB STD	*Call
2097<2094		2231<2720	320 GB STD TO 848 GB STD	*Call
2097<2094		2231<2721	336 GB STD TO 848 GB STD	*Call
2097<2094		2231<2722	352 GB STD TO 848 GB STD	*Call
2097<2094		2231<2723	368 GB STD TO 848 GB STD	*Call
2097<2094		2231<2724	384 GB STD TO 848 GB STD	*Call
2097<2094		2231<2725	400 GB STD TO 848 GB STD	*Call
2097<2094		2231<2726	416 GB STD TO 848 GB STD	*Call
2097<2094		2231<2727	432 GB STD TO 848 GB STD	*Call
2097<2094		2231<2728	448 GB STD TO 848 GB STD	*Call
2097<2094		2231<2729	464 GB STD TO 848 GB STD	*Call
2097<2094		2231<2730	480 GB STD TO 848 GB STD	*Call
2097<2094		2231<2731	496 GB STD TO 848 GB STD	*Call
2097<2094		2231<2732	512 GB STD TO 848 GB STD	*Call
2097<2094		2232<2701	16 GB STD TO 896 GB STD	*Call
2097<2094		2232<2702	32 GB STD TO 896 GB STD	*Call
2097<2094		2232<2703	48 GB STD TO 896 GB STD	*Call
2097<2094		2232<2704	64 GB STD TO 896 GB STD	*Call
2097<2094		2232<2705	80 GB STD TO 896 GB STD	*Call
2097<2094		2232<2706	96 GB STD TO 896 GB STD	*Call
2097<2094		2232<2707	112 GB STD TO 896 GB STD	*Call
2097<2094		2232<2708	128 GB STD TO 896 GB STD	*Call
2097<2094		2232<2709	144 GB STD TO 896 GB STD	*Call
2097<2094		2232<2710	160 GB STD TO 896 GB STD	*Call
2097<2094		2232<2711	176 GB STD TO 896 GB STD	*Call
2097<2094		2232<2712	192 GB STD TO 896 GB STD	*Call
2097<2094		2232<2713	208 GB STD TO 896 GB STD	*Call
2097<2094		2232<2714	224 GB STD TO 896 GB STD	*Call
2097<2094		2232<2715	240 GB STD TO 896 GB STD	*Call
2097<2094		2232<2716	256 GB STD TO 896 GB STD	*Call
2097<2094		2232<2717	272 GB STD TO 896 GB STD	*Call
2097<2094		2232<2718	288 GB STD TO 896 GB STD	*Call
2097<2094		2232<2719	304 GB STD TO 896 GB STD	*Call
2097<2094		2232<2720	320 GB STD TO 896 GB STD	*Call
2097<2094		2232<2721	336 GB STD TO 896 GB STD	*Call
2097<2094		2232<2722	352 GB STD TO 896 GB STD	*Call
2097<2094		2232<2723	368 GB STD TO 896 GB STD	*Call
2097<2094		2232<2724	384 GB STD TO 896 GB STD	*Call
2097<2094		2232<2725	400 GB STD TO 896 GB STD	*Call
2097<2094		2232<2726	416 GB STD TO 896 GB STD	*Call
2097<2094		2232<2727	432 GB STD TO 896 GB STD	*Call
2097<2094		2232<2728	448 GB STD TO 896 GB STD	*Call
2097<2094		2232<2729	464 GB STD TO 896 GB STD	*Call
2097<2094		2232<2730	480 GB STD TO 896 GB STD	*Call
2097<2094		2232<2731	496 GB STD TO 896 GB STD	*Call
2097<2094		2232<2732	512 GB STD TO 896 GB STD	*Call
2097<2094		2233<2701	16 GB STD TO 944 GB STD	*Call
2097<2094		2233<2702	32 GB STD TO 944 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2233<2703	48 GB STD TO 944 GB STD	*Call
2097<2094		2233<2704	64 GB STD TO 944 GB STD	*Call
2097<2094		2233<2705	80 GB STD TO 944 GB STD	*Call
2097<2094		2233<2706	96 GB STD TO 944 GB STD	*Call
2097<2094		2233<2707	112 GB STD TO 944 GB STD	*Call
2097<2094		2233<2708	128 GB STD TO 944 GB STD	*Call
2097<2094		2233<2709	144 GB STD TO 944 GB STD	*Call
2097<2094		2233<2710	160 GB STD TO 944 GB STD	*Call
2097<2094		2233<2711	176 GB STD TO 944 GB STD	*Call
2097<2094		2233<2712	192 GB STD TO 944 GB STD	*Call
2097<2094		2233<2713	208 GB STD TO 944 GB STD	*Call
2097<2094		2233<2714	224 GB STD TO 944 GB STD	*Call
2097<2094		2233<2715	240 GB STD TO 944 GB STD	*Call
2097<2094		2233<2716	256 GB STD TO 944 GB STD	*Call
2097<2094		2233<2717	272 GB STD TO 944 GB STD	*Call
2097<2094		2233<2718	288 GB STD TO 944 GB STD	*Call
2097<2094		2233<2719	304 GB STD TO 944 GB STD	*Call
2097<2094		2233<2720	320 GB STD TO 944 GB STD	*Call
2097<2094		2233<2721	336 GB STD TO 944 GB STD	*Call
2097<2094		2233<2722	352 GB STD TO 944 GB STD	*Call
2097<2094		2233<2723	368 GB STD TO 944 GB STD	*Call
2097<2094		2233<2724	384 GB STD TO 944 GB STD	*Call
2097<2094		2233<2725	400 GB STD TO 944 GB STD	*Call
2097<2094		2233<2726	416 GB STD TO 944 GB STD	*Call
2097<2094		2233<2727	432 GB STD TO 944 GB STD	*Call
2097<2094		2233<2728	448 GB STD TO 944 GB STD	*Call
2097<2094		2233<2729	464 GB STD TO 944 GB STD	*Call
2097<2094		2233<2730	480 GB STD TO 944 GB STD	*Call
2097<2094		2233<2731	496 GB STD TO 944 GB STD	*Call
2097<2094		2233<2732	512 GB STD TO 944 GB STD	*Call
2097<2094		2234<2701	16 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2702	32 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2703	48 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2704	64 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2705	80 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2706	96 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2707	112 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2708	128 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2709	144 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2710	160 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2711	176 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2712	192 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2713	208 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2714	224 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2715	240 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2716	256 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2717	272 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2718	288 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2719	304 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2720	320 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2721	336 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2722	352 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2723	368 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2724	384 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2725	400 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2726	416 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2727	432 GB STD TO 1008 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2234<2728	448 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2729	464 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2730	480 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2731	496 GB STD TO 1008 GB STD	*Call
2097<2094		2234<2732	512 GB STD TO 1008 GB STD	*Call
2097<2094		2235<2701	16 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2702	32 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2703	48 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2704	64 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2705	80 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2706	96 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2707	112 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2708	128 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2709	144 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2710	160 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2711	176 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2712	192 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2713	208 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2714	224 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2715	240 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2716	256 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2717	272 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2718	288 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2719	304 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2720	320 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2721	336 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2722	352 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2723	368 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2724	384 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2725	400 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2726	416 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2727	432 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2728	448 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2729	464 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2730	480 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2731	496 GB STD TO 1072 GB STD	*Call
2097<2094		2235<2732	512 GB STD TO 1072 GB STD	*Call
2097<2094		2236<2701	16 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2702	32 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2703	48 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2704	64 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2705	80 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2706	96 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2707	112 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2708	128 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2709	144 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2710	160 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2711	176 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2712	192 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2713	208 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2714	224 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2715	240 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2716	256 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2717	272 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2718	288 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2719	304 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2720	320 GB STD TO 1136 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2236<2721	336 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2722	352 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2723	368 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2724	384 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2725	400 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2726	416 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2727	432 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2728	448 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2729	464 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2730	480 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2731	496 GB STD TO 1136 GB STD	*Call
2097<2094		2236<2732	512 GB STD TO 1136 GB STD	*Call
2097<2094		2237<2701	16 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2702	32 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2703	48 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2704	64 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2705	80 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2706	96 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2707	112 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2708	128 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2709	144 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2710	160 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2711	176 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2712	192 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2713	208 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2714	224 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2715	240 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2716	256 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2717	272 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2718	288 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2719	304 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2720	320 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2721	336 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2722	352 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2723	368 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2724	384 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2725	400 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2726	416 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2727	432 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2728	448 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2729	464 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2730	480 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2731	496 GB STD TO 1200 GB STD	*Call
2097<2094		2237<2732	512 GB STD TO 1200 GB STD	*Call
2097<2094		2238<2701	16 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2702	32 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2703	48 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2704	64 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2705	80 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2706	96 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2707	112 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2708	128 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2709	144 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2710	160 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2711	176 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2712	192 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2713	208 GB STD TO 1264 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2238<2714	224 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2715	240 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2716	256 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2717	272 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2718	288 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2719	304 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2720	320 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2721	336 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2722	352 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2723	368 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2724	384 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2725	400 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2726	416 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2727	432 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2728	448 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2729	464 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2730	480 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2731	496 GB STD TO 1264 GB STD	*Call
2097<2094		2238<2732	512 GB STD TO 1264 GB STD	*Call
2097<2094		2239<2701	16 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2702	32 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2703	48 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2704	64 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2705	80 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2706	96 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2707	112 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2708	128 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2709	144 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2710	160 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2711	176 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2712	192 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2713	208 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2714	224 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2715	240 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2716	256 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2717	272 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2718	288 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2719	304 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2720	320 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2721	336 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2722	352 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2723	368 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2724	384 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2725	400 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2726	416 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2727	432 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2728	448 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2729	464 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2730	480 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2731	496 GB STD TO 1328 GB STD	*Call
2097<2094		2239<2732	512 GB STD TO 1328 GB STD	*Call
2097<2094		2240<2701	16 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2702	32 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2703	48 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2704	64 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2705	80 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2706	96 GB STD TO 1392 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2240<2707	112 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2708	128 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2709	144 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2710	160 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2711	176 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2712	192 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2713	208 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2714	224 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2715	240 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2716	256 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2717	272 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2718	288 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2719	304 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2720	320 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2721	336 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2722	352 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2723	368 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2724	384 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2725	400 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2726	416 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2727	432 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2728	448 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2729	464 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2730	480 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2731	496 GB STD TO 1392 GB STD	*Call
2097<2094		2240<2732	512 GB STD TO 1392 GB STD	*Call
2097<2094		2241<2701	16 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2702	32 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2703	48 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2704	64 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2705	80 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2706	96 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2707	112 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2708	128 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2709	144 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2710	160 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2711	176 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2712	192 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2713	208 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2714	224 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2715	240 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2716	256 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2717	272 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2718	288 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2719	304 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2720	320 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2721	336 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2722	352 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2723	368 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2724	384 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2725	400 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2726	416 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2727	432 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2728	448 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2729	464 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2730	480 GB STD TO 1456 GB STD	*Call
2097<2094		2241<2731	496 GB STD TO 1456 GB STD	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		2241<2732	512 GB STD TO 1456 GB STD	*Call
2097<2094		2242<2701	16 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2702	32 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2703	48 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2704	64 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2705	80 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2706	96 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2707	112 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2708	128 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2709	144 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2710	160 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2711	176 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2712	192 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2713	208 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2714	224 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2715	240 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2716	256 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2717	272 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2718	288 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2719	304 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2720	320 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2721	336 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2722	352 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2723	368 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2724	384 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2725	400 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2726	416 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2727	432 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2728	448 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2729	464 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2730	480 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2731	496 GB STD TO 1520 GB STD	*Call
2097<2094		2242<2732	512 GB STD TO 1520 GB STD	*Call
2097<2094		2243<2701	16 GB STD TO 160 GB STD	*Call
2097<2094		2243<2702	32 GB STD TO 160 GB STD	*Call
2097<2094		2243<2703	48 GB STD TO 160 GB STD	*Call
2097<2094		2243<2704	64 GB STD TO 160 GB STD	*Call
2097<2094		2243<2705	80 GB STD TO 160 GB STD	*Call
2097<2094		2243<2706	96 GB STD TO 160 GB STD	*Call
2097<2094		2243<2707	112 GB STD TO 160 GB STD	*Call
2097<2094		2243<2708	128 GB STD TO 160 GB STD	*Call
2097<2094		2243<2709	144 GB STD TO 160 GB STD	*Call
2097<2094		4311<7611	1BOOK 1I/O TO 1BOOK 1I/O	*Call
2097<2094		4311<7621	2BOOK 1I/O TO 1BOOK 1I/O	*Call
2097<2094		4311<7631	3BOOK 1I/O TO 1BOOK 1I/O	*Call
2097<2094		4311<7641	4BOOK 1I/O TO 1BOOK 1I/O	*Call
2097<2094		4312<7611	1BOOK 1I/O TO 1BOOK 2I/O	*Call
2097<2094		4312<7612	1BOOK 2I/O TO 1BOOK 2I/O	*Call
2097<2094		4312<7621	2BOOK 1I/O TO 1BOOK 2I/O	*Call
2097<2094		4312<7622	2BOOK 2I/O TO 1BOOK 2I/O	*Call
2097<2094		4312<7631	3BOOK 1I/O TO 1BOOK 2I/O	*Call
2097<2094		4312<7632	3BOOK 2I/O TO 1BOOK 2I/O	*Call
2097<2094		4312<7641	4BOOK 1I/O TO 1BOOK 2I/O	*Call
2097<2094		4312<7642	4BOOK 2I/O TO 1BOOK 2I/O	*Call
2097<2094		4313<7611	1BOOK 1I/O TO 1BOOK 3I/O	*Call
2097<2094		4313<7612	1BOOK 2I/O TO 1BOOK 3I/O	*Call
2097<2094		4313<7613	1BOOK 3I/O TO 1BOOK 3I/O	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		4313<7621	2BOOK 1/O TO 1BOOK 3/O	*Call
2097<2094		4313<7622	2BOOK 2/O TO 1BOOK 3/O	*Call
2097<2094		4313<7623	2BOOK 3/O TO 1BOOK 3/O	*Call
2097<2094		4313<7631	3BOOK 1/O TO 1BOOK 3/O	*Call
2097<2094		4313<7632	3BOOK 2/O TO 1BOOK 3/O	*Call
2097<2094		4313<7633	3BOOK 3/O TO 1BOOK 3/O	*Call
2097<2094		4313<7641	4BOOK 1/O TO 1BOOK 3/O	*Call
2097<2094		4313<7642	4BOOK 2/O TO 1BOOK 3/O	*Call
2097<2094		4313<7643	4BOOK 3/O TO 1BOOK 3/O	*Call
2097<2094		4321<7611	1BOOK 1/O TO 2BOOK 1/O	*Call
2097<2094		4321<7621	2BOOK 1/O TO 2BOOK 1/O	*Call
2097<2094		4321<7631	3BOOK 1/O TO 2BOOK 1/O	*Call
2097<2094		4321<7641	4BOOK 1/O TO 2BOOK 1/O	*Call
2097<2094		4322<7611	1BOOK 1/O TO 2BOOK 2/O	*Call
2097<2094		4322<7612	1BOOK 2/O TO 2BOOK 2/O	*Call
2097<2094		4322<7621	2BOOK 1/O TO 2BOOK 2/O	*Call
2097<2094		4322<7622	2BOOK 2/O TO 2BOOK 2/O	*Call
2097<2094		4322<7631	3BOOK 1/O TO 2BOOK 2/O	*Call
2097<2094		4322<7632	3BOOK 2/O TO 2BOOK 2/O	*Call
2097<2094		4322<7641	4BOOK 1/O TO 2BOOK 2/O	*Call
2097<2094		4322<7642	4BOOK 2/O TO 2BOOK 2/O	*Call
2097<2094		4323<7611	1BOOK 1/O TO 2BOOK 3/O	*Call
2097<2094		4323<7612	1BOOK 2/O TO 2BOOK 3/O	*Call
2097<2094		4323<7613	1BOOK 3/O TO 2BOOK 3/O	*Call
2097<2094		4323<7621	2BOOK 1/O TO 2BOOK 3/O	*Call
2097<2094		4323<7622	2BOOK 2/O TO 2BOOK 3/O	*Call
2097<2094		4323<7623	2BOOK 3/O TO 2BOOK 3/O	*Call
2097<2094		4323<7631	3BOOK 1/O TO 2BOOK 3/O	*Call
2097<2094		4323<7632	3BOOK 2/O TO 2BOOK 3/O	*Call
2097<2094		4323<7633	3BOOK 3/O TO 2BOOK 3/O	*Call
2097<2094		4323<7641	4BOOK 1/O TO 2BOOK 3/O	*Call
2097<2094		4323<7642	4BOOK 2/O TO 2BOOK 3/O	*Call
2097<2094		4323<7643	4BOOK 3/O TO 2BOOK 3/O	*Call
2097<2094		4331<7611	1BOOK 1/O TO 3BOOK 1/O	*Call
2097<2094		4331<7621	2BOOK 1/O TO 3BOOK 1/O	*Call
2097<2094		4331<7631	3BOOK 1/O TO 3BOOK 1/O	*Call
2097<2094		4331<7641	4BOOK 1/O TO 3BOOK 1/O	*Call
2097<2094		4332<7611	1BOOK 1/O TO 3BOOK 2/O	*Call
2097<2094		4332<7612	1BOOK 2/O TO 3BOOK 2/O	*Call
2097<2094		4332<7621	2BOOK 1/O TO 3BOOK 2/O	*Call
2097<2094		4332<7622	2BOOK 2/O TO 3BOOK 2/O	*Call
2097<2094		4332<7631	3BOOK 1/O TO 3BOOK 2/O	*Call
2097<2094		4332<7632	3BOOK 2/O TO 3BOOK 2/O	*Call
2097<2094		4332<7641	4BOOK 1/O TO 3BOOK 2/O	*Call
2097<2094		4332<7642	4BOOK 2/O TO 3BOOK 2/O	*Call
2097<2094		4333<7611	1BOOK 1/O TO 3BOOK 3/O	*Call
2097<2094		4333<7612	1BOOK 2/O TO 3BOOK 3/O	*Call
2097<2094		4333<7613	1BOOK 3/O TO 3BOOK 3/O	*Call
2097<2094		4333<7621	2BOOK 1/O TO 3BOOK 3/O	*Call
2097<2094		4333<7622	2BOOK 2/O TO 3BOOK 3/O	*Call
2097<2094		4333<7623	2BOOK 3/O TO 3BOOK 3/O	*Call
2097<2094		4333<7631	3BOOK 1/O TO 3BOOK 3/O	*Call
2097<2094		4333<7632	3BOOK 2/O TO 3BOOK 3/O	*Call
2097<2094		4333<7633	3BOOK 3/O TO 3BOOK 3/O	*Call
2097<2094		4333<7641	4BOOK 1/O TO 3BOOK 3/O	*Call
2097<2094		4333<7642	4BOOK 2/O TO 3BOOK 3/O	*Call
2097<2094		4333<7643	4BOOK 3/O TO 3BOOK 3/O	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		4341<7611	1BOOK 1I/O TO 4BOOK 1I/O	*Call
2097<2094		4341<7621	2BOOK 1I/O TO 4BOOK 1I/O	*Call
2097<2094		4341<7631	3BOOK 1I/O TO 4BOOK 1I/O	*Call
2097<2094		4341<7641	4BOOK 1I/O TO 4BOOK 1I/O	*Call
2097<2094		4342<7611	1BOOK 1I/O TO 4BOOK 2I/O	*Call
2097<2094		4342<7612	1BOOK 2I/O TO 4BOOK 2I/O	*Call
2097<2094		4342<7621	2BOOK 1I/O TO 4BOOK 2I/O	*Call
2097<2094		4342<7622	2BOOK 2I/O TO 4BOOK 2I/O	*Call
2097<2094		4342<7631	3BOOK 1I/O TO 4BOOK 2I/O	*Call
2097<2094		4342<7632	3BOOK 2I/O TO 4BOOK 2I/O	*Call
2097<2094		4342<7641	4BOOK 1I/O TO 4BOOK 2I/O	*Call
2097<2094		4342<7642	4BOOK 2I/O TO 4BOOK 2I/O	*Call
2097<2094		4343<7611	1BOOK 1I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7612	1BOOK 2I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7613	1BOOK 3I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7621	2BOOK 1I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7622	2BOOK 2I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7623	2BOOK 3I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7631	3BOOK 1I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7632	3BOOK 2I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7633	3BOOK 3I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7641	4BOOK 1I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7642	4BOOK 2I/O TO 4BOOK 3I/O	*Call
2097<2094		4343<7643	4BOOK 3I/O TO 4BOOK 3I/O	*Call
2097<2094		6539<4500	0-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4501	1-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4502	2-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4503	3-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4504	4-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4505	5-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4506	6-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4507	7-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4508	8-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4509	9-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4510	10-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4511	11-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4512	12-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4513	13-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4514	14-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4515	15-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4516	16-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4517	17-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4518	18-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4519	19-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4520	20-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4521	21-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4522	22-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4523	23-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4524	24-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4525	25-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4526	26-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4527	27-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4528	28-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4529	29-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4530	30-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4531	31-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4532	32-WAY CP7 TO 1-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6539<4533	33-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4534	34-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4535	35-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4536	36-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4537	37-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4538	38-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4539	39-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4540	40-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4541	41-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4542	42-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4543	43-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4544	44-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4545	45-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4546	46-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4547	47-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4548	48-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4549	49-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4550	50-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4551	51-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4552	52-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4553	53-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4554	54-WAY CP7 TO 1-WAY CP4	*Call
2097<2094		6539<4601	1-WAY CP6 TO 1-WAY CP4	*Call
2097<2094		6539<4602	2-WAY CP6 TO 1-WAY CP4	*Call
2097<2094		6539<4603	3-WAY CP6 TO 1-WAY CP4	*Call
2097<2094		6539<4604	4-WAY CP6 TO 1-WAY CP4	*Call
2097<2094		6539<4605	5-WAY CP6 TO 1-WAY CP4	*Call
2097<2094		6539<4606	6-WAY CP6 TO 1-WAY CP4	*Call
2097<2094		6539<4607	7-WAY CP6 TO 1-WAY CP4	*Call
2097<2094		6539<4608	8-WAY CP6 TO 1-WAY CP4	*Call
2097<2094		6539<4701	1-WAY CP5 TO 1-WAY CP4	*Call
2097<2094		6539<4702	2-WAY CP5 TO 1-WAY CP4	*Call
2097<2094		6539<4703	3-WAY CP5 TO 1-WAY CP4	*Call
2097<2094		6539<4704	4-WAY CP5 TO 1-WAY CP4	*Call
2097<2094		6539<4705	5-WAY CP5 TO 1-WAY CP4	*Call
2097<2094		6539<4706	6-WAY CP5 TO 1-WAY CP4	*Call
2097<2094		6539<4707	7-WAY CP5 TO 1-WAY CP4	*Call
2097<2094		6539<4708	8-WAY CP5 TO 1-WAY CP4	*Call
2097<2094		6539<4801	1-WAY CP4 TO 1-WAY CP4	*Call
2097<2094		6539<4802	2-WAY CP4 TO 1-WAY CP4	*Call
2097<2094		6539<4803	3-WAY CP4 TO 1-WAY CP4	*Call
2097<2094		6539<4804	4-WAY CP4 TO 1-WAY CP4	*Call
2097<2094		6539<4805	5-WAY CP4 TO 1-WAY CP4	*Call
2097<2094		6539<4806	6-WAY CP4 TO 1-WAY CP4	*Call
2097<2094		6539<4807	7-WAY CP4 TO 1-WAY CP4	*Call
2097<2094		6539<4808	8-WAY CP4 TO 1-WAY CP4	*Call
2097<2094		6540<4500	0-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4501	1-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4502	2-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4503	3-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4504	4-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4505	5-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4506	6-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4507	7-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4508	8-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4509	9-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4510	10-WAY CP7 TO 2-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6540<4511	11-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4512	12-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4513	13-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4514	14-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4515	15-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4516	16-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4517	17-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4518	18-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4519	19-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4520	20-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4521	21-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4522	22-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4523	23-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4524	24-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4525	25-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4526	26-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4527	27-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4528	28-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4529	29-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4530	30-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4531	31-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4532	32-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4533	33-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4534	34-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4535	35-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4536	36-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4537	37-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4538	38-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4539	39-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4540	40-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4541	41-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4542	42-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4543	43-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4544	44-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4545	45-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4546	46-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4547	47-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4548	48-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4549	49-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4550	50-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4551	51-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4552	52-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4553	53-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4554	54-WAY CP7 TO 2-WAY CP4	*Call
2097<2094		6540<4601	1-WAY CP6 TO 2-WAY CP4	*Call
2097<2094		6540<4602	2-WAY CP6 TO 2-WAY CP4	*Call
2097<2094		6540<4603	3-WAY CP6 TO 2-WAY CP4	*Call
2097<2094		6540<4604	4-WAY CP6 TO 2-WAY CP4	*Call
2097<2094		6540<4605	5-WAY CP6 TO 2-WAY CP4	*Call
2097<2094		6540<4606	6-WAY CP6 TO 2-WAY CP4	*Call
2097<2094		6540<4607	7-WAY CP6 TO 2-WAY CP4	*Call
2097<2094		6540<4608	8-WAY CP6 TO 2-WAY CP4	*Call
2097<2094		6540<4701	1-WAY CP5 TO 2-WAY CP4	*Call
2097<2094		6540<4702	2-WAY CP5 TO 2-WAY CP4	*Call
2097<2094		6540<4703	3-WAY CP5 TO 2-WAY CP4	*Call
2097<2094		6540<4704	4-WAY CP5 TO 2-WAY CP4	*Call
2097<2094		6540<4705	5-WAY CP5 TO 2-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6540<4706	6-WAY CP5 TO 2-WAY CP4	*Call
2097<2094		6540<4707	7-WAY CP5 TO 2-WAY CP4	*Call
2097<2094		6540<4708	8-WAY CP5 TO 2-WAY CP4	*Call
2097<2094		6540<4801	1-WAY CP4 TO 2-WAY CP4	*Call
2097<2094		6540<4802	2-WAY CP4 TO 2-WAY CP4	*Call
2097<2094		6540<4803	3-WAY CP4 TO 2-WAY CP4	*Call
2097<2094		6540<4804	4-WAY CP4 TO 2-WAY CP4	*Call
2097<2094		6540<4805	5-WAY CP4 TO 2-WAY CP4	*Call
2097<2094		6540<4806	6-WAY CP4 TO 2-WAY CP4	*Call
2097<2094		6540<4807	7-WAY CP4 TO 2-WAY CP4	*Call
2097<2094		6540<4808	8-WAY CP4 TO 2-WAY CP4	*Call
2097<2094		6541<4500	0-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4501	1-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4502	2-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4503	3-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4504	4-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4505	5-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4506	6-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4507	7-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4508	8-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4509	9-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4510	10-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4511	11-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4512	12-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4513	13-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4514	14-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4515	15-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4516	16-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4517	17-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4518	18-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4519	19-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4520	20-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4521	21-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4522	22-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4523	23-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4524	24-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4525	25-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4526	26-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4527	27-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4528	28-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4529	29-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4530	30-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4531	31-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4532	32-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4533	33-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4534	34-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4535	35-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4536	36-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4537	37-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4538	38-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4539	39-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4540	40-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4541	41-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4542	42-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4543	43-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4544	44-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4545	45-WAY CP7 TO 3-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6541<4546	46-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4547	47-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4548	48-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4549	49-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4550	50-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4551	51-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4552	52-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4553	53-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4554	54-WAY CP7 TO 3-WAY CP4	*Call
2097<2094		6541<4601	1-WAY CP6 TO 3-WAY CP4	*Call
2097<2094		6541<4602	2-WAY CP6 TO 3-WAY CP4	*Call
2097<2094		6541<4603	3-WAY CP6 TO 3-WAY CP4	*Call
2097<2094		6541<4604	4-WAY CP6 TO 3-WAY CP4	*Call
2097<2094		6541<4605	5-WAY CP6 TO 3-WAY CP4	*Call
2097<2094		6541<4606	6-WAY CP6 TO 3-WAY CP4	*Call
2097<2094		6541<4607	7-WAY CP6 TO 3-WAY CP4	*Call
2097<2094		6541<4608	8-WAY CP6 TO 3-WAY CP4	*Call
2097<2094		6541<4701	1-WAY CP5 TO 3-WAY CP4	*Call
2097<2094		6541<4702	2-WAY CP5 TO 3-WAY CP4	*Call
2097<2094		6541<4703	3-WAY CP5 TO 3-WAY CP4	*Call
2097<2094		6541<4704	4-WAY CP5 TO 3-WAY CP4	*Call
2097<2094		6541<4705	5-WAY CP5 TO 3-WAY CP4	*Call
2097<2094		6541<4706	6-WAY CP5 TO 3-WAY CP4	*Call
2097<2094		6541<4707	7-WAY CP5 TO 3-WAY CP4	*Call
2097<2094		6541<4708	8-WAY CP5 TO 3-WAY CP4	*Call
2097<2094		6541<4801	1-WAY CP4 TO 3-WAY CP4	*Call
2097<2094		6541<4802	2-WAY CP4 TO 3-WAY CP4	*Call
2097<2094		6541<4803	3-WAY CP4 TO 3-WAY CP4	*Call
2097<2094		6541<4804	4-WAY CP4 TO 3-WAY CP4	*Call
2097<2094		6541<4805	5-WAY CP4 TO 3-WAY CP4	*Call
2097<2094		6541<4806	6-WAY CP4 TO 3-WAY CP4	*Call
2097<2094		6541<4807	7-WAY CP4 TO 3-WAY CP4	*Call
2097<2094		6541<4808	8-WAY CP4 TO 3-WAY CP4	*Call
2097<2094		6542<4500	0-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4501	1-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4502	2-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4503	3-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4504	4-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4505	5-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4506	6-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4507	7-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4508	8-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4509	9-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4510	10-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4511	11-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4512	12-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4513	13-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4514	14-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4515	15-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4516	16-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4517	17-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4518	18-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4519	19-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4520	20-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4521	21-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4522	22-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4523	23-WAY CP7 TO 4-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6542<4524	24-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4525	25-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4526	26-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4527	27-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4528	28-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4529	29-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4530	30-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4531	31-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4532	32-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4533	33-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4534	34-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4535	35-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4536	36-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4537	37-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4538	38-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4539	39-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4540	40-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4541	41-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4542	42-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4543	43-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4544	44-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4545	45-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4546	46-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4547	47-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4548	48-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4549	49-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4550	50-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4551	51-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4552	52-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4553	53-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4554	54-WAY CP7 TO 4-WAY CP4	*Call
2097<2094		6542<4601	1-WAY CP6 TO 4-WAY CP4	*Call
2097<2094		6542<4602	2-WAY CP6 TO 4-WAY CP4	*Call
2097<2094		6542<4603	3-WAY CP6 TO 4-WAY CP4	*Call
2097<2094		6542<4604	4-WAY CP6 TO 4-WAY CP4	*Call
2097<2094		6542<4605	5-WAY CP6 TO 4-WAY CP4	*Call
2097<2094		6542<4606	6-WAY CP6 TO 4-WAY CP4	*Call
2097<2094		6542<4607	7-WAY CP6 TO 4-WAY CP4	*Call
2097<2094		6542<4608	8-WAY CP6 TO 4-WAY CP4	*Call
2097<2094		6542<4701	1-WAY CP5 TO 4-WAY CP4	*Call
2097<2094		6542<4702	2-WAY CP5 TO 4-WAY CP4	*Call
2097<2094		6542<4703	3-WAY CP5 TO 4-WAY CP4	*Call
2097<2094		6542<4704	4-WAY CP5 TO 4-WAY CP4	*Call
2097<2094		6542<4705	5-WAY CP5 TO 4-WAY CP4	*Call
2097<2094		6542<4706	6-WAY CP5 TO 4-WAY CP4	*Call
2097<2094		6542<4707	7-WAY CP5 TO 4-WAY CP4	*Call
2097<2094		6542<4708	8-WAY CP5 TO 4-WAY CP4	*Call
2097<2094		6542<4801	1-WAY CP4 TO 4-WAY CP4	*Call
2097<2094		6542<4802	2-WAY CP4 TO 4-WAY CP4	*Call
2097<2094		6542<4803	3-WAY CP4 TO 4-WAY CP4	*Call
2097<2094		6542<4804	4-WAY CP4 TO 4-WAY CP4	*Call
2097<2094		6542<4805	5-WAY CP4 TO 4-WAY CP4	*Call
2097<2094		6542<4806	6-WAY CP4 TO 4-WAY CP4	*Call
2097<2094		6542<4807	7-WAY CP4 TO 4-WAY CP4	*Call
2097<2094		6542<4808	8-WAY CP4 TO 4-WAY CP4	*Call
2097<2094		6543<4500	0-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4501	1-WAY CP7 TO 5-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6543<4502	2-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4503	3-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4504	4-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4505	5-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4506	6-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4507	7-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4508	8-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4509	9-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4510	10-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4511	11-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4512	12-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4513	13-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4514	14-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4515	15-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4516	16-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4517	17-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4518	18-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4519	19-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4520	20-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4521	21-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4522	22-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4523	23-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4524	24-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4525	25-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4526	26-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4527	27-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4528	28-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4529	29-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4530	30-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4531	31-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4532	32-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4533	33-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4534	34-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4535	35-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4536	36-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4537	37-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4538	38-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4539	39-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4540	40-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4541	41-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4542	42-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4543	43-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4544	44-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4545	45-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4546	46-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4547	47-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4548	48-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4549	49-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4550	50-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4551	51-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4552	52-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4553	53-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4554	54-WAY CP7 TO 5-WAY CP4	*Call
2097<2094		6543<4601	1-WAY CP6 TO 5-WAY CP4	*Call
2097<2094		6543<4602	2-WAY CP6 TO 5-WAY CP4	*Call
2097<2094		6543<4603	3-WAY CP6 TO 5-WAY CP4	*Call
2097<2094		6543<4604	4-WAY CP6 TO 5-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6543<4605	5-WAY CP6 TO 5-WAY CP4	*Call
2097<2094		6543<4606	6-WAY CP6 TO 5-WAY CP4	*Call
2097<2094		6543<4607	7-WAY CP6 TO 5-WAY CP4	*Call
2097<2094		6543<4608	8-WAY CP6 TO 5-WAY CP4	*Call
2097<2094		6543<4701	1-WAY CP5 TO 5-WAY CP4	*Call
2097<2094		6543<4702	2-WAY CP5 TO 5-WAY CP4	*Call
2097<2094		6543<4703	3-WAY CP5 TO 5-WAY CP4	*Call
2097<2094		6543<4704	4-WAY CP5 TO 5-WAY CP4	*Call
2097<2094		6543<4705	5-WAY CP5 TO 5-WAY CP4	*Call
2097<2094		6543<4706	6-WAY CP5 TO 5-WAY CP4	*Call
2097<2094		6543<4707	7-WAY CP5 TO 5-WAY CP4	*Call
2097<2094		6543<4708	8-WAY CP5 TO 5-WAY CP4	*Call
2097<2094		6543<4801	1-WAY CP4 TO 5-WAY CP4	*Call
2097<2094		6543<4802	2-WAY CP4 TO 5-WAY CP4	*Call
2097<2094		6543<4803	3-WAY CP4 TO 5-WAY CP4	*Call
2097<2094		6543<4804	4-WAY CP4 TO 5-WAY CP4	*Call
2097<2094		6543<4805	5-WAY CP4 TO 5-WAY CP4	*Call
2097<2094		6543<4806	6-WAY CP4 TO 5-WAY CP4	*Call
2097<2094		6543<4807	7-WAY CP4 TO 5-WAY CP4	*Call
2097<2094		6543<4808	8-WAY CP4 TO 5-WAY CP4	*Call
2097<2094		6544<4500	0-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4501	1-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4502	2-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4503	3-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4504	4-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4505	5-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4506	6-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4507	7-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4508	8-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4509	9-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4510	10-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4511	11-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4512	12-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4513	13-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4514	14-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4515	15-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4516	16-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4517	17-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4518	18-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4519	19-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4520	20-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4521	21-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4522	22-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4523	23-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4524	24-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4525	25-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4526	26-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4527	27-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4528	28-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4529	29-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4530	30-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4531	31-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4532	32-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4533	33-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4534	34-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4535	35-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4536	36-WAY CP7 TO 6-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6544<4537	37-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4538	38-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4539	39-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4540	40-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4541	41-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4542	42-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4543	43-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4544	44-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4545	45-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4546	46-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4547	47-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4548	48-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4549	49-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4550	50-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4551	51-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4552	52-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4553	53-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4554	54-WAY CP7 TO 6-WAY CP4	*Call
2097<2094		6544<4601	1-WAY CP6 TO 6-WAY CP4	*Call
2097<2094		6544<4602	2-WAY CP6 TO 6-WAY CP4	*Call
2097<2094		6544<4603	3-WAY CP6 TO 6-WAY CP4	*Call
2097<2094		6544<4604	4-WAY CP6 TO 6-WAY CP4	*Call
2097<2094		6544<4605	5-WAY CP6 TO 6-WAY CP4	*Call
2097<2094		6544<4606	6-WAY CP6 TO 6-WAY CP4	*Call
2097<2094		6544<4607	7-WAY CP6 TO 6-WAY CP4	*Call
2097<2094		6544<4608	8-WAY CP6 TO 6-WAY CP4	*Call
2097<2094		6544<4701	1-WAY CP5 TO 6-WAY CP4	*Call
2097<2094		6544<4702	2-WAY CP5 TO 6-WAY CP4	*Call
2097<2094		6544<4703	3-WAY CP5 TO 6-WAY CP4	*Call
2097<2094		6544<4704	4-WAY CP5 TO 6-WAY CP4	*Call
2097<2094		6544<4705	5-WAY CP5 TO 6-WAY CP4	*Call
2097<2094		6544<4706	6-WAY CP5 TO 6-WAY CP4	*Call
2097<2094		6544<4707	7-WAY CP5 TO 6-WAY CP4	*Call
2097<2094		6544<4708	8-WAY CP5 TO 6-WAY CP4	*Call
2097<2094		6544<4801	1-WAY CP4 TO 6-WAY CP4	*Call
2097<2094		6544<4802	2-WAY CP4 TO 6-WAY CP4	*Call
2097<2094		6544<4803	3-WAY CP4 TO 6-WAY CP4	*Call
2097<2094		6544<4804	4-WAY CP4 TO 6-WAY CP4	*Call
2097<2094		6544<4805	5-WAY CP4 TO 6-WAY CP4	*Call
2097<2094		6544<4806	6-WAY CP4 TO 6-WAY CP4	*Call
2097<2094		6544<4807	7-WAY CP4 TO 6-WAY CP4	*Call
2097<2094		6544<4808	8-WAY CP4 TO 6-WAY CP4	*Call
2097<2094		6545<4500	0-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4501	1-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4502	2-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4503	3-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4504	4-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4505	5-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4506	6-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4507	7-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4508	8-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4509	9-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4510	10-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4511	11-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4512	12-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4513	13-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4514	14-WAY CP7 TO 7-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6545<4515	15-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4516	16-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4517	17-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4518	18-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4519	19-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4520	20-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4521	21-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4522	22-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4523	23-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4524	24-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4525	25-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4526	26-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4527	27-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4528	28-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4529	29-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4530	30-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4531	31-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4532	32-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4533	33-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4534	34-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4535	35-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4536	36-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4537	37-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4538	38-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4539	39-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4540	40-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4541	41-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4542	42-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4543	43-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4544	44-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4545	45-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4546	46-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4547	47-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4548	48-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4549	49-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4550	50-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4551	51-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4552	52-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4553	53-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4554	54-WAY CP7 TO 7-WAY CP4	*Call
2097<2094		6545<4601	1-WAY CP6 TO 7-WAY CP4	*Call
2097<2094		6545<4602	2-WAY CP6 TO 7-WAY CP4	*Call
2097<2094		6545<4603	3-WAY CP6 TO 7-WAY CP4	*Call
2097<2094		6545<4604	4-WAY CP6 TO 7-WAY CP4	*Call
2097<2094		6545<4605	5-WAY CP6 TO 7-WAY CP4	*Call
2097<2094		6545<4606	6-WAY CP6 TO 7-WAY CP4	*Call
2097<2094		6545<4607	7-WAY CP6 TO 7-WAY CP4	*Call
2097<2094		6545<4608	8-WAY CP6 TO 7-WAY CP4	*Call
2097<2094		6545<4701	1-WAY CP5 TO 7-WAY CP4	*Call
2097<2094		6545<4702	2-WAY CP5 TO 7-WAY CP4	*Call
2097<2094		6545<4703	3-WAY CP5 TO 7-WAY CP4	*Call
2097<2094		6545<4704	4-WAY CP5 TO 7-WAY CP4	*Call
2097<2094		6545<4705	5-WAY CP5 TO 7-WAY CP4	*Call
2097<2094		6545<4706	6-WAY CP5 TO 7-WAY CP4	*Call
2097<2094		6545<4707	7-WAY CP5 TO 7-WAY CP4	*Call
2097<2094		6545<4708	8-WAY CP5 TO 7-WAY CP4	*Call
2097<2094		6545<4801	1-WAY CP4 TO 7-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6545<4802	2-WAY CP4 TO 7-WAY CP4	*Call
2097<2094		6545<4803	3-WAY CP4 TO 7-WAY CP4	*Call
2097<2094		6545<4804	4-WAY CP4 TO 7-WAY CP4	*Call
2097<2094		6545<4805	5-WAY CP4 TO 7-WAY CP4	*Call
2097<2094		6545<4806	6-WAY CP4 TO 7-WAY CP4	*Call
2097<2094		6545<4807	7-WAY CP4 TO 7-WAY CP4	*Call
2097<2094		6545<4808	8-WAY CP4 TO 7-WAY CP4	*Call
2097<2094		6546<4500	0-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4501	1-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4502	2-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4503	3-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4504	4-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4505	5-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4506	6-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4507	7-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4508	8-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4509	9-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4510	10-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4511	11-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4512	12-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4513	13-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4514	14-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4515	15-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4516	16-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4517	17-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4518	18-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4519	19-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4520	20-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4521	21-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4522	22-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4523	23-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4524	24-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4525	25-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4526	26-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4527	27-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4528	28-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4529	29-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4530	30-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4531	31-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4532	32-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4533	33-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4534	34-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4535	35-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4536	36-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4537	37-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4538	38-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4539	39-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4540	40-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4541	41-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4542	42-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4543	43-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4544	44-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4545	45-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4546	46-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4547	47-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4548	48-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4549	49-WAY CP7 TO 8-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6546<4550	50-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4551	51-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4552	52-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4553	53-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4554	54-WAY CP7 TO 8-WAY CP4	*Call
2097<2094		6546<4601	1-WAY CP6 TO 8-WAY CP4	*Call
2097<2094		6546<4602	2-WAY CP6 TO 8-WAY CP4	*Call
2097<2094		6546<4603	3-WAY CP6 TO 8-WAY CP4	*Call
2097<2094		6546<4604	4-WAY CP6 TO 8-WAY CP4	*Call
2097<2094		6546<4605	5-WAY CP6 TO 8-WAY CP4	*Call
2097<2094		6546<4606	6-WAY CP6 TO 8-WAY CP4	*Call
2097<2094		6546<4607	7-WAY CP6 TO 8-WAY CP4	*Call
2097<2094		6546<4608	8-WAY CP6 TO 8-WAY CP4	*Call
2097<2094		6546<4701	1-WAY CP5 TO 8-WAY CP4	*Call
2097<2094		6546<4702	2-WAY CP5 TO 8-WAY CP4	*Call
2097<2094		6546<4703	3-WAY CP5 TO 8-WAY CP4	*Call
2097<2094		6546<4704	4-WAY CP5 TO 8-WAY CP4	*Call
2097<2094		6546<4705	5-WAY CP5 TO 8-WAY CP4	*Call
2097<2094		6546<4706	6-WAY CP5 TO 8-WAY CP4	*Call
2097<2094		6546<4707	7-WAY CP5 TO 8-WAY CP4	*Call
2097<2094		6546<4708	8-WAY CP5 TO 8-WAY CP4	*Call
2097<2094		6546<4801	1-WAY CP4 TO 8-WAY CP4	*Call
2097<2094		6546<4802	2-WAY CP4 TO 8-WAY CP4	*Call
2097<2094		6546<4803	3-WAY CP4 TO 8-WAY CP4	*Call
2097<2094		6546<4804	4-WAY CP4 TO 8-WAY CP4	*Call
2097<2094		6546<4805	5-WAY CP4 TO 8-WAY CP4	*Call
2097<2094		6546<4806	6-WAY CP4 TO 8-WAY CP4	*Call
2097<2094		6546<4807	7-WAY CP4 TO 8-WAY CP4	*Call
2097<2094		6546<4808	8-WAY CP4 TO 8-WAY CP4	*Call
2097<2094		6547<4500	0-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4501	1-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4502	2-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4503	3-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4504	4-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4505	5-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4506	6-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4507	7-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4508	8-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4509	9-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4510	10-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4511	11-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4512	12-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4513	13-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4514	14-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4515	15-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4516	16-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4517	17-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4518	18-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4519	19-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4520	20-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4521	21-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4522	22-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4523	23-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4524	24-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4525	25-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4526	26-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4527	27-WAY CP7 TO 9-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6547<4528	28-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4529	29-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4530	30-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4531	31-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4532	32-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4533	33-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4534	34-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4535	35-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4536	36-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4537	37-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4538	38-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4539	39-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4540	40-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4541	41-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4542	42-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4543	43-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4544	44-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4545	45-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4546	46-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4547	47-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4548	48-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4549	49-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4550	50-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4551	51-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4552	52-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4553	53-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4554	54-WAY CP7 TO 9-WAY CP4	*Call
2097<2094		6547<4601	1-WAY CP6 TO 9-WAY CP4	*Call
2097<2094		6547<4602	2-WAY CP6 TO 9-WAY CP4	*Call
2097<2094		6547<4603	3-WAY CP6 TO 9-WAY CP4	*Call
2097<2094		6547<4604	4-WAY CP6 TO 9-WAY CP4	*Call
2097<2094		6547<4605	5-WAY CP6 TO 9-WAY CP4	*Call
2097<2094		6547<4606	6-WAY CP6 TO 9-WAY CP4	*Call
2097<2094		6547<4607	7-WAY CP6 TO 9-WAY CP4	*Call
2097<2094		6547<4608	8-WAY CP6 TO 9-WAY CP4	*Call
2097<2094		6547<4701	1-WAY CP5 TO 9-WAY CP4	*Call
2097<2094		6547<4702	2-WAY CP5 TO 9-WAY CP4	*Call
2097<2094		6547<4703	3-WAY CP5 TO 9-WAY CP4	*Call
2097<2094		6547<4704	4-WAY CP5 TO 9-WAY CP4	*Call
2097<2094		6547<4705	5-WAY CP5 TO 9-WAY CP4	*Call
2097<2094		6547<4706	6-WAY CP5 TO 9-WAY CP4	*Call
2097<2094		6547<4707	7-WAY CP5 TO 9-WAY CP4	*Call
2097<2094		6547<4708	8-WAY CP5 TO 9-WAY CP4	*Call
2097<2094		6547<4801	1-WAY CP4 TO 9-WAY CP4	*Call
2097<2094		6547<4802	2-WAY CP4 TO 9-WAY CP4	*Call
2097<2094		6547<4803	3-WAY CP4 TO 9-WAY CP4	*Call
2097<2094		6547<4804	4-WAY CP4 TO 9-WAY CP4	*Call
2097<2094		6547<4805	5-WAY CP4 TO 9-WAY CP4	*Call
2097<2094		6547<4806	6-WAY CP4 TO 9-WAY CP4	*Call
2097<2094		6547<4807	7-WAY CP4 TO 9-WAY CP4	*Call
2097<2094		6547<4808	8-WAY CP4 TO 9-WAY CP4	*Call
2097<2094		6548<4500	0-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4501	1-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4502	2-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4503	3-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4504	4-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4505	5-WAY CP7 TO 10-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6548<4506	6-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4507	7-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4508	8-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4509	9-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4510	10-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4511	11-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4512	12-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4513	13-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4514	14-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4515	15-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4516	16-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4517	17-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4518	18-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4519	19-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4520	20-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4521	21-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4522	22-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4523	23-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4524	24-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4525	25-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4526	26-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4527	27-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4528	28-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4529	29-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4530	30-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4531	31-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4532	32-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4533	33-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4534	34-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4535	35-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4536	36-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4537	37-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4538	38-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4539	39-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4540	40-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4541	41-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4542	42-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4543	43-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4544	44-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4545	45-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4546	46-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4547	47-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4548	48-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4549	49-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4550	50-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4551	51-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4552	52-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4553	53-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4554	54-WAY CP7 TO 10-WAY CP4	*Call
2097<2094		6548<4601	1-WAY CP6 TO 10-WAY CP4	*Call
2097<2094		6548<4602	2-WAY CP6 TO 10-WAY CP4	*Call
2097<2094		6548<4603	3-WAY CP6 TO 10-WAY CP4	*Call
2097<2094		6548<4604	4-WAY CP6 TO 10-WAY CP4	*Call
2097<2094		6548<4605	5-WAY CP6 TO 10-WAY CP4	*Call
2097<2094		6548<4606	6-WAY CP6 TO 10-WAY CP4	*Call
2097<2094		6548<4607	7-WAY CP6 TO 10-WAY CP4	*Call
2097<2094		6548<4608	8-WAY CP6 TO 10-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6548<4701	1-WAY CP5 TO 10-WAY CP4	*Call
2097<2094		6548<4702	2-WAY CP5 TO 10-WAY CP4	*Call
2097<2094		6548<4703	3-WAY CP5 TO 10-WAY CP4	*Call
2097<2094		6548<4704	4-WAY CP5 TO 10-WAY CP4	*Call
2097<2094		6548<4705	5-WAY CP5 TO 10-WAY CP4	*Call
2097<2094		6548<4706	6-WAY CP5 TO 10-WAY CP4	*Call
2097<2094		6548<4707	7-WAY CP5 TO 10-WAY CP4	*Call
2097<2094		6548<4708	8-WAY CP5 TO 10-WAY CP4	*Call
2097<2094		6548<4801	1-WAY CP4 TO 10-WAY CP4	*Call
2097<2094		6548<4802	2-WAY CP4 TO 10-WAY CP4	*Call
2097<2094		6548<4803	3-WAY CP4 TO 10-WAY CP4	*Call
2097<2094		6548<4804	4-WAY CP4 TO 10-WAY CP4	*Call
2097<2094		6548<4805	5-WAY CP4 TO 10-WAY CP4	*Call
2097<2094		6548<4806	6-WAY CP4 TO 10-WAY CP4	*Call
2097<2094		6548<4807	7-WAY CP4 TO 10-WAY CP4	*Call
2097<2094		6548<4808	8-WAY CP4 TO 10-WAY CP4	*Call
2097<2094		6549<4500	0-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4501	1-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4502	2-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4503	3-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4504	4-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4505	5-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4506	6-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4507	7-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4508	8-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4509	9-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4510	10-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4511	11-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4512	12-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4513	13-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4514	14-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4515	15-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4516	16-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4517	17-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4518	18-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4519	19-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4520	20-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4521	21-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4522	22-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4523	23-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4524	24-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4525	25-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4526	26-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4527	27-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4528	28-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4529	29-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4530	30-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4531	31-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4532	32-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4533	33-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4534	34-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4535	35-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4536	36-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4537	37-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4538	38-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4539	39-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4540	40-WAY CP7 TO 11-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6549<4541	41-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4542	42-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4543	43-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4544	44-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4545	45-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4546	46-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4547	47-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4548	48-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4549	49-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4550	50-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4551	51-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4552	52-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4553	53-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4554	54-WAY CP7 TO 11-WAY CP4	*Call
2097<2094		6549<4601	1-WAY CP6 TO 11-WAY CP4	*Call
2097<2094		6549<4602	2-WAY CP6 TO 11-WAY CP4	*Call
2097<2094		6549<4603	3-WAY CP6 TO 11-WAY CP4	*Call
2097<2094		6549<4604	4-WAY CP6 TO 11-WAY CP4	*Call
2097<2094		6549<4605	5-WAY CP6 TO 11-WAY CP4	*Call
2097<2094		6549<4606	6-WAY CP6 TO 11-WAY CP4	*Call
2097<2094		6549<4607	7-WAY CP6 TO 11-WAY CP4	*Call
2097<2094		6549<4608	8-WAY CP6 TO 11-WAY CP4	*Call
2097<2094		6549<4701	1-WAY CP5 TO 11-WAY CP4	*Call
2097<2094		6549<4702	2-WAY CP5 TO 11-WAY CP4	*Call
2097<2094		6549<4703	3-WAY CP5 TO 11-WAY CP4	*Call
2097<2094		6549<4704	4-WAY CP5 TO 11-WAY CP4	*Call
2097<2094		6549<4705	5-WAY CP5 TO 11-WAY CP4	*Call
2097<2094		6549<4706	6-WAY CP5 TO 11-WAY CP4	*Call
2097<2094		6549<4707	7-WAY CP5 TO 11-WAY CP4	*Call
2097<2094		6549<4708	8-WAY CP5 TO 11-WAY CP4	*Call
2097<2094		6549<4801	1-WAY CP4 TO 11-WAY CP4	*Call
2097<2094		6549<4802	2-WAY CP4 TO 11-WAY CP4	*Call
2097<2094		6549<4803	3-WAY CP4 TO 11-WAY CP4	*Call
2097<2094		6549<4804	4-WAY CP4 TO 11-WAY CP4	*Call
2097<2094		6549<4805	5-WAY CP4 TO 11-WAY CP4	*Call
2097<2094		6549<4806	6-WAY CP4 TO 11-WAY CP4	*Call
2097<2094		6549<4807	7-WAY CP4 TO 11-WAY CP4	*Call
2097<2094		6549<4808	8-WAY CP4 TO 11-WAY CP4	*Call
2097<2094		6550<4500	0-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4501	1-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4502	2-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4503	3-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4504	4-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4505	5-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4506	6-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4507	7-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4508	8-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4509	9-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4510	10-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4511	11-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4512	12-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4513	13-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4514	14-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4515	15-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4516	16-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4517	17-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4518	18-WAY CP7 TO 12-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6550<4519	19-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4520	20-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4521	21-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4522	22-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4523	23-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4524	24-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4525	25-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4526	26-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4527	27-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4528	28-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4529	29-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4530	30-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4531	31-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4532	32-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4533	33-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4534	34-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4535	35-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4536	36-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4537	37-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4538	38-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4539	39-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4540	40-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4541	41-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4542	42-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4543	43-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4544	44-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4545	45-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4546	46-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4547	47-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4548	48-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4549	49-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4550	50-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4551	51-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4552	52-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4553	53-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4554	54-WAY CP7 TO 12-WAY CP4	*Call
2097<2094		6550<4601	1-WAY CP6 TO 12-WAY CP4	*Call
2097<2094		6550<4602	2-WAY CP6 TO 12-WAY CP4	*Call
2097<2094		6550<4603	3-WAY CP6 TO 12-WAY CP4	*Call
2097<2094		6550<4604	4-WAY CP6 TO 12-WAY CP4	*Call
2097<2094		6550<4605	5-WAY CP6 TO 12-WAY CP4	*Call
2097<2094		6550<4606	6-WAY CP6 TO 12-WAY CP4	*Call
2097<2094		6550<4607	7-WAY CP6 TO 12-WAY CP4	*Call
2097<2094		6550<4608	8-WAY CP6 TO 12-WAY CP4	*Call
2097<2094		6550<4701	1-WAY CP5 TO 12-WAY CP4	*Call
2097<2094		6550<4702	2-WAY CP5 TO 12-WAY CP4	*Call
2097<2094		6550<4703	3-WAY CP5 TO 12-WAY CP4	*Call
2097<2094		6550<4704	4-WAY CP5 TO 12-WAY CP4	*Call
2097<2094		6550<4705	5-WAY CP5 TO 12-WAY CP4	*Call
2097<2094		6550<4706	6-WAY CP5 TO 12-WAY CP4	*Call
2097<2094		6550<4707	7-WAY CP5 TO 12-WAY CP4	*Call
2097<2094		6550<4708	8-WAY CP5 TO 12-WAY CP4	*Call
2097<2094		6550<4801	1-WAY CP4 TO 12-WAY CP4	*Call
2097<2094		6550<4802	2-WAY CP4 TO 12-WAY CP4	*Call
2097<2094		6550<4803	3-WAY CP4 TO 12-WAY CP4	*Call
2097<2094		6550<4804	4-WAY CP4 TO 12-WAY CP4	*Call
2097<2094		6550<4805	5-WAY CP4 TO 12-WAY CP4	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6550<4806	6-WAY CP4 TO 12-WAY CP4	*Call
2097<2094		6550<4807	7-WAY CP4 TO 12-WAY CP4	*Call
2097<2094		6550<4808	8-WAY CP4 TO 12-WAY CP4	*Call
2097<2094		6551<4500	0-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4501	1-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4502	2-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4503	3-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4504	4-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4505	5-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4506	6-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4507	7-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4508	8-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4509	9-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4510	10-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4511	11-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4512	12-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4513	13-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4514	14-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4515	15-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4516	16-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4517	17-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4518	18-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4519	19-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4520	20-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4521	21-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4522	22-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4523	23-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4524	24-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4525	25-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4526	26-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4527	27-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4528	28-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4529	29-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4530	30-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4531	31-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4532	32-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4533	33-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4534	34-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4535	35-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4536	36-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4537	37-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4538	38-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4539	39-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4540	40-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4541	41-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4542	42-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4543	43-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4544	44-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4545	45-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4546	46-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4547	47-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4548	48-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4549	49-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4550	50-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4551	51-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4552	52-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4553	53-WAY CP7 TO 1-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6551<4554	54-WAY CP7 TO 1-WAY CP5	*Call
2097<2094		6551<4601	1-WAY CP6 TO 1-WAY CP5	*Call
2097<2094		6551<4602	2-WAY CP6 TO 1-WAY CP5	*Call
2097<2094		6551<4603	3-WAY CP6 TO 1-WAY CP5	*Call
2097<2094		6551<4604	4-WAY CP6 TO 1-WAY CP5	*Call
2097<2094		6551<4605	5-WAY CP6 TO 1-WAY CP5	*Call
2097<2094		6551<4606	6-WAY CP6 TO 1-WAY CP5	*Call
2097<2094		6551<4607	7-WAY CP6 TO 1-WAY CP5	*Call
2097<2094		6551<4608	8-WAY CP6 TO 1-WAY CP5	*Call
2097<2094		6551<4701	1-WAY CP5 TO 1-WAY CP5	*Call
2097<2094		6551<4702	2-WAY CP5 TO 1-WAY CP5	*Call
2097<2094		6551<4703	3-WAY CP5 TO 1-WAY CP5	*Call
2097<2094		6551<4704	4-WAY CP5 TO 1-WAY CP5	*Call
2097<2094		6551<4705	5-WAY CP5 TO 1-WAY CP5	*Call
2097<2094		6551<4706	6-WAY CP5 TO 1-WAY CP5	*Call
2097<2094		6551<4707	7-WAY CP5 TO 1-WAY CP5	*Call
2097<2094		6551<4708	8-WAY CP5 TO 1-WAY CP5	*Call
2097<2094		6551<4801	1-WAY CP4 TO 1-WAY CP5	*Call
2097<2094		6551<4802	2-WAY CP4 TO 1-WAY CP5	*Call
2097<2094		6551<4803	3-WAY CP4 TO 1-WAY CP5	*Call
2097<2094		6551<4804	4-WAY CP4 TO 1-WAY CP5	*Call
2097<2094		6551<4805	5-WAY CP4 TO 1-WAY CP5	*Call
2097<2094		6551<4806	6-WAY CP4 TO 1-WAY CP5	*Call
2097<2094		6551<4807	7-WAY CP4 TO 1-WAY CP5	*Call
2097<2094		6551<4808	8-WAY CP4 TO 1-WAY CP5	*Call
2097<2094		6552<4500	0-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4501	1-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4502	2-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4503	3-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4504	4-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4505	5-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4506	6-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4507	7-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4508	8-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4509	9-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4510	10-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4511	11-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4512	12-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4513	13-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4514	14-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4515	15-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4516	16-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4517	17-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4518	18-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4519	19-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4520	20-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4521	21-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4522	22-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4523	23-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4524	24-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4525	25-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4526	26-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4527	27-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4528	28-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4529	29-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4530	30-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4531	31-WAY CP7 TO 2-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6552<4532	32-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4533	33-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4534	34-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4535	35-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4536	36-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4537	37-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4538	38-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4539	39-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4540	40-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4541	41-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4542	42-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4543	43-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4544	44-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4545	45-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4546	46-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4547	47-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4548	48-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4549	49-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4550	50-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4551	51-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4552	52-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4553	53-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4554	54-WAY CP7 TO 2-WAY CP5	*Call
2097<2094		6552<4601	1-WAY CP6 TO 2-WAY CP5	*Call
2097<2094		6552<4602	2-WAY CP6 TO 2-WAY CP5	*Call
2097<2094		6552<4603	3-WAY CP6 TO 2-WAY CP5	*Call
2097<2094		6552<4604	4-WAY CP6 TO 2-WAY CP5	*Call
2097<2094		6552<4605	5-WAY CP6 TO 2-WAY CP5	*Call
2097<2094		6552<4606	6-WAY CP6 TO 2-WAY CP5	*Call
2097<2094		6552<4607	7-WAY CP6 TO 2-WAY CP5	*Call
2097<2094		6552<4608	8-WAY CP6 TO 2-WAY CP5	*Call
2097<2094		6552<4701	1-WAY CP5 TO 2-WAY CP5	*Call
2097<2094		6552<4702	2-WAY CP5 TO 2-WAY CP5	*Call
2097<2094		6552<4703	3-WAY CP5 TO 2-WAY CP5	*Call
2097<2094		6552<4704	4-WAY CP5 TO 2-WAY CP5	*Call
2097<2094		6552<4705	5-WAY CP5 TO 2-WAY CP5	*Call
2097<2094		6552<4706	6-WAY CP5 TO 2-WAY CP5	*Call
2097<2094		6552<4707	7-WAY CP5 TO 2-WAY CP5	*Call
2097<2094		6552<4708	8-WAY CP5 TO 2-WAY CP5	*Call
2097<2094		6552<4801	1-WAY CP4 TO 2-WAY CP5	*Call
2097<2094		6552<4802	2-WAY CP4 TO 2-WAY CP5	*Call
2097<2094		6552<4803	3-WAY CP4 TO 2-WAY CP5	*Call
2097<2094		6552<4804	4-WAY CP4 TO 2-WAY CP5	*Call
2097<2094		6552<4805	5-WAY CP4 TO 2-WAY CP5	*Call
2097<2094		6552<4806	6-WAY CP4 TO 2-WAY CP5	*Call
2097<2094		6552<4807	7-WAY CP4 TO 2-WAY CP5	*Call
2097<2094		6552<4808	8-WAY CP4 TO 2-WAY CP5	*Call
2097<2094		6553<4500	0-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4501	1-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4502	2-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4503	3-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4504	4-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4505	5-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4506	6-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4507	7-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4508	8-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4509	9-WAY CP7 TO 3-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6553<4510	10-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4511	11-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4512	12-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4513	13-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4514	14-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4515	15-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4516	16-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4517	17-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4518	18-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4519	19-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4520	20-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4521	21-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4522	22-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4523	23-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4524	24-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4525	25-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4526	26-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4527	27-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4528	28-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4529	29-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4530	30-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4531	31-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4532	32-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4533	33-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4534	34-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4535	35-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4536	36-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4537	37-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4538	38-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4539	39-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4540	40-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4541	41-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4542	42-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4543	43-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4544	44-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4545	45-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4546	46-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4547	47-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4548	48-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4549	49-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4550	50-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4551	51-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4552	52-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4553	53-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4554	54-WAY CP7 TO 3-WAY CP5	*Call
2097<2094		6553<4601	1-WAY CP6 TO 3-WAY CP5	*Call
2097<2094		6553<4602	2-WAY CP6 TO 3-WAY CP5	*Call
2097<2094		6553<4603	3-WAY CP6 TO 3-WAY CP5	*Call
2097<2094		6553<4604	4-WAY CP6 TO 3-WAY CP5	*Call
2097<2094		6553<4605	5-WAY CP6 TO 3-WAY CP5	*Call
2097<2094		6553<4606	6-WAY CP6 TO 3-WAY CP5	*Call
2097<2094		6553<4607	7-WAY CP6 TO 3-WAY CP5	*Call
2097<2094		6553<4608	8-WAY CP6 TO 3-WAY CP5	*Call
2097<2094		6553<4701	1-WAY CP5 TO 3-WAY CP5	*Call
2097<2094		6553<4702	2-WAY CP5 TO 3-WAY CP5	*Call
2097<2094		6553<4703	3-WAY CP5 TO 3-WAY CP5	*Call
2097<2094		6553<4704	4-WAY CP5 TO 3-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6553<4705	5-WAY CP5 TO 3-WAY CP5	*Call
2097<2094		6553<4706	6-WAY CP5 TO 3-WAY CP5	*Call
2097<2094		6553<4707	7-WAY CP5 TO 3-WAY CP5	*Call
2097<2094		6553<4708	8-WAY CP5 TO 3-WAY CP5	*Call
2097<2094		6553<4801	1-WAY CP4 TO 3-WAY CP5	*Call
2097<2094		6553<4802	2-WAY CP4 TO 3-WAY CP5	*Call
2097<2094		6553<4803	3-WAY CP4 TO 3-WAY CP5	*Call
2097<2094		6553<4804	4-WAY CP4 TO 3-WAY CP5	*Call
2097<2094		6553<4805	5-WAY CP4 TO 3-WAY CP5	*Call
2097<2094		6553<4806	6-WAY CP4 TO 3-WAY CP5	*Call
2097<2094		6553<4807	7-WAY CP4 TO 3-WAY CP5	*Call
2097<2094		6553<4808	8-WAY CP4 TO 3-WAY CP5	*Call
2097<2094		6554<4500	0-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4501	1-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4502	2-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4503	3-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4504	4-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4505	5-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4506	6-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4507	7-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4508	8-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4509	9-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4510	10-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4511	11-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4512	12-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4513	13-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4514	14-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4515	15-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4516	16-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4517	17-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4518	18-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4519	19-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4520	20-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4521	21-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4522	22-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4523	23-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4524	24-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4525	25-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4526	26-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4527	27-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4528	28-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4529	29-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4530	30-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4531	31-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4532	32-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4533	33-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4534	34-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4535	35-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4536	36-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4537	37-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4538	38-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4539	39-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4540	40-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4541	41-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4542	42-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4543	43-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4544	44-WAY CP7 TO 4-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6554<4545	45-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4546	46-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4547	47-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4548	48-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4549	49-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4550	50-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4551	51-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4552	52-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4553	53-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4554	54-WAY CP7 TO 4-WAY CP5	*Call
2097<2094		6554<4601	1-WAY CP6 TO 4-WAY CP5	*Call
2097<2094		6554<4602	2-WAY CP6 TO 4-WAY CP5	*Call
2097<2094		6554<4603	3-WAY CP6 TO 4-WAY CP5	*Call
2097<2094		6554<4604	4-WAY CP6 TO 4-WAY CP5	*Call
2097<2094		6554<4605	5-WAY CP6 TO 4-WAY CP5	*Call
2097<2094		6554<4606	6-WAY CP6 TO 4-WAY CP5	*Call
2097<2094		6554<4607	7-WAY CP6 TO 4-WAY CP5	*Call
2097<2094		6554<4608	8-WAY CP6 TO 4-WAY CP5	*Call
2097<2094		6554<4701	1-WAY CP5 TO 4-WAY CP5	*Call
2097<2094		6554<4702	2-WAY CP5 TO 4-WAY CP5	*Call
2097<2094		6554<4703	3-WAY CP5 TO 4-WAY CP5	*Call
2097<2094		6554<4704	4-WAY CP5 TO 4-WAY CP5	*Call
2097<2094		6554<4705	5-WAY CP5 TO 4-WAY CP5	*Call
2097<2094		6554<4706	6-WAY CP5 TO 4-WAY CP5	*Call
2097<2094		6554<4707	7-WAY CP5 TO 4-WAY CP5	*Call
2097<2094		6554<4708	8-WAY CP5 TO 4-WAY CP5	*Call
2097<2094		6554<4801	1-WAY CP4 TO 4-WAY CP5	*Call
2097<2094		6554<4802	2-WAY CP4 TO 4-WAY CP5	*Call
2097<2094		6554<4803	3-WAY CP4 TO 4-WAY CP5	*Call
2097<2094		6554<4804	4-WAY CP4 TO 4-WAY CP5	*Call
2097<2094		6554<4805	5-WAY CP4 TO 4-WAY CP5	*Call
2097<2094		6554<4806	6-WAY CP4 TO 4-WAY CP5	*Call
2097<2094		6554<4807	7-WAY CP4 TO 4-WAY CP5	*Call
2097<2094		6554<4808	8-WAY CP4 TO 4-WAY CP5	*Call
2097<2094		6555<4500	0-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4501	1-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4502	2-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4503	3-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4504	4-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4505	5-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4506	6-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4507	7-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4508	8-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4509	9-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4510	10-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4511	11-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4512	12-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4513	13-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4514	14-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4515	15-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4516	16-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4517	17-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4518	18-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4519	19-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4520	20-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4521	21-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4522	22-WAY CP7 TO 5-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6555<4523	23-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4524	24-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4525	25-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4526	26-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4527	27-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4528	28-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4529	29-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4530	30-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4531	31-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4532	32-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4533	33-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4534	34-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4535	35-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4536	36-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4537	37-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4538	38-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4539	39-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4540	40-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4541	41-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4542	42-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4543	43-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4544	44-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4545	45-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4546	46-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4547	47-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4548	48-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4549	49-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4550	50-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4551	51-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4552	52-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4553	53-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4554	54-WAY CP7 TO 5-WAY CP5	*Call
2097<2094		6555<4601	1-WAY CP6 TO 5-WAY CP5	*Call
2097<2094		6555<4602	2-WAY CP6 TO 5-WAY CP5	*Call
2097<2094		6555<4603	3-WAY CP6 TO 5-WAY CP5	*Call
2097<2094		6555<4604	4-WAY CP6 TO 5-WAY CP5	*Call
2097<2094		6555<4605	5-WAY CP6 TO 5-WAY CP5	*Call
2097<2094		6555<4606	6-WAY CP6 TO 5-WAY CP5	*Call
2097<2094		6555<4607	7-WAY CP6 TO 5-WAY CP5	*Call
2097<2094		6555<4608	8-WAY CP6 TO 5-WAY CP5	*Call
2097<2094		6555<4701	1-WAY CP5 TO 5-WAY CP5	*Call
2097<2094		6555<4702	2-WAY CP5 TO 5-WAY CP5	*Call
2097<2094		6555<4703	3-WAY CP5 TO 5-WAY CP5	*Call
2097<2094		6555<4704	4-WAY CP5 TO 5-WAY CP5	*Call
2097<2094		6555<4705	5-WAY CP5 TO 5-WAY CP5	*Call
2097<2094		6555<4706	6-WAY CP5 TO 5-WAY CP5	*Call
2097<2094		6555<4707	7-WAY CP5 TO 5-WAY CP5	*Call
2097<2094		6555<4708	8-WAY CP5 TO 5-WAY CP5	*Call
2097<2094		6555<4801	1-WAY CP4 TO 5-WAY CP5	*Call
2097<2094		6555<4802	2-WAY CP4 TO 5-WAY CP5	*Call
2097<2094		6555<4803	3-WAY CP4 TO 5-WAY CP5	*Call
2097<2094		6555<4804	4-WAY CP4 TO 5-WAY CP5	*Call
2097<2094		6555<4805	5-WAY CP4 TO 5-WAY CP5	*Call
2097<2094		6555<4806	6-WAY CP4 TO 5-WAY CP5	*Call
2097<2094		6555<4807	7-WAY CP4 TO 5-WAY CP5	*Call
2097<2094		6555<4808	8-WAY CP4 TO 5-WAY CP5	*Call
2097<2094		6556<4500	0-WAY CP7 TO 6-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6556<4501	1-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4502	2-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4503	3-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4504	4-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4505	5-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4506	6-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4507	7-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4508	8-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4509	9-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4510	10-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4511	11-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4512	12-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4513	13-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4514	14-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4515	15-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4516	16-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4517	17-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4518	18-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4519	19-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4520	20-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4521	21-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4522	22-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4523	23-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4524	24-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4525	25-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4526	26-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4527	27-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4528	28-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4529	29-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4530	30-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4531	31-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4532	32-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4533	33-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4534	34-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4535	35-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4536	36-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4537	37-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4538	38-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4539	39-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4540	40-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4541	41-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4542	42-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4543	43-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4544	44-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4545	45-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4546	46-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4547	47-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4548	48-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4549	49-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4550	50-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4551	51-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4552	52-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4553	53-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4554	54-WAY CP7 TO 6-WAY CP5	*Call
2097<2094		6556<4601	1-WAY CP6 TO 6-WAY CP5	*Call
2097<2094		6556<4602	2-WAY CP6 TO 6-WAY CP5	*Call
2097<2094		6556<4603	3-WAY CP6 TO 6-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6556<4604	4-WAY CP6 TO 6-WAY CP5	*Call
2097<2094		6556<4605	5-WAY CP6 TO 6-WAY CP5	*Call
2097<2094		6556<4606	6-WAY CP6 TO 6-WAY CP5	*Call
2097<2094		6556<4607	7-WAY CP6 TO 6-WAY CP5	*Call
2097<2094		6556<4608	8-WAY CP6 TO 6-WAY CP5	*Call
2097<2094		6556<4701	1-WAY CP5 TO 6-WAY CP5	*Call
2097<2094		6556<4702	2-WAY CP5 TO 6-WAY CP5	*Call
2097<2094		6556<4703	3-WAY CP5 TO 6-WAY CP5	*Call
2097<2094		6556<4704	4-WAY CP5 TO 6-WAY CP5	*Call
2097<2094		6556<4705	5-WAY CP5 TO 6-WAY CP5	*Call
2097<2094		6556<4706	6-WAY CP5 TO 6-WAY CP5	*Call
2097<2094		6556<4707	7-WAY CP5 TO 6-WAY CP5	*Call
2097<2094		6556<4708	8-WAY CP5 TO 6-WAY CP5	*Call
2097<2094		6556<4801	1-WAY CP4 TO 6-WAY CP5	*Call
2097<2094		6556<4802	2-WAY CP4 TO 6-WAY CP5	*Call
2097<2094		6556<4803	3-WAY CP4 TO 6-WAY CP5	*Call
2097<2094		6556<4804	4-WAY CP4 TO 6-WAY CP5	*Call
2097<2094		6556<4805	5-WAY CP4 TO 6-WAY CP5	*Call
2097<2094		6556<4806	6-WAY CP4 TO 6-WAY CP5	*Call
2097<2094		6556<4807	7-WAY CP4 TO 6-WAY CP5	*Call
2097<2094		6556<4808	8-WAY CP4 TO 6-WAY CP5	*Call
2097<2094		6557<4500	0-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4501	1-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4502	2-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4503	3-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4504	4-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4505	5-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4506	6-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4507	7-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4508	8-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4509	9-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4510	10-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4511	11-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4512	12-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4513	13-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4514	14-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4515	15-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4516	16-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4517	17-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4518	18-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4519	19-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4520	20-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4521	21-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4522	22-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4523	23-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4524	24-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4525	25-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4526	26-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4527	27-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4528	28-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4529	29-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4530	30-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4531	31-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4532	32-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4533	33-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4534	34-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4535	35-WAY CP7 TO 7-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6557<4536	36-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4537	37-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4538	38-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4539	39-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4540	40-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4541	41-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4542	42-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4543	43-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4544	44-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4545	45-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4546	46-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4547	47-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4548	48-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4549	49-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4550	50-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4551	51-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4552	52-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4553	53-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4554	54-WAY CP7 TO 7-WAY CP5	*Call
2097<2094		6557<4601	1-WAY CP6 TO 7-WAY CP5	*Call
2097<2094		6557<4602	2-WAY CP6 TO 7-WAY CP5	*Call
2097<2094		6557<4603	3-WAY CP6 TO 7-WAY CP5	*Call
2097<2094		6557<4604	4-WAY CP6 TO 7-WAY CP5	*Call
2097<2094		6557<4605	5-WAY CP6 TO 7-WAY CP5	*Call
2097<2094		6557<4606	6-WAY CP6 TO 7-WAY CP5	*Call
2097<2094		6557<4607	7-WAY CP6 TO 7-WAY CP5	*Call
2097<2094		6557<4608	8-WAY CP6 TO 7-WAY CP5	*Call
2097<2094		6557<4701	1-WAY CP5 TO 7-WAY CP5	*Call
2097<2094		6557<4702	2-WAY CP5 TO 7-WAY CP5	*Call
2097<2094		6557<4703	3-WAY CP5 TO 7-WAY CP5	*Call
2097<2094		6557<4704	4-WAY CP5 TO 7-WAY CP5	*Call
2097<2094		6557<4705	5-WAY CP5 TO 7-WAY CP5	*Call
2097<2094		6557<4706	6-WAY CP5 TO 7-WAY CP5	*Call
2097<2094		6557<4707	7-WAY CP5 TO 7-WAY CP5	*Call
2097<2094		6557<4708	8-WAY CP5 TO 7-WAY CP5	*Call
2097<2094		6557<4801	1-WAY CP4 TO 7-WAY CP5	*Call
2097<2094		6557<4802	2-WAY CP4 TO 7-WAY CP5	*Call
2097<2094		6557<4803	3-WAY CP4 TO 7-WAY CP5	*Call
2097<2094		6557<4804	4-WAY CP4 TO 7-WAY CP5	*Call
2097<2094		6557<4805	5-WAY CP4 TO 7-WAY CP5	*Call
2097<2094		6557<4806	6-WAY CP4 TO 7-WAY CP5	*Call
2097<2094		6557<4807	7-WAY CP4 TO 7-WAY CP5	*Call
2097<2094		6557<4808	8-WAY CP4 TO 7-WAY CP5	*Call
2097<2094		6558<4500	0-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4501	1-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4502	2-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4503	3-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4504	4-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4505	5-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4506	6-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4507	7-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4508	8-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4509	9-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4510	10-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4511	11-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4512	12-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4513	13-WAY CP7 TO 8-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6558<4514	14-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4515	15-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4516	16-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4517	17-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4518	18-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4519	19-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4520	20-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4521	21-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4522	22-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4523	23-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4524	24-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4525	25-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4526	26-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4527	27-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4528	28-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4529	29-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4530	30-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4531	31-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4532	32-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4533	33-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4534	34-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4535	35-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4536	36-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4537	37-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4538	38-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4539	39-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4540	40-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4541	41-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4542	42-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4543	43-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4544	44-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4545	45-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4546	46-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4547	47-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4548	48-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4549	49-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4550	50-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4551	51-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4552	52-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4553	53-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4554	54-WAY CP7 TO 8-WAY CP5	*Call
2097<2094		6558<4601	1-WAY CP6 TO 8-WAY CP5	*Call
2097<2094		6558<4602	2-WAY CP6 TO 8-WAY CP5	*Call
2097<2094		6558<4603	3-WAY CP6 TO 8-WAY CP5	*Call
2097<2094		6558<4604	4-WAY CP6 TO 8-WAY CP5	*Call
2097<2094		6558<4605	5-WAY CP6 TO 8-WAY CP5	*Call
2097<2094		6558<4606	6-WAY CP6 TO 8-WAY CP5	*Call
2097<2094		6558<4607	7-WAY CP6 TO 8-WAY CP5	*Call
2097<2094		6558<4608	8-WAY CP6 TO 8-WAY CP5	*Call
2097<2094		6558<4701	1-WAY CP5 TO 8-WAY CP5	*Call
2097<2094		6558<4702	2-WAY CP5 TO 8-WAY CP5	*Call
2097<2094		6558<4703	3-WAY CP5 TO 8-WAY CP5	*Call
2097<2094		6558<4704	4-WAY CP5 TO 8-WAY CP5	*Call
2097<2094		6558<4705	5-WAY CP5 TO 8-WAY CP5	*Call
2097<2094		6558<4706	6-WAY CP5 TO 8-WAY CP5	*Call
2097<2094		6558<4707	7-WAY CP5 TO 8-WAY CP5	*Call
2097<2094		6558<4708	8-WAY CP5 TO 8-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6558<4801	1-WAY CP4 TO 8-WAY CP5	*Call
2097<2094		6558<4802	2-WAY CP4 TO 8-WAY CP5	*Call
2097<2094		6558<4803	3-WAY CP4 TO 8-WAY CP5	*Call
2097<2094		6558<4804	4-WAY CP4 TO 8-WAY CP5	*Call
2097<2094		6558<4805	5-WAY CP4 TO 8-WAY CP5	*Call
2097<2094		6558<4806	6-WAY CP4 TO 8-WAY CP5	*Call
2097<2094		6558<4807	7-WAY CP4 TO 8-WAY CP5	*Call
2097<2094		6558<4808	8-WAY CP4 TO 8-WAY CP5	*Call
2097<2094		6559<4500	0-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4501	1-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4502	2-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4503	3-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4504	4-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4505	5-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4506	6-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4507	7-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4508	8-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4509	9-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4510	10-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4511	11-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4512	12-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4513	13-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4514	14-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4515	15-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4516	16-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4517	17-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4518	18-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4519	19-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4520	20-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4521	21-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4522	22-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4523	23-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4524	24-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4525	25-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4526	26-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4527	27-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4528	28-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4529	29-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4530	30-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4531	31-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4532	32-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4533	33-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4534	34-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4535	35-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4536	36-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4537	37-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4538	38-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4539	39-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4540	40-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4541	41-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4542	42-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4543	43-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4544	44-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4545	45-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4546	46-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4547	47-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4548	48-WAY CP7 TO 9-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6559<4549	49-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4550	50-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4551	51-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4552	52-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4553	53-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4554	54-WAY CP7 TO 9-WAY CP5	*Call
2097<2094		6559<4601	1-WAY CP6 TO 9-WAY CP5	*Call
2097<2094		6559<4602	2-WAY CP6 TO 9-WAY CP5	*Call
2097<2094		6559<4603	3-WAY CP6 TO 9-WAY CP5	*Call
2097<2094		6559<4604	4-WAY CP6 TO 9-WAY CP5	*Call
2097<2094		6559<4605	5-WAY CP6 TO 9-WAY CP5	*Call
2097<2094		6559<4606	6-WAY CP6 TO 9-WAY CP5	*Call
2097<2094		6559<4607	7-WAY CP6 TO 9-WAY CP5	*Call
2097<2094		6559<4608	8-WAY CP6 TO 9-WAY CP5	*Call
2097<2094		6559<4701	1-WAY CP5 TO 9-WAY CP5	*Call
2097<2094		6559<4702	2-WAY CP5 TO 9-WAY CP5	*Call
2097<2094		6559<4703	3-WAY CP5 TO 9-WAY CP5	*Call
2097<2094		6559<4704	4-WAY CP5 TO 9-WAY CP5	*Call
2097<2094		6559<4705	5-WAY CP5 TO 9-WAY CP5	*Call
2097<2094		6559<4706	6-WAY CP5 TO 9-WAY CP5	*Call
2097<2094		6559<4707	7-WAY CP5 TO 9-WAY CP5	*Call
2097<2094		6559<4708	8-WAY CP5 TO 9-WAY CP5	*Call
2097<2094		6559<4801	1-WAY CP4 TO 9-WAY CP5	*Call
2097<2094		6559<4802	2-WAY CP4 TO 9-WAY CP5	*Call
2097<2094		6559<4803	3-WAY CP4 TO 9-WAY CP5	*Call
2097<2094		6559<4804	4-WAY CP4 TO 9-WAY CP5	*Call
2097<2094		6559<4805	5-WAY CP4 TO 9-WAY CP5	*Call
2097<2094		6559<4806	6-WAY CP4 TO 9-WAY CP5	*Call
2097<2094		6559<4807	7-WAY CP4 TO 9-WAY CP5	*Call
2097<2094		6559<4808	8-WAY CP4 TO 9-WAY CP5	*Call
2097<2094		6560<4500	0-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4501	1-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4502	2-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4503	3-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4504	4-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4505	5-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4506	6-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4507	7-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4508	8-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4509	9-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4510	10-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4511	11-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4512	12-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4513	13-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4514	14-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4515	15-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4516	16-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4517	17-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4518	18-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4519	19-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4520	20-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4521	21-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4522	22-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4523	23-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4524	24-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4525	25-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4526	26-WAY CP7 TO 10-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6560<4527	27-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4528	28-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4529	29-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4530	30-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4531	31-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4532	32-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4533	33-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4534	34-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4535	35-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4536	36-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4537	37-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4538	38-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4539	39-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4540	40-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4541	41-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4542	42-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4543	43-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4544	44-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4545	45-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4546	46-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4547	47-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4548	48-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4549	49-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4550	50-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4551	51-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4552	52-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4553	53-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4554	54-WAY CP7 TO 10-WAY CP5	*Call
2097<2094		6560<4601	1-WAY CP6 TO 10-WAY CP5	*Call
2097<2094		6560<4602	2-WAY CP6 TO 10-WAY CP5	*Call
2097<2094		6560<4603	3-WAY CP6 TO 10-WAY CP5	*Call
2097<2094		6560<4604	4-WAY CP6 TO 10-WAY CP5	*Call
2097<2094		6560<4605	5-WAY CP6 TO 10-WAY CP5	*Call
2097<2094		6560<4606	6-WAY CP6 TO 10-WAY CP5	*Call
2097<2094		6560<4607	7-WAY CP6 TO 10-WAY CP5	*Call
2097<2094		6560<4608	8-WAY CP6 TO 10-WAY CP5	*Call
2097<2094		6560<4701	1-WAY CP5 TO 10-WAY CP5	*Call
2097<2094		6560<4702	2-WAY CP5 TO 10-WAY CP5	*Call
2097<2094		6560<4703	3-WAY CP5 TO 10-WAY CP5	*Call
2097<2094		6560<4704	4-WAY CP5 TO 10-WAY CP5	*Call
2097<2094		6560<4705	5-WAY CP5 TO 10-WAY CP5	*Call
2097<2094		6560<4706	6-WAY CP5 TO 10-WAY CP5	*Call
2097<2094		6560<4707	7-WAY CP5 TO 10-WAY CP5	*Call
2097<2094		6560<4708	8-WAY CP5 TO 10-WAY CP5	*Call
2097<2094		6560<4801	1-WAY CP4 TO 10-WAY CP5	*Call
2097<2094		6560<4802	2-WAY CP4 TO 10-WAY CP5	*Call
2097<2094		6560<4803	3-WAY CP4 TO 10-WAY CP5	*Call
2097<2094		6560<4804	4-WAY CP4 TO 10-WAY CP5	*Call
2097<2094		6560<4805	5-WAY CP4 TO 10-WAY CP5	*Call
2097<2094		6560<4806	6-WAY CP4 TO 10-WAY CP5	*Call
2097<2094		6560<4807	7-WAY CP4 TO 10-WAY CP5	*Call
2097<2094		6560<4808	8-WAY CP4 TO 10-WAY CP5	*Call
2097<2094		6561<4500	0-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4501	1-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4502	2-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4503	3-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4504	4-WAY CP7 TO 11-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6561<4505	5-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4506	6-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4507	7-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4508	8-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4509	9-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4510	10-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4511	11-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4512	12-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4513	13-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4514	14-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4515	15-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4516	16-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4517	17-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4518	18-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4519	19-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4520	20-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4521	21-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4522	22-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4523	23-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4524	24-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4525	25-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4526	26-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4527	27-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4528	28-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4529	29-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4530	30-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4531	31-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4532	32-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4533	33-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4534	34-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4535	35-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4536	36-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4537	37-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4538	38-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4539	39-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4540	40-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4541	41-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4542	42-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4543	43-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4544	44-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4545	45-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4546	46-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4547	47-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4548	48-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4549	49-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4550	50-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4551	51-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4552	52-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4553	53-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4554	54-WAY CP7 TO 11-WAY CP5	*Call
2097<2094		6561<4601	1-WAY CP6 TO 11-WAY CP5	*Call
2097<2094		6561<4602	2-WAY CP6 TO 11-WAY CP5	*Call
2097<2094		6561<4603	3-WAY CP6 TO 11-WAY CP5	*Call
2097<2094		6561<4604	4-WAY CP6 TO 11-WAY CP5	*Call
2097<2094		6561<4605	5-WAY CP6 TO 11-WAY CP5	*Call
2097<2094		6561<4606	6-WAY CP6 TO 11-WAY CP5	*Call
2097<2094		6561<4607	7-WAY CP6 TO 11-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6561<4608	8-WAY CP6 TO 11-WAY CP5	*Call
2097<2094		6561<4701	1-WAY CP5 TO 11-WAY CP5	*Call
2097<2094		6561<4702	2-WAY CP5 TO 11-WAY CP5	*Call
2097<2094		6561<4703	3-WAY CP5 TO 11-WAY CP5	*Call
2097<2094		6561<4704	4-WAY CP5 TO 11-WAY CP5	*Call
2097<2094		6561<4705	5-WAY CP5 TO 11-WAY CP5	*Call
2097<2094		6561<4706	6-WAY CP5 TO 11-WAY CP5	*Call
2097<2094		6561<4707	7-WAY CP5 TO 11-WAY CP5	*Call
2097<2094		6561<4708	8-WAY CP5 TO 11-WAY CP5	*Call
2097<2094		6561<4801	1-WAY CP4 TO 11-WAY CP5	*Call
2097<2094		6561<4802	2-WAY CP4 TO 11-WAY CP5	*Call
2097<2094		6561<4803	3-WAY CP4 TO 11-WAY CP5	*Call
2097<2094		6561<4804	4-WAY CP4 TO 11-WAY CP5	*Call
2097<2094		6561<4805	5-WAY CP4 TO 11-WAY CP5	*Call
2097<2094		6561<4806	6-WAY CP4 TO 11-WAY CP5	*Call
2097<2094		6561<4807	7-WAY CP4 TO 11-WAY CP5	*Call
2097<2094		6561<4808	8-WAY CP4 TO 11-WAY CP5	*Call
2097<2094		6562<4500	0-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4501	1-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4502	2-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4503	3-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4504	4-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4505	5-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4506	6-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4507	7-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4508	8-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4509	9-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4510	10-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4511	11-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4512	12-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4513	13-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4514	14-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4515	15-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4516	16-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4517	17-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4518	18-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4519	19-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4520	20-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4521	21-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4522	22-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4523	23-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4524	24-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4525	25-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4526	26-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4527	27-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4528	28-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4529	29-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4530	30-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4531	31-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4532	32-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4533	33-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4534	34-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4535	35-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4536	36-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4537	37-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4538	38-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4539	39-WAY CP7 TO 12-WAY CP5	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6562<4540	40-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4541	41-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4542	42-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4543	43-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4544	44-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4545	45-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4546	46-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4547	47-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4548	48-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4549	49-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4550	50-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4551	51-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4552	52-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4553	53-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4554	54-WAY CP7 TO 12-WAY CP5	*Call
2097<2094		6562<4601	1-WAY CP6 TO 12-WAY CP5	*Call
2097<2094		6562<4602	2-WAY CP6 TO 12-WAY CP5	*Call
2097<2094		6562<4603	3-WAY CP6 TO 12-WAY CP5	*Call
2097<2094		6562<4604	4-WAY CP6 TO 12-WAY CP5	*Call
2097<2094		6562<4605	5-WAY CP6 TO 12-WAY CP5	*Call
2097<2094		6562<4606	6-WAY CP6 TO 12-WAY CP5	*Call
2097<2094		6562<4607	7-WAY CP6 TO 12-WAY CP5	*Call
2097<2094		6562<4608	8-WAY CP6 TO 12-WAY CP5	*Call
2097<2094		6562<4701	1-WAY CP5 TO 12-WAY CP5	*Call
2097<2094		6562<4702	2-WAY CP5 TO 12-WAY CP5	*Call
2097<2094		6562<4703	3-WAY CP5 TO 12-WAY CP5	*Call
2097<2094		6562<4704	4-WAY CP5 TO 12-WAY CP5	*Call
2097<2094		6562<4705	5-WAY CP5 TO 12-WAY CP5	*Call
2097<2094		6562<4706	6-WAY CP5 TO 12-WAY CP5	*Call
2097<2094		6562<4707	7-WAY CP5 TO 12-WAY CP5	*Call
2097<2094		6562<4708	8-WAY CP5 TO 12-WAY CP5	*Call
2097<2094		6562<4801	1-WAY CP4 TO 12-WAY CP5	*Call
2097<2094		6562<4802	2-WAY CP4 TO 12-WAY CP5	*Call
2097<2094		6562<4803	3-WAY CP4 TO 12-WAY CP5	*Call
2097<2094		6562<4804	4-WAY CP4 TO 12-WAY CP5	*Call
2097<2094		6562<4805	5-WAY CP4 TO 12-WAY CP5	*Call
2097<2094		6562<4806	6-WAY CP4 TO 12-WAY CP5	*Call
2097<2094		6562<4807	7-WAY CP4 TO 12-WAY CP5	*Call
2097<2094		6562<4808	8-WAY CP4 TO 12-WAY CP5	*Call
2097<2094		6601<4500	0-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4501	1-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4502	2-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4503	3-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4504	4-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4505	5-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4506	6-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4507	7-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4508	8-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4509	9-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4510	10-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4511	11-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4512	12-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4513	13-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4514	14-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4515	15-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4516	16-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4517	17-WAY CP7 TO 1-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6601<4518	18-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4519	19-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4520	20-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4521	21-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4522	22-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4523	23-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4524	24-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4525	25-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4526	26-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4527	27-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4528	28-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4529	29-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4530	30-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4531	31-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4532	32-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4533	33-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4534	34-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4535	35-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4536	36-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4537	37-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4538	38-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4539	39-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4540	40-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4541	41-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4542	42-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4543	43-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4544	44-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4545	45-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4546	46-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4547	47-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4548	48-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4549	49-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4550	50-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4551	51-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4552	52-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4553	53-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4554	54-WAY CP7 TO 1-WAY CP6	*Call
2097<2094		6601<4601	1-WAY CP6 TO 1-WAY CP6	*Call
2097<2094		6601<4602	2-WAY CP6 TO 1-WAY CP6	*Call
2097<2094		6601<4603	3-WAY CP6 TO 1-WAY CP6	*Call
2097<2094		6601<4604	4-WAY CP6 TO 1-WAY CP6	*Call
2097<2094		6601<4605	5-WAY CP6 TO 1-WAY CP6	*Call
2097<2094		6601<4606	6-WAY CP6 TO 1-WAY CP6	*Call
2097<2094		6601<4607	7-WAY CP6 TO 1-WAY CP6	*Call
2097<2094		6601<4608	8-WAY CP6 TO 1-WAY CP6	*Call
2097<2094		6601<4701	1-WAY CP5 TO 1-WAY CP6	*Call
2097<2094		6601<4702	2-WAY CP5 TO 1-WAY CP6	*Call
2097<2094		6601<4703	3-WAY CP5 TO 1-WAY CP6	*Call
2097<2094		6601<4704	4-WAY CP5 TO 1-WAY CP6	*Call
2097<2094		6601<4705	5-WAY CP5 TO 1-WAY CP6	*Call
2097<2094		6601<4706	6-WAY CP5 TO 1-WAY CP6	*Call
2097<2094		6601<4707	7-WAY CP5 TO 1-WAY CP6	*Call
2097<2094		6601<4708	8-WAY CP5 TO 1-WAY CP6	*Call
2097<2094		6601<4801	1-WAY CP4 TO 1-WAY CP6	*Call
2097<2094		6601<4802	2-WAY CP4 TO 1-WAY CP6	*Call
2097<2094		6601<4803	3-WAY CP4 TO 1-WAY CP6	*Call
2097<2094		6601<4804	4-WAY CP4 TO 1-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6601<4805	5-WAY CP4 TO 1-WAY CP6	*Call
2097<2094		6601<4806	6-WAY CP4 TO 1-WAY CP6	*Call
2097<2094		6601<4807	7-WAY CP4 TO 1-WAY CP6	*Call
2097<2094		6601<4808	8-WAY CP4 TO 1-WAY CP6	*Call
2097<2094		6602<4500	0-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4501	1-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4502	2-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4503	3-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4504	4-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4505	5-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4506	6-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4507	7-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4508	8-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4509	9-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4510	10-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4511	11-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4512	12-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4513	13-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4514	14-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4515	15-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4516	16-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4517	17-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4518	18-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4519	19-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4520	20-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4521	21-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4522	22-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4523	23-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4524	24-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4525	25-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4526	26-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4527	27-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4528	28-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4529	29-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4530	30-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4531	31-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4532	32-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4533	33-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4534	34-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4535	35-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4536	36-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4537	37-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4538	38-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4539	39-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4540	40-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4541	41-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4542	42-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4543	43-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4544	44-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4545	45-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4546	46-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4547	47-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4548	48-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4549	49-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4550	50-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4551	51-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4552	52-WAY CP7 TO 2-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6602<4553	53-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4554	54-WAY CP7 TO 2-WAY CP6	*Call
2097<2094		6602<4601	1-WAY CP6 TO 2-WAY CP6	*Call
2097<2094		6602<4602	2-WAY CP6 TO 2-WAY CP6	*Call
2097<2094		6602<4603	3-WAY CP6 TO 2-WAY CP6	*Call
2097<2094		6602<4604	4-WAY CP6 TO 2-WAY CP6	*Call
2097<2094		6602<4605	5-WAY CP6 TO 2-WAY CP6	*Call
2097<2094		6602<4606	6-WAY CP6 TO 2-WAY CP6	*Call
2097<2094		6602<4607	7-WAY CP6 TO 2-WAY CP6	*Call
2097<2094		6602<4608	8-WAY CP6 TO 2-WAY CP6	*Call
2097<2094		6602<4701	1-WAY CP5 TO 2-WAY CP6	*Call
2097<2094		6602<4702	2-WAY CP5 TO 2-WAY CP6	*Call
2097<2094		6602<4703	3-WAY CP5 TO 2-WAY CP6	*Call
2097<2094		6602<4704	4-WAY CP5 TO 2-WAY CP6	*Call
2097<2094		6602<4705	5-WAY CP5 TO 2-WAY CP6	*Call
2097<2094		6602<4706	6-WAY CP5 TO 2-WAY CP6	*Call
2097<2094		6602<4707	7-WAY CP5 TO 2-WAY CP6	*Call
2097<2094		6602<4708	8-WAY CP5 TO 2-WAY CP6	*Call
2097<2094		6602<4801	1-WAY CP4 TO 2-WAY CP6	*Call
2097<2094		6602<4802	2-WAY CP4 TO 2-WAY CP6	*Call
2097<2094		6602<4803	3-WAY CP4 TO 2-WAY CP6	*Call
2097<2094		6602<4804	4-WAY CP4 TO 2-WAY CP6	*Call
2097<2094		6602<4805	5-WAY CP4 TO 2-WAY CP6	*Call
2097<2094		6602<4806	6-WAY CP4 TO 2-WAY CP6	*Call
2097<2094		6602<4807	7-WAY CP4 TO 2-WAY CP6	*Call
2097<2094		6602<4808	8-WAY CP4 TO 2-WAY CP6	*Call
2097<2094		6603<4500	0-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4501	1-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4502	2-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4503	3-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4504	4-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4505	5-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4506	6-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4507	7-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4508	8-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4509	9-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4510	10-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4511	11-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4512	12-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4513	13-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4514	14-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4515	15-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4516	16-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4517	17-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4518	18-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4519	19-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4520	20-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4521	21-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4522	22-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4523	23-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4524	24-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4525	25-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4526	26-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4527	27-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4528	28-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4529	29-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4530	30-WAY CP7 TO 3-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6603<4531	31-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4532	32-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4533	33-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4534	34-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4535	35-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4536	36-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4537	37-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4538	38-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4539	39-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4540	40-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4541	41-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4542	42-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4543	43-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4544	44-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4545	45-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4546	46-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4547	47-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4548	48-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4549	49-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4550	50-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4551	51-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4552	52-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4553	53-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4554	54-WAY CP7 TO 3-WAY CP6	*Call
2097<2094		6603<4601	1-WAY CP6 TO 3-WAY CP6	*Call
2097<2094		6603<4602	2-WAY CP6 TO 3-WAY CP6	*Call
2097<2094		6603<4603	3-WAY CP6 TO 3-WAY CP6	*Call
2097<2094		6603<4604	4-WAY CP6 TO 3-WAY CP6	*Call
2097<2094		6603<4605	5-WAY CP6 TO 3-WAY CP6	*Call
2097<2094		6603<4606	6-WAY CP6 TO 3-WAY CP6	*Call
2097<2094		6603<4607	7-WAY CP6 TO 3-WAY CP6	*Call
2097<2094		6603<4608	8-WAY CP6 TO 3-WAY CP6	*Call
2097<2094		6603<4701	1-WAY CP5 TO 3-WAY CP6	*Call
2097<2094		6603<4702	2-WAY CP5 TO 3-WAY CP6	*Call
2097<2094		6603<4703	3-WAY CP5 TO 3-WAY CP6	*Call
2097<2094		6603<4704	4-WAY CP5 TO 3-WAY CP6	*Call
2097<2094		6603<4705	5-WAY CP5 TO 3-WAY CP6	*Call
2097<2094		6603<4706	6-WAY CP5 TO 3-WAY CP6	*Call
2097<2094		6603<4707	7-WAY CP5 TO 3-WAY CP6	*Call
2097<2094		6603<4708	8-WAY CP5 TO 3-WAY CP6	*Call
2097<2094		6603<4801	1-WAY CP4 TO 3-WAY CP6	*Call
2097<2094		6603<4802	2-WAY CP4 TO 3-WAY CP6	*Call
2097<2094		6603<4803	3-WAY CP4 TO 3-WAY CP6	*Call
2097<2094		6603<4804	4-WAY CP4 TO 3-WAY CP6	*Call
2097<2094		6603<4805	5-WAY CP4 TO 3-WAY CP6	*Call
2097<2094		6603<4806	6-WAY CP4 TO 3-WAY CP6	*Call
2097<2094		6603<4807	7-WAY CP4 TO 3-WAY CP6	*Call
2097<2094		6603<4808	8-WAY CP4 TO 3-WAY CP6	*Call
2097<2094		6604<4500	0-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4501	1-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4502	2-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4503	3-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4504	4-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4505	5-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4506	6-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4507	7-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4508	8-WAY CP7 TO 4-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6604<4509	9-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4510	10-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4511	11-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4512	12-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4513	13-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4514	14-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4515	15-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4516	16-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4517	17-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4518	18-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4519	19-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4520	20-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4521	21-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4522	22-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4523	23-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4524	24-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4525	25-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4526	26-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4527	27-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4528	28-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4529	29-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4530	30-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4531	31-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4532	32-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4533	33-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4534	34-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4535	35-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4536	36-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4537	37-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4538	38-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4539	39-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4540	40-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4541	41-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4542	42-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4543	43-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4544	44-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4545	45-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4546	46-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4547	47-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4548	48-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4549	49-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4550	50-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4551	51-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4552	52-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4553	53-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4554	54-WAY CP7 TO 4-WAY CP6	*Call
2097<2094		6604<4601	1-WAY CP6 TO 4-WAY CP6	*Call
2097<2094		6604<4602	2-WAY CP6 TO 4-WAY CP6	*Call
2097<2094		6604<4603	3-WAY CP6 TO 4-WAY CP6	*Call
2097<2094		6604<4604	4-WAY CP6 TO 4-WAY CP6	*Call
2097<2094		6604<4605	5-WAY CP6 TO 4-WAY CP6	*Call
2097<2094		6604<4606	6-WAY CP6 TO 4-WAY CP6	*Call
2097<2094		6604<4607	7-WAY CP6 TO 4-WAY CP6	*Call
2097<2094		6604<4608	8-WAY CP6 TO 4-WAY CP6	*Call
2097<2094		6604<4701	1-WAY CP5 TO 4-WAY CP6	*Call
2097<2094		6604<4702	2-WAY CP5 TO 4-WAY CP6	*Call
2097<2094		6604<4703	3-WAY CP5 TO 4-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6604<4704	4-WAY CP5 TO 4-WAY CP6	*Call
2097<2094		6604<4705	5-WAY CP5 TO 4-WAY CP6	*Call
2097<2094		6604<4706	6-WAY CP5 TO 4-WAY CP6	*Call
2097<2094		6604<4707	7-WAY CP5 TO 4-WAY CP6	*Call
2097<2094		6604<4708	8-WAY CP5 TO 4-WAY CP6	*Call
2097<2094		6604<4801	1-WAY CP4 TO 4-WAY CP6	*Call
2097<2094		6604<4802	2-WAY CP4 TO 4-WAY CP6	*Call
2097<2094		6604<4803	3-WAY CP4 TO 4-WAY CP6	*Call
2097<2094		6604<4804	4-WAY CP4 TO 4-WAY CP6	*Call
2097<2094		6604<4805	5-WAY CP4 TO 4-WAY CP6	*Call
2097<2094		6604<4806	6-WAY CP4 TO 4-WAY CP6	*Call
2097<2094		6604<4807	7-WAY CP4 TO 4-WAY CP6	*Call
2097<2094		6604<4808	8-WAY CP4 TO 4-WAY CP6	*Call
2097<2094		6605<4500	0-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4501	1-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4502	2-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4503	3-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4504	4-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4505	5-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4506	6-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4507	7-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4508	8-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4509	9-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4510	10-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4511	11-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4512	12-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4513	13-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4514	14-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4515	15-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4516	16-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4517	17-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4518	18-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4519	19-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4520	20-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4521	21-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4522	22-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4523	23-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4524	24-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4525	25-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4526	26-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4527	27-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4528	28-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4529	29-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4530	30-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4531	31-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4532	32-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4533	33-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4534	34-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4535	35-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4536	36-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4537	37-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4538	38-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4539	39-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4540	40-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4541	41-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4542	42-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4543	43-WAY CP7 TO 5-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6605<4544	44-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4545	45-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4546	46-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4547	47-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4548	48-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4549	49-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4550	50-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4551	51-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4552	52-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4553	53-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4554	54-WAY CP7 TO 5-WAY CP6	*Call
2097<2094		6605<4601	1-WAY CP6 TO 5-WAY CP6	*Call
2097<2094		6605<4602	2-WAY CP6 TO 5-WAY CP6	*Call
2097<2094		6605<4603	3-WAY CP6 TO 5-WAY CP6	*Call
2097<2094		6605<4604	4-WAY CP6 TO 5-WAY CP6	*Call
2097<2094		6605<4605	5-WAY CP6 TO 5-WAY CP6	*Call
2097<2094		6605<4606	6-WAY CP6 TO 5-WAY CP6	*Call
2097<2094		6605<4607	7-WAY CP6 TO 5-WAY CP6	*Call
2097<2094		6605<4608	8-WAY CP6 TO 5-WAY CP6	*Call
2097<2094		6605<4701	1-WAY CP5 TO 5-WAY CP6	*Call
2097<2094		6605<4702	2-WAY CP5 TO 5-WAY CP6	*Call
2097<2094		6605<4703	3-WAY CP5 TO 5-WAY CP6	*Call
2097<2094		6605<4704	4-WAY CP5 TO 5-WAY CP6	*Call
2097<2094		6605<4705	5-WAY CP5 TO 5-WAY CP6	*Call
2097<2094		6605<4706	6-WAY CP5 TO 5-WAY CP6	*Call
2097<2094		6605<4707	7-WAY CP5 TO 5-WAY CP6	*Call
2097<2094		6605<4708	8-WAY CP5 TO 5-WAY CP6	*Call
2097<2094		6605<4801	1-WAY CP4 TO 5-WAY CP6	*Call
2097<2094		6605<4802	2-WAY CP4 TO 5-WAY CP6	*Call
2097<2094		6605<4803	3-WAY CP4 TO 5-WAY CP6	*Call
2097<2094		6605<4804	4-WAY CP4 TO 5-WAY CP6	*Call
2097<2094		6605<4805	5-WAY CP4 TO 5-WAY CP6	*Call
2097<2094		6605<4806	6-WAY CP4 TO 5-WAY CP6	*Call
2097<2094		6605<4807	7-WAY CP4 TO 5-WAY CP6	*Call
2097<2094		6605<4808	8-WAY CP4 TO 5-WAY CP6	*Call
2097<2094		6606<4500	0-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4501	1-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4502	2-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4503	3-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4504	4-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4505	5-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4506	6-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4507	7-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4508	8-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4509	9-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4510	10-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4511	11-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4512	12-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4513	13-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4514	14-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4515	15-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4516	16-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4517	17-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4518	18-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4519	19-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4520	20-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4521	21-WAY CP7 TO 6-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6606<4522	22-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4523	23-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4524	24-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4525	25-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4526	26-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4527	27-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4528	28-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4529	29-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4530	30-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4531	31-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4532	32-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4533	33-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4534	34-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4535	35-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4536	36-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4537	37-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4538	38-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4539	39-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4540	40-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4541	41-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4542	42-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4543	43-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4544	44-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4545	45-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4546	46-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4547	47-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4548	48-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4549	49-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4550	50-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4551	51-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4552	52-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4553	53-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4554	54-WAY CP7 TO 6-WAY CP6	*Call
2097<2094		6606<4601	1-WAY CP6 TO 6-WAY CP6	*Call
2097<2094		6606<4602	2-WAY CP6 TO 6-WAY CP6	*Call
2097<2094		6606<4603	3-WAY CP6 TO 6-WAY CP6	*Call
2097<2094		6606<4604	4-WAY CP6 TO 6-WAY CP6	*Call
2097<2094		6606<4605	5-WAY CP6 TO 6-WAY CP6	*Call
2097<2094		6606<4606	6-WAY CP6 TO 6-WAY CP6	*Call
2097<2094		6606<4607	7-WAY CP6 TO 6-WAY CP6	*Call
2097<2094		6606<4608	8-WAY CP6 TO 6-WAY CP6	*Call
2097<2094		6606<4701	1-WAY CP5 TO 6-WAY CP6	*Call
2097<2094		6606<4702	2-WAY CP5 TO 6-WAY CP6	*Call
2097<2094		6606<4703	3-WAY CP5 TO 6-WAY CP6	*Call
2097<2094		6606<4704	4-WAY CP5 TO 6-WAY CP6	*Call
2097<2094		6606<4705	5-WAY CP5 TO 6-WAY CP6	*Call
2097<2094		6606<4706	6-WAY CP5 TO 6-WAY CP6	*Call
2097<2094		6606<4707	7-WAY CP5 TO 6-WAY CP6	*Call
2097<2094		6606<4708	8-WAY CP5 TO 6-WAY CP6	*Call
2097<2094		6606<4801	1-WAY CP4 TO 6-WAY CP6	*Call
2097<2094		6606<4802	2-WAY CP4 TO 6-WAY CP6	*Call
2097<2094		6606<4803	3-WAY CP4 TO 6-WAY CP6	*Call
2097<2094		6606<4804	4-WAY CP4 TO 6-WAY CP6	*Call
2097<2094		6606<4805	5-WAY CP4 TO 6-WAY CP6	*Call
2097<2094		6606<4806	6-WAY CP4 TO 6-WAY CP6	*Call
2097<2094		6606<4807	7-WAY CP4 TO 6-WAY CP6	*Call
2097<2094		6606<4808	8-WAY CP4 TO 6-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6607<4500	0-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4501	1-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4502	2-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4503	3-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4504	4-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4505	5-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4506	6-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4507	7-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4508	8-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4509	9-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4510	10-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4511	11-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4512	12-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4513	13-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4514	14-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4515	15-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4516	16-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4517	17-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4518	18-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4519	19-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4520	20-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4521	21-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4522	22-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4523	23-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4524	24-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4525	25-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4526	26-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4527	27-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4528	28-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4529	29-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4530	30-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4531	31-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4532	32-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4533	33-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4534	34-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4535	35-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4536	36-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4537	37-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4538	38-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4539	39-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4540	40-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4541	41-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4542	42-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4543	43-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4544	44-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4545	45-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4546	46-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4547	47-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4548	48-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4549	49-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4550	50-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4551	51-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4552	52-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4553	53-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4554	54-WAY CP7 TO 7-WAY CP6	*Call
2097<2094		6607<4601	1-WAY CP6 TO 7-WAY CP6	*Call
2097<2094		6607<4602	2-WAY CP6 TO 7-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6607<4603	3-WAY CP6 TO 7-WAY CP6	*Call
2097<2094		6607<4604	4-WAY CP6 TO 7-WAY CP6	*Call
2097<2094		6607<4605	5-WAY CP6 TO 7-WAY CP6	*Call
2097<2094		6607<4606	6-WAY CP6 TO 7-WAY CP6	*Call
2097<2094		6607<4607	7-WAY CP6 TO 7-WAY CP6	*Call
2097<2094		6607<4608	8-WAY CP6 TO 7-WAY CP6	*Call
2097<2094		6607<4701	1-WAY CP5 TO 7-WAY CP6	*Call
2097<2094		6607<4702	2-WAY CP5 TO 7-WAY CP6	*Call
2097<2094		6607<4703	3-WAY CP5 TO 7-WAY CP6	*Call
2097<2094		6607<4704	4-WAY CP5 TO 7-WAY CP6	*Call
2097<2094		6607<4705	5-WAY CP5 TO 7-WAY CP6	*Call
2097<2094		6607<4706	6-WAY CP5 TO 7-WAY CP6	*Call
2097<2094		6607<4707	7-WAY CP5 TO 7-WAY CP6	*Call
2097<2094		6607<4708	8-WAY CP5 TO 7-WAY CP6	*Call
2097<2094		6607<4801	1-WAY CP4 TO 7-WAY CP6	*Call
2097<2094		6607<4802	2-WAY CP4 TO 7-WAY CP6	*Call
2097<2094		6607<4803	3-WAY CP4 TO 7-WAY CP6	*Call
2097<2094		6607<4804	4-WAY CP4 TO 7-WAY CP6	*Call
2097<2094		6607<4805	5-WAY CP4 TO 7-WAY CP6	*Call
2097<2094		6607<4806	6-WAY CP4 TO 7-WAY CP6	*Call
2097<2094		6607<4807	7-WAY CP4 TO 7-WAY CP6	*Call
2097<2094		6607<4808	8-WAY CP4 TO 7-WAY CP6	*Call
2097<2094		6608<4500	0-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4501	1-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4502	2-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4503	3-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4504	4-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4505	5-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4506	6-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4507	7-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4508	8-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4509	9-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4510	10-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4511	11-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4512	12-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4513	13-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4514	14-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4515	15-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4516	16-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4517	17-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4518	18-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4519	19-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4520	20-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4521	21-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4522	22-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4523	23-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4524	24-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4525	25-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4526	26-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4527	27-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4528	28-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4529	29-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4530	30-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4531	31-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4532	32-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4533	33-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4534	34-WAY CP7 TO 8-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6608<4535	35-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4536	36-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4537	37-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4538	38-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4539	39-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4540	40-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4541	41-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4542	42-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4543	43-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4544	44-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4545	45-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4546	46-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4547	47-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4548	48-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4549	49-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4550	50-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4551	51-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4552	52-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4553	53-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4554	54-WAY CP7 TO 8-WAY CP6	*Call
2097<2094		6608<4601	1-WAY CP6 TO 8-WAY CP6	*Call
2097<2094		6608<4602	2-WAY CP6 TO 8-WAY CP6	*Call
2097<2094		6608<4603	3-WAY CP6 TO 8-WAY CP6	*Call
2097<2094		6608<4604	4-WAY CP6 TO 8-WAY CP6	*Call
2097<2094		6608<4605	5-WAY CP6 TO 8-WAY CP6	*Call
2097<2094		6608<4606	6-WAY CP6 TO 8-WAY CP6	*Call
2097<2094		6608<4607	7-WAY CP6 TO 8-WAY CP6	*Call
2097<2094		6608<4608	8-WAY CP6 TO 8-WAY CP6	*Call
2097<2094		6608<4701	1-WAY CP5 TO 8-WAY CP6	*Call
2097<2094		6608<4702	2-WAY CP5 TO 8-WAY CP6	*Call
2097<2094		6608<4703	3-WAY CP5 TO 8-WAY CP6	*Call
2097<2094		6608<4704	4-WAY CP5 TO 8-WAY CP6	*Call
2097<2094		6608<4705	5-WAY CP5 TO 8-WAY CP6	*Call
2097<2094		6608<4706	6-WAY CP5 TO 8-WAY CP6	*Call
2097<2094		6608<4707	7-WAY CP5 TO 8-WAY CP6	*Call
2097<2094		6608<4708	8-WAY CP5 TO 8-WAY CP6	*Call
2097<2094		6608<4801	1-WAY CP4 TO 8-WAY CP6	*Call
2097<2094		6608<4802	2-WAY CP4 TO 8-WAY CP6	*Call
2097<2094		6608<4803	3-WAY CP4 TO 8-WAY CP6	*Call
2097<2094		6608<4804	4-WAY CP4 TO 8-WAY CP6	*Call
2097<2094		6608<4805	5-WAY CP4 TO 8-WAY CP6	*Call
2097<2094		6608<4806	6-WAY CP4 TO 8-WAY CP6	*Call
2097<2094		6608<4807	7-WAY CP4 TO 8-WAY CP6	*Call
2097<2094		6608<4808	8-WAY CP4 TO 8-WAY CP6	*Call
2097<2094		6609<4500	0-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4501	1-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4502	2-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4503	3-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4504	4-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4505	5-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4506	6-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4507	7-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4508	8-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4509	9-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4510	10-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4511	11-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4512	12-WAY CP7 TO 9-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6609<4513	13-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4514	14-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4515	15-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4516	16-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4517	17-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4518	18-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4519	19-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4520	20-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4521	21-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4522	22-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4523	23-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4524	24-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4525	25-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4526	26-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4527	27-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4528	28-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4529	29-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4530	30-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4531	31-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4532	32-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4533	33-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4534	34-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4535	35-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4536	36-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4537	37-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4538	38-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4539	39-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4540	40-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4541	41-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4542	42-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4543	43-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4544	44-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4545	45-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4546	46-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4547	47-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4548	48-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4549	49-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4550	50-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4551	51-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4552	52-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4553	53-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4554	54-WAY CP7 TO 9-WAY CP6	*Call
2097<2094		6609<4601	1-WAY CP6 TO 9-WAY CP6	*Call
2097<2094		6609<4602	2-WAY CP6 TO 9-WAY CP6	*Call
2097<2094		6609<4603	3-WAY CP6 TO 9-WAY CP6	*Call
2097<2094		6609<4604	4-WAY CP6 TO 9-WAY CP6	*Call
2097<2094		6609<4605	5-WAY CP6 TO 9-WAY CP6	*Call
2097<2094		6609<4606	6-WAY CP6 TO 9-WAY CP6	*Call
2097<2094		6609<4607	7-WAY CP6 TO 9-WAY CP6	*Call
2097<2094		6609<4608	8-WAY CP6 TO 9-WAY CP6	*Call
2097<2094		6609<4701	1-WAY CP5 TO 9-WAY CP6	*Call
2097<2094		6609<4702	2-WAY CP5 TO 9-WAY CP6	*Call
2097<2094		6609<4703	3-WAY CP5 TO 9-WAY CP6	*Call
2097<2094		6609<4704	4-WAY CP5 TO 9-WAY CP6	*Call
2097<2094		6609<4705	5-WAY CP5 TO 9-WAY CP6	*Call
2097<2094		6609<4706	6-WAY CP5 TO 9-WAY CP6	*Call
2097<2094		6609<4707	7-WAY CP5 TO 9-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6609<4708	8-WAY CP5 TO 9-WAY CP6	*Call
2097<2094		6609<4801	1-WAY CP4 TO 9-WAY CP6	*Call
2097<2094		6609<4802	2-WAY CP4 TO 9-WAY CP6	*Call
2097<2094		6609<4803	3-WAY CP4 TO 9-WAY CP6	*Call
2097<2094		6609<4804	4-WAY CP4 TO 9-WAY CP6	*Call
2097<2094		6609<4805	5-WAY CP4 TO 9-WAY CP6	*Call
2097<2094		6609<4806	6-WAY CP4 TO 9-WAY CP6	*Call
2097<2094		6609<4807	7-WAY CP4 TO 9-WAY CP6	*Call
2097<2094		6609<4808	8-WAY CP4 TO 9-WAY CP6	*Call
2097<2094		6610<4500	0-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4501	1-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4502	2-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4503	3-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4504	4-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4505	5-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4506	6-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4507	7-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4508	8-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4509	9-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4510	10-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4511	11-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4512	12-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4513	13-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4514	14-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4515	15-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4516	16-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4517	17-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4518	18-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4519	19-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4520	20-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4521	21-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4522	22-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4523	23-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4524	24-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4525	25-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4526	26-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4527	27-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4528	28-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4529	29-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4530	30-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4531	31-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4532	32-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4533	33-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4534	34-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4535	35-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4536	36-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4537	37-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4538	38-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4539	39-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4540	40-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4541	41-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4542	42-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4543	43-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4544	44-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4545	45-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4546	46-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4547	47-WAY CP7 TO 10-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6610<4548	48-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4549	49-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4550	50-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4551	51-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4552	52-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4553	53-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4554	54-WAY CP7 TO 10-WAY CP6	*Call
2097<2094		6610<4601	1-WAY CP6 TO 10-WAY CP6	*Call
2097<2094		6610<4602	2-WAY CP6 TO 10-WAY CP6	*Call
2097<2094		6610<4603	3-WAY CP6 TO 10-WAY CP6	*Call
2097<2094		6610<4604	4-WAY CP6 TO 10-WAY CP6	*Call
2097<2094		6610<4605	5-WAY CP6 TO 10-WAY CP6	*Call
2097<2094		6610<4606	6-WAY CP6 TO 10-WAY CP6	*Call
2097<2094		6610<4607	7-WAY CP6 TO 10-WAY CP6	*Call
2097<2094		6610<4608	8-WAY CP6 TO 10-WAY CP6	*Call
2097<2094		6610<4701	1-WAY CP5 TO 10-WAY CP6	*Call
2097<2094		6610<4702	2-WAY CP5 TO 10-WAY CP6	*Call
2097<2094		6610<4703	3-WAY CP5 TO 10-WAY CP6	*Call
2097<2094		6610<4704	4-WAY CP5 TO 10-WAY CP6	*Call
2097<2094		6610<4705	5-WAY CP5 TO 10-WAY CP6	*Call
2097<2094		6610<4706	6-WAY CP5 TO 10-WAY CP6	*Call
2097<2094		6610<4707	7-WAY CP5 TO 10-WAY CP6	*Call
2097<2094		6610<4708	8-WAY CP5 TO 10-WAY CP6	*Call
2097<2094		6610<4801	1-WAY CP4 TO 10-WAY CP6	*Call
2097<2094		6610<4802	2-WAY CP4 TO 10-WAY CP6	*Call
2097<2094		6610<4803	3-WAY CP4 TO 10-WAY CP6	*Call
2097<2094		6610<4804	4-WAY CP4 TO 10-WAY CP6	*Call
2097<2094		6610<4805	5-WAY CP4 TO 10-WAY CP6	*Call
2097<2094		6610<4806	6-WAY CP4 TO 10-WAY CP6	*Call
2097<2094		6610<4807	7-WAY CP4 TO 10-WAY CP6	*Call
2097<2094		6610<4808	8-WAY CP4 TO 10-WAY CP6	*Call
2097<2094		6611<4500	0-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4501	1-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4502	2-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4503	3-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4504	4-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4505	5-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4506	6-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4507	7-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4508	8-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4509	9-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4510	10-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4511	11-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4512	12-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4513	13-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4514	14-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4515	15-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4516	16-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4517	17-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4518	18-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4519	19-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4520	20-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4521	21-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4522	22-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4523	23-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4524	24-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4525	25-WAY CP7 TO 11-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6611<4526	26-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4527	27-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4528	28-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4529	29-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4530	30-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4531	31-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4532	32-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4533	33-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4534	34-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4535	35-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4536	36-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4537	37-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4538	38-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4539	39-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4540	40-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4541	41-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4542	42-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4543	43-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4544	44-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4545	45-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4546	46-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4547	47-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4548	48-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4549	49-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4550	50-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4551	51-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4552	52-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4553	53-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4554	54-WAY CP7 TO 11-WAY CP6	*Call
2097<2094		6611<4601	1-WAY CP6 TO 11-WAY CP6	*Call
2097<2094		6611<4602	2-WAY CP6 TO 11-WAY CP6	*Call
2097<2094		6611<4603	3-WAY CP6 TO 11-WAY CP6	*Call
2097<2094		6611<4604	4-WAY CP6 TO 11-WAY CP6	*Call
2097<2094		6611<4605	5-WAY CP6 TO 11-WAY CP6	*Call
2097<2094		6611<4606	6-WAY CP6 TO 11-WAY CP6	*Call
2097<2094		6611<4607	7-WAY CP6 TO 11-WAY CP6	*Call
2097<2094		6611<4608	8-WAY CP6 TO 11-WAY CP6	*Call
2097<2094		6611<4701	1-WAY CP5 TO 11-WAY CP6	*Call
2097<2094		6611<4702	2-WAY CP5 TO 11-WAY CP6	*Call
2097<2094		6611<4703	3-WAY CP5 TO 11-WAY CP6	*Call
2097<2094		6611<4704	4-WAY CP5 TO 11-WAY CP6	*Call
2097<2094		6611<4705	5-WAY CP5 TO 11-WAY CP6	*Call
2097<2094		6611<4706	6-WAY CP5 TO 11-WAY CP6	*Call
2097<2094		6611<4707	7-WAY CP5 TO 11-WAY CP6	*Call
2097<2094		6611<4708	8-WAY CP5 TO 11-WAY CP6	*Call
2097<2094		6611<4801	1-WAY CP4 TO 11-WAY CP6	*Call
2097<2094		6611<4802	2-WAY CP4 TO 11-WAY CP6	*Call
2097<2094		6611<4803	3-WAY CP4 TO 11-WAY CP6	*Call
2097<2094		6611<4804	4-WAY CP4 TO 11-WAY CP6	*Call
2097<2094		6611<4805	5-WAY CP4 TO 11-WAY CP6	*Call
2097<2094		6611<4806	6-WAY CP4 TO 11-WAY CP6	*Call
2097<2094		6611<4807	7-WAY CP4 TO 11-WAY CP6	*Call
2097<2094		6611<4808	8-WAY CP4 TO 11-WAY CP6	*Call
2097<2094		6612<4500	0-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4501	1-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4502	2-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4503	3-WAY CP7 TO 12-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6612<4504	4-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4505	5-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4506	6-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4507	7-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4508	8-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4509	9-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4510	10-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4511	11-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4512	12-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4513	13-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4514	14-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4515	15-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4516	16-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4517	17-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4518	18-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4519	19-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4520	20-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4521	21-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4522	22-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4523	23-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4524	24-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4525	25-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4526	26-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4527	27-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4528	28-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4529	29-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4530	30-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4531	31-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4532	32-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4533	33-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4534	34-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4535	35-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4536	36-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4537	37-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4538	38-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4539	39-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4540	40-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4541	41-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4542	42-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4543	43-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4544	44-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4545	45-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4546	46-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4547	47-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4548	48-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4549	49-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4550	50-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4551	51-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4552	52-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4553	53-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4554	54-WAY CP7 TO 12-WAY CP6	*Call
2097<2094		6612<4601	1-WAY CP6 TO 12-WAY CP6	*Call
2097<2094		6612<4602	2-WAY CP6 TO 12-WAY CP6	*Call
2097<2094		6612<4603	3-WAY CP6 TO 12-WAY CP6	*Call
2097<2094		6612<4604	4-WAY CP6 TO 12-WAY CP6	*Call
2097<2094		6612<4605	5-WAY CP6 TO 12-WAY CP6	*Call
2097<2094		6612<4606	6-WAY CP6 TO 12-WAY CP6	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6612<4607	7-WAY CP6 TO 12-WAY CP6	*Call
2097<2094		6612<4608	8-WAY CP6 TO 12-WAY CP6	*Call
2097<2094		6612<4701	1-WAY CP5 TO 12-WAY CP6	*Call
2097<2094		6612<4702	2-WAY CP5 TO 12-WAY CP6	*Call
2097<2094		6612<4703	3-WAY CP5 TO 12-WAY CP6	*Call
2097<2094		6612<4704	4-WAY CP5 TO 12-WAY CP6	*Call
2097<2094		6612<4705	5-WAY CP5 TO 12-WAY CP6	*Call
2097<2094		6612<4706	6-WAY CP5 TO 12-WAY CP6	*Call
2097<2094		6612<4707	7-WAY CP5 TO 12-WAY CP6	*Call
2097<2094		6612<4708	8-WAY CP5 TO 12-WAY CP6	*Call
2097<2094		6612<4801	1-WAY CP4 TO 12-WAY CP6	*Call
2097<2094		6612<4802	2-WAY CP4 TO 12-WAY CP6	*Call
2097<2094		6612<4803	3-WAY CP4 TO 12-WAY CP6	*Call
2097<2094		6612<4804	4-WAY CP4 TO 12-WAY CP6	*Call
2097<2094		6612<4805	5-WAY CP4 TO 12-WAY CP6	*Call
2097<2094		6612<4806	6-WAY CP4 TO 12-WAY CP6	*Call
2097<2094		6612<4807	7-WAY CP4 TO 12-WAY CP6	*Call
2097<2094		6612<4808	8-WAY CP4 TO 12-WAY CP6	*Call
2097<2094		6700<4500	0-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4501	1-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4502	2-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4503	3-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4504	4-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4505	5-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4506	6-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4507	7-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4508	8-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4509	9-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4510	10-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4511	11-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4512	12-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4513	13-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4514	14-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4515	15-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4516	16-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4517	17-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4518	18-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4519	19-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4520	20-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4521	21-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4522	22-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4523	23-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4524	24-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4525	25-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4526	26-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4527	27-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4528	28-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4529	29-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4530	30-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4531	31-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4532	32-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4533	33-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4534	34-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4535	35-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4536	36-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4537	37-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4538	38-WAY CP7 TO 0-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6700<4539	39-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4540	40-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4541	41-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4542	42-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4543	43-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4544	44-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4545	45-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4546	46-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4547	47-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4548	48-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4549	49-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4550	50-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4551	51-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4552	52-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4553	53-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4554	54-WAY CP7 TO 0-WAY CP7	*Call
2097<2094		6700<4601	1-WAY CP6 TO 0-WAY CP7	*Call
2097<2094		6700<4602	2-WAY CP6 TO 0-WAY CP7	*Call
2097<2094		6700<4603	3-WAY CP6 TO 0-WAY CP7	*Call
2097<2094		6700<4604	4-WAY CP6 TO 0-WAY CP7	*Call
2097<2094		6700<4605	5-WAY CP6 TO 0-WAY CP7	*Call
2097<2094		6700<4606	6-WAY CP6 TO 0-WAY CP7	*Call
2097<2094		6700<4607	7-WAY CP6 TO 0-WAY CP7	*Call
2097<2094		6700<4608	8-WAY CP6 TO 0-WAY CP7	*Call
2097<2094		6700<4701	1-WAY CP5 TO 0-WAY CP7	*Call
2097<2094		6700<4702	2-WAY CP5 TO 0-WAY CP7	*Call
2097<2094		6700<4703	3-WAY CP5 TO 0-WAY CP7	*Call
2097<2094		6700<4704	4-WAY CP5 TO 0-WAY CP7	*Call
2097<2094		6700<4705	5-WAY CP5 TO 0-WAY CP7	*Call
2097<2094		6700<4706	6-WAY CP5 TO 0-WAY CP7	*Call
2097<2094		6700<4707	7-WAY CP5 TO 0-WAY CP7	*Call
2097<2094		6700<4708	8-WAY CP5 TO 0-WAY CP7	*Call
2097<2094		6700<4801	1-WAY CP4 TO 0-WAY CP7	*Call
2097<2094		6700<4802	2-WAY CP4 TO 0-WAY CP7	*Call
2097<2094		6700<4803	3-WAY CP4 TO 0-WAY CP7	*Call
2097<2094		6700<4804	4-WAY CP4 TO 0-WAY CP7	*Call
2097<2094		6700<4805	5-WAY CP4 TO 0-WAY CP7	*Call
2097<2094		6700<4806	6-WAY CP4 TO 0-WAY CP7	*Call
2097<2094		6700<4807	7-WAY CP4 TO 0-WAY CP7	*Call
2097<2094		6700<4808	8-WAY CP4 TO 0-WAY CP7	*Call
2097<2094		6701<4500	0-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4501	1-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4502	2-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4503	3-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4504	4-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4505	5-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4506	6-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4507	7-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4508	8-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4509	9-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4510	10-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4511	11-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4512	12-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4513	13-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4514	14-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4515	15-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4516	16-WAY CP7 TO 1-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6701<4517	17-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4518	18-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4519	19-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4520	20-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4521	21-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4522	22-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4523	23-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4524	24-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4525	25-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4526	26-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4527	27-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4528	28-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4529	29-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4530	30-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4531	31-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4532	32-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4533	33-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4534	34-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4535	35-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4536	36-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4537	37-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4538	38-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4539	39-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4540	40-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4541	41-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4542	42-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4543	43-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4544	44-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4545	45-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4546	46-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4547	47-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4548	48-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4549	49-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4550	50-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4551	51-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4552	52-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4553	53-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4554	54-WAY CP7 TO 1-WAY CP7	*Call
2097<2094		6701<4601	1-WAY CP6 TO 1-WAY CP7	*Call
2097<2094		6701<4602	2-WAY CP6 TO 1-WAY CP7	*Call
2097<2094		6701<4603	3-WAY CP6 TO 1-WAY CP7	*Call
2097<2094		6701<4604	4-WAY CP6 TO 1-WAY CP7	*Call
2097<2094		6701<4605	5-WAY CP6 TO 1-WAY CP7	*Call
2097<2094		6701<4606	6-WAY CP6 TO 1-WAY CP7	*Call
2097<2094		6701<4607	7-WAY CP6 TO 1-WAY CP7	*Call
2097<2094		6701<4608	8-WAY CP6 TO 1-WAY CP7	*Call
2097<2094		6701<4701	1-WAY CP5 TO 1-WAY CP7	*Call
2097<2094		6701<4702	2-WAY CP5 TO 1-WAY CP7	*Call
2097<2094		6701<4703	3-WAY CP5 TO 1-WAY CP7	*Call
2097<2094		6701<4704	4-WAY CP5 TO 1-WAY CP7	*Call
2097<2094		6701<4705	5-WAY CP5 TO 1-WAY CP7	*Call
2097<2094		6701<4706	6-WAY CP5 TO 1-WAY CP7	*Call
2097<2094		6701<4707	7-WAY CP5 TO 1-WAY CP7	*Call
2097<2094		6701<4708	8-WAY CP5 TO 1-WAY CP7	*Call
2097<2094		6701<4801	1-WAY CP4 TO 1-WAY CP7	*Call
2097<2094		6701<4802	2-WAY CP4 TO 1-WAY CP7	*Call
2097<2094		6701<4803	3-WAY CP4 TO 1-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6701<4804	4-WAY CP4 TO 1-WAY CP7	*Call
2097<2094		6701<4805	5-WAY CP4 TO 1-WAY CP7	*Call
2097<2094		6701<4806	6-WAY CP4 TO 1-WAY CP7	*Call
2097<2094		6701<4807	7-WAY CP4 TO 1-WAY CP7	*Call
2097<2094		6701<4808	8-WAY CP4 TO 1-WAY CP7	*Call
2097<2094		6702<4500	0-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4501	1-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4502	2-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4503	3-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4504	4-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4505	5-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4506	6-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4507	7-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4508	8-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4509	9-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4510	10-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4511	11-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4512	12-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4513	13-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4514	14-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4515	15-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4516	16-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4517	17-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4518	18-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4519	19-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4520	20-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4521	21-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4522	22-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4523	23-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4524	24-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4525	25-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4526	26-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4527	27-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4528	28-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4529	29-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4530	30-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4531	31-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4532	32-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4533	33-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4534	34-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4535	35-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4536	36-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4537	37-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4538	38-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4539	39-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4540	40-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4541	41-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4542	42-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4543	43-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4544	44-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4545	45-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4546	46-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4547	47-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4548	48-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4549	49-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4550	50-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4551	51-WAY CP7 TO 2-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6702<4552	52-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4553	53-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4554	54-WAY CP7 TO 2-WAY CP7	*Call
2097<2094		6702<4601	1-WAY CP6 TO 2-WAY CP7	*Call
2097<2094		6702<4602	2-WAY CP6 TO 2-WAY CP7	*Call
2097<2094		6702<4603	3-WAY CP6 TO 2-WAY CP7	*Call
2097<2094		6702<4604	4-WAY CP6 TO 2-WAY CP7	*Call
2097<2094		6702<4605	5-WAY CP6 TO 2-WAY CP7	*Call
2097<2094		6702<4606	6-WAY CP6 TO 2-WAY CP7	*Call
2097<2094		6702<4607	7-WAY CP6 TO 2-WAY CP7	*Call
2097<2094		6702<4608	8-WAY CP6 TO 2-WAY CP7	*Call
2097<2094		6702<4701	1-WAY CP5 TO 2-WAY CP7	*Call
2097<2094		6702<4702	2-WAY CP5 TO 2-WAY CP7	*Call
2097<2094		6702<4703	3-WAY CP5 TO 2-WAY CP7	*Call
2097<2094		6702<4704	4-WAY CP5 TO 2-WAY CP7	*Call
2097<2094		6702<4705	5-WAY CP5 TO 2-WAY CP7	*Call
2097<2094		6702<4706	6-WAY CP5 TO 2-WAY CP7	*Call
2097<2094		6702<4707	7-WAY CP5 TO 2-WAY CP7	*Call
2097<2094		6702<4708	8-WAY CP5 TO 2-WAY CP7	*Call
2097<2094		6702<4801	1-WAY CP4 TO 2-WAY CP7	*Call
2097<2094		6702<4802	2-WAY CP4 TO 2-WAY CP7	*Call
2097<2094		6702<4803	3-WAY CP4 TO 2-WAY CP7	*Call
2097<2094		6702<4804	4-WAY CP4 TO 2-WAY CP7	*Call
2097<2094		6702<4805	5-WAY CP4 TO 2-WAY CP7	*Call
2097<2094		6702<4806	6-WAY CP4 TO 2-WAY CP7	*Call
2097<2094		6702<4807	7-WAY CP4 TO 2-WAY CP7	*Call
2097<2094		6702<4808	8-WAY CP4 TO 2-WAY CP7	*Call
2097<2094		6703<4500	0-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4501	1-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4502	2-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4503	3-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4504	4-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4505	5-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4506	6-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4507	7-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4508	8-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4509	9-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4510	10-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4511	11-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4512	12-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4513	13-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4514	14-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4515	15-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4516	16-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4517	17-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4518	18-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4519	19-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4520	20-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4521	21-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4522	22-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4523	23-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4524	24-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4525	25-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4526	26-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4527	27-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4528	28-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4529	29-WAY CP7 TO 3-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6703<4530	30-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4531	31-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4532	32-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4533	33-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4534	34-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4535	35-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4536	36-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4537	37-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4538	38-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4539	39-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4540	40-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4541	41-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4542	42-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4543	43-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4544	44-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4545	45-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4546	46-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4547	47-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4548	48-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4549	49-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4550	50-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4551	51-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4552	52-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4553	53-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4554	54-WAY CP7 TO 3-WAY CP7	*Call
2097<2094		6703<4601	1-WAY CP6 TO 3-WAY CP7	*Call
2097<2094		6703<4602	2-WAY CP6 TO 3-WAY CP7	*Call
2097<2094		6703<4603	3-WAY CP6 TO 3-WAY CP7	*Call
2097<2094		6703<4604	4-WAY CP6 TO 3-WAY CP7	*Call
2097<2094		6703<4605	5-WAY CP6 TO 3-WAY CP7	*Call
2097<2094		6703<4606	6-WAY CP6 TO 3-WAY CP7	*Call
2097<2094		6703<4607	7-WAY CP6 TO 3-WAY CP7	*Call
2097<2094		6703<4608	8-WAY CP6 TO 3-WAY CP7	*Call
2097<2094		6703<4701	1-WAY CP5 TO 3-WAY CP7	*Call
2097<2094		6703<4702	2-WAY CP5 TO 3-WAY CP7	*Call
2097<2094		6703<4703	3-WAY CP5 TO 3-WAY CP7	*Call
2097<2094		6703<4704	4-WAY CP5 TO 3-WAY CP7	*Call
2097<2094		6703<4705	5-WAY CP5 TO 3-WAY CP7	*Call
2097<2094		6703<4706	6-WAY CP5 TO 3-WAY CP7	*Call
2097<2094		6703<4707	7-WAY CP5 TO 3-WAY CP7	*Call
2097<2094		6703<4708	8-WAY CP5 TO 3-WAY CP7	*Call
2097<2094		6703<4801	1-WAY CP4 TO 3-WAY CP7	*Call
2097<2094		6703<4802	2-WAY CP4 TO 3-WAY CP7	*Call
2097<2094		6703<4803	3-WAY CP4 TO 3-WAY CP7	*Call
2097<2094		6703<4804	4-WAY CP4 TO 3-WAY CP7	*Call
2097<2094		6703<4805	5-WAY CP4 TO 3-WAY CP7	*Call
2097<2094		6703<4806	6-WAY CP4 TO 3-WAY CP7	*Call
2097<2094		6703<4807	7-WAY CP4 TO 3-WAY CP7	*Call
2097<2094		6703<4808	8-WAY CP4 TO 3-WAY CP7	*Call
2097<2094		6704<4500	0-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4501	1-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4502	2-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4503	3-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4504	4-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4505	5-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4506	6-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4507	7-WAY CP7 TO 4-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6704<4508	8-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4509	9-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4510	10-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4511	11-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4512	12-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4513	13-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4514	14-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4515	15-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4516	16-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4517	17-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4518	18-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4519	19-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4520	20-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4521	21-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4522	22-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4523	23-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4524	24-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4525	25-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4526	26-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4527	27-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4528	28-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4529	29-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4530	30-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4531	31-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4532	32-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4533	33-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4534	34-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4535	35-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4536	36-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4537	37-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4538	38-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4539	39-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4540	40-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4541	41-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4542	42-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4543	43-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4544	44-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4545	45-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4546	46-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4547	47-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4548	48-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4549	49-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4550	50-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4551	51-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4552	52-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4553	53-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4554	54-WAY CP7 TO 4-WAY CP7	*Call
2097<2094		6704<4601	1-WAY CP6 TO 4-WAY CP7	*Call
2097<2094		6704<4602	2-WAY CP6 TO 4-WAY CP7	*Call
2097<2094		6704<4603	3-WAY CP6 TO 4-WAY CP7	*Call
2097<2094		6704<4604	4-WAY CP6 TO 4-WAY CP7	*Call
2097<2094		6704<4605	5-WAY CP6 TO 4-WAY CP7	*Call
2097<2094		6704<4606	6-WAY CP6 TO 4-WAY CP7	*Call
2097<2094		6704<4607	7-WAY CP6 TO 4-WAY CP7	*Call
2097<2094		6704<4608	8-WAY CP6 TO 4-WAY CP7	*Call
2097<2094		6704<4701	1-WAY CP5 TO 4-WAY CP7	*Call
2097<2094		6704<4702	2-WAY CP5 TO 4-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6704<4703	3-WAY CP5 TO 4-WAY CP7	*Call
2097<2094		6704<4704	4-WAY CP5 TO 4-WAY CP7	*Call
2097<2094		6704<4705	5-WAY CP5 TO 4-WAY CP7	*Call
2097<2094		6704<4706	6-WAY CP5 TO 4-WAY CP7	*Call
2097<2094		6704<4707	7-WAY CP5 TO 4-WAY CP7	*Call
2097<2094		6704<4708	8-WAY CP5 TO 4-WAY CP7	*Call
2097<2094		6704<4801	1-WAY CP4 TO 4-WAY CP7	*Call
2097<2094		6704<4802	2-WAY CP4 TO 4-WAY CP7	*Call
2097<2094		6704<4803	3-WAY CP4 TO 4-WAY CP7	*Call
2097<2094		6704<4804	4-WAY CP4 TO 4-WAY CP7	*Call
2097<2094		6704<4805	5-WAY CP4 TO 4-WAY CP7	*Call
2097<2094		6704<4806	6-WAY CP4 TO 4-WAY CP7	*Call
2097<2094		6704<4807	7-WAY CP4 TO 4-WAY CP7	*Call
2097<2094		6704<4808	8-WAY CP4 TO 4-WAY CP7	*Call
2097<2094		6705<4500	0-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4501	1-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4502	2-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4503	3-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4504	4-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4505	5-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4506	6-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4507	7-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4508	8-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4509	9-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4510	10-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4511	11-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4512	12-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4513	13-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4514	14-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4515	15-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4516	16-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4517	17-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4518	18-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4519	19-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4520	20-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4521	21-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4522	22-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4523	23-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4524	24-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4525	25-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4526	26-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4527	27-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4528	28-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4529	29-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4530	30-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4531	31-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4532	32-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4533	33-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4534	34-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4535	35-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4536	36-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4537	37-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4538	38-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4539	39-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4540	40-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4541	41-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4542	42-WAY CP7 TO 5-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6705<4543	43-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4544	44-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4545	45-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4546	46-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4547	47-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4548	48-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4549	49-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4550	50-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4551	51-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4552	52-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4553	53-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4554	54-WAY CP7 TO 5-WAY CP7	*Call
2097<2094		6705<4601	1-WAY CP6 TO 5-WAY CP7	*Call
2097<2094		6705<4602	2-WAY CP6 TO 5-WAY CP7	*Call
2097<2094		6705<4603	3-WAY CP6 TO 5-WAY CP7	*Call
2097<2094		6705<4604	4-WAY CP6 TO 5-WAY CP7	*Call
2097<2094		6705<4605	5-WAY CP6 TO 5-WAY CP7	*Call
2097<2094		6705<4606	6-WAY CP6 TO 5-WAY CP7	*Call
2097<2094		6705<4607	7-WAY CP6 TO 5-WAY CP7	*Call
2097<2094		6705<4608	8-WAY CP6 TO 5-WAY CP7	*Call
2097<2094		6705<4701	1-WAY CP5 TO 5-WAY CP7	*Call
2097<2094		6705<4702	2-WAY CP5 TO 5-WAY CP7	*Call
2097<2094		6705<4703	3-WAY CP5 TO 5-WAY CP7	*Call
2097<2094		6705<4704	4-WAY CP5 TO 5-WAY CP7	*Call
2097<2094		6705<4705	5-WAY CP5 TO 5-WAY CP7	*Call
2097<2094		6705<4706	6-WAY CP5 TO 5-WAY CP7	*Call
2097<2094		6705<4707	7-WAY CP5 TO 5-WAY CP7	*Call
2097<2094		6705<4708	8-WAY CP5 TO 5-WAY CP7	*Call
2097<2094		6705<4801	1-WAY CP4 TO 5-WAY CP7	*Call
2097<2094		6705<4802	2-WAY CP4 TO 5-WAY CP7	*Call
2097<2094		6705<4803	3-WAY CP4 TO 5-WAY CP7	*Call
2097<2094		6705<4804	4-WAY CP4 TO 5-WAY CP7	*Call
2097<2094		6705<4805	5-WAY CP4 TO 5-WAY CP7	*Call
2097<2094		6705<4806	6-WAY CP4 TO 5-WAY CP7	*Call
2097<2094		6705<4807	7-WAY CP4 TO 5-WAY CP7	*Call
2097<2094		6705<4808	8-WAY CP4 TO 5-WAY CP7	*Call
2097<2094		6706<4500	0-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4501	1-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4502	2-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4503	3-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4504	4-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4505	5-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4506	6-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4507	7-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4508	8-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4509	9-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4510	10-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4511	11-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4512	12-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4513	13-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4514	14-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4515	15-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4516	16-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4517	17-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4518	18-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4519	19-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4520	20-WAY CP7 TO 6-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6706<4521	21-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4522	22-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4523	23-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4524	24-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4525	25-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4526	26-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4527	27-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4528	28-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4529	29-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4530	30-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4531	31-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4532	32-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4533	33-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4534	34-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4535	35-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4536	36-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4537	37-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4538	38-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4539	39-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4540	40-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4541	41-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4542	42-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4543	43-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4544	44-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4545	45-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4546	46-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4547	47-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4548	48-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4549	49-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4550	50-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4551	51-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4552	52-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4553	53-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4554	54-WAY CP7 TO 6-WAY CP7	*Call
2097<2094		6706<4601	1-WAY CP6 TO 6-WAY CP7	*Call
2097<2094		6706<4602	2-WAY CP6 TO 6-WAY CP7	*Call
2097<2094		6706<4603	3-WAY CP6 TO 6-WAY CP7	*Call
2097<2094		6706<4604	4-WAY CP6 TO 6-WAY CP7	*Call
2097<2094		6706<4605	5-WAY CP6 TO 6-WAY CP7	*Call
2097<2094		6706<4606	6-WAY CP6 TO 6-WAY CP7	*Call
2097<2094		6706<4607	7-WAY CP6 TO 6-WAY CP7	*Call
2097<2094		6706<4608	8-WAY CP6 TO 6-WAY CP7	*Call
2097<2094		6706<4701	1-WAY CP5 TO 6-WAY CP7	*Call
2097<2094		6706<4702	2-WAY CP5 TO 6-WAY CP7	*Call
2097<2094		6706<4703	3-WAY CP5 TO 6-WAY CP7	*Call
2097<2094		6706<4704	4-WAY CP5 TO 6-WAY CP7	*Call
2097<2094		6706<4705	5-WAY CP5 TO 6-WAY CP7	*Call
2097<2094		6706<4706	6-WAY CP5 TO 6-WAY CP7	*Call
2097<2094		6706<4707	7-WAY CP5 TO 6-WAY CP7	*Call
2097<2094		6706<4708	8-WAY CP5 TO 6-WAY CP7	*Call
2097<2094		6706<4801	1-WAY CP4 TO 6-WAY CP7	*Call
2097<2094		6706<4802	2-WAY CP4 TO 6-WAY CP7	*Call
2097<2094		6706<4803	3-WAY CP4 TO 6-WAY CP7	*Call
2097<2094		6706<4804	4-WAY CP4 TO 6-WAY CP7	*Call
2097<2094		6706<4805	5-WAY CP4 TO 6-WAY CP7	*Call
2097<2094		6706<4806	6-WAY CP4 TO 6-WAY CP7	*Call
2097<2094		6706<4807	7-WAY CP4 TO 6-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6706<4808	8-WAY CP4 TO 6-WAY CP7	*Call
2097<2094		6707<4500	0-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4501	1-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4502	2-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4503	3-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4504	4-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4505	5-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4506	6-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4507	7-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4508	8-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4509	9-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4510	10-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4511	11-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4512	12-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4513	13-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4514	14-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4515	15-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4516	16-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4517	17-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4518	18-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4519	19-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4520	20-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4521	21-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4522	22-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4523	23-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4524	24-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4525	25-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4526	26-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4527	27-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4528	28-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4529	29-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4530	30-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4531	31-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4532	32-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4533	33-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4534	34-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4535	35-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4536	36-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4537	37-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4538	38-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4539	39-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4540	40-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4541	41-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4542	42-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4543	43-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4544	44-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4545	45-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4546	46-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4547	47-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4548	48-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4549	49-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4550	50-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4551	51-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4552	52-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4553	53-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4554	54-WAY CP7 TO 7-WAY CP7	*Call
2097<2094		6707<4601	1-WAY CP6 TO 7-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6707<4602	2-WAY CP6 TO 7-WAY CP7	*Call
2097<2094		6707<4603	3-WAY CP6 TO 7-WAY CP7	*Call
2097<2094		6707<4604	4-WAY CP6 TO 7-WAY CP7	*Call
2097<2094		6707<4605	5-WAY CP6 TO 7-WAY CP7	*Call
2097<2094		6707<4606	6-WAY CP6 TO 7-WAY CP7	*Call
2097<2094		6707<4607	7-WAY CP6 TO 7-WAY CP7	*Call
2097<2094		6707<4608	8-WAY CP6 TO 7-WAY CP7	*Call
2097<2094		6707<4701	1-WAY CP5 TO 7-WAY CP7	*Call
2097<2094		6707<4702	2-WAY CP5 TO 7-WAY CP7	*Call
2097<2094		6707<4703	3-WAY CP5 TO 7-WAY CP7	*Call
2097<2094		6707<4704	4-WAY CP5 TO 7-WAY CP7	*Call
2097<2094		6707<4705	5-WAY CP5 TO 7-WAY CP7	*Call
2097<2094		6707<4706	6-WAY CP5 TO 7-WAY CP7	*Call
2097<2094		6707<4707	7-WAY CP5 TO 7-WAY CP7	*Call
2097<2094		6707<4708	8-WAY CP5 TO 7-WAY CP7	*Call
2097<2094		6707<4801	1-WAY CP4 TO 7-WAY CP7	*Call
2097<2094		6707<4802	2-WAY CP4 TO 7-WAY CP7	*Call
2097<2094		6707<4803	3-WAY CP4 TO 7-WAY CP7	*Call
2097<2094		6707<4804	4-WAY CP4 TO 7-WAY CP7	*Call
2097<2094		6707<4805	5-WAY CP4 TO 7-WAY CP7	*Call
2097<2094		6707<4806	6-WAY CP4 TO 7-WAY CP7	*Call
2097<2094		6707<4807	7-WAY CP4 TO 7-WAY CP7	*Call
2097<2094		6707<4808	8-WAY CP4 TO 7-WAY CP7	*Call
2097<2094		6708<4500	0-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4501	1-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4502	2-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4503	3-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4504	4-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4505	5-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4506	6-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4507	7-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4508	8-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4509	9-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4510	10-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4511	11-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4512	12-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4513	13-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4514	14-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4515	15-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4516	16-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4517	17-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4518	18-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4519	19-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4520	20-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4521	21-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4522	22-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4523	23-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4524	24-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4525	25-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4526	26-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4527	27-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4528	28-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4529	29-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4530	30-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4531	31-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4532	32-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4533	33-WAY CP7 TO 8-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6708<4534	34-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4535	35-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4536	36-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4537	37-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4538	38-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4539	39-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4540	40-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4541	41-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4542	42-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4543	43-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4544	44-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4545	45-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4546	46-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4547	47-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4548	48-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4549	49-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4550	50-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4551	51-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4552	52-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4553	53-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4554	54-WAY CP7 TO 8-WAY CP7	*Call
2097<2094		6708<4601	1-WAY CP6 TO 8-WAY CP7	*Call
2097<2094		6708<4602	2-WAY CP6 TO 8-WAY CP7	*Call
2097<2094		6708<4603	3-WAY CP6 TO 8-WAY CP7	*Call
2097<2094		6708<4604	4-WAY CP6 TO 8-WAY CP7	*Call
2097<2094		6708<4605	5-WAY CP6 TO 8-WAY CP7	*Call
2097<2094		6708<4606	6-WAY CP6 TO 8-WAY CP7	*Call
2097<2094		6708<4607	7-WAY CP6 TO 8-WAY CP7	*Call
2097<2094		6708<4608	8-WAY CP6 TO 8-WAY CP7	*Call
2097<2094		6708<4701	1-WAY CP5 TO 8-WAY CP7	*Call
2097<2094		6708<4702	2-WAY CP5 TO 8-WAY CP7	*Call
2097<2094		6708<4703	3-WAY CP5 TO 8-WAY CP7	*Call
2097<2094		6708<4704	4-WAY CP5 TO 8-WAY CP7	*Call
2097<2094		6708<4705	5-WAY CP5 TO 8-WAY CP7	*Call
2097<2094		6708<4706	6-WAY CP5 TO 8-WAY CP7	*Call
2097<2094		6708<4707	7-WAY CP5 TO 8-WAY CP7	*Call
2097<2094		6708<4708	8-WAY CP5 TO 8-WAY CP7	*Call
2097<2094		6708<4801	1-WAY CP4 TO 8-WAY CP7	*Call
2097<2094		6708<4802	2-WAY CP4 TO 8-WAY CP7	*Call
2097<2094		6708<4803	3-WAY CP4 TO 8-WAY CP7	*Call
2097<2094		6708<4804	4-WAY CP4 TO 8-WAY CP7	*Call
2097<2094		6708<4805	5-WAY CP4 TO 8-WAY CP7	*Call
2097<2094		6708<4806	6-WAY CP4 TO 8-WAY CP7	*Call
2097<2094		6708<4807	7-WAY CP4 TO 8-WAY CP7	*Call
2097<2094		6708<4808	8-WAY CP4 TO 8-WAY CP7	*Call
2097<2094		6709<4500	0-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4501	1-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4502	2-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4503	3-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4504	4-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4505	5-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4506	6-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4507	7-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4508	8-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4509	9-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4510	10-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4511	11-WAY CP7 TO 9-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6709<4512	12-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4513	13-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4514	14-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4515	15-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4516	16-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4517	17-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4518	18-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4519	19-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4520	20-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4521	21-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4522	22-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4523	23-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4524	24-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4525	25-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4526	26-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4527	27-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4528	28-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4529	29-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4530	30-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4531	31-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4532	32-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4533	33-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4534	34-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4535	35-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4536	36-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4537	37-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4538	38-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4539	39-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4540	40-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4541	41-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4542	42-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4543	43-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4544	44-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4545	45-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4546	46-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4547	47-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4548	48-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4549	49-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4550	50-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4551	51-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4552	52-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4553	53-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4554	54-WAY CP7 TO 9-WAY CP7	*Call
2097<2094		6709<4601	1-WAY CP6 TO 9-WAY CP7	*Call
2097<2094		6709<4602	2-WAY CP6 TO 9-WAY CP7	*Call
2097<2094		6709<4603	3-WAY CP6 TO 9-WAY CP7	*Call
2097<2094		6709<4604	4-WAY CP6 TO 9-WAY CP7	*Call
2097<2094		6709<4605	5-WAY CP6 TO 9-WAY CP7	*Call
2097<2094		6709<4606	6-WAY CP6 TO 9-WAY CP7	*Call
2097<2094		6709<4607	7-WAY CP6 TO 9-WAY CP7	*Call
2097<2094		6709<4608	8-WAY CP6 TO 9-WAY CP7	*Call
2097<2094		6709<4701	1-WAY CP5 TO 9-WAY CP7	*Call
2097<2094		6709<4702	2-WAY CP5 TO 9-WAY CP7	*Call
2097<2094		6709<4703	3-WAY CP5 TO 9-WAY CP7	*Call
2097<2094		6709<4704	4-WAY CP5 TO 9-WAY CP7	*Call
2097<2094		6709<4705	5-WAY CP5 TO 9-WAY CP7	*Call
2097<2094		6709<4706	6-WAY CP5 TO 9-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6709<4707	7-WAY CP5 TO 9-WAY CP7	*Call
2097<2094		6709<4708	8-WAY CP5 TO 9-WAY CP7	*Call
2097<2094		6709<4801	1-WAY CP4 TO 9-WAY CP7	*Call
2097<2094		6709<4802	2-WAY CP4 TO 9-WAY CP7	*Call
2097<2094		6709<4803	3-WAY CP4 TO 9-WAY CP7	*Call
2097<2094		6709<4804	4-WAY CP4 TO 9-WAY CP7	*Call
2097<2094		6709<4805	5-WAY CP4 TO 9-WAY CP7	*Call
2097<2094		6709<4806	6-WAY CP4 TO 9-WAY CP7	*Call
2097<2094		6709<4807	7-WAY CP4 TO 9-WAY CP7	*Call
2097<2094		6709<4808	8-WAY CP4 TO 9-WAY CP7	*Call
2097<2094		6710<4500	0-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4501	1-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4502	2-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4503	3-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4504	4-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4505	5-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4506	6-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4507	7-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4508	8-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4509	9-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4510	10-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4511	11-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4512	12-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4513	13-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4514	14-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4515	15-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4516	16-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4517	17-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4518	18-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4519	19-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4520	20-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4521	21-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4522	22-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4523	23-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4524	24-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4525	25-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4526	26-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4527	27-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4528	28-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4529	29-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4530	30-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4531	31-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4532	32-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4533	33-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4534	34-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4535	35-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4536	36-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4537	37-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4538	38-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4539	39-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4540	40-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4541	41-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4542	42-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4543	43-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4544	44-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4545	45-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4546	46-WAY CP7 TO 10-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6710<4547	47-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4548	48-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4549	49-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4550	50-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4551	51-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4552	52-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4553	53-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4554	54-WAY CP7 TO 10-WAY CP7	*Call
2097<2094		6710<4601	1-WAY CP6 TO 10-WAY CP7	*Call
2097<2094		6710<4602	2-WAY CP6 TO 10-WAY CP7	*Call
2097<2094		6710<4603	3-WAY CP6 TO 10-WAY CP7	*Call
2097<2094		6710<4604	4-WAY CP6 TO 10-WAY CP7	*Call
2097<2094		6710<4605	5-WAY CP6 TO 10-WAY CP7	*Call
2097<2094		6710<4606	6-WAY CP6 TO 10-WAY CP7	*Call
2097<2094		6710<4607	7-WAY CP6 TO 10-WAY CP7	*Call
2097<2094		6710<4608	8-WAY CP6 TO 10-WAY CP7	*Call
2097<2094		6710<4701	1-WAY CP5 TO 10-WAY CP7	*Call
2097<2094		6710<4702	2-WAY CP5 TO 10-WAY CP7	*Call
2097<2094		6710<4703	3-WAY CP5 TO 10-WAY CP7	*Call
2097<2094		6710<4704	4-WAY CP5 TO 10-WAY CP7	*Call
2097<2094		6710<4705	5-WAY CP5 TO 10-WAY CP7	*Call
2097<2094		6710<4706	6-WAY CP5 TO 10-WAY CP7	*Call
2097<2094		6710<4707	7-WAY CP5 TO 10-WAY CP7	*Call
2097<2094		6710<4708	8-WAY CP5 TO 10-WAY CP7	*Call
2097<2094		6710<4801	1-WAY CP4 TO 10-WAY CP7	*Call
2097<2094		6710<4802	2-WAY CP4 TO 10-WAY CP7	*Call
2097<2094		6710<4803	3-WAY CP4 TO 10-WAY CP7	*Call
2097<2094		6710<4804	4-WAY CP4 TO 10-WAY CP7	*Call
2097<2094		6710<4805	5-WAY CP4 TO 10-WAY CP7	*Call
2097<2094		6710<4806	6-WAY CP4 TO 10-WAY CP7	*Call
2097<2094		6710<4807	7-WAY CP4 TO 10-WAY CP7	*Call
2097<2094		6710<4808	8-WAY CP4 TO 10-WAY CP7	*Call
2097<2094		6711<4500	0-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4501	1-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4502	2-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4503	3-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4504	4-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4505	5-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4506	6-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4507	7-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4508	8-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4509	9-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4510	10-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4511	11-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4512	12-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4513	13-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4514	14-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4515	15-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4516	16-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4517	17-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4518	18-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4519	19-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4520	20-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4521	21-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4522	22-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4523	23-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4524	24-WAY CP7 TO 11-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6711<4525	25-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4526	26-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4527	27-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4528	28-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4529	29-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4530	30-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4531	31-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4532	32-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4533	33-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4534	34-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4535	35-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4536	36-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4537	37-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4538	38-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4539	39-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4540	40-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4541	41-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4542	42-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4543	43-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4544	44-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4545	45-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4546	46-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4547	47-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4548	48-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4549	49-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4550	50-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4551	51-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4552	52-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4553	53-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4554	54-WAY CP7 TO 11-WAY CP7	*Call
2097<2094		6711<4601	1-WAY CP6 TO 11-WAY CP7	*Call
2097<2094		6711<4602	2-WAY CP6 TO 11-WAY CP7	*Call
2097<2094		6711<4603	3-WAY CP6 TO 11-WAY CP7	*Call
2097<2094		6711<4604	4-WAY CP6 TO 11-WAY CP7	*Call
2097<2094		6711<4605	5-WAY CP6 TO 11-WAY CP7	*Call
2097<2094		6711<4606	6-WAY CP6 TO 11-WAY CP7	*Call
2097<2094		6711<4607	7-WAY CP6 TO 11-WAY CP7	*Call
2097<2094		6711<4608	8-WAY CP6 TO 11-WAY CP7	*Call
2097<2094		6711<4701	1-WAY CP5 TO 11-WAY CP7	*Call
2097<2094		6711<4702	2-WAY CP5 TO 11-WAY CP7	*Call
2097<2094		6711<4703	3-WAY CP5 TO 11-WAY CP7	*Call
2097<2094		6711<4704	4-WAY CP5 TO 11-WAY CP7	*Call
2097<2094		6711<4705	5-WAY CP5 TO 11-WAY CP7	*Call
2097<2094		6711<4706	6-WAY CP5 TO 11-WAY CP7	*Call
2097<2094		6711<4707	7-WAY CP5 TO 11-WAY CP7	*Call
2097<2094		6711<4708	8-WAY CP5 TO 11-WAY CP7	*Call
2097<2094		6711<4801	1-WAY CP4 TO 11-WAY CP7	*Call
2097<2094		6711<4802	2-WAY CP4 TO 11-WAY CP7	*Call
2097<2094		6711<4803	3-WAY CP4 TO 11-WAY CP7	*Call
2097<2094		6711<4804	4-WAY CP4 TO 11-WAY CP7	*Call
2097<2094		6711<4805	5-WAY CP4 TO 11-WAY CP7	*Call
2097<2094		6711<4806	6-WAY CP4 TO 11-WAY CP7	*Call
2097<2094		6711<4807	7-WAY CP4 TO 11-WAY CP7	*Call
2097<2094		6711<4808	8-WAY CP4 TO 11-WAY CP7	*Call
2097<2094		6712<4500	0-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4501	1-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4502	2-WAY CP7 TO 12-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6712<4503	3-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4504	4-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4505	5-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4506	6-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4507	7-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4508	8-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4509	9-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4510	10-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4511	11-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4512	12-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4513	13-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4514	14-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4515	15-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4516	16-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4517	17-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4518	18-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4519	19-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4520	20-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4521	21-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4522	22-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4523	23-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4524	24-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4525	25-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4526	26-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4527	27-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4528	28-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4529	29-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4530	30-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4531	31-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4532	32-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4533	33-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4534	34-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4535	35-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4536	36-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4537	37-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4538	38-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4539	39-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4540	40-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4541	41-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4542	42-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4543	43-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4544	44-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4545	45-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4546	46-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4547	47-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4548	48-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4549	49-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4550	50-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4551	51-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4552	52-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4553	53-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4554	54-WAY CP7 TO 12-WAY CP7	*Call
2097<2094		6712<4601	1-WAY CP6 TO 12-WAY CP7	*Call
2097<2094		6712<4602	2-WAY CP6 TO 12-WAY CP7	*Call
2097<2094		6712<4603	3-WAY CP6 TO 12-WAY CP7	*Call
2097<2094		6712<4604	4-WAY CP6 TO 12-WAY CP7	*Call
2097<2094		6712<4605	5-WAY CP6 TO 12-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6712<4606	6-WAY CP6 TO 12-WAY CP7	*Call
2097<2094		6712<4607	7-WAY CP6 TO 12-WAY CP7	*Call
2097<2094		6712<4608	8-WAY CP6 TO 12-WAY CP7	*Call
2097<2094		6712<4701	1-WAY CP5 TO 12-WAY CP7	*Call
2097<2094		6712<4702	2-WAY CP5 TO 12-WAY CP7	*Call
2097<2094		6712<4703	3-WAY CP5 TO 12-WAY CP7	*Call
2097<2094		6712<4704	4-WAY CP5 TO 12-WAY CP7	*Call
2097<2094		6712<4705	5-WAY CP5 TO 12-WAY CP7	*Call
2097<2094		6712<4706	6-WAY CP5 TO 12-WAY CP7	*Call
2097<2094		6712<4707	7-WAY CP5 TO 12-WAY CP7	*Call
2097<2094		6712<4708	8-WAY CP5 TO 12-WAY CP7	*Call
2097<2094		6712<4801	1-WAY CP4 TO 12-WAY CP7	*Call
2097<2094		6712<4802	2-WAY CP4 TO 12-WAY CP7	*Call
2097<2094		6712<4803	3-WAY CP4 TO 12-WAY CP7	*Call
2097<2094		6712<4804	4-WAY CP4 TO 12-WAY CP7	*Call
2097<2094		6712<4805	5-WAY CP4 TO 12-WAY CP7	*Call
2097<2094		6712<4806	6-WAY CP4 TO 12-WAY CP7	*Call
2097<2094		6712<4807	7-WAY CP4 TO 12-WAY CP7	*Call
2097<2094		6712<4808	8-WAY CP4 TO 12-WAY CP7	*Call
2097<2094		6713<4500	0-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4501	1-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4502	2-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4503	3-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4504	4-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4505	5-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4506	6-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4507	7-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4508	8-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4509	9-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4510	10-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4511	11-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4512	12-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4513	13-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4514	14-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4515	15-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4516	16-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4517	17-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4518	18-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4519	19-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4520	20-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4521	21-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4522	22-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4523	23-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4524	24-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4525	25-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4526	26-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4527	27-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4528	28-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4529	29-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4530	30-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4531	31-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4532	32-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4533	33-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4534	34-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4535	35-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4536	36-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4537	37-WAY CP7 TO 13-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6713<4538	38-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4539	39-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4540	40-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4541	41-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4542	42-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4543	43-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4544	44-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4545	45-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4546	46-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4547	47-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4548	48-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4549	49-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4550	50-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4551	51-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4552	52-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4553	53-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4554	54-WAY CP7 TO 13-WAY CP7	*Call
2097<2094		6713<4601	1-WAY CP6 TO 13-WAY CP7	*Call
2097<2094		6713<4602	2-WAY CP6 TO 13-WAY CP7	*Call
2097<2094		6713<4603	3-WAY CP6 TO 13-WAY CP7	*Call
2097<2094		6713<4604	4-WAY CP6 TO 13-WAY CP7	*Call
2097<2094		6713<4605	5-WAY CP6 TO 13-WAY CP7	*Call
2097<2094		6713<4606	6-WAY CP6 TO 13-WAY CP7	*Call
2097<2094		6713<4607	7-WAY CP6 TO 13-WAY CP7	*Call
2097<2094		6713<4608	8-WAY CP6 TO 13-WAY CP7	*Call
2097<2094		6713<4701	1-WAY CP5 TO 13-WAY CP7	*Call
2097<2094		6713<4702	2-WAY CP5 TO 13-WAY CP7	*Call
2097<2094		6713<4703	3-WAY CP5 TO 13-WAY CP7	*Call
2097<2094		6713<4704	4-WAY CP5 TO 13-WAY CP7	*Call
2097<2094		6713<4705	5-WAY CP5 TO 13-WAY CP7	*Call
2097<2094		6713<4706	6-WAY CP5 TO 13-WAY CP7	*Call
2097<2094		6713<4707	7-WAY CP5 TO 13-WAY CP7	*Call
2097<2094		6713<4708	8-WAY CP5 TO 13-WAY CP7	*Call
2097<2094		6713<4801	1-WAY CP4 TO 13-WAY CP7	*Call
2097<2094		6713<4802	2-WAY CP4 TO 13-WAY CP7	*Call
2097<2094		6713<4803	3-WAY CP4 TO 13-WAY CP7	*Call
2097<2094		6713<4804	4-WAY CP4 TO 13-WAY CP7	*Call
2097<2094		6713<4805	5-WAY CP4 TO 13-WAY CP7	*Call
2097<2094		6713<4806	6-WAY CP4 TO 13-WAY CP7	*Call
2097<2094		6713<4807	7-WAY CP4 TO 13-WAY CP7	*Call
2097<2094		6713<4808	8-WAY CP4 TO 13-WAY CP7	*Call
2097<2094		6714<4500	0-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4501	1-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4502	2-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4503	3-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4504	4-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4505	5-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4506	6-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4507	7-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4508	8-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4509	9-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4510	10-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4511	11-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4512	12-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4513	13-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4514	14-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4515	15-WAY CP7 TO 14-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6714<4516	16-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4517	17-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4518	18-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4519	19-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4520	20-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4521	21-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4522	22-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4523	23-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4524	24-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4525	25-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4526	26-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4527	27-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4528	28-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4529	29-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4530	30-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4531	31-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4532	32-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4533	33-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4534	34-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4535	35-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4536	36-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4537	37-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4538	38-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4539	39-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4540	40-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4541	41-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4542	42-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4543	43-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4544	44-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4545	45-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4546	46-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4547	47-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4548	48-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4549	49-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4550	50-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4551	51-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4552	52-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4553	53-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4554	54-WAY CP7 TO 14-WAY CP7	*Call
2097<2094		6714<4601	1-WAY CP6 TO 14-WAY CP7	*Call
2097<2094		6714<4602	2-WAY CP6 TO 14-WAY CP7	*Call
2097<2094		6714<4603	3-WAY CP6 TO 14-WAY CP7	*Call
2097<2094		6714<4604	4-WAY CP6 TO 14-WAY CP7	*Call
2097<2094		6714<4605	5-WAY CP6 TO 14-WAY CP7	*Call
2097<2094		6714<4606	6-WAY CP6 TO 14-WAY CP7	*Call
2097<2094		6714<4607	7-WAY CP6 TO 14-WAY CP7	*Call
2097<2094		6714<4608	8-WAY CP6 TO 14-WAY CP7	*Call
2097<2094		6714<4701	1-WAY CP5 TO 14-WAY CP7	*Call
2097<2094		6714<4702	2-WAY CP5 TO 14-WAY CP7	*Call
2097<2094		6714<4703	3-WAY CP5 TO 14-WAY CP7	*Call
2097<2094		6714<4704	4-WAY CP5 TO 14-WAY CP7	*Call
2097<2094		6714<4705	5-WAY CP5 TO 14-WAY CP7	*Call
2097<2094		6714<4706	6-WAY CP5 TO 14-WAY CP7	*Call
2097<2094		6714<4707	7-WAY CP5 TO 14-WAY CP7	*Call
2097<2094		6714<4708	8-WAY CP5 TO 14-WAY CP7	*Call
2097<2094		6714<4801	1-WAY CP4 TO 14-WAY CP7	*Call
2097<2094		6714<4802	2-WAY CP4 TO 14-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6714<4803	3-WAY CP4 TO 14-WAY CP7	*Call
2097<2094		6714<4804	4-WAY CP4 TO 14-WAY CP7	*Call
2097<2094		6714<4805	5-WAY CP4 TO 14-WAY CP7	*Call
2097<2094		6714<4806	6-WAY CP4 TO 14-WAY CP7	*Call
2097<2094		6714<4807	7-WAY CP4 TO 14-WAY CP7	*Call
2097<2094		6714<4808	8-WAY CP4 TO 14-WAY CP7	*Call
2097<2094		6715<4500	0-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4501	1-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4502	2-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4503	3-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4504	4-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4505	5-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4506	6-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4507	7-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4508	8-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4509	9-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4510	10-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4511	11-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4512	12-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4513	13-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4514	14-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4515	15-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4516	16-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4517	17-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4518	18-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4519	19-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4520	20-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4521	21-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4522	22-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4523	23-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4524	24-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4525	25-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4526	26-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4527	27-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4528	28-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4529	29-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4530	30-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4531	31-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4532	32-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4533	33-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4534	34-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4535	35-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4536	36-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4537	37-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4538	38-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4539	39-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4540	40-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4541	41-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4542	42-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4543	43-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4544	44-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4545	45-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4546	46-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4547	47-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4548	48-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4549	49-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4550	50-WAY CP7 TO 15-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6715<4551	51-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4552	52-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4553	53-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4554	54-WAY CP7 TO 15-WAY CP7	*Call
2097<2094		6715<4601	1-WAY CP6 TO 15-WAY CP7	*Call
2097<2094		6715<4602	2-WAY CP6 TO 15-WAY CP7	*Call
2097<2094		6715<4603	3-WAY CP6 TO 15-WAY CP7	*Call
2097<2094		6715<4604	4-WAY CP6 TO 15-WAY CP7	*Call
2097<2094		6715<4605	5-WAY CP6 TO 15-WAY CP7	*Call
2097<2094		6715<4606	6-WAY CP6 TO 15-WAY CP7	*Call
2097<2094		6715<4607	7-WAY CP6 TO 15-WAY CP7	*Call
2097<2094		6715<4608	8-WAY CP6 TO 15-WAY CP7	*Call
2097<2094		6715<4701	1-WAY CP5 TO 15-WAY CP7	*Call
2097<2094		6715<4702	2-WAY CP5 TO 15-WAY CP7	*Call
2097<2094		6715<4703	3-WAY CP5 TO 15-WAY CP7	*Call
2097<2094		6715<4704	4-WAY CP5 TO 15-WAY CP7	*Call
2097<2094		6715<4705	5-WAY CP5 TO 15-WAY CP7	*Call
2097<2094		6715<4706	6-WAY CP5 TO 15-WAY CP7	*Call
2097<2094		6715<4707	7-WAY CP5 TO 15-WAY CP7	*Call
2097<2094		6715<4708	8-WAY CP5 TO 15-WAY CP7	*Call
2097<2094		6715<4801	1-WAY CP4 TO 15-WAY CP7	*Call
2097<2094		6715<4802	2-WAY CP4 TO 15-WAY CP7	*Call
2097<2094		6715<4803	3-WAY CP4 TO 15-WAY CP7	*Call
2097<2094		6715<4804	4-WAY CP4 TO 15-WAY CP7	*Call
2097<2094		6715<4805	5-WAY CP4 TO 15-WAY CP7	*Call
2097<2094		6715<4806	6-WAY CP4 TO 15-WAY CP7	*Call
2097<2094		6715<4807	7-WAY CP4 TO 15-WAY CP7	*Call
2097<2094		6715<4808	8-WAY CP4 TO 15-WAY CP7	*Call
2097<2094		6716<4500	0-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4501	1-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4502	2-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4503	3-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4504	4-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4505	5-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4506	6-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4507	7-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4508	8-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4509	9-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4510	10-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4511	11-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4512	12-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4513	13-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4514	14-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4515	15-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4516	16-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4517	17-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4518	18-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4519	19-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4520	20-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4521	21-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4522	22-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4523	23-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4524	24-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4525	25-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4526	26-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4527	27-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4528	28-WAY CP7 TO 16-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6716<4529	29-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4530	30-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4531	31-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4532	32-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4533	33-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4534	34-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4535	35-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4536	36-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4537	37-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4538	38-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4539	39-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4540	40-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4541	41-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4542	42-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4543	43-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4544	44-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4545	45-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4546	46-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4547	47-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4548	48-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4549	49-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4550	50-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4551	51-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4552	52-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4553	53-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4554	54-WAY CP7 TO 16-WAY CP7	*Call
2097<2094		6716<4601	1-WAY CP6 TO 16-WAY CP7	*Call
2097<2094		6716<4602	2-WAY CP6 TO 16-WAY CP7	*Call
2097<2094		6716<4603	3-WAY CP6 TO 16-WAY CP7	*Call
2097<2094		6716<4604	4-WAY CP6 TO 16-WAY CP7	*Call
2097<2094		6716<4605	5-WAY CP6 TO 16-WAY CP7	*Call
2097<2094		6716<4606	6-WAY CP6 TO 16-WAY CP7	*Call
2097<2094		6716<4607	7-WAY CP6 TO 16-WAY CP7	*Call
2097<2094		6716<4608	8-WAY CP6 TO 16-WAY CP7	*Call
2097<2094		6716<4701	1-WAY CP5 TO 16-WAY CP7	*Call
2097<2094		6716<4702	2-WAY CP5 TO 16-WAY CP7	*Call
2097<2094		6716<4703	3-WAY CP5 TO 16-WAY CP7	*Call
2097<2094		6716<4704	4-WAY CP5 TO 16-WAY CP7	*Call
2097<2094		6716<4705	5-WAY CP5 TO 16-WAY CP7	*Call
2097<2094		6716<4706	6-WAY CP5 TO 16-WAY CP7	*Call
2097<2094		6716<4707	7-WAY CP5 TO 16-WAY CP7	*Call
2097<2094		6716<4708	8-WAY CP5 TO 16-WAY CP7	*Call
2097<2094		6716<4801	1-WAY CP4 TO 16-WAY CP7	*Call
2097<2094		6716<4802	2-WAY CP4 TO 16-WAY CP7	*Call
2097<2094		6716<4803	3-WAY CP4 TO 16-WAY CP7	*Call
2097<2094		6716<4804	4-WAY CP4 TO 16-WAY CP7	*Call
2097<2094		6716<4805	5-WAY CP4 TO 16-WAY CP7	*Call
2097<2094		6716<4806	6-WAY CP4 TO 16-WAY CP7	*Call
2097<2094		6716<4807	7-WAY CP4 TO 16-WAY CP7	*Call
2097<2094		6716<4808	8-WAY CP4 TO 16-WAY CP7	*Call
2097<2094		6717<4500	0-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4501	1-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4502	2-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4503	3-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4504	4-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4505	5-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4506	6-WAY CP7 TO 17-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6717<4507	7-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4508	8-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4509	9-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4510	10-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4511	11-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4512	12-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4513	13-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4514	14-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4515	15-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4516	16-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4517	17-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4518	18-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4519	19-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4520	20-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4521	21-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4522	22-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4523	23-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4524	24-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4525	25-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4526	26-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4527	27-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4528	28-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4529	29-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4530	30-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4531	31-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4532	32-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4533	33-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4534	34-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4535	35-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4536	36-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4537	37-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4538	38-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4539	39-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4540	40-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4541	41-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4542	42-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4543	43-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4544	44-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4545	45-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4546	46-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4547	47-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4548	48-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4549	49-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4550	50-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4551	51-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4552	52-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4553	53-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4554	54-WAY CP7 TO 17-WAY CP7	*Call
2097<2094		6717<4601	1-WAY CP6 TO 17-WAY CP7	*Call
2097<2094		6717<4602	2-WAY CP6 TO 17-WAY CP7	*Call
2097<2094		6717<4603	3-WAY CP6 TO 17-WAY CP7	*Call
2097<2094		6717<4604	4-WAY CP6 TO 17-WAY CP7	*Call
2097<2094		6717<4605	5-WAY CP6 TO 17-WAY CP7	*Call
2097<2094		6717<4606	6-WAY CP6 TO 17-WAY CP7	*Call
2097<2094		6717<4607	7-WAY CP6 TO 17-WAY CP7	*Call
2097<2094		6717<4608	8-WAY CP6 TO 17-WAY CP7	*Call
2097<2094		6717<4701	1-WAY CP5 TO 17-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6717<4702	2-WAY CP5 TO 17-WAY CP7	*Call
2097<2094		6717<4703	3-WAY CP5 TO 17-WAY CP7	*Call
2097<2094		6717<4704	4-WAY CP5 TO 17-WAY CP7	*Call
2097<2094		6717<4705	5-WAY CP5 TO 17-WAY CP7	*Call
2097<2094		6717<4706	6-WAY CP5 TO 17-WAY CP7	*Call
2097<2094		6717<4707	7-WAY CP5 TO 17-WAY CP7	*Call
2097<2094		6717<4708	8-WAY CP5 TO 17-WAY CP7	*Call
2097<2094		6717<4801	1-WAY CP4 TO 17-WAY CP7	*Call
2097<2094		6717<4802	2-WAY CP4 TO 17-WAY CP7	*Call
2097<2094		6717<4803	3-WAY CP4 TO 17-WAY CP7	*Call
2097<2094		6717<4804	4-WAY CP4 TO 17-WAY CP7	*Call
2097<2094		6717<4805	5-WAY CP4 TO 17-WAY CP7	*Call
2097<2094		6717<4806	6-WAY CP4 TO 17-WAY CP7	*Call
2097<2094		6717<4807	7-WAY CP4 TO 17-WAY CP7	*Call
2097<2094		6717<4808	8-WAY CP4 TO 17-WAY CP7	*Call
2097<2094		6718<4500	0-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4501	1-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4502	2-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4503	3-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4504	4-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4505	5-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4506	6-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4507	7-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4508	8-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4509	9-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4510	10-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4511	11-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4512	12-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4513	13-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4514	14-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4515	15-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4516	16-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4517	17-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4518	18-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4519	19-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4520	20-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4521	21-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4522	22-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4523	23-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4524	24-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4525	25-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4526	26-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4527	27-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4528	28-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4529	29-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4530	30-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4531	31-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4532	32-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4533	33-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4534	34-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4535	35-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4536	36-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4537	37-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4538	38-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4539	39-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4540	40-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4541	41-WAY CP7 TO 18-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6718<4542	42-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4543	43-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4544	44-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4545	45-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4546	46-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4547	47-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4548	48-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4549	49-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4550	50-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4551	51-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4552	52-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4553	53-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4554	54-WAY CP7 TO 18-WAY CP7	*Call
2097<2094		6718<4601	1-WAY CP6 TO 18-WAY CP7	*Call
2097<2094		6718<4602	2-WAY CP6 TO 18-WAY CP7	*Call
2097<2094		6718<4603	3-WAY CP6 TO 18-WAY CP7	*Call
2097<2094		6718<4604	4-WAY CP6 TO 18-WAY CP7	*Call
2097<2094		6718<4605	5-WAY CP6 TO 18-WAY CP7	*Call
2097<2094		6718<4606	6-WAY CP6 TO 18-WAY CP7	*Call
2097<2094		6718<4607	7-WAY CP6 TO 18-WAY CP7	*Call
2097<2094		6718<4608	8-WAY CP6 TO 18-WAY CP7	*Call
2097<2094		6718<4701	1-WAY CP5 TO 18-WAY CP7	*Call
2097<2094		6718<4702	2-WAY CP5 TO 18-WAY CP7	*Call
2097<2094		6718<4703	3-WAY CP5 TO 18-WAY CP7	*Call
2097<2094		6718<4704	4-WAY CP5 TO 18-WAY CP7	*Call
2097<2094		6718<4705	5-WAY CP5 TO 18-WAY CP7	*Call
2097<2094		6718<4706	6-WAY CP5 TO 18-WAY CP7	*Call
2097<2094		6718<4707	7-WAY CP5 TO 18-WAY CP7	*Call
2097<2094		6718<4708	8-WAY CP5 TO 18-WAY CP7	*Call
2097<2094		6718<4801	1-WAY CP4 TO 18-WAY CP7	*Call
2097<2094		6718<4802	2-WAY CP4 TO 18-WAY CP7	*Call
2097<2094		6718<4803	3-WAY CP4 TO 18-WAY CP7	*Call
2097<2094		6718<4804	4-WAY CP4 TO 18-WAY CP7	*Call
2097<2094		6718<4805	5-WAY CP4 TO 18-WAY CP7	*Call
2097<2094		6718<4806	6-WAY CP4 TO 18-WAY CP7	*Call
2097<2094		6718<4807	7-WAY CP4 TO 18-WAY CP7	*Call
2097<2094		6718<4808	8-WAY CP4 TO 18-WAY CP7	*Call
2097<2094		6719<4500	0-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4501	1-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4502	2-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4503	3-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4504	4-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4505	5-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4506	6-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4507	7-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4508	8-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4509	9-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4510	10-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4511	11-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4512	12-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4513	13-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4514	14-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4515	15-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4516	16-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4517	17-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4518	18-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4519	19-WAY CP7 TO 19-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6719<4520	20-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4521	21-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4522	22-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4523	23-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4524	24-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4525	25-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4526	26-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4527	27-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4528	28-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4529	29-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4530	30-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4531	31-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4532	32-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4533	33-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4534	34-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4535	35-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4536	36-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4537	37-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4538	38-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4539	39-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4540	40-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4541	41-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4542	42-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4543	43-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4544	44-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4545	45-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4546	46-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4547	47-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4548	48-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4549	49-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4550	50-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4551	51-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4552	52-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4553	53-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4554	54-WAY CP7 TO 19-WAY CP7	*Call
2097<2094		6719<4601	1-WAY CP6 TO 19-WAY CP7	*Call
2097<2094		6719<4602	2-WAY CP6 TO 19-WAY CP7	*Call
2097<2094		6719<4603	3-WAY CP6 TO 19-WAY CP7	*Call
2097<2094		6719<4604	4-WAY CP6 TO 19-WAY CP7	*Call
2097<2094		6719<4605	5-WAY CP6 TO 19-WAY CP7	*Call
2097<2094		6719<4606	6-WAY CP6 TO 19-WAY CP7	*Call
2097<2094		6719<4607	7-WAY CP6 TO 19-WAY CP7	*Call
2097<2094		6719<4608	8-WAY CP6 TO 19-WAY CP7	*Call
2097<2094		6719<4701	1-WAY CP5 TO 19-WAY CP7	*Call
2097<2094		6719<4702	2-WAY CP5 TO 19-WAY CP7	*Call
2097<2094		6719<4703	3-WAY CP5 TO 19-WAY CP7	*Call
2097<2094		6719<4704	4-WAY CP5 TO 19-WAY CP7	*Call
2097<2094		6719<4705	5-WAY CP5 TO 19-WAY CP7	*Call
2097<2094		6719<4706	6-WAY CP5 TO 19-WAY CP7	*Call
2097<2094		6719<4707	7-WAY CP5 TO 19-WAY CP7	*Call
2097<2094		6719<4708	8-WAY CP5 TO 19-WAY CP7	*Call
2097<2094		6719<4801	1-WAY CP4 TO 19-WAY CP7	*Call
2097<2094		6719<4802	2-WAY CP4 TO 19-WAY CP7	*Call
2097<2094		6719<4803	3-WAY CP4 TO 19-WAY CP7	*Call
2097<2094		6719<4804	4-WAY CP4 TO 19-WAY CP7	*Call
2097<2094		6719<4805	5-WAY CP4 TO 19-WAY CP7	*Call
2097<2094		6719<4806	6-WAY CP4 TO 19-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6719<4807	7-WAY CP4 TO 19-WAY CP7	*Call
2097<2094		6719<4808	8-WAY CP4 TO 19-WAY CP7	*Call
2097<2094		6720<4500	0-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4501	1-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4502	2-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4503	3-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4504	4-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4505	5-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4506	6-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4507	7-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4508	8-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4509	9-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4510	10-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4511	11-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4512	12-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4513	13-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4514	14-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4515	15-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4516	16-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4517	17-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4518	18-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4519	19-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4520	20-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4521	21-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4522	22-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4523	23-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4524	24-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4525	25-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4526	26-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4527	27-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4528	28-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4529	29-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4530	30-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4531	31-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4532	32-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4533	33-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4534	34-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4535	35-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4536	36-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4537	37-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4538	38-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4539	39-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4540	40-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4541	41-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4542	42-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4543	43-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4544	44-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4545	45-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4546	46-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4547	47-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4548	48-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4549	49-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4550	50-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4551	51-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4552	52-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4553	53-WAY CP7 TO 20-WAY CP7	*Call
2097<2094		6720<4554	54-WAY CP7 TO 20-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6720<4601	1-WAY CP6 TO 20-WAY CP7	*Call
2097<2094		6720<4602	2-WAY CP6 TO 20-WAY CP7	*Call
2097<2094		6720<4603	3-WAY CP6 TO 20-WAY CP7	*Call
2097<2094		6720<4604	4-WAY CP6 TO 20-WAY CP7	*Call
2097<2094		6720<4605	5-WAY CP6 TO 20-WAY CP7	*Call
2097<2094		6720<4606	6-WAY CP6 TO 20-WAY CP7	*Call
2097<2094		6720<4607	7-WAY CP6 TO 20-WAY CP7	*Call
2097<2094		6720<4608	8-WAY CP6 TO 20-WAY CP7	*Call
2097<2094		6720<4701	1-WAY CP5 TO 20-WAY CP7	*Call
2097<2094		6720<4702	2-WAY CP5 TO 20-WAY CP7	*Call
2097<2094		6720<4703	3-WAY CP5 TO 20-WAY CP7	*Call
2097<2094		6720<4704	4-WAY CP5 TO 20-WAY CP7	*Call
2097<2094		6720<4705	5-WAY CP5 TO 20-WAY CP7	*Call
2097<2094		6720<4706	6-WAY CP5 TO 20-WAY CP7	*Call
2097<2094		6720<4707	7-WAY CP5 TO 20-WAY CP7	*Call
2097<2094		6720<4708	8-WAY CP5 TO 20-WAY CP7	*Call
2097<2094		6720<4801	1-WAY CP4 TO 20-WAY CP7	*Call
2097<2094		6720<4802	2-WAY CP4 TO 20-WAY CP7	*Call
2097<2094		6720<4803	3-WAY CP4 TO 20-WAY CP7	*Call
2097<2094		6720<4804	4-WAY CP4 TO 20-WAY CP7	*Call
2097<2094		6720<4805	5-WAY CP4 TO 20-WAY CP7	*Call
2097<2094		6720<4806	6-WAY CP4 TO 20-WAY CP7	*Call
2097<2094		6720<4807	7-WAY CP4 TO 20-WAY CP7	*Call
2097<2094		6720<4808	8-WAY CP4 TO 20-WAY CP7	*Call
2097<2094		6721<4500	0-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4501	1-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4502	2-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4503	3-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4504	4-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4505	5-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4506	6-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4507	7-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4508	8-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4509	9-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4510	10-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4511	11-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4512	12-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4513	13-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4514	14-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4515	15-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4516	16-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4517	17-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4518	18-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4519	19-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4520	20-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4521	21-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4522	22-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4523	23-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4524	24-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4525	25-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4526	26-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4527	27-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4528	28-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4529	29-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4530	30-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4531	31-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4532	32-WAY CP7 TO 21-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6721<4533	33-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4534	34-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4535	35-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4536	36-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4537	37-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4538	38-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4539	39-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4540	40-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4541	41-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4542	42-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4543	43-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4544	44-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4545	45-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4546	46-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4547	47-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4548	48-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4549	49-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4550	50-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4551	51-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4552	52-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4553	53-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4554	54-WAY CP7 TO 21-WAY CP7	*Call
2097<2094		6721<4601	1-WAY CP6 TO 21-WAY CP7	*Call
2097<2094		6721<4602	2-WAY CP6 TO 21-WAY CP7	*Call
2097<2094		6721<4603	3-WAY CP6 TO 21-WAY CP7	*Call
2097<2094		6721<4604	4-WAY CP6 TO 21-WAY CP7	*Call
2097<2094		6721<4605	5-WAY CP6 TO 21-WAY CP7	*Call
2097<2094		6721<4606	6-WAY CP6 TO 21-WAY CP7	*Call
2097<2094		6721<4607	7-WAY CP6 TO 21-WAY CP7	*Call
2097<2094		6721<4608	8-WAY CP6 TO 21-WAY CP7	*Call
2097<2094		6721<4701	1-WAY CP5 TO 21-WAY CP7	*Call
2097<2094		6721<4702	2-WAY CP5 TO 21-WAY CP7	*Call
2097<2094		6721<4703	3-WAY CP5 TO 21-WAY CP7	*Call
2097<2094		6721<4704	4-WAY CP5 TO 21-WAY CP7	*Call
2097<2094		6721<4705	5-WAY CP5 TO 21-WAY CP7	*Call
2097<2094		6721<4706	6-WAY CP5 TO 21-WAY CP7	*Call
2097<2094		6721<4707	7-WAY CP5 TO 21-WAY CP7	*Call
2097<2094		6721<4708	8-WAY CP5 TO 21-WAY CP7	*Call
2097<2094		6721<4801	1-WAY CP4 TO 21-WAY CP7	*Call
2097<2094		6721<4802	2-WAY CP4 TO 21-WAY CP7	*Call
2097<2094		6721<4803	3-WAY CP4 TO 21-WAY CP7	*Call
2097<2094		6721<4804	4-WAY CP4 TO 21-WAY CP7	*Call
2097<2094		6721<4805	5-WAY CP4 TO 21-WAY CP7	*Call
2097<2094		6721<4806	6-WAY CP4 TO 21-WAY CP7	*Call
2097<2094		6721<4807	7-WAY CP4 TO 21-WAY CP7	*Call
2097<2094		6721<4808	8-WAY CP4 TO 21-WAY CP7	*Call
2097<2094		6722<4500	0-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4501	1-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4502	2-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4503	3-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4504	4-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4505	5-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4506	6-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4507	7-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4508	8-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4509	9-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4510	10-WAY CP7 TO 22-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6722<4511	11-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4512	12-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4513	13-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4514	14-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4515	15-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4516	16-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4517	17-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4518	18-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4519	19-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4520	20-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4521	21-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4522	22-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4523	23-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4524	24-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4525	25-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4526	26-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4527	27-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4528	28-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4529	29-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4530	30-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4531	31-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4532	32-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4533	33-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4534	34-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4535	35-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4536	36-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4537	37-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4538	38-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4539	39-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4540	40-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4541	41-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4542	42-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4543	43-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4544	44-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4545	45-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4546	46-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4547	47-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4548	48-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4549	49-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4550	50-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4551	51-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4552	52-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4553	53-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4554	54-WAY CP7 TO 22-WAY CP7	*Call
2097<2094		6722<4601	1-WAY CP6 TO 22-WAY CP7	*Call
2097<2094		6722<4602	2-WAY CP6 TO 22-WAY CP7	*Call
2097<2094		6722<4603	3-WAY CP6 TO 22-WAY CP7	*Call
2097<2094		6722<4604	4-WAY CP6 TO 22-WAY CP7	*Call
2097<2094		6722<4605	5-WAY CP6 TO 22-WAY CP7	*Call
2097<2094		6722<4606	6-WAY CP6 TO 22-WAY CP7	*Call
2097<2094		6722<4607	7-WAY CP6 TO 22-WAY CP7	*Call
2097<2094		6722<4608	8-WAY CP6 TO 22-WAY CP7	*Call
2097<2094		6722<4701	1-WAY CP5 TO 22-WAY CP7	*Call
2097<2094		6722<4702	2-WAY CP5 TO 22-WAY CP7	*Call
2097<2094		6722<4703	3-WAY CP5 TO 22-WAY CP7	*Call
2097<2094		6722<4704	4-WAY CP5 TO 22-WAY CP7	*Call
2097<2094		6722<4705	5-WAY CP5 TO 22-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6722<4706	6-WAY CP5 TO 22-WAY CP7	*Call
2097<2094		6722<4707	7-WAY CP5 TO 22-WAY CP7	*Call
2097<2094		6722<4708	8-WAY CP5 TO 22-WAY CP7	*Call
2097<2094		6722<4801	1-WAY CP4 TO 22-WAY CP7	*Call
2097<2094		6722<4802	2-WAY CP4 TO 22-WAY CP7	*Call
2097<2094		6722<4803	3-WAY CP4 TO 22-WAY CP7	*Call
2097<2094		6722<4804	4-WAY CP4 TO 22-WAY CP7	*Call
2097<2094		6722<4805	5-WAY CP4 TO 22-WAY CP7	*Call
2097<2094		6722<4806	6-WAY CP4 TO 22-WAY CP7	*Call
2097<2094		6722<4807	7-WAY CP4 TO 22-WAY CP7	*Call
2097<2094		6722<4808	8-WAY CP4 TO 22-WAY CP7	*Call
2097<2094		6723<4500	0-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4501	1-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4502	2-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4503	3-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4504	4-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4505	5-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4506	6-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4507	7-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4508	8-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4509	9-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4510	10-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4511	11-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4512	12-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4513	13-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4514	14-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4515	15-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4516	16-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4517	17-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4518	18-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4519	19-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4520	20-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4521	21-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4522	22-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4523	23-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4524	24-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4525	25-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4526	26-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4527	27-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4528	28-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4529	29-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4530	30-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4531	31-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4532	32-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4533	33-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4534	34-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4535	35-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4536	36-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4537	37-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4538	38-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4539	39-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4540	40-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4541	41-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4542	42-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4543	43-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4544	44-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4545	45-WAY CP7 TO 23-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6723<4546	46-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4547	47-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4548	48-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4549	49-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4550	50-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4551	51-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4552	52-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4553	53-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4554	54-WAY CP7 TO 23-WAY CP7	*Call
2097<2094		6723<4601	1-WAY CP6 TO 23-WAY CP7	*Call
2097<2094		6723<4602	2-WAY CP6 TO 23-WAY CP7	*Call
2097<2094		6723<4603	3-WAY CP6 TO 23-WAY CP7	*Call
2097<2094		6723<4604	4-WAY CP6 TO 23-WAY CP7	*Call
2097<2094		6723<4605	5-WAY CP6 TO 23-WAY CP7	*Call
2097<2094		6723<4606	6-WAY CP6 TO 23-WAY CP7	*Call
2097<2094		6723<4607	7-WAY CP6 TO 23-WAY CP7	*Call
2097<2094		6723<4608	8-WAY CP6 TO 23-WAY CP7	*Call
2097<2094		6723<4701	1-WAY CP5 TO 23-WAY CP7	*Call
2097<2094		6723<4702	2-WAY CP5 TO 23-WAY CP7	*Call
2097<2094		6723<4703	3-WAY CP5 TO 23-WAY CP7	*Call
2097<2094		6723<4704	4-WAY CP5 TO 23-WAY CP7	*Call
2097<2094		6723<4705	5-WAY CP5 TO 23-WAY CP7	*Call
2097<2094		6723<4706	6-WAY CP5 TO 23-WAY CP7	*Call
2097<2094		6723<4707	7-WAY CP5 TO 23-WAY CP7	*Call
2097<2094		6723<4708	8-WAY CP5 TO 23-WAY CP7	*Call
2097<2094		6723<4801	1-WAY CP4 TO 23-WAY CP7	*Call
2097<2094		6723<4802	2-WAY CP4 TO 23-WAY CP7	*Call
2097<2094		6723<4803	3-WAY CP4 TO 23-WAY CP7	*Call
2097<2094		6723<4804	4-WAY CP4 TO 23-WAY CP7	*Call
2097<2094		6723<4805	5-WAY CP4 TO 23-WAY CP7	*Call
2097<2094		6723<4806	6-WAY CP4 TO 23-WAY CP7	*Call
2097<2094		6723<4807	7-WAY CP4 TO 23-WAY CP7	*Call
2097<2094		6723<4808	8-WAY CP4 TO 23-WAY CP7	*Call
2097<2094		6724<4500	0-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4501	1-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4502	2-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4503	3-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4504	4-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4505	5-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4506	6-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4507	7-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4508	8-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4509	9-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4510	10-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4511	11-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4512	12-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4513	13-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4514	14-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4515	15-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4516	16-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4517	17-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4518	18-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4519	19-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4520	20-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4521	21-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4522	22-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4523	23-WAY CP7 TO 24-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6724<4524	24-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4525	25-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4526	26-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4527	27-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4528	28-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4529	29-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4530	30-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4531	31-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4532	32-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4533	33-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4534	34-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4535	35-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4536	36-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4537	37-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4538	38-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4539	39-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4540	40-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4541	41-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4542	42-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4543	43-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4544	44-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4545	45-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4546	46-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4547	47-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4548	48-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4549	49-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4550	50-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4551	51-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4552	52-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4553	53-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4554	54-WAY CP7 TO 24-WAY CP7	*Call
2097<2094		6724<4601	1-WAY CP6 TO 24-WAY CP7	*Call
2097<2094		6724<4602	2-WAY CP6 TO 24-WAY CP7	*Call
2097<2094		6724<4603	3-WAY CP6 TO 24-WAY CP7	*Call
2097<2094		6724<4604	4-WAY CP6 TO 24-WAY CP7	*Call
2097<2094		6724<4605	5-WAY CP6 TO 24-WAY CP7	*Call
2097<2094		6724<4606	6-WAY CP6 TO 24-WAY CP7	*Call
2097<2094		6724<4607	7-WAY CP6 TO 24-WAY CP7	*Call
2097<2094		6724<4608	8-WAY CP6 TO 24-WAY CP7	*Call
2097<2094		6724<4701	1-WAY CP5 TO 24-WAY CP7	*Call
2097<2094		6724<4702	2-WAY CP5 TO 24-WAY CP7	*Call
2097<2094		6724<4703	3-WAY CP5 TO 24-WAY CP7	*Call
2097<2094		6724<4704	4-WAY CP5 TO 24-WAY CP7	*Call
2097<2094		6724<4705	5-WAY CP5 TO 24-WAY CP7	*Call
2097<2094		6724<4706	6-WAY CP5 TO 24-WAY CP7	*Call
2097<2094		6724<4707	7-WAY CP5 TO 24-WAY CP7	*Call
2097<2094		6724<4708	8-WAY CP5 TO 24-WAY CP7	*Call
2097<2094		6724<4801	1-WAY CP4 TO 24-WAY CP7	*Call
2097<2094		6724<4802	2-WAY CP4 TO 24-WAY CP7	*Call
2097<2094		6724<4803	3-WAY CP4 TO 24-WAY CP7	*Call
2097<2094		6724<4804	4-WAY CP4 TO 24-WAY CP7	*Call
2097<2094		6724<4805	5-WAY CP4 TO 24-WAY CP7	*Call
2097<2094		6724<4806	6-WAY CP4 TO 24-WAY CP7	*Call
2097<2094		6724<4807	7-WAY CP4 TO 24-WAY CP7	*Call
2097<2094		6724<4808	8-WAY CP4 TO 24-WAY CP7	*Call
2097<2094		6725<4500	0-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4501	1-WAY CP7 TO 25-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6725<4502	2-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4503	3-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4504	4-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4505	5-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4506	6-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4507	7-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4508	8-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4509	9-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4510	10-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4511	11-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4512	12-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4513	13-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4514	14-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4515	15-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4516	16-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4517	17-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4518	18-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4519	19-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4520	20-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4521	21-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4522	22-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4523	23-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4524	24-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4525	25-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4526	26-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4527	27-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4528	28-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4529	29-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4530	30-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4531	31-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4532	32-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4533	33-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4534	34-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4535	35-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4536	36-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4537	37-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4538	38-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4539	39-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4540	40-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4541	41-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4542	42-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4543	43-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4544	44-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4545	45-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4546	46-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4547	47-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4548	48-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4549	49-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4550	50-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4551	51-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4552	52-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4553	53-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4554	54-WAY CP7 TO 25-WAY CP7	*Call
2097<2094		6725<4601	1-WAY CP6 TO 25-WAY CP7	*Call
2097<2094		6725<4602	2-WAY CP6 TO 25-WAY CP7	*Call
2097<2094		6725<4603	3-WAY CP6 TO 25-WAY CP7	*Call
2097<2094		6725<4604	4-WAY CP6 TO 25-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6725<4605	5-WAY CP6 TO 25-WAY CP7	*Call
2097<2094		6725<4606	6-WAY CP6 TO 25-WAY CP7	*Call
2097<2094		6725<4607	7-WAY CP6 TO 25-WAY CP7	*Call
2097<2094		6725<4608	8-WAY CP6 TO 25-WAY CP7	*Call
2097<2094		6725<4701	1-WAY CP5 TO 25-WAY CP7	*Call
2097<2094		6725<4702	2-WAY CP5 TO 25-WAY CP7	*Call
2097<2094		6725<4703	3-WAY CP5 TO 25-WAY CP7	*Call
2097<2094		6725<4704	4-WAY CP5 TO 25-WAY CP7	*Call
2097<2094		6725<4705	5-WAY CP5 TO 25-WAY CP7	*Call
2097<2094		6725<4706	6-WAY CP5 TO 25-WAY CP7	*Call
2097<2094		6725<4707	7-WAY CP5 TO 25-WAY CP7	*Call
2097<2094		6725<4708	8-WAY CP5 TO 25-WAY CP7	*Call
2097<2094		6725<4801	1-WAY CP4 TO 25-WAY CP7	*Call
2097<2094		6725<4802	2-WAY CP4 TO 25-WAY CP7	*Call
2097<2094		6725<4803	3-WAY CP4 TO 25-WAY CP7	*Call
2097<2094		6725<4804	4-WAY CP4 TO 25-WAY CP7	*Call
2097<2094		6725<4805	5-WAY CP4 TO 25-WAY CP7	*Call
2097<2094		6725<4806	6-WAY CP4 TO 25-WAY CP7	*Call
2097<2094		6725<4807	7-WAY CP4 TO 25-WAY CP7	*Call
2097<2094		6725<4808	8-WAY CP4 TO 25-WAY CP7	*Call
2097<2094		6726<4500	0-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4501	1-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4502	2-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4503	3-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4504	4-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4505	5-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4506	6-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4507	7-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4508	8-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4509	9-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4510	10-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4511	11-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4512	12-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4513	13-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4514	14-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4515	15-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4516	16-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4517	17-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4518	18-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4519	19-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4520	20-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4521	21-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4522	22-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4523	23-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4524	24-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4525	25-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4526	26-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4527	27-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4528	28-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4529	29-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4530	30-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4531	31-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4532	32-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4533	33-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4534	34-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4535	35-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4536	36-WAY CP7 TO 26-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6726<4537	37-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4538	38-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4539	39-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4540	40-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4541	41-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4542	42-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4543	43-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4544	44-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4545	45-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4546	46-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4547	47-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4548	48-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4549	49-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4550	50-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4551	51-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4552	52-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4553	53-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4554	54-WAY CP7 TO 26-WAY CP7	*Call
2097<2094		6726<4601	1-WAY CP6 TO 26-WAY CP7	*Call
2097<2094		6726<4602	2-WAY CP6 TO 26-WAY CP7	*Call
2097<2094		6726<4603	3-WAY CP6 TO 26-WAY CP7	*Call
2097<2094		6726<4604	4-WAY CP6 TO 26-WAY CP7	*Call
2097<2094		6726<4605	5-WAY CP6 TO 26-WAY CP7	*Call
2097<2094		6726<4606	6-WAY CP6 TO 26-WAY CP7	*Call
2097<2094		6726<4607	7-WAY CP6 TO 26-WAY CP7	*Call
2097<2094		6726<4608	8-WAY CP6 TO 26-WAY CP7	*Call
2097<2094		6726<4701	1-WAY CP5 TO 26-WAY CP7	*Call
2097<2094		6726<4702	2-WAY CP5 TO 26-WAY CP7	*Call
2097<2094		6726<4703	3-WAY CP5 TO 26-WAY CP7	*Call
2097<2094		6726<4704	4-WAY CP5 TO 26-WAY CP7	*Call
2097<2094		6726<4705	5-WAY CP5 TO 26-WAY CP7	*Call
2097<2094		6726<4706	6-WAY CP5 TO 26-WAY CP7	*Call
2097<2094		6726<4707	7-WAY CP5 TO 26-WAY CP7	*Call
2097<2094		6726<4708	8-WAY CP5 TO 26-WAY CP7	*Call
2097<2094		6726<4801	1-WAY CP4 TO 26-WAY CP7	*Call
2097<2094		6726<4802	2-WAY CP4 TO 26-WAY CP7	*Call
2097<2094		6726<4803	3-WAY CP4 TO 26-WAY CP7	*Call
2097<2094		6726<4804	4-WAY CP4 TO 26-WAY CP7	*Call
2097<2094		6726<4805	5-WAY CP4 TO 26-WAY CP7	*Call
2097<2094		6726<4806	6-WAY CP4 TO 26-WAY CP7	*Call
2097<2094		6726<4807	7-WAY CP4 TO 26-WAY CP7	*Call
2097<2094		6726<4808	8-WAY CP4 TO 26-WAY CP7	*Call
2097<2094		6727<4500	0-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4501	1-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4502	2-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4503	3-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4504	4-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4505	5-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4506	6-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4507	7-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4508	8-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4509	9-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4510	10-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4511	11-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4512	12-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4513	13-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4514	14-WAY CP7 TO 27-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6727<4515	15-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4516	16-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4517	17-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4518	18-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4519	19-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4520	20-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4521	21-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4522	22-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4523	23-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4524	24-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4525	25-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4526	26-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4527	27-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4528	28-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4529	29-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4530	30-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4531	31-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4532	32-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4533	33-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4534	34-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4535	35-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4536	36-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4537	37-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4538	38-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4539	39-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4540	40-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4541	41-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4542	42-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4543	43-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4544	44-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4545	45-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4546	46-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4547	47-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4548	48-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4549	49-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4550	50-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4551	51-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4552	52-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4553	53-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4554	54-WAY CP7 TO 27-WAY CP7	*Call
2097<2094		6727<4601	1-WAY CP6 TO 27-WAY CP7	*Call
2097<2094		6727<4602	2-WAY CP6 TO 27-WAY CP7	*Call
2097<2094		6727<4603	3-WAY CP6 TO 27-WAY CP7	*Call
2097<2094		6727<4604	4-WAY CP6 TO 27-WAY CP7	*Call
2097<2094		6727<4605	5-WAY CP6 TO 27-WAY CP7	*Call
2097<2094		6727<4606	6-WAY CP6 TO 27-WAY CP7	*Call
2097<2094		6727<4607	7-WAY CP6 TO 27-WAY CP7	*Call
2097<2094		6727<4608	8-WAY CP6 TO 27-WAY CP7	*Call
2097<2094		6727<4701	1-WAY CP5 TO 27-WAY CP7	*Call
2097<2094		6727<4702	2-WAY CP5 TO 27-WAY CP7	*Call
2097<2094		6727<4703	3-WAY CP5 TO 27-WAY CP7	*Call
2097<2094		6727<4704	4-WAY CP5 TO 27-WAY CP7	*Call
2097<2094		6727<4705	5-WAY CP5 TO 27-WAY CP7	*Call
2097<2094		6727<4706	6-WAY CP5 TO 27-WAY CP7	*Call
2097<2094		6727<4707	7-WAY CP5 TO 27-WAY CP7	*Call
2097<2094		6727<4708	8-WAY CP5 TO 27-WAY CP7	*Call
2097<2094		6727<4801	1-WAY CP4 TO 27-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6727<4802	2-WAY CP4 TO 27-WAY CP7	*Call
2097<2094		6727<4803	3-WAY CP4 TO 27-WAY CP7	*Call
2097<2094		6727<4804	4-WAY CP4 TO 27-WAY CP7	*Call
2097<2094		6727<4805	5-WAY CP4 TO 27-WAY CP7	*Call
2097<2094		6727<4806	6-WAY CP4 TO 27-WAY CP7	*Call
2097<2094		6727<4807	7-WAY CP4 TO 27-WAY CP7	*Call
2097<2094		6727<4808	8-WAY CP4 TO 27-WAY CP7	*Call
2097<2094		6728<4500	0-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4501	1-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4502	2-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4503	3-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4504	4-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4505	5-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4506	6-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4507	7-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4508	8-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4509	9-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4510	10-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4511	11-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4512	12-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4513	13-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4514	14-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4515	15-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4516	16-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4517	17-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4518	18-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4519	19-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4520	20-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4521	21-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4522	22-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4523	23-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4524	24-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4525	25-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4526	26-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4527	27-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4528	28-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4529	29-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4530	30-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4531	31-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4532	32-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4533	33-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4534	34-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4535	35-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4536	36-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4537	37-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4538	38-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4539	39-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4540	40-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4541	41-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4542	42-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4543	43-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4544	44-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4545	45-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4546	46-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4547	47-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4548	48-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4549	49-WAY CP7 TO 28-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6728<4550	50-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4551	51-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4552	52-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4553	53-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4554	54-WAY CP7 TO 28-WAY CP7	*Call
2097<2094		6728<4601	1-WAY CP6 TO 28-WAY CP7	*Call
2097<2094		6728<4602	2-WAY CP6 TO 28-WAY CP7	*Call
2097<2094		6728<4603	3-WAY CP6 TO 28-WAY CP7	*Call
2097<2094		6728<4604	4-WAY CP6 TO 28-WAY CP7	*Call
2097<2094		6728<4605	5-WAY CP6 TO 28-WAY CP7	*Call
2097<2094		6728<4606	6-WAY CP6 TO 28-WAY CP7	*Call
2097<2094		6728<4607	7-WAY CP6 TO 28-WAY CP7	*Call
2097<2094		6728<4608	8-WAY CP6 TO 28-WAY CP7	*Call
2097<2094		6728<4701	1-WAY CP5 TO 28-WAY CP7	*Call
2097<2094		6728<4702	2-WAY CP5 TO 28-WAY CP7	*Call
2097<2094		6728<4703	3-WAY CP5 TO 28-WAY CP7	*Call
2097<2094		6728<4704	4-WAY CP5 TO 28-WAY CP7	*Call
2097<2094		6728<4705	5-WAY CP5 TO 28-WAY CP7	*Call
2097<2094		6728<4706	6-WAY CP5 TO 28-WAY CP7	*Call
2097<2094		6728<4707	7-WAY CP5 TO 28-WAY CP7	*Call
2097<2094		6728<4708	8-WAY CP5 TO 28-WAY CP7	*Call
2097<2094		6728<4801	1-WAY CP4 TO 28-WAY CP7	*Call
2097<2094		6728<4802	2-WAY CP4 TO 28-WAY CP7	*Call
2097<2094		6728<4803	3-WAY CP4 TO 28-WAY CP7	*Call
2097<2094		6728<4804	4-WAY CP4 TO 28-WAY CP7	*Call
2097<2094		6728<4805	5-WAY CP4 TO 28-WAY CP7	*Call
2097<2094		6728<4806	6-WAY CP4 TO 28-WAY CP7	*Call
2097<2094		6728<4807	7-WAY CP4 TO 28-WAY CP7	*Call
2097<2094		6728<4808	8-WAY CP4 TO 28-WAY CP7	*Call
2097<2094		6729<4500	0-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4501	1-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4502	2-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4503	3-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4504	4-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4505	5-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4506	6-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4507	7-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4508	8-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4509	9-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4510	10-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4511	11-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4512	12-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4513	13-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4514	14-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4515	15-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4516	16-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4517	17-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4518	18-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4519	19-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4520	20-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4521	21-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4522	22-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4523	23-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4524	24-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4525	25-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4526	26-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4527	27-WAY CP7 TO 29-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6729<4528	28-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4529	29-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4530	30-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4531	31-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4532	32-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4533	33-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4534	34-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4535	35-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4536	36-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4537	37-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4538	38-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4539	39-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4540	40-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4541	41-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4542	42-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4543	43-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4544	44-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4545	45-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4546	46-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4547	47-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4548	48-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4549	49-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4550	50-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4551	51-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4552	52-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4553	53-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4554	54-WAY CP7 TO 29-WAY CP7	*Call
2097<2094		6729<4601	1-WAY CP6 TO 29-WAY CP7	*Call
2097<2094		6729<4602	2-WAY CP6 TO 29-WAY CP7	*Call
2097<2094		6729<4603	3-WAY CP6 TO 29-WAY CP7	*Call
2097<2094		6729<4604	4-WAY CP6 TO 29-WAY CP7	*Call
2097<2094		6729<4605	5-WAY CP6 TO 29-WAY CP7	*Call
2097<2094		6729<4606	6-WAY CP6 TO 29-WAY CP7	*Call
2097<2094		6729<4607	7-WAY CP6 TO 29-WAY CP7	*Call
2097<2094		6729<4608	8-WAY CP6 TO 29-WAY CP7	*Call
2097<2094		6729<4701	1-WAY CP5 TO 29-WAY CP7	*Call
2097<2094		6729<4702	2-WAY CP5 TO 29-WAY CP7	*Call
2097<2094		6729<4703	3-WAY CP5 TO 29-WAY CP7	*Call
2097<2094		6729<4704	4-WAY CP5 TO 29-WAY CP7	*Call
2097<2094		6729<4705	5-WAY CP5 TO 29-WAY CP7	*Call
2097<2094		6729<4706	6-WAY CP5 TO 29-WAY CP7	*Call
2097<2094		6729<4707	7-WAY CP5 TO 29-WAY CP7	*Call
2097<2094		6729<4708	8-WAY CP5 TO 29-WAY CP7	*Call
2097<2094		6729<4801	1-WAY CP4 TO 29-WAY CP7	*Call
2097<2094		6729<4802	2-WAY CP4 TO 29-WAY CP7	*Call
2097<2094		6729<4803	3-WAY CP4 TO 29-WAY CP7	*Call
2097<2094		6729<4804	4-WAY CP4 TO 29-WAY CP7	*Call
2097<2094		6729<4805	5-WAY CP4 TO 29-WAY CP7	*Call
2097<2094		6729<4806	6-WAY CP4 TO 29-WAY CP7	*Call
2097<2094		6729<4807	7-WAY CP4 TO 29-WAY CP7	*Call
2097<2094		6729<4808	8-WAY CP4 TO 29-WAY CP7	*Call
2097<2094		6730<4500	0-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4501	1-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4502	2-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4503	3-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4504	4-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4505	5-WAY CP7 TO 30-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6730<4506	6-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4507	7-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4508	8-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4509	9-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4510	10-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4511	11-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4512	12-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4513	13-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4514	14-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4515	15-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4516	16-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4517	17-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4518	18-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4519	19-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4520	20-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4521	21-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4522	22-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4523	23-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4524	24-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4525	25-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4526	26-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4527	27-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4528	28-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4529	29-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4530	30-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4531	31-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4532	32-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4533	33-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4534	34-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4535	35-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4536	36-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4537	37-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4538	38-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4539	39-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4540	40-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4541	41-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4542	42-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4543	43-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4544	44-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4545	45-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4546	46-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4547	47-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4548	48-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4549	49-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4550	50-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4551	51-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4552	52-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4553	53-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4554	54-WAY CP7 TO 30-WAY CP7	*Call
2097<2094		6730<4601	1-WAY CP6 TO 30-WAY CP7	*Call
2097<2094		6730<4602	2-WAY CP6 TO 30-WAY CP7	*Call
2097<2094		6730<4603	3-WAY CP6 TO 30-WAY CP7	*Call
2097<2094		6730<4604	4-WAY CP6 TO 30-WAY CP7	*Call
2097<2094		6730<4605	5-WAY CP6 TO 30-WAY CP7	*Call
2097<2094		6730<4606	6-WAY CP6 TO 30-WAY CP7	*Call
2097<2094		6730<4607	7-WAY CP6 TO 30-WAY CP7	*Call
2097<2094		6730<4608	8-WAY CP6 TO 30-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6730<4701	1-WAY CP5 TO 30-WAY CP7	*Call
2097<2094		6730<4702	2-WAY CP5 TO 30-WAY CP7	*Call
2097<2094		6730<4703	3-WAY CP5 TO 30-WAY CP7	*Call
2097<2094		6730<4704	4-WAY CP5 TO 30-WAY CP7	*Call
2097<2094		6730<4705	5-WAY CP5 TO 30-WAY CP7	*Call
2097<2094		6730<4706	6-WAY CP5 TO 30-WAY CP7	*Call
2097<2094		6730<4707	7-WAY CP5 TO 30-WAY CP7	*Call
2097<2094		6730<4708	8-WAY CP5 TO 30-WAY CP7	*Call
2097<2094		6730<4801	1-WAY CP4 TO 30-WAY CP7	*Call
2097<2094		6730<4802	2-WAY CP4 TO 30-WAY CP7	*Call
2097<2094		6730<4803	3-WAY CP4 TO 30-WAY CP7	*Call
2097<2094		6730<4804	4-WAY CP4 TO 30-WAY CP7	*Call
2097<2094		6730<4805	5-WAY CP4 TO 30-WAY CP7	*Call
2097<2094		6730<4806	6-WAY CP4 TO 30-WAY CP7	*Call
2097<2094		6730<4807	7-WAY CP4 TO 30-WAY CP7	*Call
2097<2094		6730<4808	8-WAY CP4 TO 30-WAY CP7	*Call
2097<2094		6731<4500	0-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4501	1-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4502	2-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4503	3-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4504	4-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4505	5-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4506	6-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4507	7-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4508	8-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4509	9-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4510	10-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4511	11-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4512	12-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4513	13-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4514	14-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4515	15-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4516	16-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4517	17-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4518	18-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4519	19-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4520	20-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4521	21-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4522	22-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4523	23-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4524	24-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4525	25-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4526	26-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4527	27-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4528	28-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4529	29-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4530	30-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4531	31-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4532	32-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4533	33-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4534	34-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4535	35-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4536	36-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4537	37-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4538	38-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4539	39-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4540	40-WAY CP7 TO 31-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6731<4541	41-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4542	42-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4543	43-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4544	44-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4545	45-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4546	46-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4547	47-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4548	48-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4549	49-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4550	50-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4551	51-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4552	52-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4553	53-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4554	54-WAY CP7 TO 31-WAY CP7	*Call
2097<2094		6731<4601	1-WAY CP6 TO 31-WAY CP7	*Call
2097<2094		6731<4602	2-WAY CP6 TO 31-WAY CP7	*Call
2097<2094		6731<4603	3-WAY CP6 TO 31-WAY CP7	*Call
2097<2094		6731<4604	4-WAY CP6 TO 31-WAY CP7	*Call
2097<2094		6731<4605	5-WAY CP6 TO 31-WAY CP7	*Call
2097<2094		6731<4606	6-WAY CP6 TO 31-WAY CP7	*Call
2097<2094		6731<4607	7-WAY CP6 TO 31-WAY CP7	*Call
2097<2094		6731<4608	8-WAY CP6 TO 31-WAY CP7	*Call
2097<2094		6731<4701	1-WAY CP5 TO 31-WAY CP7	*Call
2097<2094		6731<4702	2-WAY CP5 TO 31-WAY CP7	*Call
2097<2094		6731<4703	3-WAY CP5 TO 31-WAY CP7	*Call
2097<2094		6731<4704	4-WAY CP5 TO 31-WAY CP7	*Call
2097<2094		6731<4705	5-WAY CP5 TO 31-WAY CP7	*Call
2097<2094		6731<4706	6-WAY CP5 TO 31-WAY CP7	*Call
2097<2094		6731<4707	7-WAY CP5 TO 31-WAY CP7	*Call
2097<2094		6731<4708	8-WAY CP5 TO 31-WAY CP7	*Call
2097<2094		6731<4801	1-WAY CP4 TO 31-WAY CP7	*Call
2097<2094		6731<4802	2-WAY CP4 TO 31-WAY CP7	*Call
2097<2094		6731<4803	3-WAY CP4 TO 31-WAY CP7	*Call
2097<2094		6731<4804	4-WAY CP4 TO 31-WAY CP7	*Call
2097<2094		6731<4805	5-WAY CP4 TO 31-WAY CP7	*Call
2097<2094		6731<4806	6-WAY CP4 TO 31-WAY CP7	*Call
2097<2094		6731<4807	7-WAY CP4 TO 31-WAY CP7	*Call
2097<2094		6731<4808	8-WAY CP4 TO 31-WAY CP7	*Call
2097<2094		6732<4500	0-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4501	1-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4502	2-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4503	3-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4504	4-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4505	5-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4506	6-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4507	7-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4508	8-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4509	9-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4510	10-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4511	11-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4512	12-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4513	13-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4514	14-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4515	15-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4516	16-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4517	17-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4518	18-WAY CP7 TO 32-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6732<4519	19-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4520	20-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4521	21-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4522	22-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4523	23-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4524	24-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4525	25-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4526	26-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4527	27-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4528	28-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4529	29-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4530	30-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4531	31-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4532	32-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4533	33-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4534	34-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4535	35-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4536	36-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4537	37-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4538	38-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4539	39-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4540	40-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4541	41-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4542	42-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4543	43-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4544	44-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4545	45-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4546	46-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4547	47-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4548	48-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4549	49-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4550	50-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4551	51-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4552	52-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4553	53-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4554	54-WAY CP7 TO 32-WAY CP7	*Call
2097<2094		6732<4601	1-WAY CP6 TO 32-WAY CP7	*Call
2097<2094		6732<4602	2-WAY CP6 TO 32-WAY CP7	*Call
2097<2094		6732<4603	3-WAY CP6 TO 32-WAY CP7	*Call
2097<2094		6732<4604	4-WAY CP6 TO 32-WAY CP7	*Call
2097<2094		6732<4605	5-WAY CP6 TO 32-WAY CP7	*Call
2097<2094		6732<4606	6-WAY CP6 TO 32-WAY CP7	*Call
2097<2094		6732<4607	7-WAY CP6 TO 32-WAY CP7	*Call
2097<2094		6732<4608	8-WAY CP6 TO 32-WAY CP7	*Call
2097<2094		6732<4701	1-WAY CP5 TO 32-WAY CP7	*Call
2097<2094		6732<4702	2-WAY CP5 TO 32-WAY CP7	*Call
2097<2094		6732<4703	3-WAY CP5 TO 32-WAY CP7	*Call
2097<2094		6732<4704	4-WAY CP5 TO 32-WAY CP7	*Call
2097<2094		6732<4705	5-WAY CP5 TO 32-WAY CP7	*Call
2097<2094		6732<4706	6-WAY CP5 TO 32-WAY CP7	*Call
2097<2094		6732<4707	7-WAY CP5 TO 32-WAY CP7	*Call
2097<2094		6732<4708	8-WAY CP5 TO 32-WAY CP7	*Call
2097<2094		6732<4801	1-WAY CP4 TO 32-WAY CP7	*Call
2097<2094		6732<4802	2-WAY CP4 TO 32-WAY CP7	*Call
2097<2094		6732<4803	3-WAY CP4 TO 32-WAY CP7	*Call
2097<2094		6732<4804	4-WAY CP4 TO 32-WAY CP7	*Call
2097<2094		6732<4805	5-WAY CP4 TO 32-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6732<4806	6-WAY CP4 TO 32-WAY CP7	*Call
2097<2094		6732<4807	7-WAY CP4 TO 32-WAY CP7	*Call
2097<2094		6732<4808	8-WAY CP4 TO 32-WAY CP7	*Call
2097<2094		6733<4500	0-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4501	1-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4502	2-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4503	3-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4504	4-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4505	5-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4506	6-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4507	7-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4508	8-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4509	9-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4510	10-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4511	11-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4512	12-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4513	13-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4514	14-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4515	15-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4516	16-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4517	17-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4518	18-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4519	19-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4520	20-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4521	21-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4522	22-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4523	23-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4524	24-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4525	25-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4526	26-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4527	27-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4528	28-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4529	29-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4530	30-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4531	31-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4532	32-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4533	33-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4534	34-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4535	35-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4536	36-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4537	37-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4538	38-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4539	39-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4540	40-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4541	41-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4542	42-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4543	43-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4544	44-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4545	45-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4546	46-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4547	47-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4548	48-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4549	49-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4550	50-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4551	51-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4552	52-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4553	53-WAY CP7 TO 33-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6733<4554	54-WAY CP7 TO 33-WAY CP7	*Call
2097<2094		6733<4601	1-WAY CP6 TO 33-WAY CP7	*Call
2097<2094		6733<4602	2-WAY CP6 TO 33-WAY CP7	*Call
2097<2094		6733<4603	3-WAY CP6 TO 33-WAY CP7	*Call
2097<2094		6733<4604	4-WAY CP6 TO 33-WAY CP7	*Call
2097<2094		6733<4605	5-WAY CP6 TO 33-WAY CP7	*Call
2097<2094		6733<4606	6-WAY CP6 TO 33-WAY CP7	*Call
2097<2094		6733<4607	7-WAY CP6 TO 33-WAY CP7	*Call
2097<2094		6733<4608	8-WAY CP6 TO 33-WAY CP7	*Call
2097<2094		6733<4701	1-WAY CP5 TO 33-WAY CP7	*Call
2097<2094		6733<4702	2-WAY CP5 TO 33-WAY CP7	*Call
2097<2094		6733<4703	3-WAY CP5 TO 33-WAY CP7	*Call
2097<2094		6733<4704	4-WAY CP5 TO 33-WAY CP7	*Call
2097<2094		6733<4705	5-WAY CP5 TO 33-WAY CP7	*Call
2097<2094		6733<4706	6-WAY CP5 TO 33-WAY CP7	*Call
2097<2094		6733<4707	7-WAY CP5 TO 33-WAY CP7	*Call
2097<2094		6733<4708	8-WAY CP5 TO 33-WAY CP7	*Call
2097<2094		6733<4801	1-WAY CP4 TO 33-WAY CP7	*Call
2097<2094		6733<4802	2-WAY CP4 TO 33-WAY CP7	*Call
2097<2094		6733<4803	3-WAY CP4 TO 33-WAY CP7	*Call
2097<2094		6733<4804	4-WAY CP4 TO 33-WAY CP7	*Call
2097<2094		6733<4805	5-WAY CP4 TO 33-WAY CP7	*Call
2097<2094		6733<4806	6-WAY CP4 TO 33-WAY CP7	*Call
2097<2094		6733<4807	7-WAY CP4 TO 33-WAY CP7	*Call
2097<2094		6733<4808	8-WAY CP4 TO 33-WAY CP7	*Call
2097<2094		6734<4500	0-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4501	1-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4502	2-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4503	3-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4504	4-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4505	5-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4506	6-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4507	7-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4508	8-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4509	9-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4510	10-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4511	11-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4512	12-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4513	13-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4514	14-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4515	15-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4516	16-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4517	17-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4518	18-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4519	19-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4520	20-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4521	21-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4522	22-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4523	23-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4524	24-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4525	25-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4526	26-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4527	27-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4528	28-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4529	29-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4530	30-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4531	31-WAY CP7 TO 34-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6734<4532	32-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4533	33-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4534	34-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4535	35-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4536	36-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4537	37-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4538	38-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4539	39-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4540	40-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4541	41-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4542	42-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4543	43-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4544	44-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4545	45-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4546	46-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4547	47-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4548	48-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4549	49-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4550	50-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4551	51-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4552	52-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4553	53-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4554	54-WAY CP7 TO 34-WAY CP7	*Call
2097<2094		6734<4601	1-WAY CP6 TO 34-WAY CP7	*Call
2097<2094		6734<4602	2-WAY CP6 TO 34-WAY CP7	*Call
2097<2094		6734<4603	3-WAY CP6 TO 34-WAY CP7	*Call
2097<2094		6734<4604	4-WAY CP6 TO 34-WAY CP7	*Call
2097<2094		6734<4605	5-WAY CP6 TO 34-WAY CP7	*Call
2097<2094		6734<4606	6-WAY CP6 TO 34-WAY CP7	*Call
2097<2094		6734<4607	7-WAY CP6 TO 34-WAY CP7	*Call
2097<2094		6734<4608	8-WAY CP6 TO 34-WAY CP7	*Call
2097<2094		6734<4701	1-WAY CP5 TO 34-WAY CP7	*Call
2097<2094		6734<4702	2-WAY CP5 TO 34-WAY CP7	*Call
2097<2094		6734<4703	3-WAY CP5 TO 34-WAY CP7	*Call
2097<2094		6734<4704	4-WAY CP5 TO 34-WAY CP7	*Call
2097<2094		6734<4705	5-WAY CP5 TO 34-WAY CP7	*Call
2097<2094		6734<4706	6-WAY CP5 TO 34-WAY CP7	*Call
2097<2094		6734<4707	7-WAY CP5 TO 34-WAY CP7	*Call
2097<2094		6734<4708	8-WAY CP5 TO 34-WAY CP7	*Call
2097<2094		6734<4801	1-WAY CP4 TO 34-WAY CP7	*Call
2097<2094		6734<4802	2-WAY CP4 TO 34-WAY CP7	*Call
2097<2094		6734<4803	3-WAY CP4 TO 34-WAY CP7	*Call
2097<2094		6734<4804	4-WAY CP4 TO 34-WAY CP7	*Call
2097<2094		6734<4805	5-WAY CP4 TO 34-WAY CP7	*Call
2097<2094		6734<4806	6-WAY CP4 TO 34-WAY CP7	*Call
2097<2094		6734<4807	7-WAY CP4 TO 34-WAY CP7	*Call
2097<2094		6734<4808	8-WAY CP4 TO 34-WAY CP7	*Call
2097<2094		6735<4500	0-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4501	1-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4502	2-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4503	3-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4504	4-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4505	5-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4506	6-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4507	7-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4508	8-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4509	9-WAY CP7 TO 35-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6735<4510	10-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4511	11-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4512	12-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4513	13-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4514	14-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4515	15-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4516	16-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4517	17-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4518	18-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4519	19-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4520	20-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4521	21-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4522	22-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4523	23-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4524	24-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4525	25-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4526	26-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4527	27-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4528	28-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4529	29-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4530	30-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4531	31-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4532	32-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4533	33-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4534	34-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4535	35-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4536	36-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4537	37-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4538	38-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4539	39-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4540	40-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4541	41-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4542	42-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4543	43-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4544	44-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4545	45-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4546	46-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4547	47-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4548	48-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4549	49-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4550	50-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4551	51-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4552	52-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4553	53-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4554	54-WAY CP7 TO 35-WAY CP7	*Call
2097<2094		6735<4601	1-WAY CP6 TO 35-WAY CP7	*Call
2097<2094		6735<4602	2-WAY CP6 TO 35-WAY CP7	*Call
2097<2094		6735<4603	3-WAY CP6 TO 35-WAY CP7	*Call
2097<2094		6735<4604	4-WAY CP6 TO 35-WAY CP7	*Call
2097<2094		6735<4605	5-WAY CP6 TO 35-WAY CP7	*Call
2097<2094		6735<4606	6-WAY CP6 TO 35-WAY CP7	*Call
2097<2094		6735<4607	7-WAY CP6 TO 35-WAY CP7	*Call
2097<2094		6735<4608	8-WAY CP6 TO 35-WAY CP7	*Call
2097<2094		6735<4701	1-WAY CP5 TO 35-WAY CP7	*Call
2097<2094		6735<4702	2-WAY CP5 TO 35-WAY CP7	*Call
2097<2094		6735<4703	3-WAY CP5 TO 35-WAY CP7	*Call
2097<2094		6735<4704	4-WAY CP5 TO 35-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6735<4705	5-WAY CP5 TO 35-WAY CP7	*Call
2097<2094		6735<4706	6-WAY CP5 TO 35-WAY CP7	*Call
2097<2094		6735<4707	7-WAY CP5 TO 35-WAY CP7	*Call
2097<2094		6735<4708	8-WAY CP5 TO 35-WAY CP7	*Call
2097<2094		6735<4801	1-WAY CP4 TO 35-WAY CP7	*Call
2097<2094		6735<4802	2-WAY CP4 TO 35-WAY CP7	*Call
2097<2094		6735<4803	3-WAY CP4 TO 35-WAY CP7	*Call
2097<2094		6735<4804	4-WAY CP4 TO 35-WAY CP7	*Call
2097<2094		6735<4805	5-WAY CP4 TO 35-WAY CP7	*Call
2097<2094		6735<4806	6-WAY CP4 TO 35-WAY CP7	*Call
2097<2094		6735<4807	7-WAY CP4 TO 35-WAY CP7	*Call
2097<2094		6735<4808	8-WAY CP4 TO 35-WAY CP7	*Call
2097<2094		6736<4500	0-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4501	1-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4502	2-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4503	3-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4504	4-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4505	5-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4506	6-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4507	7-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4508	8-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4509	9-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4510	10-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4511	11-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4512	12-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4513	13-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4514	14-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4515	15-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4516	16-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4517	17-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4518	18-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4519	19-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4520	20-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4521	21-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4522	22-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4523	23-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4524	24-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4525	25-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4526	26-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4527	27-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4528	28-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4529	29-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4530	30-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4531	31-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4532	32-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4533	33-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4534	34-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4535	35-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4536	36-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4537	37-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4538	38-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4539	39-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4540	40-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4541	41-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4542	42-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4543	43-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4544	44-WAY CP7 TO 36-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6736<4545	45-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4546	46-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4547	47-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4548	48-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4549	49-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4550	50-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4551	51-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4552	52-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4553	53-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4554	54-WAY CP7 TO 36-WAY CP7	*Call
2097<2094		6736<4601	1-WAY CP6 TO 36-WAY CP7	*Call
2097<2094		6736<4602	2-WAY CP6 TO 36-WAY CP7	*Call
2097<2094		6736<4603	3-WAY CP6 TO 36-WAY CP7	*Call
2097<2094		6736<4604	4-WAY CP6 TO 36-WAY CP7	*Call
2097<2094		6736<4605	5-WAY CP6 TO 36-WAY CP7	*Call
2097<2094		6736<4606	6-WAY CP6 TO 36-WAY CP7	*Call
2097<2094		6736<4607	7-WAY CP6 TO 36-WAY CP7	*Call
2097<2094		6736<4608	8-WAY CP6 TO 36-WAY CP7	*Call
2097<2094		6736<4701	1-WAY CP5 TO 36-WAY CP7	*Call
2097<2094		6736<4702	2-WAY CP5 TO 36-WAY CP7	*Call
2097<2094		6736<4703	3-WAY CP5 TO 36-WAY CP7	*Call
2097<2094		6736<4704	4-WAY CP5 TO 36-WAY CP7	*Call
2097<2094		6736<4705	5-WAY CP5 TO 36-WAY CP7	*Call
2097<2094		6736<4706	6-WAY CP5 TO 36-WAY CP7	*Call
2097<2094		6736<4707	7-WAY CP5 TO 36-WAY CP7	*Call
2097<2094		6736<4708	8-WAY CP5 TO 36-WAY CP7	*Call
2097<2094		6736<4801	1-WAY CP4 TO 36-WAY CP7	*Call
2097<2094		6736<4802	2-WAY CP4 TO 36-WAY CP7	*Call
2097<2094		6736<4803	3-WAY CP4 TO 36-WAY CP7	*Call
2097<2094		6736<4804	4-WAY CP4 TO 36-WAY CP7	*Call
2097<2094		6736<4805	5-WAY CP4 TO 36-WAY CP7	*Call
2097<2094		6736<4806	6-WAY CP4 TO 36-WAY CP7	*Call
2097<2094		6736<4807	7-WAY CP4 TO 36-WAY CP7	*Call
2097<2094		6736<4808	8-WAY CP4 TO 36-WAY CP7	*Call
2097<2094		6737<4500	0-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4501	1-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4502	2-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4503	3-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4504	4-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4505	5-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4506	6-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4507	7-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4508	8-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4509	9-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4510	10-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4511	11-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4512	12-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4513	13-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4514	14-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4515	15-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4516	16-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4517	17-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4518	18-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4519	19-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4520	20-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4521	21-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4522	22-WAY CP7 TO 37-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6737<4523	23-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4524	24-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4525	25-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4526	26-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4527	27-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4528	28-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4529	29-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4530	30-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4531	31-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4532	32-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4533	33-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4534	34-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4535	35-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4536	36-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4537	37-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4538	38-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4539	39-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4540	40-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4541	41-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4542	42-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4543	43-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4544	44-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4545	45-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4546	46-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4547	47-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4548	48-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4549	49-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4550	50-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4551	51-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4552	52-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4553	53-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4554	54-WAY CP7 TO 37-WAY CP7	*Call
2097<2094		6737<4601	1-WAY CP6 TO 37-WAY CP7	*Call
2097<2094		6737<4602	2-WAY CP6 TO 37-WAY CP7	*Call
2097<2094		6737<4603	3-WAY CP6 TO 37-WAY CP7	*Call
2097<2094		6737<4604	4-WAY CP6 TO 37-WAY CP7	*Call
2097<2094		6737<4605	5-WAY CP6 TO 37-WAY CP7	*Call
2097<2094		6737<4606	6-WAY CP6 TO 37-WAY CP7	*Call
2097<2094		6737<4607	7-WAY CP6 TO 37-WAY CP7	*Call
2097<2094		6737<4608	8-WAY CP6 TO 37-WAY CP7	*Call
2097<2094		6737<4701	1-WAY CP5 TO 37-WAY CP7	*Call
2097<2094		6737<4702	2-WAY CP5 TO 37-WAY CP7	*Call
2097<2094		6737<4703	3-WAY CP5 TO 37-WAY CP7	*Call
2097<2094		6737<4704	4-WAY CP5 TO 37-WAY CP7	*Call
2097<2094		6737<4705	5-WAY CP5 TO 37-WAY CP7	*Call
2097<2094		6737<4706	6-WAY CP5 TO 37-WAY CP7	*Call
2097<2094		6737<4707	7-WAY CP5 TO 37-WAY CP7	*Call
2097<2094		6737<4708	8-WAY CP5 TO 37-WAY CP7	*Call
2097<2094		6737<4801	1-WAY CP4 TO 37-WAY CP7	*Call
2097<2094		6737<4802	2-WAY CP4 TO 37-WAY CP7	*Call
2097<2094		6737<4803	3-WAY CP4 TO 37-WAY CP7	*Call
2097<2094		6737<4804	4-WAY CP4 TO 37-WAY CP7	*Call
2097<2094		6737<4805	5-WAY CP4 TO 37-WAY CP7	*Call
2097<2094		6737<4806	6-WAY CP4 TO 37-WAY CP7	*Call
2097<2094		6737<4807	7-WAY CP4 TO 37-WAY CP7	*Call
2097<2094		6737<4808	8-WAY CP4 TO 37-WAY CP7	*Call
2097<2094		6738<4500	0-WAY CP7 TO 38-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6738<4501	1-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4502	2-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4503	3-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4504	4-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4505	5-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4506	6-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4507	7-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4508	8-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4509	9-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4510	10-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4511	11-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4512	12-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4513	13-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4514	14-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4515	15-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4516	16-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4517	17-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4518	18-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4519	19-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4520	20-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4521	21-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4522	22-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4523	23-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4524	24-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4525	25-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4526	26-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4527	27-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4528	28-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4529	29-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4530	30-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4531	31-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4532	32-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4533	33-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4534	34-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4535	35-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4536	36-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4537	37-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4538	38-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4539	39-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4540	40-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4541	41-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4542	42-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4543	43-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4544	44-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4545	45-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4546	46-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4547	47-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4548	48-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4549	49-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4550	50-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4551	51-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4552	52-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4553	53-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4554	54-WAY CP7 TO 38-WAY CP7	*Call
2097<2094		6738<4601	1-WAY CP6 TO 38-WAY CP7	*Call
2097<2094		6738<4602	2-WAY CP6 TO 38-WAY CP7	*Call
2097<2094		6738<4603	3-WAY CP6 TO 38-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6738<4604	4-WAY CP6 TO 38-WAY CP7	*Call
2097<2094		6738<4605	5-WAY CP6 TO 38-WAY CP7	*Call
2097<2094		6738<4606	6-WAY CP6 TO 38-WAY CP7	*Call
2097<2094		6738<4607	7-WAY CP6 TO 38-WAY CP7	*Call
2097<2094		6738<4608	8-WAY CP6 TO 38-WAY CP7	*Call
2097<2094		6738<4701	1-WAY CP5 TO 38-WAY CP7	*Call
2097<2094		6738<4702	2-WAY CP5 TO 38-WAY CP7	*Call
2097<2094		6738<4703	3-WAY CP5 TO 38-WAY CP7	*Call
2097<2094		6738<4704	4-WAY CP5 TO 38-WAY CP7	*Call
2097<2094		6738<4705	5-WAY CP5 TO 38-WAY CP7	*Call
2097<2094		6738<4706	6-WAY CP5 TO 38-WAY CP7	*Call
2097<2094		6738<4707	7-WAY CP5 TO 38-WAY CP7	*Call
2097<2094		6738<4708	8-WAY CP5 TO 38-WAY CP7	*Call
2097<2094		6738<4801	1-WAY CP4 TO 38-WAY CP7	*Call
2097<2094		6738<4802	2-WAY CP4 TO 38-WAY CP7	*Call
2097<2094		6738<4803	3-WAY CP4 TO 38-WAY CP7	*Call
2097<2094		6738<4804	4-WAY CP4 TO 38-WAY CP7	*Call
2097<2094		6738<4805	5-WAY CP4 TO 38-WAY CP7	*Call
2097<2094		6738<4806	6-WAY CP4 TO 38-WAY CP7	*Call
2097<2094		6738<4807	7-WAY CP4 TO 38-WAY CP7	*Call
2097<2094		6738<4808	8-WAY CP4 TO 38-WAY CP7	*Call
2097<2094		6739<4500	0-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4501	1-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4502	2-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4503	3-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4504	4-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4505	5-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4506	6-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4507	7-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4508	8-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4509	9-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4510	10-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4511	11-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4512	12-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4513	13-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4514	14-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4515	15-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4516	16-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4517	17-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4518	18-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4519	19-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4520	20-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4521	21-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4522	22-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4523	23-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4524	24-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4525	25-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4526	26-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4527	27-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4528	28-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4529	29-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4530	30-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4531	31-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4532	32-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4533	33-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4534	34-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4535	35-WAY CP7 TO 39-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6739<4536	36-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4537	37-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4538	38-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4539	39-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4540	40-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4541	41-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4542	42-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4543	43-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4544	44-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4545	45-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4546	46-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4547	47-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4548	48-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4549	49-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4550	50-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4551	51-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4552	52-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4553	53-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4554	54-WAY CP7 TO 39-WAY CP7	*Call
2097<2094		6739<4601	1-WAY CP6 TO 39-WAY CP7	*Call
2097<2094		6739<4602	2-WAY CP6 TO 39-WAY CP7	*Call
2097<2094		6739<4603	3-WAY CP6 TO 39-WAY CP7	*Call
2097<2094		6739<4604	4-WAY CP6 TO 39-WAY CP7	*Call
2097<2094		6739<4605	5-WAY CP6 TO 39-WAY CP7	*Call
2097<2094		6739<4606	6-WAY CP6 TO 39-WAY CP7	*Call
2097<2094		6739<4607	7-WAY CP6 TO 39-WAY CP7	*Call
2097<2094		6739<4608	8-WAY CP6 TO 39-WAY CP7	*Call
2097<2094		6739<4701	1-WAY CP5 TO 39-WAY CP7	*Call
2097<2094		6739<4702	2-WAY CP5 TO 39-WAY CP7	*Call
2097<2094		6739<4703	3-WAY CP5 TO 39-WAY CP7	*Call
2097<2094		6739<4704	4-WAY CP5 TO 39-WAY CP7	*Call
2097<2094		6739<4705	5-WAY CP5 TO 39-WAY CP7	*Call
2097<2094		6739<4706	6-WAY CP5 TO 39-WAY CP7	*Call
2097<2094		6739<4707	7-WAY CP5 TO 39-WAY CP7	*Call
2097<2094		6739<4708	8-WAY CP5 TO 39-WAY CP7	*Call
2097<2094		6739<4801	1-WAY CP4 TO 39-WAY CP7	*Call
2097<2094		6739<4802	2-WAY CP4 TO 39-WAY CP7	*Call
2097<2094		6739<4803	3-WAY CP4 TO 39-WAY CP7	*Call
2097<2094		6739<4804	4-WAY CP4 TO 39-WAY CP7	*Call
2097<2094		6739<4805	5-WAY CP4 TO 39-WAY CP7	*Call
2097<2094		6739<4806	6-WAY CP4 TO 39-WAY CP7	*Call
2097<2094		6739<4807	7-WAY CP4 TO 39-WAY CP7	*Call
2097<2094		6739<4808	8-WAY CP4 TO 39-WAY CP7	*Call
2097<2094		6740<4500	0-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4501	1-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4502	2-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4503	3-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4504	4-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4505	5-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4506	6-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4507	7-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4508	8-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4509	9-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4510	10-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4511	11-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4512	12-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4513	13-WAY CP7 TO 40-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6740<4514	14-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4515	15-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4516	16-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4517	17-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4518	18-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4519	19-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4520	20-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4521	21-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4522	22-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4523	23-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4524	24-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4525	25-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4526	26-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4527	27-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4528	28-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4529	29-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4530	30-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4531	31-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4532	32-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4533	33-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4534	34-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4535	35-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4536	36-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4537	37-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4538	38-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4539	39-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4540	40-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4541	41-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4542	42-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4543	43-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4544	44-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4545	45-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4546	46-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4547	47-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4548	48-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4549	49-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4550	50-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4551	51-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4552	52-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4553	53-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4554	54-WAY CP7 TO 40-WAY CP7	*Call
2097<2094		6740<4601	1-WAY CP6 TO 40-WAY CP7	*Call
2097<2094		6740<4602	2-WAY CP6 TO 40-WAY CP7	*Call
2097<2094		6740<4603	3-WAY CP6 TO 40-WAY CP7	*Call
2097<2094		6740<4604	4-WAY CP6 TO 40-WAY CP7	*Call
2097<2094		6740<4605	5-WAY CP6 TO 40-WAY CP7	*Call
2097<2094		6740<4606	6-WAY CP6 TO 40-WAY CP7	*Call
2097<2094		6740<4607	7-WAY CP6 TO 40-WAY CP7	*Call
2097<2094		6740<4608	8-WAY CP6 TO 40-WAY CP7	*Call
2097<2094		6740<4701	1-WAY CP5 TO 40-WAY CP7	*Call
2097<2094		6740<4702	2-WAY CP5 TO 40-WAY CP7	*Call
2097<2094		6740<4703	3-WAY CP5 TO 40-WAY CP7	*Call
2097<2094		6740<4704	4-WAY CP5 TO 40-WAY CP7	*Call
2097<2094		6740<4705	5-WAY CP5 TO 40-WAY CP7	*Call
2097<2094		6740<4706	6-WAY CP5 TO 40-WAY CP7	*Call
2097<2094		6740<4707	7-WAY CP5 TO 40-WAY CP7	*Call
2097<2094		6740<4708	8-WAY CP5 TO 40-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6740<4801	1-WAY CP4 TO 40-WAY CP7	*Call
2097<2094		6740<4802	2-WAY CP4 TO 40-WAY CP7	*Call
2097<2094		6740<4803	3-WAY CP4 TO 40-WAY CP7	*Call
2097<2094		6740<4804	4-WAY CP4 TO 40-WAY CP7	*Call
2097<2094		6740<4805	5-WAY CP4 TO 40-WAY CP7	*Call
2097<2094		6740<4806	6-WAY CP4 TO 40-WAY CP7	*Call
2097<2094		6740<4807	7-WAY CP4 TO 40-WAY CP7	*Call
2097<2094		6740<4808	8-WAY CP4 TO 40-WAY CP7	*Call
2097<2094		6741<4500	0-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4501	1-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4502	2-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4503	3-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4504	4-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4505	5-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4506	6-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4507	7-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4508	8-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4509	9-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4510	10-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4511	11-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4512	12-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4513	13-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4514	14-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4515	15-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4516	16-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4517	17-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4518	18-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4519	19-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4520	20-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4521	21-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4522	22-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4523	23-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4524	24-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4525	25-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4526	26-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4527	27-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4528	28-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4529	29-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4530	30-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4531	31-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4532	32-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4533	33-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4534	34-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4535	35-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4536	36-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4537	37-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4538	38-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4539	39-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4540	40-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4541	41-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4542	42-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4543	43-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4544	44-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4545	45-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4546	46-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4547	47-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4548	48-WAY CP7 TO 41-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6741<4549	49-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4550	50-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4551	51-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4552	52-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4553	53-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4554	54-WAY CP7 TO 41-WAY CP7	*Call
2097<2094		6741<4601	1-WAY CP6 TO 41-WAY CP7	*Call
2097<2094		6741<4602	2-WAY CP6 TO 41-WAY CP7	*Call
2097<2094		6741<4603	3-WAY CP6 TO 41-WAY CP7	*Call
2097<2094		6741<4604	4-WAY CP6 TO 41-WAY CP7	*Call
2097<2094		6741<4605	5-WAY CP6 TO 41-WAY CP7	*Call
2097<2094		6741<4606	6-WAY CP6 TO 41-WAY CP7	*Call
2097<2094		6741<4607	7-WAY CP6 TO 41-WAY CP7	*Call
2097<2094		6741<4608	8-WAY CP6 TO 41-WAY CP7	*Call
2097<2094		6741<4701	1-WAY CP5 TO 41-WAY CP7	*Call
2097<2094		6741<4702	2-WAY CP5 TO 41-WAY CP7	*Call
2097<2094		6741<4703	3-WAY CP5 TO 41-WAY CP7	*Call
2097<2094		6741<4704	4-WAY CP5 TO 41-WAY CP7	*Call
2097<2094		6741<4705	5-WAY CP5 TO 41-WAY CP7	*Call
2097<2094		6741<4706	6-WAY CP5 TO 41-WAY CP7	*Call
2097<2094		6741<4707	7-WAY CP5 TO 41-WAY CP7	*Call
2097<2094		6741<4708	8-WAY CP5 TO 41-WAY CP7	*Call
2097<2094		6741<4801	1-WAY CP4 TO 41-WAY CP7	*Call
2097<2094		6741<4802	2-WAY CP4 TO 41-WAY CP7	*Call
2097<2094		6741<4803	3-WAY CP4 TO 41-WAY CP7	*Call
2097<2094		6741<4804	4-WAY CP4 TO 41-WAY CP7	*Call
2097<2094		6741<4805	5-WAY CP4 TO 41-WAY CP7	*Call
2097<2094		6741<4806	6-WAY CP4 TO 41-WAY CP7	*Call
2097<2094		6741<4807	7-WAY CP4 TO 41-WAY CP7	*Call
2097<2094		6741<4808	8-WAY CP4 TO 41-WAY CP7	*Call
2097<2094		6742<4500	0-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4501	1-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4502	2-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4503	3-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4504	4-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4505	5-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4506	6-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4507	7-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4508	8-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4509	9-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4510	10-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4511	11-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4512	12-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4513	13-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4514	14-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4515	15-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4516	16-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4517	17-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4518	18-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4519	19-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4520	20-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4521	21-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4522	22-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4523	23-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4524	24-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4525	25-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4526	26-WAY CP7 TO 42-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6742<4527	27-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4528	28-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4529	29-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4530	30-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4531	31-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4532	32-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4533	33-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4534	34-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4535	35-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4536	36-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4537	37-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4538	38-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4539	39-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4540	40-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4541	41-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4542	42-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4543	43-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4544	44-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4545	45-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4546	46-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4547	47-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4548	48-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4549	49-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4550	50-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4551	51-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4552	52-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4553	53-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4554	54-WAY CP7 TO 42-WAY CP7	*Call
2097<2094		6742<4601	1-WAY CP6 TO 42-WAY CP7	*Call
2097<2094		6742<4602	2-WAY CP6 TO 42-WAY CP7	*Call
2097<2094		6742<4603	3-WAY CP6 TO 42-WAY CP7	*Call
2097<2094		6742<4604	4-WAY CP6 TO 42-WAY CP7	*Call
2097<2094		6742<4605	5-WAY CP6 TO 42-WAY CP7	*Call
2097<2094		6742<4606	6-WAY CP6 TO 42-WAY CP7	*Call
2097<2094		6742<4607	7-WAY CP6 TO 42-WAY CP7	*Call
2097<2094		6742<4608	8-WAY CP6 TO 42-WAY CP7	*Call
2097<2094		6742<4701	1-WAY CP5 TO 42-WAY CP7	*Call
2097<2094		6742<4702	2-WAY CP5 TO 42-WAY CP7	*Call
2097<2094		6742<4703	3-WAY CP5 TO 42-WAY CP7	*Call
2097<2094		6742<4704	4-WAY CP5 TO 42-WAY CP7	*Call
2097<2094		6742<4705	5-WAY CP5 TO 42-WAY CP7	*Call
2097<2094		6742<4706	6-WAY CP5 TO 42-WAY CP7	*Call
2097<2094		6742<4707	7-WAY CP5 TO 42-WAY CP7	*Call
2097<2094		6742<4708	8-WAY CP5 TO 42-WAY CP7	*Call
2097<2094		6742<4801	1-WAY CP4 TO 42-WAY CP7	*Call
2097<2094		6742<4802	2-WAY CP4 TO 42-WAY CP7	*Call
2097<2094		6742<4803	3-WAY CP4 TO 42-WAY CP7	*Call
2097<2094		6742<4804	4-WAY CP4 TO 42-WAY CP7	*Call
2097<2094		6742<4805	5-WAY CP4 TO 42-WAY CP7	*Call
2097<2094		6742<4806	6-WAY CP4 TO 42-WAY CP7	*Call
2097<2094		6742<4807	7-WAY CP4 TO 42-WAY CP7	*Call
2097<2094		6742<4808	8-WAY CP4 TO 42-WAY CP7	*Call
2097<2094		6743<4500	0-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4501	1-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4502	2-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4503	3-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4504	4-WAY CP7 TO 43-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6743<4505	5-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4506	6-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4507	7-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4508	8-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4509	9-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4510	10-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4511	11-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4512	12-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4513	13-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4514	14-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4515	15-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4516	16-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4517	17-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4518	18-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4519	19-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4520	20-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4521	21-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4522	22-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4523	23-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4524	24-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4525	25-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4526	26-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4527	27-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4528	28-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4529	29-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4530	30-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4531	31-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4532	32-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4533	33-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4534	34-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4535	35-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4536	36-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4537	37-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4538	38-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4539	39-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4540	40-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4541	41-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4542	42-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4543	43-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4544	44-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4545	45-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4546	46-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4547	47-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4548	48-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4549	49-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4550	50-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4551	51-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4552	52-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4553	53-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4554	54-WAY CP7 TO 43-WAY CP7	*Call
2097<2094		6743<4601	1-WAY CP6 TO 43-WAY CP7	*Call
2097<2094		6743<4602	2-WAY CP6 TO 43-WAY CP7	*Call
2097<2094		6743<4603	3-WAY CP6 TO 43-WAY CP7	*Call
2097<2094		6743<4604	4-WAY CP6 TO 43-WAY CP7	*Call
2097<2094		6743<4605	5-WAY CP6 TO 43-WAY CP7	*Call
2097<2094		6743<4606	6-WAY CP6 TO 43-WAY CP7	*Call
2097<2094		6743<4607	7-WAY CP6 TO 43-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6743<4608	8-WAY CP6 TO 43-WAY CP7	*Call
2097<2094		6743<4701	1-WAY CP5 TO 43-WAY CP7	*Call
2097<2094		6743<4702	2-WAY CP5 TO 43-WAY CP7	*Call
2097<2094		6743<4703	3-WAY CP5 TO 43-WAY CP7	*Call
2097<2094		6743<4704	4-WAY CP5 TO 43-WAY CP7	*Call
2097<2094		6743<4705	5-WAY CP5 TO 43-WAY CP7	*Call
2097<2094		6743<4706	6-WAY CP5 TO 43-WAY CP7	*Call
2097<2094		6743<4707	7-WAY CP5 TO 43-WAY CP7	*Call
2097<2094		6743<4708	8-WAY CP5 TO 43-WAY CP7	*Call
2097<2094		6743<4801	1-WAY CP4 TO 43-WAY CP7	*Call
2097<2094		6743<4802	2-WAY CP4 TO 43-WAY CP7	*Call
2097<2094		6743<4803	3-WAY CP4 TO 43-WAY CP7	*Call
2097<2094		6743<4804	4-WAY CP4 TO 43-WAY CP7	*Call
2097<2094		6743<4805	5-WAY CP4 TO 43-WAY CP7	*Call
2097<2094		6743<4806	6-WAY CP4 TO 43-WAY CP7	*Call
2097<2094		6743<4807	7-WAY CP4 TO 43-WAY CP7	*Call
2097<2094		6743<4808	8-WAY CP4 TO 43-WAY CP7	*Call
2097<2094		6744<4500	0-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4501	1-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4502	2-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4503	3-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4504	4-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4505	5-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4506	6-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4507	7-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4508	8-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4509	9-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4510	10-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4511	11-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4512	12-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4513	13-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4514	14-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4515	15-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4516	16-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4517	17-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4518	18-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4519	19-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4520	20-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4521	21-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4522	22-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4523	23-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4524	24-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4525	25-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4526	26-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4527	27-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4528	28-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4529	29-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4530	30-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4531	31-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4532	32-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4533	33-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4534	34-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4535	35-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4536	36-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4537	37-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4538	38-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4539	39-WAY CP7 TO 44-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6744<4540	40-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4541	41-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4542	42-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4543	43-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4544	44-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4545	45-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4546	46-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4547	47-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4548	48-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4549	49-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4550	50-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4551	51-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4552	52-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4553	53-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4554	54-WAY CP7 TO 44-WAY CP7	*Call
2097<2094		6744<4601	1-WAY CP6 TO 44-WAY CP7	*Call
2097<2094		6744<4602	2-WAY CP6 TO 44-WAY CP7	*Call
2097<2094		6744<4603	3-WAY CP6 TO 44-WAY CP7	*Call
2097<2094		6744<4604	4-WAY CP6 TO 44-WAY CP7	*Call
2097<2094		6744<4605	5-WAY CP6 TO 44-WAY CP7	*Call
2097<2094		6744<4606	6-WAY CP6 TO 44-WAY CP7	*Call
2097<2094		6744<4607	7-WAY CP6 TO 44-WAY CP7	*Call
2097<2094		6744<4608	8-WAY CP6 TO 44-WAY CP7	*Call
2097<2094		6744<4701	1-WAY CP5 TO 44-WAY CP7	*Call
2097<2094		6744<4702	2-WAY CP5 TO 44-WAY CP7	*Call
2097<2094		6744<4703	3-WAY CP5 TO 44-WAY CP7	*Call
2097<2094		6744<4704	4-WAY CP5 TO 44-WAY CP7	*Call
2097<2094		6744<4705	5-WAY CP5 TO 44-WAY CP7	*Call
2097<2094		6744<4706	6-WAY CP5 TO 44-WAY CP7	*Call
2097<2094		6744<4707	7-WAY CP5 TO 44-WAY CP7	*Call
2097<2094		6744<4708	8-WAY CP5 TO 44-WAY CP7	*Call
2097<2094		6744<4801	1-WAY CP4 TO 44-WAY CP7	*Call
2097<2094		6744<4802	2-WAY CP4 TO 44-WAY CP7	*Call
2097<2094		6744<4803	3-WAY CP4 TO 44-WAY CP7	*Call
2097<2094		6744<4804	4-WAY CP4 TO 44-WAY CP7	*Call
2097<2094		6744<4805	5-WAY CP4 TO 44-WAY CP7	*Call
2097<2094		6744<4806	6-WAY CP4 TO 44-WAY CP7	*Call
2097<2094		6744<4807	7-WAY CP4 TO 44-WAY CP7	*Call
2097<2094		6744<4808	8-WAY CP4 TO 44-WAY CP7	*Call
2097<2094		6745<4500	0-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4501	1-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4502	2-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4503	3-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4504	4-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4505	5-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4506	6-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4507	7-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4508	8-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4509	9-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4510	10-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4511	11-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4512	12-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4513	13-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4514	14-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4515	15-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4516	16-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4517	17-WAY CP7 TO 45-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6745<4518	18-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4519	19-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4520	20-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4521	21-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4522	22-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4523	23-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4524	24-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4525	25-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4526	26-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4527	27-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4528	28-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4529	29-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4530	30-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4531	31-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4532	32-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4533	33-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4534	34-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4535	35-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4536	36-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4537	37-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4538	38-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4539	39-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4540	40-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4541	41-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4542	42-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4543	43-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4544	44-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4545	45-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4546	46-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4547	47-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4548	48-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4549	49-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4550	50-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4551	51-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4552	52-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4553	53-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4554	54-WAY CP7 TO 45-WAY CP7	*Call
2097<2094		6745<4601	1-WAY CP6 TO 45-WAY CP7	*Call
2097<2094		6745<4602	2-WAY CP6 TO 45-WAY CP7	*Call
2097<2094		6745<4603	3-WAY CP6 TO 45-WAY CP7	*Call
2097<2094		6745<4604	4-WAY CP6 TO 45-WAY CP7	*Call
2097<2094		6745<4605	5-WAY CP6 TO 45-WAY CP7	*Call
2097<2094		6745<4606	6-WAY CP6 TO 45-WAY CP7	*Call
2097<2094		6745<4607	7-WAY CP6 TO 45-WAY CP7	*Call
2097<2094		6745<4608	8-WAY CP6 TO 45-WAY CP7	*Call
2097<2094		6745<4701	1-WAY CP5 TO 45-WAY CP7	*Call
2097<2094		6745<4702	2-WAY CP5 TO 45-WAY CP7	*Call
2097<2094		6745<4703	3-WAY CP5 TO 45-WAY CP7	*Call
2097<2094		6745<4704	4-WAY CP5 TO 45-WAY CP7	*Call
2097<2094		6745<4705	5-WAY CP5 TO 45-WAY CP7	*Call
2097<2094		6745<4706	6-WAY CP5 TO 45-WAY CP7	*Call
2097<2094		6745<4707	7-WAY CP5 TO 45-WAY CP7	*Call
2097<2094		6745<4708	8-WAY CP5 TO 45-WAY CP7	*Call
2097<2094		6745<4801	1-WAY CP4 TO 45-WAY CP7	*Call
2097<2094		6745<4802	2-WAY CP4 TO 45-WAY CP7	*Call
2097<2094		6745<4803	3-WAY CP4 TO 45-WAY CP7	*Call
2097<2094		6745<4804	4-WAY CP4 TO 45-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6745<4805	5-WAY CP4 TO 45-WAY CP7	*Call
2097<2094		6745<4806	6-WAY CP4 TO 45-WAY CP7	*Call
2097<2094		6745<4807	7-WAY CP4 TO 45-WAY CP7	*Call
2097<2094		6745<4808	8-WAY CP4 TO 45-WAY CP7	*Call
2097<2094		6746<4500	0-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4501	1-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4502	2-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4503	3-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4504	4-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4505	5-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4506	6-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4507	7-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4508	8-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4509	9-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4510	10-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4511	11-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4512	12-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4513	13-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4514	14-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4515	15-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4516	16-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4517	17-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4518	18-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4519	19-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4520	20-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4521	21-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4522	22-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4523	23-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4524	24-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4525	25-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4526	26-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4527	27-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4528	28-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4529	29-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4530	30-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4531	31-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4532	32-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4533	33-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4534	34-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4535	35-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4536	36-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4537	37-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4538	38-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4539	39-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4540	40-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4541	41-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4542	42-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4543	43-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4544	44-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4545	45-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4546	46-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4547	47-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4548	48-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4549	49-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4550	50-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4551	51-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4552	52-WAY CP7 TO 46-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6746<4553	53-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4554	54-WAY CP7 TO 46-WAY CP7	*Call
2097<2094		6746<4601	1-WAY CP6 TO 46-WAY CP7	*Call
2097<2094		6746<4602	2-WAY CP6 TO 46-WAY CP7	*Call
2097<2094		6746<4603	3-WAY CP6 TO 46-WAY CP7	*Call
2097<2094		6746<4604	4-WAY CP6 TO 46-WAY CP7	*Call
2097<2094		6746<4605	5-WAY CP6 TO 46-WAY CP7	*Call
2097<2094		6746<4606	6-WAY CP6 TO 46-WAY CP7	*Call
2097<2094		6746<4607	7-WAY CP6 TO 46-WAY CP7	*Call
2097<2094		6746<4608	8-WAY CP6 TO 46-WAY CP7	*Call
2097<2094		6746<4701	1-WAY CP5 TO 46-WAY CP7	*Call
2097<2094		6746<4702	2-WAY CP5 TO 46-WAY CP7	*Call
2097<2094		6746<4703	3-WAY CP5 TO 46-WAY CP7	*Call
2097<2094		6746<4704	4-WAY CP5 TO 46-WAY CP7	*Call
2097<2094		6746<4705	5-WAY CP5 TO 46-WAY CP7	*Call
2097<2094		6746<4706	6-WAY CP5 TO 46-WAY CP7	*Call
2097<2094		6746<4707	7-WAY CP5 TO 46-WAY CP7	*Call
2097<2094		6746<4708	8-WAY CP5 TO 46-WAY CP7	*Call
2097<2094		6746<4801	1-WAY CP4 TO 46-WAY CP7	*Call
2097<2094		6746<4802	2-WAY CP4 TO 46-WAY CP7	*Call
2097<2094		6746<4803	3-WAY CP4 TO 46-WAY CP7	*Call
2097<2094		6746<4804	4-WAY CP4 TO 46-WAY CP7	*Call
2097<2094		6746<4805	5-WAY CP4 TO 46-WAY CP7	*Call
2097<2094		6746<4806	6-WAY CP4 TO 46-WAY CP7	*Call
2097<2094		6746<4807	7-WAY CP4 TO 46-WAY CP7	*Call
2097<2094		6746<4808	8-WAY CP4 TO 46-WAY CP7	*Call
2097<2094		6747<4500	0-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4501	1-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4502	2-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4503	3-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4504	4-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4505	5-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4506	6-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4507	7-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4508	8-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4509	9-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4510	10-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4511	11-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4512	12-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4513	13-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4514	14-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4515	15-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4516	16-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4517	17-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4518	18-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4519	19-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4520	20-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4521	21-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4522	22-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4523	23-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4524	24-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4525	25-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4526	26-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4527	27-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4528	28-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4529	29-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4530	30-WAY CP7 TO 47-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6747<4531	31-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4532	32-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4533	33-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4534	34-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4535	35-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4536	36-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4537	37-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4538	38-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4539	39-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4540	40-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4541	41-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4542	42-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4543	43-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4544	44-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4545	45-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4546	46-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4547	47-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4548	48-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4549	49-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4550	50-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4551	51-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4552	52-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4553	53-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4554	54-WAY CP7 TO 47-WAY CP7	*Call
2097<2094		6747<4601	1-WAY CP6 TO 47-WAY CP7	*Call
2097<2094		6747<4602	2-WAY CP6 TO 47-WAY CP7	*Call
2097<2094		6747<4603	3-WAY CP6 TO 47-WAY CP7	*Call
2097<2094		6747<4604	4-WAY CP6 TO 47-WAY CP7	*Call
2097<2094		6747<4605	5-WAY CP6 TO 47-WAY CP7	*Call
2097<2094		6747<4606	6-WAY CP6 TO 47-WAY CP7	*Call
2097<2094		6747<4607	7-WAY CP6 TO 47-WAY CP7	*Call
2097<2094		6747<4608	8-WAY CP6 TO 47-WAY CP7	*Call
2097<2094		6747<4701	1-WAY CP5 TO 47-WAY CP7	*Call
2097<2094		6747<4702	2-WAY CP5 TO 47-WAY CP7	*Call
2097<2094		6747<4703	3-WAY CP5 TO 47-WAY CP7	*Call
2097<2094		6747<4704	4-WAY CP5 TO 47-WAY CP7	*Call
2097<2094		6747<4705	5-WAY CP5 TO 47-WAY CP7	*Call
2097<2094		6747<4706	6-WAY CP5 TO 47-WAY CP7	*Call
2097<2094		6747<4707	7-WAY CP5 TO 47-WAY CP7	*Call
2097<2094		6747<4708	8-WAY CP5 TO 47-WAY CP7	*Call
2097<2094		6747<4801	1-WAY CP4 TO 47-WAY CP7	*Call
2097<2094		6747<4802	2-WAY CP4 TO 47-WAY CP7	*Call
2097<2094		6747<4803	3-WAY CP4 TO 47-WAY CP7	*Call
2097<2094		6747<4804	4-WAY CP4 TO 47-WAY CP7	*Call
2097<2094		6747<4805	5-WAY CP4 TO 47-WAY CP7	*Call
2097<2094		6747<4806	6-WAY CP4 TO 47-WAY CP7	*Call
2097<2094		6747<4807	7-WAY CP4 TO 47-WAY CP7	*Call
2097<2094		6747<4808	8-WAY CP4 TO 47-WAY CP7	*Call
2097<2094		6748<4500	0-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4501	1-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4502	2-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4503	3-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4504	4-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4505	5-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4506	6-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4507	7-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4508	8-WAY CP7 TO 48-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6748<4509	9-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4510	10-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4511	11-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4512	12-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4513	13-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4514	14-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4515	15-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4516	16-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4517	17-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4518	18-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4519	19-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4520	20-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4521	21-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4522	22-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4523	23-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4524	24-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4525	25-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4526	26-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4527	27-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4528	28-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4529	29-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4530	30-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4531	31-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4532	32-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4533	33-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4534	34-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4535	35-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4536	36-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4537	37-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4538	38-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4539	39-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4540	40-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4541	41-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4542	42-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4543	43-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4544	44-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4545	45-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4546	46-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4547	47-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4548	48-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4549	49-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4550	50-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4551	51-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4552	52-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4553	53-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4554	54-WAY CP7 TO 48-WAY CP7	*Call
2097<2094		6748<4601	1-WAY CP6 TO 48-WAY CP7	*Call
2097<2094		6748<4602	2-WAY CP6 TO 48-WAY CP7	*Call
2097<2094		6748<4603	3-WAY CP6 TO 48-WAY CP7	*Call
2097<2094		6748<4604	4-WAY CP6 TO 48-WAY CP7	*Call
2097<2094		6748<4605	5-WAY CP6 TO 48-WAY CP7	*Call
2097<2094		6748<4606	6-WAY CP6 TO 48-WAY CP7	*Call
2097<2094		6748<4607	7-WAY CP6 TO 48-WAY CP7	*Call
2097<2094		6748<4608	8-WAY CP6 TO 48-WAY CP7	*Call
2097<2094		6748<4701	1-WAY CP5 TO 48-WAY CP7	*Call
2097<2094		6748<4702	2-WAY CP5 TO 48-WAY CP7	*Call
2097<2094		6748<4703	3-WAY CP5 TO 48-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6748<4704	4-WAY CP5 TO 48-WAY CP7	*Call
2097<2094		6748<4705	5-WAY CP5 TO 48-WAY CP7	*Call
2097<2094		6748<4706	6-WAY CP5 TO 48-WAY CP7	*Call
2097<2094		6748<4707	7-WAY CP5 TO 48-WAY CP7	*Call
2097<2094		6748<4708	8-WAY CP5 TO 48-WAY CP7	*Call
2097<2094		6748<4801	1-WAY CP4 TO 48-WAY CP7	*Call
2097<2094		6748<4802	2-WAY CP4 TO 48-WAY CP7	*Call
2097<2094		6748<4803	3-WAY CP4 TO 48-WAY CP7	*Call
2097<2094		6748<4804	4-WAY CP4 TO 48-WAY CP7	*Call
2097<2094		6748<4805	5-WAY CP4 TO 48-WAY CP7	*Call
2097<2094		6748<4806	6-WAY CP4 TO 48-WAY CP7	*Call
2097<2094		6748<4807	7-WAY CP4 TO 48-WAY CP7	*Call
2097<2094		6748<4808	8-WAY CP4 TO 48-WAY CP7	*Call
2097<2094		6749<4500	0-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4501	1-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4502	2-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4503	3-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4504	4-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4505	5-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4506	6-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4507	7-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4508	8-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4509	9-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4510	10-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4511	11-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4512	12-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4513	13-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4514	14-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4515	15-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4516	16-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4517	17-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4518	18-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4519	19-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4520	20-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4521	21-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4522	22-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4523	23-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4524	24-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4525	25-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4526	26-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4527	27-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4528	28-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4529	29-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4530	30-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4531	31-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4532	32-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4533	33-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4534	34-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4535	35-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4536	36-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4537	37-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4538	38-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4539	39-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4540	40-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4541	41-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4542	42-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4543	43-WAY CP7 TO 49-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6749<4544	44-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4545	45-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4546	46-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4547	47-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4548	48-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4549	49-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4550	50-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4551	51-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4552	52-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4553	53-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4554	54-WAY CP7 TO 49-WAY CP7	*Call
2097<2094		6749<4601	1-WAY CP6 TO 49-WAY CP7	*Call
2097<2094		6749<4602	2-WAY CP6 TO 49-WAY CP7	*Call
2097<2094		6749<4603	3-WAY CP6 TO 49-WAY CP7	*Call
2097<2094		6749<4604	4-WAY CP6 TO 49-WAY CP7	*Call
2097<2094		6749<4605	5-WAY CP6 TO 49-WAY CP7	*Call
2097<2094		6749<4606	6-WAY CP6 TO 49-WAY CP7	*Call
2097<2094		6749<4607	7-WAY CP6 TO 49-WAY CP7	*Call
2097<2094		6749<4608	8-WAY CP6 TO 49-WAY CP7	*Call
2097<2094		6749<4701	1-WAY CP5 TO 49-WAY CP7	*Call
2097<2094		6749<4702	2-WAY CP5 TO 49-WAY CP7	*Call
2097<2094		6749<4703	3-WAY CP5 TO 49-WAY CP7	*Call
2097<2094		6749<4704	4-WAY CP5 TO 49-WAY CP7	*Call
2097<2094		6749<4705	5-WAY CP5 TO 49-WAY CP7	*Call
2097<2094		6749<4706	6-WAY CP5 TO 49-WAY CP7	*Call
2097<2094		6749<4707	7-WAY CP5 TO 49-WAY CP7	*Call
2097<2094		6749<4708	8-WAY CP5 TO 49-WAY CP7	*Call
2097<2094		6749<4801	1-WAY CP4 TO 49-WAY CP7	*Call
2097<2094		6749<4802	2-WAY CP4 TO 49-WAY CP7	*Call
2097<2094		6749<4803	3-WAY CP4 TO 49-WAY CP7	*Call
2097<2094		6749<4804	4-WAY CP4 TO 49-WAY CP7	*Call
2097<2094		6749<4805	5-WAY CP4 TO 49-WAY CP7	*Call
2097<2094		6749<4806	6-WAY CP4 TO 49-WAY CP7	*Call
2097<2094		6749<4807	7-WAY CP4 TO 49-WAY CP7	*Call
2097<2094		6749<4808	8-WAY CP4 TO 49-WAY CP7	*Call
2097<2094		6750<4500	0-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4501	1-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4502	2-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4503	3-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4504	4-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4505	5-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4506	6-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4507	7-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4508	8-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4509	9-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4510	10-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4511	11-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4512	12-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4513	13-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4514	14-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4515	15-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4516	16-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4517	17-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4518	18-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4519	19-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4520	20-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4521	21-WAY CP7 TO 50-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6750<4522	22-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4523	23-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4524	24-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4525	25-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4526	26-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4527	27-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4528	28-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4529	29-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4530	30-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4531	31-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4532	32-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4533	33-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4534	34-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4535	35-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4536	36-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4537	37-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4538	38-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4539	39-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4540	40-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4541	41-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4542	42-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4543	43-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4544	44-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4545	45-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4546	46-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4547	47-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4548	48-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4549	49-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4550	50-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4551	51-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4552	52-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4553	53-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4554	54-WAY CP7 TO 50-WAY CP7	*Call
2097<2094		6750<4601	1-WAY CP6 TO 50-WAY CP7	*Call
2097<2094		6750<4602	2-WAY CP6 TO 50-WAY CP7	*Call
2097<2094		6750<4603	3-WAY CP6 TO 50-WAY CP7	*Call
2097<2094		6750<4604	4-WAY CP6 TO 50-WAY CP7	*Call
2097<2094		6750<4605	5-WAY CP6 TO 50-WAY CP7	*Call
2097<2094		6750<4606	6-WAY CP6 TO 50-WAY CP7	*Call
2097<2094		6750<4607	7-WAY CP6 TO 50-WAY CP7	*Call
2097<2094		6750<4608	8-WAY CP6 TO 50-WAY CP7	*Call
2097<2094		6750<4701	1-WAY CP5 TO 50-WAY CP7	*Call
2097<2094		6750<4702	2-WAY CP5 TO 50-WAY CP7	*Call
2097<2094		6750<4703	3-WAY CP5 TO 50-WAY CP7	*Call
2097<2094		6750<4704	4-WAY CP5 TO 50-WAY CP7	*Call
2097<2094		6750<4705	5-WAY CP5 TO 50-WAY CP7	*Call
2097<2094		6750<4706	6-WAY CP5 TO 50-WAY CP7	*Call
2097<2094		6750<4707	7-WAY CP5 TO 50-WAY CP7	*Call
2097<2094		6750<4708	8-WAY CP5 TO 50-WAY CP7	*Call
2097<2094		6750<4801	1-WAY CP4 TO 50-WAY CP7	*Call
2097<2094		6750<4802	2-WAY CP4 TO 50-WAY CP7	*Call
2097<2094		6750<4803	3-WAY CP4 TO 50-WAY CP7	*Call
2097<2094		6750<4804	4-WAY CP4 TO 50-WAY CP7	*Call
2097<2094		6750<4805	5-WAY CP4 TO 50-WAY CP7	*Call
2097<2094		6750<4806	6-WAY CP4 TO 50-WAY CP7	*Call
2097<2094		6750<4807	7-WAY CP4 TO 50-WAY CP7	*Call
2097<2094		6750<4808	8-WAY CP4 TO 50-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6751<4500	0-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4501	1-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4502	2-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4503	3-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4504	4-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4505	5-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4506	6-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4507	7-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4508	8-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4509	9-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4510	10-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4511	11-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4512	12-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4513	13-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4514	14-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4515	15-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4516	16-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4517	17-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4518	18-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4519	19-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4520	20-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4521	21-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4522	22-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4523	23-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4524	24-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4525	25-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4526	26-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4527	27-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4528	28-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4529	29-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4530	30-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4531	31-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4532	32-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4533	33-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4534	34-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4535	35-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4536	36-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4537	37-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4538	38-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4539	39-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4540	40-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4541	41-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4542	42-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4543	43-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4544	44-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4545	45-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4546	46-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4547	47-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4548	48-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4549	49-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4550	50-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4551	51-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4552	52-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4553	53-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4554	54-WAY CP7 TO 51-WAY CP7	*Call
2097<2094		6751<4601	1-WAY CP6 TO 51-WAY CP7	*Call
2097<2094		6751<4602	2-WAY CP6 TO 51-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6751<4603	3-WAY CP6 TO 51-WAY CP7	*Call
2097<2094		6751<4604	4-WAY CP6 TO 51-WAY CP7	*Call
2097<2094		6751<4605	5-WAY CP6 TO 51-WAY CP7	*Call
2097<2094		6751<4606	6-WAY CP6 TO 51-WAY CP7	*Call
2097<2094		6751<4607	7-WAY CP6 TO 51-WAY CP7	*Call
2097<2094		6751<4608	8-WAY CP6 TO 51-WAY CP7	*Call
2097<2094		6751<4701	1-WAY CP5 TO 51-WAY CP7	*Call
2097<2094		6751<4702	2-WAY CP5 TO 51-WAY CP7	*Call
2097<2094		6751<4703	3-WAY CP5 TO 51-WAY CP7	*Call
2097<2094		6751<4704	4-WAY CP5 TO 51-WAY CP7	*Call
2097<2094		6751<4705	5-WAY CP5 TO 51-WAY CP7	*Call
2097<2094		6751<4706	6-WAY CP5 TO 51-WAY CP7	*Call
2097<2094		6751<4707	7-WAY CP5 TO 51-WAY CP7	*Call
2097<2094		6751<4708	8-WAY CP5 TO 51-WAY CP7	*Call
2097<2094		6751<4801	1-WAY CP4 TO 51-WAY CP7	*Call
2097<2094		6751<4802	2-WAY CP4 TO 51-WAY CP7	*Call
2097<2094		6751<4803	3-WAY CP4 TO 51-WAY CP7	*Call
2097<2094		6751<4804	4-WAY CP4 TO 51-WAY CP7	*Call
2097<2094		6751<4805	5-WAY CP4 TO 51-WAY CP7	*Call
2097<2094		6751<4806	6-WAY CP4 TO 51-WAY CP7	*Call
2097<2094		6751<4807	7-WAY CP4 TO 51-WAY CP7	*Call
2097<2094		6751<4808	8-WAY CP4 TO 51-WAY CP7	*Call
2097<2094		6752<4500	0-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4501	1-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4502	2-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4503	3-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4504	4-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4505	5-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4506	6-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4507	7-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4508	8-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4509	9-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4510	10-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4511	11-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4512	12-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4513	13-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4514	14-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4515	15-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4516	16-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4517	17-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4518	18-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4519	19-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4520	20-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4521	21-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4522	22-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4523	23-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4524	24-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4525	25-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4526	26-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4527	27-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4528	28-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4529	29-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4530	30-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4531	31-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4532	32-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4533	33-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4534	34-WAY CP7 TO 52-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6752<4535	35-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4536	36-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4537	37-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4538	38-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4539	39-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4540	40-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4541	41-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4542	42-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4543	43-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4544	44-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4545	45-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4546	46-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4547	47-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4548	48-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4549	49-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4550	50-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4551	51-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4552	52-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4553	53-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4554	54-WAY CP7 TO 52-WAY CP7	*Call
2097<2094		6752<4601	1-WAY CP6 TO 52-WAY CP7	*Call
2097<2094		6752<4602	2-WAY CP6 TO 52-WAY CP7	*Call
2097<2094		6752<4603	3-WAY CP6 TO 52-WAY CP7	*Call
2097<2094		6752<4604	4-WAY CP6 TO 52-WAY CP7	*Call
2097<2094		6752<4605	5-WAY CP6 TO 52-WAY CP7	*Call
2097<2094		6752<4606	6-WAY CP6 TO 52-WAY CP7	*Call
2097<2094		6752<4607	7-WAY CP6 TO 52-WAY CP7	*Call
2097<2094		6752<4608	8-WAY CP6 TO 52-WAY CP7	*Call
2097<2094		6752<4701	1-WAY CP5 TO 52-WAY CP7	*Call
2097<2094		6752<4702	2-WAY CP5 TO 52-WAY CP7	*Call
2097<2094		6752<4703	3-WAY CP5 TO 52-WAY CP7	*Call
2097<2094		6752<4704	4-WAY CP5 TO 52-WAY CP7	*Call
2097<2094		6752<4705	5-WAY CP5 TO 52-WAY CP7	*Call
2097<2094		6752<4706	6-WAY CP5 TO 52-WAY CP7	*Call
2097<2094		6752<4707	7-WAY CP5 TO 52-WAY CP7	*Call
2097<2094		6752<4708	8-WAY CP5 TO 52-WAY CP7	*Call
2097<2094		6752<4801	1-WAY CP4 TO 52-WAY CP7	*Call
2097<2094		6752<4802	2-WAY CP4 TO 52-WAY CP7	*Call
2097<2094		6752<4803	3-WAY CP4 TO 52-WAY CP7	*Call
2097<2094		6752<4804	4-WAY CP4 TO 52-WAY CP7	*Call
2097<2094		6752<4805	5-WAY CP4 TO 52-WAY CP7	*Call
2097<2094		6752<4806	6-WAY CP4 TO 52-WAY CP7	*Call
2097<2094		6752<4807	7-WAY CP4 TO 52-WAY CP7	*Call
2097<2094		6752<4808	8-WAY CP4 TO 52-WAY CP7	*Call
2097<2094		6753<4500	0-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4501	1-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4502	2-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4503	3-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4504	4-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4505	5-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4506	6-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4507	7-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4508	8-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4509	9-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4510	10-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4511	11-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4512	12-WAY CP7 TO 53-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6753<4513	13-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4514	14-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4515	15-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4516	16-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4517	17-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4518	18-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4519	19-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4520	20-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4521	21-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4522	22-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4523	23-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4524	24-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4525	25-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4526	26-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4527	27-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4528	28-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4529	29-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4530	30-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4531	31-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4532	32-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4533	33-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4534	34-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4535	35-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4536	36-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4537	37-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4538	38-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4539	39-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4540	40-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4541	41-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4542	42-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4543	43-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4544	44-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4545	45-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4546	46-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4547	47-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4548	48-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4549	49-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4550	50-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4551	51-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4552	52-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4553	53-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4554	54-WAY CP7 TO 53-WAY CP7	*Call
2097<2094		6753<4601	1-WAY CP6 TO 53-WAY CP7	*Call
2097<2094		6753<4602	2-WAY CP6 TO 53-WAY CP7	*Call
2097<2094		6753<4603	3-WAY CP6 TO 53-WAY CP7	*Call
2097<2094		6753<4604	4-WAY CP6 TO 53-WAY CP7	*Call
2097<2094		6753<4605	5-WAY CP6 TO 53-WAY CP7	*Call
2097<2094		6753<4606	6-WAY CP6 TO 53-WAY CP7	*Call
2097<2094		6753<4607	7-WAY CP6 TO 53-WAY CP7	*Call
2097<2094		6753<4608	8-WAY CP6 TO 53-WAY CP7	*Call
2097<2094		6753<4701	1-WAY CP5 TO 53-WAY CP7	*Call
2097<2094		6753<4702	2-WAY CP5 TO 53-WAY CP7	*Call
2097<2094		6753<4703	3-WAY CP5 TO 53-WAY CP7	*Call
2097<2094		6753<4704	4-WAY CP5 TO 53-WAY CP7	*Call
2097<2094		6753<4705	5-WAY CP5 TO 53-WAY CP7	*Call
2097<2094		6753<4706	6-WAY CP5 TO 53-WAY CP7	*Call
2097<2094		6753<4707	7-WAY CP5 TO 53-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6753<4708	8-WAY CP5 TO 53-WAY CP7	*Call
2097<2094		6753<4801	1-WAY CP4 TO 53-WAY CP7	*Call
2097<2094		6753<4802	2-WAY CP4 TO 53-WAY CP7	*Call
2097<2094		6753<4803	3-WAY CP4 TO 53-WAY CP7	*Call
2097<2094		6753<4804	4-WAY CP4 TO 53-WAY CP7	*Call
2097<2094		6753<4805	5-WAY CP4 TO 53-WAY CP7	*Call
2097<2094		6753<4806	6-WAY CP4 TO 53-WAY CP7	*Call
2097<2094		6753<4807	7-WAY CP4 TO 53-WAY CP7	*Call
2097<2094		6753<4808	8-WAY CP4 TO 53-WAY CP7	*Call
2097<2094		6754<4500	0-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4501	1-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4502	2-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4503	3-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4504	4-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4505	5-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4506	6-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4507	7-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4508	8-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4509	9-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4510	10-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4511	11-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4512	12-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4513	13-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4514	14-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4515	15-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4516	16-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4517	17-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4518	18-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4519	19-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4520	20-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4521	21-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4522	22-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4523	23-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4524	24-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4525	25-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4526	26-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4527	27-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4528	28-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4529	29-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4530	30-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4531	31-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4532	32-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4533	33-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4534	34-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4535	35-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4536	36-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4537	37-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4538	38-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4539	39-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4540	40-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4541	41-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4542	42-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4543	43-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4544	44-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4545	45-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4546	46-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4547	47-WAY CP7 TO 54-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6754<4548	48-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4549	49-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4550	50-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4551	51-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4552	52-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4553	53-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4554	54-WAY CP7 TO 54-WAY CP7	*Call
2097<2094		6754<4601	1-WAY CP6 TO 54-WAY CP7	*Call
2097<2094		6754<4602	2-WAY CP6 TO 54-WAY CP7	*Call
2097<2094		6754<4603	3-WAY CP6 TO 54-WAY CP7	*Call
2097<2094		6754<4604	4-WAY CP6 TO 54-WAY CP7	*Call
2097<2094		6754<4605	5-WAY CP6 TO 54-WAY CP7	*Call
2097<2094		6754<4606	6-WAY CP6 TO 54-WAY CP7	*Call
2097<2094		6754<4607	7-WAY CP6 TO 54-WAY CP7	*Call
2097<2094		6754<4608	8-WAY CP6 TO 54-WAY CP7	*Call
2097<2094		6754<4701	1-WAY CP5 TO 54-WAY CP7	*Call
2097<2094		6754<4702	2-WAY CP5 TO 54-WAY CP7	*Call
2097<2094		6754<4703	3-WAY CP5 TO 54-WAY CP7	*Call
2097<2094		6754<4704	4-WAY CP5 TO 54-WAY CP7	*Call
2097<2094		6754<4705	5-WAY CP5 TO 54-WAY CP7	*Call
2097<2094		6754<4706	6-WAY CP5 TO 54-WAY CP7	*Call
2097<2094		6754<4707	7-WAY CP5 TO 54-WAY CP7	*Call
2097<2094		6754<4708	8-WAY CP5 TO 54-WAY CP7	*Call
2097<2094		6754<4801	1-WAY CP4 TO 54-WAY CP7	*Call
2097<2094		6754<4802	2-WAY CP4 TO 54-WAY CP7	*Call
2097<2094		6754<4803	3-WAY CP4 TO 54-WAY CP7	*Call
2097<2094		6754<4804	4-WAY CP4 TO 54-WAY CP7	*Call
2097<2094		6754<4805	5-WAY CP4 TO 54-WAY CP7	*Call
2097<2094		6754<4806	6-WAY CP4 TO 54-WAY CP7	*Call
2097<2094		6754<4807	7-WAY CP4 TO 54-WAY CP7	*Call
2097<2094		6754<4808	8-WAY CP4 TO 54-WAY CP7	*Call
2097<2094		6755<4500	0-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4501	1-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4502	2-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4503	3-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4504	4-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4505	5-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4506	6-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4507	7-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4508	8-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4509	9-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4510	10-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4511	11-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4512	12-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4513	13-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4514	14-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4515	15-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4516	16-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4517	17-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4518	18-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4519	19-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4520	20-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4521	21-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4522	22-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4523	23-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4524	24-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4525	25-WAY CP7 TO 55-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6755<4526	26-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4527	27-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4528	28-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4529	29-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4530	30-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4531	31-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4532	32-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4533	33-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4534	34-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4535	35-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4536	36-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4537	37-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4538	38-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4539	39-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4540	40-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4541	41-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4542	42-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4543	43-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4544	44-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4545	45-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4546	46-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4547	47-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4548	48-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4549	49-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4550	50-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4551	51-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4552	52-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4553	53-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4554	54-WAY CP7 TO 55-WAY CP7	*Call
2097<2094		6755<4601	1-WAY CP6 TO 55-WAY CP7	*Call
2097<2094		6755<4602	2-WAY CP6 TO 55-WAY CP7	*Call
2097<2094		6755<4603	3-WAY CP6 TO 55-WAY CP7	*Call
2097<2094		6755<4604	4-WAY CP6 TO 55-WAY CP7	*Call
2097<2094		6755<4605	5-WAY CP6 TO 55-WAY CP7	*Call
2097<2094		6755<4606	6-WAY CP6 TO 55-WAY CP7	*Call
2097<2094		6755<4607	7-WAY CP6 TO 55-WAY CP7	*Call
2097<2094		6755<4608	8-WAY CP6 TO 55-WAY CP7	*Call
2097<2094		6755<4701	1-WAY CP5 TO 55-WAY CP7	*Call
2097<2094		6755<4702	2-WAY CP5 TO 55-WAY CP7	*Call
2097<2094		6755<4703	3-WAY CP5 TO 55-WAY CP7	*Call
2097<2094		6755<4704	4-WAY CP5 TO 55-WAY CP7	*Call
2097<2094		6755<4705	5-WAY CP5 TO 55-WAY CP7	*Call
2097<2094		6755<4706	6-WAY CP5 TO 55-WAY CP7	*Call
2097<2094		6755<4707	7-WAY CP5 TO 55-WAY CP7	*Call
2097<2094		6755<4708	8-WAY CP5 TO 55-WAY CP7	*Call
2097<2094		6755<4801	1-WAY CP4 TO 55-WAY CP7	*Call
2097<2094		6755<4802	2-WAY CP4 TO 55-WAY CP7	*Call
2097<2094		6755<4803	3-WAY CP4 TO 55-WAY CP7	*Call
2097<2094		6755<4804	4-WAY CP4 TO 55-WAY CP7	*Call
2097<2094		6755<4805	5-WAY CP4 TO 55-WAY CP7	*Call
2097<2094		6755<4806	6-WAY CP4 TO 55-WAY CP7	*Call
2097<2094		6755<4807	7-WAY CP4 TO 55-WAY CP7	*Call
2097<2094		6755<4808	8-WAY CP4 TO 55-WAY CP7	*Call
2097<2094		6756<4500	0-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4501	1-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4502	2-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4503	3-WAY CP7 TO 56-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6756<4504	4-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4505	5-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4506	6-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4507	7-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4508	8-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4509	9-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4510	10-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4511	11-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4512	12-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4513	13-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4514	14-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4515	15-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4516	16-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4517	17-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4518	18-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4519	19-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4520	20-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4521	21-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4522	22-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4523	23-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4524	24-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4525	25-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4526	26-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4527	27-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4528	28-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4529	29-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4530	30-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4531	31-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4532	32-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4533	33-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4534	34-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4535	35-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4536	36-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4537	37-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4538	38-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4539	39-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4540	40-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4541	41-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4542	42-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4543	43-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4544	44-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4545	45-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4546	46-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4547	47-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4548	48-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4549	49-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4550	50-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4551	51-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4552	52-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4553	53-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4554	54-WAY CP7 TO 56-WAY CP7	*Call
2097<2094		6756<4601	1-WAY CP6 TO 56-WAY CP7	*Call
2097<2094		6756<4602	2-WAY CP6 TO 56-WAY CP7	*Call
2097<2094		6756<4603	3-WAY CP6 TO 56-WAY CP7	*Call
2097<2094		6756<4604	4-WAY CP6 TO 56-WAY CP7	*Call
2097<2094		6756<4605	5-WAY CP6 TO 56-WAY CP7	*Call
2097<2094		6756<4606	6-WAY CP6 TO 56-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6756<4607	7-WAY CP6 TO 56-WAY CP7	*Call
2097<2094		6756<4608	8-WAY CP6 TO 56-WAY CP7	*Call
2097<2094		6756<4701	1-WAY CP5 TO 56-WAY CP7	*Call
2097<2094		6756<4702	2-WAY CP5 TO 56-WAY CP7	*Call
2097<2094		6756<4703	3-WAY CP5 TO 56-WAY CP7	*Call
2097<2094		6756<4704	4-WAY CP5 TO 56-WAY CP7	*Call
2097<2094		6756<4705	5-WAY CP5 TO 56-WAY CP7	*Call
2097<2094		6756<4706	6-WAY CP5 TO 56-WAY CP7	*Call
2097<2094		6756<4707	7-WAY CP5 TO 56-WAY CP7	*Call
2097<2094		6756<4708	8-WAY CP5 TO 56-WAY CP7	*Call
2097<2094		6756<4801	1-WAY CP4 TO 56-WAY CP7	*Call
2097<2094		6756<4802	2-WAY CP4 TO 56-WAY CP7	*Call
2097<2094		6756<4803	3-WAY CP4 TO 56-WAY CP7	*Call
2097<2094		6756<4804	4-WAY CP4 TO 56-WAY CP7	*Call
2097<2094		6756<4805	5-WAY CP4 TO 56-WAY CP7	*Call
2097<2094		6756<4806	6-WAY CP4 TO 56-WAY CP7	*Call
2097<2094		6756<4807	7-WAY CP4 TO 56-WAY CP7	*Call
2097<2094		6756<4808	8-WAY CP4 TO 56-WAY CP7	*Call
2097<2094		6757<4500	0-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4501	1-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4502	2-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4503	3-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4504	4-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4505	5-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4506	6-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4507	7-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4508	8-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4509	9-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4510	10-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4511	11-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4512	12-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4513	13-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4514	14-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4515	15-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4516	16-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4517	17-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4518	18-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4519	19-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4520	20-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4521	21-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4522	22-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4523	23-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4524	24-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4525	25-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4526	26-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4527	27-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4528	28-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4529	29-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4530	30-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4531	31-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4532	32-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4533	33-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4534	34-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4535	35-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4536	36-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4537	37-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4538	38-WAY CP7 TO 57-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6757<4539	39-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4540	40-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4541	41-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4542	42-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4543	43-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4544	44-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4545	45-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4546	46-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4547	47-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4548	48-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4549	49-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4550	50-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4551	51-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4552	52-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4553	53-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4554	54-WAY CP7 TO 57-WAY CP7	*Call
2097<2094		6757<4601	1-WAY CP6 TO 57-WAY CP7	*Call
2097<2094		6757<4602	2-WAY CP6 TO 57-WAY CP7	*Call
2097<2094		6757<4603	3-WAY CP6 TO 57-WAY CP7	*Call
2097<2094		6757<4604	4-WAY CP6 TO 57-WAY CP7	*Call
2097<2094		6757<4605	5-WAY CP6 TO 57-WAY CP7	*Call
2097<2094		6757<4606	6-WAY CP6 TO 57-WAY CP7	*Call
2097<2094		6757<4607	7-WAY CP6 TO 57-WAY CP7	*Call
2097<2094		6757<4608	8-WAY CP6 TO 57-WAY CP7	*Call
2097<2094		6757<4701	1-WAY CP5 TO 57-WAY CP7	*Call
2097<2094		6757<4702	2-WAY CP5 TO 57-WAY CP7	*Call
2097<2094		6757<4703	3-WAY CP5 TO 57-WAY CP7	*Call
2097<2094		6757<4704	4-WAY CP5 TO 57-WAY CP7	*Call
2097<2094		6757<4705	5-WAY CP5 TO 57-WAY CP7	*Call
2097<2094		6757<4706	6-WAY CP5 TO 57-WAY CP7	*Call
2097<2094		6757<4707	7-WAY CP5 TO 57-WAY CP7	*Call
2097<2094		6757<4708	8-WAY CP5 TO 57-WAY CP7	*Call
2097<2094		6757<4801	1-WAY CP4 TO 57-WAY CP7	*Call
2097<2094		6757<4802	2-WAY CP4 TO 57-WAY CP7	*Call
2097<2094		6757<4803	3-WAY CP4 TO 57-WAY CP7	*Call
2097<2094		6757<4804	4-WAY CP4 TO 57-WAY CP7	*Call
2097<2094		6757<4805	5-WAY CP4 TO 57-WAY CP7	*Call
2097<2094		6757<4806	6-WAY CP4 TO 57-WAY CP7	*Call
2097<2094		6757<4807	7-WAY CP4 TO 57-WAY CP7	*Call
2097<2094		6757<4808	8-WAY CP4 TO 57-WAY CP7	*Call
2097<2094		6758<4500	0-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4501	1-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4502	2-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4503	3-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4504	4-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4505	5-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4506	6-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4507	7-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4508	8-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4509	9-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4510	10-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4511	11-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4512	12-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4513	13-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4514	14-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4515	15-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4516	16-WAY CP7 TO 58-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6758<4517	17-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4518	18-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4519	19-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4520	20-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4521	21-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4522	22-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4523	23-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4524	24-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4525	25-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4526	26-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4527	27-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4528	28-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4529	29-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4530	30-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4531	31-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4532	32-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4533	33-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4534	34-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4535	35-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4536	36-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4537	37-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4538	38-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4539	39-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4540	40-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4541	41-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4542	42-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4543	43-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4544	44-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4545	45-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4546	46-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4547	47-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4548	48-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4549	49-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4550	50-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4551	51-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4552	52-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4553	53-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4554	54-WAY CP7 TO 58-WAY CP7	*Call
2097<2094		6758<4601	1-WAY CP6 TO 58-WAY CP7	*Call
2097<2094		6758<4602	2-WAY CP6 TO 58-WAY CP7	*Call
2097<2094		6758<4603	3-WAY CP6 TO 58-WAY CP7	*Call
2097<2094		6758<4604	4-WAY CP6 TO 58-WAY CP7	*Call
2097<2094		6758<4605	5-WAY CP6 TO 58-WAY CP7	*Call
2097<2094		6758<4606	6-WAY CP6 TO 58-WAY CP7	*Call
2097<2094		6758<4607	7-WAY CP6 TO 58-WAY CP7	*Call
2097<2094		6758<4608	8-WAY CP6 TO 58-WAY CP7	*Call
2097<2094		6758<4701	1-WAY CP5 TO 58-WAY CP7	*Call
2097<2094		6758<4702	2-WAY CP5 TO 58-WAY CP7	*Call
2097<2094		6758<4703	3-WAY CP5 TO 58-WAY CP7	*Call
2097<2094		6758<4704	4-WAY CP5 TO 58-WAY CP7	*Call
2097<2094		6758<4705	5-WAY CP5 TO 58-WAY CP7	*Call
2097<2094		6758<4706	6-WAY CP5 TO 58-WAY CP7	*Call
2097<2094		6758<4707	7-WAY CP5 TO 58-WAY CP7	*Call
2097<2094		6758<4708	8-WAY CP5 TO 58-WAY CP7	*Call
2097<2094		6758<4801	1-WAY CP4 TO 58-WAY CP7	*Call
2097<2094		6758<4802	2-WAY CP4 TO 58-WAY CP7	*Call
2097<2094		6758<4803	3-WAY CP4 TO 58-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6758<4804	4-WAY CP4 TO 58-WAY CP7	*Call
2097<2094		6758<4805	5-WAY CP4 TO 58-WAY CP7	*Call
2097<2094		6758<4806	6-WAY CP4 TO 58-WAY CP7	*Call
2097<2094		6758<4807	7-WAY CP4 TO 58-WAY CP7	*Call
2097<2094		6758<4808	8-WAY CP4 TO 58-WAY CP7	*Call
2097<2094		6759<4500	0-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4501	1-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4502	2-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4503	3-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4504	4-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4505	5-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4506	6-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4507	7-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4508	8-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4509	9-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4510	10-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4511	11-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4512	12-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4513	13-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4514	14-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4515	15-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4516	16-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4517	17-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4518	18-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4519	19-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4520	20-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4521	21-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4522	22-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4523	23-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4524	24-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4525	25-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4526	26-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4527	27-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4528	28-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4529	29-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4530	30-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4531	31-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4532	32-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4533	33-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4534	34-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4535	35-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4536	36-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4537	37-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4538	38-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4539	39-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4540	40-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4541	41-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4542	42-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4543	43-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4544	44-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4545	45-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4546	46-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4547	47-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4548	48-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4549	49-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4550	50-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4551	51-WAY CP7 TO 59-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6759<4552	52-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4553	53-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4554	54-WAY CP7 TO 59-WAY CP7	*Call
2097<2094		6759<4601	1-WAY CP6 TO 59-WAY CP7	*Call
2097<2094		6759<4602	2-WAY CP6 TO 59-WAY CP7	*Call
2097<2094		6759<4603	3-WAY CP6 TO 59-WAY CP7	*Call
2097<2094		6759<4604	4-WAY CP6 TO 59-WAY CP7	*Call
2097<2094		6759<4605	5-WAY CP6 TO 59-WAY CP7	*Call
2097<2094		6759<4606	6-WAY CP6 TO 59-WAY CP7	*Call
2097<2094		6759<4607	7-WAY CP6 TO 59-WAY CP7	*Call
2097<2094		6759<4608	8-WAY CP6 TO 59-WAY CP7	*Call
2097<2094		6759<4701	1-WAY CP5 TO 59-WAY CP7	*Call
2097<2094		6759<4702	2-WAY CP5 TO 59-WAY CP7	*Call
2097<2094		6759<4703	3-WAY CP5 TO 59-WAY CP7	*Call
2097<2094		6759<4704	4-WAY CP5 TO 59-WAY CP7	*Call
2097<2094		6759<4705	5-WAY CP5 TO 59-WAY CP7	*Call
2097<2094		6759<4706	6-WAY CP5 TO 59-WAY CP7	*Call
2097<2094		6759<4707	7-WAY CP5 TO 59-WAY CP7	*Call
2097<2094		6759<4708	8-WAY CP5 TO 59-WAY CP7	*Call
2097<2094		6759<4801	1-WAY CP4 TO 59-WAY CP7	*Call
2097<2094		6759<4802	2-WAY CP4 TO 59-WAY CP7	*Call
2097<2094		6759<4803	3-WAY CP4 TO 59-WAY CP7	*Call
2097<2094		6759<4804	4-WAY CP4 TO 59-WAY CP7	*Call
2097<2094		6759<4805	5-WAY CP4 TO 59-WAY CP7	*Call
2097<2094		6759<4806	6-WAY CP4 TO 59-WAY CP7	*Call
2097<2094		6759<4807	7-WAY CP4 TO 59-WAY CP7	*Call
2097<2094		6759<4808	8-WAY CP4 TO 59-WAY CP7	*Call
2097<2094		6760<4500	0-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4501	1-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4502	2-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4503	3-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4504	4-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4505	5-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4506	6-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4507	7-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4508	8-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4509	9-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4510	10-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4511	11-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4512	12-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4513	13-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4514	14-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4515	15-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4516	16-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4517	17-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4518	18-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4519	19-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4520	20-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4521	21-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4522	22-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4523	23-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4524	24-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4525	25-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4526	26-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4527	27-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4528	28-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4529	29-WAY CP7 TO 60-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6760<4530	30-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4531	31-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4532	32-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4533	33-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4534	34-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4535	35-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4536	36-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4537	37-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4538	38-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4539	39-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4540	40-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4541	41-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4542	42-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4543	43-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4544	44-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4545	45-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4546	46-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4547	47-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4548	48-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4549	49-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4550	50-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4551	51-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4552	52-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4553	53-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4554	54-WAY CP7 TO 60-WAY CP7	*Call
2097<2094		6760<4601	1-WAY CP6 TO 60-WAY CP7	*Call
2097<2094		6760<4602	2-WAY CP6 TO 60-WAY CP7	*Call
2097<2094		6760<4603	3-WAY CP6 TO 60-WAY CP7	*Call
2097<2094		6760<4604	4-WAY CP6 TO 60-WAY CP7	*Call
2097<2094		6760<4605	5-WAY CP6 TO 60-WAY CP7	*Call
2097<2094		6760<4606	6-WAY CP6 TO 60-WAY CP7	*Call
2097<2094		6760<4607	7-WAY CP6 TO 60-WAY CP7	*Call
2097<2094		6760<4608	8-WAY CP6 TO 60-WAY CP7	*Call
2097<2094		6760<4701	1-WAY CP5 TO 60-WAY CP7	*Call
2097<2094		6760<4702	2-WAY CP5 TO 60-WAY CP7	*Call
2097<2094		6760<4703	3-WAY CP5 TO 60-WAY CP7	*Call
2097<2094		6760<4704	4-WAY CP5 TO 60-WAY CP7	*Call
2097<2094		6760<4705	5-WAY CP5 TO 60-WAY CP7	*Call
2097<2094		6760<4706	6-WAY CP5 TO 60-WAY CP7	*Call
2097<2094		6760<4707	7-WAY CP5 TO 60-WAY CP7	*Call
2097<2094		6760<4708	8-WAY CP5 TO 60-WAY CP7	*Call
2097<2094		6760<4801	1-WAY CP4 TO 60-WAY CP7	*Call
2097<2094		6760<4802	2-WAY CP4 TO 60-WAY CP7	*Call
2097<2094		6760<4803	3-WAY CP4 TO 60-WAY CP7	*Call
2097<2094		6760<4804	4-WAY CP4 TO 60-WAY CP7	*Call
2097<2094		6760<4805	5-WAY CP4 TO 60-WAY CP7	*Call
2097<2094		6760<4806	6-WAY CP4 TO 60-WAY CP7	*Call
2097<2094		6760<4807	7-WAY CP4 TO 60-WAY CP7	*Call
2097<2094		6760<4808	8-WAY CP4 TO 60-WAY CP7	*Call
2097<2094		6761<4500	0-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4501	1-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4502	2-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4503	3-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4504	4-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4505	5-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4506	6-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4507	7-WAY CP7 TO 61-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6761<4508	8-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4509	9-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4510	10-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4511	11-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4512	12-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4513	13-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4514	14-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4515	15-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4516	16-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4517	17-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4518	18-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4519	19-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4520	20-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4521	21-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4522	22-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4523	23-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4524	24-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4525	25-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4526	26-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4527	27-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4528	28-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4529	29-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4530	30-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4531	31-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4532	32-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4533	33-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4534	34-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4535	35-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4536	36-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4537	37-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4538	38-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4539	39-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4540	40-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4541	41-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4542	42-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4543	43-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4544	44-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4545	45-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4546	46-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4547	47-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4548	48-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4549	49-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4550	50-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4551	51-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4552	52-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4553	53-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4554	54-WAY CP7 TO 61-WAY CP7	*Call
2097<2094		6761<4601	1-WAY CP6 TO 61-WAY CP7	*Call
2097<2094		6761<4602	2-WAY CP6 TO 61-WAY CP7	*Call
2097<2094		6761<4603	3-WAY CP6 TO 61-WAY CP7	*Call
2097<2094		6761<4604	4-WAY CP6 TO 61-WAY CP7	*Call
2097<2094		6761<4605	5-WAY CP6 TO 61-WAY CP7	*Call
2097<2094		6761<4606	6-WAY CP6 TO 61-WAY CP7	*Call
2097<2094		6761<4607	7-WAY CP6 TO 61-WAY CP7	*Call
2097<2094		6761<4608	8-WAY CP6 TO 61-WAY CP7	*Call
2097<2094		6761<4701	1-WAY CP5 TO 61-WAY CP7	*Call
2097<2094		6761<4702	2-WAY CP5 TO 61-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6761<4703	3-WAY CP5 TO 61-WAY CP7	*Call
2097<2094		6761<4704	4-WAY CP5 TO 61-WAY CP7	*Call
2097<2094		6761<4705	5-WAY CP5 TO 61-WAY CP7	*Call
2097<2094		6761<4706	6-WAY CP5 TO 61-WAY CP7	*Call
2097<2094		6761<4707	7-WAY CP5 TO 61-WAY CP7	*Call
2097<2094		6761<4708	8-WAY CP5 TO 61-WAY CP7	*Call
2097<2094		6761<4801	1-WAY CP4 TO 61-WAY CP7	*Call
2097<2094		6761<4802	2-WAY CP4 TO 61-WAY CP7	*Call
2097<2094		6761<4803	3-WAY CP4 TO 61-WAY CP7	*Call
2097<2094		6761<4804	4-WAY CP4 TO 61-WAY CP7	*Call
2097<2094		6761<4805	5-WAY CP4 TO 61-WAY CP7	*Call
2097<2094		6761<4806	6-WAY CP4 TO 61-WAY CP7	*Call
2097<2094		6761<4807	7-WAY CP4 TO 61-WAY CP7	*Call
2097<2094		6761<4808	8-WAY CP4 TO 61-WAY CP7	*Call
2097<2094		6762<4500	0-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4501	1-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4502	2-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4503	3-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4504	4-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4505	5-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4506	6-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4507	7-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4508	8-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4509	9-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4510	10-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4511	11-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4512	12-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4513	13-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4514	14-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4515	15-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4516	16-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4517	17-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4518	18-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4519	19-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4520	20-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4521	21-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4522	22-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4523	23-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4524	24-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4525	25-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4526	26-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4527	27-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4528	28-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4529	29-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4530	30-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4531	31-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4532	32-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4533	33-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4534	34-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4535	35-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4536	36-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4537	37-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4538	38-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4539	39-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4540	40-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4541	41-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4542	42-WAY CP7 TO 62-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6762<4543	43-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4544	44-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4545	45-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4546	46-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4547	47-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4548	48-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4549	49-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4550	50-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4551	51-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4552	52-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4553	53-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4554	54-WAY CP7 TO 62-WAY CP7	*Call
2097<2094		6762<4601	1-WAY CP6 TO 62-WAY CP7	*Call
2097<2094		6762<4602	2-WAY CP6 TO 62-WAY CP7	*Call
2097<2094		6762<4603	3-WAY CP6 TO 62-WAY CP7	*Call
2097<2094		6762<4604	4-WAY CP6 TO 62-WAY CP7	*Call
2097<2094		6762<4605	5-WAY CP6 TO 62-WAY CP7	*Call
2097<2094		6762<4606	6-WAY CP6 TO 62-WAY CP7	*Call
2097<2094		6762<4607	7-WAY CP6 TO 62-WAY CP7	*Call
2097<2094		6762<4608	8-WAY CP6 TO 62-WAY CP7	*Call
2097<2094		6762<4701	1-WAY CP5 TO 62-WAY CP7	*Call
2097<2094		6762<4702	2-WAY CP5 TO 62-WAY CP7	*Call
2097<2094		6762<4703	3-WAY CP5 TO 62-WAY CP7	*Call
2097<2094		6762<4704	4-WAY CP5 TO 62-WAY CP7	*Call
2097<2094		6762<4705	5-WAY CP5 TO 62-WAY CP7	*Call
2097<2094		6762<4706	6-WAY CP5 TO 62-WAY CP7	*Call
2097<2094		6762<4707	7-WAY CP5 TO 62-WAY CP7	*Call
2097<2094		6762<4708	8-WAY CP5 TO 62-WAY CP7	*Call
2097<2094		6762<4801	1-WAY CP4 TO 62-WAY CP7	*Call
2097<2094		6762<4802	2-WAY CP4 TO 62-WAY CP7	*Call
2097<2094		6762<4803	3-WAY CP4 TO 62-WAY CP7	*Call
2097<2094		6762<4804	4-WAY CP4 TO 62-WAY CP7	*Call
2097<2094		6762<4805	5-WAY CP4 TO 62-WAY CP7	*Call
2097<2094		6762<4806	6-WAY CP4 TO 62-WAY CP7	*Call
2097<2094		6762<4807	7-WAY CP4 TO 62-WAY CP7	*Call
2097<2094		6762<4808	8-WAY CP4 TO 62-WAY CP7	*Call
2097<2094		6763<4500	0-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4501	1-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4502	2-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4503	3-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4504	4-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4505	5-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4506	6-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4507	7-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4508	8-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4509	9-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4510	10-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4511	11-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4512	12-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4513	13-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4514	14-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4515	15-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4516	16-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4517	17-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4518	18-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4519	19-WAY CP7 TO 63-WAY CP7	*Call
2097<2094		6763<4520	20-WAY CP7 TO 63-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6763<4808	8-WAY CP4 TO 63-WAY CP7	*Call
2097<2094		6764<4500	0-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4501	1-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4502	2-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4503	3-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4504	4-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4505	5-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4506	6-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4507	7-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4508	8-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4509	9-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4510	10-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4511	11-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4512	12-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4513	13-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4514	14-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4515	15-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4516	16-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4517	17-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4518	18-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4519	19-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4520	20-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4521	21-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4522	22-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4523	23-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4524	24-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4525	25-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4526	26-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4527	27-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4528	28-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4529	29-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4530	30-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4531	31-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4532	32-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4533	33-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4534	34-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4535	35-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4536	36-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4537	37-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4538	38-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4539	39-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4540	40-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4541	41-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4542	42-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4543	43-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4544	44-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4545	45-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4546	46-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4547	47-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4548	48-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4549	49-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4550	50-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4551	51-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4552	52-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4553	53-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4554	54-WAY CP7 TO 64-WAY CP7	*Call
2097<2094		6764<4601	1-WAY CP6 TO 64-WAY CP7	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6764<4602	2-WAY CP6 TO 64-WAY CP7	*Call
2097<2094		6764<4603	3-WAY CP6 TO 64-WAY CP7	*Call
2097<2094		6764<4604	4-WAY CP6 TO 64-WAY CP7	*Call
2097<2094		6764<4605	5-WAY CP6 TO 64-WAY CP7	*Call
2097<2094		6764<4606	6-WAY CP6 TO 64-WAY CP7	*Call
2097<2094		6764<4607	7-WAY CP6 TO 64-WAY CP7	*Call
2097<2094		6764<4608	8-WAY CP6 TO 64-WAY CP7	*Call
2097<2094		6764<4701	1-WAY CP5 TO 64-WAY CP7	*Call
2097<2094		6764<4702	2-WAY CP5 TO 64-WAY CP7	*Call
2097<2094		6764<4703	3-WAY CP5 TO 64-WAY CP7	*Call
2097<2094		6764<4704	4-WAY CP5 TO 64-WAY CP7	*Call
2097<2094		6764<4705	5-WAY CP5 TO 64-WAY CP7	*Call
2097<2094		6764<4706	6-WAY CP5 TO 64-WAY CP7	*Call
2097<2094		6764<4707	7-WAY CP5 TO 64-WAY CP7	*Call
2097<2094		6764<4708	8-WAY CP5 TO 64-WAY CP7	*Call
2097<2094		6764<4801	1-WAY CP4 TO 64-WAY CP7	*Call
2097<2094		6764<4802	2-WAY CP4 TO 64-WAY CP7	*Call
2097<2094		6764<4803	3-WAY CP4 TO 64-WAY CP7	*Call
2097<2094		6764<4804	4-WAY CP4 TO 64-WAY CP7	*Call
2097<2094		6764<4805	5-WAY CP4 TO 64-WAY CP7	*Call
2097<2094		6764<4806	6-WAY CP4 TO 64-WAY CP7	*Call
2097<2094		6764<4807	7-WAY CP4 TO 64-WAY CP7	*Call
2097<2094		6764<4808	8-WAY CP4 TO 64-WAY CP7	*Call
2097<2094		6807<7811	IFL TO CP4	*Call
2097<2094		6807<7812	ICF TO CP4	*Call
2097<2094		6807<7814	ZAAP TO CP4	*Call
2097<2094		6807<7815	ZIIP TO CP4	*Call
2097<2094		6807<7831	UIFL TO CP4	*Call
2097<2094		6808<7811	IFL TO CP5	*Call
2097<2094		6808<7812	ICF TO CP5	*Call
2097<2094		6808<7814	ZAAP TO CP5	*Call
2097<2094		6808<7815	ZIIP TO CP5	*Call
2097<2094		6808<7831	UIFL TO CP5	*Call
2097<2094		6809<7811	IFL TO CP6	*Call
2097<2094		6809<7812	ICF TO CP6	*Call
2097<2094		6809<7814	ZAAP TO CP6	*Call
2097<2094		6809<7815	ZIIP TO CP6	*Call
2097<2094		6809<7831	UIFL TO CP6	*Call
2097<2094		6810<7811	IFL TO CP7	*Call
2097<2094		6810<7812	ICF TO CP7	*Call
2097<2094		6810<7814	ZAAP TO CP7	*Call
2097<2094		6810<7815	ZIIP TO CP7	*Call
2097<2094		6810<7831	UIFL TO CP7	*Call
2097<2094		6811<7812	ICF TO IFL	*Call
2097<2094		6811<7814	ZAAP TO IFL	*Call
2097<2094		6811<7815	ZIIP TO IFL	*Call
2097<2094		6812<7811	IFL TO ICF	*Call
2097<2094		6812<7814	ZAAP TO ICF	*Call
2097<2094		6812<7815	ZIIP TO ICF	*Call
2097<2094		6812<7831	UIFL TO ICF	*Call
2097<2094		6814<7811	IFL TO ZAAP	*Call
2097<2094		6814<7812	ICF TO ZAAP	*Call
2097<2094		6814<7815	ZIIP TO ZAAP	*Call
2097<2094		6814<7831	UIFL TO ZAAP	*Call
2097<2094		6815<7811	IFL TO ZIIP	*Call
2097<2094		6815<7812	ICF TO ZIIP	*Call
2097<2094		6815<7814	ZAAP TO ZIIP	*Call

Machine Type	Model	Feature	Description	GSA Price
2097<2094		6815<7831	UIFL TO ZIIP	*Call
2097<2098		1117<1123	E10 TO E12	*Call
2097<2098		6811<6651	ICF TO IFL	*Call
2097<2098		6811<6652	ADDL SAP TO IFL	*Call
2097<2098		6811<6653	ZAAP TO IFL	*Call
2097<2098		6811<6654	ZIIP TO IFL	*Call
2097<2098		6812<6650	IFL TO ICF	*Call
2097<2098		6812<6652	ADDL SAP TO ICF	*Call
2097<2098		6812<6653	ZAAP TO ICF	*Call
2097<2098		6812<6654	ZIIP TO ICF	*Call
2097<2098		6812<6655	UIFL TO ICF	*Call
2097<2098		6813<6650	IFL TO ADDL SAP	*Call
2097<2098		6813<6651	ICF TO ADDL SAP	*Call
2097<2098		6813<6653	ZAAP TO ADDL SAP	*Call
2097<2098		6813<6654	ZIIP TO ADDL SAP	*Call
2097<2098		6813<6655	UIFL TO ADDL SAP	*Call
2097<2098		6814<6650	IFL TO ZAAP	*Call
2097<2098		6814<6651	ICF TO ZAAP	*Call
2097<2098		6814<6652	ADDL SAP TO ZAAP	*Call
2097<2098		6814<6654	ZIIP TO ZAAP	*Call
2097<2098		6814<6655	UIFL TO ZAAP	*Call
2097<2098		6815<6650	IFL TO ZIIP	*Call
2097<2098		6815<6651	ICF TO ZIIP	*Call
2097<2098		6815<6652	ADDL SAP TO ZIIP	*Call
2097<2098		6815<6653	ZAAP TO ZIIP	*Call
2097<2098		6815<6655	UIFL TO ZIIP	*Call
2105		2125<2122	18.2GB TO 145.6GB 8 PK 10K	*Call
2105		2125<2123	36.4GB TO 145.6GB 8 PK 10K	*Call
2105		2125<2124	72.8GB TO 145.6GB 8 PK 10K	*Call
2105		2125<2142	18.2GB 15K 8PKTO 145.6GB 10K	*Call
2105		2125<2143	36.4GB 15K 8PKTO 145.6GB 10K	*Call
2105		2125<2144	72.8GB15K TO 145.6GB10K 8-PK	*Call
2105		2717<2716	REMOTE CABLES TO ESS CONSOLE	*Call
2105		3002<3013	64BT ESCON TO SCSI HST ADPTR	*Call
2105		3002<3024	FIBRE/FICON (LW) TO SCSI HA	*Call
2105		3002<3025	FIBRE/FICON (SW) TO SCSI HA	*Call
2105		3012<3024	FIBRE/FICON (LW) TO ESCON HA	*Call
2105		3012<3025	FIBRE/FICON (SW) TO ESCON HA	*Call
2105		3013<3002	SCSI TO 64BT ESCON HST ADPTR	*Call
2105		3013<3012	ESCON TO64BT ESCON HST ADPTR	*Call
2105		3013<3024	FICON(LW) TO 64 BIT ESCON	*Call
2105		3013<3025	FICON(SW) TO 64 BIT ESCON	*Call
2105		3024<3002	SCSI TO FIBRE/FICON (LW) HA	*Call
2105		3024<3012	ESCON TO FIBRE/FICON (LW) HA	*Call
2105		3024<3013	64BT ESCON TO FICON(LW)ADPTR	*Call
2105		3024<3025	FIBRE/FICON (SW) TO FIBRE LW	*Call
2105		3025<3002	SCSI TO FIBRE/FICON (SW) HA	*Call
2105		3025<3012	ESCON TO FIBRE/FICON (SW) HA	*Call
2105		3025<3013	64BT ESCON TO FICON(SW)ADPTR	*Call
2105		3025<3024	FIBRE/FICON (LW) TO FIBRE SW	*Call
2421		1321<1320	I/O CABLE CONVERSION	*Call
2421		3153<3157	HOST ADAPTER CONVERSION	*Call
2421		3153<3253	HOST ADAPTER CONVERSION	*Call
2421		3153<3257	HOST ADAPTER CONVERSION	*Call
2421		3157<3153	HOST ADAPTER CONVERSION	*Call
2421		3157<3253	HOST ADAPTER CONVERSION	*Call
2421		3157<3257	HOST ADAPTER CONVERSION	*Call

Machine Type	Model	Feature	Description	GSA Price
2421		3253<3153	HOST ADAPTER CONVERSION	*Call
2421		3253<3157	HOST ADAPTER CONVERSION	*Call
2421		3253<3257	HOST ADAPTER CONVERSION	*Call
2421		3257<3153	HOST ADAPTER CONVERSION	*Call
2421		3257<3157	HOST ADAPTER CONVERSION	*Call
2421		3257<3253	HOST ADAPTER CONVERSION	*Call
2421		4312<4311	PROC MEMORY CONVERSION	*Call
2421		4313<4311	PROC MEMORY CONVERSION	*Call
2421		4313<4312	PROC MEMORY CONVERSION	*Call
2421		4314<4311	PROC MEMORY CONVERSION	*Call
2421		4314<4312	PROC MEMORY CONVERSION	*Call
2421		4314<4313	PROC MEMORY CONVERSION	*Call
2421		4315<4311	PROC MEMORY CONVERSION	*Call
2421		4315<4312	PROC MEMORY CONVERSION	*Call
2421		4315<4313	PROC MEMORY CONVERSION	*Call
2421		4316<4311	PROC MEMORY CONVERSION	*Call
2421		4316<4312	PROC MEMORY CONVERSION	*Call
2421		4316<4313	PROC MEMORY CONVERSION	*Call
2421		4316<4315	PROC MEMORY CONVERSION	*Call
2421		4317<4311	PROC MEMORY CONVERSION	*Call
2421		4317<4312	PROC MEMORY CONVERSION	*Call
2421		4317<4313	PROC MEMORY CONVERSION	*Call
2421		4317<4315	PROC MEMORY CONVERSION	*Call
2421		4317<4316	PROC MEMORY CONVERSION	*Call
2421		4402<4401	PROC LICENSE FEATURE CONV	*Call
2421		4403<4401	PROC LICENSE FEATURE CONV	*Call
2421		4403<4402	PROC LICENSE FEATURE CONV	*Call
2421		4404<4401	PROC LICENSE FEATURE CONV	*Call
2421		4404<4402	PROC LICENSE FEATURE CONV	*Call
2421		4404<4403	PROC LICENSE FEATURE CONV	*Call
2421		5108<5209	ENCRYPTION COD DRIVE CONV	*Call
2421		5308<5108	ENCRYPTION DRIVE SET CONV	*Call
2421		5308<5309	ENCRYPTION COD DRIVE CONV	*Call
2421		5708<5108	ENCRYPTION DRIVE SET CONV	*Call
2421		5708<5308	ENCRYPTION DRIVE SET CONV	*Call
2421		5708<5709	ENCRYPTION COD DISK CONV	*Call
2421		5758<5108	ENCRYPTION DRIVE SET CONV	*Call
2421		5758<5308	ENCRYPTION DRIVE SET CONV	*Call
2421		5758<5708	ENCRYPTION DRIVE SET CONV	*Call
2421		5758<5759	ENCRYPTION COD DRIVE CONV	*Call
2421		5858<5859	ENCRYPT COD DISK DR CONVERS	*Call
2421		6158<6156	ENCRYPTION SSD DRIVE CONVERS	*Call
2422		1321<1320	I/O CABLE CONVERSION	*Call
2422		3153<3157	HOST ADAPTER CONVERSION	*Call
2422		3153<3253	HOST ADAPTER CONVERSION	*Call
2422		3153<3257	HOST ADAPTER CONVERSION	*Call
2422		3157<3153	HOST ADAPTER CONVERSION	*Call
2422		3157<3253	HOST ADAPTER CONVERSION	*Call
2422		3157<3257	HOST ADAPTER CONVERSION	*Call
2422		3253<3153	HOST ADAPTER CONVERSION	*Call
2422		3253<3157	HOST ADAPTER CONVERSION	*Call
2422		3253<3257	HOST ADAPTER CONVERSION	*Call
2422		3257<3153	HOST ADAPTER CONVERSION	*Call
2422		3257<3157	HOST ADAPTER CONVERSION	*Call
2422		3257<3253	HOST ADAPTER CONVERSION	*Call
2422		4312<4311	PROC MEMORY CONVERSION	*Call
2422		4313<4311	PROC MEMORY CONVERSION	*Call

Machine Type	Model	Feature	Description	GSA Price
2422		4313<4312	PROC MEMORY CONVERSION	*Call
2422		4314<4311	PROC MEMORY CONVERSION	*Call
2422		4314<4312	PROC MEMORY CONVERSION	*Call
2422		4314<4313	PROC MEMORY CONVERSION	*Call
2422		4315<4311	PROC MEMORY CONVERSION	*Call
2422		4315<4312	PROC MEMORY CONVERSION	*Call
2422		4315<4313	PROC MEMORY CONVERSION	*Call
2422		4316<4311	PROC MEMORY CONVERSION	*Call
2422		4316<4312	PROC MEMORY CONVERSION	*Call
2422		4316<4313	PROC MEMORY CONVERSION	*Call
2422		4316<4315	PROC MEMORY CONVERSION	*Call
2422		4317<4311	PROC MEMORY CONVERSION	*Call
2422		4317<4312	PROC MEMORY CONVERSION	*Call
2422		4317<4313	PROC MEMORY CONVERSION	*Call
2422		4317<4315	PROC MEMORY CONVERSION	*Call
2422		4317<4316	PROC MEMORY CONVERSION	*Call
2422		4402<4401	PROC LICENSE FEATURE CONV	*Call
2422		4403<4401	PROC LICENSE FEATURE CONV	*Call
2422		4403<4402	PROC LICENSE FEATURE CONV	*Call
2422		4404<4401	PROC LICENSE FEATURE CONV	*Call
2422		4404<4402	PROC LICENSE FEATURE CONV	*Call
2422		4404<4403	PROC LICENSE FEATURE CONV	*Call
2422		5108<5209	ENCRYPTION COD DRIVE CONV	*Call
2422		5308<5108	ENCRYPTION DRIVE SET CONV	*Call
2422		5308<5309	ENCRYPTION COD DRIVE CONV	*Call
2422		5708<5108	ENCRYPTION DRIVE SET CONV	*Call
2422		5708<5308	ENCRYPTION DRIVE SET CONV	*Call
2422		5708<5709	ENCRYPTION COD DISK CONV	*Call
2422		5758<5108	ENCRYPTION DRIVE SET CONV	*Call
2422		5758<5308	ENCRYPTION DRIVE SET CONV	*Call
2422		5758<5708	ENCRYPTION DRIVE SET CONV	*Call
2422		5758<5759	ENCRYPTION COD DRIVE CONV	*Call
2422		5858<5859	ENCRYPT COD DISK DR CONVERS	*Call
2422		6158<6156	ENCRYPTION SSD DRIVE CONVERS	*Call
2423		1321<1320	I/O CABLE CONVERSION	*Call
2423		3153<3157	HOST ADAPTER CONVERSION	*Call
2423		3153<3253	HOST ADAPTER CONVERSION	*Call
2423		3153<3257	HOST ADAPTER CONVERSION	*Call
2423		3157<3153	HOST ADAPTER CONVERSION	*Call
2423		3157<3253	HOST ADAPTER CONVERSION	*Call
2423		3157<3257	HOST ADAPTER CONVERSION	*Call
2423		3253<3153	HOST ADAPTER CONVERSION	*Call
2423		3253<3157	HOST ADAPTER CONVERSION	*Call
2423		3253<3257	HOST ADAPTER CONVERSION	*Call
2423		3257<3153	HOST ADAPTER CONVERSION	*Call
2423		3257<3157	HOST ADAPTER CONVERSION	*Call
2423		3257<3253	HOST ADAPTER CONVERSION	*Call
2423		4312<4311	PROC MEMORY CONVERSION	*Call
2423		4313<4311	PROC MEMORY CONVERSION	*Call
2423		4313<4312	PROC MEMORY CONVERSION	*Call
2423		4314<4311	PROC MEMORY CONVERSION	*Call
2423		4314<4312	PROC MEMORY CONVERSION	*Call
2423		4314<4313	PROC MEMORY CONVERSION	*Call
2423		4315<4311	PROC MEMORY CONVERSION	*Call
2423		4315<4312	PROC MEMORY CONVERSION	*Call
2423		4315<4313	PROC MEMORY CONVERSION	*Call
2423		4316<4311	PROC MEMORY CONVERSION	*Call

Machine Type	Model	Feature	Description	GSA Price
2423		4316<4312	PROC MEMORY CONVERSION	*Call
2423		4316<4313	PROC MEMORY CONVERSION	*Call
2423		4316<4315	PROC MEMORY CONVERSION	*Call
2423		4317<4311	PROC MEMORY CONVERSION	*Call
2423		4317<4312	PROC MEMORY CONVERSION	*Call
2423		4317<4313	PROC MEMORY CONVERSION	*Call
2423		4317<4315	PROC MEMORY CONVERSION	*Call
2423		4317<4316	PROC MEMORY CONVERSION	*Call
2423		4402<4401	FEATURE CONVERSION	*Call
2423		4403<4401	PROC LICENSE FEATURE CONV	*Call
2423		4403<4402	PROC LICENSE FEATURE CONV	*Call
2423		4404<4401	PROC LICENSE FEATURE CONV	*Call
2423		4404<4402	PROC LICENSE FEATURE CONV	*Call
2423		4404<4403	PROC LICENSE FEATURE CONV	*Call
2423		5108<5209	ENCRYPTION COD DRIVE CONV	*Call
2423		5308<5108	ENCRYPTION DRIVE SET CONV	*Call
2423		5308<5309	ENCRYPTION COD DRIVE CONV	*Call
2423		5708<5108	ENCRYPTION DRIVE SET CONV	*Call
2423		5708<5308	ENCRYPTION DRIVE SET CONV	*Call
2423		5708<5709	ENCRYPTION COD DISK CONV	*Call
2423		5758<5108	ENCRYPTION DRIVE SET CONV	*Call
2423		5758<5308	ENCRYPTION DRIVE SET CONV	*Call
2423		5758<5708	ENCRYPTION DRIVE SET CONV	*Call
2423		5758<5759	ENCRYPTION COD DRIVE CONV	*Call
2423		5858<5859	ENCRYPT COD DISK DR CONVERS	*Call
2423		6158<6156	ENCRYPTION SSD DRIVE CONVERS	*Call
2424		1321<1320	I/O CABLE CONVERSION	*Call
2424		3153<3157	HOST ADAPTER CONVERSION	*Call
2424		3153<3253	HOST ADAPTER CONVERSION	*Call
2424		3153<3257	HOST ADAPTER CONVERSION	*Call
2424		3157<3153	HOST ADAPTER CONVERSION	*Call
2424		3157<3253	HOST ADAPTER CONVERSION	*Call
2424		3157<3257	HOST ADAPTER CONVERSION	*Call
2424		3253<3153	HOST ADAPTER CONVERSION	*Call
2424		3253<3157	HOST ADAPTER CONVERSION	*Call
2424		3253<3257	HOST ADAPTER CONVERSION	*Call
2424		3257<3153	HOST ADAPTER CONVERSION	*Call
2424		3257<3157	HOST ADAPTER CONVERSION	*Call
2424		3257<3253	HOST ADAPTER CONVERSION	*Call
2424		4312<4311	PROC MEMORY CONVERSION	*Call
2424		4313<4311	PROC MEMORY CONVERSION	*Call
2424		4313<4312	PROC MEMORY CONVERSION	*Call
2424		4314<4311	PROC MEMORY CONVERSION	*Call
2424		4314<4312	PROC MEMORY CONVERSION	*Call
2424		4314<4313	PROC MEMORY CONVERSION	*Call
2424		4315<4311	PROC MEMORY CONVERSION	*Call
2424		4315<4312	PROC MEMORY CONVERSION	*Call
2424		4315<4313	PROC MEMORY CONVERSION	*Call
2424		4316<4311	PROC MEMORY CONVERSION	*Call
2424		4316<4312	PROC MEMORY CONVERSION	*Call
2424		4316<4313	PROC MEMORY CONVERSION	*Call
2424		4316<4315	PROC MEMORY CONVERSION	*Call
2424		4317<4311	PROC MEMORY CONVERSION	*Call
2424		4317<4312	PROC MEMORY CONVERSION	*Call
2424		4317<4313	PROC MEMORY CONVERSION	*Call
2424		4317<4315	PROC MEMORY CONVERSION	*Call
2424		4317<4316	PROC MEMORY CONVERSION	*Call

Machine Type	Model	Feature	Description	GSA Price
2424		4402<4401	PROC LICENSE FEATURE CONV	*Call
2424		4403<4401	PROC LICENSE FEATURE CONV	*Call
2424		4403<4402	PROC LICENSE FEATURE CONV	*Call
2424		4404<4401	PROC LICENSE FEATURE CONV	*Call
2424		4404<4402	PROC LICENSE FEATURE CONV	*Call
2424		4404<4403	PROC LICENSE FEATURE CONV	*Call
2424		5108<5209	ENCRYPTION COD DRIVE CONV	*Call
2424		5308<5108	ENCRYPTION DRIVE SET CONV	*Call
2424		5308<5309	ENCRYPTION COD DRIVE CONV	*Call
2424		5708<5108	ENCRYPTION DRIVE SET CONV	*Call
2424		5708<5308	ENCRYPTION DRIVE SET CONV	*Call
2424		5708<5709	ENCRYPTION COD DISK CONV	*Call
2424		5758<5108	ENCRYPTION DRIVE SET CONV	*Call
2424		5758<5308	ENCRYPTION DRIVE SET CONV	*Call
2424		5758<5708	ENCRYPTION DRIVE SET CONV	*Call
2424		5758<5759	ENCRYPTION COD DRIVE CONV	*Call
2424		5858<5859	ENCRYPT COD DISK DR CONVERS	*Call
2424		6158<6156	ENCRYPTION SSD DRIVE CONVERS	*Call
2817		1126<1125	M15 AIR TO M32 AIR	*Call
2817		1127<1125	M15 AIR TO M49 AIR	*Call
2817		1127<1126	M32 AIR TO M49 AIR	*Call
2817		1128<1125	M15 AIR TO M66 AIR	*Call
2817		1128<1126	M32 AIR TO M66 AIR	*Call
2817		1128<1127	M49 AIR TO M66 AIR	*Call
2817		1129<1125	M15 AIR TO M80 AIR	*Call
2817		1129<1126	M32 AIR TO M80 AIR	*Call
2817		1129<1127	M49 AIR TO M80 AIR	*Call
2817		1129<1128	M66 AIR TO M80 AIR	*Call
2817		1131<1130	M15 WATER TO M32 WATER	*Call
2817		1132<1130	M15 WATER TO M49 WATER	*Call
2817		1132<1131	M32 WATER TO M49 WATER	*Call
2817		1133<1130	M15 WATER TO M66 WATER	*Call
2817		1133<1131	M32 WATER TO M66 WATER	*Call
2817		1133<1132	M49 WATER TO M66 WATER	*Call
2817		1134<1130	M15 WATER TO M80 WATER	*Call
2817		1134<1131	M32 WATER TO M80 WATER	*Call
2817		1134<1132	M49 WATER TO M80 WATER	*Call
2817		1134<1133	M66 WATER TO M80 WATER	*Call
2817		1881<1882	ICF TO IFL	*Call
2817		1881<1883	SAP(OPT) TO IFL	*Call
2817		1881<1884	ZAAP TO IFL	*Call
2817		1881<1885	ZIIP TO IFL	*Call
2817		1882<1881	IFL TO ICF	*Call
2817		1882<1883	SAP(OPT) TO ICF	*Call
2817		1882<1884	ZAAP TO ICF	*Call
2817		1882<1885	ZIIP TO ICF	*Call
2817		1882<1886	UIFL TO ICF	*Call
2817		1883<1881	IFL TO SAP(OPT)	*Call
2817		1883<1882	ICF TO SAP(OPT)	*Call
2817		1883<1884	ZAAP TO SAP(OPT)	*Call
2817		1883<1885	ZIIP TO SAP(OPT)	*Call
2817		1883<1886	UIFL TO SAP(OPT)	*Call
2817		1884<1881	IFL TO ZAAP	*Call
2817		1884<1882	ICF TO ZAAP	*Call
2817		1884<1883	SAP(OPT) TO ZAAP	*Call
2817		1884<1885	ZIIP TO ZAAP	*Call
2817		1884<1886	UIFL TO ZAAP	*Call

Machine Type	Model	Feature	Description	GSA Price
2817		1885<1881	IFL TO ZIIP	*Call
2817		1885<1882	ICF TO ZIIP	*Call
2817		1885<1883	SAP(OPT) TO ZIIP	*Call
2817		1885<1884	ZAAP TO ZIIP	*Call
2817		1886<1882	ICF TO UIFL	*Call
2817		1886<1883	SAP(OPT) TO UIFL	*Call
2817		1886<1884	ZAAP TO UIFL	*Call
2817		1886<1885	ZIIP TO UIFL	*Call
2817		1901<1996	REPLND MEMTOMEM CPTY INCR	*Call
2817		4016<4015	AFR NO C/A -AFR C/A	*Call
2817		4018<4017	AFR NO C/W -AFR C/W	*Call
2817		4019<4015	AFR NO C/A -AFRMULT NOC/A	*Call
2817		4019<4016	AFR C/A -AFRMULT NOC/A	*Call
2817		4020<4015	AFR NO C/A -AFRMULT C/A	*Call
2817		4020<4016	AFR C/A -AFRMULT C/A	*Call
2817		4020<4019	AFRMULT NOC/A -AFRMULT C/A	*Call
2817<2094		0084<0085	TK HMC TO DUAL EN HMC	*Call
2817<2094		1125<1110	S08 TO M15 AIR	*Call
2817<2094		1125<1111	S18 TO M15 AIR	*Call
2817<2094		1125<1112	S28 TO M15 AIR	*Call
2817<2094		1125<1113	S38 TO M15 AIR	*Call
2817<2094		1125<1114	S54 TO M15 AIR	*Call
2817<2094		1126<1110	S08 TO M32 AIR	*Call
2817<2094		1126<1111	S18 TO M32 AIR	*Call
2817<2094		1126<1112	S28 TO M32 AIR	*Call
2817<2094		1126<1113	S38 TO M32 AIR	*Call
2817<2094		1126<1114	S54 TO M32 AIR	*Call
2817<2094		1127<1110	S08 TO M49 AIR	*Call
2817<2094		1127<1111	S18 TO M49 AIR	*Call
2817<2094		1127<1112	S28 TO M49 AIR	*Call
2817<2094		1127<1113	S38 TO M49 AIR	*Call
2817<2094		1127<1114	S54 TO M49 AIR	*Call
2817<2094		1128<1110	S08 TO M66 AIR	*Call
2817<2094		1128<1111	S18 TO M66 AIR	*Call
2817<2094		1128<1112	S28 TO M66 AIR	*Call
2817<2094		1128<1113	S38 TO M66 AIR	*Call
2817<2094		1128<1114	S54 TO M66 AIR	*Call
2817<2094		1129<1110	S08 TO M80 AIR	*Call
2817<2094		1129<1111	S18 TO M80 AIR	*Call
2817<2094		1129<1112	S28 TO M80 AIR	*Call
2817<2094		1129<1113	S38 TO M80 AIR	*Call
2817<2094		1129<1114	S54 TO M80 AIR	*Call
2817<2094		1130<1110	S08 TO M15 WATER	*Call
2817<2094		1130<1111	S18 TO M15 WATER	*Call
2817<2094		1130<1112	S28 TO M15 WATER	*Call
2817<2094		1130<1113	S38 TO M15 WATER	*Call
2817<2094		1130<1114	S54 TO M15 WATER	*Call
2817<2094		1131<1110	S08 TO M32 WATER	*Call
2817<2094		1131<1111	S18 TO M32 WATER	*Call
2817<2094		1131<1112	S28 TO M32 WATER	*Call
2817<2094		1131<1113	S38 TO M32 WATER	*Call
2817<2094		1131<1114	S54 TO M32 WATER	*Call
2817<2094		1132<1110	S08 TO M49 WATER	*Call
2817<2094		1132<1111	S18 TO M49 WATER	*Call
2817<2094		1132<1112	S28 TO M49 WATER	*Call
2817<2094		1132<1113	S38 TO M49 WATER	*Call
2817<2094		1132<1114	S54 TO M49 WATER	*Call

Machine Type	Model	Feature	Description	GSA Price
2817<2094		1133<1110	S08 TO M66 WATER	*Call
2817<2094		1133<1111	S18 TO M66 WATER	*Call
2817<2094		1133<1112	S28 TO M66 WATER	*Call
2817<2094		1133<1113	S38 TO M66 WATER	*Call
2817<2094		1133<1114	S54 TO M66 WATER	*Call
2817<2094		1134<1110	S08 TO M80 WATER	*Call
2817<2094		1134<1111	S18 TO M80 WATER	*Call
2817<2094		1134<1112	S28 TO M80 WATER	*Call
2817<2094		1134<1113	S38 TO M80 WATER	*Call
2817<2094		1134<1114	S54 TO M80 WATER	*Call
2817<2094		1881<7811	IFL TO IFL	*Call
2817<2094		1881<7812	ICF TO IFL	*Call
2817<2094		1881<7813	ADDL SAP TO IFL	*Call
2817<2094		1881<7814	ZAAP TO IFL	*Call
2817<2094		1881<7815	ZIIP TO IFL	*Call
2817<2094		1881<7831	UIFL TO IFL	*Call
2817<2094		1882<7811	IFL TO ICF	*Call
2817<2094		1882<7812	ICF TO ICF	*Call
2817<2094		1882<7813	ADDL SAP TO ICF	*Call
2817<2094		1882<7814	ZAAP TO ICF	*Call
2817<2094		1882<7815	ZIIP TO ICF	*Call
2817<2094		1882<7831	UIFL TO ICF	*Call
2817<2094		1883<7811	IFL TO SAP (OPTIONAL)	*Call
2817<2094		1883<7812	ICF TO SAP (OPTIONAL)	*Call
2817<2094		1883<7814	ZAAP TO SAP (OPTIONAL)	*Call
2817<2094		1883<7815	ZIIP TO SAP (OPTIONAL)	*Call
2817<2094		1883<7831	UIFL TO SAP (OPTIONAL)	*Call
2817<2094		1884<7811	IFL TO ZAAP	*Call
2817<2094		1884<7812	ICF TO ZAAP	*Call
2817<2094		1884<7813	ADDL SAP TO ZAAP	*Call
2817<2094		1884<7814	ZAAP TO ZAAP	*Call
2817<2094		1884<7815	ZIIP TO ZAAP	*Call
2817<2094		1884<7831	UIFL TO ZAAP	*Call
2817<2094		1885<7811	IFL TO ZIIP	*Call
2817<2094		1885<7812	ICF TO ZIIP	*Call
2817<2094		1885<7813	ADDL SAP TO ZIIP	*Call
2817<2094		1885<7814	ZAAP TO ZIIP	*Call
2817<2094		1885<7815	ZIIP TO ZIIP	*Call
2817<2094		1885<7831	UIFL TO ZIIP	*Call
2817<2094		1886<7811	IFL TO UNASSIGNED IFL	*Call
2817<2094		1886<7812	ICF TO UNASSIGNED IFL	*Call
2817<2094		1886<7813	ADDL SAP TO UNASSIGNED IFL	*Call
2817<2094		1886<7814	ZAAP TO UNASSIGNED IFL	*Call
2817<2094		1886<7815	ZIIP TO UNASSIGNED IFL	*Call
2817<2094		1886<7831	UIFL TO UNASSIGNED IFL	*Call
2817<2094		4015<7611	1BK 1/O - AFR NO C/A	*Call
2817<2094		4015<7612	1BK 3/O - AFR NO C/A	*Call
2817<2094		4015<7613	1BK 3/O - AFR NO C/A	*Call
2817<2094		4015<7621	2BK 1/O - AFR NO C/A	*Call
2817<2094		4015<7622	2BK 2/O - AFR NO C/A	*Call
2817<2094		4015<7623	2BK 3/O - AFR NO C/A	*Call
2817<2094		4015<7631	3BK 1/O - AFR NO C/A	*Call
2817<2094		4015<7632	3BK 2/O - AFR NO C/A	*Call
2817<2094		4015<7633	3BK 3/O - AFR NO C/A	*Call
2817<2094		4015<7641	4BK 1/O - AFR NO C/A	*Call
2817<2094		4015<7642	4BK 2/O - AFR NO C/A	*Call
2817<2094		4015<7643	4BK 3/O - AFR NO C/A	*Call

Machine Type	Model	Feature	Description	GSA Price
2817<2094		4016<7611	1BK 1I/O - AFR C/A	*Call
2817<2094		4016<7612	1BK 3I/O - AFR C/A	*Call
2817<2094		4016<7613	1BK 3I/O - AFR C/A	*Call
2817<2094		4016<7621	2BK 1I/O - AFR C/A	*Call
2817<2094		4016<7622	2BK 2I/O - AFR C/A	*Call
2817<2094		4016<7623	2BK 3I/O - AFR C/A	*Call
2817<2094		4016<7631	3BK 1I/O - AFR C/A	*Call
2817<2094		4016<7632	3BK 2I/O - AFR C/A	*Call
2817<2094		4016<7633	3BK 3I/O - AFR C/A	*Call
2817<2094		4016<7641	4BK 1I/O - AFR C/A	*Call
2817<2094		4016<7642	4BK 2I/O - AFR C/A	*Call
2817<2094		4016<7643	4BK 3I/O - AFR C/A	*Call
2817<2094		4017<7611	1BK 1I/O - AFR NO C/W	*Call
2817<2094		4017<7612	1BK 3I/O - AFR NO C/W	*Call
2817<2094		4017<7613	1BK 3I/O - AFR NO C/W	*Call
2817<2094		4017<7621	2BK 1I/O - AFR NO C/W	*Call
2817<2094		4017<7622	2BK 2I/O - AFR NO C/W	*Call
2817<2094		4017<7623	2BK 3I/O - AFR NO C/W	*Call
2817<2094		4017<7631	3BK 1I/O - AFR NO C/W	*Call
2817<2094		4017<7632	3BK 2I/O - AFR NO C/W	*Call
2817<2094		4017<7633	3BK 3I/O - AFR NO C/W	*Call
2817<2094		4017<7641	4BK 1I/O - AFR NO C/W	*Call
2817<2094		4017<7642	4BK 2I/O - AFR NO C/W	*Call
2817<2094		4017<7643	4BK 3I/O - AFR NO C/W	*Call
2817<2094		4018<7611	1BK 1I/O - AFR C/W	*Call
2817<2094		4018<7612	1BK 3I/O - AFR C/W	*Call
2817<2094		4018<7613	1BK 3I/O - AFR C/W	*Call
2817<2094		4018<7621	2BK 1I/O - AFR C/W	*Call
2817<2094		4018<7622	2BK 2I/O - AFR C/W	*Call
2817<2094		4018<7623	2BK 3I/O - AFR C/W	*Call
2817<2094		4018<7631	3BK 1I/O - AFR C/W	*Call
2817<2094		4018<7632	3BK 2I/O - AFR C/W	*Call
2817<2094		4018<7633	3BK 3I/O - AFR C/W	*Call
2817<2094		4018<7641	4BK 1I/O - AFR C/W	*Call
2817<2094		4018<7642	4BK 2I/O - AFR C/W	*Call
2817<2094		4018<7643	4BK 3I/O - AFR C/W	*Call
2817<2094		4019<7611	1BK 1I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7612	1BK 3I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7613	1BK 3I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7621	2BK 1I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7622	2BK 2I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7623	2BK 3I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7631	3BK 1I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7632	3BK 2I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7633	3BK 3I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7641	4BK 1I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7642	4BK 2I/O - AFR MULT NO C/A	*Call
2817<2094		4019<7643	4BK 3I/O - AFR MULT NO C/A	*Call
2817<2094		4020<7611	1BK 1I/O - AFR MULT C/A	*Call
2817<2094		4020<7612	1BK 3I/O - AFR MULT C/A	*Call
2817<2094		4020<7613	1BK 3I/O - AFR MULT C/A	*Call
2817<2094		4020<7621	2BK 1I/O - AFR MULT C/A	*Call
2817<2094		4020<7622	2BK 2I/O - AFR MULT C/A	*Call
2817<2094		4020<7623	2BK 3I/O - AFR MULT C/A	*Call
2817<2094		4020<7631	3BK 1I/O - AFR MULT C/A	*Call
2817<2094		4020<7632	3BK 2I/O - AFR MULT C/A	*Call
2817<2094		4020<7633	3BK 3I/O - AFR MULT C/A	*Call

Machine Type	Model	Feature	Description	GSA Price
2817<2094		4020<7641	4BK 1I/O - AFR MULT C/A	*Call
2817<2094		4020<7642	4BK 2I/O - AFR MULT C/A	*Call
2817<2094		4020<7643	4BK 3I/O - AFR MULT C/A	*Call
2817<2097		1125<1117	E12 TO M15 AIR	*Call
2817<2097		1125<1118	E26 TO M15 AIR	*Call
2817<2097		1125<1119	E40 TO M15 AIR	*Call
2817<2097		1125<1120	E56 TO M15 AIR	*Call
2817<2097		1125<1121	E64 TO M15 AIR	*Call
2817<2097		1126<1117	E12 TO M32 AIR	*Call
2817<2097		1126<1118	E26 TO M32 AIR	*Call
2817<2097		1126<1119	E40 TO M32 AIR	*Call
2817<2097		1126<1120	E56 TO M32 AIR	*Call
2817<2097		1126<1121	E64 TO M32 AIR	*Call
2817<2097		1127<1117	E12 TO M49 AIR	*Call
2817<2097		1127<1118	E26 TO M49 AIR	*Call
2817<2097		1127<1119	E40 TO M49 AIR	*Call
2817<2097		1127<1120	E56 TO M49 AIR	*Call
2817<2097		1127<1121	E64 TO M49 AIR	*Call
2817<2097		1128<1117	E12 TO M66 AIR	*Call
2817<2097		1128<1118	E26 TO M66 AIR	*Call
2817<2097		1128<1119	E40 TO M66 AIR	*Call
2817<2097		1128<1120	E56 TO M66 AIR	*Call
2817<2097		1128<1121	E64 TO M66 AIR	*Call
2817<2097		1129<1117	E12 TO M80 AIR	*Call
2817<2097		1129<1118	E26 TO M80 AIR	*Call
2817<2097		1129<1119	E40 TO M80 AIR	*Call
2817<2097		1129<1120	E56 TO M80 AIR	*Call
2817<2097		1129<1121	E64 TO M80 AIR	*Call
2817<2097		1130<1117	E12 TO M15 WATER	*Call
2817<2097		1130<1118	E26 TO M15 WATER	*Call
2817<2097		1130<1119	E40 TO M15 WATER	*Call
2817<2097		1130<1120	E56 TO M15 WATER	*Call
2817<2097		1130<1121	E64 TO M15 WATER	*Call
2817<2097		1131<1117	E12 TO M32 WATER	*Call
2817<2097		1131<1118	E26 TO M32 WATER	*Call
2817<2097		1131<1119	E40 TO M32 WATER	*Call
2817<2097		1131<1120	E56 TO M32 WATER	*Call
2817<2097		1131<1121	E64 TO M32 WATER	*Call
2817<2097		1132<1117	E12 TO M49 WATER	*Call
2817<2097		1132<1118	E26 TO M49 WATER	*Call
2817<2097		1132<1119	E40 TO M49 WATER	*Call
2817<2097		1132<1120	E56 TO M49 WATER	*Call
2817<2097		1132<1121	E64 TO M49 WATER	*Call
2817<2097		1133<1117	E12 TO M66 WATER	*Call
2817<2097		1133<1118	E26 TO M66 WATER	*Call
2817<2097		1133<1119	E40 TO M66 WATER	*Call
2817<2097		1133<1120	E56 TO M66 WATER	*Call
2817<2097		1133<1121	E64 TO M66 WATER	*Call
2817<2097		1134<1117	E12 TO M80 WATER	*Call
2817<2097		1134<1118	E26 TO M80 WATER	*Call
2817<2097		1134<1119	E40 TO M80 WATER	*Call
2817<2097		1134<1120	E56 TO M80 WATER	*Call
2817<2097		1134<1121	E64 TO M80 WATER	*Call
2817<2097		1881<6811	IFL TO IFL	*Call
2817<2097		1881<6812	ICF TO IFL	*Call
2817<2097		1881<6813	SAP OPTIONAL TO IFL	*Call
2817<2097		1881<6814	ZAAP TO IFL	*Call

Machine Type	Model	Feature	Description	GSA Price
2817<2097		1881<6815	ZIIP TO IFL	*Call
2817<2097		1881<6816	UIFL TO IFL	*Call
2817<2097		1882<6811	IFL TO ICF	*Call
2817<2097		1882<6812	ICF TO ICF	*Call
2817<2097		1882<6813	SAP OPTIONAL TO ICF	*Call
2817<2097		1882<6814	ZAAP TO ICF	*Call
2817<2097		1882<6815	ZIIP TO ICF	*Call
2817<2097		1882<6816	UIFL TO ICF	*Call
2817<2097		1883<6811	IFL TO SAP(OPT)	*Call
2817<2097		1883<6812	ICF TO SAP(OPT)	*Call
2817<2097		1883<6814	ZAAP TO SAP(OPT)	*Call
2817<2097		1883<6815	ZIIP TO SAP(OPT)	*Call
2817<2097		1883<6816	UIFL TO SAP(OPT)	*Call
2817<2097		1884<6811	IFL TO ZAAP	*Call
2817<2097		1884<6812	ICF TO ZAAP	*Call
2817<2097		1884<6813	SAP OPTIONAL TO ZAAP	*Call
2817<2097		1884<6814	ZAAP TO ZAAP	*Call
2817<2097		1884<6815	ZIIP TO ZAAP	*Call
2817<2097		1884<6816	UIFL TO ZAAP	*Call
2817<2097		1885<6811	IFL TO ZIIP	*Call
2817<2097		1885<6812	ICF TO ZIIP	*Call
2817<2097		1885<6813	SAP OPTIONAL TO ZIIP	*Call
2817<2097		1885<6814	ZAAP TO ZIIP	*Call
2817<2097		1885<6815	ZIIP TO ZIIP	*Call
2817<2097		1885<6816	UIFL TO ZIIP	*Call
2817<2097		1886<6811	IFL TO UIFL	*Call
2817<2097		1886<6812	ICF TO UIFL	*Call
2817<2097		1886<6813	SAP OPTIONAL TO UIFL	*Call
2817<2097		1886<6814	ZAAP TO UIFL	*Call
2817<2097		1886<6815	ZIIP TO UIFL	*Call
2817<2097		1886<6816	UIFL TO UIFL	*Call
2817<2097		1901<1996	PREPLND MEMTOMEM CPTY INCR	*Call
2817<2097		4015<4311	1BK 1I/O - AFR NO C/A	*Call
2817<2097		4015<4312	1BK 2I/O - AFR NO C/A	*Call
2817<2097		4015<4313	1BK 3I/O - AFR NO C/A	*Call
2817<2097		4015<4321	2BK 1I/O - AFR NO C/A	*Call
2817<2097		4015<4322	2BK 2I/O - AFR NO C/A	*Call
2817<2097		4015<4323	2BK 3I/O - AFR NO C/A	*Call
2817<2097		4015<4331	3BK 1I/O - AFR NO C/A	*Call
2817<2097		4015<4332	3BK 2I/O - AFR NO C/A	*Call
2817<2097		4015<4333	3BK 3I/O - AFR NO C/A	*Call
2817<2097		4015<4341	4BK 1I/O - AFR NO C/A	*Call
2817<2097		4015<4342	4BK 2I/O - AFR NO C/A	*Call
2817<2097		4015<4343	4BK 3I/O - AFR NO C/A	*Call
2817<2097		4016<4311	1BK 1I/O - AFR C/A	*Call
2817<2097		4016<4312	1BK 2I/O - AFR C/A	*Call
2817<2097		4016<4313	1BK 3I/O - AFR C/A	*Call
2817<2097		4016<4321	2BK 1I/O - AFR C/A	*Call
2817<2097		4016<4322	2BK 2I/O - AFR C/A	*Call
2817<2097		4016<4323	2BK 3I/O - AFR C/A	*Call
2817<2097		4016<4331	3BK 1I/O - AFR C/A	*Call
2817<2097		4016<4332	3BK 2I/O - AFR C/A	*Call
2817<2097		4016<4333	3BK 3I/O - AFR C/A	*Call
2817<2097		4016<4341	4BK 1I/O - AFR C/A	*Call
2817<2097		4016<4342	4BK 2I/O - AFR C/A	*Call
2817<2097		4016<4343	4BK 3I/O - AFR C/A	*Call
2817<2097		4017<4311	1BK 1I/O - AFR NO C/W	*Call

Machine Type	Model	Feature	Description	GSA Price
2817<2097		4017<4312	1BK 2I/O - AFR NO C/W	*Call
2817<2097		4017<4313	1BK 3I/O - AFR NO C/W	*Call
2817<2097		4017<4321	2BK 1I/O - AFR NO C/W	*Call
2817<2097		4017<4322	2BK 2I/O - AFR NO C/W	*Call
2817<2097		4017<4323	2BK 3I/O - AFR NO C/W	*Call
2817<2097		4017<4331	3BK 1I/O - AFR NO C/W	*Call
2817<2097		4017<4332	3BK 2I/O - AFR NO C/W	*Call
2817<2097		4017<4333	3BK 3I/O - AFR NO C/W	*Call
2817<2097		4017<4341	4BK 1I/O - AFR NO C/W	*Call
2817<2097		4017<4342	4BK 2I/O - AFR NO C/W	*Call
2817<2097		4017<4343	4BK 3I/O - AFR NO C/W	*Call
2817<2097		4018<4311	1BK 1I/O - AFR C/W	*Call
2817<2097		4018<4312	1BK 2I/O - AFR C/W	*Call
2817<2097		4018<4313	1BK 3I/O - AFR C/W	*Call
2817<2097		4018<4321	2BK 1I/O - AFR C/W	*Call
2817<2097		4018<4322	2BK 2I/O - AFR C/W	*Call
2817<2097		4018<4323	2BK 3I/O - AFR C/W	*Call
2817<2097		4018<4331	3BK 1I/O - AFR C/W	*Call
2817<2097		4018<4332	3BK 2I/O - AFR C/W	*Call
2817<2097		4018<4333	3BK 3I/O - AFR C/W	*Call
2817<2097		4018<4341	4BK 1I/O - AFR C/W	*Call
2817<2097		4018<4342	4BK 2I/O - AFR C/W	*Call
2817<2097		4018<4343	4BK 3I/O - AFR C/W	*Call
2817<2097		4019<4311	1BK 1I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4312	1BK 2I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4313	1BK 3I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4321	2BK 1I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4322	2BK 2I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4323	2BK 3I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4331	3BK 1I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4332	3BK 2I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4333	3BK 3I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4341	4BK 1I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4342	4BK 2I/O - AFR MULT NO C/A	*Call
2817<2097		4019<4343	4BK 3I/O - AFR MULT NO C/A	*Call
2817<2097		4020<4311	1BK 1I/O - AFR MULT C/A	*Call
2817<2097		4020<4312	1BK 2I/O - AFR MULT C/A	*Call
2817<2097		4020<4313	1BK 3I/O - AFR MULT C/A	*Call
2817<2097		4020<4321	2BK 1I/O - AFR MULT C/A	*Call
2817<2097		4020<4322	2BK 2I/O - AFR MULT C/A	*Call
2817<2097		4020<4323	2BK 3I/O - AFR MULT C/A	*Call
2817<2097		4020<4331	3BK 1I/O - AFR MULT C/A	*Call
2817<2097		4020<4332	3BK 2I/O - AFR MULT C/A	*Call
2817<2097		4020<4333	3BK 3I/O - AFR MULT C/A	*Call
2817<2097		4020<4341	4BK 1I/O - AFR MULT C/A	*Call
2817<2097		4020<4342	4BK 2I/O - AFR MULT C/A	*Call
2817<2097		4020<4343	4BK 3I/O - AFR MULT C/A	*Call
2818	M10<M05		MODEL CONVERSION	*Call
2818		1136<1135	2818 M05 TO 2818 M10	*Call
2818		1903<1993	PREPLND MEMTOMEM CPTY INCR	*Call
2818		3394<3395	ICF TO IFL	*Call
2818		3394<3396	SAP OPTIONAL TO IFL	*Call
2818		3394<3397	ZAAP TO IFL	*Call
2818		3394<3398	ZIIP TO IFL	*Call
2818		3394<3399	UIFL TO IFL	*Call
2818		3395<3394	IFL TO ICF	*Call
2818		3395<3396	SAP OPTIONAL TO ICF	*Call

Machine Type	Model	Feature	Description	GSA Price
2818		3395<3397	ZAAP TO ICF	*Call
2818		3395<3398	ZIIP TO ICF	*Call
2818		3395<3399	UIFL TO ICF	*Call
2818		3396<3394	IFL TO SAP OPTIONAL	*Call
2818		3396<3395	ICF TO SAP OPTIONAL	*Call
2818		3396<3397	ZAAP TO SAP OPTIONAL	*Call
2818		3396<3398	ZIIP TO SAP OPTIONAL	*Call
2818		3396<3399	UIFL TO SAP OPTIONAL	*Call
2818		3397<3394	IFL TO ZAAP	*Call
2818		3397<3395	ICF TO ZAAP	*Call
2818		3397<3396	SAP OPTIONAL TO ZAAP	*Call
2818		3397<3398	ZIIP TO ZAAP	*Call
2818		3397<3399	UIFL TO ZAAP	*Call
2818		3398<3394	IFL TO ZIIP	*Call
2818		3398<3395	ICF TO ZIIP	*Call
2818		3398<3396	SAP OPTIONAL TO ZIIP	*Call
2818		3398<3397	ZAAP TO ZIIP	*Call
2818		3398<3399	UIFL TO ZIIP	*Call
2818		3399<3394	IFL TO UIFL	*Call
2818		3399<3395	ICF TO UIFL	*Call
2818		3399<3396	SAP OPTIONAL TO UIFL	*Call
2818		3399<3397	ZAAP TO UIFL	*Call
2818		3399<3398	ZIIP TO UIFL	*Call
2818<2096	M05<R07		MODEL CONVERSION	*Call
2818<2096	M05<S07		MODEL CONVERSION	*Call
2818<2096	M10<R07		MODEL CONVERSION	*Call
2818<2096	M10<S07		MODEL CONVERSION	*Call
2818<2096		1135<1115	2096 R07 TO 2818 M05	*Call
2818<2096		1135<1116	2096 S07 TO 2818 M05	*Call
2818<2096		1136<1115	2096 R07 TO 2818 M10	*Call
2818<2096		1136<1116	2096 S07 TO 2818 M10	*Call
2818<2096		3394<7838	ADDL SAP TO IFL	*Call
2818<2096		3394<7839	UIFL TO IFL	*Call
2818<2096		3394<7866	IFL TO IFL	*Call
2818<2096		3394<7867	ICF TO IFL	*Call
2818<2096		3394<7868	ZIIP TO IFL	*Call
2818<2096		3394<7869	ZAAP TO IFL	*Call
2818<2096		3395<7838	ADDL SAP TO ICF	*Call
2818<2096		3395<7839	UIFL TO ICF	*Call
2818<2096		3395<7866	IFL TO ICF	*Call
2818<2096		3395<7867	ICF TO ICF	*Call
2818<2096		3395<7868	ZIIP TO ICF	*Call
2818<2096		3395<7869	ZAAP TO ICF	*Call
2818<2096		3396<7838	ADDL SAP TO SAP OPTIONAL	*Call
2818<2096		3396<7839	UIFL TO SAP OPTIONAL	*Call
2818<2096		3396<7866	IFL TO SAP OPTIONAL	*Call
2818<2096		3396<7867	ICF TO SAP OPTIONAL	*Call
2818<2096		3396<7868	ZIIP TO SAP OPTIONAL	*Call
2818<2096		3396<7869	ZAAP TO SAP OPTIONAL	*Call
2818<2096		3397<7838	ADDL SAP TO ZAAP	*Call
2818<2096		3397<7839	UIFL TO ZAAP	*Call
2818<2096		3397<7866	IFL TO ZAAP	*Call
2818<2096		3397<7867	ICF TO ZAAP	*Call
2818<2096		3397<7868	ZIIP TO ZAAP	*Call
2818<2096		3397<7869	ZAAP TO ZAAP	*Call
2818<2096		3398<7838	ADDL SAP TO ZIIP	*Call
2818<2096		3398<7839	UIFL TO ZIIP	*Call

Machine Type	Model	Feature	Description	GSA Price
2818<2096		3398<7866	IFL TO ZIIP	*Call
2818<2096		3398<7867	ICF TO ZIIP	*Call
2818<2096		3398<7868	ZIIP TO ZIIP	*Call
2818<2096		3398<7869	ZAAP TO ZIIP	*Call
2818<2096		3399<7838	ADDL SAP TO UIFL	*Call
2818<2096		3399<7839	UIFL TO UIFL	*Call
2818<2096		3399<7866	IFL TO UIFL	*Call
2818<2096		3399<7867	ICF TO UIFL	*Call
2818<2096		3399<7868	ZIIP TO UIFL	*Call
2818<2096		3399<7869	ZAAP TO UIFL	*Call
2818<2098	M05<E10		MODEL CONVERSION	*Call
2818<2098	M10<E10		MODEL CONVERSION	*Call
2818<2098		1135<1123	2098 E10 TO 2818 M05	*Call
2818<2098		1136<1123	2098 E10 TO 2818 M10	*Call
2818<2098		1903<1991	PREPLND MEMTOMEM CPTY INCR	*Call
2818<2098		3394<6650	IFL TO IFL	*Call
2818<2098		3394<6651	ICF TO IFL	*Call
2818<2098		3394<6652	ADDL SAP TO IFL	*Call
2818<2098		3394<6653	ZAAP TO IFL	*Call
2818<2098		3394<6654	ZIIP TO IFL	*Call
2818<2098		3394<6655	UIFL TO IFL	*Call
2818<2098		3395<6650	IFL TO ICF	*Call
2818<2098		3395<6651	ICF TO ICF	*Call
2818<2098		3395<6652	ADDL SAP TO ICF	*Call
2818<2098		3395<6653	ZAAP TO ICF	*Call
2818<2098		3395<6654	ZIIP TO ICF	*Call
2818<2098		3395<6655	UIFL TO ICF	*Call
2818<2098		3396<6650	IFL TO SAP OPTIONAL	*Call
2818<2098		3396<6651	ICF TO SAP OPTIONAL	*Call
2818<2098		3396<6652	ADDL SAP TO SAP OPTIONAL	*Call
2818<2098		3396<6653	ZAAP TO SAP OPTIONAL	*Call
2818<2098		3396<6654	ZIIP TO SAP OPTIONAL	*Call
2818<2098		3396<6655	UIFL TO SAP OPTIONAL	*Call
2818<2098		3397<6650	IFL TO ZAAP	*Call
2818<2098		3397<6651	ICF TO ZAAP	*Call
2818<2098		3397<6652	ADDL SAP TO ZAAP	*Call
2818<2098		3397<6653	ZAAP TO ZAAP	*Call
2818<2098		3397<6654	ZIIP TO ZAAP	*Call
2818<2098		3397<6655	UIFL TO ZAAP	*Call
2818<2098		3398<6650	IFL TO ZIIP	*Call
2818<2098		3398<6651	ICF TO ZIIP	*Call
2818<2098		3398<6652	ADDL SAP TO ZIIP	*Call
2818<2098		3398<6653	ZAAP TO ZIIP	*Call
2818<2098		3398<6654	ZIIP TO ZIIP	*Call
2818<2098		3398<6655	UIFL TO ZIIP	*Call
2818<2098		3399<6650	IFL TO UIFL	*Call
2818<2098		3399<6651	ICF TO UIFL	*Call
2818<2098		3399<6652	ADDL SAP TO UIFL	*Call
2818<2098		3399<6653	ZAAP TO UIFL	*Call
2818<2098		3399<6654	ZIIP TO UIFL	*Call
2818<2098		3399<6655	UIFL TO UIFL	*Call
2827		1096<1095	H20 R TO H43 R	*Call
2827		1097<1095	H20 R TO H66 R	*Call
2827		1097<1096	H43 R TO H66 R	*Call
2827		1098<1095	H20 R TO H89 R	*Call
2827		1098<1096	H43 R TO H89 R	*Call
2827		1098<1097	H66 R TO H89 R	*Call

Machine Type	Model	Feature	Description	GSA Price
2827		1100<1099	H20 W TO H43 W	*Call
2827		1101<1099	H20 W TO H66 W	*Call
2827		1101<1100	H43 W TO H66 W	*Call
2827		1102<1099	H20 W TO H89 W	*Call
2827		1102<1100	H43 W TO H89 W	*Call
2827		1102<1101	H66 W TO H89 W	*Call
2827		1106<1095	H20 R TO HA1 R	*Call
2827		1106<1097	H66 R TO HA1 R	*Call
2827		1145<1100	H43 W TO HA1 W	*Call
2827		1145<1101	H66 W TO HA1 W	*Call
2827		1898<1990	³REPLND MEMTO32GBCPTYINCR	*Call
2827		1899<1996	³REPLND MEMTO16GBCPTYINCR	*Call
2827		1909<1910	ICF TO IFL	*Call
2827		1909<1911	SAP(OPT) TO IFL	*Call
2827		1909<1912	ZAAP TO IFL	*Call
2827		1909<1913	ZIIP TO IFL	*Call
2827		1910<1912	ZAAP TO ICF	*Call
2827		1911<1912	ZAAP TO SAP(OPT)	*Call
2827		1911<1914	UIFL TO SAP(OPT)	*Call
2827		1912<1909	IFL TO ZAAP	*Call
2827		1912<1910	ICF TO ZAAP	*Call
2827		1912<1911	SAP(OPT) TO ZAAP	*Call
2827		1912<1913	ZIIP TO ZAAP	*Call
2827		1912<1914	UIFL TO ZAAP	*Call
2827		1913<1909	IFL TO ZIIP	*Call
2827		1913<1910	ICF TO ZIIP	*Call
2827		1913<1911	SAP(OPT) TO ZIIP	*Call
2827		1913<1912	ZAAP TO ZIIP	*Call
2827		1913<1914	UIFL TO ZIIP	*Call
2827		1914<1910	ICF TO UIFL	*Call
2827		1914<1911	SAP(OPT) TO UIFL	*Call
2827		1914<1912	ZAAP TO UIFL	*Call
2827		1914<1913	ZIIP TO UIFL	*Call
2827		4022<4025	AFR W SINGLE-AFR W MULTI	*Call
2827		4024<4026	AFR R SINGLE-AFR R MULTI	*Call
2827<2097		1095<1117	E12 TO H20 R	*Call
2827<2097		1095<1118	E26 TO H20 R	*Call
2827<2097		1095<1119	E40 TO H20 R	*Call
2827<2097		1095<1120	E56 TO H20 R	*Call
2827<2097		1095<1121	E64 TO H20 R	*Call
2827<2097		1096<1117	E12 TO H43 R	*Call
2827<2097		1096<1118	E26 TO H43 R	*Call
2827<2097		1096<1119	E40 TO H43 R	*Call
2827<2097		1096<1120	E56 TO H43 R	*Call
2827<2097		1096<1121	E64 TO H43 R	*Call
2827<2097		1097<1117	E12 TO H66 R	*Call
2827<2097		1097<1118	E26 TO H66 R	*Call
2827<2097		1097<1119	E40 TO H66 R	*Call
2827<2097		1097<1120	E56 TO H66 R	*Call
2827<2097		1097<1121	E64 TO H66 R	*Call
2827<2097		1098<1117	E12 TO H89 R	*Call
2827<2097		1098<1118	E26 TO H89 R	*Call
2827<2097		1098<1119	E40 TO H89 R	*Call
2827<2097		1098<1120	E56 TO H89 R	*Call
2827<2097		1098<1121	E64 TO H89 R	*Call
2827<2097		1099<1117	E12 TO H20 W	*Call
2827<2097		1099<1118	E26 TO H20 W	*Call

Machine Type	Model	Feature	Description	GSA Price
2827<2097		1099<1119	E40 TO H20 W	*Call
2827<2097		1099<1120	E56 TO H20 W	*Call
2827<2097		1099<1121	E64 TO H20 W	*Call
2827<2097		1100<1117	E12 TO H43 W	*Call
2827<2097		1100<1118	E26 TO H43 W	*Call
2827<2097		1100<1119	E40 TO H43 W	*Call
2827<2097		1100<1120	E56 TO H43 W	*Call
2827<2097		1100<1121	E64 TO H43 W	*Call
2827<2097		1101<1117	E12 TO H66 W	*Call
2827<2097		1101<1118	E26 TO H66 W	*Call
2827<2097		1101<1119	E40 TO H66 W	*Call
2827<2097		1101<1120	E56 TO H66 W	*Call
2827<2097		1101<1121	E64 TO H66 W	*Call
2827<2097		1102<1117	E12 TO H89 W	*Call
2827<2097		1102<1118	E26 TO H89 W	*Call
2827<2097		1102<1119	E40 TO H89 W	*Call
2827<2097		1102<1120	E56 TO H89 W	*Call
2827<2097		1102<1121	E64 TO H89 W	*Call
2827<2097		1106<1117	E12 TO HA1 R	*Call
2827<2097		1106<1118	E26 TO HA1 R	*Call
2827<2097		1106<1119	E40 TO HA1 R	*Call
2827<2097		1106<1120	E56 TO HA1 R	*Call
2827<2097		1106<1121	E64 TO HA1 R	*Call
2827<2097		1145<1117	E12 TO HA1 W	*Call
2827<2097		1145<1118	E26 TO HA1 W	*Call
2827<2097		1145<1119	E40 TO HA1 W	*Call
2827<2097		1145<1120	E56 TO HA1 W	*Call
2827<2097		1145<1121	E64 TO HA1 W	*Call
2827<2097		1898<1996	16GBPREPLNDTO32GBCPTYINCR	*Call
2827<2097		1899<1996	16GBPREPLNDTO16GBCPTYINCR	*Call
2827<2097		1909<6811	IFL TO IFL	*Call
2827<2097		1909<6812	ICF TO IFL	*Call
2827<2097		1909<6813	SAP OPTIONAL TO IFL	*Call
2827<2097		1909<6814	ZAAP TO IFL	*Call
2827<2097		1909<6815	ZIIP TO IFL	*Call
2827<2097		1909<6816	UIFL TO IFL	*Call
2827<2097		1910<6811	IFL TO ICF	*Call
2827<2097		1910<6812	ICF TO ICF	*Call
2827<2097		1910<6813	SAP OPTIONAL TO ICF	*Call
2827<2097		1910<6814	ZAAP TO ICF	*Call
2827<2097		1910<6815	ZIIP TO ICF	*Call
2827<2097		1910<6816	UIFL TO ICF	*Call
2827<2097		1911<6811	IFL TO SAP(OPT)	*Call
2827<2097		1911<6812	ICF TO SAP(OPT)	*Call
2827<2097		1911<6814	ZAAP TO SAP(OPT)	*Call
2827<2097		1911<6815	ZIIP TO SAP(OPT)	*Call
2827<2097		1911<6816	UIFL TO SAP(OPT)	*Call
2827<2097		1912<6811	IFL TO ZAAP	*Call
2827<2097		1912<6812	ICF TO ZAAP	*Call
2827<2097		1912<6813	SAP OPTIONAL TO ZAAP	*Call
2827<2097		1912<6814	ZAAP TO ZAAP	*Call
2827<2097		1912<6815	ZIIP TO ZAAP	*Call
2827<2097		1912<6816	UIFL TO ZAAP	*Call
2827<2097		1913<6811	IFL TO ZIIP	*Call
2827<2097		1913<6812	ICF TO ZIIP	*Call
2827<2097		1913<6813	SAP OPTIONAL TO ZIIP	*Call
2827<2097		1913<6814	ZAAP TO ZIIP	*Call

Machine Type	Model	Feature	Description	GSA Price
2827<2097		1913<6815	ZIIP TO ZIIP	*Call
2827<2097		1913<6816	UIFL TO ZIIP	*Call
2827<2097		1914<6811	IFL TO UIFL	*Call
2827<2097		1914<6812	ICF TO UIFL	*Call
2827<2097		1914<6813	SAP OPTIONAL TO UIFL	*Call
2827<2097		1914<6814	ZAAP TO UIFL	*Call
2827<2097		1914<6815	ZIIP TO UIFL	*Call
2827<2097		1914<6816	UIFL TO UIFL	*Call
2827<2097		4022<4311	1BK 1I/O - AFR W MULTI	*Call
2827<2097		4022<4312	1BK 2I/O - AFR W MULTI	*Call
2827<2097		4022<4313	1BK 3I/O - AFR W MULTI	*Call
2827<2097		4022<4321	2BK 1I/O - AFR W MULTI	*Call
2827<2097		4022<4322	2BK 2I/O - AFR W MULTI	*Call
2827<2097		4022<4323	2BK 3I/O - AFR W MULTI	*Call
2827<2097		4022<4331	3BK 1I/O - AFR W MULTI	*Call
2827<2097		4022<4332	3BK 2I/O - AFR W MULTI	*Call
2827<2097		4022<4333	3BK 3I/O - AFR W MULTI	*Call
2827<2097		4022<4341	4BK 1I/O - AFR W MULTI	*Call
2827<2097		4022<4342	4BK 2I/O - AFR W MULTI	*Call
2827<2097		4022<4343	4BK 3I/O - AFR W MULTI	*Call
2827<2097		4024<4311	1BK 1I/O - AFR R MULTI	*Call
2827<2097		4024<4312	1BK 2I/O - AFR R MULTI	*Call
2827<2097		4024<4313	1BK 3I/O - AFR R MULTI	*Call
2827<2097		4024<4321	2BK 1I/O - AFR R MULTI	*Call
2827<2097		4024<4322	2BK 2I/O - AFR R MULTI	*Call
2827<2097		4024<4323	2BK 3I/O - AFR R MULTI	*Call
2827<2097		4024<4331	3BK 1I/O - AFR R MULTI	*Call
2827<2097		4024<4332	3BK 2I/O - AFR R MULTI	*Call
2827<2097		4024<4333	3BK 3I/O - AFR R MULTI	*Call
2827<2097		4024<4341	4BK 1I/O - AFR R MULTI	*Call
2827<2097		4024<4342	4BK 2I/O - AFR R MULTI	*Call
2827<2097		4024<4343	4BK 3I/O - AFR R MULTI	*Call
2827<2097		4025<4311	1BK 1I/O - AFR W SINGLE	*Call
2827<2097		4025<4312	1BK 2I/O - AFR W SINGLE	*Call
2827<2097		4025<4313	1BK 3I/O - AFR W SINGLE	*Call
2827<2097		4025<4321	2BK 1I/O - AFR W SINGLE	*Call
2827<2097		4025<4322	2BK 2I/O - AFR W SINGLE	*Call
2827<2097		4025<4323	2BK 3I/O - AFR W SINGLE	*Call
2827<2097		4025<4331	3BK 1I/O - AFR W SINGLE	*Call
2827<2097		4025<4332	3BK 2I/O - AFR W SINGLE	*Call
2827<2097		4025<4333	3BK 3I/O - AFR W SINGLE	*Call
2827<2097		4025<4341	4BK 1I/O - AFR W SINGLE	*Call
2827<2097		4025<4342	4BK 2I/O - AFR W SINGLE	*Call
2827<2097		4025<4343	4BK 3I/O - AFR W SINGLE	*Call
2827<2097		4026<4311	1BK 1I/O - AFR R SINGLE	*Call
2827<2097		4026<4312	1BK 2I/O - AFR R SINGLE	*Call
2827<2097		4026<4313	1BK 3I/O - AFR R SINGLE	*Call
2827<2097		4026<4321	2BK 1I/O - AFR R SINGLE	*Call
2827<2097		4026<4322	2BK 2I/O - AFR R SINGLE	*Call
2827<2097		4026<4323	2BK 3I/O - AFR R SINGLE	*Call
2827<2097		4026<4331	3BK 1I/O - AFR R SINGLE	*Call
2827<2097		4026<4332	3BK 2I/O - AFR R SINGLE	*Call
2827<2097		4026<4333	3BK 3I/O - AFR R SINGLE	*Call
2827<2097		4026<4341	4BK 1I/O - AFR R SINGLE	*Call
2827<2097		4026<4342	4BK 2I/O - AFR R SINGLE	*Call
2827<2097		4026<4343	4BK 3I/O - AFR R SINGLE	*Call
2827<2817		1095<1125	M15 A TO H20 R	*Call

Machine Type	Model	Feature	Description	GSA Price
2827<2817		1095<1126	M32 A TO H20 R	*Call
2827<2817		1095<1127	M49 A TO H20 R	*Call
2827<2817		1095<1128	M66 A TO H20 R	*Call
2827<2817		1095<1129	M80 A TO H20 R	*Call
2827<2817		1096<1125	M15 A TO H43 R	*Call
2827<2817		1096<1126	M32 A TO H43 R	*Call
2827<2817		1096<1127	M49 A TO H43 R	*Call
2827<2817		1096<1128	M66 A TO H43 R	*Call
2827<2817		1096<1129	M80 A TO H43 R	*Call
2827<2817		1097<1125	M15 A TO H66 R	*Call
2827<2817		1097<1126	M32 A TO H66 R	*Call
2827<2817		1097<1127	M49 A TO H66 R	*Call
2827<2817		1097<1128	M66 A TO H66 R	*Call
2827<2817		1097<1129	M80 A TO H66 R	*Call
2827<2817		1098<1125	M15 A TO H89 R	*Call
2827<2817		1098<1126	M32 A TO H89 R	*Call
2827<2817		1098<1127	M49 A TO H89 R	*Call
2827<2817		1098<1128	M66 A TO H89 R	*Call
2827<2817		1098<1129	M80 A TO H89 R	*Call
2827<2817		1099<1125	M15 A TO H20 W	*Call
2827<2817		1099<1126	M32 A TO H20 W	*Call
2827<2817		1099<1127	M49 A TO H20 W	*Call
2827<2817		1099<1128	M66 A TO H20 W	*Call
2827<2817		1099<1129	M80 A TO H20 W	*Call
2827<2817		1099<1130	M15 W TO H20 W	*Call
2827<2817		1099<1131	M32 W TO H20 W	*Call
2827<2817		1099<1132	M49 W TO H20 W	*Call
2827<2817		1099<1133	M66 W TO H20 W	*Call
2827<2817		1099<1134	M80 W TO H20 W	*Call
2827<2817		1100<1125	M15 A TO H43 W	*Call
2827<2817		1100<1126	M32 A TO H43 W	*Call
2827<2817		1100<1127	M49 A TO H43 W	*Call
2827<2817		1100<1128	M66 A TO H43 W	*Call
2827<2817		1100<1129	M80 A TO H43 W	*Call
2827<2817		1100<1130	M15 W TO H43 W	*Call
2827<2817		1100<1131	M32 W TO H43 W	*Call
2827<2817		1100<1132	M49 W TO H43 W	*Call
2827<2817		1100<1133	M66 W TO H43 W	*Call
2827<2817		1100<1134	M80 W TO H43 W	*Call
2827<2817		1101<1125	M15 A TO H66 W	*Call
2827<2817		1101<1126	M32 A TO H66 W	*Call
2827<2817		1101<1127	M49 A TO H66 W	*Call
2827<2817		1101<1128	M66 A TO H66 W	*Call
2827<2817		1101<1129	M80 A TO H66 W	*Call
2827<2817		1101<1130	M15 W TO H66 W	*Call
2827<2817		1101<1131	M32 W TO H66 W	*Call
2827<2817		1101<1132	M49 W TO H66 W	*Call
2827<2817		1101<1133	M66 W TO H66 W	*Call
2827<2817		1101<1134	M80 W TO H66 W	*Call
2827<2817		1102<1125	M15 A TO H89 W	*Call
2827<2817		1102<1126	M32 A TO H89 W	*Call
2827<2817		1102<1127	M49 A TO H89 W	*Call
2827<2817		1102<1128	M66 A TO H89 W	*Call
2827<2817		1102<1129	M80 A TO H89 W	*Call
2827<2817		1102<1130	M15 W TO H89 W	*Call
2827<2817		1102<1131	M32 W TO H89 W	*Call
2827<2817		1102<1132	M49 W TO H89 W	*Call

Machine Type	Model	Feature	Description	GSA Price
2827<2817		1102<1133	M66 W TO H89 W	*Call
2827<2817		1102<1134	M80 W TO H89 W	*Call
2827<2817		1106<1125	M15 A TO HA1 R	*Call
2827<2817		1106<1126	M32 A TO HA1 R	*Call
2827<2817		1106<1127	M49 A TO HA1 R	*Call
2827<2817		1106<1128	M66 A TO HA1 R	*Call
2827<2817		1106<1129	M80 A TO HA1 R	*Call
2827<2817		1145<1125	M15 A TO HA1 W	*Call
2827<2817		1145<1126	M32 A TO HA1 W	*Call
2827<2817		1145<1127	M49 A TO HA1 W	*Call
2827<2817		1145<1128	M66 A TO HA1 W	*Call
2827<2817		1145<1129	M80 A TO HA1 W	*Call
2827<2817		1145<1130	M15 W TO HA1 W	*Call
2827<2817		1145<1131	M32 W TO HA1 W	*Call
2827<2817		1145<1132	M49 W TO HA1 W	*Call
2827<2817		1145<1133	M66 W TO HA1 W	*Call
2827<2817		1145<1134	M80 W TO HA1 W	*Call
2827<2817		1898<1996	PREPLND MEMTO32GBCPTYINCR	*Call
2827<2817		1899<1996	PREPLND MEMTO16GBCPTYINCR	*Call
2827<2817		1909<1881	IFL TO IFL	*Call
2827<2817		1909<1882	ICF TO IFL	*Call
2827<2817		1909<1883	SAP(OPT) TO IFL	*Call
2827<2817		1909<1884	ZAAP TO IFL	*Call
2827<2817		1909<1885	ZIIP TO IFL	*Call
2827<2817		1909<1886	UIFL TO IFL	*Call
2827<2817		1910<1881	IFL TO ICF	*Call
2827<2817		1910<1882	ICF TO ICF	*Call
2827<2817		1910<1883	SAP(OPT) TO ICF	*Call
2827<2817		1910<1884	ZAAP TO ICF	*Call
2827<2817		1910<1885	ZIIP TO ICF	*Call
2827<2817		1910<1886	UIFL TO ICF	*Call
2827<2817		1911<1881	IFL TO SAP(OPT)	*Call
2827<2817		1911<1882	ICF TO SAP(OPT)	*Call
2827<2817		1911<1884	ZAAP TO SAP(OPT)	*Call
2827<2817		1911<1885	ZIIP TO SAP(OPT)	*Call
2827<2817		1911<1886	UIFL TO SAP(OPT)	*Call
2827<2817		1912<1881	IFL TO ZAAP	*Call
2827<2817		1912<1882	ICF TO ZAAP	*Call
2827<2817		1912<1883	SAP(OPT) TO ZAAP	*Call
2827<2817		1912<1884	ZAAP TO ZAAP	*Call
2827<2817		1912<1885	ZIIP TO ZAAP	*Call
2827<2817		1912<1886	UIFL TO ZAAP	*Call
2827<2817		1913<1881	IFL TO ZIIP	*Call
2827<2817		1913<1882	ICF TO ZIIP	*Call
2827<2817		1913<1883	SAP(OPT) TO ZIIP	*Call
2827<2817		1913<1884	ZAAP TO ZIIP	*Call
2827<2817		1913<1885	ZIIP TO ZIIP	*Call
2827<2817		1913<1886	UIFL TO ZIIP	*Call
2827<2817		1914<1881	IFL TO UIFL	*Call
2827<2817		1914<1882	ICF TO UIFL	*Call
2827<2817		1914<1883	SAP(OPT) TO UIFL	*Call
2827<2817		1914<1884	ZAAP TO UIFL	*Call
2827<2817		1914<1885	ZIIP TO UIFL	*Call
2827<2817		1914<1886	UIFL TO UIFL	*Call
2827<2817		4022<4015	AFR NO C/A-AFR W MULTI	*Call
2827<2817		4022<4016	AFR C/A-AFR W MULTI	*Call
2827<2817		4022<4017	AFR NO C/W-AFR W MULTI	*Call

Machine Type	Model	Feature	Description	GSA Price
2827<2817		4022<4018	AFR C/W-AFR W MULTI	*Call
2827<2817		4022<4019	AFRMULT NOC/A-AFR W MULTI	*Call
2827<2817		4022<4020	AFRMULT C/A-AFR W MULTI	*Call
2827<2817		4024<4015	AFR NO C/A-AFR R MULTI	*Call
2827<2817		4024<4016	AFR C/A-AFR R MULTI	*Call
2827<2817		4024<4019	AFRMULT NOC/A-AFR R MULTI	*Call
2827<2817		4024<4020	AFRMULT C/A-AFR R MULTI	*Call
2827<2817		4025<4015	AFR NO C/A-AFR W SINGLE	*Call
2827<2817		4025<4016	AFR C/A-AFR W SINGLE	*Call
2827<2817		4025<4017	AFR NO C/W-AFR W SINGLE	*Call
2827<2817		4025<4018	AFR C/W-AFR W SINGLE	*Call
2827<2817		4025<4019	AFRMULT NOC/A-AFR W SINGLE	*Call
2827<2817		4025<4020	AFRMULT C/A-AFR W SINGLE	*Call
2827<2817		4026<4015	AFR NO C/A-AFR R SINGLE	*Call
2827<2817		4026<4016	AFR C/A-AFR R SINGLE	*Call
2827<2817		4026<4019	AFRMULT NOC/A-AFR R SINGLE	*Call
2827<2817		4026<4020	AFRMULT C/A-AFR R SINGLE	*Call
2827<2828		0101<0138	CP 2PK TO CP 10PK	*Call
2827<2828		0101<0140	CP 4PK TO CP 10PK	*Call
2827<2828		0101<0142	CP 6PK TO CP 10PK	*Call
2827<2828		1095<1148	H13 TO H20 RAD	*Call
2827<2828		1899<1993	PREPLND MEM TO 16GB MEMCPTYI	*Call
2827<2828		1909<5796	SAP OPTIONAL TO IFL	*Call
2827<2828		1909<5797	ZAAP TO IFL	*Call
2827<2828		1909<5798	ZIIP TO IFL	*Call
2827<2828		1910<5794	IFL TO ICF	*Call
2827<2828		1910<5796	SAP OPTIONAL TO ICF	*Call
2827<2828		1910<5797	ZAAP TO ICF	*Call
2827<2828		1910<5798	ZIIP TO ICF	*Call
2827<2828		1910<5799	UIFL TO ICF	*Call
2827<2828		1911<5794	IFL TO SAP(OPT)	*Call
2827<2828		1911<5795	ICF TO SAP(OPT)	*Call
2827<2828		1911<5797	ZAAP TO SAP(OPT)	*Call
2827<2828		1911<5798	ZIIP TO SAP(OPT)	*Call
2827<2828		1911<5799	UIFL TO SAP(OPT)	*Call
2827<2828		1912<5794	IFL TO ZAAP	*Call
2827<2828		1912<5795	ICF TO ZAAP	*Call
2827<2828		1912<5796	SAP OPTIONAL TO ZAAP	*Call
2827<2828		1912<5798	ZIIP TO ZAAP	*Call
2827<2828		1912<5799	UIFL TO ZAAP	*Call
2827<2828		1913<5794	IFL TO ZIIP	*Call
2827<2828		1913<5795	ICF TO ZIIP	*Call
2827<2828		1913<5796	SAP OPTIONAL TO ZIIP	*Call
2827<2828		1913<5797	ZAAP TO ZIIP	*Call
2827<2828		1913<5799	UIFL TO ZIIP	*Call
2827<2828		1914<5794	IFL TO UIFL	*Call
2827<2828		1914<5796	SAP OPTIONAL TO UIFL	*Call
2827<2828		1914<5797	ZAAP TO UIFL	*Call
2827<2828		1914<5798	ZIIP TO UIFL	*Call
2827<2828		1996<1993	PREPLN MEM TO 16GBPREPLNMEM	*Call
2828		0140<0138	CP 2PK TO CP 4PK	*Call
2828		0142<0138	CP 2PK TO CP 6PK	*Call
2828		0142<0140	CP 4PK TO CP 6PK	*Call
2828		0150<0138	CP 2PK TO CP 10PK	*Call
2828		0150<0140	CP 4PK TO CP 10PK	*Call
2828		0150<0142	CP 6PK TO CP 10PK	*Call
2828		1148<1147	H06 TO H13	*Call

Machine Type	Model	Feature	Description	GSA Price
2828		1903<1993	REPLND MEMTO8GB MEMCPTYINCF	*Call
2828		5794<5795	ICF TO IFL	*Call
2828		5794<5796	SAP OPTIONAL TO IFL	*Call
2828		5794<5797	ZAAP TO IFL	*Call
2828		5794<5798	ZIIP TO IFL	*Call
2828		5795<5794	IFL TO ICF	*Call
2828		5795<5796	SAP OPTIONAL TO ICF	*Call
2828		5795<5797	ZAAP TO ICF	*Call
2828		5795<5798	ZIIP TO ICF	*Call
2828		5795<5799	UIFL TO ICF	*Call
2828		5796<5794	IFL TO SAP OPTIONAL	*Call
2828		5796<5795	ICF TO SAP OPTIONAL	*Call
2828		5796<5797	ZAAP TO SAP OPTIONAL	*Call
2828		5796<5798	ZIIP TO SAP OPTIONAL	*Call
2828		5796<5799	UIFL TO SAP OPTIONAL	*Call
2828		5797<5794	IFL TO ZAAP	*Call
2828		5797<5795	ICF TO ZAAP	*Call
2828		5797<5796	SAP OPTIONAL TO ZAAP	*Call
2828		5797<5798	ZIIP TO ZAAP	*Call
2828		5797<5799	UIFL TO ZAAP	*Call
2828		5798<5794	IFL TO ZIIP	*Call
2828		5798<5795	ICF TO ZIIP	*Call
2828		5798<5796	SAP OPTIONAL TO ZIIP	*Call
2828		5798<5797	ZAAP TO ZIIP	*Call
2828		5798<5799	UIFL TO ZIIP	*Call
2828		5799<5795	ICF TO UIFL	*Call
2828		5799<5796	SAP OPTIONAL TO UIFL	*Call
2828		5799<5797	ZAAP TO UIFL	*Call
2828		5799<5798	ZIIP TO UIFL	*Call
2828<2098		1148<1123	E10 TO H13	*Call
2828<2098		1903<1991	REPLND MEMTO8GB MEMCPTYINCF	*Call
2828<2098		5794<6650	IFL TO IFL	*Call
2828<2098		5794<6651	ICF TO IFL	*Call
2828<2098		5794<6652	ADDL SAP TO IFL	*Call
2828<2098		5794<6653	ZAAP TO IFL	*Call
2828<2098		5794<6654	ZIIP TO IFL	*Call
2828<2098		5794<6655	UIFL TO IFL	*Call
2828<2098		5795<6650	IFL TO ICF	*Call
2828<2098		5795<6651	ICF TO ICF	*Call
2828<2098		5795<6652	ADDL SAP TO ICF	*Call
2828<2098		5795<6653	ZAAP TO ICF	*Call
2828<2098		5795<6654	ZIIP TO ICF	*Call
2828<2098		5795<6655	UIFL TO ICF	*Call
2828<2098		5796<6650	IFL TO SAP OPTIONAL	*Call
2828<2098		5796<6651	ICF TO SAP OPTIONAL	*Call
2828<2098		5796<6653	ZAAP TO SAP OPTIONAL	*Call
2828<2098		5796<6654	ZIIP TO SAP OPTIONAL	*Call
2828<2098		5796<6655	UIFL TO SAP OPTIONAL	*Call
2828<2098		5797<6650	IFL TO ZAAP	*Call
2828<2098		5797<6651	ICF TO ZAAP	*Call
2828<2098		5797<6652	ADDL SAP TO ZAAP	*Call
2828<2098		5797<6653	ZAAP TO ZAAP	*Call
2828<2098		5797<6654	ZIIP TO ZAAP	*Call
2828<2098		5797<6655	UIFL TO ZAAP	*Call
2828<2098		5798<6650	IFL TO ZIIP	*Call
2828<2098		5798<6651	ICF TO ZIIP	*Call
2828<2098		5798<6652	ADDL SAP TO ZIIP	*Call

Machine Type	Model	Feature	Description	GSA Price
2828<2098		5798<6653	ZAAP TO ZIIP	*Call
2828<2098		5798<6654	ZIIP TO ZIIP	*Call
2828<2098		5798<6655	UIFL TO ZIIP	*Call
2828<2098		5799<6650	IFL TO UIFL	*Call
2828<2098		5799<6651	ICF TO UIFL	*Call
2828<2098		5799<6652	ADDL SAP TO UIFL	*Call
2828<2098		5799<6653	ZAAP TO UIFL	*Call
2828<2098		5799<6654	ZIIP TO UIFL	*Call
2828<2098		5799<6655	UIFL TO UIFL	*Call
2828<2818		1148<1135	M05 TO H13	*Call
2828<2818		1148<1136	M10 TO H13	*Call
2828<2818		1903<1993	REPLND MEMT08GB MEMCPTYINCF	*Call
2828<2818		5794<3394	IFL TO IFL	*Call
2828<2818		5794<3395	ICF TO IFL	*Call
2828<2818		5794<3396	ADDL SAP TO IFL	*Call
2828<2818		5794<3397	ZAAP TO IFL	*Call
2828<2818		5794<3398	ZIIP TO IFL	*Call
2828<2818		5794<3399	UIFL TO IFL	*Call
2828<2818		5795<3394	IFL TO ICF	*Call
2828<2818		5795<3395	ICF TO ICF	*Call
2828<2818		5795<3396	ADDL SAP TO ICF	*Call
2828<2818		5795<3397	ZAAP TO ICF	*Call
2828<2818		5795<3398	ZIIP TO ICF	*Call
2828<2818		5795<3399	UIFL TO ICF	*Call
2828<2818		5796<3394	IFL TO SAP OPTIONAL	*Call
2828<2818		5796<3395	ICF TO SAP OPTIONAL	*Call
2828<2818		5796<3397	ZAAP TO SAP OPTIONAL	*Call
2828<2818		5796<3398	ZIIP TO SAP OPTIONAL	*Call
2828<2818		5796<3399	UIFL TO SAP OPTIONAL	*Call
2828<2818		5797<3394	IFL TO ZAAP	*Call
2828<2818		5797<3395	ICF TO ZAAP	*Call
2828<2818		5797<3396	ADDL SAP TO ZAAP	*Call
2828<2818		5797<3397	ZAAP TO ZAAP	*Call
2828<2818		5797<3398	ZIIP TO ZAAP	*Call
2828<2818		5797<3399	UIFL TO ZAAP	*Call
2828<2818		5798<3394	IFL TO ZIIP	*Call
2828<2818		5798<3395	ICF TO ZIIP	*Call
2828<2818		5798<3396	ADDL SAP TO ZIIP	*Call
2828<2818		5798<3397	ZAAP TO ZIIP	*Call
2828<2818		5798<3398	ZIIP TO ZIIP	*Call
2828<2818		5798<3399	UIFL TO ZIIP	*Call
2828<2818		5799<3394	IFL TO UIFL	*Call
2828<2818		5799<3395	ICF TO UIFL	*Call
2828<2818		5799<3396	ADDL SAP TO UIFL	*Call
2828<2818		5799<3397	ZAAP TO UIFL	*Call
2828<2818		5799<3398	ZIIP TO UIFL	*Call
2828<2818		5799<3399	UIFL TO UIFL	*Call
3494		1118<1001	FEATURE CONVERSION 1001-1118	22,569
3494		3705<3704	3704 TO 3705	56,423
3494		4001<4000	CONVERT FC 4000 TO FC 4001	3,526
3590		3434<3412	DUAL ESCON TO 2-GBPS FICON	10,806
3590		3434<3432	1-GBPS FICON LW TO 2-GBPS	10,806
3590		3434<3433	1-GBPS FICON SW TO 2-GBPS	10,806
3590		3435<3412	DUAL ESCON TO 2-GBPS FICON	10,806
3590		3435<3432	1-GBPS FICON LW TO 2-GBPS	10,806
3590		3435<3433	1-GBPS FICON SW TO 2-GBPS	10,806
3590		5097<5098	CONVERT 3590 FC 5098 TO 5097	1,345

Machine Type	Model	Feature	Description	GSA Price
3957		3441<3442	FICON ATTACH	9,710
3957		3441<3443	FICON ATTACH	9,710
3957		3442<3441	FICON ATTACH	9,710
3957		3443<3441	FICON ATTACH	11,731
3957		3443<3442	FICON ATTACH	11,731
7040		4468<4183	16GB MEM TO 64GB MEM	114,808
7040		4468<4466	16GB 633MHZ-64GB 633MHZ	119,142
7040		4470<4188	32GB MEM TO 128GB MEM	184,597
7868	047<046		Model Upgrade	2,665
8203<9406		5577<1615	FEAT CONV 1615 TO 5577	6,105
8203<9406		5577<1616	FEAT CONV 1616 TO 5577	6,105
8203<9406		5577<1617	FEAT CONV 1617 TO 5577	6,105
8203<9406		5577<1618	FEAT CONV 1618 TO 5577	6,105
8203<9406		5577<1619	FEAT CONV 1619 TO 5577	6,105
8203<9406		5577<1620	FEAT CONV 1620 TO 5577	6,105
8203<9406		5577<1621	FEAT CONV 1621 TO 5577	6,105
8203<9406		5634<1615	FEAT CONV 1615 TO 5634	3,212
8203<9406		5634<1616	FEAT CONV 1616 TO 5634	3,212
8203<9406		5634<1617	FEAT CONV 1617 TO 5634	3,212
8203<9406		5634<1618	FEAT CONV 1618 TO 5634	3,212
8203<9406		5634<1619	FEAT CONV 1619 TO 5634	3,212
8203<9406		5634<1620	FEAT CONV 1620 TO 5634	3,212
8203<9406		5634<1621	FEAT CONV 1621 TO 5634	3,212
8204<9406	E8A<550		MODEL CONVERSION	4,551
8204<9406		4966<1625	FEAT CONV 1625 TO 4966	9,771
8204<9406		4966<1626	FEAT CONV 1626 TO 4966	9,771
8204<9406		4967<1625	FEAT CONV 1625 TO 4967	12,582
8204<9406		4967<1626	FEAT CONV 1626 TO 4967	12,582
8204<9406		4986<7323	FEAT CONV 7323 TO 4986	6,256
8204<9406		4986<7871	FEAT CONV 7871 TO 4986	6,256
8204<9406		4986<8413	FEAT CONV 8413 TO 4986	6,256
8204<9406		4986<8450	FEAT CONV 8450 TO 4986	6,256
8204<9406		4987<7323	FEAT CONV 7323 TO 4987	8,052
8204<9406		4987<7871	FEAT CONV 7871 TO 4987	8,052
8204<9406		4987<8413	FEAT CONV 8413 TO 4987	8,052
8204<9406		4987<8450	FEAT CONV 8450 TO 4987	8,052
9117<9406	MMA<570		MODEL CONVERSION	7,596
9117<9406		7380<1641	FEAT CONV 1641 TO 7380	7,735
9117<9406		7388<1641	FEAT CONV 1641 TO 7388	9,077
9117<9406		7540<1641	FEAT CONV 1641 TO 7540	16,327
9119	595<590		MODEL CONVERSION	25,350
9119	FHA<590		MODEL CONVERSION	50,700
9119	FHA<595		MODEL CONVERSION	40,262
9119	FHB<FHA		MODEL CONVERSION	40,262
9119		1814<7818	FEAT CONV 7818 TO 1814	976
9119		1816<1814	FEAT CONV 1814 TO 1816	2,050
9119		4500<7816	4GB DDR1- 0/4 GB DDR2	995
9119		4694<1630	FEAT CONV 1630 TO 4694	22,821
9119		4694<1631	FEAT CONV 1631 TO 4694	24,198
9119		4694<1632	FEAT CONV 1632 TO 4694	22,194
9119		4694<1633	FEAT CONV 1633 TO 4694	22,056
9119		4694<1634	FEAT CONV 1634 TO 4694	22,090
9119		4694<1635	FEAT CONV 1635 TO 4694	20,040
9119		4694<1636	FEAT CONV 1636 TO 4694	23,368
9119		4695<1630	FEAT CONV 1630 TO 4695	29,153
9119		4695<1631	FEAT CONV 1631 TO 4695	31,782
9119		4695<1632	FEAT CONV 1632 TO 4695	28,597

Machine Type	Model	Feature	Description	GSA Price
9119		4695<1633	FEAT CONV 1633 TO 4695	31,286
9119		4695<1634	FEAT CONV 1634 TO 4695	30,357
9119		4695<1635	FEAT CONV 1635 TO 4695	22,752
9119		4695<1636	FEAT CONV 1636 TO 4695	30,150
9119		4700<4694	FEAT CONV 4694 TO 4700	40,966
9119		4700<4695	FEAT CONV 4695 TO 4700	40,966
9119		4700<4705	FEAT CONV 4705 TO 4700	40,966
9119		4702<4694	FEAT CONV 4694 TO 4702	26,565
9119		4705<1630	FEAT CONV 1630 TO 4705	29,153
9119		4705<1631	FEAT CONV 1631 TO 4705	31,782
9119		4705<1632	FEAT CONV 1632 TO 4705	28,597
9119		4705<1633	FEAT CONV 1633 TO 4705	31,286
9119		4705<1634	FEAT CONV 1634 TO 4705	30,357
9119		4705<1635	FEAT CONV 1635 TO 4705	22,752
9119		4705<1636	FEAT CONV 1636 TO 4705	30,150
9119		4705<4694	FEAT CONV 4694 TO 4705	24,196
9119		4713<4754	FEAT CONV 4754 TO 4713	3,321
9119		4713<4755	FEAT CONV 4755 TO 4713	3,321
9119		4714<4754	FEAT CONV 4754 TO 4714	3,940
9119		4754<7667	FEAT CONV 7667 TO 4754	11,072
9119		4754<7668	FEAT CONV 7668 TO 4754	9,592
9119		4754<7693	FEAT CONV 7693 TO 4754	9,468
9119		4754<7815	FEAT CONV 7815 TO 4754	9,176
9119		4754<7925	FEAT CONV 7925 TO 4754	12,337
9119		4754<7990	FEAT CONV 7990 TO 4754	11,239
9119		4755<4754	FEAT CONV 4754 TO 4755	13,460
9119		4755<7667	FEAT CONV 7667 TO 4755	12,348
9119		4755<7668	FEAT CONV 7668 TO 4755	10,616
9119		4755<7693	FEAT CONV 7693 TO 4755	9,759
9119		4755<7815	FEAT CONV 7815 TO 4755	10,045
9119		4755<7925	FEAT CONV 7925 TO 4755	12,801
9119		4755<7990	FEAT CONV 7990 TO 4755	10,694
9119		5600<5693	FEAT CONV 5693 TO 5600	1,315
9119		5600<5694	FEAT CONV 5694 TO 5600	1,315
9119		5600<5695	FEAT CONV 5695 TO 5600	1,315
9119		5601<5694	FEAT CONV 5694 TO 5601	5,180
9119		5601<5695	FEAT CONV 5695 TO 5601	5,180
9119		5601<5696	FEAT CONV 5696 TO 5601	5,180
9119		5602<5695	FEAT CONV 5695 TO 5602	10,361
9119		5602<5696	FEAT CONV 5696 TO 5602	10,361
9119		5602<5697	FEAT CONV 5697 TO 5602	10,361
9119		5680<7669	FEAT CONV 7669 TO 5680	218
9119		5680<7970	FEAT CONV 7970 TO 5680	112
9119		5680<8471	FEAT CONV 8471 TO 5680	218
9119		5681<7280	FEAT CONV 7280 TO 5681	55,830
9119		5681<7799	FEAT CONV 7799 TO 5681	28,631
9119		5681<8472	FEAT CONV 8472 TO 5681	55,830
9119		5681<8493	FEAT CONV 8493 TO 5681	55,830
9119		5693<4500	FEAT CONV 4500 TO 5693	218
9119		5693<7814	FEAT CONV 7814 TO 5693	218
9119		5693<7816	FEAT CONV 7816 TO 5693	218
9119		5694<4500	FEAT CONV 4500 TO 5694	435
9119		5694<4501	FEAT CONV 4501 TO 5694	435
9119		5694<7814	FEAT CONV 7814 TO 5694	435
9119		5694<7816	FEAT CONV 7816 TO 5694	435
9119		5694<7835	FEAT CONV 7835 TO 5694	435
9119		5695<4501	FEAT CONV 4501 TO 5695	872

Machine Type	Model	Feature	Description	GSA Price
9119		5695<4502	FEAT CONV 4502 TO 5695	872
9119		5695<7828	FEAT CONV 7828 TO 5695	872
9119		5695<7835	FEAT CONV 7835 TO 5695	872
9119		5696<4502	FEAT CONV 4502 TO 5696	1,744
9119		5696<4503	FEAT CONV 4503 TO 5696	1,744
9119		5696<7828	FEAT CONV 7828 TO 5696	1,744
9119		5696<7829	FEAT CONV 7829 TO 5696	1,744
9119		5697<4503	FEAT CONV 4503 TO 5697	41,067
9119		5780<5778	FEAT CONV 5778 TO 5780	4,171
9119		5782<5778	FEAT CONV 5778 TO 5782	4,171
9119		5797<5791	FEAT CONV 5791 TO 5797	11,929
9119		5797<5794	FEAT CONV 5794 TO 5797	14,166
9119		5797<5798	FEAT CONV 5798 TO 5797	4,846
9119		5797<5809	FEAT CONV 5809 TO 5797	14,166
9119		5809<4643	FEAT CONV 4643 TO 5809	8,947
9119		5908<5904	FEAT CONV 5904 TO 5908	48
9119		6259<6331	FEAT CONV 6331 TO 6259	6,710
9119		6856<6851	SLIMLINE OEM-RR OEM W/HEATEX	6,710
9119		6862<6252	FEAT CONV FROM 6252 TO 6862	3,485
9119		6867<6865	FEAT CONV 6865 TO 6867	75
9119		6868<6869	FEAT CONV 6869 TO 6868	2,311
9119		6887<6866	FEAT CONV 6866 TO 6887	75
9119		6888<6870	FEAT CONV 6870 TO 6888	75
9119		7280<7799	256X1GB DDR1- 256GB DDR2	226,755
9119		7667<7925	FEAT CONV FROM 7925 TO 7667	5,015
9119		7668<7693	FEAT CONV FROM 7693 TO 7668	11,408
9119		7668<7815	FEAT CONV FROM 7815 TO 7668	4,017
9119		7668<7990	FEAT CONV FROM 7990 TO 7668	11,127
9119		7693<7990	FEAT CONV FROM 7990 TO 7693	4,660
9119		7815<7925	1WAY ACT 7981-1WAY ACT 7813	13,421
9119		7815<7990	1WAY ACT 7988-1WAY ACT 7813	16,682
9119		7972<7993	O/O BILL 7981-O/O BILL 7813	178
9119		7972<7996	O/O BILL 7988--O/O BILL7913	176
9119		7975<7926	30 DAY 7981-30 DAY 7813	5,393
9119		7975<7991	30 DAY 7989-30 DAY 7813	5,312
9119		7990<7925	1WAY ACT 7981-1WAY ACT 7988	5,965
9119		7991<7926	30 DAY 7981--30 DAY 7988	3,439
9119		7996<7993	OO BILL 7981--O/O BILL 7988	114
9119		8151<8197	512GB DDR1- 0/512 GB DDR2	70,954
9119		8201<8195	FEAT CONV 8195 TO 8201	13,957
9119		8202<8153	FEAT CONV 8153 TO 8202	13,957
9119		8203<8151	FEAT CONV 8151 TO 8203	27,914
9119		8203<8195	FEAT CONV 8195 TO 8203	27,914
9119		8203<8197	FEAT CONV 8197 TO 8203	27,914
9119		8204<8151	FEAT CONV 8151 TO 8204	27,914
9119		8204<8153	FEAT CONV 8153 TO 8204	27,914
9119		8204<8197	FEAT CONV 8197 TO 8204	27,914
9119		8204<8198	FEAT CONV 8198 TO 8204	27,914
9119		8204<8200	FEAT CONV 8200 TO 8204	27,914
9119		8211<8201	FEAT CONV 8201 TO 8211	10,521
9119		8211<8202	FEAT CONV 8202 TO 8211	10,521
9119		8212<5680	FEAT CONV 5680 TO 8212	124
9119		8213<5681	FEAT CONV 5681 TO 8213	10,262
9119		8213<5684	FEAT CONV 5684 TO 8213	12,414
9119		8214<8203	FEAT CONV 8203 TO 8214	21,043
9119		8218<8202	FEAT CONV 8202 TO 8218	20,721
9119		8219<8203	FEAT CONV 8203 TO 8219	41,443

Machine Type	Model	Feature	Description	GSA Price
9119		8219<8204	FEAT CONV 8204 TO 8219	41,443
9119		8221<8203	FEAT CONV 8203 TO 8221	82,886
9119		8221<8204	FEAT CONV 8204 TO 8221	82,886
9119		8968<7813	FEAT CONV FROM 7813 TO 8968	24,627
9119		8968<7981	FEAT CONV FROM 7981 TO 8968	58,380
9119		8968<7988	FEAT CONV FROM 7988 TO 8968	51,222
9119		8968<8967	FEAT CONV FROM 8967 TO 8968	53,906
9119		8968<8969	FEAT CONV FROM 8969 TO 8968	22,160
9119		8968<8970	FEAT CONV FROM 8970 TO 8968	45,630
9119		8970<7981	FEAT CONV FROM 7981 TO 8970	29,153
9119		8970<7988	FEAT CONV FROM 7988 TO 8970	24,903
9119		8970<8967	FEAT CONV FROM 8967 TO 8970	38,323
9119<9406		4694<1641	FEAT CONV 1641 TO 4694	24,198
9119<9406		4694<1642	FEAT CONV 1642 TO 4694	24,198
9119<9406		4694<1643	FEAT CONV 1643 TO 4694	24,198
9119<9406		4694<1644	FEAT CONV 1644 TO 4694	24,198
9119<9406		4694<1645	FEAT CONV 1645 TO 4694	24,198
9119<9406		4694<1646	FEAT CONV 1646 TO 4694	24,198
9119<9406		4694<1647	FEAT CONV 1647 TO 4694	24,198
9119<9406		4694<1648	FEAT CONV 1648 TO 4694	24,198
9119<9406		4694<1651	FEAT CONV 1651 TO 4694	24,198
9119<9406		4694<1652	FEAT CONV 1652 TO 4694	24,198
9119<9406		4694<1653	FEAT CONV 1653 TO 4694	24,198
9119<9406		4694<1654	FEAT CONV 1654 TO 4694	24,198
9119<9406		4694<1655	FEAT CONV 1655 TO 4694	24,198
9119<9406		4694<1656	FEAT CONV 1656 TO 4694	24,198
9119<9406		4694<1661	FEAT CONV 1661 TO 4694	23,537
9119<9406		4694<1662	FEAT CONV 1662 TO 4694	23,537
9119<9406		4694<1663	FEAT CONV 1663 TO 4694	23,537
9119<9406		4694<1664	FEAT CONV 1664 TO 4694	23,537
9119<9406		4694<1665	FEAT CONV 1665 TO 4694	23,537
9119<9406		4694<1666	FEAT CONV 1666 TO 4694	23,537
9119<9406		4694<1667	FEAT CONV 1667 TO 4694	23,537
9119<9406		4694<1668	FEAT CONV 1668 TO 4694	23,537
9119<9406		4694<1671	FEAT CONV 1671 TO 4694	24,198
9119<9406		4694<1672	FEAT CONV 1672 TO 4694	24,198
9119<9406		4694<1673	FEAT CONV 1673 TO 4694	24,198
9119<9406		4694<1676	FEAT CONV 1676 TO 4694	22,197
9119<9406		4694<1677	FEAT CONV 1677 TO 4694	22,197
9119<9406		4694<1679	FEAT CONV 1679 TO 4694	22,197
9119<9406		4695<1641	FEAT CONV 1641 TO 4695	34,587
9119<9406		4695<1642	FEAT CONV 1642 TO 4695	34,587
9119<9406		4695<1644	FEAT CONV 1644 TO 4695	34,587
9119<9406		4695<1645	FEAT CONV 1645 TO 4695	34,587
9119<9406		4695<1646	FEAT CONV 1646 TO 4695	34,587
9119<9406		4695<1647	FEAT CONV 1647 TO 4695	34,587
9119<9406		4695<1648	FEAT CONV 1648 TO 4695	34,587
9119<9406		4695<1651	FEAT CONV 1651 TO 4695	34,587
9119<9406		4695<1652	FEAT CONV 1652 TO 4695	34,587
9119<9406		4695<1653	FEAT CONV 1653 TO 4695	34,587
9119<9406		4695<1654	FEAT CONV 1654 TO 4695	34,587
9119<9406		4695<1655	FEAT CONV 1655 TO 4695	34,587
9119<9406		4695<1656	FEAT CONV 1656 TO 4695	34,587
9119<9406		4695<1661	FEAT CONV 1661 TO 4695	32,685
9119<9406		4695<1662	FEAT CONV 1662 TO 4695	32,685
9119<9406		4695<1663	FEAT CONV 1663 TO 4695	32,685
9119<9406		4695<1664	FEAT CONV 1664 TO 4695	32,685

Machine Type	Model	Feature	Description	GSA Price
9119<9406		4695<1665	FEAT CONV 1665 TO 4695	32,685
9119<9406		4695<1666	FEAT CONV 1666 TO 4695	32,685
9119<9406		4695<1667	FEAT CONV 1667 TO 4695	32,685
9119<9406		4695<1668	FEAT CONV 1668 TO 4695	32,685
9119<9406		4695<1671	FEAT CONV 1671 TO 4695	34,254
9119<9406		4695<1672	FEAT CONV 1672 TO 4695	34,254
9119<9406		4695<1673	FEAT CONV 1673 TO 4695	34,254
9119<9406		4695<1676	FEAT CONV 1676 TO 4695	28,455
9119<9406		4695<1677	FEAT CONV 1677 TO 4695	28,455
9119<9406		4695<1678	FEAT CONV 1678 TO 4695	28,455
9119<9406		4695<1679	FEAT CONV 1679 TO 4695	28,455
9119<9406		4705<1641	FEAT CONV 1641 TO 4705	34,587
9119<9406		4705<1642	FEAT CONV 1642 TO 4705	34,587
9119<9406		4705<1643	FEAT CONV 1643 TO 4705	34,587
9119<9406		4705<1644	FEAT CONV 1644 TO 4705	34,587
9119<9406		4705<1645	FEAT CONV 1645 TO 4705	34,587
9119<9406		4705<1646	FEAT CONV 1646 TO 4705	34,587
9119<9406		4705<1647	FEAT CONV 1647 TO 4705	34,587
9119<9406		4705<1648	FEAT CONV 1648 TO 4705	34,587
9119<9406		4705<1651	FEAT CONV 1651 TO 4705	34,587
9119<9406		4705<1652	FEAT CONV 1652 TO 4705	34,587
9119<9406		4705<1653	FEAT CONV 1653 TO 4705	34,587
9119<9406		4705<1654	FEAT CONV 1654 TO 4705	34,587
9119<9406		4705<1655	FEAT CONV 1655 TO 4705	34,587
9119<9406		4705<1656	FEAT CONV 1656 TO 4705	34,587
9119<9406		4705<1661	FEAT CONV 1661 TO 4705	32,685
9119<9406		4705<1662	FEAT CONV 1662 TO 4705	32,685
9119<9406		4705<1663	FEAT CONV 1663 TO 4705	32,685
9119<9406		4705<1664	FEAT CONV 1664 TO 4705	32,685
9119<9406		4705<1665	FEAT CONV 1665 TO 4705	32,685
9119<9406		4705<1666	FEAT CONV 1666 TO 4705	32,685
9119<9406		4705<1667	FEAT CONV 1667 TO 4705	32,685
9119<9406		4705<1668	FEAT CONV 1668 TO 4705	32,685
9119<9406		4705<1671	FEAT CONV 1671 TO 4705	34,254
9119<9406		4705<1672	FEAT CONV 1672 TO 4705	34,254
9119<9406		4705<1673	FEAT CONV 1673 TO 4705	34,254
9119<9406		4705<1676	FEAT CONV 1676 TO 4705	28,455
9119<9406		4705<1677	FEAT CONV 1677 TO 4705	28,455
9119<9406		4705<1678	FEAT CONV 1678 TO 4705	28,455
9119<9406		4705<1679	FEAT CONV 1679 TO 4705	28,455
9406		5094<5096	FEAT CONV 5096 TO 5094	2,418
9406		5294<5296	FEAT CONV 5296 TO 5294	19,748
9406		5680<7663	FEAT CONV 7663 TO 5680	236
9406		5781<0650	FEAT CONV 0650 TO 5781	40
9406		5781<5739	FEAT CONV 5739 TO 5781	40
9406		5781<5778	FEAT CONV 5778 TO 5781	40
9406		5781<5799	FEAT CONV 5799 TO 5781	40
9406		5781<5800	FEAT CONV 5800 TO 5781	40
9406		5782<0650	FEAT CONV 0650 TO 5782	40
9406		5782<5739	FEAT CONV 5739 TO 5782	40
9406		5782<5778	FEAT CONV 5778 TO 5782	40
9406		5782<5799	FEAT CONV 5799 TO 5782	40
9406		5782<5800	FEAT CONV 5800 TO 5782	40
9406		7155<7463	FEAT CONV 7463 TO 7155	33,048
9406		7272<7892	FEAT CONV 7892 TO 7272	472
9406		7273<4495	FEAT CONV 4495 TO 7273	943
9406		7273<7893	FEAT CONV 7893 TO 7273	943

Machine Type	Model	Feature	Description	GSA Price
9406		7274<4496	FEAT CONV 4496 TO 7274	1,886
9406		7274<7894	FEAT CONV 7894 TO 7274	1,886
9406		7275<4497	FEAT CONV 4497 TO 7275	3,772
9406		7275<4499	FEAT CONV 4499 TO 7275	3,772
9406		7276<4498	FEAT CONV 4498 TO 7276	7,545
9406		7463<7462	FEAT CONV 7462 TO 7463	170,237
9406		7598<7597	FEAT CONV 7597 TO 7598	80,605
9406		7711<7710	FEAT CONV 7710 TO 7711	27,406
9406		7735<7734	FEAT CONV 7734 TO 7735	37,562
9406		7736<7785	FEAT CONV 7785 TO 7736	79,798
9406		7984<7496	FEAT CONV 7496 TO 7984	550,529
9406		7984<7498	FEAT CONV 7498 TO 7984	178,942
9406		7985<7497	FEAT CONV 7497 TO 7985	629,521
9406		7985<7499	FEAT CONV 7499 TO 7985	241,008
9406		7985<7984	FEAT CONV 7984 TO 7985	766,065
9406<9404	595<840		MODEL CONVERSION	0