



## Supported Product list for Media Support Services

Jan-26

| MTM      | Product Description   | Model Sub Category Code |
|----------|---|-------------------------|
| 5331-85E | DS8886 Expansion Unit   | Expansion Unit          |
| 5332-85E | DS8886 Expansion Unit   | Expansion Unit          |
| 5331-86E | DS8886 Expansion Unit   | Expansion Unit          |
| 5333-85E | DS8886 Expansion Unit   | Expansion Unit          |
| 5332-86E | DS8886 Expansion Unit   | Expansion Unit          |
| 3958-AP1 | IBM System Storage TS7650 ProtecTIER De-duplication Appliance | System                  |
| 5331-88E | DS8888 Expansion Unit   | Expansion Unit          |
| 5334-85E | DS8886 Expansion Unit   | Expansion Unit          |
| 2077-AFF | Storwize V5030F Expansion                                     | Expansion Unit          |
| 5333-86E | DS8886 Expansion Unit   | Expansion Unit          |
| 5332-88E | DS8888 Expansion Unit   | Expansion Unit          |
| 5334-86E | DS8886 Expansion Unit   | Expansion Unit          |
| 5331-984 | DS8884  | System                  |
| 5333-88E | DS8888 Expansion Unit   | Expansion Unit          |
| 5331-985 | DS8886  | System                  |
| 5334-88E | DS8888 Expansion Unit   | Expansion Unit          |
| 5331-986 | DS8886  | System                  |
| 5332-984 | DS8884  | System                  |
| 5332-985 | DS8886  | System                  |
| 5331-988 | DS8888  | System                  |
| 9846-AFF | IBM FlashSystem 9100 SFF Expansion Enclosure                  | System                  |
| 5332-986 | DS8886  | System                  |
| 2145-24F | SVC SFF Expansion Enclosure                                   | System                  |
| 5333-984 | DS8884  | System                  |
| 2231-IS3 | IBM Information Archive                                       | System                  |
| 2078-AFF | Storwize V5030F Expansion                                     | Expansion Unit          |
| 5334-983 | IBM DS8882F   | System                  |
| 2831-84E | DS8884 Expansion Unit   | System                  |
| 2831-85E | DS8886 Expansion Unit   | System                  |
| 9581-84E | DS8884 Expansion Unit   | Expansion Unit          |
| 9581-85E | DS8886 Expansion Unit   | Expansion Unit          |
| 5333-985 | DS8886  | System                  |
| 2077-24F | V5000 SFF Expansion   | Expansion Unit          |
| 2077-24G | IBM FlashSystem 5100 SFF Expansion Enclosure                  | System                  |
| 5331-E96 | IBM DS8950F Expansion Unit                                    | Expansion Unit          |
| 5341-E96 | IBM DS8950F Expansion Unit                                    | System                  |
| 2105-100 | 2105-100 IBM Versatile Storage Server Model 100               | System                  |
| 4983-AFF | IBM FlashSystem 9500 SFF Expansion Enclosure                  | System                  |
| 5332-988 | DS8888  | System                  |
| 5333-986 | DS8886  | System                  |
| 5334-984 | DS8884  | System                  |
| 2832-84E | DS8884 Expansion Unit   | System                  |
| 2832-85E | DS8886 Expansion Unit   | System                  |
| 5332-E96 | IBM DS8950F Expansion Unit                                    | System                  |
| 9581-98B | DS8884 Expansion Unit   | Expansion Unit          |
| 5334-985 | DS8886  | System                  |
| 2831-86E | DS8886 Expansion Unit   | System                  |
| 9581-86E | DS8888 Expansion Unit   | Expansion Unit          |
| 9846-24F | V9000 SFF Expansion Enclosure                                 | Expansion Unit          |
| 9848-AFF | IBM FlashSystem 9100 SFF Expansion Enclosure                  | System                  |
| 5333-E96 | IBM DS8950F Expansion Unit                                    | Expansion Unit          |

|          |   |                |
|----------|---|----------------|
| 5333-988 | DS8888  | System         |
| 5334-986 | DS8886  | System         |
| 2833-84E | DS8884 Expansion Unit                                     | System         |
| 2833-85E | DS8886 Expansion Unit                                     | System         |
| 9846-A9F | IBM FlashSystem 9100 High Density LFF Expansion Enclosure | System         |
| 2832-86E | DS8886 Expansion Unit                                     | System         |
| 5334-E96 | IBM DS8950F Expansion Unit                                | Expansion Unit |
| 2831-982 | DS8888  | System         |
| 9581-982 | DS8888  | System         |
| 2077-24E | V5000 SFF Expansion                                       | System         |
| 2834-84E | DS8884 Expansion Unit                                     | System         |
| 2834-85E | DS8886 Expansion Unit                                     | System         |
| 5334-988 | DS8888  | System         |
| 2076-AFF | Storwize V7000F Expansion                                 | Expansion Unit |
| 4666-AFF | IBM FlashSystem 9000 SFF Expansion Enclosure              | System         |
| 2833-86E | DS8886 Expansion Unit                                     | System         |
| 2831-985 | DS8886  | System         |
| 9848-24F | V9000 SFF Expansion Enclosure                             | Expansion Unit |
| 2834-86E | DS8886 Expansion Unit                                     | System         |
| 2831-984 | DS8884  | System         |
| 9581-980 | DS8884  | System         |
| 9581-984 | DS8884  | System         |
| 2832-982 | DS8888  | System         |
| 2072-24E | V3700 SFF Expansion                                       | Expansion Unit |
| 2078-24F | V5000 SFF Expansion                                       | Expansion Unit |
| 2078-24G | IBM FlashSystem 5100 SFF Expansion Enclosure              | System         |
| 9848-A9F | IBM FlashSystem 9100 High Density LFF Expansion Enclosure | System         |
| 2857-306 | EXN3200 SATA Expansion Unit                               | Expansion Unit |
| 9581-985 | DS8886  | System         |
| 2831-98F | DS8888 Expansion Unit                                     | Expansion Unit |
| 9581-98F | DS8888 Expansion Unit                                     | Expansion Unit |
| 5331-996 | IBM DS8950F   | System         |
| 2831-986 | DS8886  | System         |
| 9581-986 | DS8888  | System         |
| 4657-24G | IBM FlashSystem 7000 SFF Expansion Enclosure              | System         |
| 2077-A9F | V5030F HD LFF Expansion                                   | Expansion Unit |
| 5332-996 | IBM DS8950F   | System         |
| 2832-985 | DS8886  | System         |
| 2833-982 | DS8888  | System         |
| 1747-HC2 | IBM System Storage EXP2524 Express Storage Enclosure      | System         |
| 2832-98F | DS8888 Expansion Unit                                     | Expansion Unit |
| 9843-AE2 | IBM FlashSystem 900                                       | System         |
| 2832-984 | DS8884  | System         |
| 5333-996 | IBM DS8950F   | System         |
| 2231-IA3 | IBM Information Archive                                   | System         |
| 2832-986 | DS8886  | System         |
| 5334-996 | IBM DS8950F   | System         |
| 2077-12F | V5000 LFF Expansion                                       | Expansion Unit |
| 2077-12G | IBM FlashSystem 5100 LFF Expansion Enclosure              | System         |
| 9846-12F | IBM FlashSystem V9000 LFF Expansion Enclosure             | Expansion Unit |
| 2833-98F | DS8888 Expansion Unit                                     | Expansion Unit |
| 2833-985 | DS8886  | System         |
| 2834-982 | DS8888  | System         |
| 2147-24F | SVC SFF expansion enclosure                               | System         |
| 2078-24E | V5000 SFF Expansion                                       | System         |
| 2077-AF3 | Storwize V5030F Control                                   | System         |
| 2145-12F | SVC LFF Expansion Enclosure                               | System         |

|          |  |                |
|----------|--|----------------|
| 1750-EX1 | IBM 1750-EX1   | System         |
| 1750-EX2 | IBM System Storage DS6000 Expansion Unit                   | System         |
| 9848-AE2 | IBM FlashSystem V9000 Storage Enclosure                    | Expansion Unit |
| 2833-984 | DS8884   | System         |
| 2077-124 | V5010 SFF Control  | System         |
| 5341-998 | IBM DS8980F  | System         |
| 2833-986 | DS8886   | System         |
| 2834-98F | DS8888 Expansion Unit                                      | Expansion Unit |
| 2076-224 | IBM Storwize V7000 Expansion SFF 24-drive enclosure (SSDs  | System         |
| 2076-24F | V7000 SFF Expansion  | System         |
| 2076-24G | IBM FlashSystem 7000 SFF Expansion Enclosure               | System         |
| 4664-24G | IBM FlashSystem 7000 SFF Expansion Enclosure               | System         |
| 2106-D24 | MOD STRG SYS DSK DRV ENCLSR                                | System         |
| 4657-92G | IBM FlashSystem 7000 High Density LFF Expansion Enclosure  | System         |
| 4983-A9F | IBM FlashSystem 9500 High Density LFF Expansion Enclosure  | System         |
| 2857-003 | EXN3000 SAS/SATA exp. unit                                 | System         |
| 2077-92F | V5000 HD LFF Expansion                                     | Expansion Unit |
| 2077-92G | IBM FlashSystem 5100 High Density Expansion                | System         |
| 2834-985 | DS8886   | System         |
| 5341-996 | IBM DS8950F  | System         |
| 2077-24C | V5000 SFF Control  | System         |
| 2076-A9F | V7000F HD LFF Expansion                                    | Expansion Unit |
| 2078-A9F | V5030F HD LFF Expansion                                    | Expansion Unit |
| 2834-984 | DS8884   | System         |
| 2077-12E | V5000 LFF Expansion  | System         |
| 2834-986 | DS8886   | System         |
| 2861-001 | IBM 2861 System Storage EXN1000 Model 001                  | System         |
| 5331-993 | IBM DS8910F  | System         |
| 5341-993 | IBM DS8910F  | System         |
| 9848-12F | IBM FlashSystem V9000 LFF Expansion Enclosure              | Expansion Unit |
| 2831-98E | DS8886 Expansion Unit                                      | Expansion Unit |
| 9581-98E | DS8886 Expansion Unit                                      | Expansion Unit |
| 2077-224 | V5020 SFF Control  | System         |
| 2857-A15 | IBM System Storage N3150 Model A15                         | System         |
| 5332-993 | IBM DS8910F  | System         |
| 1747-HC1 | IBM System Storage EXP2512 Express Storage Enclosure       | System         |
| 2072-12E | V3700 LFF Expansion  | Expansion Unit |
| 5333-993 | IBM DS8910F  | System         |
| 9846-AF7 | IBM FlashSystem 9110 SFF NVMe Control Enclosure            | System         |
| 2832-98E | DS8886 Expansion Unit                                      | Expansion Unit |
| 5331-994 | IBM DS8910F  | System         |
| 5341-994 | IBM DS8910F  | System         |
| 2077-324 | V5030 SFF Control  | System         |
| 1818-D1A | IBM System Storage EXP5000 Expansion Unit                  | System         |
| 2072-24C | V3700 SFF Dual Control                                     | System         |
| 2078-12F | V5000 LFF Expansion  | Expansion Unit |
| 2078-12G | IBM FlashSystem 5100 LFF Expansion Enclosure               | System         |
| 2859-A10 | IBM 2859 System Storage N3300 Storage Controller Model A10 | System         |
| 5334-993 | IBM DS8910F  | System         |
| 2077-424 | IBM Storwize V5100 NVMe Control Enclosure                  | System         |
| 2077-4H4 | IBM FlashSystem 5100 NVMe Control Enclosure                | System         |
| 2077-AF4 | IBM Storwize V5100F NVMe Control Enclosure                 | System         |
| 5332-994 | IBM DS8910F  | System         |
| 2078-AF3 | Storwize V5030F Control                                    | System         |
| 2833-98E | DS8886 Expansion Unit                                      | Expansion Unit |
| 2076-92F | V7000 HD LFF Expansion                                     | Expansion Unit |
| 2076-92G | IBM FlashSystem 7000 High Density LFF Expansion Enclosure  | System         |

|          |   |                |
|----------|---|----------------|
| 2078-92F | V5000 HD LFF Expansion  | Expansion Unit |
| 2078-92G | IBM FlashSystem 5100 High Density Expansion Enclosure         | System         |
| 4664-92G | IBM FlashSystem 7000 High Density LFF Expansion Enclosure     | System         |
| 4666-A9F | IBM FlashSystem 9000 High Density LFF Expansion Enclosure     | System         |
| 9840-AE3 | IBM FlashSystem 900   | System         |
| 9846-92F | V9000 HD Expansion Enclosure                                  | Expansion Unit |
| 2072-2DE | V3700 SFF DC Expansion  | Expansion Unit |
| 1812-8VA | IBM System Storage DS4000 EXP420 Storage Expansion Unit       | Expansion Unit |
| 4657-12G | IBM FlashSystem 7000 LFF Expansion Enclosure                  | System         |
| 3542-1RU | 3542-1RU  | System         |
| 2145-92F | SVC HD LFF Expansion  | Expansion Unit |
| 5333-994 | IBM DS8910F   | System         |
| 2857-A25 | IBM System Storage N3150 Model A25                            | System         |
| 2834-98E | DS8886 Expansion Unit   | Expansion Unit |
| 1812-81A | IBM System Storage DS4000 EXP810 Storage Expansion Unit Mode  | Expansion Unit |
| 1814-52A | IBM 1814 EXP520 Expansion Unit                                | Expansion Unit |
| 2078-124 | V5010 SFF Control   | System         |
| 3955-SX6 | IBM Virtualization Engine TS7520 Cache Drawer                 | System         |
| 2851-DE2 | IBM SONAS Expansion Unit 2                                    | System         |
| 5147-106 | ESS 4U106 Storage Elastic Storage Server                      | System         |
| 5334-994 | IBM DS8910F   | System         |
| 2078-424 | IBM Storwize V5100 NVMe Control Enclosure                     | System         |
| 2078-4H4 | IBM FlashSystem 5100 NVMe Control Enclosure                   | System         |
| 2078-AF4 | IBM Storwize V5100F NVMe Control Enclosure                    | System         |
| 2078-U5B | IBM Storwize V5100 Utility NVMe Control Enclosure             | System         |
| 2078-UHB | IBM FlashSystem 5100 Utility NVMe Control Enclosure           | System         |
| 9848-AF7 | IBM FlashSystem 9110 SFF NVMe Control Enclosure               | System         |
| 9848-UF7 | IBM FlashSystem 9110 Utility Model SFF NVMe Control Enclosure | System         |
| 2078-12E | V5000 LFF Expansion   | System         |
| 2857-006 | IBM System Storage EXN3500 SAS expansion unit                 | System         |
| 2076-724 | IBM Storwize V7000 NVMe Control Enclosure                     | System         |
| 2076-U7B | IBM Storwize V7000 Utility Model NVMe Control Enclosure       | System         |
| 5147-092 | ESS 5U92 Storage for Elastic Storage System                   | System         |
| 9843-AE3 | IBM FlashSystem 900   | System         |
| 2102-D00 | EXPAND STG UNIT   | System         |
| 2076-212 | IBM Storwize V7000 Expansion LFF 12-drive enclosure           | System         |
| 1813-80E | IBM System Storage EXP3800                                    | Expansion Unit |
| 2078-U5A | V5030 Utility Model SFF Control                               | System         |
| 2078-24C | V5000 SFF Control   | System         |
| 2229-FSG | DR550 File System Gateway                                     | System         |
| 2077-112 | V5010 LFF Control   | System         |
| 1818-80E | DCS3700 Expansion Unit  | Expansion Unit |
| 2831-98B | DS8884 Expansion Unit   | Expansion Unit |
| 2076-12F | V7000 LFF Expansion   | System         |
| 2076-12G | IBM FlashSystem 7000 LFF Expansion Enclosure                  | System         |
| 2078-224 | V5020 SFF Control   | System         |
| 4664-12G | IBM FlashSystem 7000 LFF Expansion Enclosure                  | System         |
| 2072-2DC | V3700 SFF DC Dual Control                                     | System         |
| 2857-A12 | IBM System Storage N3220 Model A12                            | System         |
| 2831-981 | DS8886  | System         |
| 9581-981 | DS8886  | System         |
| 2077-12C | V5000 LFF Control   | System         |
| 2147-12F | SVC LFF expansion enclosure                                   | System         |
| 3542-2RU | 3542-2RU  | System         |
| 9848-AE3 | IBM FlashSystem V9000 Storage Enclosure                       | System         |
| 2072-24F | IBM Storwize V5000E SFF Expansion Enclosure                   | Expansion Unit |

|          |  |                |
|----------|--|----------------|
| 2072-E24 | IBM Storwize V5000E SFF Expansion Enclosure                | Expansion Unit |
| 2072-F24 | IBM FlashSystem 5000 SFF Expansion Enclosure               | System         |
| 4662-F24 | IBM FlashSystem 5200 SFF Expansion Enclosure               | System         |
| 9848-92F | V9000 HD Expansion Enclosure                               | Expansion Unit |
| 2851-DE1 | IBM System Storage SONAS Disk Storage Expansion unit       | System         |
| 1269-1F1 | DCS9550 1F1 Expansion Unit                                 | Expansion Unit |
| 1269-3S2 | DCS9900 3S2 Expansion Unit                                 | Expansion Unit |
| 2832-98B | DS8884 Expansion Unit                                      | Expansion Unit |
| 1722-6LU | IBM System Storage DS4300 Disk System                      | System         |
| 5331-998 | IBM DS8980F  | System         |
| 2077-212 | V5020 LFF Control  | System         |
| 2078-324 | V5030 SFF Control  | System         |
| 2421-94E | IBM System Storage DS8700 Disk System (M/T 2421)           | System         |
| 2421-95E | DS8800 Expansion Unit                                      | System         |
| 2421-96E | DS8870 Expansion Unit                                      | System         |
| 2072-24G | IBM FlashSystem 5000 SFF Expansion Enclosure               | System         |
| 4662-24G | IBM FlashSystem 5200 SFF Expansion Enclosure               | System         |
| 4680-24H | IBM Storage FlashSystem 5045 SFF Expansion Enclosure       | System         |
| 2422-94E | IBM System Storage DS8700 Disk System (M/T 2422)           | System         |
| 2422-95E | IBM 2421 expansion unit DS8800 Model 95E                   | System         |
| 2422-96E | DS8870 Expansion Unit                                      | System         |
| 2859-A20 | IBM 2859 System Storage N3300 Storage Controller Model A20 | System         |
| 1724-100 | IBM System Storage DS4100 Disk System                      | System         |
| 2423-94E | IBM System Storage DS8700 Disk System (M/T 2423)           | System         |
| 2423-95E | DS8800 Expansion Unit                                      | System         |
| 2423-96E | DS8870 Expansion Unit                                      | System         |
| 2421-941 | IBM System Storage DS8700 Disk System (M/T 2421)           | System         |
| 5332-998 | IBM DS8980F  | System         |
| 2424-94E | IBM System Storage DS8700 Disk System (M/T 2424)           | System         |
| 2424-95E | DS8800 Expansion Unit                                      | System         |
| 2424-96E | DS8870 Expansion Unit                                      | System         |
| 2833-98B | DS8884 Expansion Unit                                      | Expansion Unit |
| 1269-1S1 | DCS9550 1S1 Expansion Unit                                 | Expansion Unit |
| 2077-312 | V5030 LFF Control  | System         |
| 2832-981 | DS8886   | Expansion Unit |
| 5333-998 | IBM DS8980F  | System         |
| 2857-A14 | IBM System Storage N3240 Model A14                         | System         |
| 2072-12C | V3700 LFF Dual Control                                     | System         |
| 3955-SV6 | IBM Virtualization Engine TS7520 Cache Controller          | System         |
| 2107-92E | IBM 2107-92E   | System         |
| 2107-9AE | IBM 2107-9AE   | System         |
| 2421-951 | DS8800   | System         |
| 2421-961 | DS8870   | System         |
| 2834-98B | DS8884 Expansion Unit                                      | Expansion Unit |
| 2805-MC2 | IBM 2805 System Storage Productivity Center Model MC2      | System         |
| 2805-MC3 | IBM 2805 System Storage Productivity Center Model MC3      | System         |
| 2805-MC4 | IBM 2805 System Storage Productivity Center Model MC4      | System         |
| 5334-998 | IBM DS8980F  | System         |
| 2862-A10 | IBM 2862 System Storage N3600 Model A10                    | System         |
| 2422-941 | IBM System Storage DS8700 Disk System (M/T 2422)           | System         |
| 2076-AF6 | Storwize V7000F Control                                    | System         |
| 7204-409 | 9.1 GB External Disk Drive                                 | System         |
| 2863-004 | IBM System Storage EXN4000 Expansion Unit                  | System         |
| 2833-981 | DS8886   | System         |
| 2863-001 | IBM System Storage EXN2000                                 | System         |
| 1814-7VA | IBM System Storage DS4200 Express Model 7V                 | System         |
| 5147-102 | ESS 4U102 Storage for Elastic Storage System               | System         |

|          |   |                |
|----------|---|----------------|
| 2862-A20 | IBM 2862 System Storage N3600 Model A20                     | System         |
| 2072-92F | IBM Storwize V5000E High Density LFF Expansion Enclosure    | Expansion Unit |
| 2072-E92 | IBM Storwize V5000E High Density LFF Expansion Enclosure    | Expansion Unit |
| 2072-F92 | IBM FlashSystem 5000 High Density LFF Expansion Enclosure   | System         |
| 4662-F92 | IBM FlashSystem 5200 High Density LFF Expansion Enclosure   | System         |
| 2857-A22 | IBM System Storage N3220 Model A22                          | System         |
| 2422-951 | IBM 2421 base unit DS8800 Model 951                         | System         |
| 2422-961 | DS8870  | System         |
| 1812-81S | IBM System Storage DS4000 EXP810 Expansion Unit Model 81-DC | Expansion Unit |
| 3948-XSB | IBM TS7770 Cache Expansion Model XSB                        | System         |
| 3956-XSB | TS7770 Cache Enclosure                                      | System         |
| 2072-92G | IBM FlashSystem 5000 High Density LFF Expansion Enclosure   | System         |
| 4662-92G | IBM FlashSystem 5200 High Density Expansion Enclosure       | System         |
| 4680-92H | IBM Storage FlashSystem 5045 HD LFF Expansion Enclosure     | System         |
| 2423-941 | IBM System Storage DS8700 Disk System (M/T 2423)            | System         |
| 2851-DR2 | IBM SONAS Storage Controller 2                              | System         |
| 2810-A14 | IBM 2810 XIV Storage System Model A14                       | System         |
| 2078-112 | V5010 LFF Control   | System         |
| 2834-981 | DS8886  | System         |
| 2105-750 | IBM 2105-750  | System         |
| 7226-1U3 | IBM 7226-1U3  | System         |
| 2423-951 | DS8800  | System         |
| 2423-961 | DS8870  | System         |
| 2147-92F | SVC HD LFF Expansion  | Expansion Unit |
| 2076-U7A | V7000 Utility Model SFF Control                             | System         |
| 2424-941 | IBM System Storage DS8700 Disk System (M/T 2424)            | System         |
| 2857-A24 | IBM System Storage N3240 Model A24                          | System         |
| 2078-12C | V5000 LFF Control   | System         |
| 2076-124 | IBM Storwize V7000 Controller SFF 24-drive enclosure (SSDs  | System         |
| 2863-A10 | IBM System Storage N3700 Model A10                          | System         |
| 2831-980 | DS8884  | System         |
| 2859-A11 | IBM 2859 System Storage N3400 Storage Controller Model A11  | System         |
| 9846-AF8 | IBM FlashSystem 9150 SFF NVMe Control Enclosure             | System         |
| 1818-80C | DCS3700 Storage System                                      | System         |
| 2805-MC5 | System Storage Productivity Center                          | System         |
| 1814-70A | IBM System Storage DS4700 Express Model 70                  | System         |
| 2810-114 | IBM XIV Storage System Model R3                             | System         |
| 2810-214 | IBM XIV Storage System Model R3                             | System         |
| 4662-Y12 | IBM FlashSystem 5200 NVMe Control Enclosure                 | System         |
| 3560-1RU | 3560-1RU  | System         |
| 2072-224 | IBM Storwize V5010E SFF Control Enclosure                   | System         |
| 2072-2H4 | IBM FlashSystem 5010 SFF Control Enclosure                  | System         |
| 2072-S24 | IBM Storwize V5010E SFF Control Enclosure                   | Expansion Unit |
| 2072-U24 | IBM FlashSystem 5010 SFF Control Enclosure                  | System         |
| 2078-212 | V5020 LFF Control   | System         |
| 5141-FN2 | IBM Elastic Storage System 3500                             | System         |
| 2424-951 | DS8800  | System         |
| 2424-961 | DS8870  | System         |
| 2072-12F | IBM Storwize V5000E LFF Expansion Enclosure                 | Expansion Unit |
| 2072-E12 | IBM Storwize V5000E LFF Expansion Enclosure                 | Expansion Unit |
| 2072-F12 | IBM FlashSystem 5000 LFF Expansion Enclosure                | System         |
| 4662-F12 | IBM FlashSystem 5200 LFF Expansion Enclosure                | System         |
| 4662-6H2 | IBM FlashSystem 5200 NVMe Control Enclosure                 | System         |
| 4662-UH6 | IBM FlashSystem 5200 Utility NVMe Control Enclosure         | System         |
| 2810-314 | IBM XIV Storage System Model 314                            | System         |
| 4680-2P4 | IBM Storage FlashSystem 5015 SFF Control Enclosure          | System         |
| 2105-E10 | IBM 2105-E10  | System         |

|          |  |                |
|----------|--|----------------|
| 2105-E20 | IBM 2105-E20   | System         |
| 2105-F10 | IBM 2105-F10   | System         |
| 2105-F20 | IBM 2105-F20   | System         |
| 2421-92E | System Storage DS8000  | System         |
| 2421-9AE | System Storage DS8000  | System         |
| 2422-92E | System Storage DS8100  | System         |
| 2422-9AE | System Storage DS8100  | System         |
| 2076-824 | IBM FlashSystem 7200 NVMe Control Enclosure                  | System         |
| 2076-U7C | IBM FlashSystem 7200 Utility NVMe Control Enclosure          | System         |
| 4664-824 | IBM FlashSystem 7200 NVMe Control Enclosure                  | System         |
| 4664-U7C | IBM FlashSystem 7200 Utility Model NVMe Control Enclosure    | System         |
| 1722-60U | IBM System Storage DS4300 Disk System                        | System         |
| 2423-92E | System Storage DS8000  | System         |
| 2423-9AE | System Storage DS8000  | System         |
| 2072-2N4 | IBM FlashSystem 5015 SFF Control Enclosure                   | System         |
| 2072-W24 | IBM FlashSystem 5015 SFF Control Enclosure                   | System         |
| 2078-312 | V5030 LFF Control  | System         |
| 2424-92E | System Storage DS 8000                                       | System         |
| 2424-9AE | System Storage DS 8000                                       | System         |
| 2812-A14 | IBM 2812 XIV Storage System Model A14                        | System         |
| 2072-12G | IBM FlashSystem 5000 LFF Expansion Enclosure                 | System         |
| 4662-12G | IBM FlashSystem 5200 LFF Expansion Enclosure                 | System         |
| 4680-12H | IBM Storage FlashSystem 5045 LFF Expansion Enclosure         | System         |
| 1818-G1A | IBM System Storage EXP6050 High Density Storage Enclosure    | System         |
| 2863-A20 | IBM System Storage N3700 Model A20                           | System         |
| 2832-980 | DS8884   | Expansion Unit |
| 2076-524 | V7000 SFF Control  | System         |
| 2076-624 | V7000 SFF Control  | System         |
| 4958-J12 | IBM Cloud Object Storage Large JBOD Chassis 1yr              | System         |
| 2107-931 | IBM 2107-931   | System         |
| 2859-A21 | IBM 2859 System Storage N3400 Storage Controller Model A21   | System         |
| 3745-130 | COMMUNICATIONS CNTRL   | System         |
| 9848-AF8 | IBM FlashSystem 9150 SFF NVMe Control Enclosure              | System         |
| 9848-UF8 | IBM FlashSystem 9150 Utility Model SFF NVMe Control Enclosur | System         |
| 2851-DR1 | IBM System Storage SONAS Storage Controller                  | System         |
| 2076-324 | IBM Storwize V7000 10 GbE Controller SFF 24-drive enclosu    | System         |
| 2105-800 | IBM 2105 ESS Model 800                                       | System         |
| 4957-J12 | IBM Cloud Object Storage Large JBOD Chassis 3yr              | System         |
| 2812-114 | XIV Storage System Model R3                                  | System         |
| 2812-214 | IBM XIV Storage System Model R3                              | System         |
| 2812-314 | IBM XIV Storage System Model 314                             | System         |
| 1818-90C | IBM System Storage DCS3700                                   | System         |
| 2833-980 | DS8884   | System         |
| 4680-3P4 | IBM Storage FlashSystem 5045 SFF Control Enclosure           | System         |
| 3959-EXP | TS7620 Appliance   | System         |
| 3959-SM2 | TS7620 Appliance   | System         |
| 1814-20A | IBM 1814 DS5020 Disk Controller Model 20A                    | System         |
| 5149-F48 | IBM Storage Scale System 6000                                | System         |
| 2072-3H4 | IBM FlashSystem 5030 SFF Control Enclosure                   | System         |
| 2072-T24 | IBM Storwize V5030E SFF Control Enclosure                    | Expansion Unit |
| 2072-V24 | IBM FlashSystem 5030 SFF Control Enclosure                   | System         |
| 2072-3N4 | IBM FlashSystem 5035 SFF Control Enclosure                   | System         |
| 2072-X24 | IBM FlashSystem 5035 SFF Control Enclosure                   | System         |
| 7204-001 | 1GB DISK DRIVE   | System         |
| 2421-931 | SYSTEM STORAGE DS8100  | System         |
| 1814-70S | IBM System Storage DS4700 Express Model 70-DC                | System         |
| 2104-DL1 | IBM 2104-DL1   | System         |

|          |  |                |
|----------|--|----------------|
| 2104-DU3 | IBM 2104-DU3   | System         |
| 2104-TL1 | IBM 2104-TL1   | System         |
| 2104-TU3 | IBM 2104-TU3   | System         |
| 1740-1RU | IBM 1740-1RU   | System         |
| 1740-710 | IBM System Storage EXP710 Expansion Unit                     | System         |
| 3745-170 | 3745-170 IBM Communication Controller Model 170              | System         |
| 3745-17A | 3745-17A IBM Communication Controller Model 17A              | System         |
| 1710-10U | IBM System Storage EXP100 Expansion Unit                     | System         |
| 1269-2S1 | DCS9550 2S1 Expansion Unit                                   | Expansion Unit |
| 1269-2S2 | DCS9550 2S2 Expansion Unit                                   | Expansion Unit |
| 1727-HC5 | IBM System Storage EXP3000 DC Power Model                    | Expansion Unit |
| 2834-980 | DS8884   | System         |
| 2104-DS4 | IBM 2104-DS4   | System         |
| 2107-921 | IBM 2107-921   | System         |
| 2422-931 | SYSTEM STORAGE DS8100  | System         |
| 1814-72A | IBM System Storage DS4700 Express Model 72                   | System         |
| 2076-112 | IBM Storwize V7000 Controller LFF 12-drive enclosure         | System         |
| 3745-150 | 3745-150 IBM Communication Controller Model 150              | System         |
| 2106-200 | MOD STRG SYS CNTRLR ENCLSR                                   | System         |
| 1726-HC3 | IBM System Storage DS3300                                    | Option         |
| 2104-TS4 | IBM 2104-TS4   | System         |
| 1269-3S1 | DCS9900 3S1 Expansion Unit                                   | Expansion Unit |
| 2072-212 | IBM Storwize V5010E LFF Control Enclosure                    | System         |
| 2072-2H2 | IBM FlashSystem 5010 LFF Control Enclosure                   | System         |
| 2072-S12 | IBM Storwize V5010E LFF Control Enclosure                    | Expansion Unit |
| 2072-U12 | IBM FlashSystem 5010 LFF Control Enclosure                   | System         |
| 4958-J15 | IBM Cloud Object Storage 5U92 disk enclosure 1yr             | System         |
| 2423-931 | SYSTEM STORAGE DS8100  | System         |
| 4657-924 | IBM FlashSystem 7300 NVMe Control Enclosure                  | System         |
| 4657-U7D | IBM FlashSystem 7300 Utility Model NVMe Control Enclosure    | System         |
| 4680-2P2 | IBM Storage FlashSystem 5015 LFF Control Enclosure           | System         |
| 4666-AG8 | IBM FlashSystem 9200 SFF NVMe Control Enclosure              | System         |
| 4666-UG8 | IBM FlashSystem 9200 Utility Model SFF NVMe Control Enclosur | System         |
| 9846-AG8 | IBM FlashSystem 9200 SFF NVMe Control Enclosure              | System         |
| 2072-2N2 | IBM FlashSystem 5015 LFF Control Enclosure                   | System         |
| 2072-W12 | IBM FlashSystem 5015 LFF Control Enclosure                   | System         |
| 2424-931 | SYSTEM STORAGE DS8100  | System         |
| 4958-J11 | IBM Cloud Object Storage Medium JBOD Chassis 1yr             | System         |
| 4958-J10 | IBM Cloud Object Storage Small JBOD Chassis 1yr              | System         |
| 2107-932 | IBM 2107-932   | System         |
| 2107-9B2 | IBM 2107-9B2   | System         |
| 1813-96C | IBM System Storage DCS3860                                   | System         |
| 2076-312 | IBM Storwize V7000 10 GbE Controller LFF 12-drive enclosure  | System         |
| 4957-J11 | IBM Cloud Object Storage Medium JBOD Chassis 3yr             | System         |
| 1726-HC6 | IBM System Storage DS3200 DC Model                           | Option         |
| 3948-CSB | IBM TS7770 Cache Controller Model CSB                        | System         |
| 3956-CSB | TS7770 Cache Controller                                      | System         |
| 1814-72S | IBM System Storage DS4700 Express Model 72-DC                | System         |
| 4957-J10 | IBM Cloud Object Storage Small JBOD Chassis 3yr              | System         |
| 4680-3P2 | IBM Storage FlashSystem 5045 LFF Control Enclosure           | System         |
| 9848-AG8 | IBM FlashSystem 9200 SFF NVMe Control Enclosure              | System         |
| 9848-UG8 | IBM FlashSystem 9200 Utility Model SFF NVMe Control Enclosur | System         |
| 1726-HC8 | IBM System Storage DS3400 DC Model                           | Option         |
| 2072-312 | IBM Storwize V5030E LFF Control Enclosure                    | System         |
| 2072-3H2 | IBM FlashSystem 5030 LFF Control Enclosure                   | System         |
| 2072-T12 | IBM Storwize V5030E LFF Control Enclosure                    | Expansion Unit |
| 2072-V12 | IBM FlashSystem 5030 LFF Control Enclosure                   | System         |

|          |  |        |
|----------|--|--------|
| 1818-RS2 | IBM System Storage DS Remote Support Manager for Storage Mod | System |
| 2072-3N2 | IBM FlashSystem 5035 LFF Control Enclosure                   | System |
| 2072-X12 | IBM FlashSystem 5035 LFF Control Enclosure                   | System |
| 4666-AH8 | IBM FlashSystem 9500 SFF NVMe Control Enclosure              | System |
| 4666-UH8 | IBM FlashSystem 9500 Utility Model SFF NVMe Control Enclosur | System |
| 1813-86C | IBM System Storage DCS3860 Controller Unit                   | System |
| 2107-922 | IBM 2107-922   | System |
| 2107-9A2 | IBM 2107-9A2   | System |
| 4957-J15 | IBM Cloud Object Storage 5U92 disk enclosure 3yr             | System |
| 5141-FN1 | IBM Elastic Storage System 3200                              | System |
| 2145-8A4 | IBM System Storage SAN Volume Controller Storage Engine Mode | System |
| 2421-932 | SYSTEM STORAGE DS8300  | System |
| 2421-9B2 | SYSTEM STORAGE DS8300  | System |
| 2422-932 | SYSTEM STORAGE DS8300  | System |
| 2422-9B2 | SYSTEM STORAGE DS8300  | System |
| 2102-F10 | FIBRE CHNL STG SRV   | System |
| 3958-DE2 | IBM 3958 System Storage TS7680 ProtecTIER Deduplication Gate | System |
| 2423-932 | SYSTEM STORAGE DS8300  | System |
| 2423-9B2 | SYSTEM STORAGE DS8300  | System |
| 9846-AC0 | IBM FlashSystem V840 Control Enclosure                       | System |
| 1750-511 | IBM 1750-511   | System |
| 1750-522 | IBM 1750-522   | System |
| 5141-AF8 | IBM Elastic Storage System 3000                              | System |
| 2424-932 | SYSTEM STORAGE DS8300  | System |
| 2424-9B2 | SYSTEM STORAGE DS8300  | System |
| 9836-415 | IBM FlashSystem A9000  | System |
| 9836-425 | IBM FlashSystem A9000 Model 425                              | System |
| 2145-4F2 | IBM TotalStorage SAN Volume Controller Storage Engine Model  | System |
| 2145-8F2 | IBM TotalStorage SAN Volume Controller Storage Engine Model  | System |
| 2027-C40 | IBM TotalStorage SANC40M                                     | System |
| 5105-22E | ESS Server for Elastic Storage System                        | System |
| 2073-700 | IBM Storwize V7000 Unified                                   | System |
| 2073-720 | IBM Storwize V7000 Unified                                   | System |
| 2851-SI1 | IBM System Storage SONAS Interface Node                      | System |
| 2851-SI2 | IBM System Storage SONAS Interface Node                      | System |
| 2851-SM1 | IBM System Storage SONAS Management Node                     | System |
| 3745-31A | 3745-31A IBM Communication Controller Model 31A              | System |
| 2145-8F4 | IBM System Storage SAN Volume Controller Storage Engine Mode | System |
| 2145-8G4 | IBM System Storage SAN Volume Controller Storage Engine Mode | System |
| 2145-CF8 | IBM System Storage SAN Volume Controller Storage Engine Mode | System |
| 2145-CG8 | SVC Storage Engine 2145-CG8                                  | System |
| 9848-AC0 | IBM FlashSystem V840 Control Enclosure                       | System |
| 9838-415 | IBM FlashSystem A9000  | System |
| 9838-425 | IBM FlashSystem A9000 Model 425                              | System |
| 9838-U25 | FlashSystem A9000 Utility Model                              | System |
| 4616-J5D | Storage Expansion ME484 for IBM Cloud Object Storage         | System |
| 2145-DH8 | SVC Storage Engine   | System |
| 4983-AH8 | IBM FlashSystem 9500 SFF NVMe Control Enclosure              | System |
| 3745-21A | 3745-21A IBM Communication Controller Model 21A              | System |
| 3948-XFC | IBM TS7700 SSD Cache Expansion Model XFC                     | System |
| 3956-XFC | SSD Cache Expansion Drawer                                   | System |
| 3494-B10 | IBM TotalStorage Virtual Tape Server Model B10               | System |
| 3745-210 | 3745-210 IBM Communication Controller Model 210              | System |
| 2851-SS1 | IBM System Storage SONAS Storage Node                        | System |
| 2851-SS2 | IBM System Storage SONAS Storage Node                        | System |
| 2146-V1A | SAN Integr.Server-Primary Rack                               | System |
| 3957-VED | TS7770 Server  | System |

|          |  |                |
|----------|--|----------------|
| 9846-AC1 | IBM FlashSystem V840 Control Enclosure                       | System         |
| 9846-AC2 | IBM FlashSystem V9000 Control Enclosure                      | Expansion Unit |
| 3745-310 | 3745-310 IBM Communication Controller Model 310              | System         |
| 2145-SA2 | IBM SAN Volume Controller Entry Storage Engine               | System         |
| 3745-41A | 3745-41A IBM Communication Controller Model 41A              | System         |
| 3745-61A | 3745-61A IBM Communication Controller Model 61A              | System         |
| 3745-410 | 3745-410 IBM Communication Controller Model 410              | System         |
| 9848-AC1 | IBM FlashSystem V840 Control Enclosure                       | System         |
| 3958-DD5 | TS7650G Server   | System         |
| 3958-DD6 | IBM TS7650G Model DD6  | System         |
| 2145-SV1 | SVC Storage Engine   | System         |
| 3959-SM1 | TS7610 Appliance   | System         |
| 9155-C01 | IBM Storage Fusion HCI System Compute / Storage Server       | System         |
| 3948-VED | IBM TS7770 Server Model VED                                  | System         |
| 3948-VEF | Virtualization engine based on Power 9+                      | System         |
| 3948-XSD | Expansion enclosure with HDD drives                          | Expansion Unit |
| 3948-XFD | Expansion enclosure with SSD drives                          | Expansion Unit |
| 2452-680 | IBM Real-time Compression Appliance SNT6800                  | System         |
| 2452-650 | IBM Real-time Compression Appliance STN6500                  | System         |
| 9846-AC3 | IBM FlashSystem Control Enclosure                            | Expansion Unit |
| 9155-C05 | IBM Storage Fusion HCI System Compute / Storage Server       | System         |
| 4616-S2D | Slicestor 750 for IBM Cloud Object Storage                   | System         |
| 9848-AC2 | IBM FlashSystem V9000 Control Enclosure                      | Expansion Unit |
| 2145-SV2 | IBM SAN Volume Controller Storage Engine                     | System         |
| 3745-610 | 3745-610 IBM Communication Controller Model 610              | System         |
| 3584-D23 | IBM System Storage TS3500 Tape Library Model D23             | System         |
| 3584-D53 | IBM System Storage TS3500 Tape Library Model D53             | System         |
| 1818-RS1 | DS Remote Support Manager                                    | System         |
| 1818-RS3 | IBM System Storage DS Remote Support Manager for Storage Mod | System         |
| 3494-B16 | IBM TotalStorage Virtual Tape Server Model B16               | System         |
| 3494-B18 | IBM TotalStorage Virtual Tape Server Model B18               | System         |
| 2452-780 | IBM Real-time Compression Appliance STN7800                  | System         |
| 2147-SA2 | IBM SAN Volume Controller Entry Storage Engine               | System         |
| 3958-DD4 | TS7650G Server   | System         |
| 3948-CFC | IBM TS7700 SSD Cache Controller Model CFC                    | System         |
| 3956-CFC | SSD Cache Controller Drawer                                  | System         |
| 9848-AC3 | IBM FlashSystem Control Enclosure                            | Expansion Unit |
| 4616-Y2D | IBM Storage Ready Node for IBM Storage Defender Data Protect | System         |
| 4616-A1D | Accesser 650 for IBM Cloud Object Storage                    | System         |
| 4616-M1D | Manager 650 for IBM Cloud Object Storage                     | System         |
| 3584-D55 | TS4500 HD2 Expansion Frame                                   | System         |
| 3494-B20 | IBM TotalStorage Virtual Tape Server Model B20               | System         |
| 2147-SV2 | IBM SAN Volume Controller Storage Engine                     | System         |
| 4616-C1D | Controller 650 for IBM Cloud Object Storage                  | System         |
| 4616-X2D | IBM Storage Ready Node for IBM Storage Ceph R750             | System         |
| 2145-SV3 | IBM SAN Volume Controller Storage Engine                     | System         |
| 3584-L23 | IBM System Storage TS3500 Tape Library Model L23             | System         |
| 3584-L53 | IBM System Storage TS3500 Tape Library Model L53             | System         |
| 9835-415 | IBM FlashSystem A9000R                                       | System         |
| 9835-425 | IBM FlashSystem A9000R Model 425                             | System         |
| 2147-SV1 | SVC Storage Engine   | System         |
| 3584-L25 | TS4500 HD2 Base Frame  | System         |
| 3584-L55 | TS4500 HD2 Base Frame  | System         |
| 9837-415 | IBM FlashSystem A9000R                                       | System         |
| 9837-425 | IBM FlashSystem A9000R Model 425                             | System         |
| 9837-U25 | FlashSystem A9000R Utility Model                             | System         |
| 3958-DD1 | IBM 3958 System Storage TS7650G Server Model DD1             | System         |

|          |  |                |
|----------|--|----------------|
| 3958-DD3 | IBM 3958 Model DD3 TS7650G ProtecTIER De-duplication Gateway | System         |
| 2147-SV3 | IBM SAN Volume Controller Storage Engine                     | System         |
| 4958-A10 | IBM Cloud Object Storage Accesser A10 1yr                    | System         |
| 4958-C10 | IBM Cloud Object Storage Controller Node C10 1yr             | System         |
| 4958-M10 | IBM Cloud Object Storage Manager M10 1Yr                     | System         |
| 9155-G02 | IBM Spectrum Fusion HCI GPU Server                           | System         |
| 4957-C10 | IBM Cloud Object Storage Controller Node C10 3yr             | System         |
| 4957-M10 | IBM Cloud Object Storage Manager M10 3yr                     | System         |
| 4957-A10 | IBM Cloud Object Storage Accesser A10 3yr                    | System         |
| 4882-L9A | Diamondback Library  | System         |
| 4883-L9A | Diamondback Library  | System         |
| 4884-L9A | Diamondback Library  | System         |
| 9273-S31 | Deep Archive Node (Dell Server)                              | System         |
| 4986-VEL | Virtualization engine based on Power 9+                      | System         |
| 4986-XSL | Expansion enclosure with HDD drives                          | Expansion Unit |
| 5146-S22 | Data Engine for Analytics                                    | System         |
| 8831-H40 | IBM Elastic Storage Server                                   | System         |
| 8831-T48 | Elastic Storage System Hardware                              | System         |
| 5149-091 | Elastic Storage System Hardware                              | System         |
| 5149-23E | IBM Elastic Storage System Utility Node                      | System         |
| 5149-N64 | Elastic Storage System Hardware                              | System         |
| 5149-R42 | Elastic Storage System Hardware                              | System         |
| 5149-S05 | IBM Storage Scale System 200GbE High Speed Switch            | System         |
| 5149-S54 | IBM Storage Scale System 1GbE Management Switch              | System         |
| 5149-F26 | IBM Scale System All-Flash Expansion Enclosure               | Expansion Unit |
| 9155-B01 | IBM Fusion HCI Service Node                                  | System         |
| 9155-C10 | IBM Fusion HCI Storage Server                                | System         |
| 9155-C14 | IBM Fusion HCI Storage Server                                | System         |
| 9155-G03 | IBM Fusion HCI System GPU Server                             | System         |
| 9155-G04 | Fusion HCI Lenovo SR675V3 128 core GPU Server                | System         |
| 9155-D10 | IBM Fusion HCI Dell Commercial Server                        | System         |
| 9155-D14 | IBM Fusion HCI Dell Commercial Server                        | System         |
| 9155-DB1 | IBM Fusion HCI Dell Commercial Service Node                  | System         |
| 9155-DG1 | DELL XE7745 with 4 x L40S 128 Cores                          | System         |
| 9155-DG2 | DELL XE7745 with 8 x L40S 128 Cores                          | System         |
| 9155-DG3 | DELL XE7745 with 4 x H200 NVL 128 Cores                      | System         |
| 9155-DG4 | DELL XE7745 with 8 x H200 NVL 128 Cores                      | System         |
| 4662-7H2 | IBM FlashSystem 5300 control enclosure                       | System         |
| 5341-A00 | DS8AS00  | System         |
| 5341-A01 | DS8AS10  | System         |
| 5341-A05 | DS8AS05  | System         |
| 5341-A08 | DS8AS80  | System         |
| 5341-E05 | DS8A00 Expansion Unit  | System         |